



Form No. 3401-740 Rev A

Count on it.

Parts Catalog

GeoLink® Spray System Finishing Kit

2014 and Before Multi Pro® 5800 Turf Sprayer

Model No. 131-7262



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HP: high pressure

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: low pressure

LPG: Liquefied Petroleum Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping

TTH: torx truss head

Contents

Monitor Mount Assembly..... 4

Receiver Mount Assembly 6

Flow Meter and Connection Manifold Assembly 7

Flow Meter Assembly No. 106-1038..... 8

Connection Manifold Assembly No. 132-4250 9

GPS Valve and Wiring Harness Assembly 10

Section Manifold Assembly No. 132-4256 12

On/Off Manifold Valve Kit No. 127-9803..... 13

Actuator On/Off Kit No. 131-3723 14

Center Boom Assembly..... 15


Double Turret Body Assembly No. 108-3727 16

Alternator Assembly..... 17

Monitor Mount Assembly


Monitor Mount Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	321-9	4	Screw-HH	6	99-7420	2	Plug-Hole
2	104-7201	4	Nut-Flange, NI	7	3256-22	4	Washer-Flat
3	131-7286-03	1	Plate-Stiffener	8	132-4328	2	Strip-Adhesive
4	131-3796	1	Nut-Standoff	99	3290-378	25	Tie-Cable
5	131-3793	1	Cover				

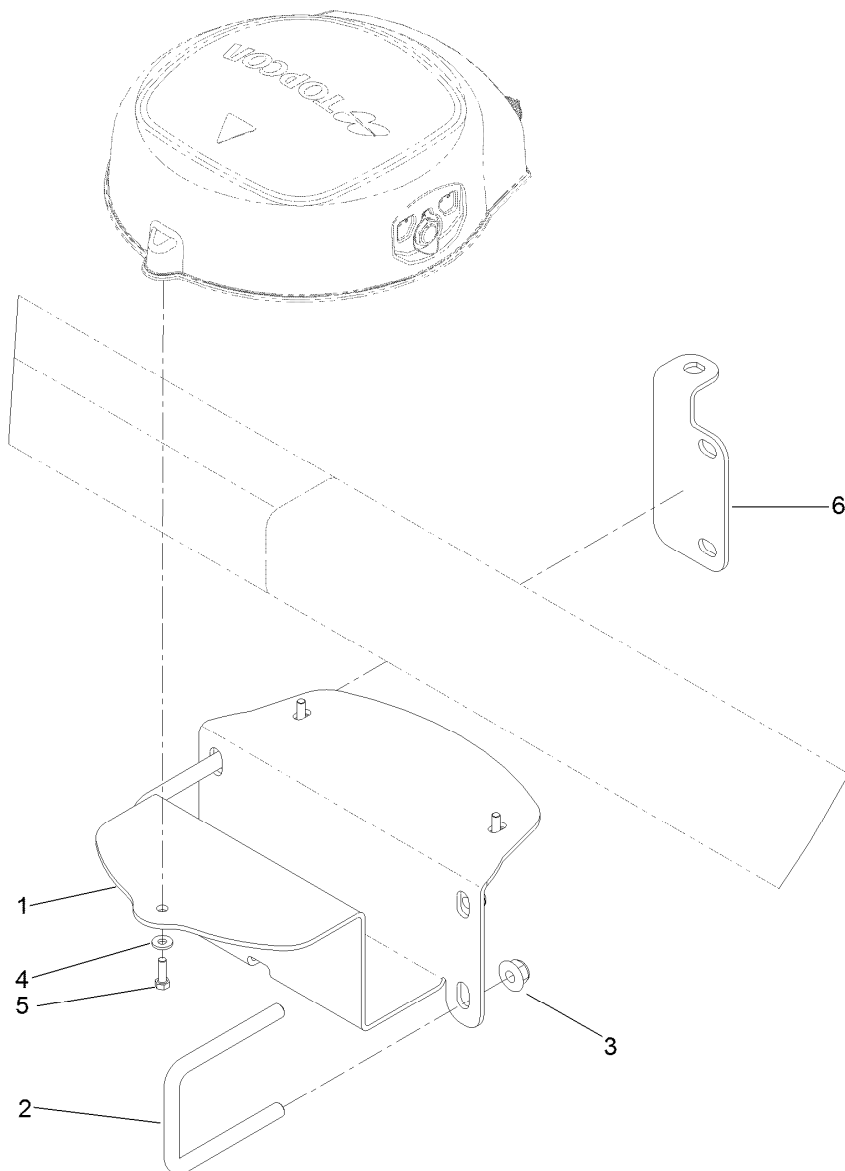

Receiver Mount Assembly


Ref.	Part Number	Qty.	Description
1	131-7241-03	1	Mount-Receiver
2	47-3460	2	U-Bolt
3	104-8301	4	Nut-Flange, NI
4	3256-14	3	Washer-Flat
5	60-6910	3	Screw-HH
6	133-0354-03	1	Bracket-Antenna

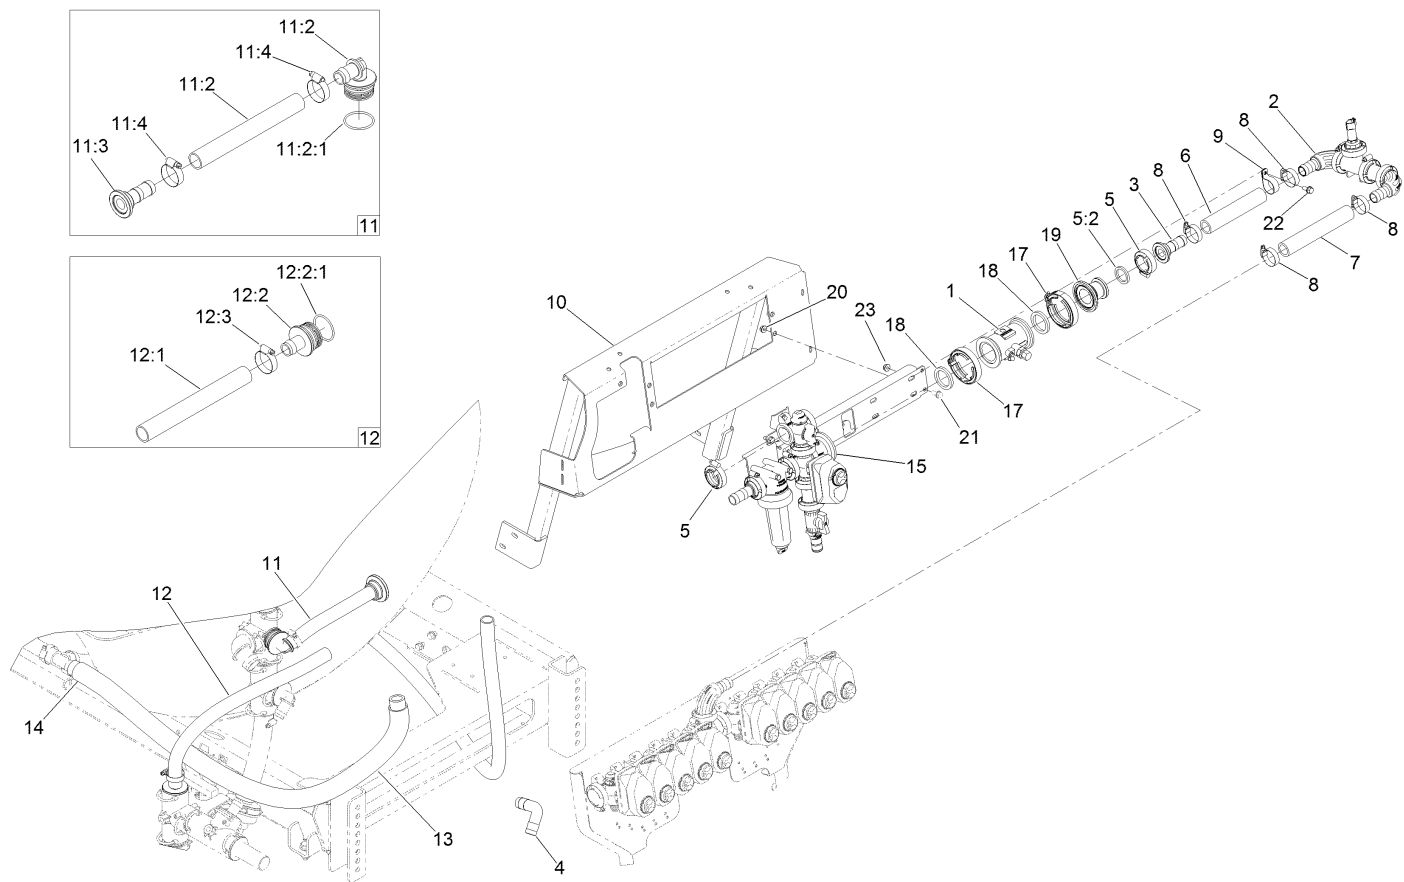

Flow Meter and Connection Manifold Assembly


Ref.	Part Number	Qty.	Description
1	106-1038	1	Flow Meter ASM
2	132-4250	1	Connection Manifold ASM
3	127-1142	1	Fitting-Barb
4	117-7867	1	Elbow-Hosebarb
5	127-9829	2	Clamp/Gasket Kit
5:2	127-1145	1	Gasket-Flange
6	132-4257	1	Hose
7	132-4258	1	Hose
8	2412-3	4	Clamp-Hose
9	2412-74	1	R-Clamp
10	131-3744-03	1	Mount-Valve
11	132-4296	1	Agitation Bypass Hose ASM
11:2	106-4933	1	Hosebarb ASM
11:2:1	100-8637	1	O-Ring
11:3	127-1142	1	Fitting-Barb
11:4	2412-3	2	Clamp-Hose

Ref.	Part Number	Qty.	Description
12	119-0448	1	Supply Hose ASM
12:1	119-0445	1	Hose-Supply, Main
12:2	106-4932	1	Hosebarb-Straight
12:2:1	100-8637	1	O-Ring
12:3	2412-3	1	Clamp-Hose
13	131-9615	1	Tubing-Convuluted, Slit
14	131-5777	1	Hose-Drain
15	132-4255	1	Manifold-Agitation
17	104-9089	2	Clamp-Screw, Worm
18	104-9090	2	Gasket
19	127-1144	1	Fitting-Adapter
20	104-8300	5	Nut-Flange, NI
21	3234-47	5	Screw-HHF
22	3234-4	1	Screw-HHF
23	104-7201	1	Nut-Flange, NI

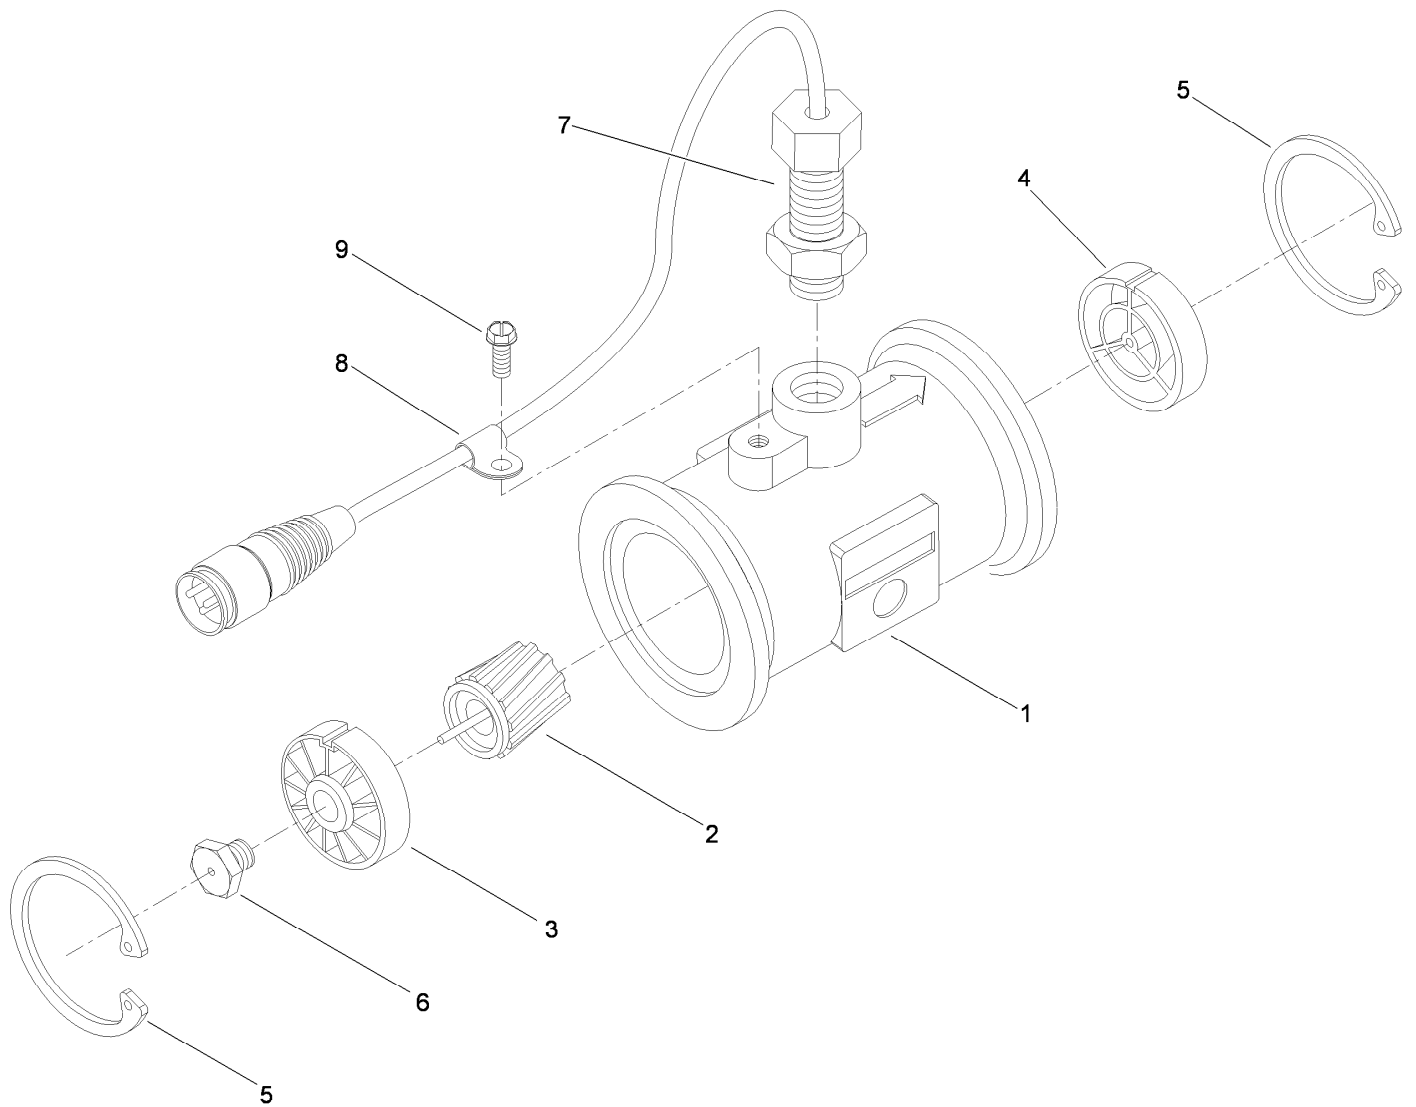

Flow Meter Assembly No. 106-1038


Ref.	Part Number	Qty.	Description
1	106-1042	1	Body-Meter, Flow
2	104-9059	1	Rotor / Magnet ASM
3	104-9060	1	Upstream Hub And Bearing ASM
4	104-9061	1	Downstream Hub ASM
5	104-9062	2	Ring-Retaining, Internal
6	42480	1	Stud-Turbine (W / Bearing)
7	104-9065	1	External Sensor ASM
8	104-9063	1	Clamp-Cable
9	104-9064	1	Screw-HWHTF

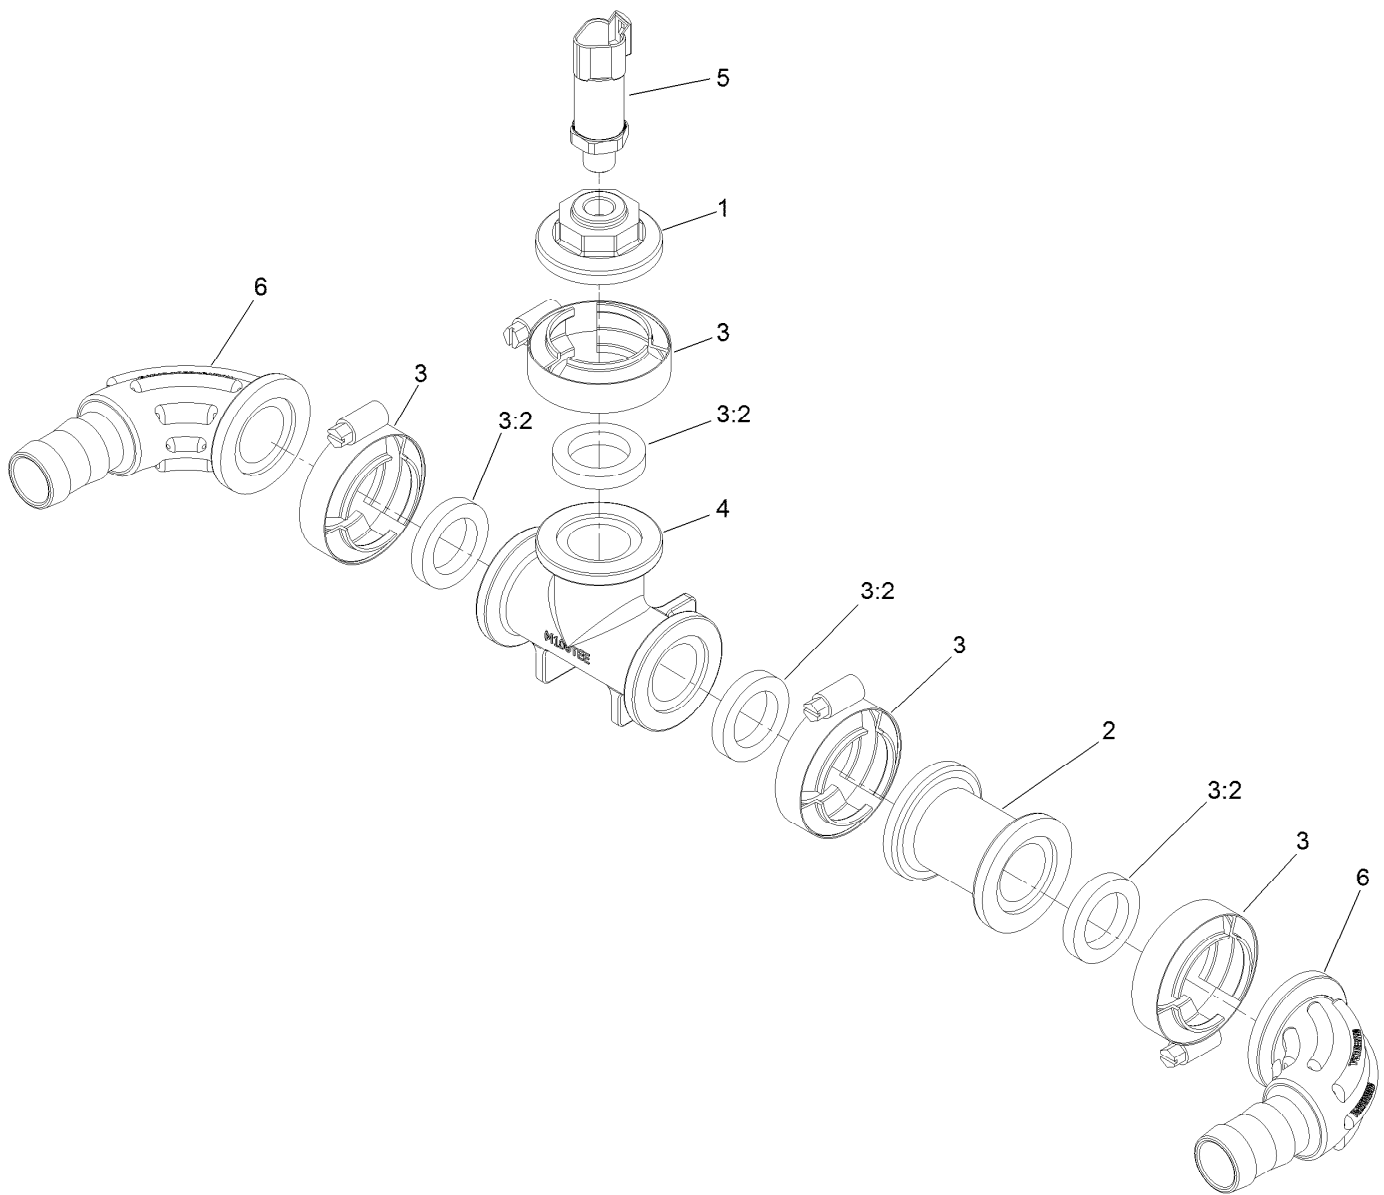

Connection Manifold Assembly No. 132-4250

Ref.	Part Number	Qty.	Description
1	127-1185	1	Fitting-Cap, Port
2	127-9814	1	Fitting-Adapter
3	127-9829	4	Clamp/Gasket Kit
3:2	127-1145	1	Gasket-Flange
4	127-9834	1	Fitting-Tee
5	130-8202	1	Transducer-Pressure
6	131-0241	2	Fitting-Elbow, Sweep


GPS Valve and Wiring Harness Assembly

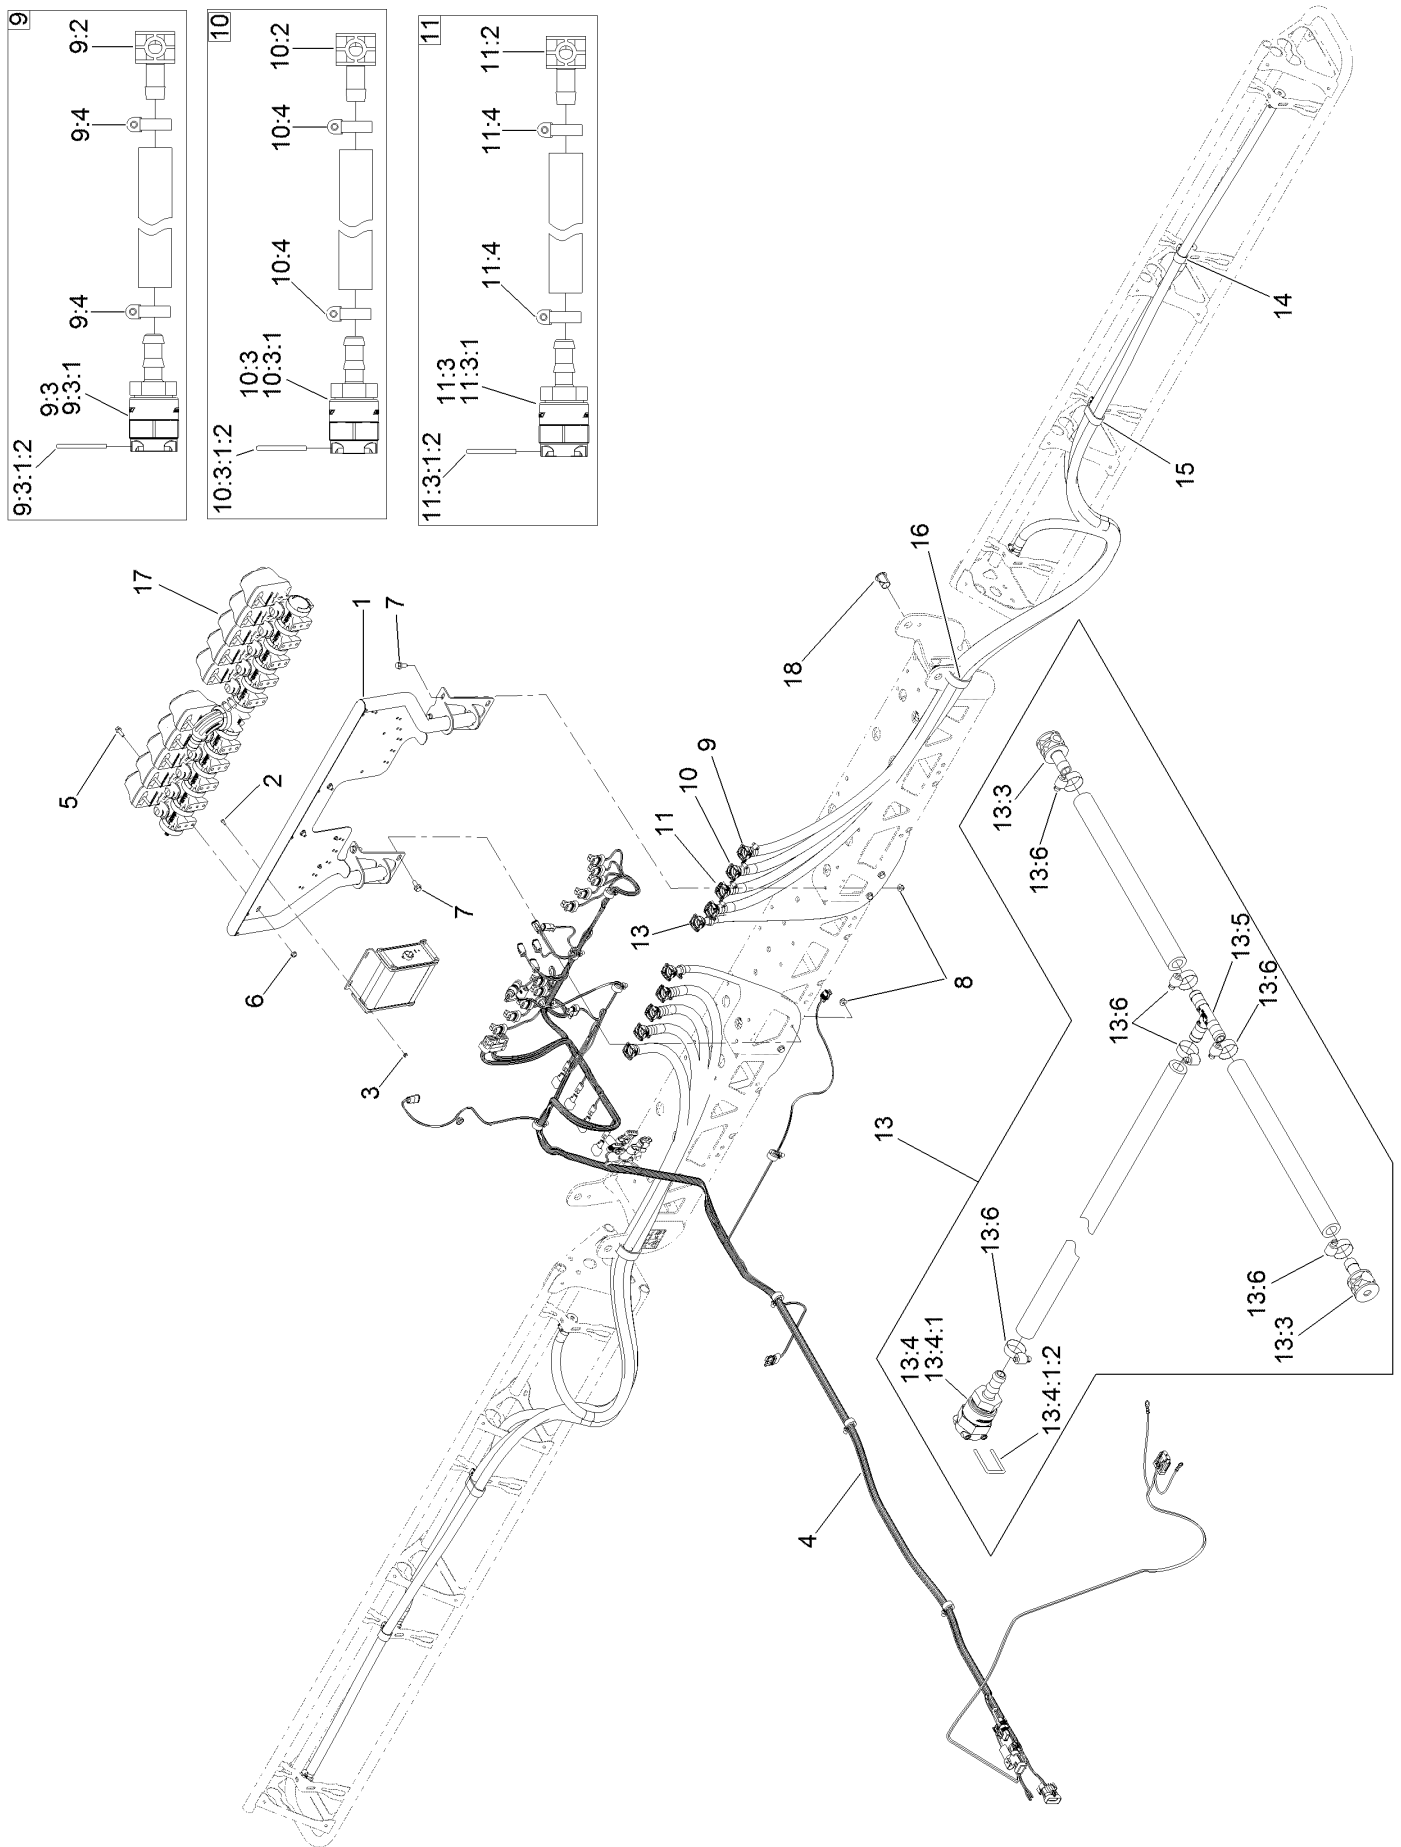

GPS Valve and Wiring Harness Assembly (continued)


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	131-3753-03	1	Mount-Valve, Gps	10:4	2412-36	2	Clamp-Hose
2	60-6500	4	Screw-HH	11	131-7290	4	Hose Nozzle ASM
3	127-2018	4	Nut-HHF	11:2	130-7265	1	Shank-Nozzle, Single
4	122-0614	1	Harness-Wire	11:3	132-4260	1	Fitting ASM
5	3234-4	8	Screw-HHF	11:3:1		1	Fitting-Straight ●
6	104-7201	8	Nut-Flange, NI	11:3:1:2	127-1175	1	Fork
7	3234-47	8	Screw-HHF	11:4	2412-36	2	Clamp-Hose
8	104-8300	8	Nut-Flange, NI	13	131-7292	2	Hose Nozzle ASM
9	131-7288	2	Hose Nozzle ASM	13:3	130-7265	2	Shank-Nozzle, Single
9:2	130-7265	1	Shank-Nozzle, Single	13:4	132-4260	1	Fitting ASM
9:3	132-4260	1	Fitting ASM	13:4:1		1	Fitting-Straight ●
9:3:1		1	Fitting-Straight ●	13:4:1:2	127-1175	1	Fork
9:3:1:2	127-1175	1	Fork	13:5	131-3736	1	Fitting-Tee, Barb
9:4	2412-36	2	Clamp-Hose	13:6	2412-36	6	Clamp-Hose
10	131-7289	2	Hose Nozzle ASM	14	2412-39	2	R-Clamp
10:2	130-7265	1	Shank-Nozzle, Single	15	2412-137	2	Clamp-R, Double
10:3	132-4260	1	Fitting ASM	16	2412-107	2	Clamp-R
10:3:1		1	Fitting-Straight ●	17	132-4256	1	Manifold-Section
10:3:1:2	127-1175	1	Fork	18	100-8541	4	Bushing-A Arm

● Not serviced separately

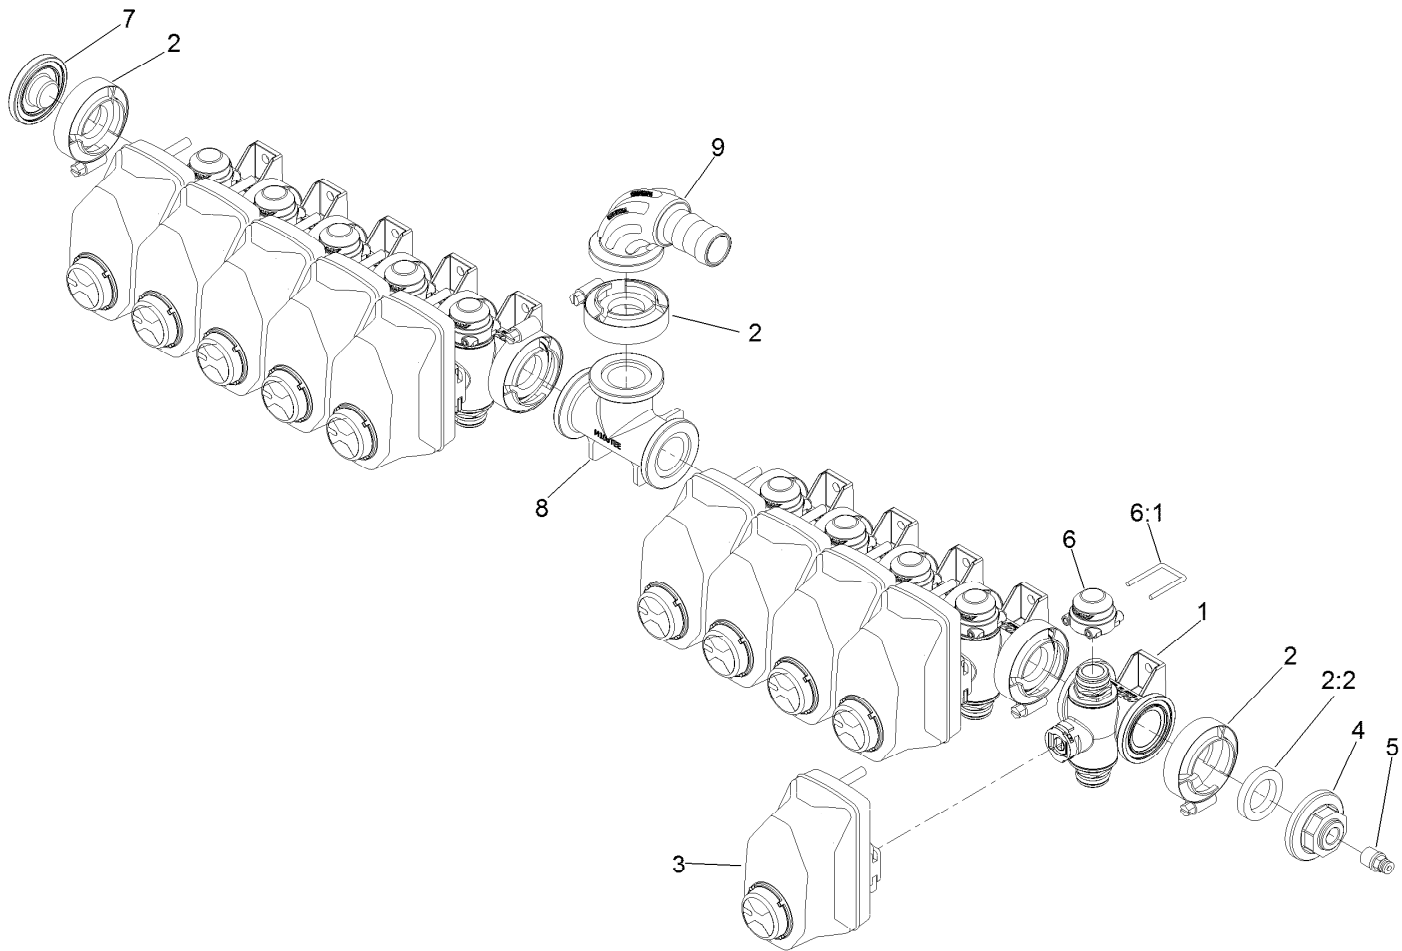

Section Manifold Assembly No. 132-4256

Ref.	Part Number	Qty.	Description
1	127-9803	10	On/Off Manifold Valve Kit
2	127-9829	13	Clamp/Gasket Kit
2:2	127-1145	1	Gasket-Flange
3	131-3723	10	Actuator On/Off Kit
4	127-1185	1	Fitting-Cap, Port
5	131-3709	1	Coupler
6	127-9811	10	Fitting-Cap, Female
6:1	127-1175	1	Fork
7	127-9815	1	Fitting-Cap
8	127-9834	1	Fitting-Tee
9	131-0241	1	Fitting-Elbow, Sweep

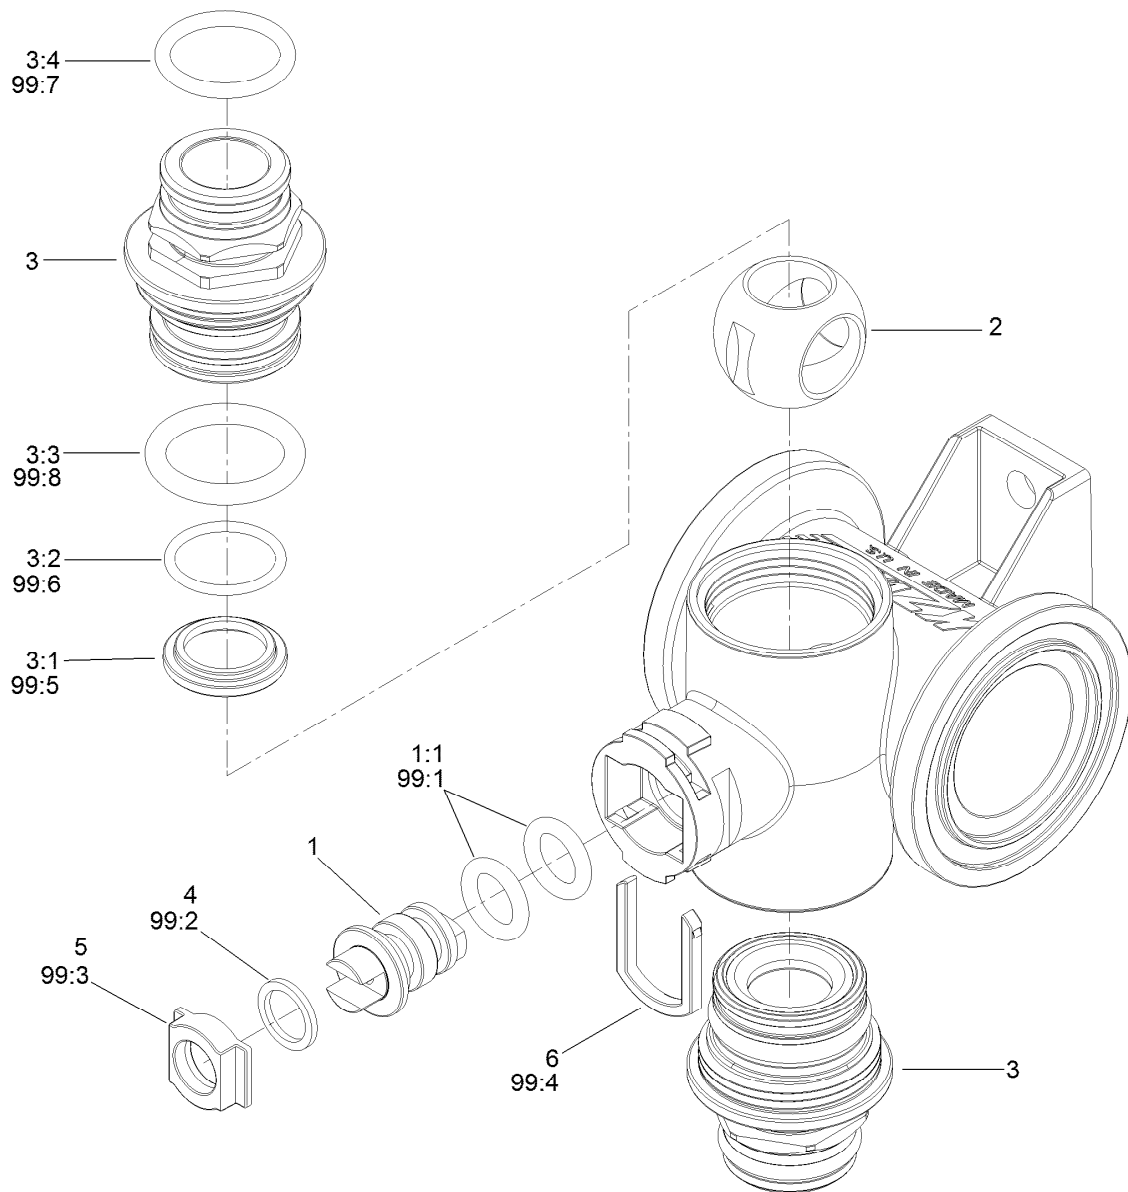


On/Off Manifold Valve Kit No. 127-9803

Ref.	Part Number	Qty.	Description
1	130-8248	1	Vavle Stem Kit
1:1	127-1197	2	O-Ring, Stem
2	127-1194	1	Ball-Valve, 3Way
3	130-7317	2	Endcap Kit
3:1	127-1192	1	Seat-Ball
3:2	127-1188	1	O-Ring, Seat (Ball)
3:3	127-1189	1	O-Ring, Endcap
3:4	127-1187	1	O-Ring, Endcap
4	127-1196	1	Washer-Stem, Valve
5	127-1195	1	Seat-Stem, Valve


Ref.	Part Number	Qty.	Description
6	127-1190	1	Fork-Stem, Valve
99	130-7304	1	Valve Repair Kit ●
99:1	127-1197	2	O-Ring, Stem
99:2	127-1196	2	Washer-Stem, Valve
99:3	127-1195	1	Seat-Stem, Valve
99:4	127-1190	1	Fork-Stem, Valve
99:5	127-1192	2	Seat-Ball
99:6	127-1188	2	O-Ring, Seat (Ball)
99:7	127-1187	2	O-Ring, Endcap
99:8	127-1189	2	O-Ring, Endcap

● Not illustrated

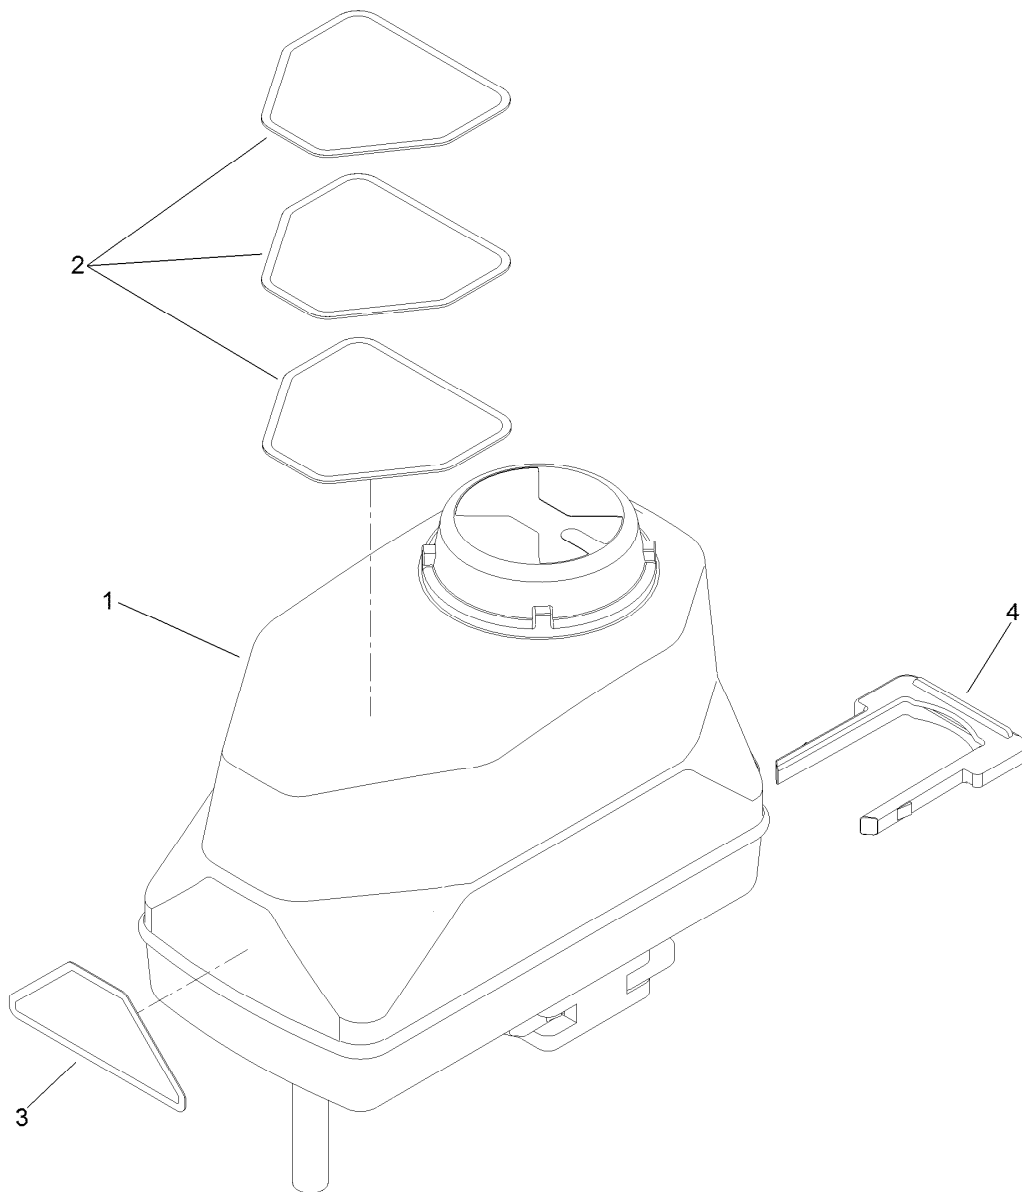

Actuator On/Off Kit No. 131-3723

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-9801	1	Actuator-On/Off
2	127-6979	1	Decal-Valve, Agitation
2	127-6981	1	Decal-Valve, On/Off
2	127-6982	1	Decal-Valve, Master Boom
3	127-6976	1	Decal-Valve, Bypass Adjust
4	130-7301	1	Hairpin-Actuator

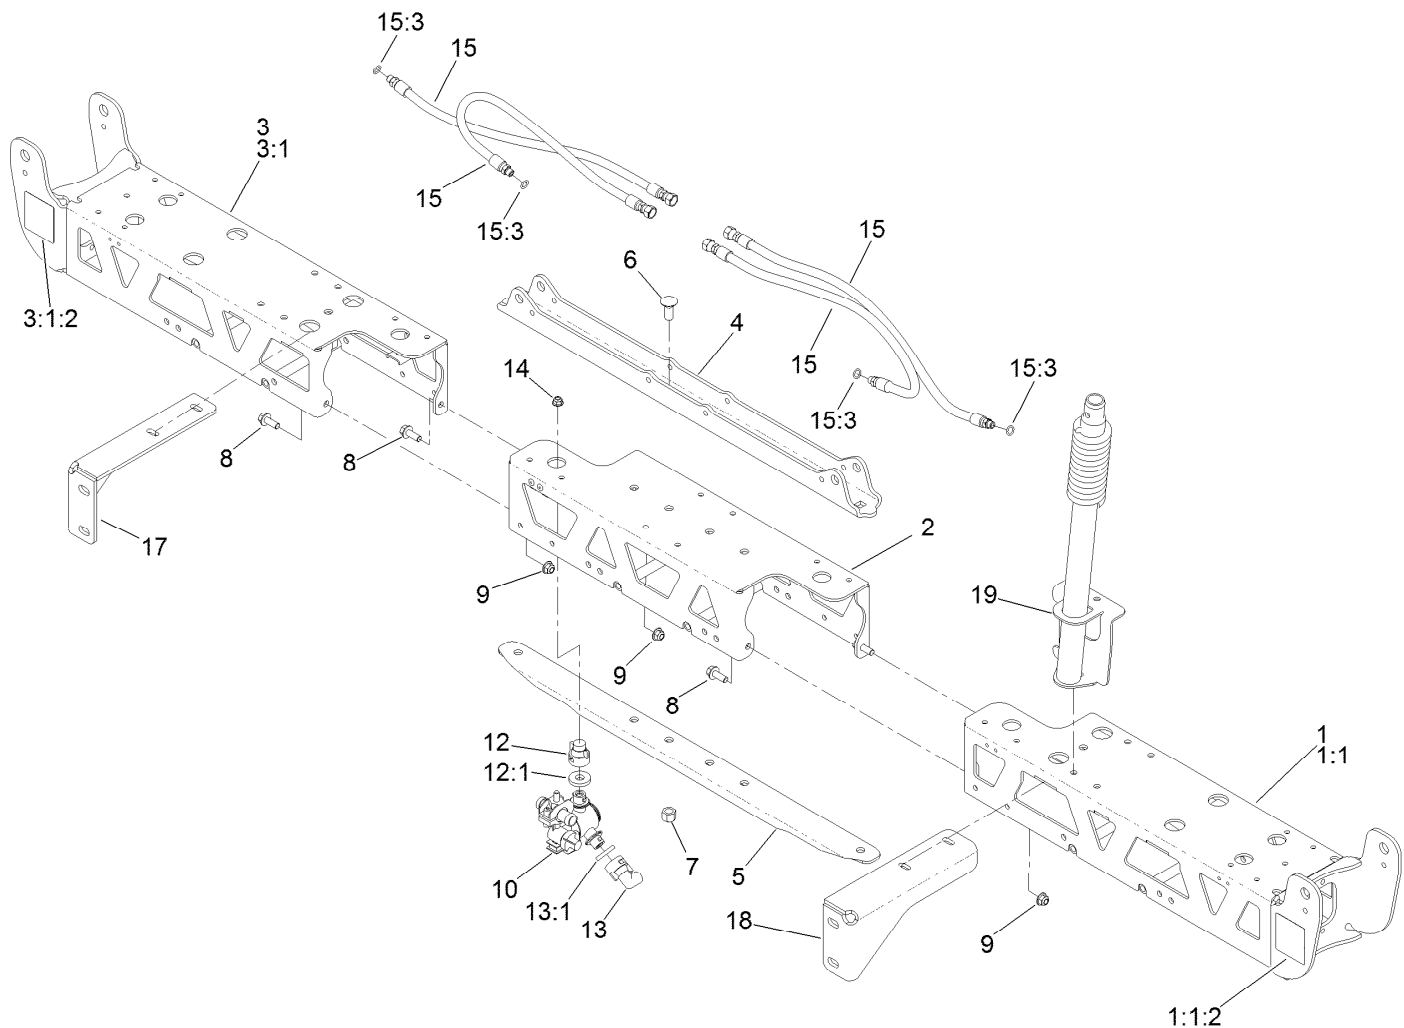


Center Boom Assembly

Ref.	Part Number	Qty.	Description
1	133-0376	1	Boom-Left
1:1		1	Boom-Outer ●
1:1:2	120-0617	2	Decal-Warning, Pinch, Crush
2	133-0377	1	Boom-Center
3	133-0378	1	Boom-Right
3:1		1	Boom-Outer ●
3:1:2	120-0617	2	Decal-Warning, Pinch, Crush
4	131-0275-03	1	Plate-Mount
5	131-0285-03	1	Stiffener-Channel
6	110-5067	4	Screw-CARR
7	3296-23	4	Nut-Lock, NI

Ref.	Part Number	Qty.	Description
8	3234-42	4	Screw-HHF
9	104-8301	4	Nut-Flange, NI
10	108-3727	1	Double Turret Body ASM
12	95-9187	2	Cap-Blank
12:1	40998	1	Seat-Gasket
13	95-9186	1	Cap
13:1	40998	1	Seat-Gasket
14	104-8300	1	Nut-Flange, NI
15	131-0276	4	Hose ASM
15:3	237-78	1	O-Ring
17	127-8955-03	1	Mount-Boom
18	127-8956-03	1	Mount-Boom
19	130-8238-03	1	Lower Cradle ASM


● Not serviced separately

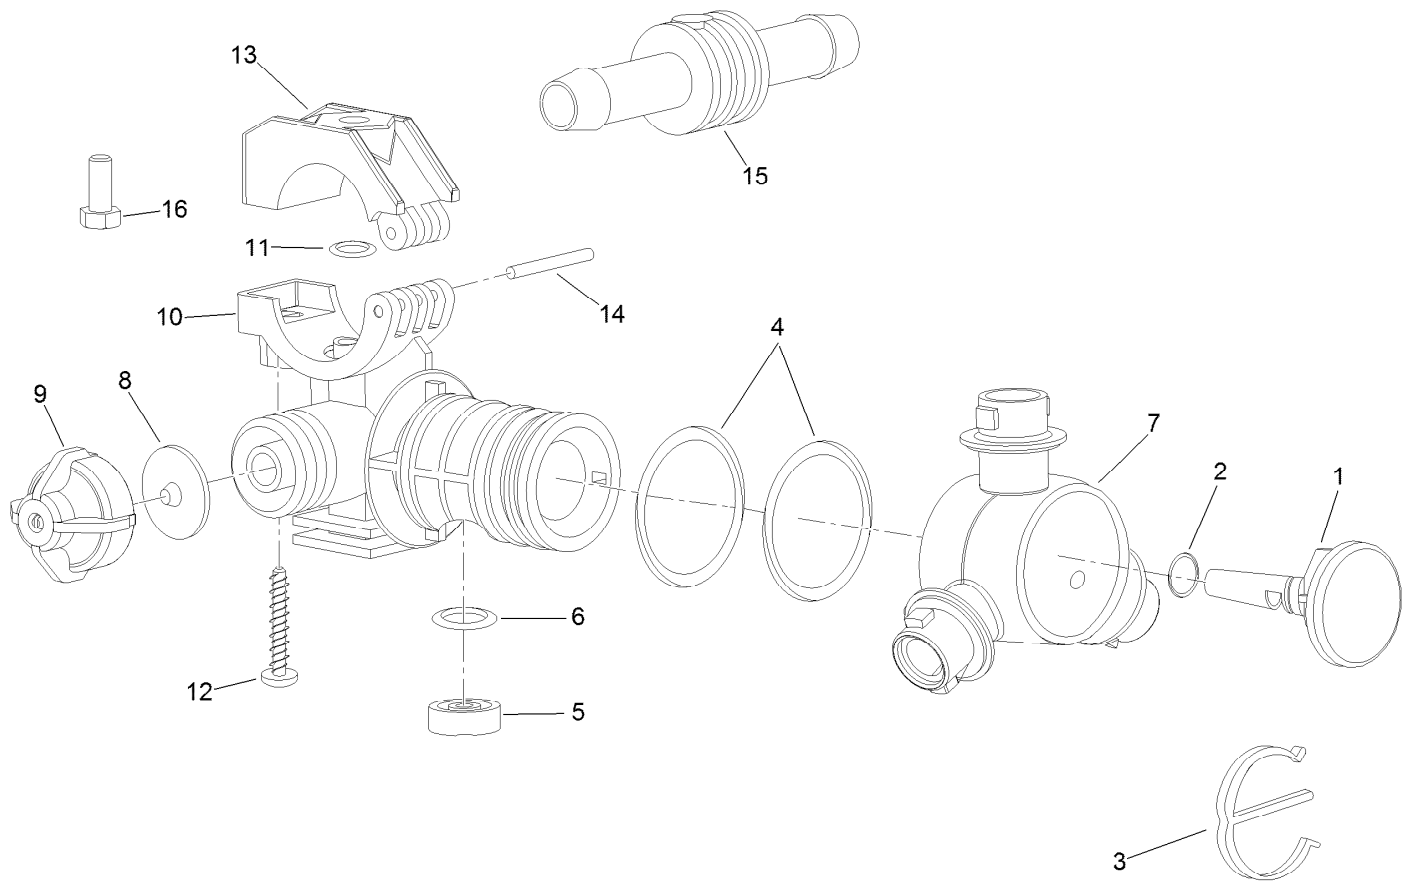

Double Turret Body Assembly No. 108-3727

Ref.	Part Number	Qty.	Description
1	95-9200	1	Plug
2	95-9198	1	O-Ring
3	95-9197	1	E-Clip
4	95-9199	2	O-Ring
5	108-3264	1	Seal-Viton
6	108-3265	1	O-Ring-Viton
7	95-9196	1	Turret
8	41003	1	Diaphragm

Ref.	Part Number	Qty.	Description
9	95-9193	1	Cap-Diaphragm
10	95-9192	1	Body-Split Eyelet
11	95-9191	1	O-Ring
12	99-0811	1	Screw-Clamp
13	99-0812	1	Clamp-Upper
14	99-0814	1	Pin-Pivot
15	95-9202	1	Shank-Hose
16	322-3	1	Screw-HH

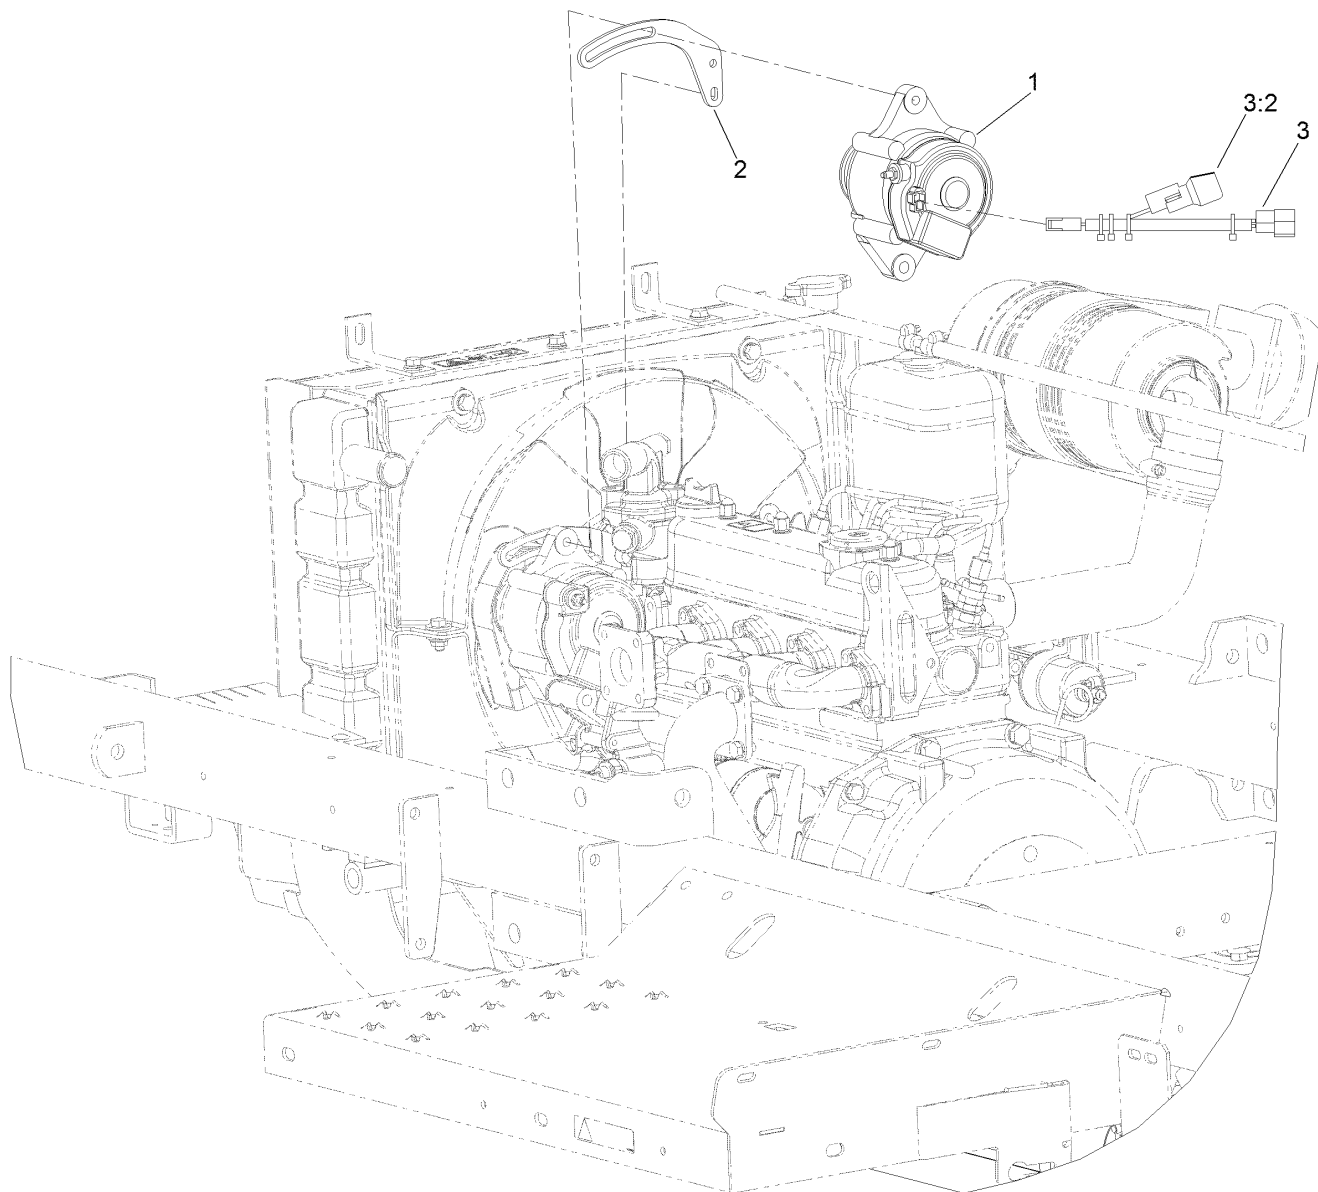

Alternator Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	117-5541	1	60 Amp Alternator ASM
2	117-5542	1	Bracket
3	119-1314	1	Harness-Wire
3:2	104-4022	1	Resistor-75 Ohm

Notes:

Notes:



Count on it.