



1232XL LAWN TRACTOR

Model No. 71189 – 7900001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Frame Assembly	1	Pulley & Belt Assembly (38" Cutting Unit)	12
Hood Assembly	2	Suspension Assembly (38" Cutting Unit)	13
Seat Assembly	3	Height of Cut Assembly	14
Front Axle Assembly	4	Electrical Assembly	15
Steering Assembly	5	Electrical Schematic	16
Gas Tank & Engine Pulley Assembly	6	Engine Assembly	17
Clutch Assembly	7	Peerless Transaxle Model MST 205-509 ...	18-19
Shift Assembly	8	Engine	20-28
Transaxle Assembly	9	Partdex	29-36
Deck Assembly (38" Cutting Unit)	10	Maintenance	37
Deck Assembly (38" Cutting Unit) (Continued)	11		

Note:

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
.. Easy Empty Bagger Kit	Model No. 79095 or Model No. 79096	Tire Chains	Part No. 47-7220
Twin Bagger	Model No. 79085 or Model No. 79086	Wet Grass Bagging Kit (Standard for Model 71201) ...	Part No. 38-5730
Recycler Kit	Model No. 59167	Headlight Kit	Model No. 79180
Wheel Weight Kit	Model No. 59159	Hi-Sail Bagging Blade (Standard on Both Models)	Part No. 33-4750
42 Snowblade Kit	Model No. 79150	Exhaust Deflector Kit	Part No. 94-6872

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HSFH	hex socket flat head
ASM	assembly	HSH	hex socket head
CARR	carriage	HWH	hex washer head
DEG	degrees	HWHTF	hex washer head thread forming
FH	flat head	INC	incorporated
GA	gauge	LH	left hand
HF	hex flange	PH	pan head
HFW	hex flange washer	PPH	Phillips pan head
HH	hex head	PTO	power take off
HHF	hex head flange	RH	right hand
HHST	hex head self tapping	SFH	slotted fillister head
HJ	hex jam	SH	square head
HOC	height-of-cut	SHWH	slotted hex washer head
HS	hex socket	SPH	slotted pan head
HSBH	hex socket button head		

STD	standard	TTH	Torx truss head
TAP	self tapping	WH	wing head
TH	truss head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form X:Y. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form X (Y). X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.


For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

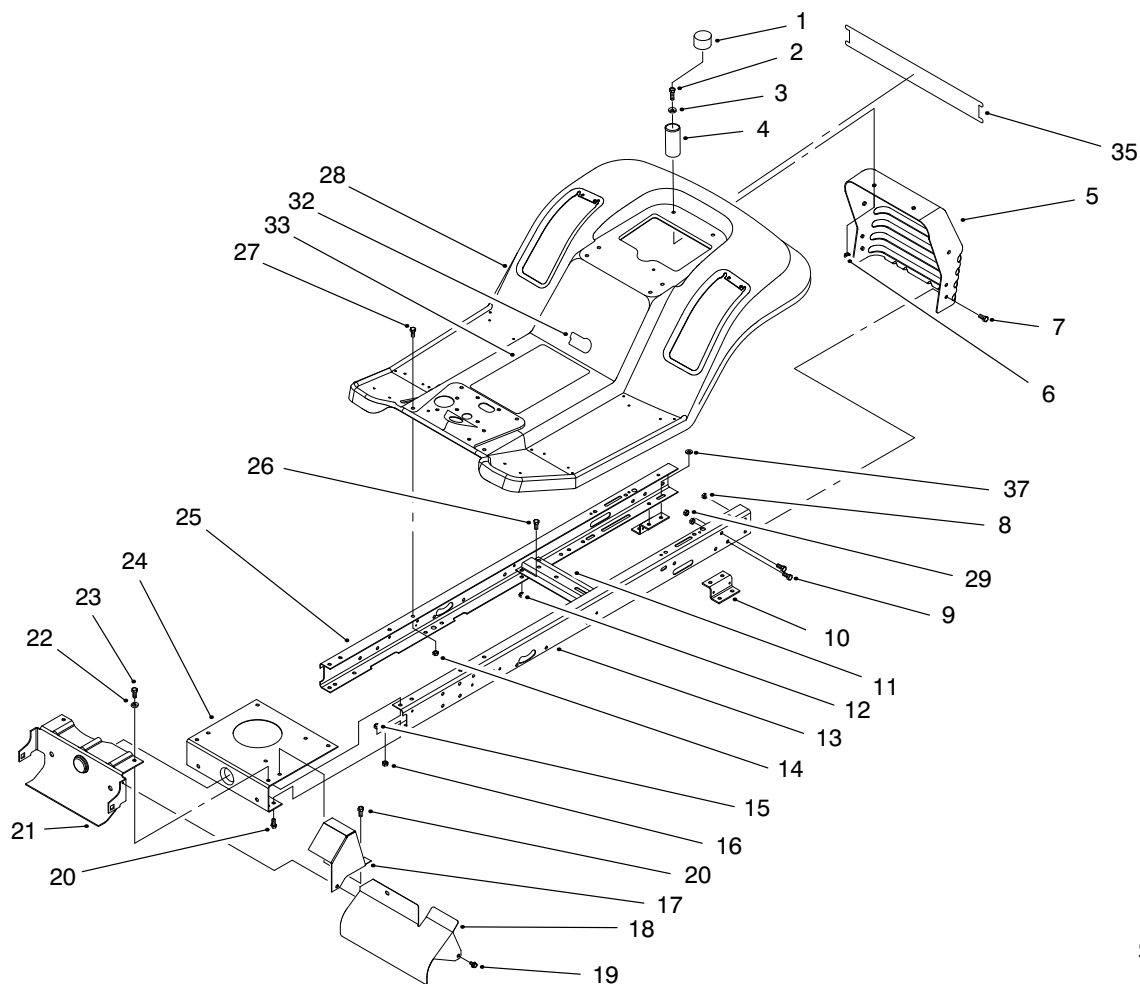

Sheet No.:2

Frame Assembly


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	701178	2	Cap-Protector	26	322-3	4	Screw-HH
2	322-5	2	Screw-HH	27	322-3	2	Screw-HH
3	3256-23	2	Washer-Flat	28	88-3840	1	Body - Rear
4	88-6220	2	Spring - Compression	29	3296-29	4	Nut-Lock
5	88-3940-03	1	Panel - Rear	32	76-1340	1	Decal-USA
6	3296-29	2	Nut-Lock	33	94-1237	1	Decal-Instruction
7	322-3	4	Screw-HH	35	92-2489	1	Decal-Rear Body
8	3296-29	4	Nut-Lock	37	3256-23	2	Washer-Flat
9	322-3	4	Screw-HH				
10	94-1967-03	2	Bracket-Trxl Mtg				
11	88-4620-03	1	Bracket - Idler Pivot				
12	3296-29	4	Nut-Lock				
13	94-1999-03	1	Frame Rail-LH				
14	3296-29	2	Nut-Lock				
15	3296-29	6	Nut-Lock				
16	3296-29	2	Nut-Lock				
17	88-4960-03	1	Shield - Exh. Pipe				
18	88-6290-03	1	Shield - Muffler				
19	32104-76	1	Screw-Self TAP				
20	322-3	6	Screw-HH				
21	88-5120-03	1	Support - Front Axle				
22	3256-23	2	Washer-Flat				
23	322-3	2	Screw-HH				
24	88-4630-03	1	Plate - Engine Mounting				
25	94-1998-03	1	Frame Rail-RH				

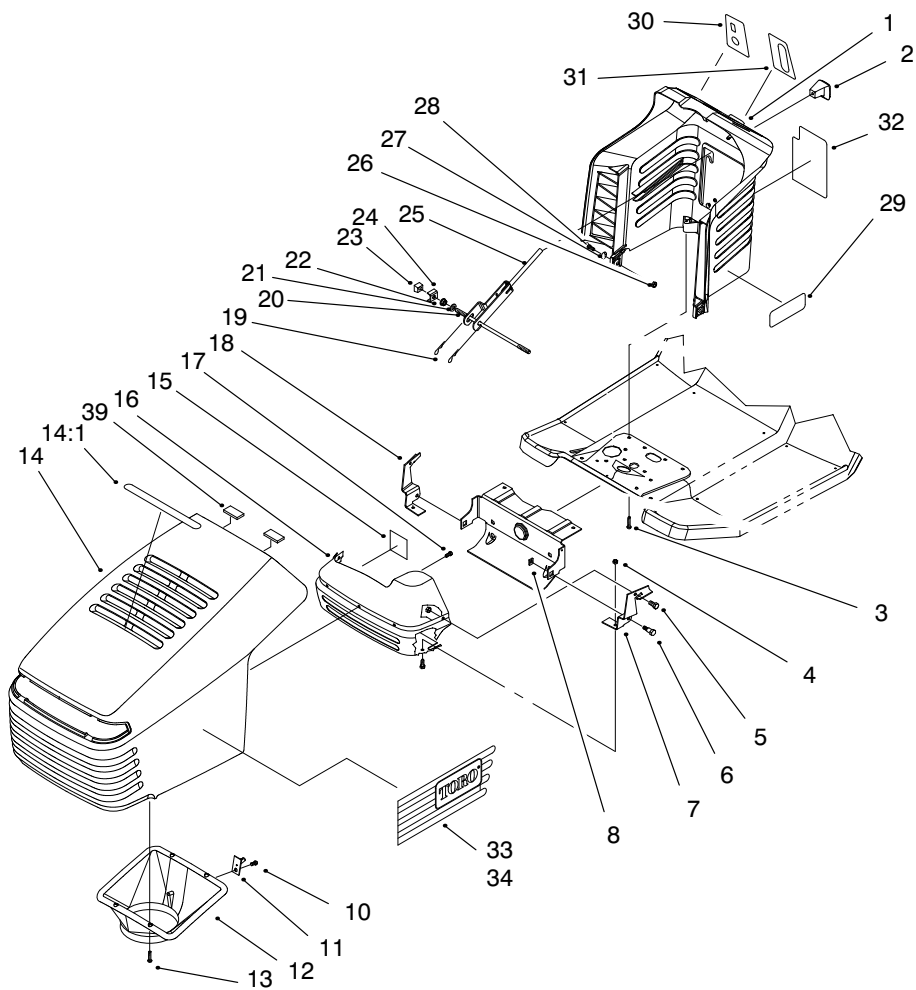

Sheet No.:3

Hood Assembly


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	93-0303	1	Tower-Steering Toro	26	3296-29	2	Nut-Lock
2	94-5565	1	Knob - Control	27	3256-23	2	Washer-Flat
3	46-8091	2	Screw-Tapping	28	322-3	2	Screw-HH
4	3296-42	4	Nut-Lock	29	92-2480	2	Decal - Tower
5	321-2	4	Screw-HH	30	92-2478	1	Decal - Ignition
6	28-0540	2	Bolt-Shoulder	31	92-2461	1	Decal - Throttle
7	88-6050-03	1	Bracket - Hinge	32	92-2462	1	Decal - Deck Engage
8	3290-496	2	Nut - Retained	33	92-2468	1	Decal - Hood Left
10	46-8091	1	Screw-Tapping	34	92-2467	1	Decal - Hood Right
11	94-1984	1	Pin-Latch	39	94-1980	2	Foam-Hood
12	88-4050	1	Duct - Hood Air				
13	46-8090	4	Screw-Tapping				
14	92-8650	1	Hood-Toro				
14:1	92-5748	1	Decal - Air Duct				
15	92-5782	1	Patch - Heat Tape				
16	88-3930-03	1	Shield - Heat				
17	46-8090	3	Screw-Tapping				
18	88-6040-03	1	Bracket - Hinge				
19	3290-307	2	Pin-Cotter				
20	88-4170	1	Rod - Pivot				
21	3256-24	2	Washer-Flat				
22	32128-43	2	Nut-Flange				
23	88-4140	2	Nut - Wedge				
24	88-4160	2	Clamp - Pivot Rod				
25	88-5190-03	1	Lever W.a. - Deck Engage				

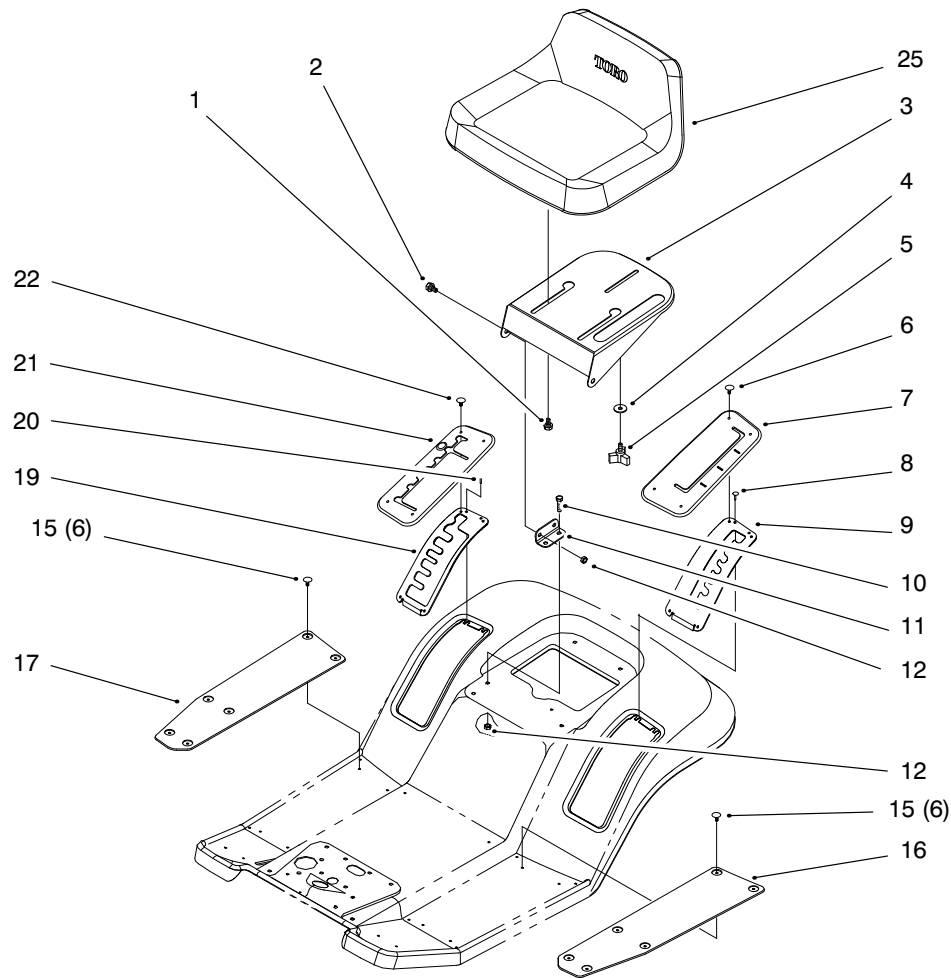

Sheet No.:4

Seat Assembly


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	37-8770	2	Bolt-Shldr				
2	37-8770	2	Bolt-Shldr				
3	88-4910-03	1	Support – Seat				
4	5-4460	1	Washer-Fender				
5	92-9674	1	Knob-Studded				
6	3290-479	4	Fastener-Panel				
7	88-5170	1	Cover – HOC				
8	3290-282	2	Pop Rivet				
9	88-5030-03	1	Gate – HOC				
10	322-3	4	Screw-HH				
11	88-4820-03	2	Bracket – Seat Hinge				
12	3296-29	6	Nut-Lock				
15	3290-479	12	Fastener-Panel				
16	88-5240	1	Foot Mat				
17	88-5220	1	Foot Mat				
19	88-5020-03	1	Plate – Shift Gate				
20	3290-282	2	Pop Rivet				
21	88-5160	1	Cover – Shift Gate				
22	3290-479	4	Fastener-Panel				
25	88-4330	1	Seat-V 320				

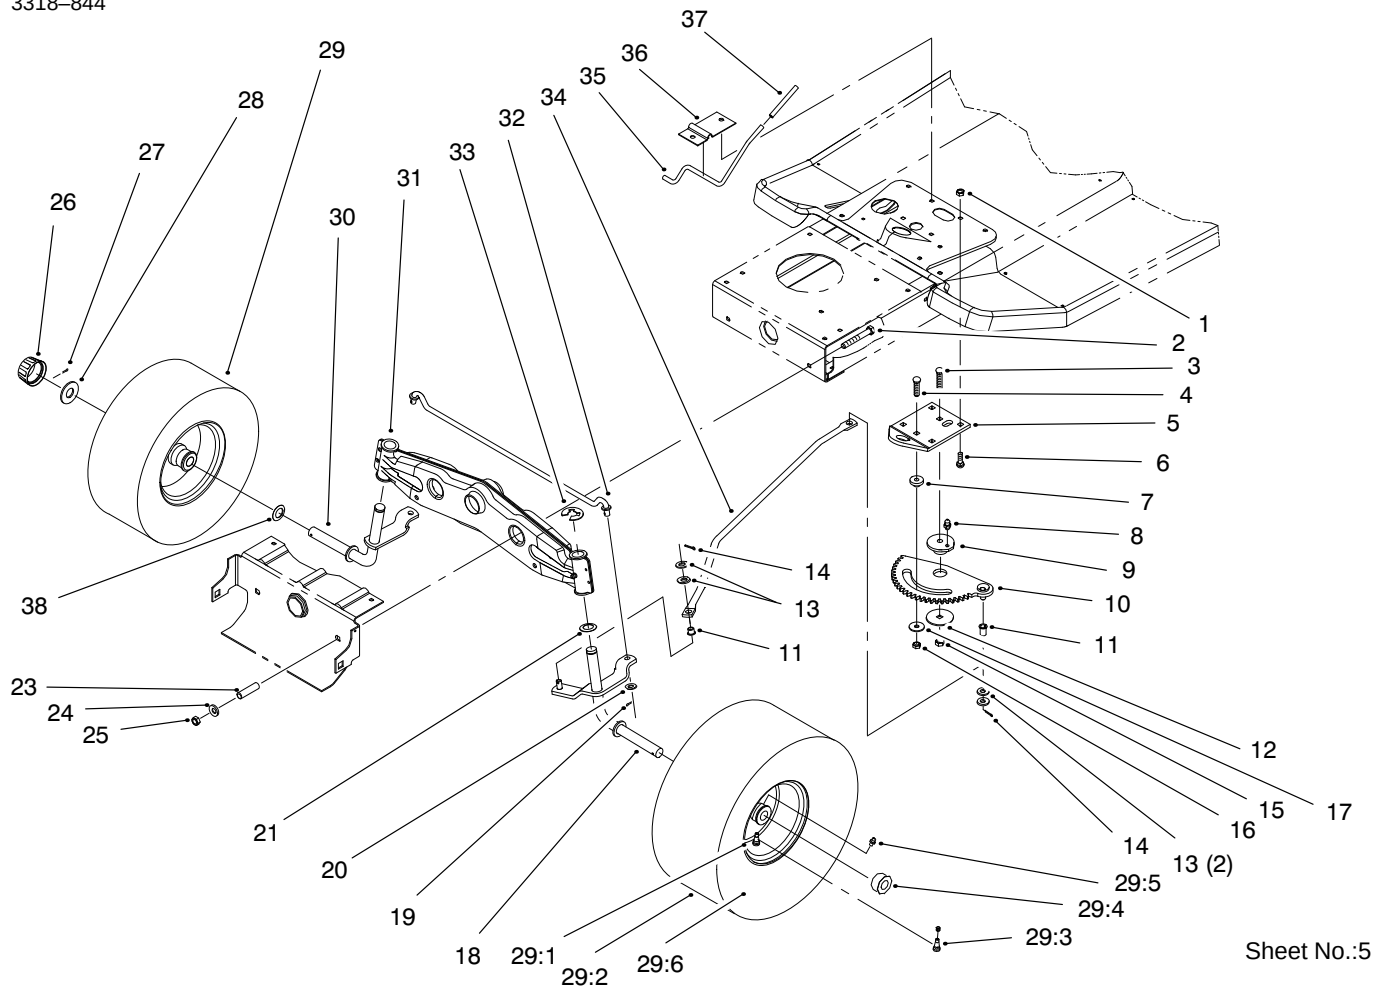

Front Axle Assembly

Ref. No.	Part No.	Qty.	Description
1	3296-29	4	Nut-Lock
2	323-13	2	Screw-HH
3	3231-4	1	Bolt-CARR
4	3230-3	1	Screw-CARR
5	88-5130-03	1	Bracket - Steering Rack
6	3230-1	4	Bolt-CARR
7	88-5010	1	Spacer - Steering Rack
8	302-26	1	Fitting-Grease
9	88-4670	1	Bushing - Eccentric
10	88-5200	1	Steering Rack W.a.
11	52-2891	2	Bushing - Steering Links
12	111419	1	Washer-Bearing
13	3256-25	4	Washer-Flt
14	3272-10	2	Pin-Cotter
15	3296-39	1	Nut-Lock
16	3296-29	1	Nut-Lock
17	5-4460	1	Washer-Fender
18	92-7890-03	1	Spindle Wa-LH
19	3272-10	2	Pin-Cotter
20	3256-24	2	Washer-Flat
21	3-6498	2	Washer-Thrust
23	88-5470	2	Spacer - Front Axle
24	3256-24	2	Washer-Flat


Ref. No.	Part No.	Qty.	Description
25	3296-39	2	Nut-Lock
26	61-9780	2	Hubcap
27	3272-12	2	Pin-Cotter
28	28-2480	2	Washer-Flat
29	88-4270	2	Front Wheel & Tire ASM
29:1	88-4360	2	Rim ASM-13" Front
29:2	88-4060	2	Tire 13x5.00-6
29:3	232-27	2	Valve Stem & Cap
29:4	88-4400	4	Bearing - Wheel
29:5	302-5	2	Fitting - Grease
29:6	232-40	2	Tube-Inner 13x5-6
30	92-7889-03	1	Spindle Wa-RH
31	94-1962-03	1	Front Axle Wa
32	88-5380	1	Tie Rod - Steering
33	32151-48	2	Ring-Retaining
34	88-4830	1	Link - Drag
35	88-5510	1	Rod-Parking Brake
36	88-5520-03	1	Bracket-Parking Brake
37	88-0890	1	Grip - Parking Brake
38	3-6498	4	Washer-Thrust

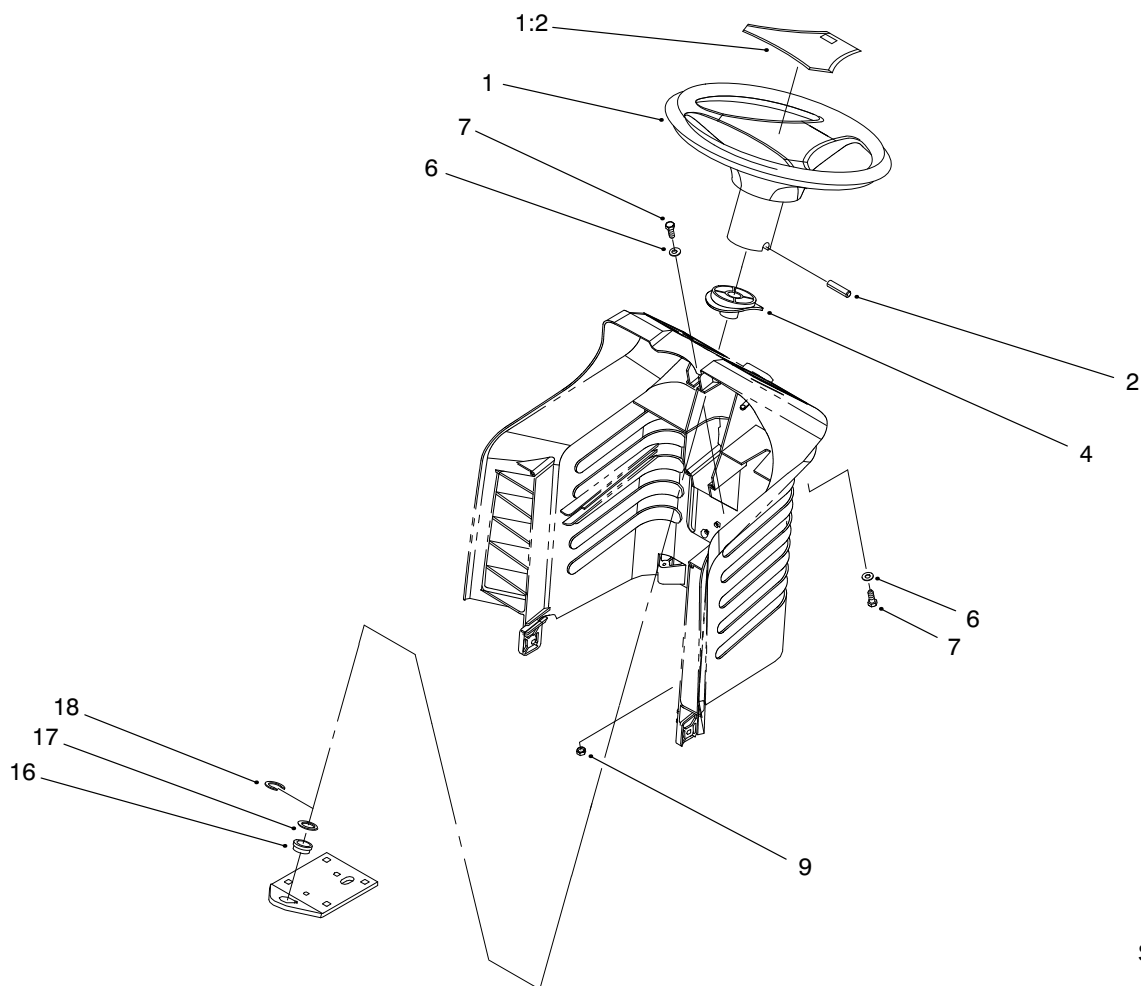

Sheet No.:6

Steering Assembly

Ref. No.	Part No.	Qty.	Description
1	88-3850	1	Steering Wheel
1:2	88-3870	1	Cover-Steering Wheel
2	32121-111	1	Pin-Spiral
4	88-4190	1	Bushing - Sliding
6	3256-22	2	Washer-Flat
7	321-4	2	Screw-HH
9	3296-42	2	Nut-Lock
16	88-5150	1	Bushing - Flange
17	3-6498	1	Washer-Thrust
18	32151-48	1	Ring-Retaining

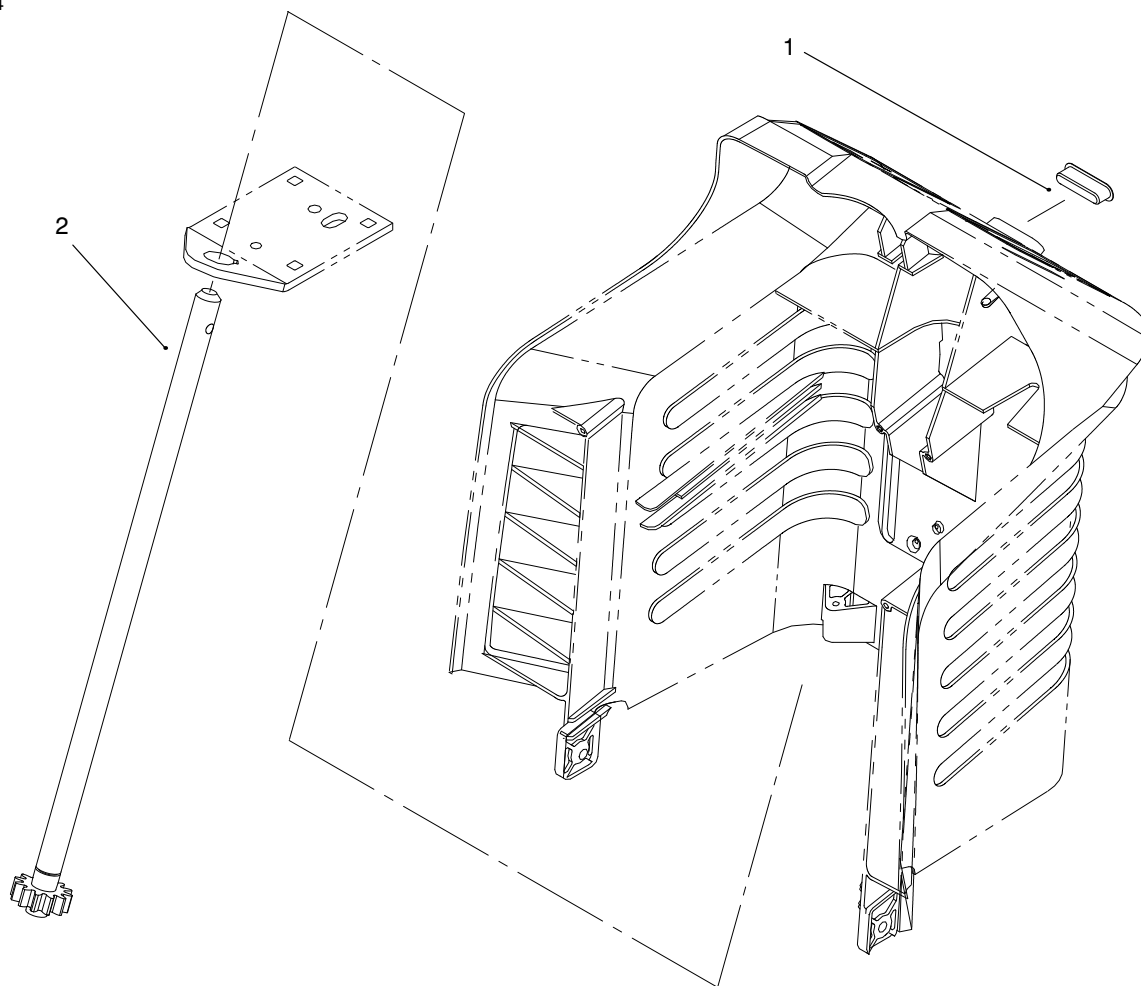


Sheet No.:7

Steering Shaft Assembly

Ref. No.	Part No.	Qty.	Description
1	88-4150	1	Plug
2	88-6380	1	Shaft W.a. – Steering


Ref. No.	Part No.	Qty.	Description

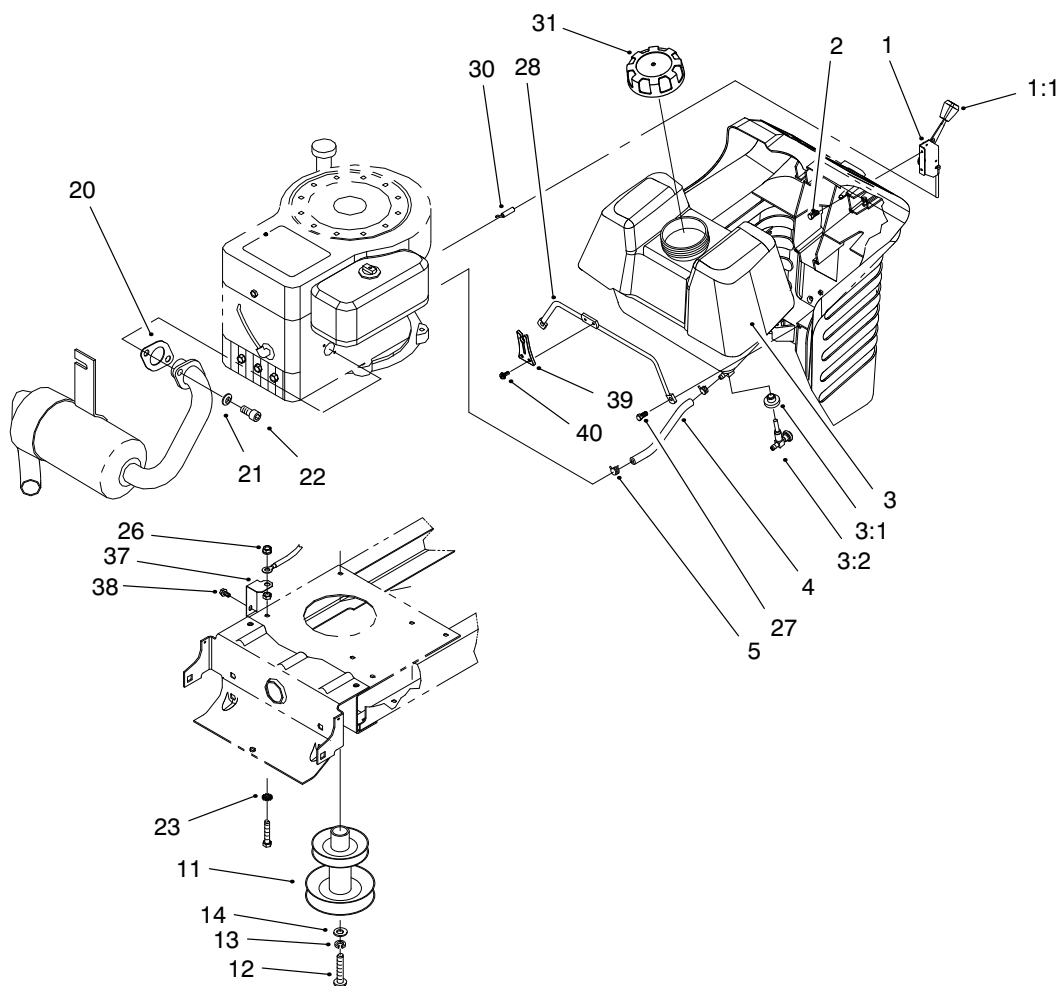

Sheet No.:8

Gas Tank & Engine Pulley Assembly

Ref. No.	Part No.	Qty.	Description
1	88-4340	1	Throttle Control ASM
1:1	66-0120	1	Knob
2	27-0220	2	Screw-Special HWH
3	88-3880	1	Gas Tank Assembly
3:1	104047	1	Bushing
3:2	104048	1	Assembly-Valve
4	47-2963	1	Fuel Line
5	2412-98	2	Clamp-Hose
11	88-5050	1	Pulley - Engine (32")
12	26-0671	1	Bolt-Blade
13	3253-22	1	Washer-Lock
14	3256-25	1	Washer-Flt
20	88-4410	1	Gasket - Muffler
21	3253-4	2	Washer-Lock
22	3274-10	2	Screw-Sckt Hd
23	3255-8	1	Washer-Lock
26	32149-1	2	Nut-Keps
27	27-0220	2	Screw-Special HWH
28	94-1952	1	Rod-Gas Tank
30	88-4350	1	Cable ASM-Throttle
31	88-3980	1	Gas Cap ASM
37	93-3809	1	Bracket-Ground
38	9266714	1	Screw-HWHTF
39	94-1951	1	Latch-Hood
40	32144-112	2	Screw-Thd Form

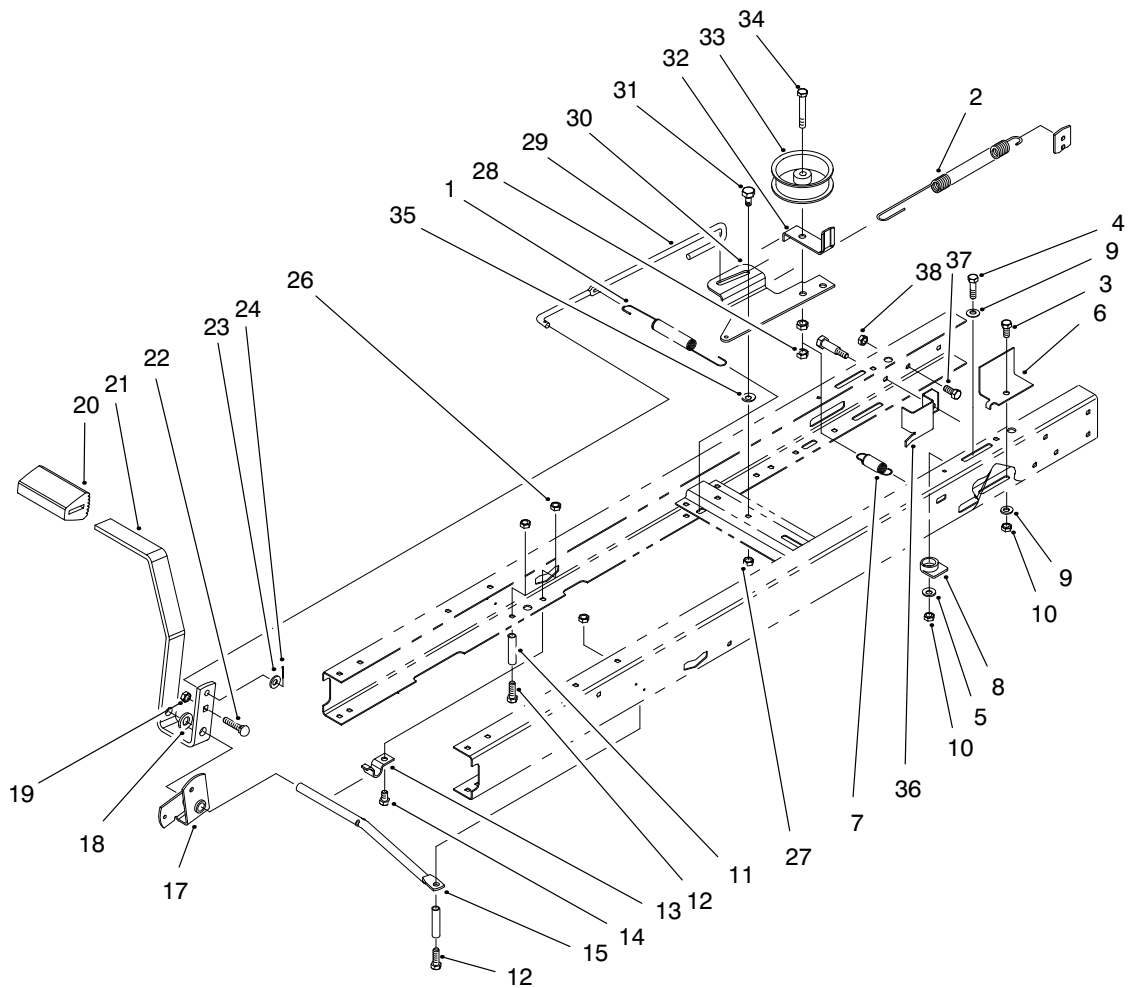


Sheet No.:9

Clutch Assembly

Ref. No.	Part No.	Qty.	Description
1	27-8890	1	Spring – Pedal Return
2	94-4295	1	Spring-Brake
3	322-3	1	Screw-HH
4	322-6	1	Screw-HH
5	5-4460	1	Washer-Fender
6	94-5433	1	Bracket-Belt Guide
7	88-6330	1	Spring – Extension
8	84-5610	1	Guide-Cable
9	3256-23	2	Washer-Flat
10	3296-29	2	Nut-Lock
11	46-5590	2	Spacer
12	322-12	2	Screw HH
13	88-4810	1	Clamp – Shift Pivot
14	322-3	1	Screw-HH
15	88-5500	1	Rod – Pedal Pivot
17	88-4800-03	1	Bellcrank
18	3256-26	1	Washer-Flt
19	3296-29	1	Nut-Lock
20	65-2920	1	Pad-Pedal
21	88-5000-03	1	Pedal – Clutch/Brake
22	3230-3	1	Screw-CARR
23	3256-23	1	Washer-Flat
24	3272-10	1	Pin-Cotter
26	3296-29	3	Nut-Lock
27	3296-29	1	Nut-Lock
28	3296-59	2	Nut-Lock


Ref. No.	Part No.	Qty.	Description
29	88-5270	1	Rod – Clutch/Brake
30	88-6070	1	Arm –Idler
31	37-8770	1	Bolt-Shldr
32	88-5560	1	Belt Guide – Idler
33	88-5680	1	Idler Pulley
34	323-11	1	Screw
35	5-4460	1	Washer-Fender
36	94-4926	1	Bracket-Belt Guide
37	322-3	1	Screw-HH
38	3296-29	1	Nut-Lock

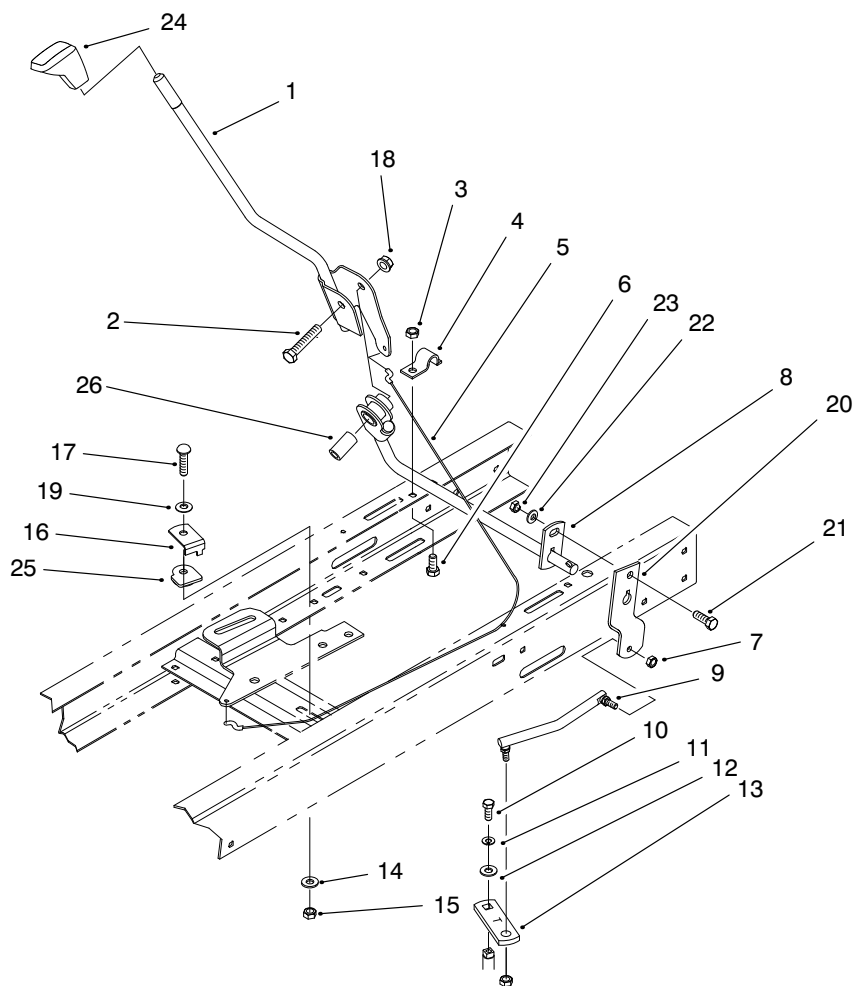

Sheet No.:10

Shift Assembly

Ref. No.	Part No.	Qty.	Description
1	94-1991-03	1	Shift Lever Wa
2	323-10	1	Screw-HH
3	3296-29	2	Nut-Lock
4	88-4810	2	Clamp - Shift Pivot
5	55-9321	1	Cable-Clutch
6	322-3	2	Screw-HH
7	3296-3	2	Nut-Lock 1/4-28 Unf
8	94-1993-03	1	Shift Pivot Wa
9	94-5432	1	Link-Shift
10	329-23	1	Screw
11	3253-3	1	Washer-Lock
12	7-5461	1	Spacer-Transmission
13	88-5340	1	Lever - Shift (Transaxle
14	3256-23	1	Washer-Flat
15	3296-29	1	Nut-Lock
16	88-5930	1	Keeper - Cable
17	3230-3	1	Screw-CARR
18	3296-39	1	Nut-Lock
19	3256-25	1	Washer-Flt
20	94-1968	1	Lever-Shift Pivot
21	322-3	1	Screw-HH
22	3256-23	1	Washer-Flat
23	3296-29	1	Nut-Lock
24	94-5565	1	Knob - Control

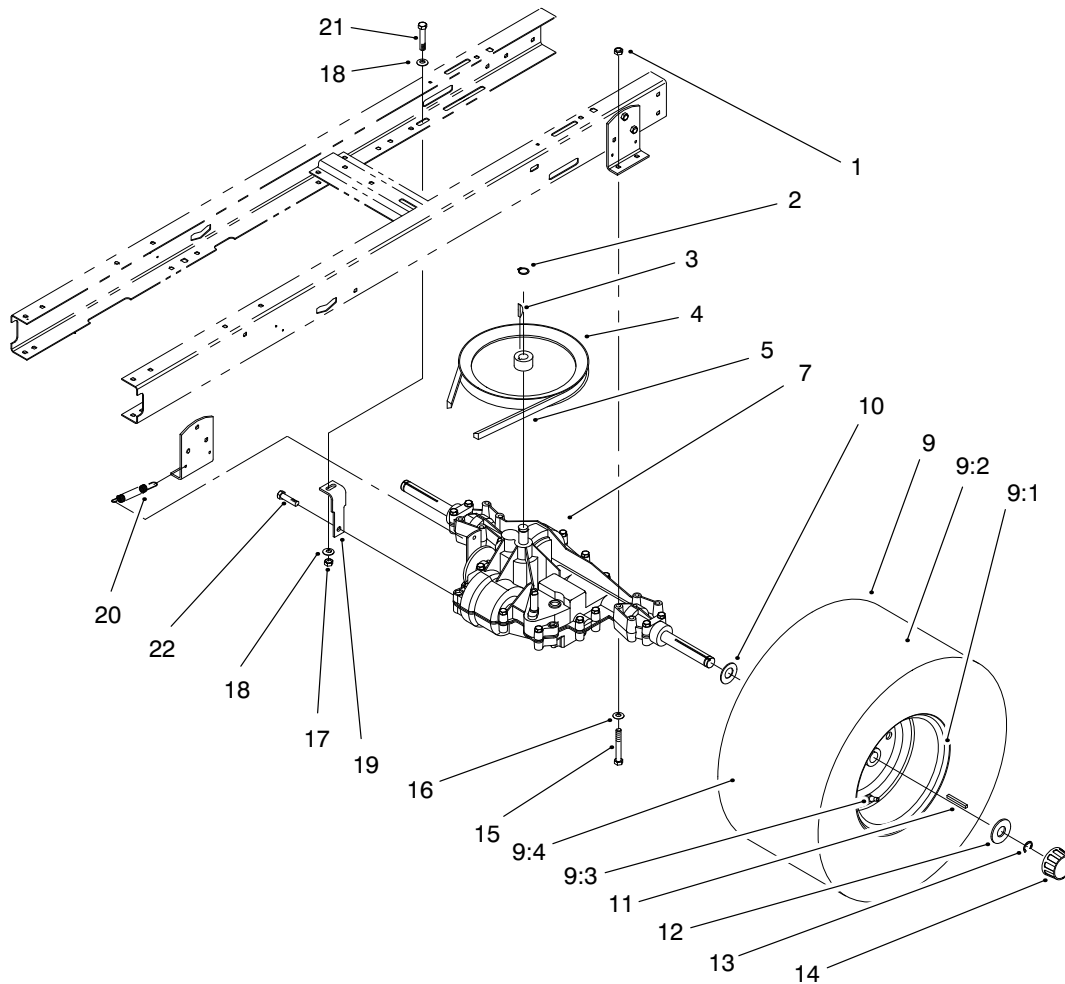


Sheet No.:11

Transaxle Assembly

Ref. No.	Part No.	Qty.	Description
1	3296-29	4	Nut-Lock
2	32120-64	1	Ring-Retaining
3	3257-23	1	Key-Woodruff
4	88-4840	1	Pulley - Transmission
5	94-4291	1	V-Belt
7	94-6022	1	Transaxle - Peerless 931
9	88-4290	2	Rear Wheel & Tire ASM
9:1	88-4380	2	Rim ASM-16" Rear
9:2	88-4080	2	Tire 16x6.50-8
9:3	232-27	2	Valve Stem & Cap Assembly
9:4	231-91	2	Tube-Inner 16x6.5-8
10	3-6498	2	Washer-Thrust
11	7-0036	2	Key-Square
12	28-2480	2	Washer-Flat
13	32151-48	2	Ring-Retaining
14	61-9780	2	Hubcap
15	322-12	4	Screw HH
16	3256-23	4	Washer-Flat
17	3296-29	2	Nut-Lock
18	3256-23	4	Washer-Flat
19	94-1969	2	Strap-Torque
20	26-6700	1	Spring - Extension


Ref. No.	Part No.	Qty.	Description
21	322-3	2	Screw-HH
22	32144-14	2	Screw-HWH

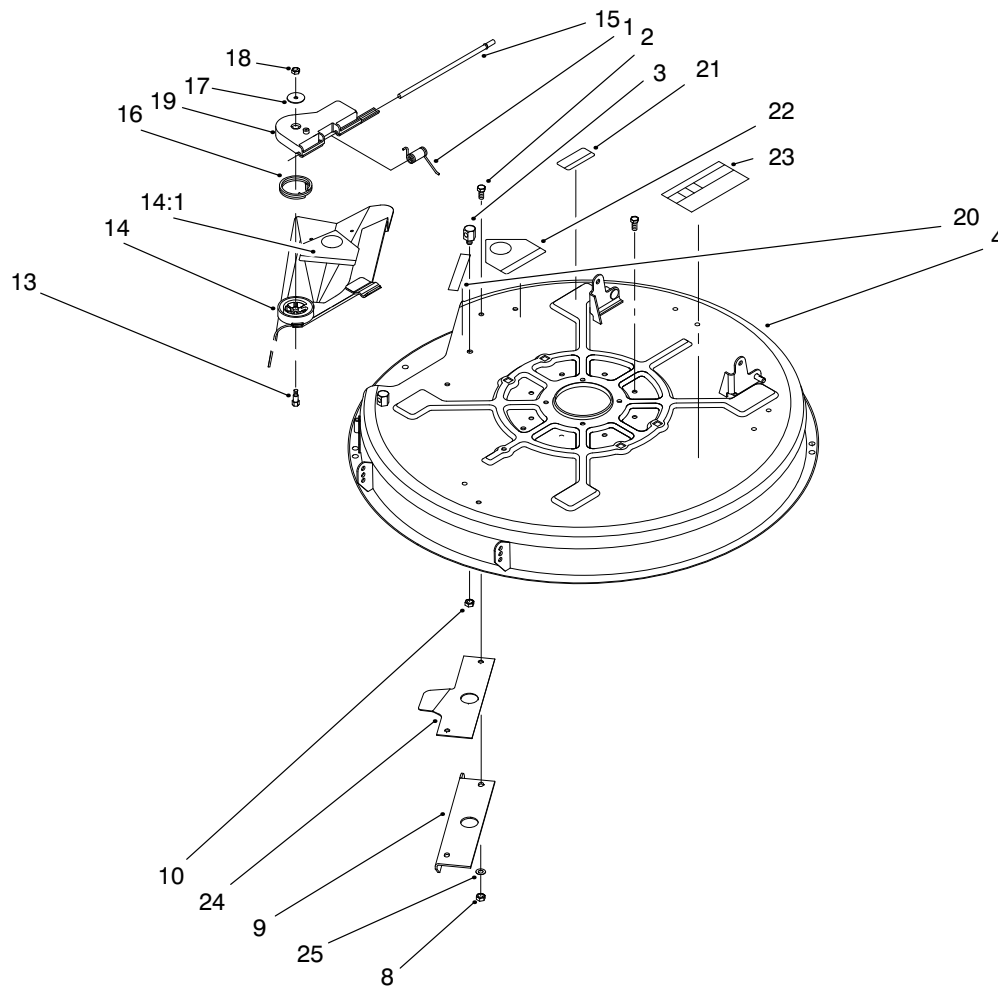

Sheet No.:14

Deck Assembly (32" Cutting Unit)

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	92-2493	1	Spring – Torsion				
2	322-3	2	Screw-HH				
3	28-7350	1	Post-Pivot				
4	88-5790-01	1	32" Cutter Deck Wa				
8	3296-29	2	Nut-Lock				
9	44-5720-03	1	Baffle – Deck				
10	3296-59	1	Nut-Lock				
13	92-8916	1	Bolt-Shoulder				
14	93-0318	1	ASM-Deflector				
14:1	93-1122	1	Decal – Danger				
15	88-6150	1	Rod – Hinge				
16	88-6160	1	Spring – Torsion				
17	3256-58	1	Washer-Flt				
18	3296-42	1	Nut-Lock				
19	88-4540	1	Hinge – Deflector				
20	68-3650	1	Decal-Danger				
21	55-4300	2	Decal-Warning				
22	93-1122	1	Decal-Danger				
23	66-1340	1	Decal-Discharge				
24	92-2494-03	1	Ramp – Deflector				
25	3256-23	2	Washer-Flat				

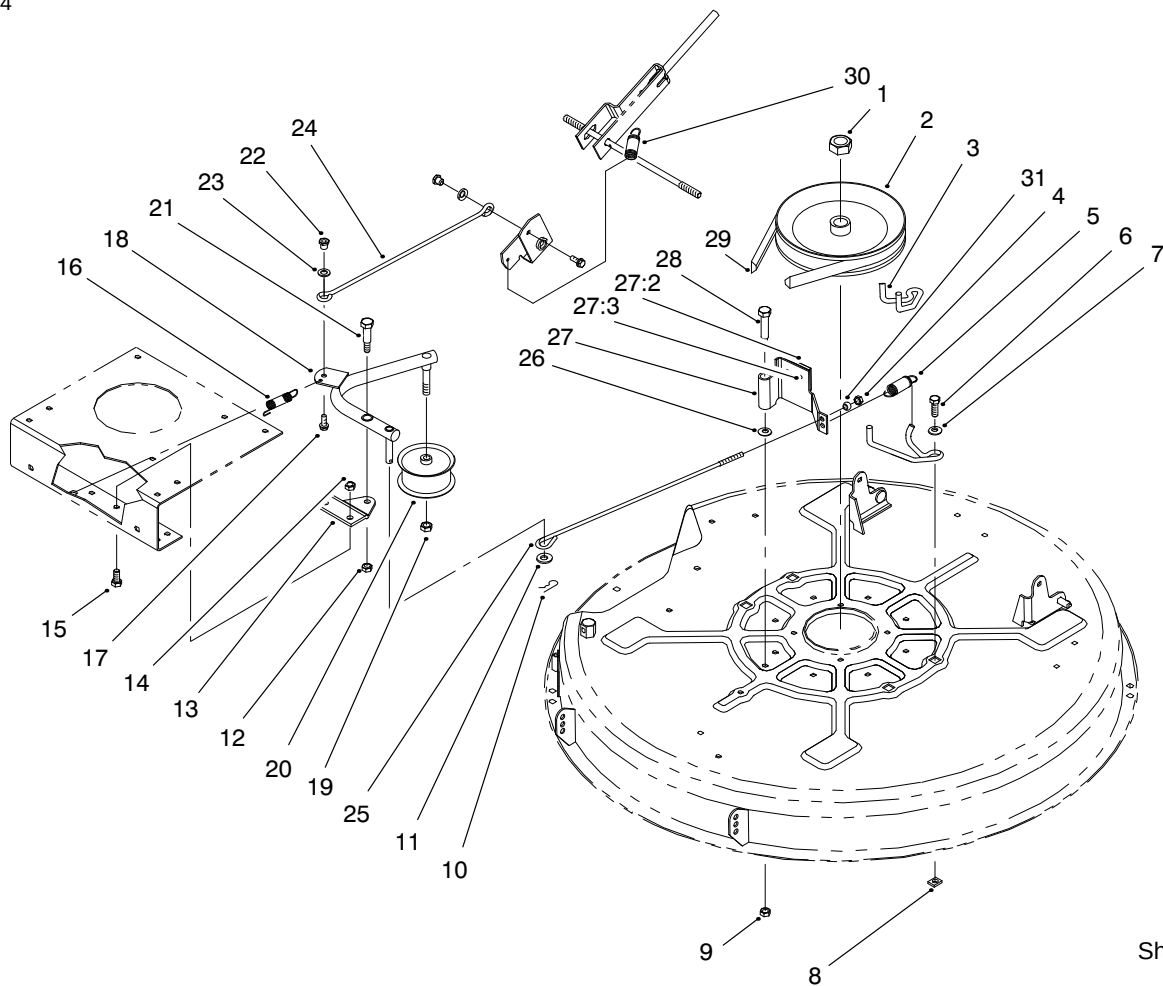


Sheet No.:15

Pulley & Belt Assembly (32" Cutting Unit)

Ref. No.	Part No.	Qty.	Description
1	3219-7	1	Nut-Hex
2	88-5060	1	Pulley – Deck
3	88-5760	2	Belt Guide – Deck
4	3296-42	1	Nut-Lock
5	88-6330	1	Spring – Extension
6	322-5	2	Screw-HH
7	5-4460	2	Washer-Fender
8	3290-496	2	Nut – Retained
9	3296-29	1	Nut-Lock
10	3290-307	1	Pin-Cotter
11	3256-24	1	Washer-Flat
12	3296-29	1	Nut-Lock
13	88-5370-03	1	Plate – Idler Mount
14	3296-29	2	Nut-Lock
15	322-3	2	Screw-HH
16	26-6700	1	Spring – Extension
17	3234-13	2	Screw-HHF
18	88-5850-03	1	Idler Arm W.a.
19	3296-39	1	Nut-Lock
20	56-9870	1	Pulley-Idler 2.75" Dia
21	7-0030	1	Shoulder Bolt
22	47-4990	2	Post-Linkage Mount
23	3256-24	2	Washer-Flat
24	88-5980	1	Rod – Deck Engage
25	88-5690	1	Rod – Deck Brake
26	3256-23	1	Washer-Flat

Ref. No.	Part No.	Qty.	Description
27	88-6110	1	ASM. – Deck Brake
27:2	56-9830	1	Brake Pad
27:3	3290-282	2	Pop Rivet
28	88-4590	1	Bolt-shoulder
29	88-6260	1	V-Belt
30	88-6420	1	Spring/Cable ASM
31	67-0710	1	Ball – Swivel

† Included in a service kit or in an assembly

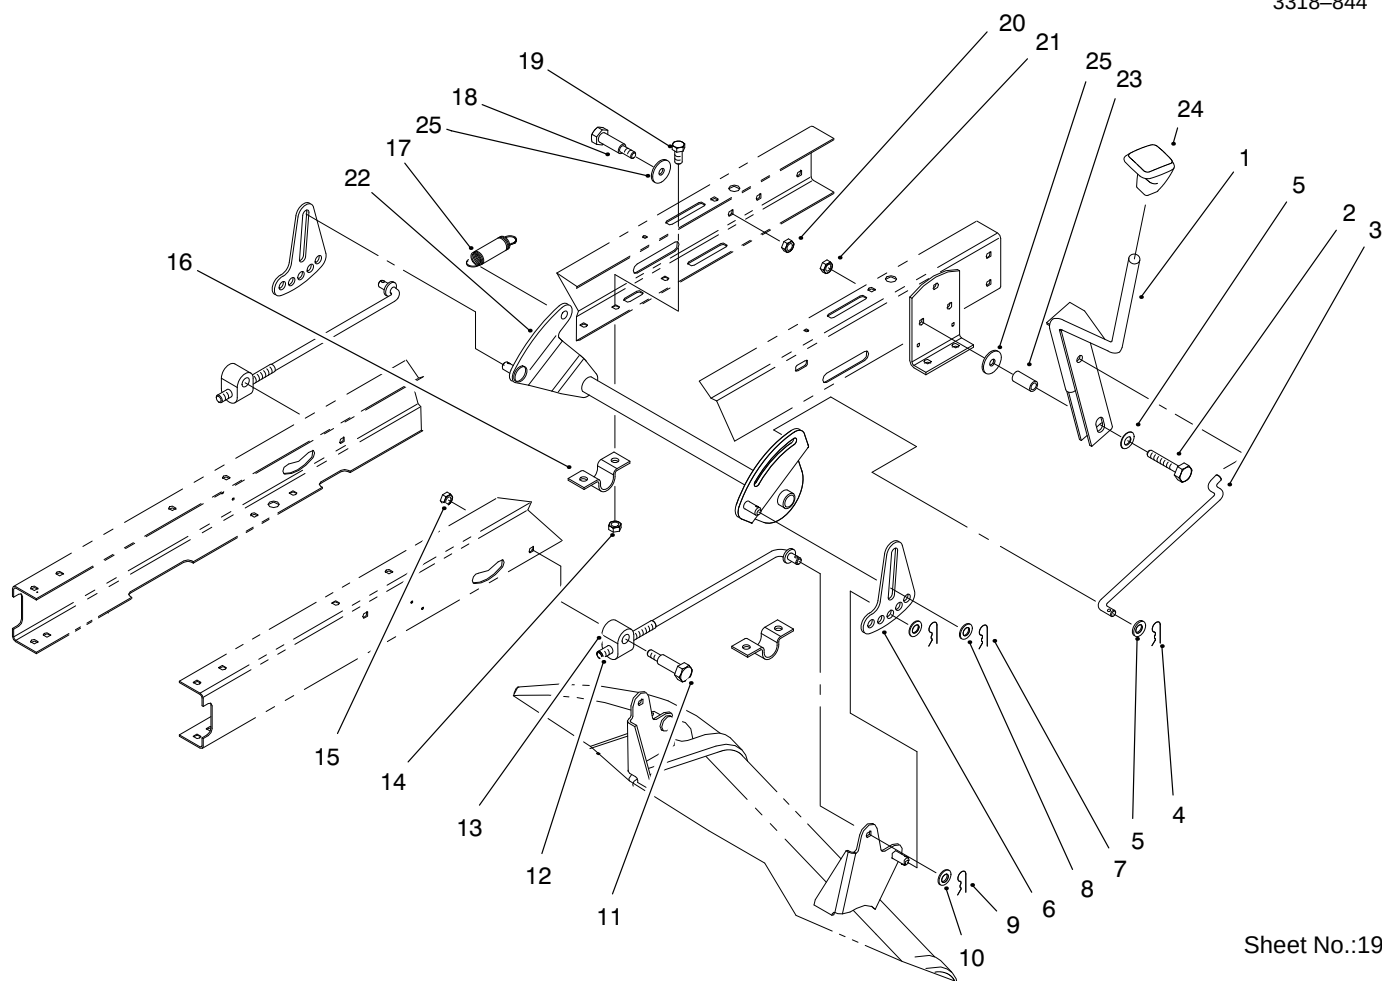


Sheet No.:19

Height Of Cut Assembly

Ref. No.	Part No.	Qty.	Description
1	93-3822-03	1	Lever-HOC
2	322-9	1	Screw-HH
3	88-5900	1	Link - HOC
4	3290-307	1	Pin-Cotter
5	3256-24	2	Washer-Flat
6	88-5570-03	2	Link-Adjusting HOC
7	3290-307	4	Pin-Cotter
8	80-6990	4	Washer-Hardened
9	3290-307	2	Pin-Cotter
10	3256-24	2	Washer-Flat
11	7-0030	2	Shoulder Bolt
12	88-5450	2	Rod - Hanger
13	88-4230	2	Trunnion - HOC
14	3296-29	4	Nut-Lock
15	3296-29	2	Nut-Lock
16	88-4730	2	Clamp - HOC Pivot
17	88-6460	1	Spring - Extension
18	7-0030	1	Shoulder Bolt
19	322-3	4	Screw-HH
20	3296-29	1	Nut-Lock
21	3296-29	1	Nut-Lock
22	88-5110-03	1	Pivot W.a. (H.o.c.)
23	65-7210	1	Spacer
24	94-5565	1	Knob - Control
25	5-4460	2	Washer-Fender

Ref. No.	Part No.	Qty.	Description

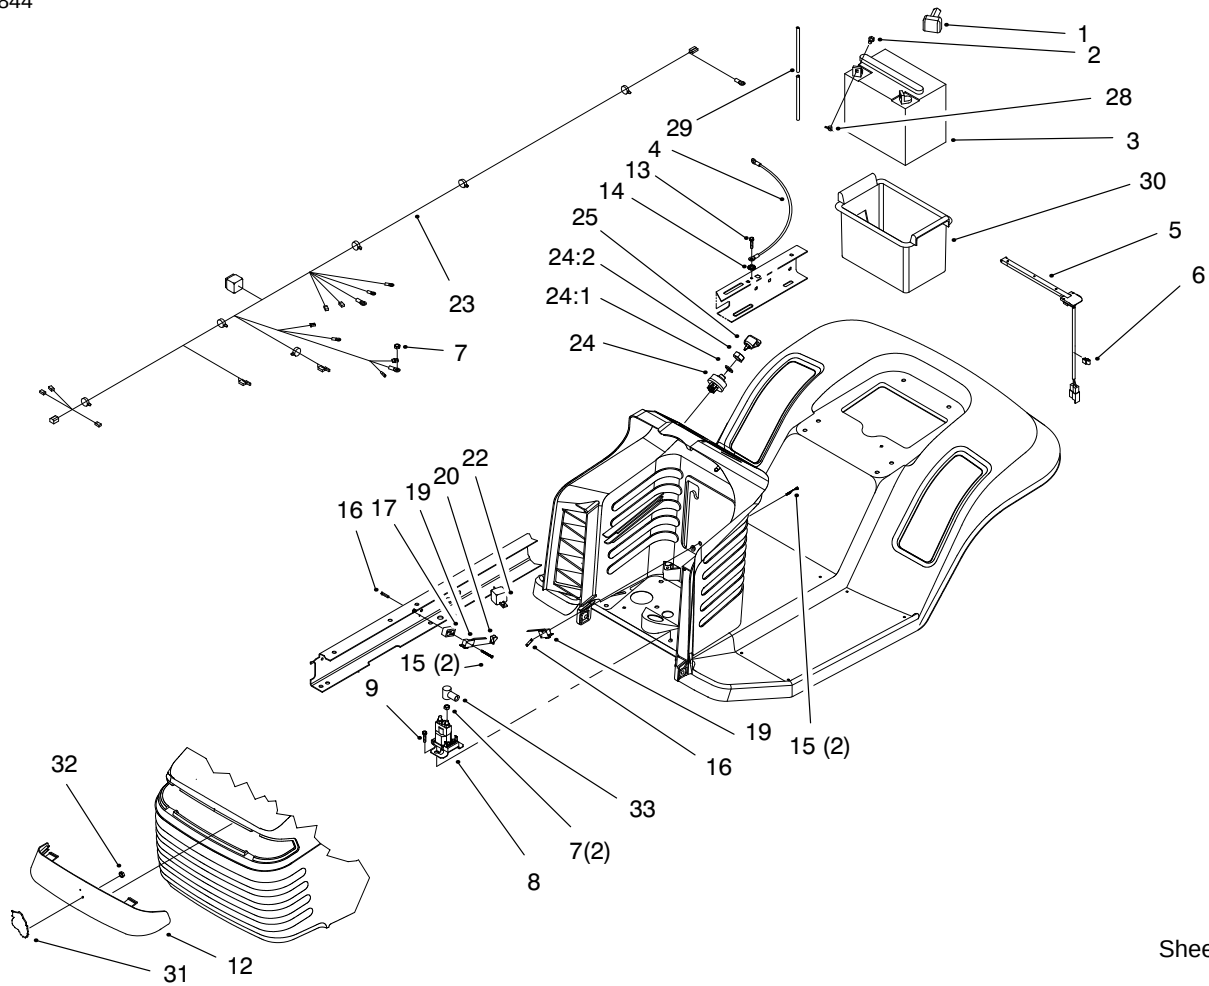


Sheet No.:20

Electrical Assembly

Ref. No.	Part No.	Qty.	Description
1	28-8080	1	Boot-Battery Terminal
2	321-4	2	Screw-HH
3	80-2600	1	Battery - 7 Plate
4	44-8110	1	Battery Cable -Neg
5	38-1420	1	Switch-Seat
6	702366	1	Clip-Wire Retainer
7	32149-2	3	Nut-Hex Lock
8	92-9845	1	Solenoid
9	9266714	2	Screw-HWHTF
12	88-3960	1	Lense - Headlights
13	9266714	1	Screw-HWHTF
14	3255-7	1	Washer-Lock
15	93-0539	4	Screw-PPH
16	3290-354	2	Nut-Speed
17	88-4880	1	Spacer - Microswitch
19	88-9932	2	Switch - Micro
20	93-3240	1	Seal-Plunger
22	116397	1	Relay
23	93-3810	1	Wire Harness
24	88-9830	1	Switch-Ignition
24:1	3254-5	1	Washer-Lock(F/W Switch)
24:2	218-461	1	Nut-HH (F/W Sw)
25	63-8360	1	Key-Ignition
28	32103-22	2	Nut-Wing

Ref. No.	Part No.	Qty.	Description
29	56-2540	1	Tube-Vent Use w/80-2600
30	88-4040	1	Battery Box
31	80-2240	1	Plate-Name Grille
32	3290-299	1	Nut - Tinnerman
33	94-5362	1	Boot-Terminal Insulator

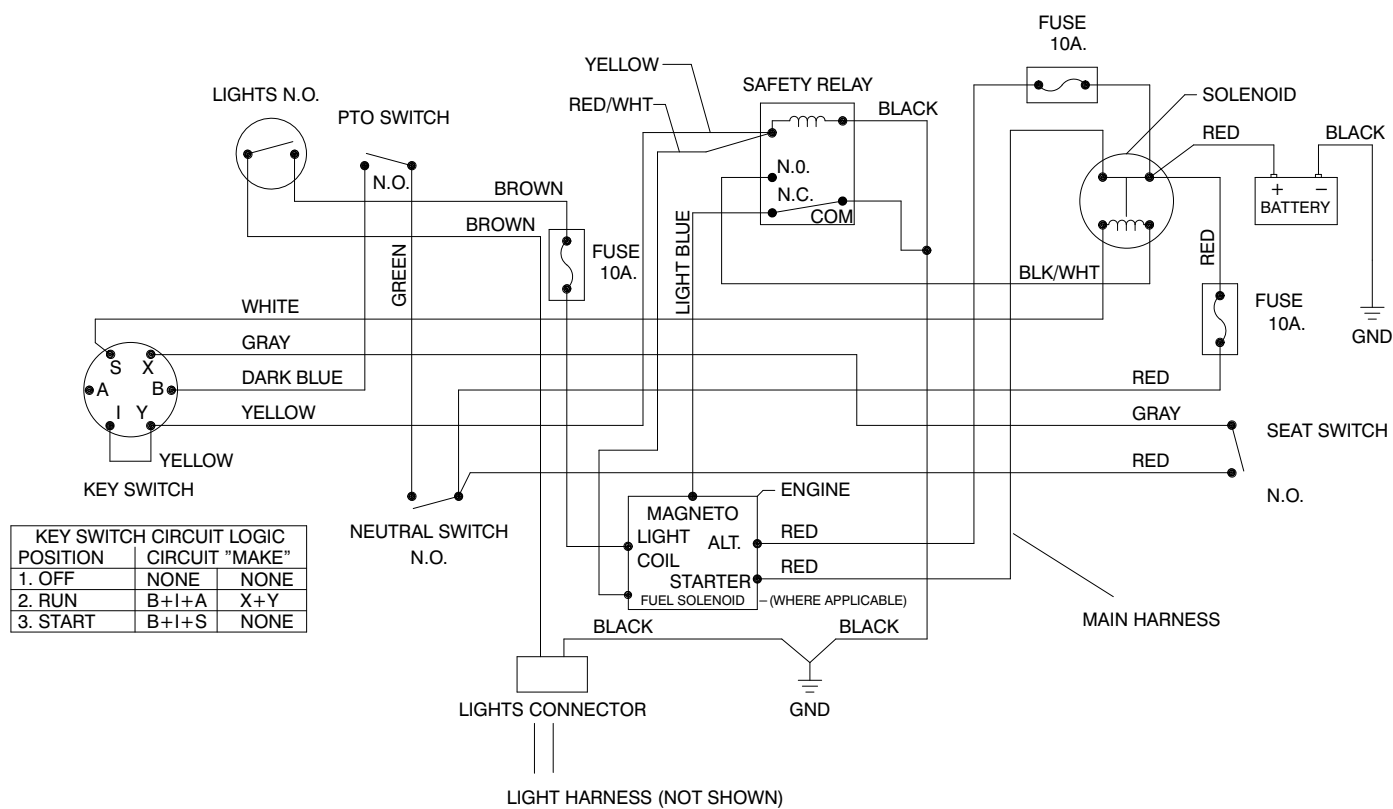


Sheet No.:21

Electrical Schematic

Ref. No.	Part No.	Qty.	Description

Ref. No.	Part No.	Qty.	Description

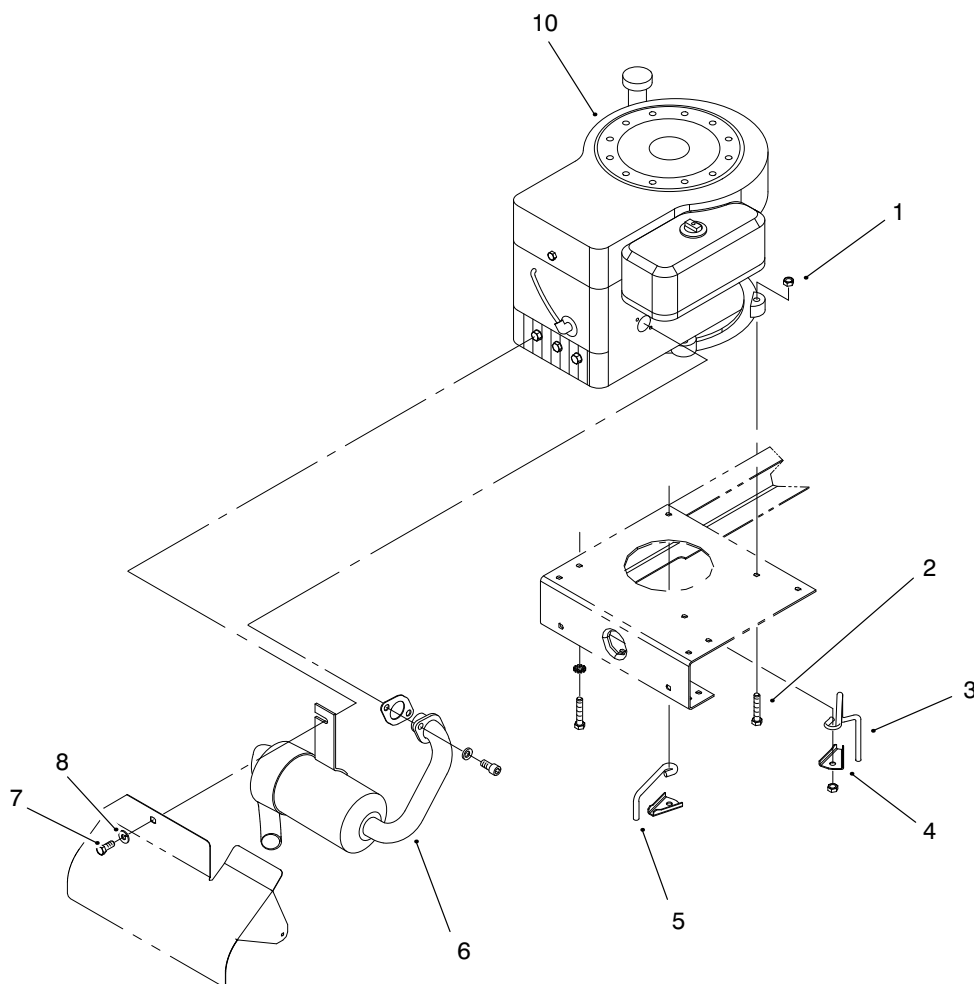


Sheet No.:25

Engine Assembly

Ref. No.	Part No.	Qty.	Description
1	3296-29	3	Nut-Lock
2	322-9	4	Screw-HH
3	88-6060	1	Belt Guide - L.h.
4	76-3820	2	Anchor - Belt Guide
5	88-5490	1	Belt Guide - R.h.
6	88-6480	1	Muffler W.a.
7	321-4	1	Screw-HH
8	3253-3	1	Washer-Lock
10	95-1694	1	Engine - 12hp B&s(Carb)

Ref. No.	Part No.	Qty.	Description

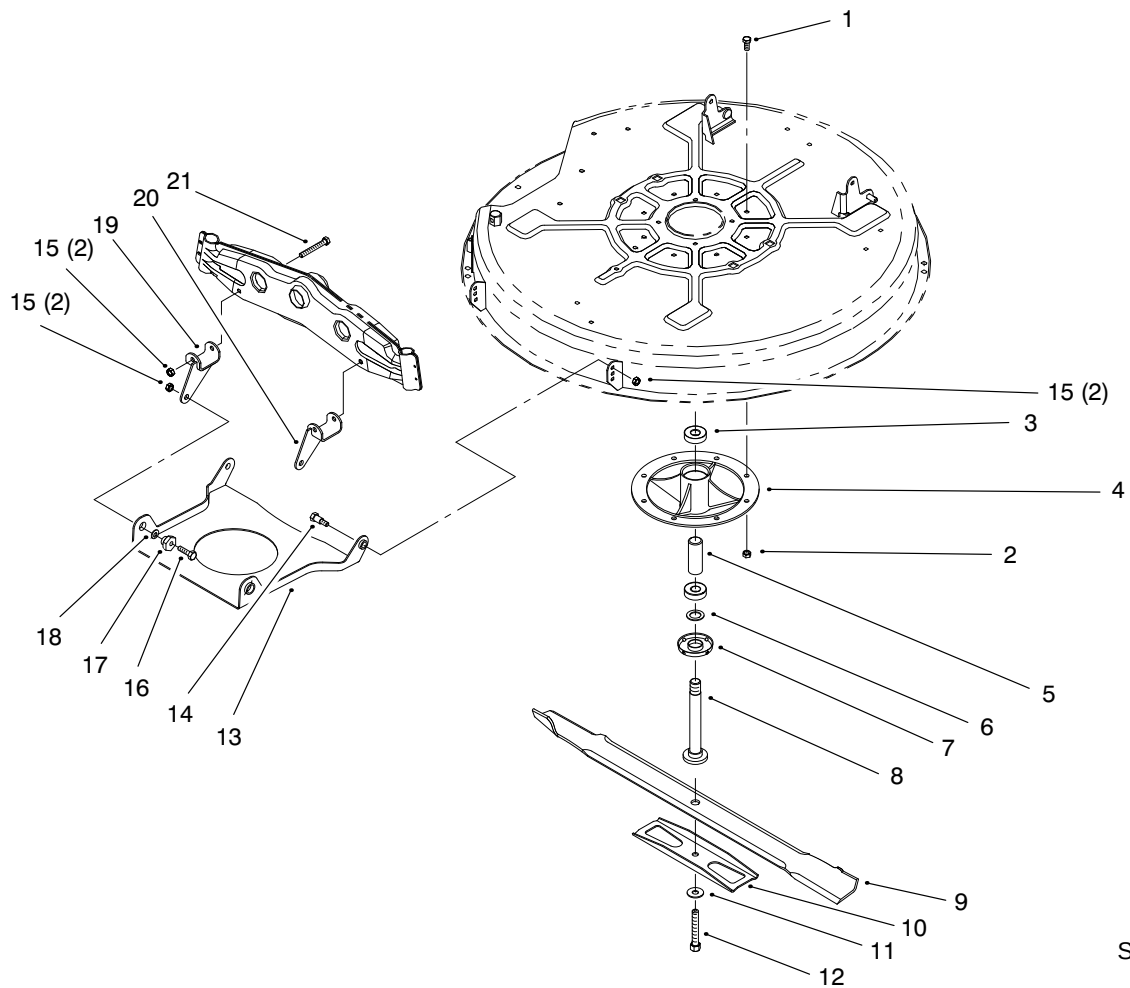


Sheet No.:26

Spindle & Blade Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	322-3	8	Screw-HH				
2	3296-29	8	Nut-Lock				
3	251-297	2	Bearing-20mm				
4	56-7030	1	Casting-Spindle Body				
5	83-7020	1	Spacer-Bearing				
6	80-4390	1	Spacer-Hardened				
7	80-4370	1	Shield-Bearing				
8	80-4350	1	Shaft - Spindle				
9	33-4750	1	Blade - 32"				
10	80-4570-03	1	Stiffener-Blade				
11	3290-465	1	Washer-Spring				
12	26-0671	1	Bolt-Blade				
13	88-4940-03	1	Pan - Frt Deck Susp (32)				
14	28-0540	2	Bolt-Shoulder				
15	3296-29	6	Nut-Lock				
16	322-6	2	Screw-HH				
17	106661	2	Cam-Eccentric				
18	3256-23	2	Washer-Flat				
19	88-5640-03	1	Bracket Wa-RH				
20	88-5650-03	1	Bracket Wa-LH				
21	322-12	2	Screw HH				

PEERLESS TRANSAXLE MODEL MST 205-509

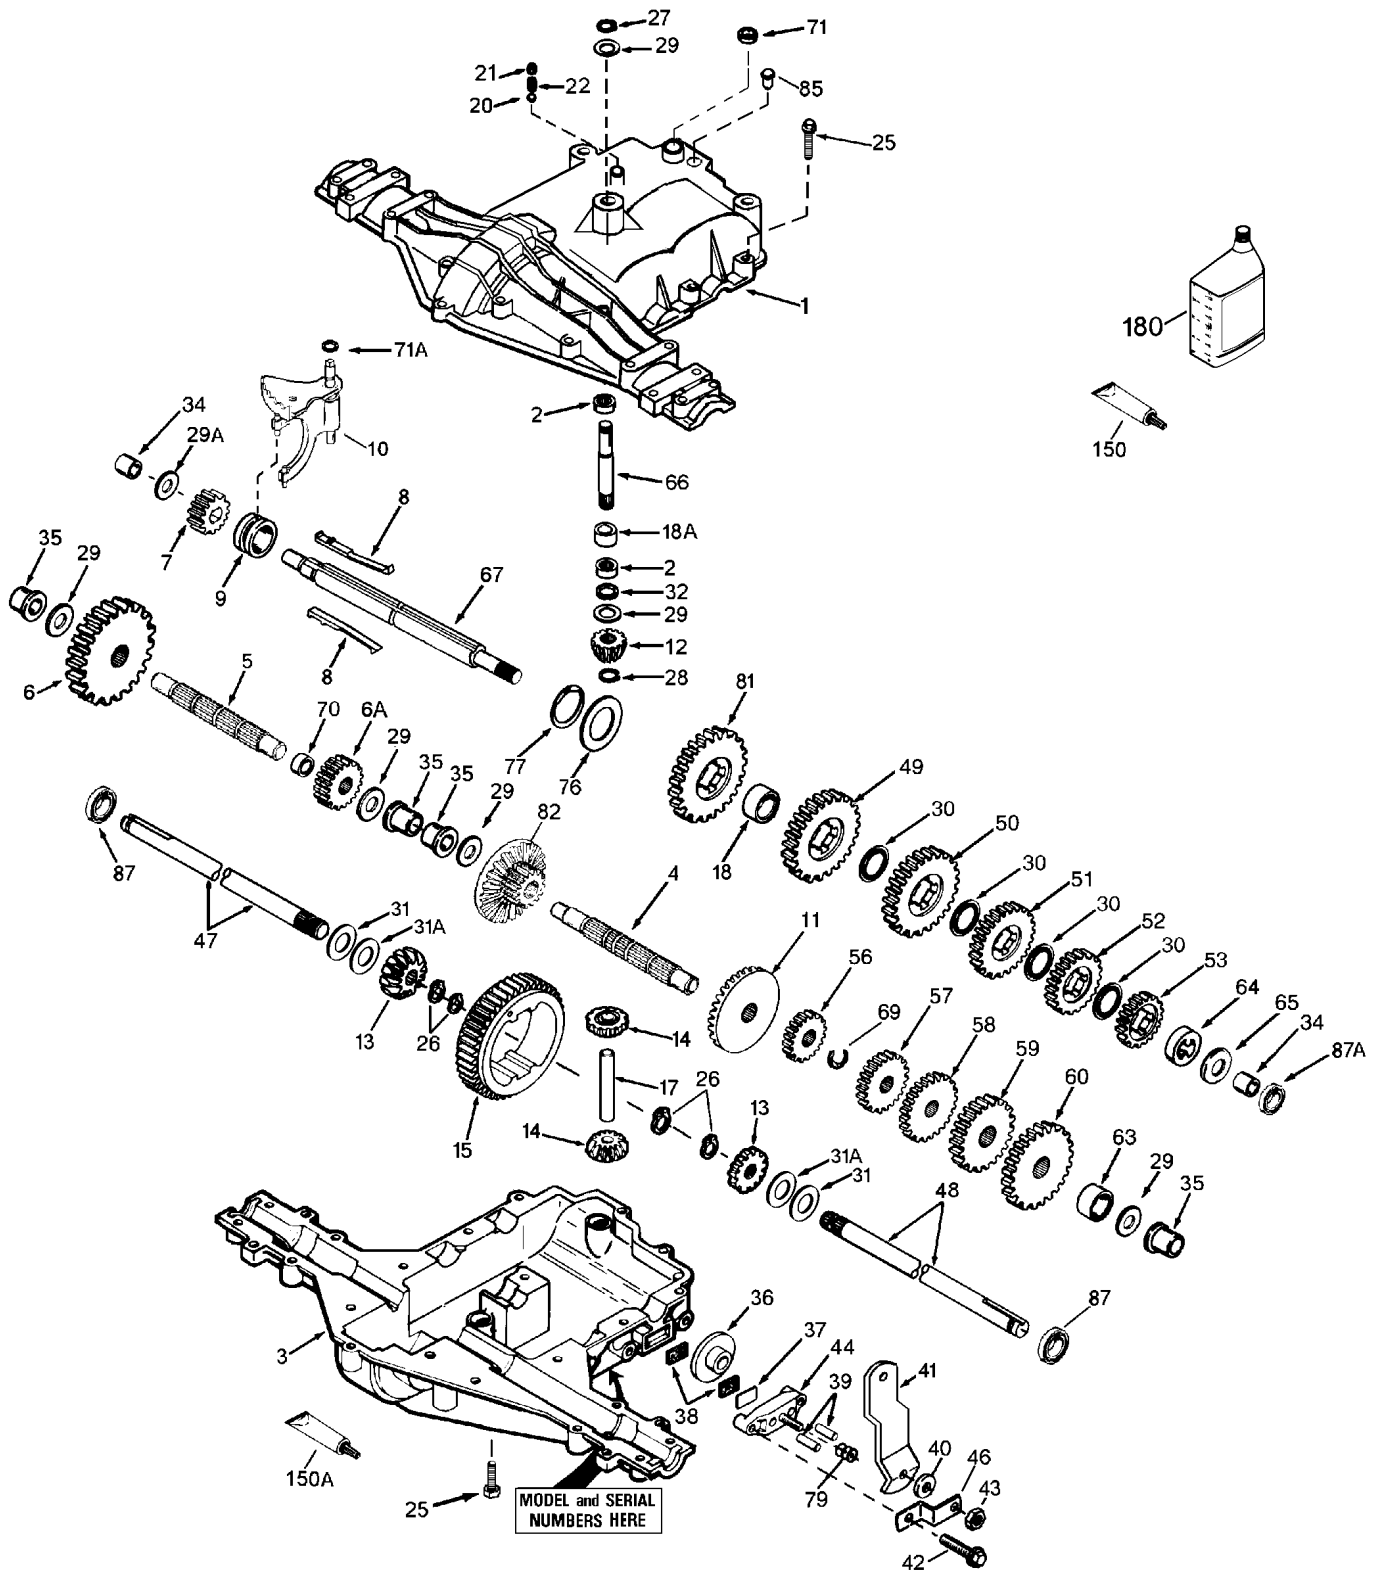

PEERLESS TRANSAXLE MODEL MST 205–509

Ref. No.	Part No.	Description	No. Used
1	772137	Transaxle Cover	1
2	780086A	Needle Bearing	2
3	770123	Transaxle Case	1
4	776395	Countershaft	1
5	776397	Output Shaft	1
6	778331	Spur Gear (38 teeth)	1
6A	778332	Spur Gear (15 teeth–steel)	1
7	778330	Spur Gear (11 teeth–steel)	1
8	792136A	Shift Key	2
9	784352	Shift Collar	1
10	784378	Shift Rod & Fork	1
11	778334	Bevel Gear (30 teeth)	1
12	778309	Input Bevel Pinion (13 teeth)	1
13	778327	Bevel Gear (16 teeth–steel)	2
		(Incl. 14)	2
14	778327	Bevel Gear (16 teeth–steel)	2
		(Incl. 13)	2
15	778312A	Ring Gear (43 teeth)	1
17	786139	Drive Pin	1
18	786102	Spacer	1
18A	786175	Spacer	1
20	792077	Ball 5/16" dia	1
21	792078	Set Screw	1
22	792079	Spring	1
25	792073	Screw	18
26	792125	Retaining Ring (pkg of 2)	4
27	792035	Retaining Ring	1
28	788040	Retaining Ring	1
29	780072	Washer	6
29A	780160	Washer	1
30	780108	Washer	4
31	780001	Washer (.056 wide)	2
		(USE AS NEEDED)	2
31A	780195	Flat Washer (.062 wide)	2
32	788083	Oil Seal	1
34	780194	Bushing	2
35	780193	Flanged Bushing	4
36	790075	Brake Disk	1
37	790007	Brake Pad Plate	1
38	799021	Brake Pad (pkg of 2)	2

Ref. No.	Part No.	Description	No. Used
39	786026	Dowel Pin	2
40	792076A	Flat Washer	1
41	790080	Brake Lever	1
42	792073	Screw	2
43	792075	Locknut	1
44	790025	Brake Pad Holder	1
46	786086	Brake Lever Bracket	1
47	774690	Axle (11–15/16" long)	1
48	774691	Axle (16–1/2" long)	1
49	778356	Spur Gear (29 teeth–steel)	1
50	778354	Spur Gear (23 teeth–steel)	1
51	778344	Spur Gear (20 teeth)	1
52	778350	Spur Gear (16 teeth–steel)	1
53	778346	Spur Gear (15 teeth–steel)	1
56	778355	Spur Gear (11 teeth–steel)	1
57	778353	Spur Gear (17 teeth–steel)	1
58	778343	Spur Gear (20 teeth)	1
59	778349	Spur Gear (24 teeth–steel)	1
60	778345	Spur Gear (25 teeth)	1
63	786071	Countershaft Spacer	1
64	786072	Brake Shaft Spacer	1
65	780189	Washer	1
66	776394	Input Shaft	1
67	776396	Shifter & Brake Shaft	1
69	792170	Retaining Ring	1
70	786172	Spacer	1
71	788069	Square Cut Ring	1
71A	788092	"O" Ring	1
76	780090	Washer	1
77	788078A	Inverted Retaining Ring	1
79	792144	Spring	1
81	778338	Spur Gear (27 teeth)	1
82	778333	Bevel & Spur Gear (30 & 13 teeth)	1
85	792154	Pipe Plug	1
87	788088	Oil Seal	2
87A	788089	Oil Seal	1
150	788093	Liquid Gasket RTV Silicone	1
150A	788094	Liquid Gasket Loctite #242	1
180	730229A	Gear Oil 80W90	1

Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
104047	7	3:1	1	Bushing
104048	7	3:2	1	Assembly – Valve
106661	17	17	2	Cam – Eccentric
111419	4	12	1	Washer – Bearing
116397	14	22	1	Relay
701178	1	1	2	Cap – Protector
702366	14	6	1	Clip – Wire Retainer
9266714	7	38	1	Screw – HWHTF
9266714	14	9	2	Screw – HWHTF
9266714	14	13	1	Screw – HWHTF
3-6498	4	21	2	Washer – Thrust
3-6498	4	38	4	Washer – Thrust
3-6498	5	17	1	Washer – Thrust
3-6498	10	10	2	Washer – Thrust
5-4460	3	4	1	Washer – Fender
5-4460	4	17	1	Washer – Fender
5-4460	8	5	1	Washer – Fender
5-4460	8	35	1	Washer – Fender
5-4460	12	7	2	Washer – Fender
5-4460	13	25	2	Washer – Fender
7-0030	12	21	1	Shoulder Bolt
7-0030	13	11	2	Shoulder Bolt
7-0030	13	18	1	Shoulder Bolt
7-0036	10	11	2	Key – Square
7-5461	9	12	1	Spacer – Transmission
26-0671	7	12	1	Bolt – Blade
26-0671	17	12	1	Bolt – Blade
26-6700	10	20	1	Spring – Extension
26-6700	12	16	1	Spring – Extension
27-0220	7	2	2	Screw – Special HWH
27-0220	7	27	2	Screw – Special HWH
27-8890	8	1	1	Spring – Pedal Return
28-0540	2	6	2	Bolt – Shoulder
28-0540	17	14	2	Bolt – Shoulder
28-2480	4	28	2	Washer – Flat
28-2480	10	12	2	Washer – Flat
28-7350	11	3	1	Post – Pivot
28-8080	14	1	1	Boot – Battery Terminal
33-4750	17	9	1	Blade – 32"
37-8770	3	1	2	Bolt – Shldr
37-8770	3	2	2	Bolt – Shldr
37-8770	8	31	1	Bolt – Shldr
38-1420	14	5	1	Switch – Seat
44-5720-03	11	9	1	Baffle – Deck
44-8110	14	4	1	Battery Cable – Neg
46-5590	8	11	2	Spacer
46-8090	2	13	4	Screw – Tapping
46-8090	2	17	3	Screw – Tapping
46-8091	2	3	2	Screw – Tapping
46-8091	2	10	1	Screw – Tapping
47-2963	7	4	1	Fuel Line
47-4990	12	22	2	Post – Linkage Mount
52-2891	4	11	2	Bushing – Steering Links
55-4300	11	21	2	Decal – Warning
55-9321	9	5	1	Cable – Clutch
56-2540	14	29	1	Tube – Vent Use w/80-2600
56-7030	17	4	1	Casting – Spindle Body
56-9830	12	27:2	1	Brake Pad
56-9870	12	20	1	Pulley – Idler 2.75" Dia
61-9780	4	26	2	Hubcap
61-9780	10	14	2	Hubcap
63-8360	14	25	1	Key – Ignition

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
65-2920	8	20	1	Pad-Pedal
65-7210	13	23	1	Spacer
66-0120	7	1:1	1	Knob
66-1340	11	23	1	Decal-Discharge
67-0710	12	31	1	Ball - Swivel
68-3650	11	20	1	Decal-Danger
76-1340	1	32	1	Decal-USA
76-3820	16	4	2	Anchor - Belt Guide
80-2240	14	31	1	Plate-Name Grille
80-2600	14	3	1	Battery - 7 Plate
80-4350	17	8	1	Shaft - Spindle
80-4370	17	7	1	Shield-Bearing
80-4390	17	6	1	Spacer-Hardened
80-4570-03	17	10	1	Stiffener-Blade
80-6990	13	8	4	Washer-Hardened
83-7020	17	5	1	Spacer-Bearing
84-5610	8	8	1	Guide-Cable
84-5610	9	25	1	Guide-Cable
88-0890	4	37	1	Grip - Parking Brake
88-3840	1	28	1	Body - Rear
88-3850	5	1	1	Steering Wheel
88-3870	5	1:2	1	Cover-Steering Wheel
88-3880	7	3	1	Gas Tank Assembly
88-3930-03	2	16	1	Shield - Heat
88-3940-03	1	5	1	Panel - Rear
88-3960	14	12	1	Lense - Headlights
88-3980	7	31	1	Gas Cap ASM
88-4040	14	30	1	Battery Box
88-4050	2	12	1	Duct - Hood Air
88-4060	4	29:2	2	Tire 13x5.00-6
88-4080	10	9:2	2	Tire 16x6.50-8
88-4140	2	23	2	Nut - Wedge
88-4150	6	1	1	Plug
88-4160	2	24	2	Clamp - Pivot Rod
88-4170	2	20	1	Rod - Pivot
88-4190	5	4	1	Bushing - Sliding
88-4230	13	13	2	Trunnion - HOC
88-4270	4	29	2	Front Wheel & Tire ASM
88-4290	10	9	2	Rear Wheel & Tire ASM
88-4330	3	25	1	Seat-V 320
88-4340	7	1	1	Throttle Control ASM
88-4350	7	30	1	Cable ASM-Throttle
88-4360	4	29:1	2	Rim ASM-13" Front
88-4380	10	9:1	2	Rim ASM-16" Rear
88-4400	4	29:4	4	Bearing - Wheel
88-4410	7	20	1	Gasket - Muffler
88-4540	11	19	1	Hinge - Deflector
88-4620-03	1	11	1	Bracket - Idler Pivot
88-4630-03	1	24	1	Plate - Engine Mounting
88-4670	4	9	1	Bushing - Eccentric
88-4730	13	16	2	Clamp - HOC Pivot
88-4800-03	8	17	1	Bellcrank
88-4810	8	13	1	Clamp - Shift Pivot
88-4810	9	4	2	Clamp - Shift Pivot
88-4820-03	3	11	2	Bracket - Seat Hinge
88-4830	4	34	1	Link - Drag
88-4840	10	4	1	Pulley - Transmission
88-4880	14	17	1	Spacer - Microswitch
88-4910-03	3	3	1	Support - Seat
88-4940-03	17	13	1	Pan - Frt Deck Susp (32)
88-4960-03	1	17	1	Shield - Exh. Pipe
88-5000-03	8	21	1	Pedal - Clutch/Brake

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
88-5010	4	7	1	Spacer – Steering Rack
88-5020-03	3	19	1	Plate – Shift Gate
88-5030-03	3	9	1	Gate – HOC
88-5050	7	11	1	Pulley – Engine (32")
88-5060	12	2	1	Pulley – Deck
88-5110-03	13	22	1	Pivot W.a. (H.o.c.)
88-5120-03	1	21	1	Support – Front Axle
88-5130-03	4	5	1	Bracket – Steering Rack
88-5150	5	16	1	Bushing – Flange
88-5160	3	21	1	Cover – Shift Gate
88-5170	3	7	1	Cover – HOC
88-5190-03	2	25	1	Lever W.a. – Deck Engage
88-5200	4	10	1	Steering Rack W.a.
88-5220	3	17	1	Foot Mat
88-5240	3	16	1	Foot Mat
88-5270	8	29	1	Rod – Clutch/Brake
88-5340	9	13	1	Lever – Shift (Transaxle
88-5370-03	12	13	1	Plate – Idler Mount
88-5380	4	32	1	Tie Rod – Steering
88-5450	13	12	2	Rod – Hanger
88-5470	4	23	2	Spacer – Front Axle
88-5490	16	5	1	Belt Guide – R.h.
88-5500	8	15	1	Rod – Pedal Pivot
88-5510	4	35	1	Rod – Parking Brake
88-5520-03	4	36	1	Bracket – Parking Brake
88-5560	8	32	1	Belt Guide – Idler
88-5570-03	13	6	2	Link – Adjusting HOC
88-5640-03	17	19	1	Bracket Wa – RH
88-5650-03	17	20	1	Bracket Wa – LH
88-5680	8	33	1	Idler Pulley
88-5690	12	25	1	Rod – Deck Brake
88-5760	12	3	2	Belt Guide – Deck
88-5790-01	11	4	1	32" Cutter Deck Wa
88-5850-03	12	18	1	Idler Arm W.a.
88-5900	13	3	1	Link – HOC
88-5930	9	16	1	Keeper – Cable
88-5980	12	24	1	Rod – Deck Engage
88-6040-03	2	18	1	Bracket – Hinge
88-6050-03	2	7	1	Bracket – Hinge
88-6060	16	3	1	Belt Guide – L.h.
88-6070	8	30	1	Arm – Idler
88-6110	12	27	1	ASM. – Deck Brake
88-6150	11	15	1	Rod – Hinge
88-6160	11	16	1	Spring – Torsion
88-6220	1	4	2	Spring – Compression
88-6260	12	29	1	V – Belt
88-6290-03	1	18	1	Shield – Muffler
88-6330	8	7	1	Spring – Extension
88-6330	12	5	1	Spring – Extension
88-6380	6	2	1	Shaft W.a. – Steering
88-6420	12	30	1	Spring/Cable ASM
88-6460	13	17	1	Spring – Extension
88-6480	16	6	1	Muffler W.a.
88-9830	14	24	1	Switch – Ignition
88-9932	14	19	2	Switch – Micro
92-2461	2	31	1	Decal – Throttle
92-2462	2	32	1	Decal – Deck Engage
92-2467	2	34	1	Decal – Hood Right
92-2468	2	33	1	Decal – Hood Left
92-2478	2	30	1	Decal – Ignition
92-2480	2	29	2	Decal – Tower
92-2489	1	35	1	Decal – Rear Body

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
92-2493	11	1	1	Spring – Torsion
92-2494-03	11	24	1	Ramp – Deflector
92-5748	2	14:1	1	Decal – Air Duct
92-5782	2	15	1	Patch – Heat Tape
92-7889-03	4	30	1	Spindle Wa–RH
92-7890-03	4	18	1	Spindle Wa–LH
92-8650	2	14	1	Hood–Toro
92-8916	11	13	1	Bolt–Shoulder
92-9674	3	5	1	Knob–Studded
92-9845	14	8	1	Solenoid
93-0303	2	1	1	Tower–Steering Toro
93-0318	11	14	1	ASM–Deflector
93-0539	14	15	4	Screw–PPH
93-1122	11	14:1	1	Decal – Danger
93-1122	11	22	1	Decal–Danger
93-3240	14	20	1	Seal–Plunger
93-3809	7	37	1	Bracket–Ground
93-3810	14	23	1	Wire Harness
93-3822-03	13	1	1	Lever–HOC
94-1237	1	33	1	Decal–Instruction
94-1951	7	39	1	Latch–Hood
94-1952	7	28	1	Rod–Gas Tank
94-1962-03	4	31	1	Front Axle Wa
94-1967-03	1	10	2	Bracket–Trxl Mtg
94-1968	9	20	1	Lever–Shift Pivot
94-1969	10	19	2	Strap–Torque
94-1980	2	39	2	Foam–Hood
94-1984	2	11	1	Pin–Latch
94-1991-03	9	1	1	Shift Lever Wa
94-1993-03	9	8	1	Shift Pivot Wa
94-1997	9	26	1	Bushing–Shift Lever
94-1998-03	1	25	1	Frame Rail–RH
94-1999-03	1	13	1	Frame Rail–LH
94-4291	10	5	1	V–Belt
94-4295	8	2	1	Spring–Brake
94-4926	8	36	1	Bracket–Belt Guide
94-5362	14	33	1	Boot–Terminal Insulator
94-5432	9	9	1	Link–Shift
94-5433	8	6	1	Bracket–Belt Guide
94-5565	2	2	1	Knob – Control
94-5565	9	24	1	Knob – Control
94-5565	13	24	1	Knob – Control
94-6022	10	7	1	Transaxle – Peerless 931
95-1694	16	10	1	Engine – 12hp B&s(Carb)
218-461	14	24:2	1	Nut–HH (F/W Sw)
231-91	10	9:4	2	Tube–Inner 16x6.5–8
232-27	4	29:3	2	Valve Stem & Cap
232-27	10	9:3	2	Valve Stem & Cap Assembly
232-40	4	29:6	2	Tube–Inner 13x5–6
2412-98	7	5	2	Clamp–Hose
251-297	17	3	2	Bearing–20mm
302-5	4	29:5	2	Fitting – Grease
302-26	4	8	1	Fitting–Grease
321-2	2	5	4	Screw–HH
321-4	5	7	2	Screw–HH
321-4	14	2	2	Screw–HH
321-4	16	7	1	Screw–HH
322-3	1	7	4	Screw–HH
322-3	1	9	4	Screw–HH
322-3	1	20	6	Screw–HH
322-3	1	23	2	Screw–HH
322-3	1	26	4	Screw–HH

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
322-3	1	27	2	Screw-HH
322-3	2	28	2	Screw-HH
322-3	3	10	4	Screw-HH
322-3	8	3	1	Screw-HH
322-3	8	14	1	Screw-HH
322-3	8	37	1	Screw-HH
322-3	9	6	2	Screw-HH
322-3	9	21	1	Screw-HH
322-3	10	21	2	Screw-HH
322-3	11	2	2	Screw-HH
322-3	12	15	2	Screw-HH
322-3	13	19	4	Screw-HH
322-3	17	1	8	Screw-HH
322-5	1	2	2	Screw-HH
322-5	12	6	2	Screw-HH
322-6	8	4	1	Screw-HH
322-6	17	16	2	Screw-HH
322-9	13	2	1	Screw-HH
322-9	16	2	4	Screw-HH
322-12	8	12	2	Screw HH
322-12	10	15	4	Screw HH
322-12	17	21	2	Screw HH
323-10	9	2	1	Screw-HH
323-11	8	34	1	Screw
323-13	4	2	2	Screw-HH
329-23	9	10	1	Screw
3219-7	12	1	1	Nut-Hex
3230-1	4	6	4	Bolt-CARR
3230-3	4	4	1	Screw-CARR
3230-3	8	22	1	Screw-CARR
3230-3	9	17	1	Screw-CARR
3231-4	4	3	1	Bolt-CARR
3234-13	12	17	2	Screw-HHF
3253-3	9	11	1	Washer-Lock
3253-3	16	8	1	Washer-Lock
3253-4	7	21	2	Washer-Lock
3253-22	7	13	1	Washer-Lock
3254-5	14	24:1	1	Washer-Lock(F/W Switch)
3255-7	14	14	1	Washer-Lock
3255-8	7	23	1	Washer-Lock
3256-22	5	6	2	Washer-Flat
3256-23	1	3	2	Washer-Flat
3256-23	1	22	2	Washer-Flat
3256-23	1	37	2	Washer-Flat
3256-23	2	27	2	Washer-Flat
3256-23	8	9	2	Washer-Flat
3256-23	8	23	1	Washer-Flat
3256-23	9	14	1	Washer-Flat
3256-23	9	22	1	Washer-Flat
3256-23	10	16	4	Washer-Flat
3256-23	10	18	4	Washer-Flat
3256-23	11	25	2	Washer-Flat
3256-23	12	26	1	Washer-Flat
3256-23	17	18	2	Washer-Flat
3256-24	2	21	2	Washer-Flat
3256-24	4	20	2	Washer-Flat
3256-24	4	24	2	Washer-Flat
3256-24	12	11	1	Washer-Flat
3256-24	12	23	2	Washer-Flat
3256-24	13	5	2	Washer-Flat
3256-24	13	10	2	Washer-Flat
3256-25	4	13	4	Washer-Flt

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
3256-25	7	14	1	Washer-Flt
3256-25	9	19	1	Washer-Flt
3256-26	8	18	1	Washer-Flt
3256-58	11	17	1	Washer-Flt
3257-23	10	3	1	Key-Woodruff
3272-10	4	14	2	Pin-Cotter
3272-10	4	19	2	Pin-Cotter
3272-10	8	24	1	Pin-Cotter
3272-12	4	27	2	Pin-Cotter
3274-10	7	22	2	Screw-Sckt Hd
3290-282	12	27:3	2	Pop Rivet
3290-282	3	8	2	Pop Rivet
3290-282	3	20	2	Pop Rivet
3290-299	14	32	1	Nut - Tinnerman
3290-307	2	19	2	Pin-Cotter
3290-307	12	10	1	Pin-Cotter
3290-307	13	4	1	Pin-Cotter
3290-307	13	7	4	Pin-Cotter
3290-307	13	9	2	Pin-Cotter
3290-354	14	16	2	Nut-Speed
3290-465	17	11	1	Washer-Spring
3290-479	3	6	4	Fastener-Panel
3290-479	3	15	12	Fastener-Panel
3290-479	3	22	4	Fastener-Panel
3290-496	2	8	2	Nut - Retained
3290-496	12	8	2	Nut - Retained
3296-3	9	7	2	Nut-Lock
3296-29	1	6	2	Nut-Lock
3296-29	1	8	4	Nut-Lock
3296-29	1	12	4	Nut-Lock
3296-29	1	14	2	Nut-Lock
3296-29	1	15	6	Nut-Lock
3296-29	1	16	2	Nut-Lock
3296-29	1	29	4	Nut-Lock
3296-29	2	26	2	Nut-Lock
3296-29	3	12	6	Nut-Lock
3296-29	4	1	4	Nut-Lock
3296-29	4	16	1	Nut-Lock
3296-29	8	10	2	Nut-Lock
3296-29	8	19	1	Nut-Lock
3296-29	8	26	3	Nut-Lock
3296-29	8	27	1	Nut-Lock
3296-29	8	38	1	Nut-Lock
3296-29	9	3	2	Nut-Lock
3296-29	9	15	1	Nut-Lock
3296-29	9	23	1	Nut-Lock
3296-29	10	1	4	Nut-Lock
3296-29	10	17	2	Nut-Lock
3296-29	11	8	2	Nut-Lock
3296-29	12	9	1	Nut-Lock
3296-29	12	12	1	Nut-Lock
3296-29	12	14	2	Nut-Lock
3296-29	13	14	4	Nut-Lock
3296-29	13	15	2	Nut-Lock
3296-29	13	20	1	Nut-Lock
3296-29	13	21	1	Nut-Lock
3296-29	16	1	3	Nut-Lock
3296-29	17	2	8	Nut-Lock
3296-29	17	15	6	Nut-Lock
3296-39	4	15	1	Nut-Lock
3296-39	4	25	2	Nut-Lock
3296-39	9	18	1	Nut-Lock

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
3296-39	12	19	1	Nut—Lock
3296-42	2	4	4	Nut—Lock
3296-42	5	9	2	Nut—Lock
3296-42	11	18	1	Nut—Lock
3296-42	12	4	1	Nut—Lock
3296-59	8	28	2	Nut—Lock
3296-59	11	10	1	Nut—Lock
32103-22	14	28	2	Nut—Wing
32104-76	1	19	1	Screw—Self TAP
32120-64	10	2	1	Ring—Retaining
32121-111	5	2	1	Pin—Spiral
32128-43	2	22	2	Nut—Flange
32144-14	10	22	2	Screw—HWH
32144-112	7	40	2	Screw—Thd Form
32149-1	7	26	2	Nut—Keps
32149-2	14	7	3	Nut—Hex Lock
32151-48	4	33	2	Ring—Retaining
32151-48	5	18	1	Ring—Retaining
32151-48	10	13	2	Ring—Retaining

[illegible]