



Form No. 3403-341 Rev A

Count on it.

Parts Catalog

60in Rock Boom RT1200 Trencher

Model No. 25444

Model No. 25444E



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HP: high pressure

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: low pressure

LPG: Liquefied Petroleum Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping

TTH: torx truss head

Contents


Rock Boom Assembly 4

Boom End Roller Assembly No. AUH672962 6

Auger Assembly 8

5 Foot Restraint Bar and Decal Assembly No. 130-7472..... 10


Rock Boom Assembly

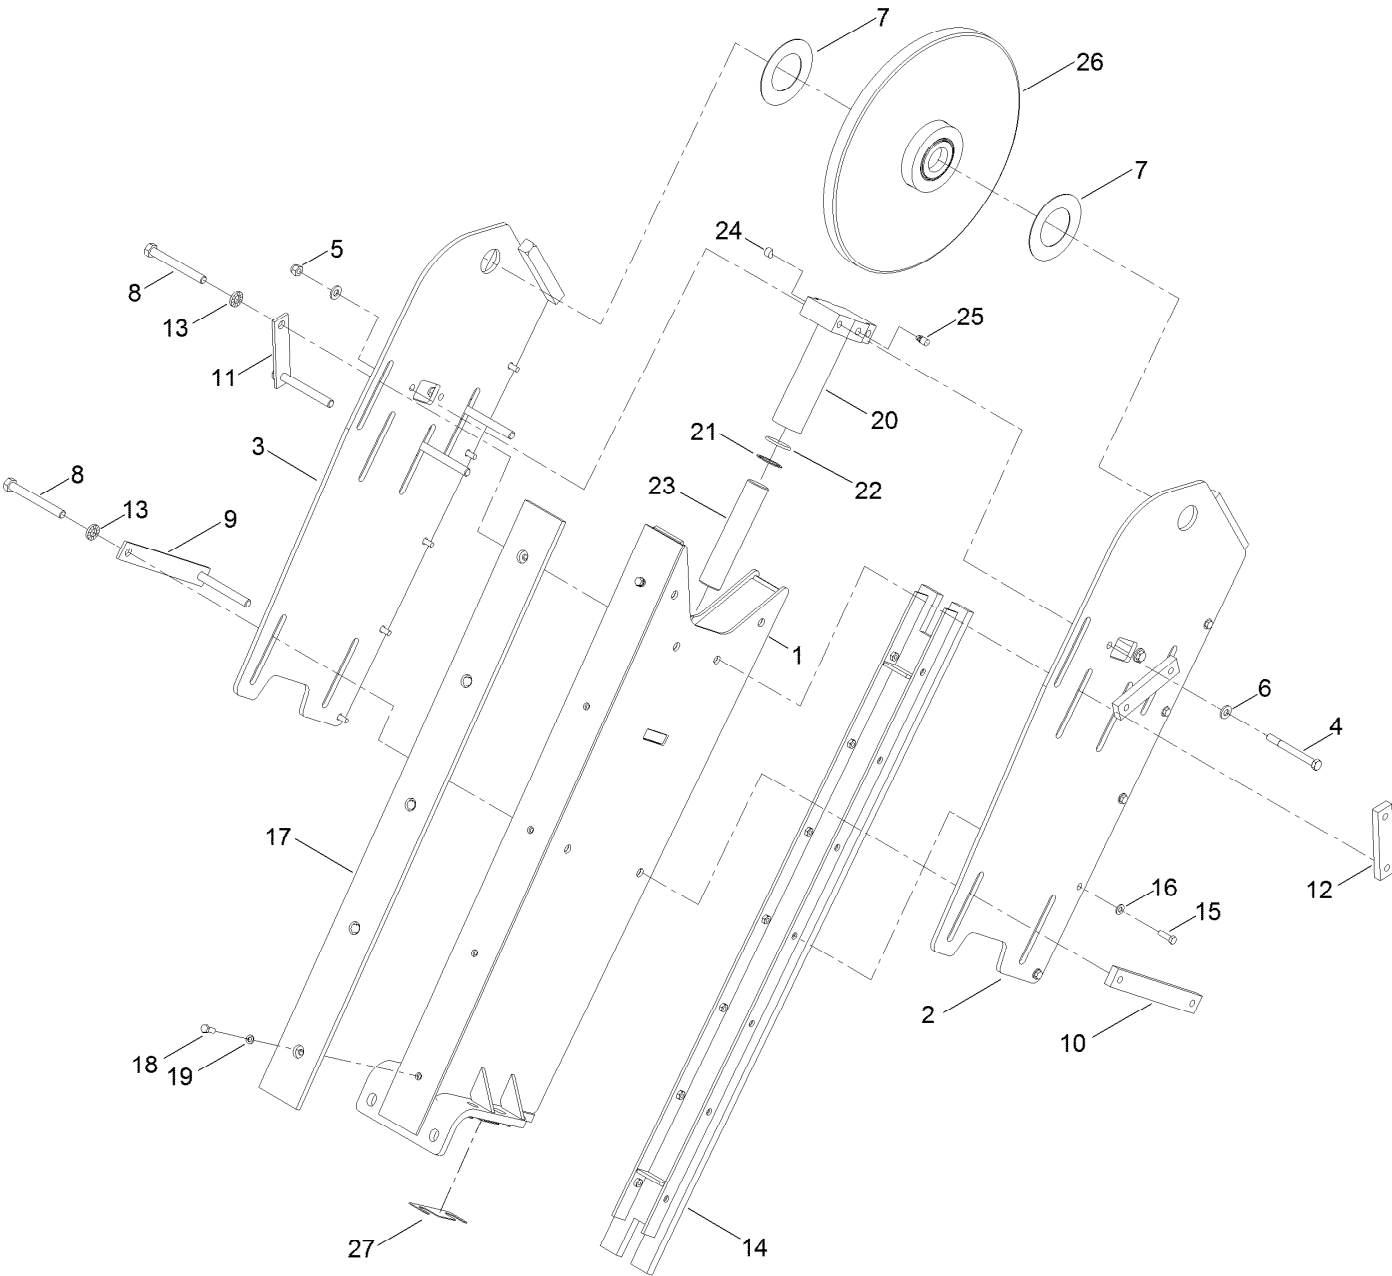

Rock Boom Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU110262-03	1	Boom-Rock, 5 Foot	15	323-44	10	Screw-HH
2	AU110266-03	1	Plate-Boom, LH	16	AU496-21041	10	Washer-Flat
3	AU110265-03	1	Plate-Boom, RH	17	AUH434850-03	1	Bar-Wear Pad, 5 Foot
4	AU426-880	2	Bolt	18	AU426-616	5	Screw-HH
5	AU232-4118	2	Nut-Hex	19	3253-21	5	Washer-Lock
6	AUH274894	4	Washer	20	AUH672695-03	1	Cylinder ASM (Boom End)
7	AUH435229	2	Washer-Boom, Roller	21	AUH755009	1	Washer-Backup
8	120-0923	6	Screw-HH	22	AU238-6327	1	O-Ring
9	AUH434510	1	Bar-Washer, Long	23	AUH434551	1	Rod-Boom, Cylinder
10	AUH434511	1	Bar-Tapped, Long	24	AUH114728	1	Plug-Bleed
11	AUH434671	2	Bar-Washer, Short	25	AU219-66	1	Fitting-Lube, Straight
12	AUH434555	2	Bar-Tapped, Short	26	AUH672962	1	Boom End ASM
13	AUH434670	6	Washer-Lock	27	AU251337A1	3	Shim
14	AUH672820-03	1	Channel-Wear Pad, 5 Foot				

Boom End Roller Assembly No. AUH672962

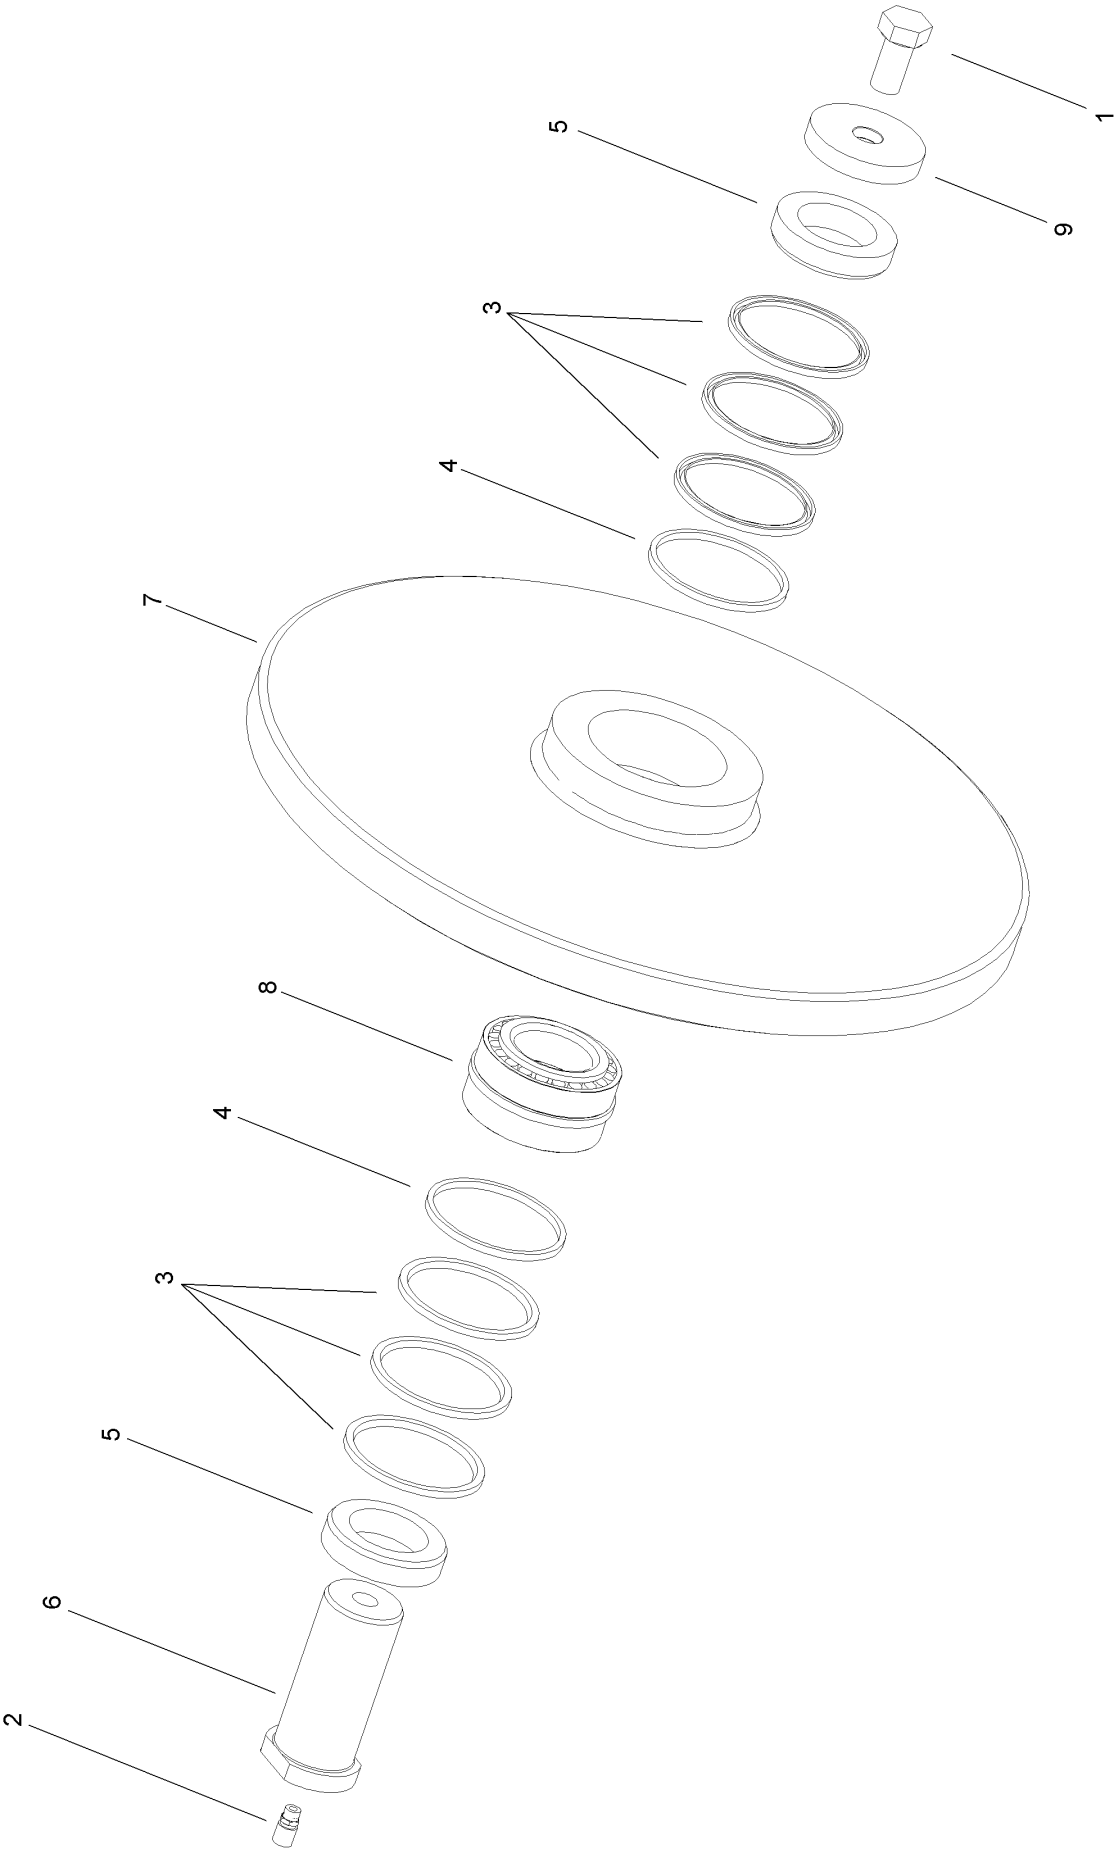


Boom End Roller Assembly No. AUH672962 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU426-1224	1	Bolt
2	AU219-66	1	Fitting-Lube, Straight
3	AUH435218	6	Seal-Roller
4	AUH435226	2	Spacer-Seal, Boom End
5	AUH435227	2	Spacer-Bearing


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
6	AUH435228	1	Pin
7	AUH672961-03	1	Roller
8	AUH759118	1	Bearing Kit
9	AU139027A1	1	Washer

Auger Assembly

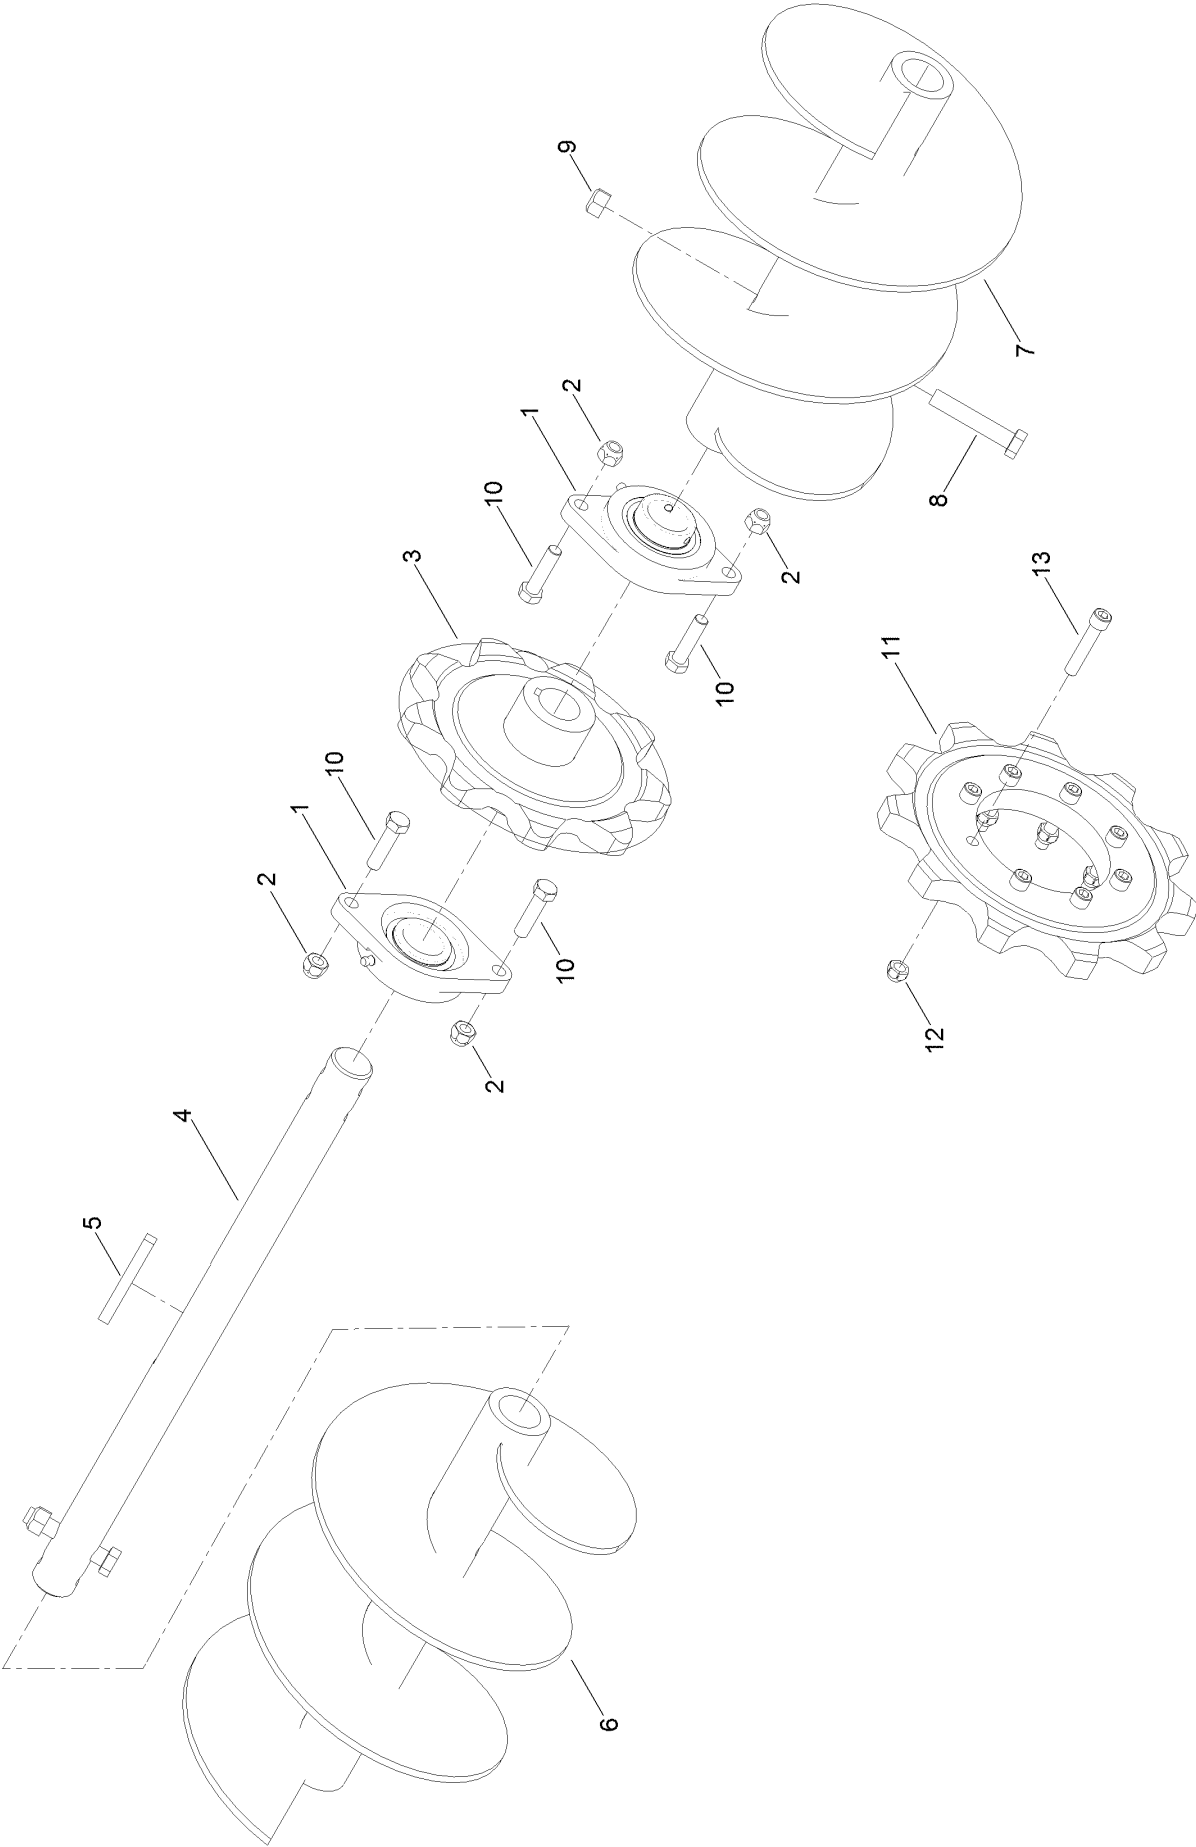

Auger Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AUH759120	2	Bearing-Ball, 2-Bolt Flange (2 In)	7	AUH672057-03	1	Auger-LH
2	AU232-41110	4	Nut-Lock, Hex	8	AU426-1264	2	Bolt
3	AU186277A1-03	1	Sprocket	9	120-7252	2	Nut-Lock
4	AUH434597	1	Shaft-Auger	10	327-7	4	Screw-HH
5	AUH433528	1	Key-Square	11	AU186276A1-03	1	Sprocket-Split
6	AUH672056-03	1	Auger-RH	12	AU232-4619	8	Nut-Hex
				13	131-1298	8	Screw-HSH

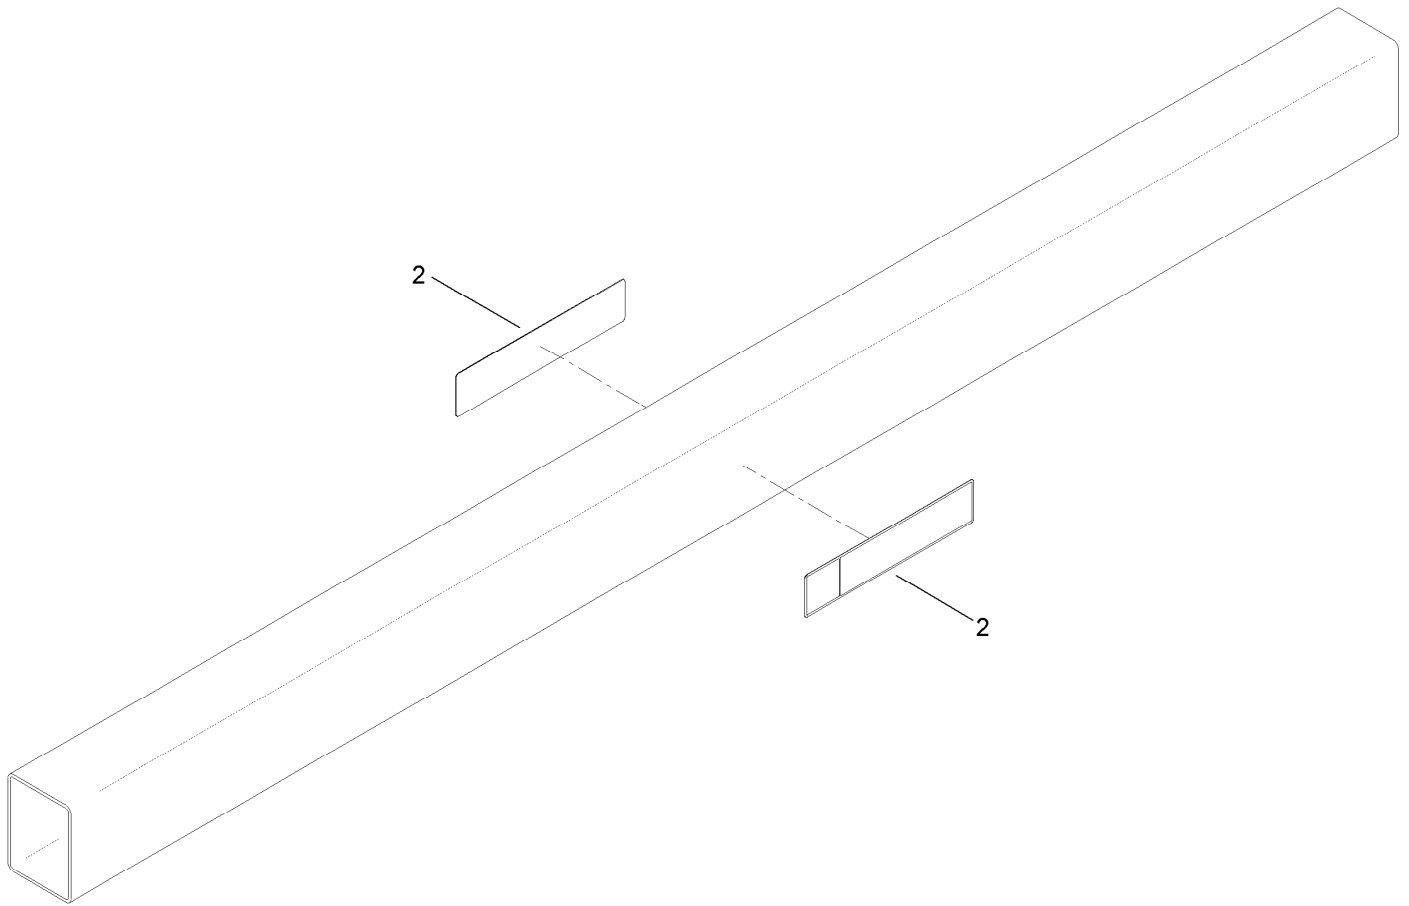

5 Foot Restraint Bar and Decal Assembly No. 130-7472

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	125-6670	2	Decal-Danger, Entanglement

Notes:



Count on it.