



**Count on it.**

Form No. 3403-627 Rev A

# Parts Catalog

## Cab Kit

**2015 and After Groundsmaster® 3280-D  
4-Wheel Drive Traction Unit**

Model No. 30298—Serial No. 315000001 and Up



# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

## Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

## Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

## Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# List of Abbreviations

**AR:** as required

**ASM:** assembly

**BBC:** blade brake control

**BHTF:** button head thread forming

**CARR:** carriage

**CCW:** counter clockwise

**CW:** clockwise

**DEG:** degrees

**DPA:** Dual Point Adjustment

**ECM:** electronic control module

**EXT:** external

**FH:** flat head

**GA:** gauge

**HD:** heavy-duty

**HF:** hex flange

**HH:** hex head

**HHF:** hex head flange

**HHFTF:** hex head flange thread forming

**HJ:** hex jam

**HLH:** hex lag head

**HOC:** height-of-cut

**HP:** high pressure

**HSBH:** hex socket button head

**HSFH:** hex socket flat head

**HSH:** hex socket head

**HWH:** hex washer head

**HWHTF:** hex washer head thread forming

**HYD:** hydraulic

**LH:** left hand

**LP:** low pressure

**LPG:** Liquefied Petroleum Gas

**NI:** nylon insert

**NPTF:** national pipe thread fine

**PFH:** phillips flat head

**PPH:** phillips pan head

**PPHTF:** phillips pan head thread forming

**PRH:** phillips round head

**PTH:** phillips truss head

**PTO:** power-take-off

**RH:** right hand

**ROPS:** roll-over protection system

**RRB:** rear roller brush

**SFH:** slotted fillister head

**SHH:** slotted hex head

**SHWH:** slotted hex washer head

**SPH:** slotted pan head

**SQH:** square head

**SRH:** slotted round head

**STD:** standard

**TAP:** self tapping

**TTH:** torx truss head

# Contents

Frame Mount and Seal Assembly ..... 4

Access Panel and Interior Seal Assembly ..... 6

Mirror and Floor Tread Assembly..... 8

Windshield Wiper, Fresh Air Filter and Wire Harness Assembly ..... 10

Door and Window Assembly..... 12

LH Door Assembly ..... 14

RH Door Assembly..... 16

Heater Hose Routing and Washer Bottle Assembly ..... 18

Roof, Headliner and Heat Mixing Box Assembly ..... 20

Headliner Wire Harness and Control Assembly..... 22

Blower Mount Assembly ..... 24


Heater Core Bracket and Cover Assembly..... 26

Heat / AC Mixing Box Housing Assembly ..... 28

Air Diverter Assembly ..... 30

Air Diverter Assembly No. 121-8369..... 32

# Frame Mount and Seal Assembly

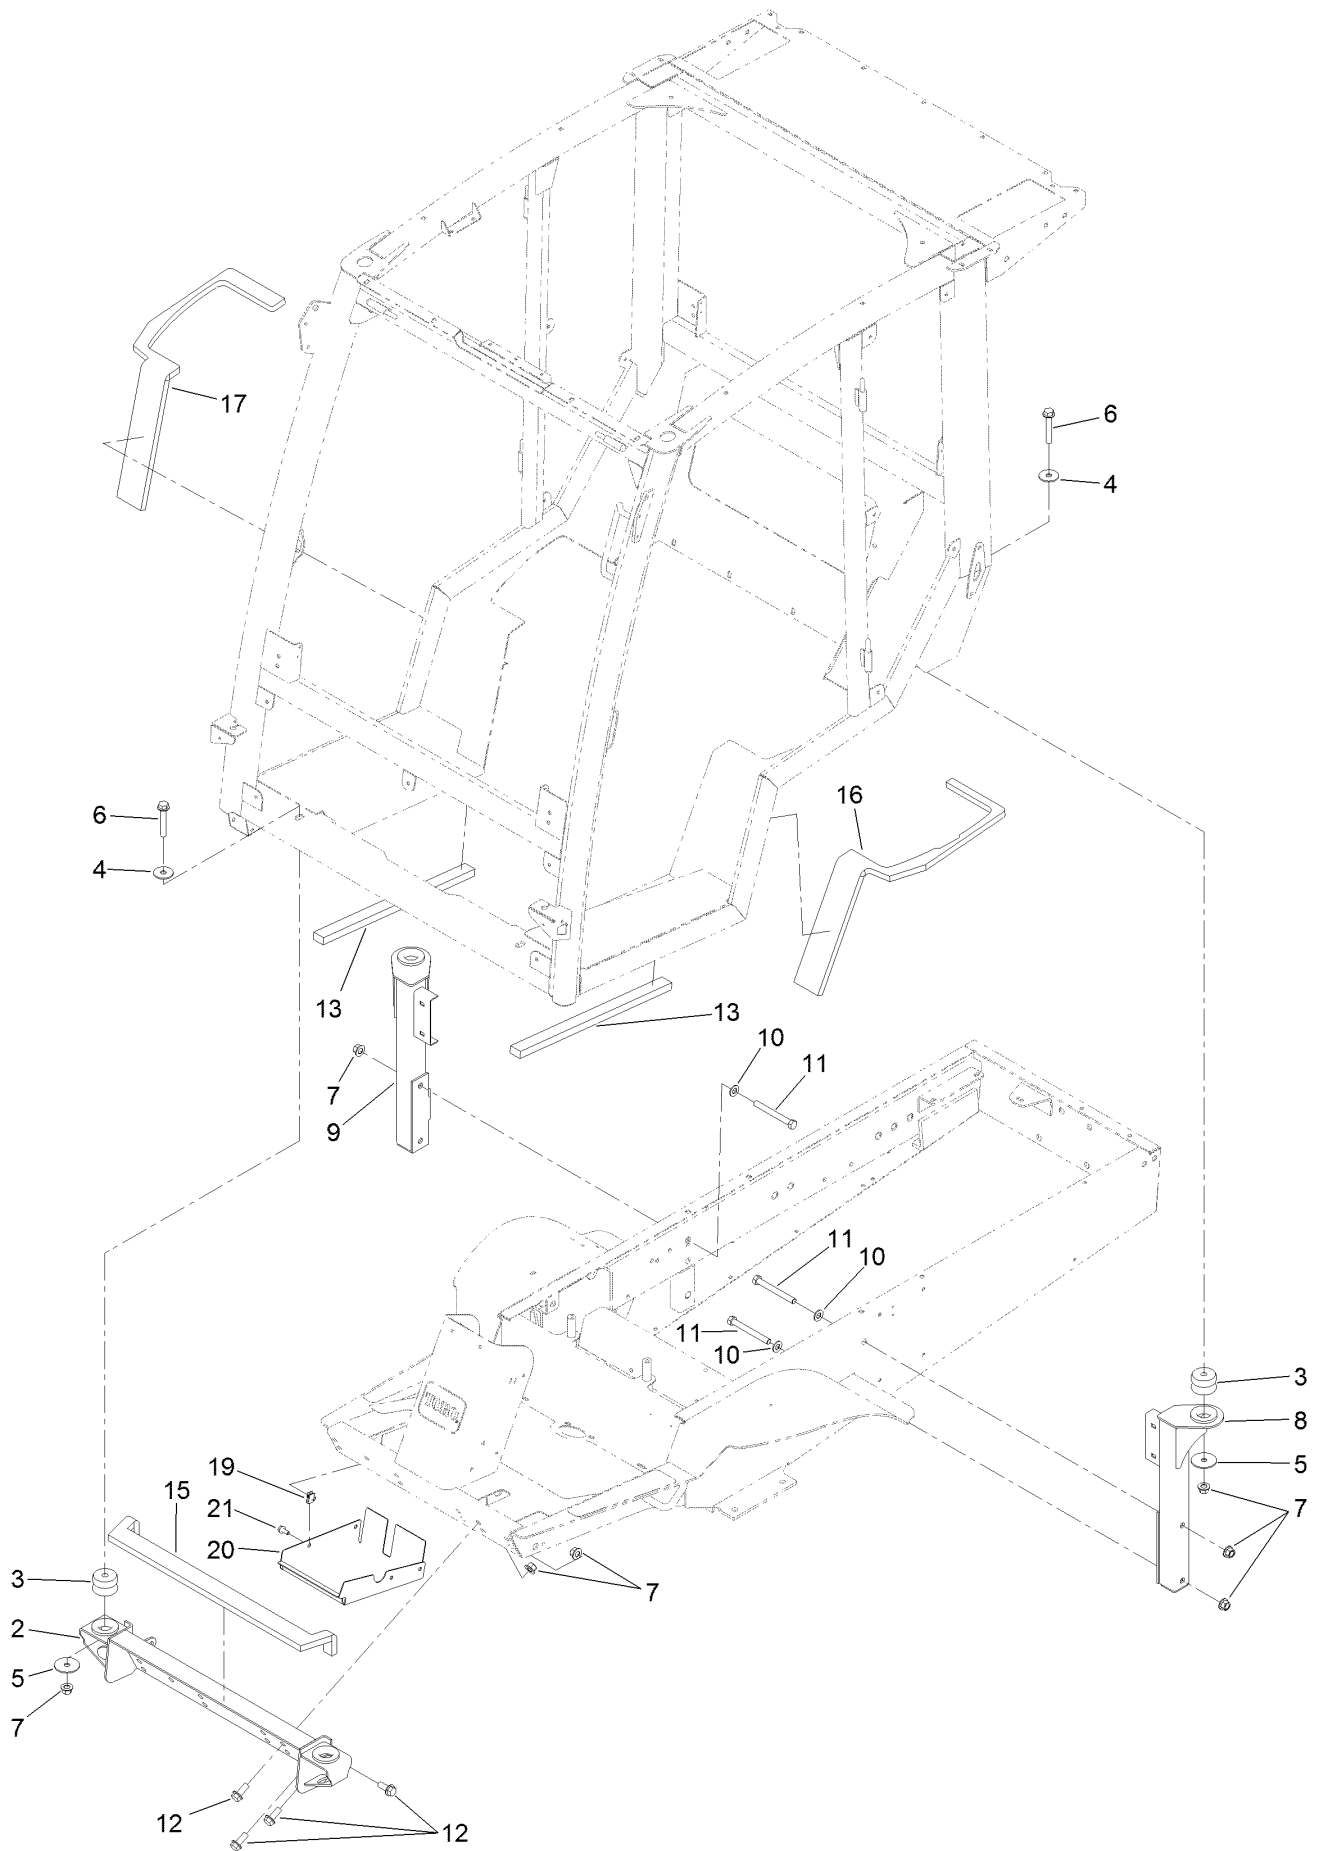


## Frame Mount and Seal Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   |
|-------------|--------------------|-------------|----------------------|
| 2           | 127-9960-03        | 1           | Front Mount ASM      |
| 3           | 110-5954           | 4           | Mount-Center, Bonded |
| 4           | 86-1990            | 4           | Washer-Thrust        |
| 5           | 114-0019           | 4           | Washer-Plain         |
| 6           | 3234-40            | 4           | Screw-HF             |
| 7           | 99-5107            | 16          | Nut-Lock             |
| 8           | 130-0472-03        | 1           | Mount-Rear, LH       |
| 9           | 130-0475-03        | 1           | Mount-Rear, RH       |
| 10          | 3256-26            | 4           | Washer-Flat          |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    |
|-------------|--------------------|-------------|-----------------------|
| 11          | 702093             | 4           | Screw-HH              |
| 12          | 3234-38            | 8           | Screw-HHF             |
| 13          | 130-5584           | 2           | Seal-Foam, Floor      |
| 15          | 130-5586           | 1           | Seal-Foam, Front      |
| 16          | 130-5588           | 1           | Seal-Foam, Lower LH   |
| 17          | 130-5589           | 1           | Seal-Foam, Lower RH   |
| 19          | 115-7721           | 4           | Nut-Clip, U           |
| 20          | 130-5844-01        | 1           | Cover-Pedal, Traction |
| 21          | 3234-47            | 4           | Screw-HHF             |


# Access Panel and Interior Seal Assembly

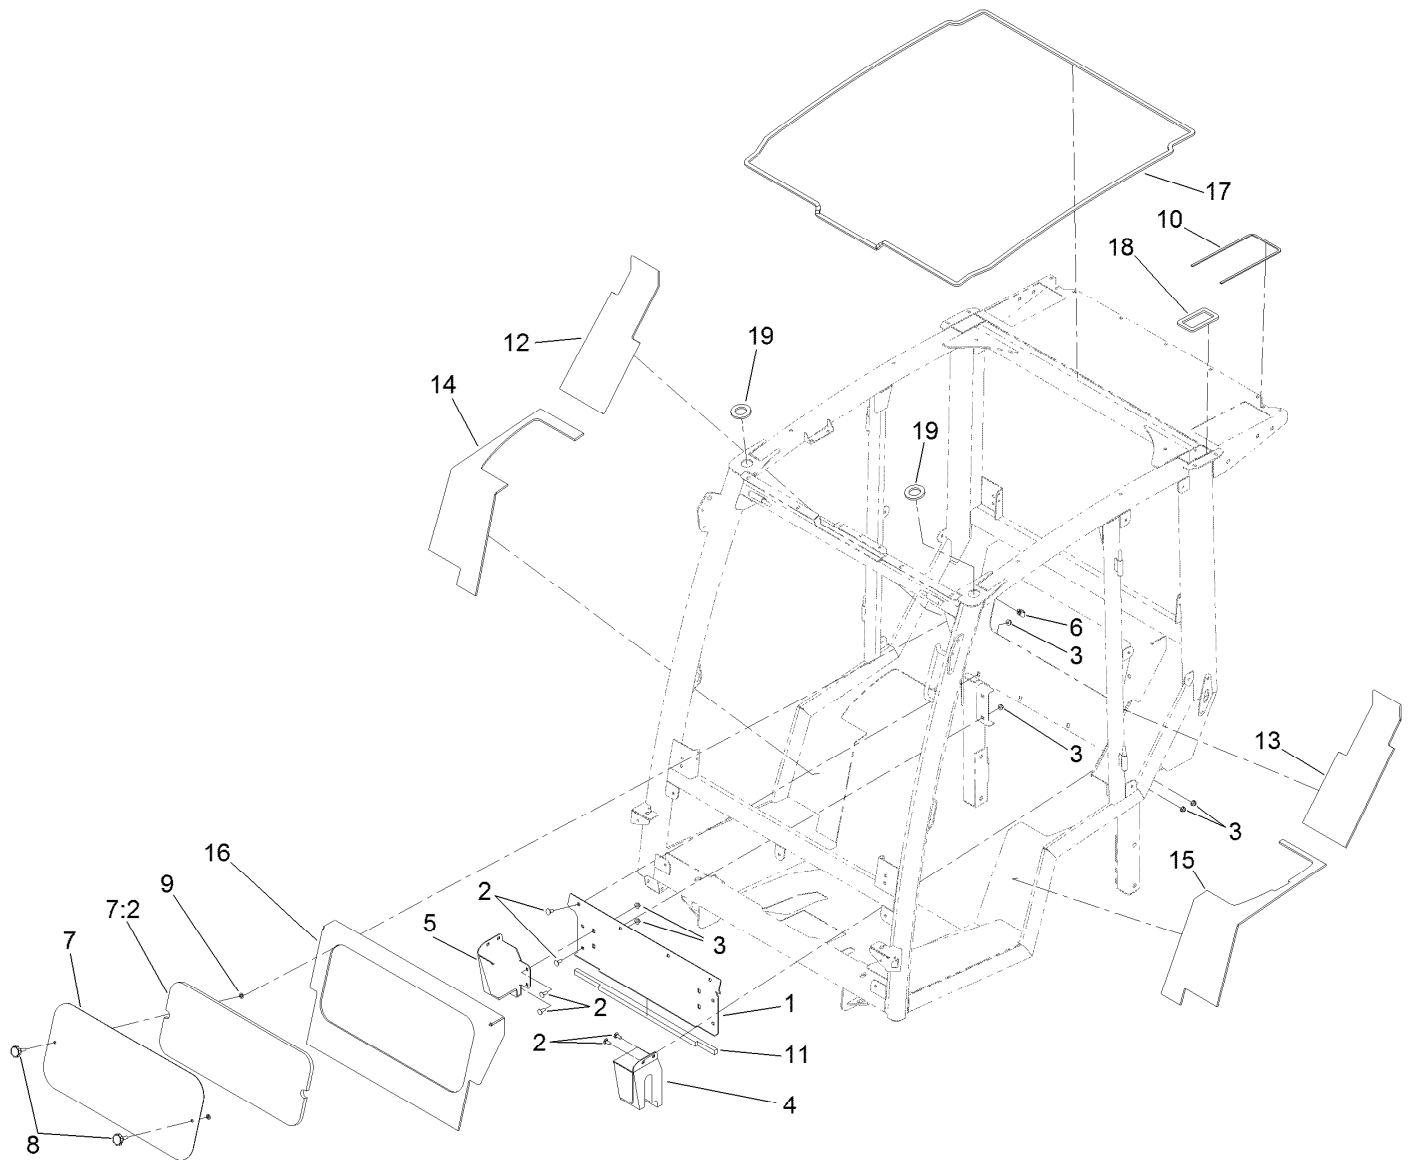

## Access Panel and Interior Seal Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>         |
|-------------|--------------------|-------------|-----------------------|-------------|--------------------|-------------|----------------------------|
| 1           | 130-5534-03        | 1           | Panel-Rear, Lower     | 10          | 130-0587           | 2           | Seal-Foam, Roof Air Filter |
| 2           | 3230-23            | 16          | Screw-CARR            | 11          | 130-5587           | 1           | Seal-Foam, Rear            |
| 3           | 104-8300           | 16          | Nut-Flange, NI        | 12          | 130-5594           | 1           | Foam-Interior, RH Rear     |
| 4           | 130-5592           | 1           | LH Cover Bracket ASM  | 13          | 130-5595           | 1           | Foam-Interior, LH Rear     |
| 5           | 130-5593           | 1           | RH Cover Bracket ASM  | 14          | 130-5596           | 1           | Foam-Interior, RH Side     |
| 6           | 94-2413            | 2           | Nut-U                 | 15          | 130-5597           | 1           | Foam-Interior, LH Side     |
| 7           | 130-5842           | 1           | Back Panel ASM        | 16          | 130-5598           | 1           | Foam-Interior, Back Panel  |
| 7:2         | 130-5599           | 1           | Seal-Foam, Back Panel | 17          | 130-0586           | 1           | Seal-Foam, Frame Roof      |
| 8           | 99-6137            | 2           | Knob-Control, Chute   | 18          | 130-5855           | 2           | Seal-Tube, Rear            |
| 9           | 109-5667           | 2           | Ring-Retaining, Bolt  | 19          | 133-0982           | 2           | Tube-Seal, Front           |


# Mirror and Floor Tread Assembly

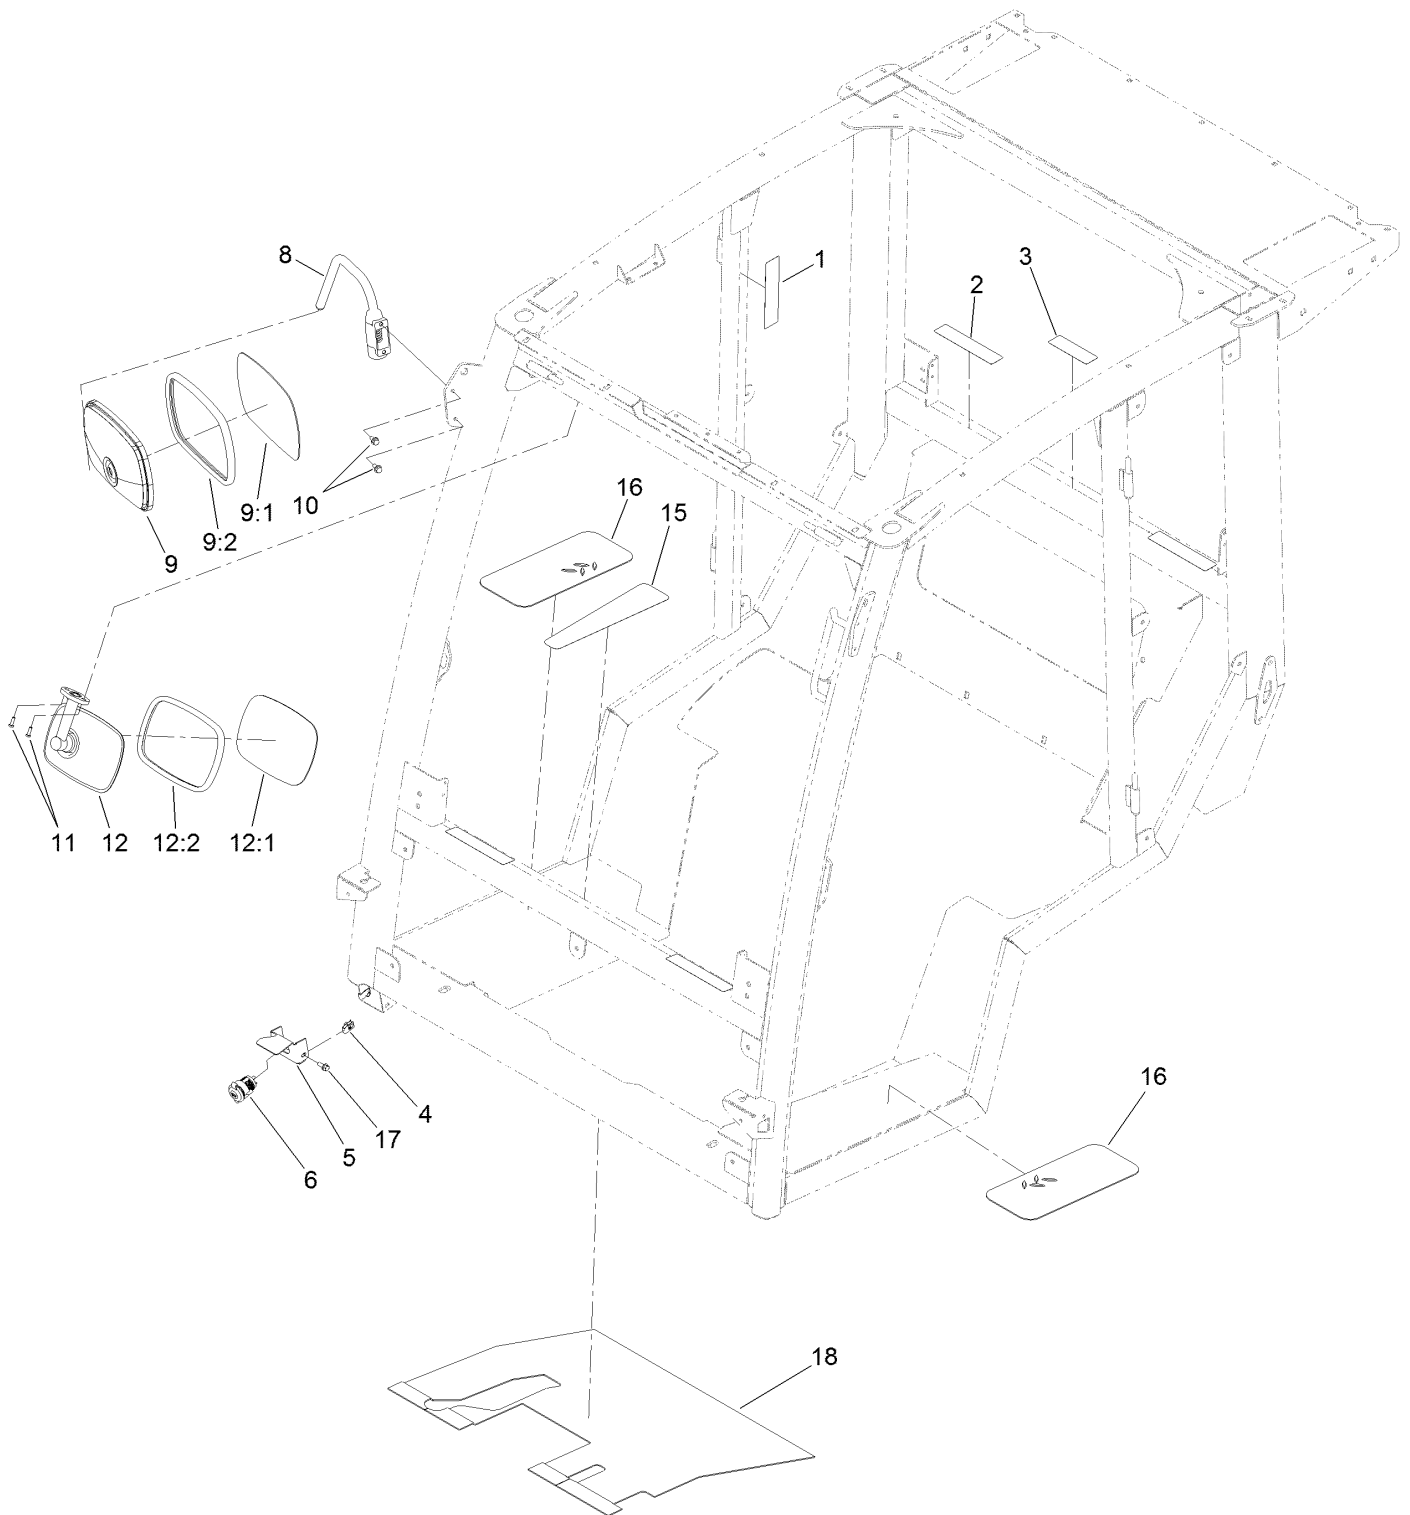

## Mirror and Floor Tread Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>        | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  |
|-------------|--------------------|-------------|---------------------------|-------------|--------------------|-------------|---------------------|
| 1           | 130-5361           | 2           | Decal-Warning             | 10          | 33103-016          | 4           | Screw-HHF           |
| 2           | 130-0611           | 4           | Decal-Window, Pin         | 11          | 32144-32           | 2           | Screw               |
| 3           | 130-5355           | 1           | Decal-Window, Hood        | 12          | 121-8343           | 1           | Interior Mirror ASM |
| 4           | 107069             | 2           | Clip                      | 12:1        | 121-8342           | 1           | Glass-Mirror        |
| 5           | 125-9584           | 1           | Cover-Switch, Power Point | 12:2        | 121-8389           | 1           | Gasket-Mirror       |
| 6           | 109-9376           | 1           | Receptacle-12V            | 15          | 93-7834            | 1           | Decal-Footrest, RH  |
| 8           | 121-8275           | 2           | Arm-Mirror, Side          | 16          | 130-5581           | 2           | Pad-Step            |
| 9           | 121-8341           | 2           | Side Mirror ASM           | 17          | 3234-33            | 2           | Screw-HHF           |
| 9:1         | 121-8340           | 1           | Mirror-Glass              | 18          | 130-5851           | 1           | Floor-Tread         |
| 9:2         | 121-8339           | 1           | Gasket-Mirror             |             |                    |             |                     |


# Windshield Wiper, Fresh Air Filter and Wire Harness Assembly

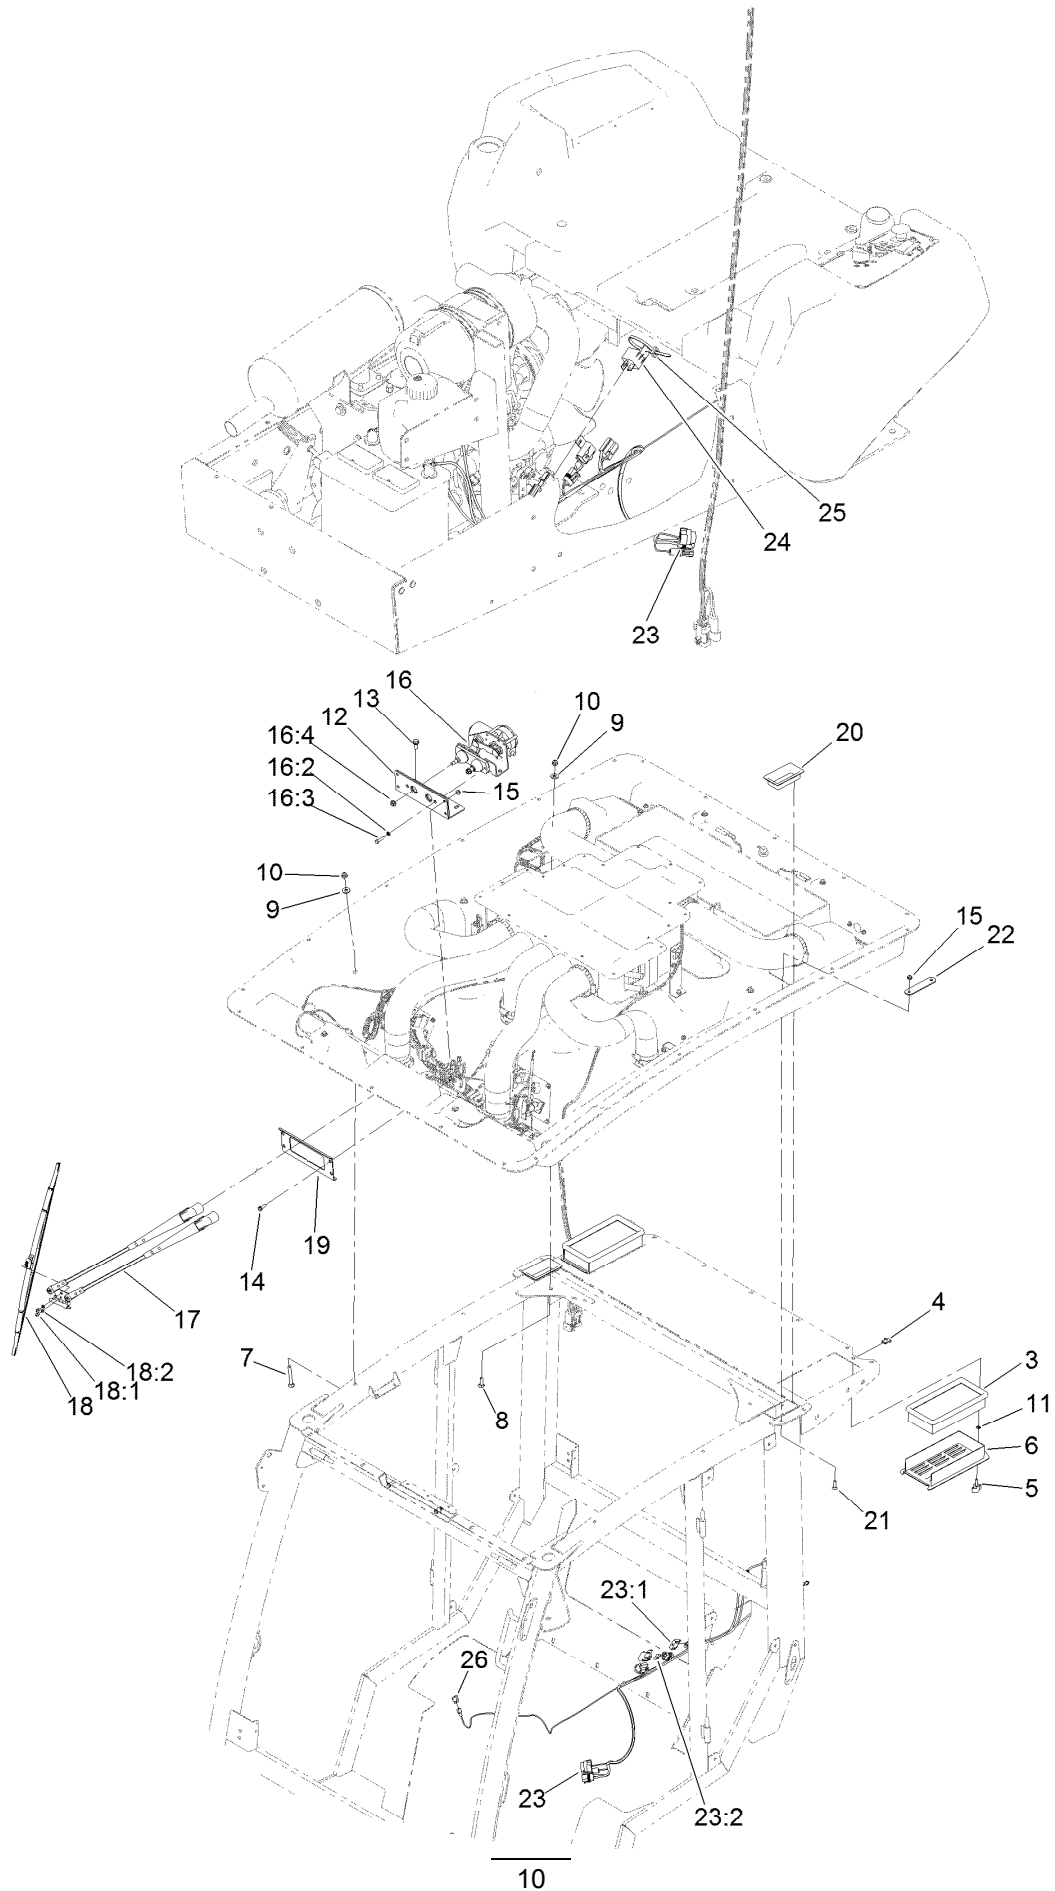

## Windshield Wiper, Fresh Air Filter and Wire Harness Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>        |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|---------------------------|
| 3           | 121-8457           | 2           | Filter-Air         | 16:4        | 112-2844           | 2           | Nut-HF                    |
| 4           | 107069             | 2           | Clip               | 17          | 125-7453           | 1           | Arm-Wiper                 |
| 5           | 98-8332            | 2           | Knob               | 18          | 125-7454           | 1           | Blade-Wiper               |
| 6           | 125-9825-03        | 2           | Cover-Air, Fresh   | 18:1        | 47-2830            | 2           | Screw                     |
| 7           | 3230-9             | 4           | Screw-CARR         | 18:2        | 43-5920            | 2           | Washer-Lock, Spring       |
| 8           | 3230-22            | 13          | Screw-CARR         | 19          | 130-6068-03        | 1           | Plate-Washer, Wiper Motor |
| 9           | 3256-3             | 17          | Washer-Flat        | 20          | 130-5661           | 2           | Tube-Sleeve               |
| 10          | 104-8300           | 17          | Nut-Flange, NI     | 21          | 3229-30            | 4           | Screw-CARR                |
| 11          | 106-8737           | 2           | Nut-Retainer       | 22          | 130-5854           | 2           | Brace-Seal                |
| 12          | 130-5871           | 1           | Bracket-Wiper      | 23          | 122-0387           | 1           | Harness-Wire, Cab Power   |
| 13          | 32144-11           | 2           | Screw-HWHTF        | 23:1        | 114-3342           | 1           | Fuse-Maxi, 60 Amp         |
| 14          | 32105-15           | 4           | Screw-HWH          | 23:2        | 218-578            | 1           | Fuse-Blade, 10 Amp        |
| 15          | 104-7201           | 8           | Nut-Flange, NI     | 24          | 99-7435            | 1           | Relay-Power               |
| 16          | 125-7452           | 1           | Wiper Motor ASM    | 25          | 3290-378           | 1           | Tie-Cable                 |
| 16:2        | 3253-3             | 1           | Washer-Lock        | 26          | 218-578            | 1           | Fuse-Blade, 10 Amp        |
| 16:3        | 33113-025          | 1           | Screw-HH           |             |                    |             |                           |

# Door and Window Assembly

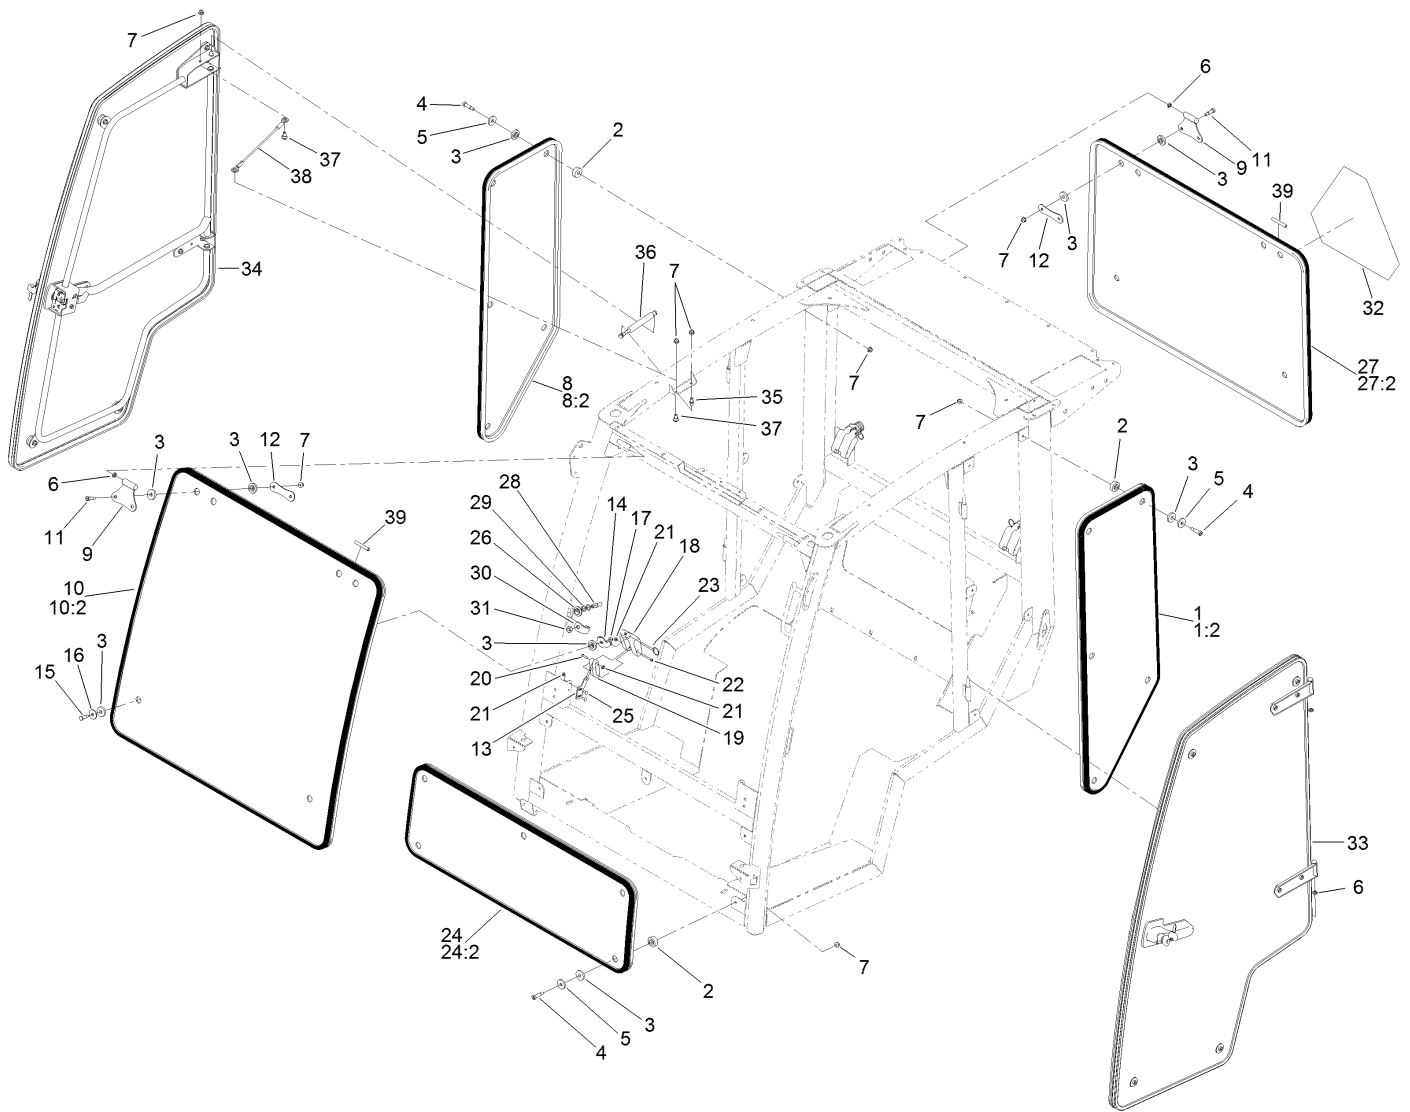


## Door and Window Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     |
|-------------|--------------------|-------------|--------------------------|-------------|--------------------|-------------|------------------------|
| 1           | 130-6195           | 1           | LH-Side Window ASM       | 20          | 3274-14            | 4           | Screw-HSH              |
| 1:2         | 130-5558           | 1           | Seal-Trim, Side          | 21          | 120-9681           | 16          | Nut-Lock, NI           |
| 2           | 125-9537           | 15          | Bushing-Flange           | 22          | 3274-59            | 4           | Screw-HSH              |
| 3           | 125-9982           | 39          | Bushing-Flange           | 23          | 127-9850           | 4           | Pin-Release, Quick     |
| 4           | 125-9521           | 15          | Screw-Shoulder, HSH      | 24          | 130-6193           | 1           | Front-Lower Window ASM |
| 5           | 130-5815           | 15          | Washer-Backup            | 24:2        | 130-0329           | 1           | Seal-Trim              |
| 6           | 121-8441           | 8           | Washer-Spacer            | 25          | 1-807513           | 8           | Bolt-CARR              |
| 7           | 104-8300           | 29          | Nut-Flange, NI           | 26          | 125-9992           | 2           | Adjuster-Stud          |
| 8           | 130-6194           | 1           | RH-Side Window ASM       | 27          | 130-6196           | 1           | Rear Window ASM        |
| 8:2         | 130-5558           | 1           | Seal-Trim, Side          | 27:2        | 130-5563           | 1           | Trim-Window, Rear      |
| 9           | 121-8535           | 4           | Hinge-Window             | 28          | 125-9993           | 2           | Striker-Stud           |
| 10          | 130-5680           | 1           | Upper Front Window ASM   | 29          | 73-0040            | 4           | Washer-Thrust          |
| 10:2        | 121-8212           | 1           | Seal-Trim                | 30          | 121-8393           | 2           | Guard-Striker          |
| 11          | 125-9520           | 8           | Screw-Shoulder, HSH      | 31          | 106-0327           | 2           | Nut-Hex                |
| 12          | 127-9933           | 4           | Plate-Backer, Windshield | 32          | 120-0250           | 1           | Decal-Warning          |
| 13          | 130-0590           | 4           | Mount-Tab                | 33          |                    | 1           | LH Door ASM ●          |
| 14          | 125-9987           | 4           | Mount-Latch              | 34          |                    | 1           | RH Door ASM ●          |
| 15          | 119-9812           | 4           | Bolt-Shoulder            | 35          | 98-3104            | 2           | Stud-Ball              |
| 16          | 125-9676           | 4           | Washer-Backup            | 36          | 130-6083           | 2           | Spring-Gas, Door       |
| 17          | 104-7201           | 4           | Nut-Flange, NI           | 37          | 120-9471           | 4           | Bolt-Shoulder          |
| 18          | 125-9792           | 4           | Handle-Window            | 38          | 130-5726           | 2           | Lanyard                |
| 19          | 125-9793           | 4           | Link-Window              | 39          | 130-5578           | 2           | Splice-Bulb Seal       |

● Not serviced separately


# LH Door Assembly

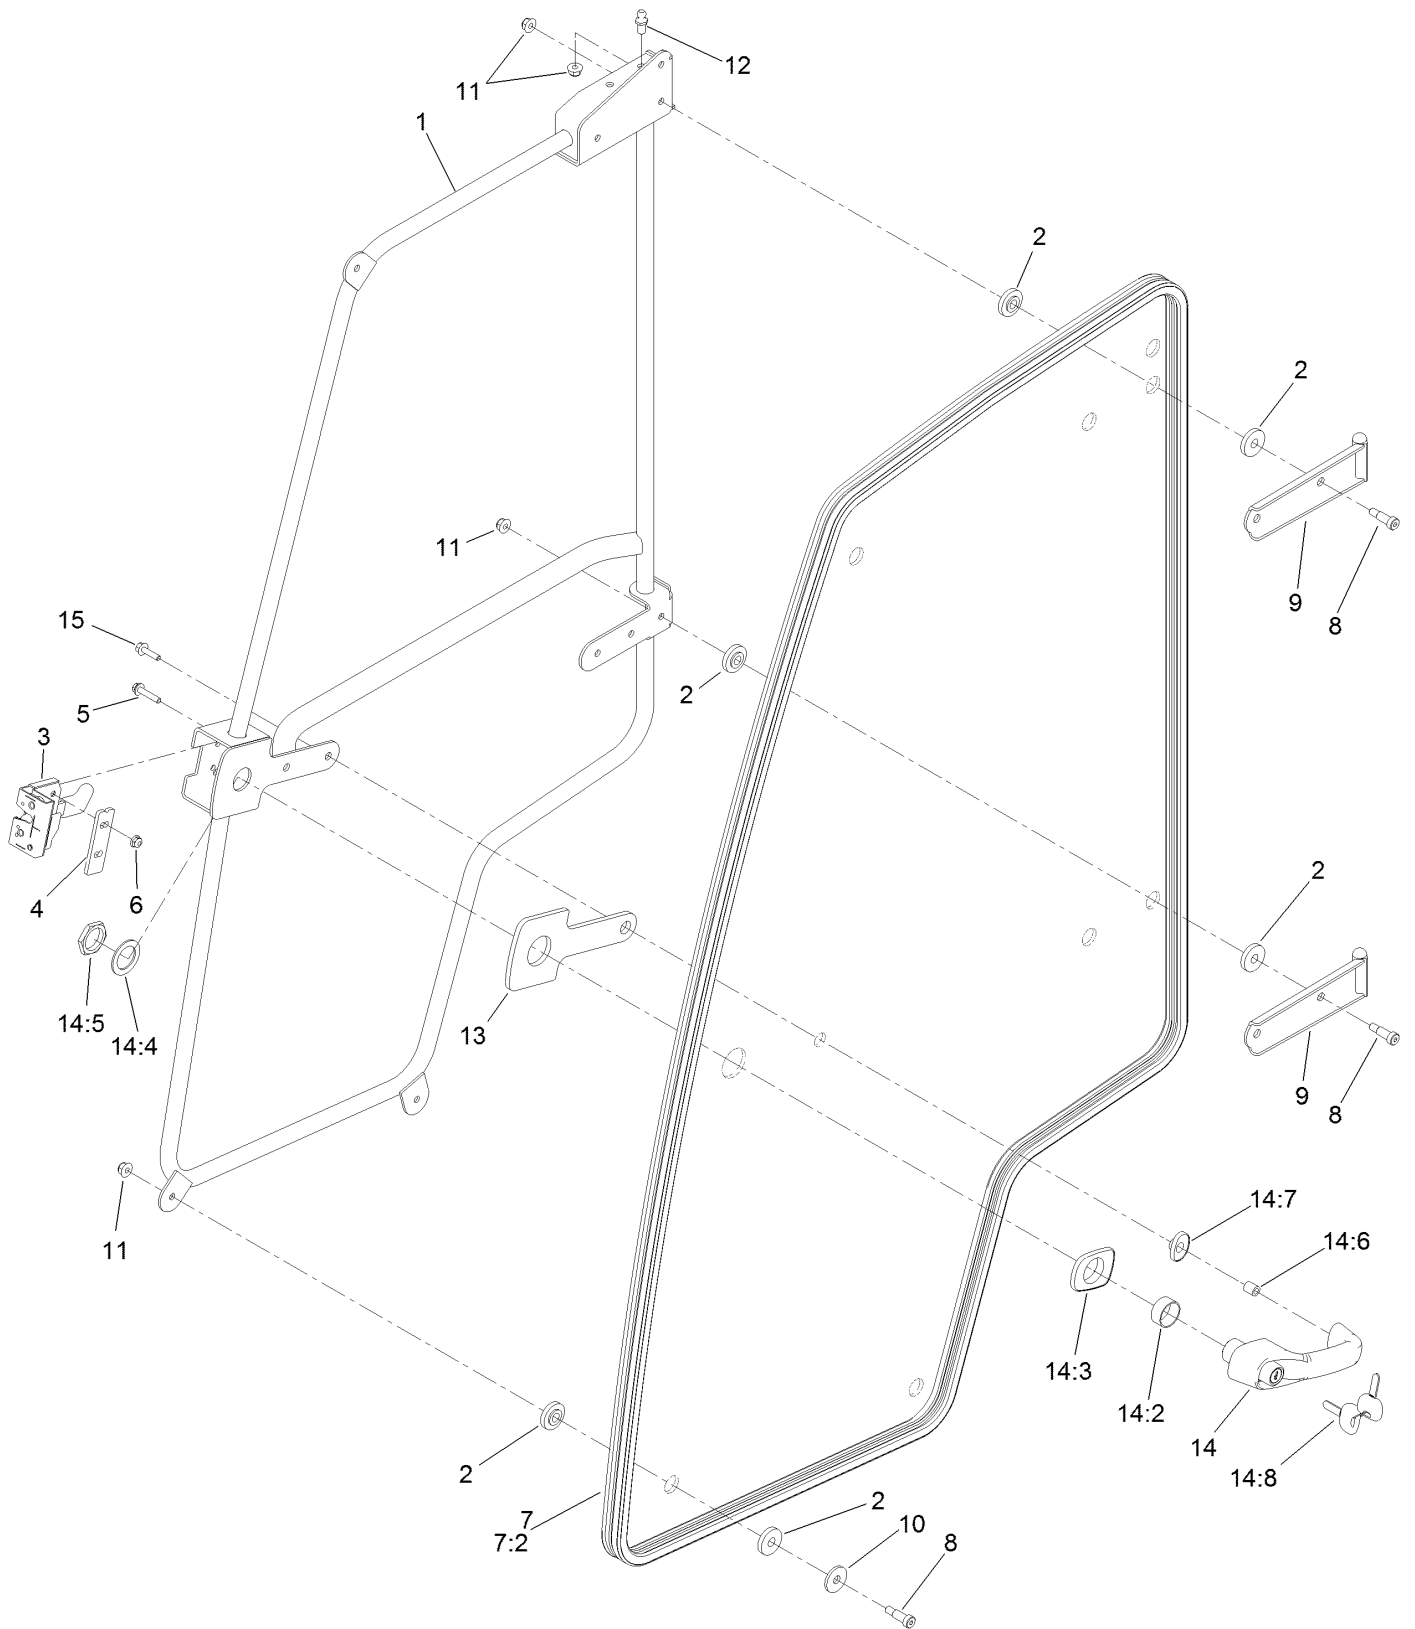

## LH Door Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      |
|-------------|--------------------|-------------|----------------------|-------------|--------------------|-------------|-------------------------|
| 1           | 130-5566-03        | 1           | Frame-Door, LH       | 12          | 98-3104            | 1           | Stud-Ball               |
| 2           | 125-9982           | 16          | Bushing-Flange       | 13          | 121-8331           | 1           | Gasket-Handle           |
| 3           | 121-8391           | 1           | Latch-LH             | 14          | 121-8630           | 1           | Handle ASM              |
| 4           | 121-8395           | 1           | Plate-Support, Latch | 14:2        | 121-8628           | 1           | Cylinder-Mounting, Key  |
| 5           | 3234-21            | 2           | Screw-HHF            | 14:3        | 121-8322           | 1           | Grommet-Mounting, Large |
| 6           | 104-7201           | 2           | Nut-Flange, NI       | 14:4        | 121-8327           | 1           | Washer                  |
| 7           | 130-6198           | 1           | LH Door ASM          | 14:5        | 121-8328           | 1           | Nut                     |
| 7:2         | 130-5568           | 1           | Trim-Door            | 14:6        | 121-8627           | 1           | Cylinder-Mounting, End  |
| 8           | 125-9520           | 8           | Screw-Shoulder, HSH  | 14:7        | 121-8323           | 1           | Grommet-Mounting, Small |
| 9           | 125-9619           | 2           | Hinge-Door, LH       | 14:8        | 125-9531           | 1           | Key-Set                 |
| 10          | 125-9676           | 4           | Washer-Backup        | 15          | 33103-025          | 1           | Screw-HHF               |
| 11          | 104-8300           | 9           | Nut-Flange, NI       |             |                    |             |                         |


RH Door Assembly

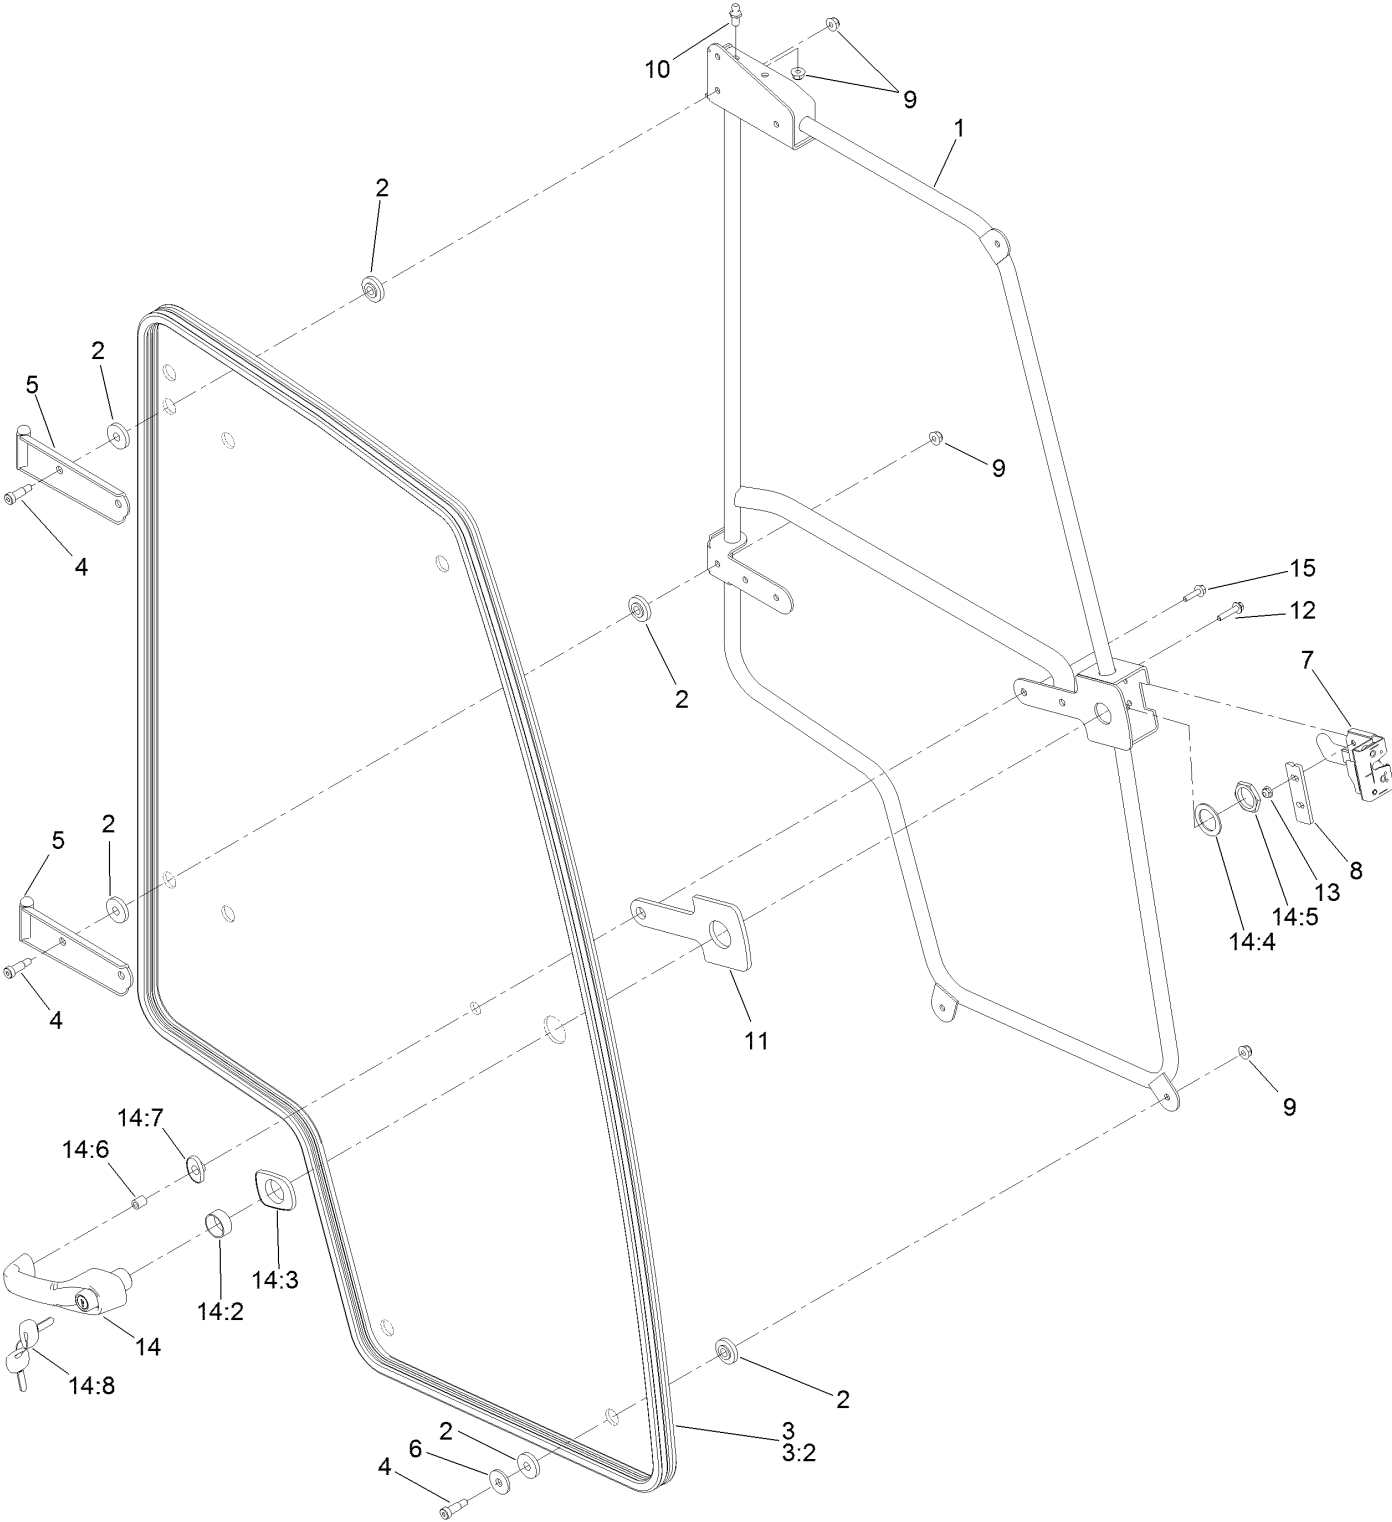

## RH Door Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      |
|-------------|--------------------|-------------|----------------------|-------------|--------------------|-------------|-------------------------|
| 1           | 130-5574-03        | 1           | Frame-Door, RH       | 12          | 3234-21            | 2           | Screw-HHF               |
| 2           | 125-9982           | 16          | Bushing-Flange       | 13          | 104-7201           | 2           | Nut-Flange, NI          |
| 3           | 130-6197           | 1           | RH Door ASM          | 14          | 121-8630           | 1           | Handle ASM              |
| 3:2         | 130-5568           | 1           | Trim-Door            | 14:2        | 121-8628           | 1           | Cylinder-Mounting, Key  |
| 4           | 125-9520           | 8           | Screw-Shoulder, HSH  | 14:3        | 121-8322           | 1           | Grommet-Mounting, Large |
| 5           | 125-9618           | 2           | Hinge-Door, RH       | 14:4        | 121-8327           | 1           | Washer                  |
| 6           | 125-9676           | 4           | Washer-Backup        | 14:5        | 121-8328           | 1           | Nut                     |
| 7           | 121-8390           | 1           | Latch-RH             | 14:6        | 121-8627           | 1           | Cylinder-Mounting, End  |
| 8           | 121-8395           | 1           | Plate-Support, Latch | 14:7        | 121-8323           | 1           | Grommet-Mounting, Small |
| 9           | 104-8300           | 9           | Nut-Flange, NI       | 14:8        | 125-9531           | 1           | Key-Set                 |
| 10          | 98-3104            | 1           | Stud-Ball            | 15          | 33103-025          | 1           | Screw-HHF               |
| 11          | 121-8331           | 1           | Gasket-Handle        |             |                    |             |                         |


# Heater Hose Routing and Washer Bottle Assembly

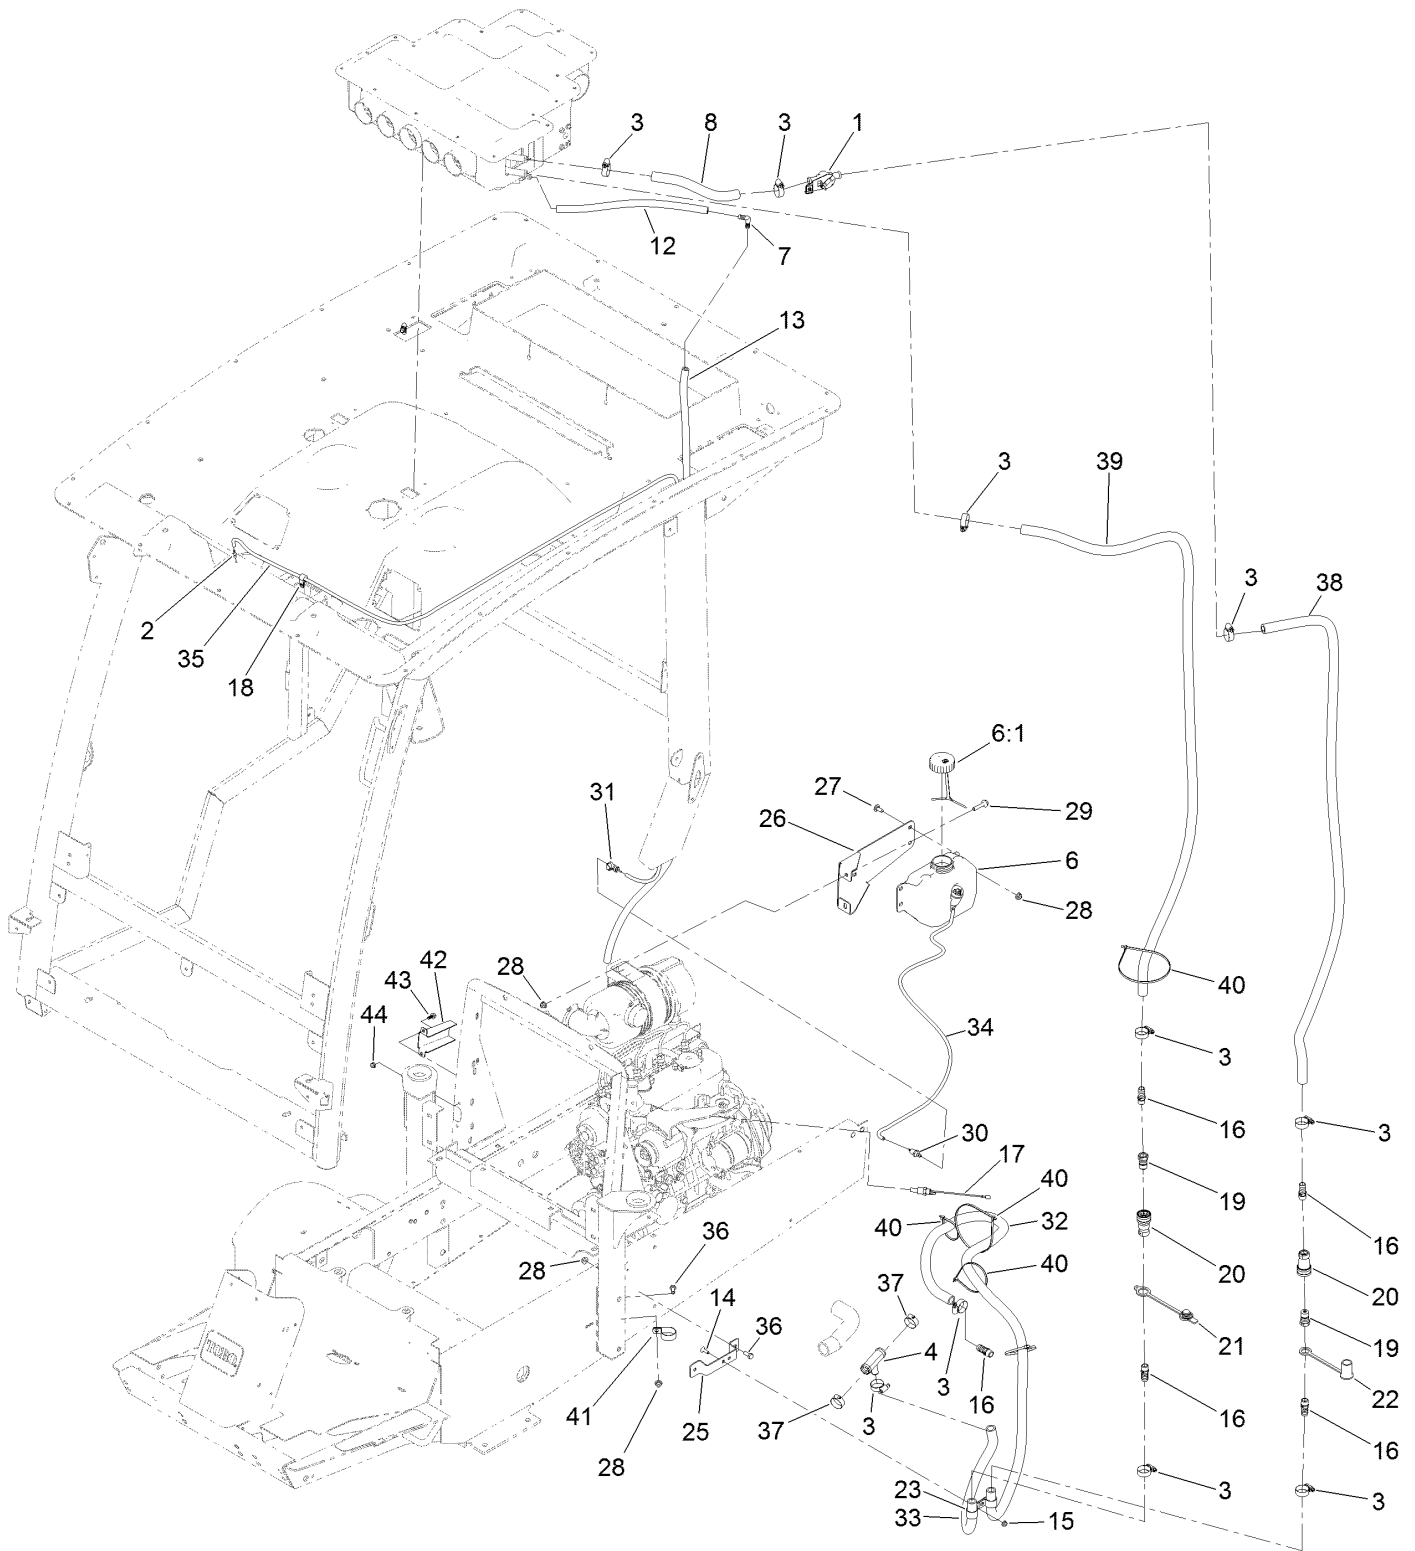

# Heater Hose Routing and Washer Bottle Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    |
|-------------|--------------------|-------------|------------------------|-------------|--------------------|-------------|-----------------------|
| 1           | 120-4947           | 1           | Valve-Heater           | 25          | 130-5845-01        | 1           | Bracket-Coupler       |
| 2           | 127-9905           | 1           | Fitting-Hose, Barb     | 26          | 130-5898-03        | 1           | Bracket-Mount, Bottle |
| 3           | 2412-129           | 10          | Clamp-Hose             | 27          | 3230-23            | 4           | Screw-CARR            |
| 4           | 132-3416           | 1           | Tee                    | 28          | 104-8300           | 10          | Nut-Flange, NI        |
| 6           | 125-5257           | 1           | Tank-Fluid, Washer     | 29          | 112-9318           | 2           | Screw-HHF, Locking    |
| 6:1         | 125-5258           | 1           | Lid-Tank, Washer Fluid | 30          | 130-5794           | 1           | Fitting-Straight      |
| 7           | 130-0578           | 2           | Fitting-Barb, 90 DEG   | 31          | 130-5795           | 1           | Fitting-Straight      |
| 8           | 125-9706           | 1           | Hose-Heater            | 32          | 130-6145           | 1           | Hose-Heater           |
| 12          | 125-9865           | 2           | Hose-Drain             | 33          | 130-6146           | 1           | Hose-Heater           |
| 13          | 125-9866           | 2           | Hose-Drain             | 34          | 130-6147           | 1           | Hose-Washer Fluid     |
| 14          | 1-807512           | 2           | Bolt-CARR              | 35          | 130-6148           | 1           | Hose-Washer Fluid     |
| 15          | 104-7201           | 2           | Nut-Flange, NI         | 36          | 322-3              | 4           | Screw-HH              |
| 16          | 117-9410           | 5           | Fitting-Straight       | 37          | 2412-34            | 2           | Clamp-Hose            |
| 17          | 112-6347           | 1           | Switch-Temp, Dual      | 38          | 130-6143           | 1           | Hose-Heater           |
| 18          | 2412-73            | 1           | Clamp-R                | 39          | 130-6144           | 1           | Hose-Heater           |
| 19          | 125-9680           | 2           | Coupler-Male           | 40          | 3290-379           | 6           | Tie-Cable             |
| 20          | 125-9679           | 2           | Coupler-Female         | 41          | 2412-74            | 2           | R-Clamp               |
| 21          | 105-7962           | 1           | Plug-Dust              | 42          | 132-3713-03        | 1           | Cover-Harness         |
| 22          | 105-7963           | 1           | Cap-Dust               | 43          | 99-6810            | 2           | Screw-HHF             |
| 23          | 2412-39            | 2           | R-Clamp                | 44          | 104-7201           | 2           | Nut-Flange, NI        |

# Roof, Headliner and Heat Mixing Box Assembly

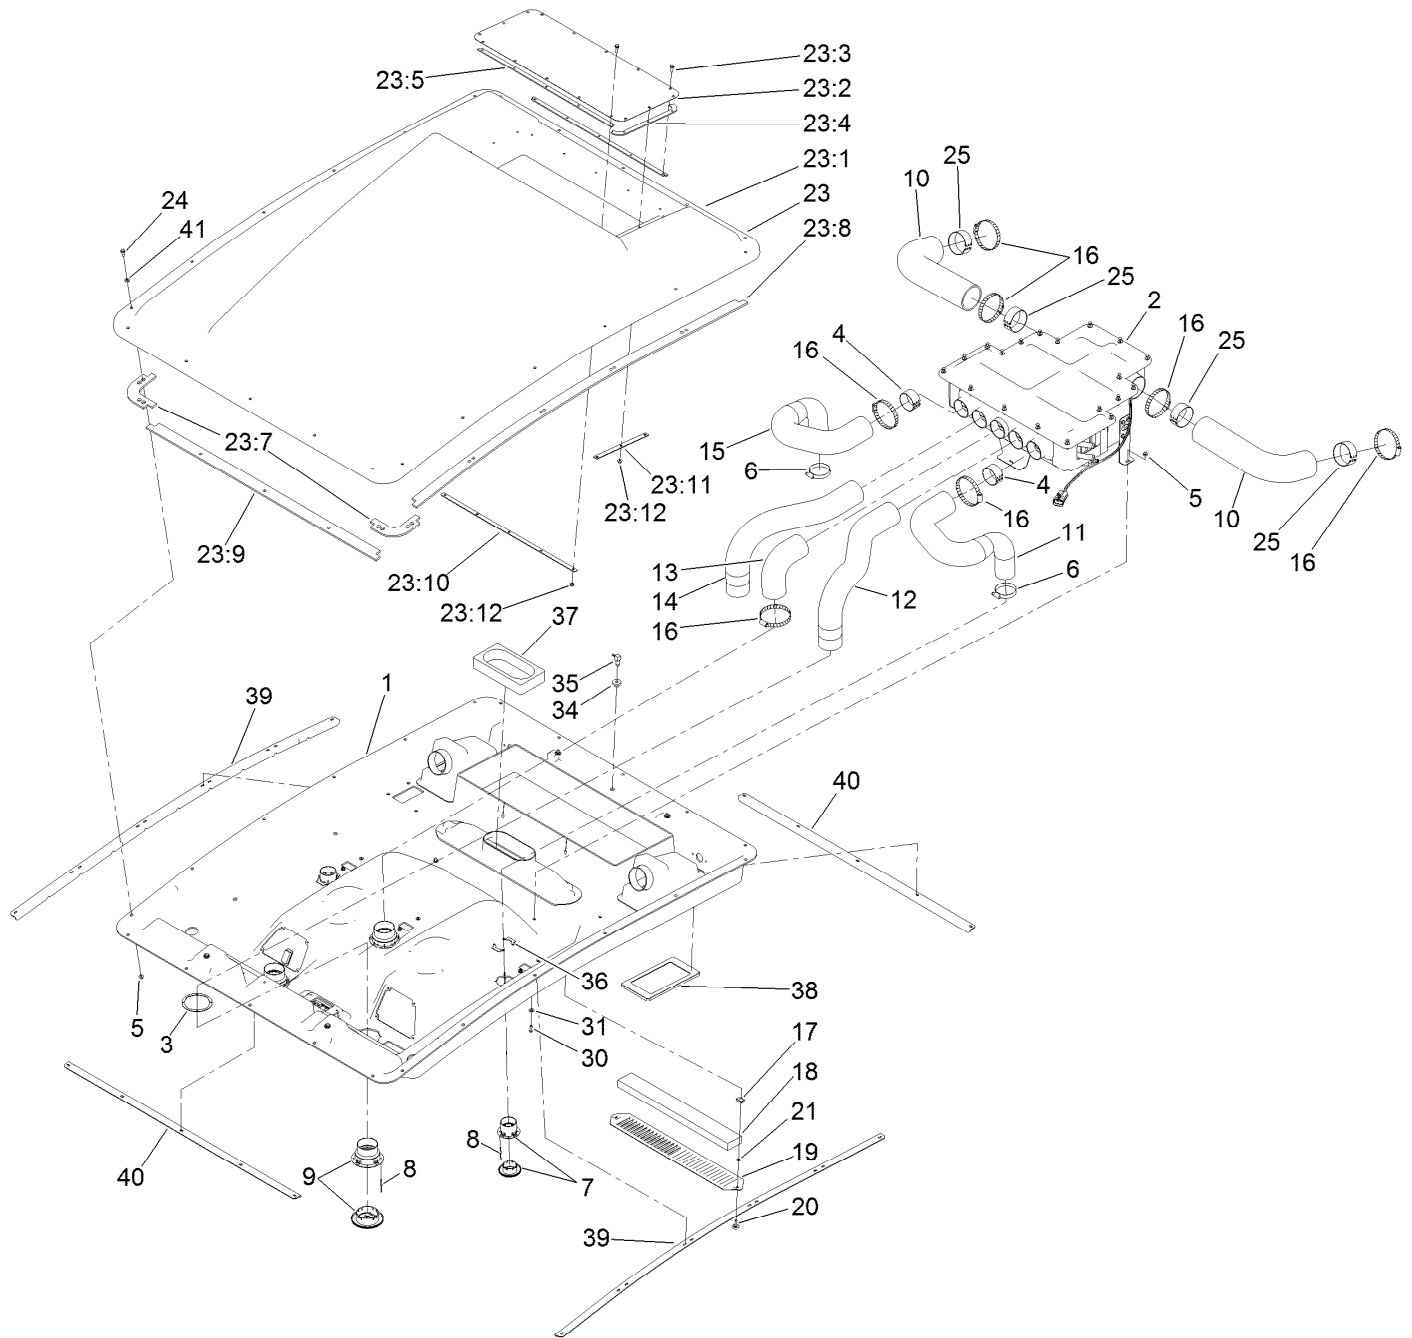


# Roof, Headliner and Heat Mixing Box Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>                | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     |
|-------------|--------------------|-------------|-----------------------------------|-------------|--------------------|-------------|------------------------|
| 1           | 121-8470           | 1           | Headliner                         | 23:1        | 125-9607           | 1           | Roof                   |
| 2           | 121-8603           | 1           | Heat Mixing Box ASM               | 23:2        | 125-9527-03        | 1           | Cover-Roof             |
| 3           | 130-0558           | 3           | Backplate-Rivet                   | 23:3        | 32105-15           | 16          | Screw-HWH              |
| 4           | 130-5938           | 2           | Tube-Support                      | 23:4        | 132-3668           | 2           | Seal-Cover, Short Side |
| 5           | 104-7201           | 24          | Nut-Flange, NI                    | 23:5        | 132-3669           | 2           | Seal-Cover, Long Side  |
| 6           | 2412-130           | 2           | Clamp-Hose                        | 23:7        | 130-5961           | 4           | Seal-Corner            |
| 7           | 130-0455           | 2           | Louver-Round, Snap-In<br>(2-Inch) | 23:8        | 130-5960           | 2           | Seal-Side              |
| 8           | 125-7503           | 20          | Rivet-Pop                         | 23:9        | 130-5962           | 2           | Seal-Front, Rear       |
| 9           | 130-0465           | 3           | Louver-Round, Snap-In<br>(4-Inch) | 23:10       | 132-3670-03        | 2           | Strap-Roof, Long       |
| 10          | 121-8473           | 2           | Hose-Intake, Fresh Air            | 23:11       | 132-3671-03        | 2           | Strap-Roof, Short      |
| 11          | 130-0440           | 1           | Hose-Vent, LH                     | 23:12       | 104-7201           | 16          | Nut-Flange, NI         |
| 12          | 121-8477           | 1           | Hose-Vent, Defrost-LH             | 24          | 119-3301           | 22          | Bolt-Pivot, Eccentric  |
| 13          | 130-0437           | 1           | Hose-Vent, Center                 | 25          | 130-5939           | 4           | Tube-Support           |
| 14          | 121-8478           | 1           | Hose-Vent, Defrost-RH             | 30          | 3274-69            | 2           | Screw-HSBH             |
| 15          | 130-0441           | 1           | Hose-Vent, RH                     | 31          | 3256-1             | 2           | Washer-Flat            |
| 16          | 2412-110           | 7           | Clamp-Hose                        | 34          | 46-6560            | 1           | Bushing                |
| 17          | 107069             | 2           | Clip                              | 35          | 104-5228           | 1           | Fitting-Elbow, 90 DEG  |
| 18          | 125-9532           | 1           | Filter-Cab, Inside                | 36          | 130-0445           | 4           | Backplate-Rivet        |
| 19          | 125-9604-03        | 1           | Plate-Cover, Recirculation        | 37          | 130-0444           | 1           | Foam-Inlet, Airbox     |
| 20          | 125-7438           | 2           | Knob-Screw, Thumb                 | 38          | 132-3474           | 2           | Insert-Seal, Filter    |
| 21          | 106-8737           | 2           | Nut-Retainer                      | 39          | 132-1461-03        | 2           | Strap-Cab, Side        |
| 23          |                    | 1           | Roof ASM ●                        | 40          | 132-1462-03        | 2           | Strap-Cab              |
|             |                    |             |                                   | 41          | 3256-74            | 22          | Washer-Flat            |

● Not serviced separately


# Headliner Wire Harness and Control Assembly

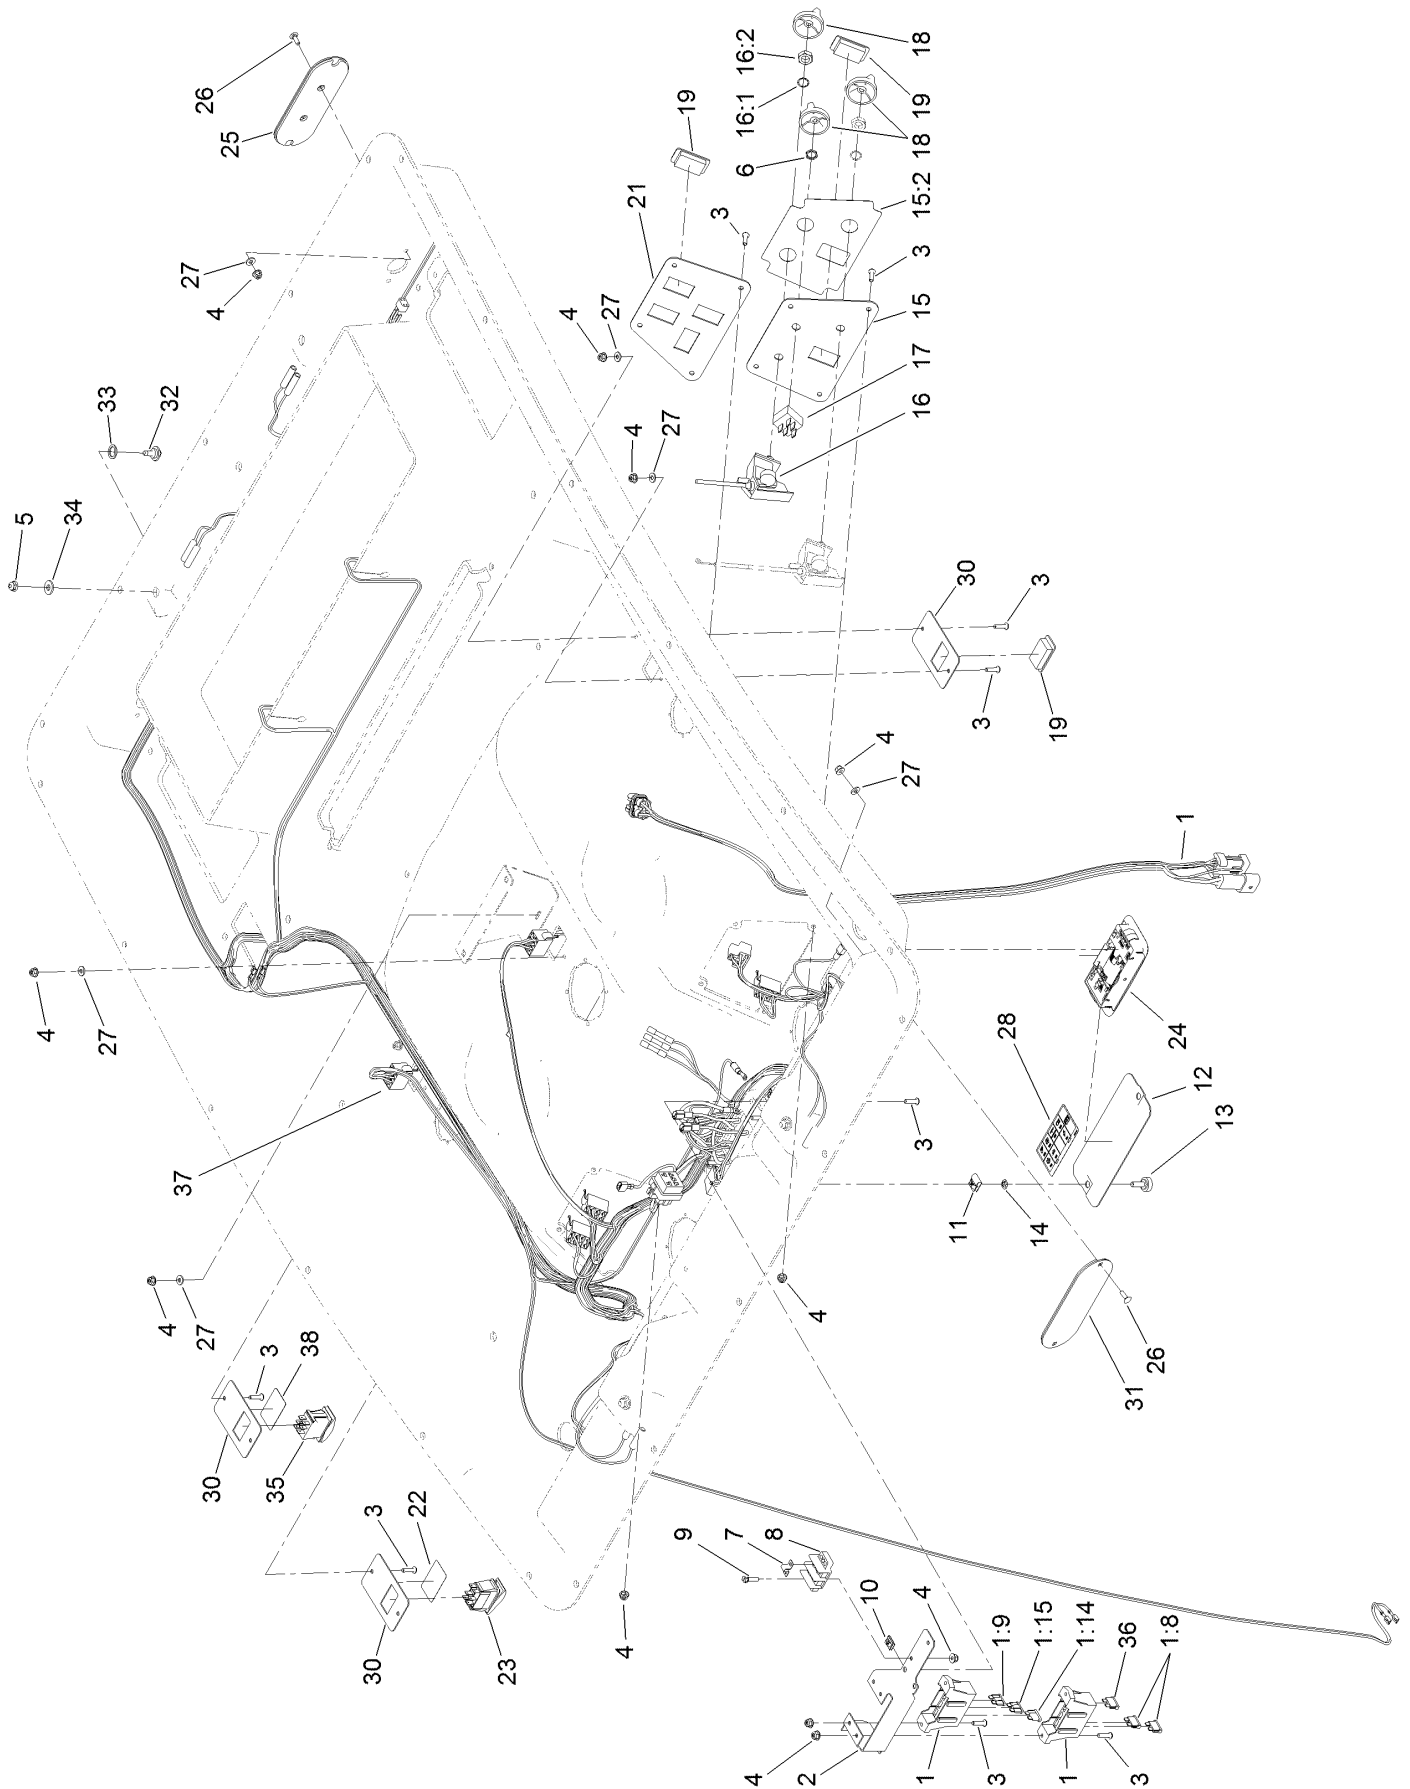

## Headliner Wire Harness and Control Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>        |
|-------------|--------------------|-------------|-------------------------|-------------|--------------------|-------------|---------------------------|
| 1           | 122-0723           | 1           | Harness-Wire, Headliner | 16:2        | 3220-4             | 1           | Nut-Jam                   |
| 1:8         | 109355             | 2           | Fuse-Blade, 15 Amp      | 17          | 122-0150           | 1           | Switch, Rotary            |
| 1:9         | 109103             | 1           | Fuse-Blade, 30 Amp      | 18          | 125-9510           | 3           | Knob-Control              |
| 1:14        | 109101             | 1           | Fuse-Blade, 20 Amp      | 19          | 99-7420            | 6           | Plug-Hole                 |
| 1:15        | 109102             | 1           | Fuse-Blade, 25 Amp      | 21          | 125-9658-03        | 1           | Panel-Switch, Lights      |
| 2           | 125-9606-03        | 1           | Bracket-Fuse Block      | 22          | 125-9688           | 1           | Decal-Washer              |
| 3           | 104-2408           | 22          | Screw-HSBH              | 23          | 119-8355           | 1           | Switch-Rocker             |
| 4           | 120-4578           | 28          | Nut-HF                  | 24          | 125-7437           | 1           | Trex Dome Light Kit       |
| 5           | 104-7201           | 4           | Nut-Flange, NI          | 25          | 130-5867           | 2           | Cover-Light, Rear         |
| 6           | 130-0588           | 1           | Nut-Switch              | 26          | 3229-34            | 8           | Screw-CARR                |
| 7           | 42863              | 1           | Strip-Jumper            | 27          | 3256-14            | 14          | Washer-Flat               |
| 8           | 42862              | 1           | Block-Terminal, Ground  | 28          | 132-3600           | 1           | Decal-Panel, Fuse         |
| 9           | 32105-13           | 2           | Screw-HWH               | 30          | 130-0436           | 3           | Panel-Switch              |
| 10          | 107-1013           | 4           | Nut-Speed, U-Type       | 31          | 130-5868           | 2           | Cover-Light, Front        |
| 11          | 609900             | 2           | Nut-Speed               | 32          | 92-9698            | 4           | Screw-Shoulder            |
| 12          | 125-9603-03        | 1           | Plate-Cover, Fuse       | 33          | 94-8196            | 4           | Washer-Nylon              |
| 13          | 125-7438           | 2           | Knob-Screw, Thumb       | 34          | 3256-2             | 4           | Washer-Flat               |
| 14          | 106-8737           | 2           | Nut-Retainer            | 35          | 100-1535           | 1           | Switch                    |
| 15          | 121-8481           | 1           | Panel-Air/Heat          | 36          | 109355             | 1           | Fuse-Blade, 15 Amp        |
| 15:2        | 121-8378           | 1           | Decal, Air/Heat         | 37          | 122-0158           | 1           | Harness-Wire, Power Point |
| 16          | 125-9677           | 1           | Control-Rotary, Linear  | 38          | 130-0457           | 1           | Decal-Power Point         |
| 16:1        | 3254-20            | 1           | Washer-Lock, Int        |             |                    |             |                           |


# Blower Mount Assembly

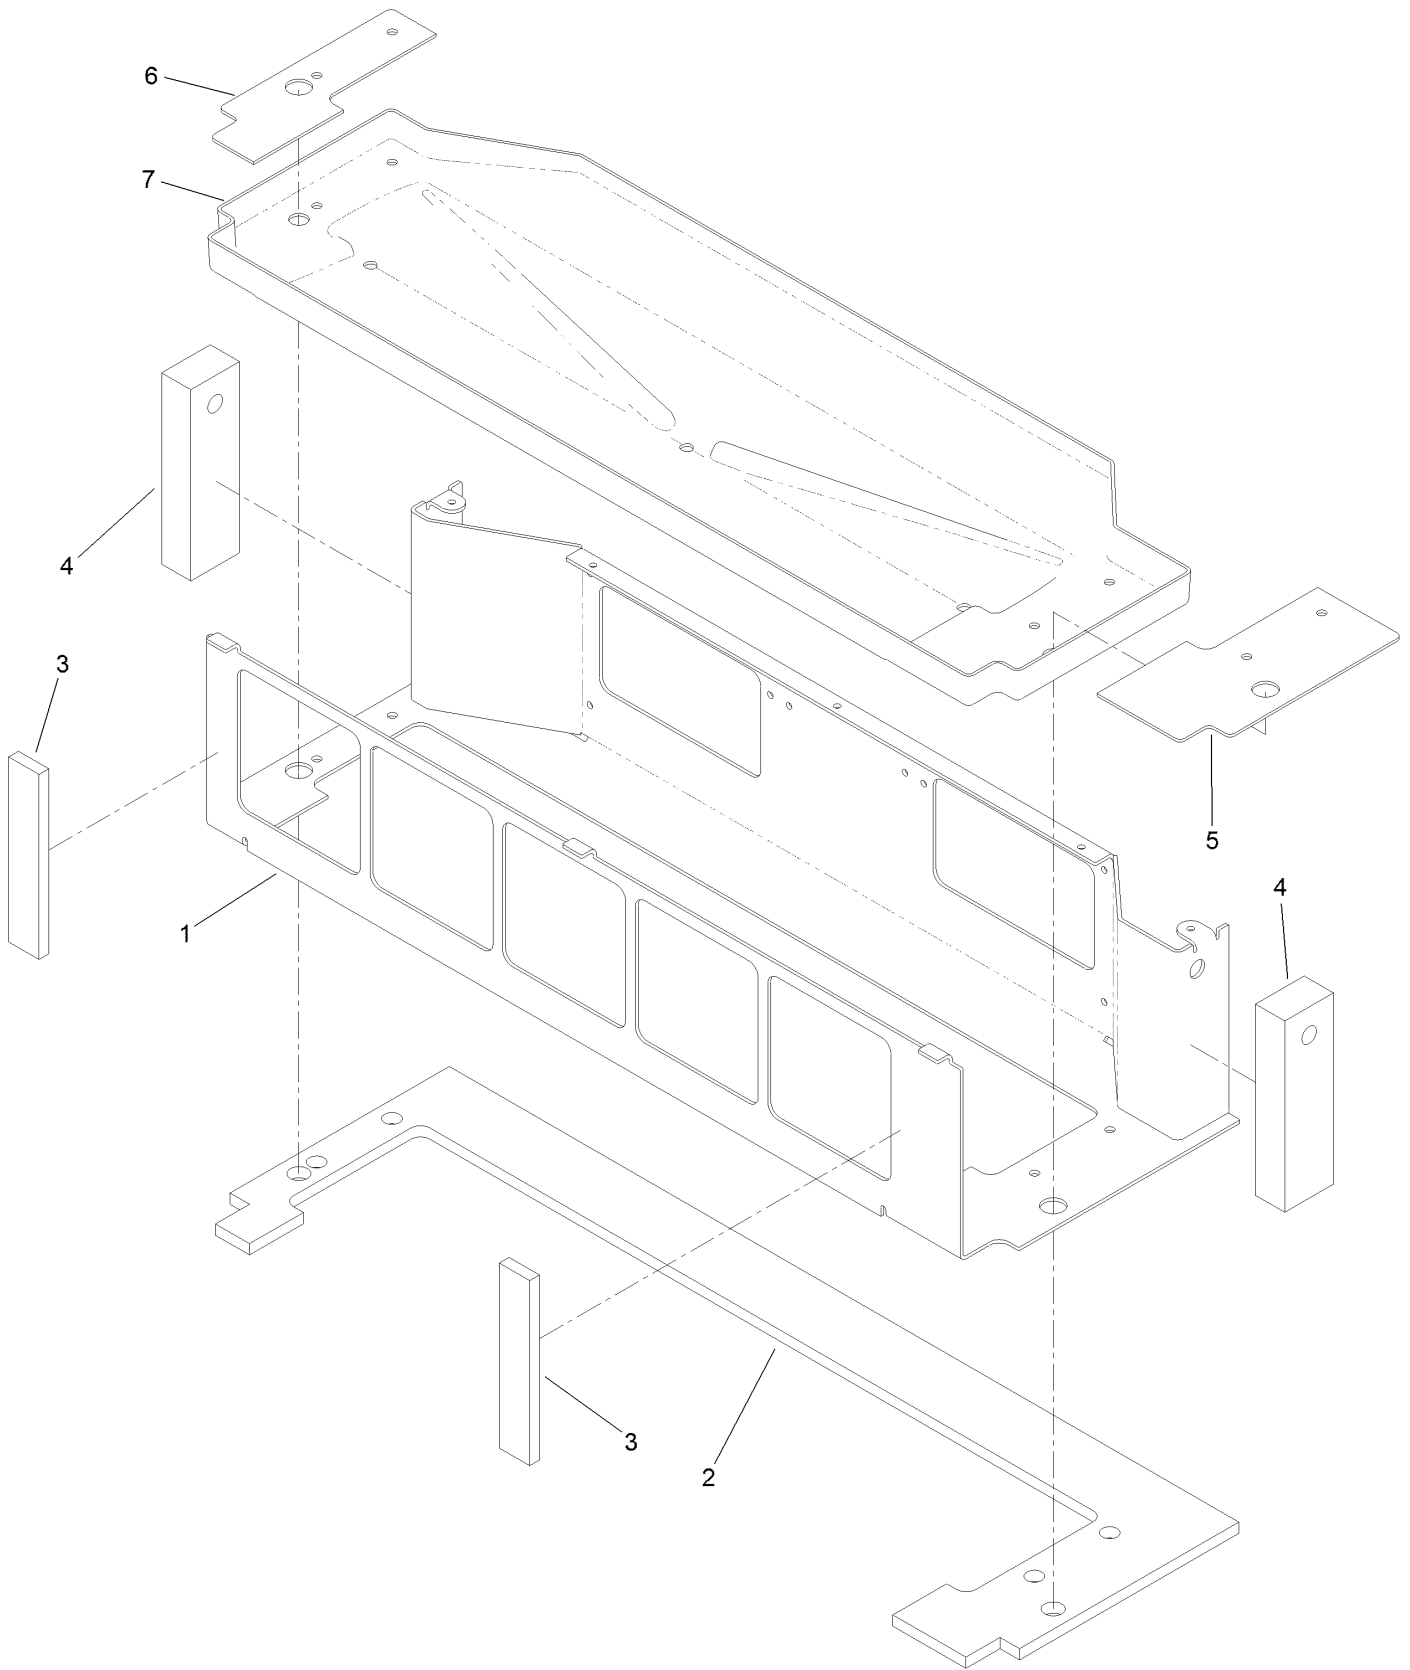

## Blower Mount Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|--------------------------|
| 1           | 130-5655-03        | 1           | Bracket-Mount      | 5           | 130-5653           | 1           | Gasket-Mount, LH Bracket |
| 2           | 130-5659           | 1           | Seal-Foam          | 6           | 130-5654           | 1           | Gasket-Mount, RH Bracket |
| 3           | 130-5808           | 2           | Seal-Foam, Front   | 7           | 130-5664           | 1           | Water-Tray               |
| 4           | 130-0602           | 2           | Seal-End           |             |                    |             |                          |


# Heater Core Bracket and Cover Assembly

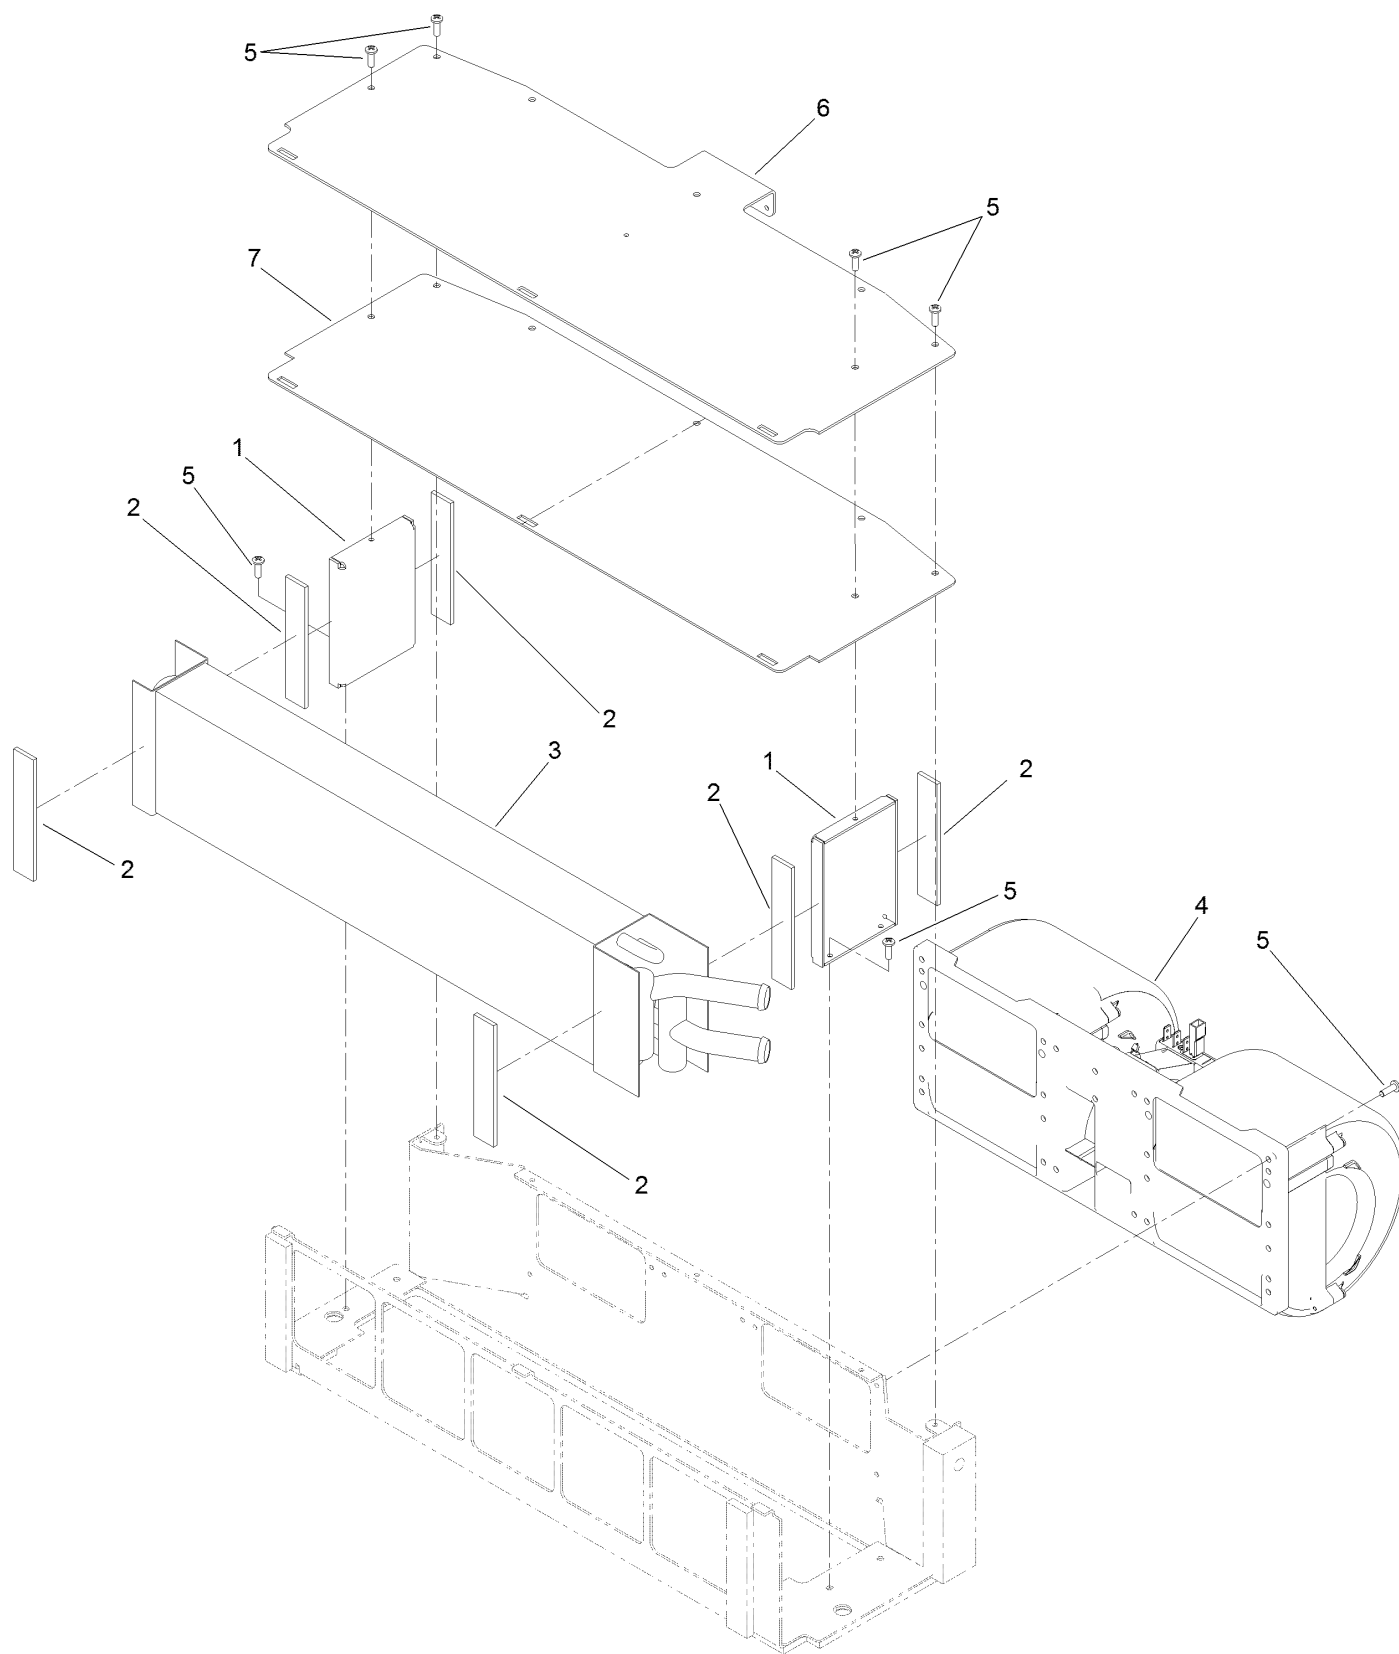

## Heater Core Bracket and Cover Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>         | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   |
|-------------|--------------------|-------------|----------------------------|-------------|--------------------|-------------|----------------------|
| 1           | 130-5812-03        | 2           | Bracket-Mount, Heater Core | 5           | 363-8245           | 17          | Screw-TAP            |
| 2           | 130-5658           | 6           | Gasket-Coil                | 6           | 130-5656-03        | 1           | Cover, Bracket-Mount |
| 3           | 127-9915           | 1           | Core-Heater                | 7           | 130-5652           | 1           | Gasket-Mount, Cover  |
| 4           | 121-8451           | 1           | Fan-Blower                 |             |                    |             | Bracket              |


# Heat / AC Mixing Box Housing Assembly

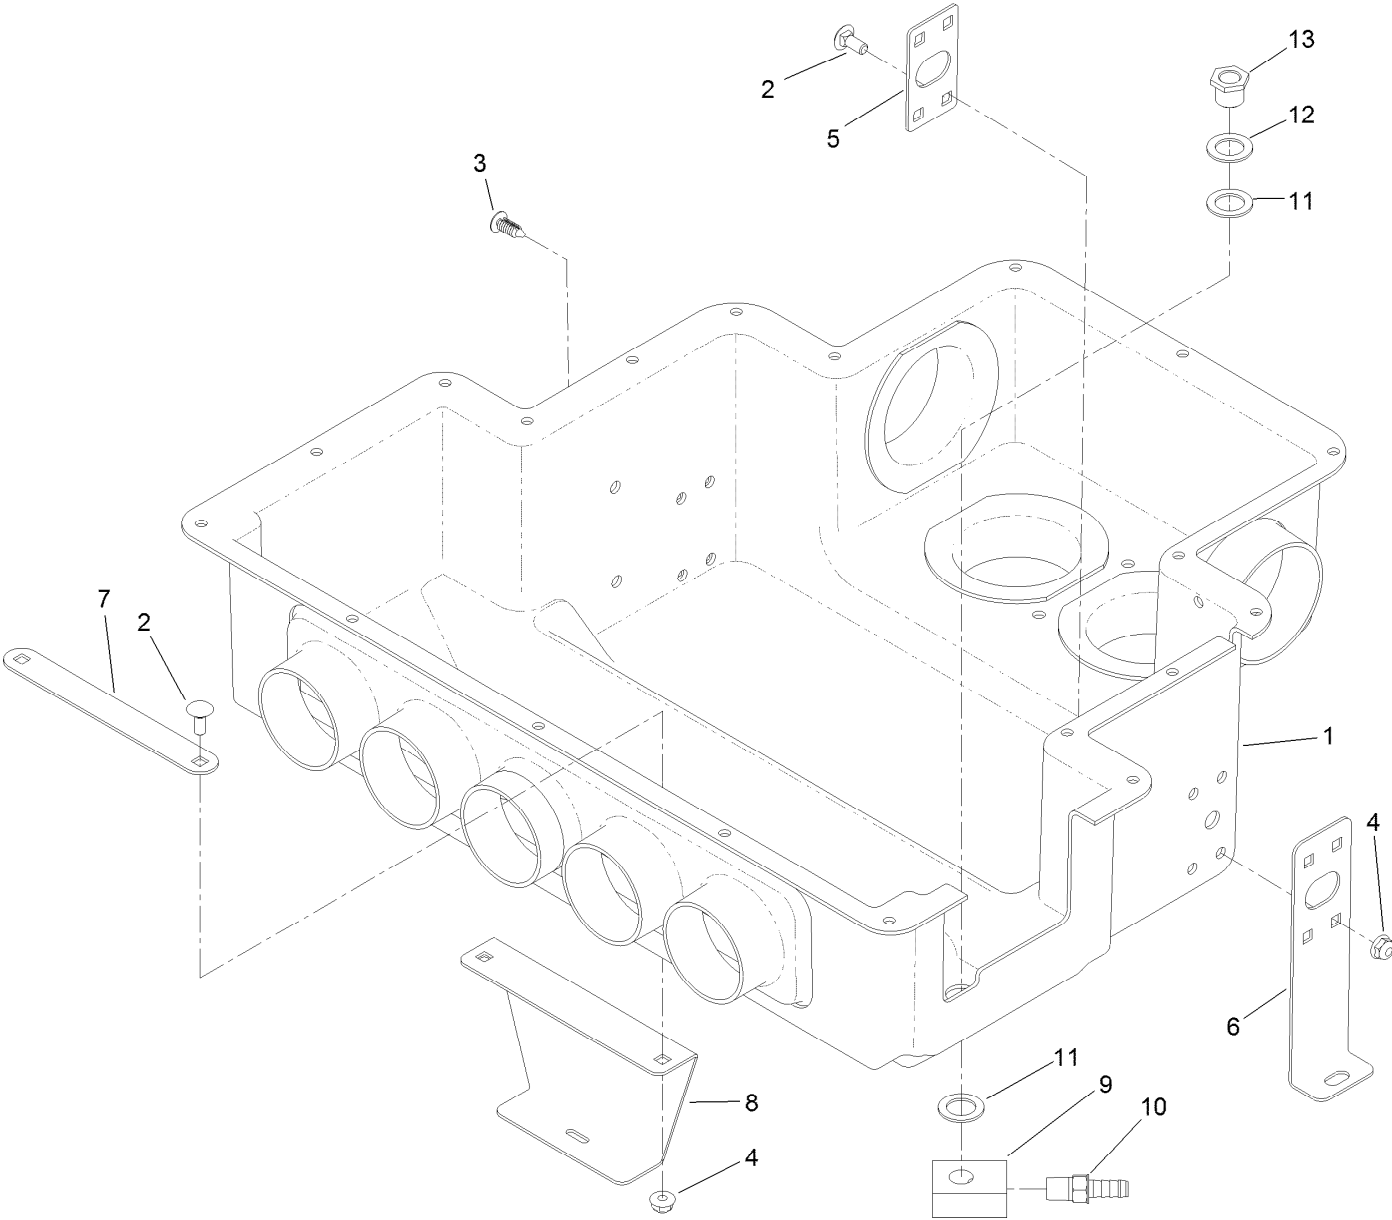

## Heat / AC Mixing Box Housing Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     |
|-------------|--------------------|-------------|----------------------|-------------|--------------------|-------------|------------------------|
| 1           | 130-5830           | 1           | Heat/Ac Housing ASM  | 8           | 130-0554           | 1           | Bracket-Airbox, Center |
| 2           | 3229-11            | 10          | Screw-CARR           | 9           | 130-5601           | 2           | Drain-Lower            |
| 3           | 114-4899           | 2           | Plug-Plastic         | 10          | 108-0342           | 2           | Fitting-Straight       |
| 4           | 104-7201           | 10          | Nut-Flange, NI       | 11          | 121-6840           | 4           | Washer-Rubber          |
| 5           | 130-5834           | 2           | Bracket-Support      | 12          | 107-3041           | 2           | Washer-Flat            |
| 6           | 130-5821           | 2           | Bracket-Airbox, Side | 13          | 130-0293           | 2           | Drain-Upper            |
| 7           | 125-7504           | 1           | Plate-Backer, Center |             |                    |             |                        |


# Air Diverter Assembly

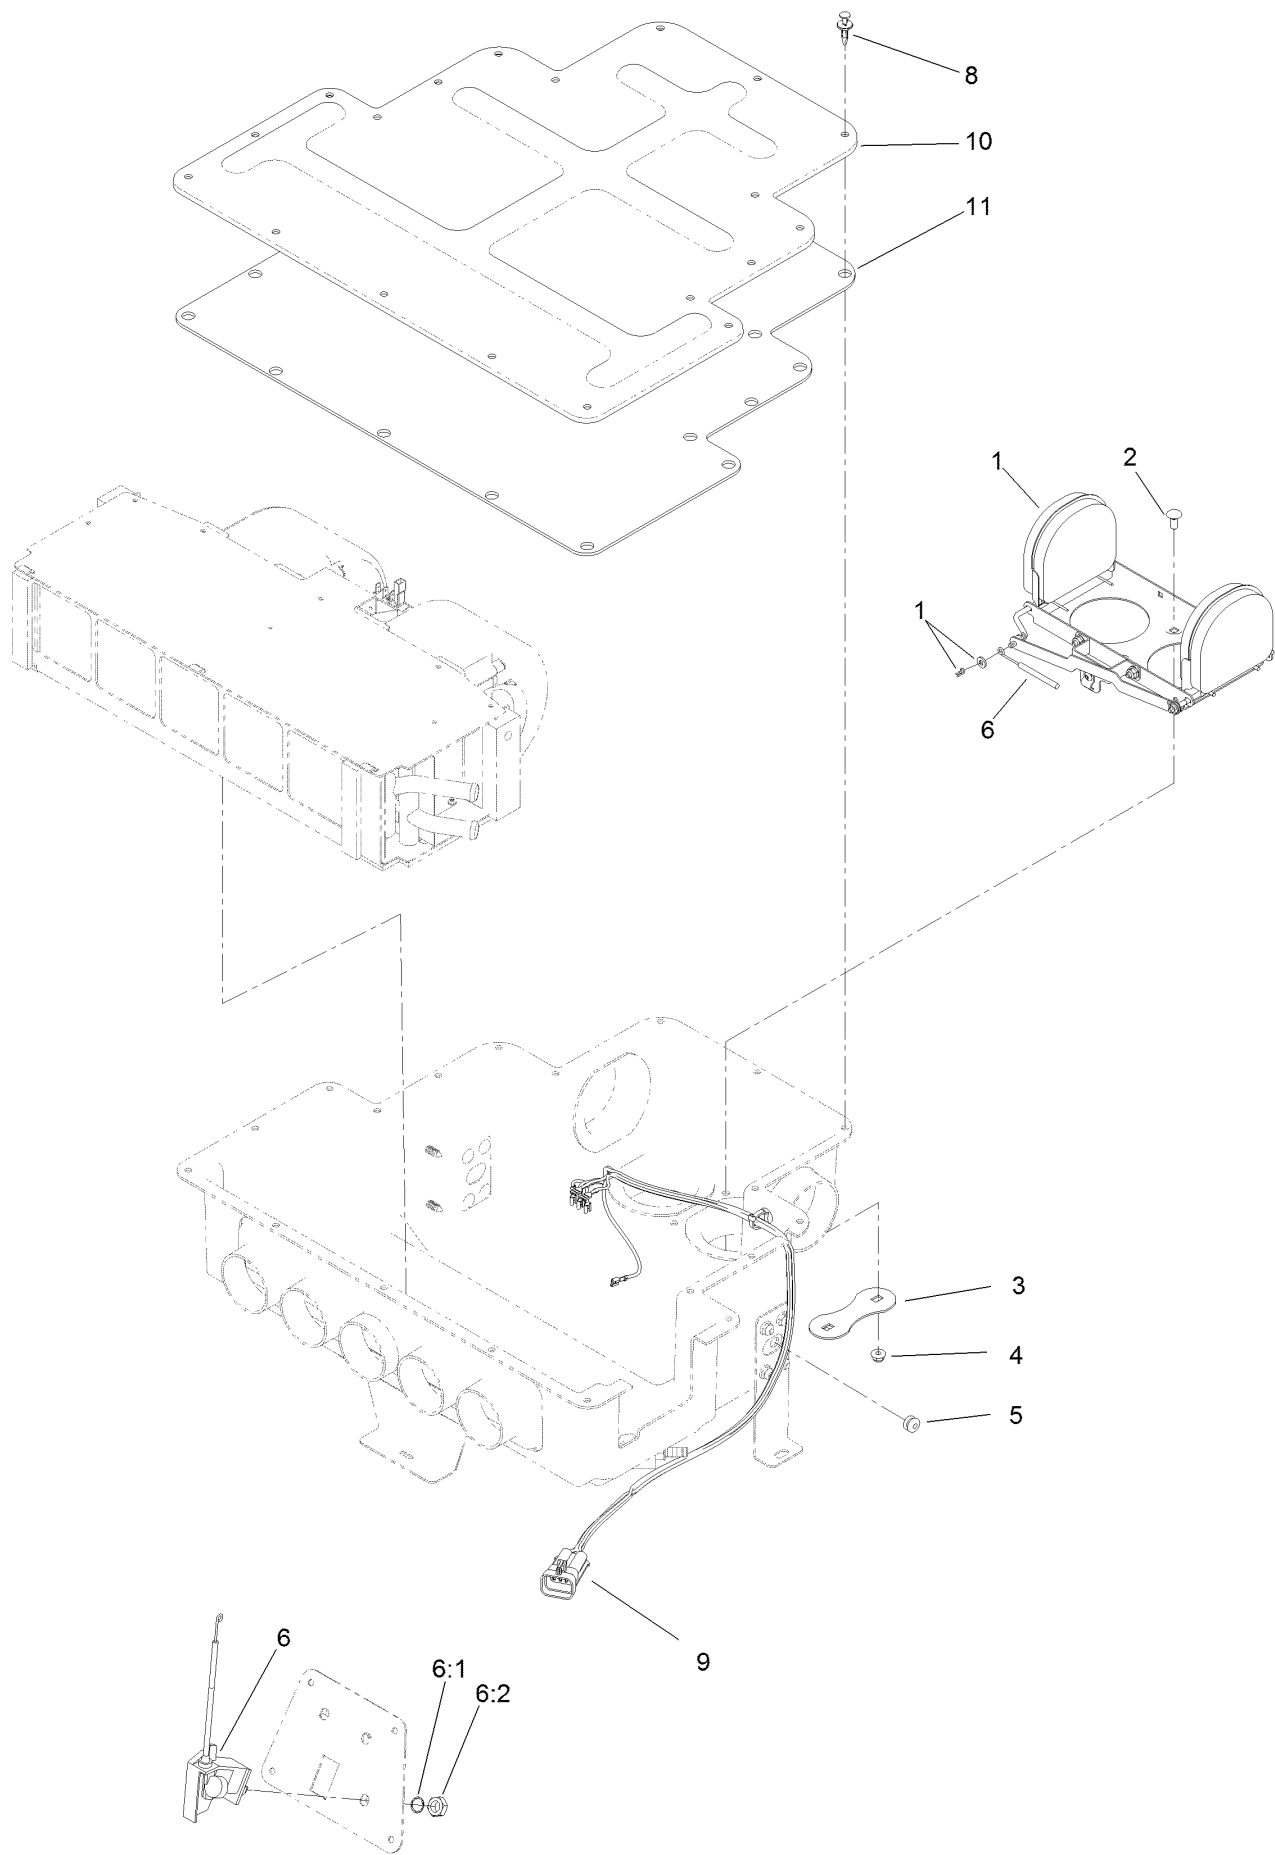

## Air Diverter Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>              |
|-------------|--------------------|-------------|------------------------|-------------|--------------------|-------------|---------------------------------|
| 1           | 121-8369           | 1           | Air Diverter ASM       | 6:2         | 3220-4             | 1           | Nut-Jam                         |
| 2           | 3229-11            | 2           | Screw-CARR             | 8           | 125-9622           | 19          | Rivet-Blind                     |
| 3           | 121-8491           | 1           | Plate-Support          | 9           | 122-0153           | 1           | Harness-Wire, Heat/Ac<br>Blower |
| 4           | 104-7201           | 2           | Nut-Flange, NI         | 10          | 121-8449           | 1           | Housing-Ventilation, Upper      |
| 5           | 125-7528           | 1           | Grommet-Cable          | 11          | 130-5614           | 1           | Insulation-Cover                |
| 6           | 125-9678           | 1           | Control-Rotary, Linear |             |                    |             |                                 |
| 6:1         | 3254-20            | 1           | Washer-Lock, Int       |             |                    |             |                                 |

# Air Diverter Assembly No. 121-8369

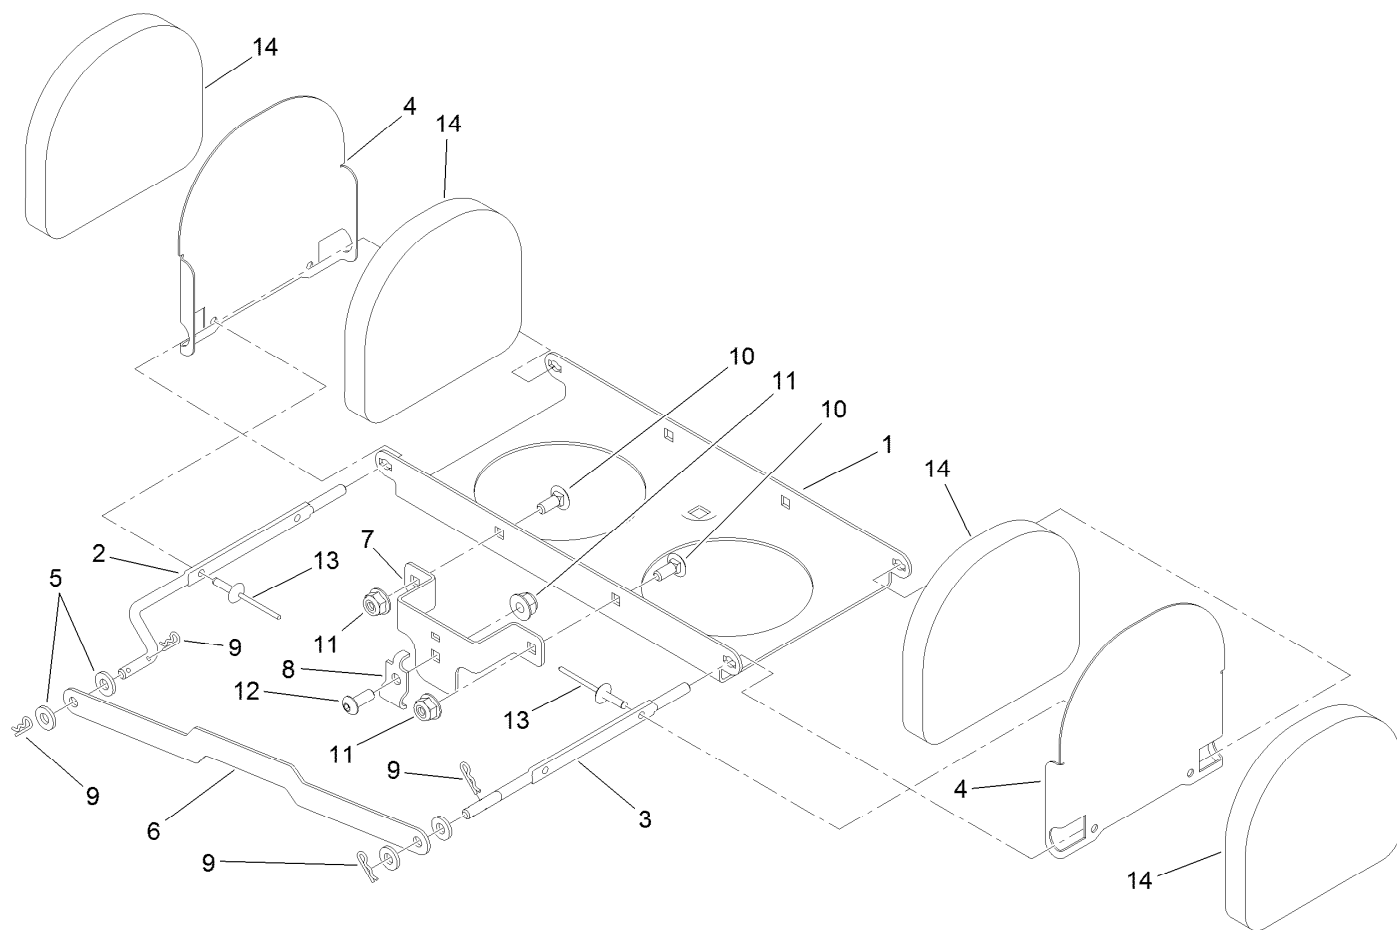

## Air Diverter Assembly No. 121-8369 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|--------------------|
| 1           | 125-9697           | 1           | Base-Mount         | 8           | 121-8256           | 1           | Clamp-Conduit      |
| 2           | 121-8381           | 1           | Shaft-Baffle, RH   | 9           | 108-2992           | 4           | Pin-Hair           |
| 3           | 121-8382           | 1           | Shaft-Baffle, LH   | 10          | 1-807513           | 2           | Bolt-CARR          |
| 4           | 125-9698           | 2           | Baffle-Air         | 11          | 120-4578           | 3           | Nut-HF             |
| 5           | 3256-51            | 4           | Washer-Flat        | 12          | 115-9830           | 1           | Screw-HSBH         |
| 6           | 125-9696           | 1           | Link-Baffle        | 13          | 3290-271           | 4           | Rivet-Pop          |
| 7           | 121-8374           | 1           | Mount-Cable        | 14          | 125-9699           | 4           | Damper-Foam        |

**Notes:**

**Notes:**



**Count on it.**