



Count on it.

Form No. 3404-440 Rev A

Parts Catalog

DH 220 Lawn Tractor

Model No. 74596—Serial No. 312000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HP: high pressure

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: low pressure

LPG: Liquefied Petroleum Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head


STD: standard

TAP: self tapping

TTH: torx truss head

Contents

Engine and Muffler Assembly	4
Front Axle Assembly	5
Steering Assembly	6
Transmission Drive Assembly	7
Control Shaft Assembly Transmission Assembly No. 114-3155	8
Differential Gear Assembly Transmission Assembly No. 114-3155	9
Final Pinion Assembly Transmission Assembly No. 114-3155	10
Axle Shaft Assembly Transmission Assembly No. 114-3155	11
Brake Assembly Transmission Assembly No. 114-3155	12
Fan Pulley Assembly Transmission Assembly No. 114-3155	13
Range Shift Assembly Transmission Assembly No. 114-3155	14
Center Case Assembly Transmission Assembly No. 114-3155	15
Pump Shaft Assembly Transmission Assembly No. 114-3155	16
Motor Shaft Assembly Transmission Assembly No. 114-3155	17
Transaxle Case Assembly Transmission Assembly No. 114-3155	18
Mower Lift Assembly	19
Cutting Pan and Drive System Assembly No. 125-2257	20
Mower Housing Assembly	22
Battery and Electrical Assembly	24
Body and Hood Assembly	26
Grass Collector Assembly No. 125-2325	28
Tunnel and Collector Plate Assembly	30
Operation - Travel Pedals and Brake Assembly	31
Frame Assembly	32
Decal Assembly	33
Attachments and Accessories	34

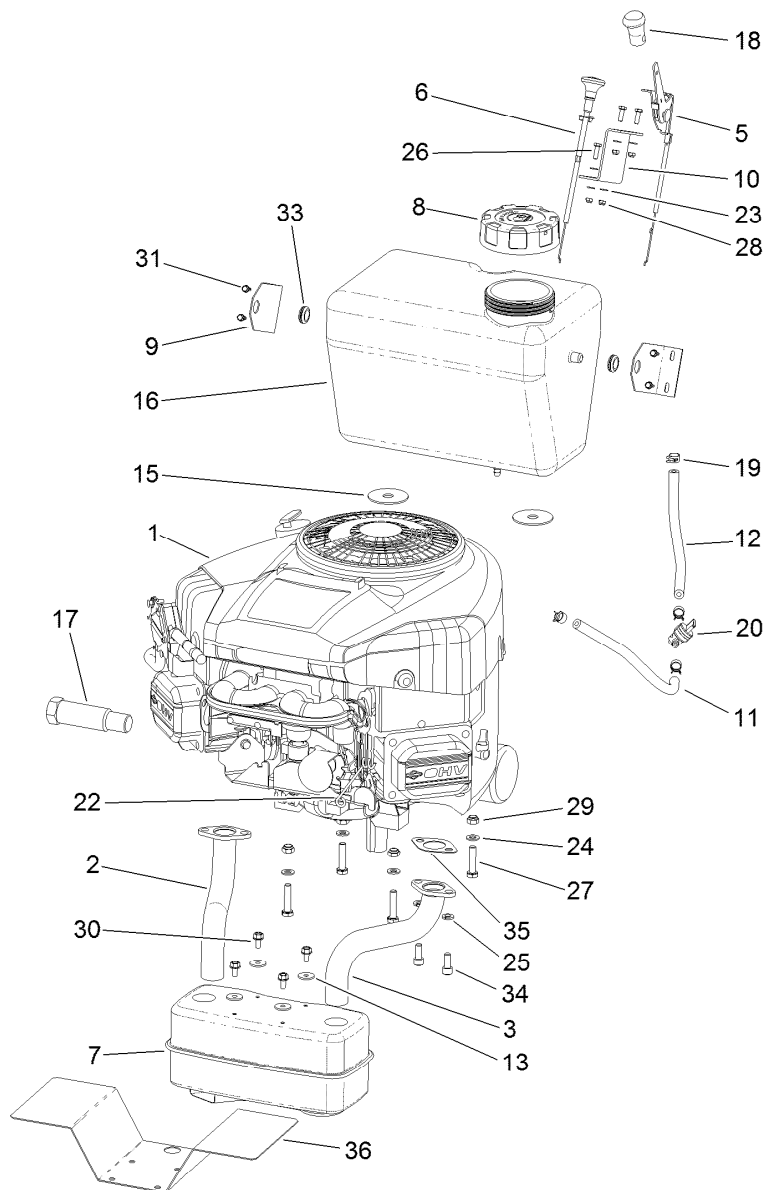


Engine and Muffler Assembly

Ref.	Part Number	Qty.	Description
1		1	Engine-Briggs, 40R777-0007-B1 ●■
2	125-2217	1	Tube-Exhaust, RH
3	125-2218	1	Tube-Exhaust, LH
5	125-2215	1	Control-Throttle, Twin
6	125-2216	1	Control-Choke, Twin
7	104-3225	1	Muffler
8	119-5354	1	Cap-Fuel
9	125-2202	2	Bracket-Fuel, Tank
10	125-2206	1	Holder
11	125-2212	1	Line-Fuel
12	125-2203	1	Line-Fuel
13	125-2205	4	Washer-Muffler
15	119-5500	2	Washer-Rubber
16	119-5358	1	Tank-Fuel
17	120-8755	1	Coupler-Drain, Oil
18	119-5448	1	Knob-Throttle/Choke

Ref.	Part Number	Qty.	Description
19	104-3212	4	Clamp-Line, Fuel
20	104-3224	1	Valve-Tank, Fuel
22	104-3156	1	Holder-Harness, Wiring
23	52-6430	6	Washer
24	106-4756	4	Washer-Plain
25	104-2927	4	Washer-Spring
26	107-8918	4	Screw
27	33114-035	4	Screw-HH
28	87-5140	4	Nut-Lock
29	33024-00	4	Nut-Lock, NI
30	110-7170	4	Screw-HH
31	104-2977	4	Screw-TAP
33	119-5364	2	Bushing
34	322-3	4	Screw-HH
35	104-3226	2	Gasket-Exhaust
36	125-2195	1	Cover-Tube

● Not serviced separately


■ Obtain parts from www.briggsandstratton.com

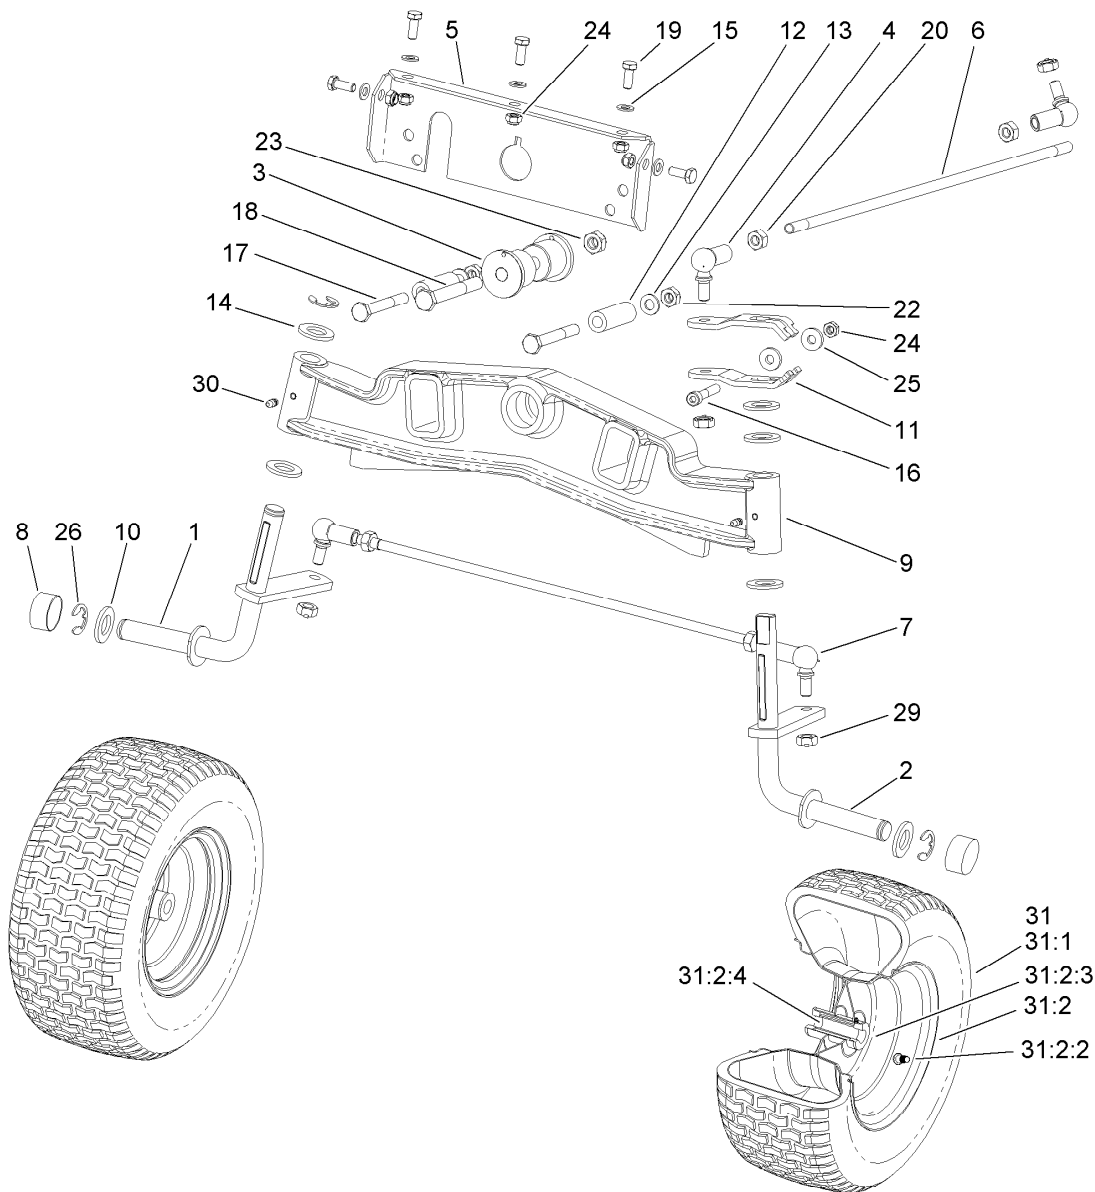

Front Axle Assembly

Ref.	Part Number	Qty.	Description
1	110-9084	1	Spindle-Front, RH
2	120-8705	1	Spindle-Front, LH
3	104-2890	2	Bushing-Axle, Front
4	104-2876	4	Joint-Ball, Angle
5	125-2219	1	Plate-Axle
6	125-2223	1	Link-Drag
7	125-2222	1	Rod-Tie, Front Axle
8	104-2857	2	Cap-Hub
9	104-2852	1	Axle-Front
10	120-8739	2	Washer
11	120-8713	2	Lever-Spindle, Steering
12	104-2851	2	Spacer
13	33095-00	2	Washer-Flat
14	104-2905	5	Washer-Flat
15	106-4756	5	Washer-Plain
16	120-8774	1	Screw
17	33115-080	2	Screw-HH


Ref.	Part Number	Qty.	Description
18	33116-090	1	Screw-HH
19	33114-020	5	Screw-HH
20	33015-00	4	Nut-Hex
22	33023-00	2	Nut-Lock
23	48-9540	1	Nut-Lock, Hex NI
24	33024-00	6	Nut-Lock, NI
25	106-8588	2	Washer-Flat
26	104-2891	3	Clip-Spring
29	33025-00	4	Nut-Lock, NI
30	104-2904	3	Fitting-Grease
31	114-3240	2	Wheel ASM
31:1	99-2336	1	Tire
31:2	110-9086	1	Wheel ASM
31:2:2	106-8596	1	Valve-Tire
31:2:3	110513	2	Bearing-Wheel
31:2:4	127-6232	1	Spacer-Wheel

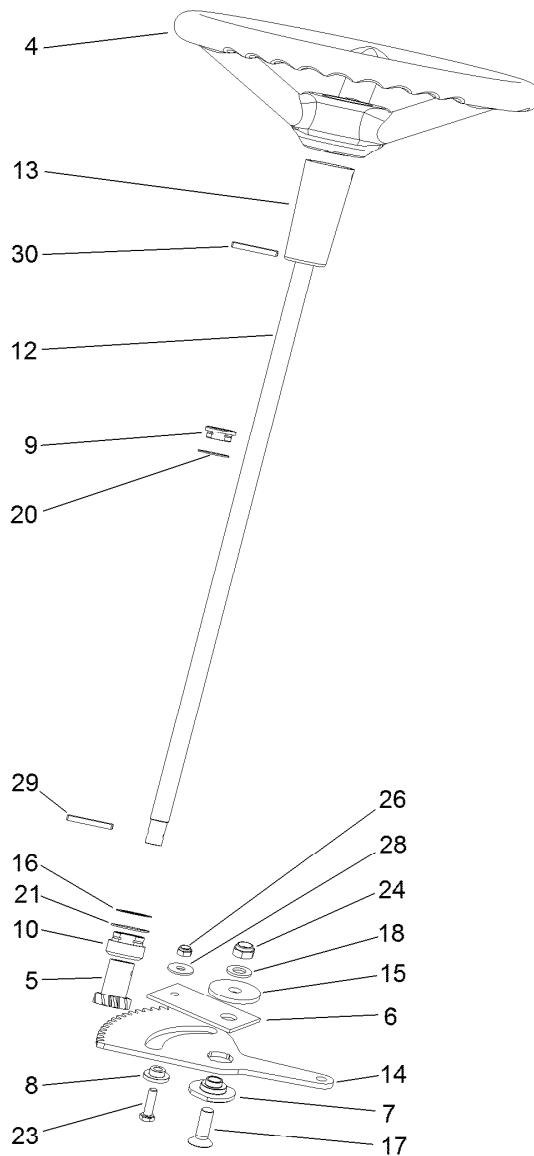

Steering Assembly

Ref.	Part Number	Qty.	Description
4	125-2237	1	Wheel-Steering
5	125-2231	1	Pinion-Steering
6	125-2225	1	Plate-Steering
7	125-2230	1	Pivot-Steering
8	125-2226	1	Bushing-Sector
9	125-2224	2	Bearing
10	125-2227	1	Bushing-Pinion
12	125-2228	1	Shaft-Steering
13	125-2238	1	Cover
14	119-5374	1	Gear-Sector
15	108-8892	1	Washer

Ref.	Part Number	Qty.	Description
16	125-2235	1	Washer
17	125-2232	1	Screw
18	104-3124	1	Washer-Flat
20	125-2236	1	Ring-Locking
21	125-2234	1	Ring-Locking
23	33114-030	1	Screw-HH
24	33016-00	1	Nut-Hex
26	33024-00	1	Nut-Lock, NI
28	104-2946	1	Washer-Plain
29	125-2233	1	Pin-Spiral
30	119-5377	1	Pin-Spirol

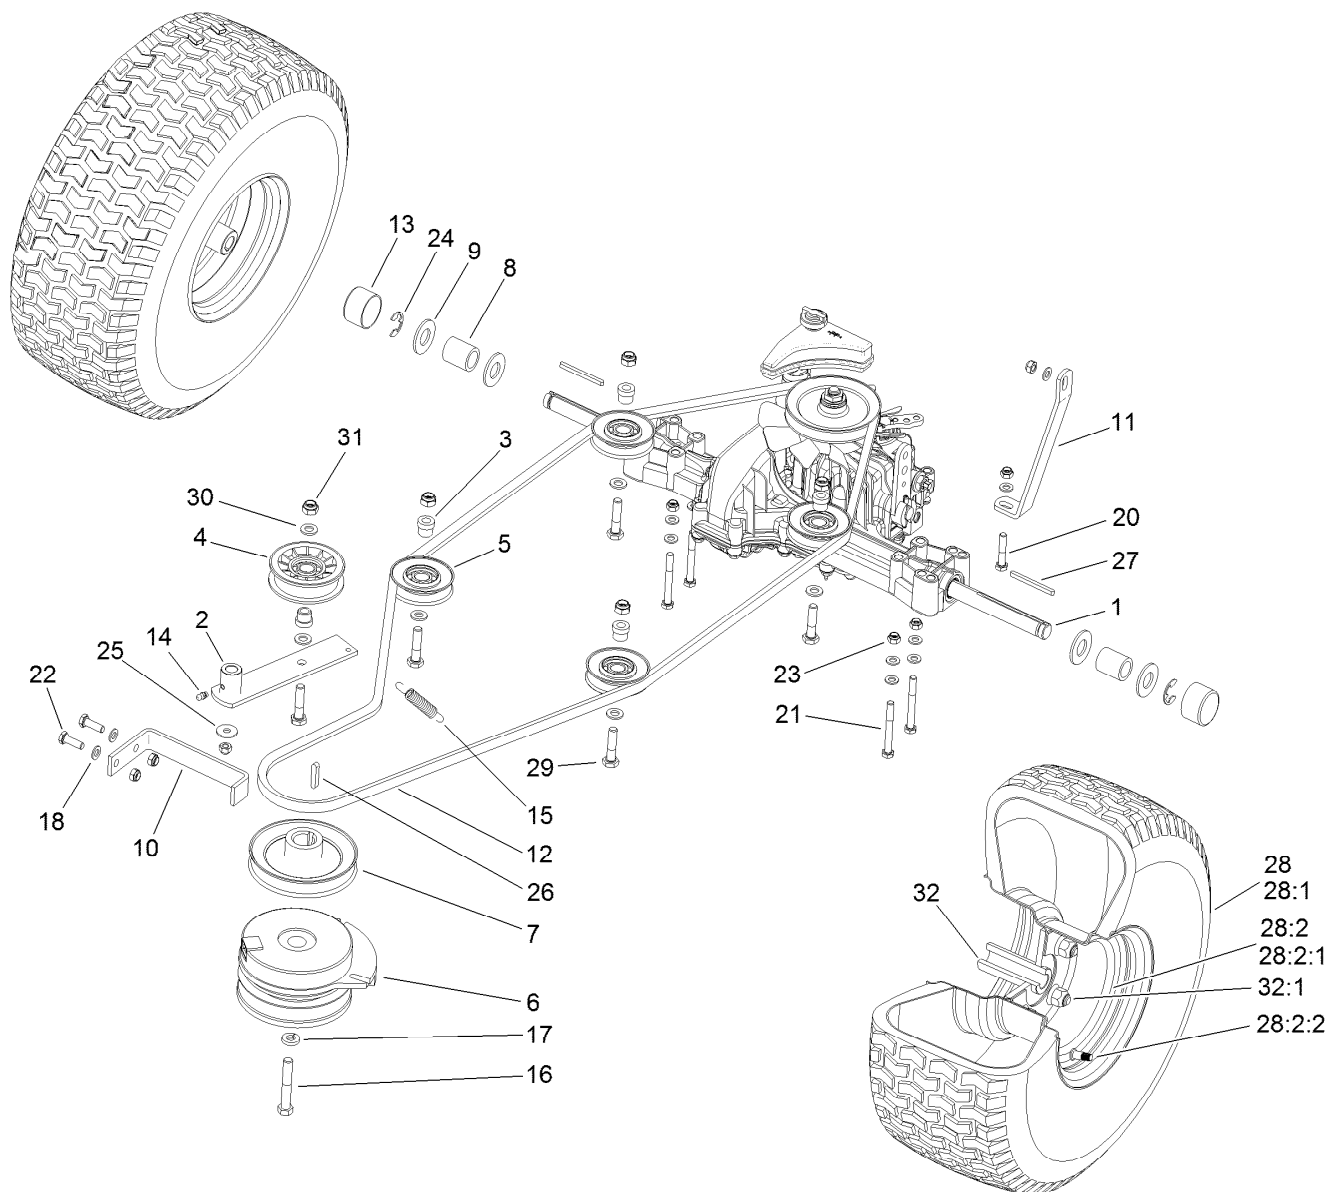


Transmission Drive Assembly

Ref.	Part Number	Qty.	Description
1	114-3155	1	Transmission
2	125-2239	1	Arm-Idler
3	104-2896	5	Bushing-Idler
4	104-2913	1	Pulley-Idler
5	104-2887	4	Pulley-Idler
6	119-5501	1	Clutch-Electric
7	104-2911	1	Pulley-Engine
8	104-2895	2	Spacer-Axle
9	120-8739	4	Washer
10	125-2240	1	Retainer
11	125-2241	1	Stabilizer
12	125-2243	1	V-Belt, Traction
13	104-2857	2	Cap-Hub
14	104-2904	1	Fitting-Grease
15	104-2897	1	Spring
16	3212-10	1	Screw-HH
17	93-9043	1	Washer-Spring, Belleville
18	106-4756	12	Washer-Plain


Ref.	Part Number	Qty.	Description
20	33114-040	1	Screw-HH
21	125-2242	4	Screw
22	33114-025	2	Screw-HH
23	33024-00	9	Nut-Lock, NI
24	104-2891	2	Clip-Spring
25	104-2946	1	Washer-Plain
26	104-2899	1	Key-Square
27	104-2892	2	Key-Square
28	107-8929	2	Tire And Wheel ASM
28:1	99-2994	1	Tire
28:2	107-8932	1	Wheel ASM
28:2:1		1	Rim ●
28:2:2	106-8596	1	Valve-Tire
29	33115-040	5	Screw-HH
30	33095-00	6	Washer-Flat
31	33023-00	5	Nut-Lock
32	108-8718	2	Hub-Wheel
32:1	108-8717	4	Nut-Lug

● Not serviced separately

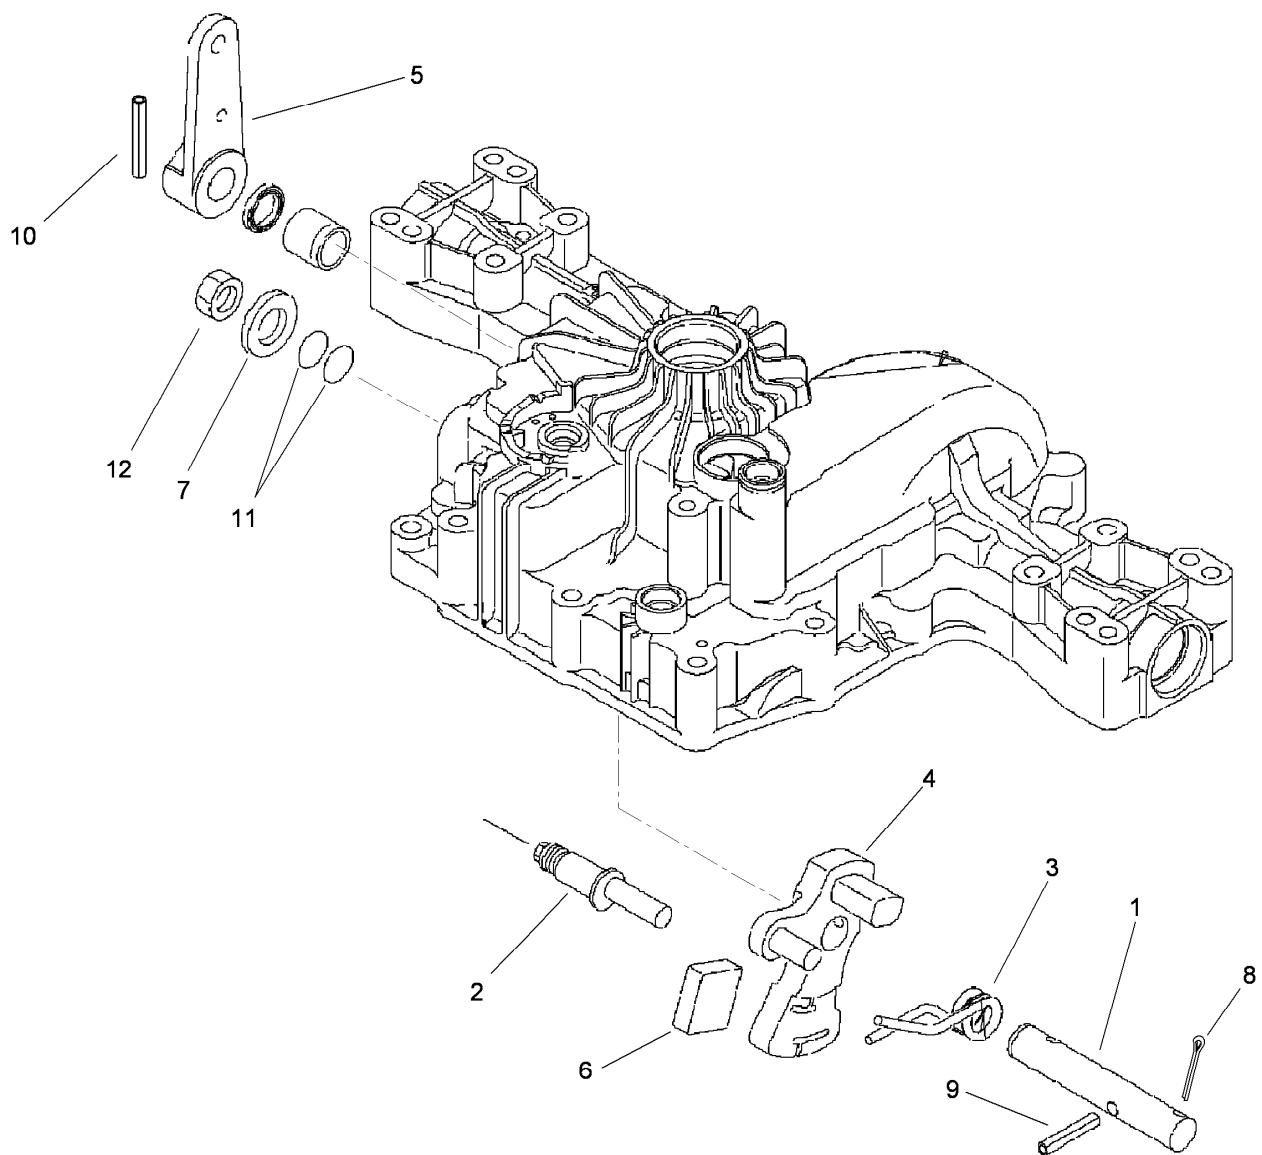


Control Shaft Assembly Transmission Assembly No. 114-3155

Ref.	Part Number	Qty.	Description
1	114-3181	1	Shaft-Control
2	104-3292	1	Fulcrum-Eccentricity
3	114-3217	1	Spring-Torsion
4	114-3180	1	Arm-Control
5	104-3342	1	Arm-Transaxle
6	104-3296	1	Plate-Jerky
7	93-0417	1	Washer
8	114-3182	1	Pin-Cotter
9	104-3297	1	Pin
10	93-0411	1	Pin-Roll
11	104-3298	2	Packing
12	93-0420	1	Nut

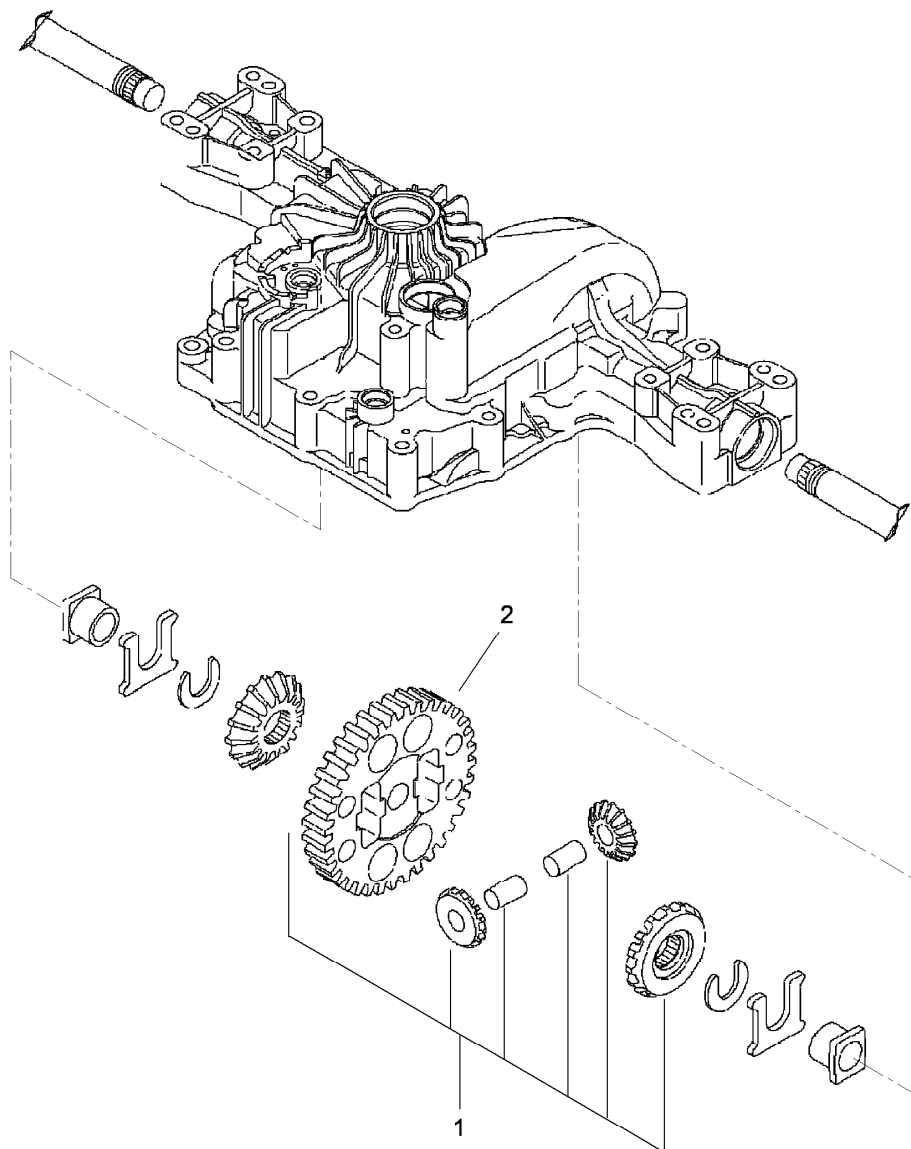


Differential Gear Assembly Transmission Assembly No. 114-3155

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	104-3299	1	Differential Gear Kit
2	104-3301	1	Gear-Final

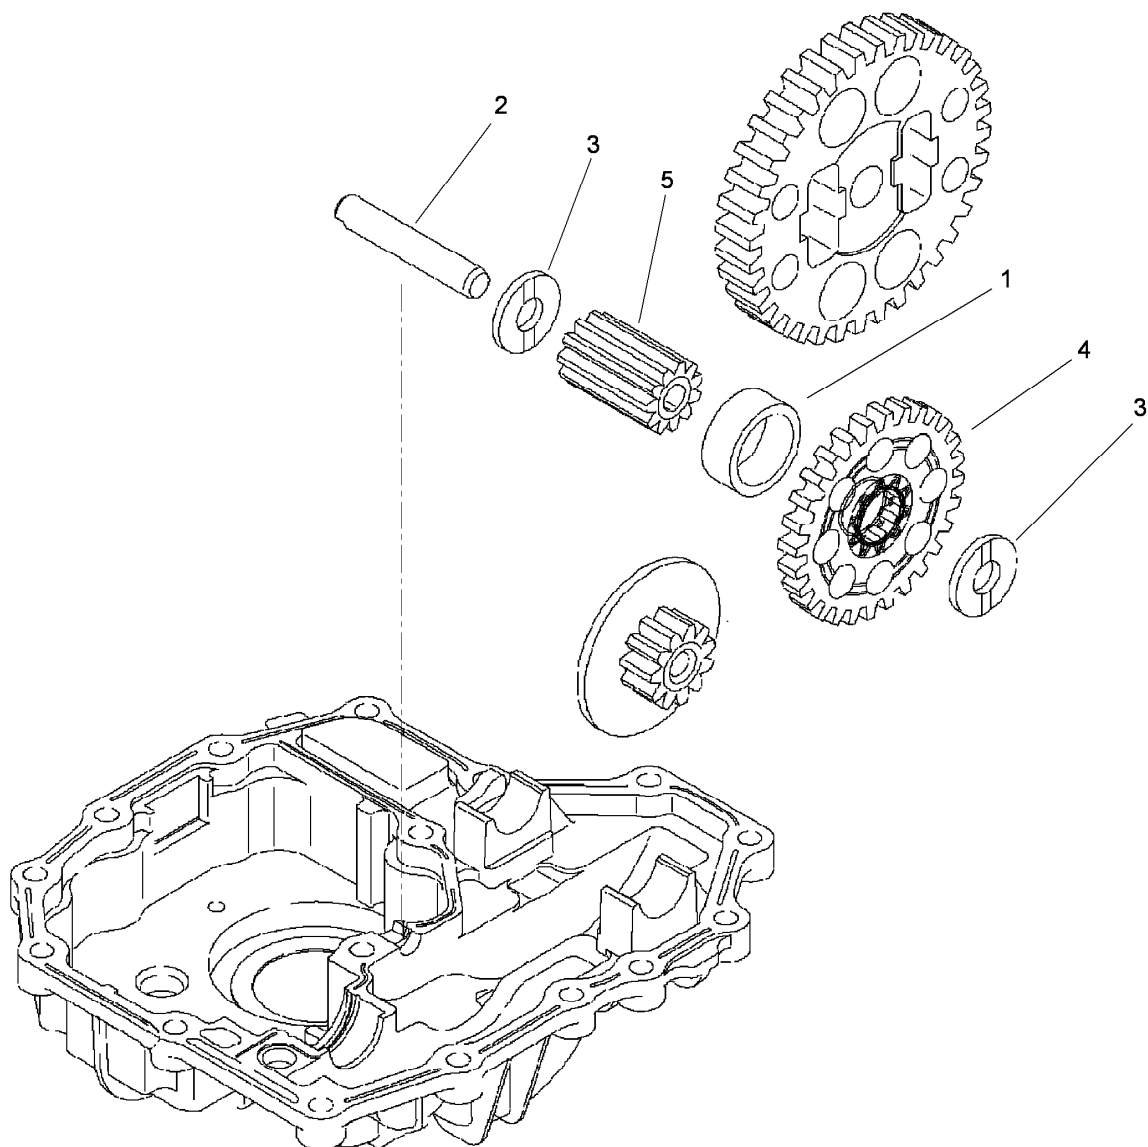


Final Pinion Assembly Transmission Assembly No. 114-3155

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	104-3302	1	Collar-Pinion, Final
2	104-3303	1	Shaft-Reduction
3	104-3304	2	Washer
4	104-3305	1	Gear-Reduction
5	104-3306	1	Pinion-Final

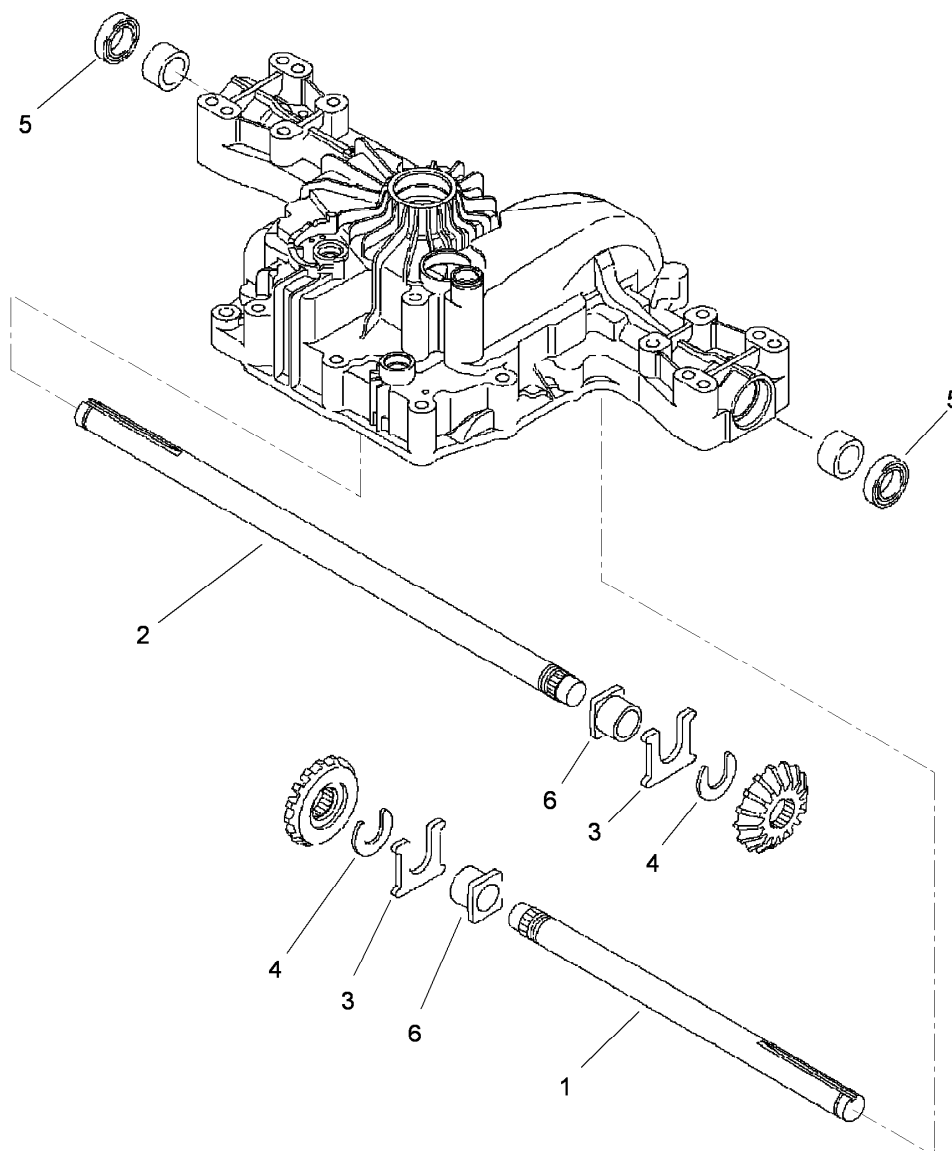


Axle Shaft Assembly Transmission Assembly No. 114-3155

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	104-3307	1	Shaft-Axle, RH
2	104-3308	1	Shaft-Axle, LH
3	104-3309	2	Washer-Thrust
4	104-3310	2	Ring
5	104-3311	2	Seal
6	104-3312	2	Bushing

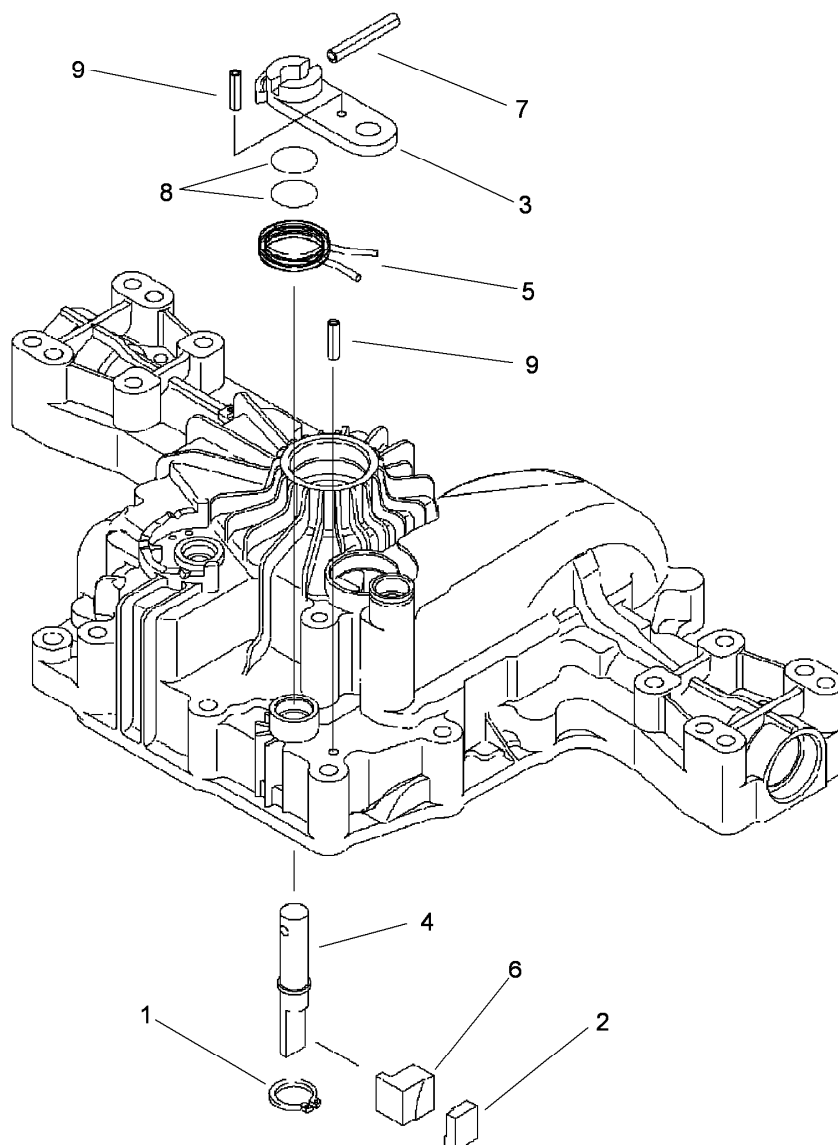


Brake Assembly Transmission Assembly No. 114-3155

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	104-3313	1	Ring
2	104-3314	1	Shoe-Brake
3	104-3315	1	Arm-Brake
4	104-3316	1	Shaft-Brake
5	104-3317	1	Spring-Return, Brake
6	104-3318	1	Actuator-Brake
7	92-0767	1	Pin
8	93-0418	2	O-Ring
9	104-3319	2	Pin

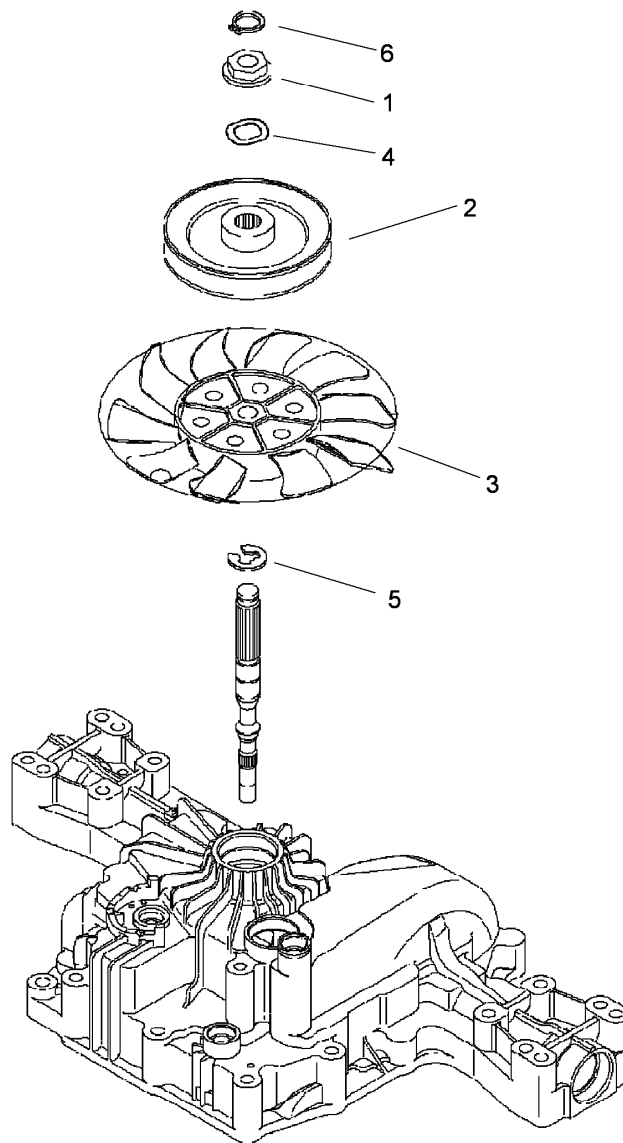


Fan Pulley Assembly Transmission Assembly No. 114-3155

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	104-3320	1	Collar-Spline
2	104-3197	1	Pulley-Transmission
3	104-3199	1	Fan-Transmission
4	104-3321	1	Washer-Lock
5	93-0387	1	E-Ring
6	104-3198	1	E-Ring

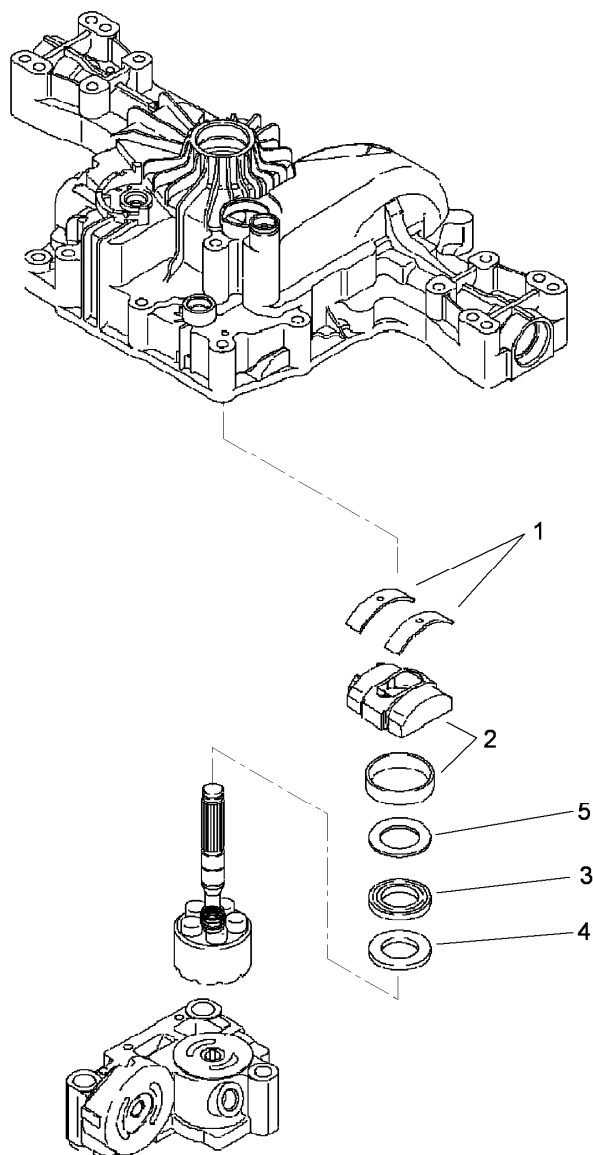


Range Shift Assembly Transmission Assembly No. 114-3155

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	104-3286	2	Metal-Thrust
2	104-3287	1	Plate-Swash
3	104-3288	1	Bearing
4	104-3289	1	Plate-Thrust, A
5	104-3290	1	Plate-Thrust, B

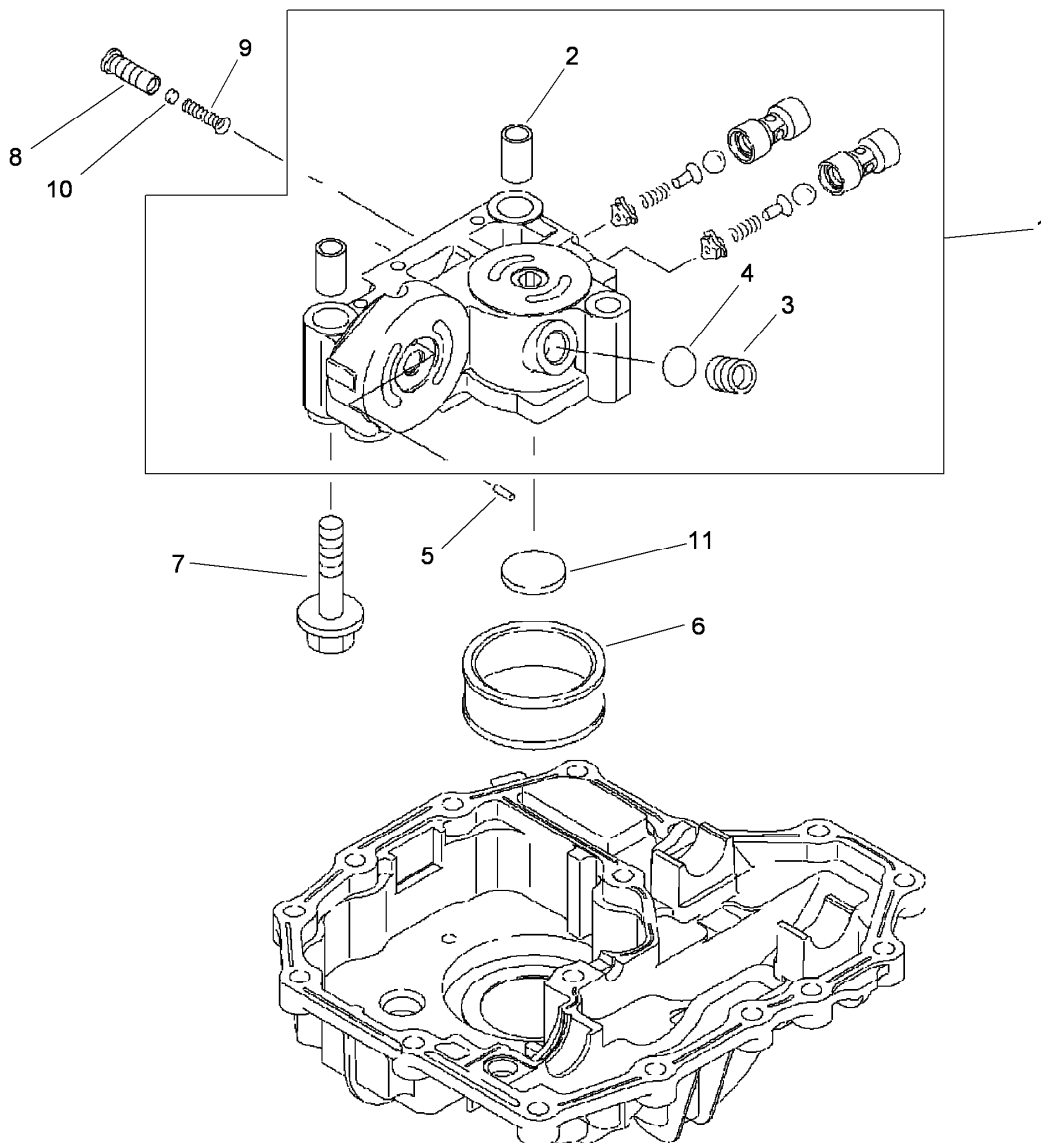


Center Case Assembly Transmission Assembly No. 114-3155

Ref.	Part Number	Qty.	Description
1	104-3267	1	Case-Center
2	104-3268	2	Pin-Knock
3	104-3269	1	Plug
4	93-0419	1	Packing
5	104-3270	1	Pin
6	104-3271	1	Filter
7	104-3272	3	Bolt
8	104-3273	2	Valve
9	104-3274	2	Spring
10	104-3275	2	Filter
11	104-3257	1	Magnet

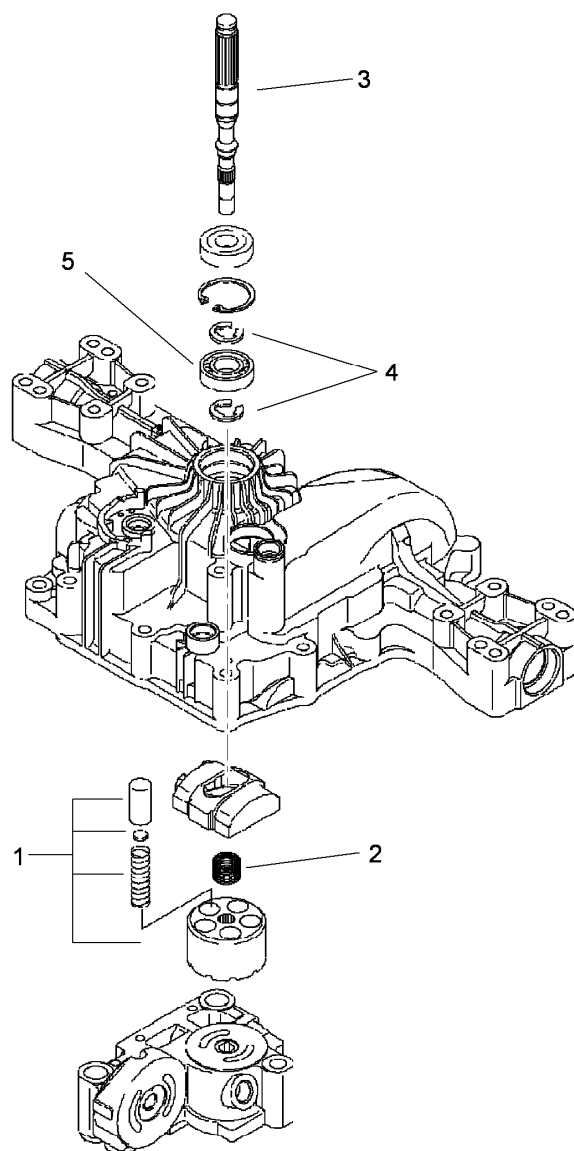


Pump Shaft Assembly Transmission Assembly No. 114-3155

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	104-3276	1	Block-Cylinder
2	104-3277	1	Spring-Pump
3	104-3278	1	Shaft-Pump
4	93-0387	2	E-Ring
5	93-0374	1	Bearing-Ball

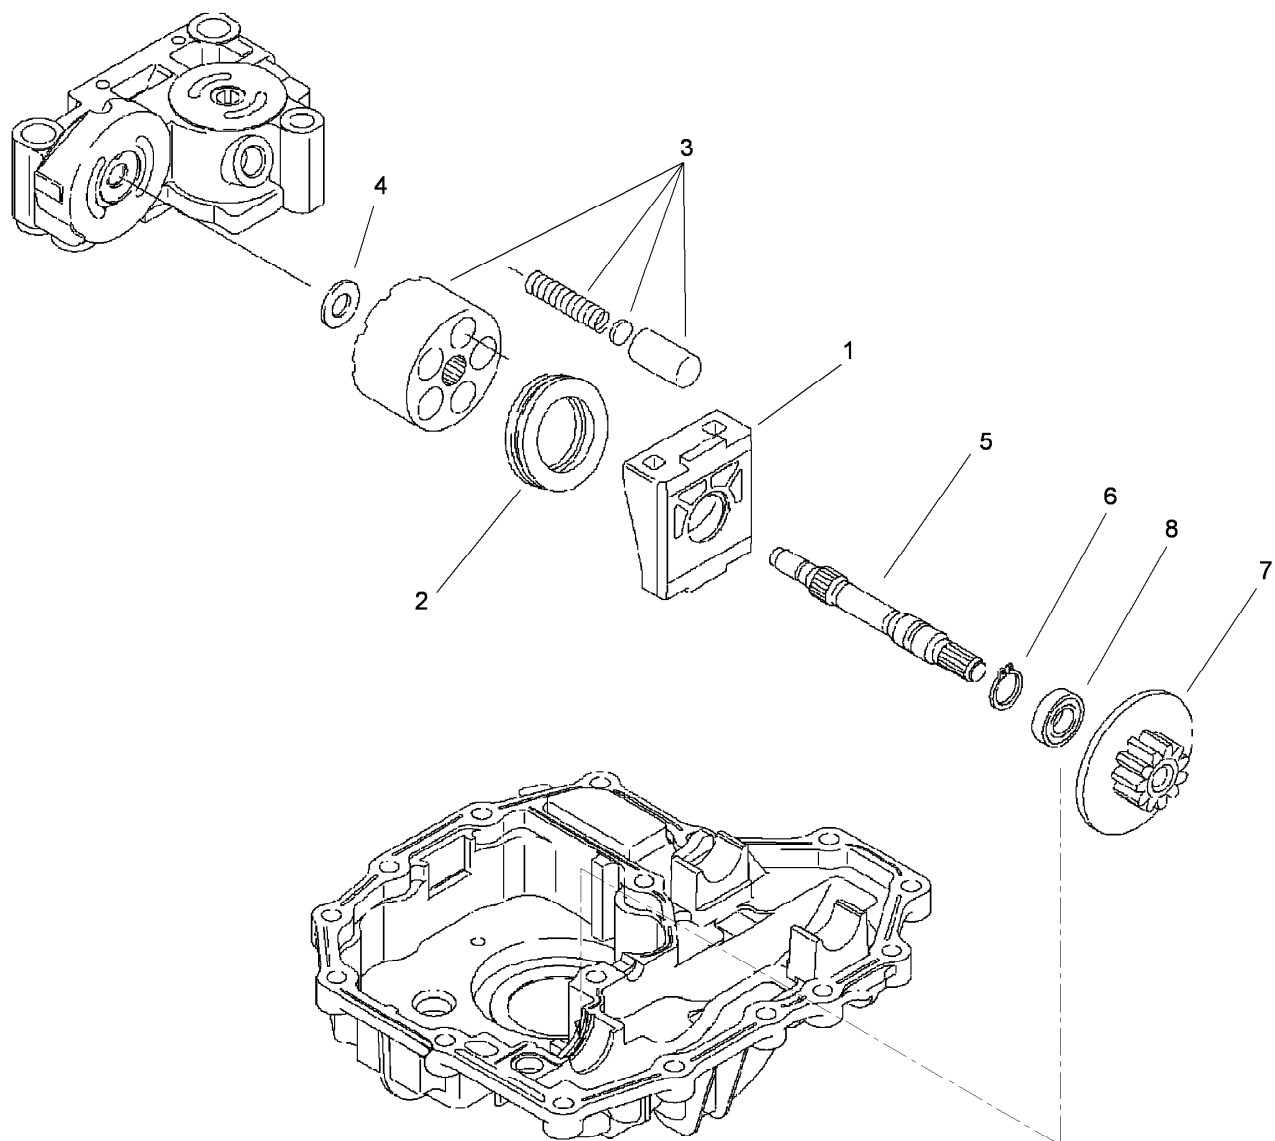

Motor Shaft Assembly Transmission Assembly No. 114-3155


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	104-3279	1	Housing
2	104-3280	1	Bearing
3	104-3281	1	Block-Cylinder
4	104-3282	1	Washer
5	104-3283	1	Shaft-Motor
6	93-0373	1	Ring-Snap
7	104-3284	1	Motor-Gear
8	104-3285	1	Bearing

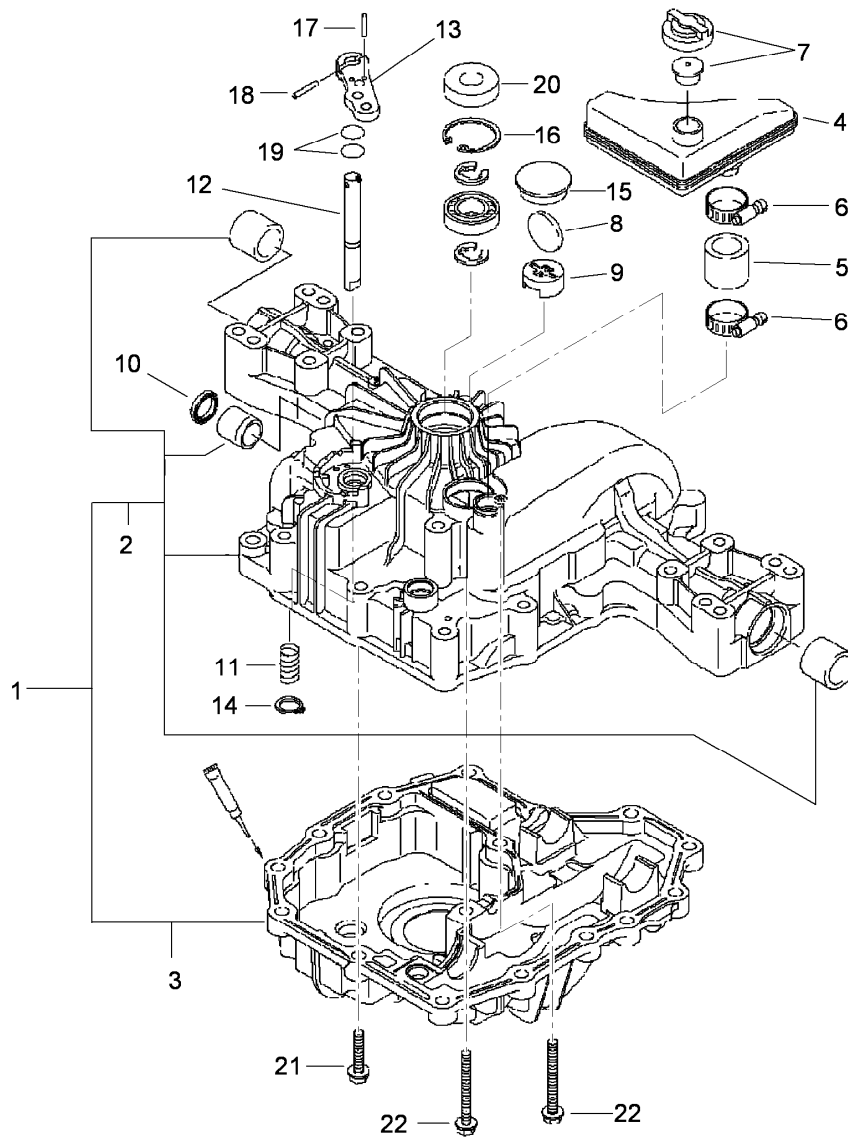

Transaxle Case Assembly Transmission Assembly No. 114-3155

Ref.	Part Number	Qty.	Description
1	104-3251	1	Transaxle Case Set
2	104-3252	1	Housing-Upper
3	104-3253	1	Housing-Lower
4	104-2914	1	Reservoir Tank ASM With Cap
5	104-3254	1	Tube
6	104-3255	2	Clamp-Miniature
7	104-3256	1	Valve-Vent, 15
8	104-3257	1	Magnet
9	104-3258	1	Holder-Magnet
10	104-3259	1	Seal-Oil
11	93-0396	1	Spring

Ref.	Part Number	Qty.	Description
12	104-3260	1	Shaft-Bypass
13	104-3261	1	Lever-Bypass
14	104-3262	1	Ring
15	104-3263	1	Plug-Bore
16	93-0360	1	Ring
17	104-3264	1	Pin
18	104-3265	1	Pin
19	93-0419	2	Packing
20	93-0361	1	Seal
21	93-0363	14	Screw-TAP
22	104-3266	2	Screw-Tap

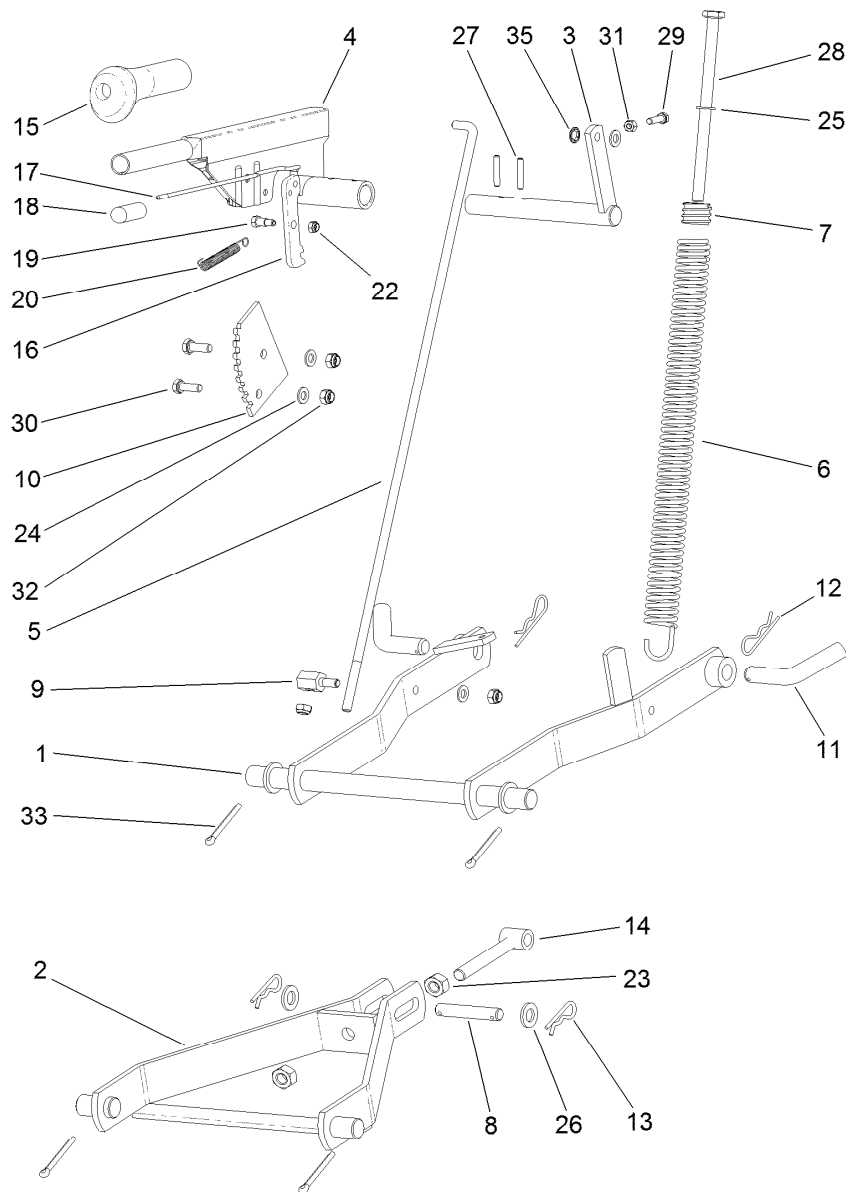


Mower Lift Assembly

Ref.	Part Number	Qty.	Description
1	125-2245	1	Suspension-Deck, Mower
2	125-2246	1	Suspension-Mower Deck, Front
3	125-2251	1	Shaft-Adjustment, Height
4	125-2249	1	Lever-Arm, Height Adjust
5	125-2252	1	Rod-Adjustment, Height
6	125-2254	1	Spring
7	125-2255	1	Nut-Spring
8	125-2248	1	Pin-Bent
9	119-5407	1	Trunnion
10	104-3133	1	Segment-Gear
11	120-8757	2	Pin-Bent
12	104-3144	2	Pin-Hair
13	104-3148	2	Pin-Hair
14	125-2247	1	Holder-Front
15	104-3129	1	Grip-Handle
16	104-3130	1	Ratchet-Plate, Pivot

Ref.	Part Number	Qty.	Description
17	104-3132	1	Rod-Connection
18	104-3131	1	Button-Plunger
19	125-2250	1	Screw-Lever
20	104-3134	1	Spring
22	33023-00	1	Nut-Lock
23	33016-00	2	Nut-Hex
24	106-4756	3	Washer-Plain
25	108-8709	1	Washer-Flat
26	104-3124	2	Washer-Flat
27	104-2994	2	Pin-Spring
28	125-2253	1	Screw M10X180
29	33113-016	1	Screw-HH
30	33114-020	2	Screw-HH
31	104-2991	1	Nut-Hex
32	33024-00	4	Nut-Lock, NI
33	125-2256	4	Pin-Cotter
35	121-0963	1	Washer

Cutting Pan and Drive System Assembly No. 125-2257

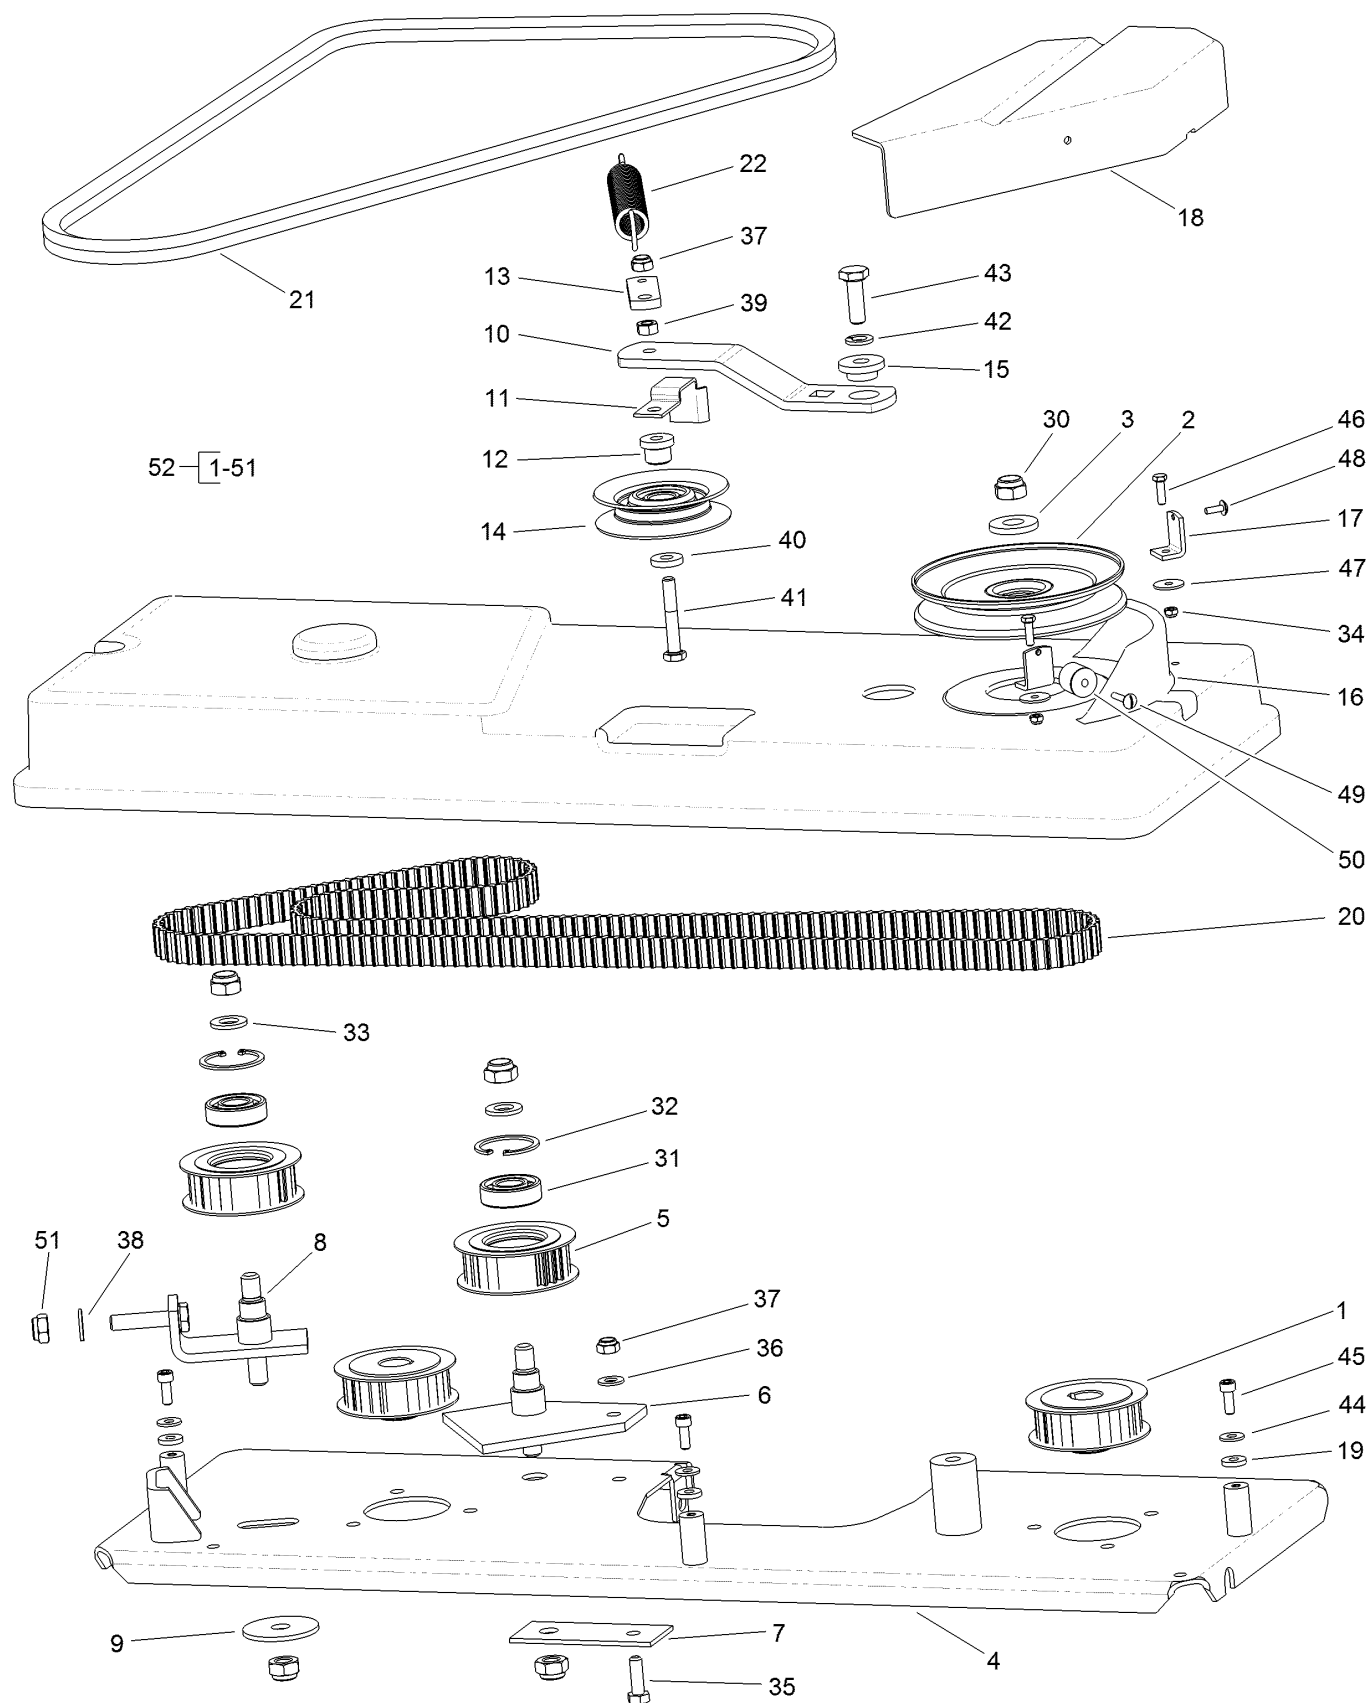


Cutting Pan and Drive System

Assembly No. 125-2257 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	104-3116	2	Pulley-Cog, Drive	31	100-1048	2	Bearing-Ball
2	125-2263	1	Pulley-Drive	32	104-3123	2	Ring-Locking
3	33099-00	2	Washer-Flat	33	104-3124	2	Washer-Flat
4	107-8996	1	Plate-Drive, Blade	34	87-5140	2	Nut-Lock
5	104-3121	2	Pulley-Cog	35	33114-025	1	Screw-HH
6	125-2264	1	Bracket-Idler	36	106-4756	1	Washer-Plain
7	104-3117	1	Plate-Anchor	37	33024-00	2	Nut-Lock, NI
8	125-2265	1	Bracket-Idler	38	33095-00	1	Washer-Flat
9	108-8892	1	Washer	39	33014-00	1	Nut-Hex
10	125-2266	1	Arm-Idler	40	106-8588	1	Washer-Flat
11	104-3105	1	Retainer-Belt	41	33114-050	1	Screw-HH
12	104-3104	1	Bushing	42	125-2269	1	Washer
13	125-2185	1	Lever-Engagement	43	125-2270	1	Screw
14	104-3103	1	Pulley-Idler	44	106-8568	3	Washer-Flat
15	125-2268	1	Shim-Arm, Idler	45	33113-016	3	Screw-HH
16	106-8589	1	Belt-Cover	46	107-8918	2	Screw
17	107-8940	2	Bracket	47	125-2277	2	Washer
18	107-8941	1	Guard-Belt	48	60-6910	1	Screw-HH
19	83-7420	3	Washer-Rubber	49	125-2184	1	Screw
20	106-8591	1	Belt-Cog	50	125-2183	1	Spacer
21	125-2182	1	Belt	51	33023-00	1	Nut-Lock
22	104-3101	1	Spring	52	125-2257	1	Cutting Unit ASM
30	48-9540	6	Nut-Lock, Hex NI				


Mower Housing Assembly

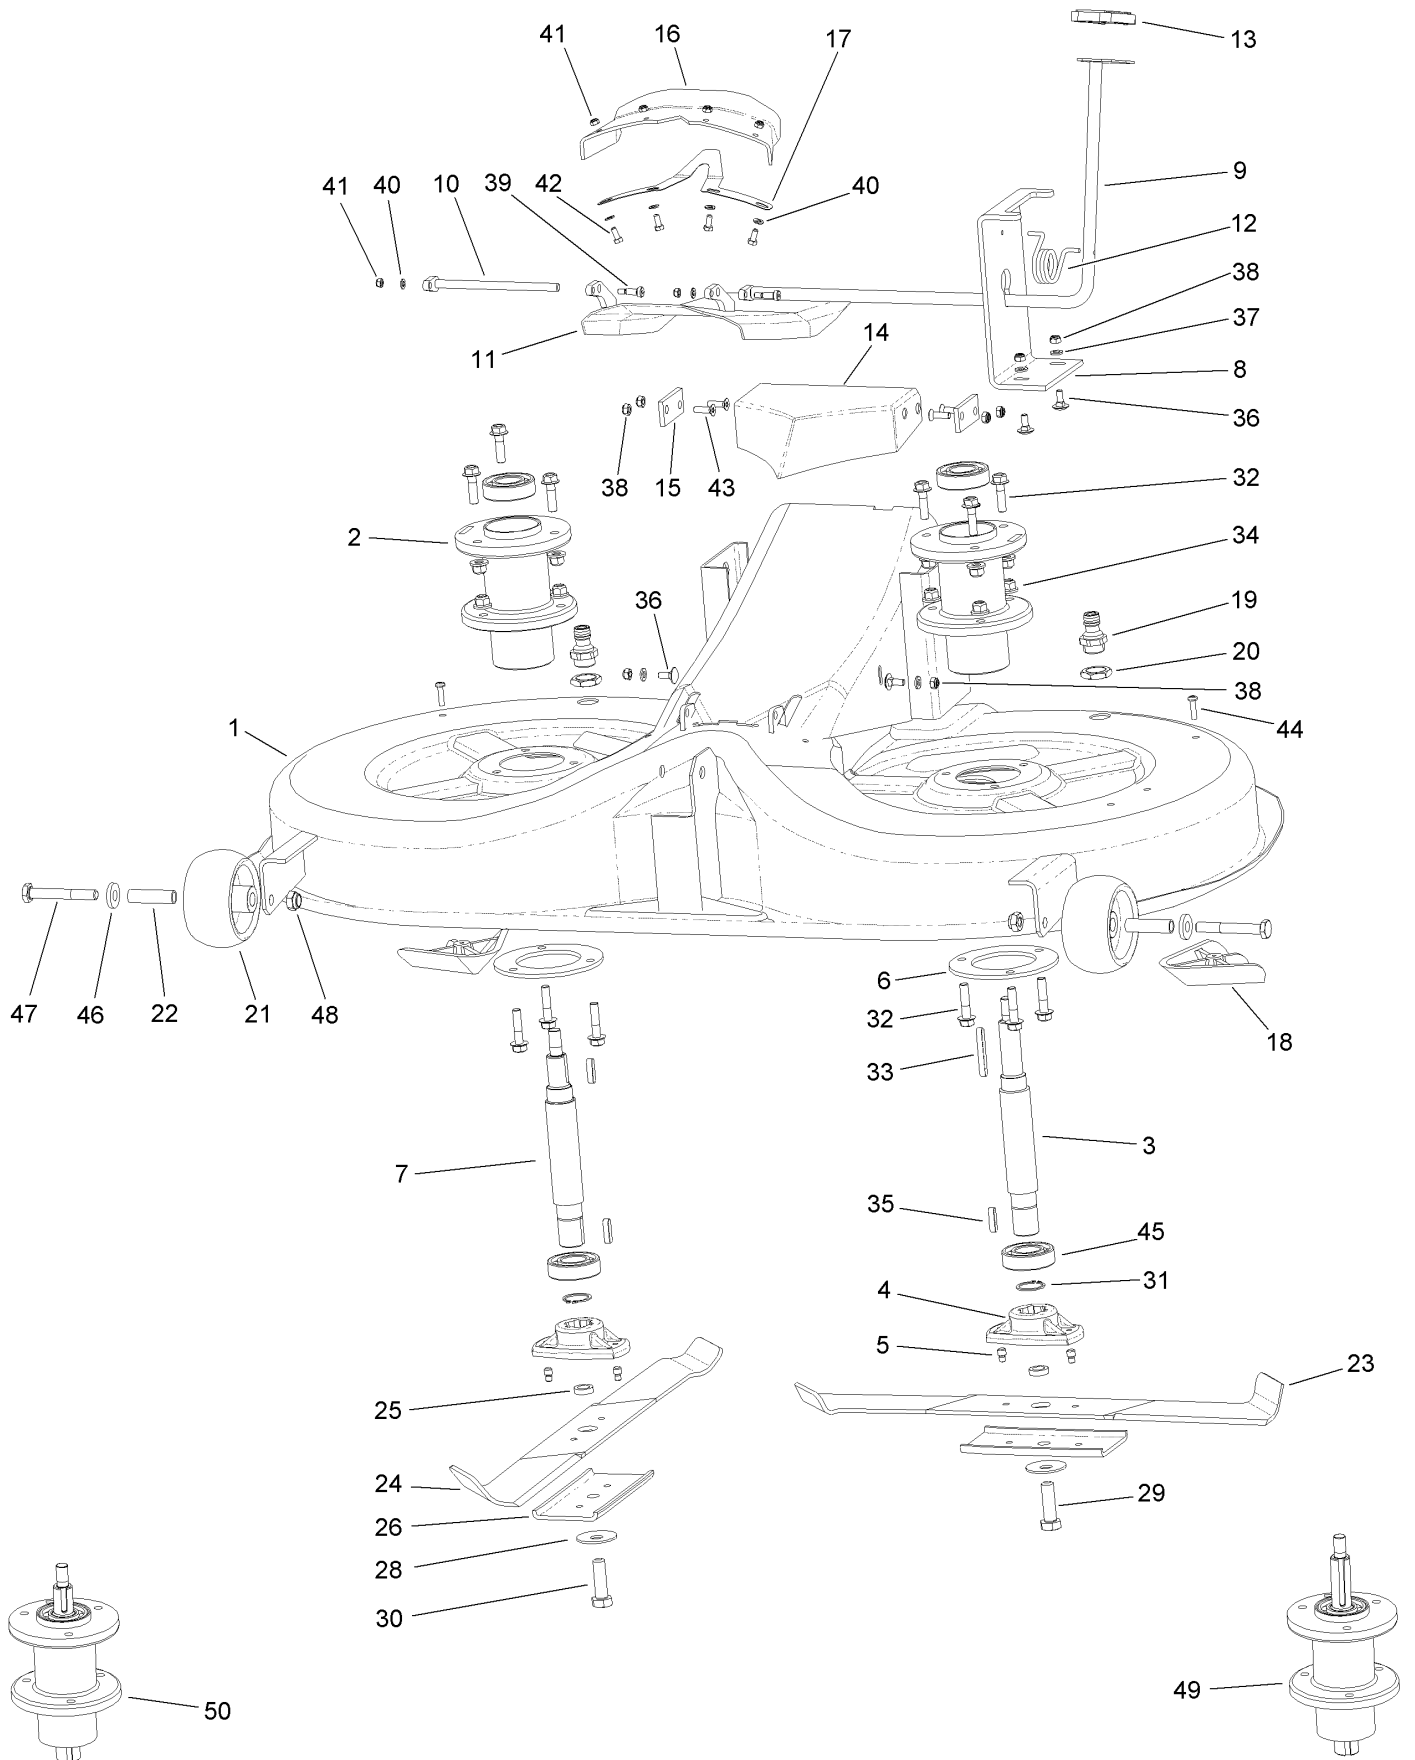

Mower Housing Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-2258	1	Deck ASM With Decals	26	106-6533	2	Stiffener-Blade
2	107-8992	2	Housing-Spindle	28	106-6532	2	Washer-Blade
3	125-2261	1	Shaft-Blade, Left	29	106-5797	1	Bolt-HH
4	106-4185	2	Adapter-Blade	30	106-5798	1	Bolt-Blade, HH
5	104-3093	4	Pin-Shear, Grooved	31	104-3095	2	Ring-Locking
6	104-3084	2	Support-Ring	32	104-3085	12	Bolt-HHF
7	106-8566	1	Shaft-Blade, Right	33	125-2262	1	Key
8	125-2271	1	Holder	34	104-3082	12	Nut-Lock, HHF
9	125-2272	1	Lever-Foot	35	104-3097	3	Key-Square
10	106-8585	1	Rod-Door, Mulch	36	33123-016	4	Screw-CARR
11	107-8968	1	Door-Mulch	37	104-3193	4	Washer
12	125-2273	1	Spring	38	33023-00	8	Nut-Lock
13	104-3018	1	Pad-Pedal	39	87-5150	2	Bolt
14	106-8573	1	Baffle-Center	40	52-6430	6	Washer
15	106-8572	2	Plate-Baffle, Center	41	87-5140	6	Nut-Lock
16	106-8586	1	Gasket-Door, Mulch	42	119-5477	4	Screw
17	106-8567	1	Guide	43	106-8574	4	Screw
18	106-8587	2	Kicker	44	104-1451	2	Screw-TAP, PPH
19	125-2274	2	Connection	45	116-0720	4	Bearing-Ball
20	125-2275	2	Nut	46	108-8709	2	Washer-Flat
21	125-2186	2	Wheel-Gauge	47	33115-070	2	Screw-HH
22	120-8738	2	Spacer	48	33023-00	2	Nut-Lock
23	106-8558	1	Blade-LH	49	125-2259	1	LH Spindle Housing ASM
24	106-8557	1	Blade-RH	50	125-2260	1	RH Spindle Housing ASM
25	106-6530	2	Spacer				


Battery and Electrical Assembly

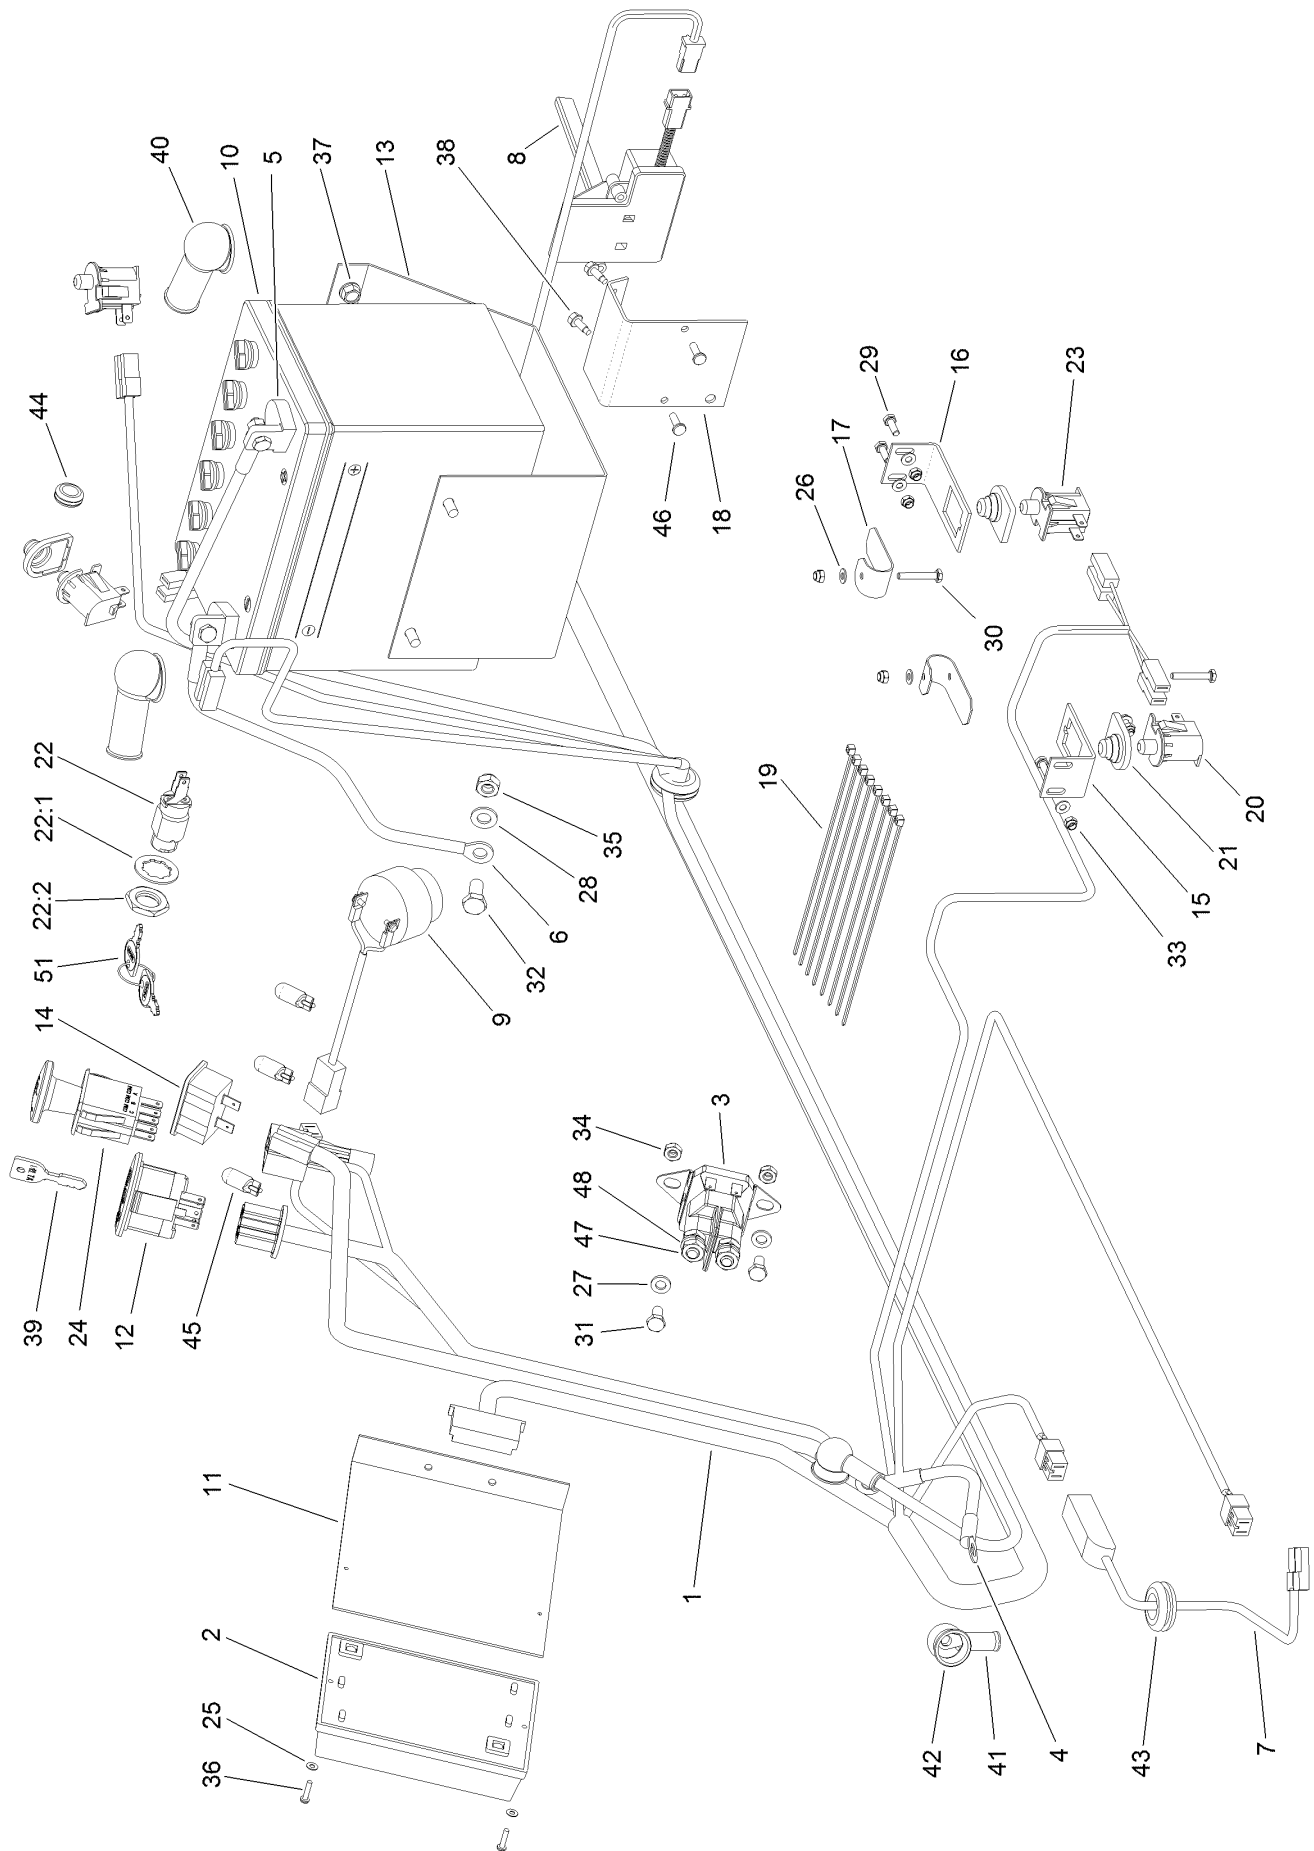

Battery and Electrical Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-2289	1	Harness-Wiring	25	119-5437	2	Washer
2	125-2294	1	Module-Control	26	104-2984	6	Washer
3	125-2297	1	Solenoid	27	104-3193	2	Washer
4	125-2300	1	Cable-Starter	28	33094-00	1	Washer-Plain
5	120-8729	1	Cable-Battery, Positive	29	125-2304	4	Screw
6	119-5417	1	Cable-Battery, Negative	30	104-3009	2	Screw-Hex
7	119-5430	1	Harness-Clutch	31	33113-012	2	Screw-HH
8	104-3074	1	Overload Switch ASM	32	33114-016	1	Screw-HH
9	119-5511	1	Buzzer	33	104-2985	6	Nut-Hex
10	104-3152	1	Battery-12V	34	33023-00	2	Nut-Lock
11	125-2293	1	Holder-Module	35	33024-00	1	Nut-Lock, NI
12	125-2295	1	Switch-Ignition	36	119-5436	2	Screw
13	125-2290	1	Holder-Battery	37	106-5763	4	Screw
14	125-2296	1	Hourmeter	38	104-2977	2	Screw-TAP
15	125-2291	1	Holder	39	119-5510	2	Key-Ignition
16	125-2292	1	Holder	40	104-3154	2	Boot-Rubber
17	125-2305	2	Lever-Spring	41	104-3187	2	Boot-Rubber
18	119-5431	1	Bracket-Switch	42	32128-32	1	Nut-HHF
19	3334-945	8	Tie-Cable	43	125-2302	3	Bushing
20	104-3179	3	Switch-Delta	44	125-2303	1	Bushing
21	104-3178	3	Cover-Protective	45	104-3176	4	Bulb
22	46-5780	1	Starter Switch ASM	46	104-3349	2	Screw
22:1	3254-5	1	Washer-Tooth, Internal	47	32128-32	4	Nut-HHF
22:2	218-461	1	Nut-HH	48	104-2927	2	Washer-Spring
23	125-2298	1	Switch-Delta	51	62-7770	2	Key-Ignition
24	93-9998	1	Switch-PTO				


Body and Hood Assembly

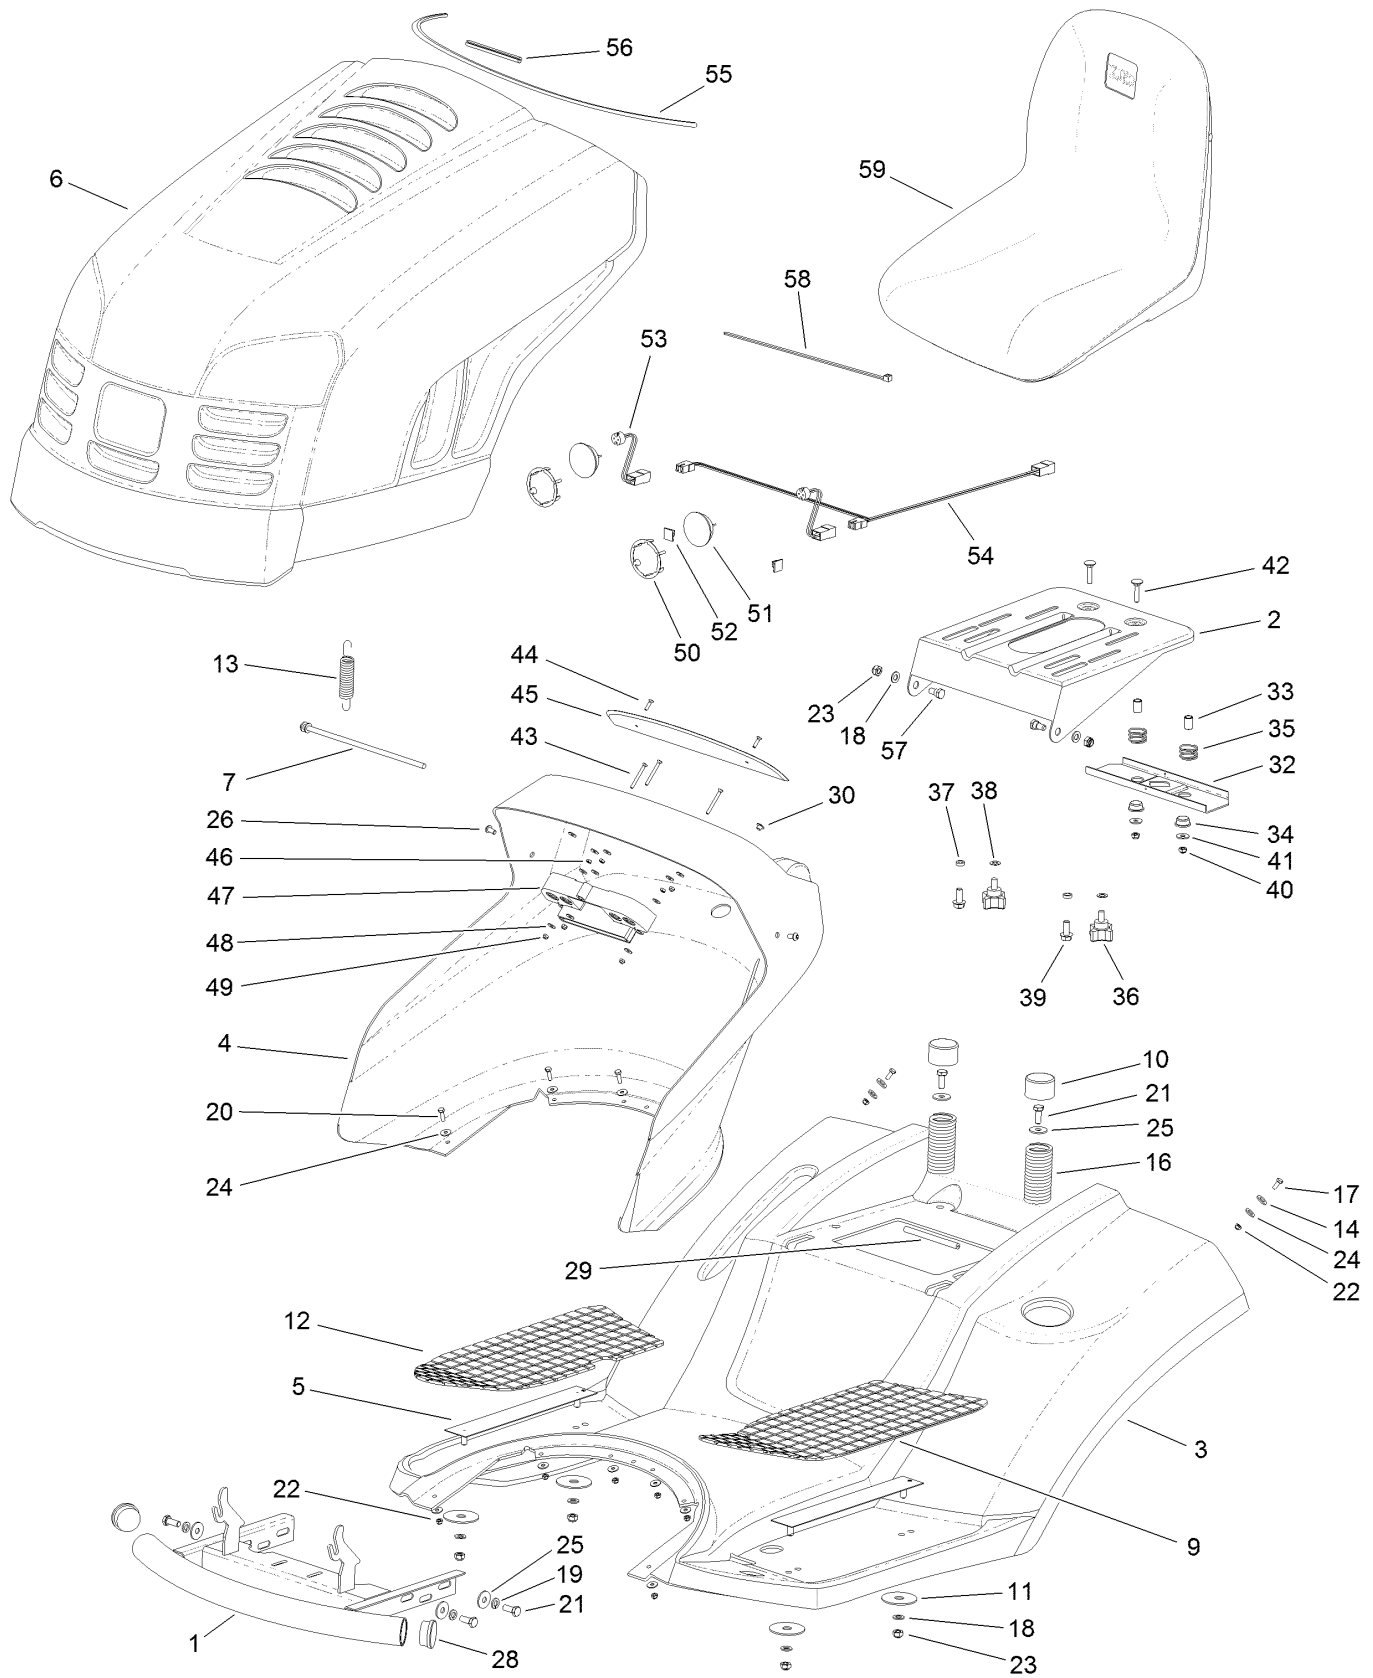

Body and Hood Assembly (continued)


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	111-9635	1	Bumper	33	104-2933	2	Spacer-Split
2	119-5513	1	Bracket-Support, Seat	34	104-2935	2	Bushing
3	125-2306	1	Fender-Rear	35	119-5514	2	Seat-Spring
4	125-2307	1	Panel-Dash	36	119-5456	2	Knob-Adjust
5	125-2321	2	Holder	37	119-5457	2	Spacer
6	125-2317	1	Hood ASM	38	104-2936	2	Washer-Spring
7	125-2324	1	Holder-Spring	39	104-2939	2	Screw-Support, Seat
9	125-2322	1	Mat-Foot, LH	40	33023-00	2	Nut-Lock
10	104-2857	2	Cap-Hub	41	104-2931	2	Washer-Flat
11	119-5500	4	Washer-Rubber	42	33123-030	2	Screw-CARR
12	120-8745	1	Mat-Foot, RH	43	104-3191	3	Screw
13	104-2975	1	Spring-Hood	44	125-2310	2	Screw
14	104-2952	2	Washer-Rubber	45	125-2308	1	Lens-Dash
16	104-2945	2	Spring-Seat	46	125-2309	3	Nut
17	104-2980	2	Screw	47	92-6732	1	Housing-Light, Indicator
18	33094-00	6	Washer-Plain	48	104-3175	11	Washer
19	104-2927	4	Washer-Spring	49	104-2985	5	Nut-Hex
20	107-8918	6	Screw	50	125-2319	2	Socket-Lamp
21	33114-020	6	Screw-HH	51	125-2318	2	Bulb-Light
22	87-5140	8	Nut-Lock	52	104-3167	2	Clip-Nylon
23	33024-00	6	Nut-Lock, NI	53	125-2314	2	Harness-Wiring, Light Bulb
24	104-2943	14	Washer-Flat	54	125-2315	1	Harness-Wiring, Light
25	104-2946	6	Washer-Plain	55	125-2194	1	Trim-Rubber, Hood
26	33113-012	2	Screw-HH	56	125-2312	1	Gasket-Foam
28	111-9634	2	Cover	57	104-2939	2	Screw-Support, Seat
29	125-2313	1	Trim-Rubber	58	3334-945	1	Tie-Cable
30	125-2187	1	Cover	59	107-2213	1	Seat ASM
32	104-2934	1	Bracket				

Grass Collector Assembly No. 125-2325

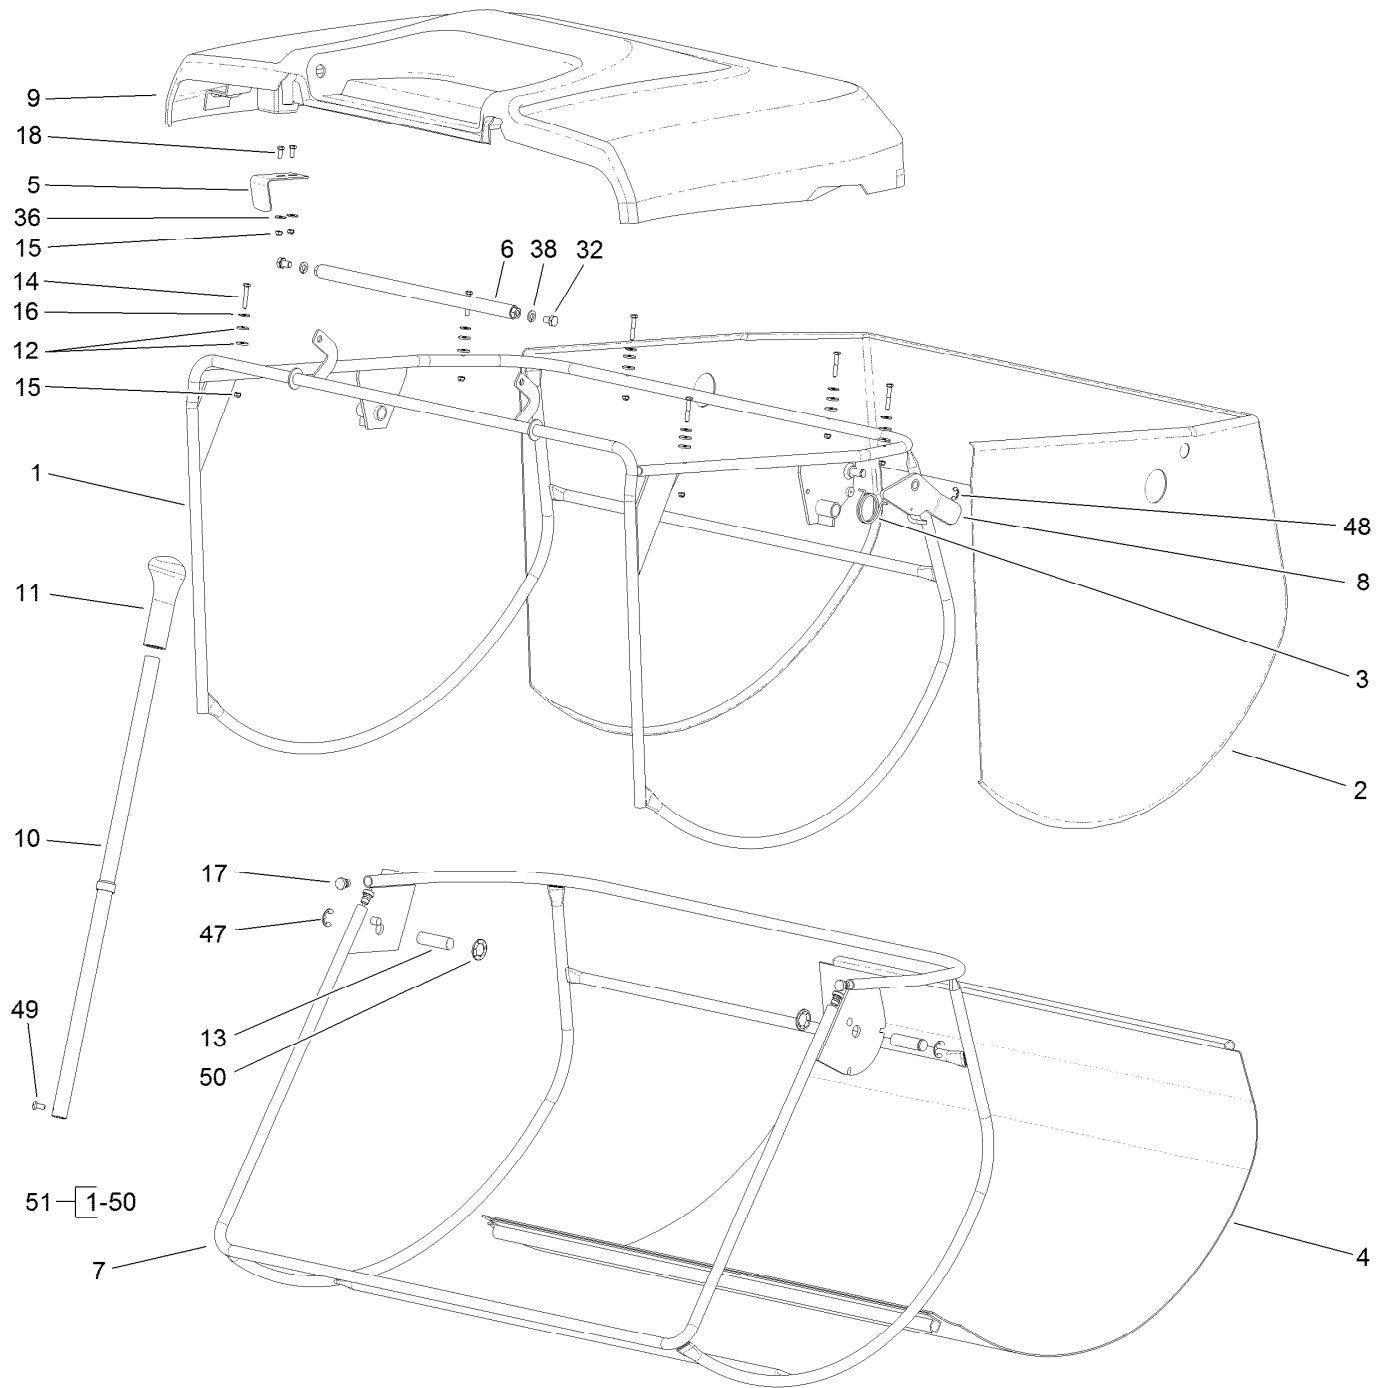


Grass Collector Assembly No. 125-2325 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-2326	1	Frame ASM	14	106-5759	6	Screw
2	125-2328	1	Bag-Grass, Upper	15	87-5140	8	Nut-Lock
3	125-2331	1	Spring	16	104-2952	12	Washer-Rubber
4	125-2332	1	Bag-Grass, Lower	17	119-5475	4	Cap
5	125-2334	1	Spring-Coil, Interlock Switch	18	107-8918	2	Screw
6	125-2327	1	Handle-Lift	32	68-9410	2	Screw-HHF
7	125-2329	1	Lower Frame ASM	36	52-6430	2	Washer
8	125-2330	1	Lever-Arrestment	38	104-2927	2	Washer-Spring
9	125-2333	1	Cover-Collector	47	104-3015	2	E-Clip
10	125-2335	1	Lever-Dump	48	106-8592	1	Ring-Locking
11	120-8737	1	Handle-Mulching	49	106-5763	1	Screw
12	104-2943	6	Washer-Flat	50	119-5478	1	Ring-Lock
13	119-5469	1	Pin	51	125-2325	1	Grass Collector ASM

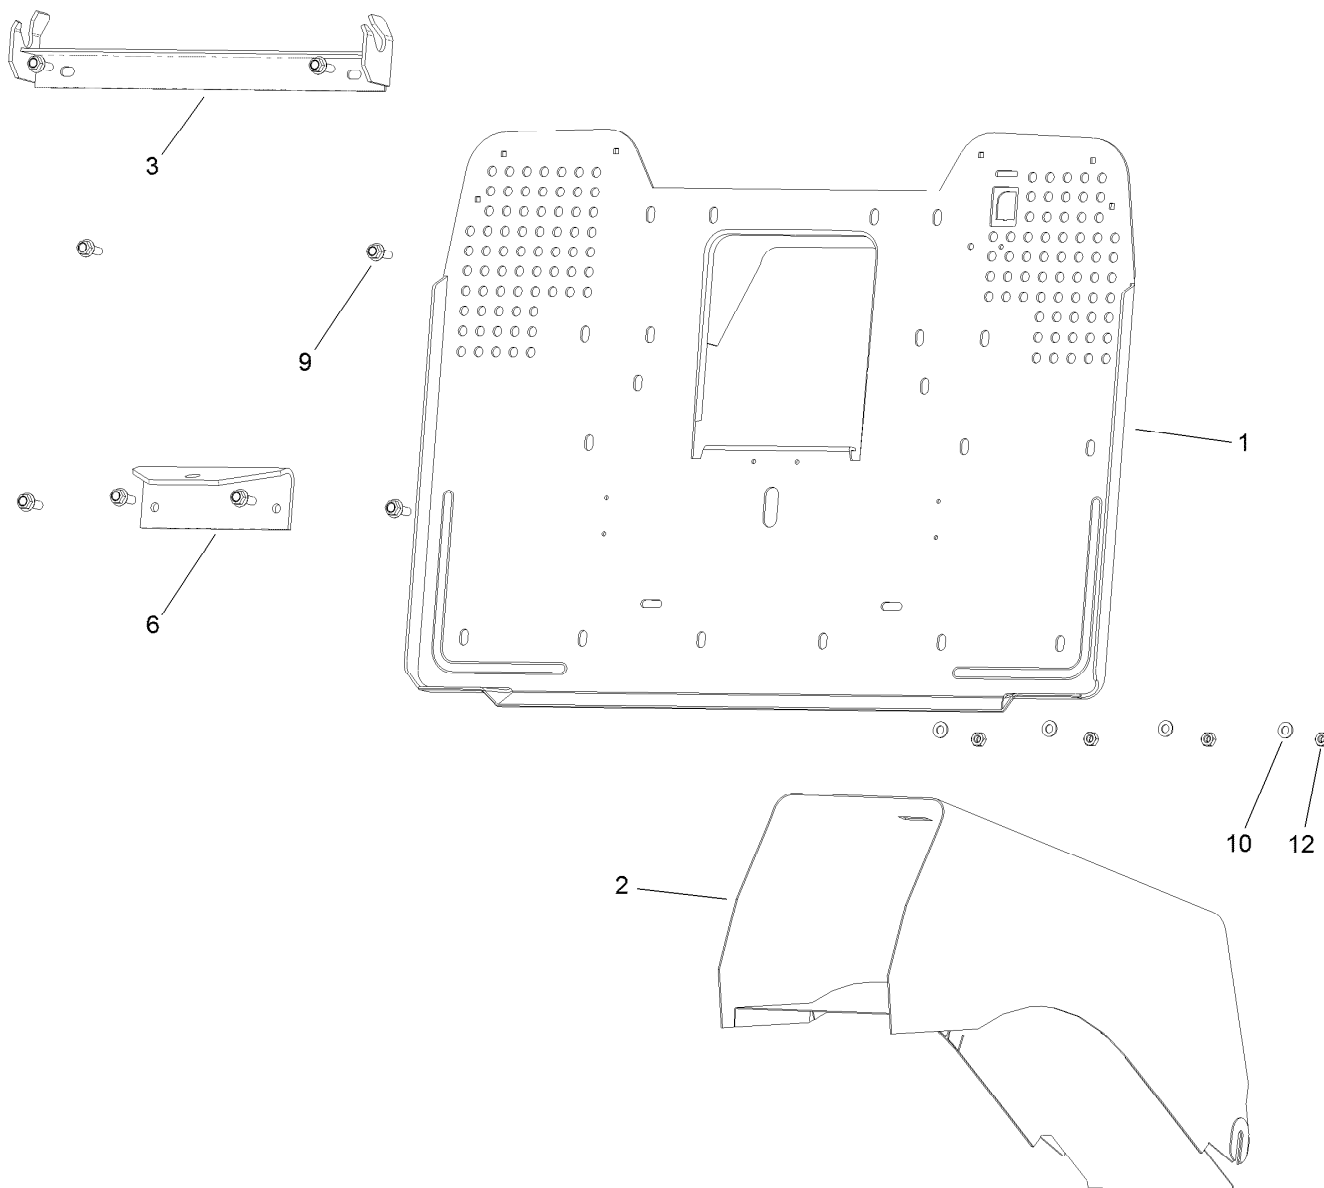

Tunnel and Collector Plate Assembly


Ref.	Part Number	Qty.	Description
1	125-2336	1	Collector Plate ASM
2	120-8767	1	Tunnel
3	125-2337	1	Support-Collector
6	119-5516	1	Hitch-Tow
9	119-5483	8	Screw
10	33094-00	4	Washer-Plain
12	33024-00	4	Nut-Lock, NI

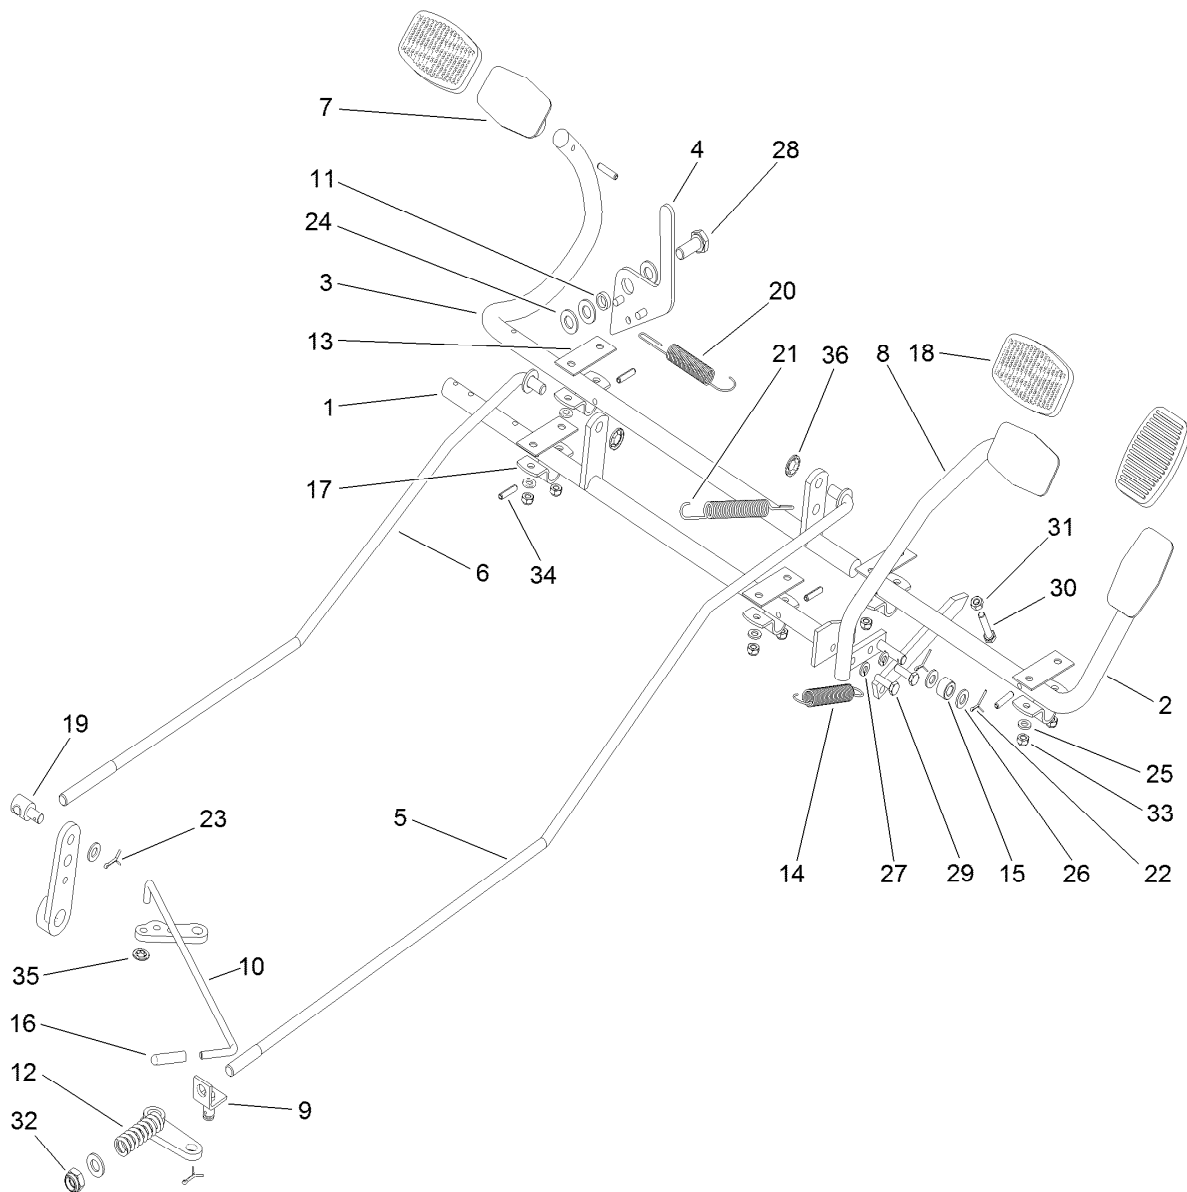

Operation - Travel Pedals and Brake Assembly


Ref.	Part Number	Qty.	Description
1	125-2278	1	Shaft-Diagonal
2	125-2279	1	Pedal-Travel, Rear
3	125-2280	1	Pedal-Brake
4	125-2282	1	Lever-Brake, Hand
5	125-2287	1	Rod-Connecting, Brake
6	125-2286	1	Rod-Tie
7	120-8763	1	Pedal
8	120-8723	1	Pedal-Travel, Forward
9	104-3011	1	Bracket-Rod, Brake
10	125-2284	1	Rod-Lever, Bypass
11	125-2283	1	Spacer
12	125-2288	1	Spring-Brake
13	119-2434	5	Spacer
14	119-2436	1	Spring
15	106-8581	1	Roller
16	108-8708	1	Cap-Bypass Lever, Hydro
17	119-2433	5	Clamp
18	104-3018	3	Pad-Pedal

Ref.	Part Number	Qty.	Description
19	104-3029	1	Pin
20	104-3005	1	Spring-Brake, Hand
21	104-3001	1	Spring
22	104-3151	2	Pin-Cotter
23	104-3027	2	Pin-Cotter
24	33095-00	4	Washer-Flat
25	104-3193	10	Washer
26	106-4756	3	Washer-Plain
27	104-3186	2	Washer-Spring
28	104-3041	1	Screw-Hex
29	33113-016	2	Screw-HH
30	33113-030	1	Screw-HH
31	104-2991	1	Nut-Hex
32	33023-00	1	Nut-Lock
33	33023-00	10	Nut-Lock
34	104-3008	5	Pin-Spring
35	125-2285	1	Ring-Locking
36	125-2281	2	Ring-Locking

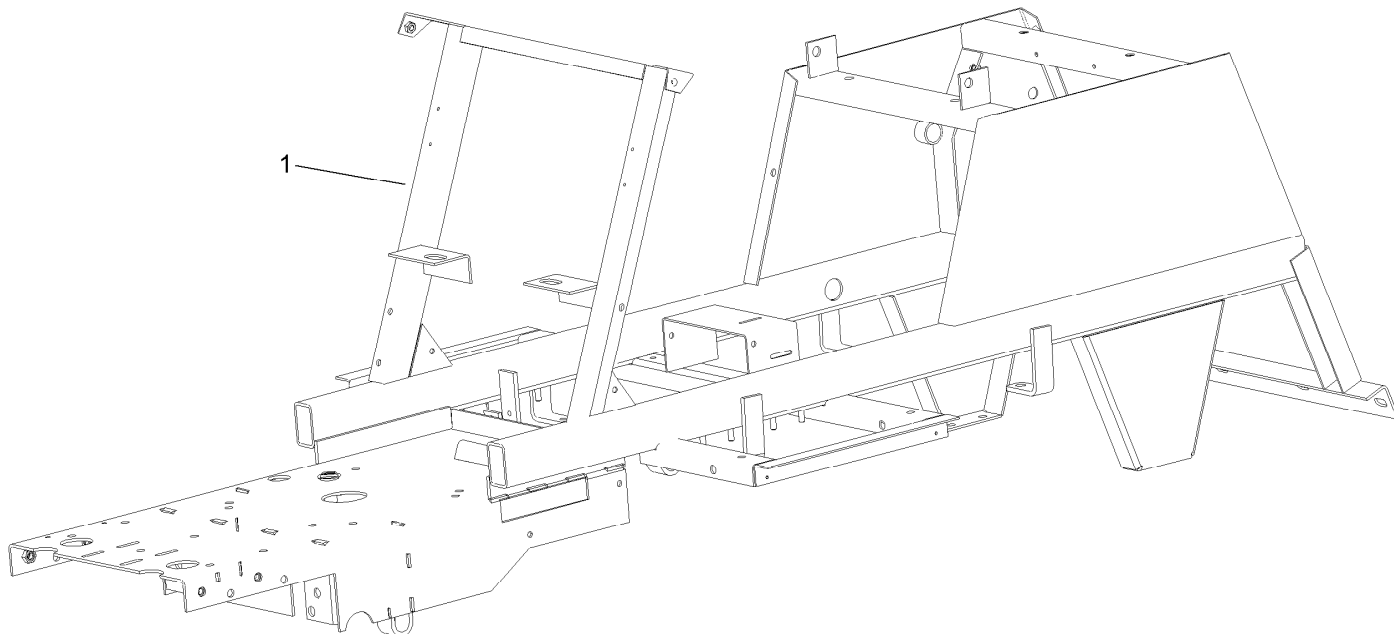

Frame Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-2200	1	Chassis-Frame

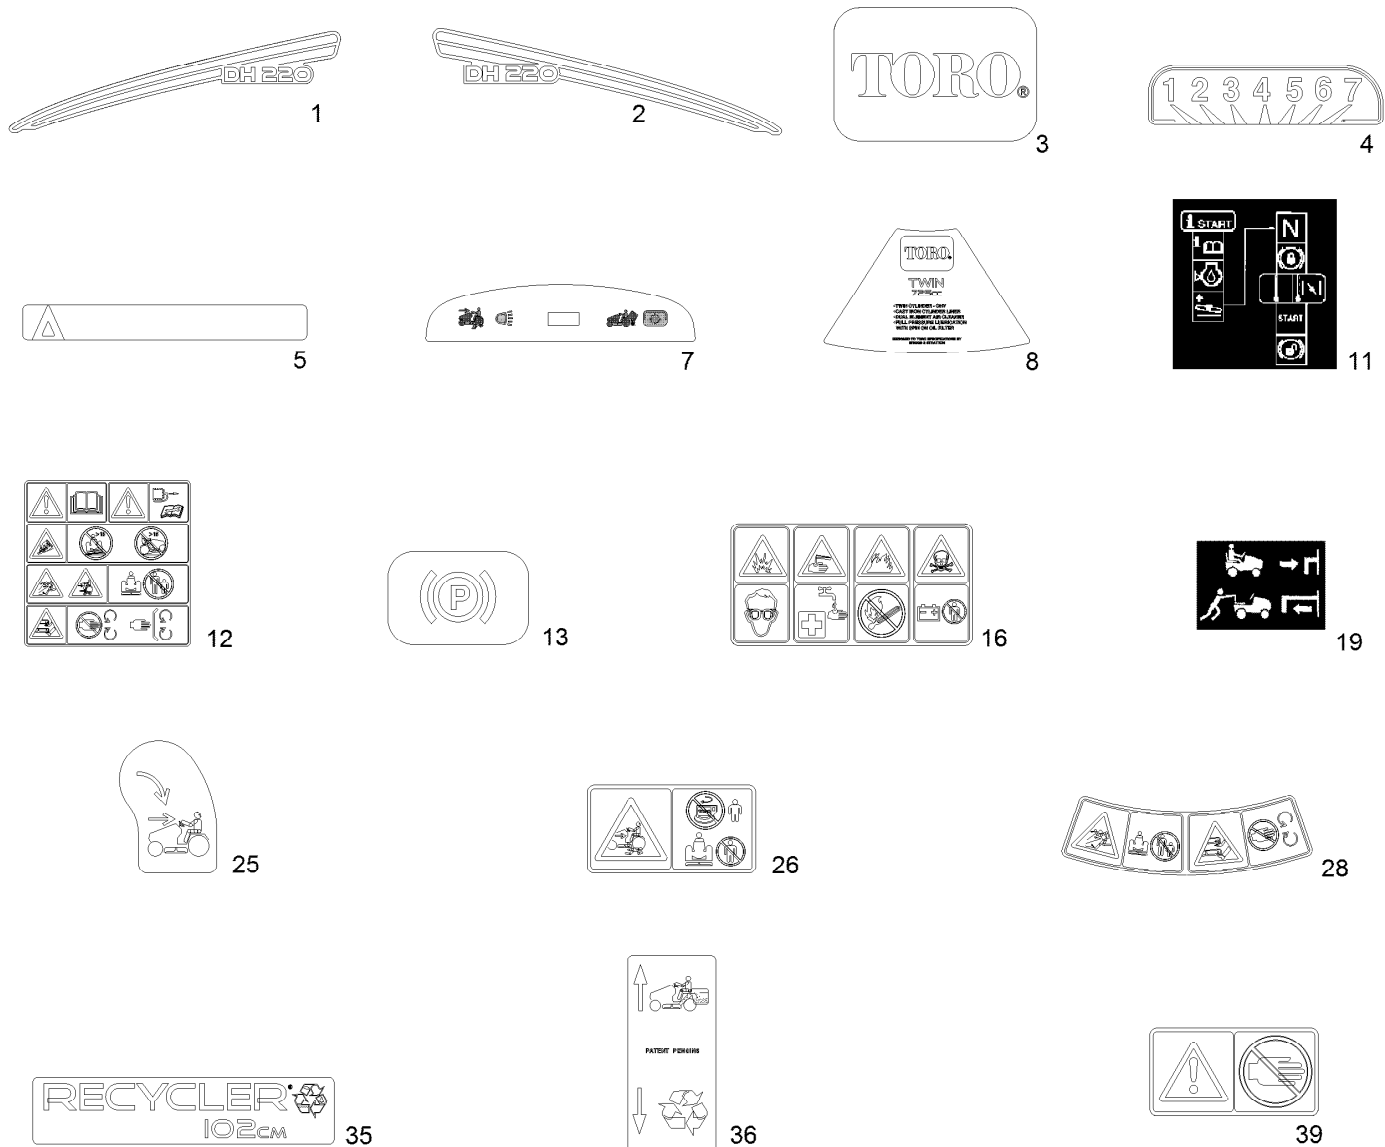

Decal Assembly

Ref.	Part Number	Qty.	Description
1	111-5604	1	Decal-Hood, Left
2	111-5605	1	Decal-Hood, Right
3	117-0871	1	Decal
4	111-5942	1	Decal-HOC
5	111-5953	1	Decal-HOC
7	125-2343	1	Decal-Panel
8	110-6627	1	Decal-Engine
11	119-5517	1	Decal-Instructions, Operating
12	119-2725	1	Decal-Danger

Ref.	Part Number	Qty.	Description
13	104-3237	1	Decal-Brake, Parking
16	93-7276	2	Decal-Danger
19	125-2345	1	Decal-Bypass
25	99-5340	1	Decal-Switch
26	119-2730	1	Decal-Danger
28	119-2726	2	Decal-Danger
35	119-2727	1	Decal-Recycler
36	106-8552	2	Decal-Operation
39	125-2189	2	Decal-Danger, Engine

Attachments and Accessories

For 74596 DH 220 Lawn Tractor

Product Name	Model/Part
Belt Guard Kit	111-6941
Rear Discharge Chute Kit	117-0054

Notes:



Count on it.