



Count on it.

Form No. 3404-623 Rev A

Parts Catalog

DH 140 Lawn Tractor

Model No. 74560—Serial No. 316000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HP: high pressure

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: low pressure

LPG: Liquefied Petroleum Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping

TTH: torx truss head

Contents

Engine Assembly 4

Front Axle Assembly 6

Steering Control Assembly 8

Transmission, Belt, Clutch and Rear Wheel Assembly..... 10

Main Housing Transmission Assembly No. 121-0999 12

Center Section and Fan Pulley Assembly Transmission Assembly No. 121-0999..... 14

Side Housing Transmission Assembly No. 121-0999..... 16

Mower Lift Assembly 18

92cm Deck Assembly 20

Operation-Travel Pedal Assembly 22

Operation-Brake Assembly..... 24

Electrical - Wiring Harness Assembly 26

Seat and Body Fender Assembly 28

Grass Collector Assembly..... 30

Tunnel Assembly 32


Mulch Plug Assembly 34

Frame Assembly..... 36

Hood and Control Panel Assembly 38

Attachments and Accessories 40

Engine Assembly

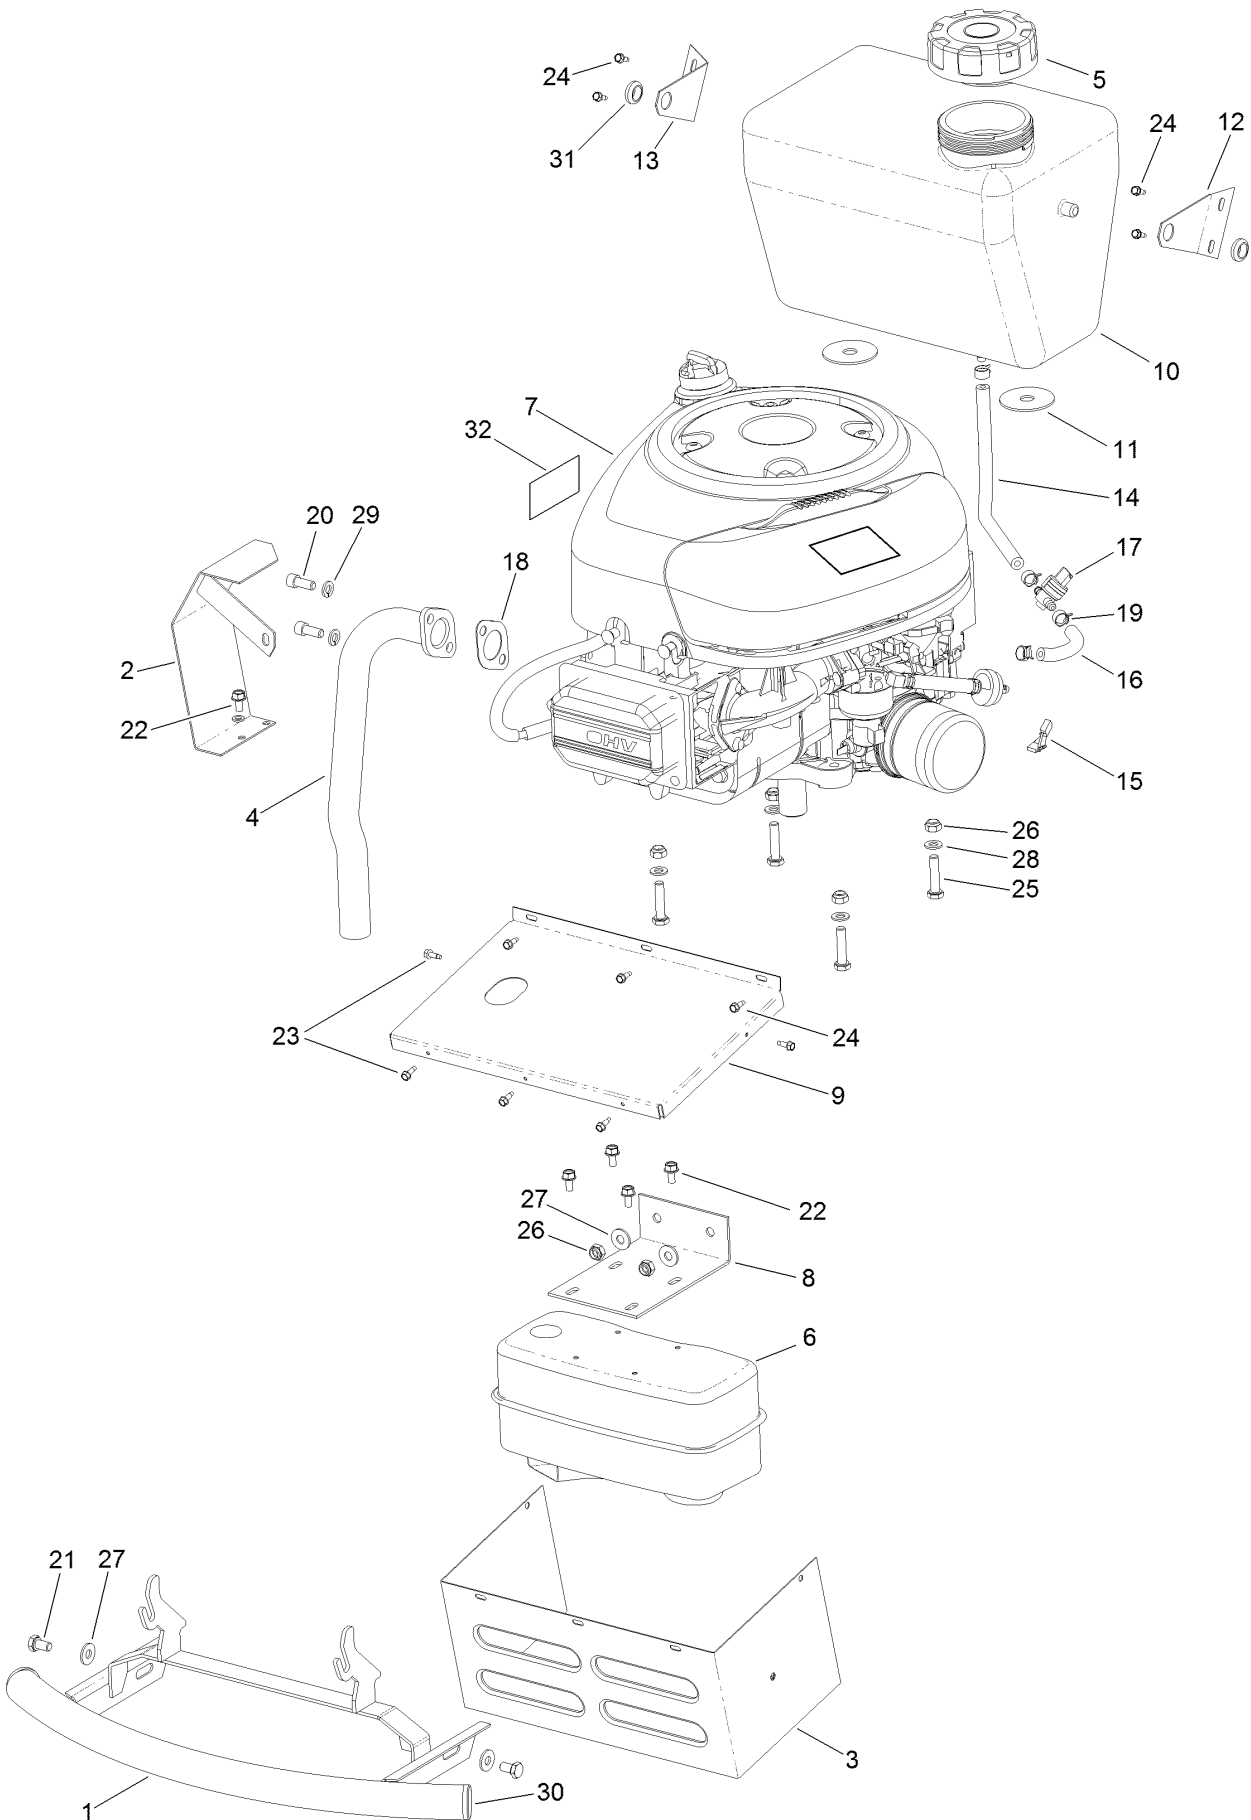


Engine Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	119-5350	1	Bumper	17	104-3224	1	Valve-Tank, Fuel
2	119-5351	1	Shield-Exhaust Tube	18	119-5362	1	Gasket
3	119-5352	1	Shield-Muffler	19	104-3212	4	Clamp-Line, Fuel
4	119-5353	1	Tube-Exhaust	20	322-3	2	Screw-HH
5	119-5354	1	Cap-Fuel	21	33114-016	2	Screw-HH
6	104-3229	1	Muffler	22	110-7170	5	Screw-HH
7		1	Engine-Briggs, 21R877-0019-B1 ●	23	104-2980	5	Screw
8	120-8711	1	Bracket-Muffler Mount	24	104-2977	7	Screw-TAP
9	119-5357	1	Cover-Top	25	48-7740	4	Screw
10	119-5358	1	Tank-Fuel	26	33024-00	6	Nut-Lock, NI
11	119-5500	2	Washer-Rubber	27	104-2946	4	Washer-Plain
12	119-5359	1	Bracket-Fuel Tank, Left	28	106-4756	4	Washer-Plain
13	119-5360	1	Bracket-Fuel Tank, Right	29	104-2927	2	Washer-Spring
14	119-5361	1	Hose-Fuel	30	125-2323	2	Cover
15	88-4490	1	Reducer-Throttle, Rpm	31	119-5364	2	Bushing
16	104-3213	1	Line-Fuel	32	125-2189	2	Decal-Danger, Engine

● Not serviced separately

Front Axle Assembly

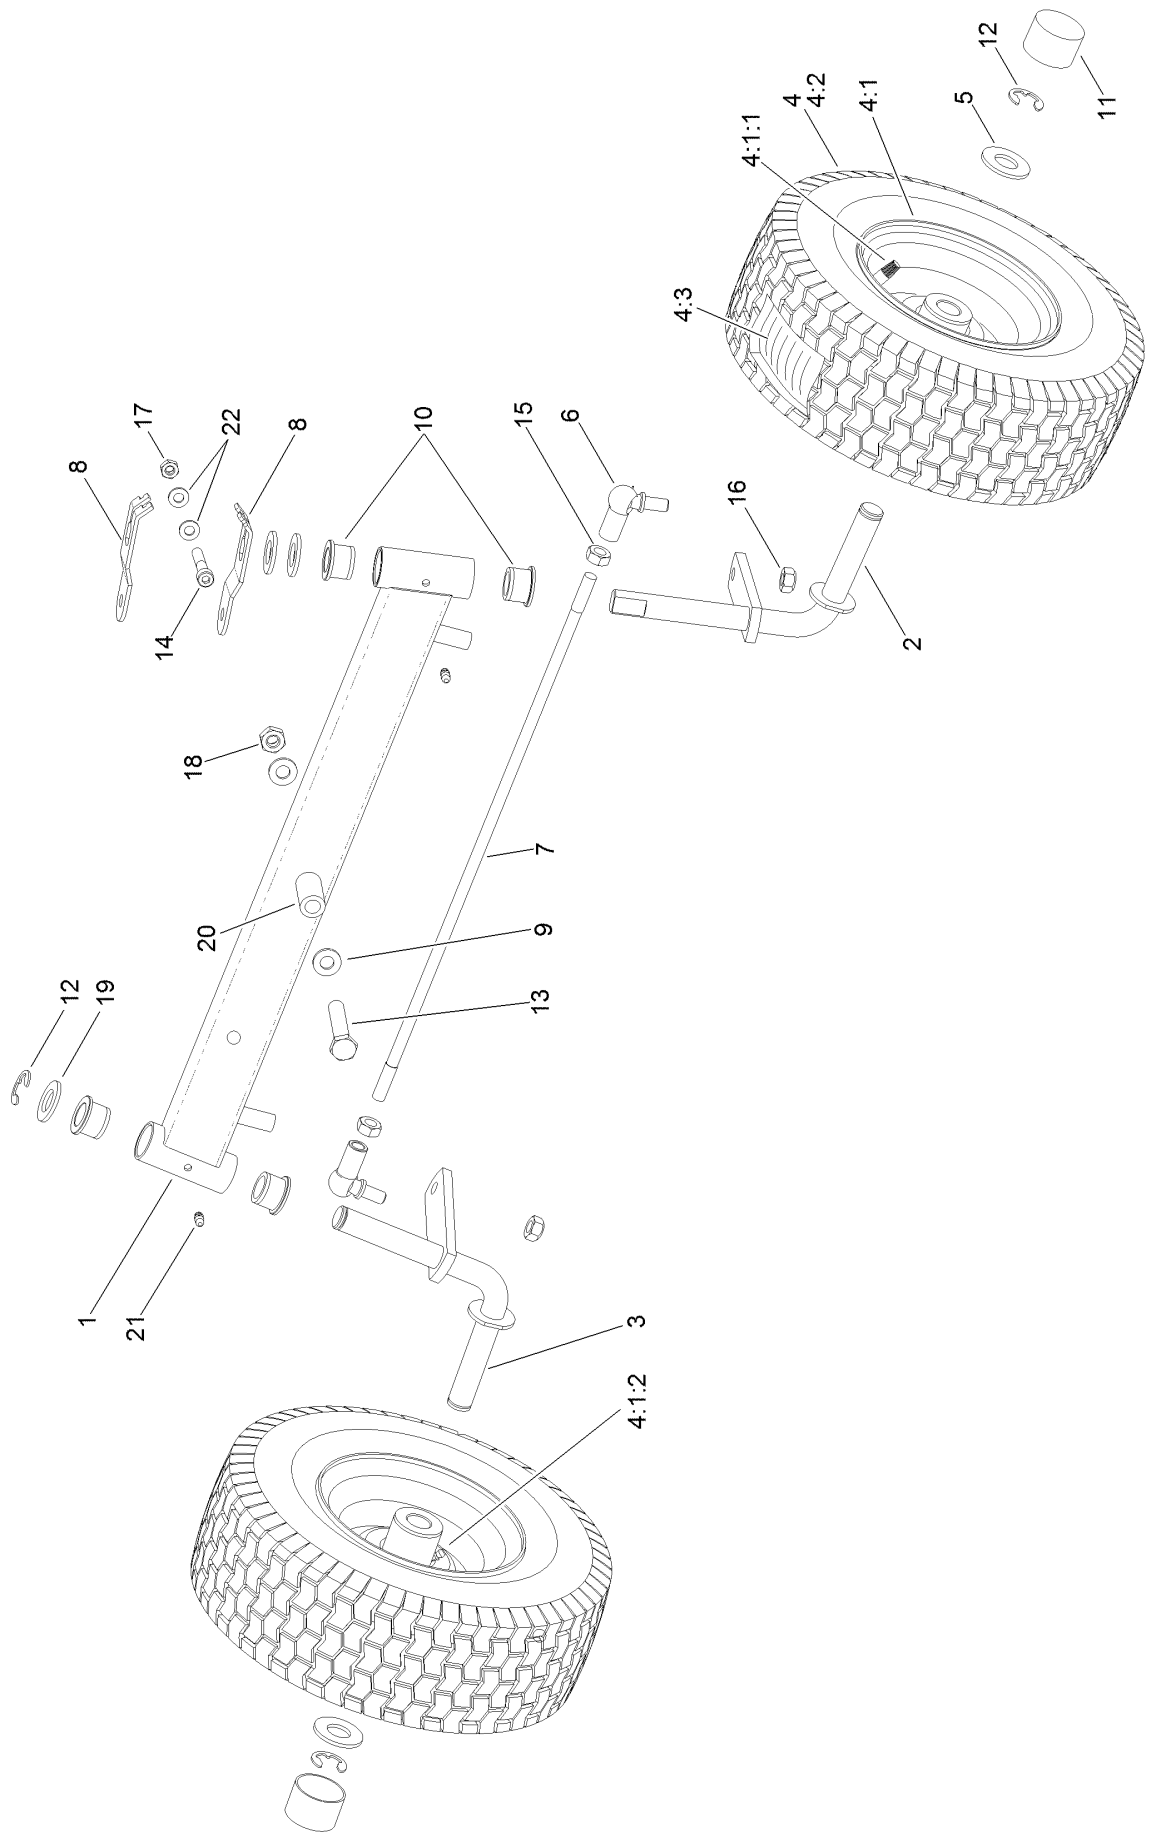


Front Axle Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	119-5365	1	Front Axle ASM	10	119-5371	4	Bushing-Swivel
2	120-8712	1	Spindle-LH	11	104-2857	2	Cap-Hub
3	119-5367	1	Spindle-RH	12	104-2891	3	Clip-Spring
4		2	Wheel ASM ●	13	33116-060	1	Screw-HH
4:1	119-5521	1	Front Rim ASM	14	120-8774	1	Screw
4:1:1	106-8596	1	Valve-Tire	15	33015-00	2	Nut-Hex
4:1:2	104-2904	1	Fitting-Grease	16	106-4668	2	Nut-Lock
4:2	119-5522	1	Tire	17	33024-00	1	Nut-Lock, NI
4:3	232-38	1	Tube	18	48-9540	1	Nut-Lock, Hex NI
5	120-8739	2	Washer	19	104-2905	3	Washer-Flat
6	104-2876	2	Joint-Ball, Angle	20	119-5372	2	Washer
7	119-5369	1	Tie Rod-Axle, Front	21	104-2904	2	Fitting-Grease
8	120-8713	2	Lever-Spindle, Steering	22	106-4756	1	Washer-Plain
9	119-5370	1	Spacer				

● Not serviced separately


Steering Control Assembly

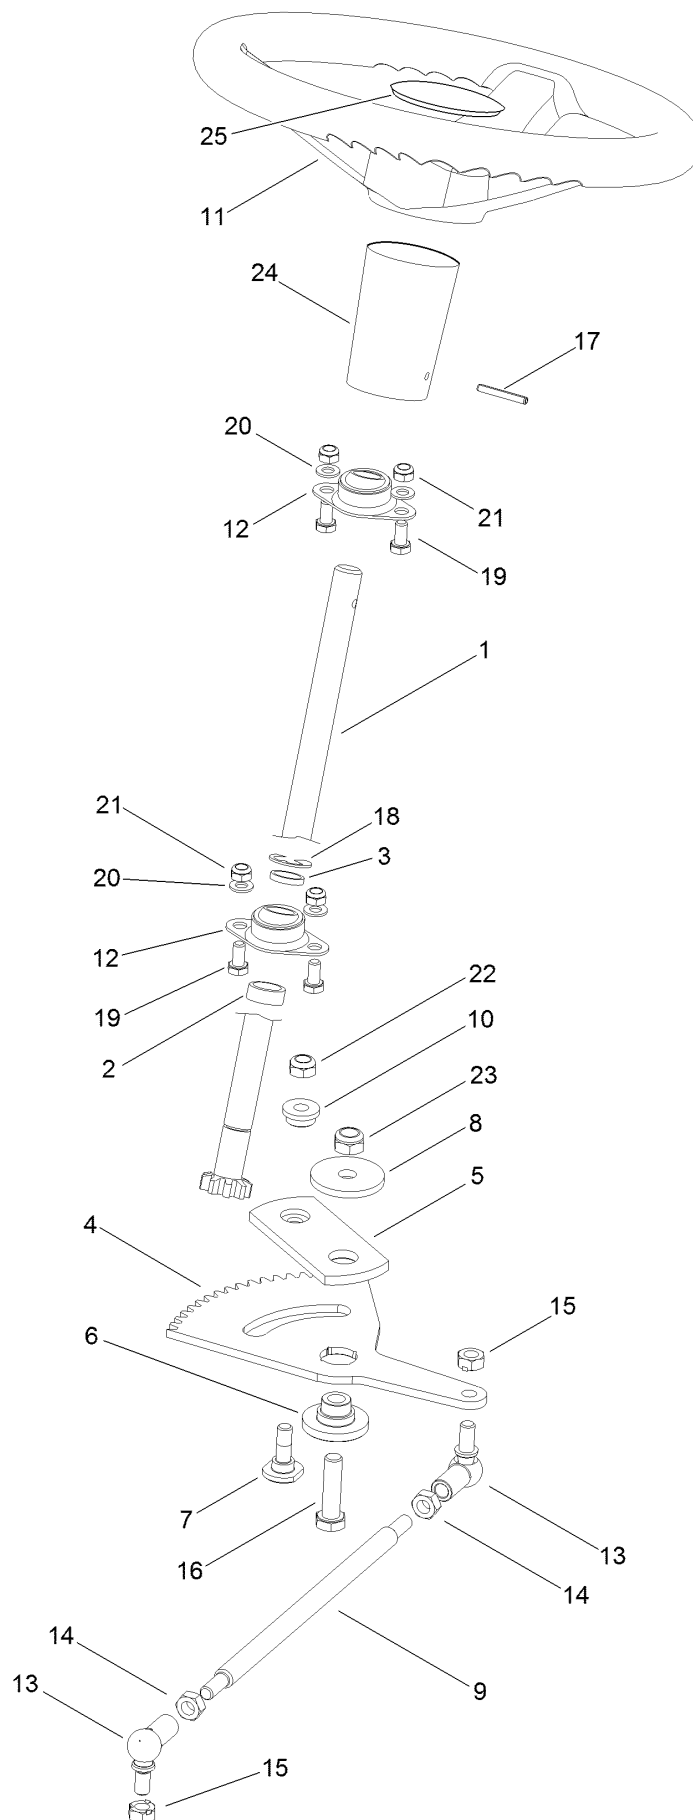

Steering Control Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	111-6842	1	Shaft-Steering	14	33015-00	2	Nut-Hex
2	104-2879	1	Spacer-Lower	15	106-4668	2	Nut-Lock
3	104-2877	1	Spacer-Upper	16	104-2910	1	Screw-HH
4	119-5374	1	Gear-Sector	17	119-5377	1	Pin-Spirol
5	105-1238	1	Plate-Steering	18	104-2891	1	Clip-Spring
6	105-1240	1	Pivot-Steering	19	33114-016	4	Screw-HH
7	105-1239	1	Bolt-Shoulder	20	106-4756	4	Washer-Plain
8	108-8892	1	Washer	21	33024-00	4	Nut-Lock, NI
9	119-5375	1	Link-Drag	22	33025-00	1	Nut-Lock, NI
10	105-1241	1	Bushing	23	33016-00	1	Nut-Hex
11	125-2237	1	Wheel-Steering	24	125-2238	1	Cover
12	104-2878	2	Bearing-Spherical	25	111-8266	1	Cap-Wheel, Steering
13	104-2876	2	Joint-Ball, Angle				

Transmission, Belt, Clutch and Rear Wheel Assembly

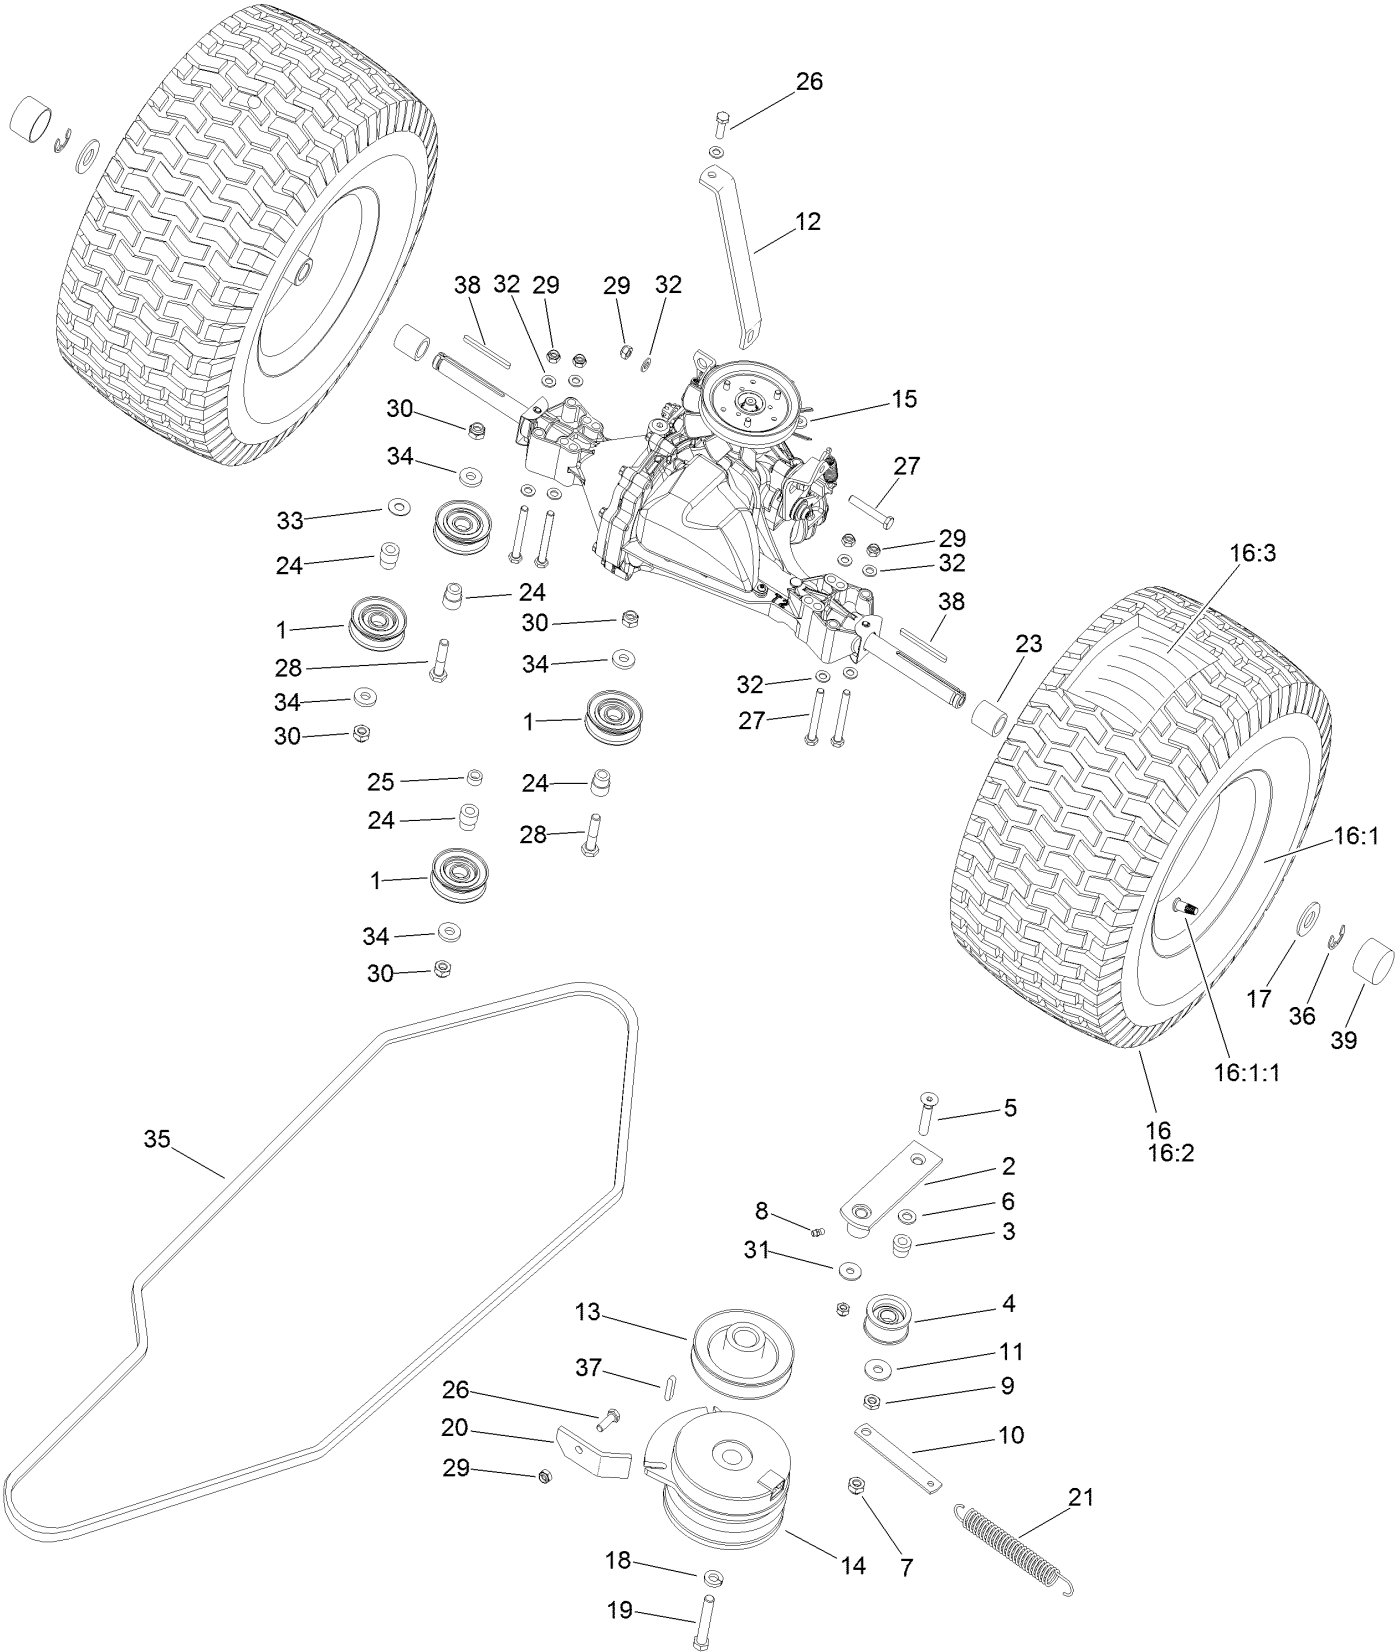


Transmission, Belt, Clutch and Rear Wheel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	119-5378	4	Pulley-Idler	18	93-9043	1	Washer-Spring, Belleville
2	119-5379	1	Arm-Idler	19	3212-10	1	Screw-HH
3	104-2896	1	Bushing-Idler	20	119-5502	1	Bracket-Retainer
4	119-5380	1	Pulley-Idler	21	104-2897	1	Spring
5	119-5381	1	Screw	23	120-8715	2	Spacer-Axle
6	33095-00	1	Washer-Flat	24	119-5388	4	Bushing
7	33025-00	1	Nut-Lock, NI	25	119-5389	1	Spacer
8	104-2904	1	Fitting-Grease	26	33114-025	2	Screw-HH
9	33035-00	1	Nut-Hex	27	60-6690	5	Capscrew
10	119-5382	1	Bracket-Tention	28	117-5664	2	Screw-HH
11	119-5383	1	Washer	29	33024-00	9	Nut-Lock, NI
12	119-5384	1	Bracket	30	33025-00	4	Nut-Lock, NI
13	119-5385	1	Pulley-Engine	31	104-2946	1	Washer-Plain
14	119-5501	1	Clutch-Electric	32	106-4756	11	Washer-Plain
15	121-0999	1	Transmission ASM	33	106-5768	1	Washer
16		2	Wheel ASM ●	34	108-8709	4	Washer-Flat
16:1	119-5523	1	Rim-Rear	35	119-5390	1	V-Belt, Traction
16:1:1	106-8596	1	Valve-Tire	36	104-2891	2	Clip-Spring
16:2	119-5524	1	Tire	37	104-2899	1	Key-Square
16:3	232-41	1	Tube	38	104-2892	2	Key-Square
17	120-8739	2	Washer	39	104-2857	2	Cap-Hub

● Not serviced separately

Main Housing Transmission Assembly No. 121-0999

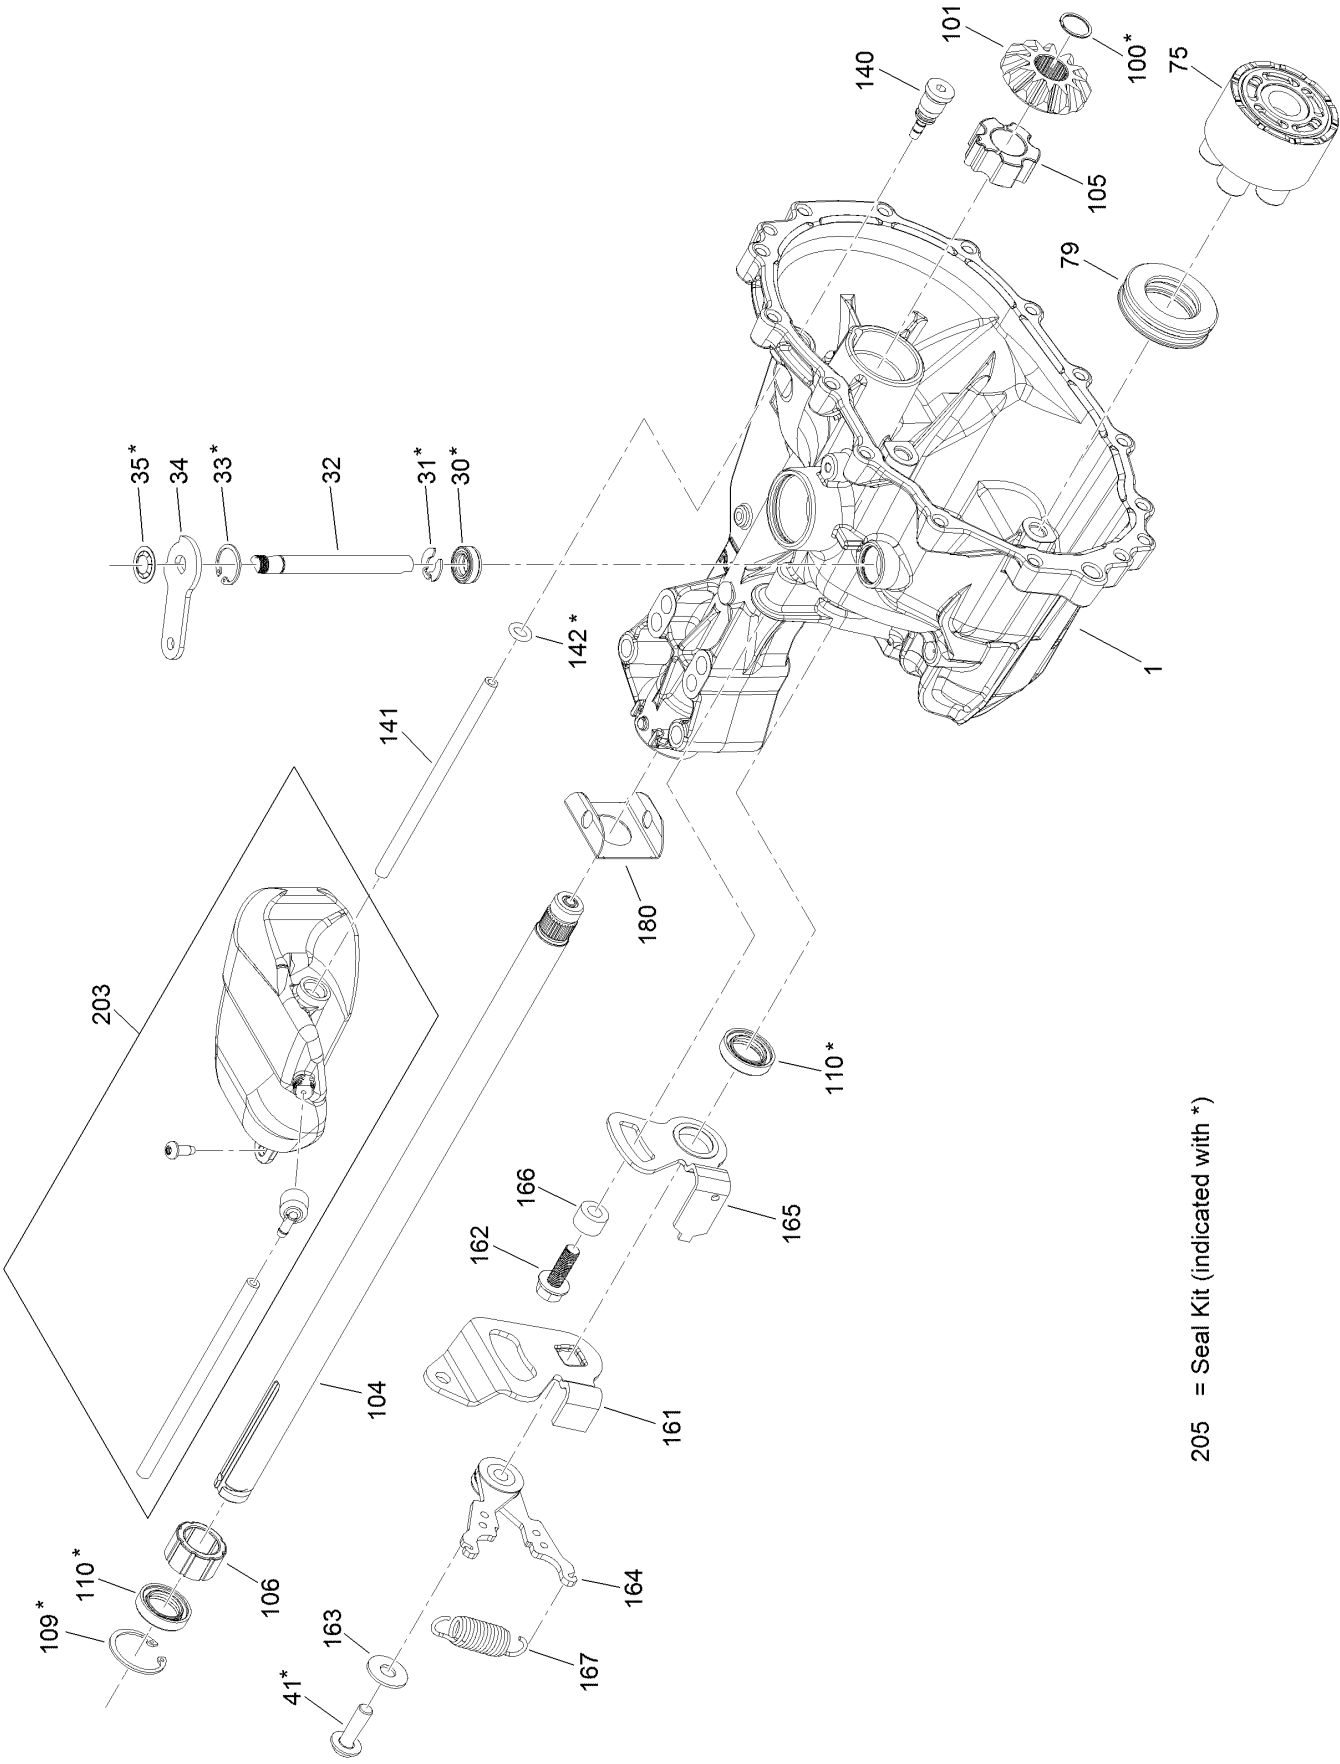


205 = Seal Kit (indicated with *)

Main Housing Transmission Assembly No. 121-0999 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	115-8313	1	Main Housing Kit	106	115-8304	1	Bushing-Outboard
10	104-2147	1	Sealant ●	109	115-8303	1	Ring-Retaining, Int
11	104-5342	1	Oil, 20W-50 ●	110	121-0970	2	Seal-Lip
30	106-8676	1	Seal-Lip	140	104-5349	1	Fitting-Sae
31	106-8677	1	Ring-Retaining, EXT	141	115-8302	1	Hose
32	115-8312	1	Rod-Bypass, Actuator	142	104-5361	1	O-Ring
33	106-8679	1	Ring-Retaining, Int	161	115-8308	1	Arm-Control, Return
34	115-8311	1	Arm-Bypass	162	104-5312	1	Screw-HF
35	106-8681	1	Ring-Retaining, EXT	163	114-8491	1	Washer
41	107-2488	1	Screw	164	115-8306	1	Bi Directional Return Kit
75	103-2666	1	Cylinder Block Kit	165	115-8310	1	Arm-Neutral
79	94-6922	1	Bearing-Thrust	166	115-8309	1	Bushing
100	104-5328	1	Ring-Retaining, Spiral	167	115-8307	1	Spring-Extension
101	115-8315	1	Gear-Bevel, 12T (Spline, Id)	180	119-5527	1	Spring Clip-Housing Thrust
104	121-0969	1	Shaft-Axle, Keyed	203	115-8301	1	Expansion Tank Kit
105	115-8314	1	Bushing-Inboard	205	115-8316	1	Seal Kit

● Not illustrated

Center Section and Fan Pulley Assembly Transmission Assembly No. 121-0999

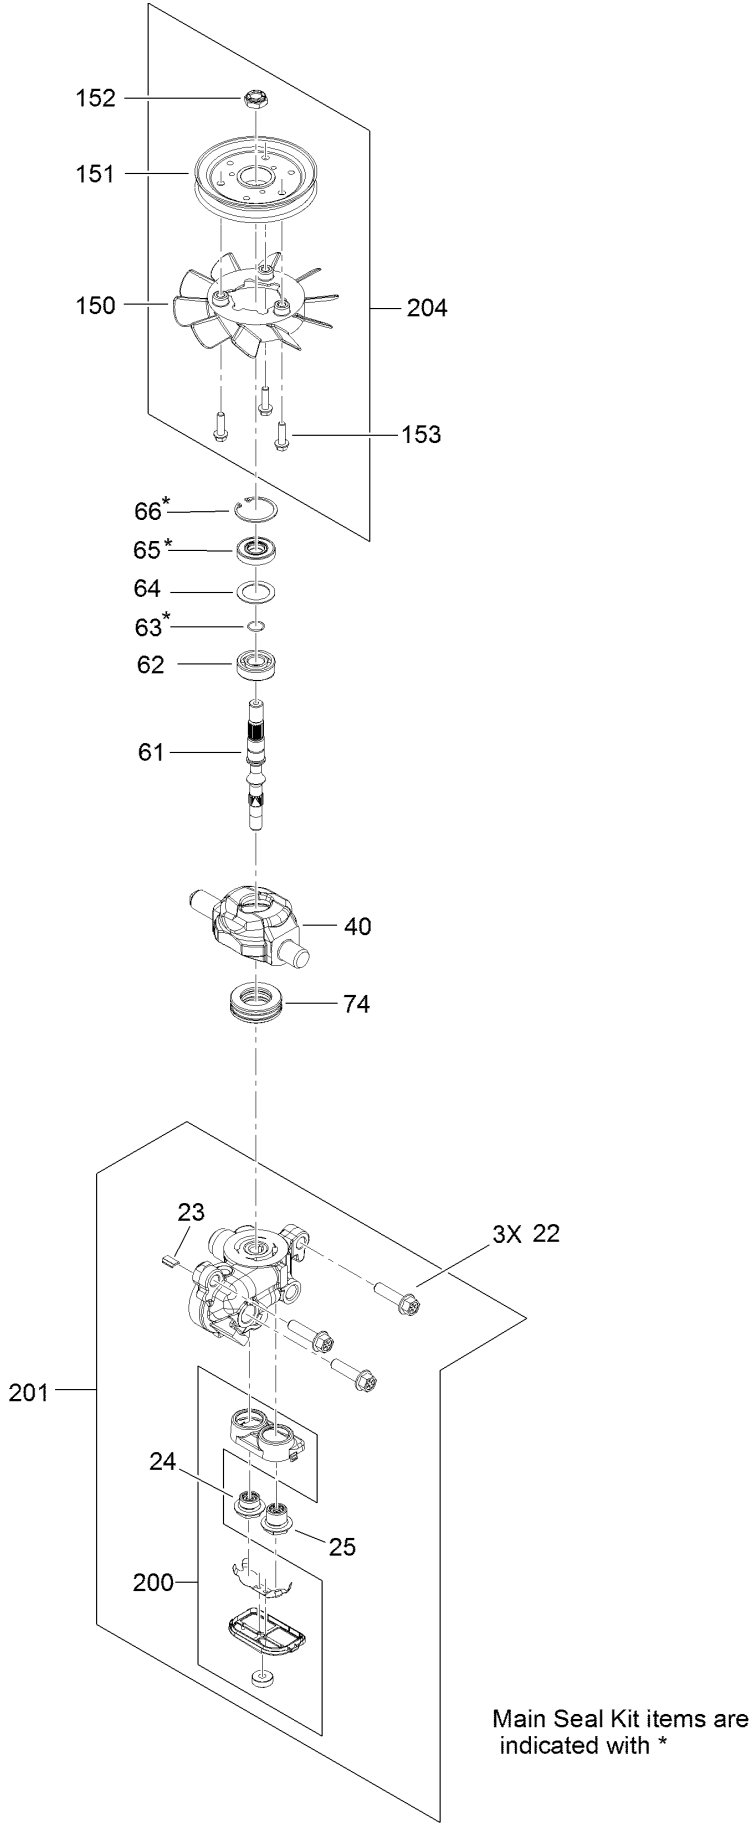


Center Section and Fan Pulley Assembly Transmission Assembly No. 121-0999 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
22	114-1684	3	Screw-Hfhc	66	119-5533	1	Ring-Retaining
23	119-5528	1	Plate-Bypass	70	121-0967	1	Piston Block ASM ●
24	104-5348	1	Check Plug ASM	74	115-8320	1	Bearing-Thrust, Ball
25	119-5529	1	Check Plug ASM	150	105-1927	1	Fan
40	115-8319	1	Trunnion-Plate, Swash	151	119-5534	1	Pulley ASM
61	115-8317	1	Shaft-Input	152	121-0971	1	Nut-Hex Jam
62	94-1904	1	Bearing-Shaft, Ball	153	105-1897	3	Screw
63	119-5531	1	Ring-Retaining, Wire	200	115-8323	1	Filter Kit
64	104-2104	1	Spacer	201	121-0972	1	Center Section Kit
65	119-5532	1	Seal-Lip	204	119-5537	1	Fan Pulley Kit

● Not illustrated

Side Housing Transmission Assembly No. 121-0999

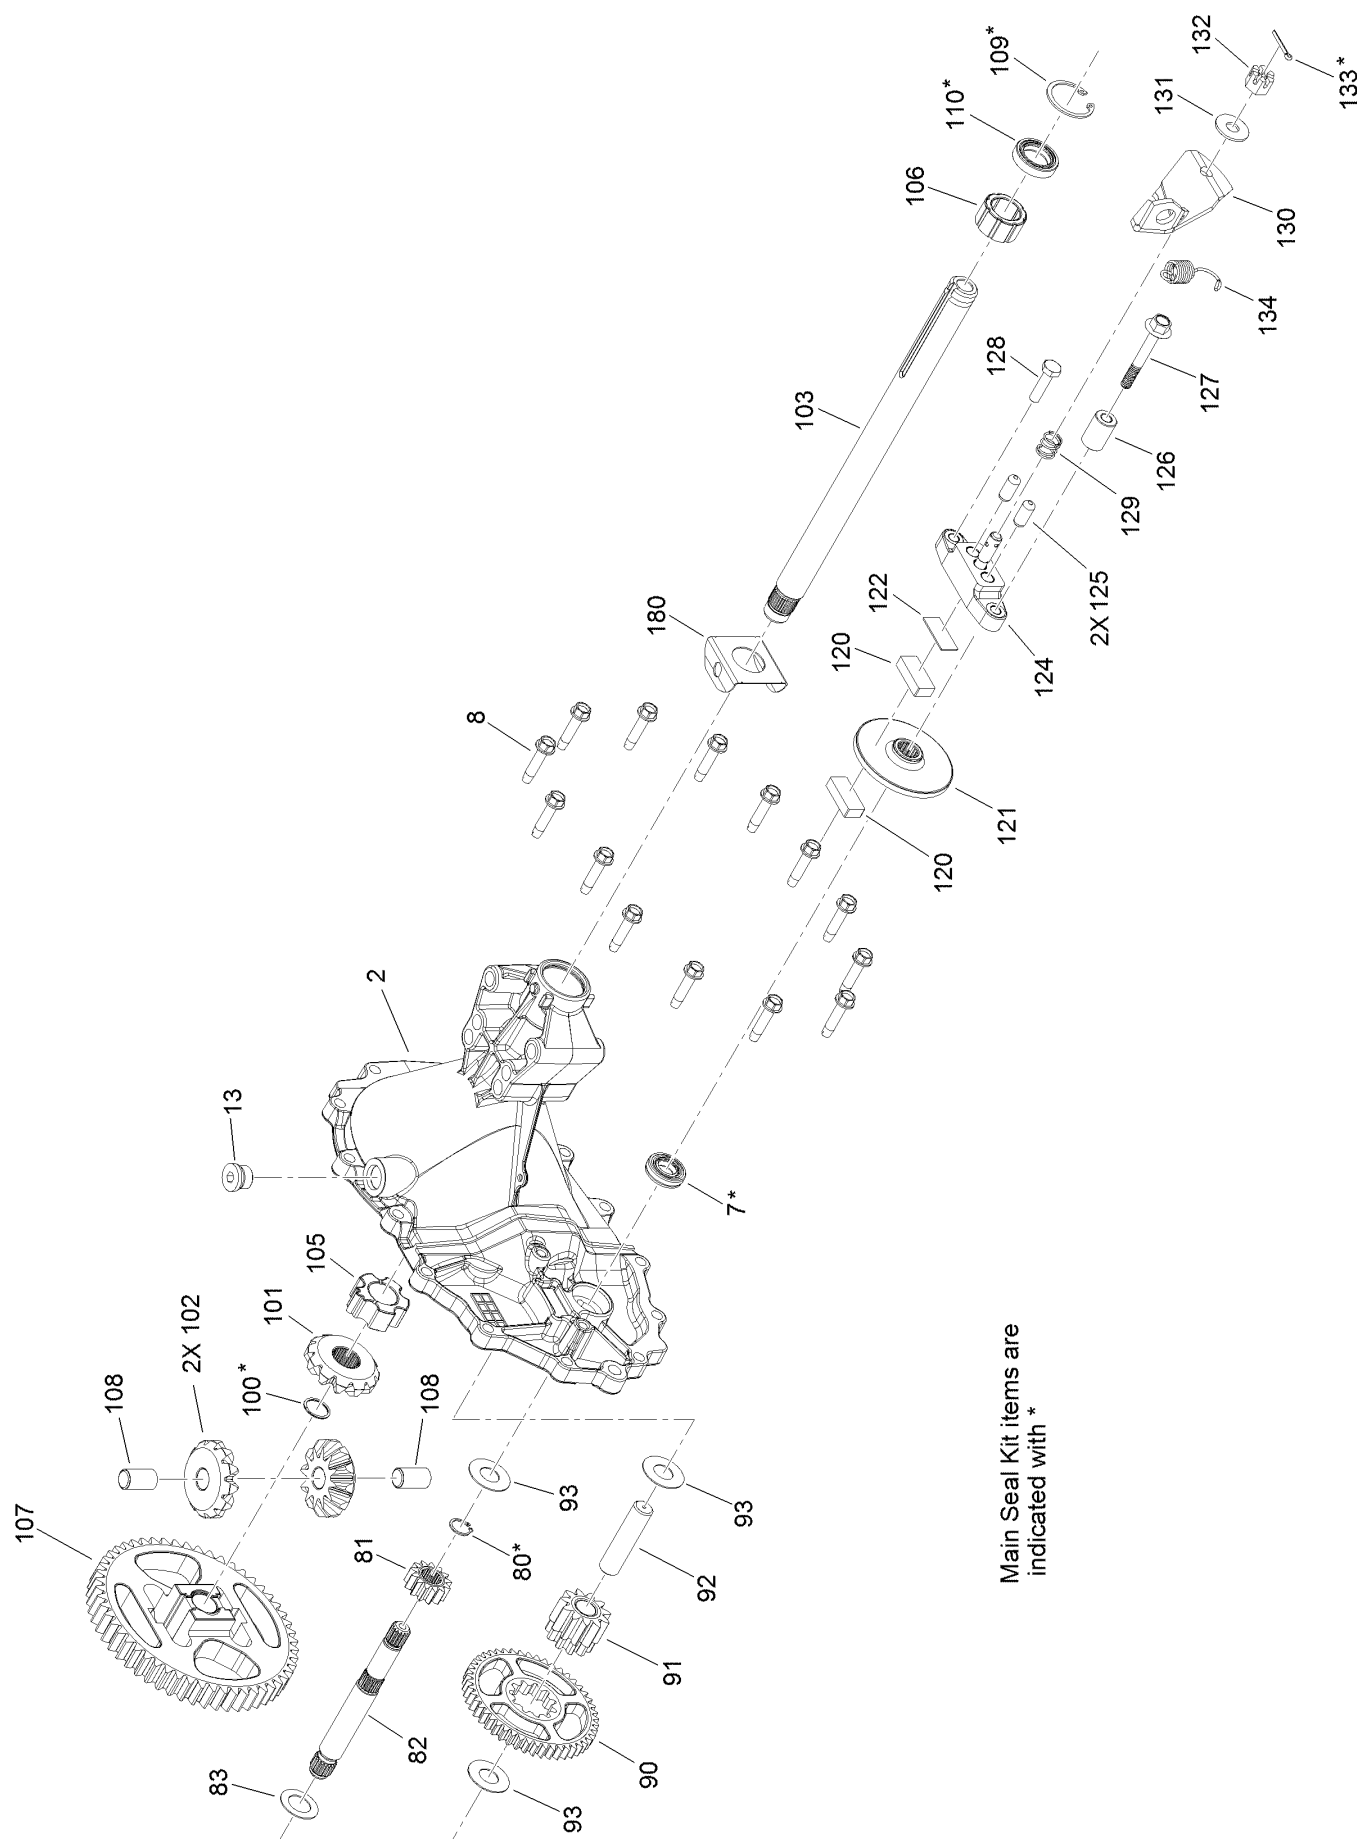


Main Seal Kit items are indicated with *

Side Housing Transmission Assembly No. 121-0999 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	119-5538	1	Housing Side Kit	108	115-8326	2	Pin-Differential
7	115-8335	1	Seal-Lip	109	115-8303	1	Ring-Retaining, Int
8	117-5359	14	Screw-HHF	110	119-5526	1	Seal-Lip
13	104-2189	1	Plug-Thread, Straight	120	104-2171	2	Puck-Brake
80	115-8331	1	Ring-Retaining, EXT	121	115-8337	1	Rotor-Brake
81	119-5539	1	Gear-Pinion	122	104-2181	1	Puck-Plate
82	115-8329	1	Shaft-Motor	124	104-5343	1	Yoke-Brake
83	115-8328	1	Washer	125	104-2176	2	Pin-Brake
90	119-5540	1	Gear	126	104-2180	1	Spacer
91	115-8333	1	Gear-Jackshaft, 11T	127	104-5345	1	Screw-HF
92	115-8334	1	Pin-Jackshaft	128	115-8339	1	Screw-Hhcs
93	119-5541	3	Washer	129	104-2188	1	Spring-Brake, Anti Drag
100	104-5328	1	Ring-Retaining, Spiral	130	119-5542	1	Arm-Brake
101	115-8315	1	Gear-Bevel, 12T (Spline, Id)	131	114-8491	1	Washer
102	115-8327	2	Gear-Bevel, 12T (.50 Id)	132	119-5543	1	Nut-Castle
103	121-0968	1	Shaft-Axle, Keyed	133	3272-7	1	Pin-Cotter
105	115-8314	1	Bushing-Inboard	134	115-8338	1	Spring-Brake, Arm
106	115-8304	1	Bushing-Outboard	180	119-5527	1	Spring Clip-Housing Thrust
107	115-8325	1	Gear-53T, Bull				


Mower Lift Assembly

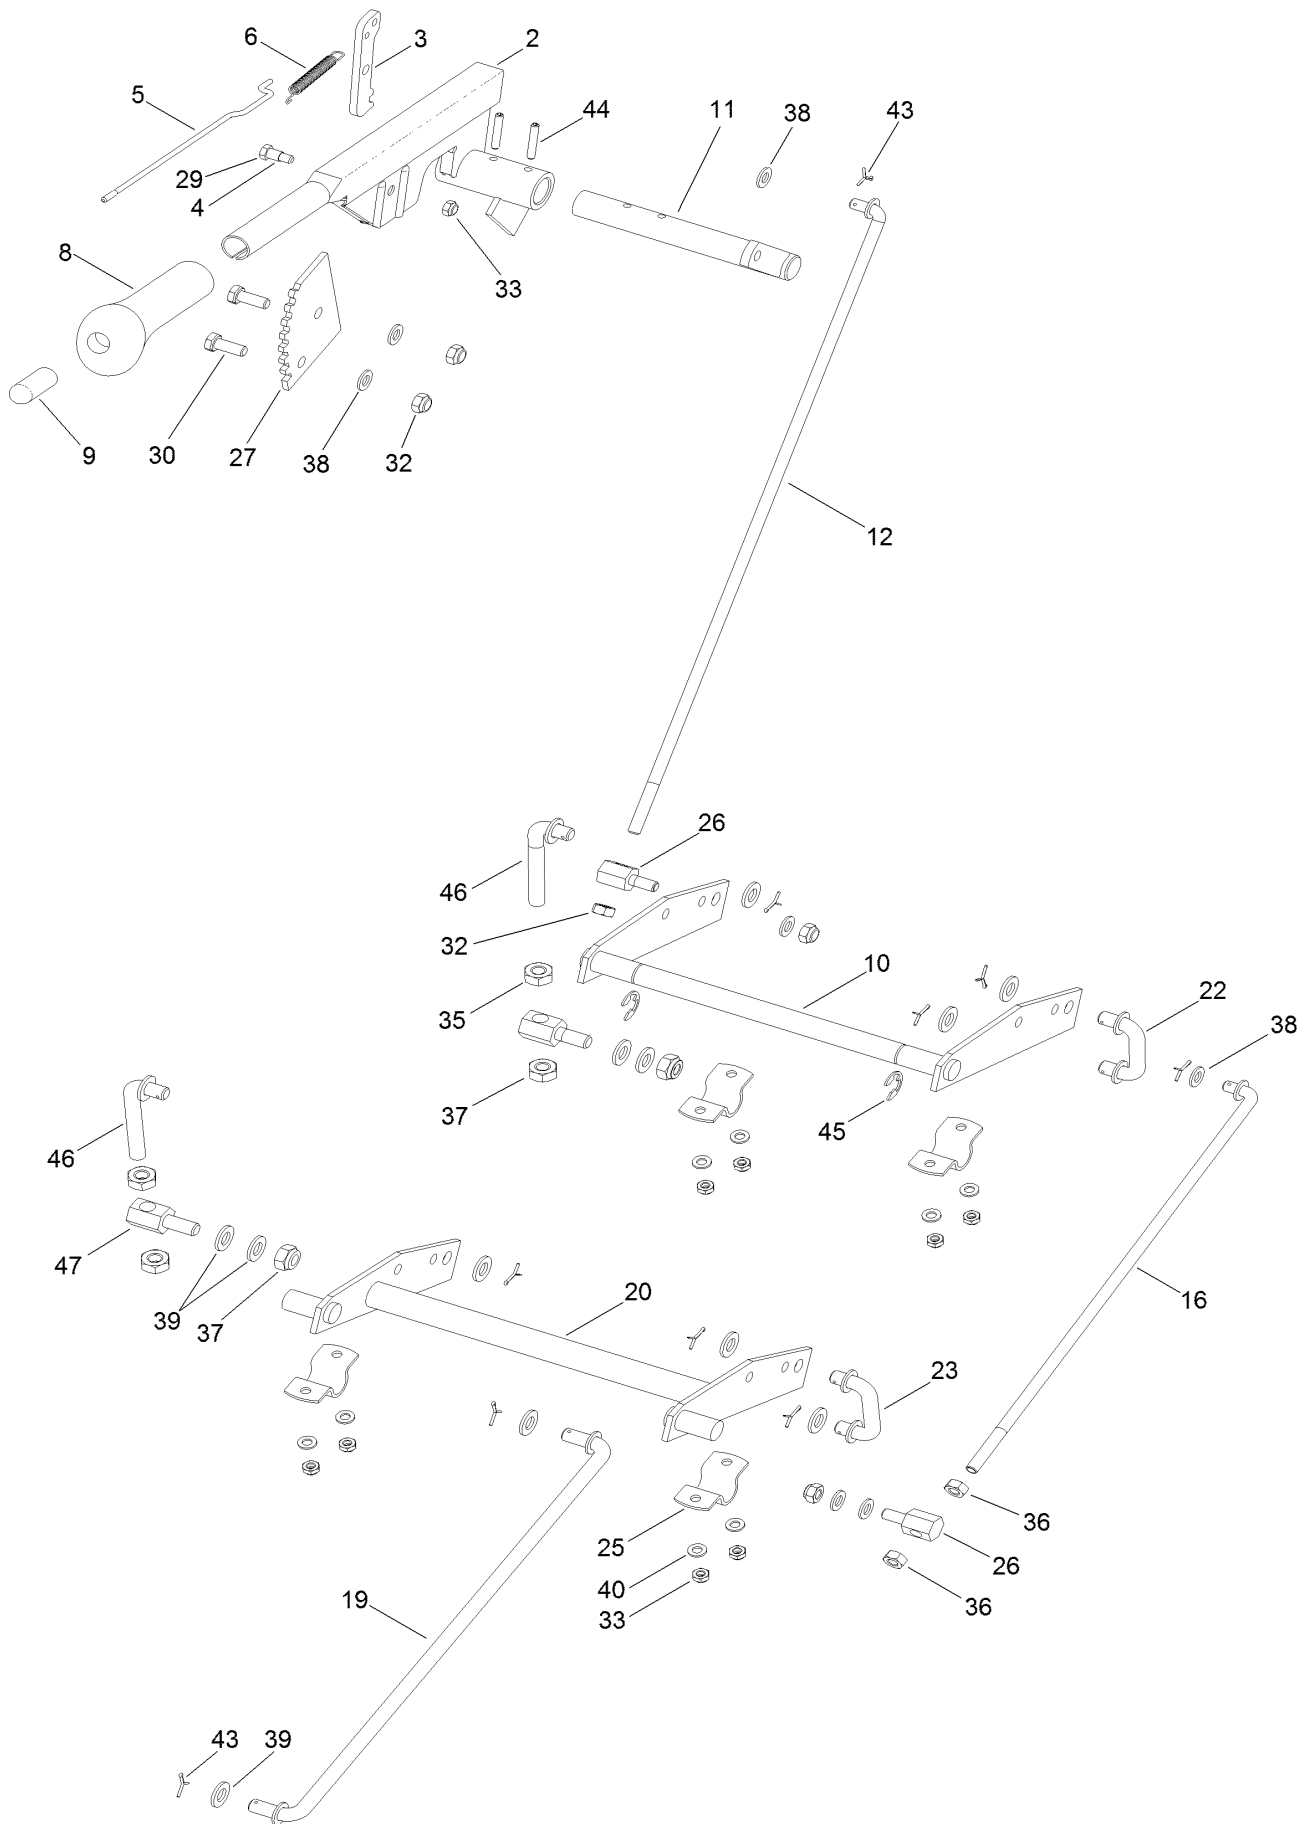

Mower Lift Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	120-8716	1	Lever-Arm	27	114-3244	1	Gear-Segment, Deck Lift
3	104-3130	1	Ratchet-Plate, Pivot	29	33113-016	1	Screw-HH
4	120-8754	1	Bushing	30	33114-020	2	Screw-HH
5	104-3132	1	Rod-Connection	32	33024-00	4	Nut-Lock, NI
6	104-3134	1	Spring	33	33023-00	9	Nut-Lock
8	104-3129	1	Grip-Handle	35	33015-00	2	Nut-Hex
9	104-3131	1	Button-Plunger	36	33014-00	4	Nut-Hex
10	120-8717	1	Hanger-Rear	37	33025-00	4	Nut-Lock, NI
11	120-8718	1	Shaft-Adjustment, Height	38	106-4756	7	Washer-Plain
12	120-8719	1	Rod	39	104-2906	10	Washer-Flat
16	119-5397	1	Rod-Linkage	40	104-3193	8	Washer
19	120-8720	1	Rod	43	104-3151	9	Pin-Cotter
20	119-5401	1	Hanger-Front	44	104-2994	2	Pin-Spring
22	119-5403	1	Deck Link, U-Shape, 50	45	119-5503	2	E-Clip
23	119-5404	1	Deck Link, U-Shape, 55	46	119-5544	2	Link-Deck, L-Shape (Adjustable)
25	119-5406	4	Clamp	47	119-5545	2	Trunion
26	119-5407	2	Trunion				


92cm Deck Assembly

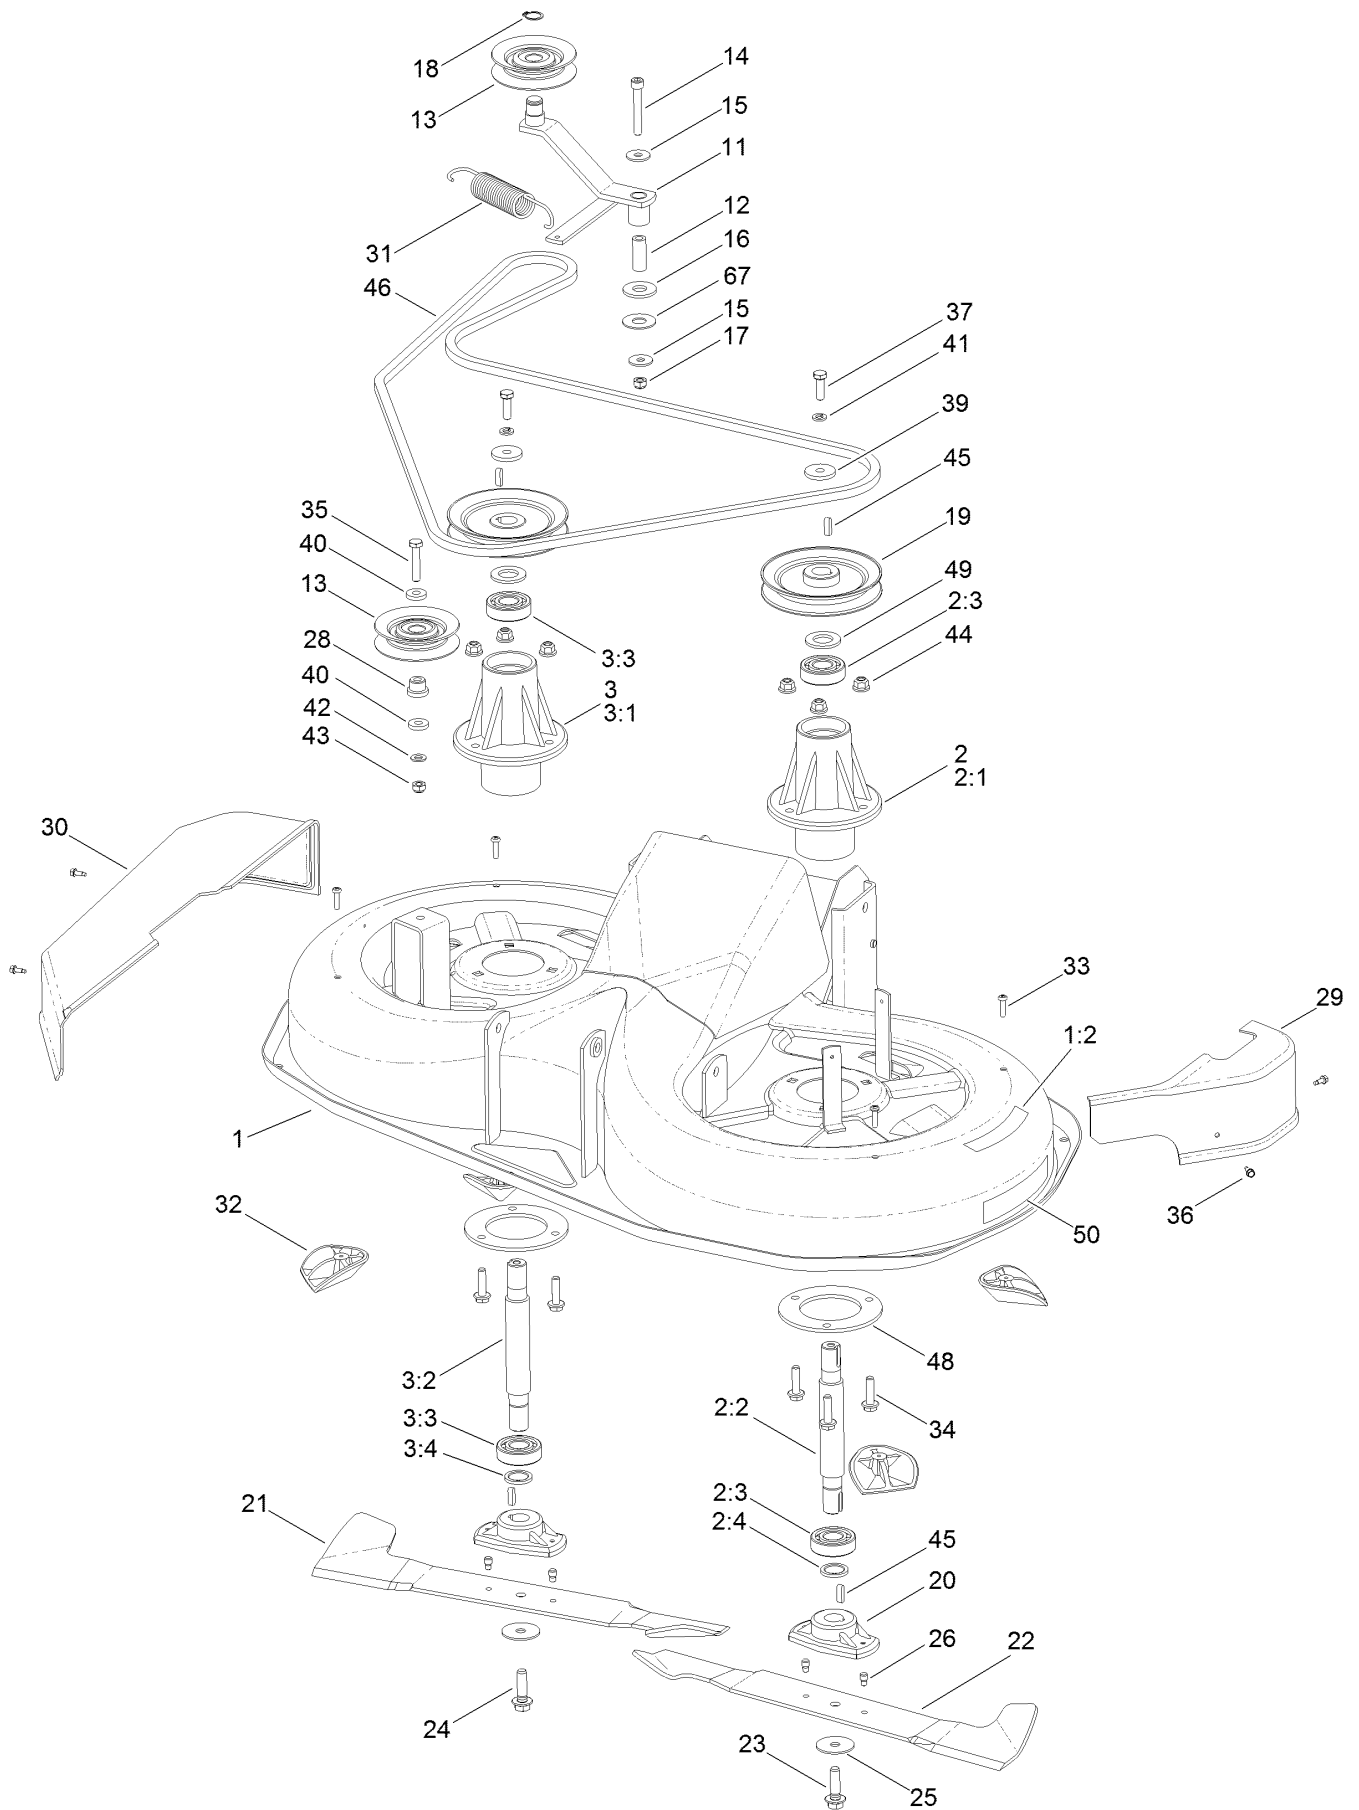

92cm Deck Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	119-5508	1	Deck ASM	24	104-3091	1	Screw-HH, Left
1:2	119-2726	2	Decal-Danger	25	104-3092	2	Washer-Belleville
2	119-5425	1	Left Spindle ASM	26	104-3093	4	Pin-Shear, Grooved
2:1	119-5426	1	Housing-Spindle	28	104-3104	1	Bushing
2:2	119-5409	1	Shaft-Blade, Left	29	119-5419	1	Guard-Belt, Left
2:3	119-5505	2	Bearing	30	119-5420	1	Guard-Belt, Right
2:4	119-5410	1	Ring-Lock	31	119-5421	1	Spring
3	119-5427	1	Right Spindle ASM	32	119-0369	4	Kicker
3:1	119-5426	1	Housing-Spindle	33	119-5423	4	Screw
3:2	119-5411	1	Shaft-Blade, Right	34	33104-030	6	Screw-HHF
3:3	119-5505	2	Bearing	35	33114-040	1	Screw-HH
3:4	119-5410	1	Ring-Lock	36	104-3190	4	Screw
11	119-5412	1	Arm-Idler	37	33114-025	2	Screw-HH
12	119-5547	1	Spacer	39	119-5507	2	Washer
13	104-3103	2	Pulley-Idler	40	106-8588	2	Washer-Flat
14	60-6700	1	Bolt-HH	41	104-2927	2	Washer-Spring
15	104-2946	2	Washer-Plain	42	106-4756	1	Washer-Plain
16	119-5548	1	Washer-Plain	43	33024-00	1	Nut-Lock, NI
17	33024-00	1	Nut-Lock, NI	44	104-3082	6	Nut-Lock, HHF
18	119-5525	1	Ring-Lock	45	119-2424	4	Key
19	119-5416	2	Pulley-Mowing Belt, 4.5In	46	119-2425	1	Belt-Wedge, Double
20	119-5506	2	Adapter-Mount, Blade	48	104-3084	2	Support-Ring
21	117-0035	1	Blade-RH	49	119-5549	2	Washer-Plain
22	117-0036	1	Blade-LH	50	114-3255	1	Decal-Recycler
23	104-3088	1	Screw-Hex	67	119-5415	1	Washer


Operation-Travel Pedal Assembly

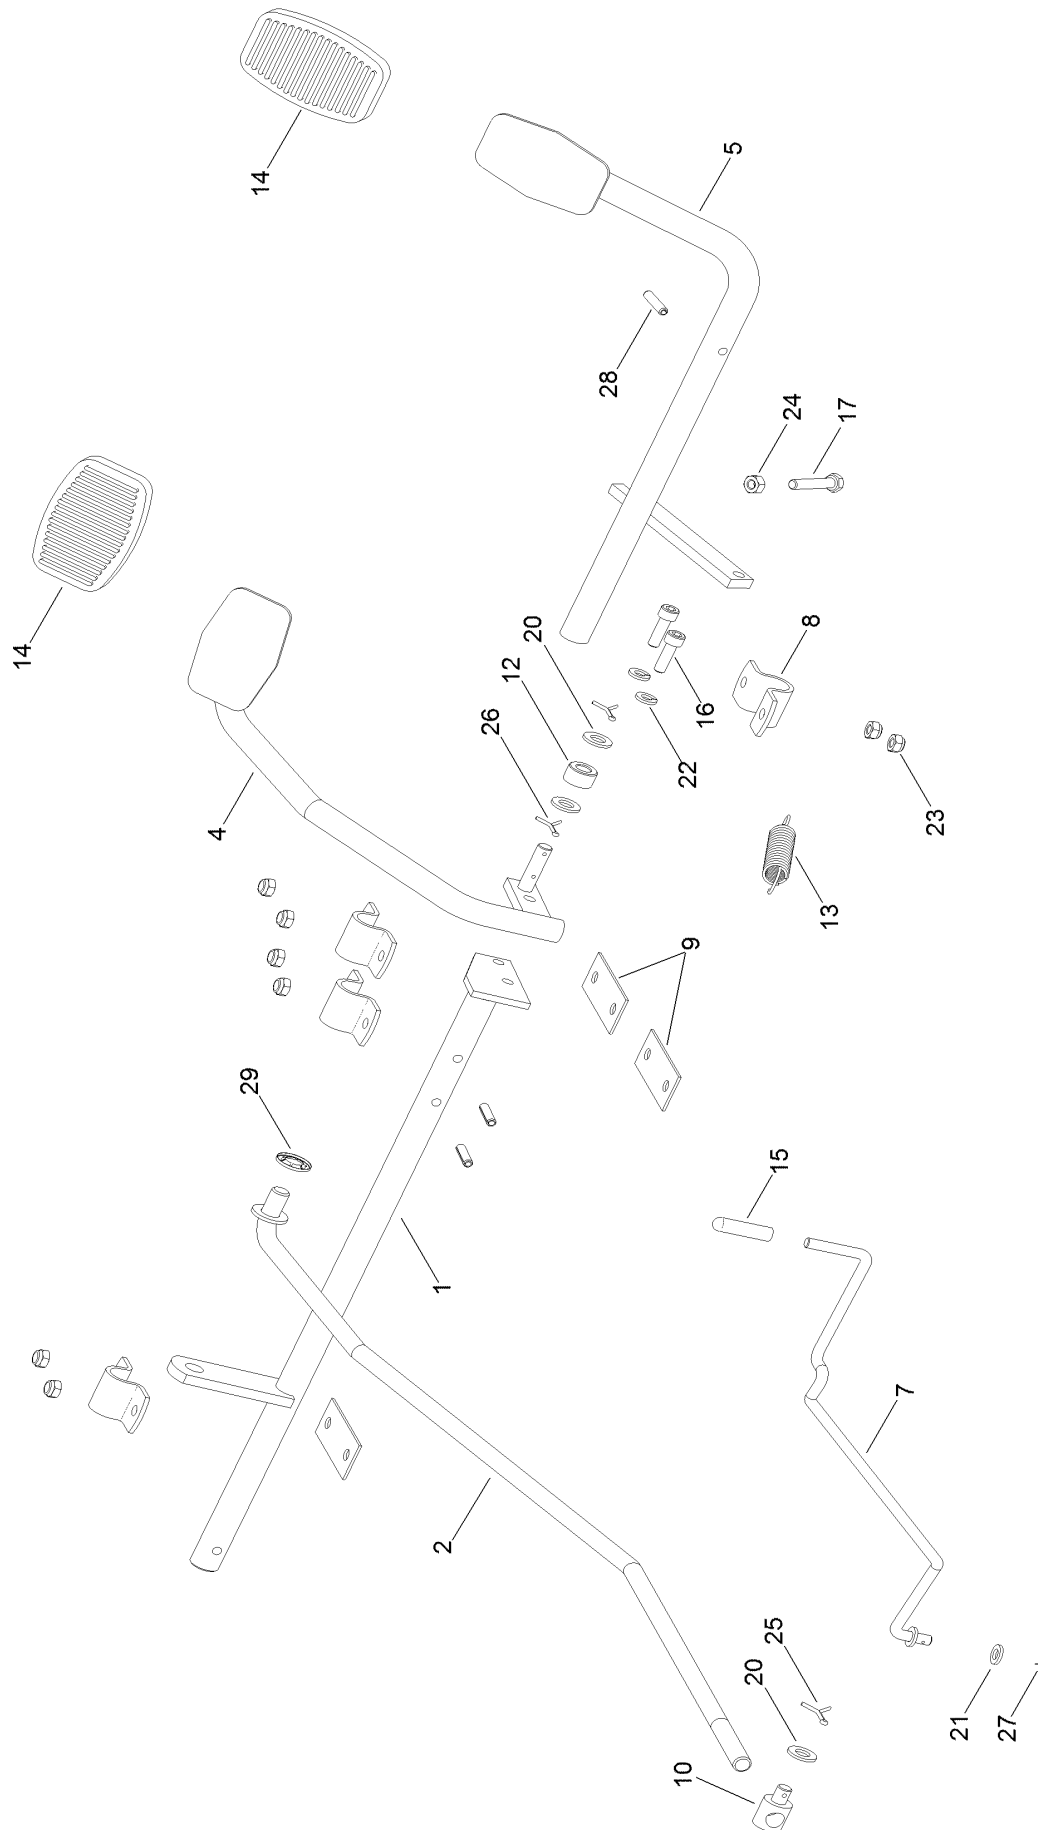

Operation-Travel Pedal Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	120-8721	1	Shaft-Pivot	16	120-8779	2	Screw
2	120-8722	1	Rod-Linkage	17	33113-030	1	Screw-HH
4	120-8723	1	Pedal-Travel, Forward	20	106-4756	3	Washer-Plain
5	120-8724	1	Pedal-Travel, Reverse	21	104-3193	1	Washer
7	119-2432	1	Rod-Lever, Bypass	22	104-3186	2	Washer-Spring
8	119-2433	4	Clamp	23	33023-00	8	Nut-Lock
9	119-2434	3	Spacer	24	104-2991	1	Nut-Hex
10	119-2435	1	Pin	25	104-3027	1	Pin-Cotter
12	106-8581	1	Roller	26	104-3151	2	Pin-Cotter
13	119-2436	1	Spring	27	104-2997	1	Pin-Cotter
14	104-3018	2	Pad-Pedal	28	104-3008	3	Pin-Spring
15	108-8708	1	Cap-Bypass Lever, Hydro	29	121-0962	1	Washer-M10


Operation-Brake Assembly

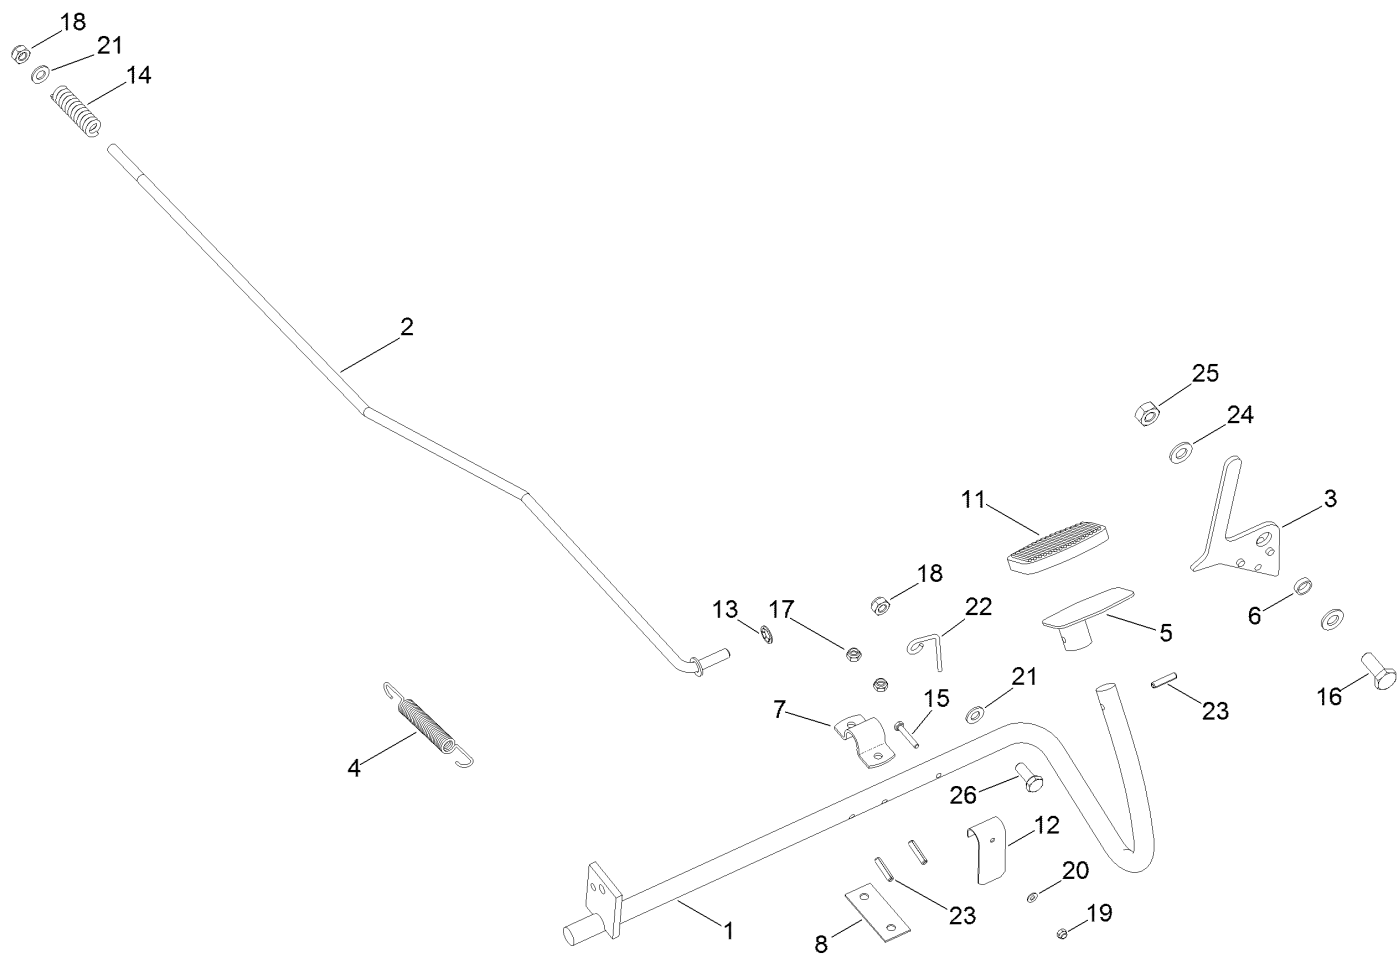

Operation-Brake Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	120-8763	1	Pedal	15	104-3009	1	Screw-Hex
2	120-8725	1	Rod-Brake, Linkage	16	104-3041	1	Screw-Hex
3	120-8726	1	Lever-Parking Brake	17	33023-00	2	Nut-Lock
4	104-3001	1	Spring	18	33024-00	2	Nut-Lock, NI
5	120-8727	1	Pedal-Travel, Brake	19	104-2985	1	Nut-Hex
6	120-8728	1	Spacer	20	106-5766	1	Washer
7	119-5406	1	Clamp	21	106-4756	2	Washer-Plain
8	119-2434	1	Spacer	22	111-8243	1	Spring-Lever
11	104-3018	1	Pad-Pedal	23	104-3008	3	Pin-Spring
12	119-5509	1	Bracket-Parking Brake	24	33095-00	2	Washer-Flat
13	121-0963	1	Washer	25	33025-00	1	Nut-Lock, NI
14	104-3002	1	Spring-Brake	26	33114-020	1	Screw-HH


Electrical - Wiring Harness Assembly

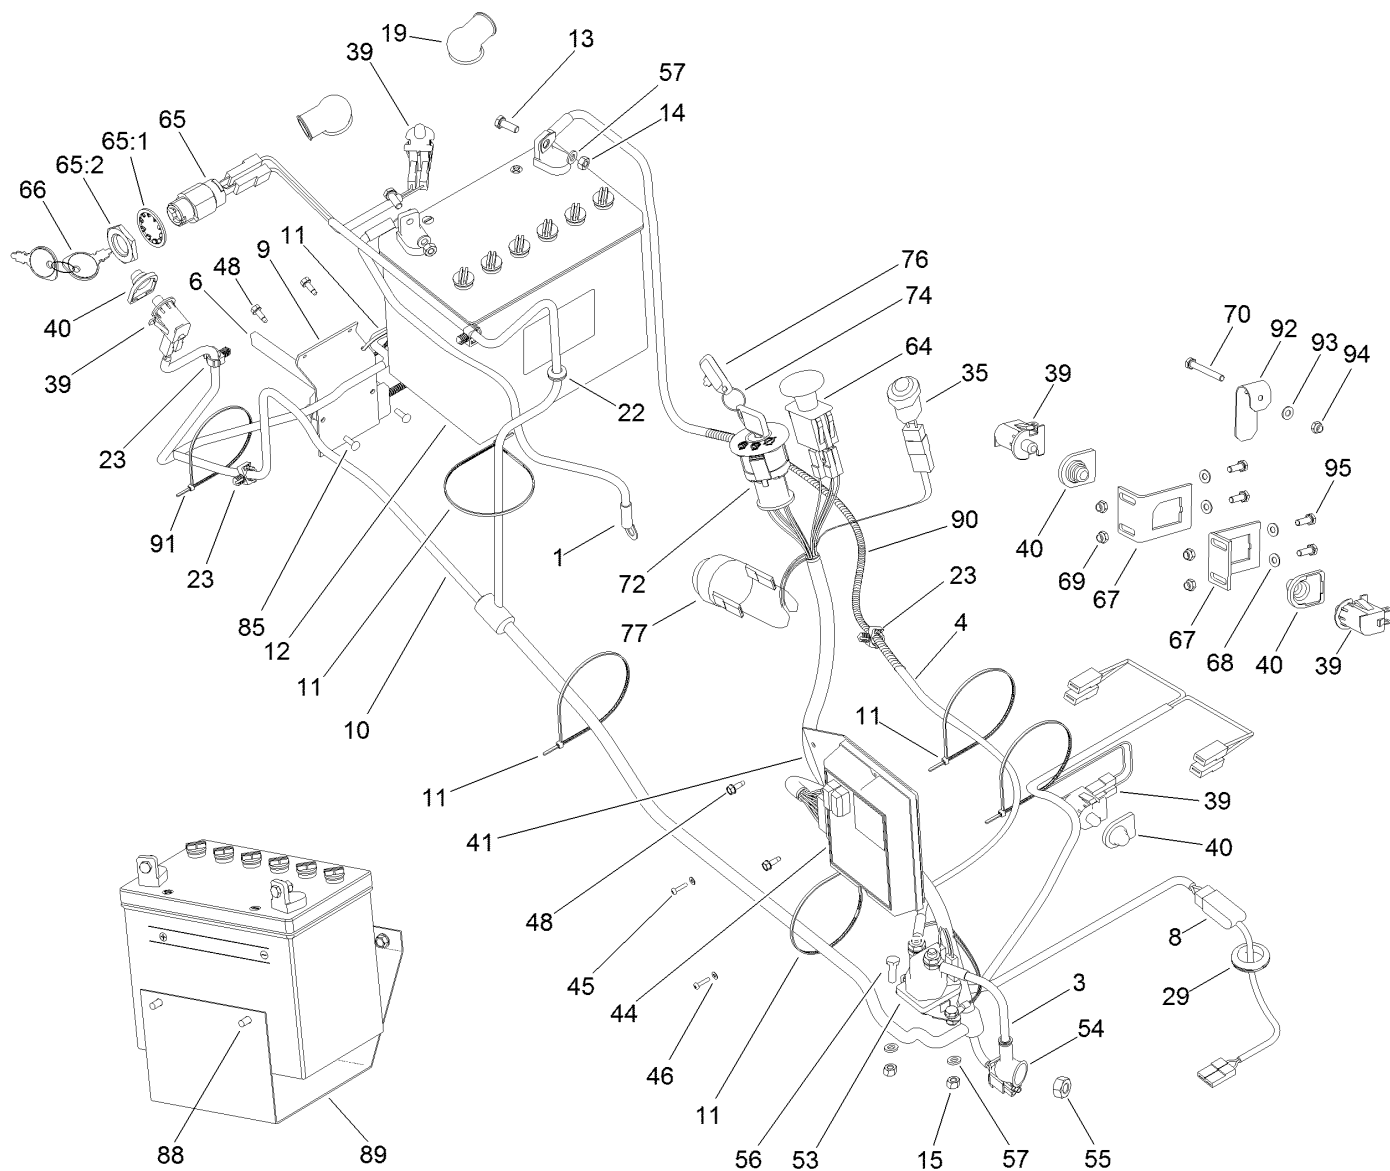

Electrical - Wiring Harness Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	119-5417	1	Cable-Battery, Negative	55	32128-32	1	Nut-HHF
3	119-5418	1	Lead-Starter, Electric	56	33113-012	2	Screw-HH
4	120-8729	1	Cable-Battery, Positive	57	104-3193	4	Washer
6	119-5429	1	Switch-Omron	64	93-9998	1	Switch-PTO
8	119-5430	1	Harness-Clutch	65	46-5780	1	Starter Switch ASM
9	119-5431	1	Bracket-Switch	65:1	3254-5	1	Washer-Tooth, Internal
10	111-8246	1	Harness-Wiring	65:2	218-461	1	Nut-HH
11	111-6843	6	Tie-Cable	66	62-7770	2	Key-Ignition
12	104-2491	1	Battery	67	111-8247	2	Holder-Switch
13	33113-016	2	Screw-HH	68	52-6430	4	Washer
14	104-2991	2	Nut-Hex	69	87-5140	4	Nut-Lock
15	33023-00	2	Nut-Lock	70	104-3009	1	Screw-Hex
19	104-3154	2	Boot-Rubber	72	119-5438	1	Switch-Ignition
22	104-3164	1	Bushing	74	119-5439	1	Ring
23	104-3157	6	Clip-Snap	76	119-5510	2	Key-Ignition
29	104-2959	1	Bushing	77	119-5511	1	Buzzer
35	111-8249	1	Lamp-Indicator	85	104-3349	2	Screw
39	104-3179	5	Switch-Delta	88	106-5763	4	Screw
40	104-3178	4	Cover-Protective	89	125-2290	1	Holder-Battery
41	119-5433	1	Bracket-Support, Module	90	111-6844	1	Protection-Cable
44	111-8248	1	Control Module	91	3334-945	1	Tie-Cable
45	119-5436	2	Screw	92	125-2305	1	Lever-Spring
46	119-5437	2	Washer	93	104-2984	1	Washer
48	104-2977	4	Screw-TAP	94	104-2985	1	Nut-Hex
53	104-3189	1	Solenoid	95	111-8253	4	Screw
54	104-3187	2	Boot-Rubber				


Seat and Body Fender Assembly

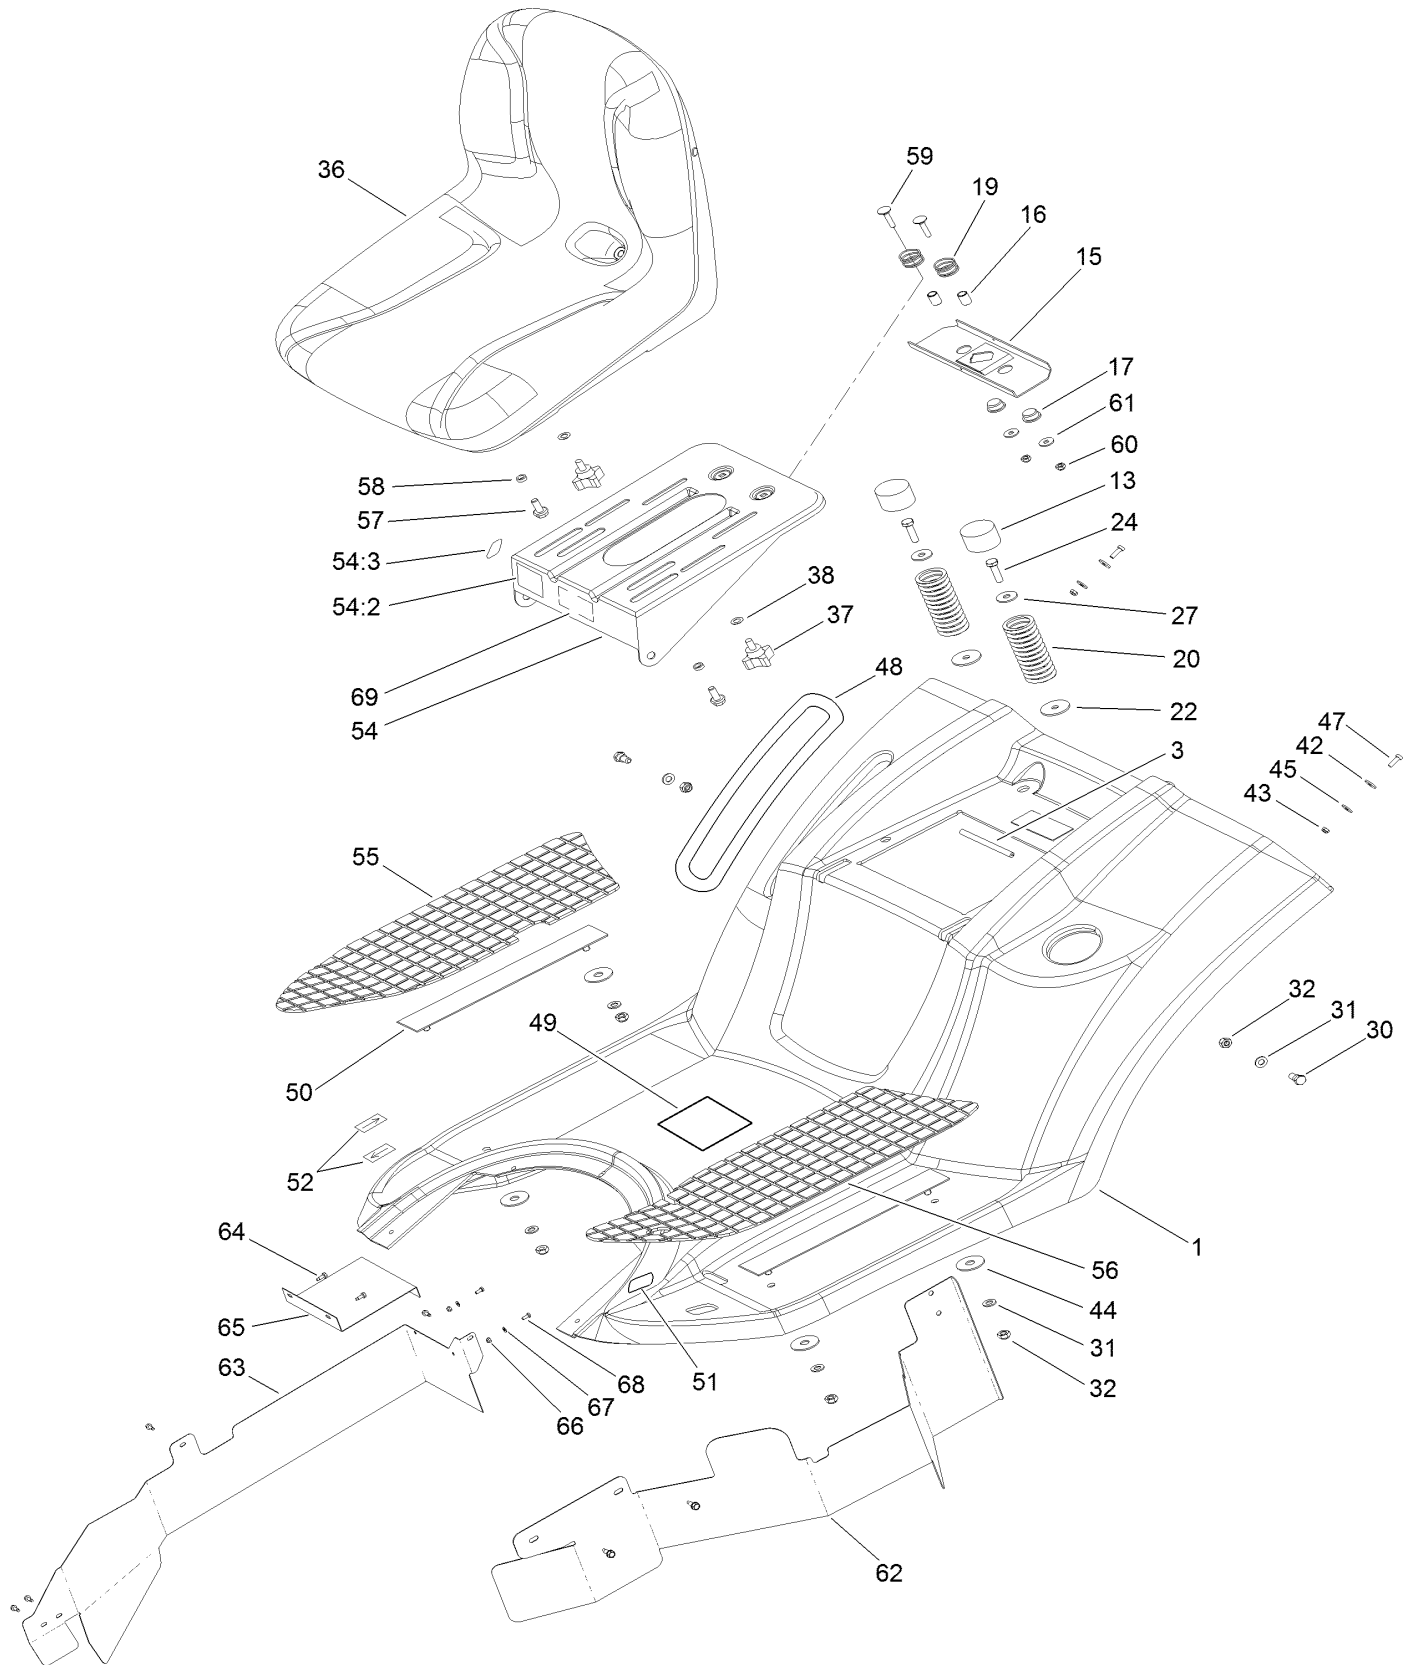

Seat and Body Fender Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-2306	1	Fender-Rear	49	119-2725	1	Decal-Danger
3	111-6845	1	Purl-Rubber, Battery	50	125-2321	2	Holder
13	104-2857	2	Cap-Hub	51	104-3237	1	Decal-Brake, Parking
15	104-2934	1	Bracket	52	119-5487	2	Decal-Travel
16	104-2933	2	Spacer-Split	54	119-5513	1	Bracket-Support, Seat
17	104-2935	2	Bushing	54:2	119-2730	1	Decal-Danger
19	119-5514	2	Seat-Spring	54:3	99-5340	1	Decal-Switch
20	104-2945	2	Spring-Seat	55	120-8745	1	Mat-Foot, RH
22	120-8747	2	Washer	56	120-8746	1	Mat-Foot, LH
24	33114-025	2	Screw-HH	57	33104-020	2	Screw-HHF
27	104-2946	2	Washer-Plain	58	119-5457	2	Spacer
30	104-2939	2	Screw-Support, Seat	59	33123-030	2	Screw-CARR
31	33094-00	6	Washer-Plain	60	33023-00	2	Nut-Lock
32	33024-00	6	Nut-Lock, NI	61	104-2931	2	Washer-Flat
36	119-5455	1	Seat	62	111-8293	1	Cover-Belt, Left
37	119-5456	2	Knob-Adjust	63	111-8294	1	Cover-Belt, Right
38	104-2936	2	Washer-Spring	64	104-2977	8	Screw-TAP
42	104-2943	2	Washer-Flat	65	111-8295	1	Cover-Belt, Top
43	87-5140	2	Nut-Lock	66	104-2985	2	Nut-Hex
44	104-2949	4	Washer-Rubber	67	106-5766	2	Washer
45	104-2952	2	Washer-Rubber	68	111-8296	2	Screw
47	104-2980	2	Screw	69	93-7276	1	Decal-Danger
48	120-8748	1	Decal-Height Of Cut				


Grass Collector Assembly

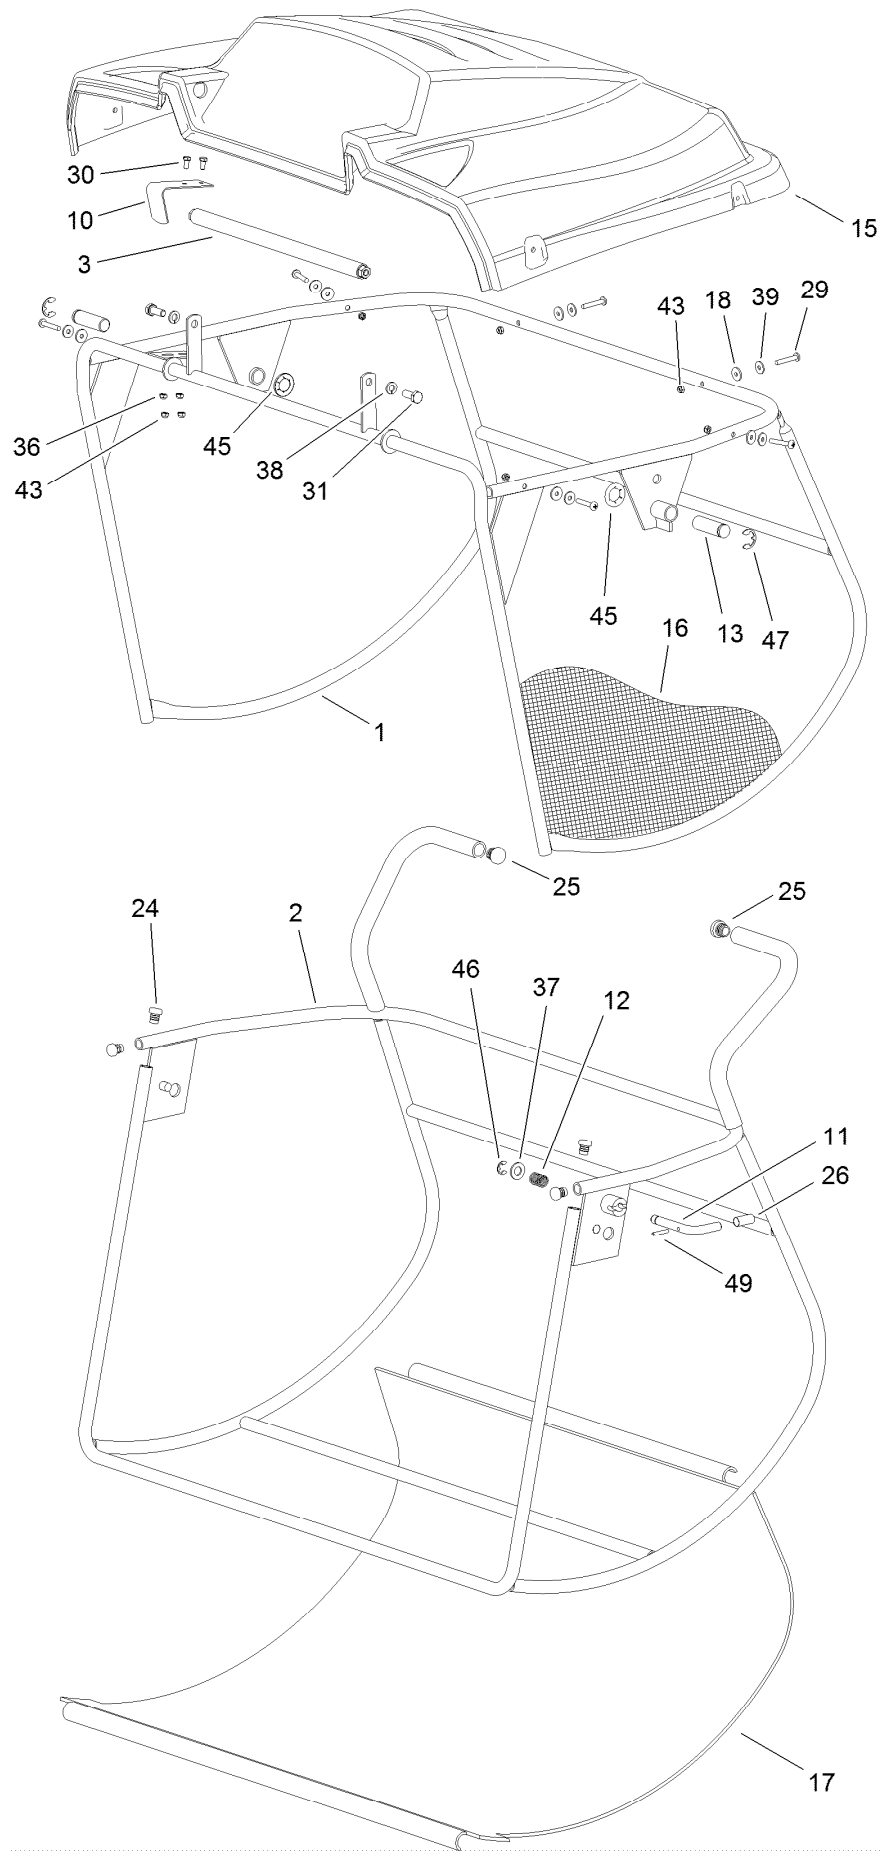

Grass Collector Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	119-5463	1	Upper Frame ASM	26	119-5473	1	Cap
2	119-5464	1	Lower Frame ASM	29	119-5476	6	Screw
3	119-5465	1	Handle-Lift	30	119-5477	2	Screw
10	119-5466	1	Bracket-Collector, Interlock	31	33114-020	2	Screw-HH
11	119-5467	1	Lever-Collector Lock	36	52-6430	2	Washer
12	119-5468	1	Spring	37	33095-00	1	Washer-Flat
13	119-5469	2	Pin	38	104-2927	2	Washer-Spring
15	119-5470	1	Cover-Collector	39	104-2943	2	Washer-Flat
16	119-5471	1	Bag-Grass	43	87-5140	8	Nut-Lock
17	119-5472	1	Bag-Lower	45	119-5478	2	Ring-Lock
18	104-2952	6	Washer-Rubber	46	104-3015	2	E-Clip
24	119-5475	4	Cap	47	119-5503	2	E-Clip
25	119-5474	2	Cap	49	119-5479	1	Pin


Tunnel Assembly

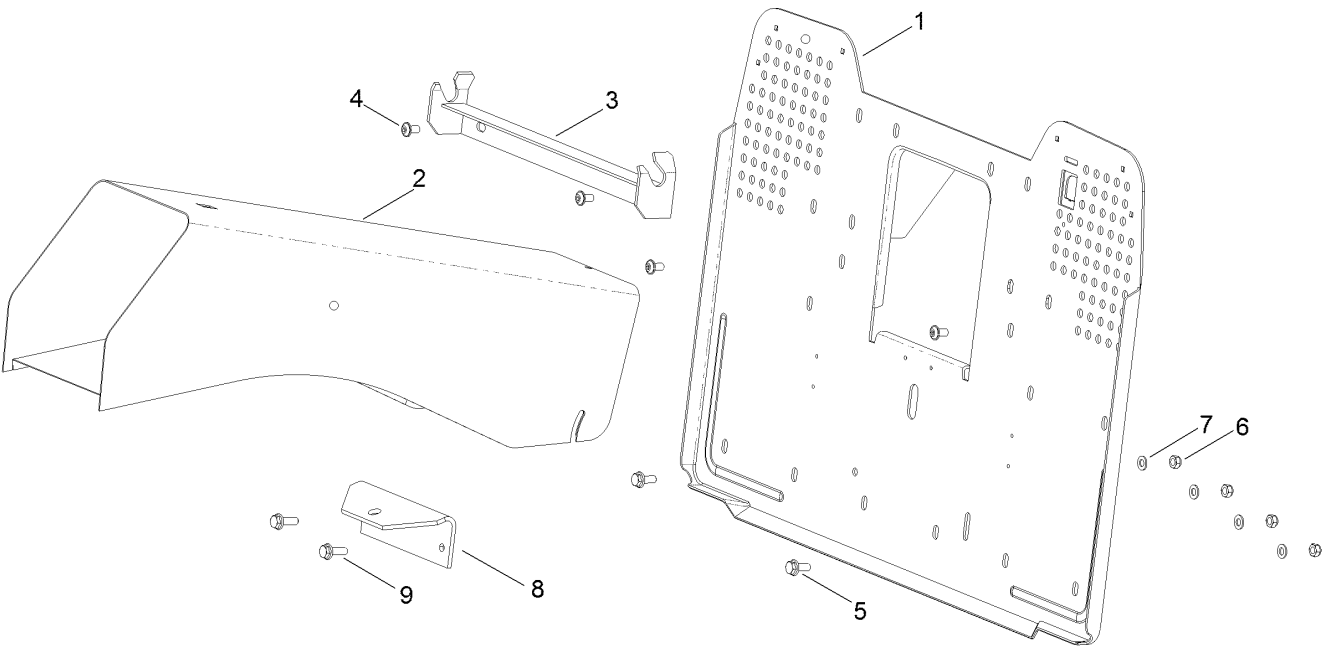

Tunnel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-2336	1	Collector Plate ASM	6	33024-00	4	Nut-Lock, NI
2	119-5481	1	Tunnel	7	33094-00	4	Washer-Plain
3	119-5482	1	Support-Collector	8	119-5516	1	Hitch-Tow
4	104-3060	4	Bolt-Carriage	9	33104-025	2	Screw-HHF
5	119-5483	2	Screw				


Mulch Plug Assembly

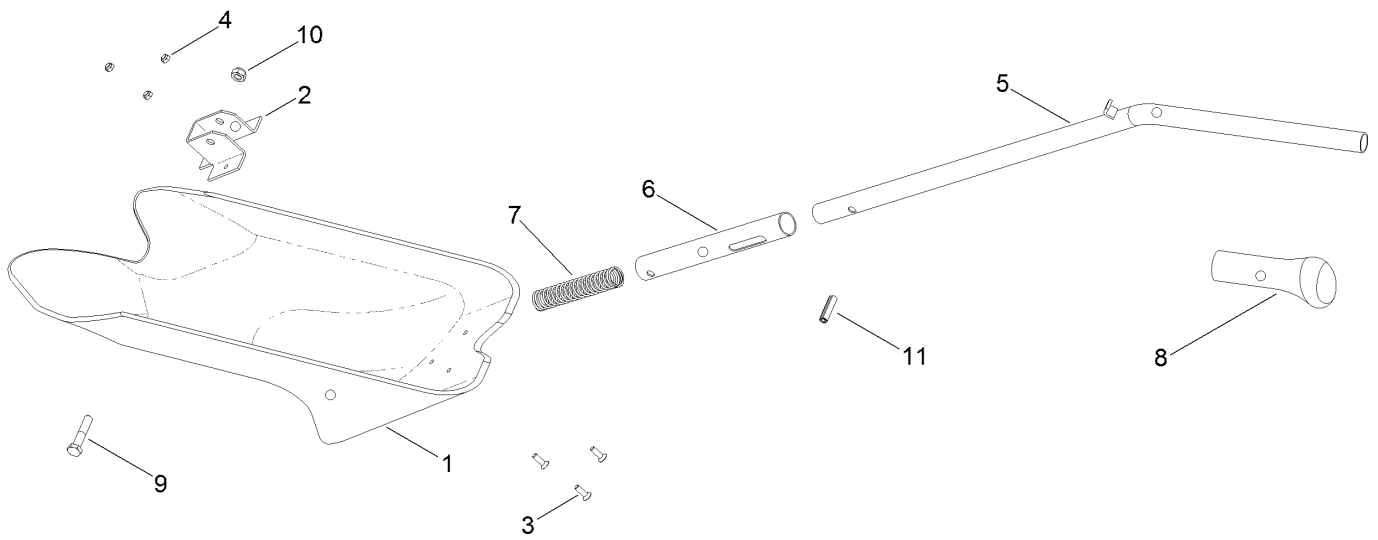

Mulch Plug Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	120-8732	1	Shield-Mulching	7	120-8736	1	Spring, Mulching
2	120-8733	1	Bracket-Shield, Mulching	8	120-8737	1	Handle-Mulching
3	120-8775	3	Screw	9	33114-040	1	Screw-HH
4	87-5140	3	Nut-Lock	10	33024-00	1	Nut-Lock, NI
5	120-8734	1	Handle-Mulching, Top	11	121-0964	1	Pin-Spiral
6	120-8735	1	Handle-Mulching, Bottom				


Frame Assembly

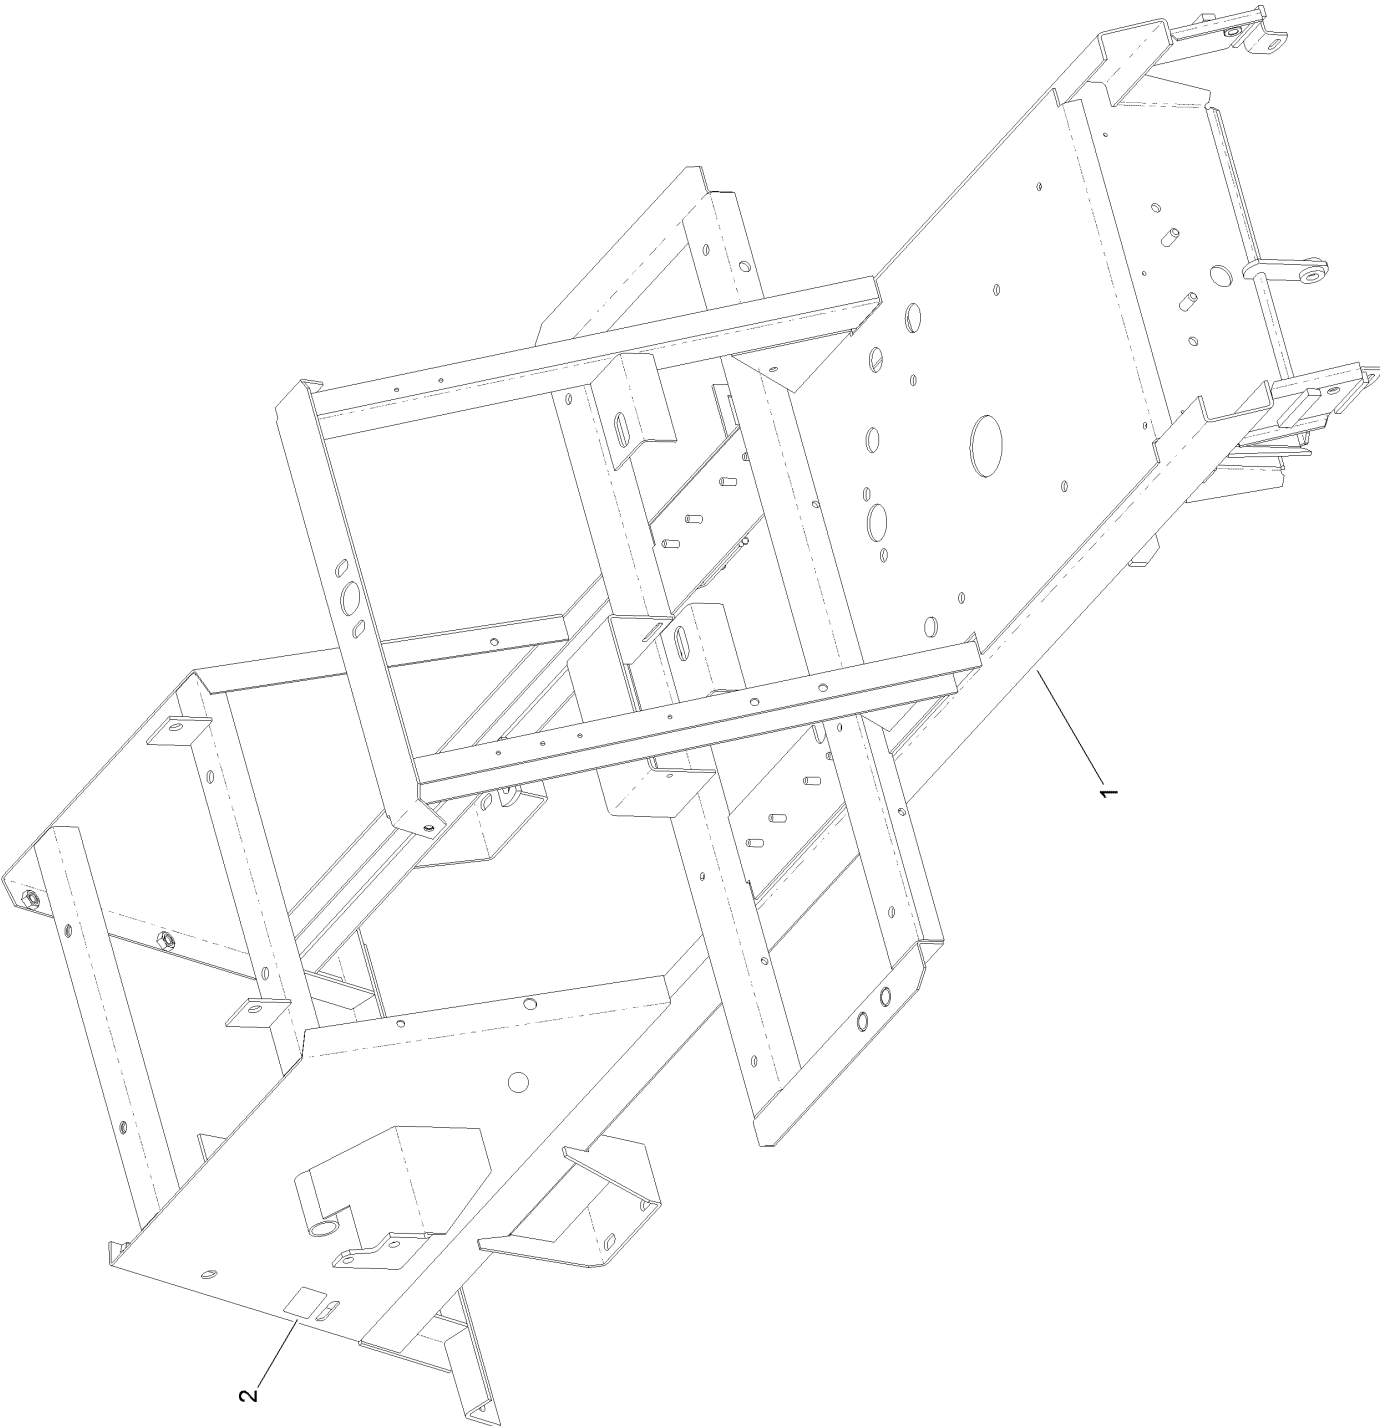

Frame Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	120-8710	1	Frame ASM
2	119-5515	1	Decal-Bypass

Hood and Control Panel Assembly

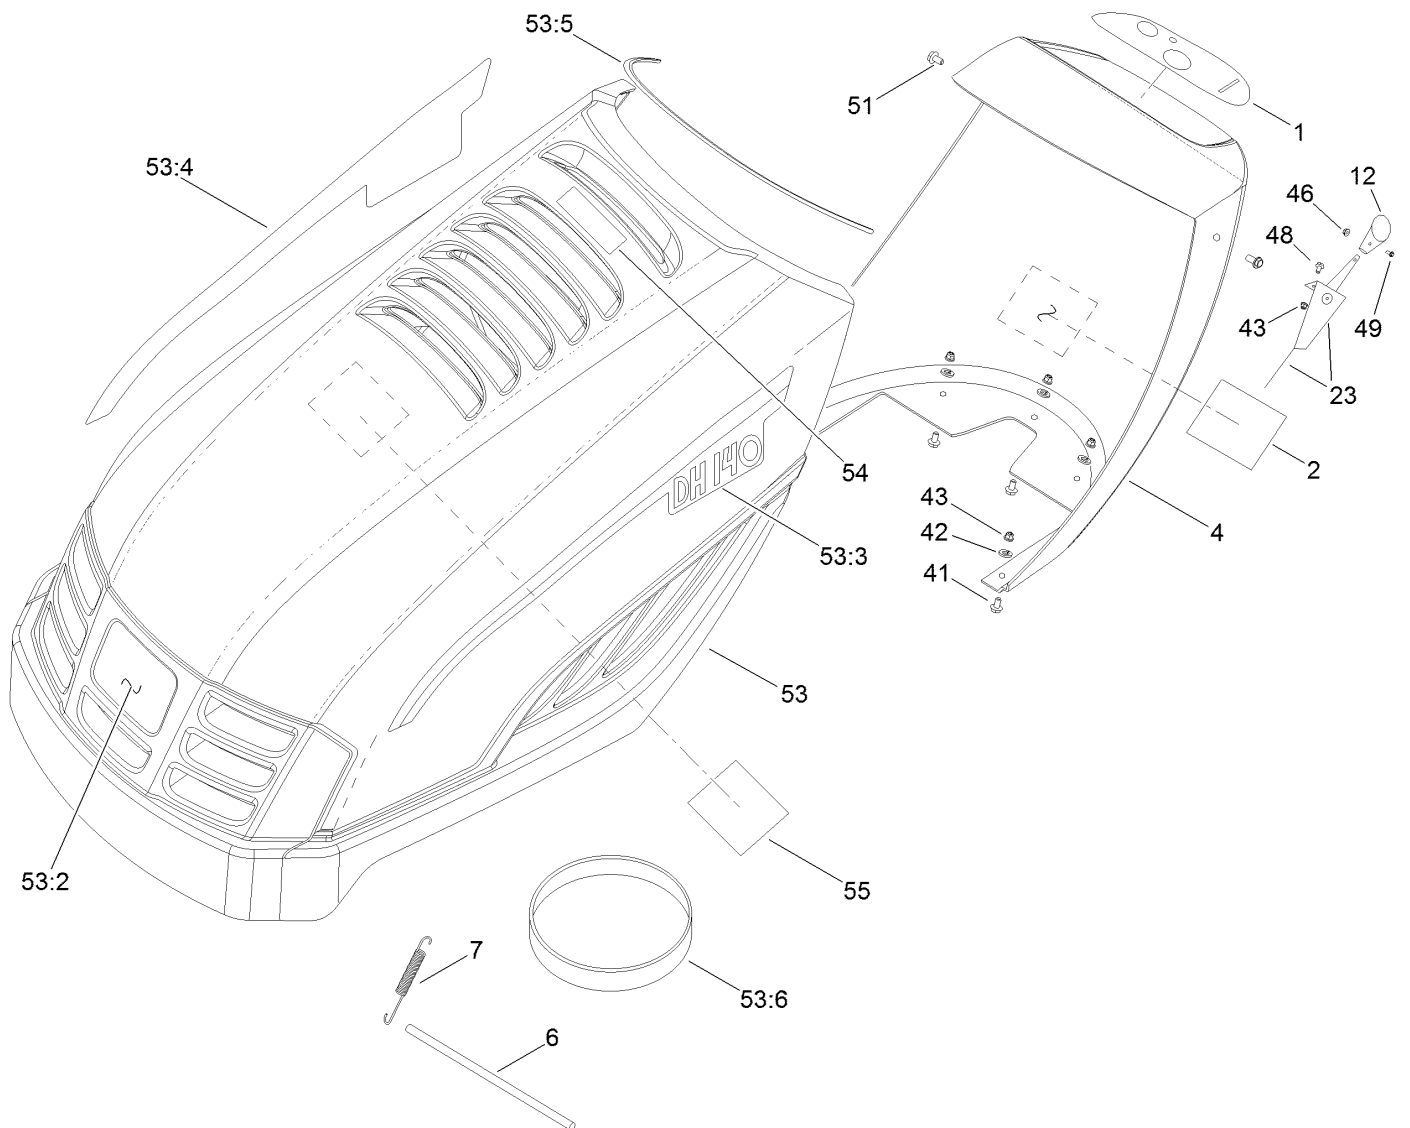

Hood and Control Panel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	119-5486	1	Decal-Panel	48	104-2966	2	Screw-Flat Head
2	119-5517	1	Decal-Instructions, Operating	49	119-5458	1	Screw
4	119-5444	1	Panel-Dash	51	119-5460	2	Screw
6	104-2974	1	Bar-Safety	53	119-5520	1	Hood ASM
7	104-2975	1	Spring-Hood	53:2	117-0871	1	Decal
12	119-5448	1	Knob-Throttle/Choke	53:3	119-2718	1	Decal-Dh 140 (LH)
23	119-5453	1	Cable-Throttle/Choke	53:4	119-2719	1	Decal-Dh 140 (RH)
41	104-2978	5	Screw-Hex	53:5	119-5445	1	Rubber-Purl
42	104-2943	10	Washer-Flat	53:6	119-5446	1	Gasket-Foam
43	87-5140	7	Nut-Lock	54	111-8217	1	Decal-Warning, Hood
46	104-2985	1	Nut-Hex	55	93-7276	1	Decal-Danger

Attachments and Accessories

For 74560 DH 140 Lawn Tractor

Product Name	Model/Part
Rear Discharge Chute Kit	117-0054
Towing Hitch Kit	119-5555
Belt Guard Kit	120-1180

Notes:

Notes:

Notes:



Count on it.