




Count on it.

Form No. 3373-615 Rev B


Parts Catalog

Greens Pro™ 1200

Model No. 44906-Serial No. 312000001 and Up

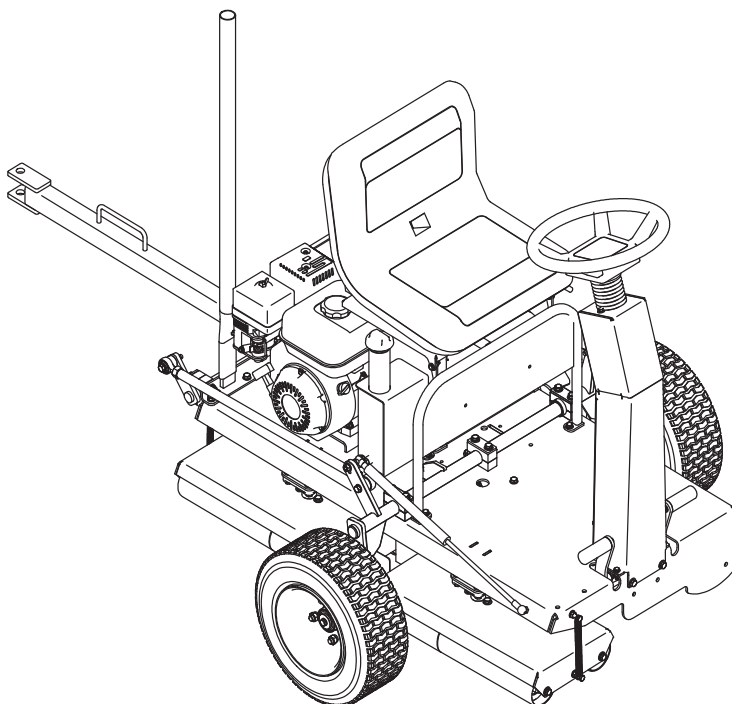


Item No.	Part No.	Description	Quantity	Item No.	Part No.	Description	Quantity
1	G0379	FIXING COLLAR	2	15.9	3256-24	WASHER-FLAT [.406X.813,STL,YZ]	2
2	G0511	BUSH	1	15.10	3254-6	WASHER-LOCK, INTERNAL [.375,STL,YZ]	2
3	G1136	BUSH	2	15.11	94-8000	NUT-LOCK, INSERT [7/8"- 14,YZ]	2
5	G1229	BUSH	4	16	G5160	BRONZE BUSH	2
6	G1320	PIVOT SHAFT	2	17	G5171	TENSION SPRING	2
7	G1321	STEERING DISC	1	18	G5173	PRESSED METAL BALL JOINT	6
8	G1324	LINKAGE ARM	2	19	G5358	BEARING HOUSING	2
10	G1328	STEERING PIVOT ROD	1	20	G5359	BEARING	2
11	G1397	STEERING SPACER BUSH	1	22	3210-8	SCREW-HH[.312-24X1.50,GR5,YZ]	4
12	G1440	FRONT STEERING HEAD	1	23	3256-23	WASHER-FLAT [.344X.688,STL,YZ,.080/.051]	8
13	G1441	REAR STEERING HEAD	1	24	3219-2	NUT-HEX [5/16-24, GR2, YZ]	4
14	G1653	LONG STEERING ROLLER ASSEMBLY	2	25	32146-4	NUT-LOCK, INSERT [.313-24,YZ]	4
14.1	G1378	LONG STEERING AXLE	1	26	3211-4	SCREW-HH[.375-24X1.000,GR5,YZ]	1
14.2	G9352	BEARING	4	27	3211-5	SCREW-HH[.375-24X1.250,GR5,YZ]	4
14.3	G1471	LONG ROLLER SPACER	2	28	3211-6	SCREW-HH[.375-24X1.500,GR5,YZ]	10
14.4	G1648	LONG STEERING ROLLER	2	29	3211-8	SCREW-HH[.375-24X1.750,GR5,YZ]	4
14.5	G1473	SHORT ROLLER SPACER	1	30	111-5635	BOLT HH [3/8" UNC X 4" LONG]	1
14.6	3211-4	SCREW-HH[.375-24X1.000,GR5,YZ]	2	31	3256-24	WASHER-FLAT [.406X.813,STL,YZ]	26
14.7	3256-24	WASHER-FLAT [.406X.813,STL,YZ]	2	32	3254-6	WASHER-LOCK, INTERNAL [.375,STL,YZ]	2
14.8	3254-6	WASHER-LOCK, INTERNAL [.375,STL,YZ]	2	33	HY03355	WASHER 3/8"***15G	4
14.9	94-8000	NUT-LOCK, INSERT [7/8"- 14,YZ]	2	34	3219-3	NUT-HEX [.375-24,GR2,YZ]	2
15	G1654	SHORT STEERING ROLLER ASSEMBLY	2	35	32146-6	NUT-LOCK, INSERT [.375-24,YZ]	18
15.1	G1377	SHORT STEERING AXLE	1				
15.2	G9352	BEARING	4				
15.3	G1472	ROLLER SPACER	1				
15.4	G1471	LONG ROLLER SPACER	1				
15.5	G1473	SHORT ROLLER SPACER	1				
15.6	G1649	SHORT STEERING ROLLER	1				
15.7	G1648	LONG STEERING ROLLER	1				
15.8	3211-4	SCREW-HH[.375-24X1.000,GR5,YZ]	2				

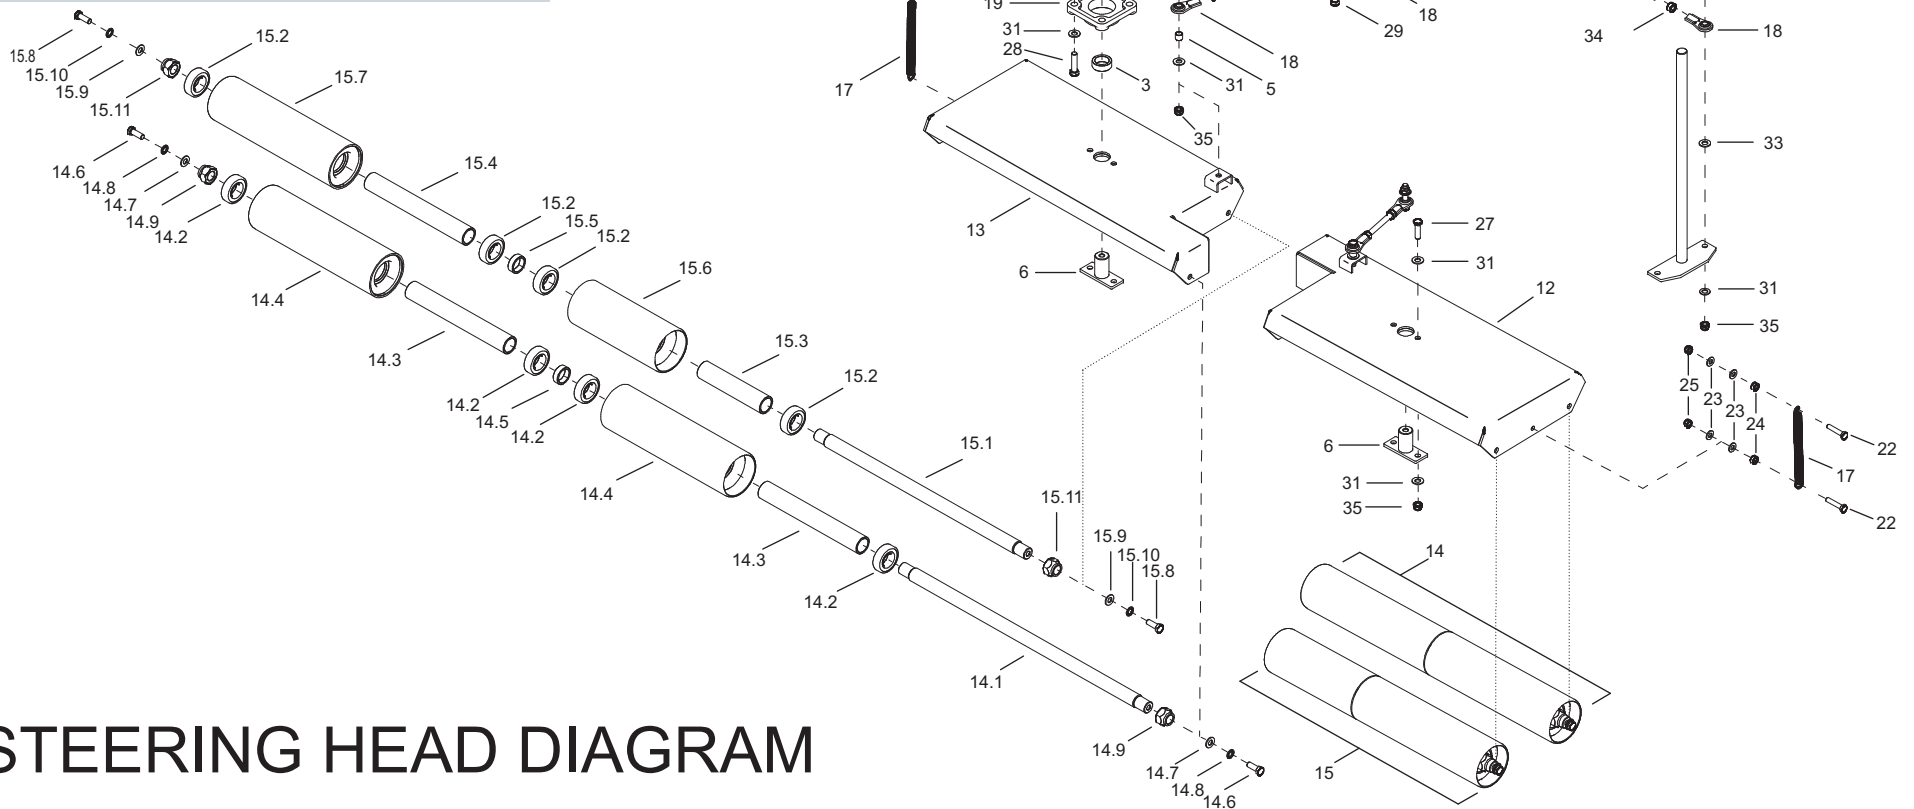


STEERING HEAD DIAGRAM

TRANSMISSION-TANK DIAGRAM

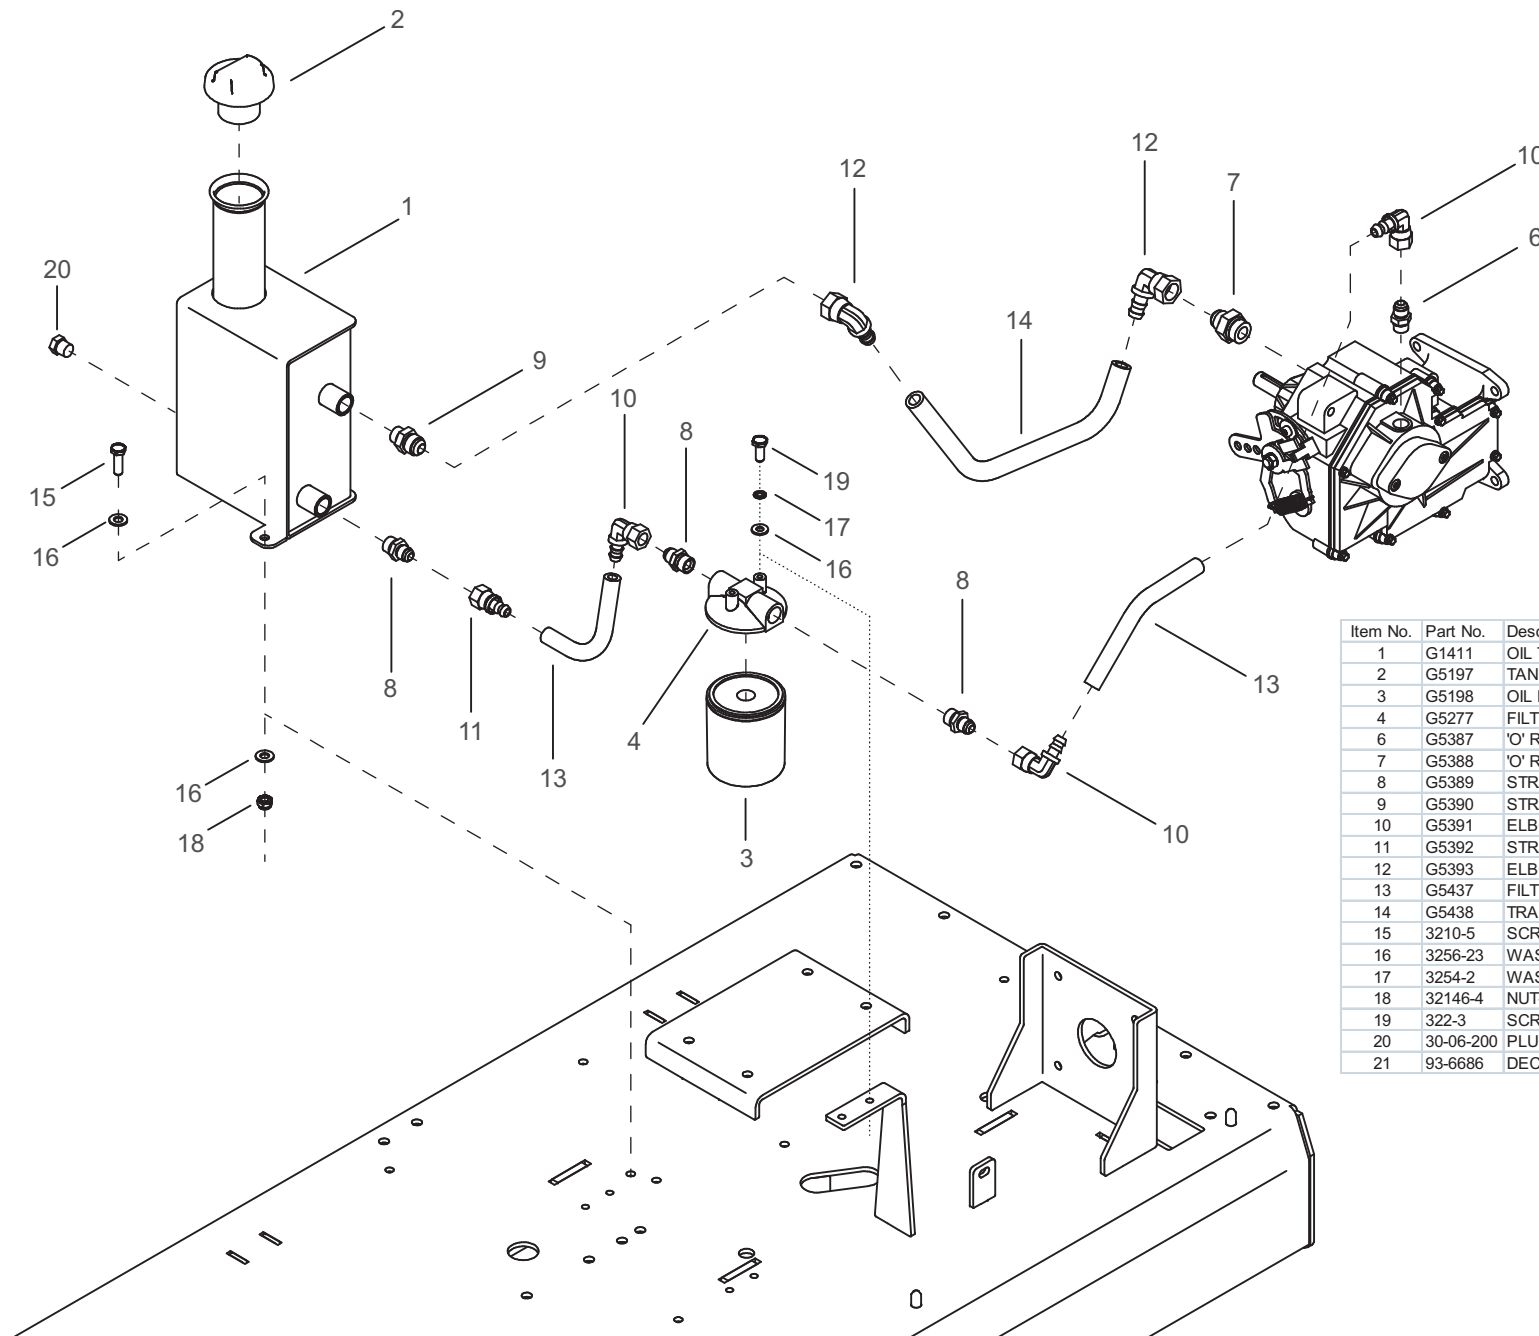


Item No.	Part No.	Description	Quantity
1	G1411	OIL TANK	1
2	G5197	TANK CAP	1
3	G5198	OIL FILTER	1
4	G5277	FILTER ELBOW	1
6	G5387	'O' RING FITTING	1
7	G5388	'O' RING FITTING LARGE	1
8	G5389	STRAIGHT FITTING	3
9	G5390	STRAIGHT HOSE FITTING LARGE	1
10	G5391	ELBOW HOSE FITTING	3
11	G5392	STRAIGHT HOSE FITTING	1
12	G5393	ELBOW HOSE FITTING LARGE	2
13	G5437	FILTER TRANSMISSION HOSE	2
14	G5438	TRANSMISSION TANK HOSE	1
15	3210-5	SCREW-HH[.312-24X1.000,GR5,YZ]	2
16	3256-23	WASHER-FLAT [.344X.688,STL,YZ,.080/.051]	6
17	3254-2	WASHER-LOCK, INTERNAL [.312,STL,YZ]	2
18	32146-4	NUT-LOCK, INSERT [.313-24,YZ]	2
19	322-3	SCREW-HH [5/16-18 X .750, GR5, YZ]	2
20	30-06-200	PLUG-PARALLEL [1/4" M BLANK]	1
21	93-6686	DECAL-OIL, HYD - Not Illustrated	1

Item No.	Part No.	Description	Quantity
1	G0068	KEY	1
2	G5142	BEARING ASSEMBLY	2
2.1	G5301	BEARING HOUSING	1
2.2	G5396	1" BEARING	1
3	G5375	TAPERLOCK HUB	1
4	G5376	30 TOOTH SPROCKET	1
5	G5383	DRIVE CHAIN	1
6	G5495	COLLAR	2
7	G5610	DRIVE ROLLER ASSEMBLY	1
7.1	G1900	KEYED ROLLER AXLE	1
7.2	G1901	ROLLER AXLE	1
7.3	G2182	DRIVE ROLLER	1
7.4	3210-5	5/16" UNF X 1" LONG BOLT	6
7.5	3254-2	5/16" SPRING WASHER	6
7.6	3256-23	5/16" FLAT WASHER	6
8	3211-6	SCREW-HH[.375-24X1.500,GR5,YZ]	4
9	3256-24	WASHER-FLAT [.406X.813,STL,YZ]	8
10	32146-6	NUT-LOCK, INSERT [.375-24,YZ]	4

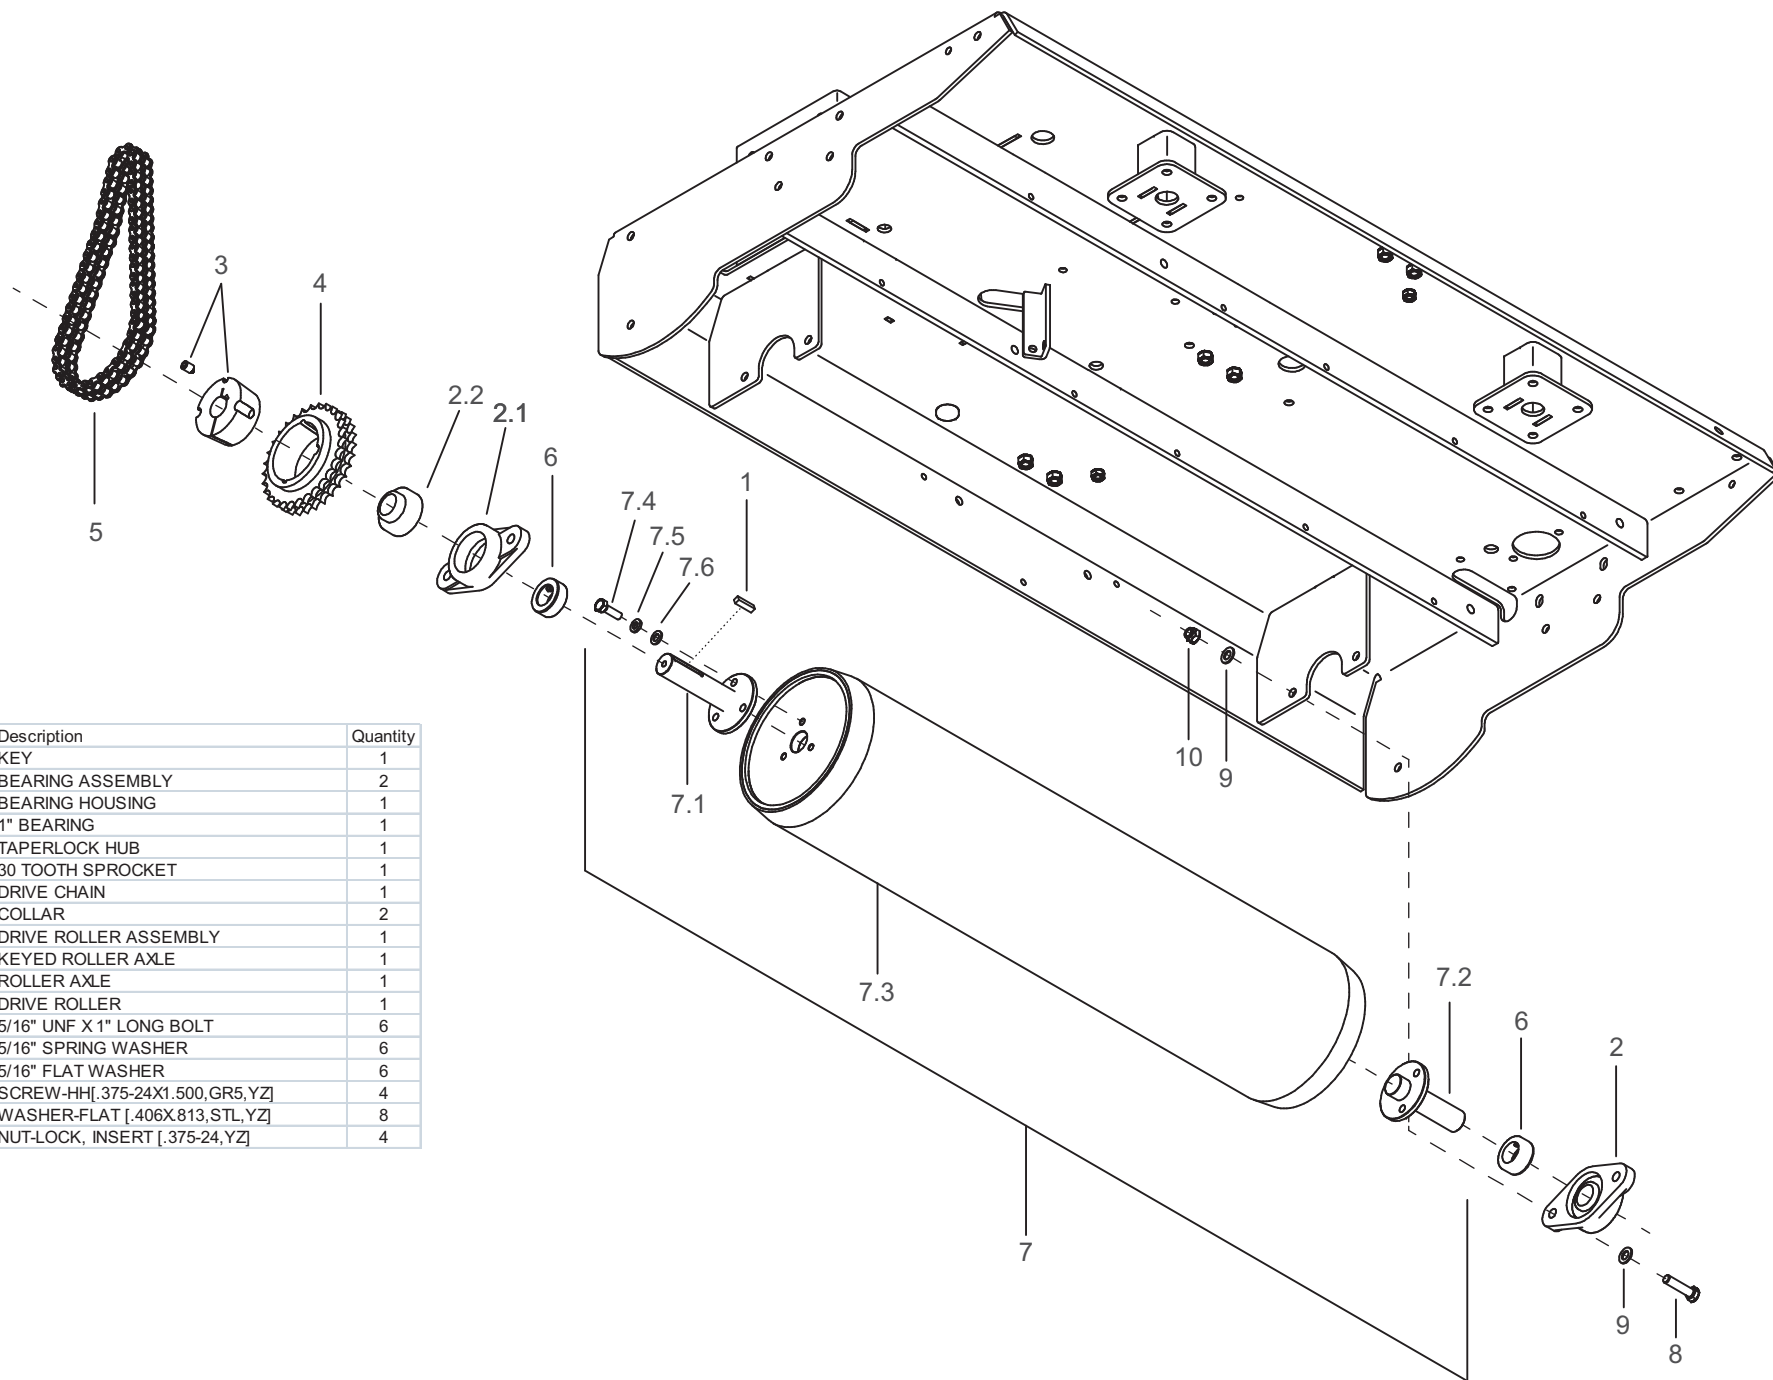

DRIVE ROLLER DIAGRAM


ENGINE-TRANSMISSION DIAGRAM

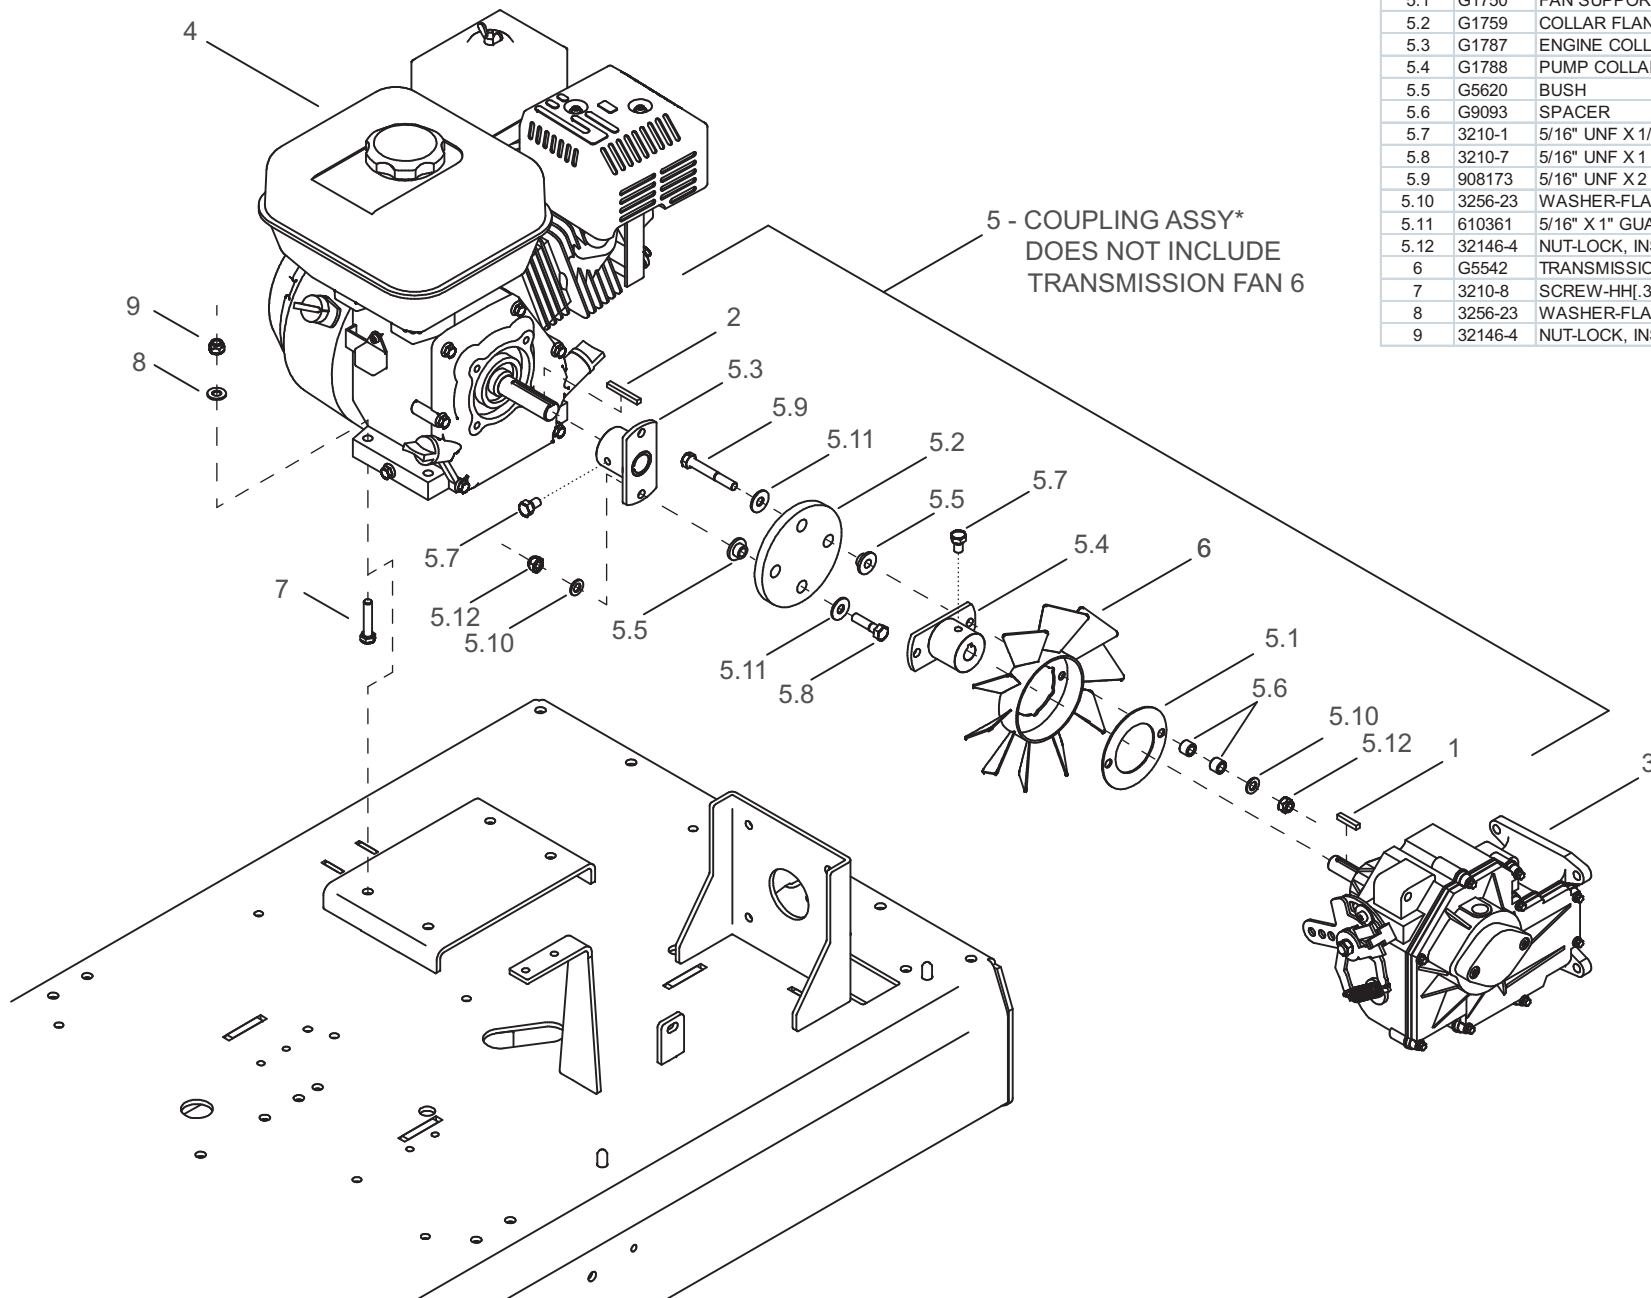


Item No.	Part No.	Description	Quantity
1	G1658	KEY 25MM X 5MM	1
2	G1659	KEY 40MM X 3/16"	1
3	G5366	TRANSMISSION	1
4	G5368	ENGINE HONDA GX200	1
5	G5537	COUPLING ASSEMBLY	1
5.1	G1750	FAN SUPPORT RING	1
5.2	G1759	COLLAR FLANGE	1
5.3	G1787	ENGINE COLLAR	1
5.4	G1788	PUMP COLLAR	1
5.5	G5620	BUSH	4
5.6	G9093	SPACER	4
5.7	3210-1	5/16" UNF X 1/2" LONG BOLT	2
5.8	3210-7	5/16" UNF X 1 1/4" LONG BOLT	2
5.9	908173	5/16" UNF X 2 1/4" LONG BOLT	2
5.10	3256-23	WASHER-FLAT [.344X.688, STL, YZ, .080/.051]	4
5.11	610361	5/16" X 1" GUARD WASHER	4
5.12	32146-4	NUT-LOCK, INSERT [.313-24, YZ]	4
6	G5542	TRANSMISSION FAN	1
7	3210-8	SCREW-HH[.312-24X1.50, GR5, YZ]	4
8	3256-23	WASHER-FLAT [.344X.688, STL, YZ, .080/.051]	4
9	32146-4	NUT-LOCK, INSERT [.313-24, YZ]	4

LIFTING MECHANISM DIAGRAM

Item No.	Part No.	Description	Quantity
1	G0379	FIXING COLLAR	2
2	G0570	SPACER	2
3	G1152	AXLE CLAMP PLATE	3
4	G1324	LINKAGE ARM	1
5	G1392	LIFTING ARM ASSEMBLY	1
6	G1394	WHEEL LOCK PLATE	1
7	G1396	WHEEL LOCK BRACKET	1
8	G1438	WHEEL HUB	2
9	G5147	SPRING	1
10	G5173	PRESSED METAL BALL JOINT	2
11	G5317	TYRE 16X6.5-8	2
12	G5318	WHEEL RIM	2
13	G5540	GAS RAM	1
14	G5616	CLAMP	3
15	G9352	BEARING	4
16	329-6	SCREW-HH[.250-28X1.000,GR5,YZ]	1
17	329-7	SCREW-HH[.250-28X1.250,GR5,YZ]	2
18	3256-22	WASHER-FLAT [.281X.625,STL,YZ,.080/.051]	2
19	32146-1	NUT-LOCK, NI [1/4-28]	3
20	3219-1	NUT-HEX [.250-28,GR2,YZ]	3
21	3210-7	SCREW-HH [.312-24X1.25,GR5,YZ]	1
22	3254-2	WASHER-LOCK, INTERNAL [.312,STL,YZ]	1
23	3219-2	NUT-HEX [5/16-24, GR2, YZ]	1
24	3211-5	SCREW-HH[.375-24X1.250,GR5,YZ]	7
25	3211-8	SCREW-HH[.375-24X1.750,GR5,YZ]	1
26	3211-13	SCREW-HH[.375-24X3.000,GR5,YZ]	6
27	3256-24	WASHER-FLAT [.406X.813,STL,YZ]	11
28	3254-6	WASHER-LOCK, INTERNAL [.375,STL,YZ]	11
29	32146-6	NUT-LOCK, INSERT [.375-24,YZ]	4
30	3219-3	NUT-HEX [.375-24,GR2,YZ]	7
31	242-50	NUT-LUG [1/2-20UNF,.81HX,YZ]	8
32	9449	NUT [M10 PLAIN]	1
33	111-5651	DECAL - GREENSPRO 1200 (not illustrated)	2

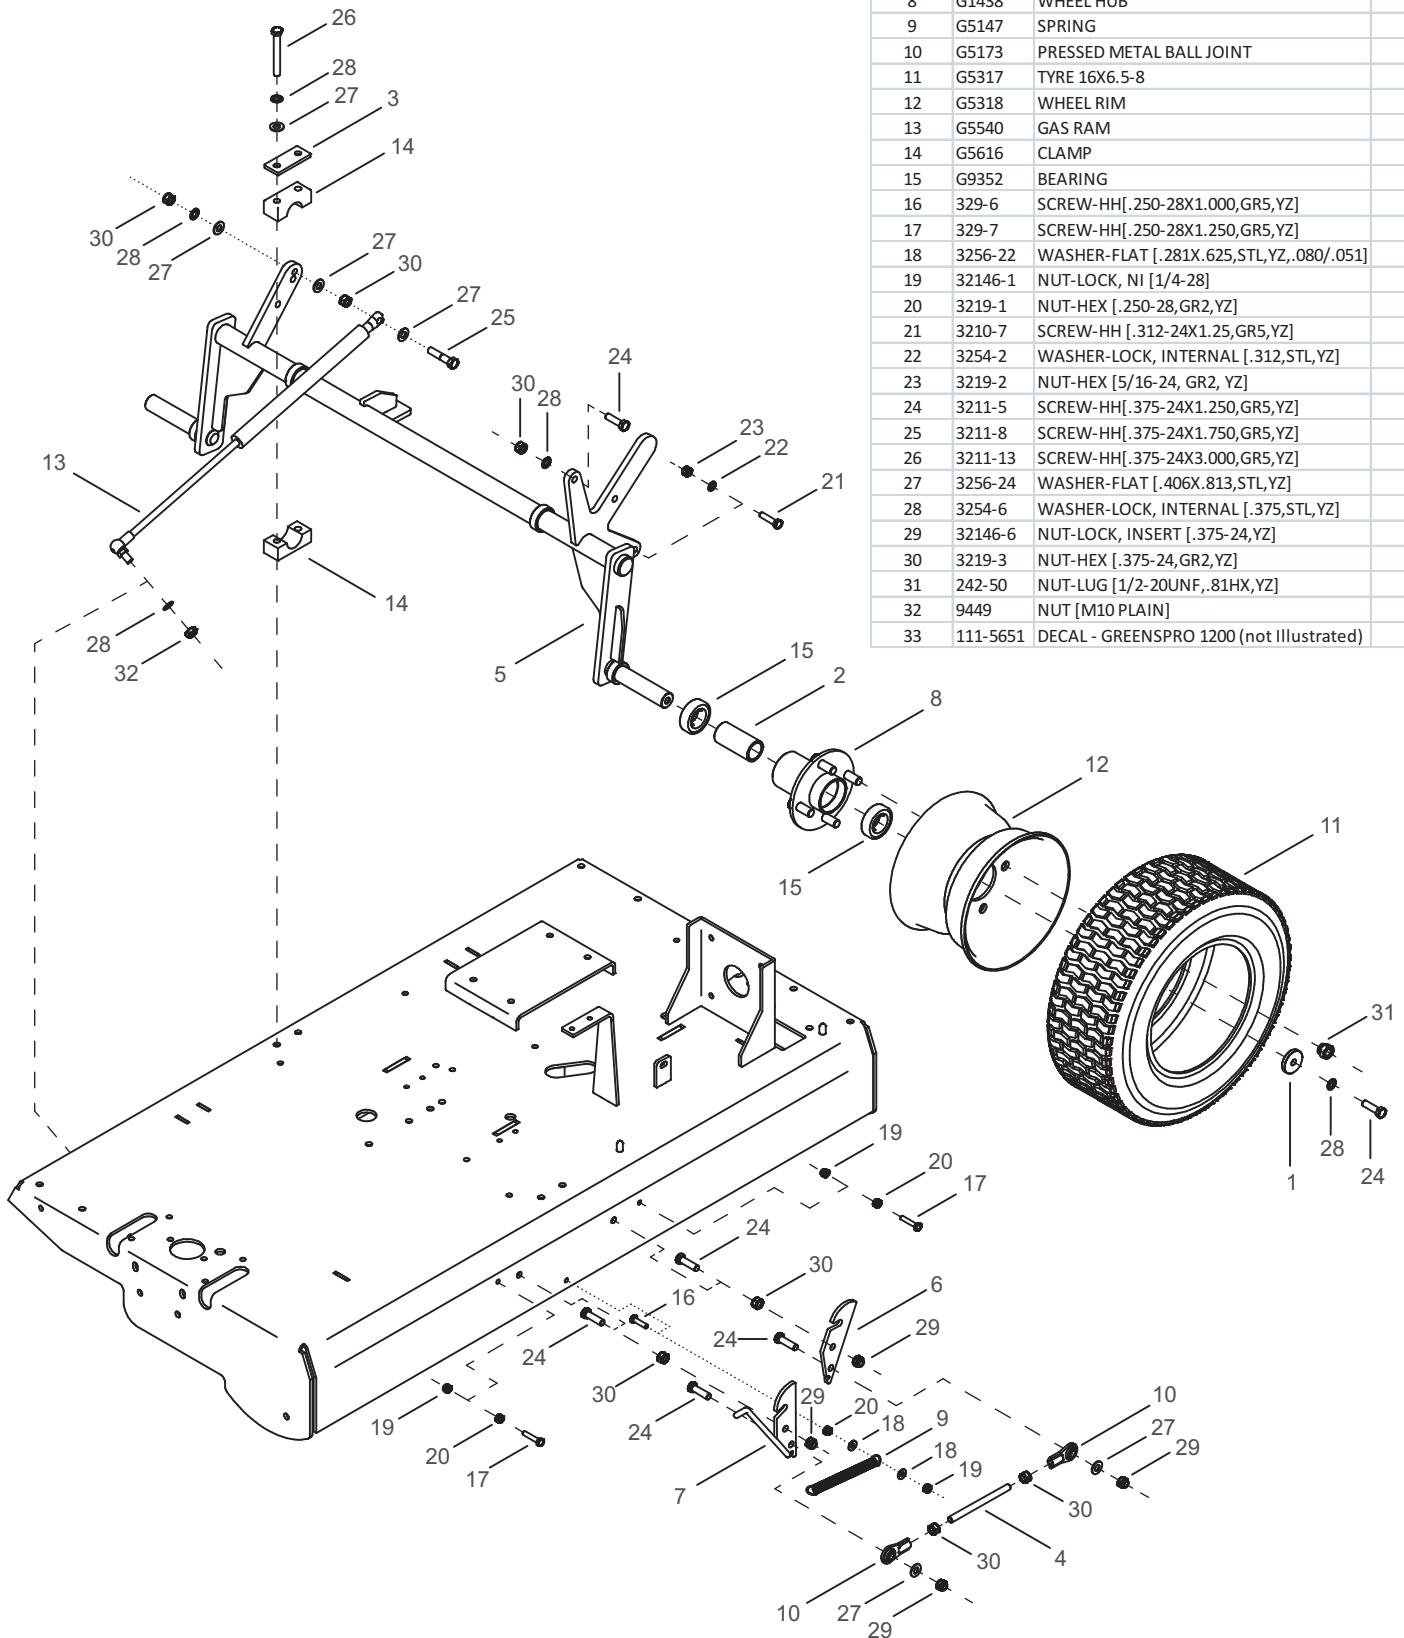


SEAT DIAGRAM

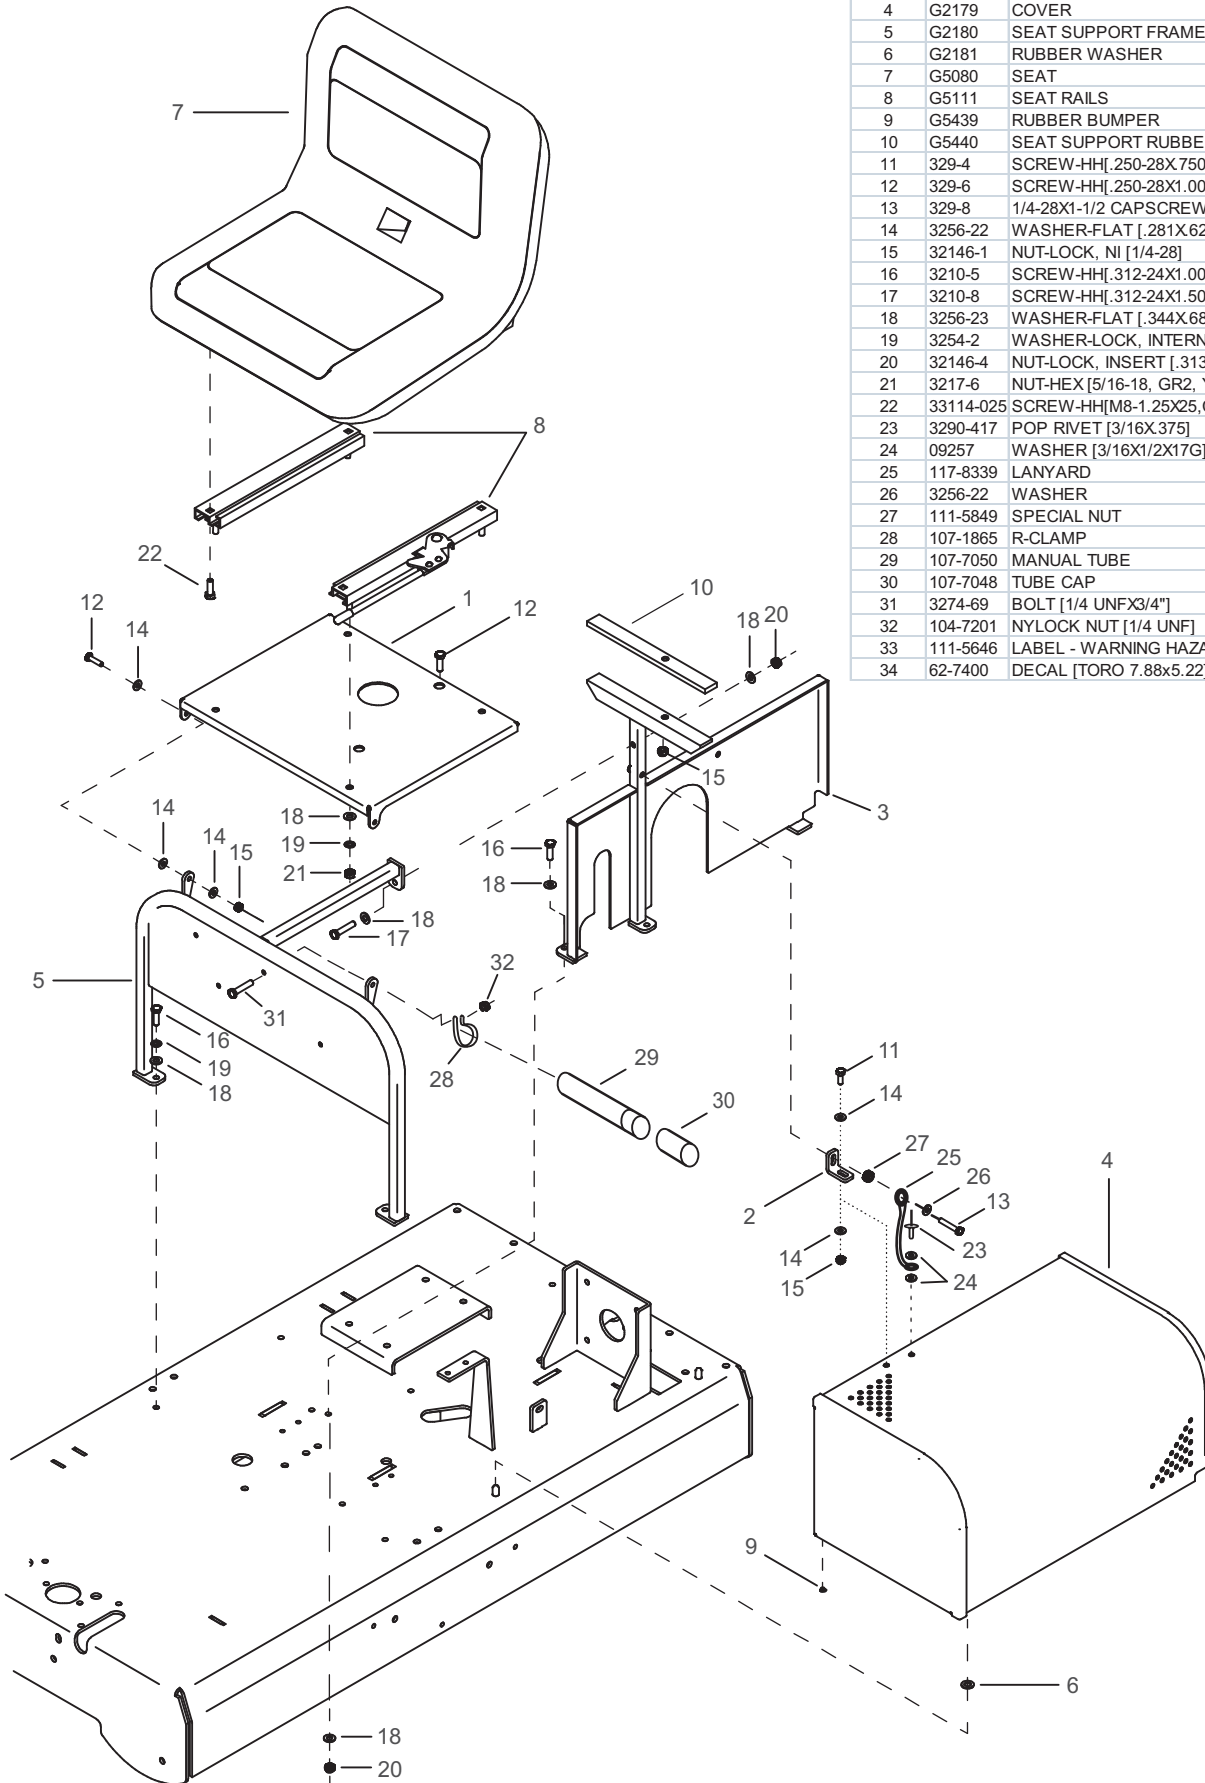

Item No.	Part No.	Description	Quantity
1	G0226	SEAT PAN	1
2	G1599	BRACKET	1
3	G1927	REAR SUPPORT FRAME	1
4	G2179	COVER	1
5	G2180	SEAT SUPPORT FRAME	1
6	G2181	RUBBER WASHER	2
7	G5080	SEAT	1
8	G5111	SEAT RAILS	2
9	G5439	RUBBER BUMPER	2
10	G5440	SEAT SUPPORT RUBBER	1
11	329-4	SCREW-HH[.250-28X.750,GR5,YZ]	1
12	329-6	SCREW-HH[.250-28X1.000,GR5,YZ]	3
13	329-8	1/4-28X1-1/2 CAPSCREW	1
14	3256-22	WASHER-FLAT [.281X.625,STL,YZ,.080/.051]	10
15	32146-1	NUT-LOCK, NI [1/4-28]	5
16	3210-5	SCREW-HH[.312-24X1.000,GR5,YZ]	5
17	3210-8	SCREW-HH[.312-24X1.50,GR5,YZ]	1
18	3256-23	WASHER-FLAT [.344X.688,STL,YZ,.080/.051]	16
19	3254-2	WASHER-LOCK, INTERNAL [.312,STL,YZ]	6
20	32146-4	NUT-LOCK, INSERT [.313-24,YZ]	6
21	3217-6	NUT-HEX[5/16-18, GR2, YZ]	4
22	33114-025	SCREW-HH[M8-1.25X25,CL8.8,YZ]	4
23	3290-417	POP RIVET [3/16X.375]	1
24	09257	WASHER [3/16X1/2X17G]	2
25	117-8339	LANYARD	1
26	3256-22	WASHER	1
27	111-5849	SPECIAL NUT	1
28	107-1865	R-CLAMP	2
29	107-7050	MANUAL TUBE	1
30	107-7048	TUBE CAP	1
31	3274-69	BOLT [1/4 UNFX3/4"]	2
32	104-7201	NYLOCK NUT [1/4 UNF]	2
33	111-5646	LABEL - WARNING HAZARD - Not Illustrated	2
34	62-7400	DECAL [TORO 7.88x5.22] - Not Illustrated	2


STEERING WHEEL DIAGRAM

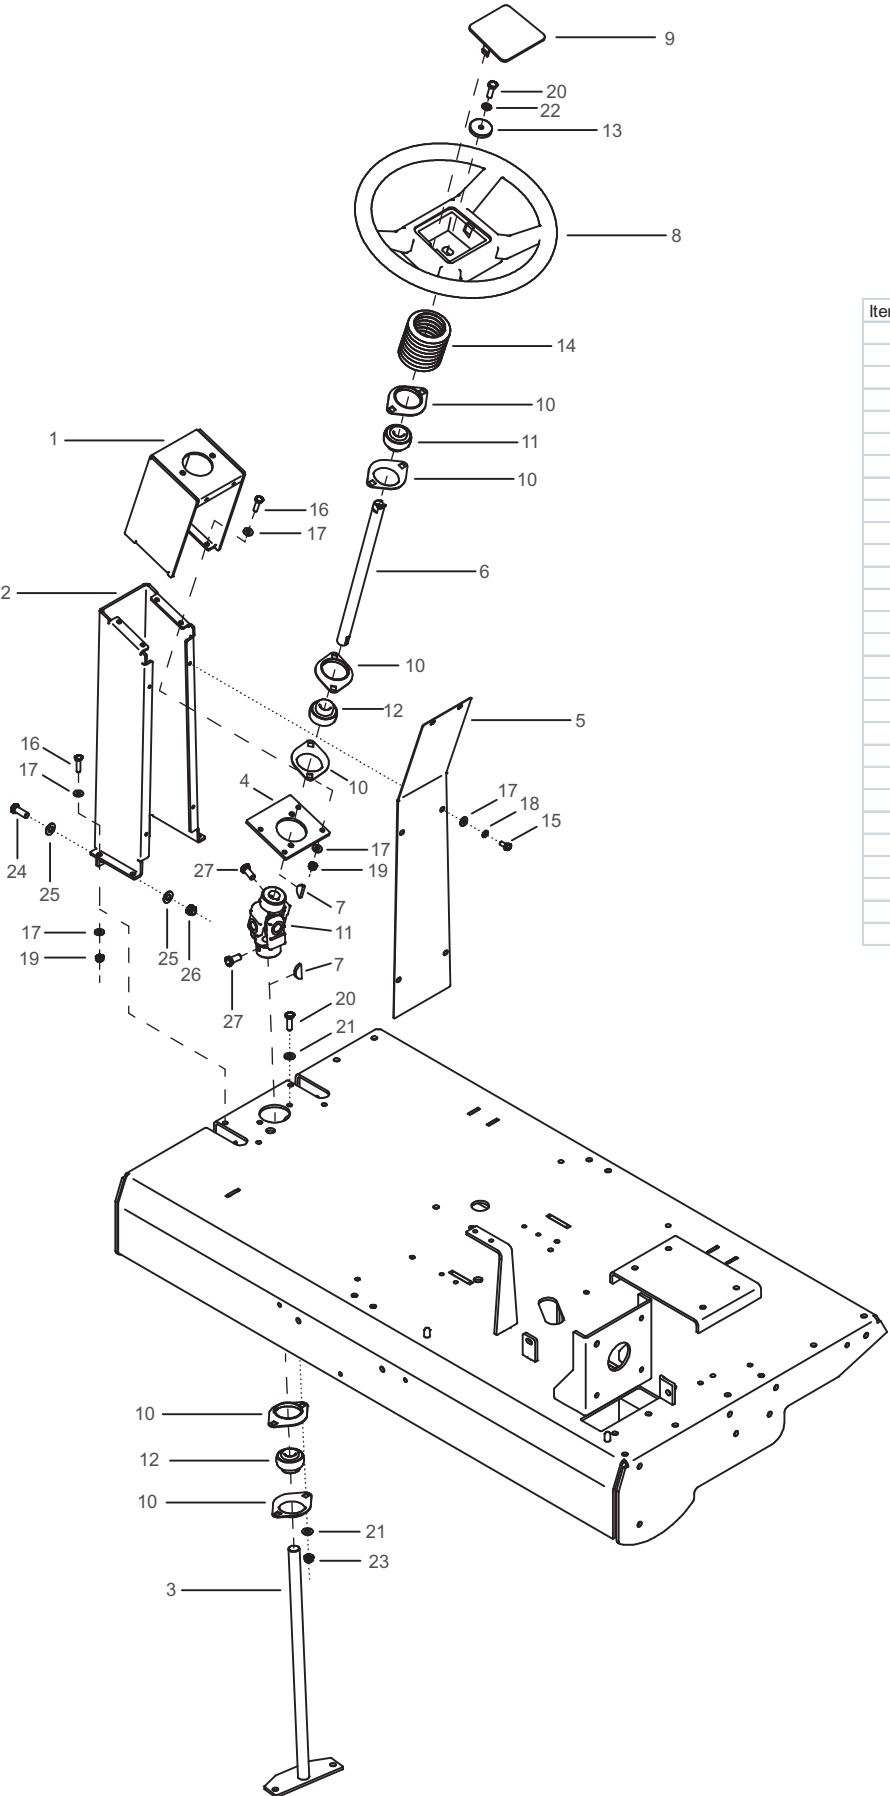

Item No.	Part No.	Description	Quantity
1	G1306	STEERING COLUMN BOX	1
2	G1313	STEERING COLUMN	1
3	G1327	STEERING PIVOT	1
4	G1398	BEARING PLATE	1
5	G1405	COLUMN COVER	1
6	G1468	UPPER STEERING SHAFT	1
7	G5068	WOODRUFF KEY	2
8	G5377	STEERING WHEEL	1
9	G5378	STEERING WHEEL COVER	1
10	G5379	PRESSED STEEL HOUSING	3
11	G5380	YOKE ASSEMBLY	1
12	G5386	BEARING	3
13	G9114	FIXING COLLAR	1
14	G9653	STEERING SHAFT COVER	1
15	329-2	SCREW-HH[.250-28X500,GR5,YZ]	6
16	329-6	SCREW-HH[.250-28X1.000,GR5,YZ]	8
17	3256-22	WASHER-FLAT [.281X.625,STL,YZ,.080/.051]	22
18	3254-16	WASHER-LOCK/INT[.250,STL,YZ,.028 THK]	6
19	32146-1	NUT-LOCK, NI [1/4-28]	8
20	3210-5	SCREW-HH[.312-24X1.000,GR5,YZ]	7
21	3256-23	WASHER-FLAT [.344X.688,STL,YZ,.080/.051]	12
22	3254-2	WASHER-LOCK, INTERNAL [.312,STL,YZ]	1
23	32146-4	NUT-LOCK, INSERT [.313-24,YZ]	6
24	3211-4	SCREW-HH[.375-24X1.000,GR5,YZ]	2
25	3256-24	WASHER-FLAT [.406X.813,STL,YZ]	4
26	32146-6	NUT-LOCK, INSERT [.375-24,YZ]	2
27	323-4	SCREW-HH [3/8-16 X .750, GR5, YZ]	2
28	111-5648	LABEL - WARNING - Not Illustrated	1


TOW BAR DIAGRAM

Item No.	Part No.	Description	Quantity
1	G0749	BUSH	4
2	G1152	AXLE CLAMP PLATE	8
3	G1437	LIFTING HANDLE	1
4	G1871	LIFTING BAR	2
5	G1876	TOW BAR	1
6	G1902	TOW BAR BRACKET	1
7	G5246	ROD END 5/8" UNF MALE	4
8	G5306	CLAMP	4
9	3211-4	SCREW-HH[.375-24X1.000,GR5,YZ]	6
10	3211-11	SCREW-HH[.375-24X2.500,GR5,YZ]	4
11	3211-15	SCREW-HH [3/8-24 X 3.500, GR5, YZ]	8
12	HY03355	WASHER 3/8"1"15G	4
13	3256-24	WASHER-FLAT [.406X.813,STL,YZ]	32
14	32146-6	NUT-LOCK, INSERT [.375-24,YZ]	4
15	70-11-003	NUT UNF 5/8" FULL	4
16	111-5647	LABEL - LIFT OPERATION - Not Illustrated	1
17	111-5652	LABEL - LIFTING FORCE - Not Illustrated	1
18	951014	Lynch Pin	1

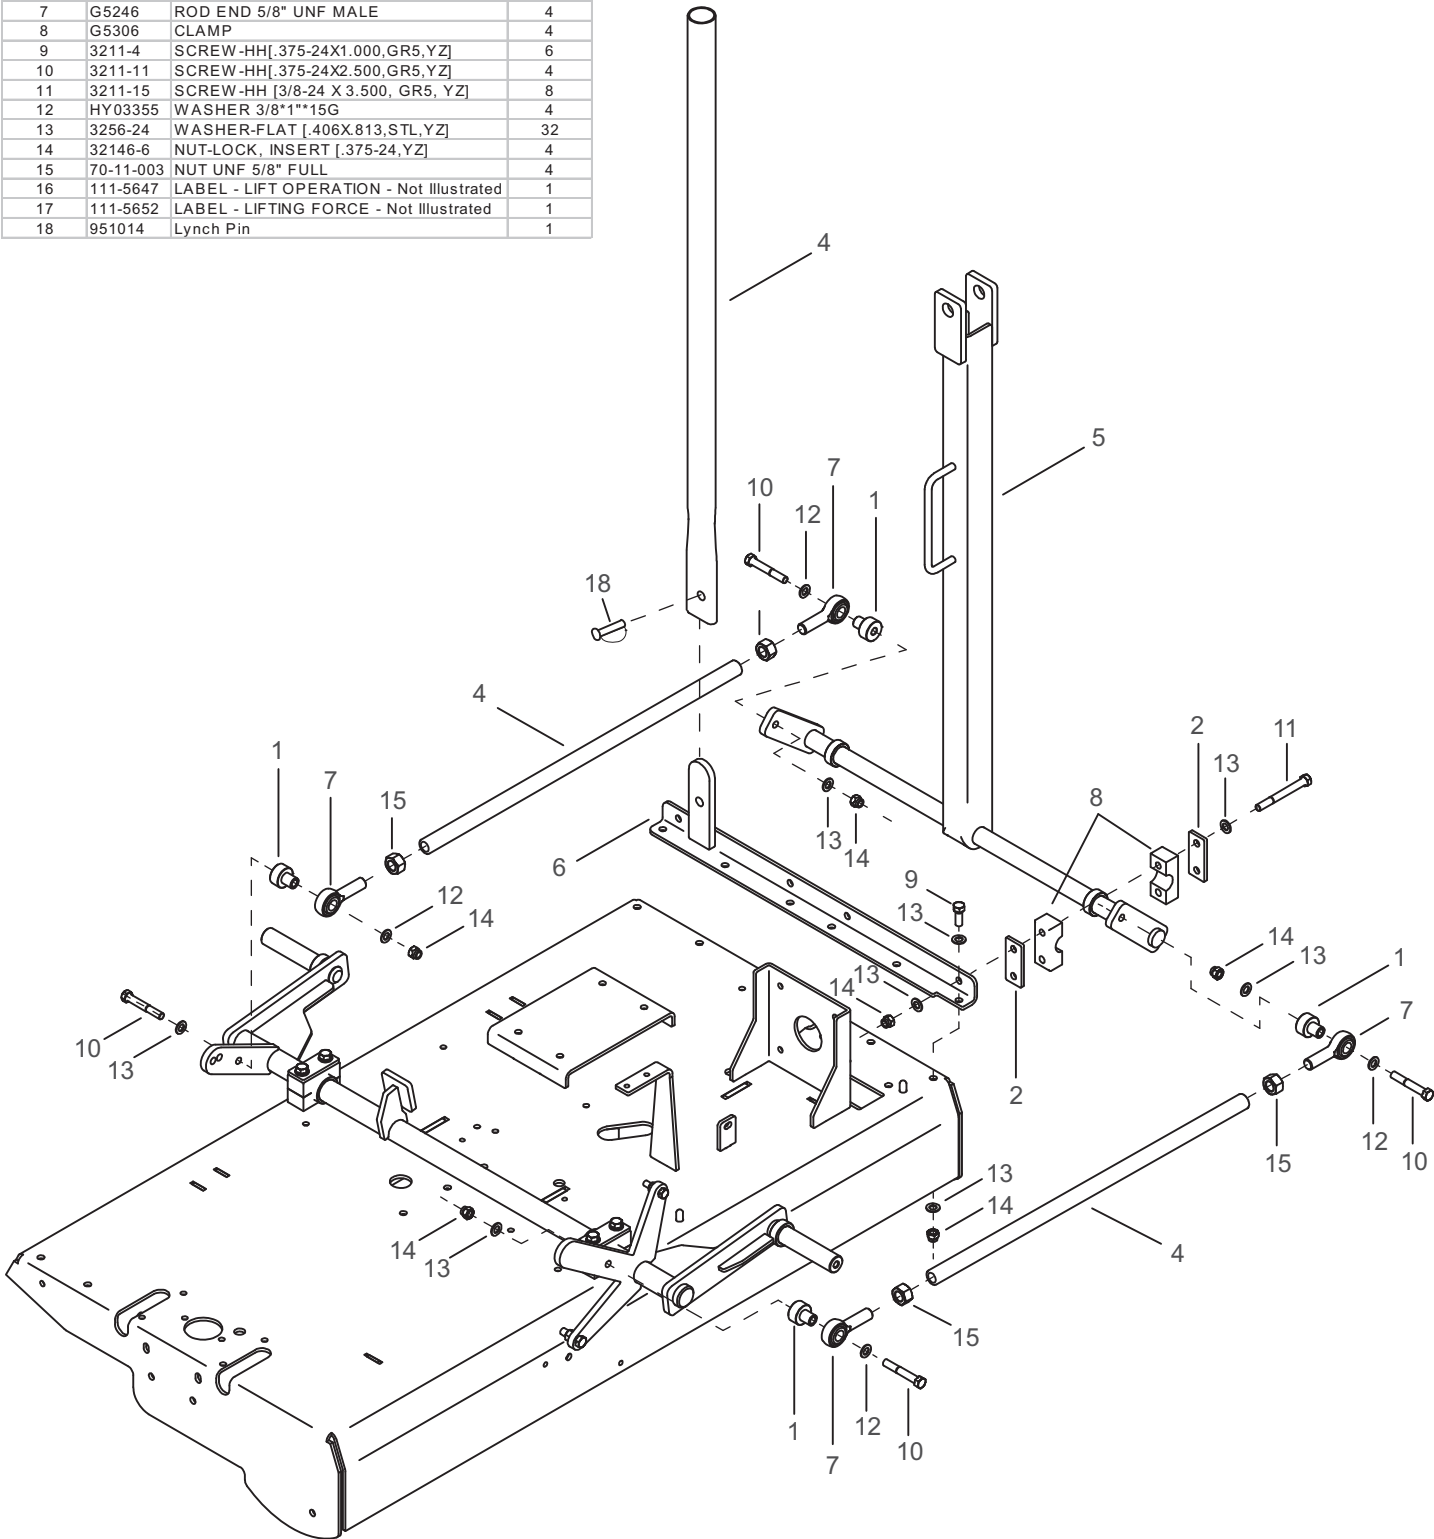


Item No.	Part No.	Description	Quantity
1	G0094	SPACER	2
2	G0379	FIXING COLLAR	1
3	G0510	BUSH	1
4	G0511	BUSH	3
5	G0533	LEVER QUADRANT	1
6	G1192	LINKAGE ROD	2
7	G1318	ROLLER CHASSIS	6
8	G1324	LINKAGE ARM	1
9	G1335	LEFT HAND MOTION PEDAL	1
10	G1336	RIGHT HAND MOTION PEDAL	1
11	G1381	DRIVE ROD	1
12	G1458	IDLER ARM	1
13	G1469	DAMPER PLATE	1
14	G1470	IDLER GREEN BUSH	1
15	G1655	PEDAL ROD PIVOT	1
16	G1656	SPACER BUSH	1
17	G1657	IDLER GEAR BOLT	1
18	G1758	PEDAL	2
19	G2007	TENSIONING ROD	1
20	G5160	BRONZE BUSH	10
21	G5173	PRESSED METAL BALL JOINT	8
22	G5367	DRIVE SPROCKET 8 TOOTH	2
23	G5381	IDLER SPROCKET	2
24	G5385	DAMPER STRUT	1
25	G5433	EXTERNAL CIRCLIP	1
26	G9093	SPACER	1
27	3210-5	SCREW-HH[.312-24X1.000,GR5,YZ]	2
28	3210-7	SCREW-HH [.312-24X1.25,GR5,YZ]	3
29	3210-9	SCREW-HH[.312-24X1.750]	2
30	908173	HEX HD CAP SCREW	1
31	3256-23	WASHER-FLAT [.344X.688,STL,YZ,.080/.051]	10

Item No.	Part No.	Description	Quantity
32	3254-2	WASHER-LOCK, INTERNAL [.312,STL,YZ]	4
33	32146-4	NUT-LOCK, INSERT [.313-24,YZ]	5
34	3217-6	NUT-HEX [5/16-18, GR2, YZ]	2
35	3211-6	SCREW-HH[.375-24X1.500,GR5,YZ]	6
36	3211-9	SCREW-HH[.375-24X2.000,GR5,YZ]	1
37	3211-11	SCREW-HH[.375-24X2.500,GR5,YZ]	2
38	3211-12	SCREW-HH[.375-24X2.750,GR5,YZ]	1
39	3211-15	SCREW-HH [3/8-24 X 3.500, GR5, YZ]	1
40	111-5635	BOLT HH [3/8" UNC X 4" LONG]	1
41	3256-24	WASHER-FLAT [.406X.813,STL,YZ]	16
42	HY03355	WASHER 3/8"1"15G	6
43	3219-3	NUT-HEX [.375-24,GR2,YZ]	11
44	32146-6	NUT-LOCK, INSERT [.375-24,YZ]	12
45	3256-25	WASHER-FLAT[.469X.922,STL,YZ,.080/.051]	2
46	HY09222	NUT UNF 7/16" NYL INS T TYPE	1
47	111-5649	LABEL - PEDAL CONTROL LEFT - Not Illustrated	1
48	111-5650	LABEL - PEDAL CONTROL RIGHT - Not Illustrated	1
99	111-5644	LABEL - SERIAL NO MODEL 44905 - Not Illustrated	1

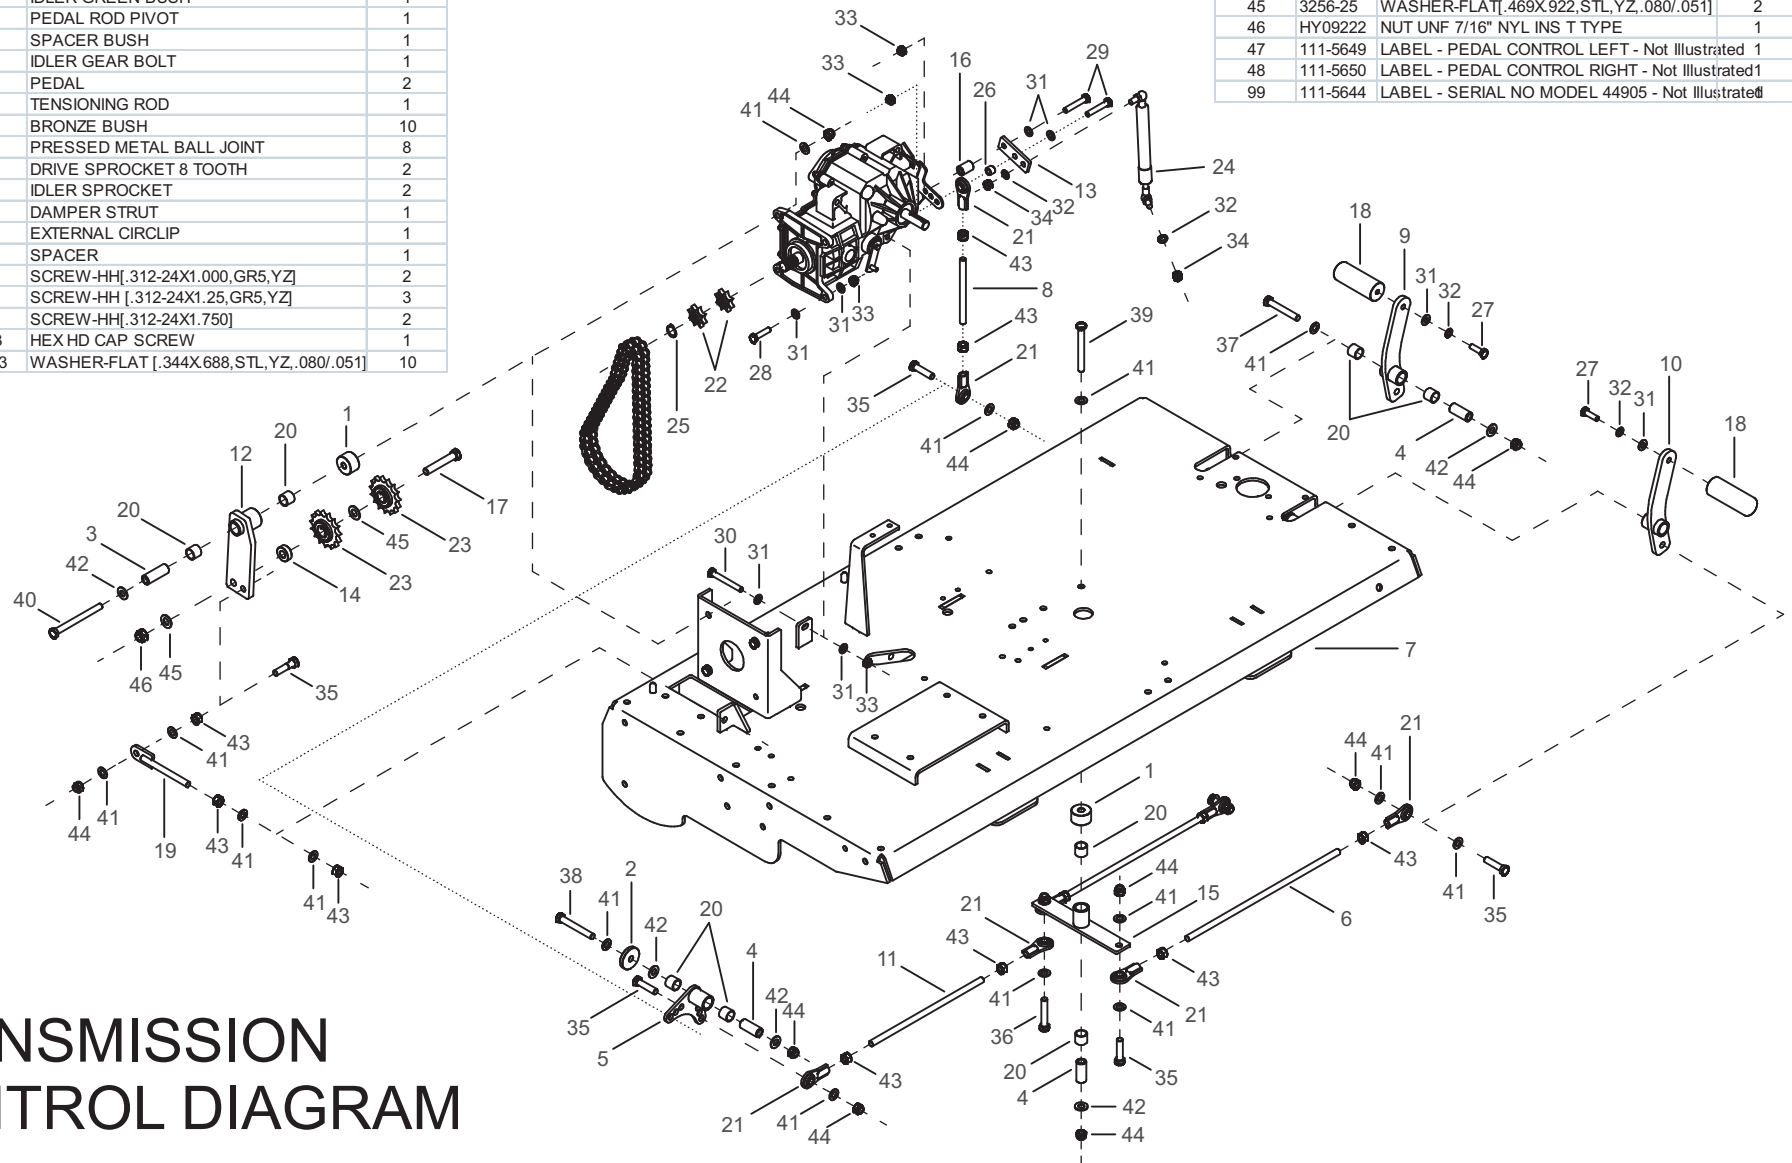

TRANSMISSION CONTROL DIAGRAM

Cylinder Head Assembly

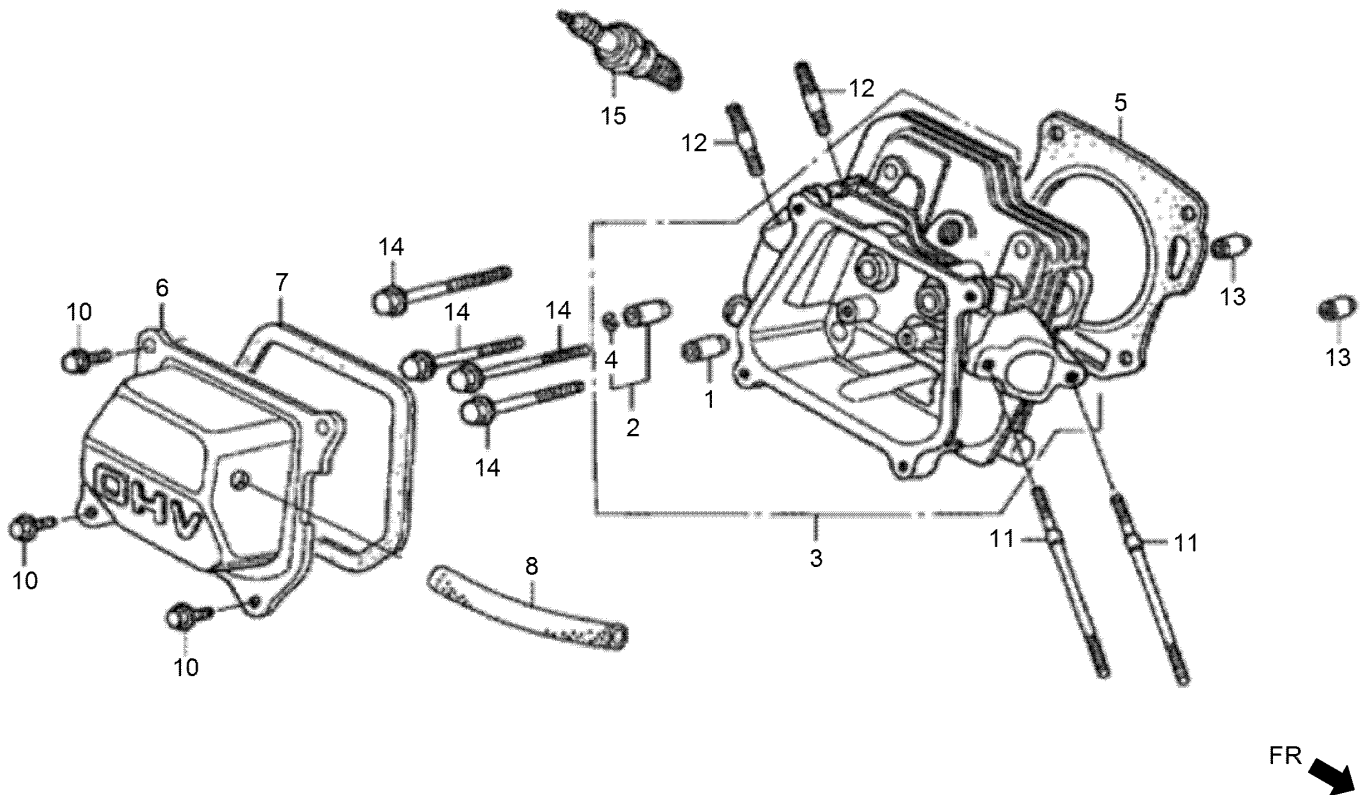


Cylinder Head Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-0118	1	Guide-Intake Valve
2	132-0119	1	Guide-Exhaust Valve
3	132-0124	1	Cylinder Head ASM
4	132-0125	1	Clip-Valve Guide
5	132-0126	1	Gasket-Cylinder Head
6	132-0127	1	Head Cover ASM
7	132-0133	1	Packing-Head Cover

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
8	132-0234	1	Tube-Breather
10	132-4880	4	Bolt-Flange-6X12
11	132-0612	2	Bolt-Stud-6X112
12	132-0615	2	Bolt-Stud-8X32
13	132-0697	2	Dowel Pin-10X16
14	131-8226	4	Bolt-Flange-8X60
15	131-8233	1	Sparkplug

Cylinder Barrel Assembly

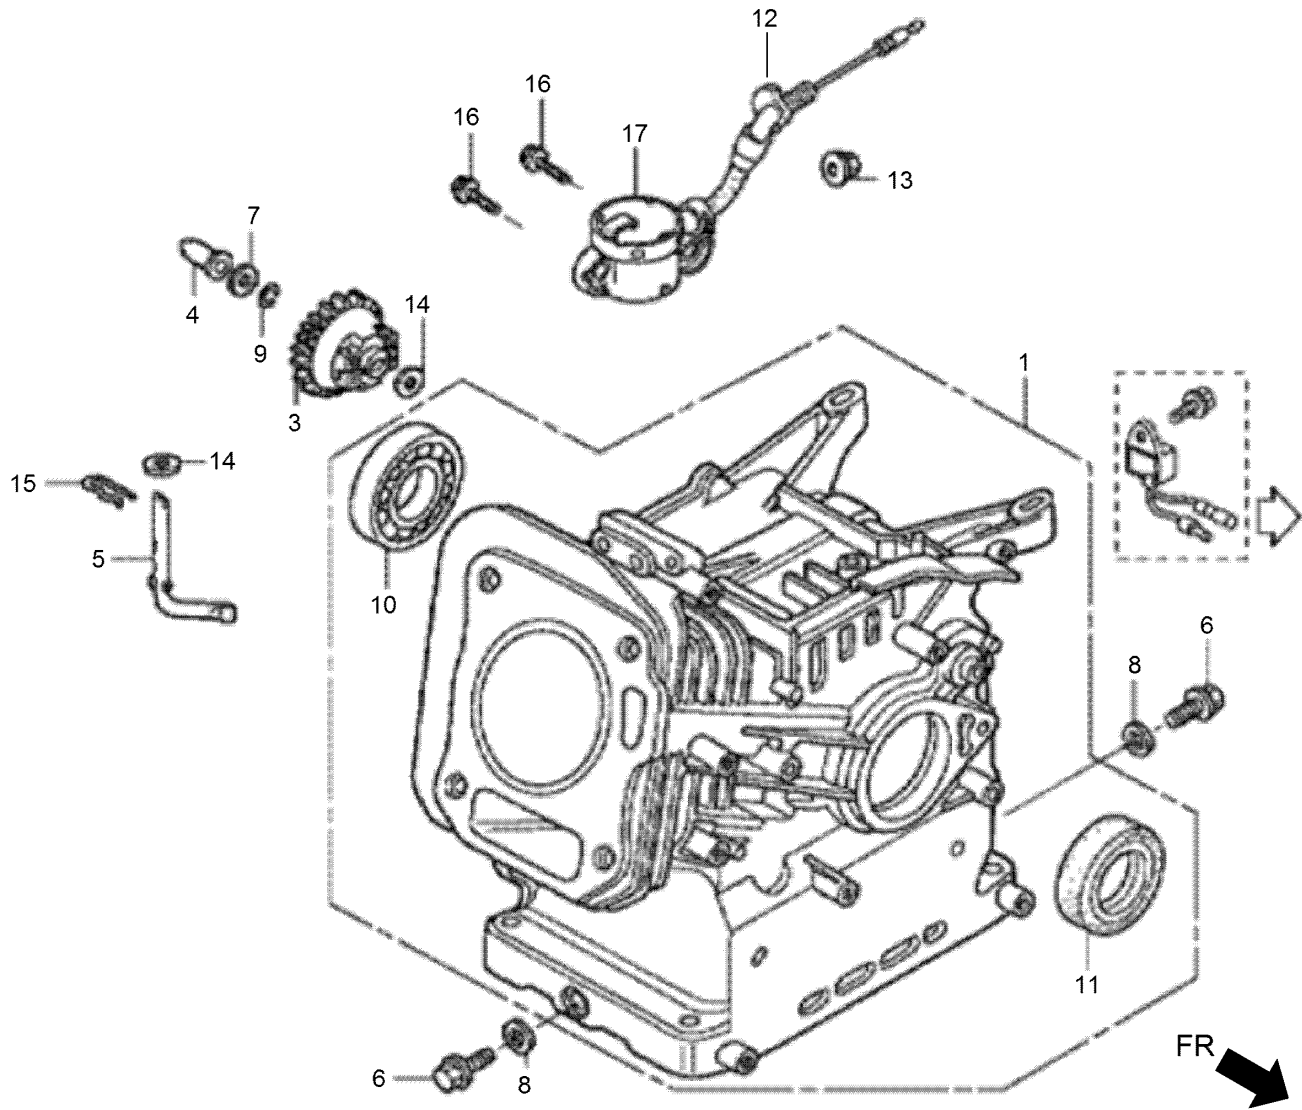


Cylinder Barrel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-0113	1	Barrel ASM-Cylinder
3	132-0294	1	Governor ASM
4	132-0304	1	Slider-Governor
5	132-0307	1	Shaft-Governor Arm
6	132-0622	2	Bolt-Drain Plug
7	132-0635	1	Washer-Thrust-6Mm
8	132-0640	2	Washer-Drain Plug-10.2Mm
9	132-0642	1	Clip-Governor Holder
10	132-0651	1	Bearing-Radial Ball

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	132-0650	1	Bearing-Radial Ball
10	132-0649	1	Bearing-Radial Ball
11	132-0654	1	Oil Seal-25X41X6
12	132-0668	1	O-Ring-14Mm
13	132-0686	1	Nut-Flange-10Mm
14	132-0688	2	Washer-Plain-6Mm
15	132-0693	1	Pin-Lock-8Mm
16	131-8221	2	Bolt-Flange-6X12
17	132-0532	1	Switch ASM-Oil Level

Crankcase Cover Assembly

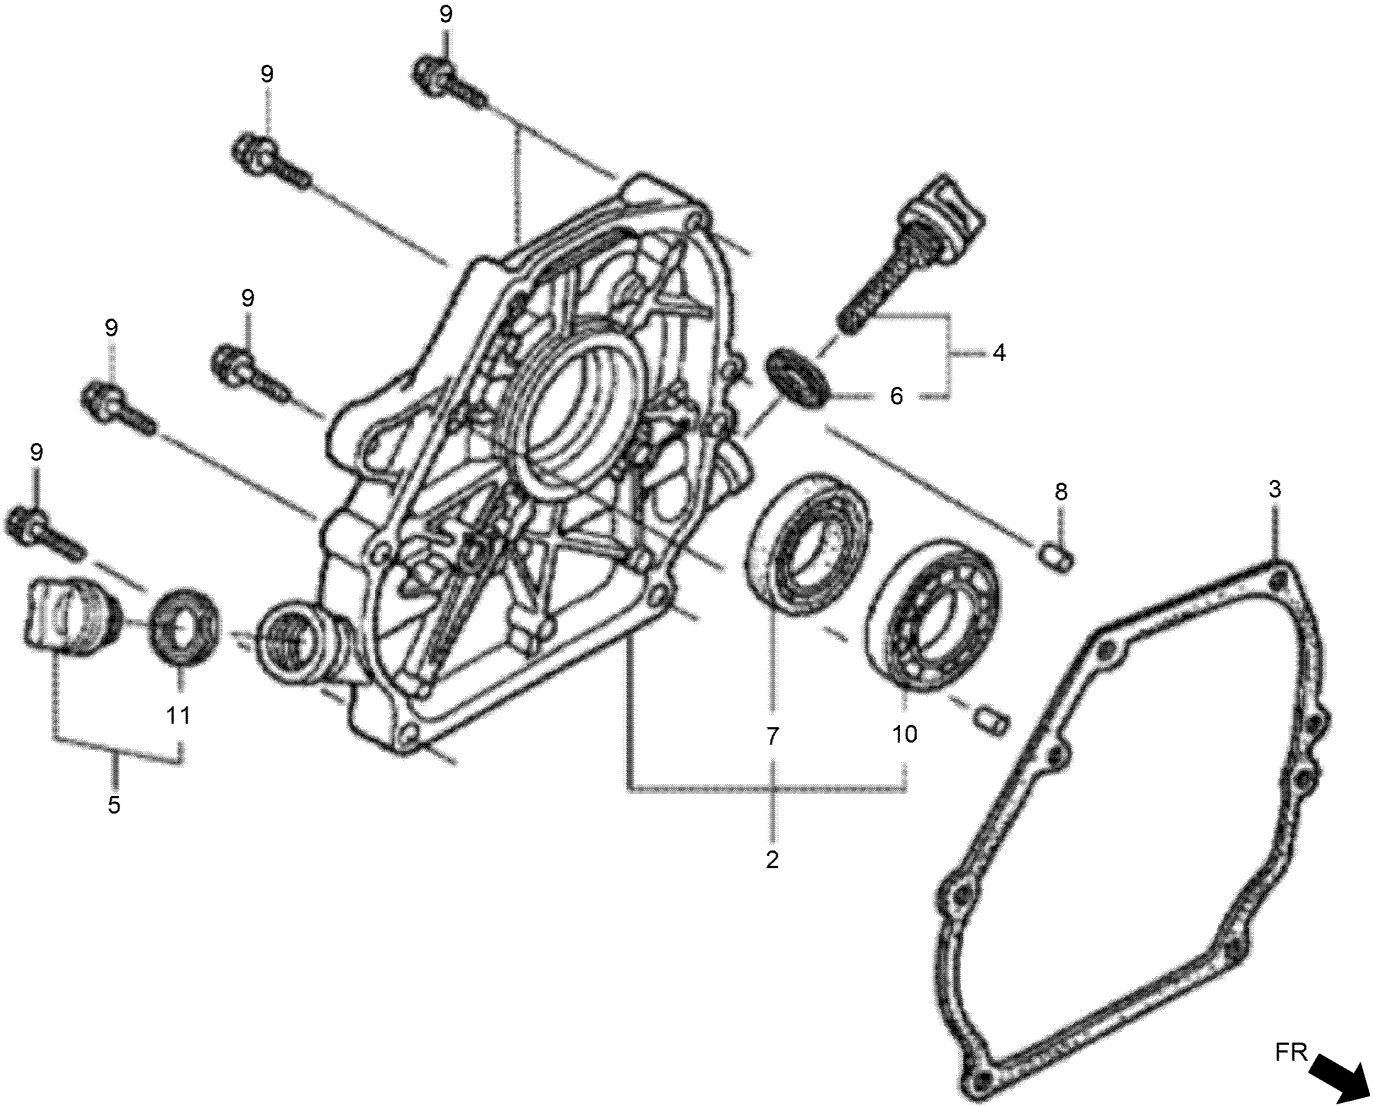


Crankcase Cover Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	132-0104	1	Cover ASM-Crankcase (To S/N 1001179)
2	132-0105	1	Cover ASM-Crankcase (From S/N 1001180)
3	132-0108	1	Packing-Case Cover
4	132-0220	1	Cap ASM-Oil Filler
5	132-0221	1	Cap ASM-Oil Filler

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
6	132-0224	1	Packing-Oil Filler Cap
7	132-0654	1	Oil Seal-25X41X6
7	132-0659	1	Oil Seal-25X41.25X6
8	132-0695	2	Dowel Pin-8X14
9	131-8225	6	Bolt-Flange-8X32
10	131-8227	1	Bearing-Radial Ball-6205
11	132-0224	1	Packing-Oil Filler Cap


Crankshaft Assembly

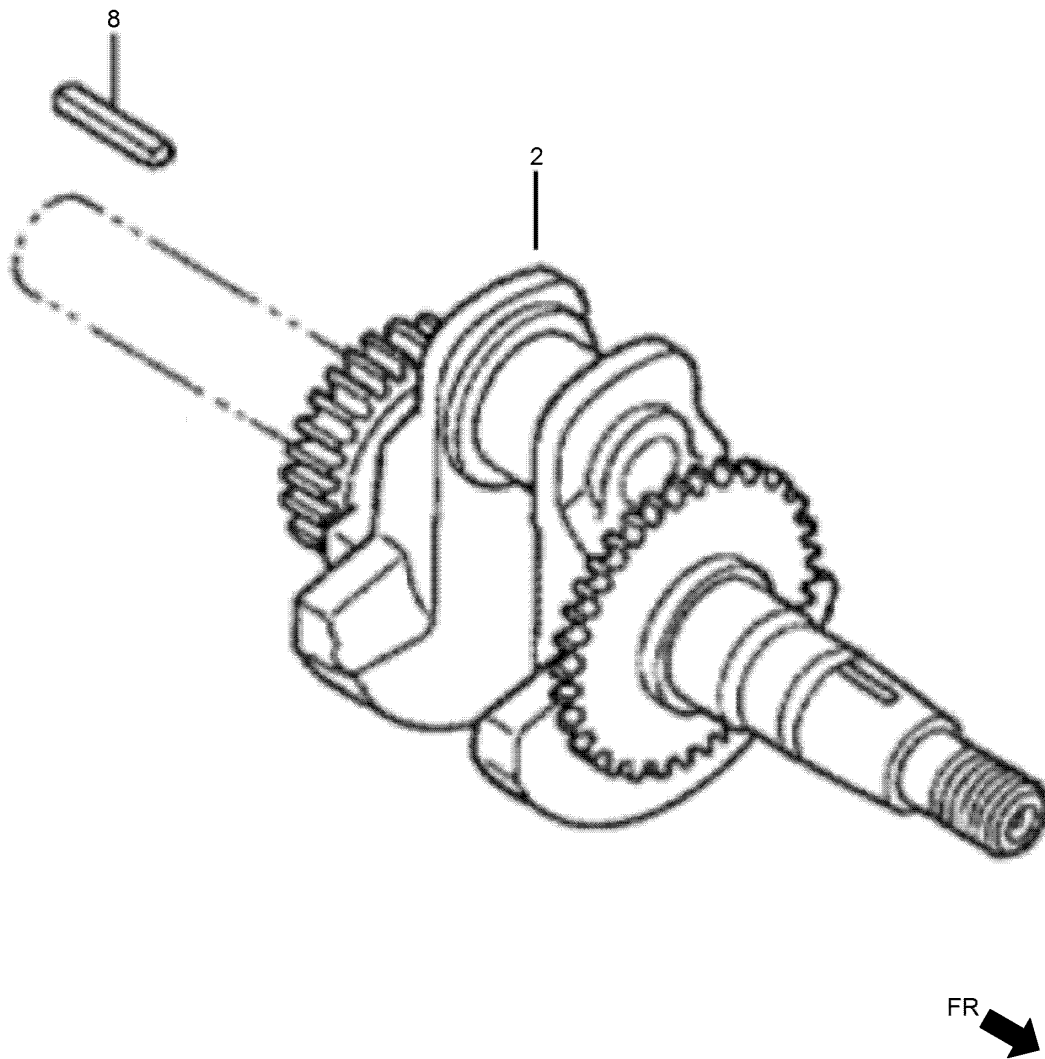

Crankshaft Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	132-0165	1	Crankshaft ASM
8	132-0648	1	Key-4.78X4.78X38

Piston and Connecting Rod Assembly

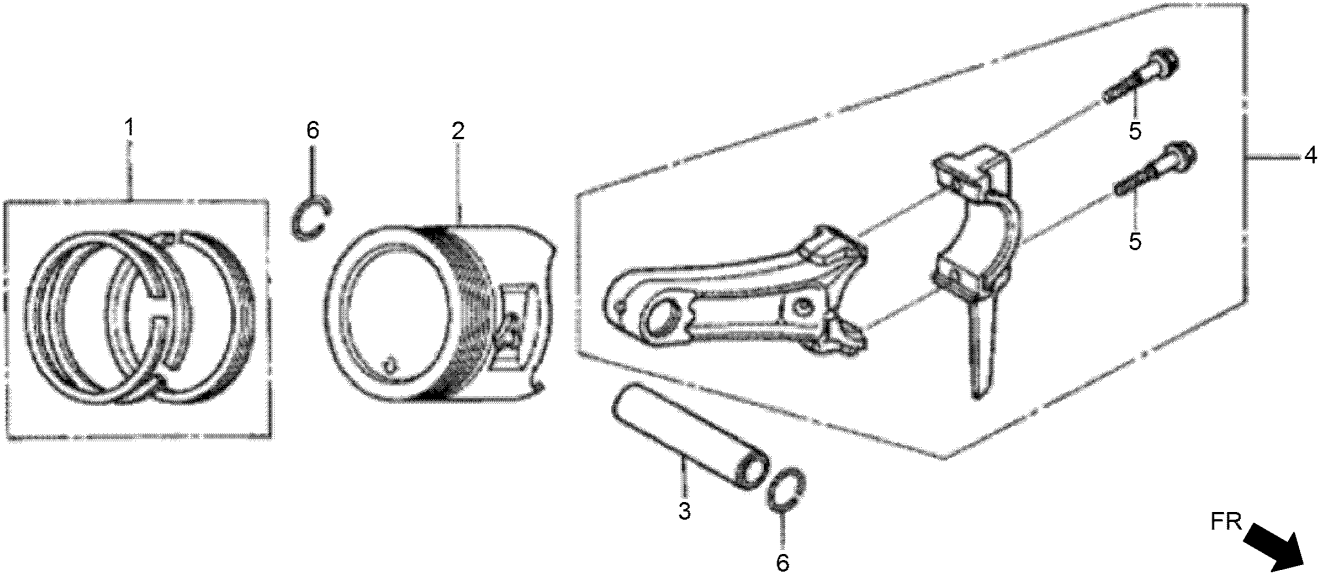


Piston and Connecting Rod Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-0137	1	Ring Set-Piston (STD)
1	132-0138	1	Ring Set-Piston (STD)
2	132-0144	1	Piston
3	132-0150	1	Pin-Piston

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	132-0155	1	Rod ASM-Connecting
5	132-0573	2	Bolt-Connecting Rod
6	132-0637	2	Clip-Piston Pin-18Mm

Camshaft Assembly

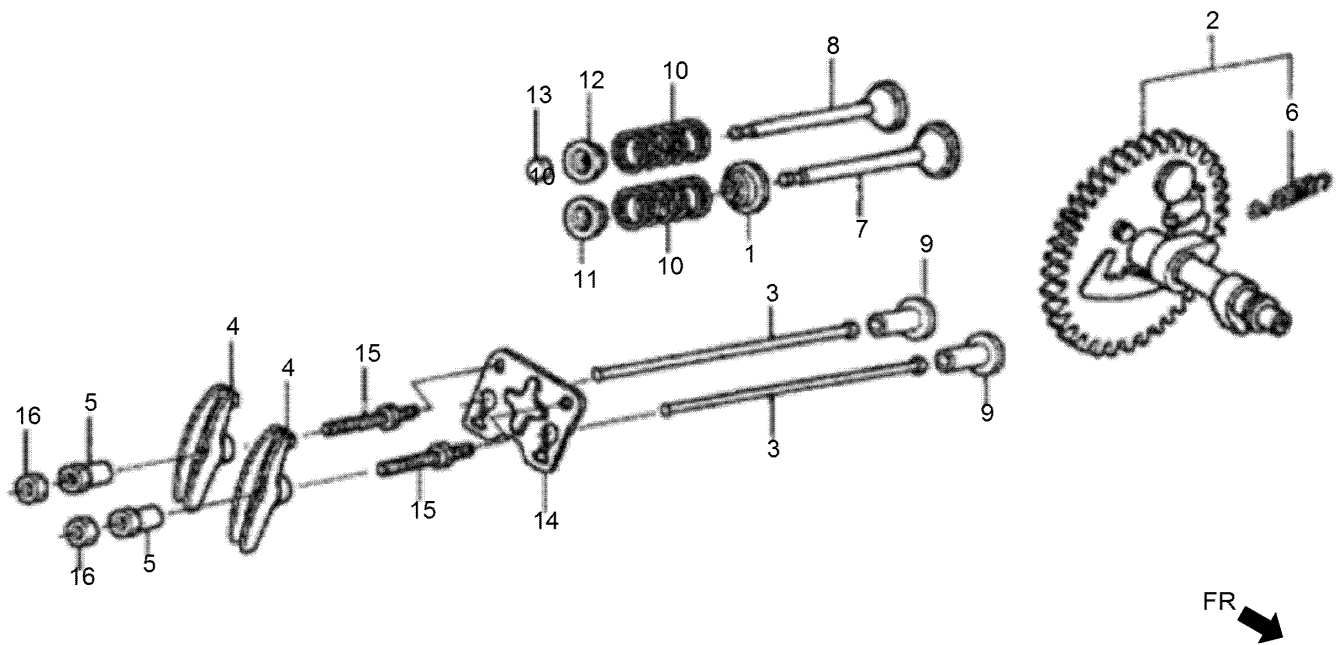


Camshaft Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-0120	1	Seal-Valve Stem
2	132-0172	1	Camshaft ASM
3	132-0181	2	Rod-Push
4	132-0184	2	Arm-Valve Rocker
5	132-0188	2	Pivot-Rocker Arm
6	132-0191	1	Spring-Weight Return
7	132-0195	1	Valve-Intake
8	132-0200	1	Valve-Exhaust
9	132-0203	2	Lifter-Valve

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	132-0206	2	Spring-Valve
11	132-0211	1	Retainer-Intake Valve Spring
12	132-0213	1	Retainer-Exhaust Valve Spring
13	132-0214	1	Rotator-Valve
14	132-0215	1	Plate-Push Rod Guide
15	132-0592	2	Bolt-Pivot-8Mm
16	132-0629	2	Nut-Pivot Adjusting


Recoil Starter Assembly

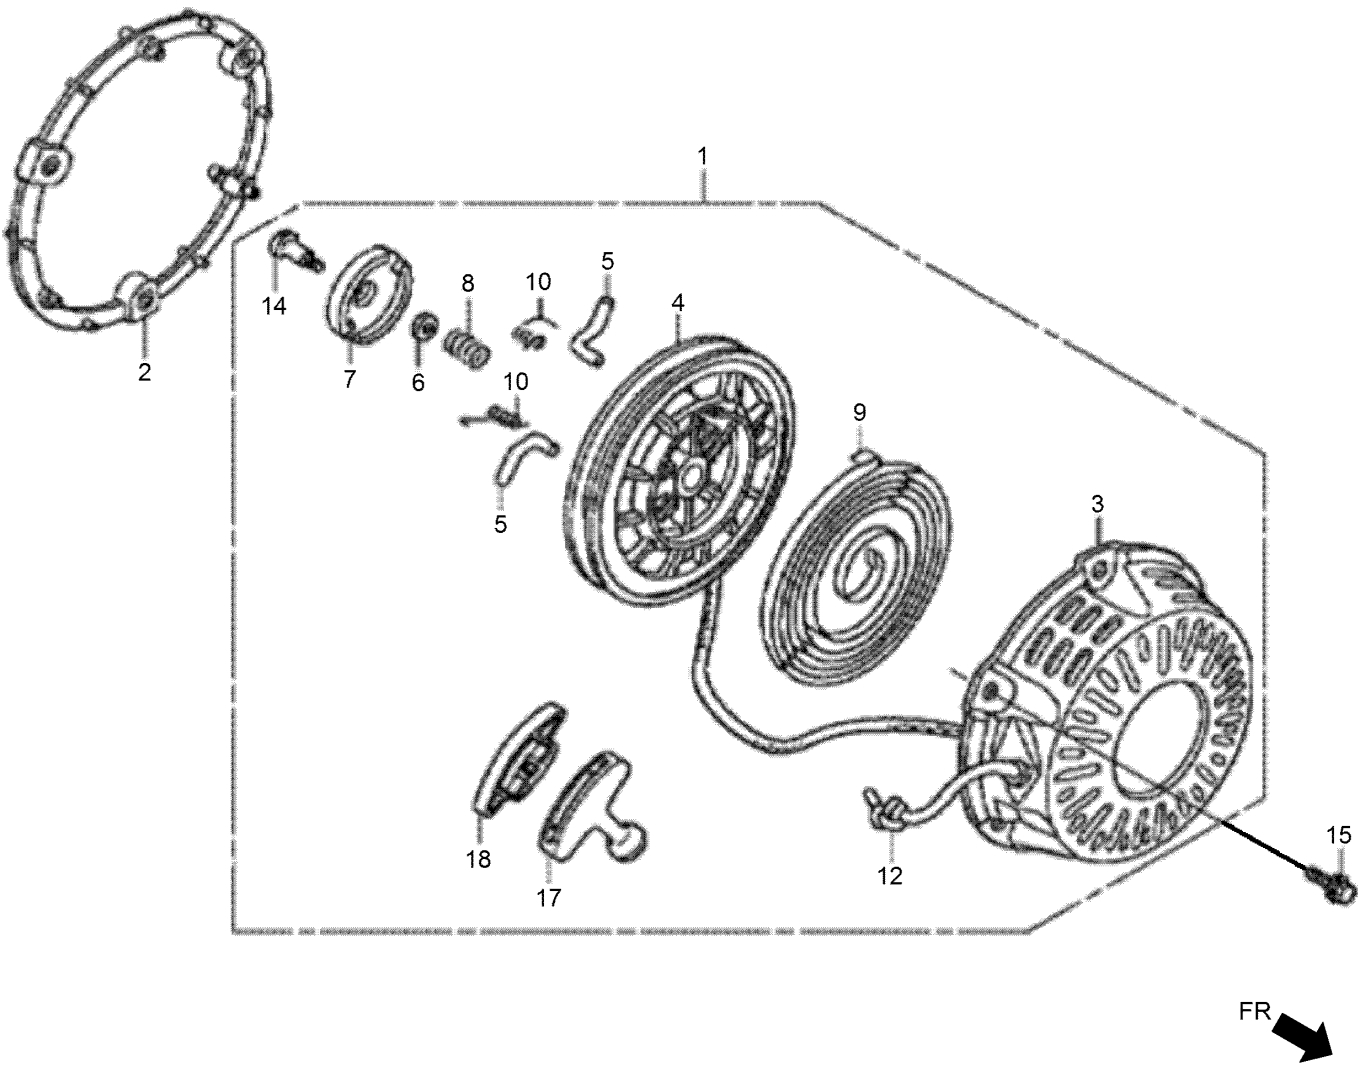

Recoil Starter Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-0477	1	Starter ASM-Recoil	5	132-0491	2	Ratchet-Starter
1	132-0478	1	Starter ASM-Recoil	6	132-0492	1	Plate-Friction
2	132-0484	1	Spacer-Recoil Starter Mtg (Nh1)	7	132-0493	1	Guide-Ratchet
2	132-0485	1	Spacer-Recoil Starter Mtg (R280R)	8	132-0494	1	Spring-Friction
3	132-0486	1	Recoil Starter Case ASM (R280)	9	132-0495	1	Spring-Recoil Starter
3	132-0487	1	Recoil Starter Case ASM (Nh1)	10	132-0497	2	Spring-Return
4	132-0489	1	Reel-Recoil Starter	12	132-0507	1	Rope-Recoil Starter
				14	132-0579	1	Screw-Setting
				15	131-8223	3	Bolt-Flange-6X18
				17	132-0502	1	Knob-Recoil Starter
				18	132-0509	1	Knob-Reinforcement

Fan Cover Assembly

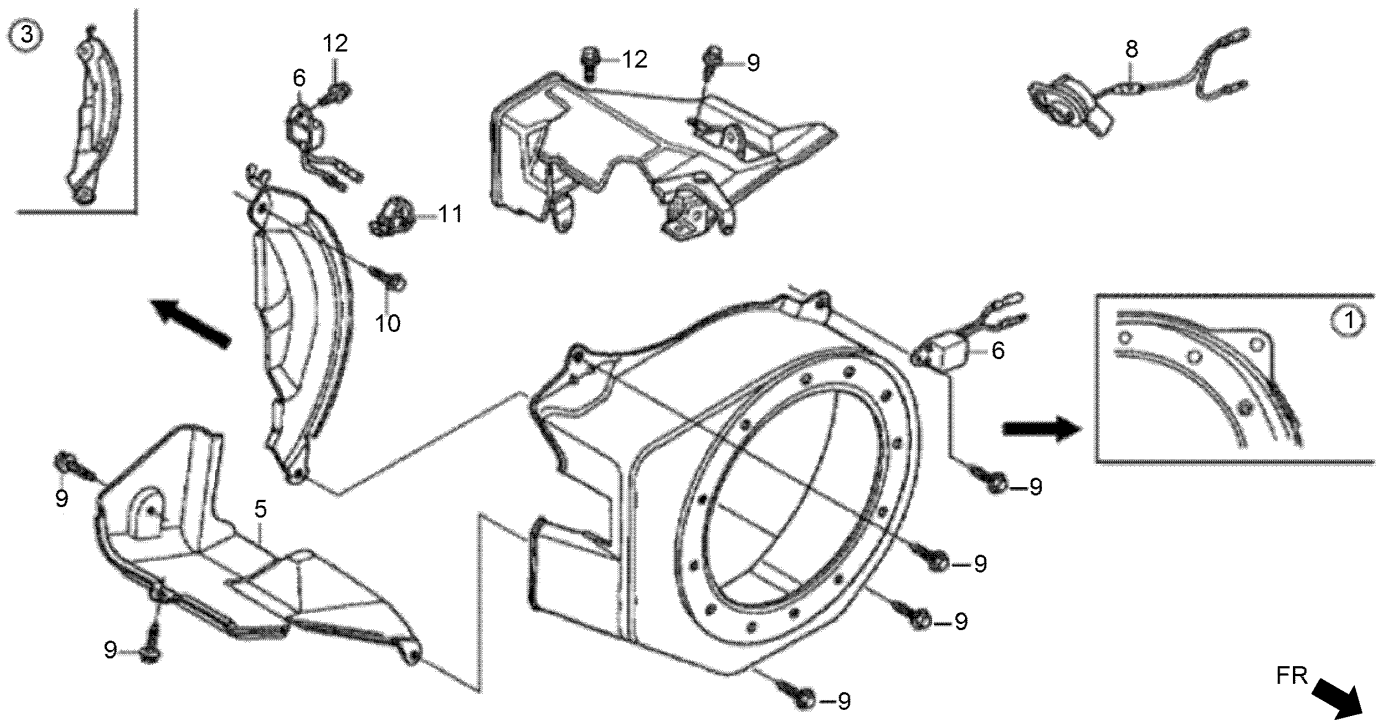


Fan Cover Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-0464	1	Fan Cover ASM (R280)
1	132-0465	1	Fan Cover ASM (Nh1)
3	132-0468	1	Side Plate ASM
5	132-0473	1	Shroud ASM
6	132-0528	1	Alert Unit-Oil

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
8	132-0530	1	Switch ASM-Engine Stop
9	132-4880	6	Bolt-Flange-6X12
10	132-0605	1	Bolt-Flange-6X20
11	132-0641	1	Clip-Harness
12	131-8220	1	Bolt-Flange-6X8

Carburetor Assembly

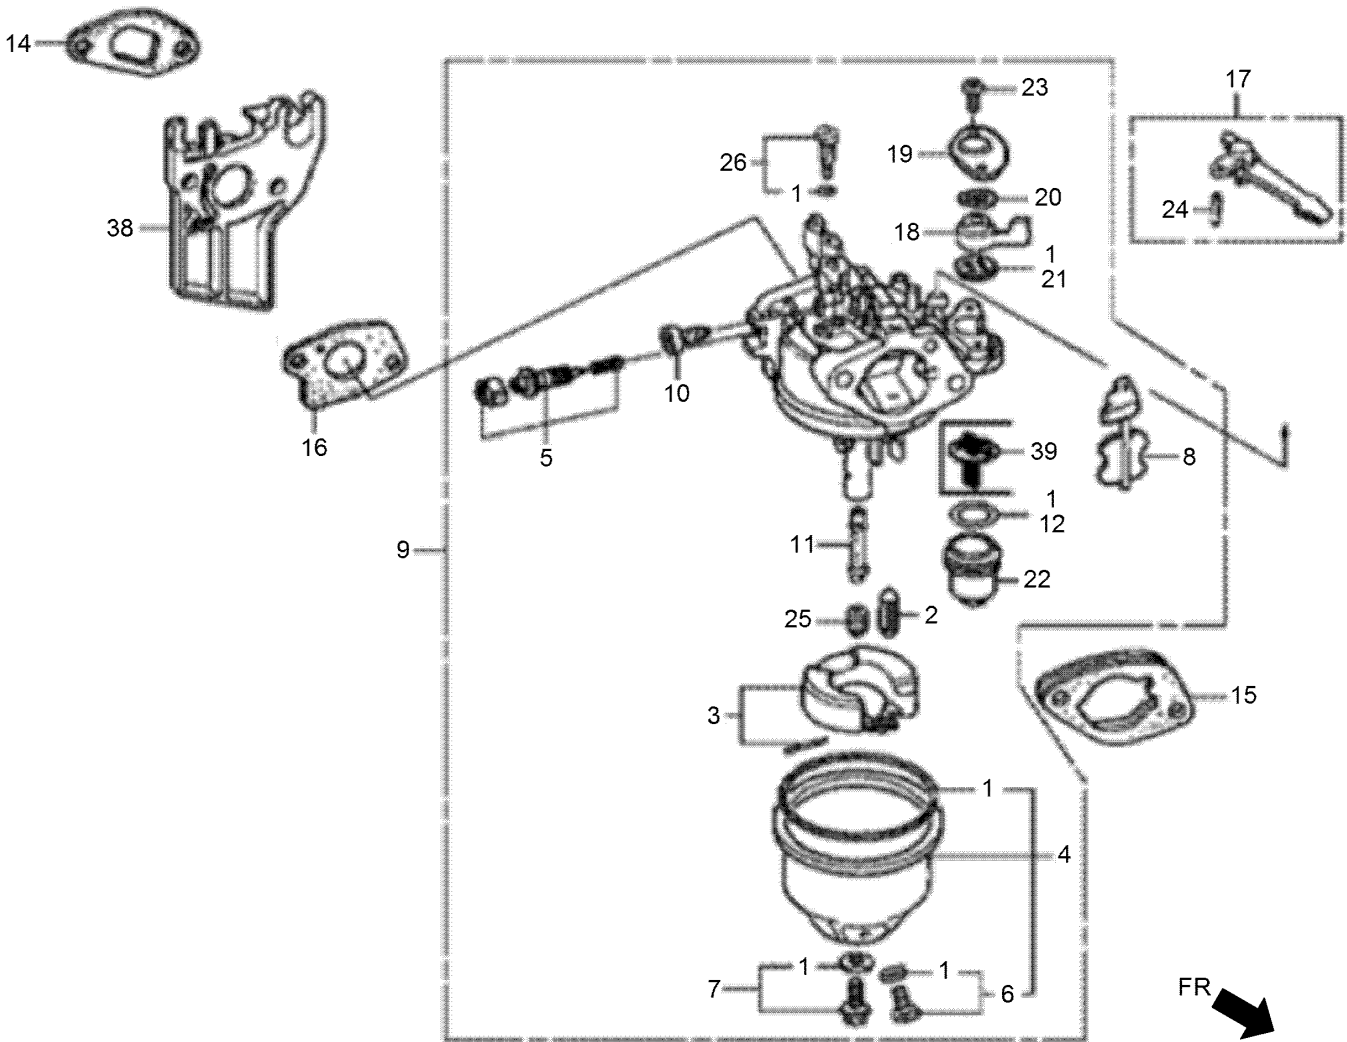


Carburetor Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-0239	1	Gasket Set
2	132-0241	1	Valve Set-Float
3	132-0242	1	Float Set
4	132-0247	1	Chamber Set-Float
5	132-0250	1	Screw Set-Pilot
6	132-0251	1	Screw Set-Drain
7	132-0253	1	Screw Set
8	132-0257	1	Choke Set
9	132-0265	1	Carburetor ASM
10	132-0268	1	Screw-Throttle Stop
11	132-0272	1	Nozzle-Main
12	132-0276	1	Packing-Fuel Strainer Cup
14	132-0281	1	Packing-Insulator
15	132-0284	1	Carburetor Spacer ASM

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
16	132-0287	1	Packing-Carburetor
17	132-0343	1	Choke Lever ASM
18	132-0359	1	Lever-Cock
19	132-0360	1	Plate-Lever Setting
20	132-0362	1	Spring-Cock Lever
21	132-0364	1	Packing-Fuel Cock
22	132-0366	1	Cup-Fuel Strainer
23	132-0676	2	Screw-Pan-3X6
24	132-0698	1	Pin-Spring-2X12
25	131-8237	1	Jet-Main, No. 75
26	131-8239	1	Jet Set-Pilot, No. 40
38	132-0278	1	Insulator-Carburetor
39	132-0365	1	Filter-Cup

Air Cleaner Assembly

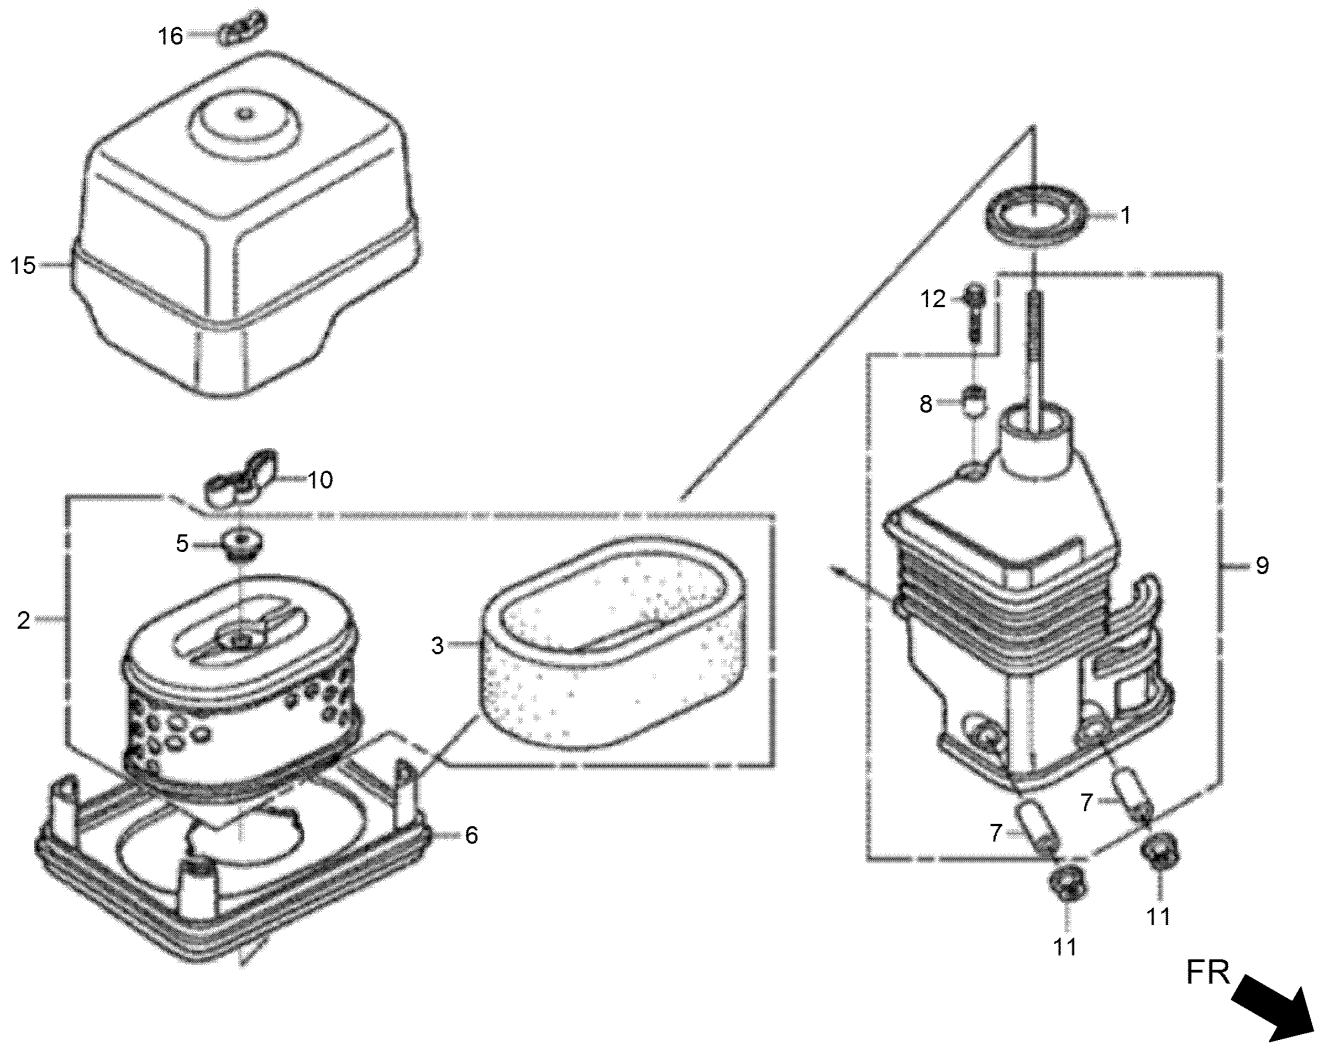


Air Cleaner Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-0291	1	Packing-Elbow
2	132-0367	1	Element-Air Cleaner
3	132-0372	1	Filter-Outer
5	132-0391	1	Grommet-Air Cleaner
6	132-0392	1	Nose-Silencer
7	132-0393	2	Collar-Air Cleaner
8	132-0394	1	Collar B-Air Cleaner

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
9	132-0395	1	Air Cleaner/Elbow ASM
10	132-0631	1	Nut-Tool Box Setting
11	132-4881	2	Nut-Flange-6Mm
12	131-8224	1	Bolt-Flange-6X20
15	132-0387	1	Cover-Air Cleaner
16	132-0630	1	Nut-Air Cleaner

Muffler Assembly

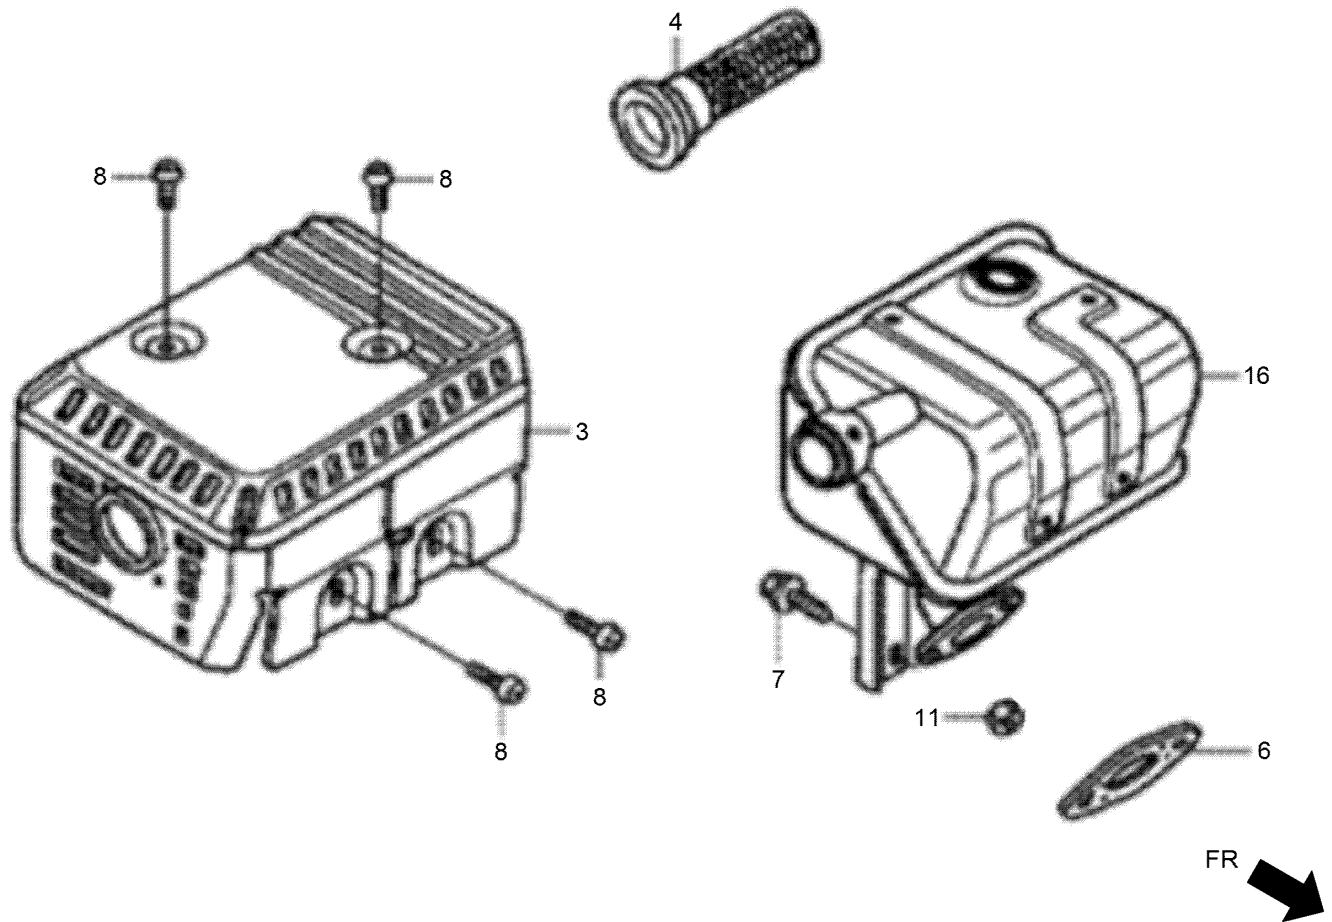


Muffler Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
3	132-0453	1	Muffler Protector ASM
4	132-0456	1	Arrester-Spark
6	132-0457	1	Gasket-Muffler
7	132-0600	1	Bolt-Flange-6X13

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
8	132-0616	4	Screw-Tapping-5X8
11	132-0684	2	Nut-Hex-8Mm
16	132-0445	1	Muffler ASM

Fuel Tank Assembly

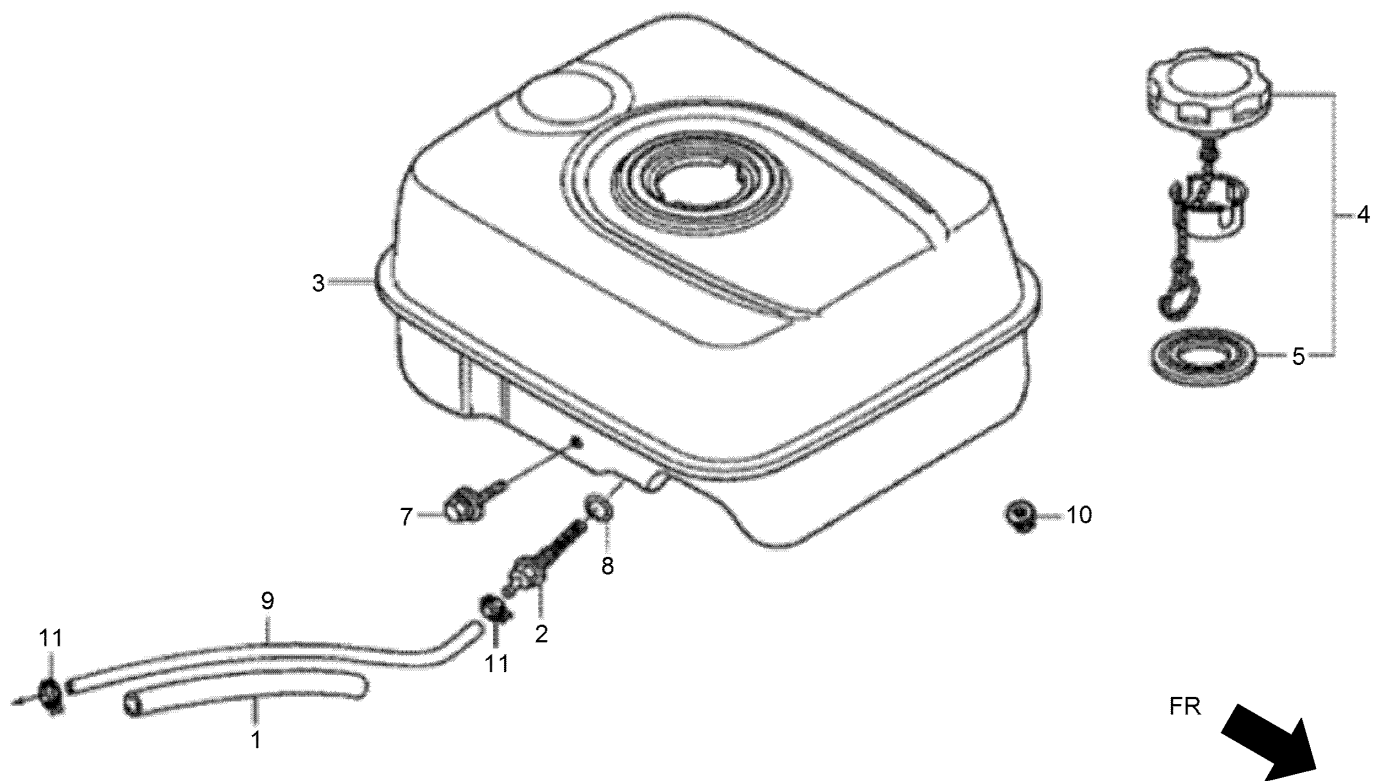


Fuel Tank Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-0349	1	Rubber-Supporter
2	132-0361	1	Joint-Fuel Tank
3	132-0397	1	Fuel Tank ASM (Nh31)
3	132-0398	1	Fuel Tank ASM (Nh1)
4	132-0412	1	Fuel Filler Cap ASM (Up To S/N 1035885)
4	132-0413	1	Fuel Filler Cap ASM (From S/N 1035886)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	132-0431	1	Packing-Fuel Filler Cap
7	132-0583	1	Bolt-Flange-6X34
8	132-0668	1	O-Ring-14Mm
9	132-0669	1	Tube-Fuel-4.5X145
10	132-4881	2	Nut-Flange-6Mm
11	131-8211	2	Clamp-Tube

Flywheel Assembly

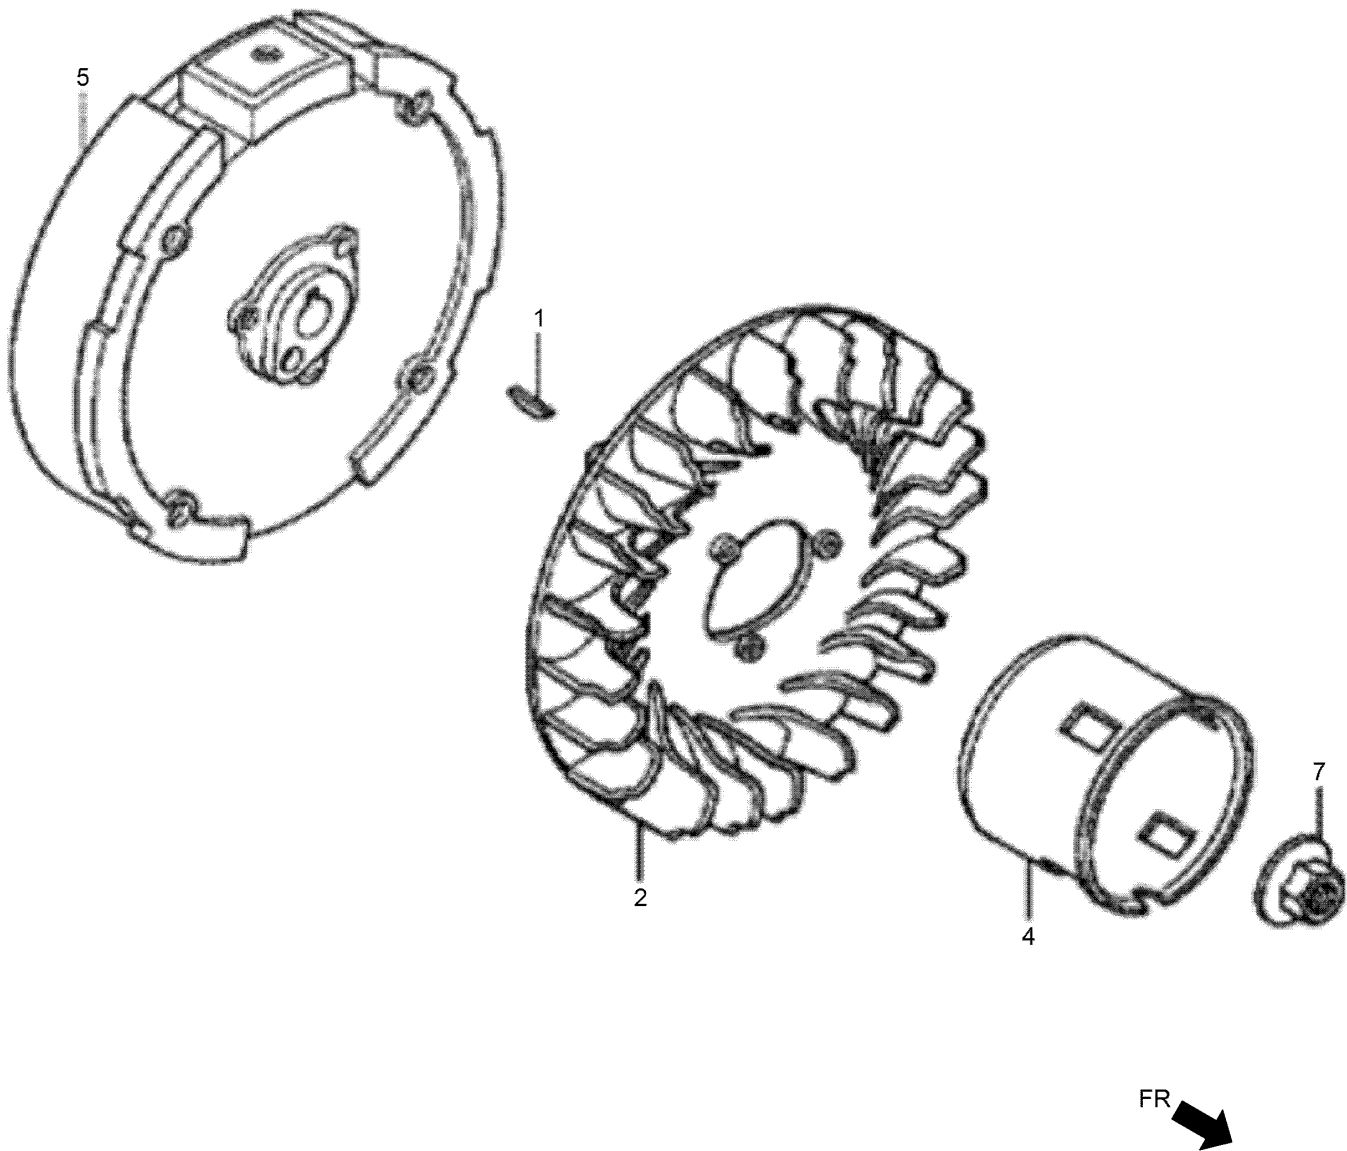


Flywheel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-0167	1	Key-Special Woodruff-25X18
2	132-0461	1	Fan-Cooling

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	132-0500	1	Pulley-Starter
5	132-0516	1	Flywheel ASM (STD)
7	132-0625	1	Nut-Special-14Mm

Ignition Coil Assembly

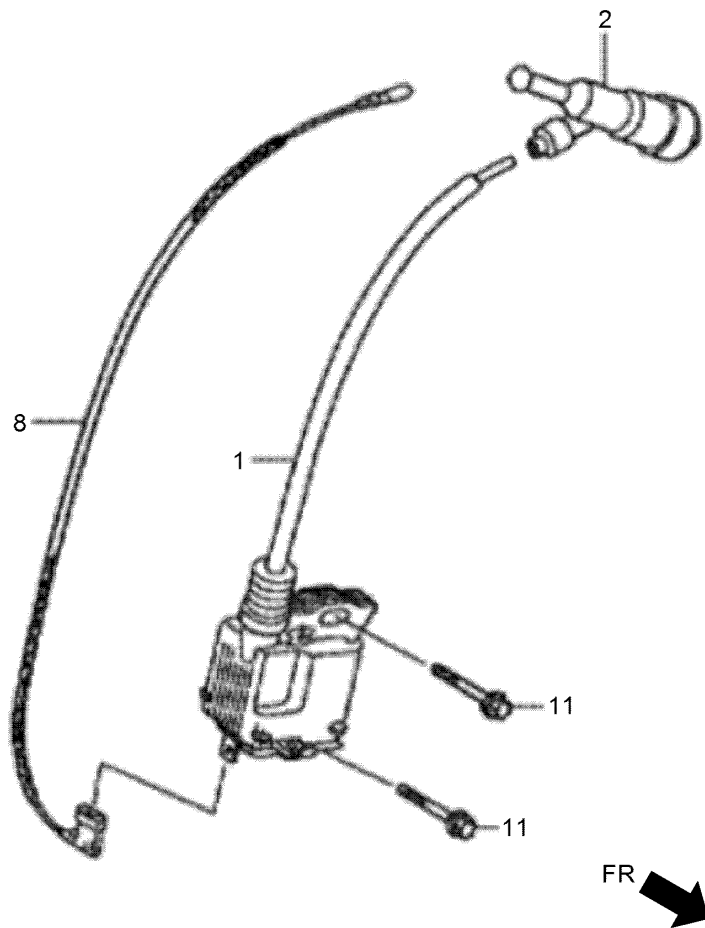


Ignition Coil Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-0510	1	Coil ASM-Ignition
2	132-0515	1	Cap ASM-Noise Suppressor

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
8	132-0533	1	Cord-Stop Switch
11	132-0620	2	Bolt-Flange-6X25

Control Assembly

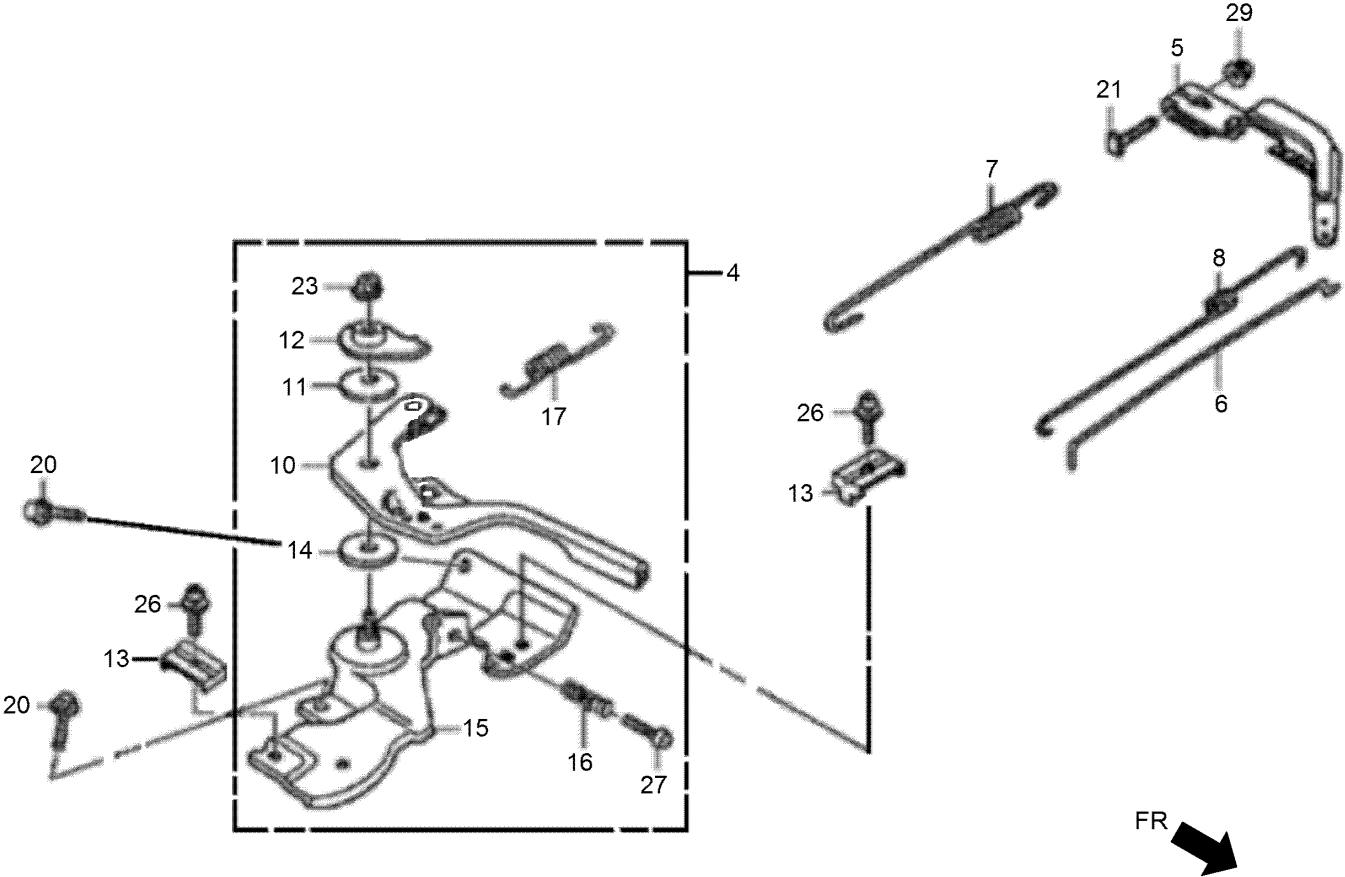


Control Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	132-0292	1	Control ASM
5	132-0311	1	Arm-Governor
6	132-0316	1	Rod-Governor
7	132-0320	1	Spring-Governor
8	132-0324	1	Spring-Throttle Return
10	132-0328	1	Lever-Control
11	132-0329	1	Spring-Lever
12	132-0330	1	Washer-Control Lever
13	132-0331	1	Holder-Cable
14	132-0332	1	Spacer-Control Lever

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
15	132-0337	1	Control Base ASM
16	132-0340	1	Spring-Control Adjusting
17	132-0341	1	Spring-Cable Return
20	132-4880	2	Bolt-Flange-6X12
21	132-0598	1	Bolt-Governor Arm
23	132-0619	1	Nut-Self-Lock-6Mm
26	132-0678	1	Screw-Pan-5X16
27	132-0679	1	Screw-Pan-5X25
29	132-4881	1	Nut-Flange-6Mm

Label Assembly


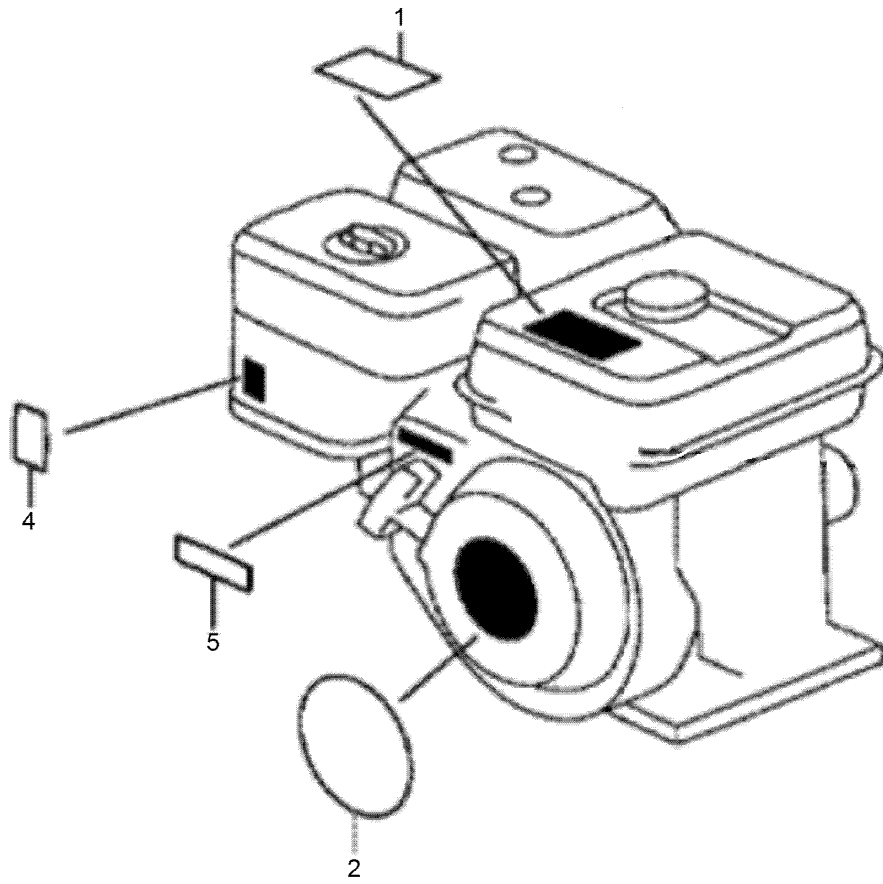


Label Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-0559	1	Mark-Operator Caution
2	132-0561	1	Emblem

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	132-0566	1	Mark-Choke
5	132-0567	1	Mark-Throttle Indication

Decal Assembly

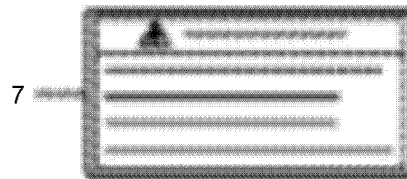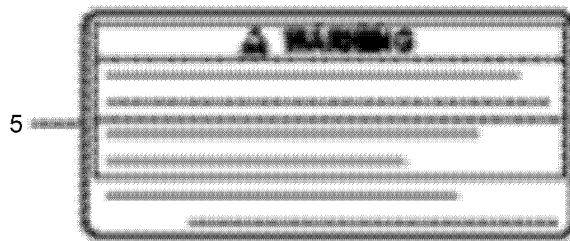


Decal Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	132-0552	1	Mark-Operator Caution (English)
5	132-0553	1	Mark-Operator Caution (French)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
7	132-0570	1	Mark-Exhaust Caution (English)
7	132-0571	1	Mark-Exhaust Caution (French)

Gasket Kit

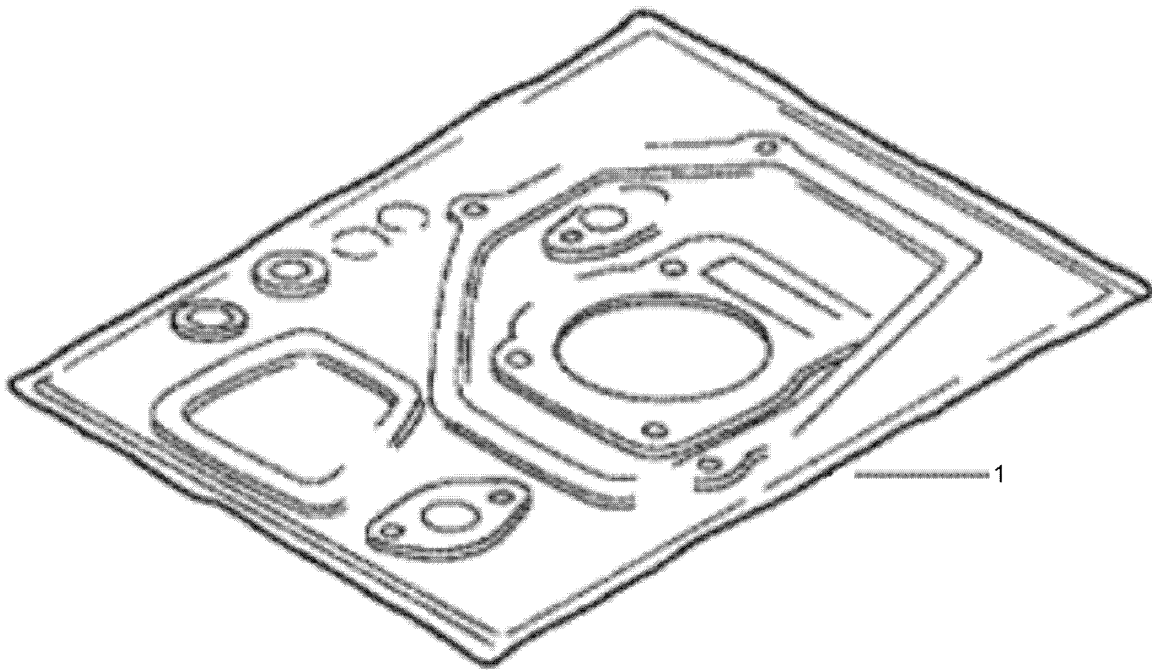

Gasket Kit (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-0100	1	Gasket Kit



Count on it.