



Form No. 3376-152 Rev C

Count on it.

Parts Catalog

GreensPro™ 1200 Greens Roller

Model No. 44907—Serial No. 313000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HP: high pressure

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: low pressure

LPG: Liquefied Petroleum Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

 
TAP: self tapping

TTH: torx truss head

Contents


Steering Assembly	4
Complete Long Steering Roller Assembly No. 111-5719	6
Complete Short Steering Roller Assembly No. 111-5720	7
Hydraulic Tank and Hose Assembly	8
Engine and Transmission Assembly	9
Transmission Assembly No. 111-6000	10
Drive Roller Assembly	12
Lifting Mechanism Assembly	13
Steering Wheel Assembly	14
Tow Bar Assembly	15
Seat Assembly	16
Transmission Control Assembly	18
Cylinder Head Assembly	20
Cylinder Barrel Assembly	22
Crankcase Cover Assembly	24
Crankshaft Assembly	26
Piston and Connecting Rod Assembly	28
Camshaft Assembly	30
Recoil Starter Assembly	32
Fan Cover Assembly	34
Carburetor Assembly	36
Air Cleaner Assembly	38
Muffler Assembly	40
Fuel Tank Assembly	42
Flywheel Assembly	44
Ignition Coil Assembly	46
Control Assembly	48
Label Assembly	50
Wrench	52
Decal Assembly	54
Gasket Kit	56
Attachments and Accessories	58

Steering Assembly

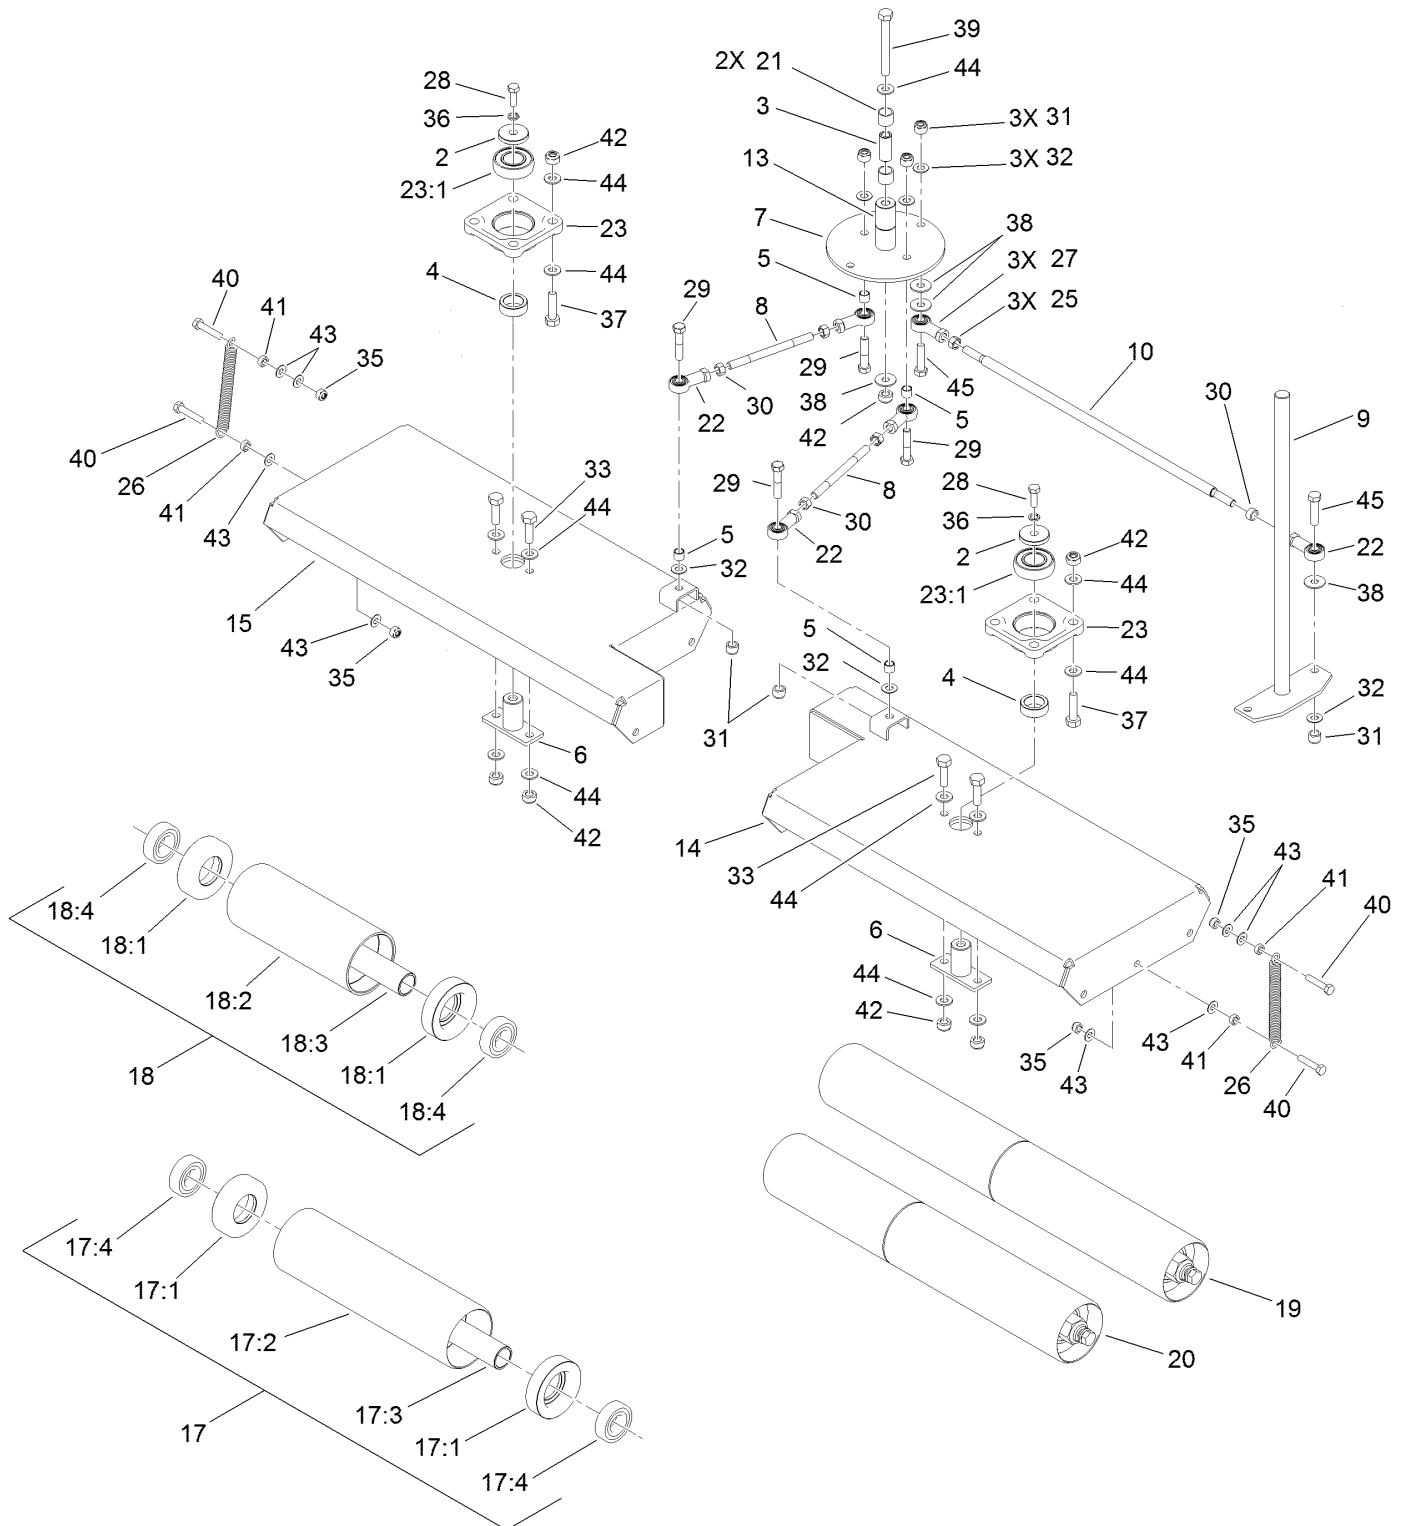


Steering Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	111-5674	2	Collar-Fixing	21	111-5746	2	Bushing-Oilite
3	111-5676	1	Bushing-Pivot	22	111-5748	3	Joint-Ball
4	111-6108	2	Bushing-Axle	23	111-5753	2	Bearing Housing ASM
5	111-5684	4	Bushing	23:1	111-5779	1	Bearing
6	111-5688	2	Shaft-Pivot	25	111-5855	3	Nut-Hex, LH
7	111-5689	1	Disc-Steering	26	111-5883	2	Spring-Extension
8	111-5690	2	Arm-Linkage	27	111-5959	3	Joint-Ball
9	111-5691-01	1	Steering Pivot ASM	28	09395	2	Screw-HH
10	111-5692	1	Rod-Pivot, Steering	29	09119	4	Bolt
13	111-5701	1	Bushing-Spacer, Steering	30	09213	3	Nut
14	111-5707-01	1	Head-Steering, Front	31	09216	6	Nut-Hex, NI
15	111-5708-01	1	Head-Steering, Rear	32	09271	6	Washer-Plain
17	111-5717	6	Long Steering Roller ASM	33	09394	4	Bolt
17:1	111-5866	2	Housing-Bearing	35	09441	4	Nut-Hex, NI
17:2	111-5867	1	Roller-Steering, Long	36	09480	10	Washer-Lock
17:3	111-5713	1	Spacer-Roller, Long	37	09611	8	Bolt-HH
17:4	63-07-009	2	Bearing	38	HY03355	4	Washer-Plated
18	111-5718	2	Short Steering Roller ASM	39	ZBH1J095U	1	Bolt-HH
18:1	111-5866	2	Housing-Bearing	40	09681	4	Bolt
18:2	111-5868	1	Roller-Steering, Short	41	ZNH1H000U	4	Nut-Hex
18:3	111-5714	1	Spacer-Roller	42	ZNN1J000U	13	Nut-Hex, NI
18:4	63-07-009	2	Bearing	43	09475	8	Washer
19	111-5719	2	Complete Long Steering Roller ASM	44	ZWQ1J000U	33	Washer-Plain
20	111-5720	2	Complete Short Steering Roller ASM	45	09118	2	Bolt-HH

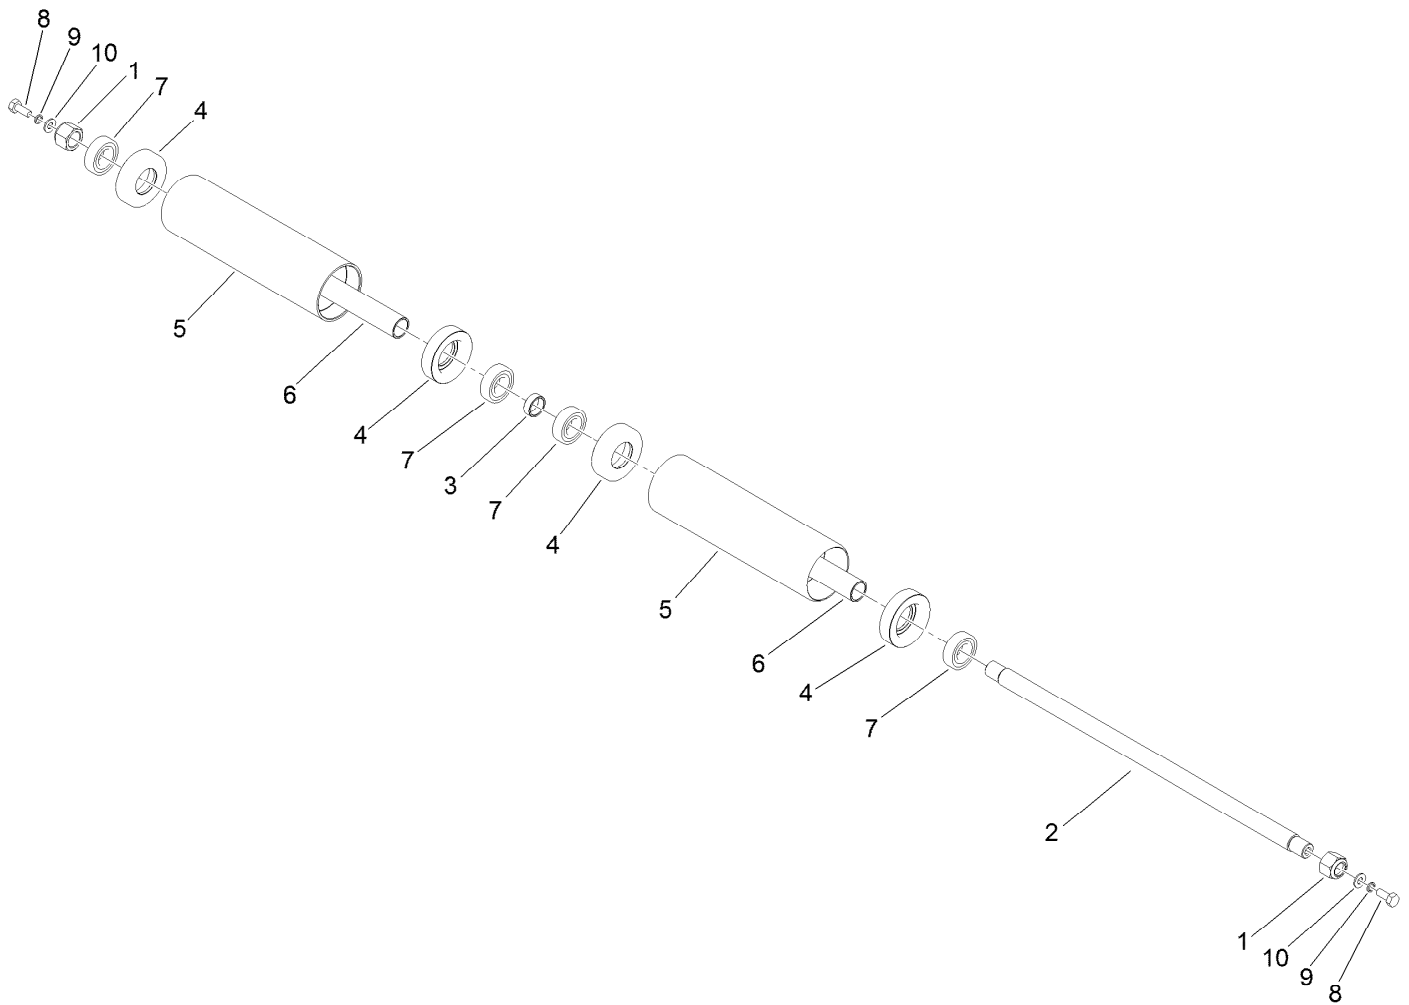 


Complete Long Steering Roller Assembly No. 111-5719

Ref.	Part Number	Qty.	Description
1	111-5637	2	Nut-Lock, NI
2	111-5696	1	Axle-Steering, Long
3	111-5715	1	Spacer-Roller, Short
4	111-5866	4	Housing-Bearing
5	111-5867	2	Roller-Steering, Long
6	111-5713	2	Spacer-Roller, Long
7	63-07-009	4	Bearing
8	09395	2	Screw-HH
9	09480	2	Washer-Lock
10	ZWQ1J000U	2	Washer-Plain

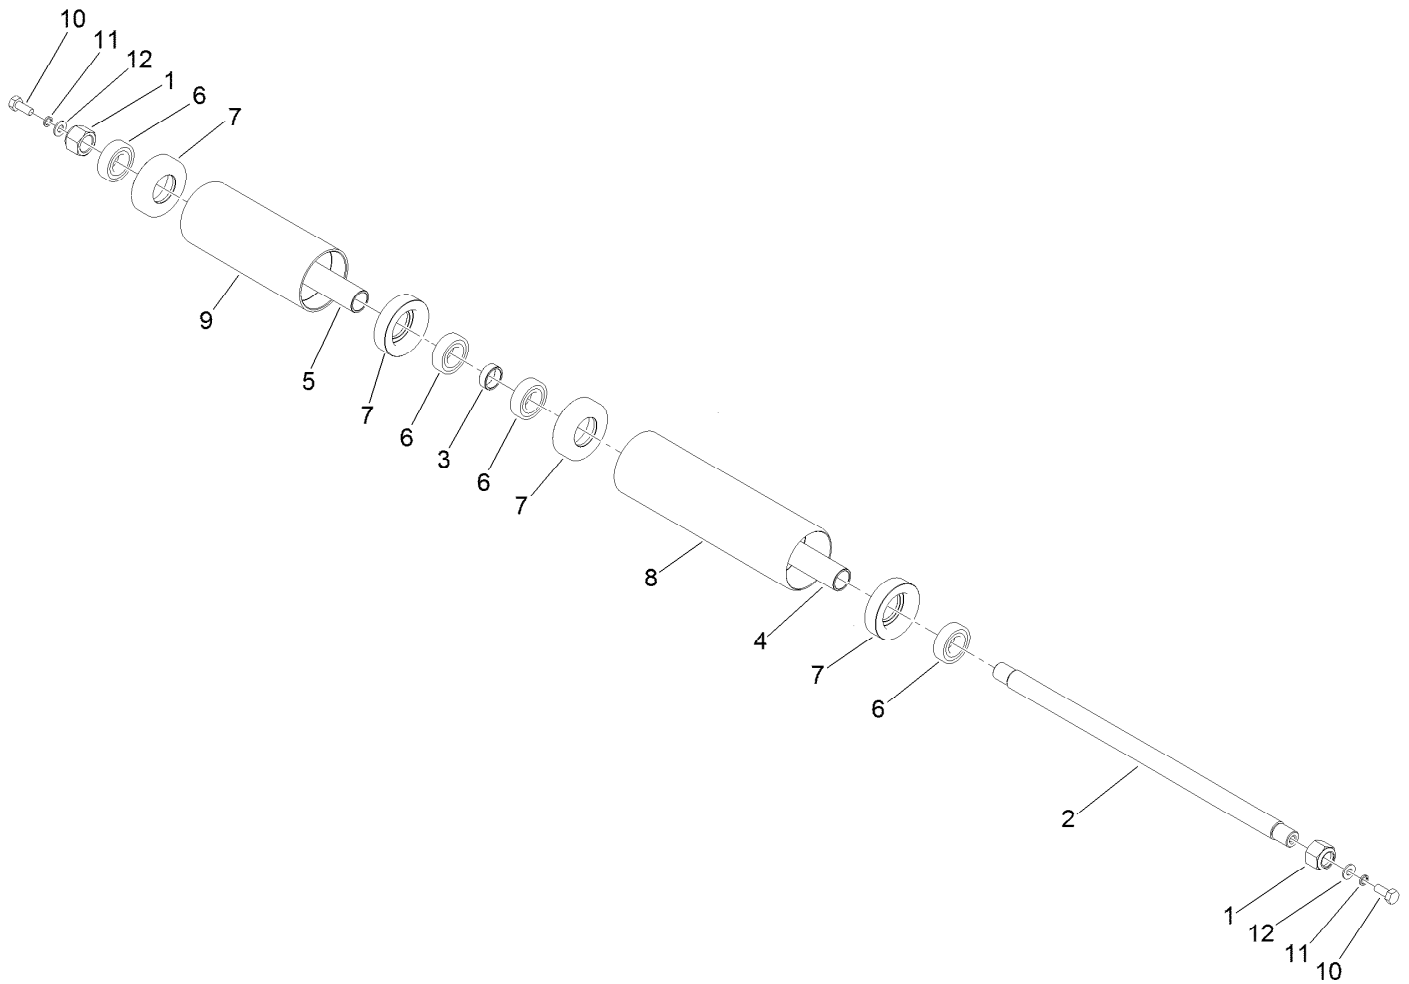 

Complete Short Steering Roller Assembly No. 111-5720


Ref.	Part Number	Qty.	Description
1	111-5637	2	Nut-Lock, NI
2	111-5695	1	Axle-Steering, Short
3	111-5715	1	Spacer-Roller, Short
4	111-5713	1	Spacer-Roller, Long
5	111-5714	1	Spacer-Roller
6	63-07-009	4	Bearing
7	111-5866	4	Housing-Bearing
8	111-5867	1	Roller-Steering, Long
9	111-5868	1	Roller-Steering, Short
10	09395	2	Screw-HH
11	09480	2	Washer-Lock
12	ZWQ1J000U	2	Washer-Plain

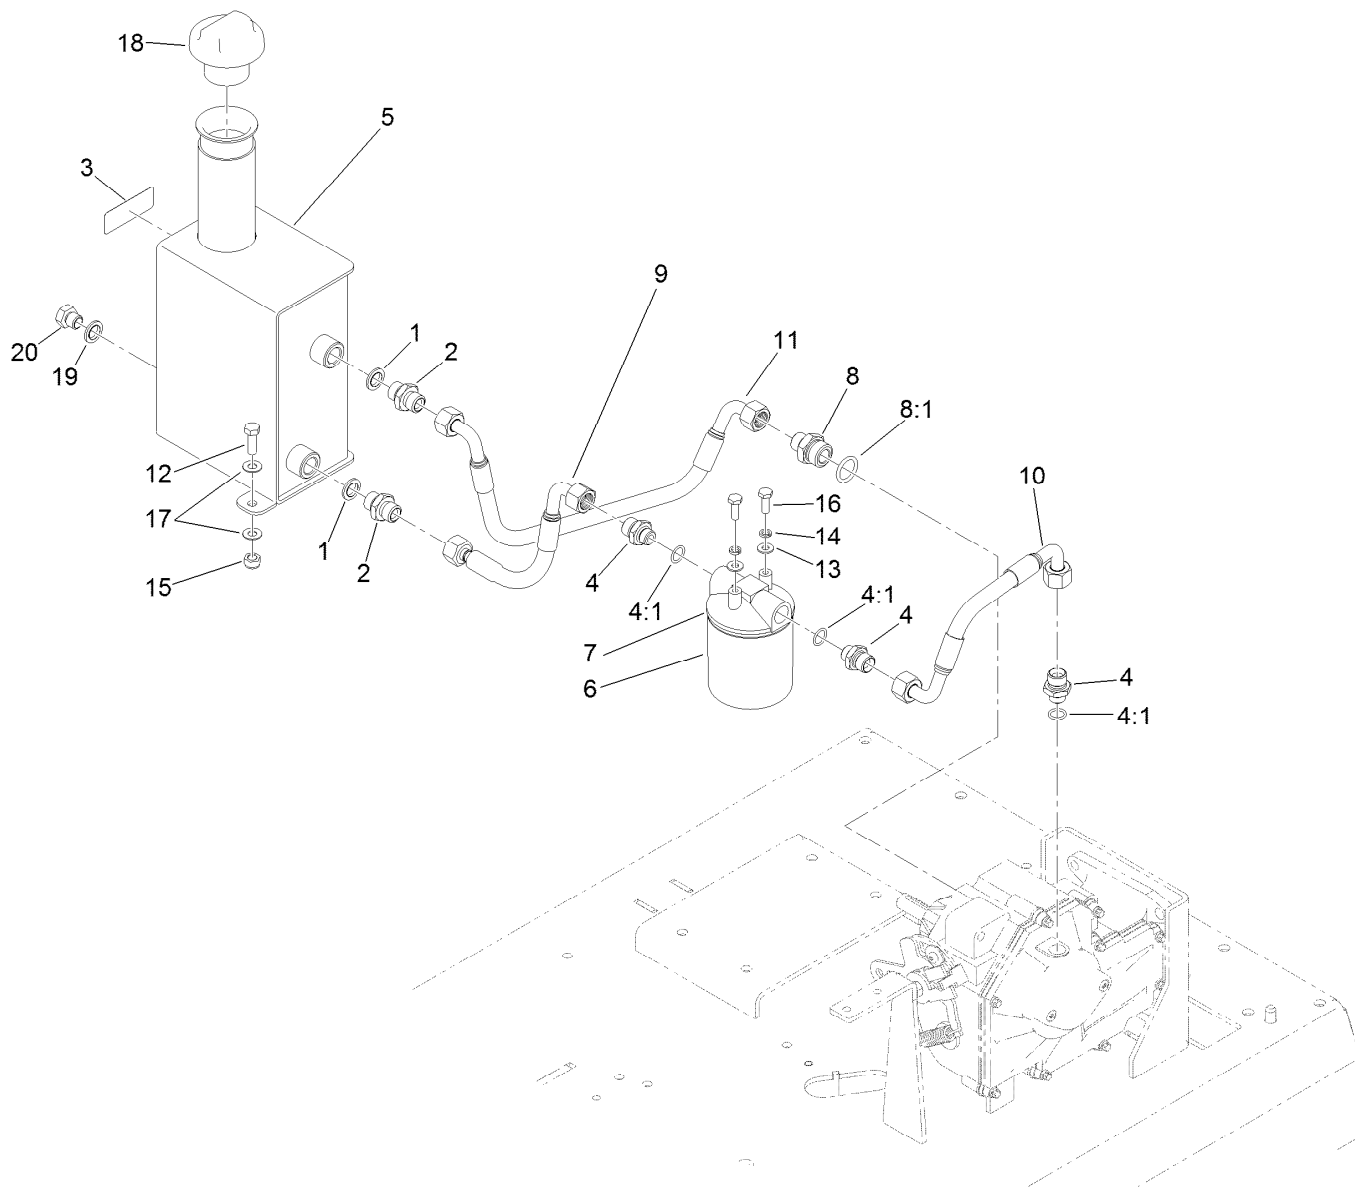 

Hydraulic Tank and Hose Assembly

Ref.	Part Number	Qty.	Description
1	10-06-031	2	Seal-Dowty
2	10-06-042	2	Adaptor-Bspp
3	93-6686	1	Decal-Oil, HYD
4	111-4788	3	Fitting-Straight
4:1	70-06-165	1	Seal-O Ring
5	111-5704-01	1	Oil Tank ASM
6	111-5750	1	Cartridge-Filter, Oil
7	111-5752	1	Head-Filter, Oil
8	70-06-053	1	Adaptor-Boss
8:1	63-06-111	1	Seal-O Ring
9	111-5956	1	HYD Hose ASM

Ref.	Part Number	Qty.	Description
10	111-5957	1	HYD Hose ASM
11	111-5958	1	HYD Hose ASM
12	03162	2	Screw-HH
13	09261	2	Washer-Plain
14	09264	2	Washer-Spring
15	09441	2	Nut-Hex, NI
16	09821	2	Screw-HH
17	09475	4	Washer
18	111-5749	1	Cap-Tank
19	10-06-030	1	Seal-Dowty
20	30-06-200	1	Plug-HYD

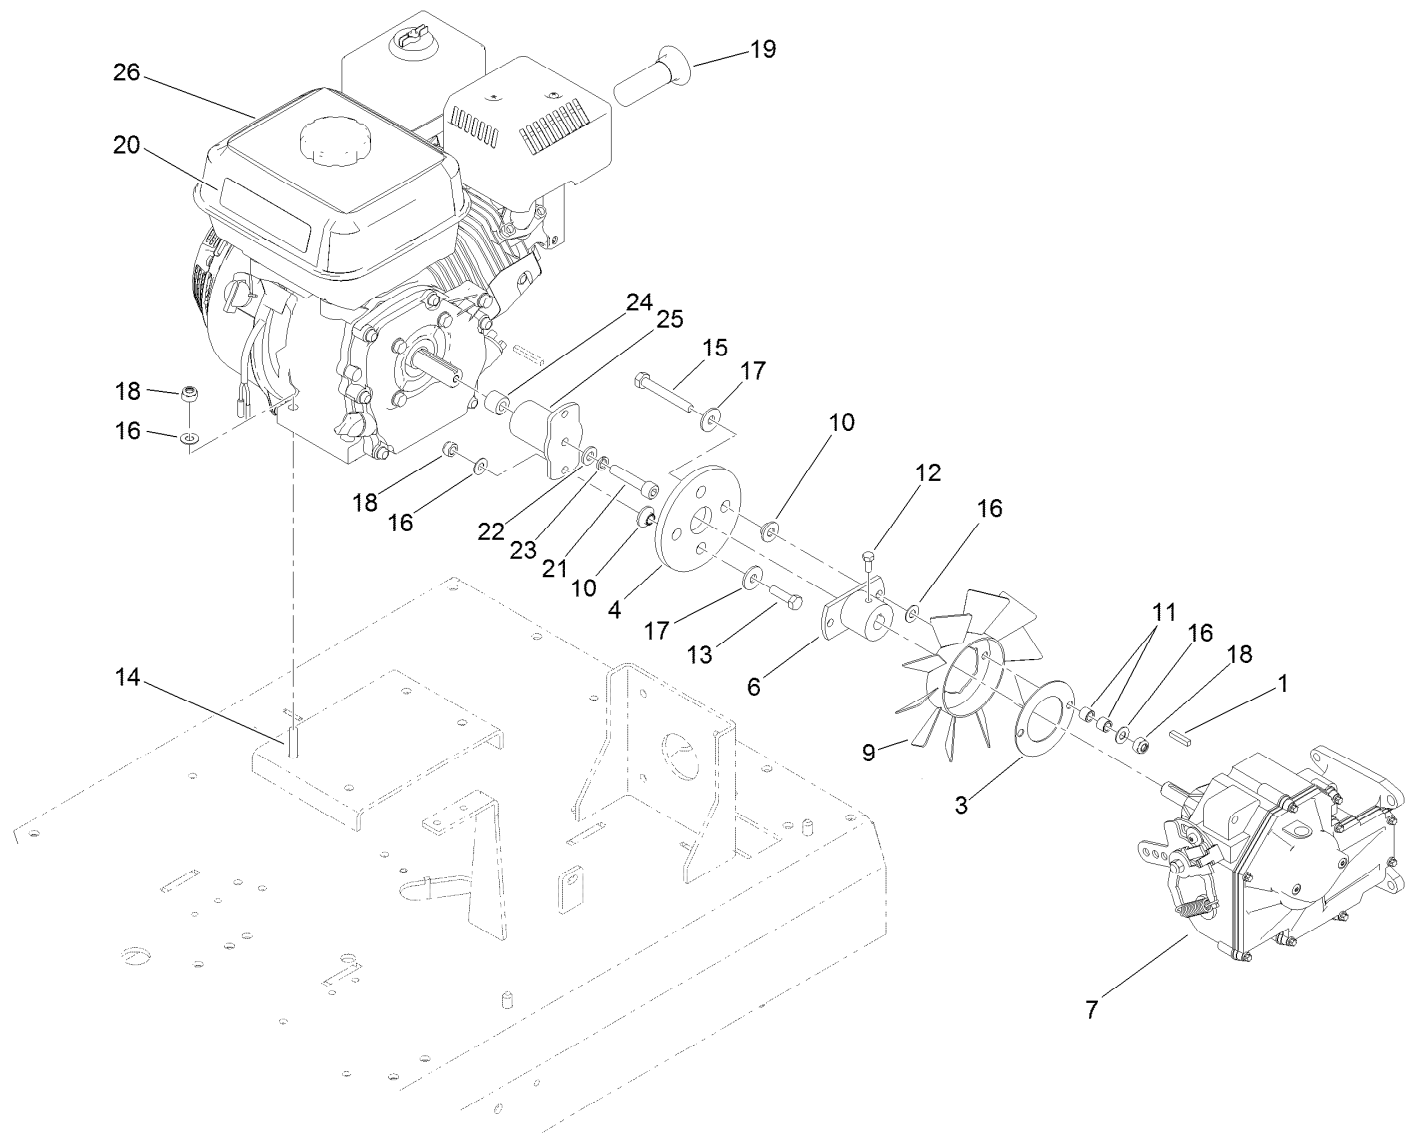 


Engine and Transmission Assembly

Ref.	Part Number	Qty.	Description
1	111-5724	1	Key-Square
3	111-5726	1	Ring-Support, Fan
4	80-8650	1	Coupling-Drive
6	111-5730	1	Collar-Pump
7	111-6000	1	Transmission ASM
9	111-5788	1	Fan-Transmission
10	27-6600	4	Spacer-Coupling
11	111-5792	4	Bushing
12	09368	1	Screw-HH
13	09369	2	Screw-HH
14	09681	4	Bolt
15	09371	2	Bolt

Ref.	Part Number	Qty.	Description
16	09475	10	Washer
17	09267	4	Washer
18	09441	8	Nut-Hex, NI
19	111-6526	1	Arrester-Spark
20	117-2718	1	Decal-Arrester, Spark
21	ZCS1H040U	1	Screw-Cap, HSH
22	ZWP1H000U	1	Washer-Plain
23	03469	1	Washer-Spring
24	111-6713	1	Spacer-Shaft, Engine
25	111-6454	1	Engine Collar ASM
26	111-6476	1	Engine-Honda

 Transmission Assembly No. 111-6000

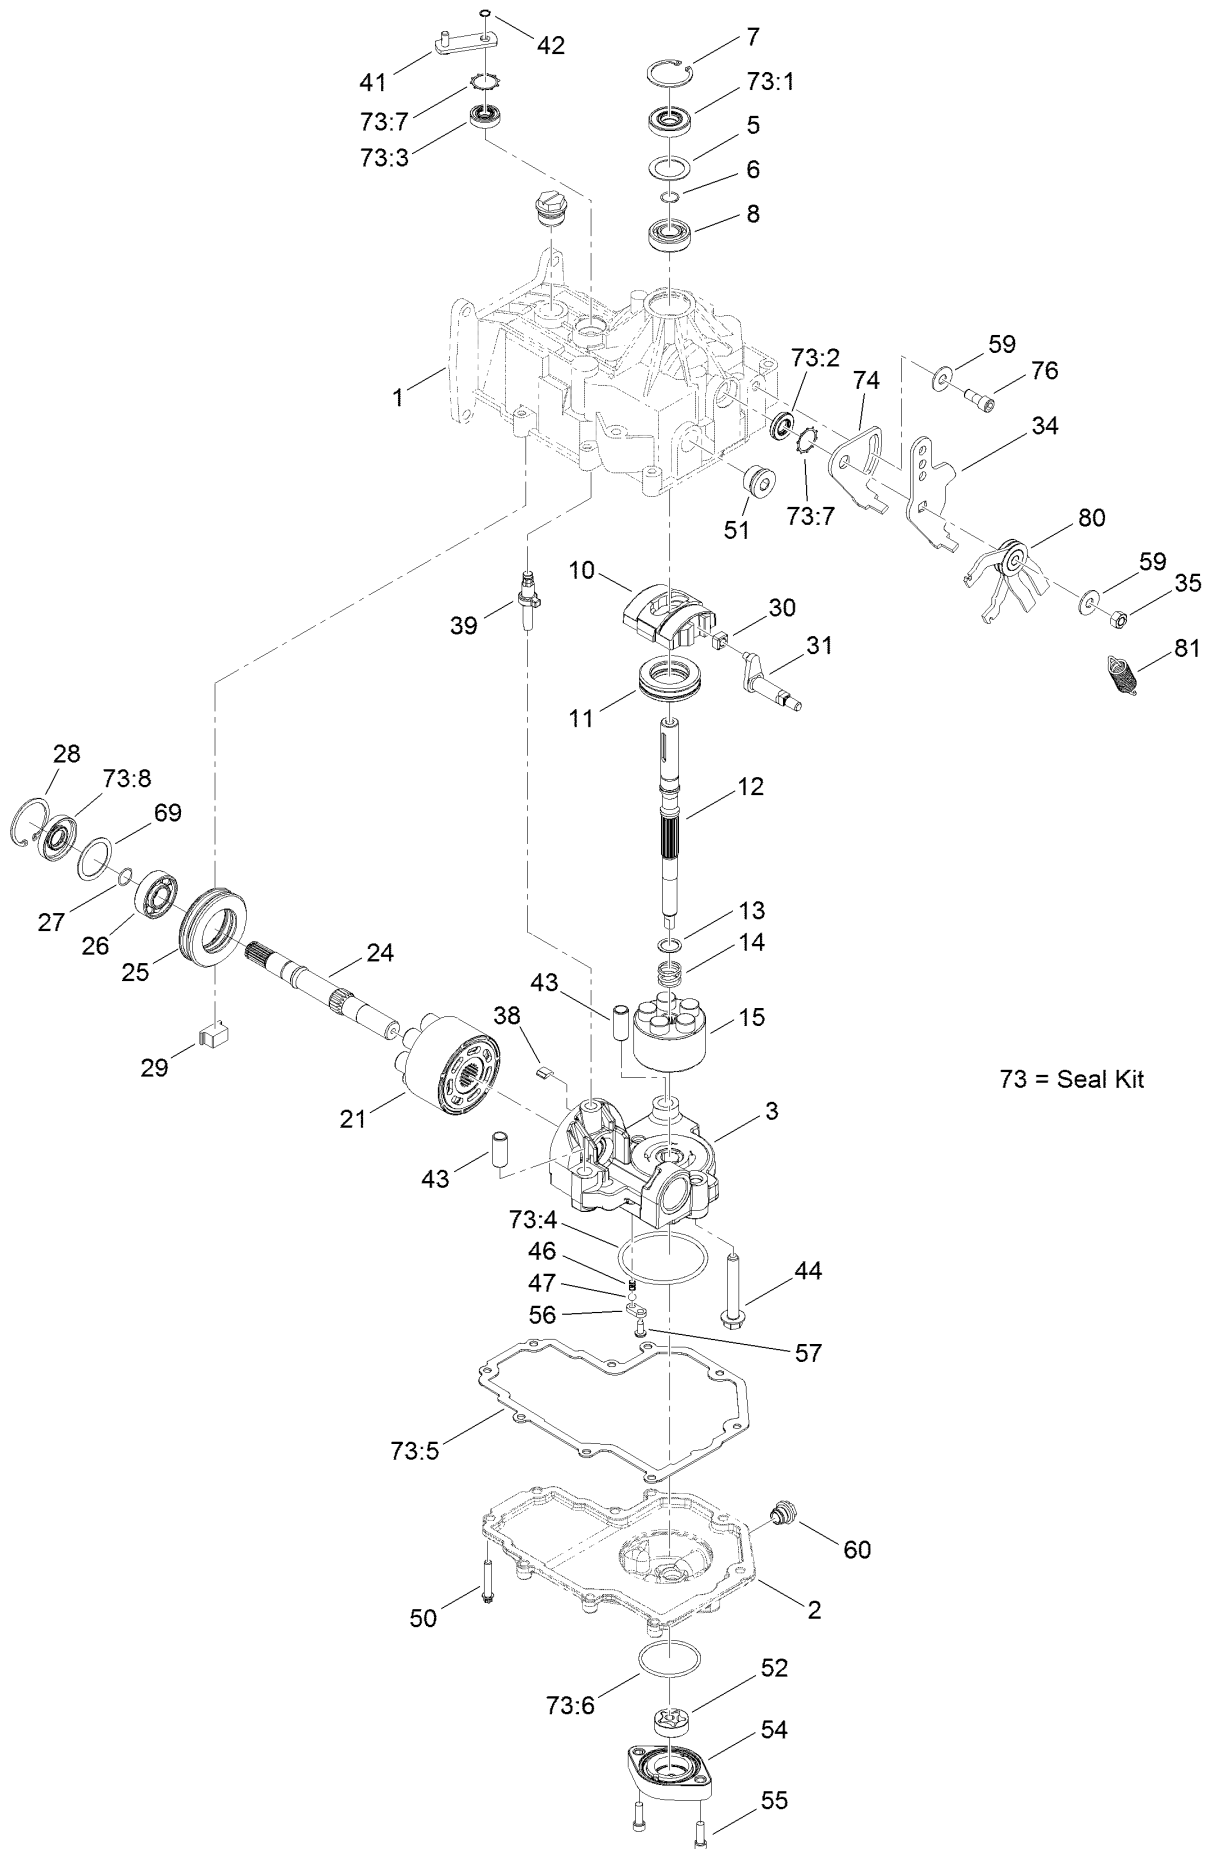


73 = Seal Kit

Transmission Assembly No. 111-6000 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Housing-Upper ●	43	94-1927	2	Pin
2		1	Housing-Lower ●	44	94-6926	3	Bolt
3	125-9162	1	Center Section Kit	46	108-8548	1	Spring-Helical
5	104-2104	1	Spacer	47	108-8549	1	Ball-1/4 Inch
6	119-5531	1	Ring-Retaining, Wire	50	94-1926	9	Bolt
7	119-5533	1	Ring-Retaining	51	125-9168	1	Plug
8	119-5530	1	Bearing-Ball	52	125-9169	1	Gerotor ASM
10	94-1907	1	Swashplate-Variable	54		1	Housing Charge Pump ●
11	94-6922	1	Bearing-Thrust	55	106-8758	2	Screw-HSH
12	125-9163	1	Shaft-Input	56	108-8550	1	Plate-Relief
13	120-5538	1	Washer	57	112-5910	1	Bolt-TAP
14	120-5537	1	Spring-Compression	59	5-4460	2	Washer-Pivot
15	103-2666	1	Cylinder Block Kit	60		1	Plug ●
21	94-1913	1	Cylinder Block ASM	69	104-5308	1	Spacer
24	125-9164	1	Shaft-Output	73	125-9176	1	Seal Kit
25	94-6923	1	Bearing-Thrust	73:1	119-5532	1	Seal-Lip
26	104-5311	1	Bearing-Ball	73:2	125-9166	1	Seal-Lip
27	104-5307	1	Ring-Retaining	73:3	92-6545	1	Seal-Lip
28	104-5309	1	Ring-Retaining	73:4	108-8545	1	O-Ring
29	125-9165	1	Retainer-Bearing, Motor	73:5		1	Gasket ●
30	94-1910	1	Guide-Slot	73:6	106-8757	1	O-Ring
31	104-2112	1	Trunnion ASM	73:7	125-9175	2	Ring-Retaining, Star
34	125-9167	1	Arm-Control	73:8	104-5310	1	Seal-Lip
35	32128-16	1	Nut-HHF	74	125-9177	1	Arm-Return
38	112-5892	1	Bypass Plate Kit	76	125-9178	1	Screw
39	94-1914	1	Actuator-Bypass	80	125-9179	1	Scissor Arm ASM
41	104-2117	1	Arm-Bypass	81	114-8462	1	Spring-Extension
42	936109	1	Ring-Retaining				

 
● Not serviced separately

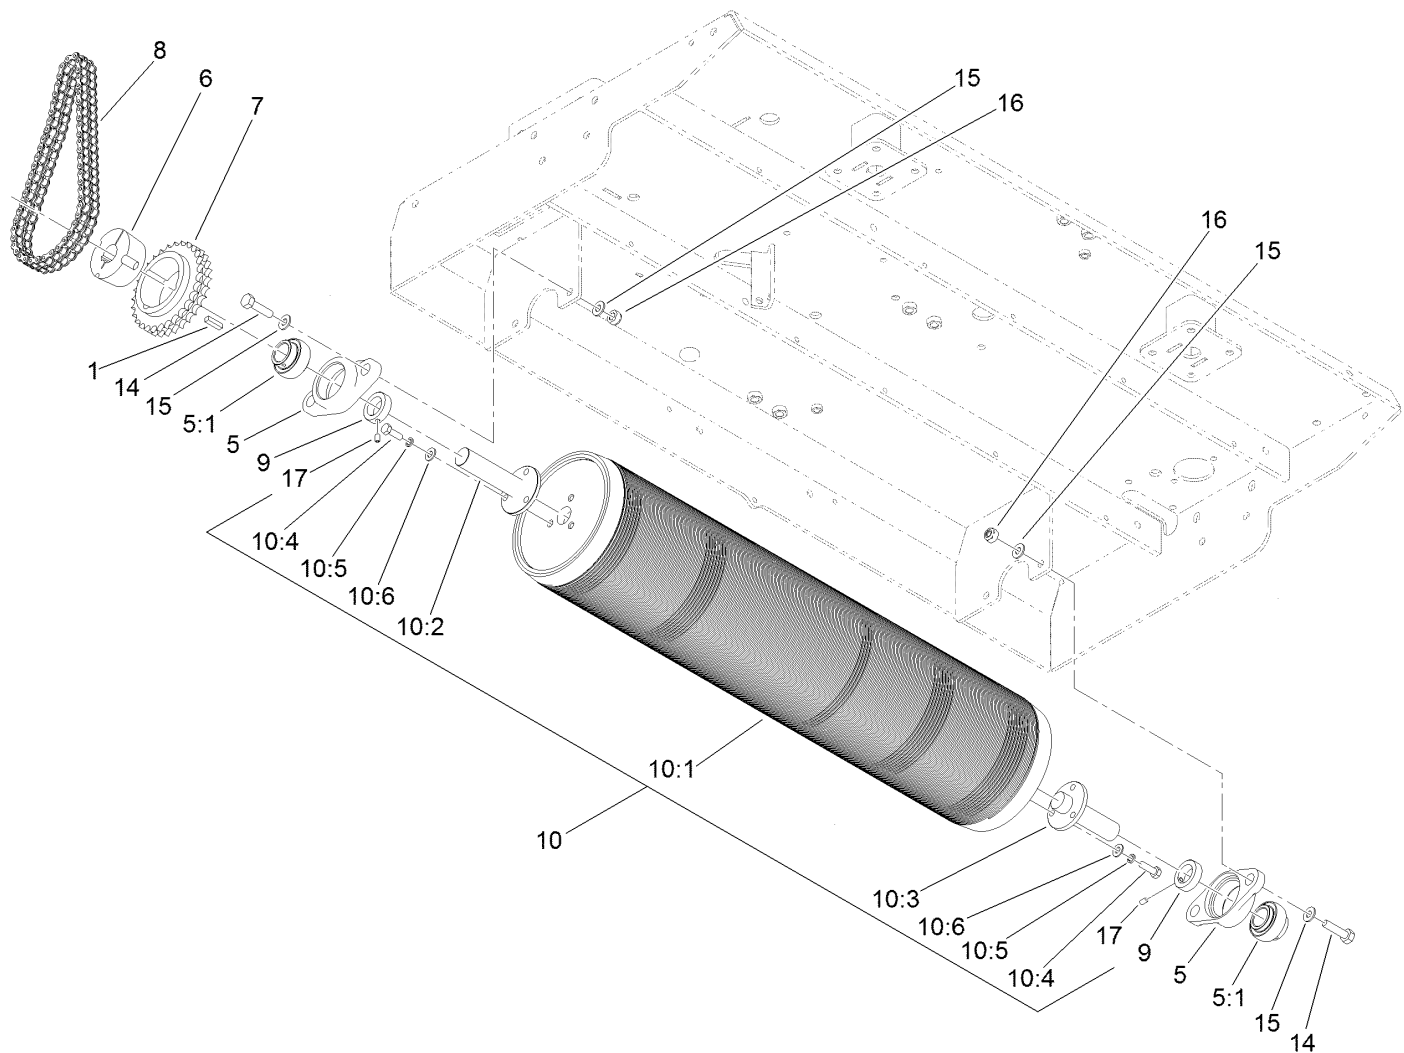

Drive Roller Assembly

Ref.	Part Number	Qty.	Description
1	04522	1	Key-Square
5	111-5744	2	Bearing ASM
5:1	111-5758	1	Bearing
6	111-5762	1	Hub-Taperlock
7	111-5763	1	Sprocket-30 Tooth, Duplex
8	111-5769	1	Chain-Drive
9	111-5785	2	Collar
10	111-5789	1	Drive Roller ASM
10:1	111-5850	1	Drive Roller Drum ASM


Ref.	Part Number	Qty.	Description
10:2	111-5733	1	Axle-Roller, Keyed
10:3	111-5734	1	Axle-Roller
10:4	09073	6	Setscrew
10:5	03469	6	Washer-Spring
10:6	09266	6	Washer-Plain
14	09611	4	Bolt-HH
15	ZWQ1J000U	8	Washer-Plain
16	09447	4	Nut
17	09619	2	Grubscrew

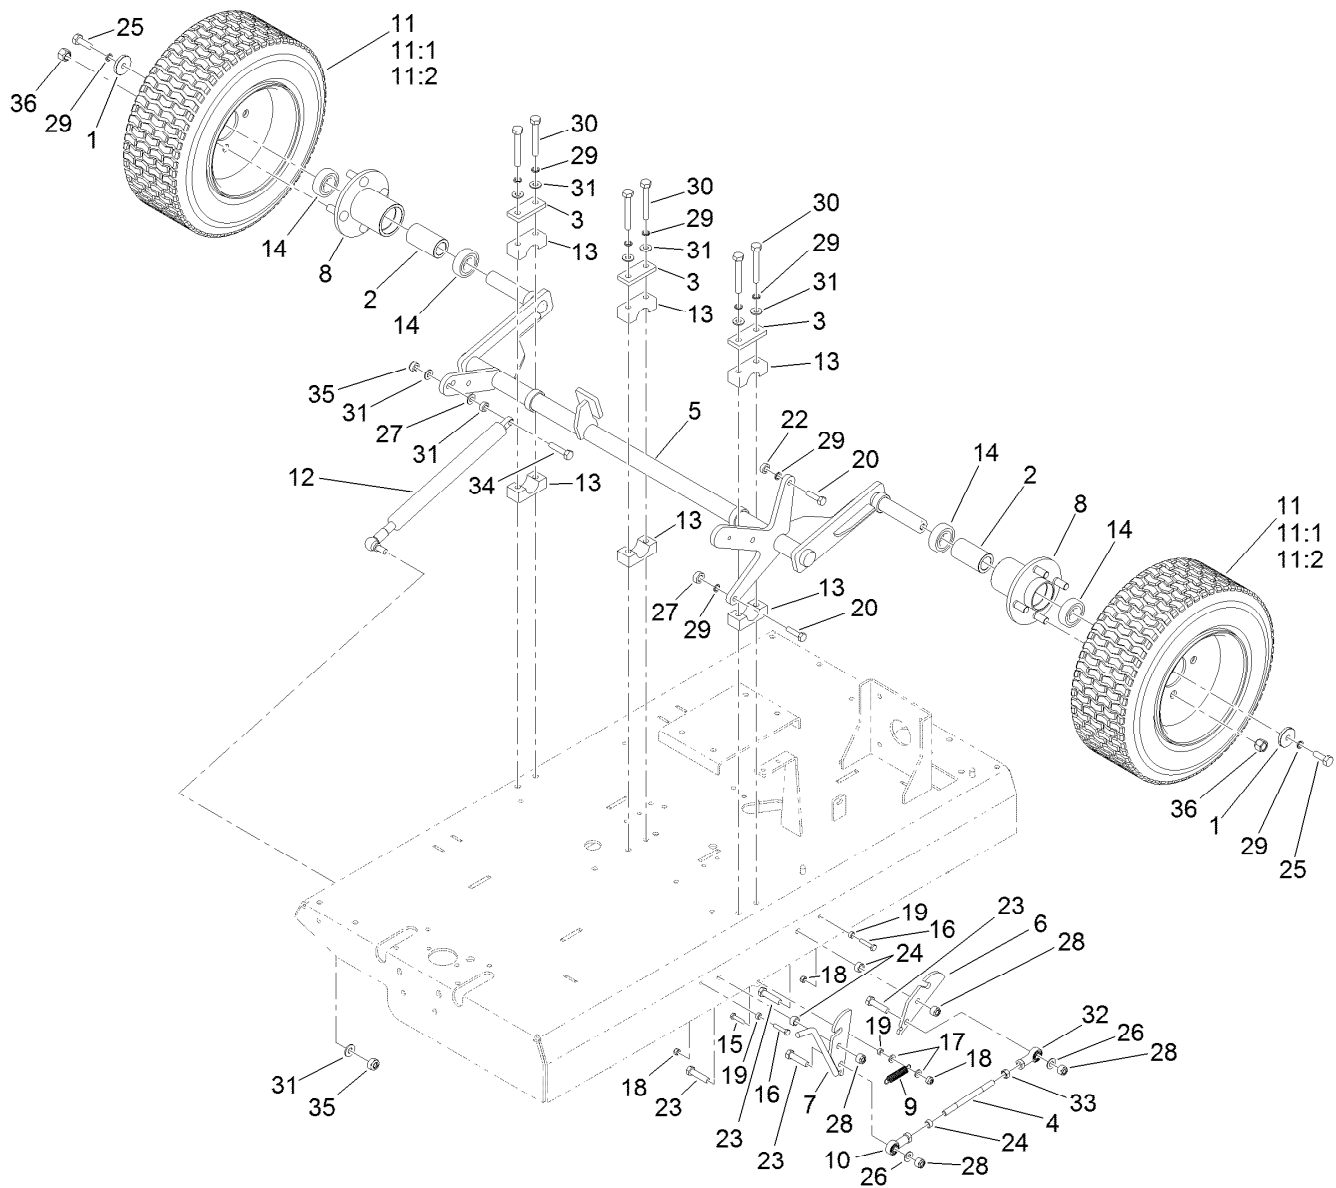 

Lifting Mechanism Assembly

Ref.	Part Number	Qty.	Description
1	111-5674	2	Collar-Fixing
2	111-5858	2	Spacer-Bearing
3	111-5681	3	Plate-Clamp, Axle
4	111-5690	1	Arm-Linkage
5	111-5698-01	1	Wheel Lifting Arm ASM
6	111-5969	1	Plate-Lock, Wheel
7	111-5700	1	Wheel Lock ASM
8	111-5706-01	2	Wheel Hub ASM
9	111-5745	1	Spring-Extension
10	111-5748	1	Joint-Ball
11	111-5678	2	Wheel And Tire ASM
11:1	111-5755	1	Tyre
11:2	111-5756	1	Rim-Wheel
12	111-5787	1	Spring-Gas
13	111-5790	3	Clamp-Axle
14	63-07-009	4	Bearing
15	09364	1	Screw-HH
16	09547	2	Screw-HH
17	09472	2	Washer-Plain


Ref.	Part Number	Qty.	Description
18	09438	3	Nut-Nyloc
19	09437	3	Nut
20	09611	2	Bolt-HH
22	ZNH1H000U	1	Nut-Hex
23	09118	4	Bolt-HH
24	09213	3	Nut
25	09392	2	Screw-HH
26	09271	2	Washer-Plain
27	09449	2	Nut
28	09216	4	Nut-Hex, NI
29	09480	10	Washer-Lock
30	ZBH1J075U	6	Bolt-HH
31	ZWQ1J000U	9	Washer-Plain
32	111-5959	1	Joint-Ball
33	111-5855	1	Nut-Hex, LH
34	ZDH1J045U	1	Screw-HH
35	ZNN1J000U	2	Nut-Hex, NI
36	111-5834	8	Nut-Wheel

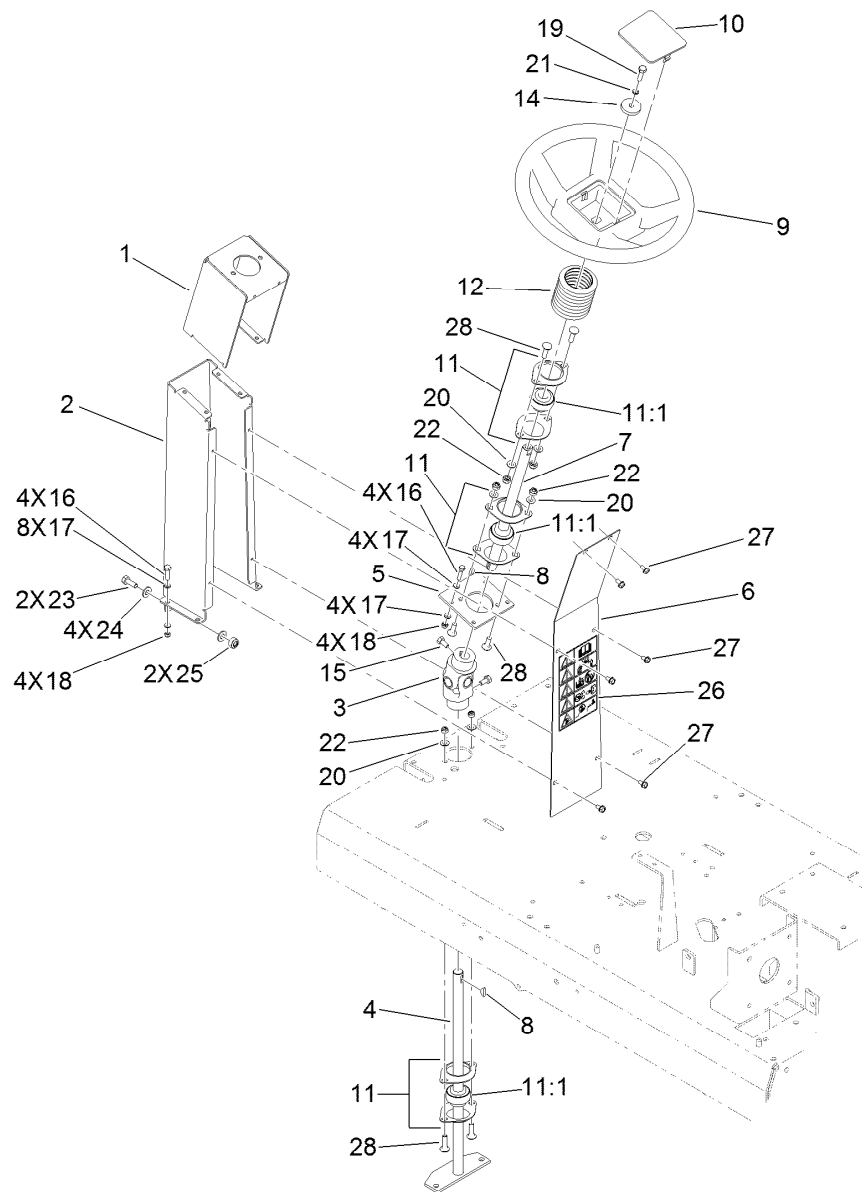 

Steering Wheel Assembly

Ref.	Part Number	Qty.	Description
1	111-5685-01	1	Box-Column, Steering
2	111-5686-01	1	Column-Steering
3	111-5767	1	Joint-Universal
4	111-5691-01	1	Steering Pivot ASM
5	111-5702-01	1	Plate-Bearing
6	111-5703-01	1	Cover-Column
7	111-5710	1	Shaft-Steering, Upper
8	HY4325	2	Key-Woodruff
9	111-5764	1	Wheel-Steering
10	111-5765	1	Cap-Wheel, Steering
11	111-5766	3	Bearing ASM
11:1	111-5771	1	Bearing
12	111-5795	1	Cover-Shaft, Steering
14	111-6084	1	Spacer

Ref.	Part Number	Qty.	Description
15	09391	2	Screw-HH
16	09364	8	Screw-HH
17	09472	16	Washer-Plain
18	09438	8	Nut-Nyloc
19	03162	1	Screw-HH
20	09475	6	Washer
21	03469	1	Washer-Spring
22	09441	6	Nut-Hex, NI
23	09392	2	Screw-HH
24	ZWQ1J000U	4	Washer-Plain
25	ZNN1J000U	2	Nut-Hex, NI
26	111-5648	1	Decal-Warning
27	09546	6	Screw-Taptite
28	09373	6	Bolt-Coach

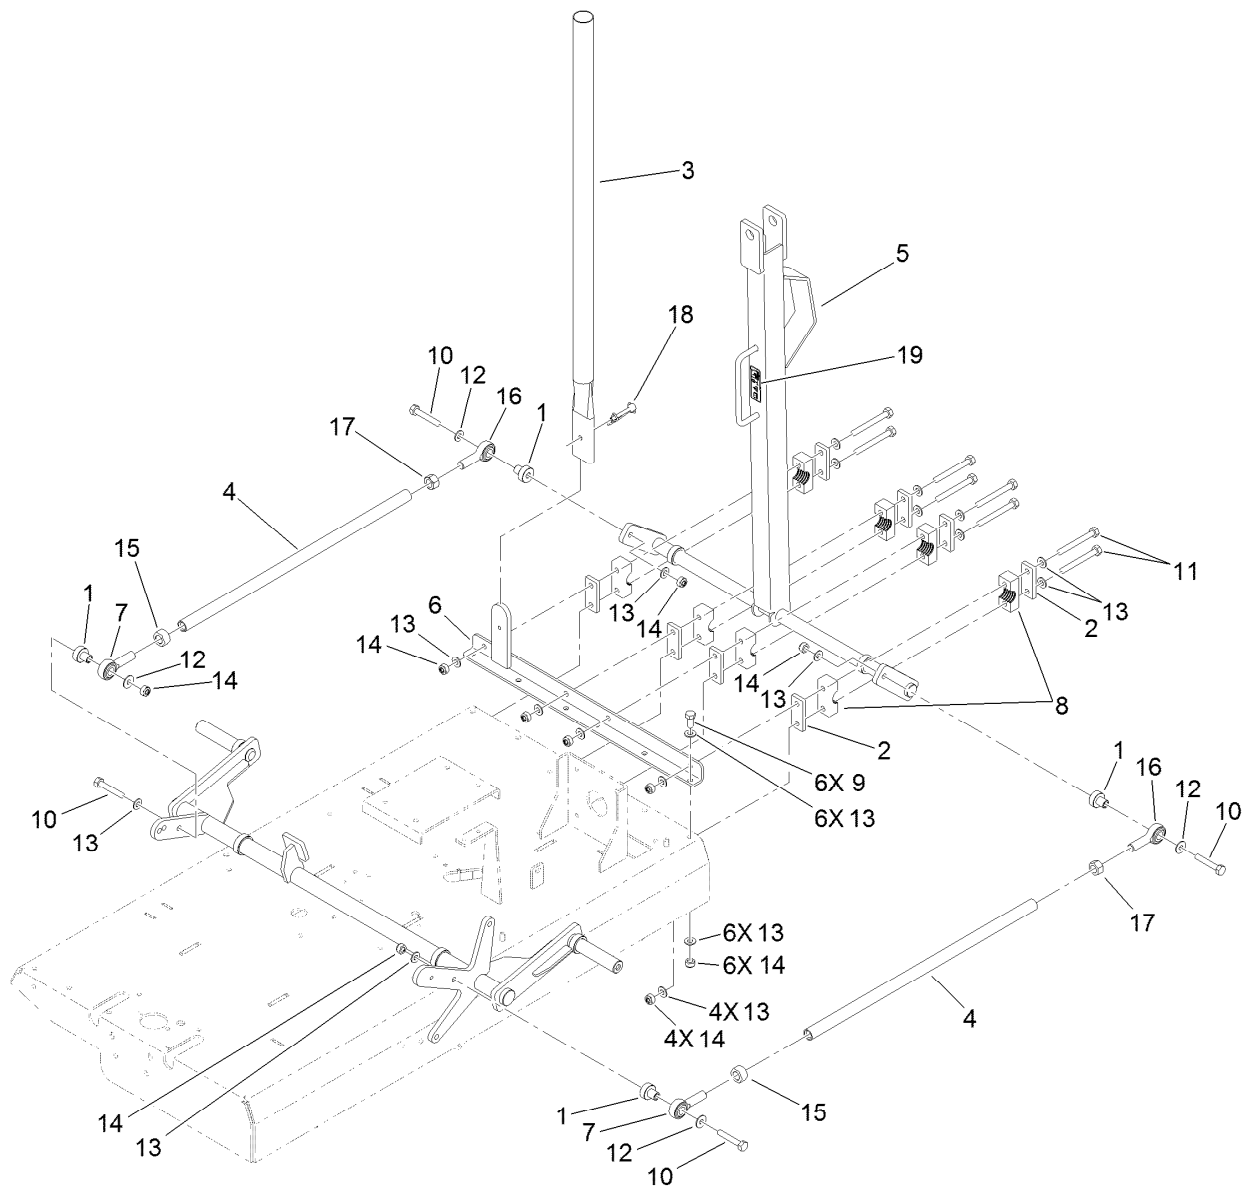 


Tow Bar Assembly

Ref.	Part Number	Qty.	Description
1	111-5679	4	Bushing-Quadrant, Short
2	111-5681	8	Plate-Clamp, Axle
3	111-5705-01	1	Handle-Lifting
4	111-5731-01	2	Bar-Lifting
5	111-5732-01	1	Lever-Bar, Tow
6	111-5930-01	1	Tow Bar Bracket ASM
7	111-5751	2	Rod-End, Male
8	111-5754	4	Clamp-Drawbar
9	09395	6	Screw-HH
10	09397	4	Bolt

Ref.	Part Number	Qty.	Description
11	ZBH1J090U	8	Screw-HH
12	HY03355	4	Washer-Plated
13	ZWQ1J000U	32	Washer-Plain
14	ZNN1J000U	18	Nut-Hex, NI
15	70-11-003	2	Nut-Hex
16	111-5974	2	Rod-End, Male
17	111-5975	2	Nut-Hex, LH
18	951014	1	Pin-Lock, Wire
19	111-5652	1	Label-Force, Lifting

 
Seat Assembly

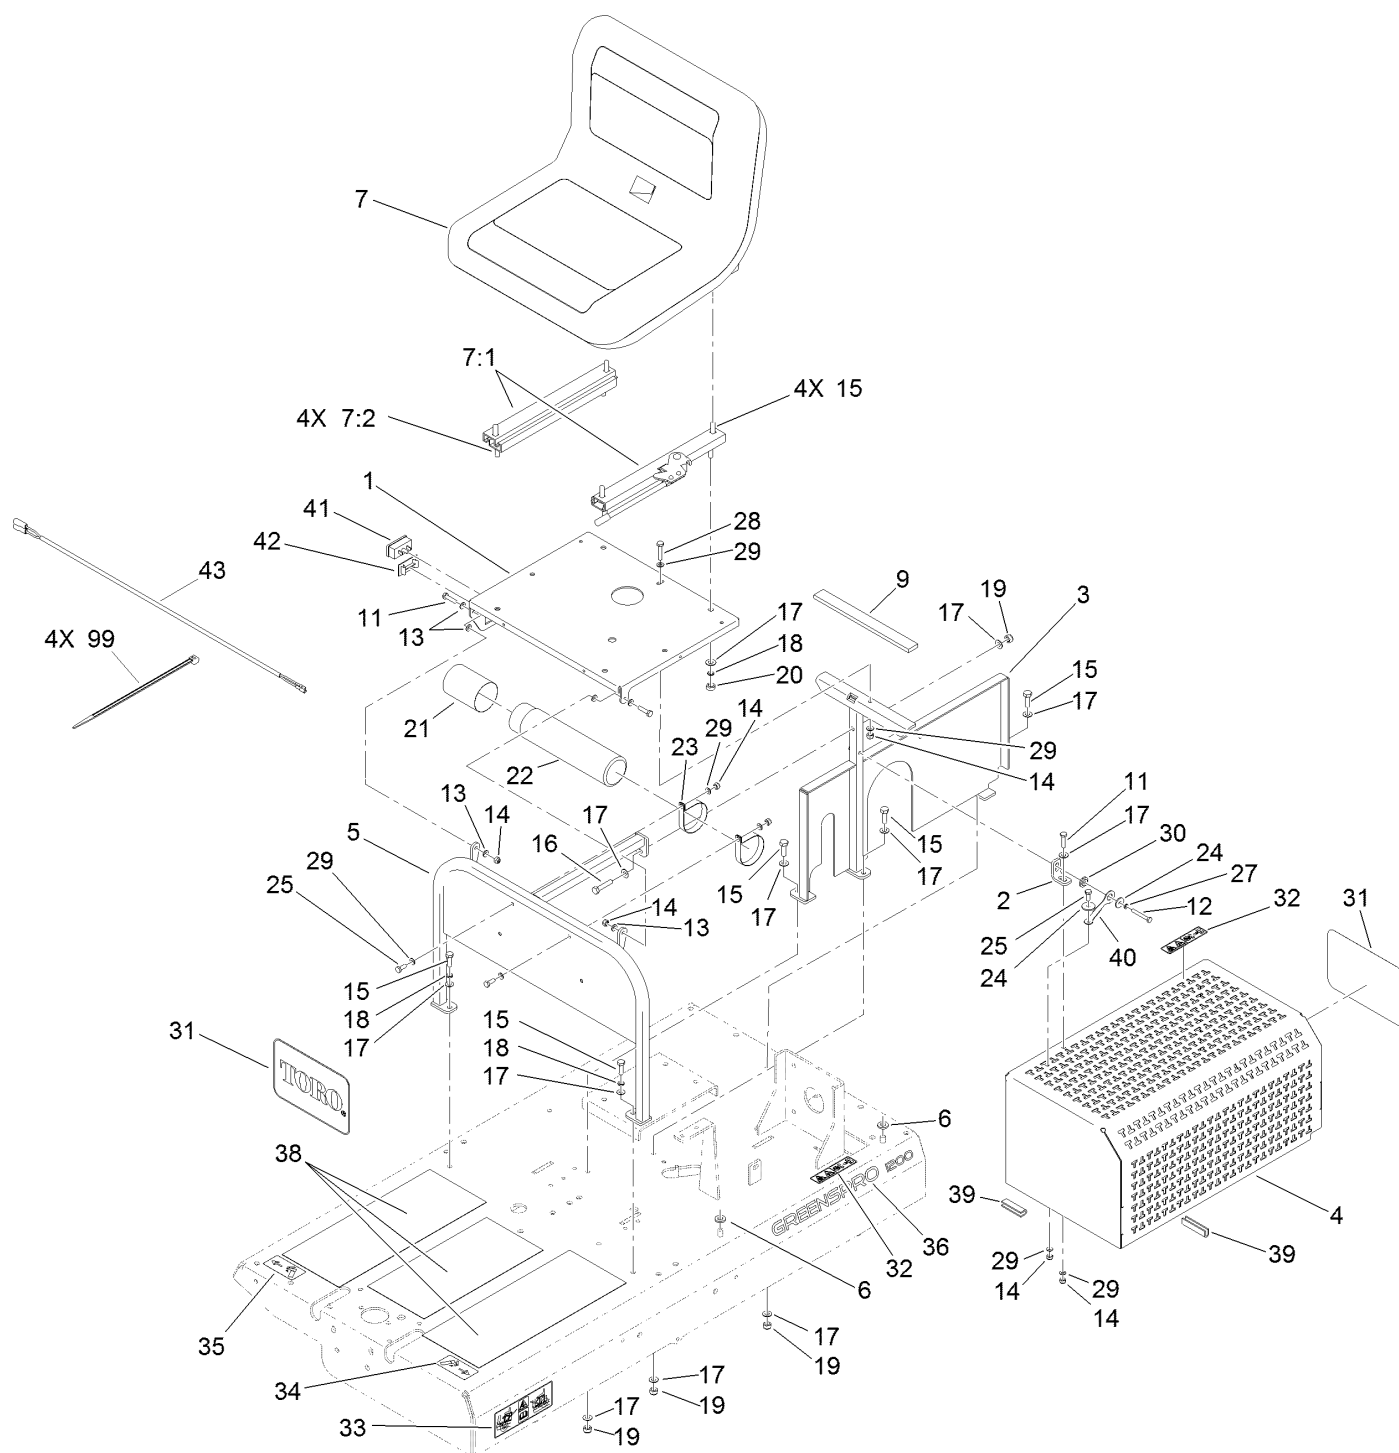

Seat Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	111-6642-01	1	Seat Pan	22	104-7050	1	Tube-Manual
2	111-5716	1	Bracket	23	107-1865	2	R-Clamp
3	111-5735-01	1	Rear Support Frame ASM	24	09263	2	Washer
4	111-6527-01	1	Cover-Transmission	25	09362	3	Screw-HH
5	111-5738-01	1	Seat Support ASM	27	09474	1	Washer-Spring
6	111-5739	2	Washer-Rubber	28	09547	1	Screw-HH
7	111-5742	1	Seat ASM	29	ZWP1F000U	8	Washer-Plain
7:1	111-5743	1	Rails-Seat	30	111-5849	1	Nut-Retainer
7:2	03162	4	Screw-HH	31	111-3728	2	Decal
9	50-07-019	1	Strip-Sealing	32	111-5646	2	Decal-Warning
11	ZBH1F025U	3	Bolt-HH	33	111-5647	1	Decal-Operation, Lift
12	ZDH1F045U	1	Setscrew	34	111-5649	1	Decal-Control, Pedal (Left)
13	09472	6	Washer-Plain	35	111-5650	1	Decal-Control, Pedal (Right)
14	09438	7	Nut-Nyloc	36	111-5651	1	Decal
15	03162	9	Screw-HH	38	70-07-067	4	Tape-Slip, Anti
16	09681	1	Bolt	39	50-08-001	1	Edging-Rubber
17	09475	15	Washer	40	117-8339	1	Lanyard-3 Inch
18	03469	6	Washer-Spring	41	111-3362	1	Meter-Hour
19	09441	4	Nut-Hex, NI	42	111-2337	1	Blank-Switch
20	ZNH1H000U	4	Nut-Hex	43	111-6648	1	Cable-Meter, Hour
21	104-7048	1	Cap-Housing	99	HY3966	4	Tie-Cable

 
Transmission Control Assembly

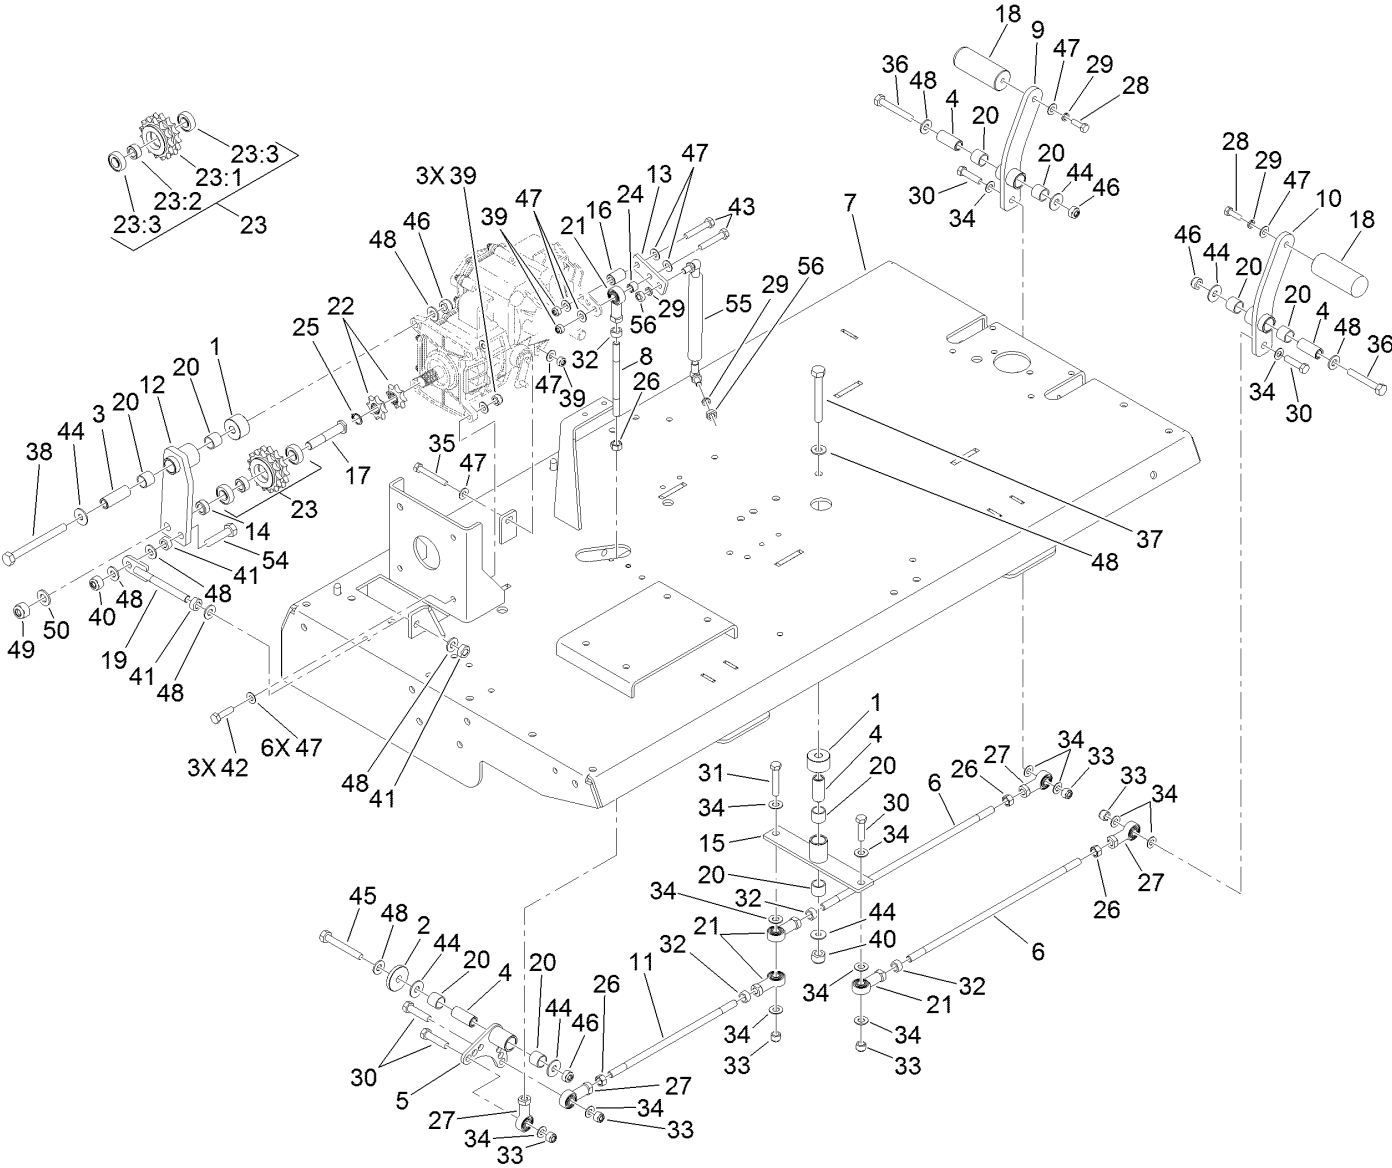

Transmission Control Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	111-5672	2	Spacer	25	111-6009	1	Circlip-EXT
2	111-5674	1	Collar-Fixing	26	111-5855	4	Nut-Hex, LH
3	111-5675	1	Bushing-Pivot	27	111-5959	4	Joint-Ball
4	111-5676	4	Bushing-Pivot	28	03162	2	Screw-HH
5	111-5677	1	Lever Quadrant ASM	29	03469	4	Washer-Spring
6	111-5682	2	Rod-Linkage	30	09118	5	Bolt-HH
7	111-5687-01	1	Chassis-Roller	31	09121	1	Bolt
8	111-5690	1	Arm-Linkage	32	09213	4	Nut
9	111-5693	1	Left Hand Motion Pedal ASM	33	09216	6	Nut-Hex, NI
10	111-5694	1	Right Hand Motion Pedal ASM	34	09271	14	Washer-Plain
11	111-5697	1	Rod-Linkage, Long	35	09371	1	Bolt
12	111-5709	1	Idler Arm ASM	36	09399	2	Bolt
13	111-5711	1	Plate-Damper	37	09404	1	Bolt
14	111-5712	1	Bushing-Idler, Gear	38	09405	1	Bolt
15	111-5721	1	Pedal Rod Pivot ASM	39	09441	6	Nut-Hex, NI
16	111-5722	1	Spacer-Damper	40	09447	2	Nut
17	111-5723	1	Bolt-Sprocket, Idler	41	09449	3	Nut
18	111-5727	2	Pedal	42	09369	3	Screw-HH
19	111-5736	1	Tensioning Rod ASM	43	09654	2	Bolt
20	111-5746	10	Bushing-Oilite	44	HY03355	6	Washer-Plated
21	111-5748	4	Joint-Ball	45	ZBH1J075U	1	Bolt-HH
22	111-5760	2	Sprocket-8 Tooth	46	ZNN1J000U	4	Nut-Hex, NI
23	111-5768	1	Idler Sprocket ASM	47	09475	14	Washer
23:1	111-6116	1	Sprocket-Idler, 15T	48	ZWQ1J000U	9	Washer-Plain
23:2	111-6115	1	Spacer-Sprocket, Idler	49	ZNN1L000U	1	Nut-Nyloc
23:3	411027	2	Bearing	50	HY09485	2	Washer-Plain
24	111-5792	1	Bushing	54	ZDH1J045U	1	Screw-HH
				55	111-5770	1	Damper
				56	ZNH1H000U	2	Nut-Hex

 
Cylinder Head Assembly

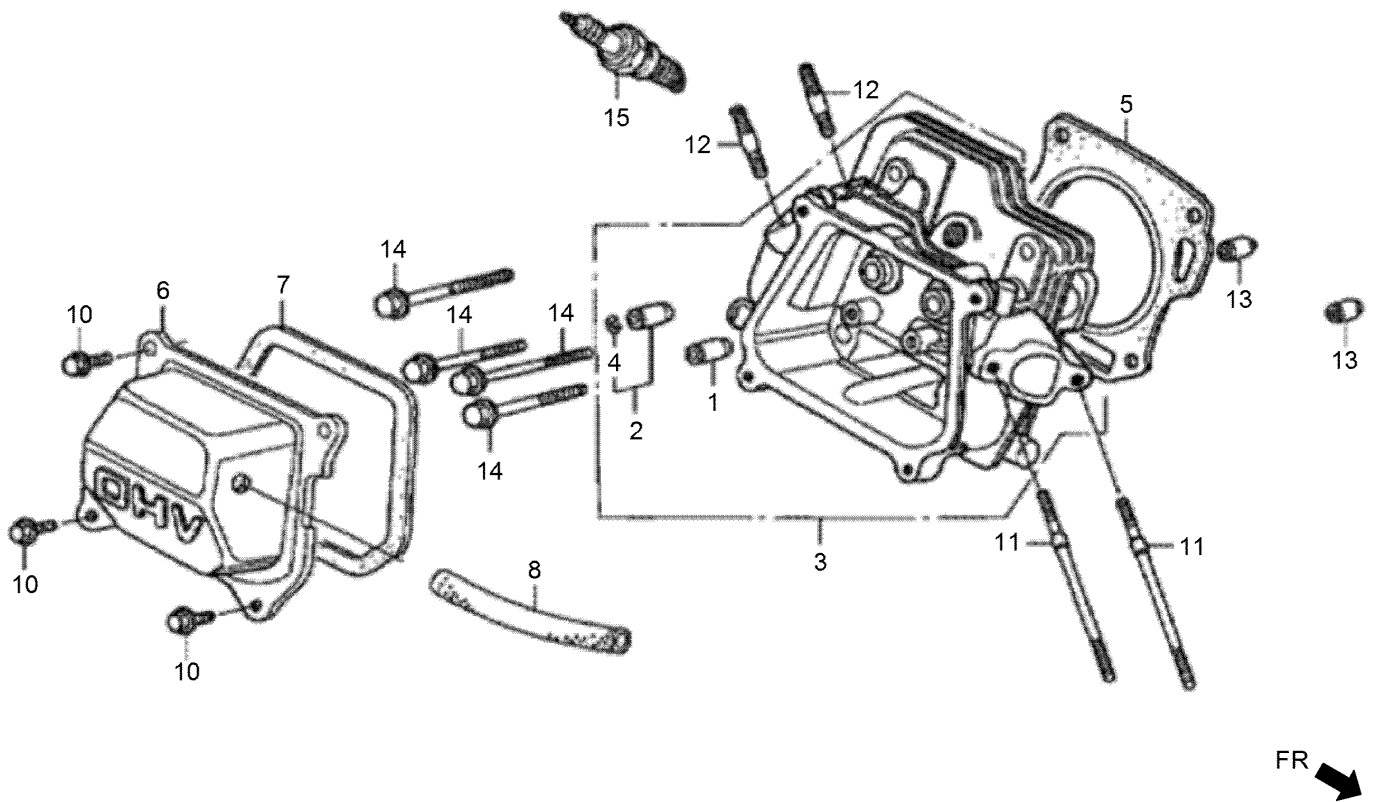

Cylinder Head Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-0118	1	Guide-Intake Valve	8	132-0234	1	Tube-Breather
2	132-0119	1	Guide-Exhaust Valve	10	132-4880	4	Bolt-Flange-6X12
3	132-0124	1	Cylinder Head ASM	11	132-0612	2	Bolt-Stud-6X112
4	132-0125	1	Clip-Valve Guide	12	132-0615	2	Bolt-Stud-8X32
5	132-0126	1	Gasket-Cylinder Head	13	132-0697	2	Dowel Pin-10X16
6	132-0127	1	Head Cover ASM	14	131-8226	4	Bolt-Flange-8X60
7	132-0133	1	Packing-Head Cover	15	131-8233	1	Sparkplug

 
Cylinder Barrel Assembly

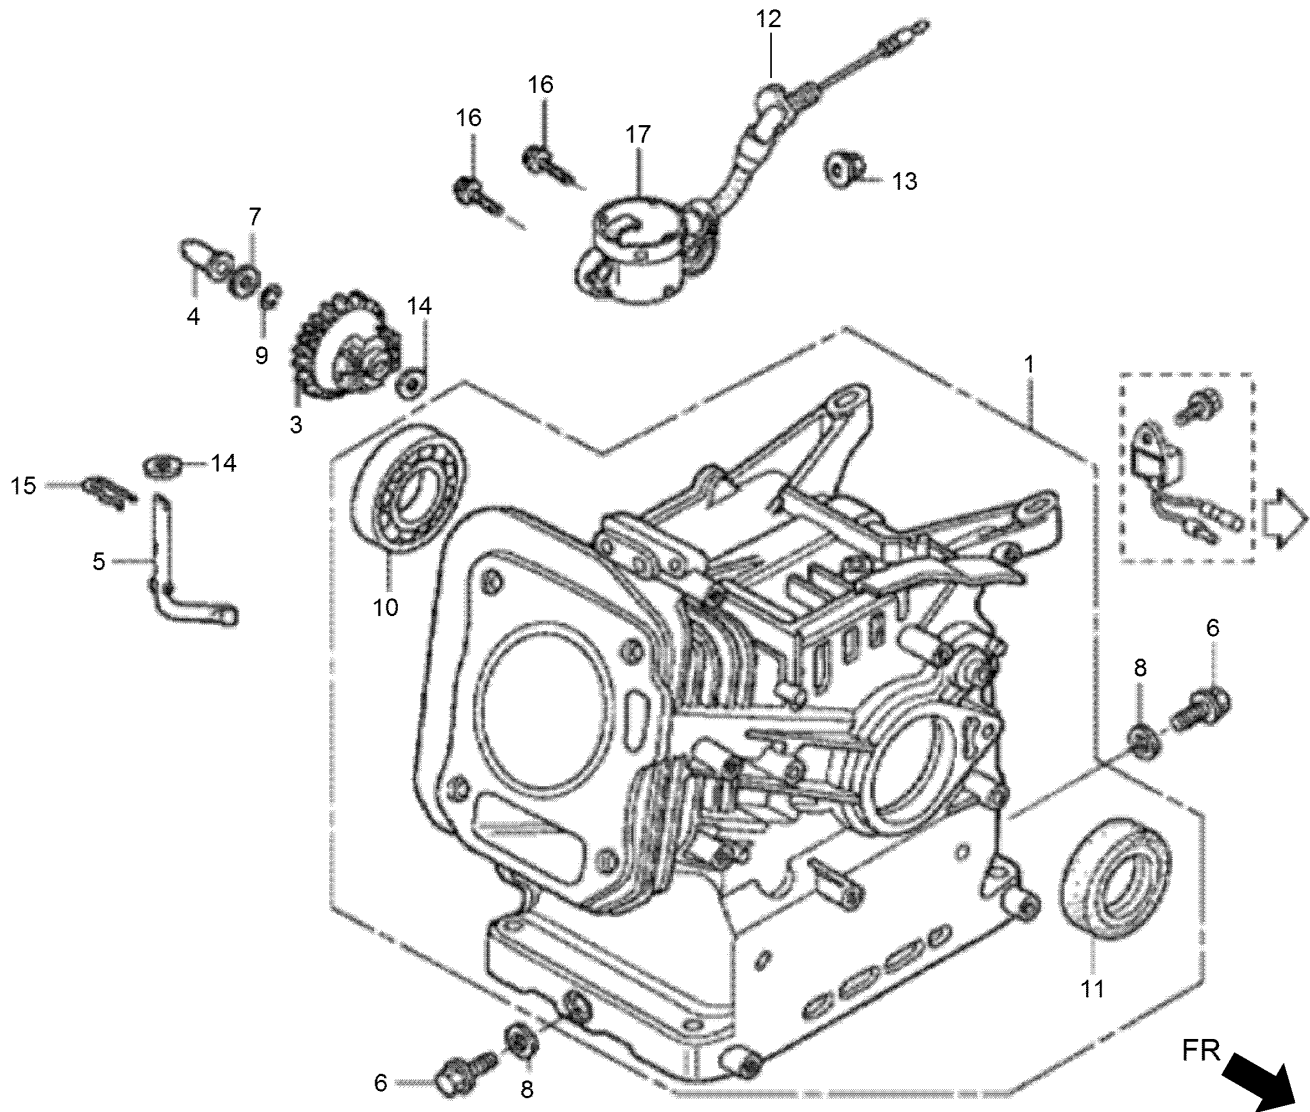

Cylinder Barrel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-0113	1	Barrel ASM-Cylinder	10	132-0650	1	Bearing-Radial Ball
3	132-0294	1	Governor ASM	10	132-0649	1	Bearing-Radial Ball
4	132-0304	1	Slider-Governor	11	132-0654	1	Oil Seal-25X41X6
5	132-0307	1	Shaft-Governor Arm	12	132-0668	1	O-Ring-14Mm
6	132-0622	2	Bolt-Drain Plug	13	132-0686	1	Nut-Flange-10Mm
7	132-0635	1	Washer-Thrust-6Mm	14	132-0688	2	Washer-Plain-6Mm
8	132-0640	2	Washer-Drain Plug-10.2Mm	15	132-0693	1	Pin-Lock-8Mm
9	132-0642	1	Clip-Governor Holder	16	131-8221	2	Bolt-Flange-6X12
10	132-0651	1	Bearing-Radial Ball	17	132-0532	1	Switch ASM-Oil Level

 
Crankcase Cover Assembly

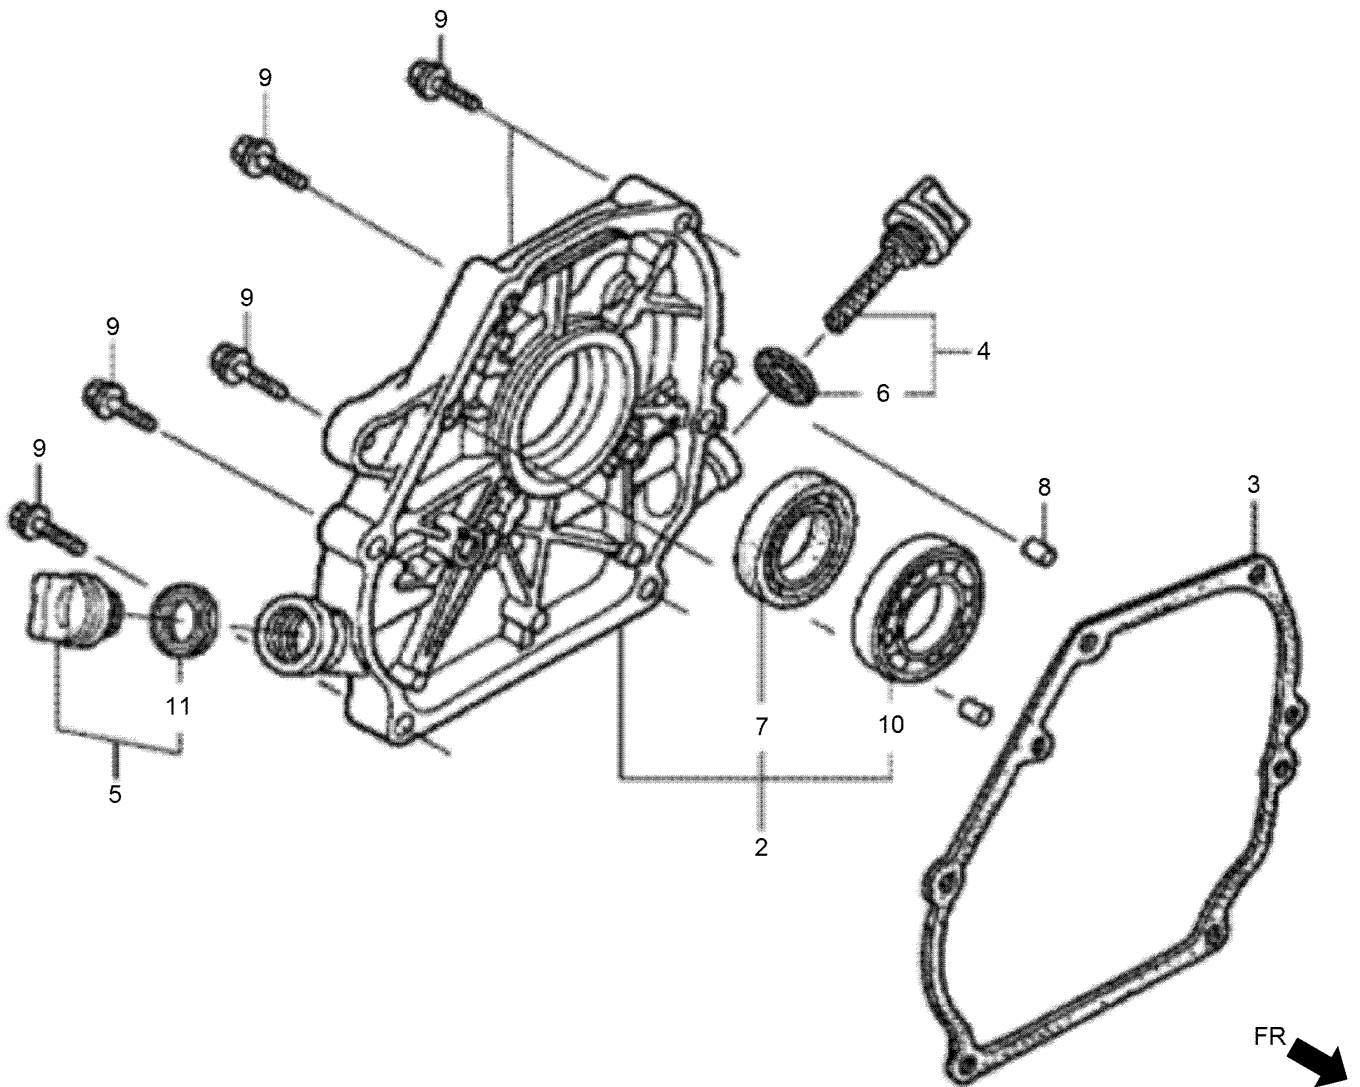

Crankcase Cover Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	132-0103	1	Cover ASM-Crankcase	7	132-0659	1	Oil Seal-25X41.25X6
3	132-0108	1	Packing-Case Cover	8	132-0695	2	Dowel Pin-8X14
4	132-0220	1	Cap ASM-Oil Filler	9	131-8225	6	Bolt-Flange-8X32
5	132-0221	1	Cap ASM-Oil Filler	10	131-8227	1	Bearing-Radial Ball-6205
6	132-0224	1	Packing-Oil Filler Cap	11	132-0224	1	Packing-Oil Filler Cap
7	132-0654	1	Oil Seal-25X41X6				

 Crankshaft Assembly

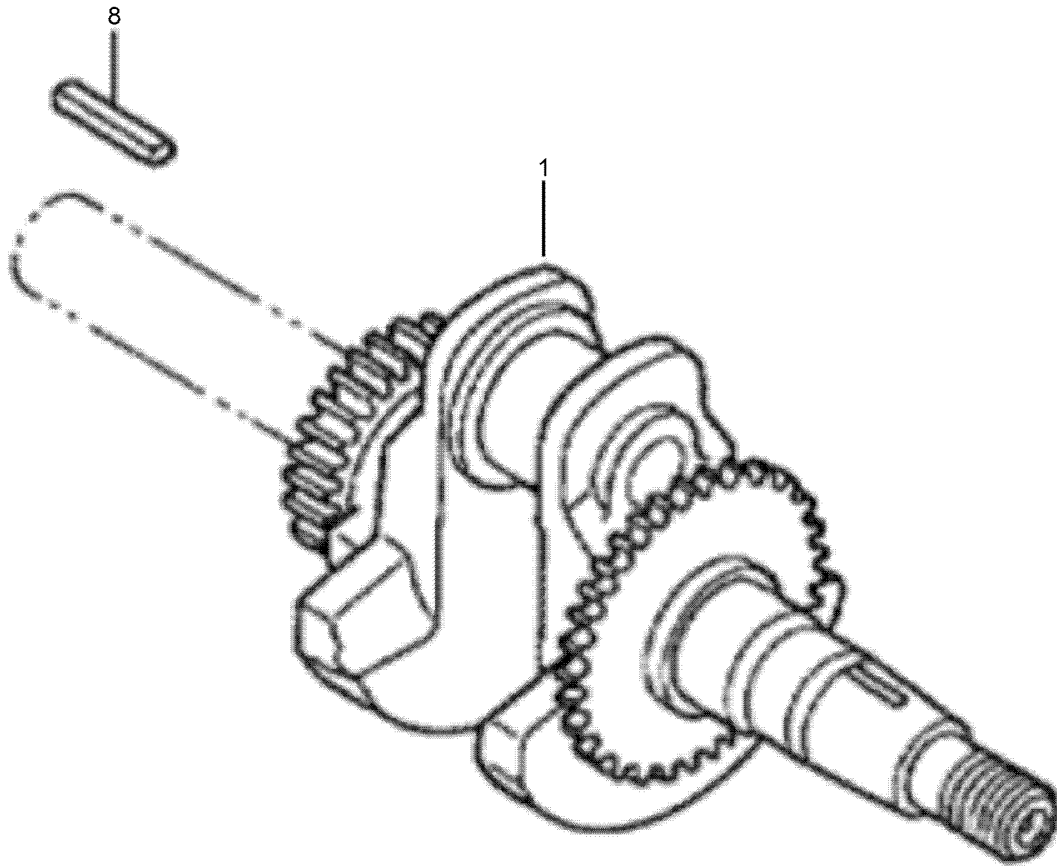


FR 

Crankshaft Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-0164	1	Crankshaft ASM
8	132-0647	1	Key-5X5X33

 Piston and Connecting Rod Assembly

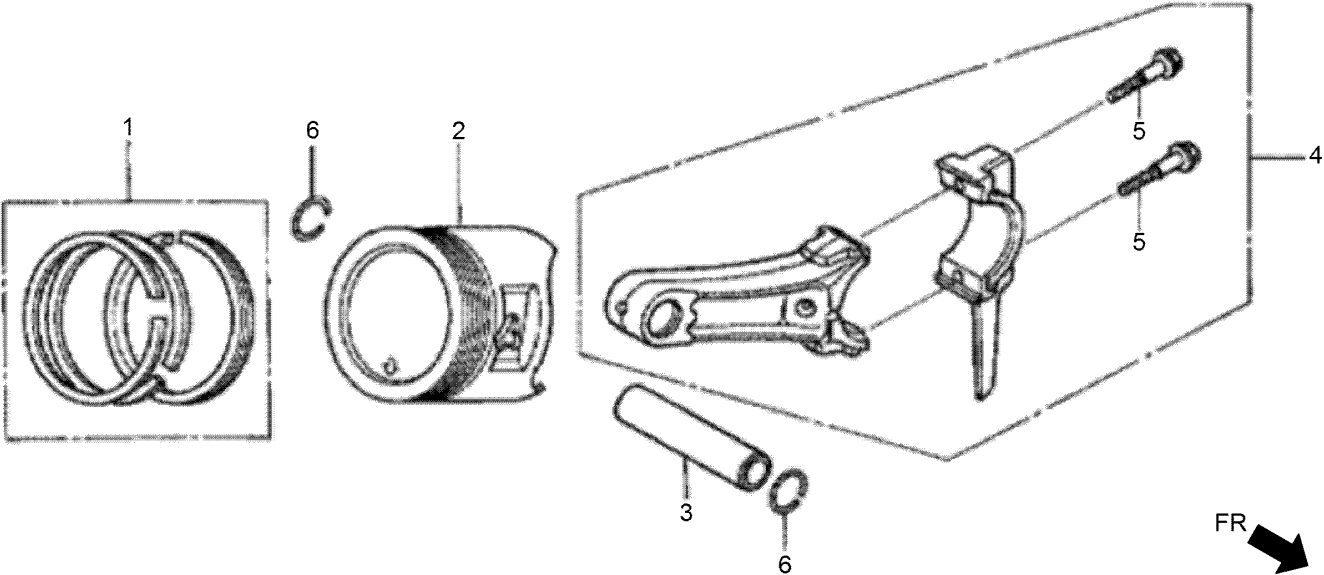


Piston and Connecting Rod Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-0137	1	Ring Set-Piston (STD)
1	132-0138	1	Ring Set-Piston (STD)
2	132-0144	1	Piston
3	132-0150	1	Pin-Piston

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	132-0155	1	Rod ASM-Connecting
5	132-0573	2	Bolt-Connecting Rod
6	132-0637	2	Clip-Piston Pin-18Mm

 
Camshaft Assembly

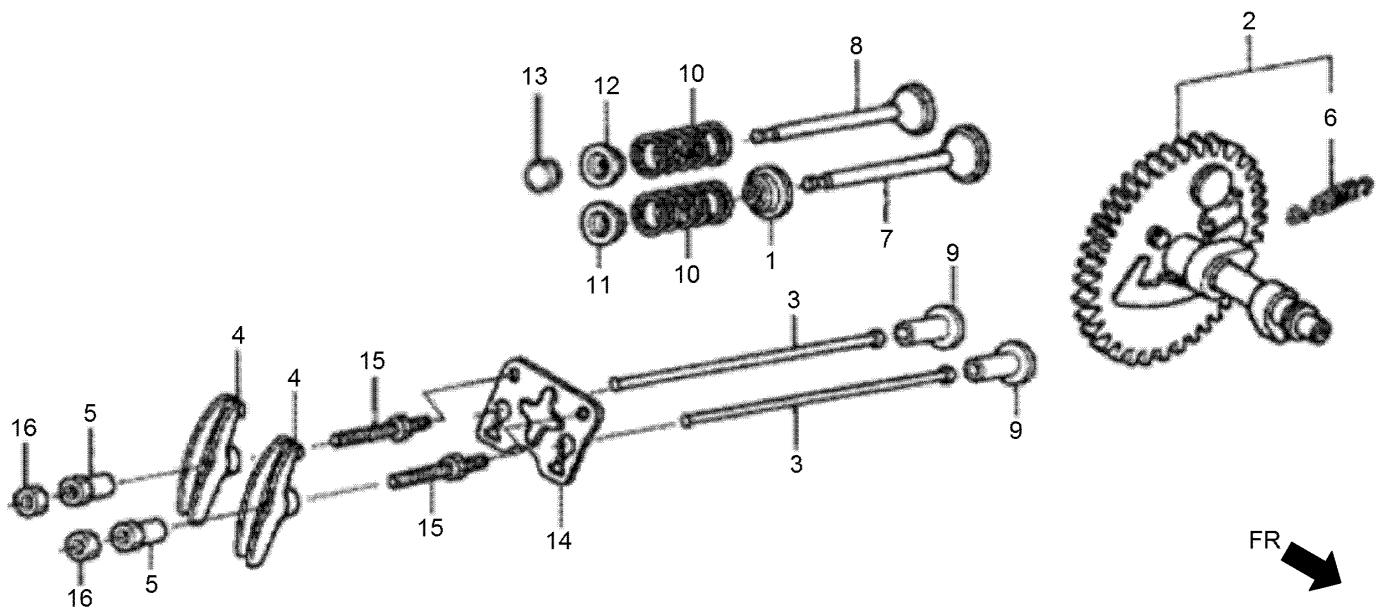

Camshaft Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-0120	1	Seal-Valve Stem	10	132-0206	2	Spring-Valve
2	132-0172	1	Camshaft ASM	11	132-0211	1	Retainer-Intake Valve Spring
3	132-0181	2	Rod-Push	12	132-0213	1	Retainer-Exhaust Valve Spring
4	132-0184	2	Arm-Valve Rocker	13	132-0214	1	Rotator-Valve
5	132-0188	2	Pivot-Rocker Arm	14	132-0215	1	Plate-Push Rod Guide
6	132-0191	1	Spring-Weight Return	15	132-0592	2	Bolt-Pivot-8Mm
7	132-0195	1	Valve-Intake	16	132-0629	2	Nut-Pivot Adjusting
8	132-0200	1	Valve-Exhaust				
9	132-0203	2	Lifter-Valve				

 
Recoil Starter Assembly

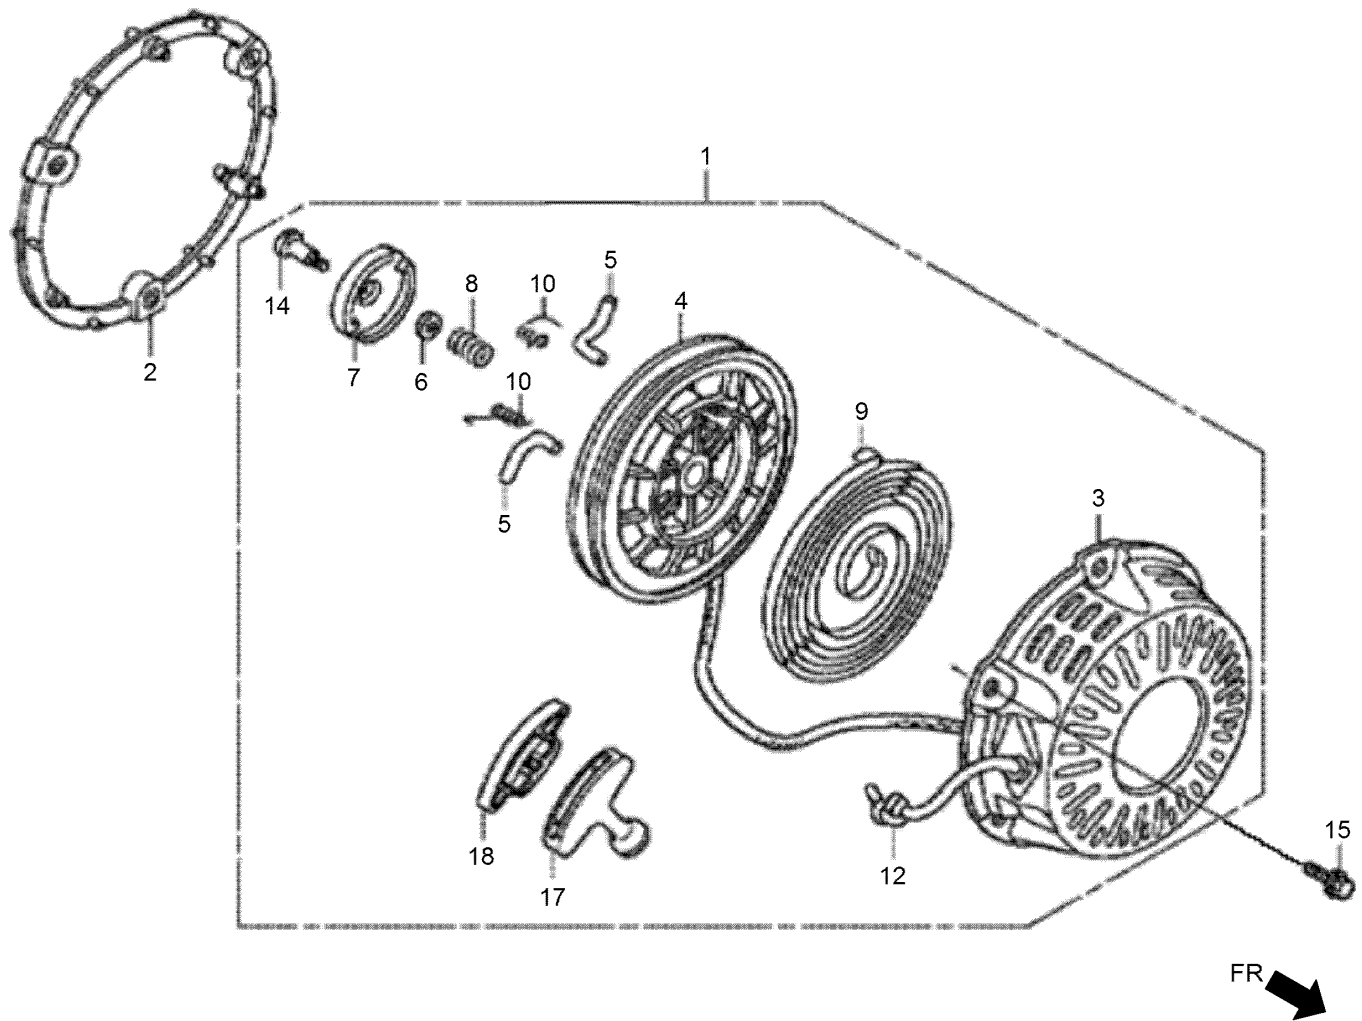

Recoil Starter Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-0477	1	Starter ASM-Recoil	5	132-0491	2	Ratchet-Starter
1	132-0478	1	Starter ASM-Recoil	6	132-0492	1	Plate-Friction
2	132-0484	1	Spacer-Recoil Starter Mtg (Nh1)	7	132-0493	1	Guide-Ratchet
2	132-0485	1	Spacer-Recoil Starter Mtg (R280R)	8	132-0494	1	Spring-Friction
3	132-0486	1	Recoil Starter Case ASM (R280)	9	132-0495	1	Spring-Recoil Starter
3	132-0487	1	Recoil Starter Case ASM (Nh1)	10	132-0497	2	Spring-Return
4	132-0489	1	Reel-Recoil Starter	12	132-0507	1	Rope-Recoil Starter
				14	132-0579	1	Screw-Setting
				15	131-8223	3	Bolt-Flange-6X18
				17	132-0502	1	Knob-Recoil Starter
				18	132-0509	1	Knob-Reinforcement

 
Fan Cover Assembly

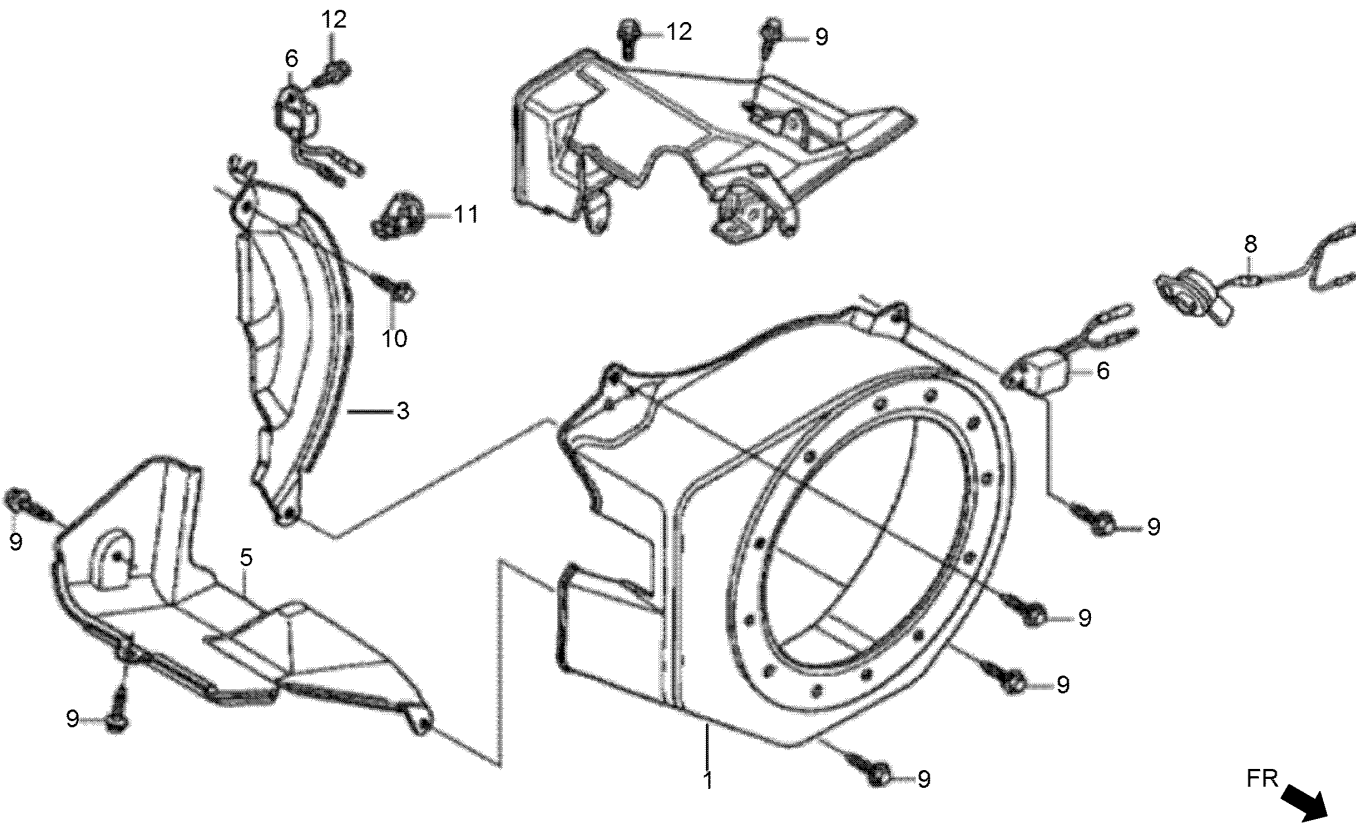

Fan Cover Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-0465	1	Fan Cover ASM (Nh1)	8	132-0530	1	Switch ASM-Engine Stop
1	132-0464	1	Fan Cover ASM (R280)	9	132-4880	6	Bolt-Flange-6X12
3	132-0469	1	Side Plate ASM	10	132-0605	1	Bolt-Flange-6X20
5	132-0473	1	Shroud ASM	11	132-0641	1	Clip-Harness
6	132-0528	1	Alert Unit-Oil	12	131-8220	1	Bolt-Flange-6X8

 
Carburetor Assembly

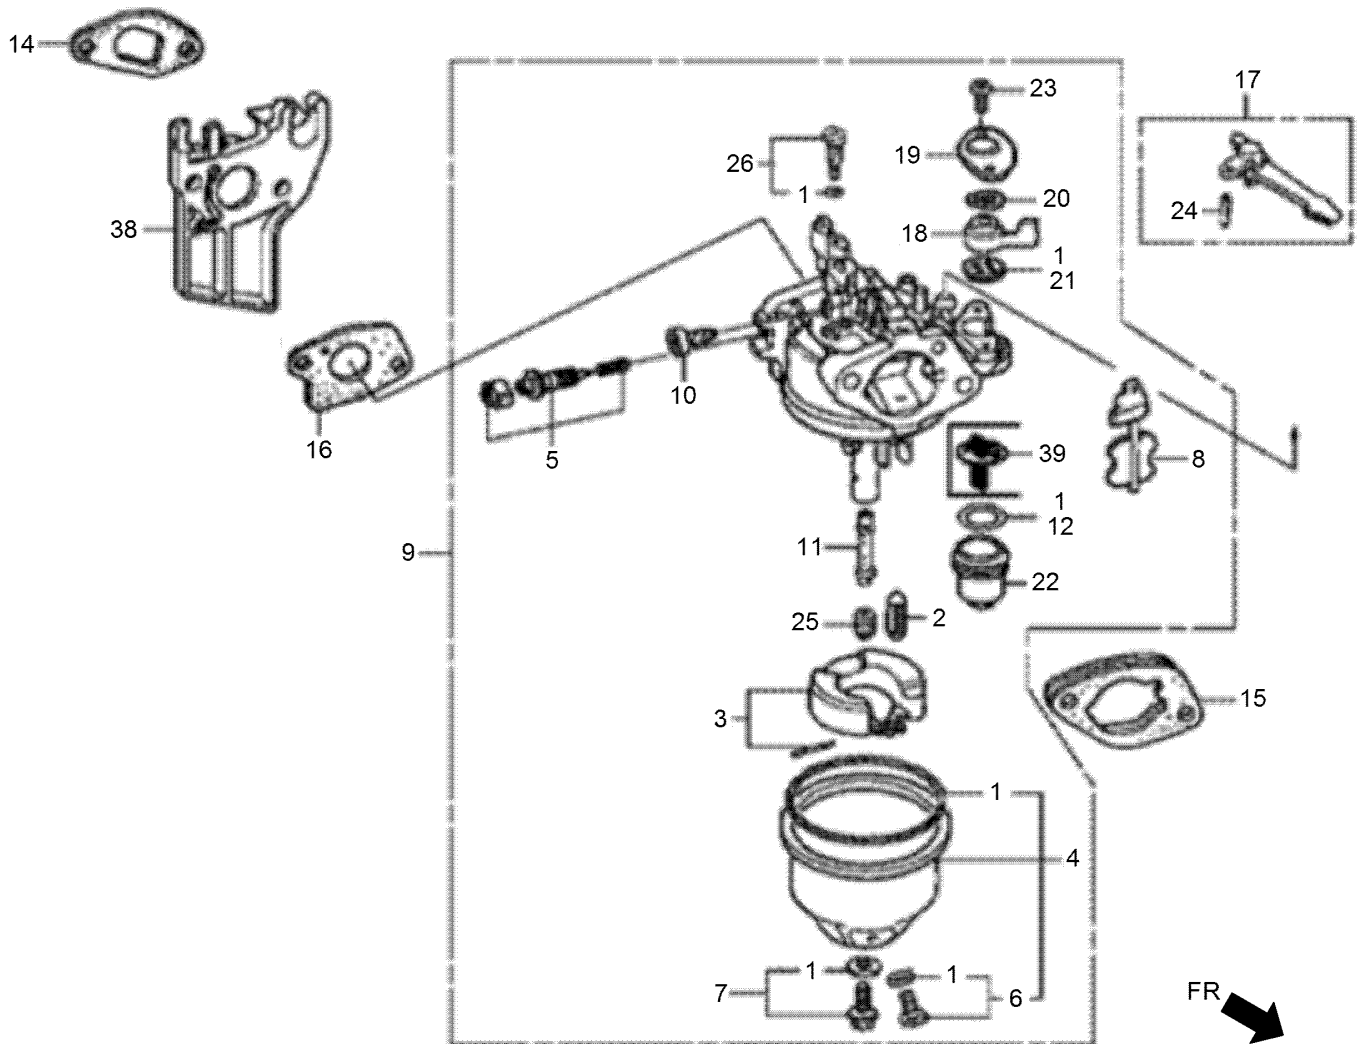

Carburetor Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-0239	1	Gasket Set	16	132-0287	1	Packing-Carburetor
2	132-0241	1	Valve Set-Float	17	132-0343	1	Choke Lever ASM
3	132-0242	1	Float Set	18	132-0359	1	Lever-Cock
4	132-0247	1	Chamber Set-Float	19	132-0360	1	Plate-Lever Setting
5	132-0250	1	Screw Set-Pilot	20	132-0362	1	Spring-Cock Lever
6	132-0251	1	Screw Set-Drain	21	132-0364	1	Packing-Fuel Cock
7	132-0253	1	Screw Set	22	132-0366	1	Cup-Fuel Strainer
8	132-0257	1	Choke Set	23	132-0676	2	Screw-Pan-3X6
9	132-0265	1	Carburetor ASM	24	132-0698	1	Pin-Spring-2X12
10	132-0268	1	Screw-Throttle Stop	25	131-8237	1	Jet-Main, No. 75
11	132-0272	1	Nozzle-Main	26	131-8239	1	Jet Set-Pilot, No. 40
12	132-0276	1	Packing-Fuel Strainer Cup	38	132-0278	1	Insulator-Carburetor
14	132-0281	1	Packing-Insulator	39	132-0365	1	Filter-Cup
15	132-0284	1	Carburetor Spacer ASM				

 
Air Cleaner Assembly

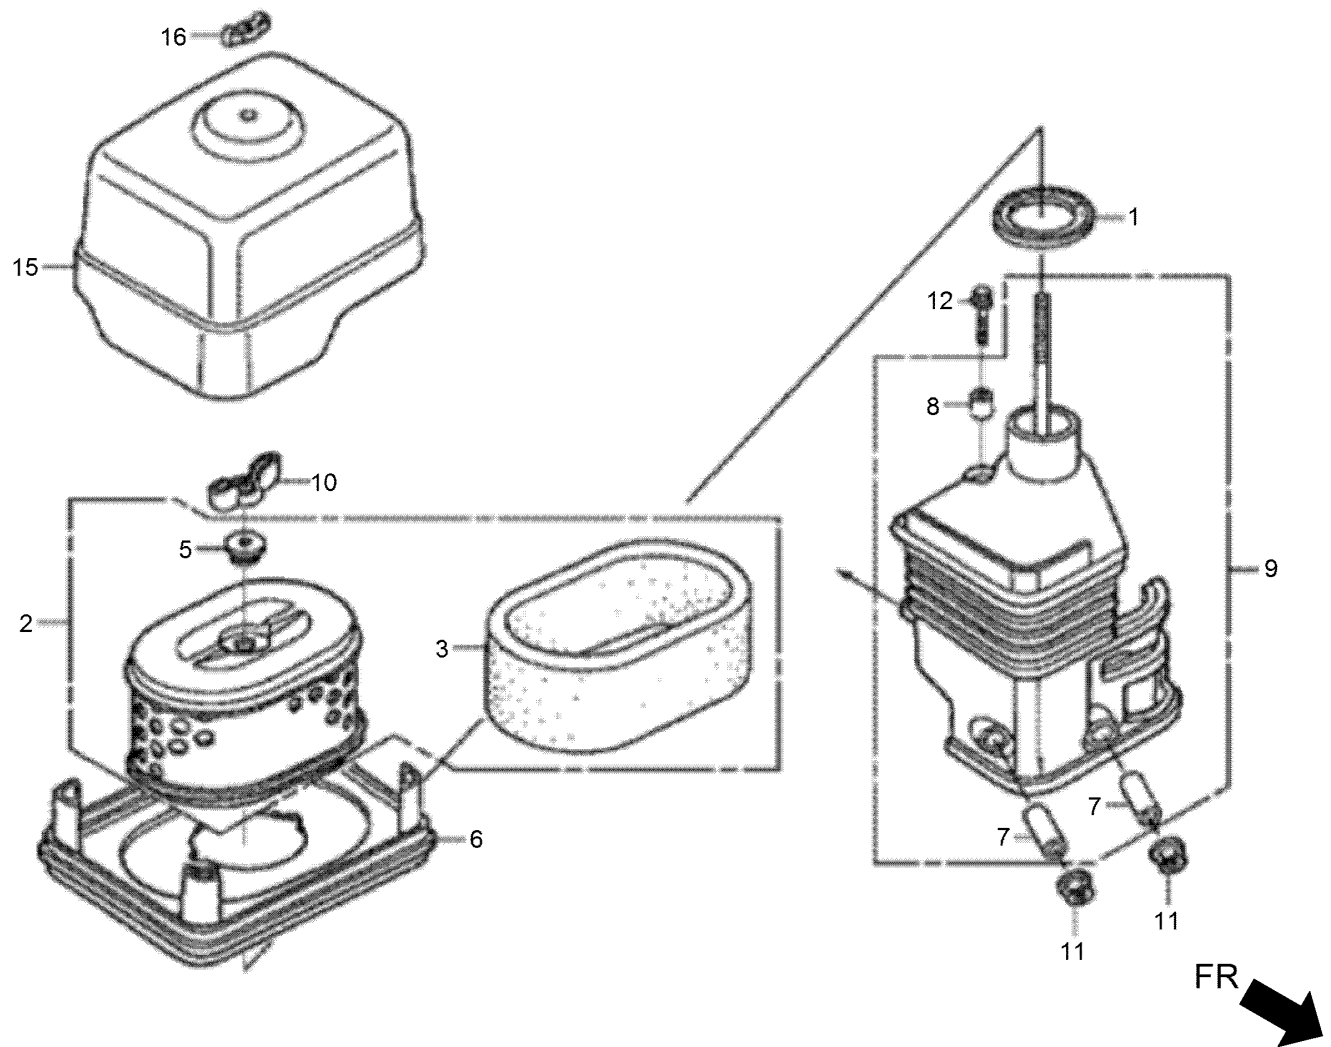

Air Cleaner Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-0291	1	Packing-Elbow	9	132-0395	1	Air Cleaner/Elbow ASM
2	132-0367	1	Element-Air Cleaner	10	132-0631	1	Nut-Tool Box Setting
3	132-0372	1	Filter-Outer	11	132-4881	2	Nut-Flange-6Mm
5	132-0391	1	Grommet-Air Cleaner	12	131-8224	1	Bolt-Flange-6X20
6	132-0392	1	Nose-Silencer	15	132-0387	1	Cover-Air Cleaner
7	132-0393	2	Collar-Air Cleaner	16	132-0630	1	Nut-Air Cleaner
8	132-0394	1	Collar B-Air Cleaner				

 
Muffler Assembly

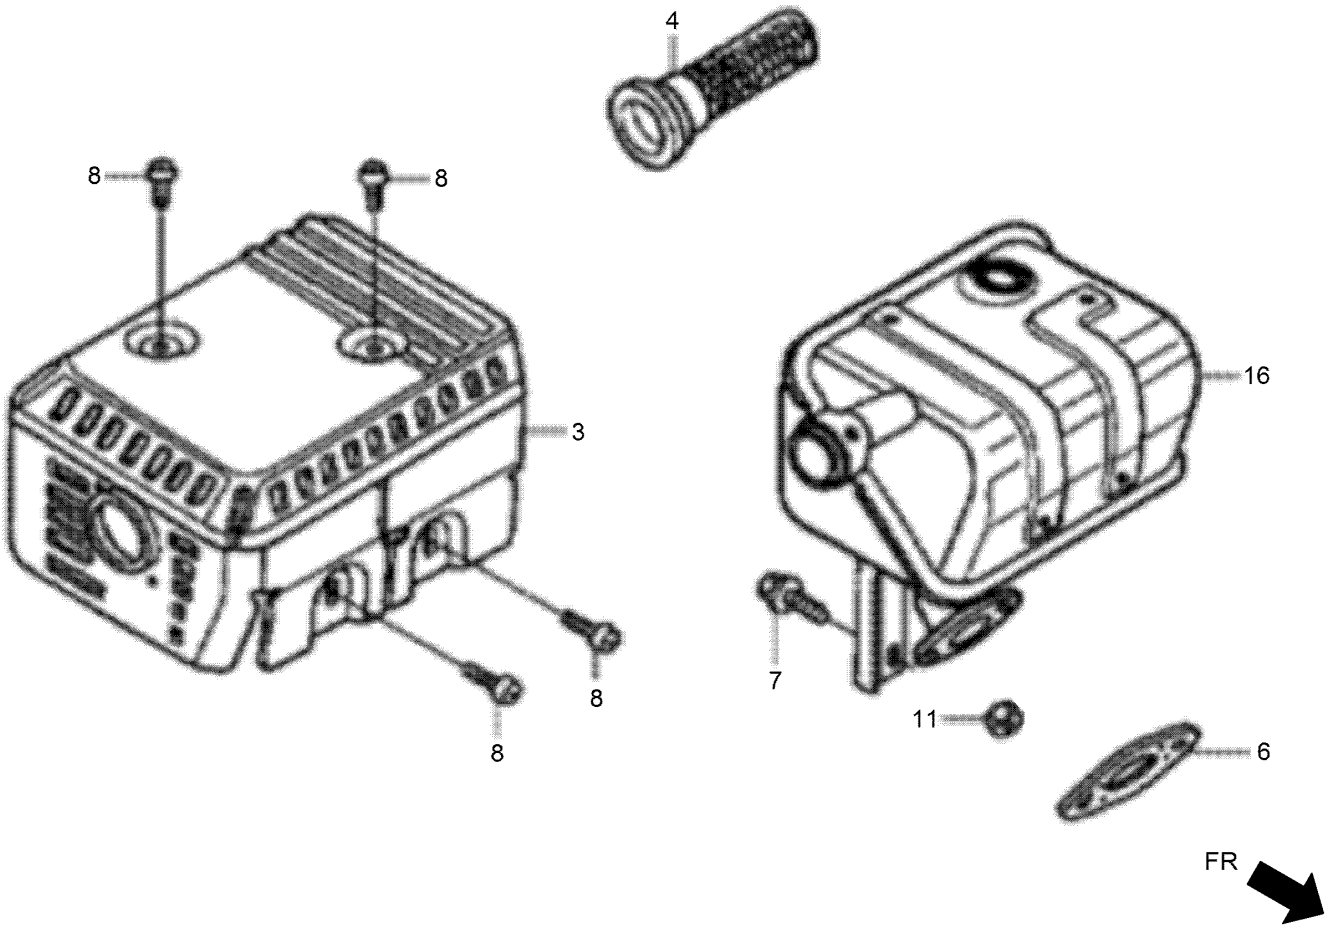

Muffler Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
3	132-0453	1	Muffler Protector ASM	8	132-0616	4	Screw-Tapping-5X8
4	132-0456	1	Arrester-Spark	11	132-0684	2	Nut-Hex-8Mm
6	132-0457	1	Gasket-Muffler	16	132-0445	1	Muffler ASM
7	132-0600	1	Bolt-Flange-6X13				

 
Fuel Tank Assembly

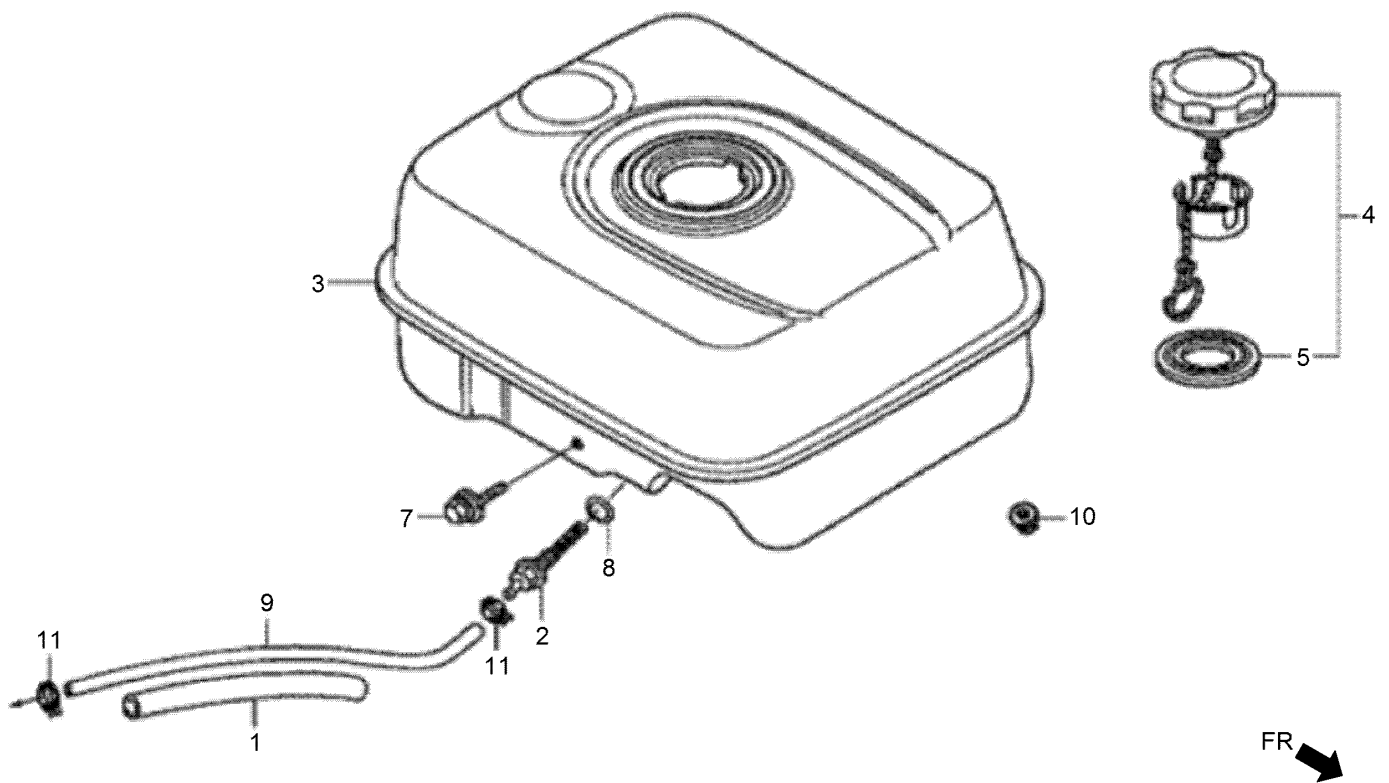

Fuel Tank Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-0349	1	Rubber-Supporter	5	132-0431	1	Packing-Fuel Filler Cap
2	132-0361	1	Joint-Fuel Tank	7	132-0583	1	Bolt-Flange-6X34
3	132-0397	1	Fuel Tank ASM (Nh31)	8	132-0668	1	O-Ring-14Mm
3	132-0398	1	Fuel Tank ASM (Nh1)	9	132-0669	1	Tube-Fuel-4.5X145
4	132-0412	1	Fuel Filler Cap ASM (Up To S/N 1035885)	10	132-4881	2	Nut-Flange-6Mm
4	132-0413	1	Fuel Filler Cap ASM (From S/N 1035886)	11	131-8211	2	Clamp-Tube

 
Flywheel Assembly

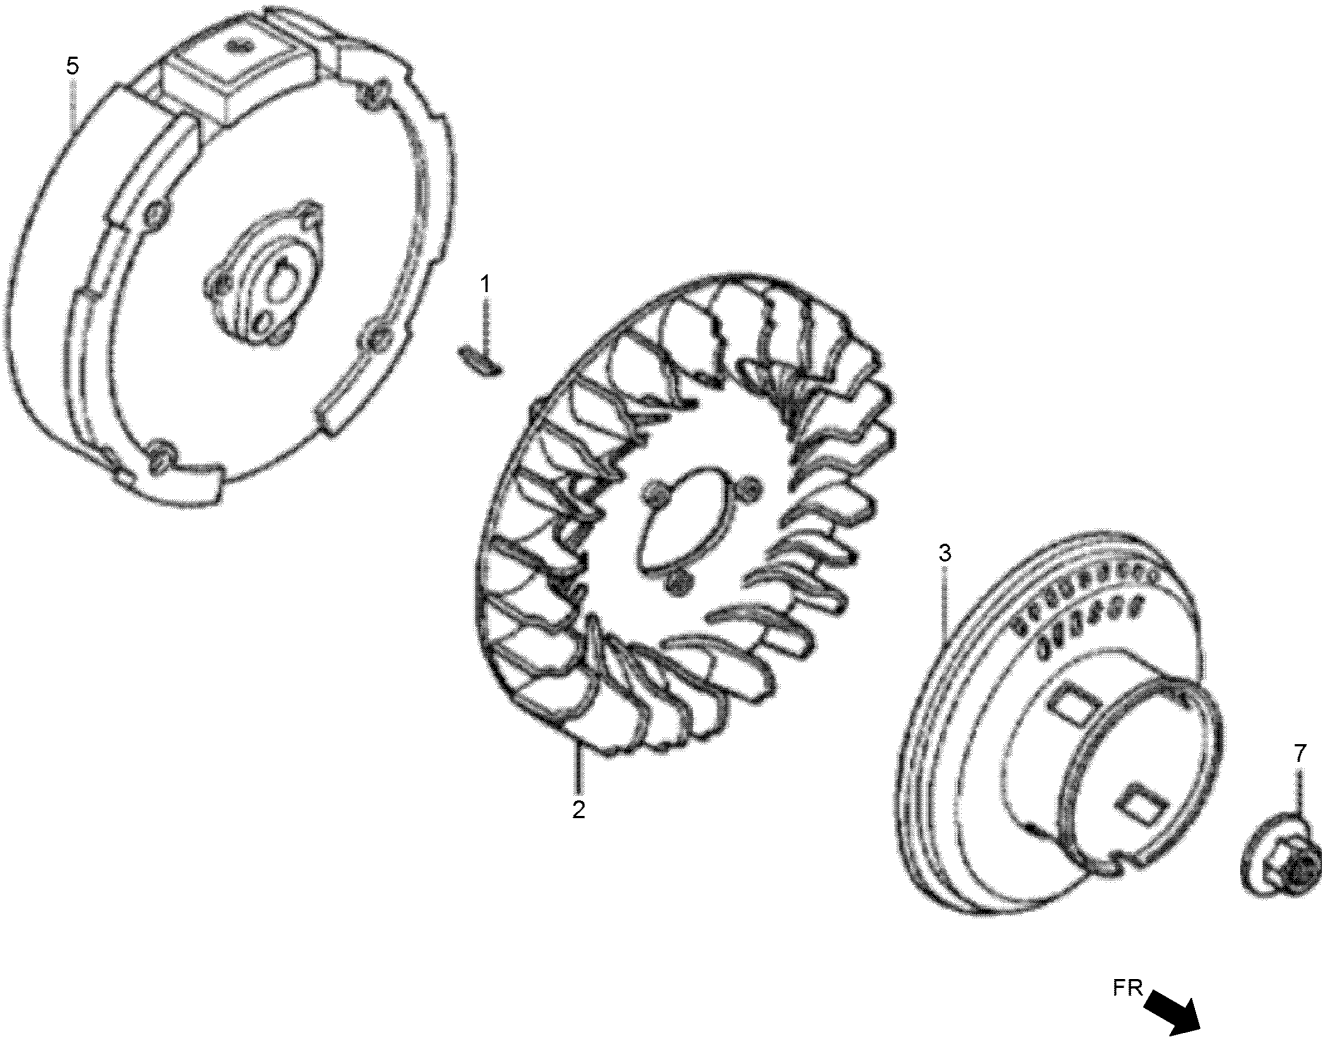

Flywheel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-0167	1	Key-Special Woodruff-25X18	3	132-0499	1	Starter Pulley ASM
2	132-0461	1	Fan-Cooling	5	132-0519	1	Flywheel ASM
				7	132-0625	1	Nut-Special-14Mm

 
Ignition Coil Assembly

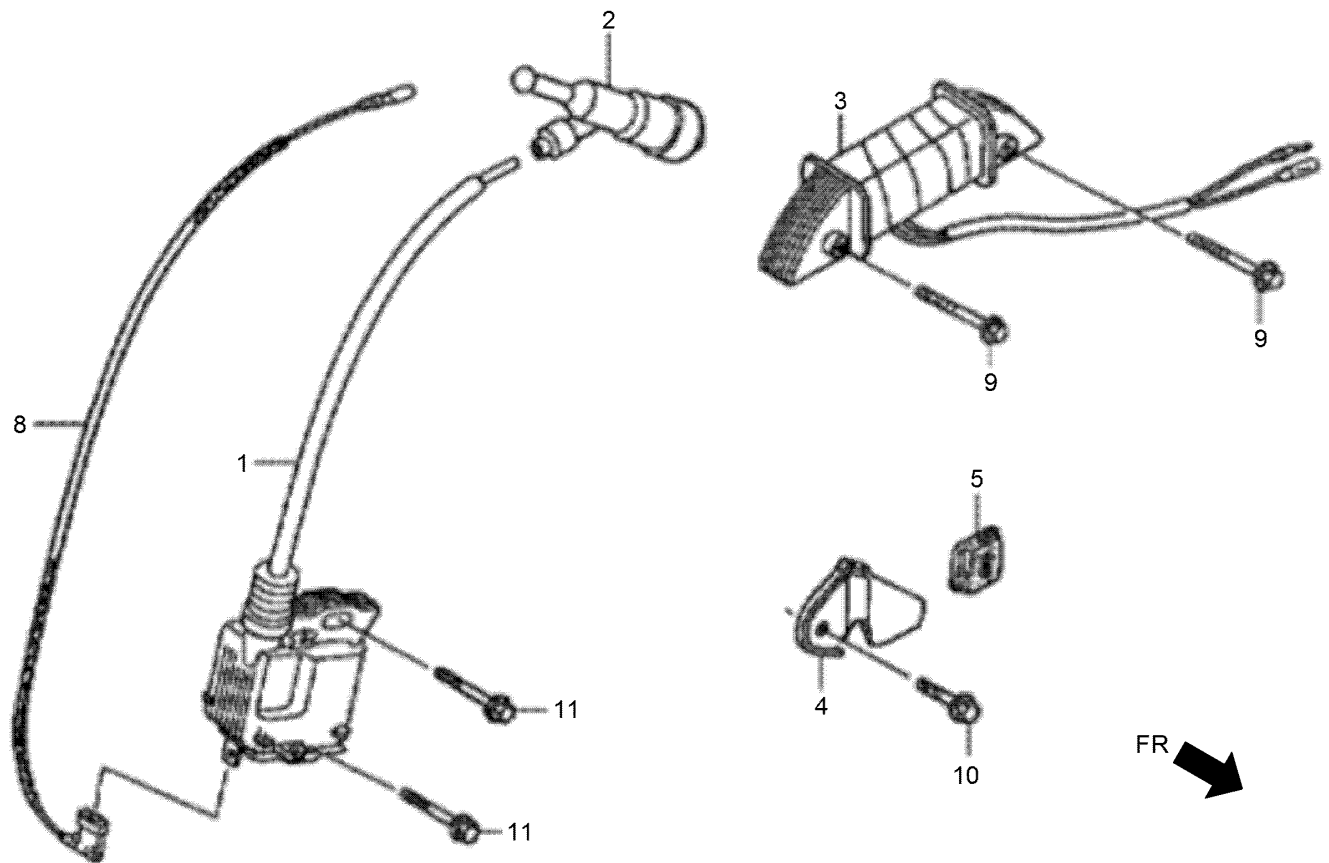

Ignition Coil Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-0510	1	Coil ASM-Ignition	8	132-0533	1	Cord-Stop Switch
2	132-0515	1	Cap ASM-Noise Suppressor	9	132-0596	2	Bolt-Flange-6X28
3	132-0521	1	Coil ASM-Lamp	10	132-0604	1	Bolt-Flange-5X10
4	132-0522	1	Clamper-Cord	11	132-0620	2	Bolt-Flange-6X25
5	132-0523	1	Grommet-Cord				

 
Control Assembly

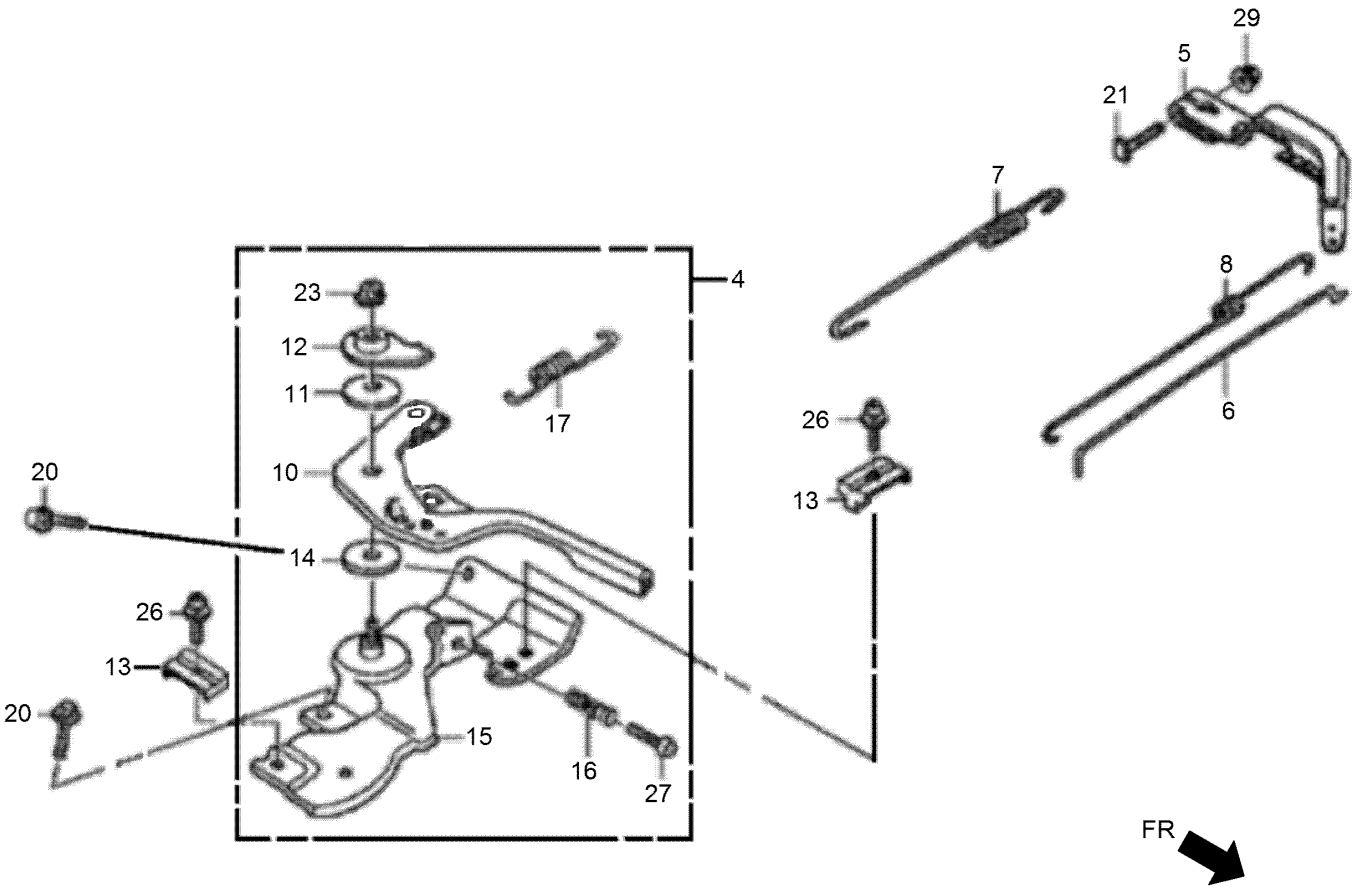

Control Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	132-0292	1	Control ASM	15	132-0337	1	Control Base ASM
5	132-0311	1	Arm-Governor	16	132-0340	1	Spring-Control Adjusting
6	132-0316	1	Rod-Governor	17	132-0341	1	Spring-Cable Return
7	132-0320	1	Spring-Governor	20	132-4880	2	Bolt-Flange-6X12
8	132-0324	1	Spring-Throttle Return	21	132-0598	1	Bolt-Governor Arm
10	132-0328	1	Lever-Control	23	132-0619	1	Nut-Self-Lock-6Mm
11	132-0329	1	Spring-Lever	26	132-0678	1	Screw-Pan-5X16
12	132-0330	1	Washer-Control Lever	27	132-0679	1	Screw-Pan-5X25
13	132-0331	1	Holder-Cable	29	132-4881	1	Nut-Flange-6Mm
14	132-0332	1	Spacer-Control Lever				

 Label Assembly

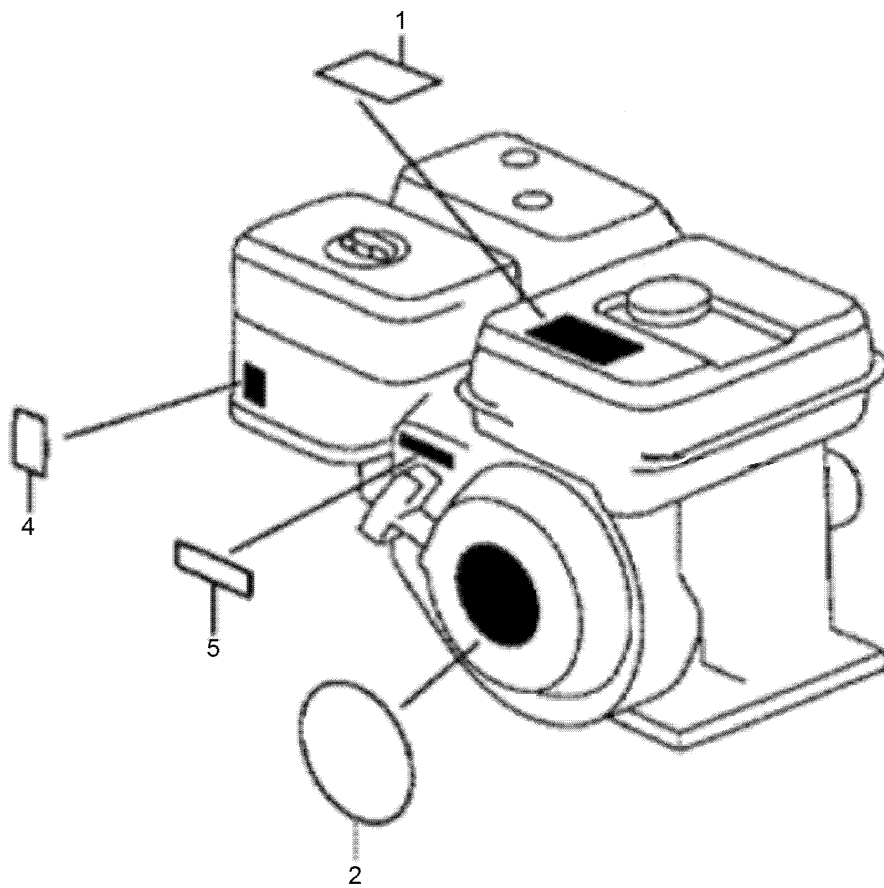


Label Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-0559	1	Mark-Operator Caution
2	132-0561	1	Emblem

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	132-0566	1	Mark-Choke
5	132-0567	1	Mark-Throttle Indication


 
Wrench

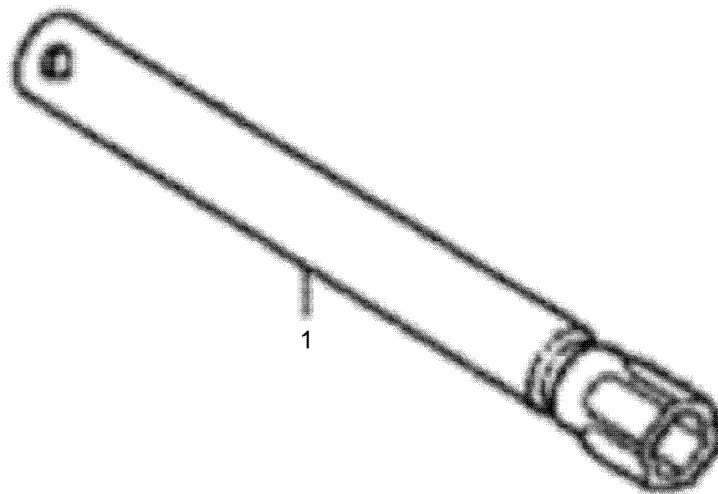

Wrench (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-0572	1	Wrench-Spark Plug

  
Decal Assembly

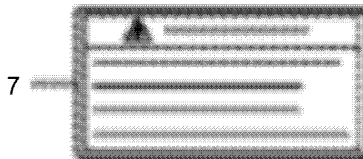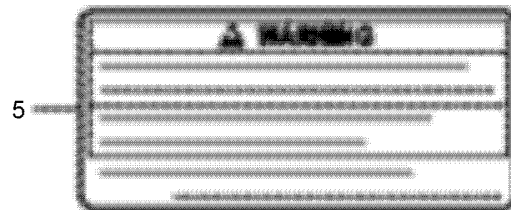

Decal Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	132-0552	1	Mark-Operator Caution (English)	7	132-0570	1	Mark-Exhaust Caution (English)
5	132-0553	1	Mark-Operator Caution (French)	7	132-0571	1	Mark-Exhaust Caution (French)

 Gasket Kit

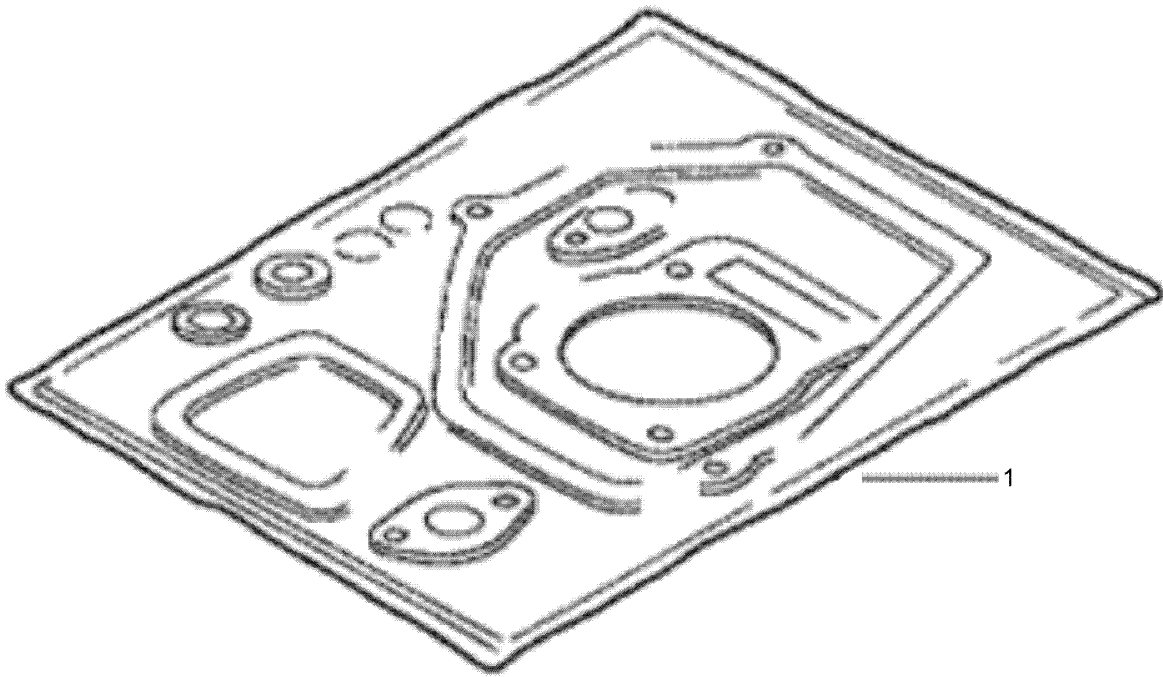

Gasket Kit (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-0100	1	Gasket Kit

Attachments and Accessories

For 44907 GreensPro 1200 Greens Roller

Product Name	Model/Part
Armrest Kit.....	44908
Light Kit.....	44909
Roller Scraper Kit.....	44911

Notes:



Count on it.