



Form No. 3389-803 Rev B

Count on it.

Parts Catalog

GreensPro™ 1240 Greens Roller

Model No. 44912—Serial No. 315000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HP: high pressure

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: low pressure

LPG: Liquefied Petroleum Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard


TAP: self tapping

TTH: torx truss head

Contents


Steering Roller Assembly	4
Complete Long Steering Roller Assembly No. 127-7958	6
Complete Short Steering Roller Assembly No. 127-7963	7
Hydraulic Tank and Hose Assembly	8
Drive Roller Assembly	9
Engine Assembly	10
Lifting Mechanism Assembly	11
Hitch Assembly	12
Steering Wheel Assembly	14
Seat and Brake Lever Assembly	16
Transmission Control Assembly	18
Transmission Assembly No. 111-6000	20
Cylinder Head Assembly	22
Cylinder Barrel Assembly	24
Crankcase Cover Assembly	26
Crankshaft Assembly	28
Piston and Connecting Rod Assembly	30
Camshaft Assembly	32
Recoil Starter Assembly	34
Fan Cover Assembly	36
Carburetor Assembly	38
Air Cleaner Assembly	40
Muffler Assembly	42
Fuel Tank Assembly	44
Flywheel Assembly	46
Ignition Coil Assembly	48
Control Assembly	50
Label Assembly	52
Wrench	54
Decal Assembly	56
Gasket Kit	58
Attachments and Accessories	60

Steering Roller Assembly

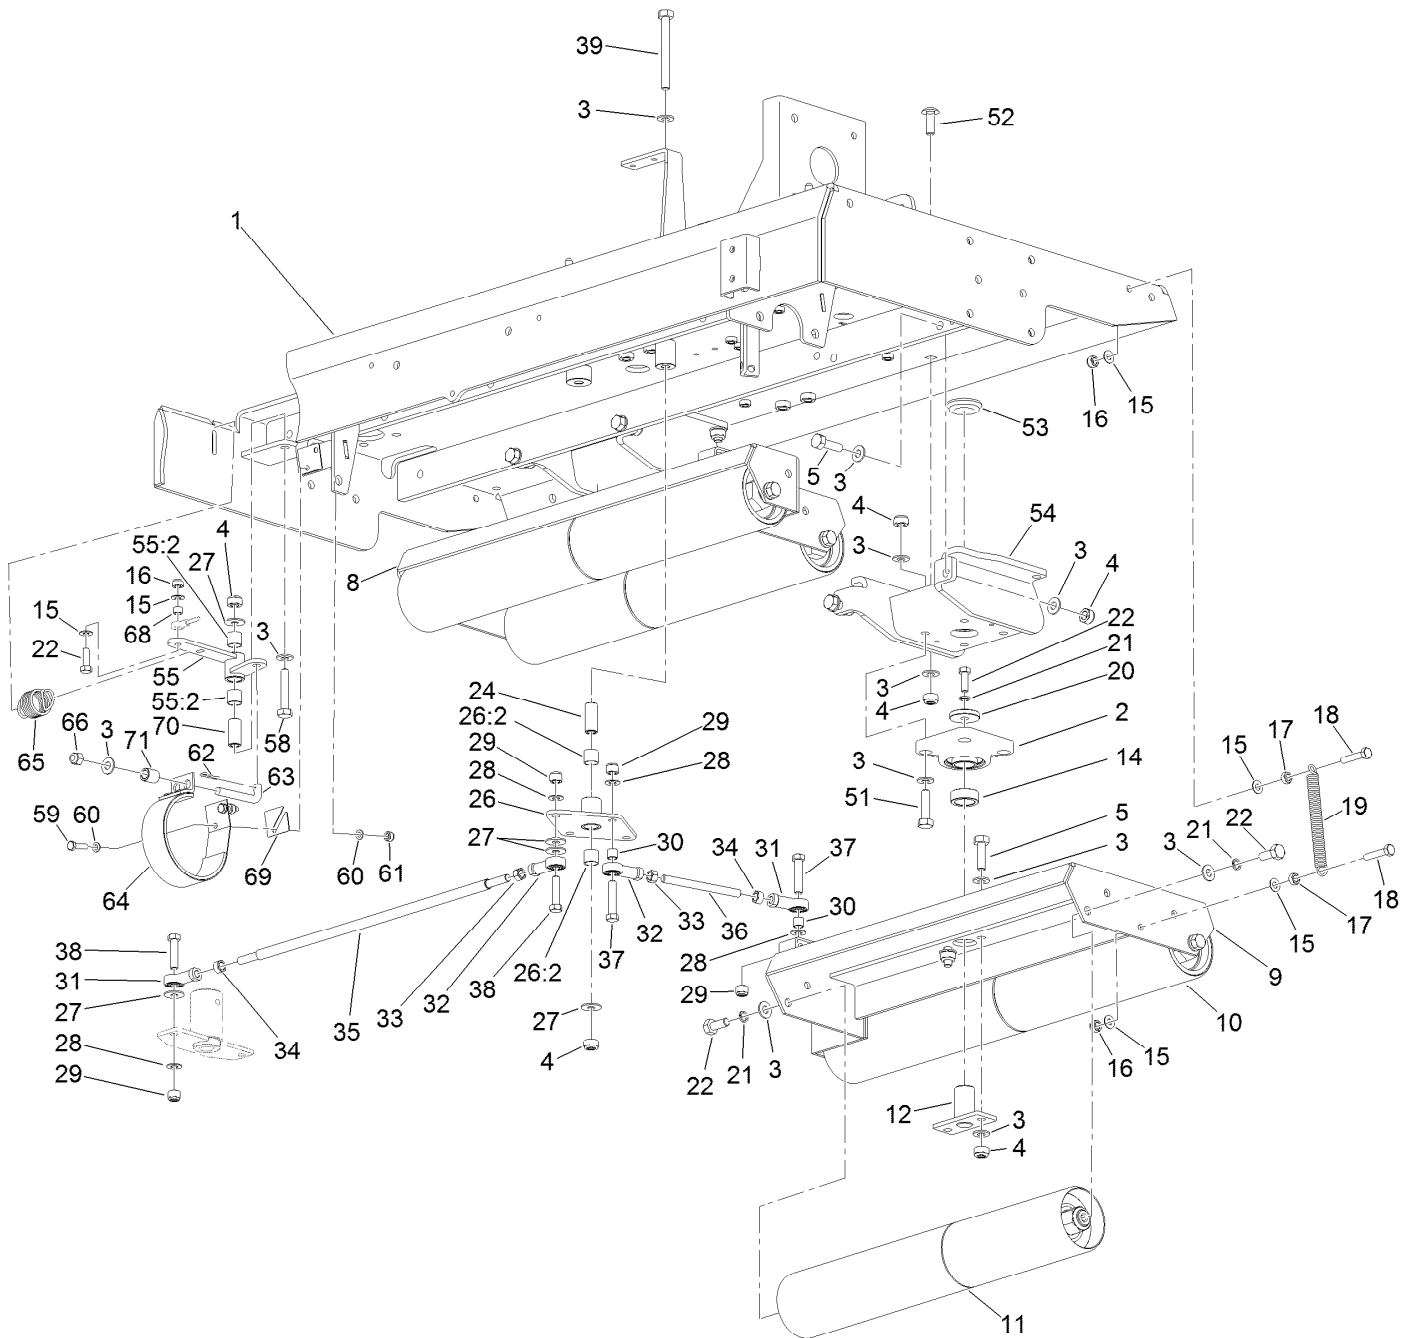


Steering Roller Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	131-1624-01	1	Roller Chassis	31	111-5748	3	Joint-Ball
2	111-5753	2	Bearing Housing ASM	32	111-5959	3	Joint-Ball
3	ZWQ1J000U	46	Washer-Plain	33	111-5855	3	Nut-Hex, LH
4	ZNN1J000U	21	Nut-Hex, NI	34	09213	3	Nut
5	09394	8	Bolt	35	111-5692	1	Rod-Pivot, Steering
8	111-5707-01	1	Head-Steering, Front	36	131-1579	2	Linkage Arm
9	111-5708-01	1	Head-Steering, Rear	37	09119	4	Bolt
10	127-7958	2	Complete Long Steering Roller ASM	38	09118	2	Bolt-HH
11	127-7963	2	Complete Short Steering Roller ASM	39	ZBH1J095U	1	Bolt-HH
12	111-5688	2	Shaft-Pivot	51	09611	8	Bolt-HH
14	111-6108	2	Bushing-Axle	52	33125-030	3	Screw-CARR
15	09475	10	Washer	53	107-3532	2	Grommet
16	09441	5	Nut-Hex, NI	54	131-6366-01	2	Support-Roller
17	ZNH1H000U	4	Nut-Hex	55	131-1626	1	Brake Pivot ASM
18	09681	4	Bolt	55:2	256-311	2	Bushing-Split
19	111-5883	2	Spring-Extension	58	57-6360	1	Screw-Clutch
20	111-5674	2	Collar-Fixing	59	09044	2	Screw-Set
21	09480	10	Washer-Lock	60	09472	4	Washer-Plain
22	09395	11	Screw-HH	61	09201	2	Nut
24	127-5938	1	Bushing-Pivot	62	1-806003	1	Pin-Cotter
26	127-5949	1	Steering Disc ASM	63	131-1584	1	Rod-Brake
26:2	256-311	2	Bushing-Split	64	9593	1	Brake Band ASM
27	HY03355	5	Washer-Plated	65	13-3090	1	Spring-Finger
28	09271	6	Washer-Plain	66	3296-39	1	Nut-Lock, NI
29	09216	6	Nut-Hex, NI	68	108-7983	1	Bushing-Cable
30	111-5684	4	Bushing	69	131-6353	1	Shim-1 Mm
				70	131-6350	1	Bushing-Pivot
				71	131-6398	1	Spacer

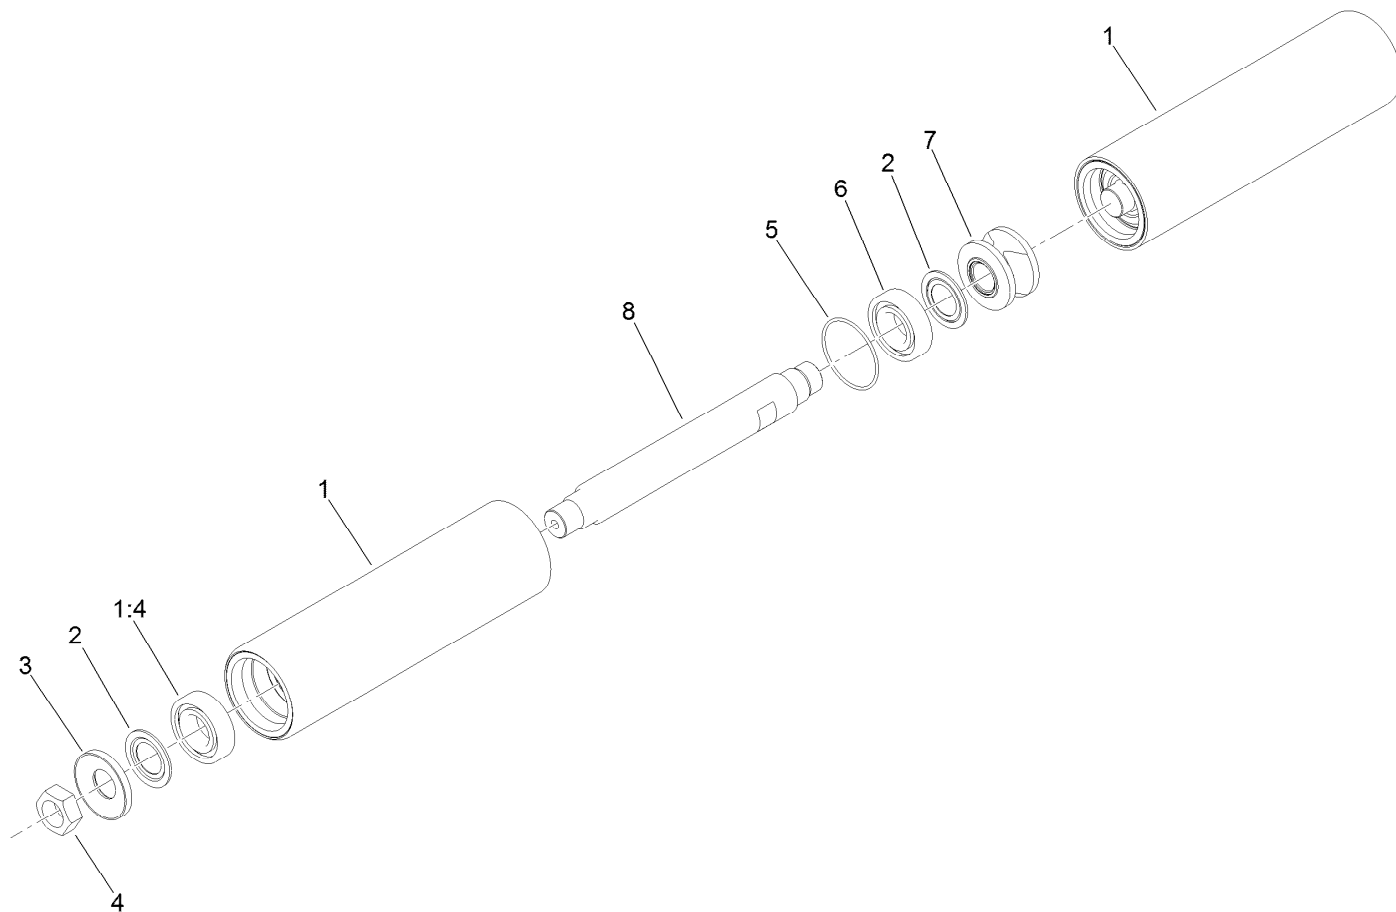


Complete Long Steering Roller Assembly No. 127-7958

Ref.	Part Number	Qty.	Description
1	127-7966	2	Long Steering Roller ASM
1:4	115-3296	1	Bearing-Sealed
2	115-3299	4	Seal-Flocked
3	127-7959	2	Spacer-Bearing
4	3296-49	2	Nut-Lock, NI
5	117-8177	2	O-Ring
6	115-3296	2	Bearing-Sealed
7	127-7960	1	Sleeve-Roller
8	127-8029	2	Shaft-Roller

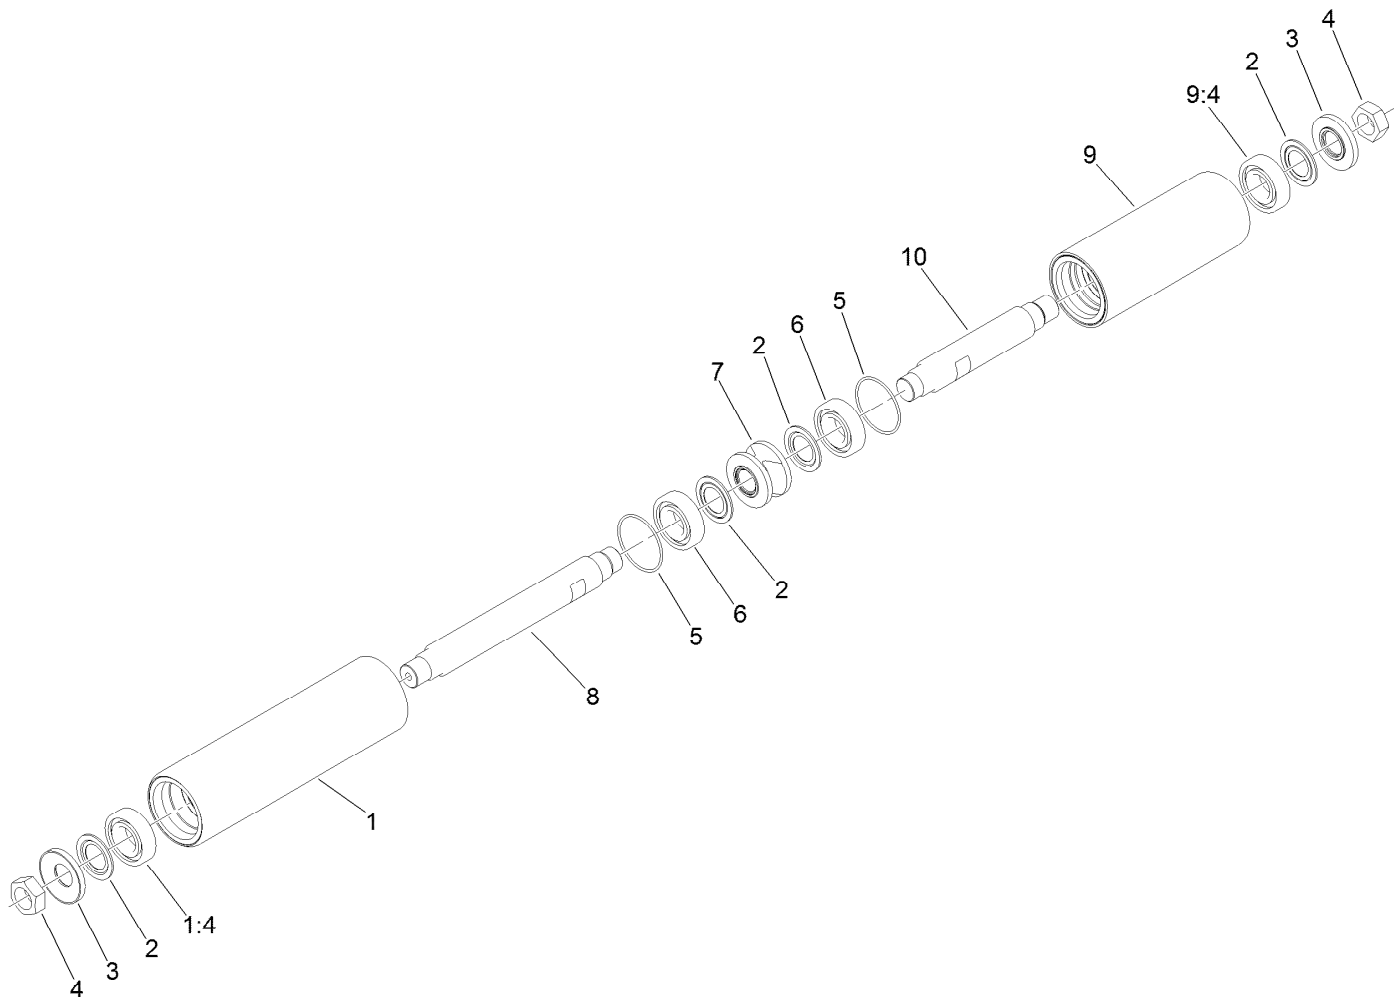

Complete Short Steering Roller Assembly No. 127-7963


Ref.	Part Number	Qty.	Description
1	127-7966	1	Long Steering Roller ASM
1:4	115-3296	1	Bearing-Sealed
2	115-3299	4	Seal-Flocked
3	127-7959	2	Spacer-Bearing
4	3296-49	2	Nut-Lock, NI
5	117-8177	2	O-Ring
6	115-3296	2	Bearing-Sealed
7	127-7960	1	Sleeve-Roller
8	127-8029	1	Shaft-Roller
9	127-7967	1	Short Steering Roller Assy
9:4	115-3296	1	Bearing-Sealed
10	127-8030	1	Shaft-Roller

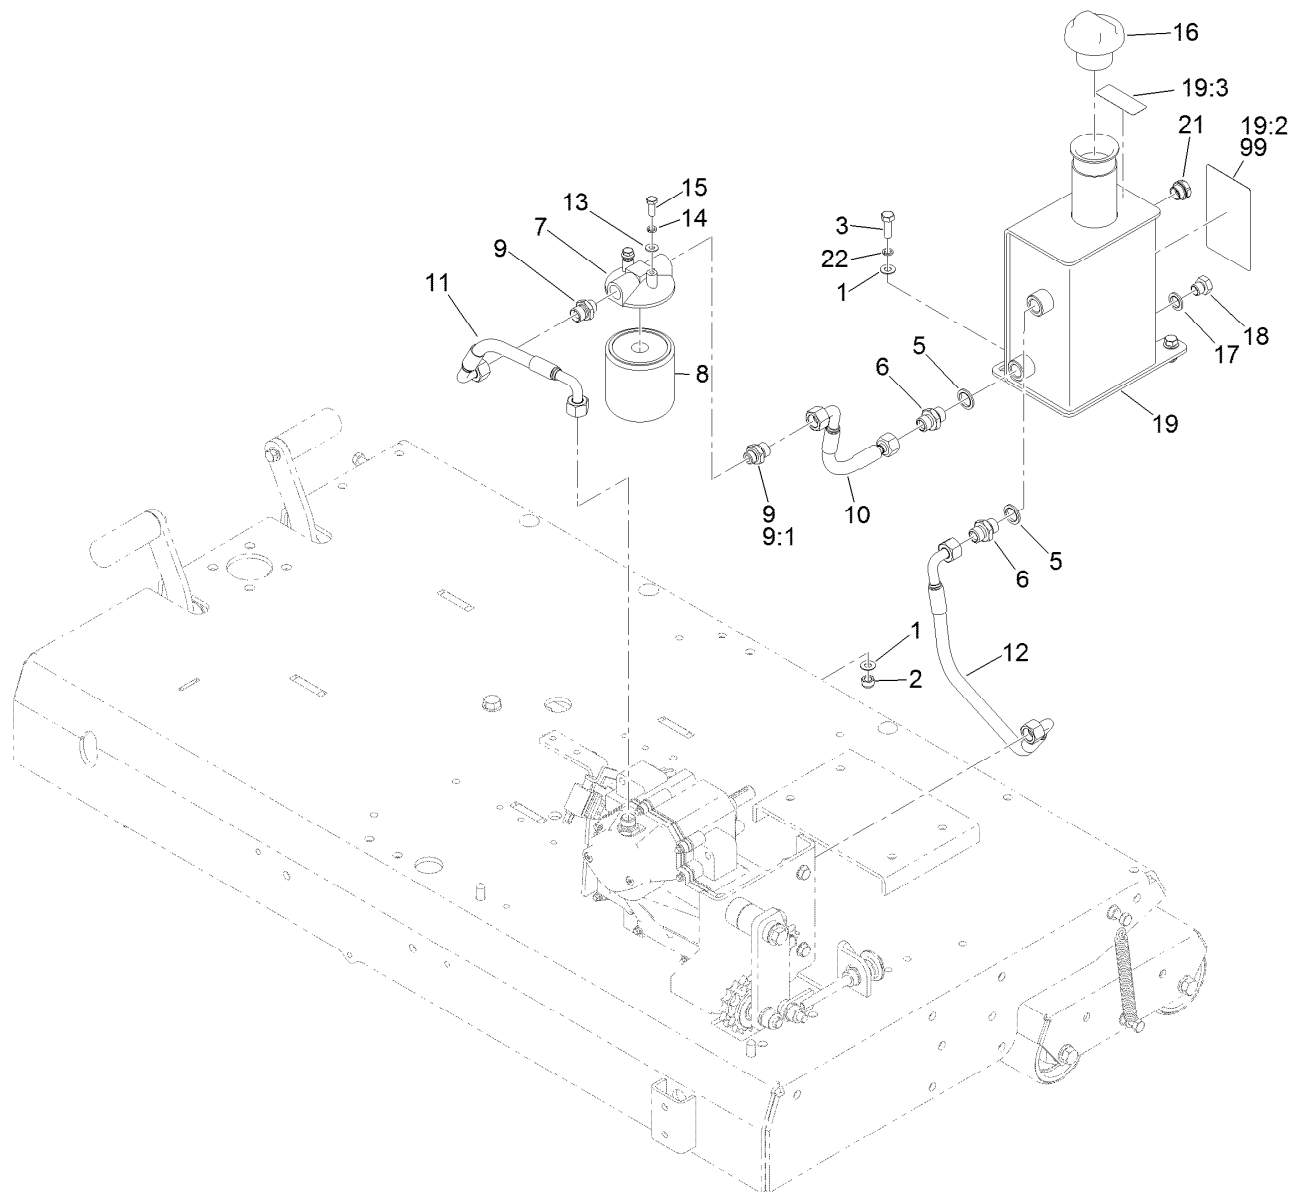

Hydraulic Tank and Hose Assembly

Ref.	Part Number	Qty.	Description
1	09475	4	Washer
2	09441	2	Nut-Hex, NI
3	03162	2	Screw-HH
5	10-06-031	2	Seal-Dowty
6	10-06-042	2	Adaptor-Bspp
7	111-5752	1	Head-Filter, Oil
8	1-633750	1	Filter-Oil, HYD
9	111-4788	2	Fitting-Straight
9:1	70-06-165	1	Seal-O Ring
10	111-5956	1	HYD Hose ASM
11	111-5957	1	HYD Hose ASM
12	111-5958	1	HYD Hose ASM


Ref.	Part Number	Qty.	Description
13	09261	2	Washer-Plain
14	09264	2	Washer-Spring
15	09821	2	Screw-HH
16	111-5749	1	Cap-Tank
17	10-06-030	1	Seal-Dowty
18	30-06-200	1	Plug-HYD
19	131-6375	1	Tank-Oil
19:2	127-5832	1	Decal-Warning
19:3	93-6686	1	Decal-Oil, HYD
21	127-5834	1	Glass-Sight
22	03469	2	Washer-Spring
99	131-6371	1	Decal-Warning, Ce

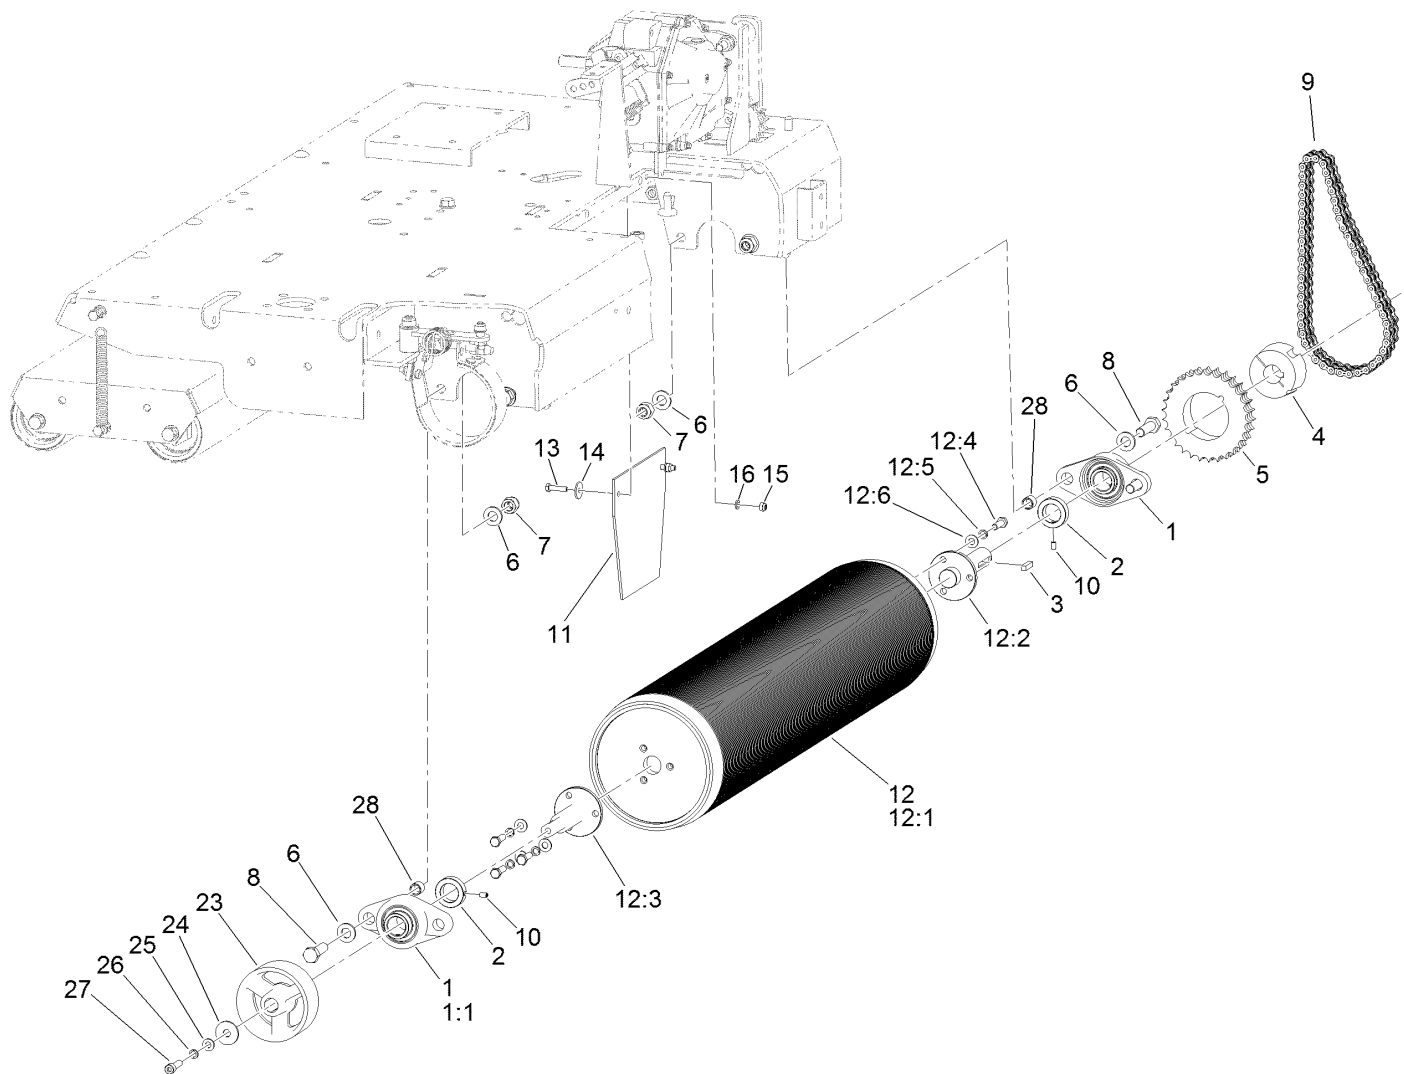

Drive Roller Assembly

Ref.	Part Number	Qty.	Description
1	111-5744	2	Bearing ASM
1:1	111-5758	1	Bearing
2	111-5785	2	Collar
3	04522	1	Key-Square
4	111-5762	1	Hub-Taperlock
5	111-5763	1	Sprocket-30 Tooth, Duplex
6	HY09485	8	Washer-Plain
7	09650	4	Nut-Hex, Nyloc
8	63-11-010	4	Bolt-HH
9	127-5865	1	Chain-Drive
10	09619	2	Grubscrew
11	111-7089	1	Guard-Chain, Rubber
12	131-1623	1	Drive Roller ASM
12:1	111-6857	1	Drum-Roller, Drive
12:2	111-5733	1	Axle-Roller, Keyed


Ref.	Part Number	Qty.	Description
12:3	131-1581	1	Roller Axle
12:4	09073	6	Setscrew
12:5	03469	6	Washer-Spring
12:6	09266	6	Washer-Plain
13	09364	2	Screw-HH
14	09263	2	Washer
15	09438	2	Nut-Nyloc
16	09472	2	Washer-Plain
23	106719	1	Drum-Brake
24	93-8806	1	Washer-Hardened
25	ZWP1H000U	1	Washer-Plain
26	03469	1	Washer-Spring
27	ZCS1H030U	1	Screw-Cap
28	131-6367	4	Spacer

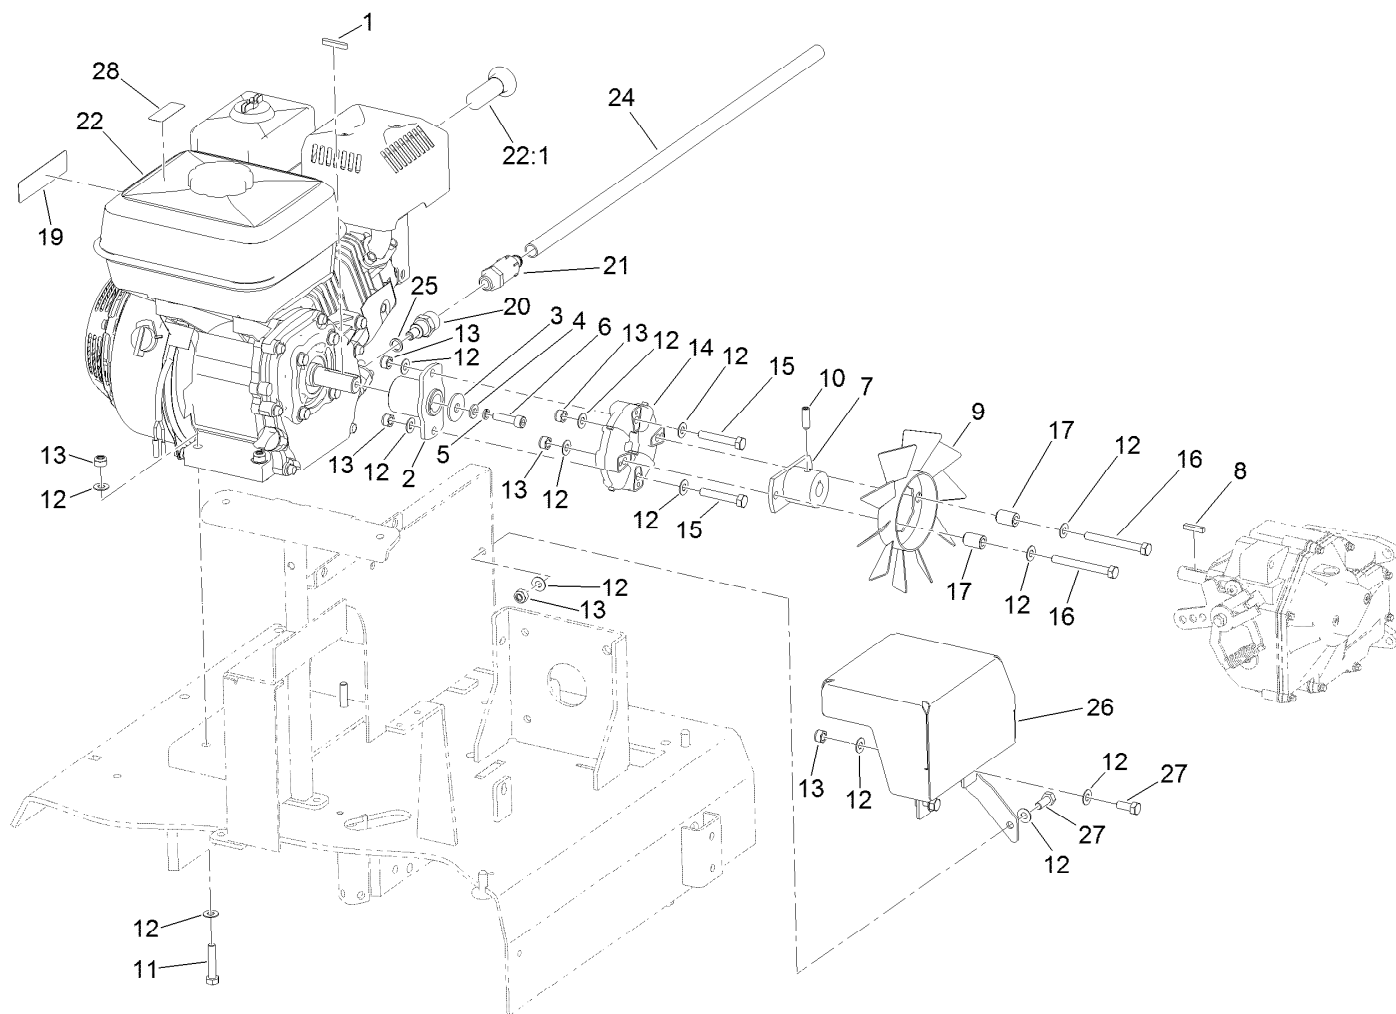

Engine Assembly

Ref.	Part Number	Qty.	Description
1	103-2739	1	Key
2	127-5799	1	Collar-Engine
3	93-8806	1	Washer-Hardened
4	ZWP1H000U	1	Washer-Plain
5	03469	1	Washer-Spring
6	ZCS1H030U	1	Screw-Cap
7	111-5730	1	Collar-Pump
8	111-5724	1	Key-Square
9	127-5846	1	Fan
10	131-6401	1	Screw-Set
11	09681	4	Bolt
12	09475	21	Washer
13	09441	10	Nut-Hex, NI
14	119-0652	1	Coupler-Rubber

Ref.	Part Number	Qty.	Description
15	ZBH1H050U	2	Bolt
16	ZBH1H075U	2	Bolt
17	127-5847	2	Bushing
19	117-2718	1	Decal-Arrester, Spark
20	111-7088	1	Adaptor-Drain, Oil
21	92-6877	1	Valve-Drain, Oil
22	111-7153	1	Engine-Honda
22:1	111-6526	1	Arrester-Spark
24	103-1964	1	Hose-Drain, Oil
25	111-7401	1	Washer-Plug, Sump
26	131-1610-03	1	Guard-Exhaust
27	09368	3	Screw-HH
28	130-8322	1	Decal-Warning, Ethanol

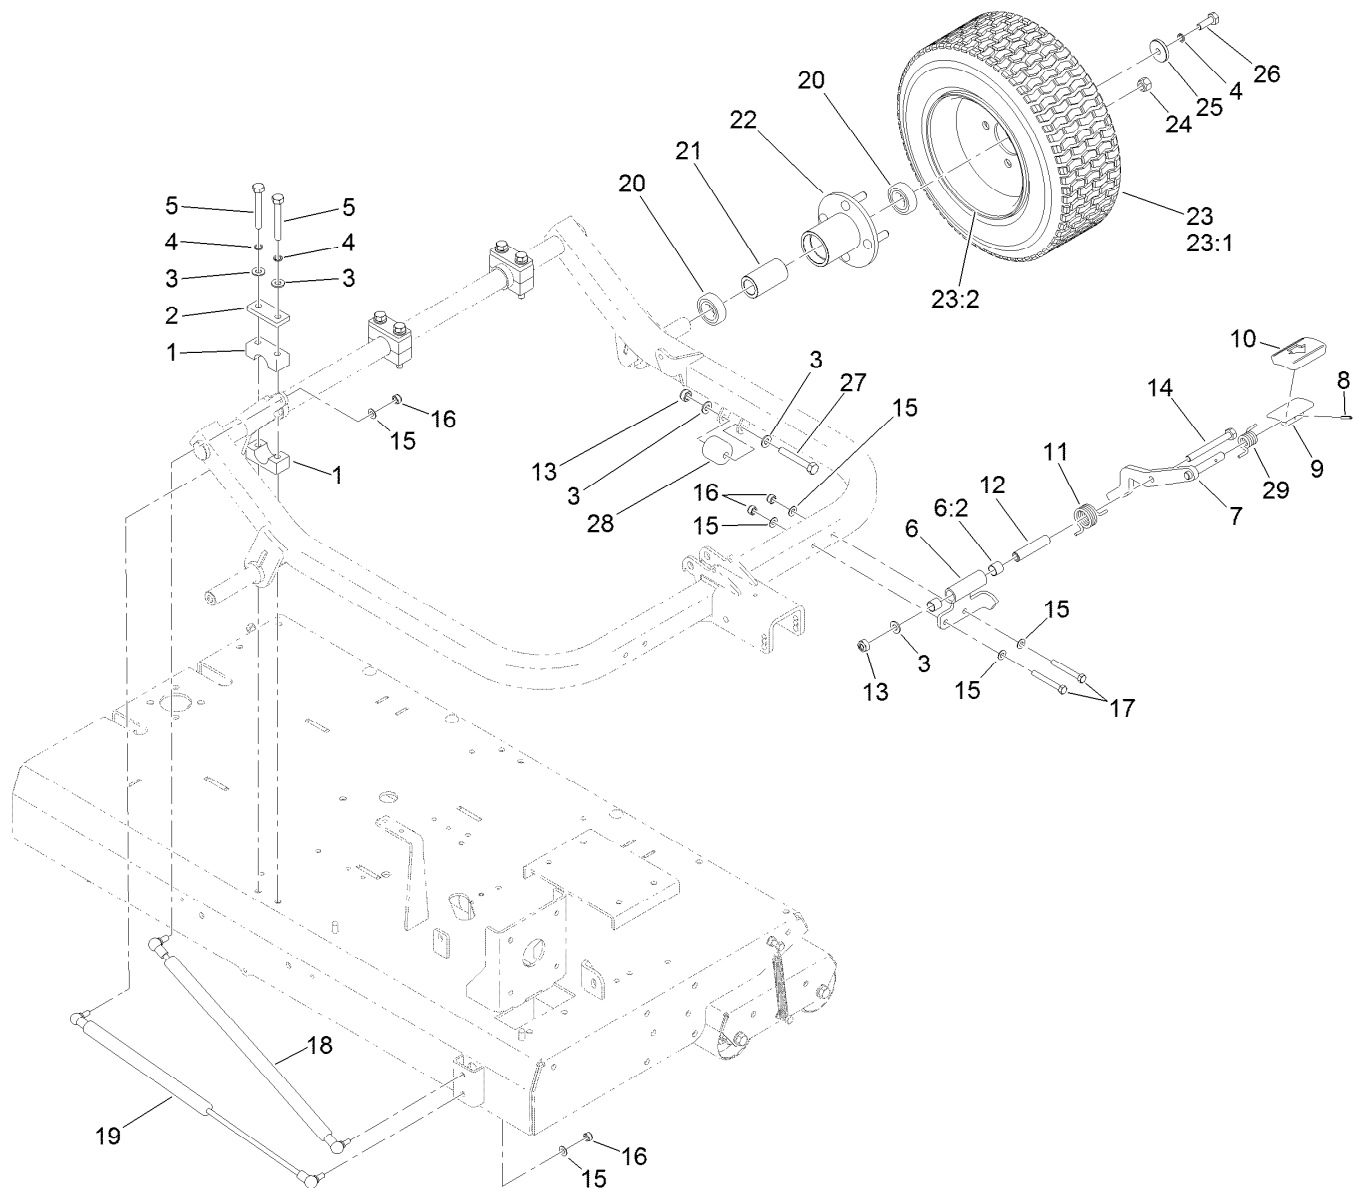


Lifting Mechanism Assembly

Ref.	Part Number	Qty.	Description
1	127-8044	3	Clamp-Drawbar
2	111-5681	3	Plate-Clamp, Axle
3	ZWQ1J000U	9	Washer-Plain
4	09480	8	Washer-Lock
5	ZBH1J075U	6	Bolt-HH
6	127-1351	1	Pedal Pivot ASM
6:2	256-311	2	Bushing-Split
7	127-1349-01	1	Lever-Pedal
8	32121-45	1	Pin-Spring
9	117-9507	1	Pedal-Accelerator
10	74-9100	1	Pad-Pedal, Forward
11	127-1353	1	Spring-Torsion
12	127-1355	1	Spacer
13	ZNN1J000U	2	Nut-Hex, NI
14	ZBH1J095U	1	Bolt-HH
15	09475	8	Washer

Ref.	Part Number	Qty.	Description
16	09441	6	Nut-Hex, NI
17	ZBH1H065U	2	Bolt
18	127-1326	1	Damper
19	125-5696	1	Spring-Gas
20	120-4621	4	Bearing
21	111-5858	2	Spacer-Bearing
22	111-7103-03	2	Wheel Hub ASM
23		2	Wheel And Tire ASM ●
23:1	111-5755	1	Tyre
23:2	111-5756	1	Rim-Wheel
24	93-5268	8	Nut-Lug
25	111-5674	2	Collar-Fixing
26	09392	2	Screw-HH
27	09399	1	Bolt
28	127-1342	1	Roller
29	127-8034	1	Spring-Torsion

● Not serviced separately


Hitch Assembly

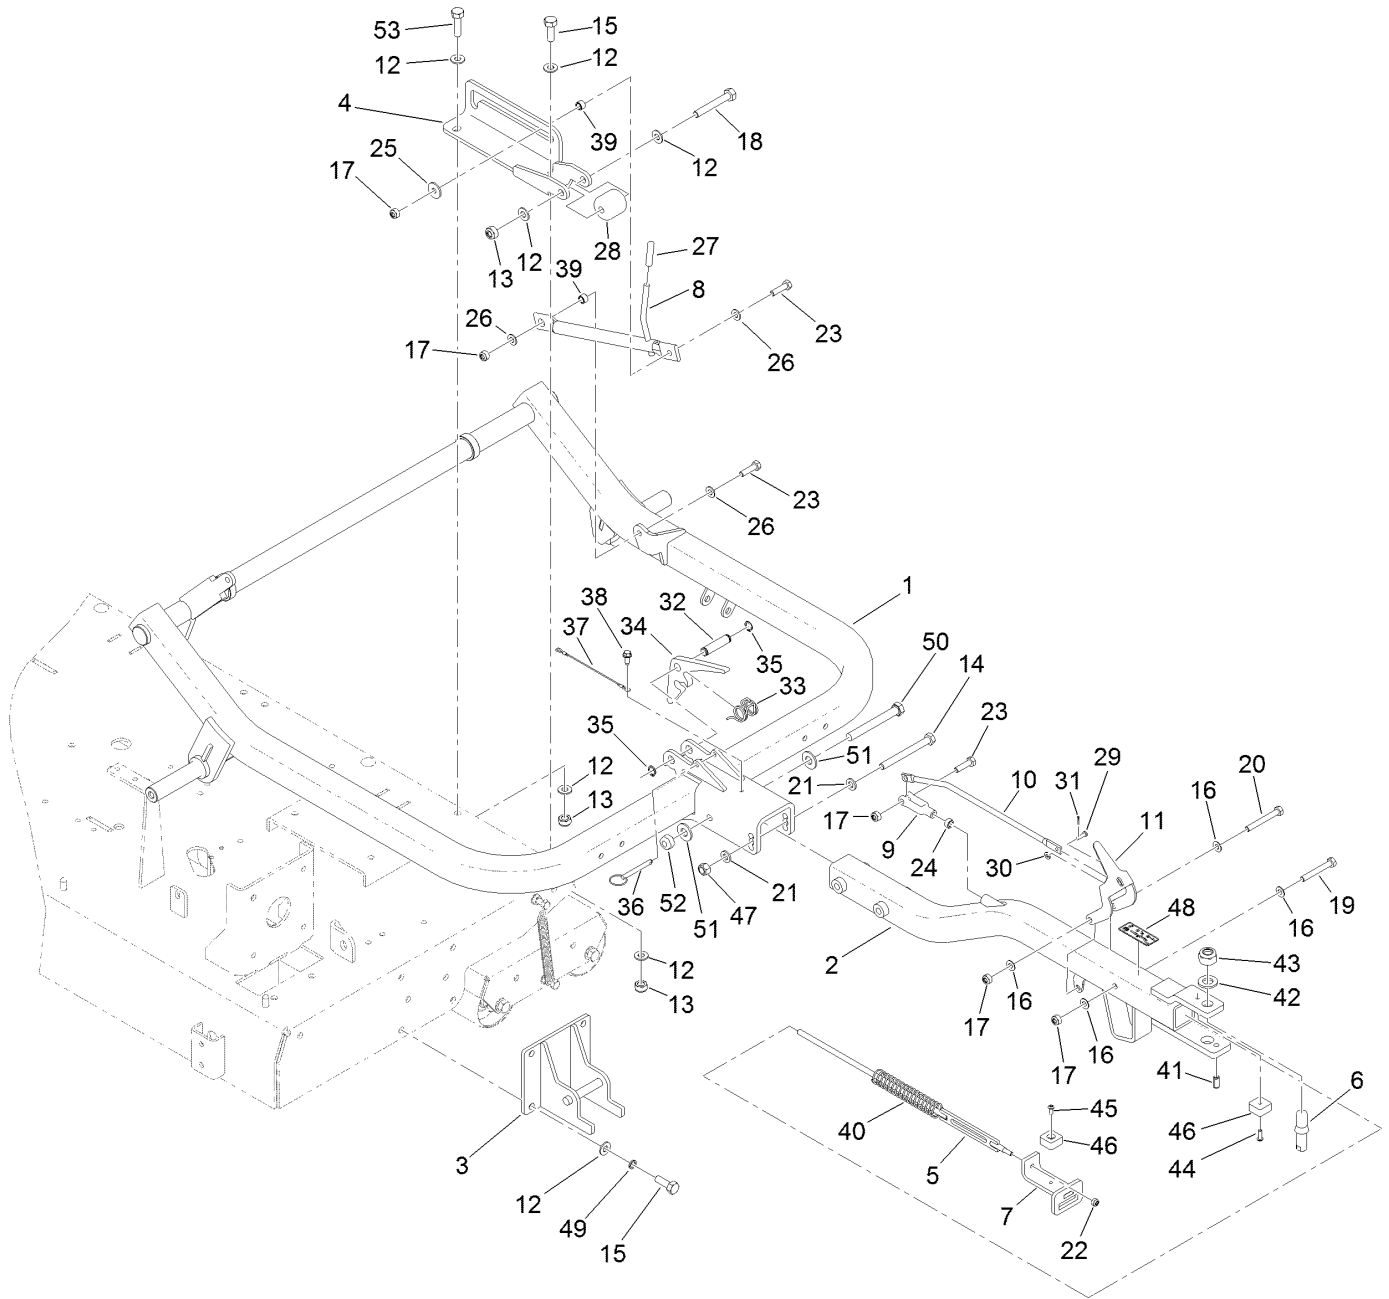

Hitch Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-5704-01	1	Hitch Pivot ASM	28	127-1342	1	Roller
2	125-5725-01	1	Hitch ASM	29	283-29	1	Pin-Clevis
3	125-5724-01	1	Bracket-Lock	30	3256-51	1	Washer-Flat
4	125-5717-01	1	Bracket-Slide	31	3272-1	1	Pin-Cotter
5	125-5743	1	Lever ASM	32	125-5731	1	Pin-Lock, Lever
6	127-5861	1	Pin-Tow	33	125-5723	1	Spring-Torsion
7	125-5741-01	1	Slide	34	125-5711-01	1	Latch-Hitch
8	125-5730-01	1	Lever	35	32151-61	2	Ring-Retaining
9	1-303105	1	Yoke-Adjustable	36	108-0094	1	Pin-Cotterless
10	127-1317	1	Wire-Form	37	28-8070	1	Lanyard
11	127-1321	1	Lever	38	32144-10	1	Screw-HWH
12	ZWQ1J000U	10	Washer-Plain	39	120-9697	2	Spacer
13	ZNN1J000U	3	Nut-Hex, NI	40	125-5737	1	Spring-Compression
14	127-5864	1	Screw-HH	41	32121-123	1	Pin-Roll
15	09392	5	Screw-HH	42	09491	1	Washer-Plain
16	09475	4	Washer	43	09456	1	Nut
17	09441	5	Nut-Hex, NI	44	119-7568	1	Screw-HSBH
18	09399	1	Bolt	45	127-5866	1	Screw-HSBH
19	09371	1	Bolt	46	94-1392	2	Pad-Rubber
20	ZBH1H065U	1	Bolt	47	131-1558	1	Nut-Lock
21	107-1413	2	Washer-Hardened	48	127-5885	1	Decal-Disconnect, Hitch
22	09438	1	Nut-Nyloc	49	09480	4	Washer-Lock
23	09369	3	Screw-HH	50	131-1557	1	Screw-HH
24	09207	1	Nut	51	87-7270	2	Washer-Thrust
25	1-603716	1	Washer-Friction	52	94-4307	1	Nut-Hex Lock
26	3256-23	3	Washer-Flat	53	09394	1	Bolt
27	125-5722	1	Cap-Flex				


Steering Wheel Assembly

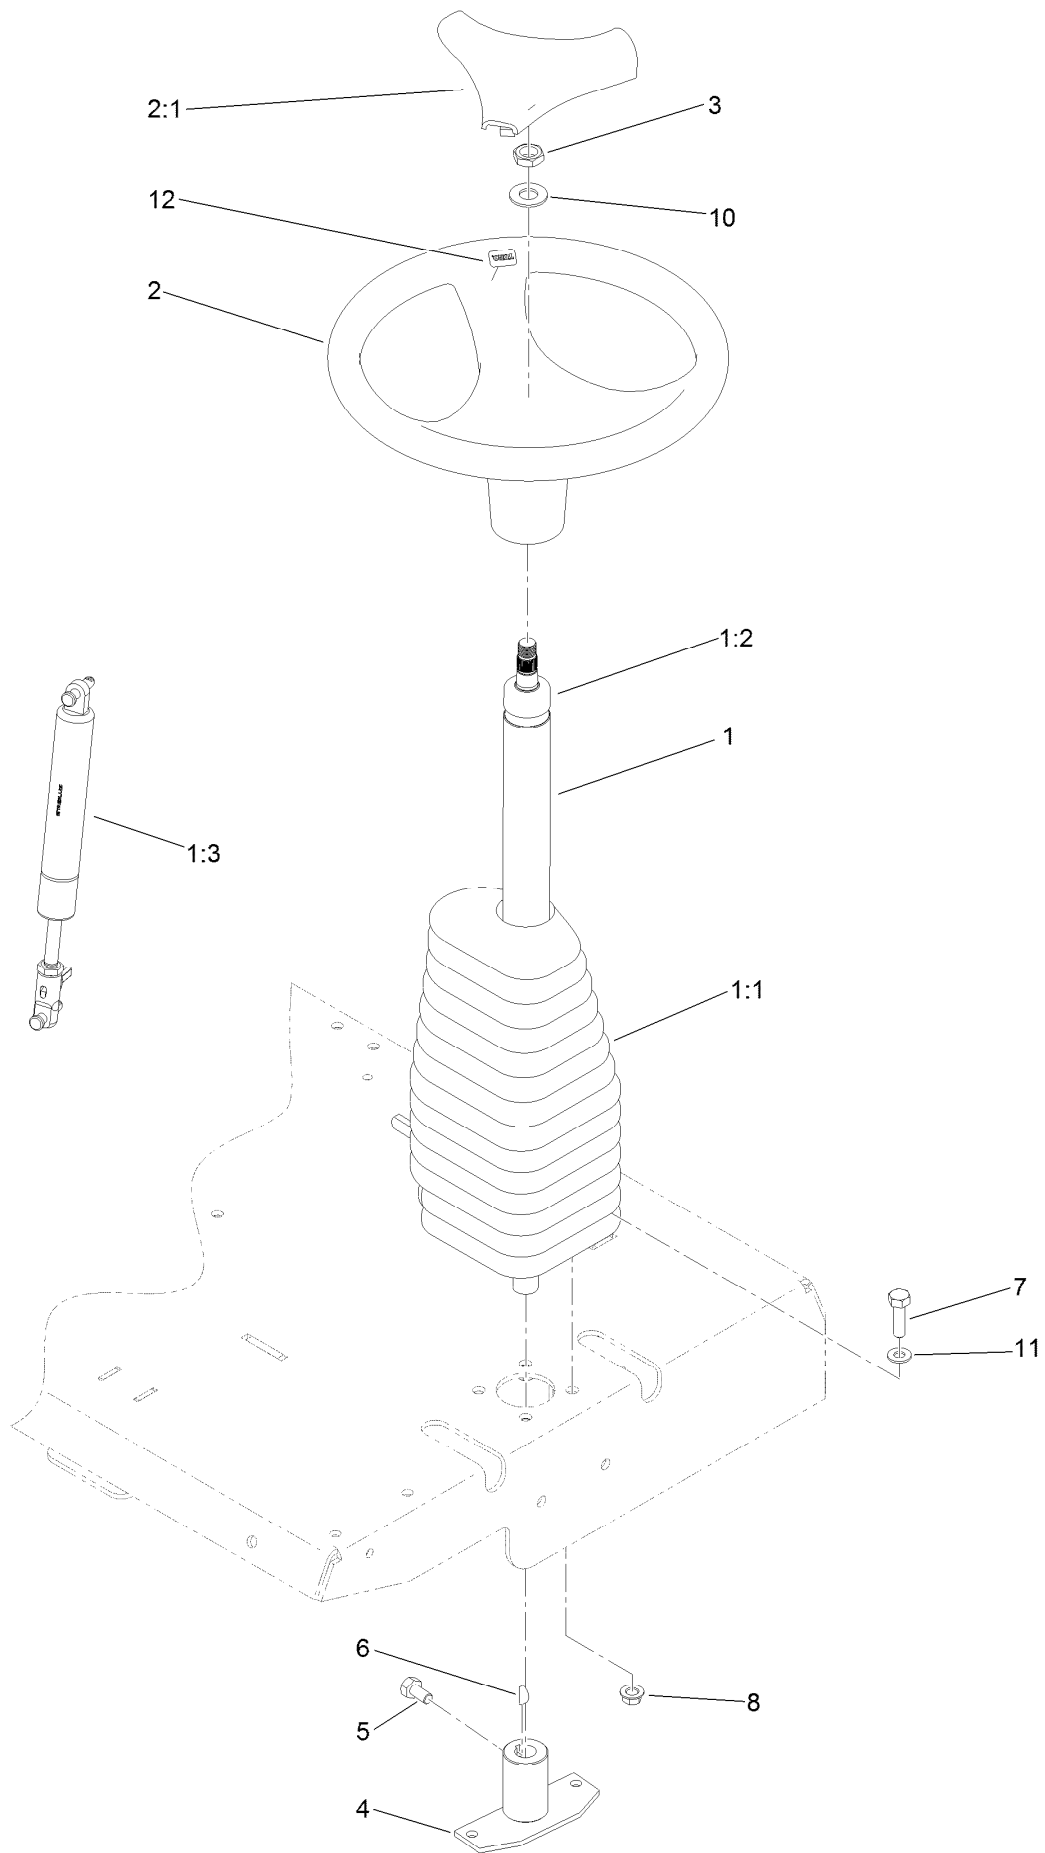

Steering Wheel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-8041	1	Column-Steering	5	09391	1	Screw-HH
1:1	120-2592	1	Boot-Rubber, Column	6	3257-7	1	Key-Woodruff
1:2	120-2593	1	Boot-Rubber, Bearing	7	09394	4	Bolt
1:3	120-2594	1	Gas Spring ASM	8	63-11-015	4	Nut-Flanged
2	98-1471	1	Wheel-Steering	10	3256-27	1	Washer-Flat
2:1	98-1468	1	Cover-Wheel, Steering	11	ZWQ1J000U	4	Washer-Plain
3	110-8816	1	Nut-Hex	12	98-1459	1	Decal
4	127-5776-01	1	Pivot-Steering				


Seat and Brake Lever Assembly

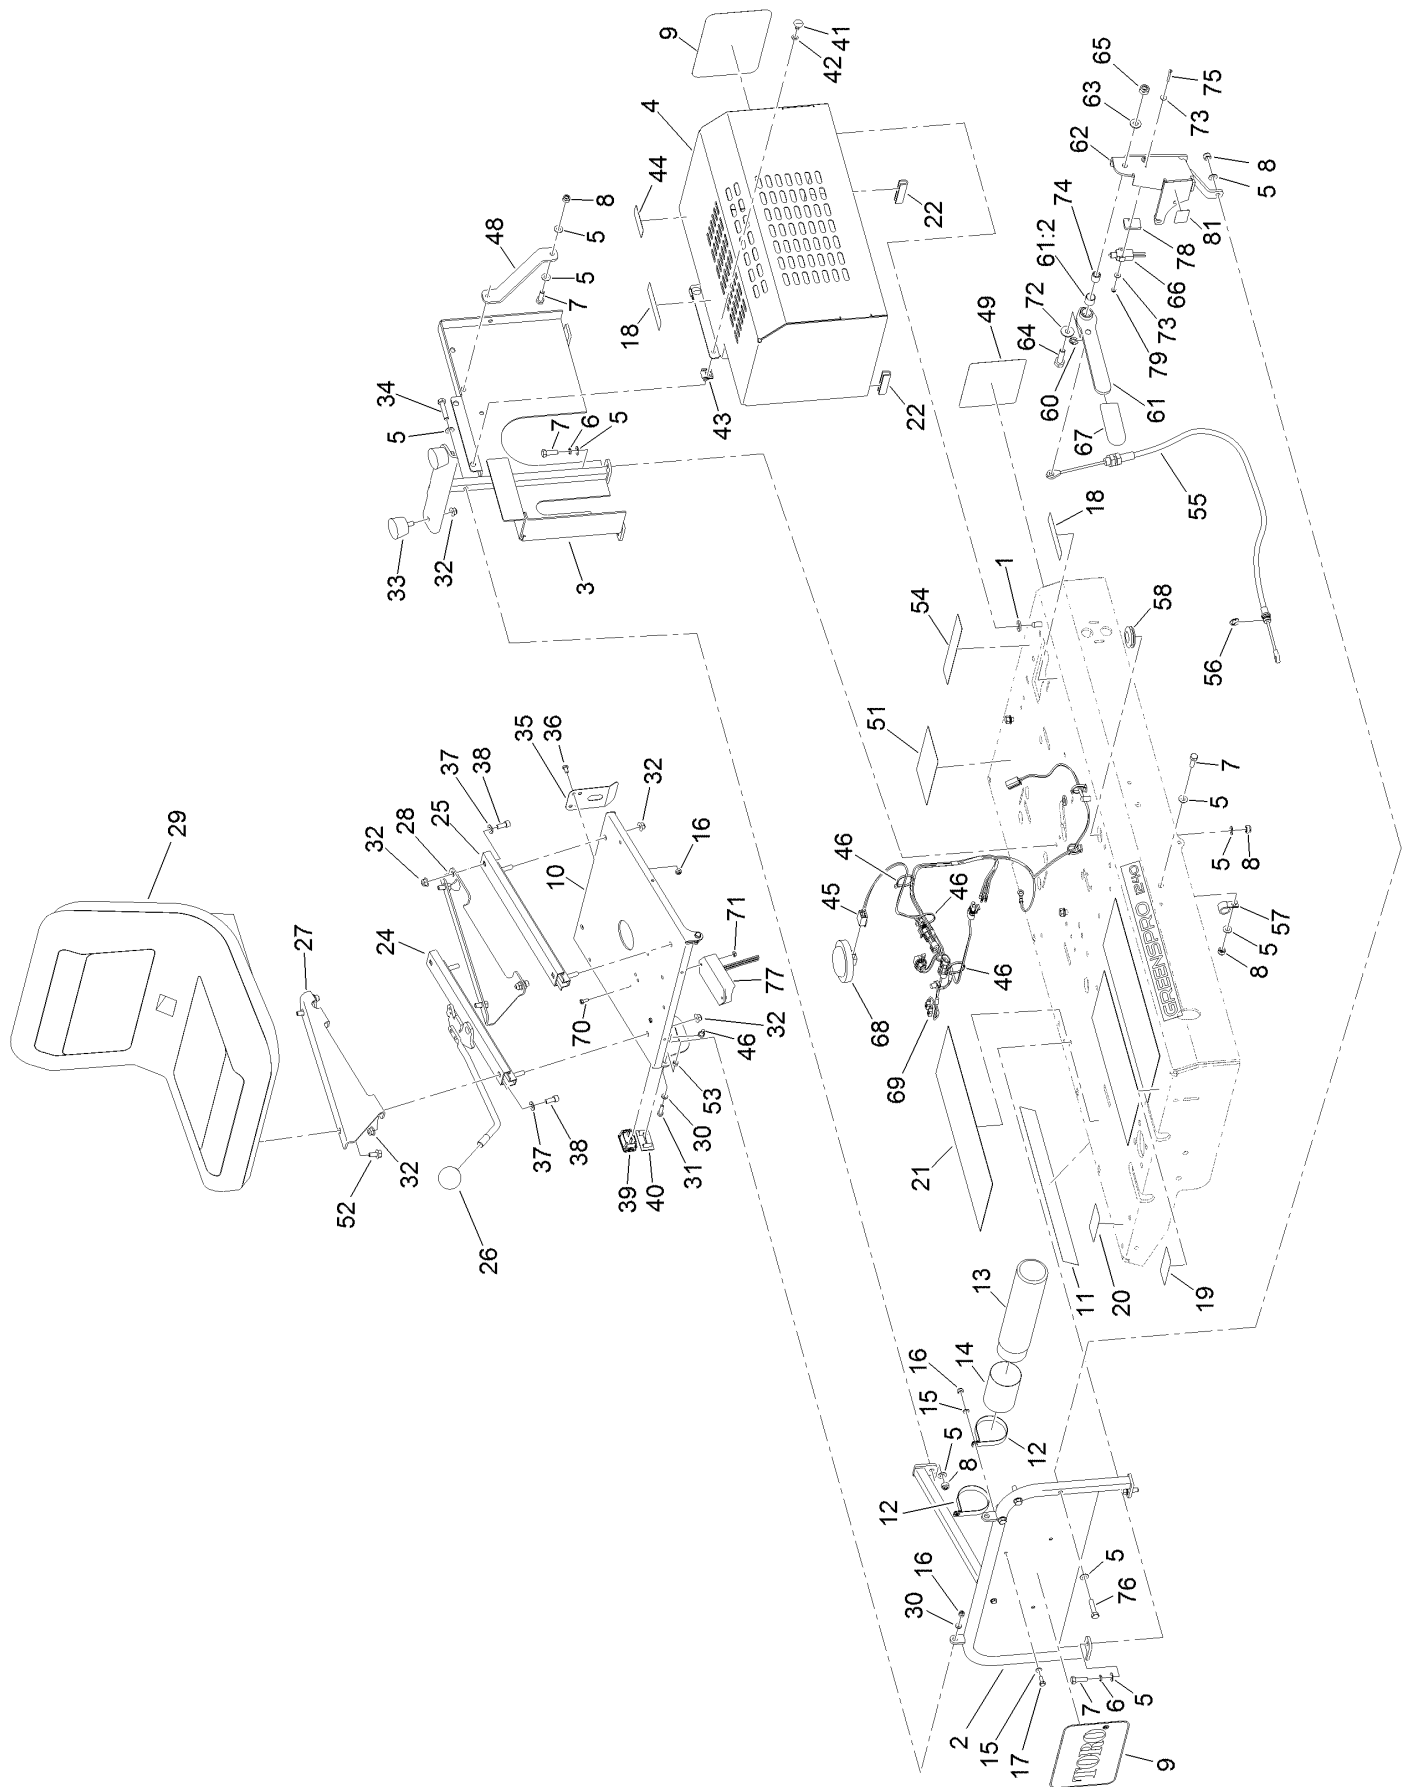

Seat and Brake Lever Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	111-5739	2	Washer-Rubber	49	127-5871	1	Decal-Service, Czech
2	131-6363-01	1	Seat Support	49	127-5872	1	Decal-Reference, Danish
3	131-1629-01	1	Frame-Support, Rear	49	127-5873	1	Decal-Reference, German
4	131-1615-01	1	Transmission Cover	49	127-5874	1	Decal-Reference, Spanish
5	09475	20	Washer	49	127-5875	1	Decal-Reference, Finnish
6	03469	5	Washer-Spring	49	127-5876	1	Decal-Reference, French
7	03162	7	Screw-HH	49	127-5877	1	Decal-Reference, Italian
8	09441	9	Nut-Hex, NI	49	127-5878	1	Decal-Reference, Japanese
9	111-3728	2	Decal	49	127-5879	1	Decal-Reference, Dutch
10	127-5752-01	1	Pan-Seat	49	127-5880	1	Decal-Reference, Norwegian
11	127-5895	2	Decal	49	127-5881	1	Decal-Reference, Polish
12	107-1865	2	R-Clamp	49	127-5882	1	Decal-Reference, Portuguese
13	104-7050	1	Tube-Manual	49	127-5883	1	Decal-Reference, Swedish
14	104-7048	1	Cap-Housing	51	127-5884	1	Decal-Operation
15	ZWP1F000U	4	Washer-Plain	52	33104-016	4	Screw-HHF
16	09438	6	Nut-Nyloc	53	88-7860	2	Spacer
17	09362	2	Screw-HH	54	127-8010	1	Decal-Adjust, Tension (Chain)
18	111-5646	2	Decal-Warning	55	131-6361	1	Cable-Brake, Park
19	111-5649	1	Decal-Control, Pedal (Left)	56	32120-47	1	Ring-Retaining, External
20	111-5650	1	Decal-Control, Pedal (Right)	57	2412-41	1	Clamp
21	70-07-067	4	Tape-Slip, Anti	58	1-543286	1	Grommet
22	50-08-001	1	Edging-Rubber	60	32151-47	1	Ring-Retaining
24	119-4483	1	Seat Adjuster Lever ASM	61	131-6389	1	Brake Lever ASM
25	92-8990	1	Adjuster-Slave	61:2	256-311	1	Bushing-Split
26	233-48	1	Knob	62	131-6388-01	1	Support-Lever, Brake
27	127-5759-01	1	Bracket-Seat, RH	63	ZWQ1J000U	1	Washer-Plain
28	127-5754-01	1	Bracket-Seat, LH	64	09394	1	Bolt
29	111-5742	1	Seat ASM	65	ZNN1J000U	1	Nut-Hex, NI
30	09472	4	Washer-Plain	66	99-3410	1	Switch
31	ZBH1F025U	2	Bolt-HH	67	21-1880	1	Grip-Handle
32	104-8300	10	Nut-Flange, NI	68	100-3524	1	Switch-Seat
33	68-3270	2	Bumper-Rubber	69	122-0570	1	Harness-Wire
34	09681	1	Bolt	70	32105-8	2	Screw-SHH
35	66-2630	1	Latch-Seat	71	110-3145	2	Nut-Lock
36	09361	2	Screw-HH	72	HY03355	1	Washer-Plated
37	3256-23	4	Washer-Flat	73	3269-6	4	Washer-Flat
38	3274-10	4	Screw-HSH	74	131-6386	1	Pivot Bush
39	120-2244	1	Hourmeter	75	3249-11	2	Screw-Machine
40	111-2337	1	Blank-Switch	76	09631	3	Bolt
41	119-1728	2	Stud-1/4 Turn	77	122-0423	1	Module-Ground, Magneto
42	119-1729	2	Retainer-Stud	78	131-6383	1	Spacer
43	119-1730	2	Receptacle-Clip, Mini	79	3296-9	2	Nut-Lock
44	127-0392	1	Decal-Hot Surface	81	131-0440	1	Decal-Brake, Parking
45	122-0421	1	Harness-Wire				
46	HY3966	4	Tie-Cable				
48	127-5928-01	1	Support Strut				
49	127-5867	1	Decal-Service				

Transmission Control Assembly

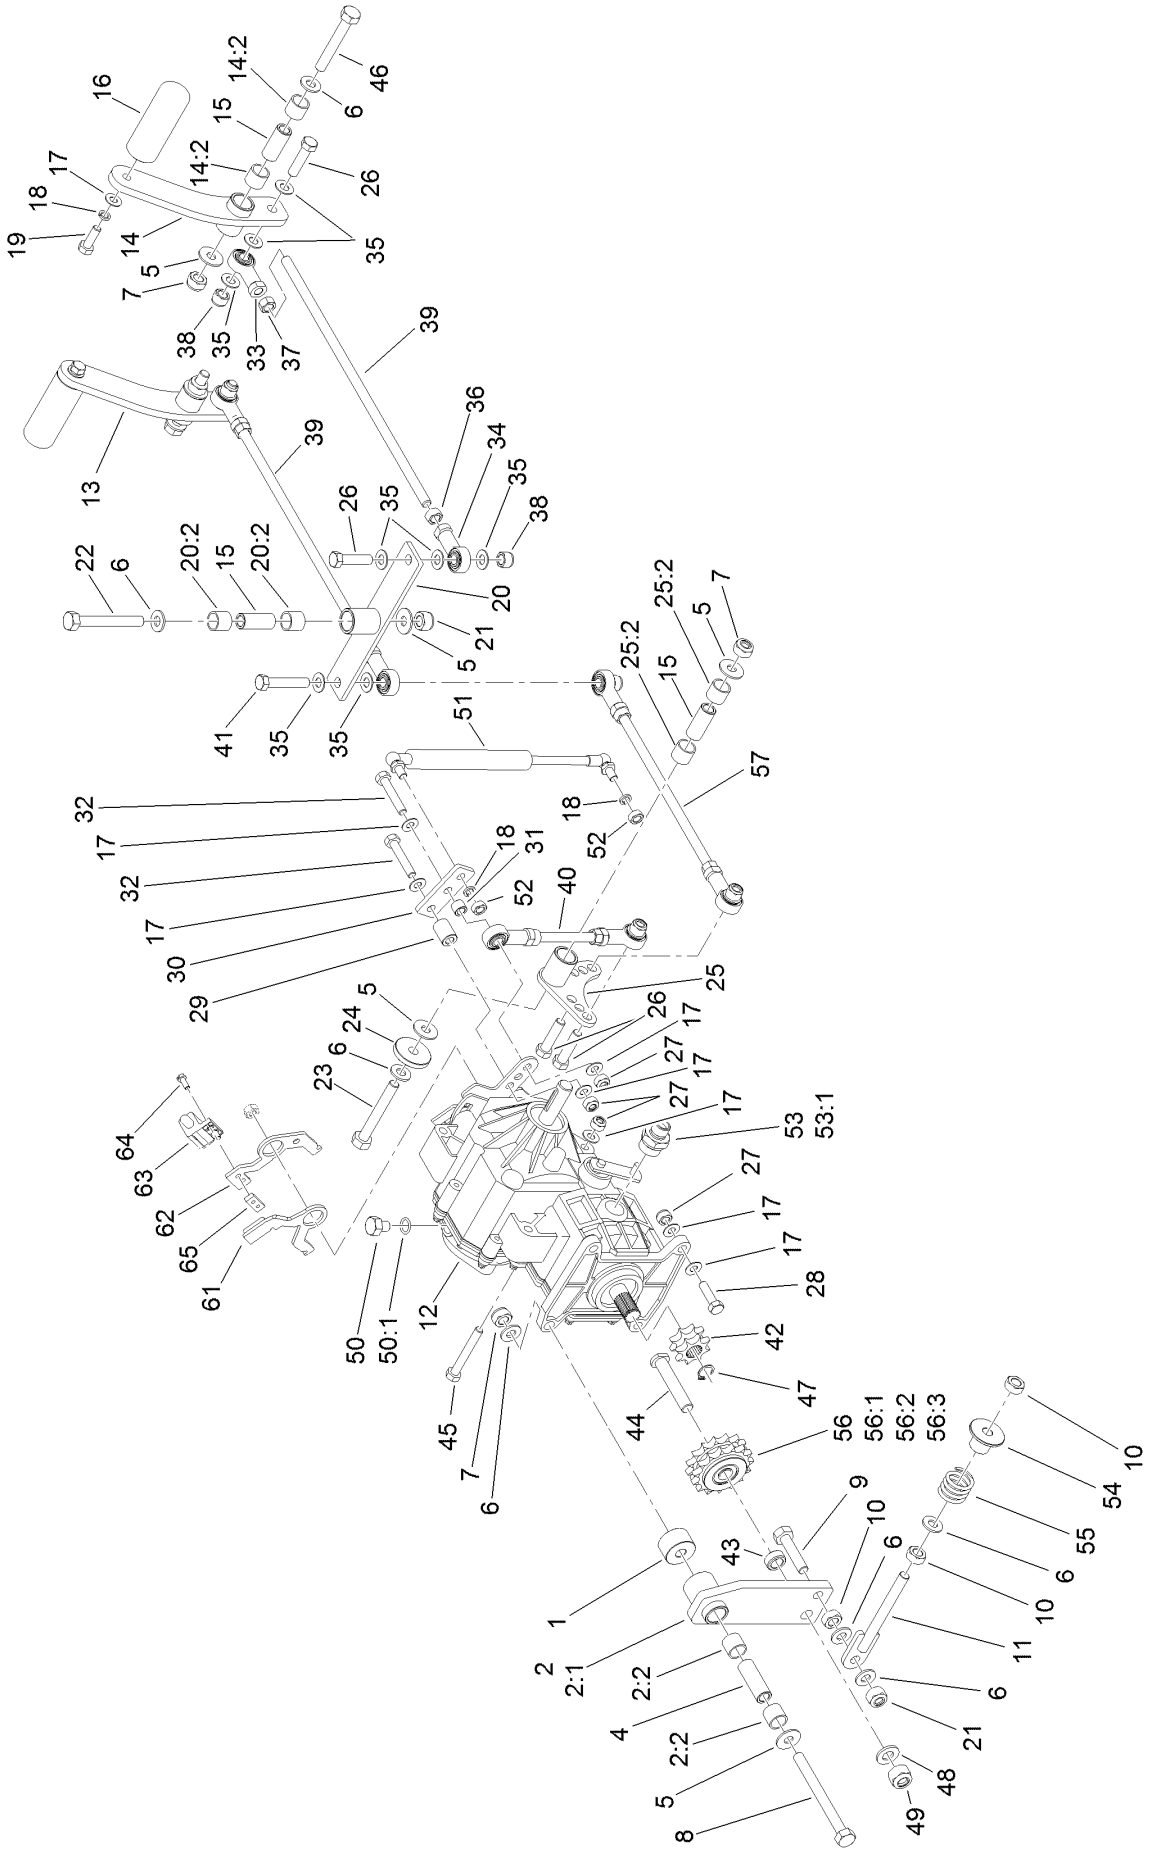


Transmission Control Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	111-5672	1	Spacer	31	111-5792	1	Bushing
2	127-7972	1	Idler Arm ASM	32	09654	2	Bolt
2:1	127-7970	1	Arm-Idler	33	111-5959	4	Joint-Ball
2:2	256-311	2	Bushing-Split	34	111-5748	4	Joint-Ball
4	127-7969	1	Bushing-Pivot	35	09271	14	Washer-Plain
5	HY03355	6	Washer-Plated	36	09213	4	Nut
6	ZWQ1J000U	8	Washer-Plain	37	111-5855	4	Nut-Hex, LH
7	ZNN1J000U	4	Nut-Hex, NI	38	09216	6	Nut-Hex, NI
8	09405	1	Bolt	39	111-5682	2	Rod-Linkage
9	ZDH1J045U	1	Screw-HH	40	111-5690	1	Arm-Linkage
10	09449	3	Nut	41	09121	1	Bolt
11	111-5736	1	Tensioning Rod ASM	42	127-5870	1	Sprocket-8 Tooth
12	111-6000	1	Transmission ASM	43	111-5712	1	Bushing-Idler, Gear
13	127-5948	1	Left Hand Motion Pedal ASM	44	111-5723	1	Bolt-Sprocket, Idler
13:2	256-311	2	Bushing-Split ●	45	09371	1	Bolt
14	127-5947	1	Right Hand Motion Pedal ASM	46	09399	2	Bolt
14:2	256-311	2	Bushing-Split	47	111-6009	1	Circlip-EXT
15	127-5938	4	Bushing-Pivot	48	HY09485	1	Washer-Plain
16	111-5727	2	Pedal	49	ZNN1L000U	1	Nut-Nyloc
17	09475	14	Washer	50	111-4788	1	Fitting-Straight
18	03469	4	Washer-Spring	50:1	70-06-165	1	Seal-O Ring
19	03162	2	Screw-HH	51	127-5896	1	Damper
20	127-5946	1	Pedal Rod Pivot ASM	52	ZNH1H000U	2	Nut-Hex
20:2	256-311	2	Bushing-Split	53	70-06-053	1	Adaptor-Boss
21	09447	2	Nut	53:1	63-06-111	1	Seal-O Ring
22	09404	1	Bolt	54	127-5829	1	Spacer
23	ZBH1J075U	1	Bolt-HH	55	127-5849	1	Spring-Compression
24	111-5674	1	Collar-Fixing	56	111-5768	1	Idler Sprocket ASM
25	127-7950	1	Lever Quadrant ASM	56:1	111-6116	1	Sprocket-Idler, 15T
25:2	256-311	2	Bushing-Split	56:2	111-6115	1	Spacer-Sprocket, Idler
26	09118	5	Bolt-HH	56:3	411027	2	Bearing
27	09441	6	Nut-Hex, NI	57	111-5697	1	Rod-Linkage, Long
28	09369	3	Screw-HH	61	131-1593	1	Arm
29	111-5722	1	Spacer-Damper	62	131-1594	1	Arm
30	111-5711	1	Plate-Damper	63	1-513051	1	Switch-Open, Normally
				64	32105-8	2	Screw-SHH
				65	1-633181	1	Plate-Tapped

● Not illustrated

Transmission Assembly No. 111-6000

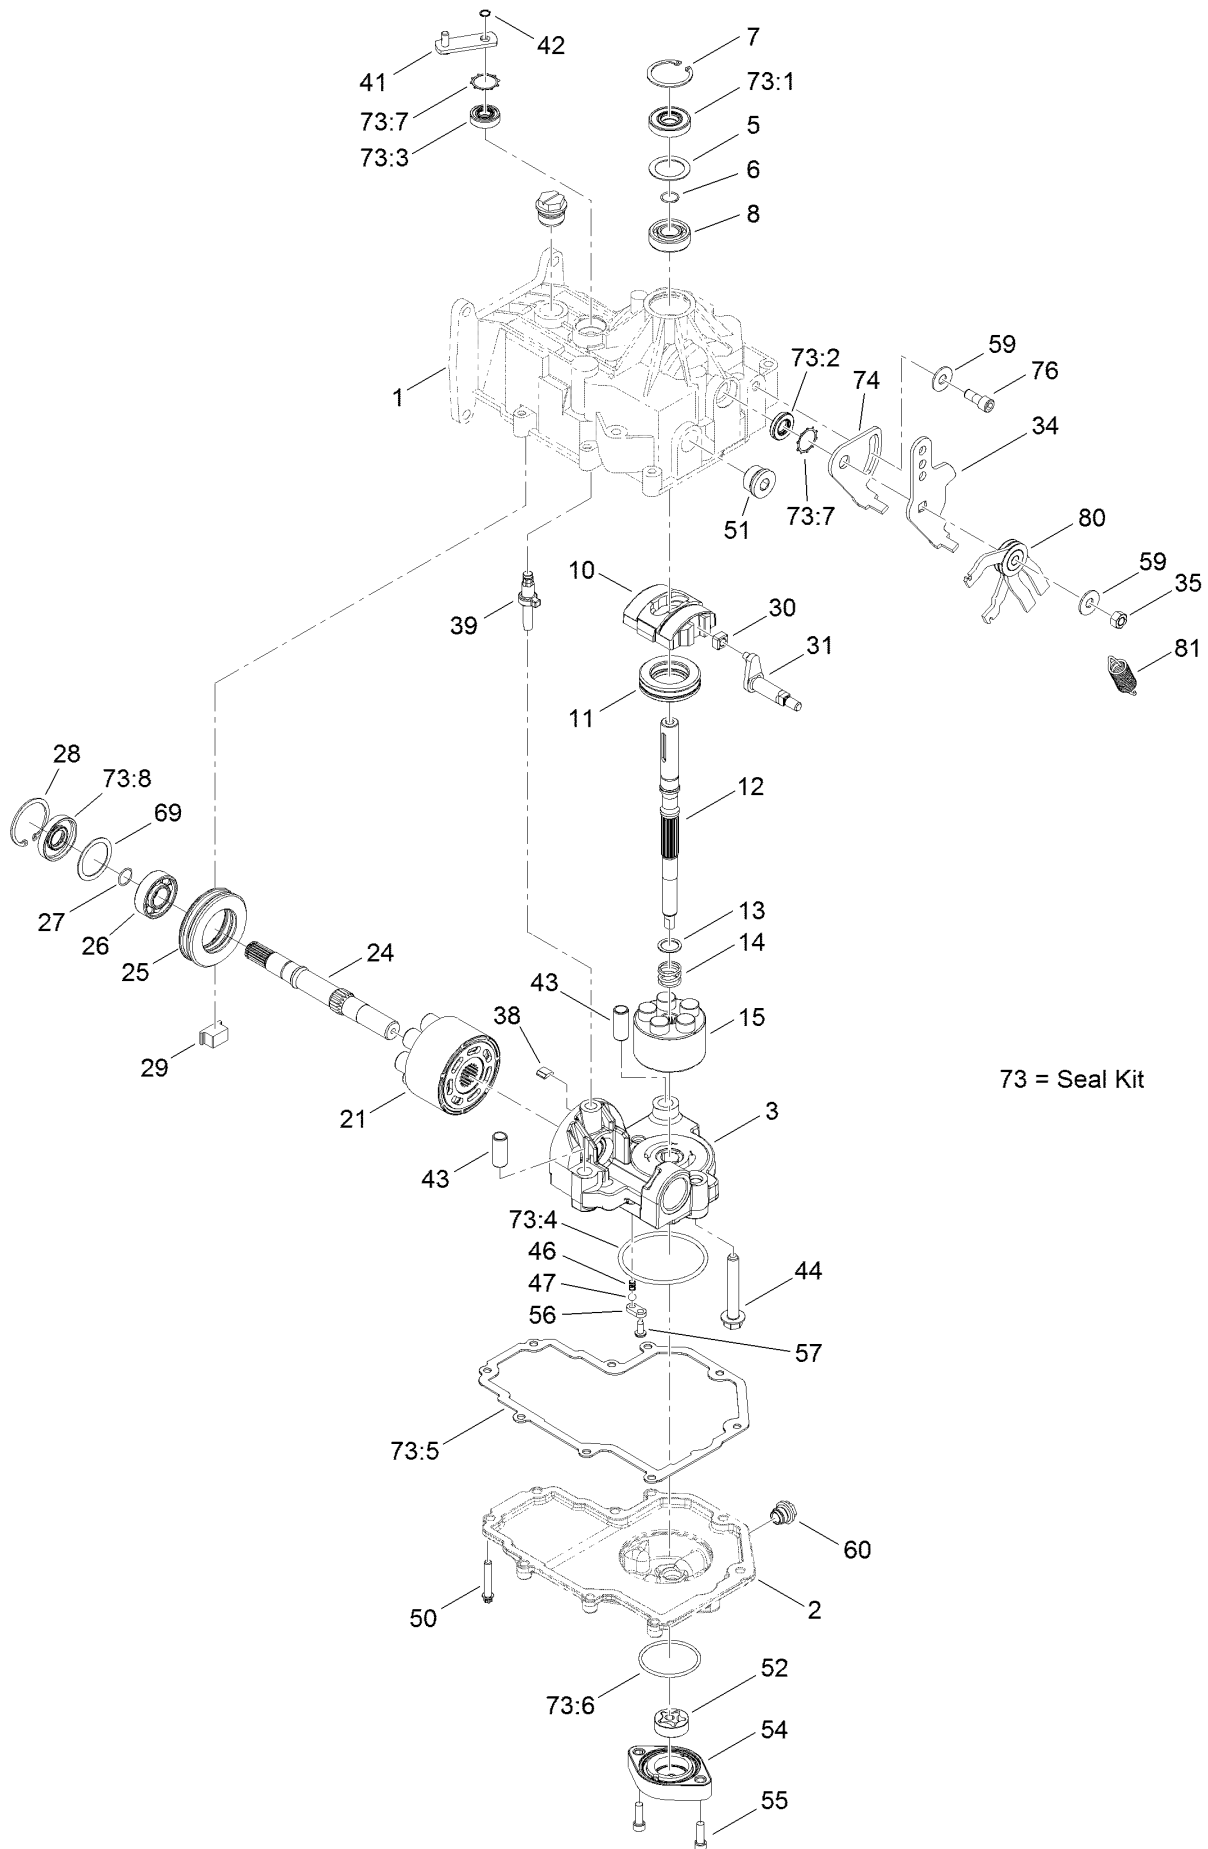


Transmission Assembly No. 111-6000 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Housing-Upper ●	43	94-1927	2	Pin
2		1	Housing-Lower ●	44	94-6926	3	Bolt
3	125-9162	1	Center Section Kit	46	108-8548	1	Spring-Helical
5	104-2104	1	Spacer	47	108-8549	1	Ball-1/4 Inch
6	119-5531	1	Ring-Retaining, Wire	50	94-1926	9	Bolt
7	119-5533	1	Ring-Retaining	51	125-9168	1	Plug
8	119-5530	1	Bearing-Ball	52	104-2122	1	Gerotor ASM
10	94-1907	1	Swashplate-Variable	54		1	Housing-Pump, Charge ●
11	94-6922	1	Bearing-Thrust	55	106-8758	2	Screw-HSH
12	125-9163	1	Shaft-Input	56	108-8550	1	Plate-Relief
13	120-5538	1	Washer	57	112-5910	1	Bolt-TAP
14	120-5537	1	Spring-Compression	59	5-4460	2	Washer-Pivot
15	103-2666	1	Cylinder Block Kit	60		1	Plug ●
21	94-1913	1	Cylinder Block ASM	69	104-5308	1	Spacer
24	125-9164	1	Shaft-Output	73	125-9176	1	Seal Kit
25	94-6923	1	Bearing-Thrust	73:1	119-5532	1	Seal-Lip
26	104-5311	1	Bearing-Ball	73:2	125-9166	1	Seal-Lip
27	104-5307	1	Ring-Retaining	73:3	92-6545	1	Seal-Lip
28	104-5309	1	Ring-Retaining	73:4	108-8545	1	O-Ring
29	125-9165	1	Retainer-Bearing, Motor	73:5		1	Gasket ●
30	94-1910	1	Guide-Slot	73:6	106-8757	1	O-Ring
31	104-2112	1	Trunnion ASM	73:7	125-9175	2	Ring-Retaining, Star
34	125-9167	1	Arm-Control	73:8	104-5310	1	Seal-Lip
35	32128-16	1	Nut-HHF	74	125-9177	1	Arm-Return
38	112-5892	1	Bypass Plate Kit	76	125-9178	1	Screw
39	94-1914	1	Actuator-Bypass	80	125-9179	1	Scissor Arm ASM
41	104-2117	1	Arm-Bypass	81	114-8462	1	Spring-Extension
42	936109	1	Ring-Retaining				

● Not serviced separately


Cylinder Head Assembly

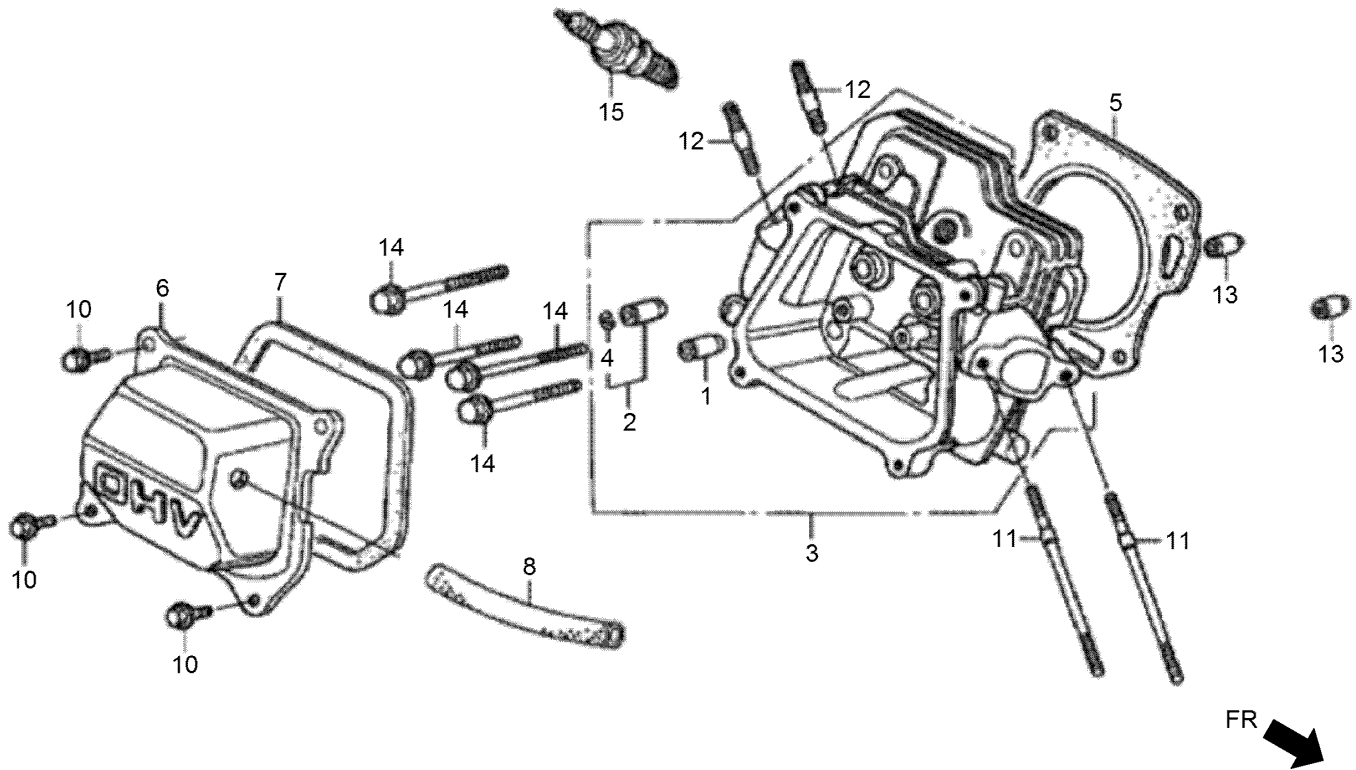

Cylinder Head Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-0118	1	Guide-Intake Valve	8	132-0234	1	Tube-Breather
2	132-0119	1	Guide-Exhaust Valve	10	132-4880	4	Bolt-Flange-6X12
3	132-0124	1	Cylinder Head ASM	11	132-0612	2	Bolt-Stud-6X112
4	132-0125	1	Clip-Valve Guide	12	132-0615	2	Bolt-Stud-8X32
5	132-0126	1	Gasket-Cylinder Head	13	132-0697	2	Dowel Pin-10X16
6	132-0127	1	Head Cover ASM	14	131-8226	4	Bolt-Flange-8X60
7	132-0133	1	Packing-Head Cover	15	131-8233	1	Sparkplug


Cylinder Barrel Assembly

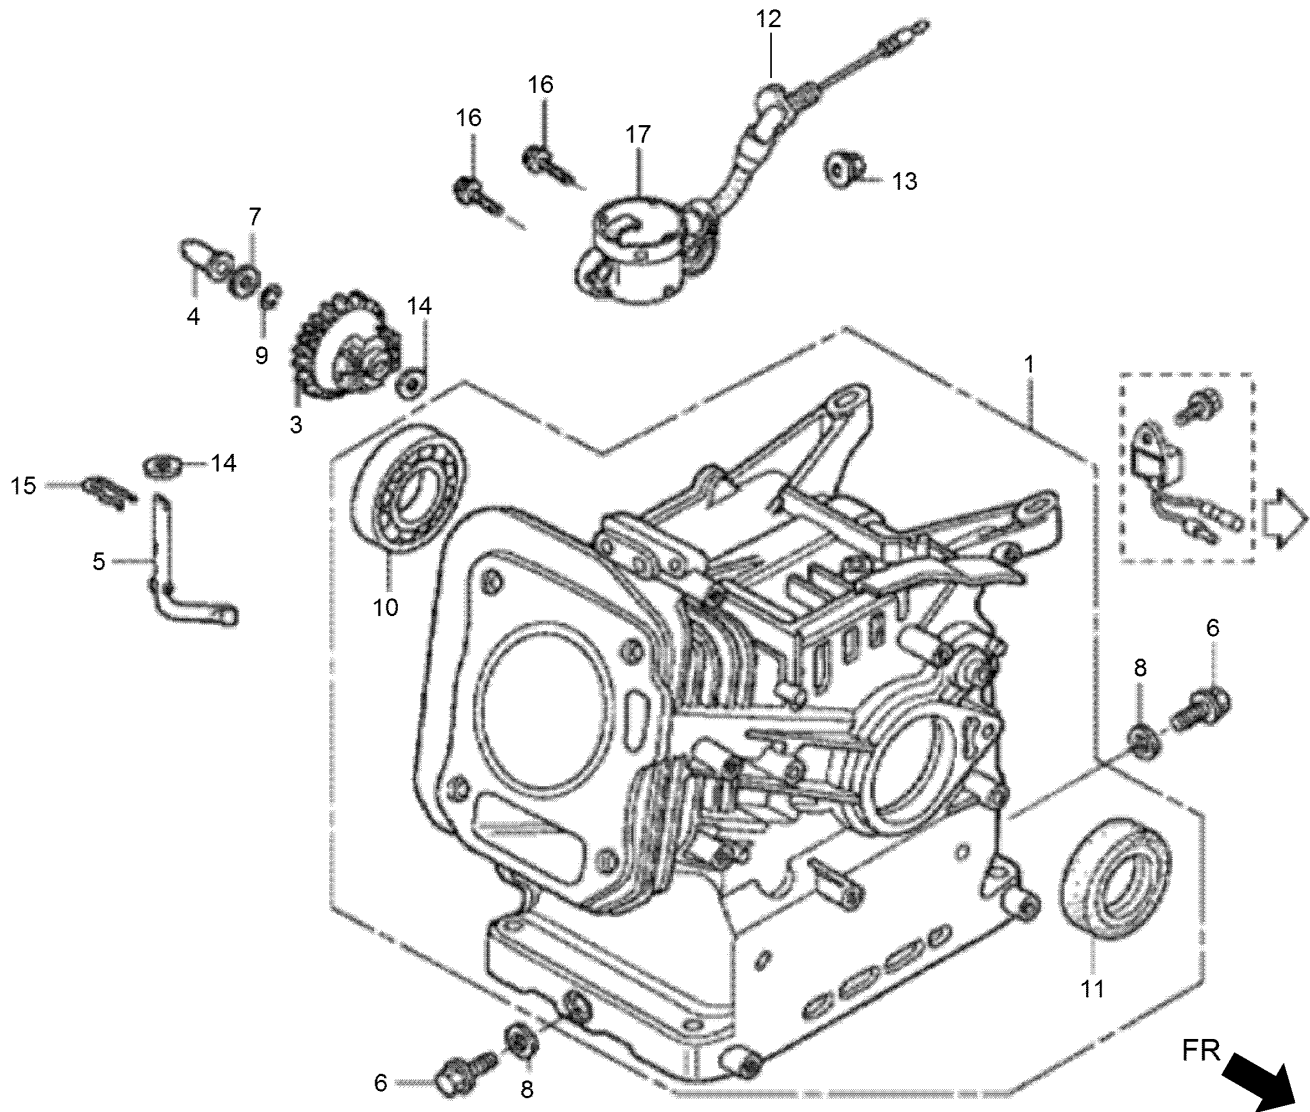

Cylinder Barrel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-0114	1	Barrel ASM-Cylinder	10	132-0649	1	Bearing-Radial Ball
3	132-0294	1	Governor ASM	11	132-0654	1	Oil Seal-25X41X6
4	132-0304	1	Slider-Governor	11	132-0658	1	Oil Seal-25X41.25X6
5	132-0307	1	Shaft-Governor Arm	12	132-0668	1	O-Ring-14Mm
6	132-0622	2	Bolt-Drain Plug	13	132-0686	1	Nut-Flange-10Mm
7	132-0635	1	Washer-Thrust-6Mm	14	132-0688	2	Washer-Plain-6Mm
8	132-0640	2	Washer-Drain Plug-10.2Mm	15	132-0693	1	Pin-Lock-8Mm
9	132-0642	1	Clip-Governor Holder	16	131-8221	2	Bolt-Flange-6X12
10	132-0651	1	Bearing-Radial Ball	17	132-0532	1	Switch ASM-Oil Level
10	132-0650	1	Bearing-Radial Ball				


Crankcase Cover Assembly

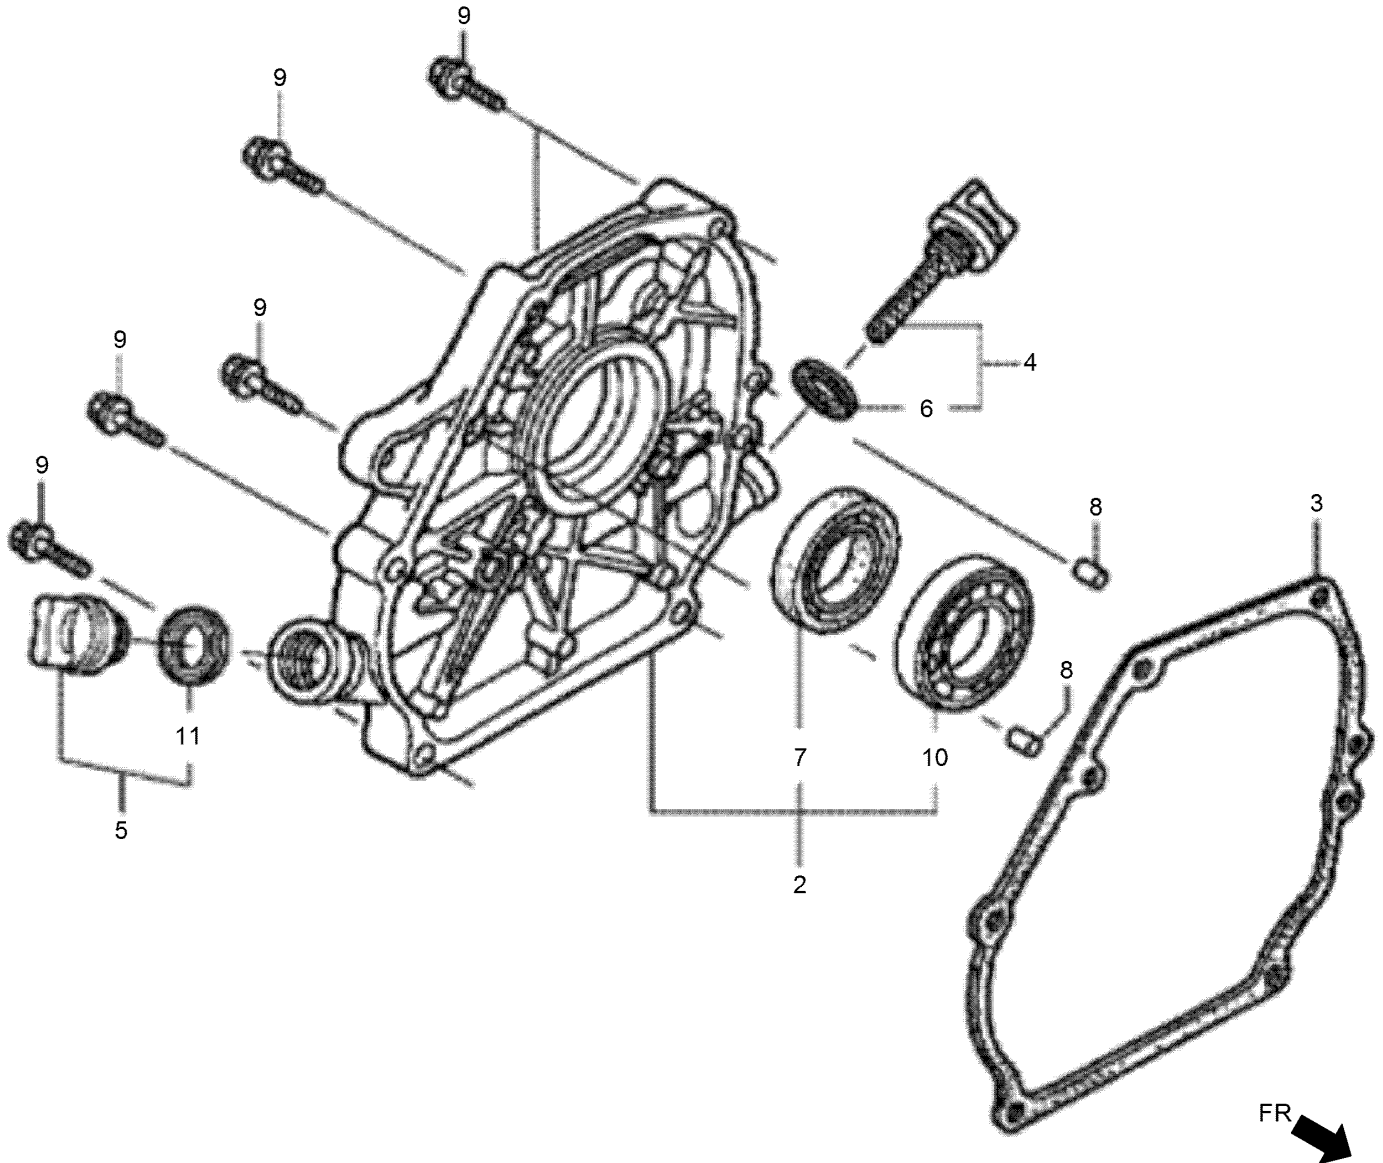

Crankcase Cover Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	132-0103	1	Cover ASM-Crankcase	7	132-0658	1	Oil Seal-25X41.25X6
3	132-0108	1	Packing-Case Cover	8	132-0695	2	Dowel Pin-8X14
4	132-0220	1	Cap ASM-Oil Filler	9	131-8225	6	Bolt-Flange-8X32
5	132-0221	1	Cap ASM-Oil Filler	10	131-8227	1	Bearing-Radial Ball-6205
6	132-0224	1	Packing-Oil Filler Cap	11	132-0224	1	Packing-Oil Filler Cap
7	132-0654	1	Oil Seal-25X41X6				

Crankshaft Assembly

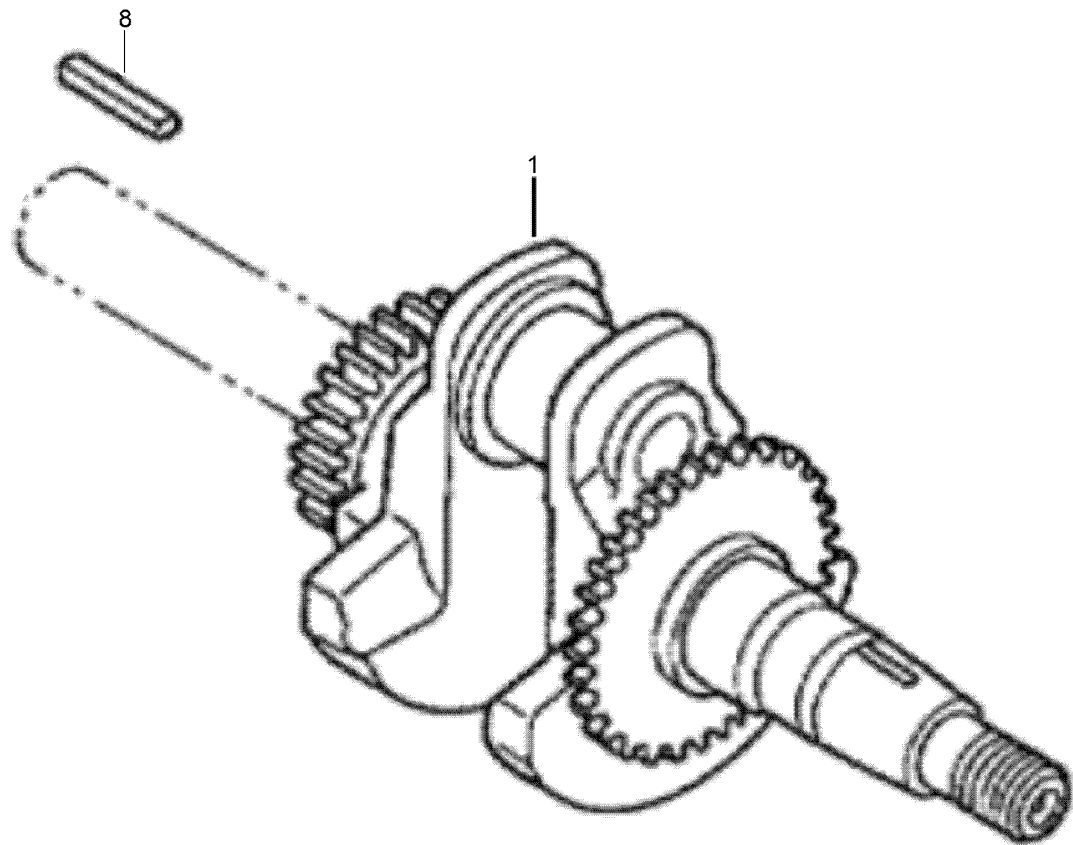


FR 

Crankshaft Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-0164	1	Crankshaft ASM
8	132-0647	1	Key-5X5X33

Piston and Connecting Rod Assembly

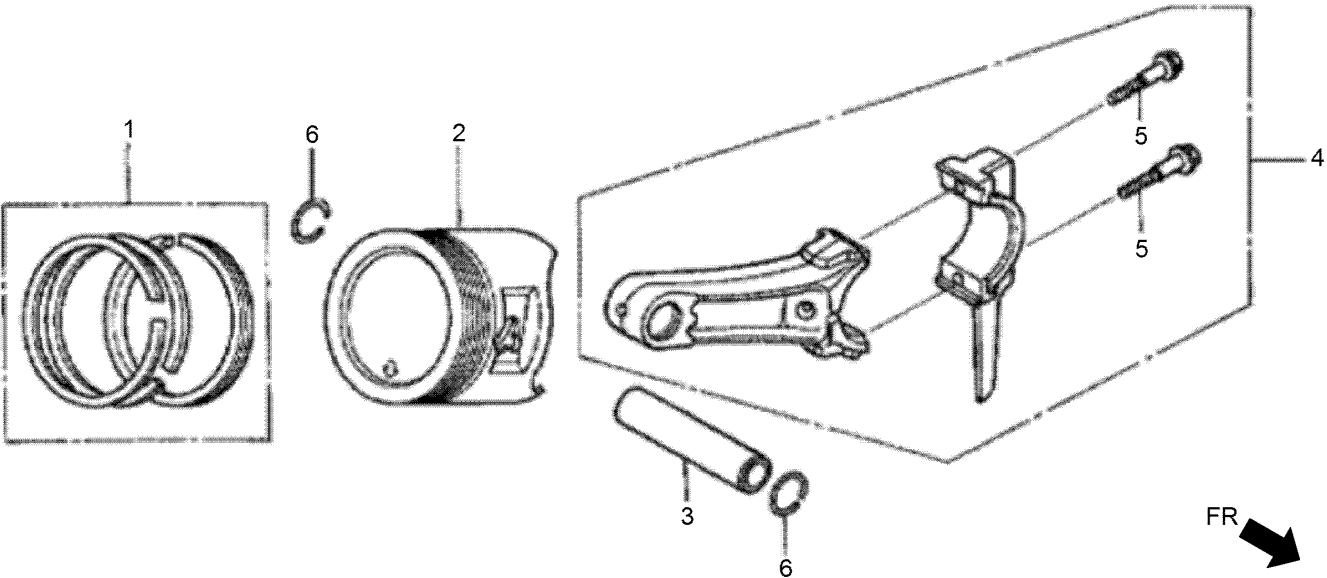


Piston and Connecting Rod Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-0137	1	Ring Set-Piston (STD)
1	132-0138	1	Ring Set-Piston (STD)
2	132-0144	1	Piston
3	132-0150	1	Pin-Piston

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	132-0155	1	Rod ASM-Connecting
5	132-0573	2	Bolt-Connecting Rod
6	132-0637	2	Clip-Piston Pin-18Mm


Camshaft Assembly

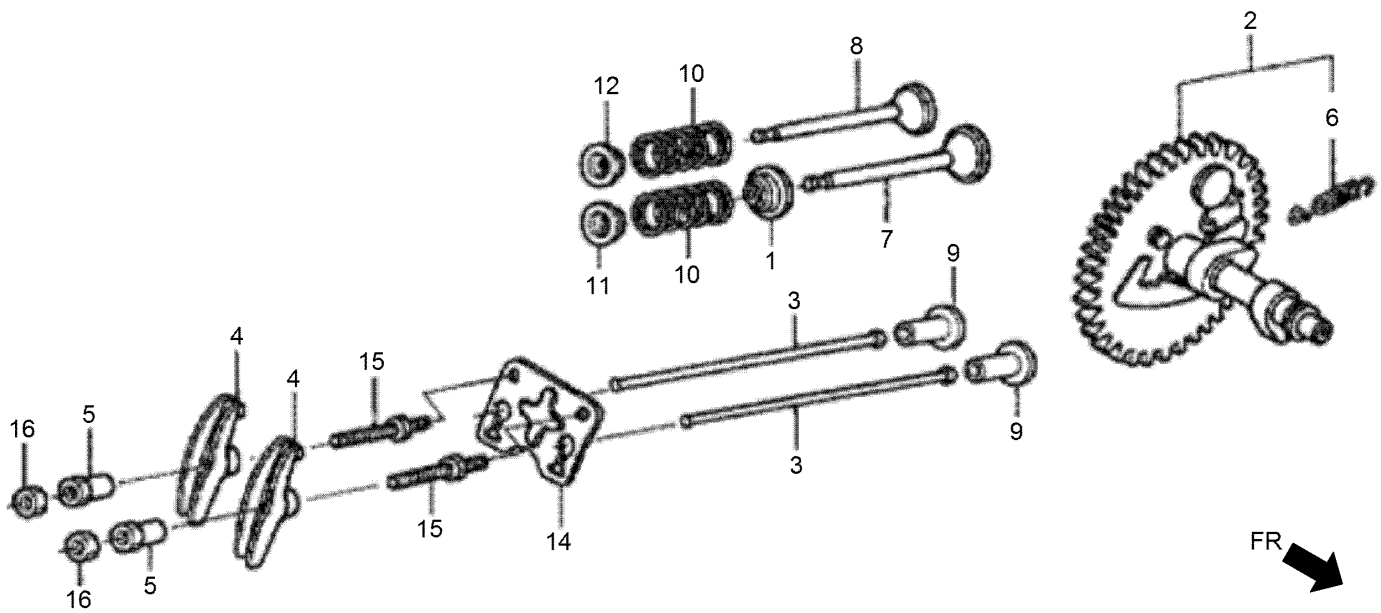

Camshaft Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-0120	1	Seal-Valve Stem	10	132-0206	2	Spring-Valve
2	132-0172	1	Camshaft ASM	11	132-0211	1	Retainer-Intake Valve Spring
3	132-0181	2	Rod-Push	12	132-0211	1	Retainer-Intake Valve Spring
4	132-0184	2	Arm-Valve Rocker	14	132-0215	1	Plate-Push Rod Guide
5	132-0188	2	Pivot-Rocker Arm	15	132-0592	2	Bolt-Pivot-8Mm
6	132-0191	1	Spring-Weight Return	16	132-0629	2	Nut-Pivot Adjusting
7	132-0194	1	Valve-Intake				
8	132-0198	1	Valve-Exhaust				
9	132-0203	2	Lifter-Valve				


Recoil Starter Assembly

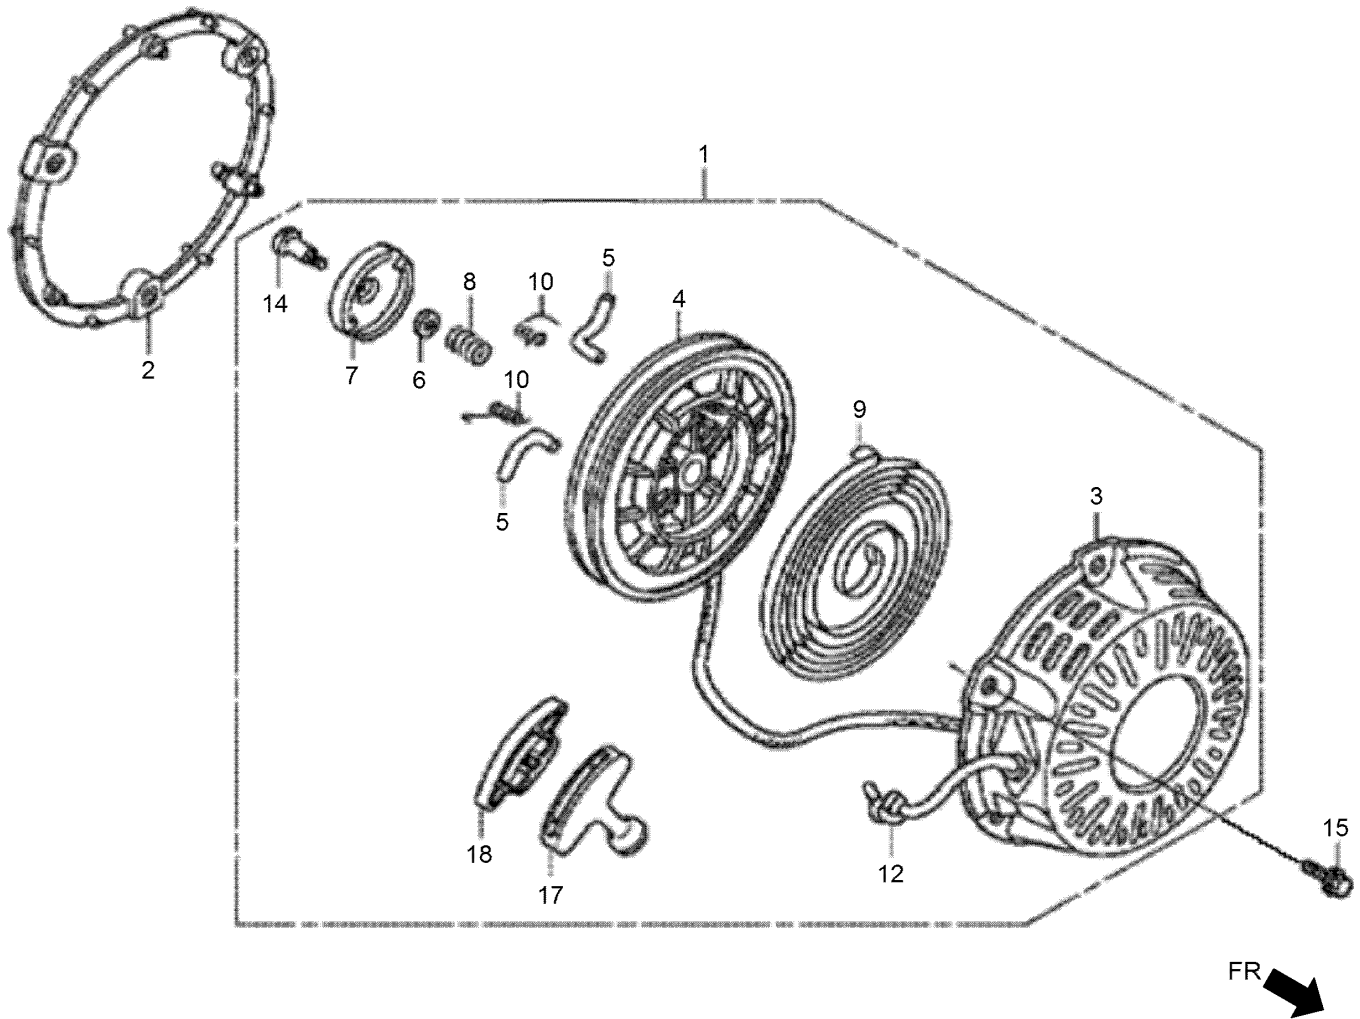

Recoil Starter Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-0477	1	Starter ASM-Recoil	8	132-0494	1	Spring-Friction
2	132-0485	1	Spacer-Recoil Starter Mtg (R280R)	9	132-0495	1	Spring-Recoil Starter
3	132-0486	1	Recoil Starter Case ASM (R280)	10	132-0497	2	Spring-Return
4	132-0489	1	Reel-Recoil Starter	12	132-0507	1	Rope-Recoil Starter
5	132-0491	2	Ratchet-Starter	14	132-0579	1	Screw-Setting
6	132-0492	1	Plate-Friction	15	131-8223	3	Bolt-Flange-6X18
7	132-0493	1	Guide-Ratchet	17	132-0502	1	Knob-Recoil Starter
				18	132-0509	1	Knob-Reinforcement


Fan Cover Assembly

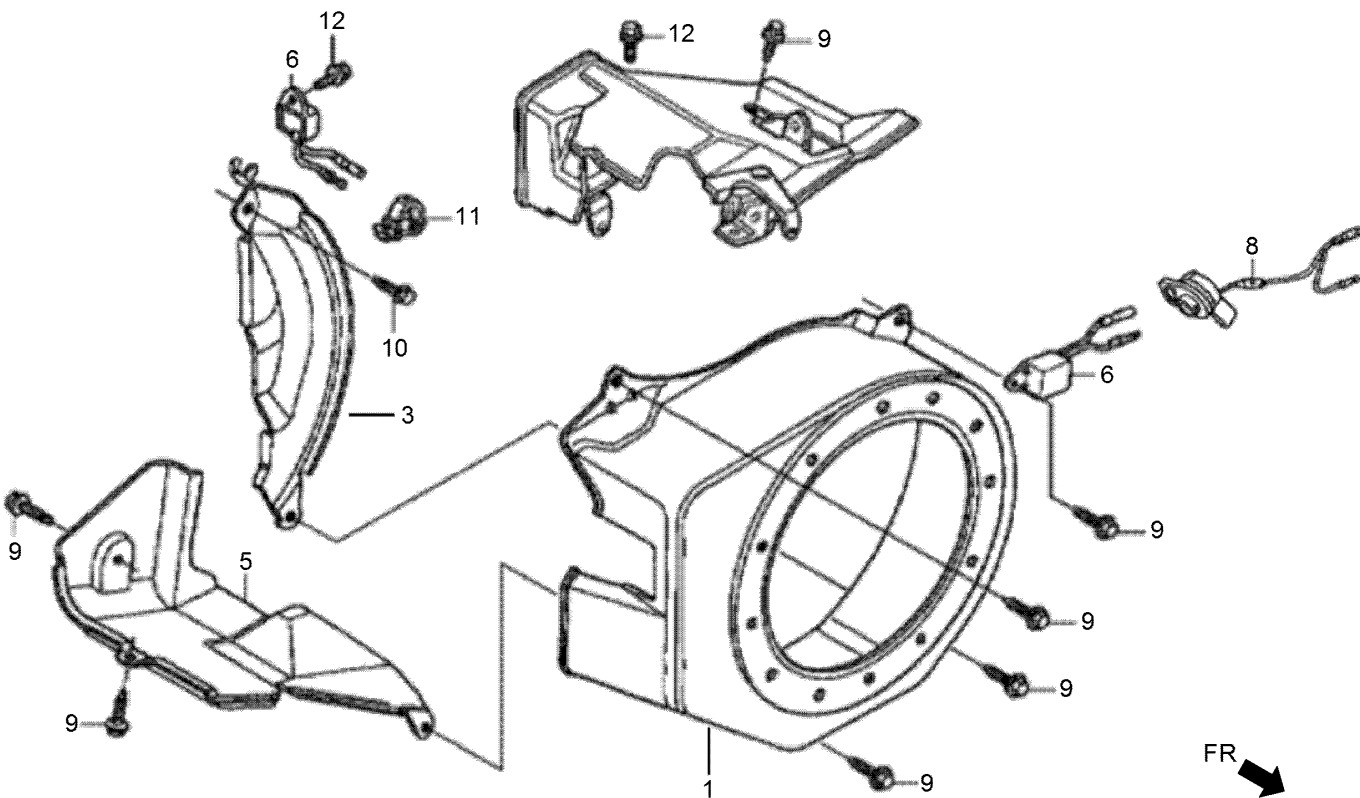

Fan Cover Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-0464	1	Fan Cover ASM (R280)	9	132-4880	6	Bolt-Flange-6X12
3	132-0469	1	Side Plate ASM	10	132-0605	1	Bolt-Flange-6X20
5	132-0473	1	Shroud ASM	11	132-0641	1	Clip-Harness
6	132-0529	1	Alert Unit-Oil	12	131-8220	1	Bolt-Flange-6X8
8	132-0530	1	Switch ASM-Engine Stop				


Carburetor Assembly

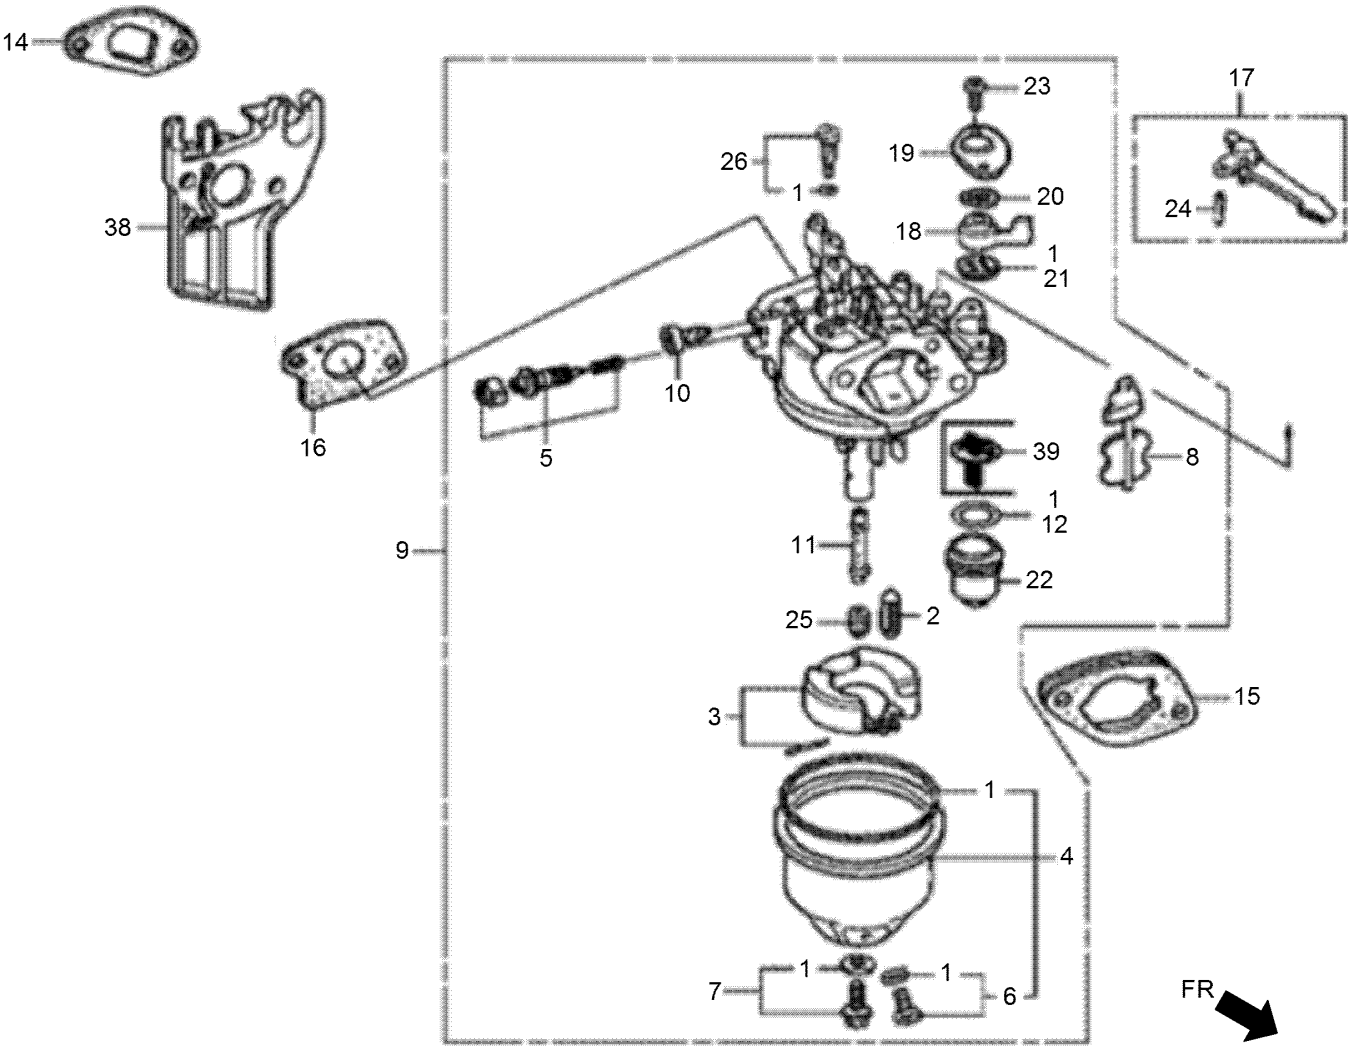

Carburetor Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-0239	1	Gasket Set	16	132-0287	1	Packing-Carburetor
2	132-0241	1	Valve Set-Float	17	132-0343	1	Choke Lever ASM
3	132-0242	1	Float Set	18	132-0359	1	Lever-Cock
4	132-0247	1	Chamber Set-Float	19	132-0360	1	Plate-Lever Setting
5	132-0250	1	Screw Set-Pilot	20	132-0362	1	Spring-Cock Lever
6	132-0251	1	Screw Set-Drain	21	132-0364	1	Packing-Fuel Cock
7	132-0253	1	Screw Set	22	132-0366	1	Cup-Fuel Strainer
8	132-0257	1	Choke Set	23	132-0676	2	Screw-Pan-3X6
9	132-0265	1	Carburetor ASM	24	132-0698	1	Pin-Spring-2X12
10	132-0268	1	Screw-Throttle Stop	25	131-8237	1	Jet-Main, No. 75
11	132-0272	1	Nozzle-Main	26	131-8239	1	Jet Set-Pilot, No. 40
12	132-0276	1	Packing-Fuel Strainer Cup	38	132-0278	1	Insulator-Carburetor
14	132-0281	1	Packing-Insulator	39	132-0365	1	Filter-Cup
15	132-0284	1	Carburetor Spacer ASM				


Air Cleaner Assembly

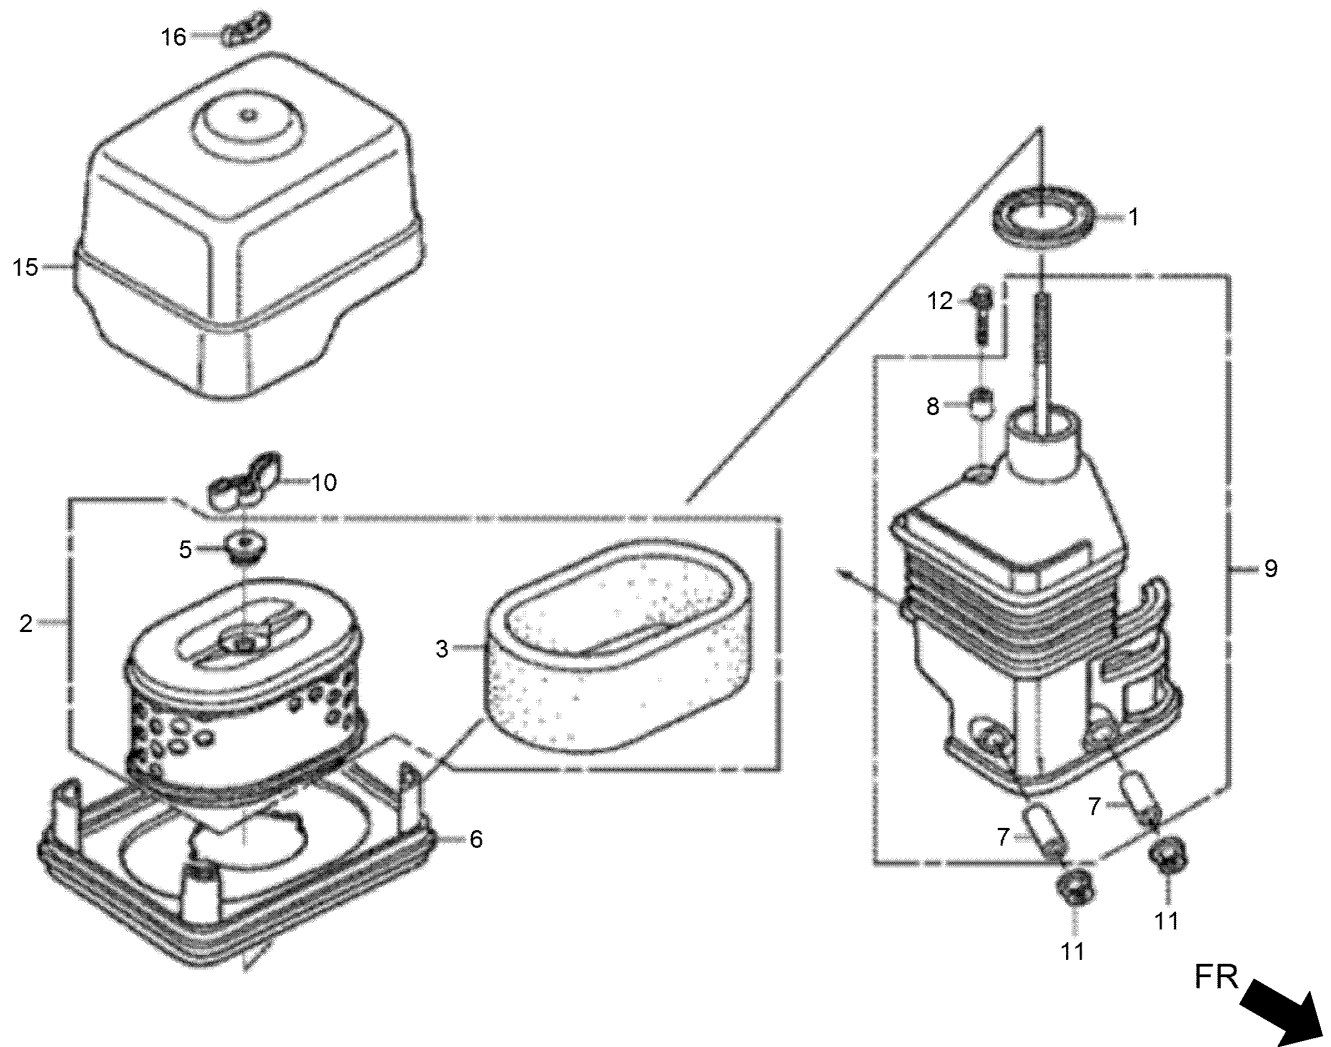

Air Cleaner Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-0291	1	Packing-Elbow	9	132-0396	1	Elbow Comp-Air Cleaner
2	132-0367	1	Element-Air Cleaner	10	132-0631	1	Nut-Tool Box Setting
3	132-0372	1	Filter-Outer	11	132-4881	2	Nut-Flange-6Mm
5	132-0391	1	Grommet-Air Cleaner	12	131-8224	1	Bolt-Flange-6X20
6	132-0392	1	Nose-Silencer	15	132-0388	1	Cover-Air Cleaner
7	132-0393	2	Collar-Air Cleaner	16	132-0630	1	Nut-Air Cleaner
8	132-0394	1	Collar B-Air Cleaner				


Muffler Assembly

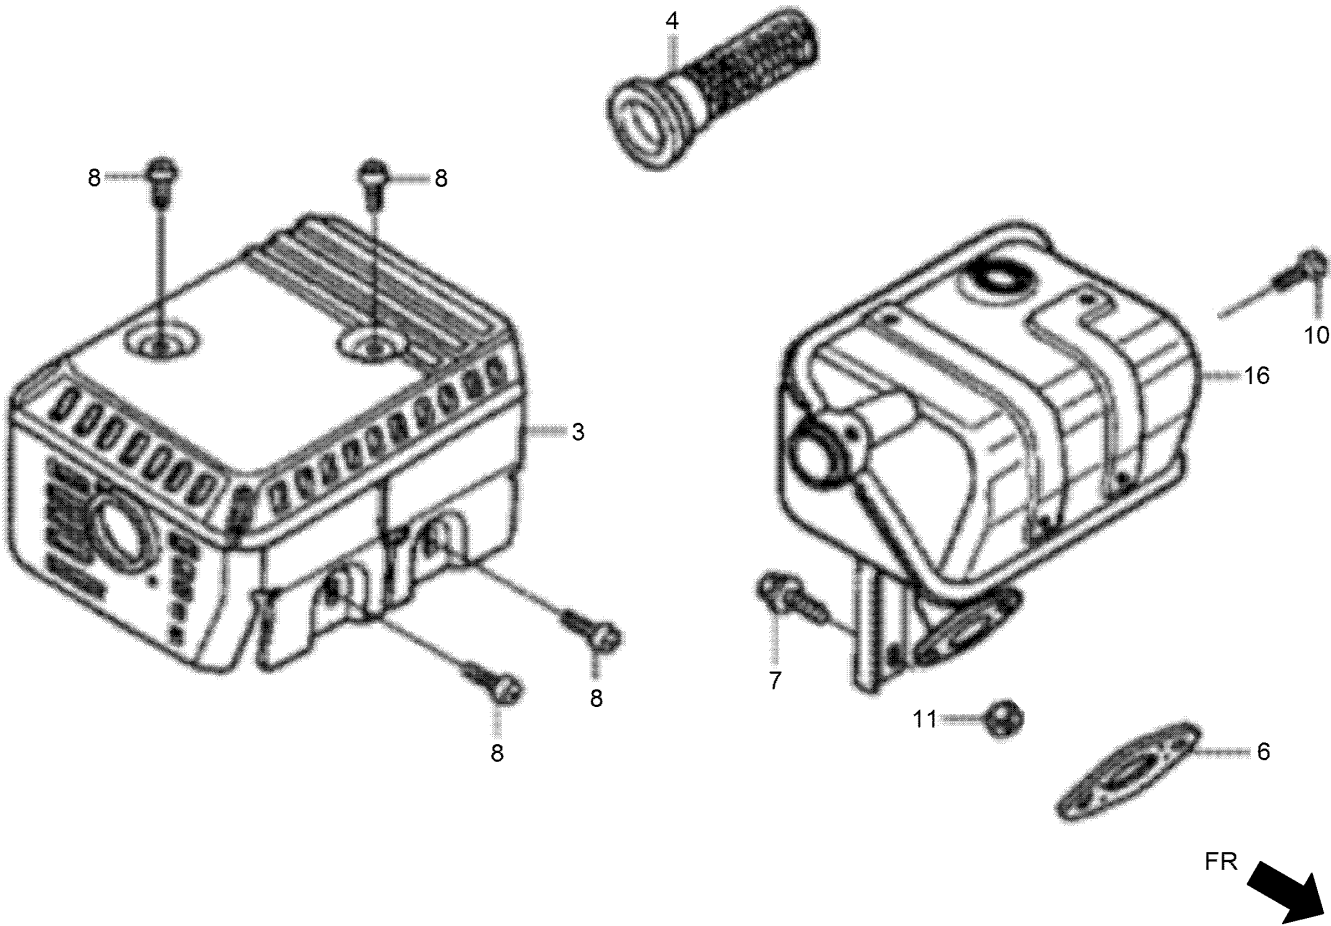

Muffler Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
3	132-0453	1	Muffler Protector ASM	8	132-0616	4	Screw-Tapping-5X8
4	132-0456	2	Arrester-Spark	10	132-0617	1	Screw-Tapping-4X6
6	132-0457	2	Gasket-Muffler	11	132-0684	2	Nut-Hex-8Mm
7	132-0600	1	Bolt-Flange-6X13	16	132-0446	1	Muffler ASM


Fuel Tank Assembly

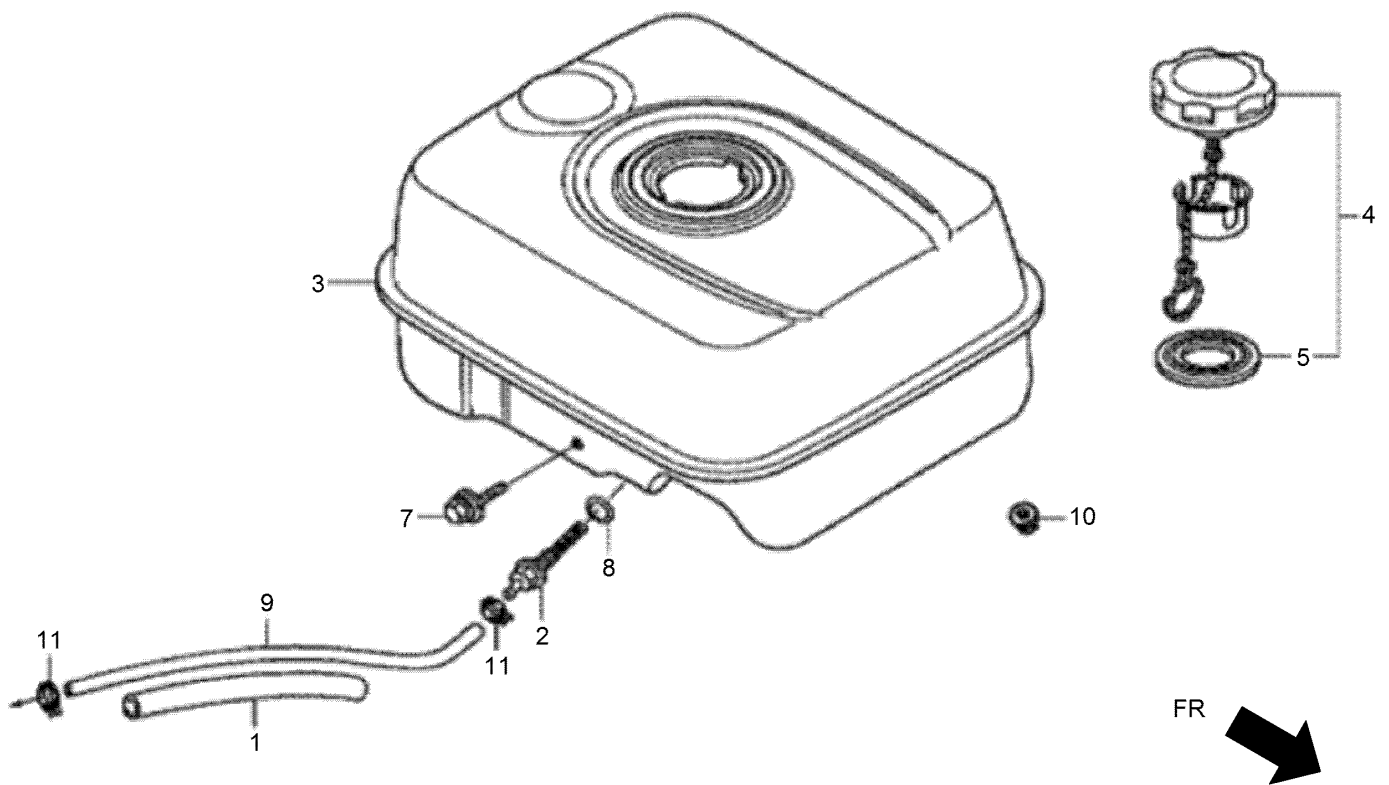

Fuel Tank Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-0349	1	Rubber-Supporter	7	132-0583	1	Bolt-Flange-6X34
2	132-0361	1	Joint-Fuel Tank	8	132-0668	1	O-Ring-14Mm
3	132-0397	1	Fuel Tank ASM (Nh31)	9	132-0669	1	Tube-Fuel-4.5X145
4	132-0414	1	Fuel Filler Cap ASM	10	132-4881	2	Nut-Flange-6Mm
5	132-0431	1	Packing-Fuel Filler Cap	11	131-8211	2	Clamp-Tube


Flywheel Assembly

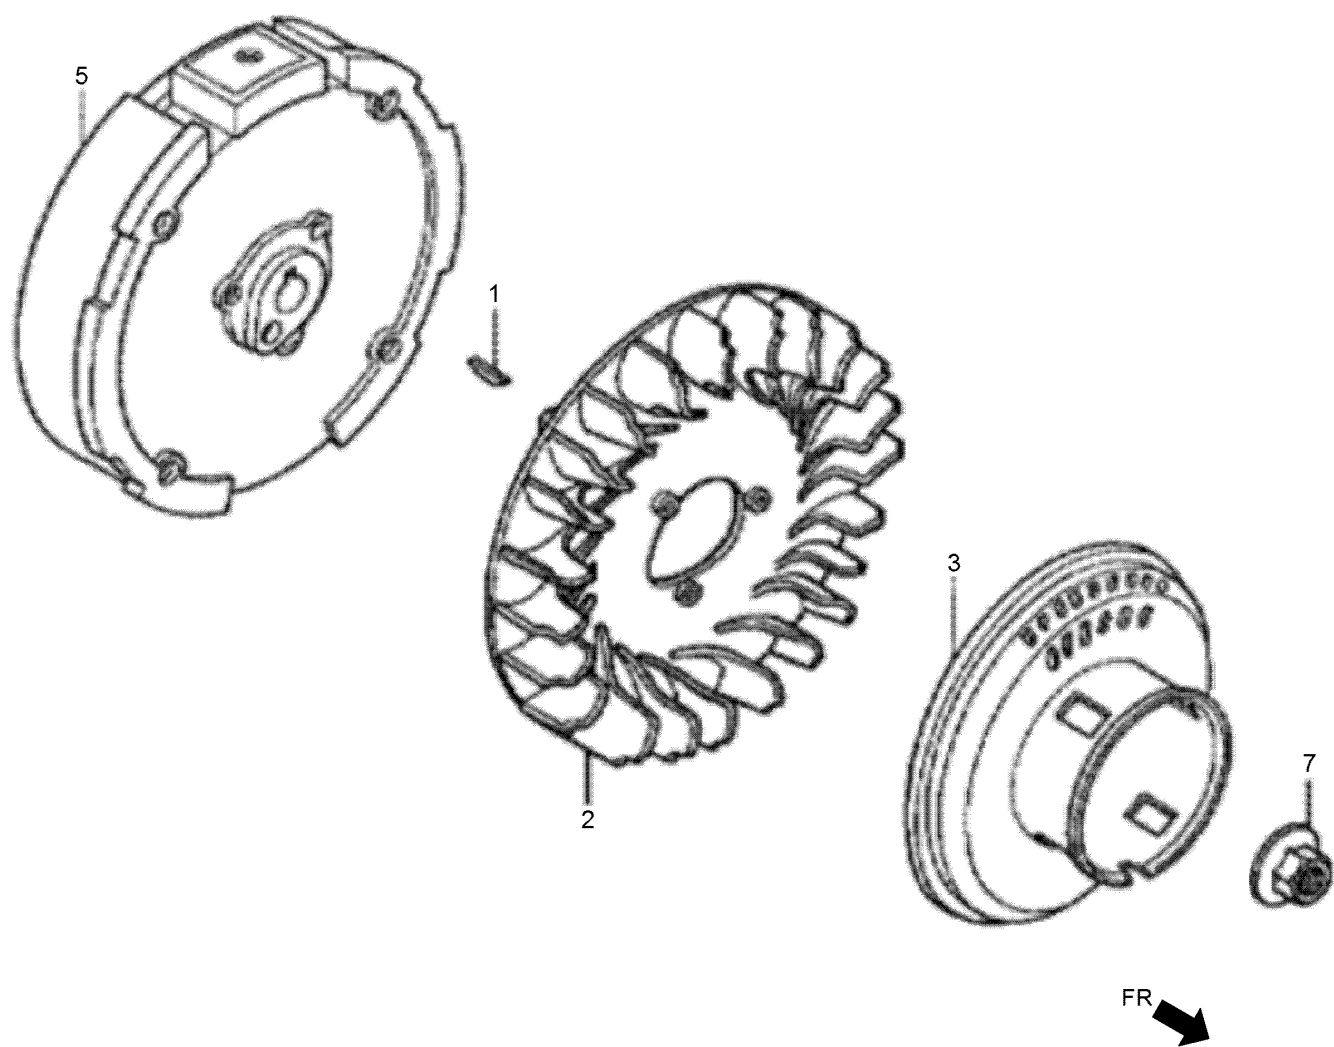

Flywheel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-0167	1	Key-Special Woodruff-25X18	3	132-0499	1	Starter Pulley ASM
2	132-0461	1	Fan-Cooling	5	132-0519	1	Flywheel ASM
				7	132-0625	1	Nut-Special-14Mm

Ignition Coil Assembly

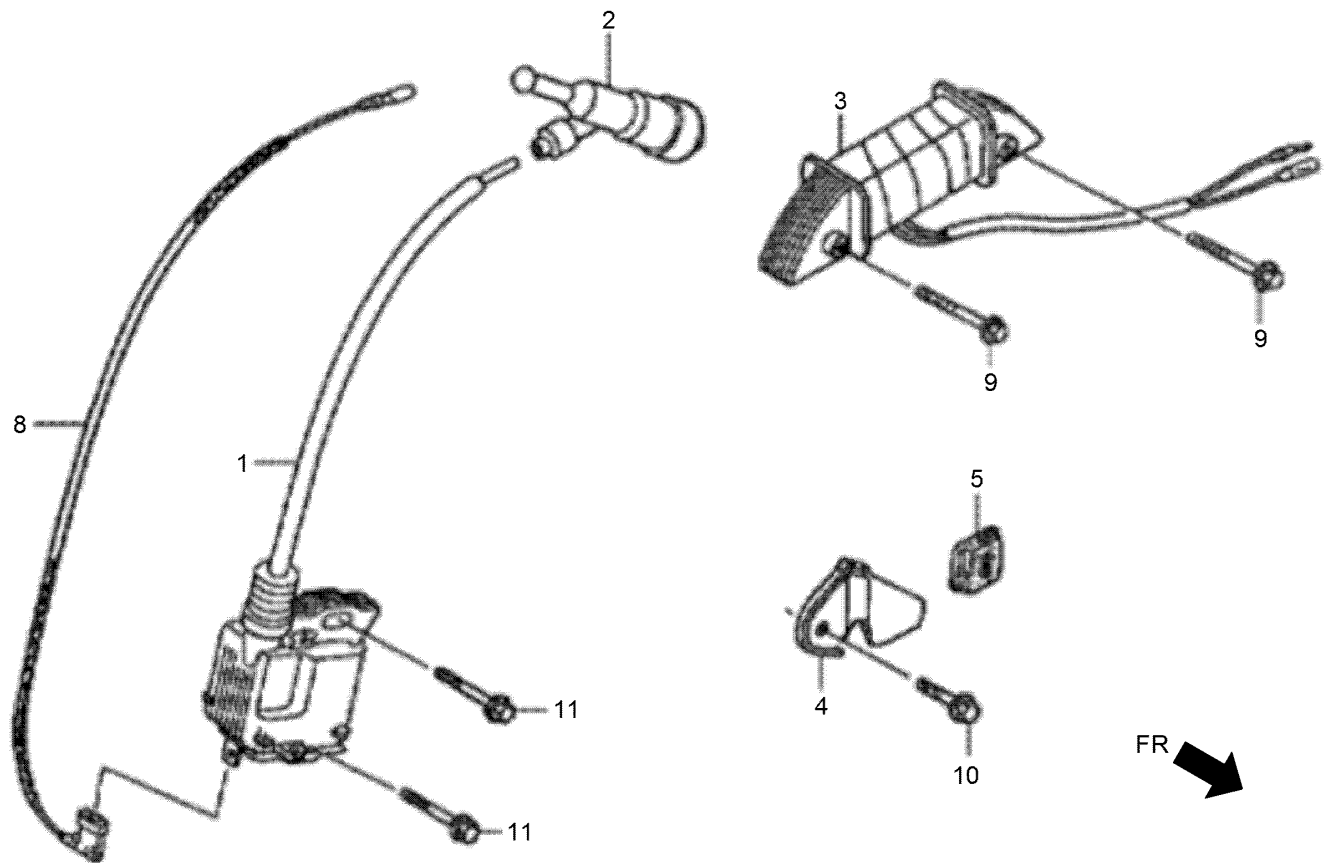


FR 

Ignition Coil Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-0510	1	Coil ASM-Ignition	8	132-0533	1	Cord-Stop Switch
2	132-0515	1	Cap ASM-Noise Suppressor	9	132-0596	2	Bolt-Flange-6X28
3	132-0521	1	Coil ASM-Lamp	10	132-0604	1	Bolt-Flange-5X10
4	132-0522	1	Clamper-Cord	11	132-0620	2	Bolt-Flange-6X25
5	132-0523	1	Grommet-Cord				


Control Assembly

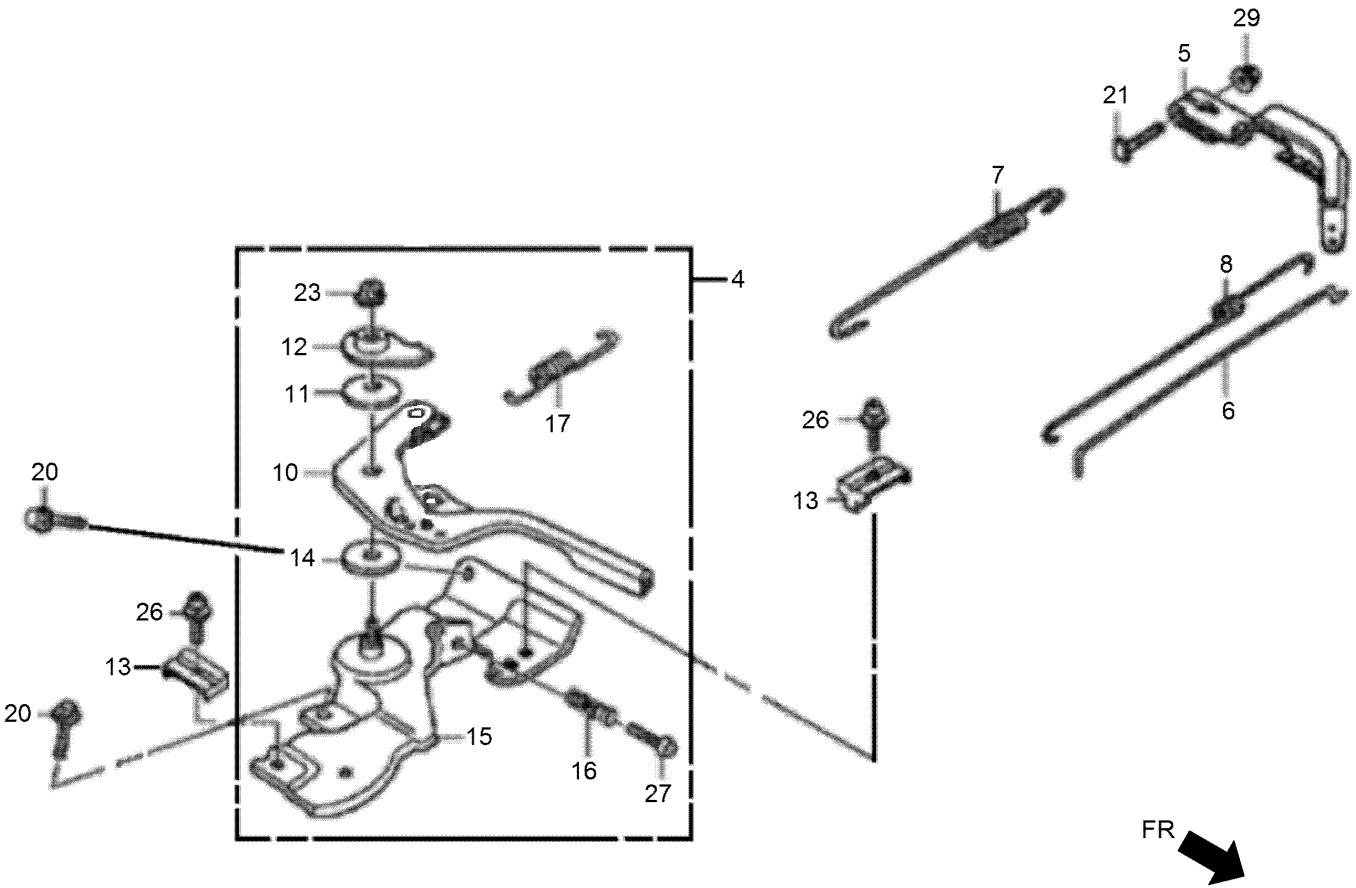

Control Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	132-0292	1	Control ASM	15	132-0337	1	Control Base ASM
5	132-0311	1	Arm-Governor	16	132-0340	1	Spring-Control Adjusting
6	132-0316	1	Rod-Governor	17	132-0341	1	Spring-Cable Return
7	132-0320	1	Spring-Governor	20	132-4880	2	Bolt-Flange-6X12
8	132-0324	1	Spring-Throttle Return	21	132-0597	1	Bolt-Governor Arm
10	132-0328	1	Lever-Control	23	132-0619	1	Nut-Self-Lock-6Mm
11	132-0329	1	Spring-Lever	26	132-0678	1	Screw-Pan-5X16
12	132-0330	1	Washer-Control Lever	27	132-0679	1	Screw-Pan-5X25
13	132-0331	1	Holder-Cable	29	132-4881	1	Nut-Flange-6Mm
14	132-0332	1	Spacer-Control Lever				


Label Assembly

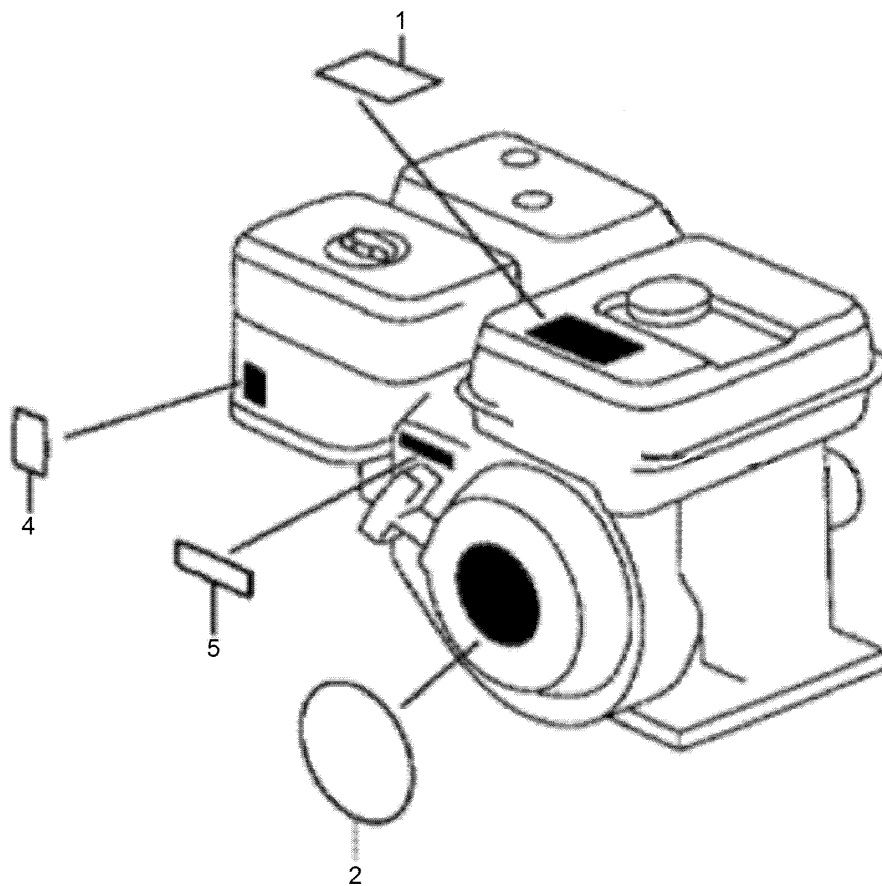

Label Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-0559	1	Mark-Operator Caution	4	132-0566	1	Mark-Choke
2	132-0561	1	Emblem	5	132-0567	1	Mark-Throttle Indication



Wrench

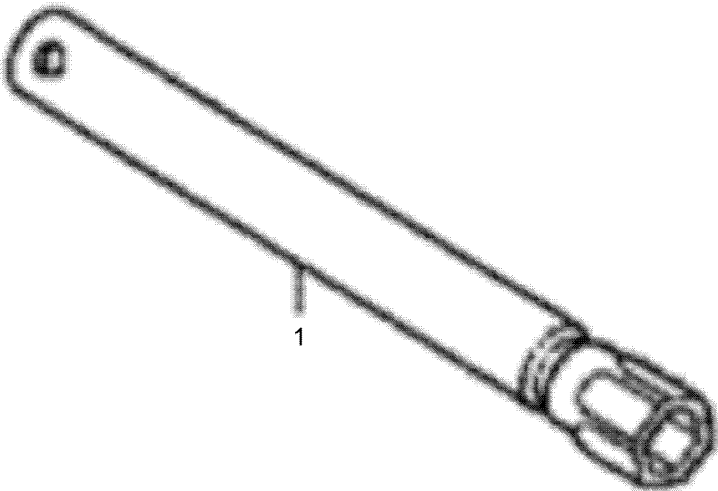

Wrench (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-0572	1	Wrench-Spark Plug


Decal Assembly

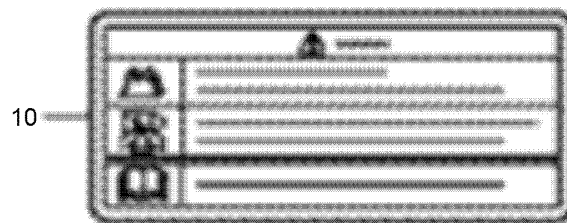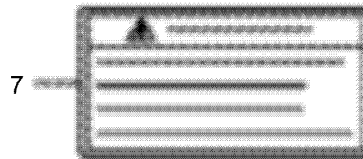

Decal Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	132-0552	1	Mark-Operator Caution (English)	7	132-0571	1	Mark-Exhaust Caution (French)
5	132-0553	1	Mark-Operator Caution (French)	10	132-0557	1	Mark-Operator Caution (Chinese)
7	132-0570	1	Mark-Exhaust Caution (English)				

Gasket Kit

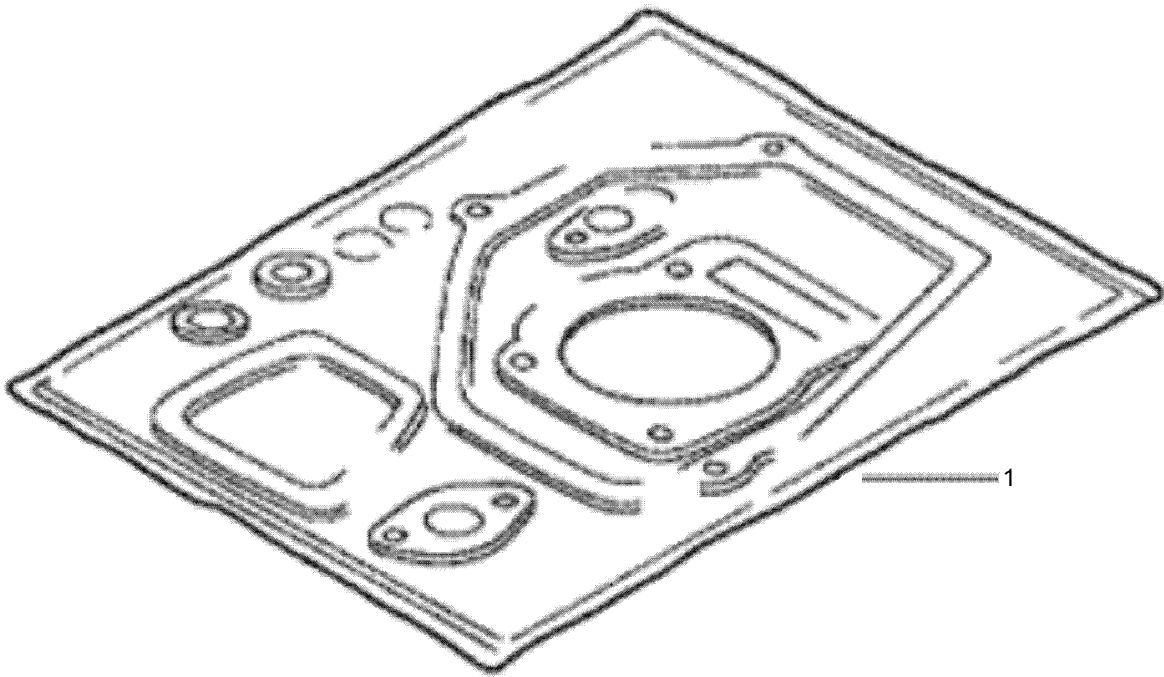

Gasket Kit (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-0100	1	Gasket Kit

Attachments and Accessories

For 44912 GreensPro 1240 Greens Roller

Product Name	Model/Part
Filter-oil, Hyd	1-633750
Premium All Season Hydraulic Fluid (5 Gallon Pail).....	108-1178
Premium Engine Oil 10w30 (5 Gallon Pail)	121-6393
Armrest Kit.....	44908
Roller Scraper Kit.....	44911
LED Light Kit.....	44923
Wireless Hour Meter Kit.....	44927

Notes:

Notes:

Notes:



Count on it.