



Count on it.

Form No. 3389-803 Rev A

Parts Catalog

GreensPro™ 1240 Greens Roller

Model No. 44912—Serial No. 315000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HP: high pressure

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: low pressure

LPG: Liquefied Petroleum Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping

TTH: torx truss head

Contents

Steering Roller Assembly 4

Complete Long Steering Roller Assembly No. 127-7958 6

Complete Short Steering Roller Assembly No. 127-7963 7

Hydraulic Tank and Hose Assembly 8

Drive Roller Assembly 9

Engine Assembly 10

Lifting Mechanism Assembly 11

Hitch Assembly 12

Steering Wheel Assembly 14


Seat and Brake Lever Assembly 16

Transmission Control Assembly 18

Transmission Assembly No. 111-6000 20


Attachments and Accessories 22

Steering Roller Assembly

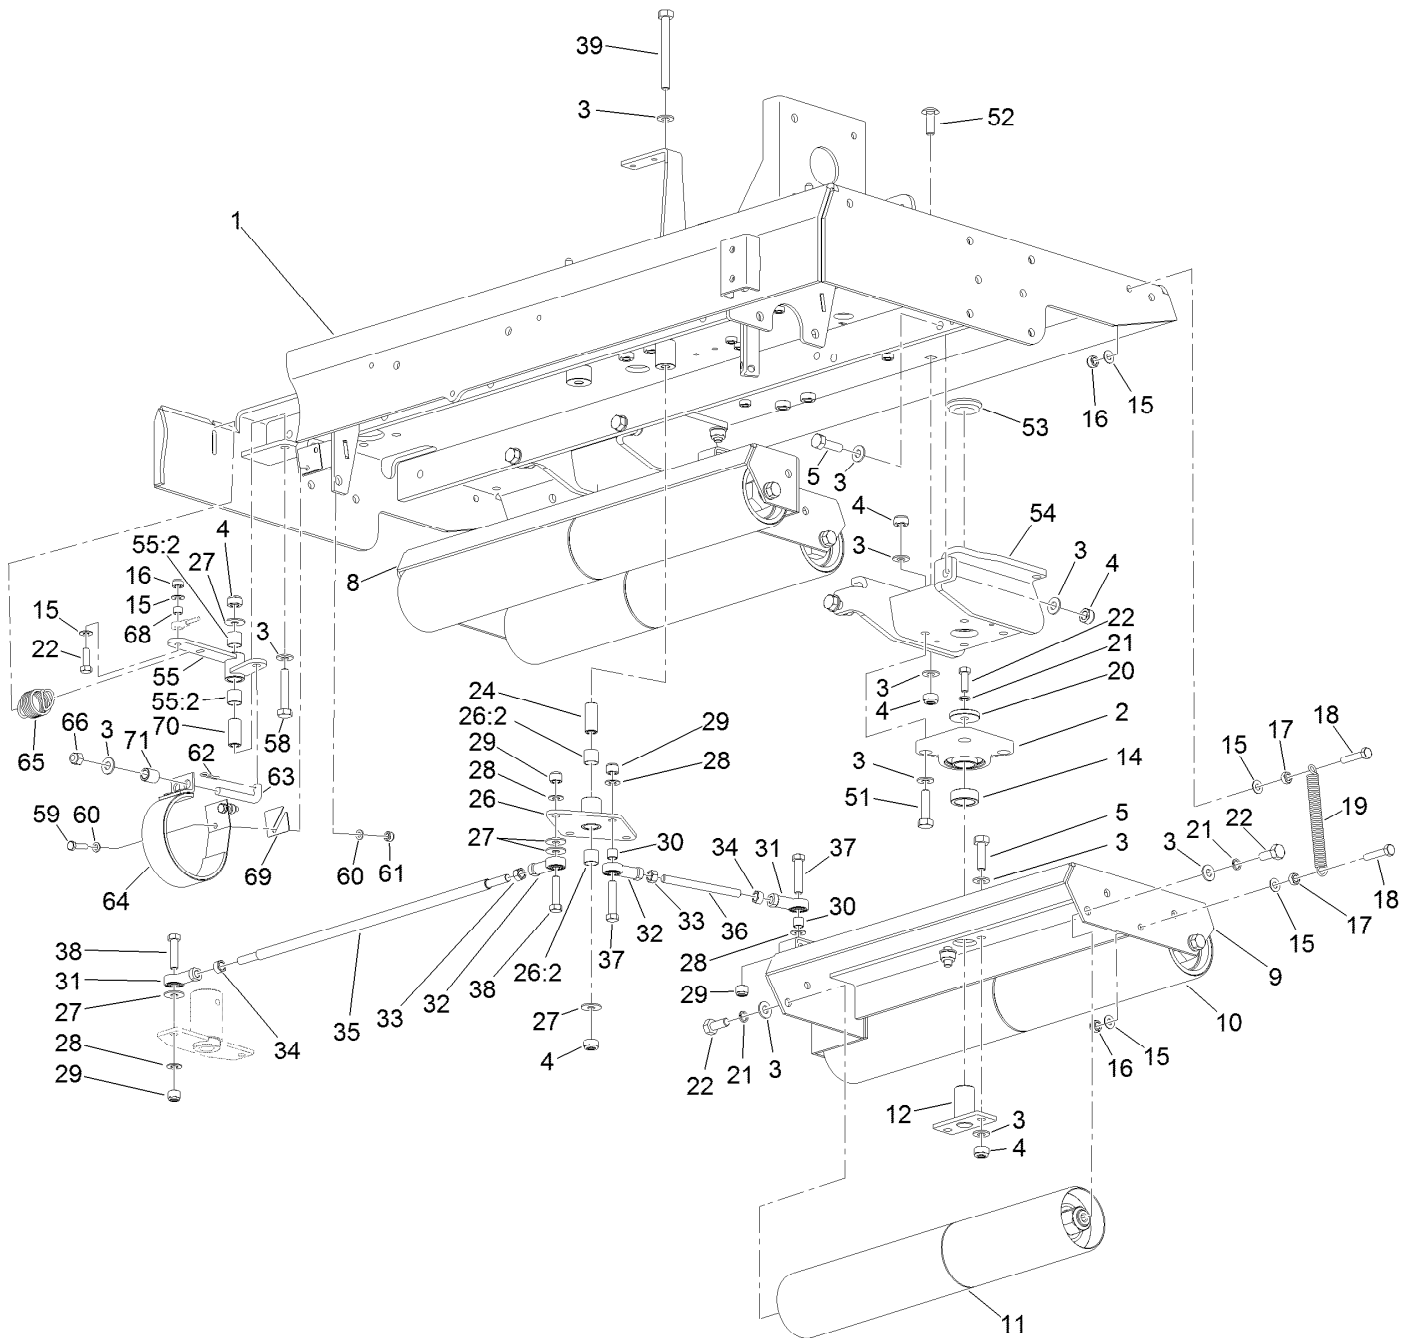


Steering Roller Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	131-1624-01	1	Roller Chassis	31	111-5748	3	Joint-Ball
2	111-5753	2	Bearing Housing ASM	32	111-5959	3	Joint-Ball
3	ZWQ1J000U	46	Washer-Plain	33	111-5855	3	Nut-Hex, LH
4	ZNN1J000U	21	Nut-Hex, NI	34	09213	3	Nut
5	09394	8	Bolt	35	111-5692	1	Rod-Pivot, Steering
8	111-5707-01	1	Head-Steering, Front	36	131-1579	2	Linkage Arm
9	111-5708-01	1	Head-Steering, Rear	37	09119	4	Bolt
10	127-7958	2	Complete Long Steering Roller ASM	38	09118	2	Bolt-HH
11	127-7963	2	Complete Short Steering Roller ASM	39	ZBH1J095U	1	Bolt-HH
12	111-5688	2	Shaft-Pivot	51	09611	8	Bolt-HH
14	111-6108	2	Bushing-Axle	52	33125-030	3	Screw-CARR
15	09475	10	Washer	53	107-3532	2	Grommet
16	09441	5	Nut-Hex, NI	54	131-6366-01	2	Support-Roller
17	ZNH1H000U	4	Nut-Hex	55	131-1626	1	Brake Pivot ASM
18	09681	4	Bolt	55:2	256-311	2	Bushing-Split
19	111-5883	2	Spring-Extension	58	57-6360	1	Screw-Clutch
20	111-5674	2	Collar-Fixing	59	09044	2	Screw-Set
21	09480	10	Washer-Spring	60	09472	4	Washer-Plain
22	09395	11	Screw-HH	61	09201	2	Nut
24	127-5938	1	Bushing-Pivot	62	1-806003	1	Pin-Cotter, Hair
26	127-5949	1	Steering Disc ASM	63	131-1584	1	Rod-Brake
26:2	256-311	2	Bushing-Split	64	9593	1	Brake Band ASM
27	HY03355	5	Washer-Plated	65	13-3090	1	Spring-Finger
28	09271	6	Washer-Plain	66	3296-39	1	Nut-Lock, NI
29	09216	6	Nut-Hex, NI	68	108-7983	1	Bushing-Cable
30	111-5684	4	Bushing	69	131-6353	1	Shim-1 Mm
				70	131-6350	1	Bushing-Pivot
				71	131-6398	1	Spacer

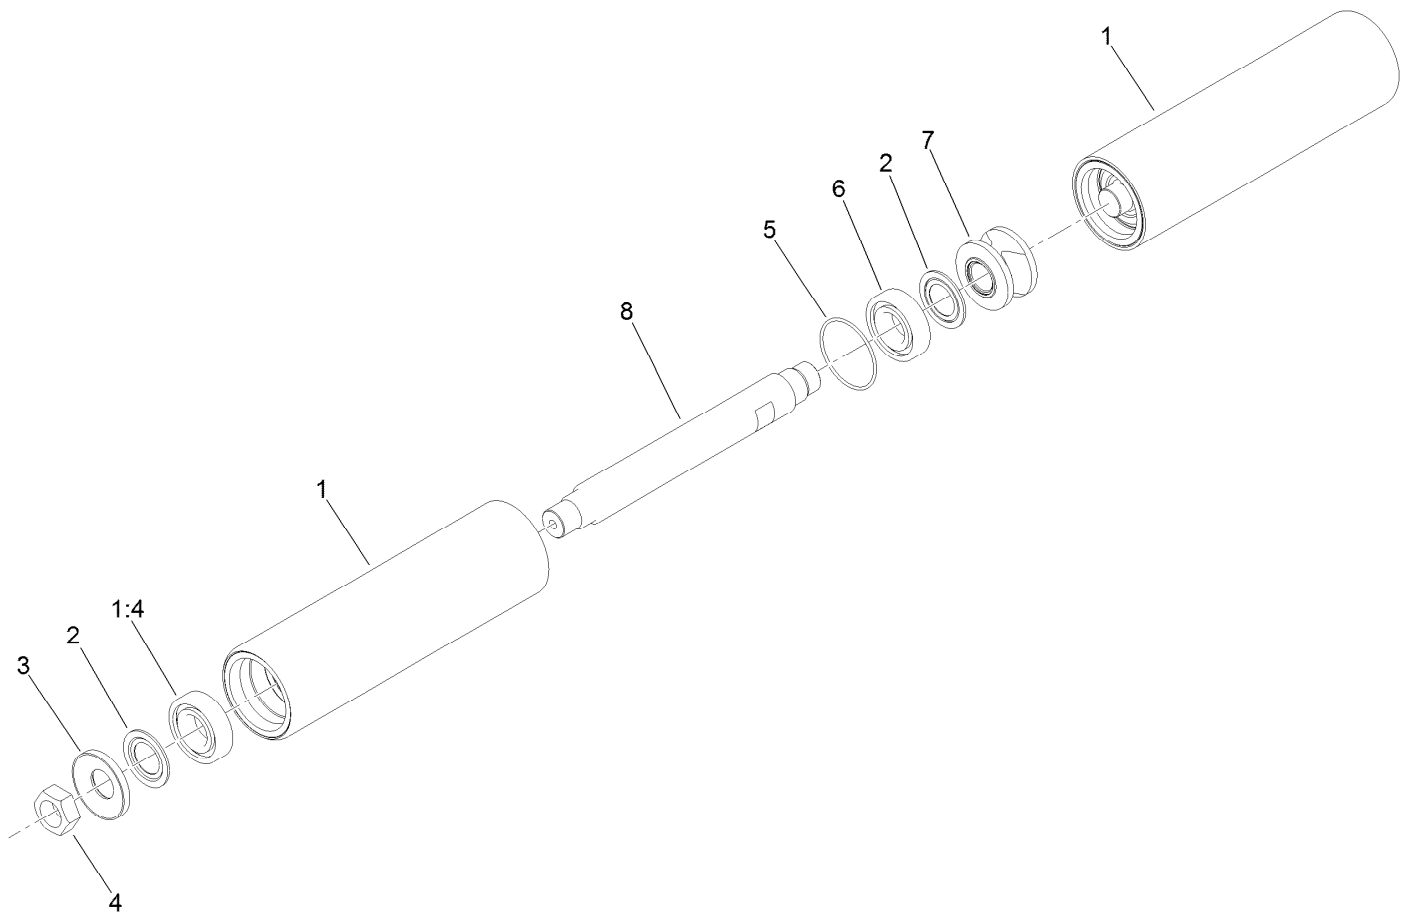


Complete Long Steering Roller Assembly No. 127-7958

Ref.	Part Number	Qty.	Description
1	127-7966	2	Long Steering Roller ASM
1:4	115-3296	1	Bearing-Sealed
2	115-3299	4	Seal-Flocked
3	127-7959	2	Spacer-Bearing
4	3296-49	2	Nut-Lock, NI
5	117-8177	2	O-Ring
6	115-3296	2	Bearing-Sealed
7	127-7960	1	Sleeve-Roller
8	127-8029	2	Shaft-Roller

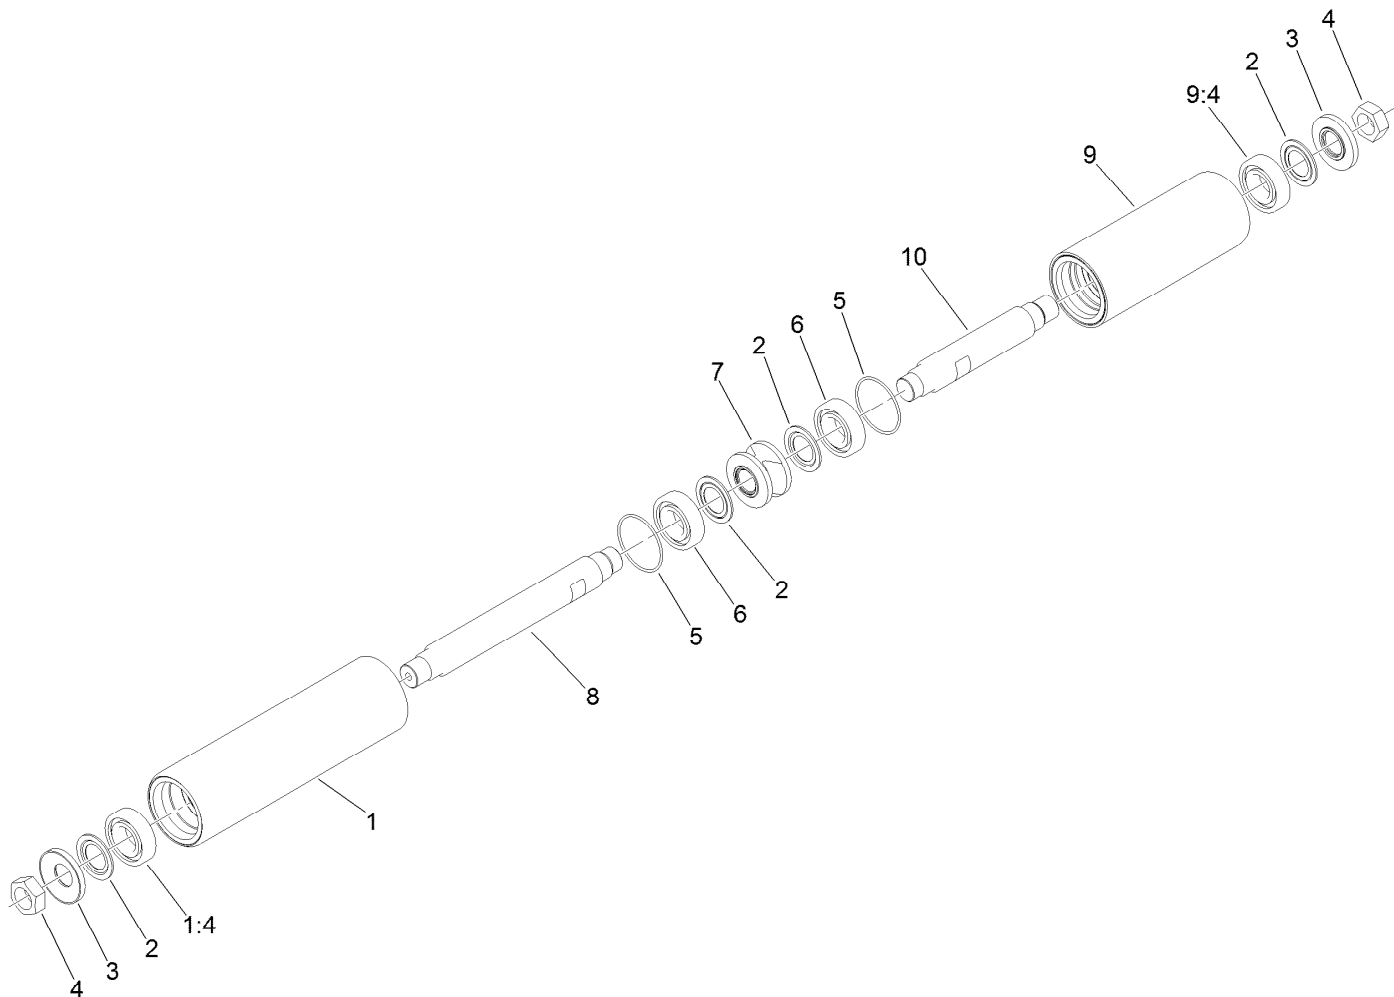

Complete Short Steering Roller Assembly No. 127-7963


Ref.	Part Number	Qty.	Description
1	127-7966	1	Long Steering Roller ASM
1:4	115-3296	1	Bearing-Sealed
2	115-3299	4	Seal-Flocked
3	127-7959	2	Spacer-Bearing
4	3296-49	2	Nut-Lock, NI
5	117-8177	2	O-Ring
6	115-3296	2	Bearing-Sealed
7	127-7960	1	Sleeve-Roller
8	127-8029	1	Shaft-Roller
9	127-7967	1	Short Steering Roller Assy
9:4	115-3296	1	Bearing-Sealed
10	127-8030	1	Shaft-Roller

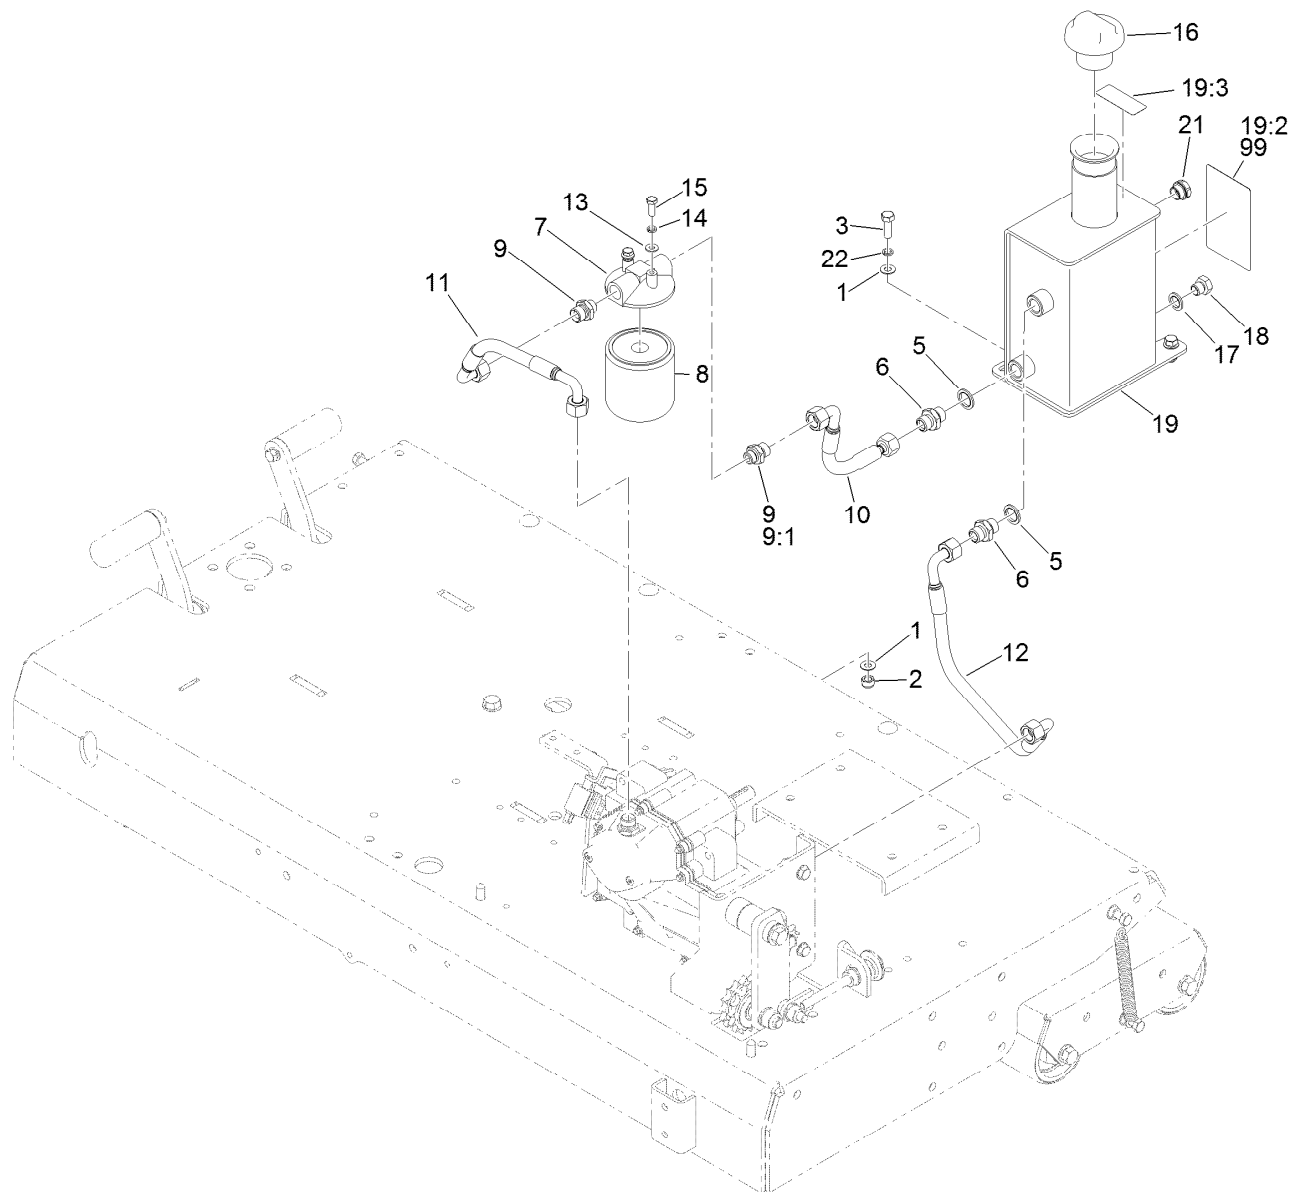

Hydraulic Tank and Hose Assembly

Ref.	Part Number	Qty.	Description
1	09475	4	Washer
2	09441	2	Nut-Hex, NI
3	03162	2	Screw-HH
5	10-06-031	2	Seal-Dowty
6	10-06-042	2	Adaptor-Bspp
7	111-5752	1	Head-Filter, Oil
8	1-633750	1	Filter-Oil, HYD
9	111-4788	2	Fitting-Straight
9:1	70-06-165	1	Seal-O Ring
10	111-5956	1	HYD Hose ASM
11	111-5957	1	HYD Hose ASM
12	111-5958	1	HYD Hose ASM


Ref.	Part Number	Qty.	Description
13	09261	2	Washer-Plain
14	09264	2	Washer-Spring
15	09821	2	Screw-HH
16	111-5749	1	Cap-Tank
17	10-06-030	1	Seal-Dowty
18	30-06-200	1	Plug-HYD
19	131-6375	1	Tank-Oil
19:2	127-5832	1	Decal-Warning
19:3	93-6686	1	Decal-Oil, HYD
21	127-5834	1	Glass-Sight
22	03469	2	Washer-Spring
99	131-6371	1	Decal-Warning, Ce

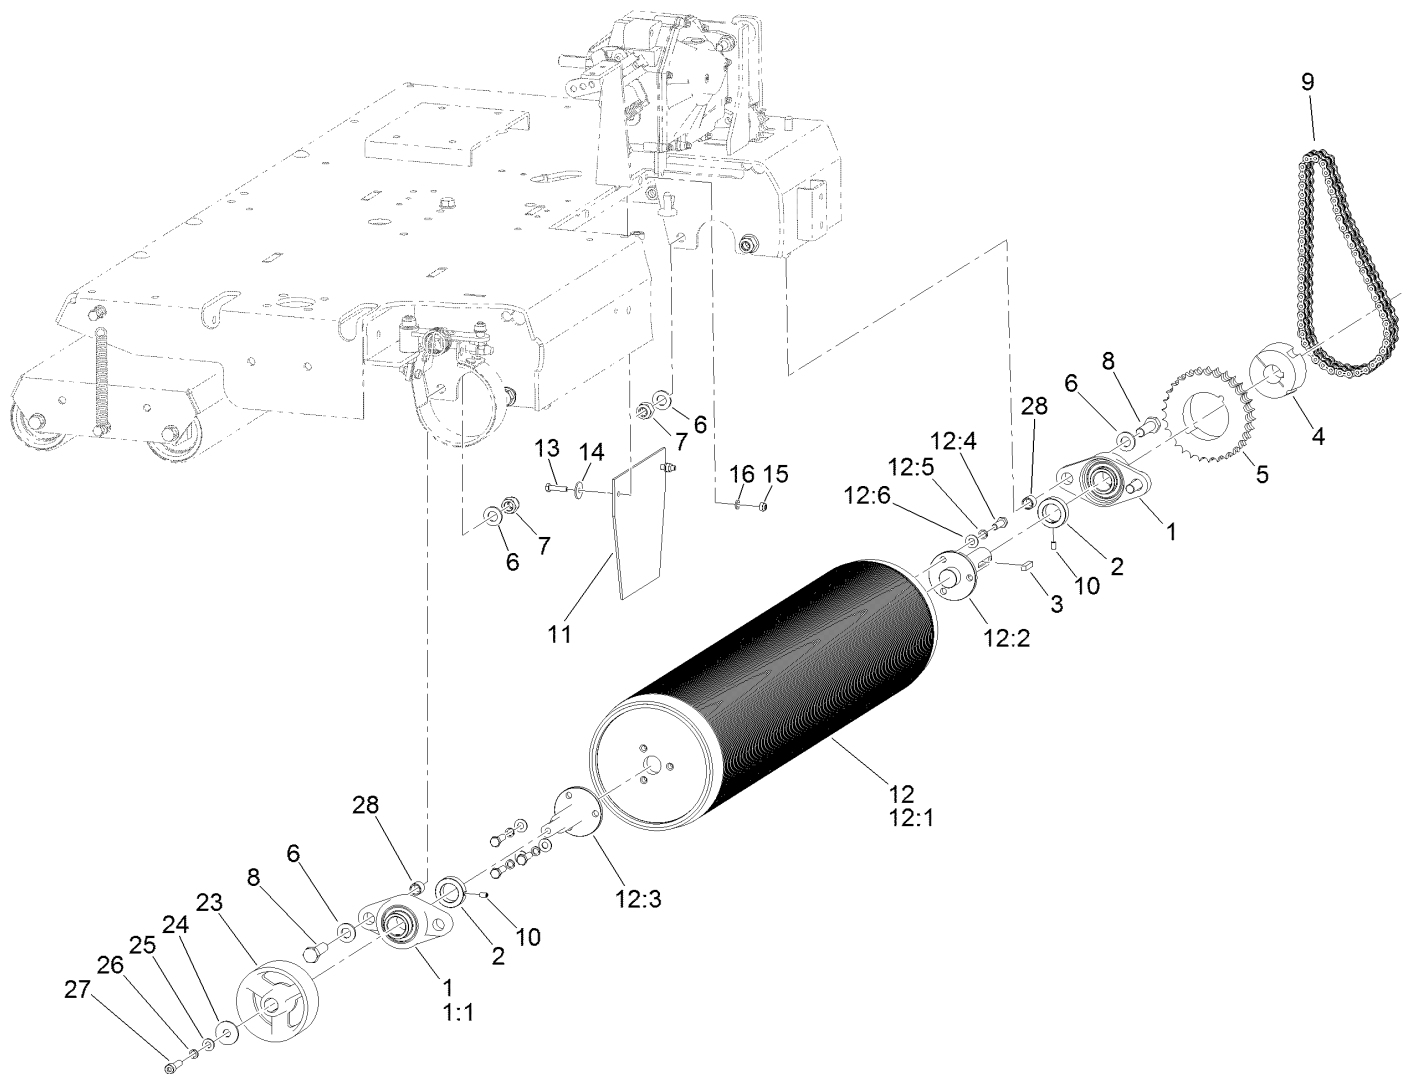

Drive Roller Assembly

Ref.	Part Number	Qty.	Description
1	111-5744	2	Bearing ASM
1:1	111-5758	1	Bearing
2	111-5785	2	Collar
3	04522	1	Key-Square
4	111-5762	1	Hub-Taperlock
5	111-5763	1	Sprocket-30 Tooth, Duplex
6	HY09485	8	Washer-Plain
7	09650	4	Nut-Hex, Nyloc
8	63-11-010	4	Bolt-HH
9	127-5865	1	Chain-Drive
10	09619	2	Grubscrew
11	111-7089	1	Guard-Chain, Rubber
12	131-1623	1	Drive Roller ASM
12:1	111-6857	1	Drum-Roller, Drive
12:2	111-5733	1	Axle-Roller, Keyed


Ref.	Part Number	Qty.	Description
12:3	131-1581	1	Roller Axle
12:4	09073	6	Setscrew
12:5	03469	6	Washer-Spring
12:6	09266	6	Washer-Plain
13	09364	2	Screw-HH
14	09263	2	Washer
15	09438	2	Nut-Nyloc
16	09472	2	Washer-Plain
23	106719	1	Drum-Brake
24	93-8806	1	Washer-Hardened
25	ZWP1H000U	1	Washer-Plain
26	03469	1	Washer-Spring
27	ZCS1H030U	1	Screw-Cap
28	131-6367	4	Spacer

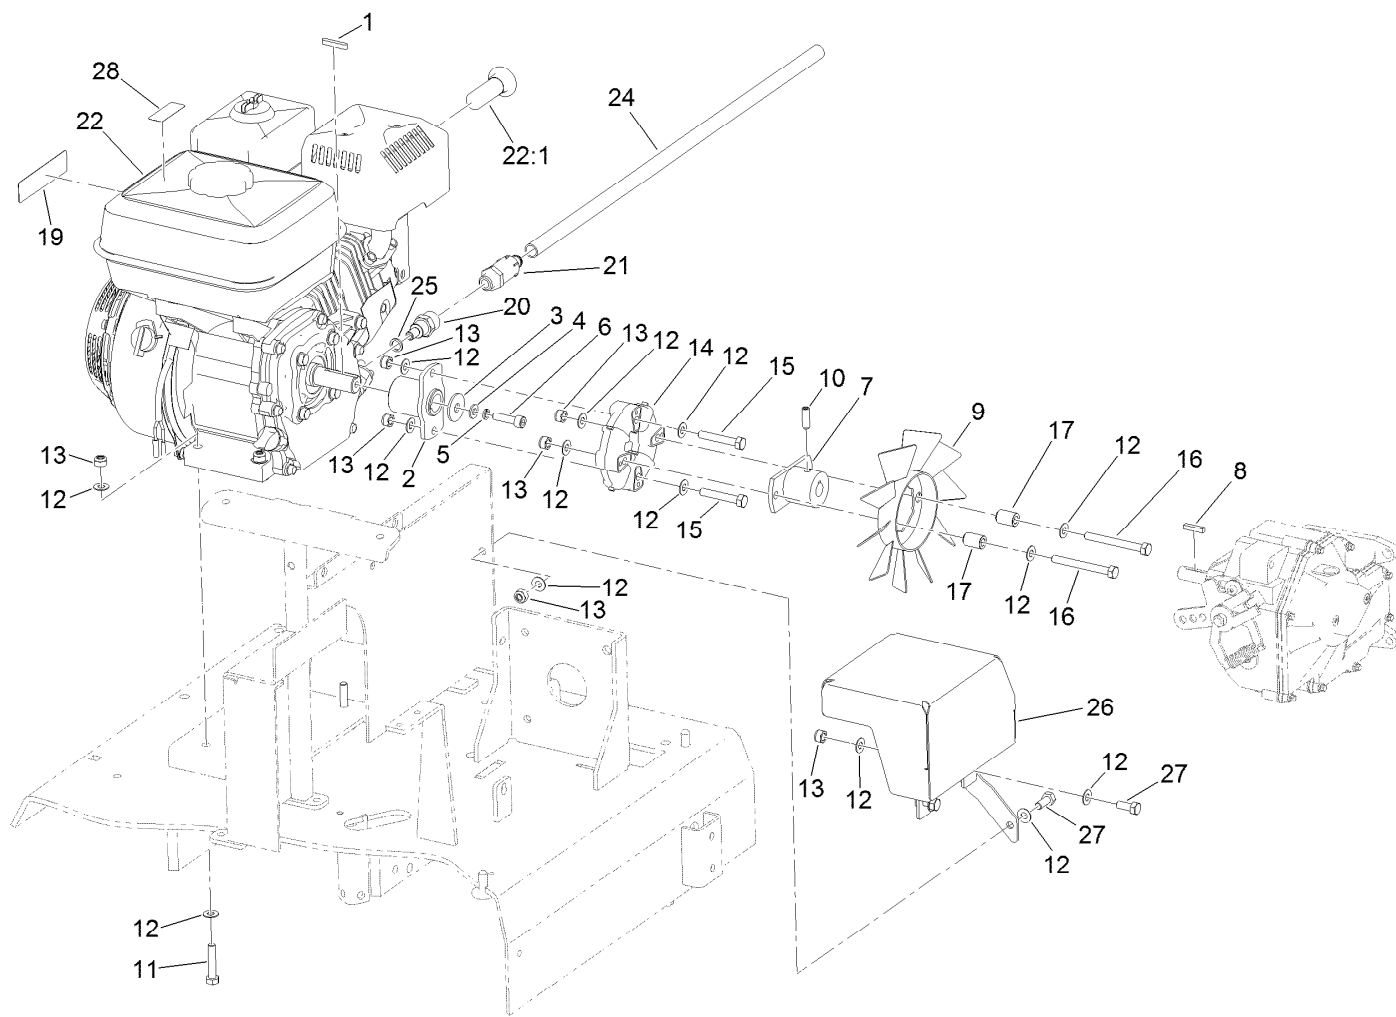

Engine Assembly

Ref.	Part Number	Qty.	Description
1	103-2739	1	Key
2	127-5799	1	Collar-Engine
3	93-8806	1	Washer-Hardened
4	ZWP1H000U	1	Washer-Plain
5	03469	1	Washer-Spring
6	ZCS1H030U	1	Screw-Cap
7	111-5730	1	Collar-Pump
8	111-5724	1	Key-Square
9	127-5846	1	Fan
10	131-6401	1	Screw-Set
11	09681	4	Bolt
12	09475	21	Washer
13	09441	10	Nut-Hex, NI
14	119-0652	1	Coupler-Rubber


Ref.	Part Number	Qty.	Description
15	ZBH1H050U	2	Bolt
16	ZBH1H075U	2	Bolt
17	127-5847	2	Bushing
19	117-2718	1	Decal-Arrester, Spark
20	111-7088	1	Adaptor-Drain, Oil
21	92-6877	1	Valve-Drain, Oil
22	111-7153	1	Engine-Honda, Gx200
22:1	111-6526	1	Arrester-Spark
24	103-1964	1	Hose-Drain, Oil
25	111-7401	1	Washer-Plug, Sump
26	131-1610-03	1	Guard-Exhaust
27	09368	3	Screw-HH
28	130-8322	1	Decal-Warning, Ethanol

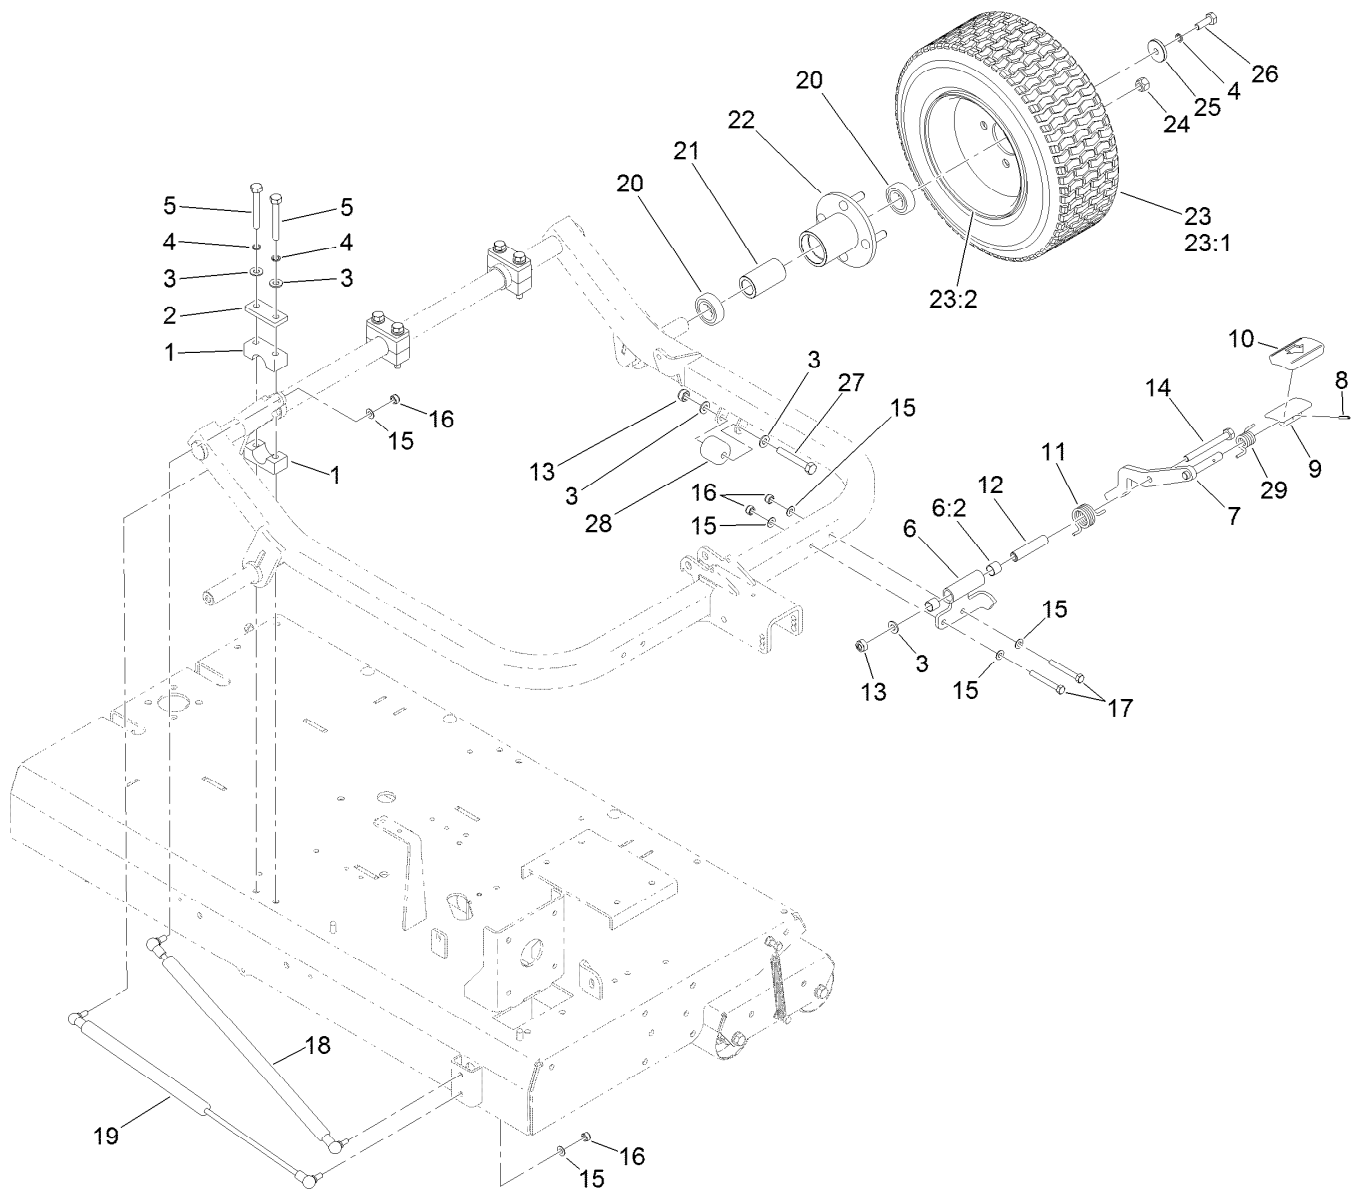

Lifting Mechanism Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	127-8044	3	Clamp-Drawbar	16	09441	6	Nut-Hex, NI
2	111-5681	3	Plate-Clamp, Axle	17	ZBH1H065U	2	Bolt
3	ZWQ1J000U	9	Washer-Plain	18	127-1326	1	Damper
4	09480	8	Washer-Spring	19	125-5696	1	Spring-Gas
5	ZBH1J075U	6	Bolt-HH	20	120-4621	4	Bearing
6	127-1351	1	Pedal Pivot ASM	21	111-5858	2	Spacer-Bearing
6:2	256-311	2	Bushing-Split	22	111-7103-03	2	Wheel Hub ASM
7	127-1349-01	1	Lever-Pedel	23		2	Wheel And Tire ASM ●
8	32121-45	1	Pin-Spring	23:1	111-5755	1	Tire
9	117-9507	1	Pedal-Accelerator	23:2	111-5756	1	Rim-Wheel
10	74-9100	1	Pad-Pedal, Forward	24	93-5268	8	Nut-Lug
11	127-1353	1	Spring-Torsion	25	111-5674	2	Collar-Fixing
12	127-1355	1	Spacer	26	09392	2	Screw-HH
13	ZNN1J000U	2	Nut-Hex, NI	27	09399	1	Bolt
14	ZBH1J095U	1	Bolt-HH	28	127-1342	1	Roller
15	09475	8	Washer	29	127-8034	1	Spring-Torsion


● Not serviced separately

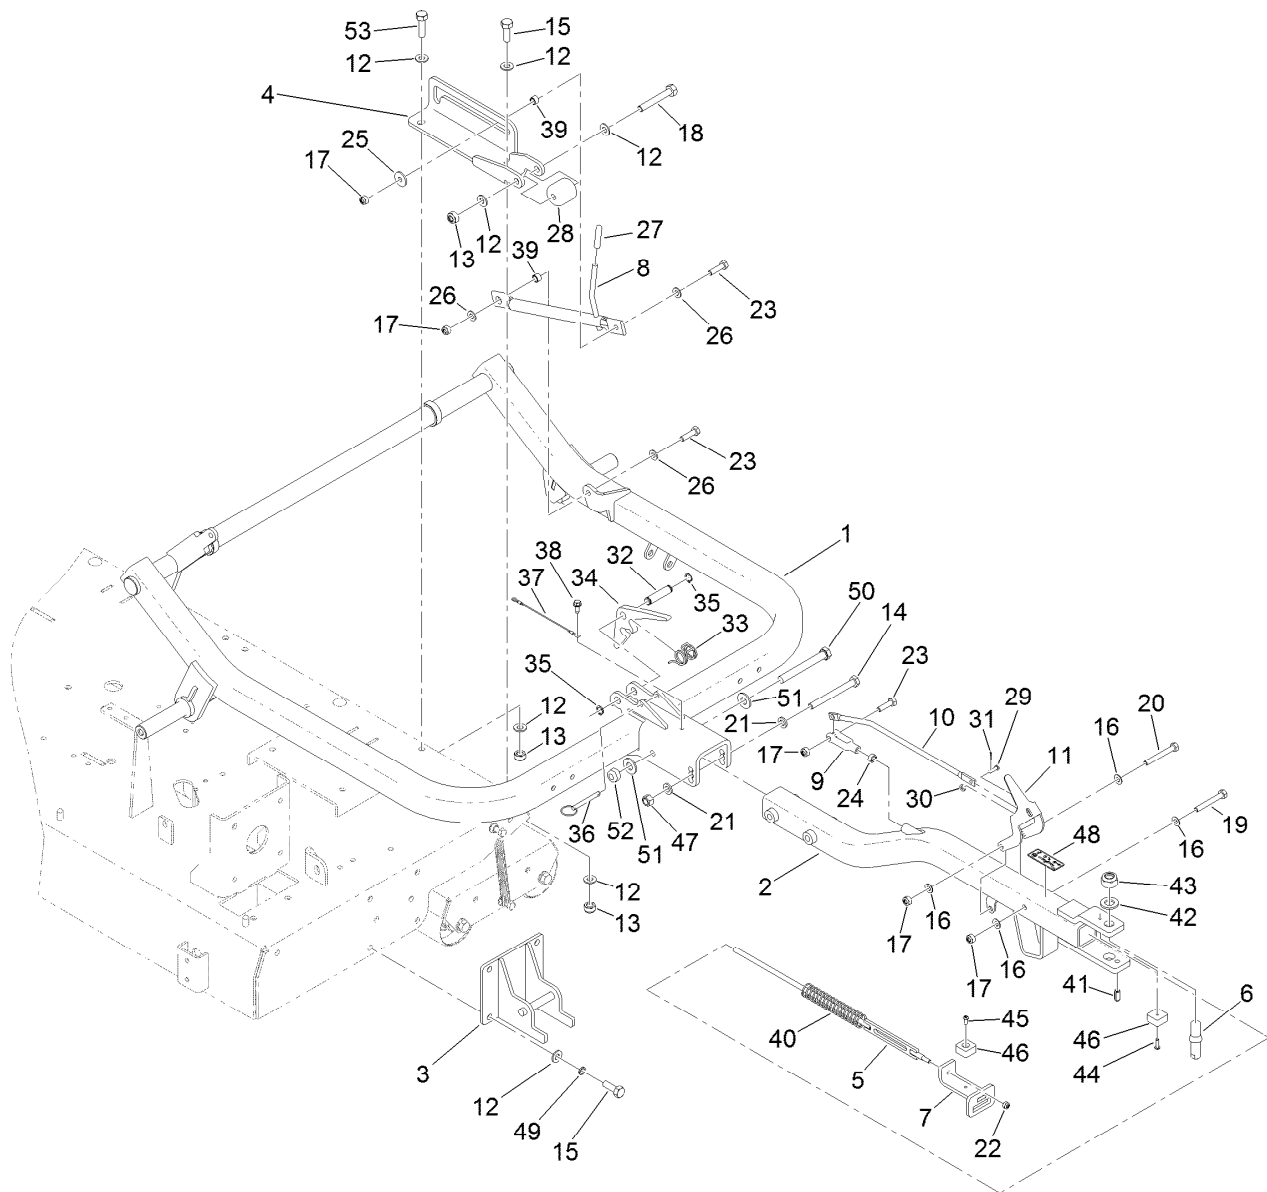

Hitch Assembly

Ref.	Part Number	Qty.	Description
1	125-5704-01	1	Hitch Pivot ASM
2	125-5725-01	1	Hitch ASM
3	125-5724-01	1	Bracket-Lock
4	125-5717-01	1	Bracket-Slide
5	125-5743	1	Lever ASM
6	127-5861	1	Pin-Tow
7	125-5741-01	1	Slide
8	125-5730-01	1	Lever
9	1-303105	1	Yoke-Adjustable
10	127-1317	1	Wire-Form
11	127-1321	1	Lever
12	ZWQ1J000U	10	Washer-Plain
13	ZNN1J000U	3	Nut-Hex, NI
14	127-5864	1	Screw-HH
15	09392	5	Screw-HH
16	09475	4	Washer
17	09441	5	Nut-Hex, NI
18	09399	1	Bolt
19	09371	1	Bolt
20	ZBH1H065U	1	Bolt
21	107-1413	2	Washer-Hardened

Ref.	Part Number	Qty.	Description
22	09438	1	Nut-Nyloc
23	09369	3	Screw-HH
24	09207	1	Nut
25	1-603716	1	Washer-Friction
26	3256-23	3	Washer-Flat
27	125-5722	1	Cap-Flex
28	127-1342	1	Roller
29	283-29	1	Pin-Clevis
30	3256-51	1	Washer-Flat
31	3272-1	1	Pin-Cotter
32	125-5731	1	Pin-Lock, Lever
33	125-5723	1	Spring-Torsion
34	125-5711-01	1	Latch-Hitch
35	32151-61	2	Ring-Retaining
36	108-0094	1	Pin-Cotterless
37	28-8070	1	Lanyard
38	32144-10	1	Screw-HWH
39	120-9697	2	Spacer
40	125-5737	1	Spring-Compression
41	32121-123	1	Pin-Roll
42	09491	1	Washer-Plain

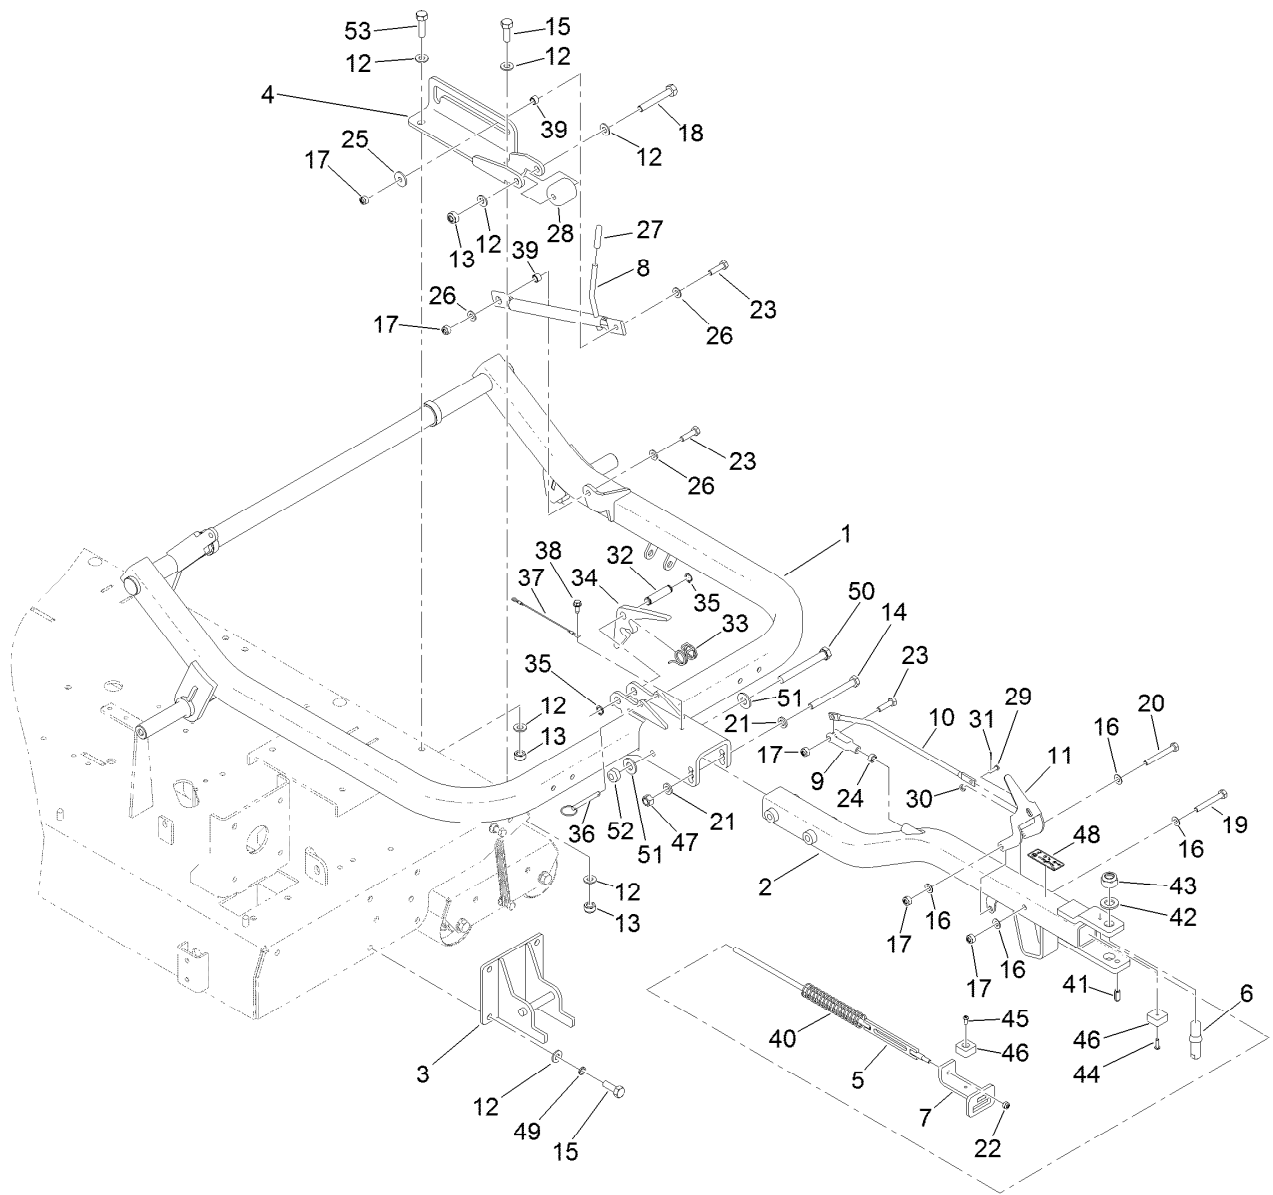


Hitch Assembly (continued)

Ref.	Part Number	Qty.	Description
43	09456	1	Nut
44	119-7568	1	Screw-HSBH
45	127-5866	1	Screw-HSBH
46	94-1392	2	Pad-Rubber
47	131-1558	1	Nut-Lock
48	127-5885	1	Decal-Disconnect, Hitch

Ref.	Part Number	Qty.	Description
49	09480	4	Washer-Spring
50	131-1557	1	Screw-HH
51	87-7270	2	Washer-Thrust
52	94-4307	1	Nut-Hex Lock
53	09394	1	Bolt


Steering Wheel Assembly

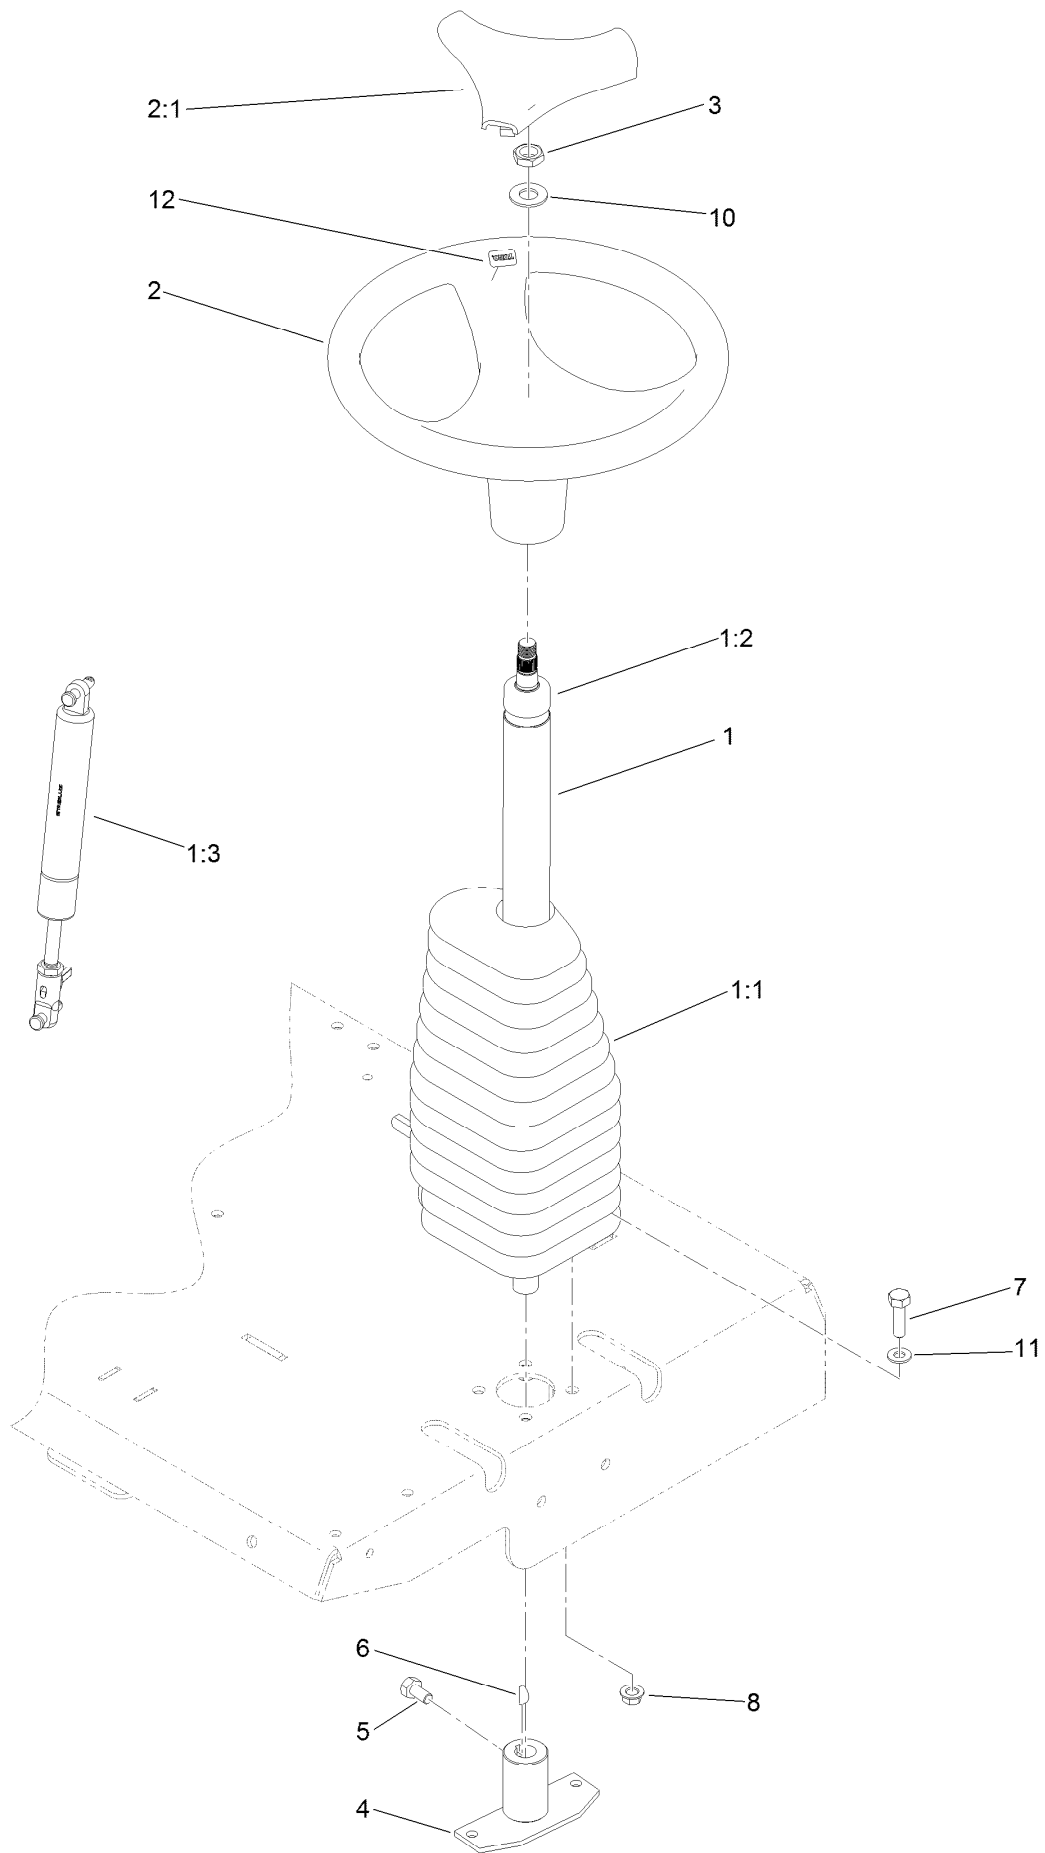

Steering Wheel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-8041	1	Column-Steering	5	09391	1	Screw-HH
1:1	120-2592	1	Boot-Rubber, Column	6	3257-7	1	Key-Woodruff
1:2	120-2593	1	Boot-Rubber, Bearing	7	09394	4	Bolt
1:3	120-2594	1	Gas Spring ASM	8	63-11-015	4	Nut-Flanged
2	98-1471	1	Wheel-Steering	10	3256-27	1	Washer-Flat
2:1	98-1468	1	Cover-Wheel, Steering	11	ZWQ1J000U	4	Washer-Plain
3	110-8816	1	Nut-Hex	12	98-1459	1	Decal
4	127-5776-01	1	Pivot-Steering				


Seat and Brake Lever Assembly

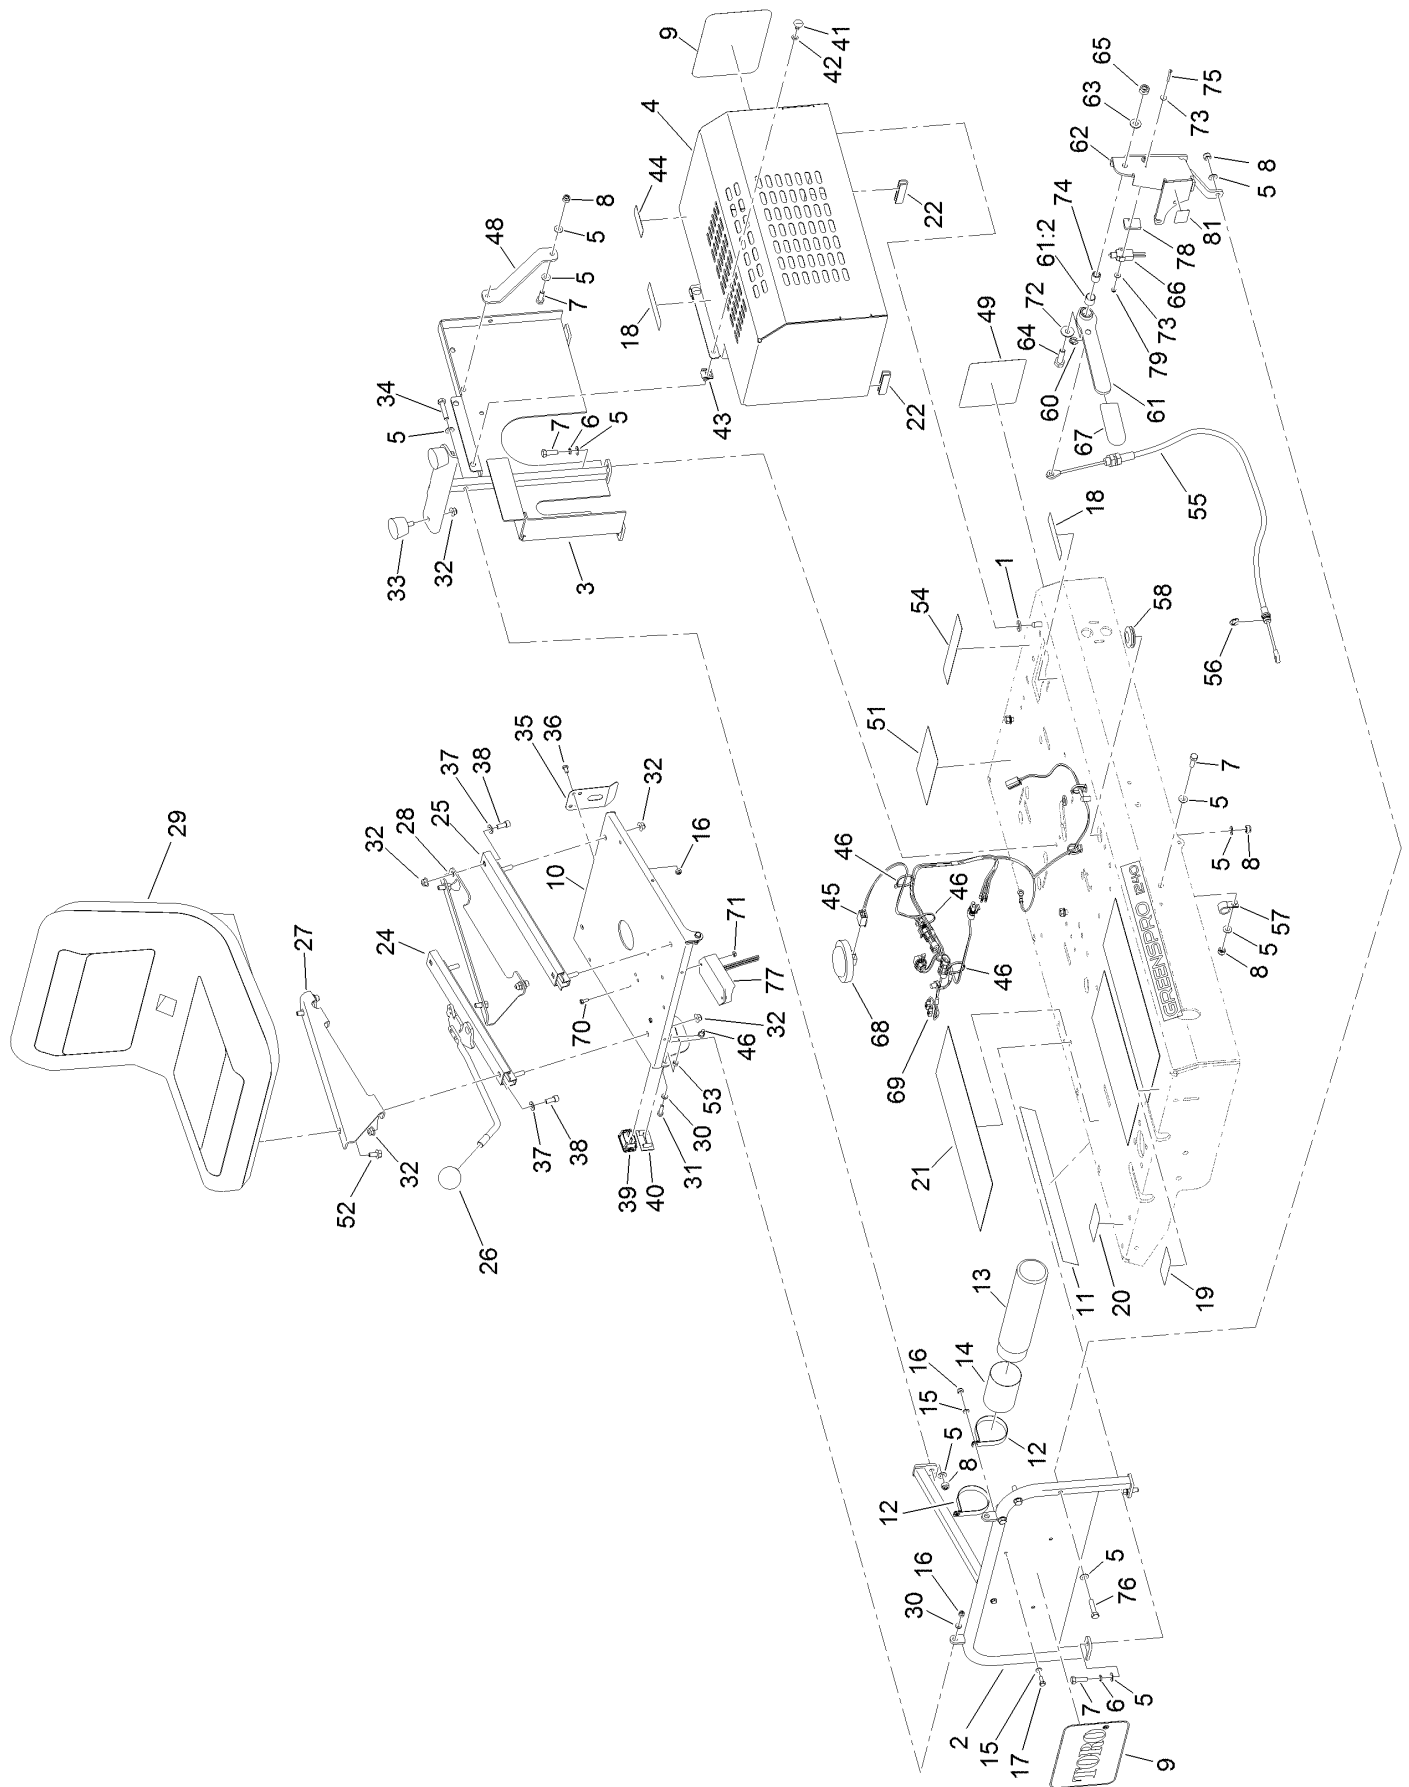

Seat and Brake Lever Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	111-5739	2	Washer-Rubber	49	127-5871	1	Decal-Service, Czech
2	131-6363-01	1	Seat Support	49	127-5872	1	Decal-Reference, Danish
3	131-1629-01	1	Frame-Support, Rear	49	127-5873	1	Decal-Reference, German
4	131-1615-01	1	Transmission Cover	49	127-5874	1	Decal-Reference, Spanish
5	09475	20	Washer	49	127-5875	1	Decal-Reference, Finnish
6	03469	5	Washer-Spring	49	127-5876	1	Decal-Reference, French
7	03162	7	Screw-HH	49	127-5877	1	Decal-Reference, Italian
8	09441	9	Nut-Hex, NI	49	127-5878	1	Decal-Reference, Japanese
9	111-3728	2	Decal	49	127-5879	1	Decal-Reference, Dutch
10	127-5752-01	1	Pan-Seat	49	127-5880	1	Decal-Reference, Norwegian
11	127-5895	2	Decal				
12	107-1865	2	R-Clamp	49	127-5881	1	Decal-Reference, Polish
13	104-7050	1	Tube-Manual	49	127-5882	1	Decal-Reference, Portuguese
14	104-7048	1	Cap-Housing				
15	ZWP1F000U	4	Washer-Plain	49	127-5883	1	Decal-Reference, Swedish
16	09438	6	Nut-Nyloc	51	127-5884	1	Decal-Operation
17	09362	2	Screw-HH	52	33104-016	4	Screw-HHF
18	111-5646	2	Decal-Warning	53	88-7860	2	Spacer
19	111-5649	1	Decal-Control, Pedal (Left)	54	127-8010	1	Decal-Adjust, Tension (Chain)
20	111-5650	1	Decal-Control, Pedal (Right)				
21	70-07-067	4	Tape-Slip, Anti	55	131-6361	1	Cable-Brake, Park
22	50-08-001	1	Edging-Rubber	56	32120-47	1	Ring-Retaining, External
24	119-4483	1	Seat Adjuster Lever ASM	57	2412-41	1	Clamp
25	92-8990	1	Adjuster-Slave	58	1-543286	1	Grommet
26	233-48	1	Knob	60	32151-47	1	Ring-Retaining
27	127-5759-01	1	Bracket-Seat, RH	61	131-6389	1	Brake Lever ASM
28	127-5754-01	1	Bracket-Seat, LH	61:2	256-311	1	Bushing-Split
29	111-5742	1	Seat ASM	62	131-6388-01	1	Support-Lever, Brake
30	09472	4	Washer-Plain	63	ZWQ1J000U	1	Washer-Plain
31	ZBH1F025U	2	Bolt-HH	64	09394	1	Bolt
32	104-8300	10	Nut-Flange, NI	65	ZNN1J000U	1	Nut-Hex, NI
33	68-3270	2	Bumper-Rubber	66	99-3410	1	Switch
34	09681	1	Bolt	67	21-1880	1	Grip-Handle
35	66-2630	1	Latch-Seat	68	100-3524	1	Switch-Seat
36	09361	2	Screw-HH	69	122-0570	1	Harness-Wire
37	3256-23	4	Washer-Flat	70	32105-8	2	Screw-SHH
38	3274-10	4	Screw-HSH	71	110-3145	2	Nut-Lock
39	120-2244	1	Hourmeter	72	HY03355	1	Washer-Plated
40	111-2337	1	Blank-Switch	73	3269-6	4	Washer-Flat
41	119-1728	2	Stud-1/4 Turn	74	131-6386	1	Pivot Bush
42	119-1729	2	Retainer-Stud	75	3249-11	2	Screw-Machine
43	119-1730	2	Receptacle-Clip, Mini	76	09631	3	Bolt
44	127-0392	1	Decal-Hot Surface	77	122-0423	1	Module-Ground, Magneto
45	122-0421	1	Harness-Wire	78	131-6383	1	Spacer
46	HY3966	4	Tie-Cable	79	3296-9	2	Nut-Lock
48	127-5928-01	1	Support Strut	81	131-0440	1	Decal-Brake, Parking
49	127-5867	1	Decal-Service				

Transmission Control Assembly

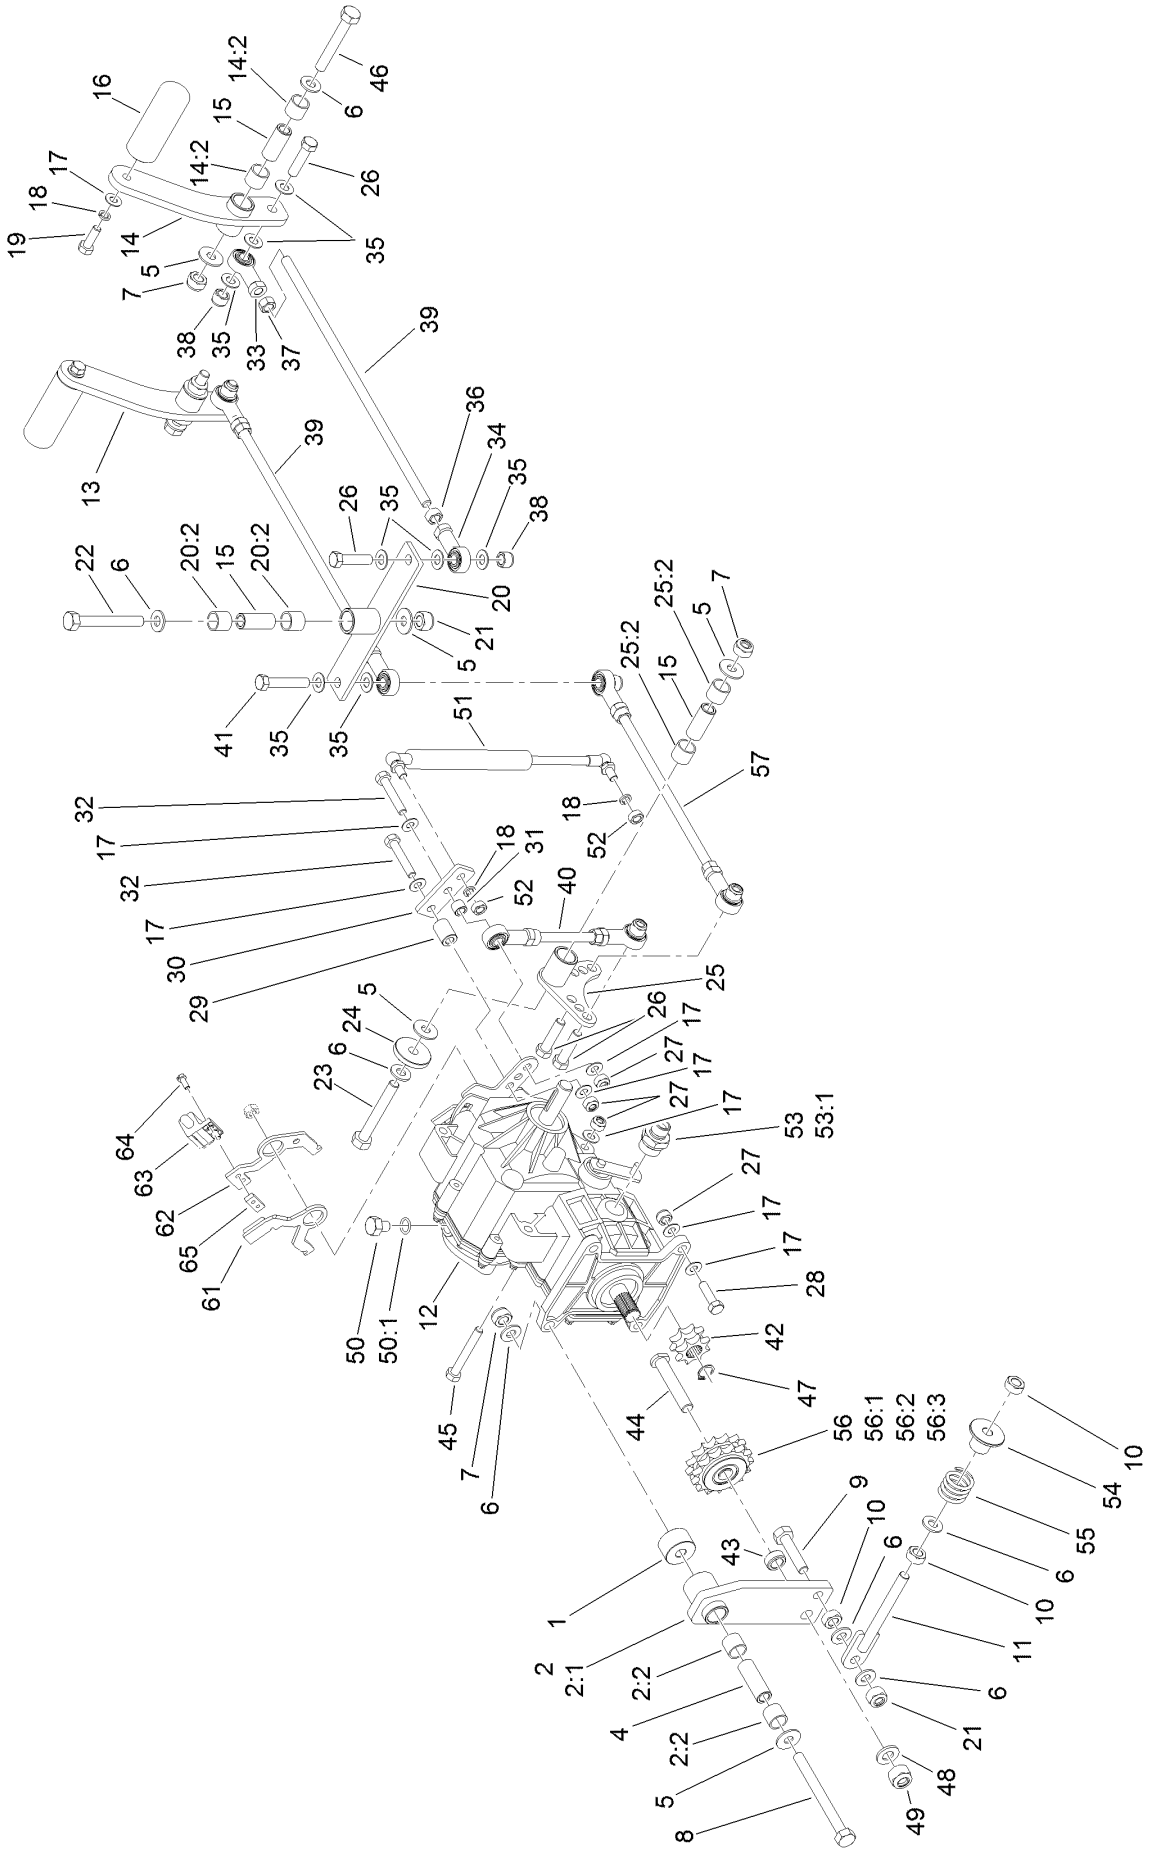


Transmission Control Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	111-5672	1	Spacer	31	111-5792	1	Bushing
2	127-7972	1	Idler Arm ASM	32	09654	2	Bolt
2:1	127-7970	1	Arm-Idler	33	111-5959	4	Joint-Ball
2:2	256-311	2	Bushing-Split	34	111-5748	4	Joint-Ball
4	127-7969	1	Bushing-Pivot	35	09271	14	Washer-Plain
5	HY03355	6	Washer-Plated	36	09213	4	Nut
6	ZWQ1J000U	8	Washer-Plain	37	111-5855	4	Nut-Hex, LH
7	ZNN1J000U	4	Nut-Hex, NI	38	09216	6	Nut-Hex, NI
8	09405	1	Bolt	39	111-5682	2	Rod-Linkage
9	ZDH1J045U	1	Screw-HH	40	111-5690	1	Arm-Linkage
10	09449	3	Nut	41	09121	1	Bolt
11	111-5736	1	Tensioning Rod ASM	42	127-5870	1	Sprocket-8 Tooth
12	111-6000	1	Transmission ASM	43	111-5712	1	Bushing-Idler, Gear
13	127-5948	1	Left Hand Motion Pedal ASM	44	111-5723	1	Bolt-Sprocket, Idler
13:2	256-311	2	Bushing-Split ●	45	09371	1	Bolt
14	127-5947	1	Right Hand Motion Pedal ASM	46	09399	2	Bolt
14:2	256-311	2	Bushing-Split	47	111-6009	1	Circlip-EXT
15	127-5938	4	Bushing-Pivot	48	HY09485	1	Washer-Plain
16	111-5727	2	Pedal	49	ZNN1L000U	1	Nut-Nyloc
17	09475	14	Washer	50	111-4788	1	Fitting-Straight
18	03469	4	Washer-Spring	50:1	70-06-165	1	Seal-O Ring
19	03162	2	Screw-HH	51	127-5896	1	Damper
20	127-5946	1	Pedal Rod Pivot ASM	52	ZNH1H000U	2	Nut-Hex
20:2	256-311	2	Bushing-Split	53	70-06-053	1	Adaptor-Boss
21	09447	2	Nut	53:1	63-06-111	1	Seal-O Ring
22	09404	1	Bolt	54	127-5829	1	Spacer
23	ZBH1J075U	1	Bolt-HH	55	127-5849	1	Spring-Compression
24	111-5674	1	Collar-Fixing	56	111-5768	1	Idler Sprocket ASM
25	127-7950	1	Lever Quadrant ASM	56:1	111-6116	1	Sprocket-Idler, 15T
25:2	256-311	2	Bushing-Split	56:2	111-6115	1	Spacer-Sprocket, Idler
26	09118	5	Bolt-HH	56:3	411027	2	Bearing
27	09441	6	Nut-Hex, NI	57	111-5697	1	Rod-Linkage, Long
28	09369	3	Screw-HH	61	131-1593	1	Arm
29	111-5722	1	Spacer-Damper	62	131-1594	1	Arm
30	111-5711	1	Plate-Damper	63	1-513051	1	Switch-Open, Normally
				64	32105-8	2	Screw-SHH
				65	1-633181	1	Plate-Tapped

● Not illustrated

Transmission Assembly No. 111-6000

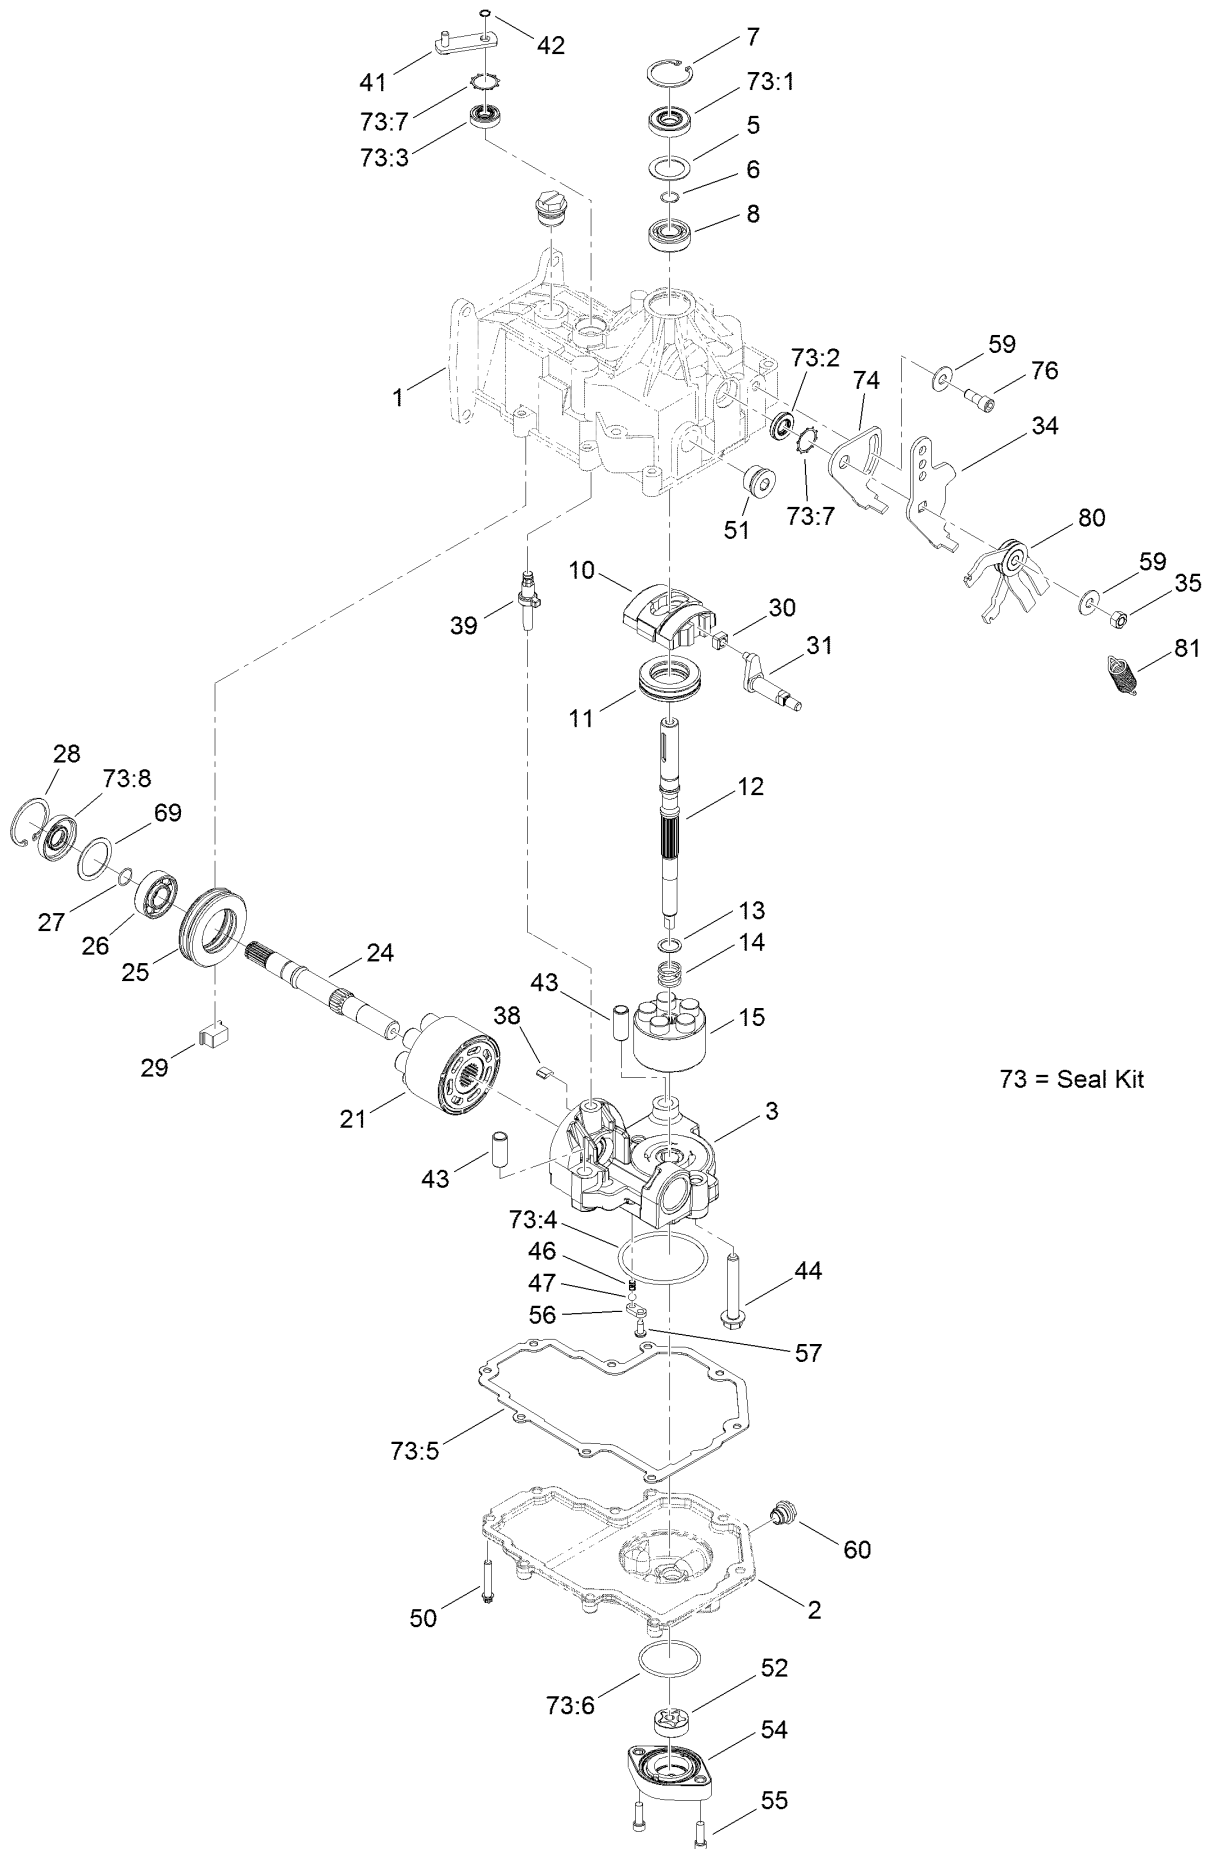

Transmission Assembly No. 111-6000 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Housing-Upper ●	43	94-1927	2	Pin
2		1	Housing-Lower ●	44	94-6926	3	Bolt
3	125-9162	1	Center Section Kit	46	108-8548	1	Spring-Helical
5	104-2104	1	Spacer	47	108-8549	1	Ball-1/4 Inch
6	119-5531	1	Ring-Retaining, Wire	50	94-1926	9	Bolt
7	119-5533	1	Ring-Retaining	51	125-9168	1	Plug
8	119-5530	1	Bearing-Ball	52	104-2122	1	Gerotor ASM
10	94-1907	1	Swashplate-Variable	54		1	Housing-Pump, Charge ●
11	94-6922	1	Bearing-Thrust	55	106-8758	2	Screw-HSH
12	125-9163	1	Shaft-Input	56	108-8550	1	Plate-Relief
13	120-5538	1	Washer	57	112-5910	1	Bolt-TAP
14	120-5537	1	Spring-Compression	59	5-4460	2	Washer-Pivot
15	103-2666	1	Cylinder Block Kit	60		1	Plug ●
21	94-1913	1	Cylinder Block ASM	69	104-5308	1	Spacer
24	125-9164	1	Shaft-Output	73	125-9176	1	Seal Kit
25	94-6923	1	Bearing-Thrust	73:1	119-5532	1	Seal-Lip
26	104-5311	1	Bearing-Ball	73:2	125-9166	1	Seal-Lip
27	104-5307	1	Ring-Retaining	73:3	92-6545	1	Seal-Lip
28	104-5309	1	Ring-Retaining	73:4	108-8545	1	O-Ring
29	125-9165	1	Retainer-Bearing, Motor	73:5		1	Gasket ●
30	94-1910	1	Guide-Slot	73:6	106-8757	1	O-Ring
31	104-2112	1	Trunnion ASM	73:7	125-9175	2	Ring-Retaining, Star
34	125-9167	1	Arm-Control	73:8	104-5310	1	Seal-Lip
35	32128-16	1	Nut-HHF	74	125-9177	1	Arm-Return
38	112-5892	1	Bypass Plate Kit	76	125-9178	1	Screw
39	94-1914	1	Actuator-Bypass	80	125-9179	1	Scissor Arm ASM
41	104-2117	1	Arm-Bypass	81	114-8462	1	Spring-Extension
42	936109	1	Ring-Retaining				

● Not serviced separately

Attachments and Accessories

For 44912 GreensPro 1240 Greens Roller

Product Name	Model/Part
Armrest Kit.....	44908
Roller Scraper Kit.....	44911
LED Light Kit.....	44923
Premium Engine Oil 10w30 (5 Gallon Pail)	121-6393
Wireless Hour Meter Kit.....	44927
Filter-oil, Hyd	1-633750
Premium All Season Hydraulic Fluid (5 Gallon Pail).....	108-1178

Notes:



Count on it.