



Form No. 3398-928 Rev B

Count on it.

Parts Catalog

GreensPro™ 1240 Greens Roller

Model No. 44912—Serial No. 316000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HP: high pressure

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: low pressure

LPG: Liquefied Petroleum Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

 
TAP: self tapping

TTH: torx truss head

Contents


Steering Roller Assembly	4
Complete Long Steering Roller Assembly No. 127-7958	6
Complete Short Steering Roller Assembly No. 127-7963	7
Hydraulic Tank and Hose Assembly	8
Drive Roller Assembly	10
Engine Assembly	12
Lifting Mechanism Assembly	14
Hitch Assembly	16
Seat and Brake Lever Assembly	18
Steering Wheel Assembly	20
Transmission Control Assembly	22
Transmission Assembly No. 111-6000	24
Cylinder Head Assembly	26
Cylinder Barrel Assembly	28
Crankcase Cover Assembly	30
Crankshaft Assembly	32
Piston and Connecting Rod Assembly	34
Camshaft Assembly	36
Recoil Starter Assembly	38
Fan Cover Assembly	40
Carburetor Assembly	42
Air Cleaner Assembly	44
Muffler Assembly	46
Fuel Tank Assembly	48
Flywheel Assembly	50
Ignition Coil Assembly	52
Control Assembly	54
Label Assembly	56
Wrench	58
Decal Assembly	60
Gasket Kit	62
Attachments and Accessories	64

Steering Roller Assembly

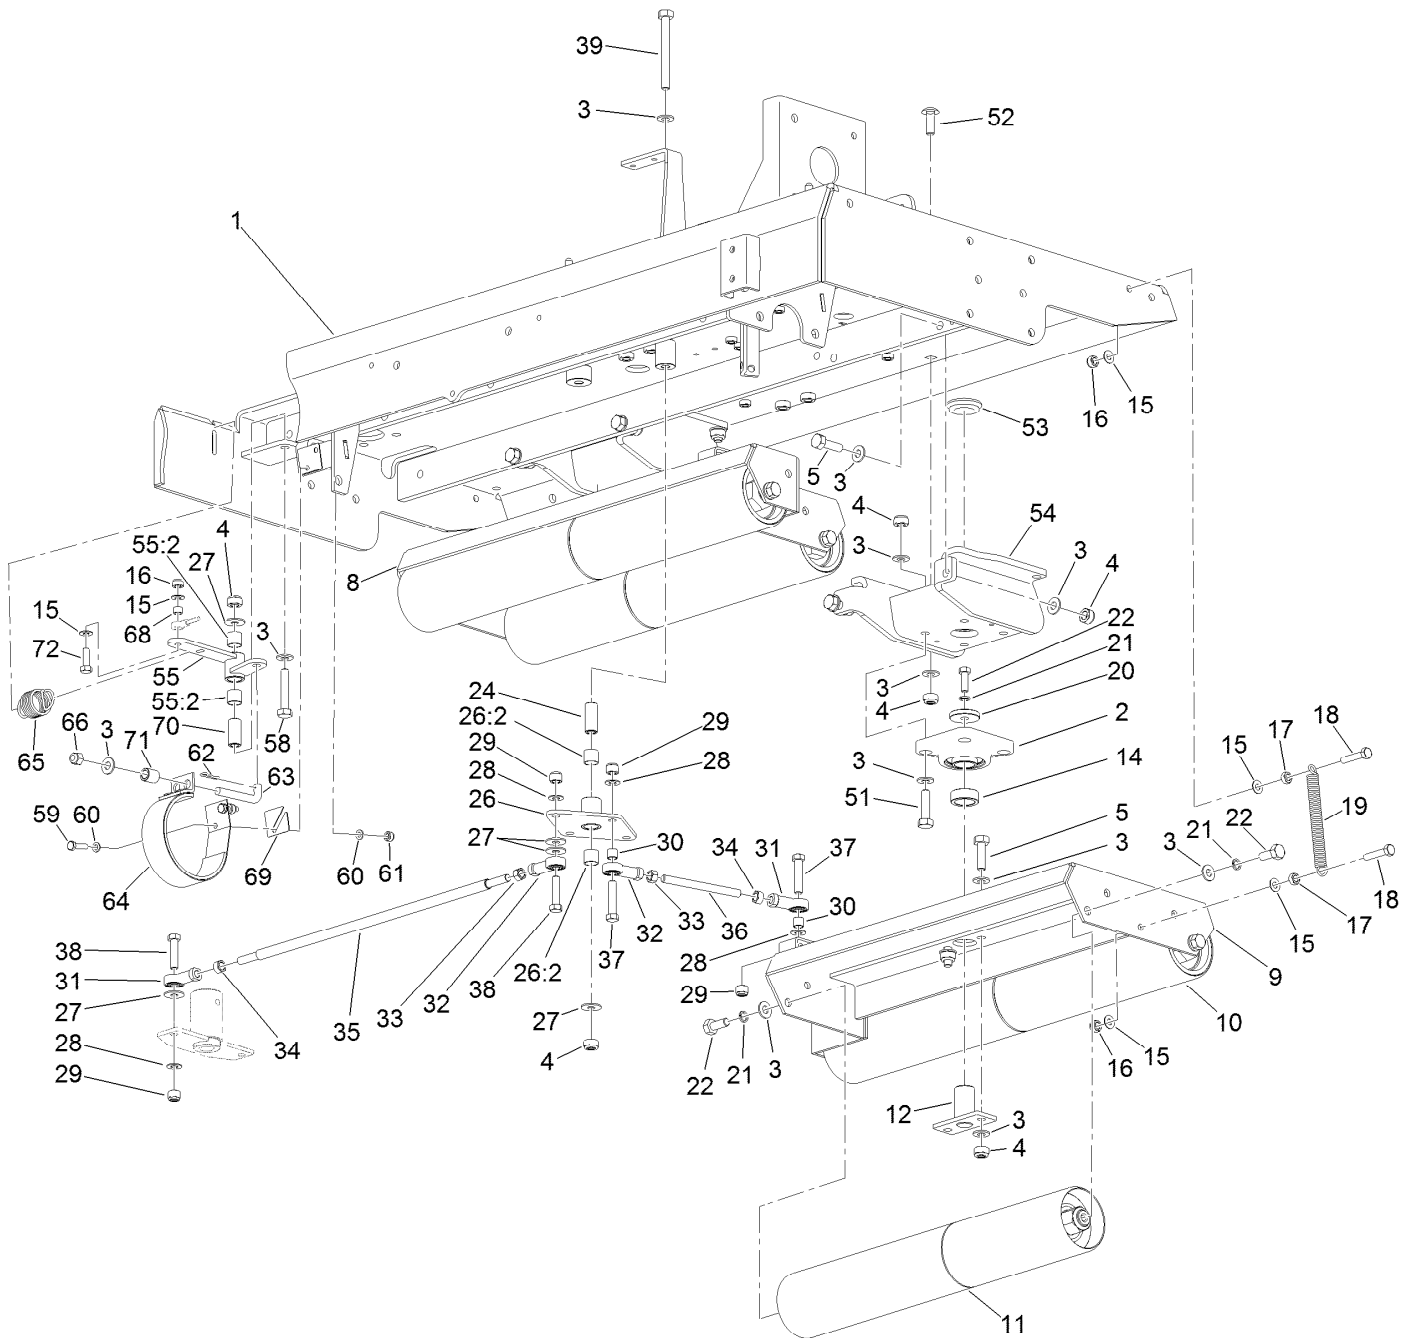


Steering Roller Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	131-1624-01	1	Roller Chassis	32	111-5959	3	Joint-Ball
2	111-5753	2	Bearing Housing ASM	33	111-5855	3	Nut-Hex, LH
3	ZWQ1J000U	46	Washer-Plain	34	09213	3	Nut
4	ZNN1J000U	21	Nut-Hex, NI	35	111-5692	1	Rod-Pivot, Steering
5	09394	8	Bolt	36	131-1579	2	Linkage Arm
8	131-6429-01	1	Front Steering Head	37	09119	4	Bolt
9	131-6430-01	1	Rear Steering Head	38	09118	2	Bolt-HH
10	127-7958	2	Complete Long Steering Roller ASM	39	ZBH1J095U	1	Bolt-HH
11	127-7963	2	Complete Short Steering Roller ASM	51	09611	8	Bolt-HH
12	111-5688	2	Shaft-Pivot	52	33125-030	3	Screw-CARR
14	111-6108	2	Bushing-Axle	53	107-3532	2	Grommet
15	09475	10	Washer	54	131-6366-01	2	Support-Roller
16	09441	5	Nut-Hex, NI	55	131-1626	1	Brake Pivot ASM
17	ZNH1H000U	4	Nut-Hex	55:2	256-311	2	Bushing-Split
18	09681	4	Bolt	58	57-6360	1	Screw-Clutch
19	111-5883	2	Spring-Extension	59	09044	2	Screw-Set
20	111-5674	2	Collar-Fixing	60	09472	4	Washer-Plain
21	09480	10	Washer-Lock	61	09201	2	Nut
22	09395	10	Screw-HH	62	1-806003	1	Pin-Cotter
24	127-5938	1	Bushing-Pivot	63	131-1584	1	Rod-Brake
26	127-5949	1	Steering Disc ASM	64	9593	1	Brake Band ASM
26:2	256-311	2	Bushing-Split	65	13-3090	1	Spring-Finger
27	HY03355	5	Washer-Plated	66	3296-39	1	Nut-Lock, NI
28	09271	6	Washer-Plain	68	108-7983	1	Bushing-Cable
29	09216	6	Nut-Hex, NI	69	131-6353	1	Shim-1 Mm
30	111-5684	4	Bushing	70	131-6350	1	Bushing-Pivot
31	111-5748	3	Joint-Ball	71	131-6367	1	Spacer
				72	03162	1	Screw-HH

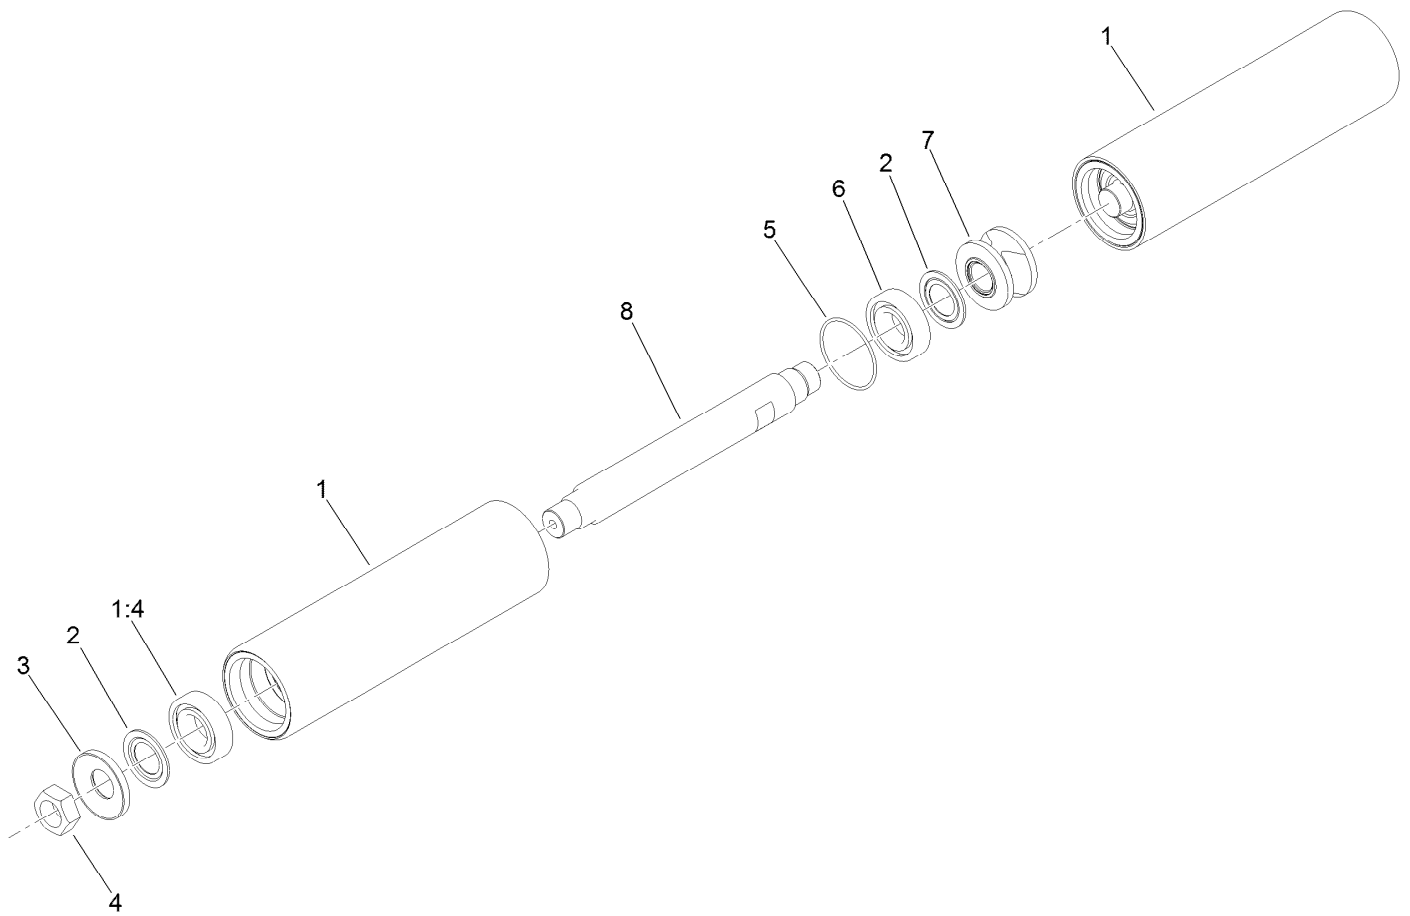 

Complete Long Steering Roller Assembly No. 127-7958


Ref.	Part Number	Qty.	Description
1	127-7966	2	Long Steering Roller ASM
1:4	115-3296	1	Bearing-Sealed
2	115-3299	4	Seal-Flocked
3	127-7959	2	Spacer-Bearing
4	3296-49	2	Nut-Lock, NI
5	117-8177	2	O-Ring
6	115-3296	2	Bearing-Sealed
7	127-7960	1	Sleeve-Roller
8	127-8029	2	Shaft-Roller

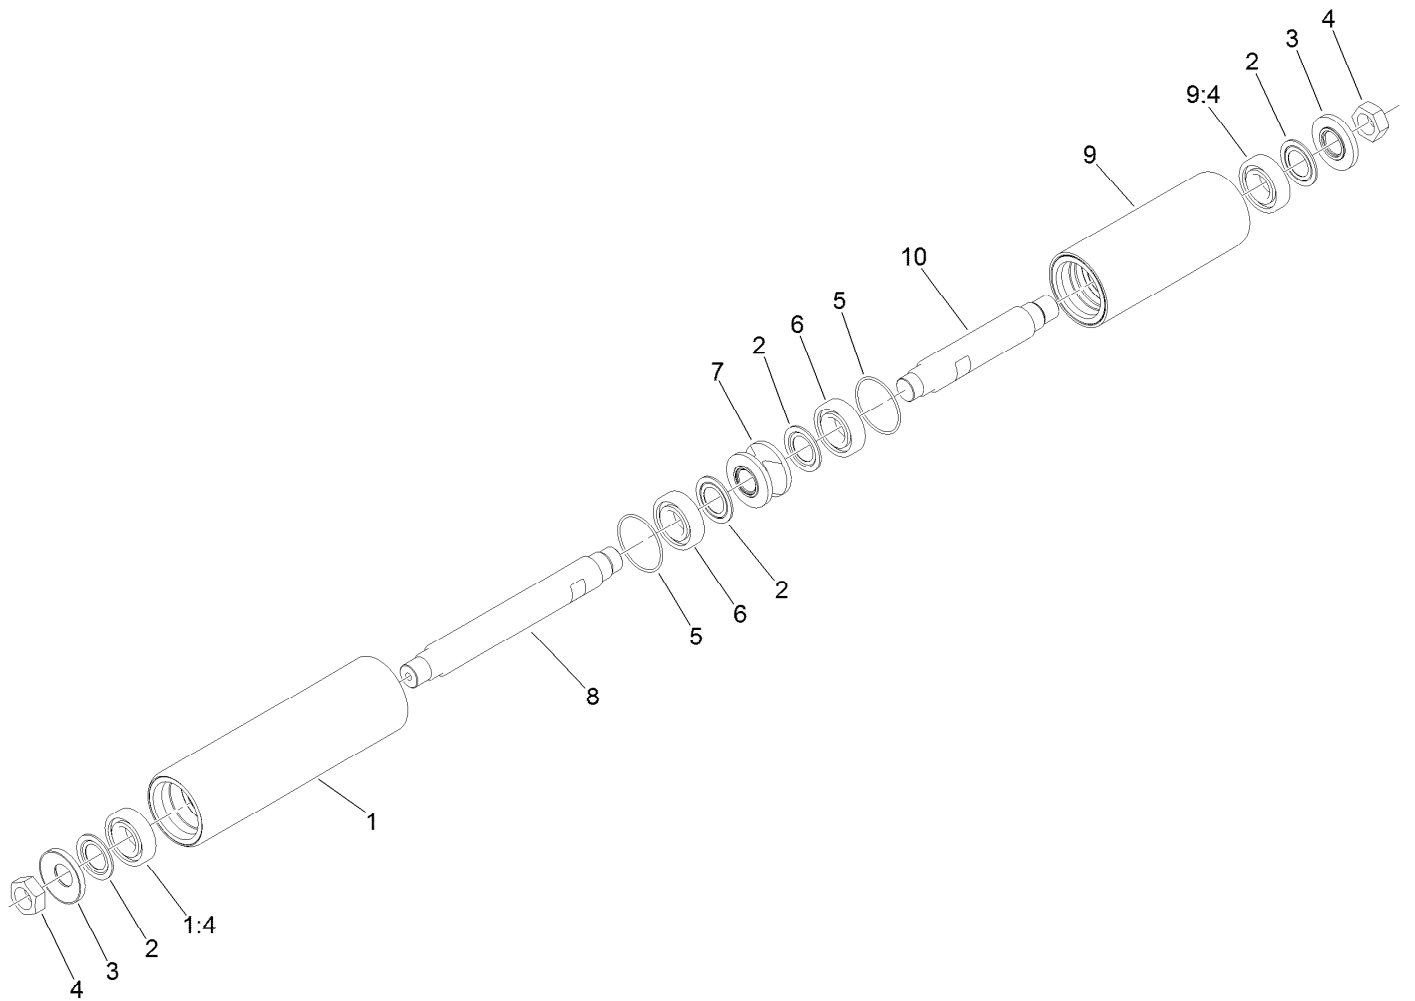 

Complete Short Steering Roller Assembly No. 127-7963

Ref.	Part Number	Qty.	Description
1	127-7966	1	Long Steering Roller ASM
1:4	115-3296	1	Bearing-Sealed
2	115-3299	4	Seal-Flocked
3	127-7959	2	Spacer-Bearing
4	3296-49	2	Nut-Lock, NI
5	117-8177	2	O-Ring
6	115-3296	2	Bearing-Sealed
7	127-7960	1	Sleeve-Roller
8	127-8029	1	Shaft-Roller
9	127-7967	1	Short Steering Roller Assy
9:4	115-3296	1	Bearing-Sealed
10	127-8030	1	Shaft-Roller

 
Hydraulic Tank and Hose Assembly

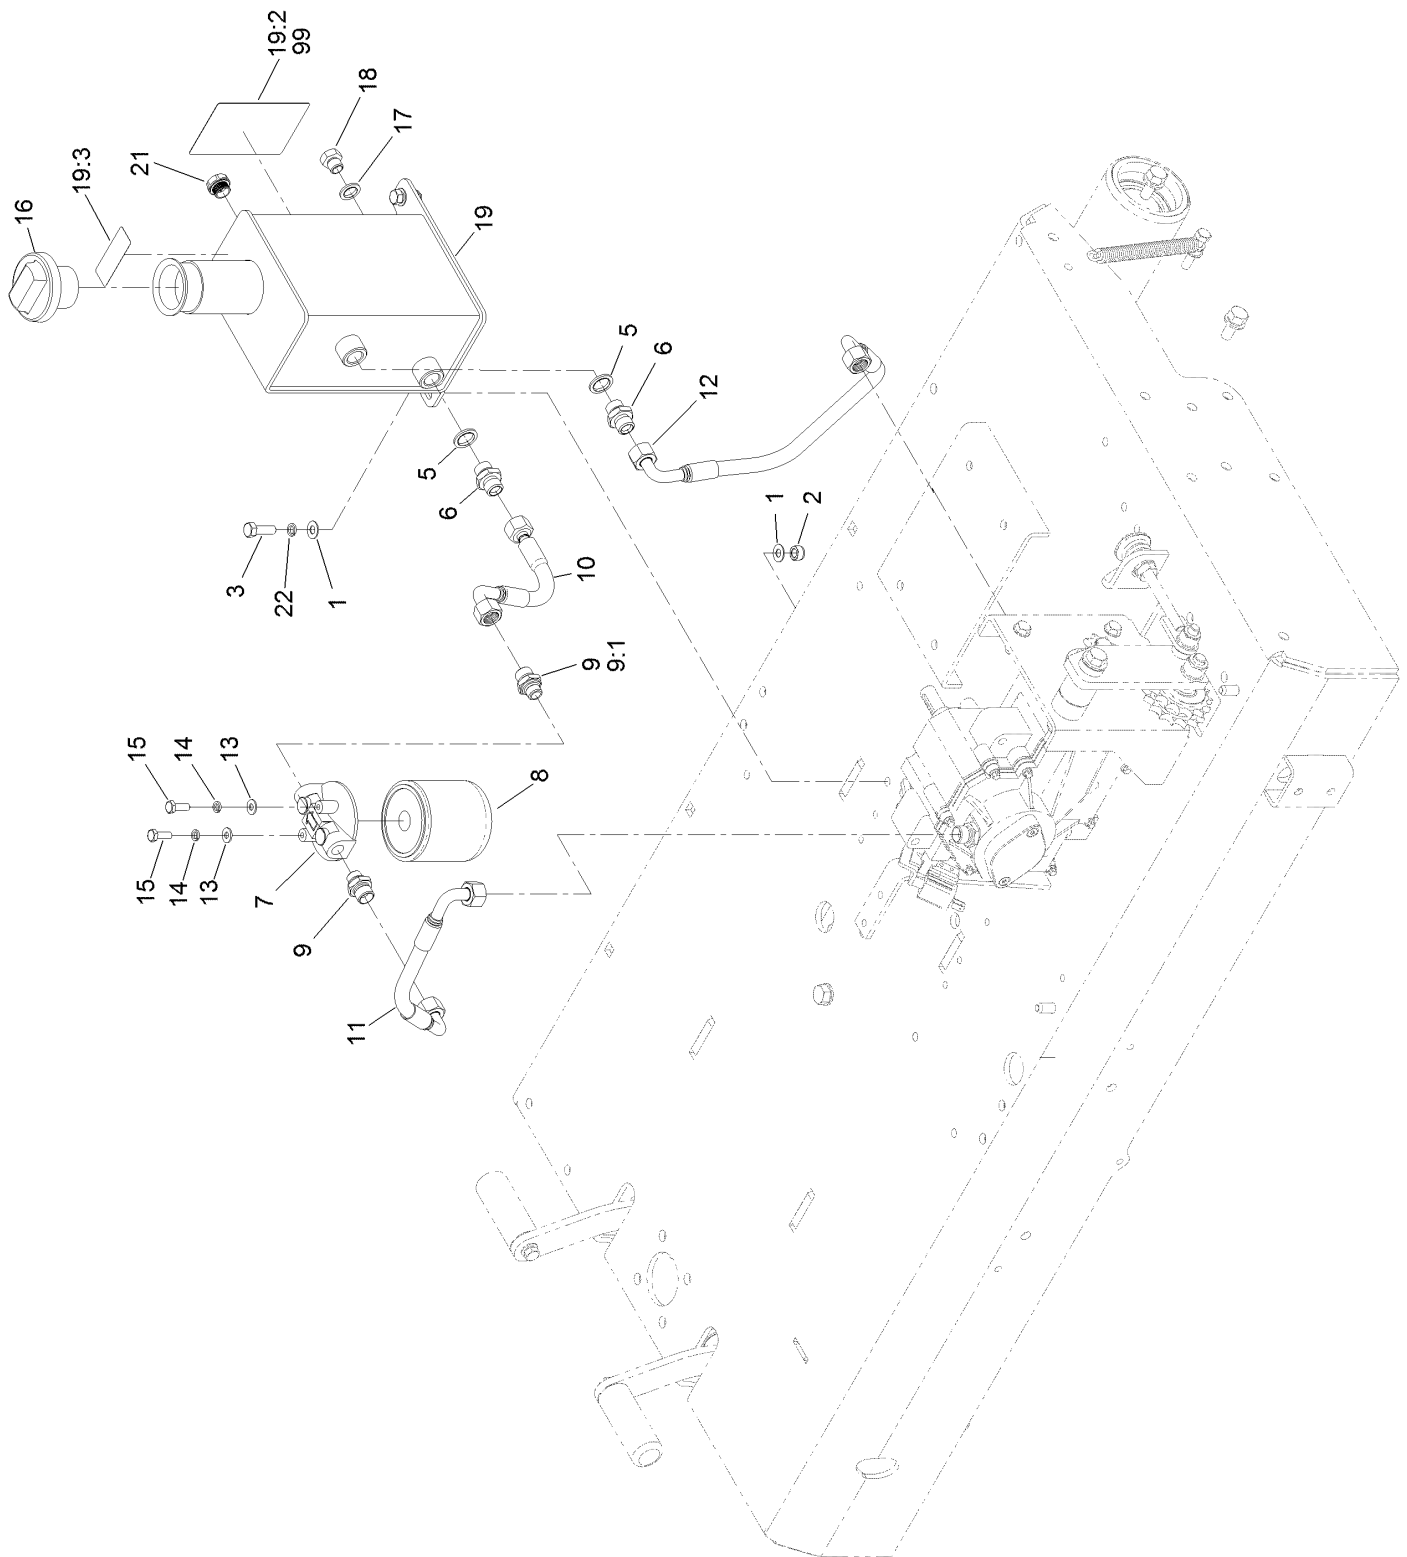

Hydraulic Tank and Hose Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	09475	4	Washer	13	09261	2	Washer-Plain
2	09441	2	Nut-Hex, NI	14	09264	2	Washer-Spring
3	03162	2	Screw-HH	15	09821	2	Screw-HH
5	10-06-031	2	Seal-Dowty	16	111-5749	1	Cap-Tank
6	10-06-042	2	Adaptor-Bspp	17	10-06-030	1	Seal-Dowty
7	104-7836	1	Head-Filter	18	30-06-200	1	Plug-HYD
8	1-633750	1	Filter-Oil, HYD	19	131-6375	1	Tank-Oil
9	111-4788	2	Fitting-Straight	19:2	127-5832	1	Decal-Warning
9:1	70-06-165	1	Seal-O Ring	19:3	93-6686	1	Decal-Oil, HYD
10	111-5956	1	HYD Hose ASM	21	127-5834	1	Glass-Sight
11	111-5957	1	HYD Hose ASM	22	03469	2	Washer-Spring
12	111-5958	1	HYD Hose ASM	99	131-6371	1	Decal-Warning, Ce

 
Drive Roller Assembly

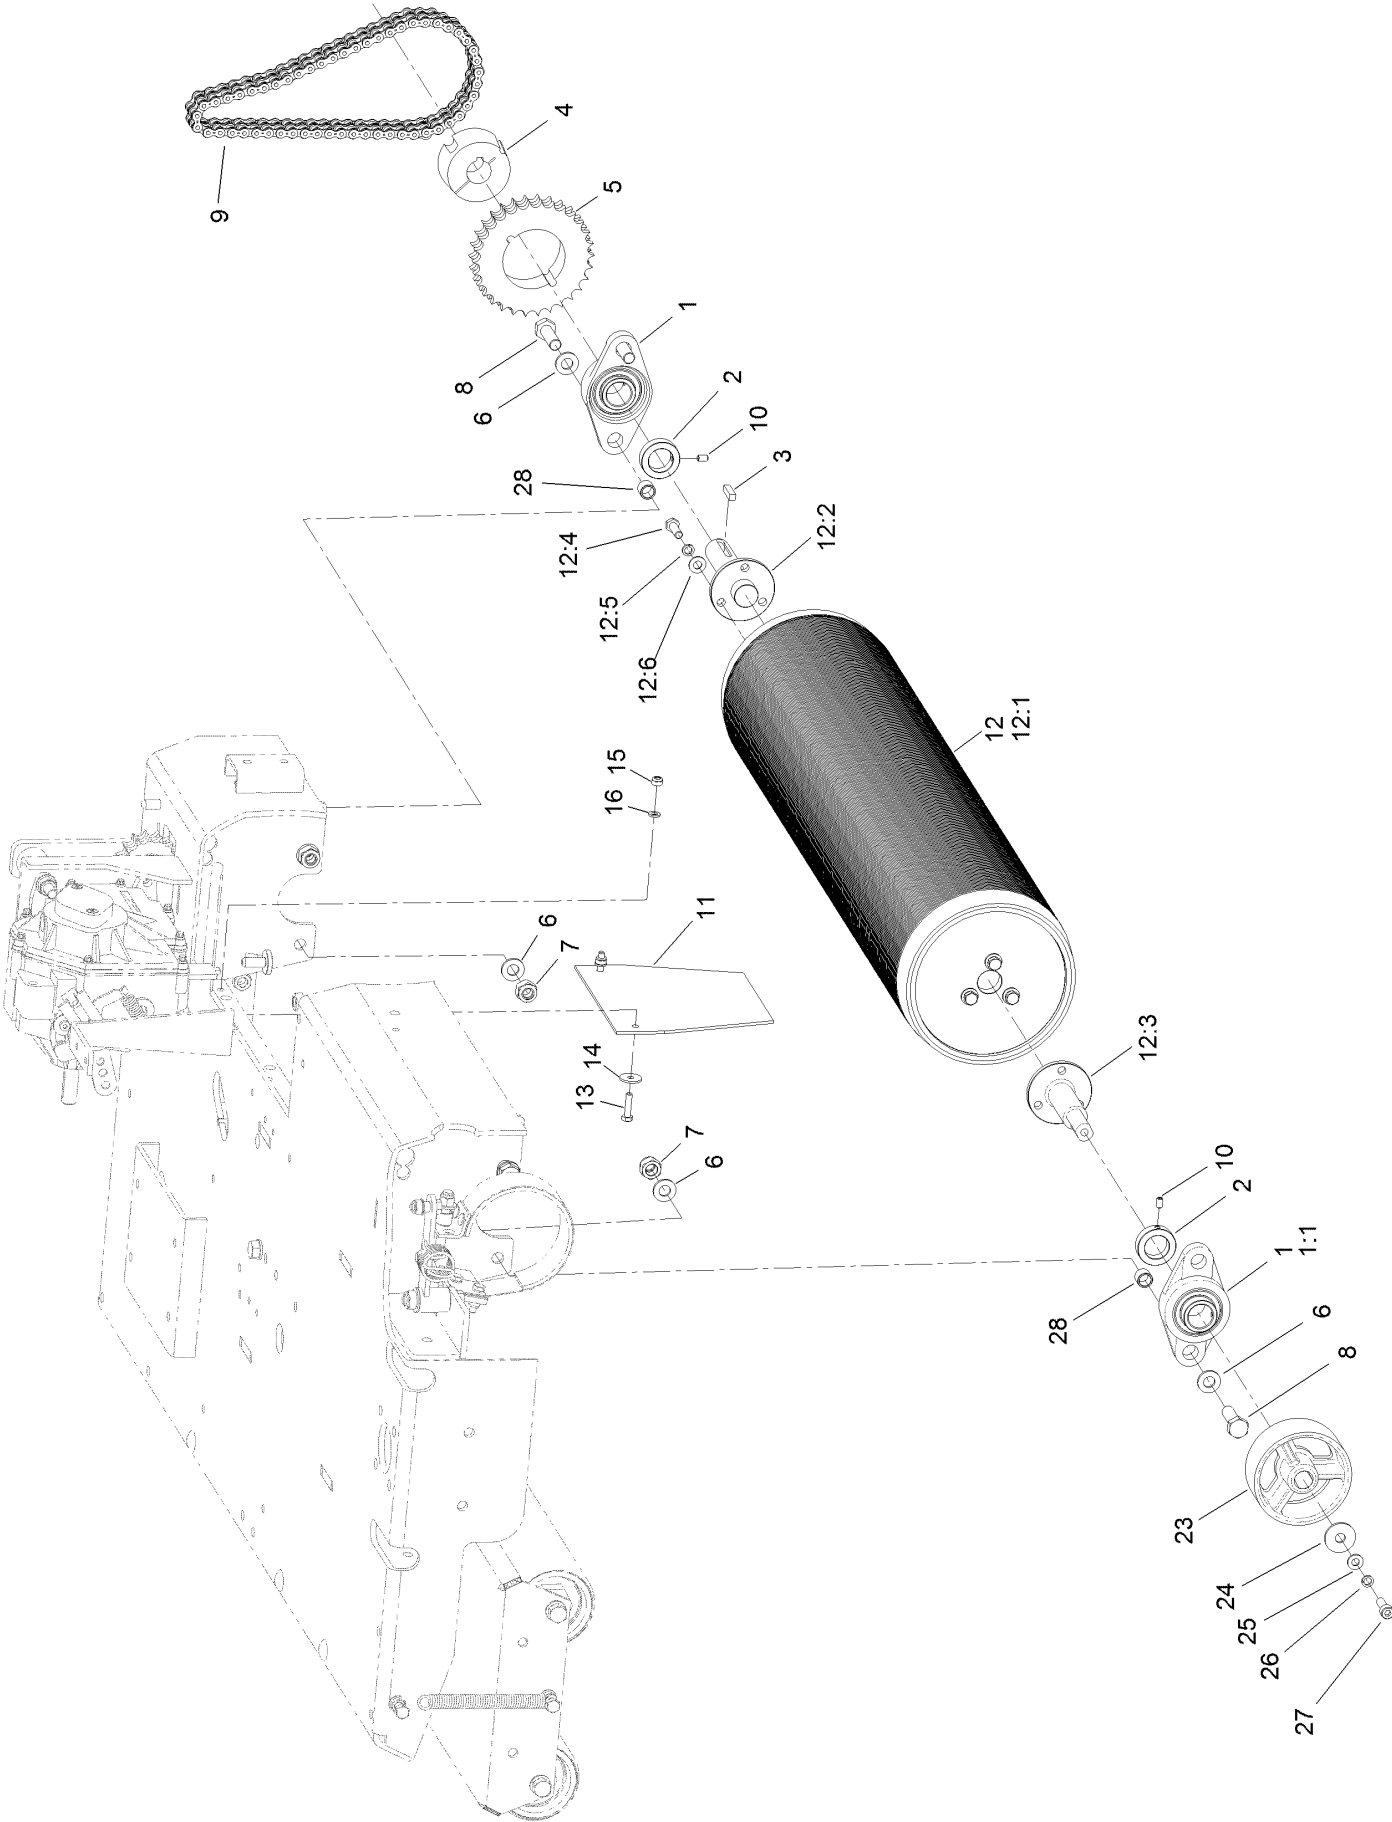

Drive Roller Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	111-5744	2	Bearing ASM	12:3	131-1581	1	Roller Axle
1:1	111-5758	1	Bearing	12:4	09073	6	Setscrew
2	111-5785	2	Collar	12:5	03469	6	Washer-Spring
3	04522	1	Key-Square	12:6	09266	6	Washer-Plain
4	111-5762	1	Hub-Taperlock	13	09364	2	Screw-HH
5	111-5763	1	Sprocket-30 Tooth, Duplex	14	09263	2	Washer
6	HY09485	8	Washer-Plain	15	09438	2	Nut-Nyloc
7	09650	4	Nut-Hex, Nyloc	16	09472	2	Washer-Plain
8	63-11-010	4	Bolt-HH	23	106719	1	Drum-Brake
9	127-5865	1	Chain-Drive	24	93-8806	1	Washer-Hardened
10	09619	2	Grubscrew	25	ZWP1H000U	1	Washer-Plain
11	111-7089	1	Guard-Chain, Rubber	26	03469	1	Washer-Spring
12	131-1623	1	Drive Roller ASM	27	ZCS1H025U	1	Screw-HSH
12:1	111-6857	1	Drum-Roller, Drive	28	131-6367	4	Spacer
12:2	111-5733	1	Axle-Roller, Keyed				

 
Engine Assembly

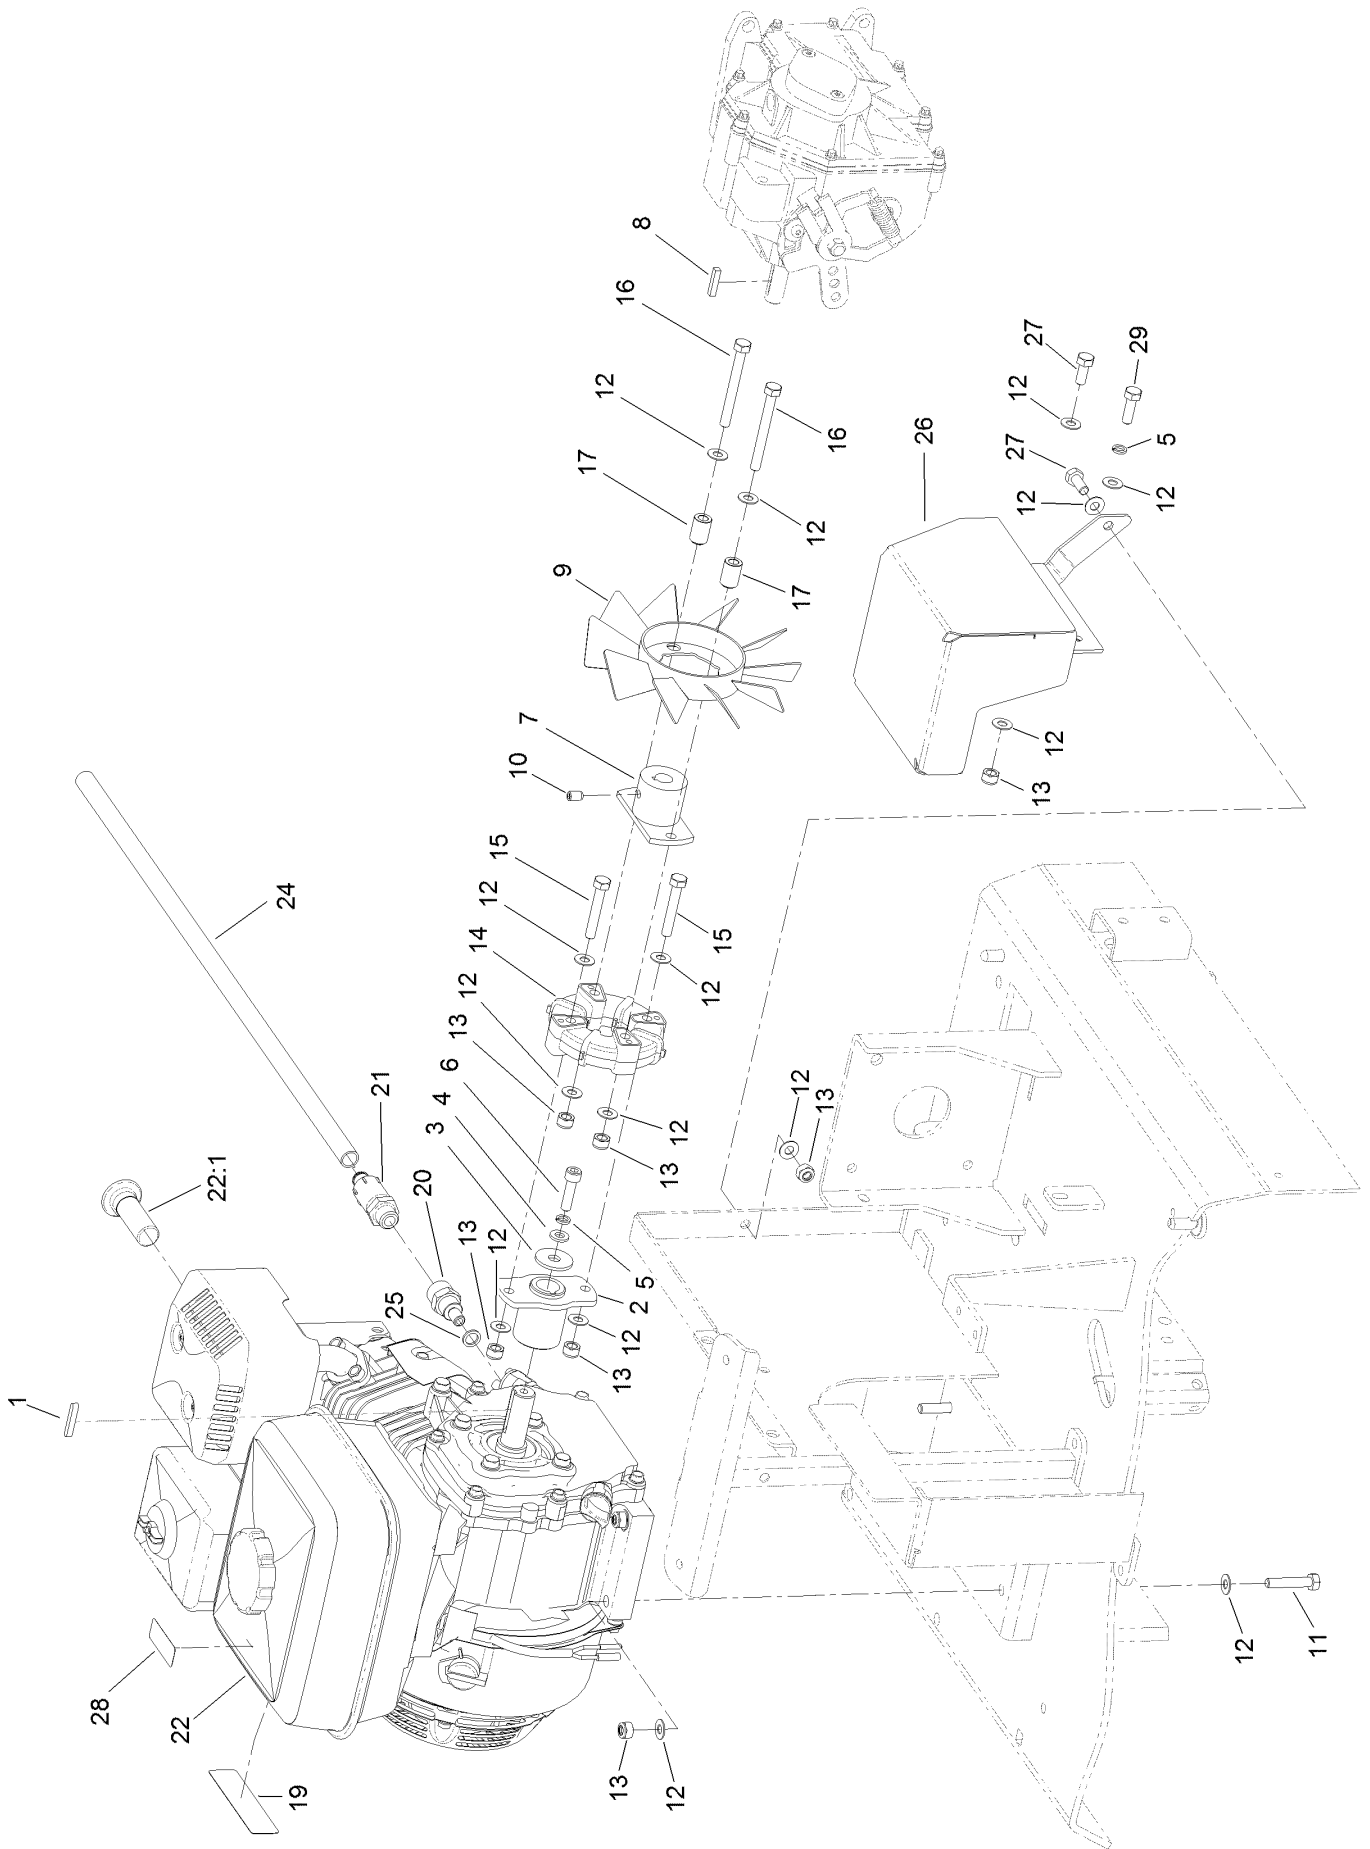

Engine Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	103-2739	1	Key	15	ZBH1H050U	2	Bolt
2	127-5799	1	Collar-Engine	16	ZBH1H075U	2	Bolt
3	93-8806	1	Washer-Hardened	17	127-5847	2	Bushing
4	ZWP1H000U	1	Washer-Plain	19	117-2718	1	Decal-Arrester, Spark
5	03469	2	Washer-Spring	20	111-7088	1	Adaptor-Drain, Oil
6	ZCS1H030U	1	Screw-Cap	21	92-6877	1	Valve-Drain, Oil
7	111-5730	1	Collar-Pump	22	111-7153	1	Engine-Honda
8	111-5724	1	Key-Square	22:1	111-6526	1	Arrester-Spark
9	127-5846	1	Fan	24	103-1964	1	Hose-Drain, Oil
10	131-6401	1	Screw-Set	25	111-7401	1	Washer-Plug, Sump
11	09681	4	Bolt	26	131-1610-03	1	Guard-Exhaust
12	09475	21	Washer	27	09368	2	Screw-HH
13	09441	10	Nut-Hex, NI	28	130-8322	1	Decal-Warning, Ethanol
14	119-0652	1	Coupler-Rubber	29	03162	1	Screw-HH

 Lifting Mechanism Assembly

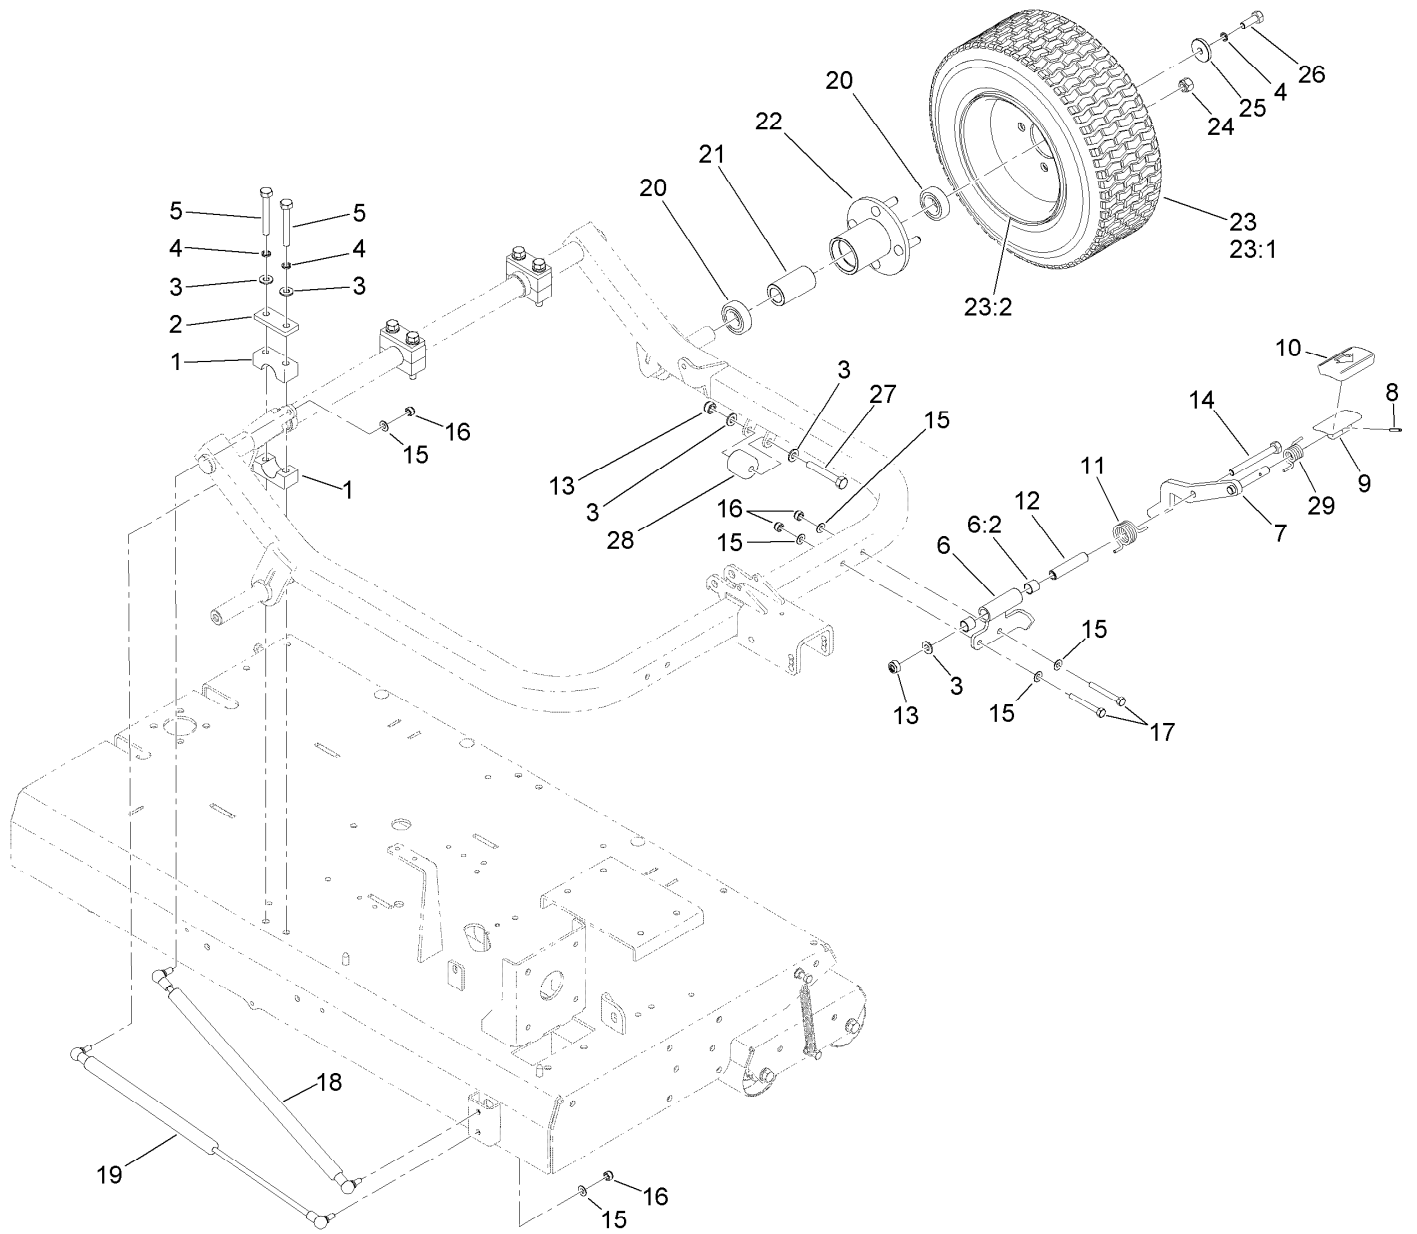


Lifting Mechanism Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-8044	3	Clamp-Drawbar	16	09441	6	Nut-Hex, NI
2	111-5681	3	Plate-Clamp, Axle	17	ZBH1H065U	2	Bolt
3	ZWQ1J000U	9	Washer-Plain	18	127-1326	1	Damper
4	09480	8	Washer-Lock	19	125-5696	1	Spring-Gas
5	ZBH1J075U	6	Bolt-HH	20	120-4621	4	Bearing
6	127-1351	1	Pedal Pivot ASM	21	111-5858	2	Spacer-Bearing
6:2	256-311	2	Bushing-Split	22	111-7103-03	2	Wheel Hub ASM
7	127-1349-01	1	Lever-Pedal	23		2	Wheel And Tire ASM ●
8	32121-45	1	Pin-Spring	23:1	111-5755	1	Tyre
9	117-9507	1	Pedal-Accelerator	23:2	111-5756	1	Rim-Wheel
10	74-9100	1	Pad-Pedal, Forward	24	93-5268	8	Nut-Lug
11	127-1353	1	Spring-Torsion	25	111-5674	2	Collar-Fixing
12	127-1355	1	Spacer	26	09392	2	Screw-HH
13	ZNN1J000U	2	Nut-Hex, NI	27	09399	1	Bolt
14	ZBH1J095U	1	Bolt-HH	28	127-1342	1	Roller
15	09475	8	Washer	29	127-8034	1	Spring-Torsion

● Not serviced separately

 
Hitch Assembly

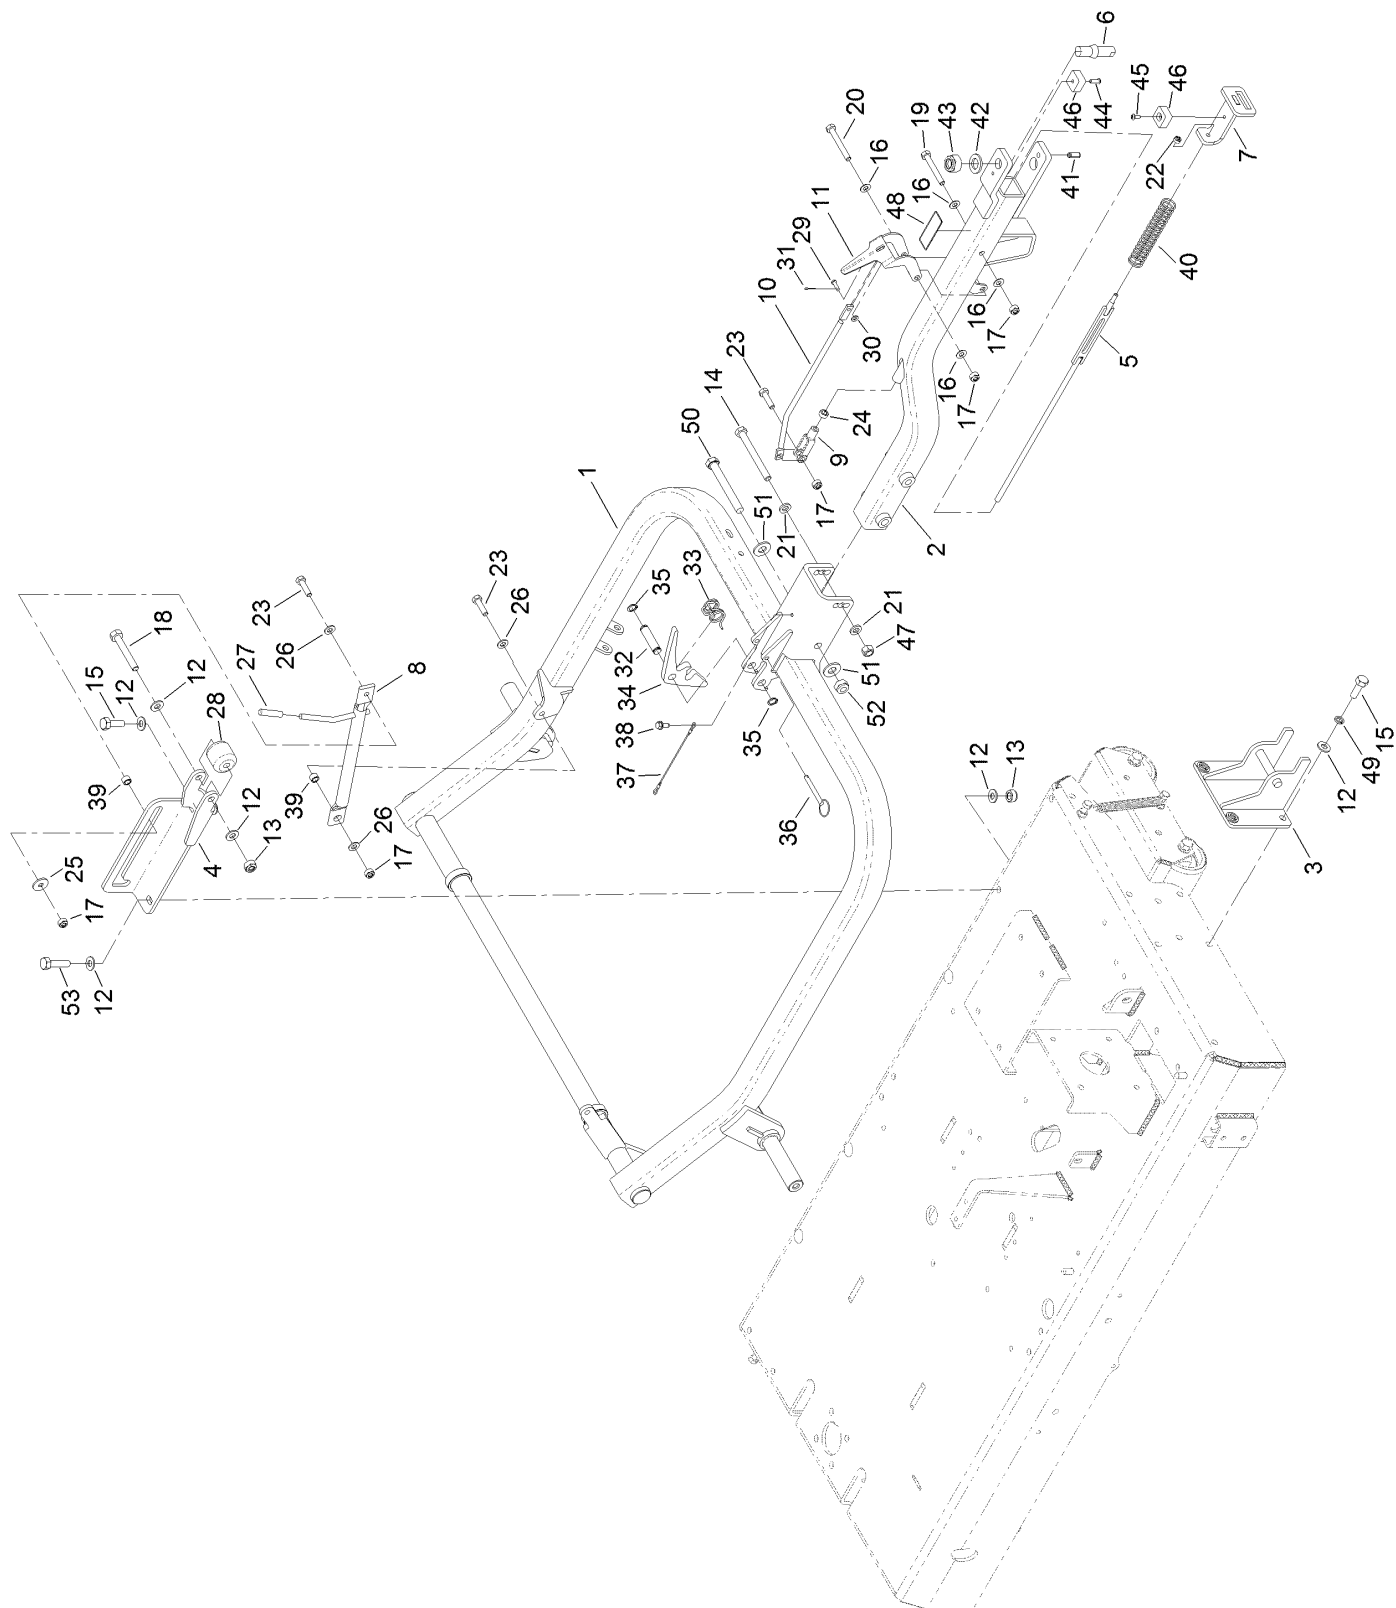

Hitch Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-5704-01	1	Hitch Pivot ASM	28	127-1342	1	Roller
2	125-5725-01	1	Hitch ASM	29	283-29	1	Pin-Clevis
3	125-5724-01	1	Bracket-Lock	30	3256-51	1	Washer-Flat
4	125-5717-01	1	Bracket-Slide	31	3272-1	1	Pin-Cotter
5	125-5743	1	Lever ASM	32	125-5731	1	Pin-Lock, Lever
6	127-5861	1	Pin-Tow	33	125-5723	1	Spring-Torsion
7	125-5741-01	1	Slide	34	125-5711-01	1	Latch-Hitch
8	125-5730-01	1	Lever	35	32151-61	2	Ring-Retaining
9	1-303105	1	Yoke-Adjustable	36	108-0094	1	Pin-Cotterless
10	127-1317	1	Wire-Form	37	28-8070	1	Lanyard
11	127-1321	1	Lever	38	32144-10	1	Screw-HWH
12	ZWQ1J000U	10	Washer-Plain	39	120-9697	2	Spacer
13	ZNN1J000U	3	Nut-Hex, NI	40	125-5737	1	Spring-Compression
14	127-5864	1	Screw-HH	41	32121-123	1	Pin-Roll
15	09392	5	Screw-HH	42	09491	1	Washer-Plain
16	09475	4	Washer	43	09456	1	Nut
17	09441	5	Nut-Hex, NI	44	119-7568	1	Screw-HSBH
18	09399	1	Bolt	45	127-5866	1	Screw-HSBH
19	09371	1	Bolt	46	94-1392	2	Pad-Rubber
20	ZBH1H065U	1	Bolt	47	131-1558	1	Nut-Lock
21	107-1413	2	Washer-Hardened	48	127-5885	1	Decal-Disconnect, Hitch
22	09438	1	Nut-Nyloc	49	09480	4	Washer-Lock
23	09369	3	Screw-HH	50	131-1557	1	Screw-HH
24	09207	1	Nut	51	87-7270	2	Washer-Thrust
25	1-603716	1	Washer-Friction	52	94-4307	1	Nut-Hex Lock
26	3256-23	3	Washer-Flat	53	09611	1	Bolt-HH
27	125-5722	1	Cap-Flex				

 Seat and Brake Lever Assembly

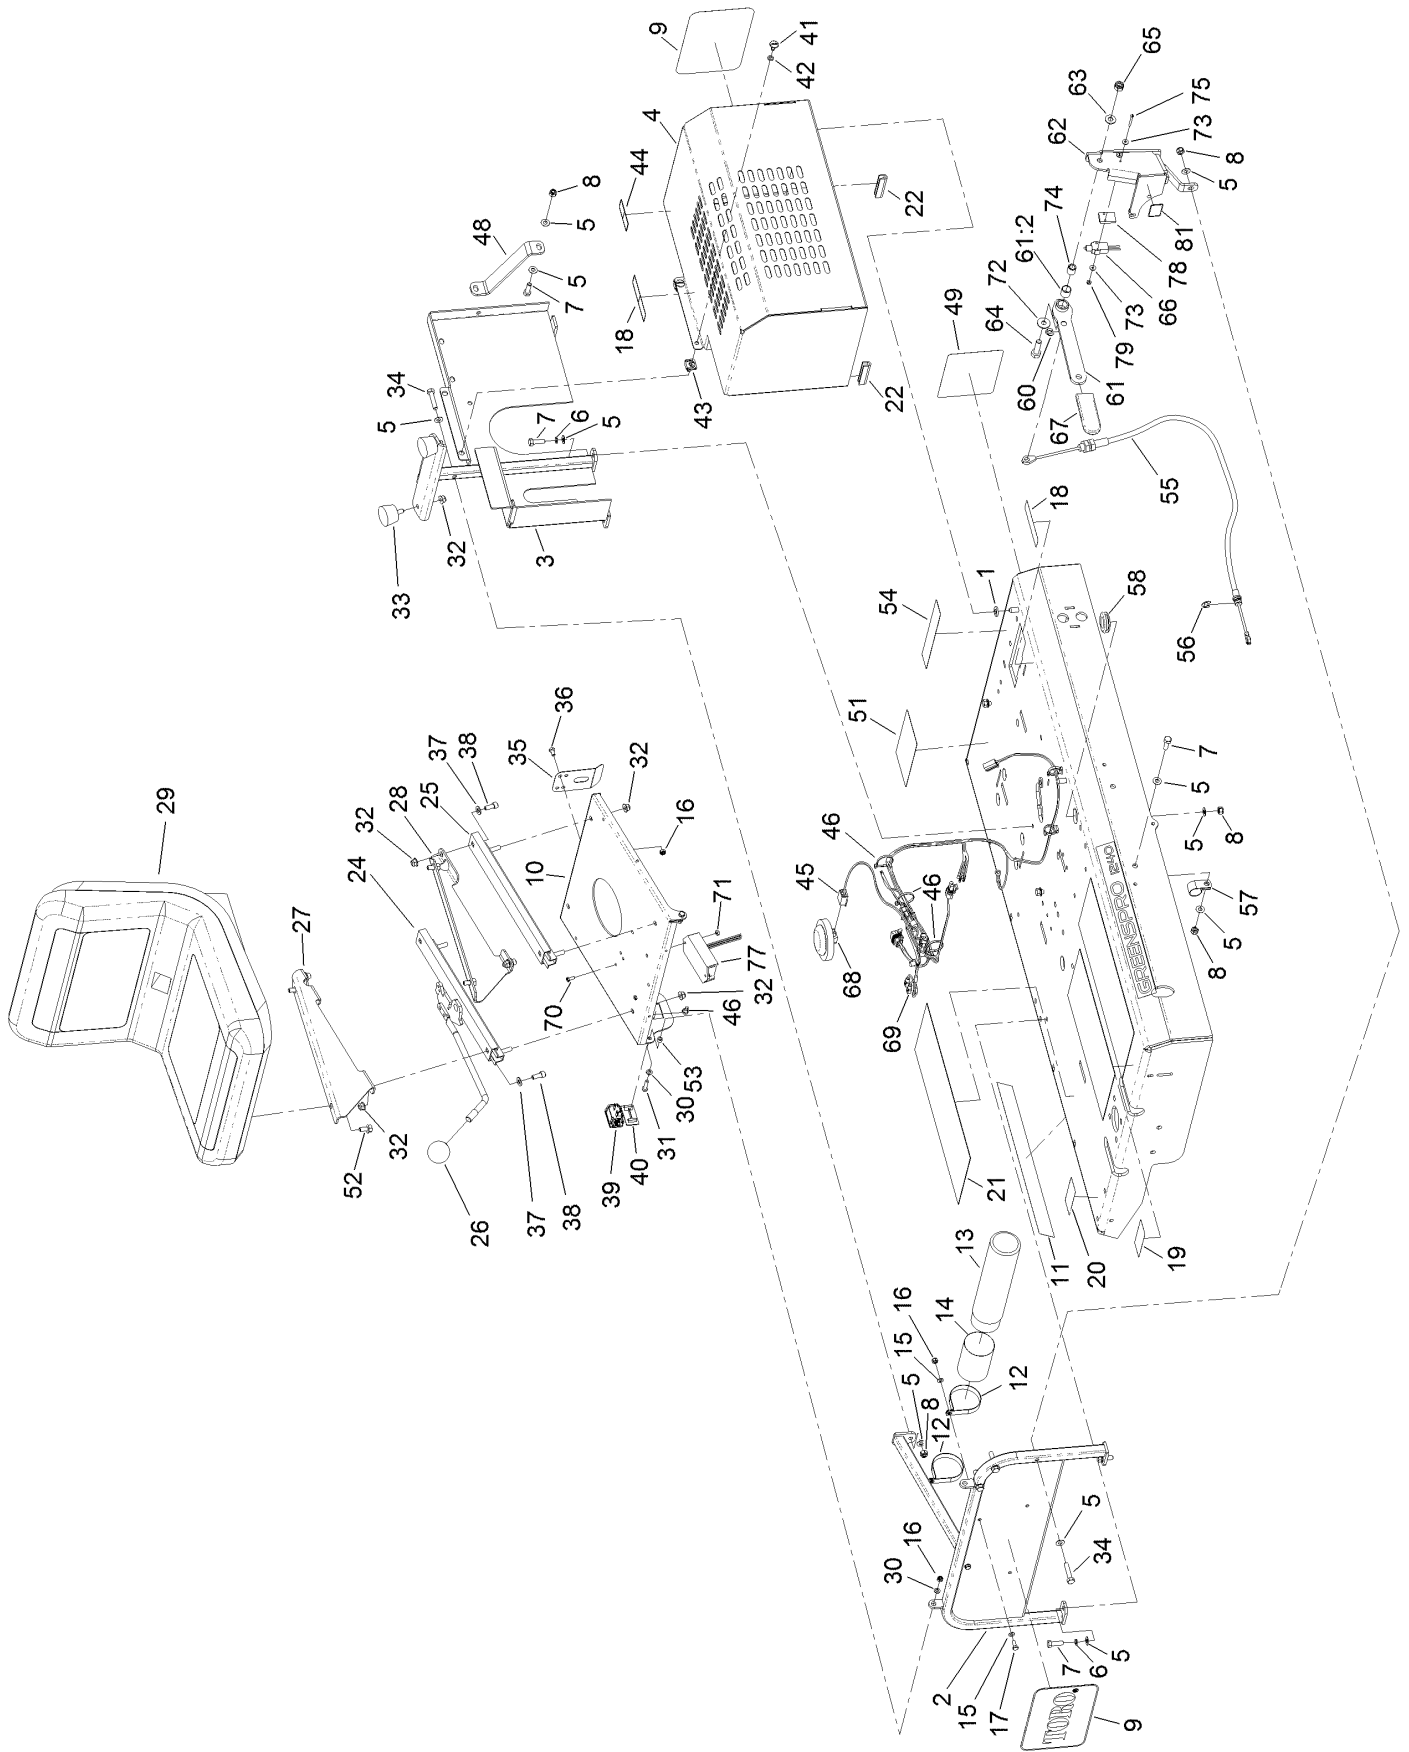


Seat and Brake Lever Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	111-5739	2	Washer-Rubber	49	127-5871	1	Decal-Service, Czech
2	131-6363-01	1	Seat Support	49	127-5872	1	Decal-Reference, Danish
3	131-1629-01	1	Frame-Support, Rear	49	127-5873	1	Decal-Reference, German
4	131-1615-01	1	Transmission Cover	49	127-5874	1	Decal-Reference, Spanish
5	09475	20	Washer	49	127-5875	1	Decal-Reference, Finnish
6	03469	5	Washer-Spring	49	127-5876	1	Decal-Reference, French
7	03162	7	Screw-HH	49	127-5877	1	Decal-Reference, Italian
8	09441	9	Nut-Hex, NI	49	127-5878	1	Decal-Reference, Japanese
9	111-3728	2	Decal	49	127-5879	1	Decal-Reference, Dutch
10	127-5752-01	1	Pan-Seat	49	127-5880	1	Decal-Reference, Norwegian
11	127-5895	2	Decal				
12	107-1865	2	R-Clamp	49	127-5881	1	Decal-Reference, Polish
13	104-7050	1	Tube-Manual	49	127-5882	1	Decal-Reference, Portuguese
14	104-7048	1	Cap-Housing				
15	ZWP1F000U	4	Washer-Plain	49	127-5883	1	Decal-Reference, Swedish
16	09438	6	Nut-Nyloc	51	127-5884	1	Decal-Operation
17	09362	2	Screw-HH	52	33104-016	4	Screw-HHF
18	111-5646	2	Decal-Warning	53	88-7860	2	Spacer
19	111-5649	1	Decal-Control, Pedal (Left)	54	127-8010	1	Decal-Adjust, Tension (Chain)
20	111-5650	1	Decal-Control, Pedal (Right)				
21	70-07-067	4	Tape-Slip, Anti	55	131-6361	1	Cable-Brake, Park
22	50-08-001	1	Edging-Rubber	56	32120-47	1	Ring-Retaining, External
24	119-4483	1	Seat Adjuster Lever ASM	57	2412-41	1	Clamp
25	92-8990	1	Adjuster-Slave	58	1-543286	1	Grommet
26	233-48	1	Knob	60	32151-47	1	Ring-Retaining
27	127-5759-01	1	Bracket-Seat, RH	61	131-6389	1	Brake Lever ASM
28	127-5754-01	1	Bracket-Seat, LH	61:2	256-311	1	Bushing-Split
29	111-5742	1	Seat ASM	62	131-6388-01	1	Support-Lever, Brake
30	09472	4	Washer-Plain	63	ZWQ1J000U	1	Washer-Plain
31	ZBH1F025U	2	Bolt-HH	64	09394	1	Bolt
32	104-8300	10	Nut-Flange, NI	65	ZNN1J000U	1	Nut-Hex, NI
33	68-3270	2	Bumper-Rubber	66	99-3410	1	Switch
34	09681	4	Bolt	67	21-1880	1	Grip-Handle
35	66-2630	1	Latch-Seat	68	100-3524	1	Switch-Seat
36	09361	2	Screw-HH	69	122-0570	1	Harness-Wire
37	3256-23	4	Washer-Flat	70	32105-8	2	Screw-SHH
38	3274-10	4	Screw-HSH	71	110-3145	2	Nut-Lock
39	120-2244	1	Hourmeter	72	HY03355	1	Washer-Plated
40	111-2337	1	Blank-Switch	73	3269-6	4	Washer-Flat
41	119-1728	2	Stud-1/4 Turn	74	131-6386	1	Pivot Bush
42	119-1729	2	Retainer-Stud	75	3249-11	2	Screw-Machine
43	119-1730	2	Receptacle-Clip, Mini	77	122-0423	1	Module-Ground, Magneto
44	127-0392	1	Decal-Hot Surface	78	131-6383	1	Spacer
45	122-0421	1	Harness-Wire	79	3296-9	2	Nut-Lock
46	HY3966	4	Tie-Cable	81	131-0440	1	Decal-Brake, Parking
48	127-5928-01	1	Support Strut	99	107-0342	1	Sealant-Electrical ●
49	127-5867	1	Decal-Service				

● Not illustrated

 
Steering Wheel Assembly

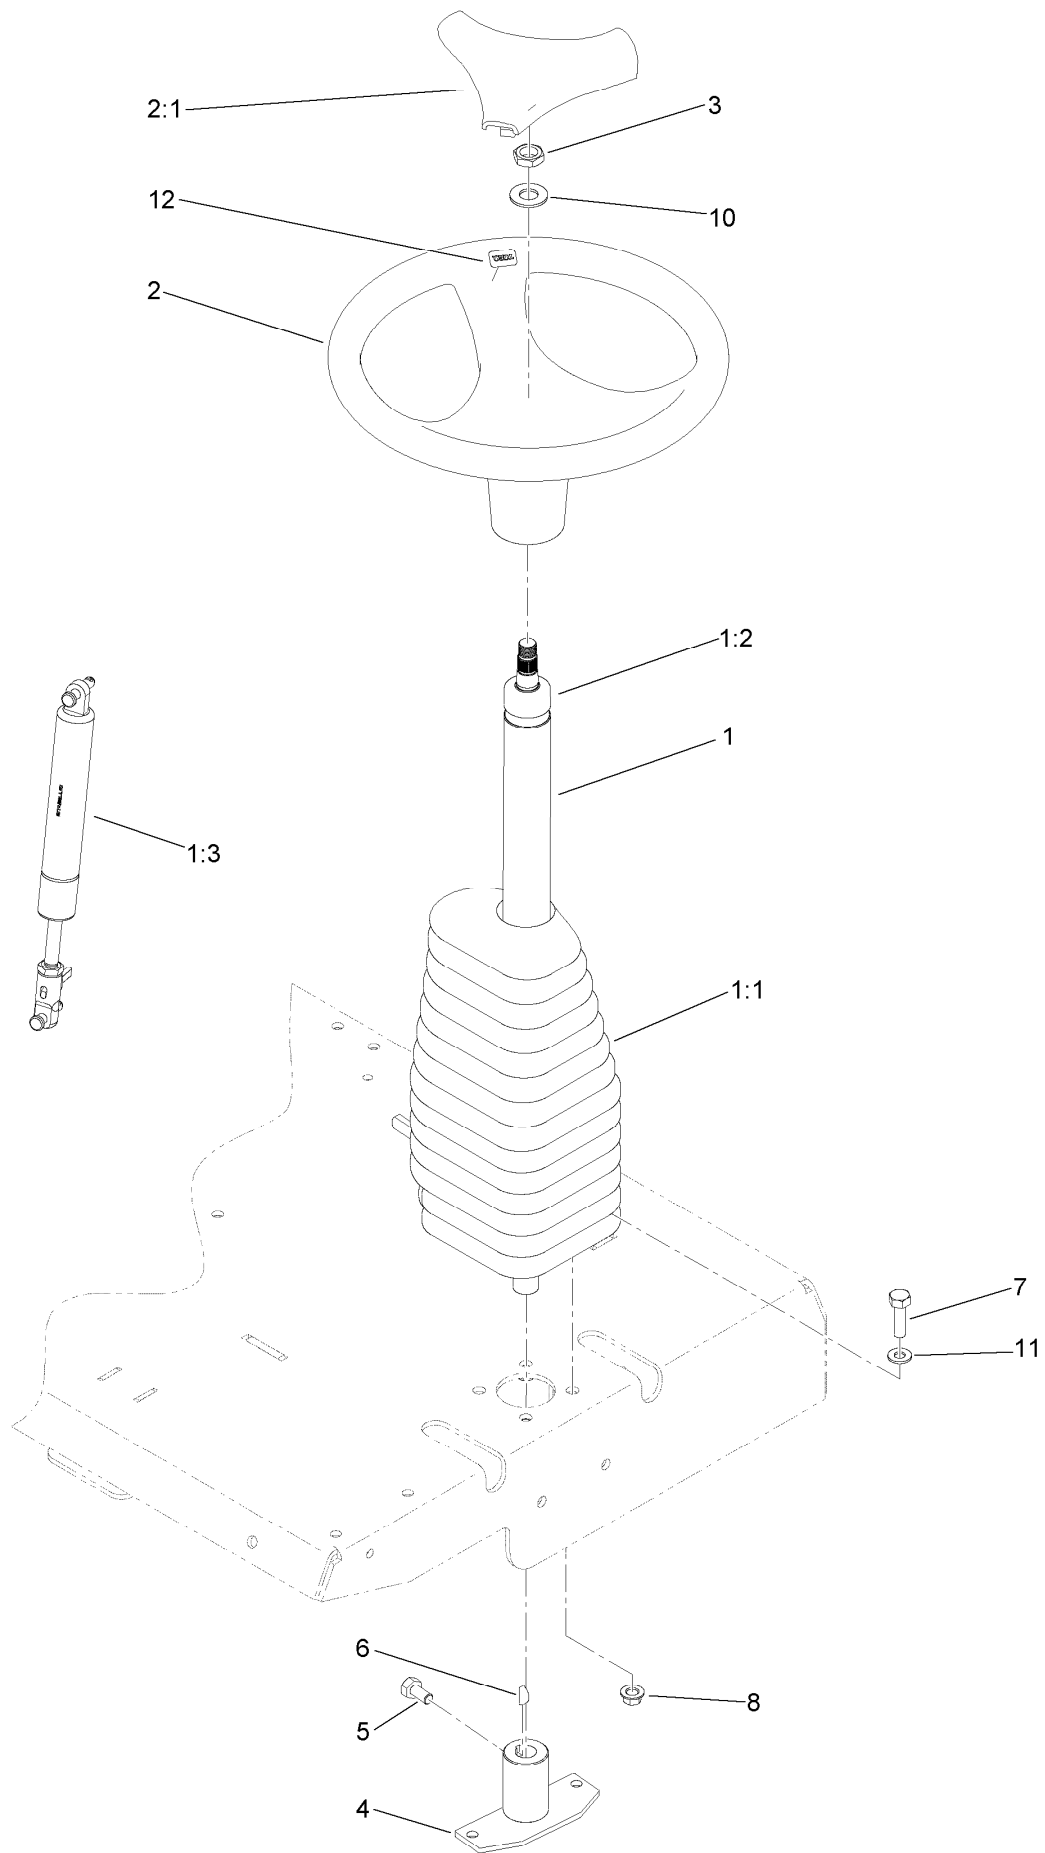

Steering Wheel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-8041	1	Column-Steering	5	09391	1	Screw-HH
1:1	120-2592	1	Boot-Rubber, Column	6	3257-7	1	Key-Woodruff
1:2	120-2593	1	Boot-Rubber, Bearing	7	09392	4	Screw-HH
1:3	120-2594	1	Gas Spring ASM	8	63-11-015	4	Nut-Flanged
2	98-1471	1	Wheel-Steering	10	3256-27	1	Washer-Flat
2:1	98-1468	1	Cover-Wheel, Steering	11	ZWQ1J000U	4	Washer-Plain
3	110-8816	1	Nut-Hex	12	98-1459	1	Decal
4	127-5776-01	1	Pivot-Steering				

 Transmission Control Assembly

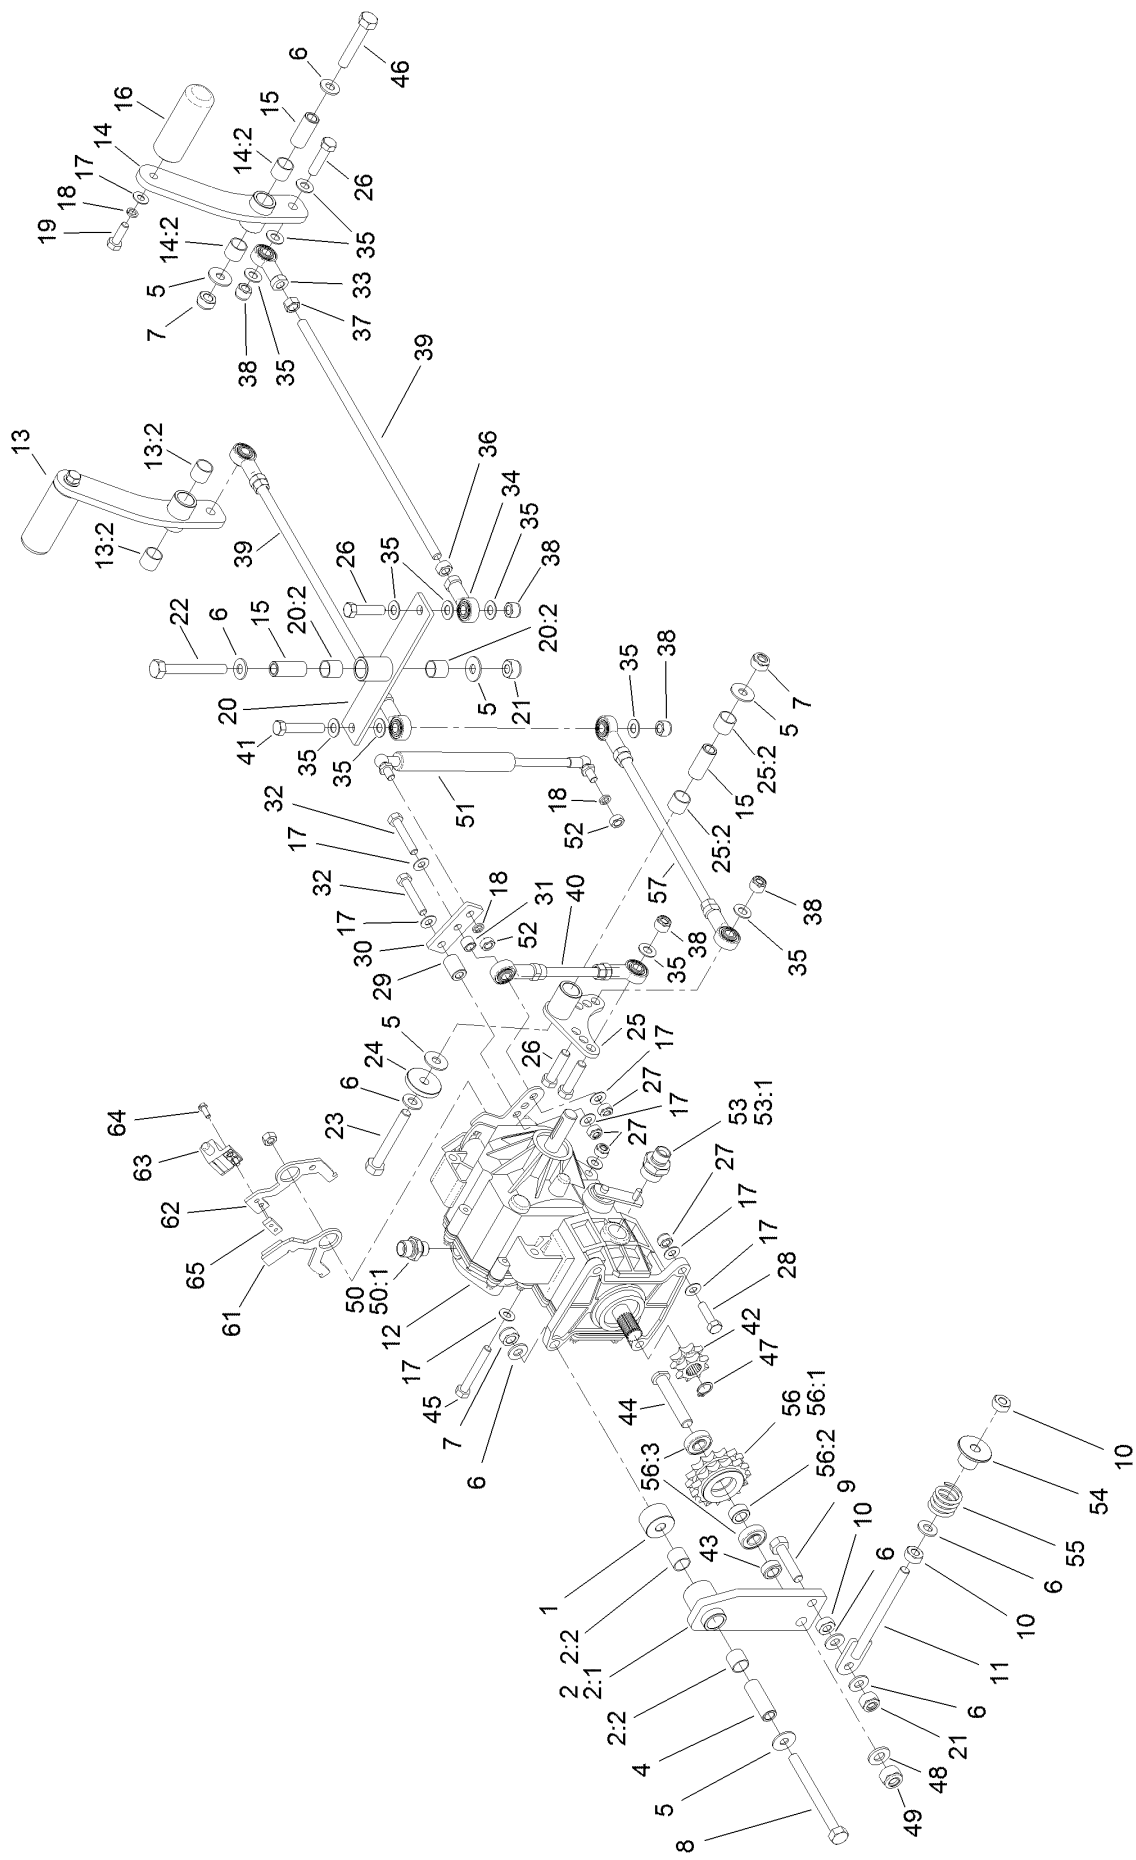


Transmission Control Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	111-5672	1	Spacer	31	111-5792	1	Bushing
2	127-7972	1	Idler Arm ASM	32	09654	2	Bolt
2:1	127-7970	1	Arm-Idler	33	111-5959	4	Joint-Ball
2:2	256-311	2	Bushing-Split	34	111-5748	4	Joint-Ball
4	127-7969	1	Bushing-Pivot	35	09271	14	Washer-Plain
5	HY03355	6	Washer-Plated	36	09213	4	Nut
6	ZWQ1J000U	8	Washer-Plain	37	111-5855	4	Nut-Hex, LH
7	ZNN1J000U	4	Nut-Hex, NI	38	09216	6	Nut-Hex, NI
8	09405	1	Bolt	39	111-5682	2	Rod-Linkage
9	ZDH1J045U	1	Screw-HH	40	111-5690	1	Arm-Linkage
10	09449	3	Nut	41	09121	1	Bolt
11	111-5736	1	Tensioning Rod ASM	42	127-5870	1	Sprocket-8 Tooth
12	111-6000	1	Transmission ASM	43	111-5712	1	Bushing-Idler, Gear
13	127-5948	1	Left Hand Motion Pedal ASM	44	111-5723	1	Bolt-Sprocket, Idler
13:2	256-311	2	Bushing-Split ●	45	09371	1	Bolt
14	127-5947	1	Right Hand Motion Pedal ASM	46	09397	2	Bolt
14:2	256-311	2	Bushing-Split	47	111-6009	1	Circlip-EXT
15	127-5938	4	Bushing-Pivot	48	HY09485	1	Washer-Plain
16	111-5727	2	Pedal	49	ZNN1L000U	1	Nut-Nyloc
17	09475	14	Washer	50	111-4788	1	Fitting-Straight
18	03469	4	Washer-Spring	50:1	70-06-165	1	Seal-O Ring
19	03162	2	Screw-HH	51	127-5896	1	Damper
20	127-5946	1	Pedal Rod Pivot ASM	52	ZNH1H000U	2	Nut-Hex
20:2	256-311	2	Bushing-Split	53	70-06-053	1	Adaptor-Boss
21	09447	2	Nut	53:1	63-06-111	1	Seal-O Ring
22	09404	1	Bolt	54	127-5829	1	Spacer
23	ZBH1J075U	1	Bolt-HH	55	127-5849	1	Spring-Compression
24	111-5674	1	Collar-Fixing	56	111-5768	1	Idler Sprocket ASM
25	127-7950	1	Lever Quadrant ASM	56:1	111-6116	1	Sprocket-Idler, 15T
25:2	256-311	2	Bushing-Split	56:2	111-6115	1	Spacer-Sprocket, Idler
26	09118	5	Bolt-HH	56:3	411027	2	Bearing
27	09441	6	Nut-Hex, NI	57	111-5697	1	Rod-Linkage, Long
28	09369	3	Screw-HH	61	131-1593	1	Arm
29	111-5722	1	Spacer-Damper	62	131-1594	1	Arm
30	111-5711	1	Plate-Damper	63	1-513051	1	Switch-Open, Normally
				64	32105-8	2	Screw-SHH
				65	1-633181	1	Plate-Tapped

● Not illustrated

 Transmission Assembly No. 111-6000

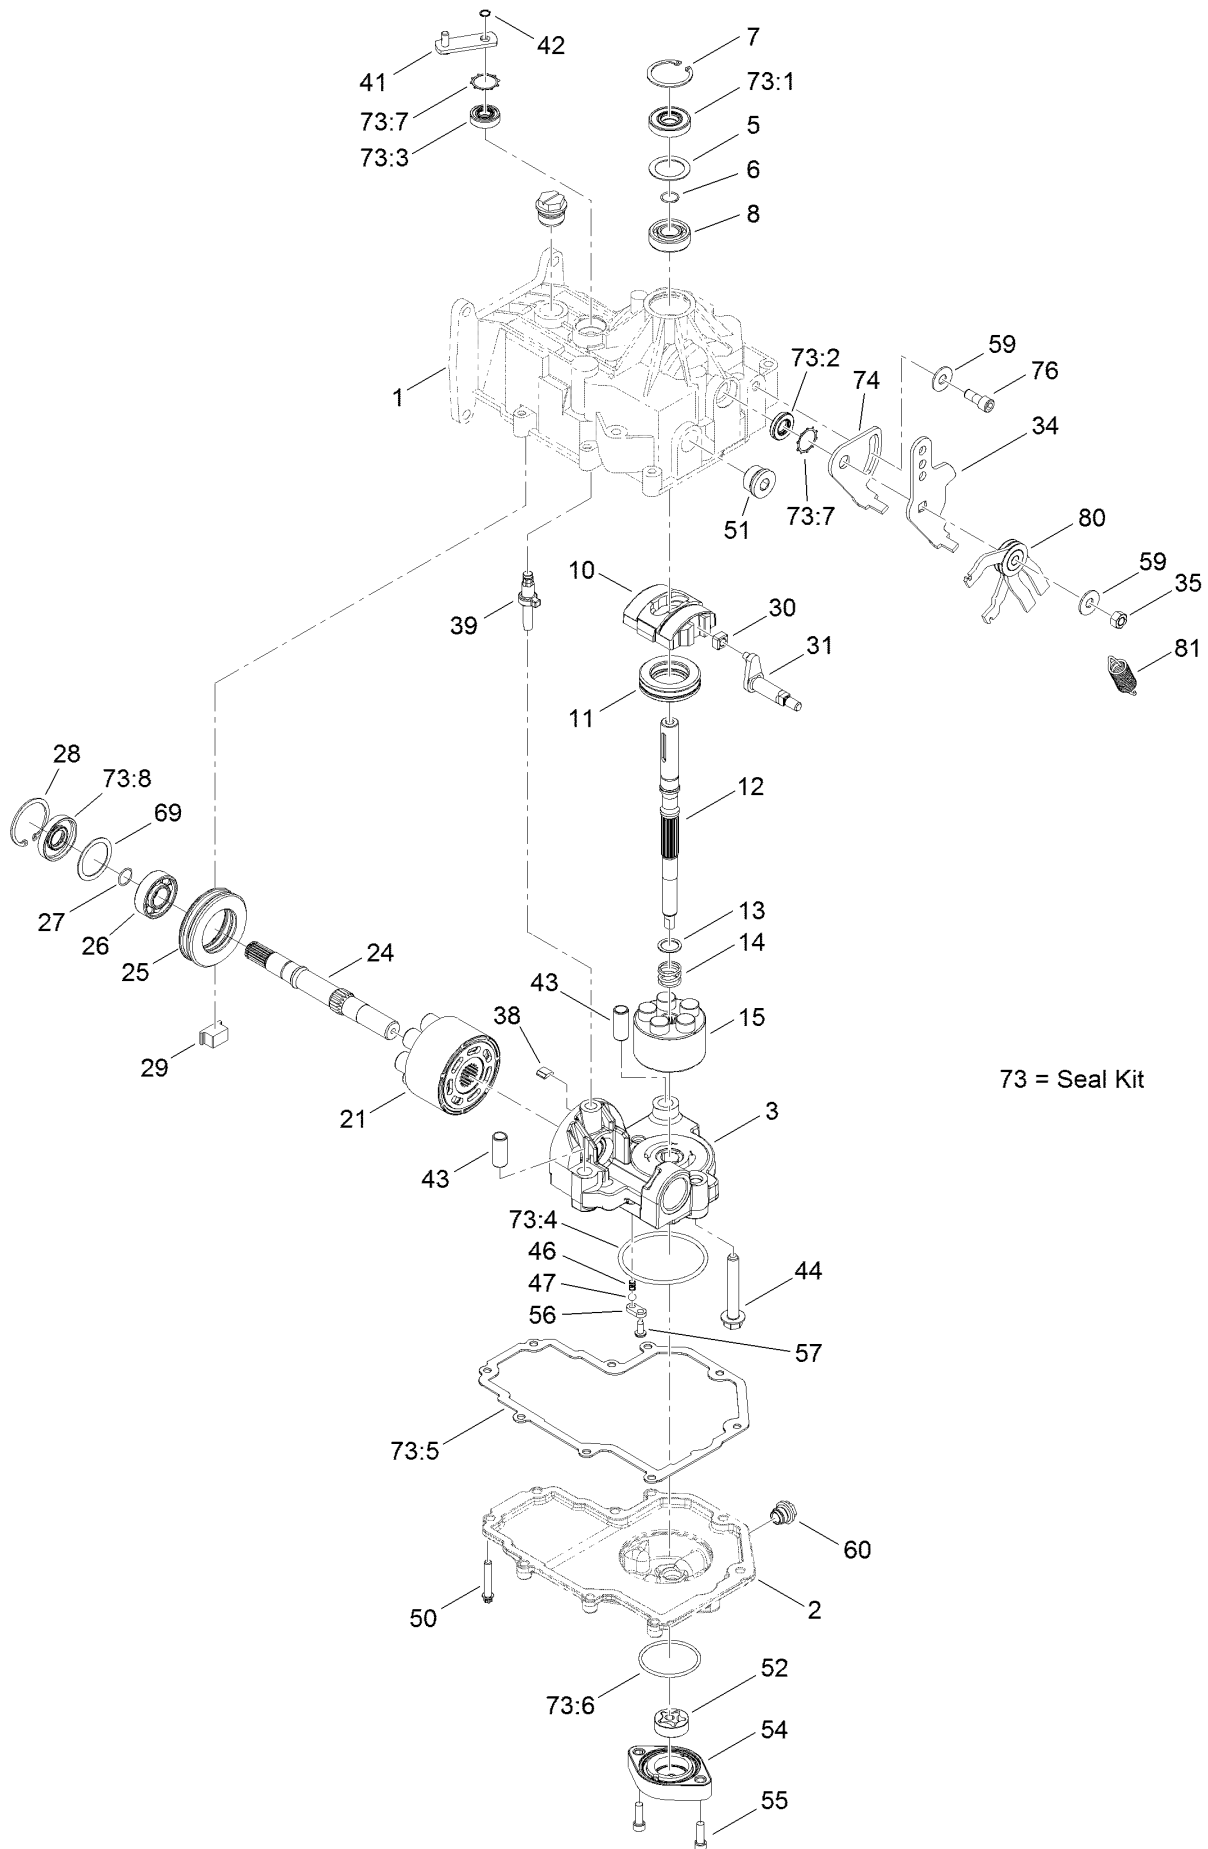


73 = Seal Kit

Transmission Assembly No. 111-6000 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Housing-Upper ●	43	94-1927	2	Pin
2		1	Housing-Lower ●	44	94-6926	3	Bolt
3	125-9162	1	Center Section Kit	46	108-8548	1	Spring-Helical
5	104-2104	1	Spacer	47	108-8549	1	Ball-1/4 Inch
6	119-5531	1	Ring-Retaining, Wire	50	94-1926	9	Bolt
7	119-5533	1	Ring-Retaining	51	125-9168	1	Plug
8	119-5530	1	Bearing-Ball	52	104-2122	1	Gerotor ASM
10	94-1907	1	Swashplate-Variable	54		1	Housing-Pump, Charge ●
11	94-6922	1	Bearing-Thrust	55	106-8758	2	Screw-HSH
12	125-9163	1	Shaft-Input	56	108-8550	1	Plate-Relief
13	120-5538	1	Washer	57	112-5910	1	Bolt-TAP
14	120-5537	1	Spring-Compression	59	5-4460	2	Washer-Pivot
15	103-2666	1	Cylinder Block Kit	60		1	Plug ●
21	94-1913	1	Cylinder Block ASM	69	104-5308	1	Spacer
24	125-9164	1	Shaft-Output	73	125-9176	1	Seal Kit
25	94-6923	1	Bearing-Thrust	73:1	119-5532	1	Seal-Lip
26	104-5311	1	Bearing-Ball	73:2	125-9166	1	Seal-Lip
27	104-5307	1	Ring-Retaining	73:3	92-6545	1	Seal-Lip
28	104-5309	1	Ring-Retaining	73:4	108-8545	1	O-Ring
29	125-9165	1	Retainer-Bearing, Motor	73:5		1	Gasket ●
30	94-1910	1	Guide-Slot	73:6	106-8757	1	O-Ring
31	104-2112	1	Trunnion ASM	73:7	125-9175	2	Ring-Retaining, Star
34	125-9167	1	Arm-Control	73:8	104-5310	1	Seal-Lip
35	32128-16	1	Nut-HHF	74	125-9177	1	Arm-Return
38	112-5892	1	Bypass Plate Kit	76	125-9178	1	Screw
39	94-1914	1	Actuator-Bypass	80	125-9179	1	Scissor Arm ASM
41	104-2117	1	Arm-Bypass	81	114-8462	1	Spring-Extension
42	936109	1	Ring-Retaining				

● Not serviced separately

 
Cylinder Head Assembly

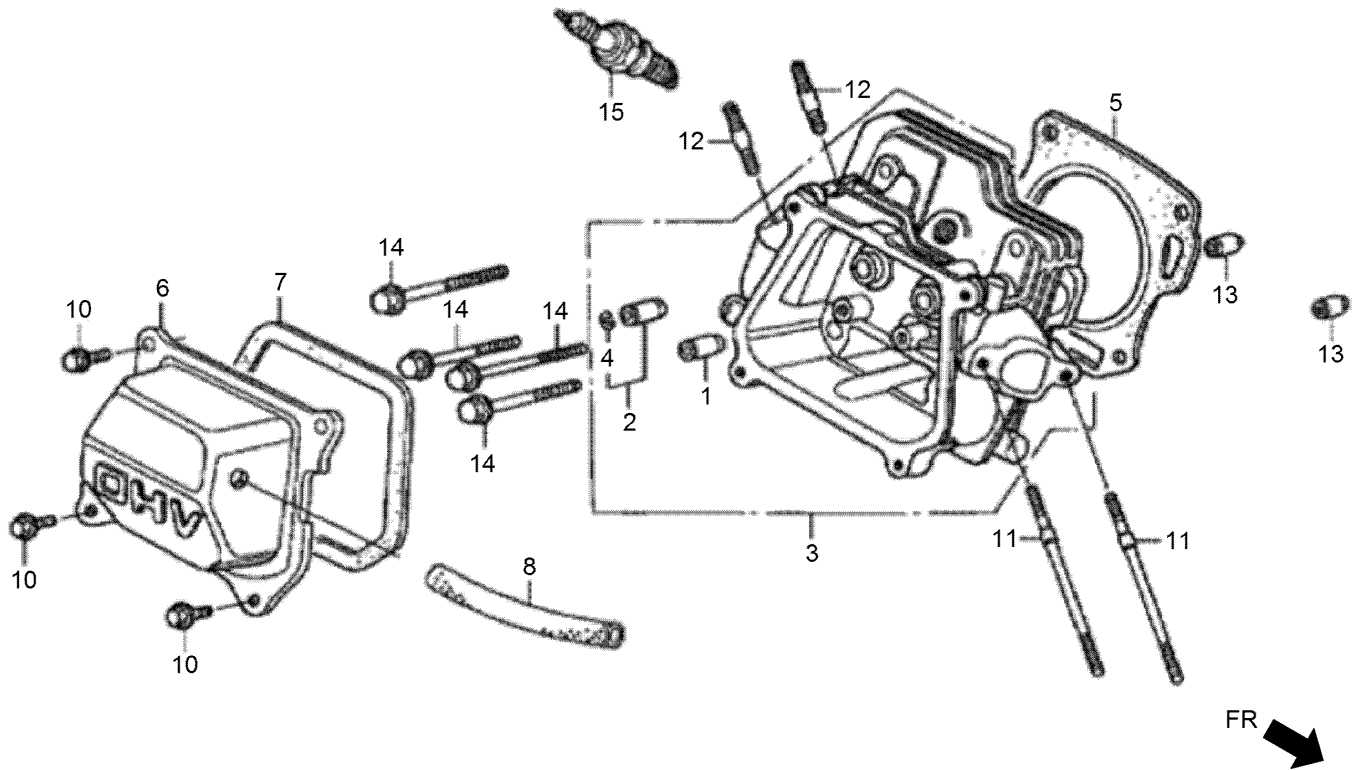

Cylinder Head Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-0118	1	Guide-Intake Valve	8	132-0234	1	Tube-Breather
2	132-0119	1	Guide-Exhaust Valve	10	132-4880	4	Bolt-Flange-6X12
3	132-0124	1	Cylinder Head ASM	11	132-0612	2	Bolt-Stud-6X112
4	132-0125	1	Clip-Valve Guide	12	132-0615	2	Bolt-Stud-8X32
5	132-0126	1	Gasket-Cylinder Head	13	132-0697	2	Dowel Pin-10X16
6	132-0127	1	Head Cover ASM	14	131-8226	4	Bolt-Flange-8X60
7	132-0133	1	Packing-Head Cover	15	131-8233	1	Sparkplug

 
Cylinder Barrel Assembly

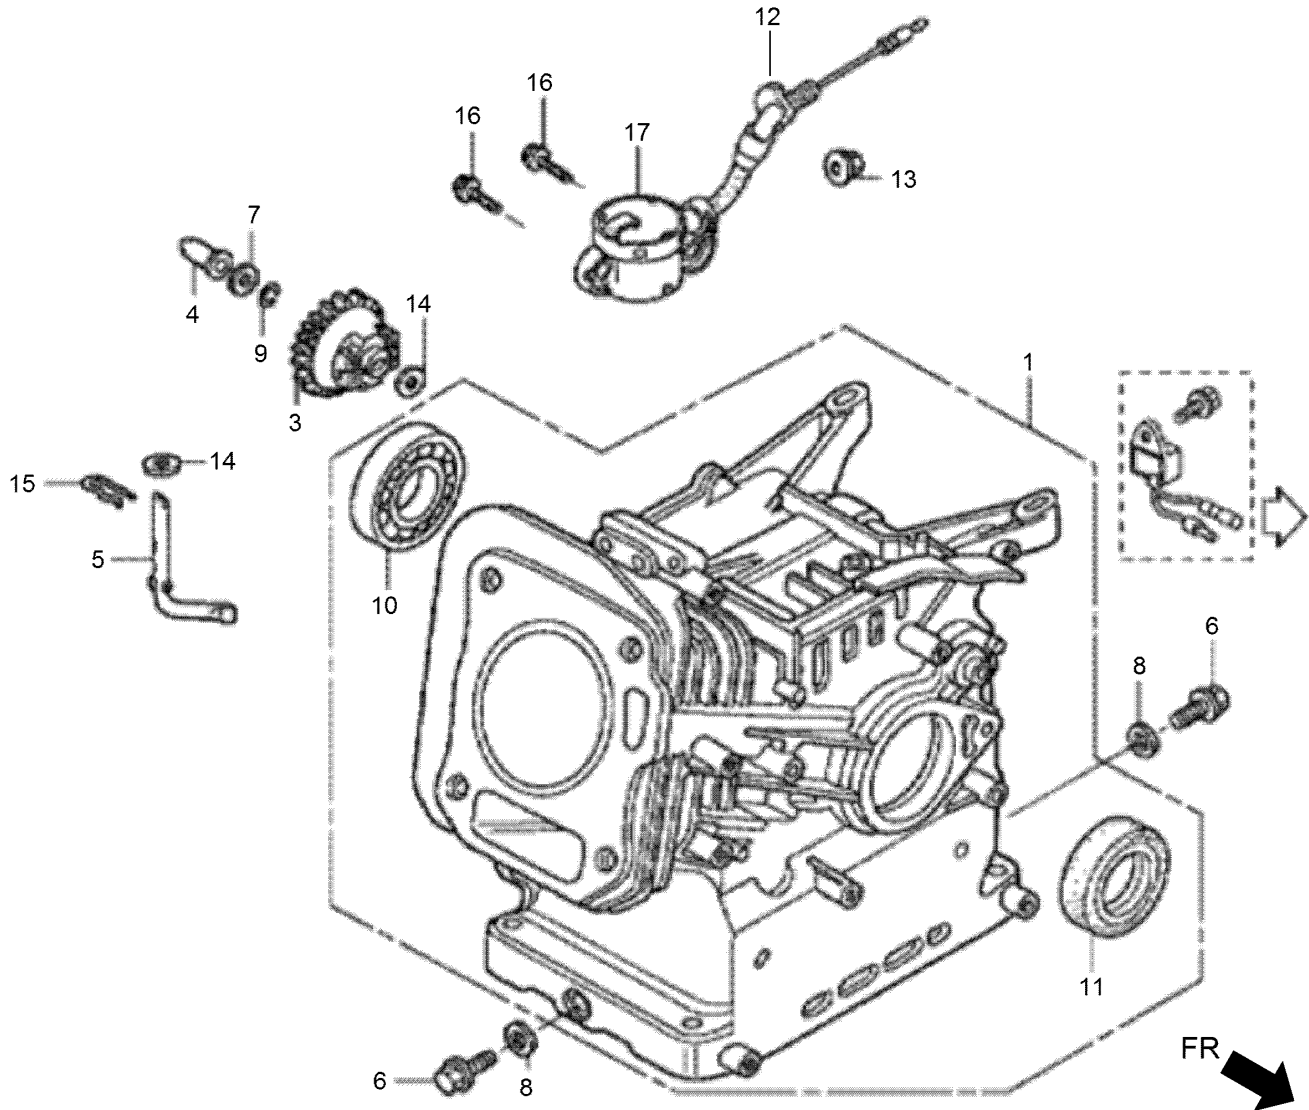

Cylinder Barrel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-0114	1	Barrel ASM-Cylinder	10	132-0649	1	Bearing-Radial Ball
3	132-0294	1	Governor ASM	11	132-0654	1	Oil Seal-25X41X6
4	132-0304	1	Slider-Governor	11	132-0658	1	Oil Seal-25X41.25X6
5	132-0307	1	Shaft-Governor Arm	12	132-0668	1	O-Ring-14Mm
6	132-0622	2	Bolt-Drain Plug	13	132-0686	1	Nut-Flange-10Mm
7	132-0635	1	Washer-Thrust-6Mm	14	132-0688	2	Washer-Plain-6Mm
8	132-0640	2	Washer-Drain Plug-10.2Mm	15	132-0693	1	Pin-Lock-8Mm
9	132-0642	1	Clip-Governor Holder	16	131-8221	2	Bolt-Flange-6X12
10	132-0651	1	Bearing-Radial Ball	17	132-0532	1	Switch ASM-Oil Level
10	132-0650	1	Bearing-Radial Ball				

 
Crankcase Cover Assembly

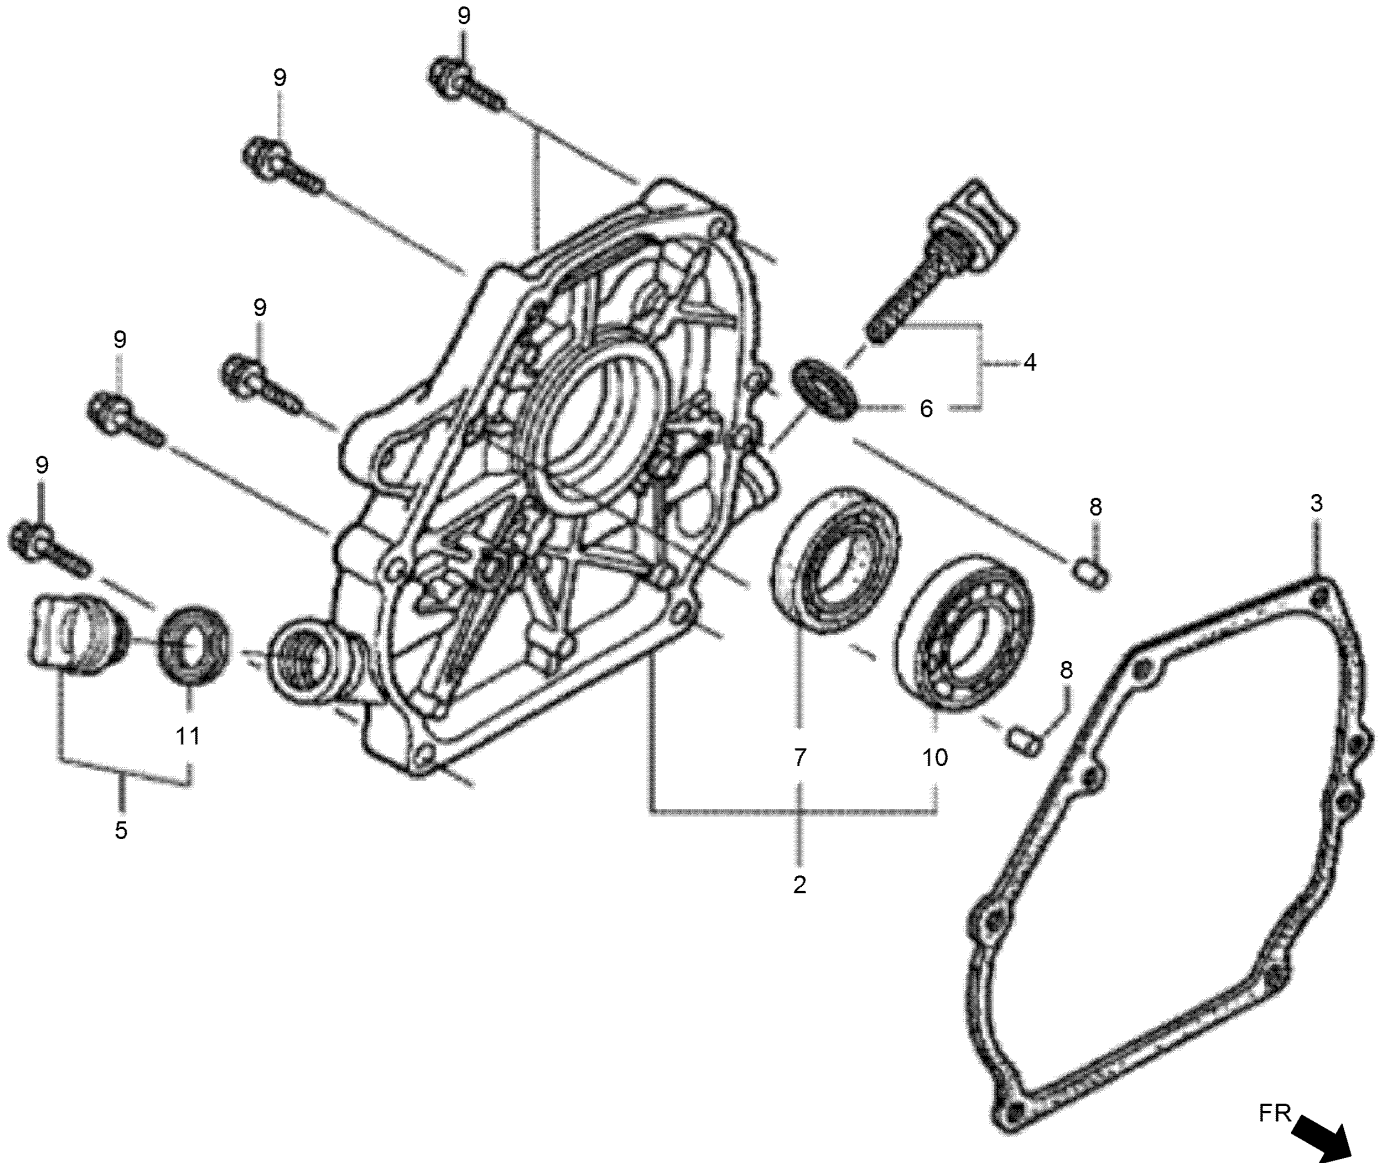

Crankcase Cover Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	132-0103	1	Cover ASM-Crankcase	7	132-0658	1	Oil Seal-25X41.25X6
3	132-0108	1	Packing-Case Cover	8	132-0695	2	Dowel Pin-8X14
4	132-0220	1	Cap ASM-Oil Filler	9	131-8225	6	Bolt-Flange-8X32
5	132-0221	1	Cap ASM-Oil Filler	10	131-8227	1	Bearing-Radial Ball-6205
6	132-0224	1	Packing-Oil Filler Cap	11	132-0224	1	Packing-Oil Filler Cap
7	132-0654	1	Oil Seal-25X41X6				

 Crankshaft Assembly

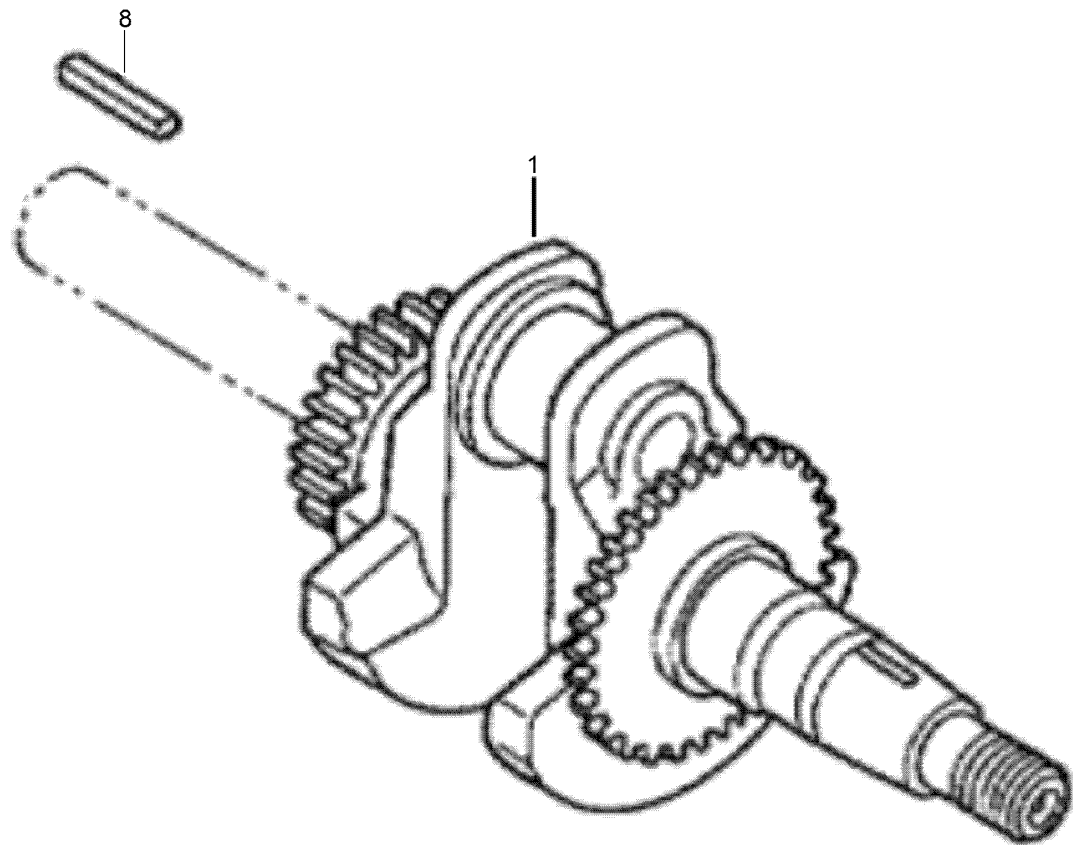


FR 

Crankshaft Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-0164	1	Crankshaft ASM
8	132-0647	1	Key-5X5X33

 
Piston and Connecting Rod Assembly

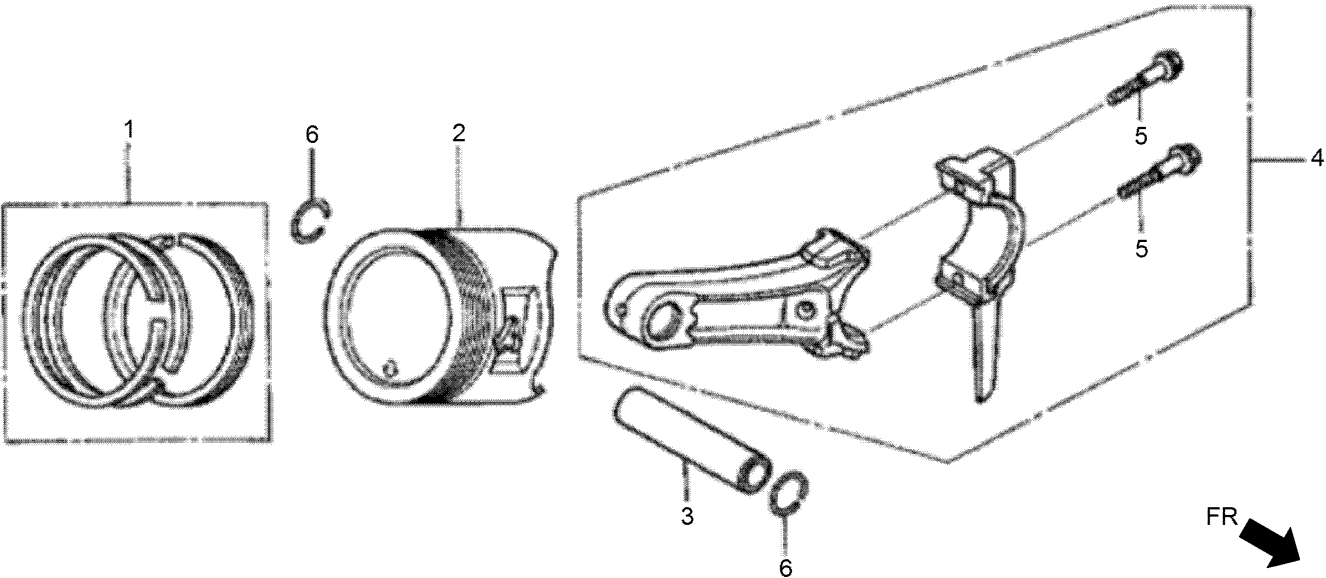

Piston and Connecting Rod Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-0137	1	Ring Set-Piston (STD)	4	132-0155	1	Rod ASM-Connecting
1	132-0138	1	Ring Set-Piston (STD)	5	132-0573	2	Bolt-Connecting Rod
2	132-0144	1	Piston	6	132-0637	2	Clip-Piston Pin-18Mm
3	132-0150	1	Pin-Piston				

 
Camshaft Assembly

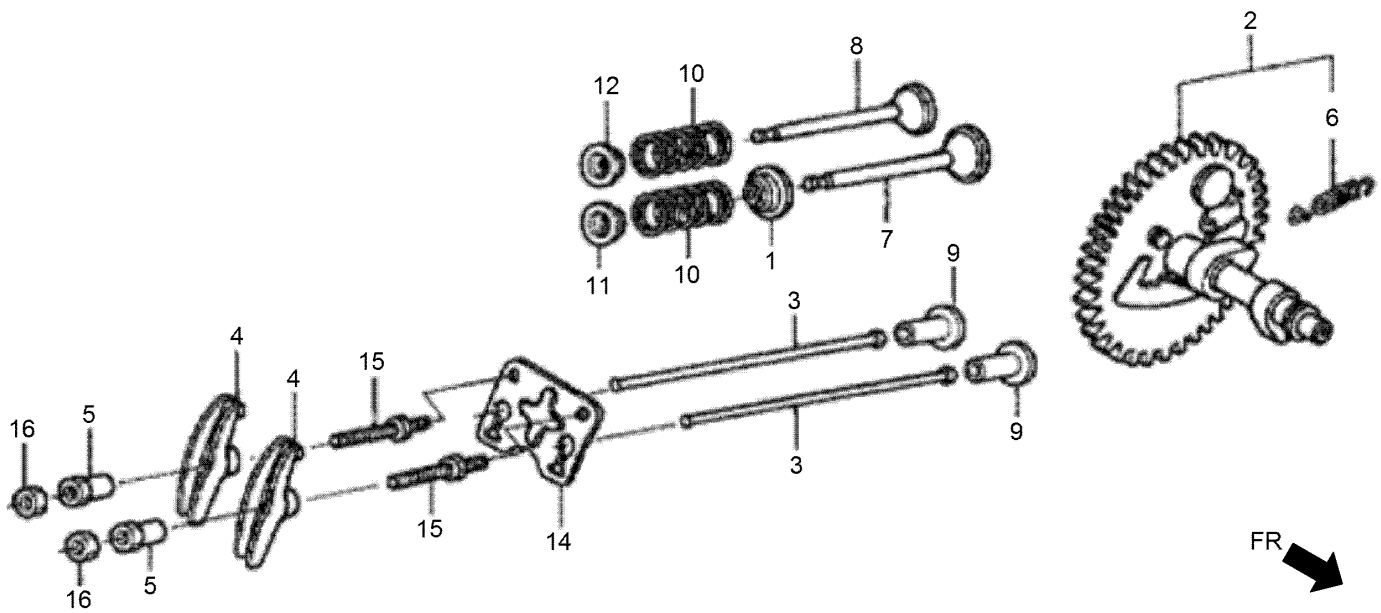

Camshaft Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-0120	1	Seal-Valve Stem	10	132-0206	2	Spring-Valve
2	132-0172	1	Camshaft ASM	11	132-0211	1	Retainer-Intake Valve Spring
3	132-0181	2	Rod-Push	12	132-0211	1	Retainer-Intake Valve Spring
4	132-0184	2	Arm-Valve Rocker	14	132-0215	1	Plate-Push Rod Guide
5	132-0188	2	Pivot-Rocker Arm	15	132-0592	2	Bolt-Pivot-8Mm
6	132-0191	1	Spring-Weight Return	16	132-0629	2	Nut-Pivot Adjusting
7	132-0194	1	Valve-Intake				
8	132-0198	1	Valve-Exhaust				
9	132-0203	2	Lifter-Valve				

 
Recoil Starter Assembly

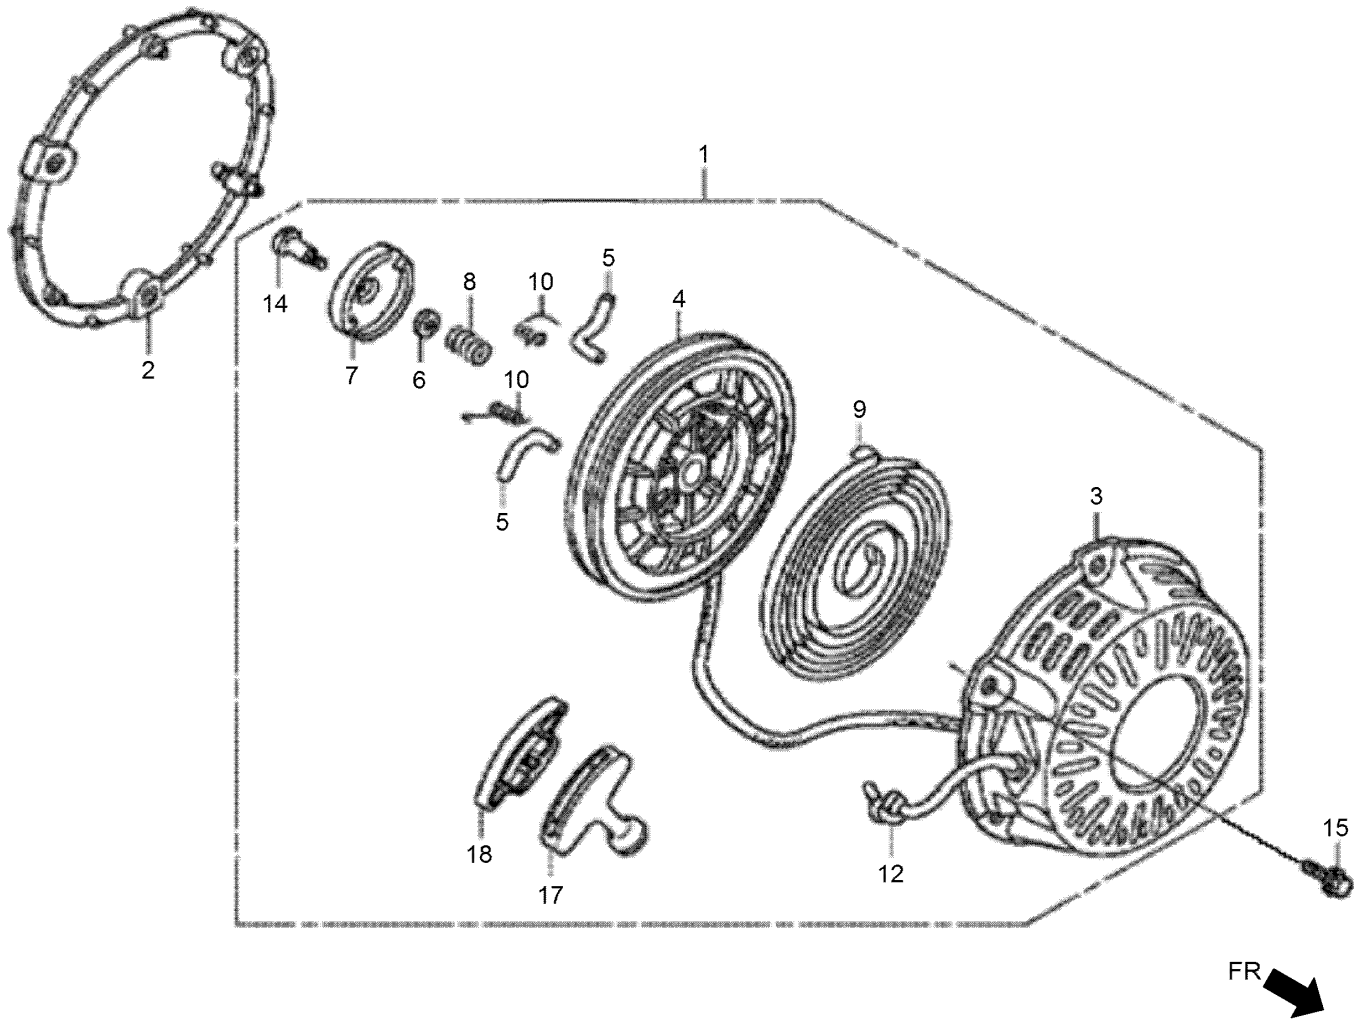

Recoil Starter Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-0477	1	Starter ASM-Recoil	8	132-0494	1	Spring-Friction
2	132-0485	1	Spacer-Recoil Starter Mtg (R280R)	9	132-0495	1	Spring-Recoil Starter
3	132-0486	1	Recoil Starter Case ASM (R280)	10	132-0497	2	Spring-Return
4	132-0489	1	Reel-Recoil Starter	12	132-0507	1	Rope-Recoil Starter
5	132-0491	2	Ratchet-Starter	14	132-0579	1	Screw-Setting
6	132-0492	1	Plate-Friction	15	131-8223	3	Bolt-Flange-6X18
7	132-0493	1	Guide-Ratchet	17	132-0502	1	Knob-Recoil Starter
				18	132-0509	1	Knob-Reinforcement

 
Fan Cover Assembly

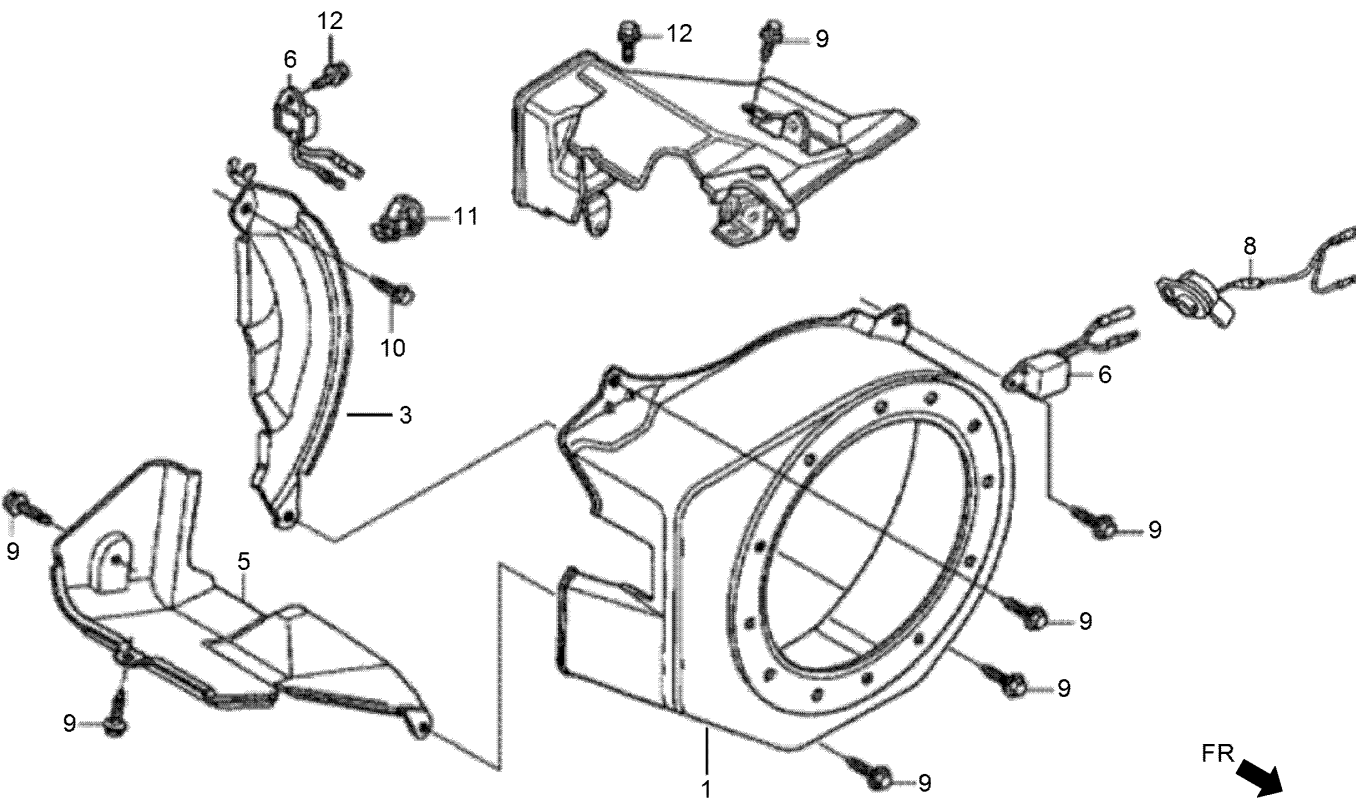

Fan Cover Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-0464	1	Fan Cover ASM (R280)	9	132-4880	6	Bolt-Flange-6X12
3	132-0469	1	Side Plate ASM	10	132-0605	1	Bolt-Flange-6X20
5	132-0473	1	Shroud ASM	11	132-0641	1	Clip-Harness
6	132-0529	1	Alert Unit-Oil	12	131-8220	1	Bolt-Flange-6X8
8	132-0530	1	Switch ASM-Engine Stop				

 
Carburetor Assembly

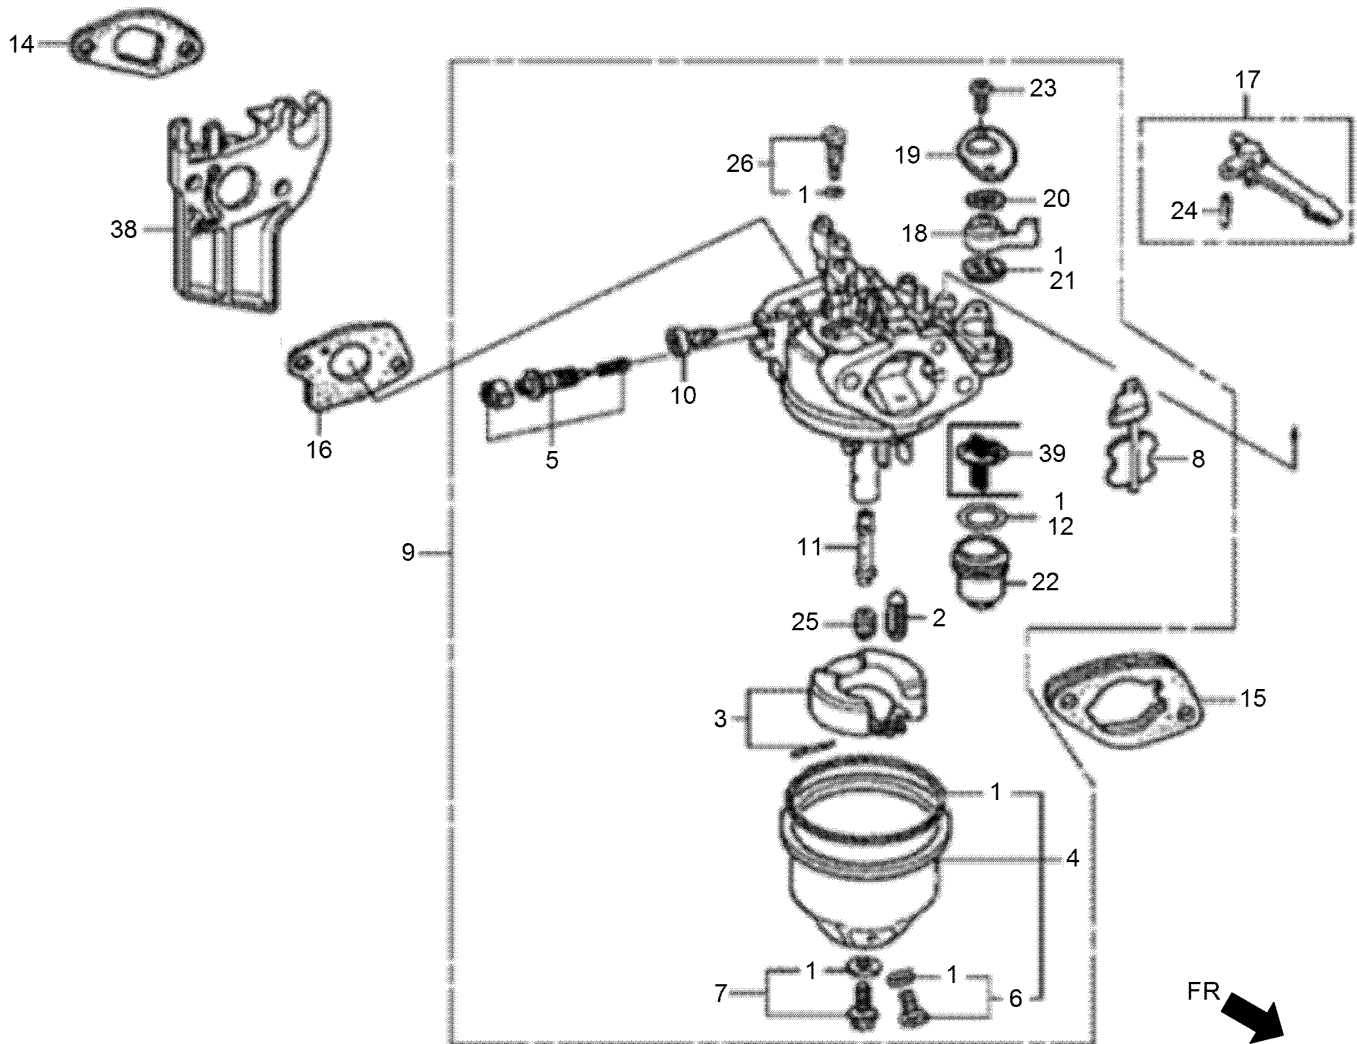

Carburetor Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-0239	1	Gasket Set	16	132-0287	1	Packing-Carburetor
2	132-0241	1	Valve Set-Float	17	132-0343	1	Choke Lever ASM
3	132-0242	1	Float Set	18	132-0359	1	Lever-Cock
4	132-0247	1	Chamber Set-Float	19	132-0360	1	Plate-Lever Setting
5	132-0250	1	Screw Set-Pilot	20	132-0362	1	Spring-Cock Lever
6	132-0251	1	Screw Set-Drain	21	132-0364	1	Packing-Fuel Cock
7	132-0253	1	Screw Set	22	132-0366	1	Cup-Fuel Strainer
8	132-0257	1	Choke Set	23	132-0676	2	Screw-Pan-3X6
9	132-0265	1	Carburetor ASM	24	132-0698	1	Pin-Spring-2X12
10	132-0268	1	Screw-Throttle Stop	25	131-8237	1	Jet-Main, No. 75
11	132-0272	1	Nozzle-Main	26	131-8239	1	Jet Set-Pilot, No. 40
12	132-0276	1	Packing-Fuel Strainer Cup	38	132-0278	1	Insulator-Carburetor
14	132-0281	1	Packing-Insulator	39	132-0365	1	Filter-Cup
15	132-0284	1	Carburetor Spacer ASM				

 
Air Cleaner Assembly

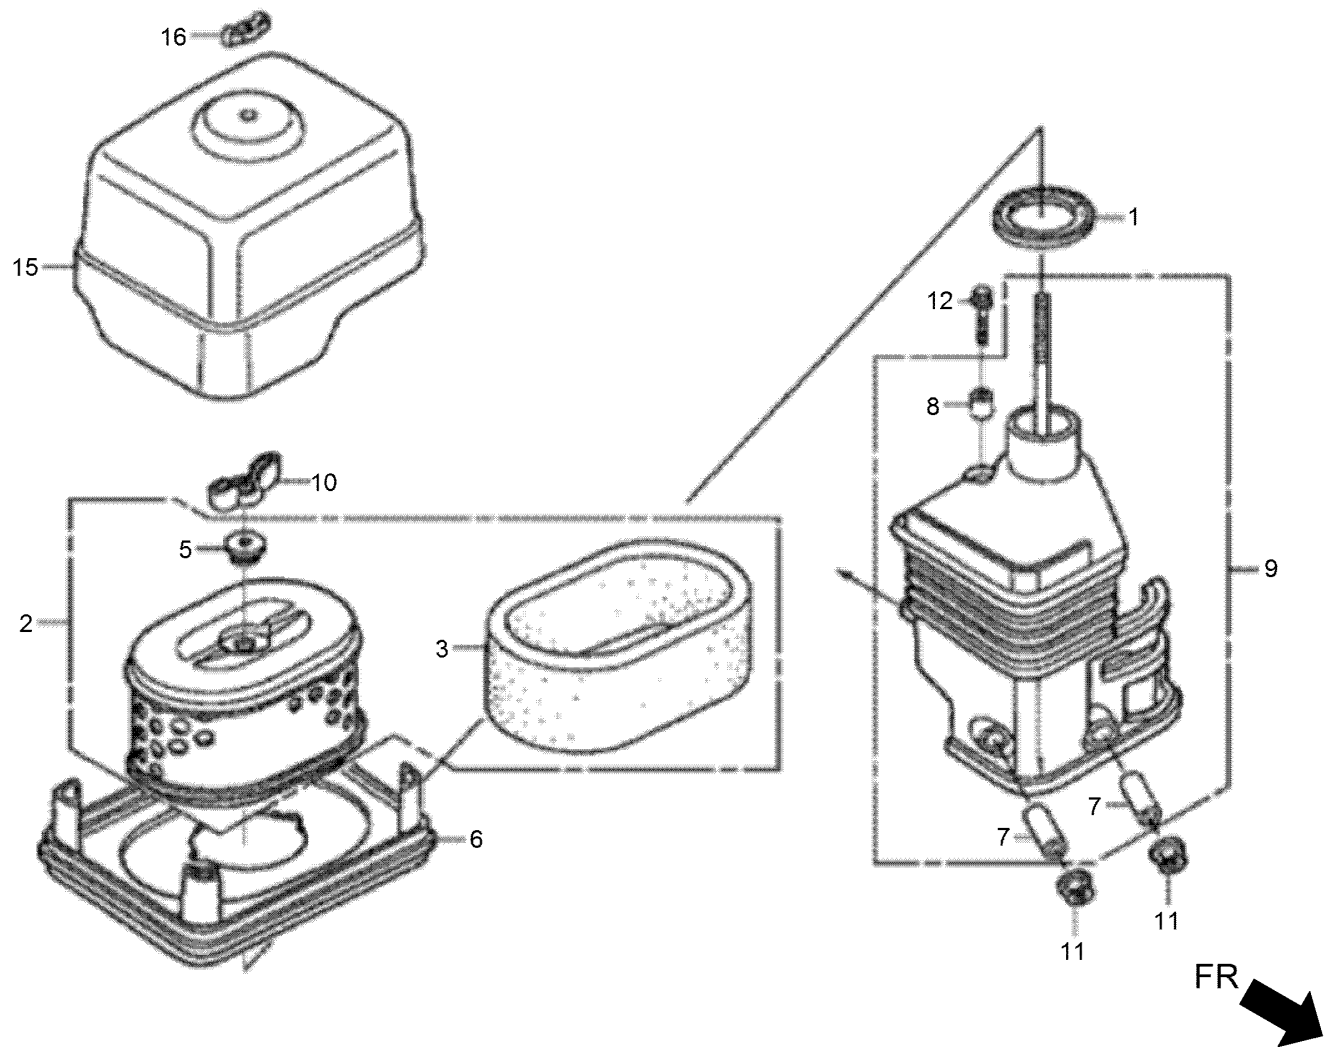

Air Cleaner Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-0291	1	Packing-Elbow	9	132-0396	1	Elbow Comp-Air Cleaner
2	132-0367	1	Element-Air Cleaner	10	132-0631	1	Nut-Tool Box Setting
3	132-0372	1	Filter-Outer	11	132-4881	2	Nut-Flange-6Mm
5	132-0391	1	Grommet-Air Cleaner	12	131-8224	1	Bolt-Flange-6X20
6	132-0392	1	Nose-Silencer	15	132-0388	1	Cover-Air Cleaner
7	132-0393	2	Collar-Air Cleaner	16	132-0630	1	Nut-Air Cleaner
8	132-0394	1	Collar B-Air Cleaner				

 
Muffler Assembly

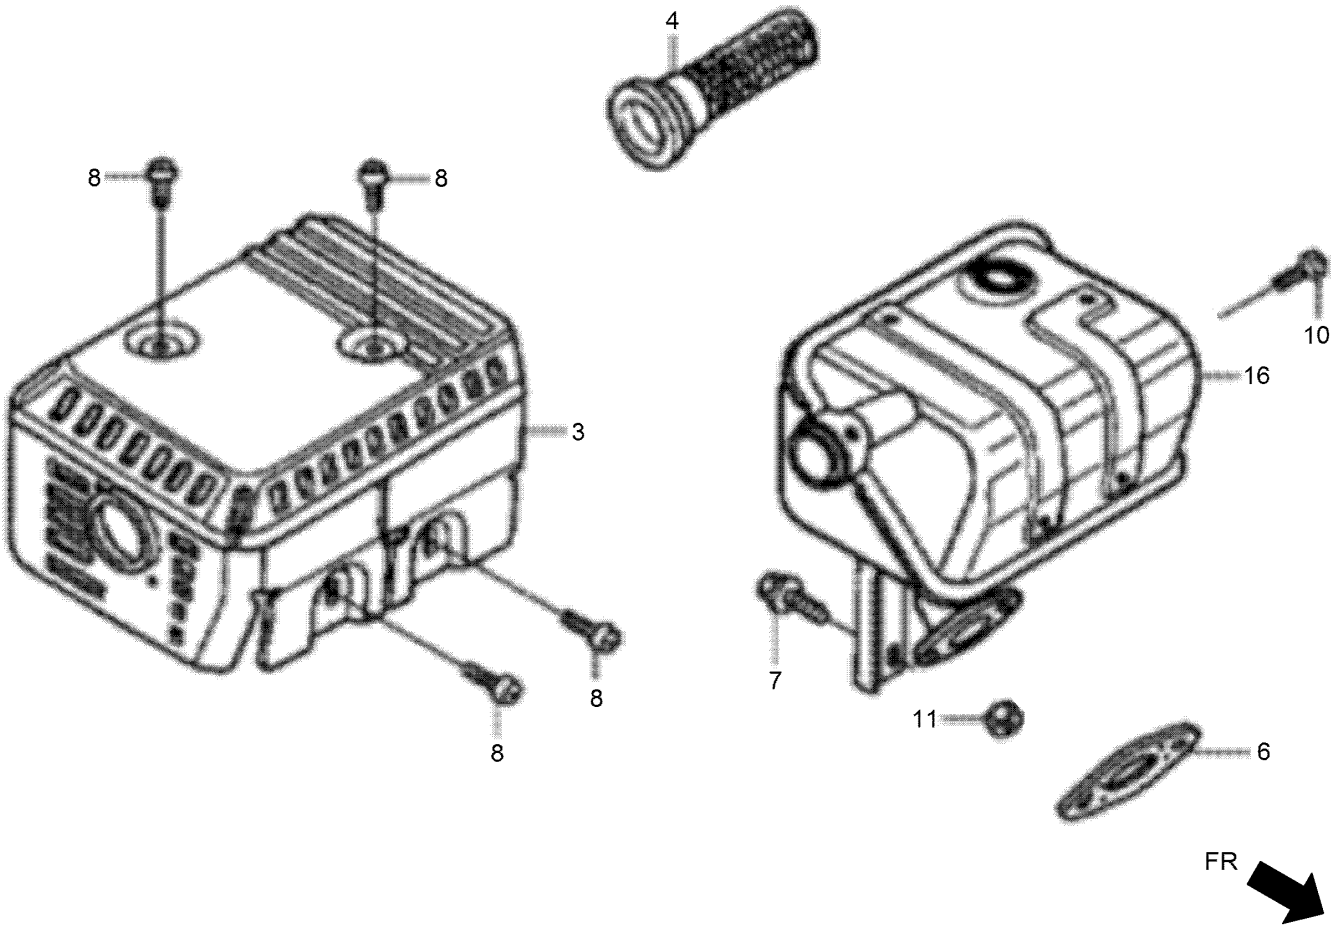

Muffler Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
3	132-0453	1	Muffler Protector ASM	8	132-0616	4	Screw-Tapping-5X8
4	132-0456	2	Arrester-Spark	10	132-0617	1	Screw-Tapping-4X6
6	132-0457	2	Gasket-Muffler	11	132-0684	2	Nut-Hex-8Mm
7	132-0600	1	Bolt-Flange-6X13	16	132-0446	1	Muffler ASM

 
Fuel Tank Assembly

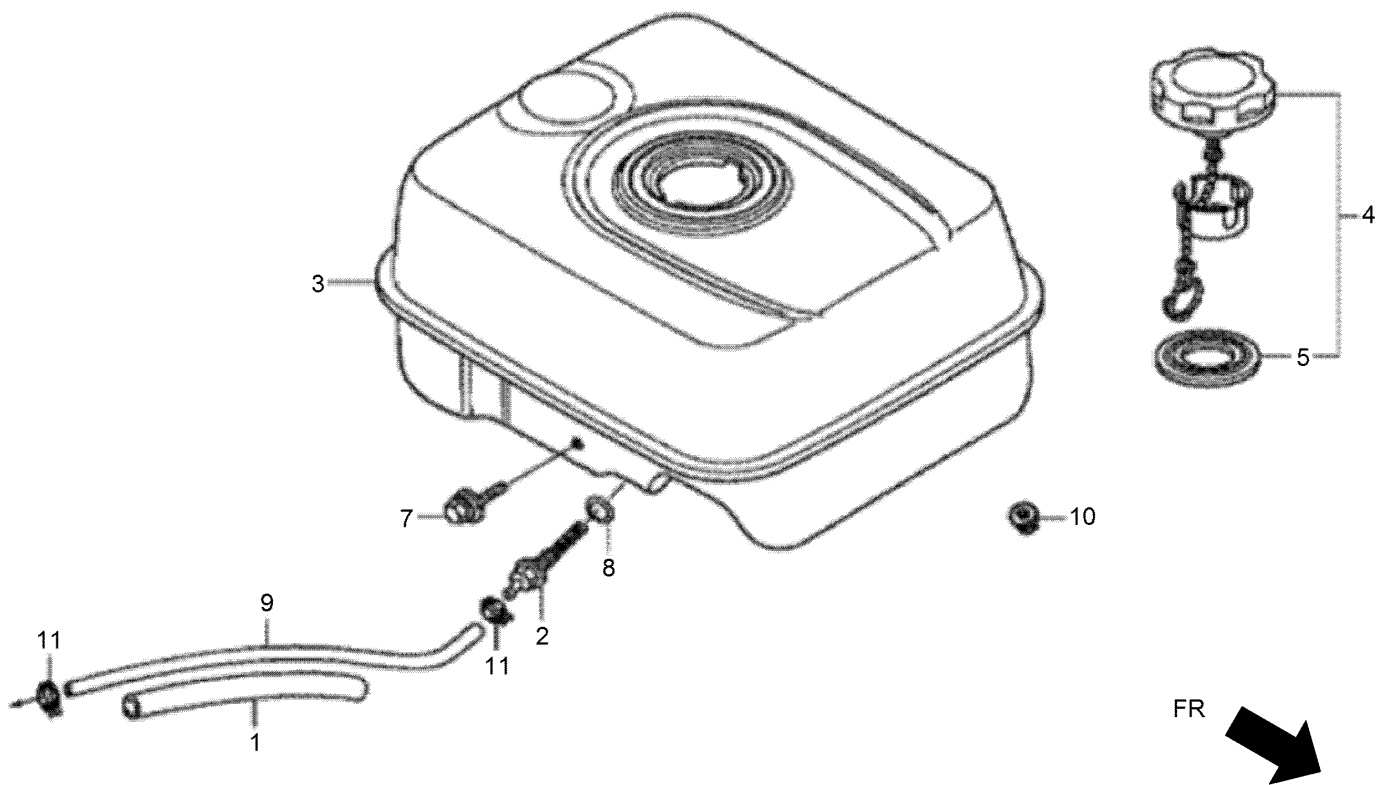

Fuel Tank Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-0349	1	Rubber-Supporter	7	132-0583	1	Bolt-Flange-6X34
2	132-0361	1	Joint-Fuel Tank	8	132-0668	1	O-Ring-14Mm
3	132-0397	1	Fuel Tank ASM (Nh31)	9	132-0669	1	Tube-Fuel-4.5X145
4	132-0414	1	Fuel Filler Cap ASM	10	132-4881	2	Nut-Flange-6Mm
5	132-0431	1	Packing-Fuel Filler Cap	11	131-8211	2	Clamp-Tube

 
Flywheel Assembly

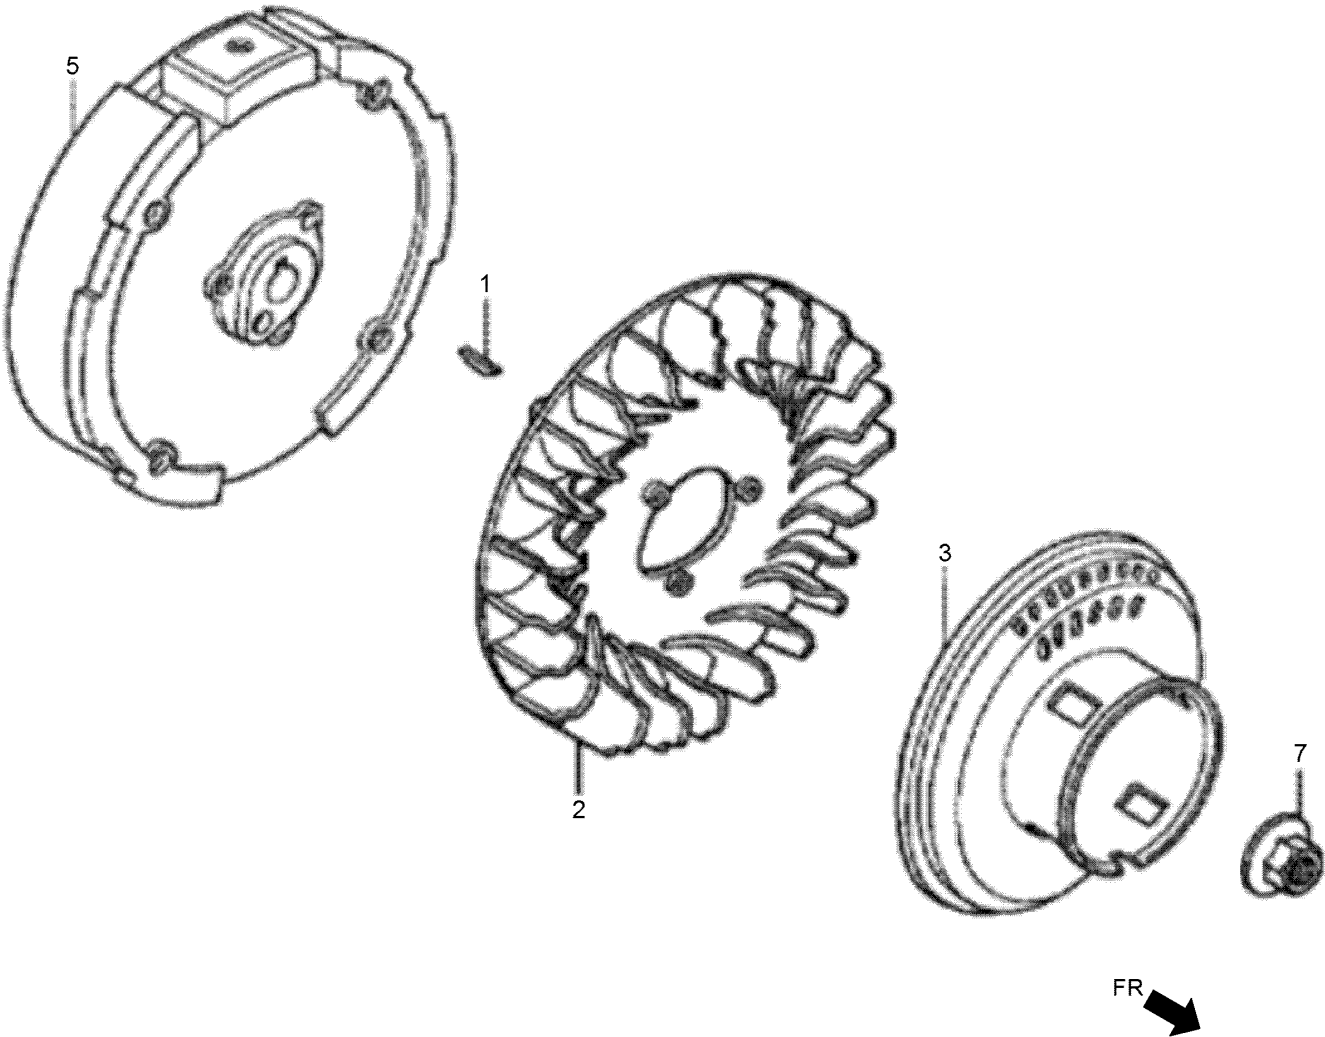

Flywheel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-0167	1	Key-Special Woodruff-25X18	3	132-0499	1	Starter Pulley ASM
2	132-0461	1	Fan-Cooling	5	132-0519	1	Flywheel ASM
				7	132-0625	1	Nut-Special-14Mm

 Ignition Coil Assembly

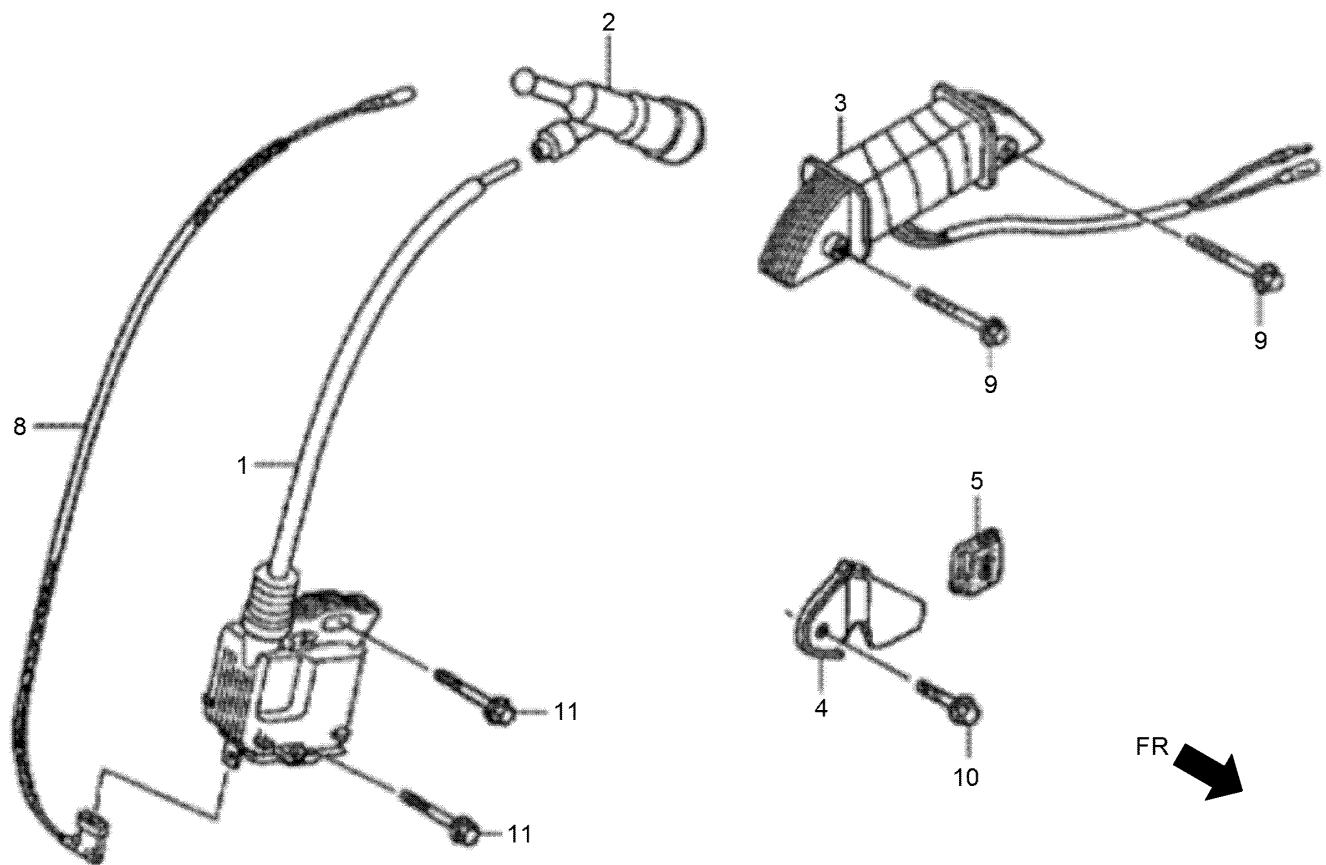


FR 

Ignition Coil Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-0510	1	Coil ASM-Ignition	8	132-0533	1	Cord-Stop Switch
2	132-0515	1	Cap ASM-Noise Suppressor	9	132-0596	2	Bolt-Flange-6X28
3	132-0521	1	Coil ASM-Lamp	10	132-0604	1	Bolt-Flange-5X10
4	132-0522	1	Clamper-Cord	11	132-0620	2	Bolt-Flange-6X25
5	132-0523	1	Grommet-Cord				

 
Control Assembly

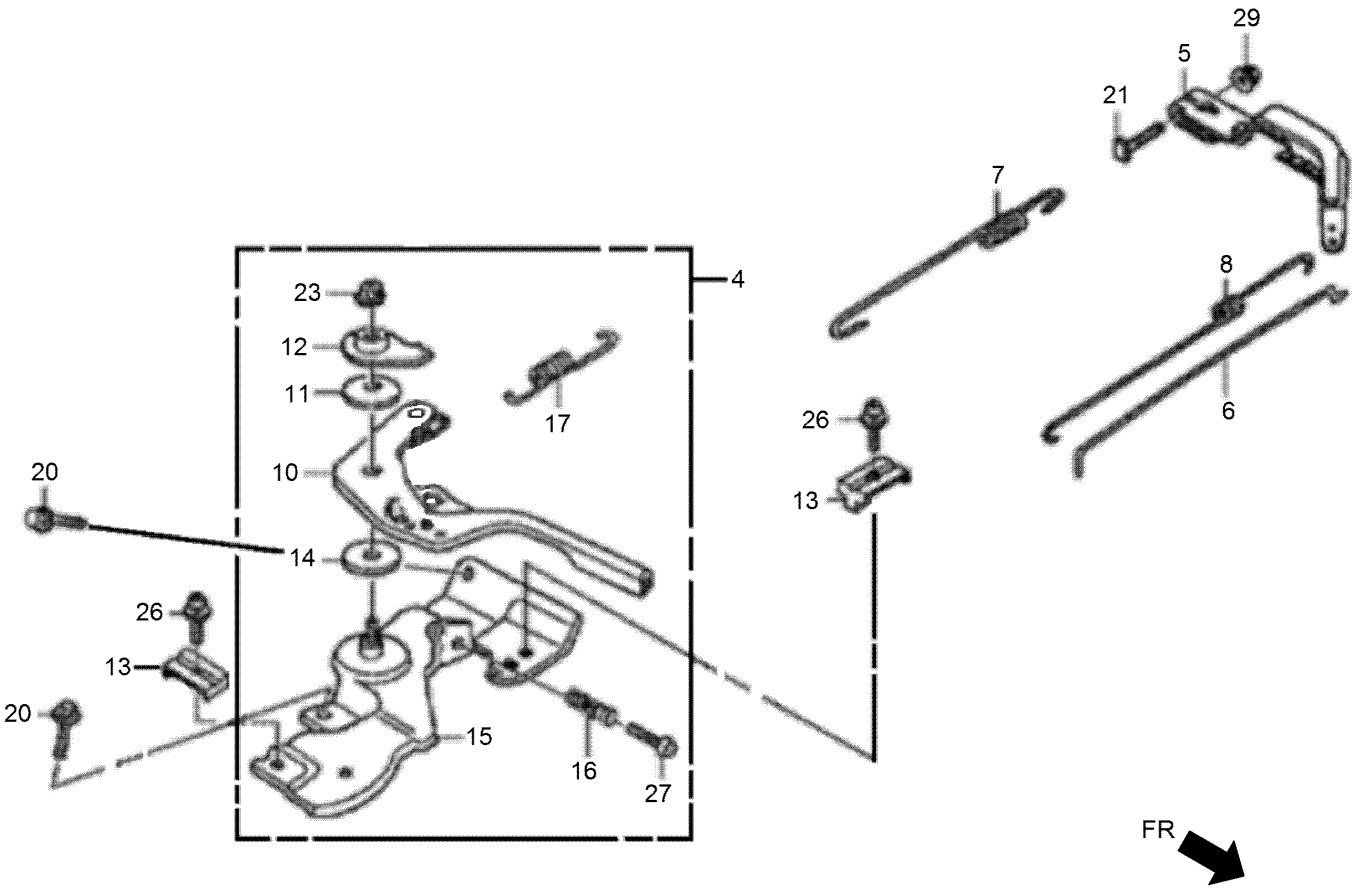

Control Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	132-0292	1	Control ASM	15	132-0337	1	Control Base ASM
5	132-0311	1	Arm-Governor	16	132-0340	1	Spring-Control Adjusting
6	132-0316	1	Rod-Governor	17	132-0341	1	Spring-Cable Return
7	132-0320	1	Spring-Governor	20	132-4880	2	Bolt-Flange-6X12
8	132-0324	1	Spring-Throttle Return	21	132-0597	1	Bolt-Governor Arm
10	132-0328	1	Lever-Control	23	132-0619	1	Nut-Self-Lock-6Mm
11	132-0329	1	Spring-Lever	26	132-0678	1	Screw-Pan-5X16
12	132-0330	1	Washer-Control Lever	27	132-0679	1	Screw-Pan-5X25
13	132-0331	1	Holder-Cable	29	132-4881	1	Nut-Flange-6Mm
14	132-0332	1	Spacer-Control Lever				

 
Label Assembly

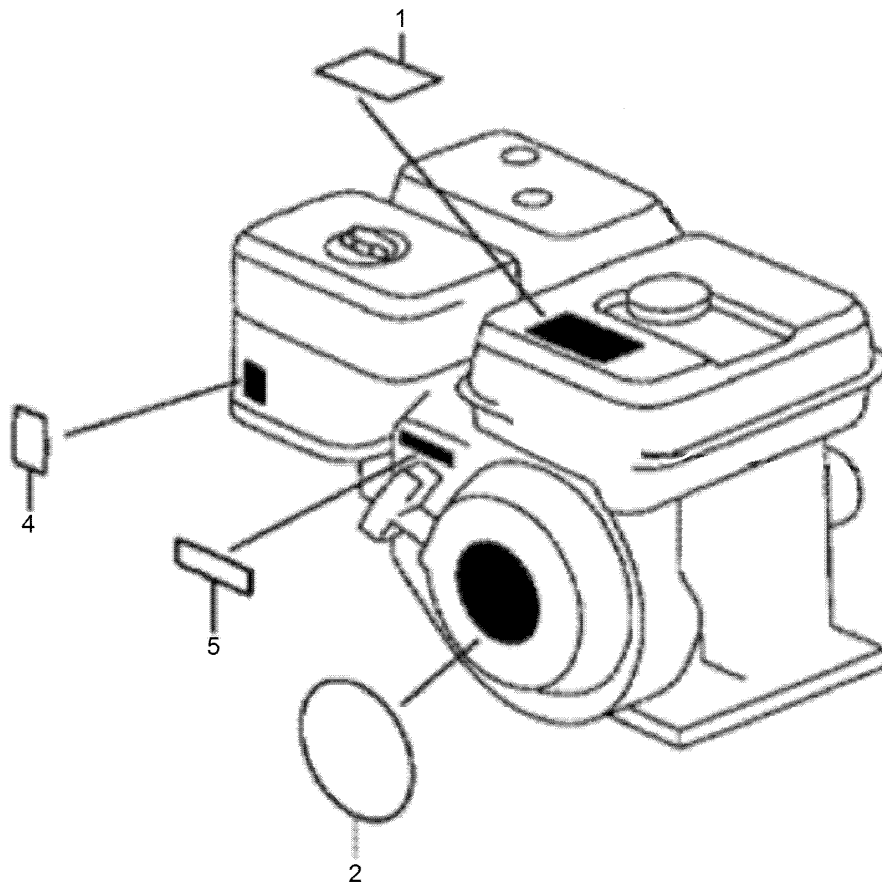

Label Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-0559	1	Mark-Operator Caution	4	132-0566	1	Mark-Choke
2	132-0561	1	Emblem	5	132-0567	1	Mark-Throttle Indication


 
Wrench

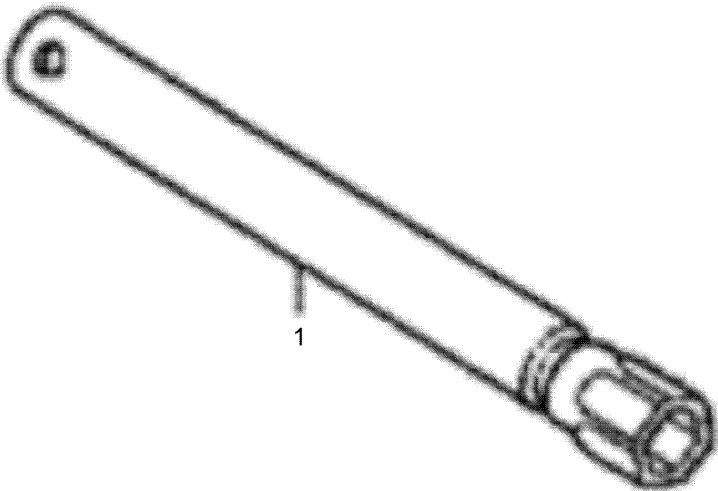

Wrench (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-0572	1	Wrench-Spark Plug

  
Decal Assembly

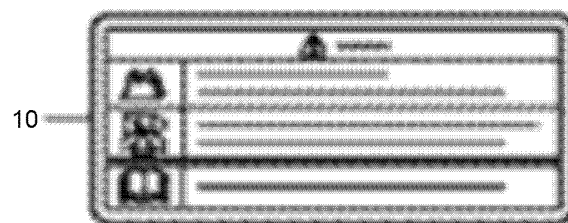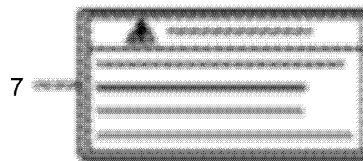

Decal Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	132-0552	1	Mark-Operator Caution (English)	7	132-0571	1	Mark-Exhaust Caution (French)
5	132-0553	1	Mark-Operator Caution (French)	10	132-0557	1	Mark-Operator Caution (Chinese)
7	132-0570	1	Mark-Exhaust Caution (English)				

 Gasket Kit

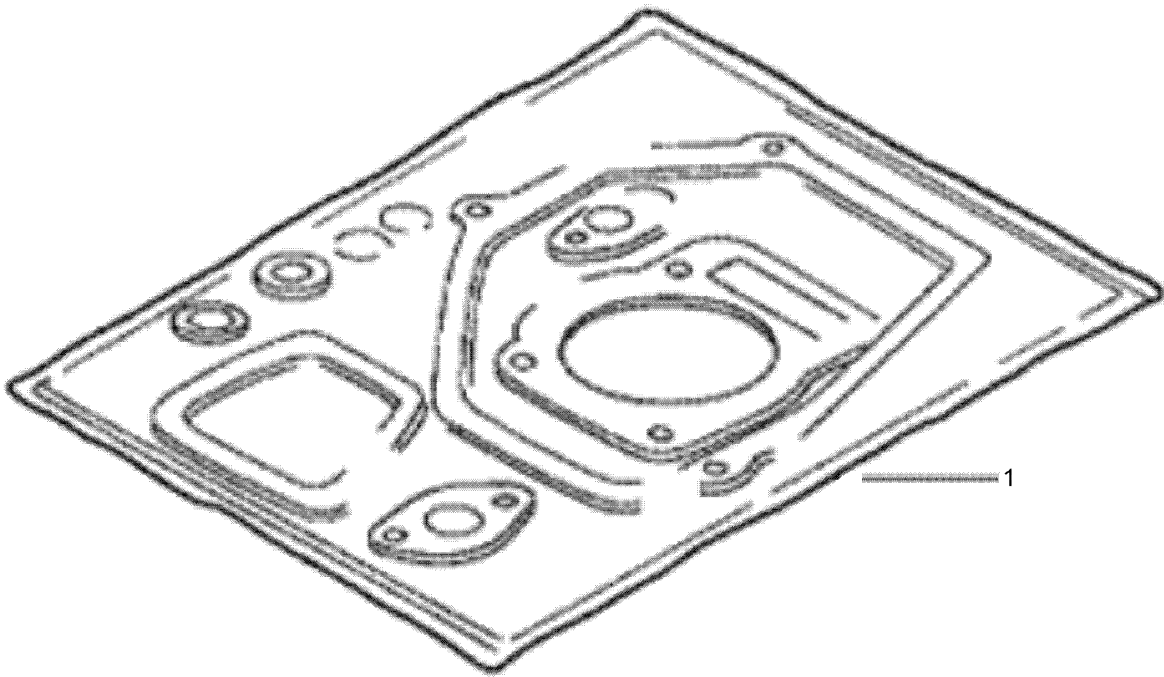

Gasket Kit (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-0100	1	Gasket Kit

Attachments and Accessories

For 44912 GreensPro 1240 Greens Roller

Product Name	Model/Part
Filter-oil, Hyd	1-633750
Premium All Season Hydraulic Fluid (5 Gallon Pail).....	108-1178
Premium Engine Oil 10w30 (5 Gallon Pail)	121-6393
Armrest Kit.....	44908
Roller Scraper Kit.....	44911
LED Light Kit.....	44923
Wireless Hour Meter Kit.....	44927

Notes:

Notes:

Notes:



Count on it.