

# Count on it.

# Parts Catalog

# Ultra Sonic Boom<sup>™</sup> Leveling Kit 2013 and After Multi-Pro 5800, 1750 and WM Turf Sprayers and Workman<sup>®</sup> 200 Spray System

Model No. 41219—Serial No. 316000001 and Up



# **Ordering Replacement Parts**

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

### **Understanding Reference Numbers**

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

### **Service Assembly Reference Numbers**

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

### **Reference Numbers Indicating Quantity**

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

## List of Abbreviations

AR: as required ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

**CARR:** carriage

**CCW**: counter clockwise

CW: clockwiseDEG: degrees

**DPA:** Dual Point Adjustment **ECM:** electronic control module

EXT: external
FH: flat head
GA: gauge
HD: heavy-duty
HF: hex flange
HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread

forming

HJ: hex jam

**HLH:** hex lag head **HOC:** height-of-cut

**HP:** high pressure

HSBH: hex socket button head HSFH: hex socket flat head HSH: hex socket head HWH: hex washer head

**HWHTF:** hex washer head thread

forming

HYD: hydraulic
LH: left hand
LP: low pressure

LPG: Liquefied Petroleum Gas

NI: nylon insert

NPTF: national pipe thread fine

**PFH:** phillips flat head **PPH:** phillips pan head

PPHTF: phillips pan head thread

forming

PRH: phillips round head PTH: phillips truss head PTO: power-take-off

RH: right hand

**ROPS:** roll-over protection system

RRB: rear roller brush
SFH: slotted fillister head
SHH: slotted hex head

SHWH: slotted hex washer head


**SPH**: slotted pan head **SQH**: square head

SRH: slotted round head

STD: standard
TAP: self tapping
TTH: torx truss head


# **Contents**

Ultra Sonic Boom Leveling Kit	4
Controller and Valve Assembly	5
Manifold Assembly No. 130-8234	6

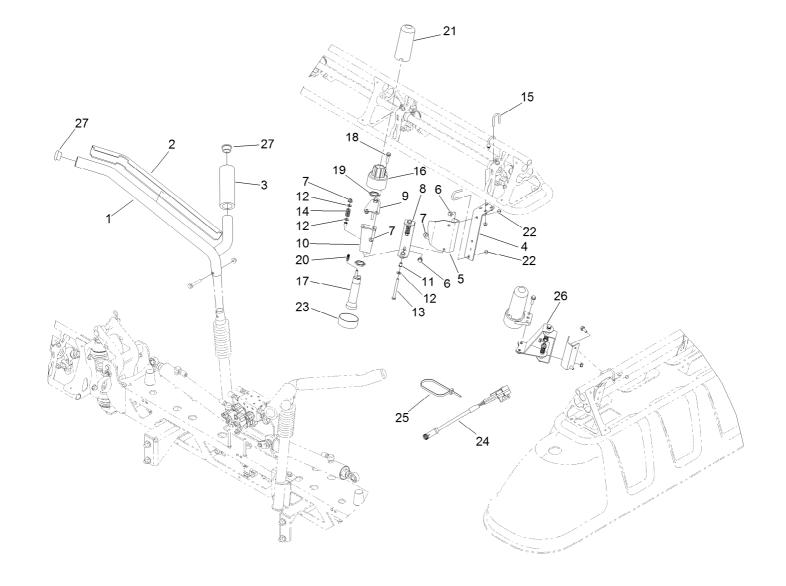


# **Ultra Sonic Boom Leveling Kit**


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	120-8575-03	2	Upper Cradle ASM	16	120-0646	2	Housing-Lower, Ultrasonic
2	120-8576	2	Cover-Slide				Sensor
3	108-3457	2	Spacer	17	117-8114	2	Sensor-Sonic
4	120-8589-03	2	Bracket-Tube	18	3234-36	4	Screw-HHF
5	120-0757-03	2	Bracket-Tube	19	120-0647	4	Nut
6	3234-47	8	Screw-HHF	20	120-0648	2	Plug-Programming
7	104-8300	16	Nut-Flange, NI	21	120-0645	2	Cover-Sensor, Ultrasonic
8	120-0608-03	2	Hinge	22	104-7201	16	Nut-Flange, NI
9	120-0611-03	2	Strap	23	120-0772	2	Cap-Tube
10	120-0613-03	2	Strap	24	117-8115	2	Cable-Ultrasonic Sensor, 4
11	120-0761	8	Bushing				Meter
12	3256-23	12	Washer-Flat	25	3290-378	24	Tie-Cable
13	322-20	4	Screw-HH	26	120-0799-03	2	Strap
14	110-5331	4	Spring-Compression	27	108-3489	4	Cap-Tube
15	92-0010	6	Ú-Bolt				•

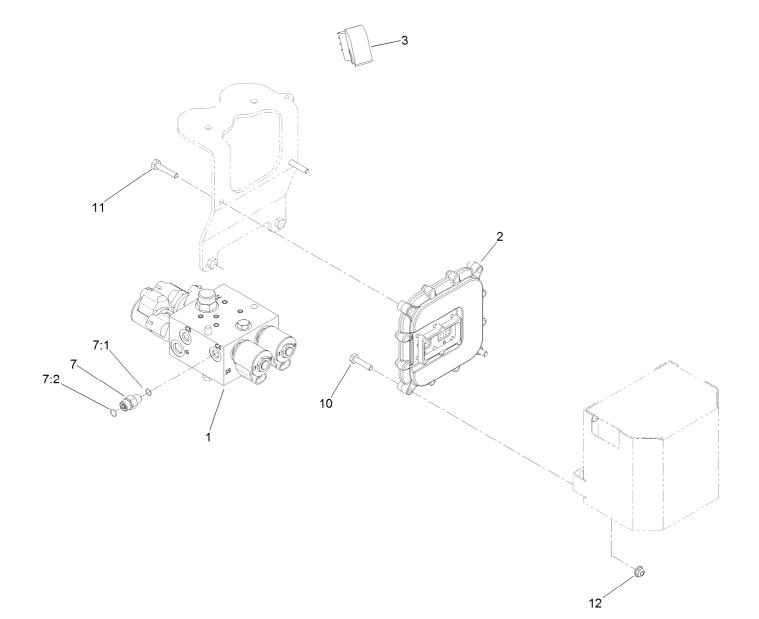

# **Controller and Valve Assembly**

Ref.	Part Number	Qty.	Description
1	130-8234	1	Manifold ASM
2	114-3321	1	Controller-Tec
3	100-8490	1	Switch-Rocker
7	340-92	4	Fitting-HYD, Straight
7:1	237-78	1	O-Ring
7:2	237-21	1	O-Ring
10	321-7	4	Screw-HH
11	321-13	2	Screw-HH
12	104-7201	4	Nut-Flange, NI

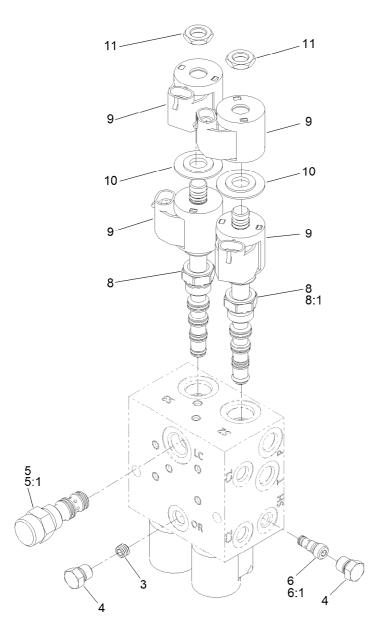

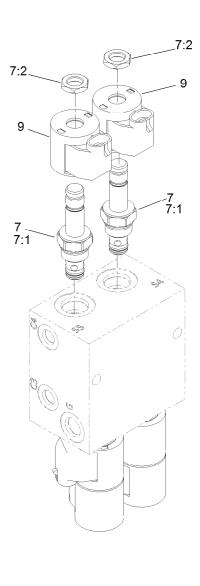

# Manifold Assembly No. 130-8234

Ref.	Part Number	Qty.	Description
3	110-5973	1	Orifice-0.030
4	117-0115	2	Plug
5	110-8770	1	Logic Element
5:1	110-8773	1	Seal Kit
6	117-8313	1	Shuttle-Load
6:1	117-7597	1	Seal Kit
7	112-9206	2	Solenoid Valve ASM
7:1	105-9156	1	Seal Kit
7:2	110-2634	1	Nut-Coil
8	130-8235	2	Vavle-Solenoid
8:1	120-5159	1	Seal Kit
9	110-0497	6	Coil-Solenoid
10	120-2586	2	Spacer-Coil
11	110-2634	4	Nut-Coil



\_\_\_\_

