



Count on it.

Parts Catalog

Cab Kit

**Serial Number 315000001 and After
Groundsmaster® 3280-D 4-Wheel Drive
Traction Unit**

Model No. 30298—Serial No. 400000000 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity


In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Frame Mount and Seal Assembly	4
Access Panel and Interior Seal Assembly	6
Mirror and Floor Tread Assembly	8
Windshield Wiper, Fresh Air Filter and Wire Harness Assembly	10
Door and Window Assembly	12
LH Door Assembly	14
RH Door Assembly	16
Heater Hose Routing and Washer Bottle Assembly	18
Roof, Headliner and Heat Mixing Box Assembly	20
Headliner Wire Harness and Control Assembly	22
Blower Mount Assembly	24
Heater Core Bracket and Cover Assembly	26
Heat / AC Mixing Box Housing Assembly	28
Air Diverter Assembly	30
Air Diverter Assembly No. 121-8369	32

Frame Mount and Seal Assembly

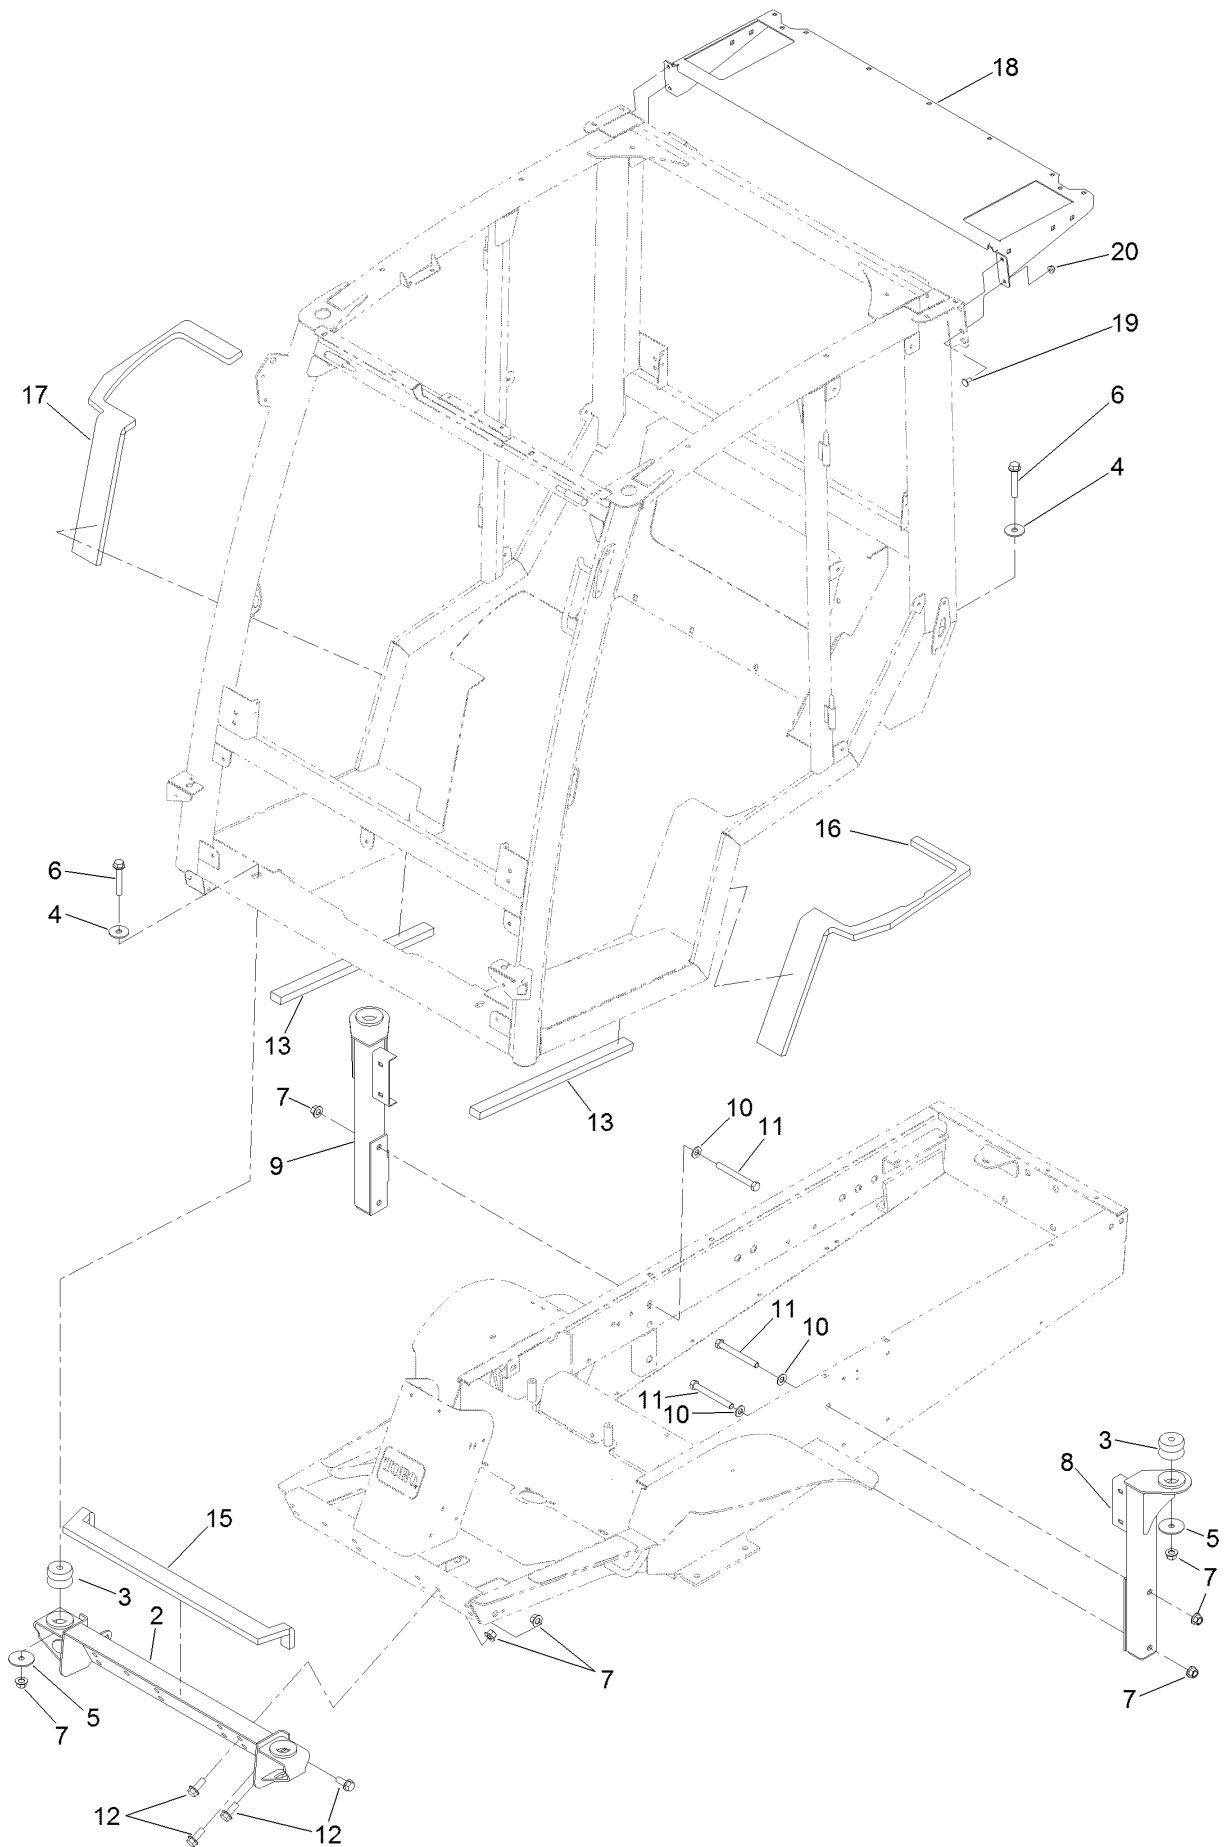


Frame Mount and Seal Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	127-9960-03	1	Front Mount ASM
3	110-5954	4	Mount-Center, Bonded
4	86-1990	4	Washer-Thrust
5	114-0019	4	Washer-Plain
6	3234-40	4	Screw-HF
7	99-5107	16	Nut-Lock
8	130-0472-03	1	Mount-Rear, LH
9	130-0475-03	1	Mount-Rear, RH
10	3256-26	4	Washer-Flat

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
11	702093	4	Screw-HH
12	3234-38	8	Screw-HHF
13	130-5584	2	Seal-Foam, Floor
15	130-5586	1	Seal-Foam, Front
16	130-5588	1	Seal-Foam, Lower LH
17	130-5589	1	Seal-Foam, Lower RH
18	136-1776-03	1	Shelf-Mount, Fan
19	3230-18	4	Screw-CARR
20	104-8300	4	Nut-Flange, NI


Access Panel and Interior Seal Assembly

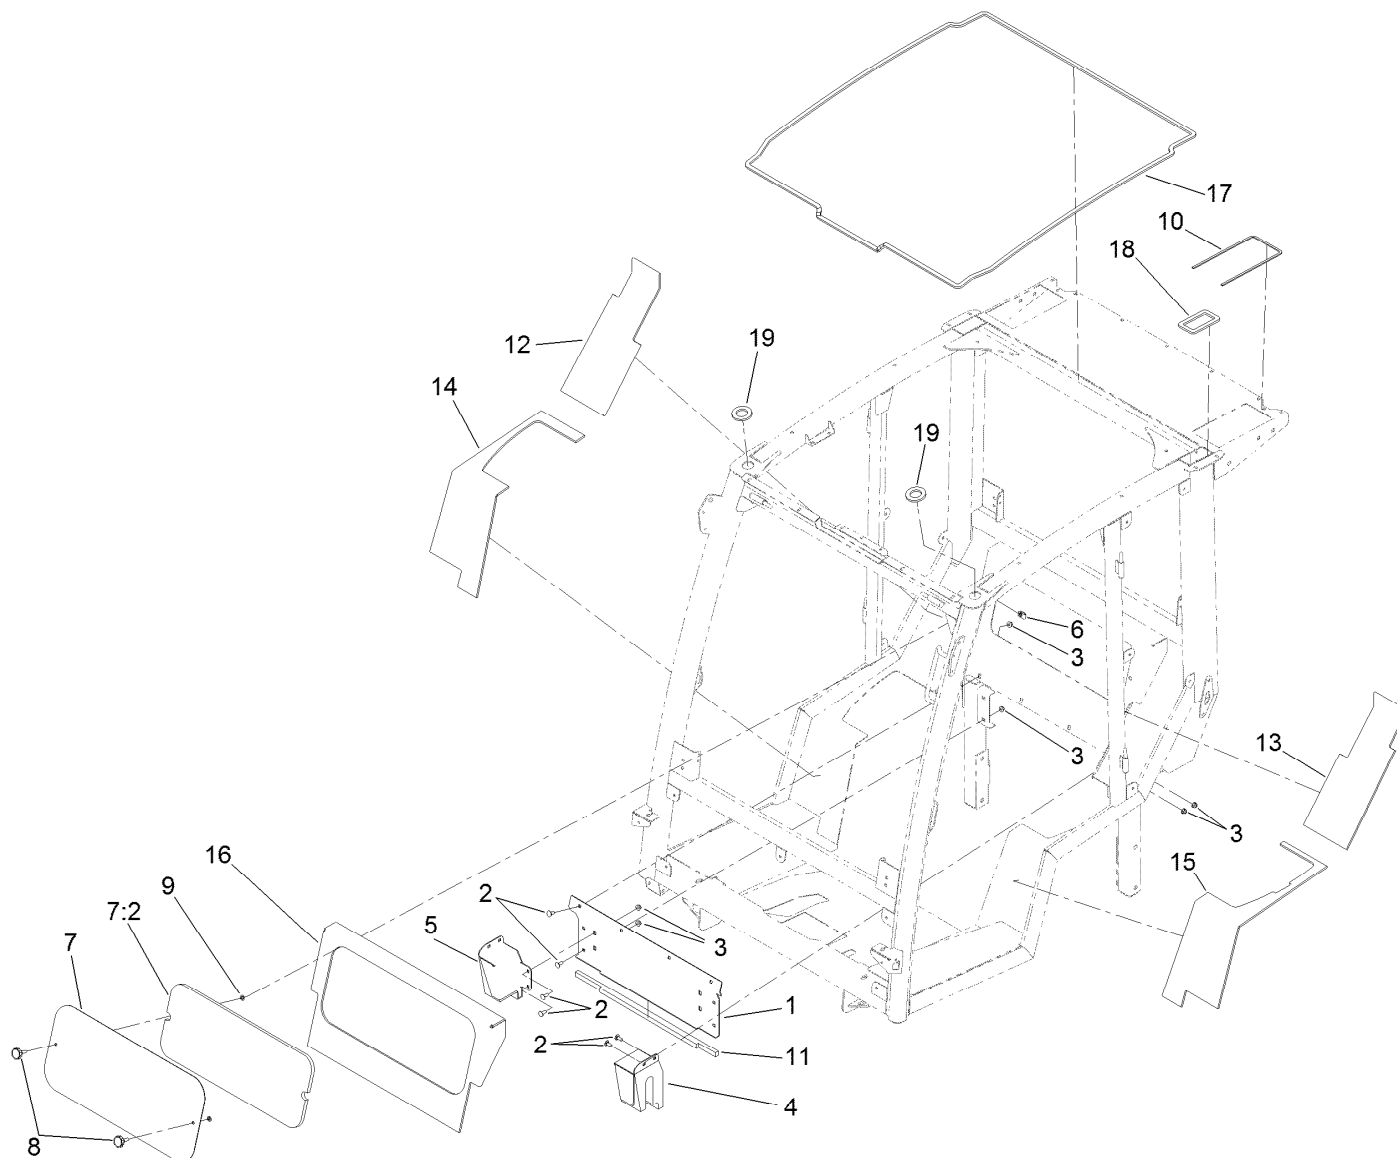

Access Panel and Interior Seal Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	130-5534-03	1	Panel-Rear, Lower	10	130-0587	2	Seal-Foam, Roof Air Filter
2	3230-23	16	Screw-CARR	11	130-5587	1	Seal-Foam, Rear
3	104-8300	16	Nut-Flange, NI	12	130-5594	1	Foam-Interior, RH Rear
4	130-5592	1	LH Cover Bracket ASM	13	130-5595	1	Foam-Interior, LH Rear
5	130-5593	1	RH Cover Bracket ASM	14	130-5596	1	Foam-Interior, RH Side
6	94-2413	2	Nut-U	15	130-5597	1	Foam-Interior, LH Side
7	130-5842	1	Back Panel ASM	16	130-5598	1	Foam-Interior, Back Panel
7:2	130-5599	1	Seal-Foam, Back Panel	17	130-0586	1	Seal-Foam, Frame Roof
8	99-6137	2	Knob-Control, Chute	18	130-5855	2	Seal-Tube, Rear
9	109-5667	2	Ring-Retaining, Bolt	19	133-0982	2	Tube-Seal, Front


Mirror and Floor Tread Assembly

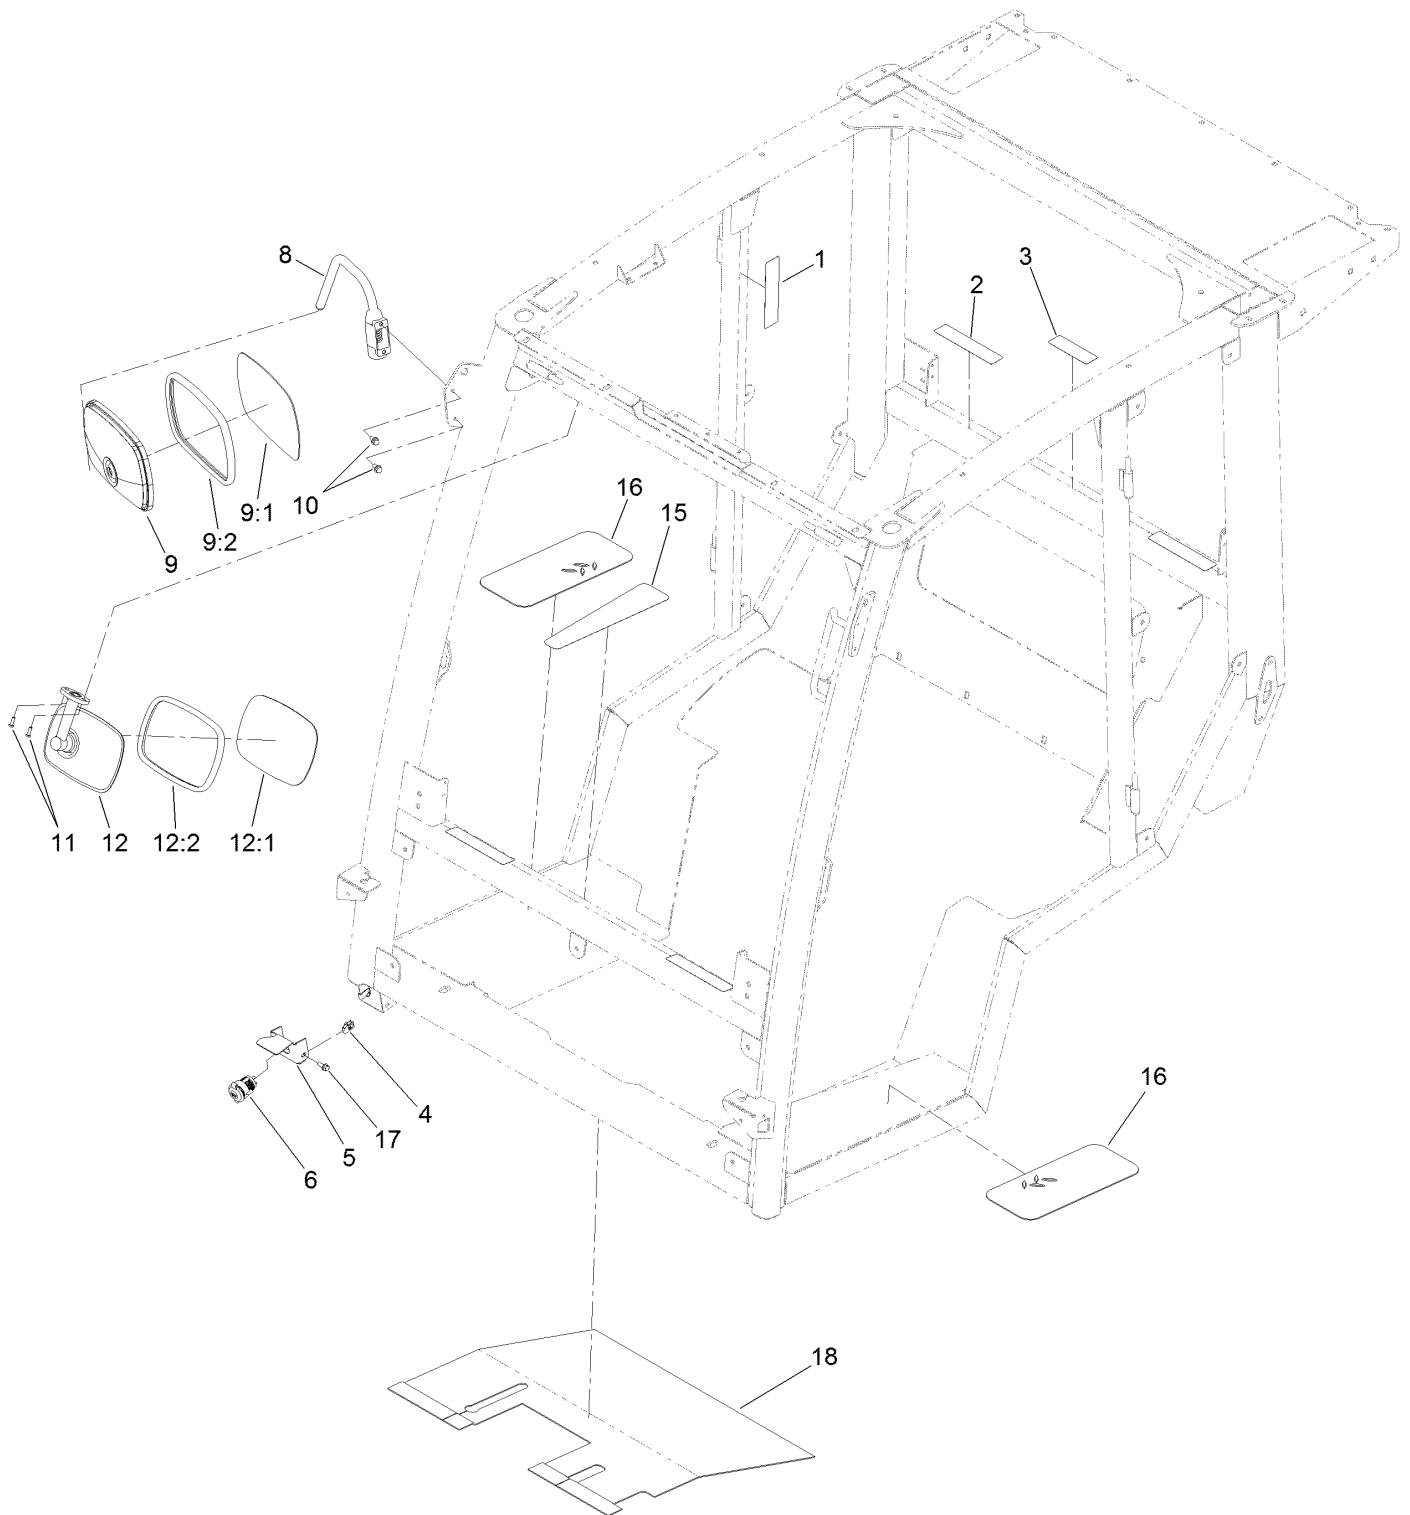

Mirror and Floor Tread Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	130-5361	2	Decal-Warning	10	33103-016	4	Screw-HHF
2	130-0611	4	Decal-Window, Pin	11	32144-32	2	Screw
3	130-5355	1	Decal-Window, Hood	12	121-8343	1	Interior Mirror ASM
4	107069	2	Clip	12:1	121-8342	1	Mirror
5	125-9584	1	Cover-Switch, Power Point	12:2	121-8389	1	Gasket
6	109-9376	1	Receptacle-12V	15	93-7834	1	Decal-Footrest, RH
8	121-8275	2	Arm-Mirror, Side	16	130-5581	2	Pad-Step
9	121-8341	2	Side Mirror ASM	17	3234-33	2	Screw-HHF
9:1	121-8340	1	Mirror	18	133-0859	1	Tread-Floor
9:2	121-8339	1	Gasket				


Windshield Wiper, Fresh Air Filter and Wire Harness Assembly

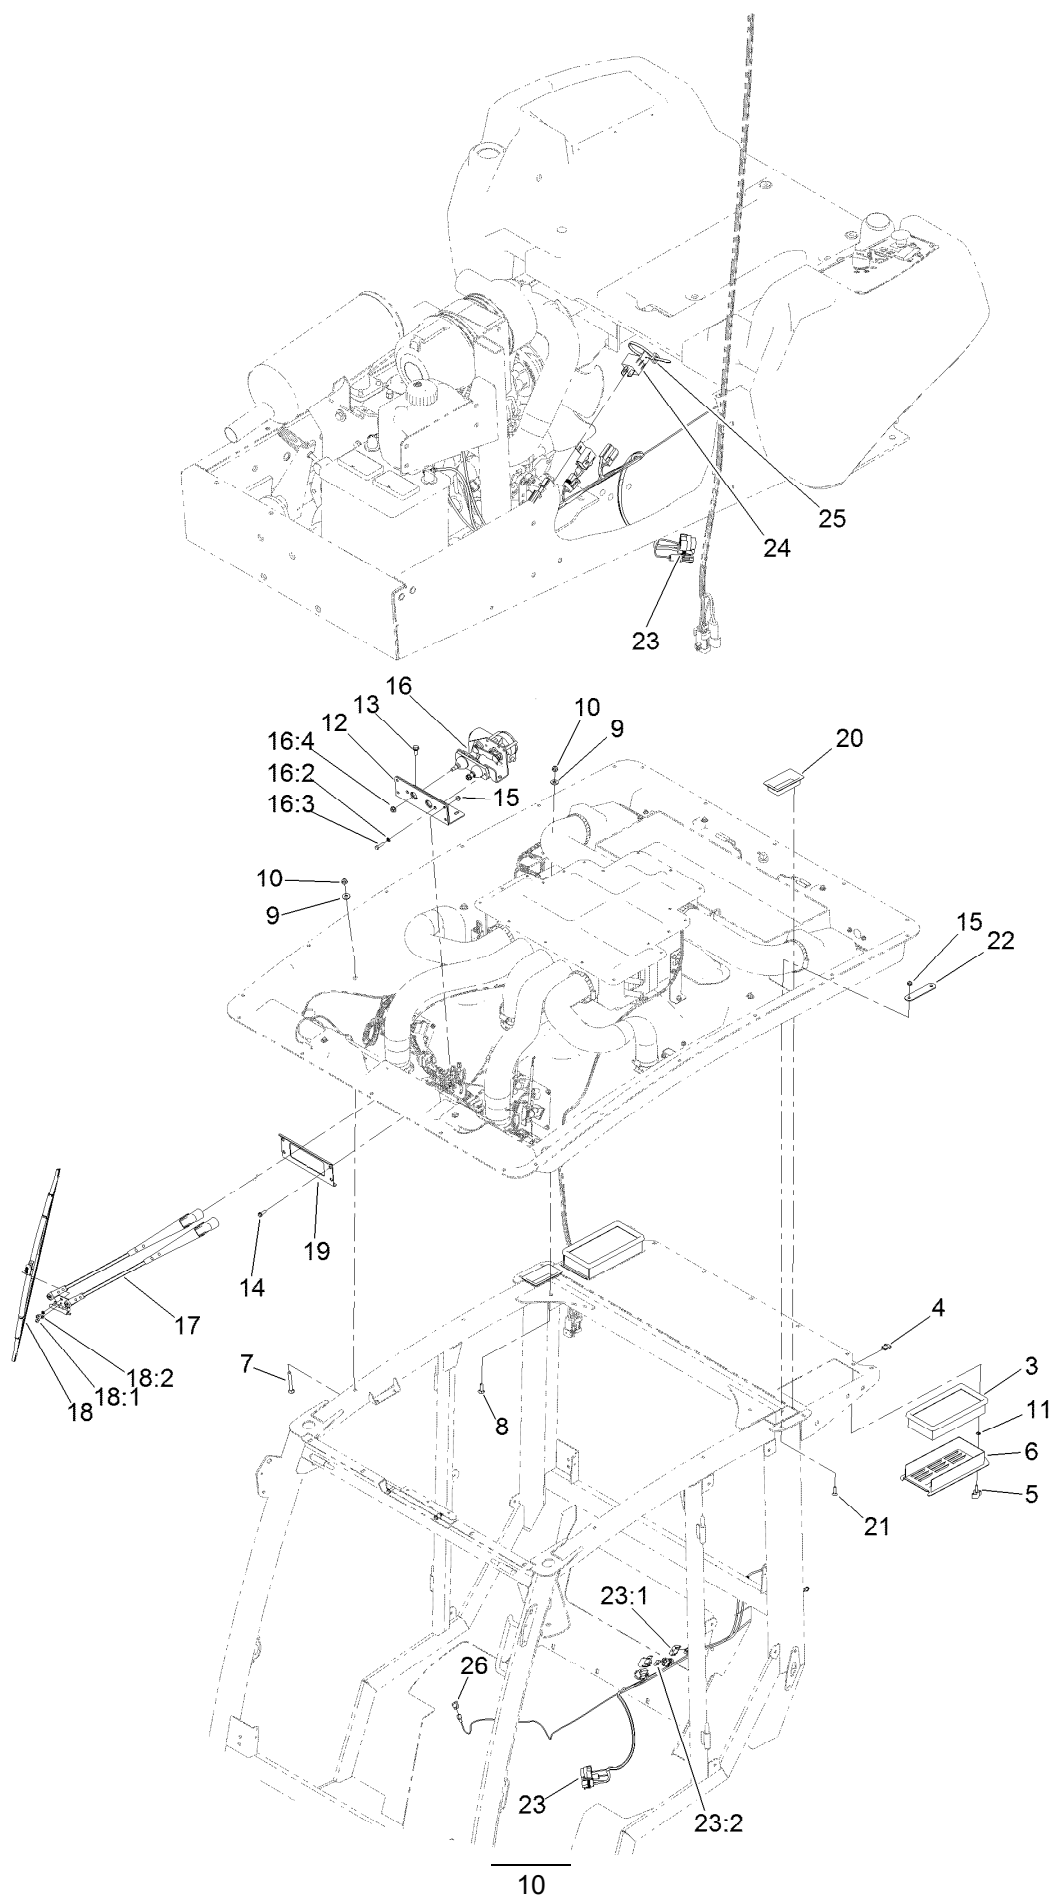

Windshield Wiper, Fresh Air Filter and Wire Harness Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
3	121-8457	2	Filter-Air	16:4	112-2844	2	Nut-HF
4	107069	2	Clip	17	125-7453	1	Arm-Wiper
5	98-8332	2	Knob	18	125-7454	1	Blade-Wiper
6	125-9825-03	2	Cover-Air, Fresh	18:1	47-2830	2	Screw
7	3230-9	4	Screw-CARR	18:2	43-5920	2	Washer-Lock, Spring
8	3230-22	13	Screw-CARR	19	130-6068-03	1	Plate-Washer, Wiper Motor
9	3256-3	17	Washer-Flat	20	130-5661	2	Tube-Sleeve
10	104-8300	17	Nut-Flange, NI	21	3229-30	4	Screw-CARR
11	106-8737	2	Nut-Retainer	22	130-5854	2	Brace-Seal
12	130-5871	1	Bracket-Wiper	23	122-0387	1	Harness-Wire, Cab Power
13	32144-11	2	Screw-HWHTF	23:1	114-3342	1	Fuse-Maxi, 60 Amp
14	32105-15	4	Screw-HWH	23:2	218-578	1	Fuse-Blade, 10 Amp
15	104-7201	8	Nut-Flange, NI	24	99-7435	1	Relay-Power
16	125-7452	1	Wiper Motor ASM	25	3290-378	1	Tie-Cable
16:2	3253-3	1	Washer-Lock	26	218-578	1	Fuse-Blade, 10 Amp
16:3	33113-025	1	Screw-HH				

Door and Window Assembly

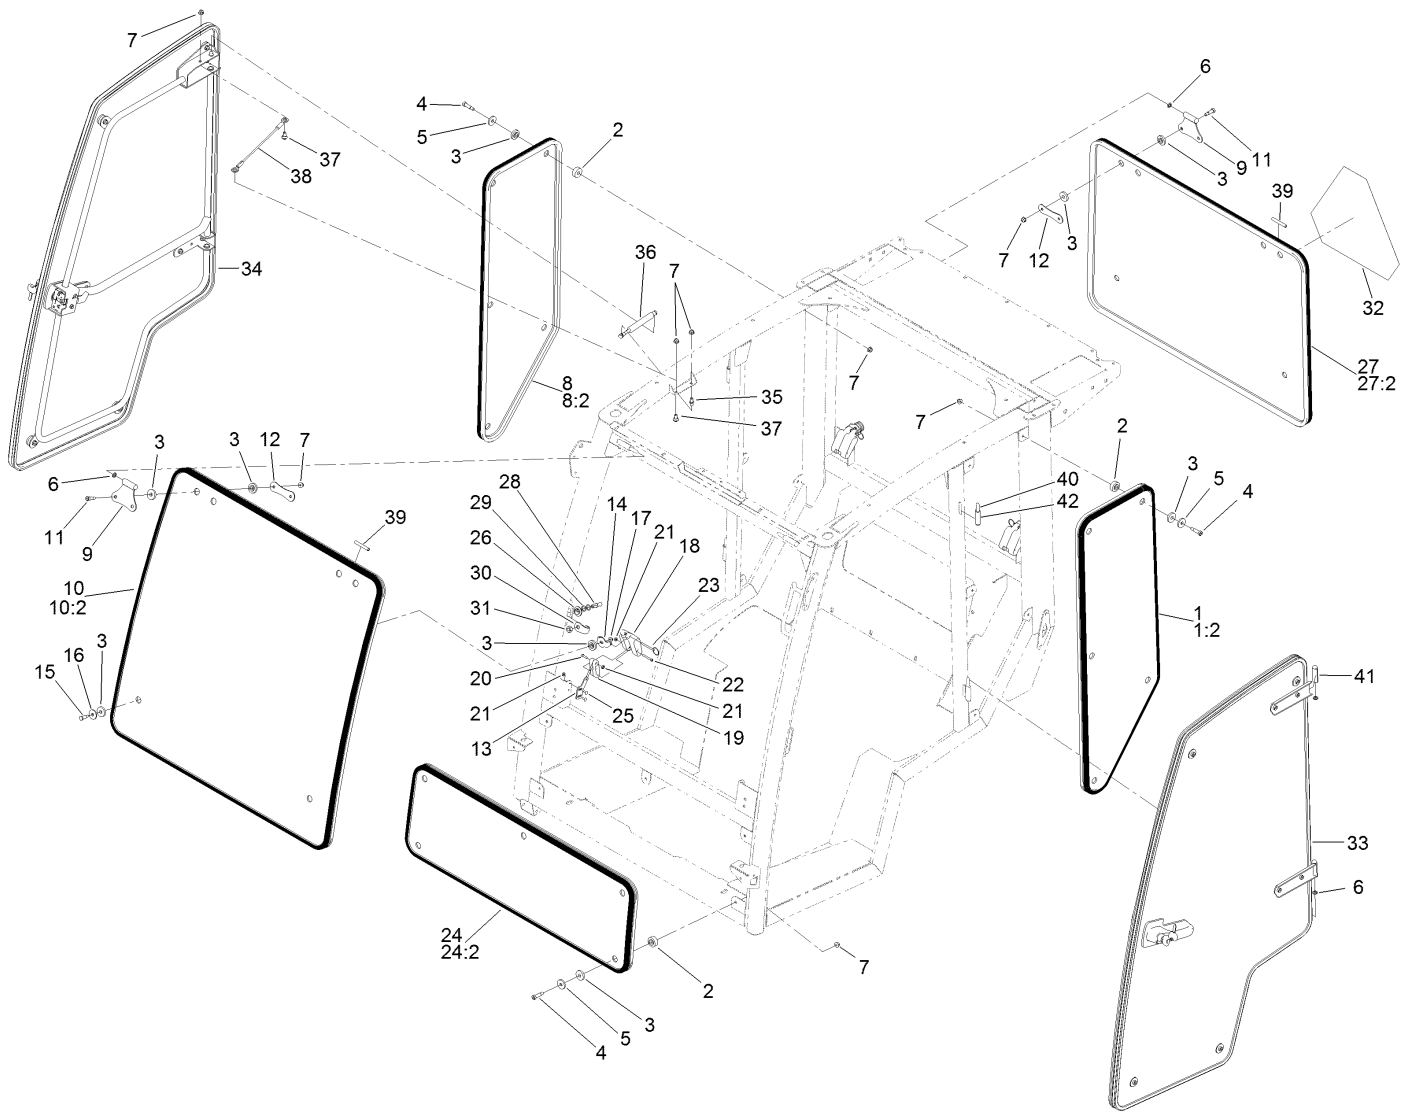


Door and Window Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	130-6195	1	LH-Side Window ASM	22	3274-59	4	Screw-HSH
1:2	130-5558	1	Seal-Trim, Side	23	127-9850	4	Pin-Release, Quick
2	125-9537	15	Bushing-Flange	24	130-6193	1	Front-Lower Window ASM
3	125-9982	39	Bushing-Flange	24:2	130-0329	1	Seal-Trim
4	125-9521	15	Screw-Shoulder, HSH	25	1-807513	8	Bolt-CARR
5	130-5815	15	Washer-Backup	26	125-9992	2	Adjuster-Stud
6	121-8441	8	Washer-Spacer	27	130-6196	1	Rear Window ASM
7	104-8300	29	Nut-Flange, NI	27:2	130-5563	1	Trim-Window, Rear
8	130-6194	1	RH-Side Window ASM	28	132-3718	2	Stud-Striker
8:2	130-5558	1	Seal-Trim, Side	29	73-0040	4	Washer-Thrust
9	121-8535	4	Hinge-Window	30	121-8393	2	Guard-Striker
10	130-5680	1	Upper Front Window ASM	31	106-0327	2	Nut-Hex
10:2	121-8212	1	Seal-Trim	32	120-0250	1	Decal-Warning
11	125-9520	8	Screw-Shoulder, HSH	33		1	LH Door ASM ●
12	127-9933	4	Plate-Backer, Windshield	34		1	RH Door ASM ●
13	130-0590	4	Mount-Tab	35	98-3104	2	Stud-Ball
14	125-9987	4	Mount-Latch	36	130-6083	2	Spring-Gas, Door
15	119-9812	4	Bolt-Shoulder	37	120-9471	4	Bolt-Shoulder
16	125-9676	4	Washer-Backup	38	130-5726	2	Lanyard
17	104-7201	4	Nut-Flange, NI	39	130-5578	2	Tubing-Seal, Rubber
18	125-9792	4	Handle-Window	40	133-1110	1	Pin-Hinge
19	125-9793	4	Link-Window	41	121-8439	1	Receiver-Pivot, Hinge
20	3274-14	4	Screw-HSH	42	121-8440	1	Pivot-Hinge
21	120-9681	16	Nut-Lock, NI				

● Not serviced separately


LH Door Assembly

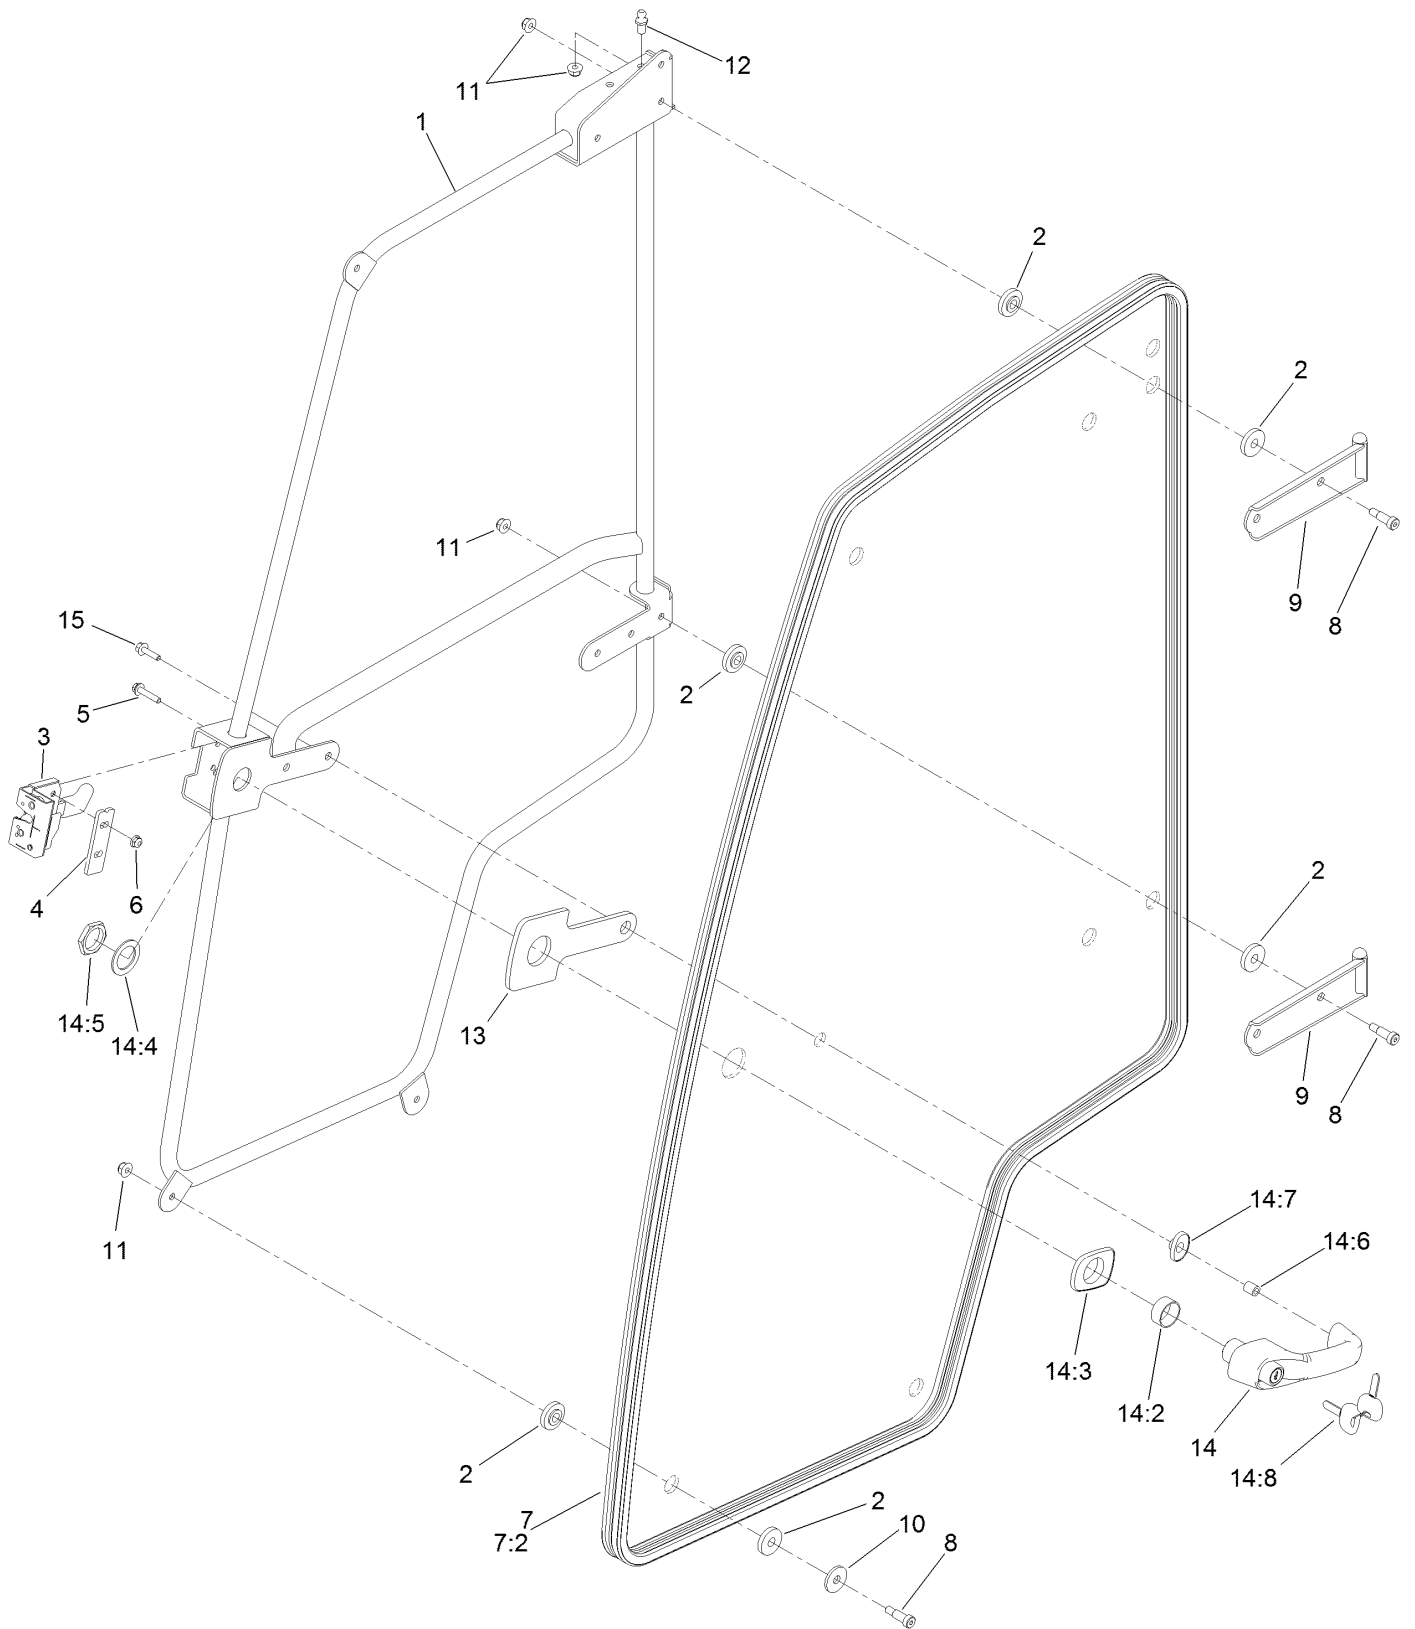

LH Door Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	130-5566-03	1	Frame-Door, LH	12	98-3104	1	Stud-Ball
2	125-9982	16	Bushing-Flange	13	121-8331	1	Gasket-Handle
3	121-8391	1	Latch-LH	14	121-8630	1	Handle ASM
4	121-8395	1	Plate-Support, Latch	14:2	121-8628	1	Cylinder-Mounting, Key
5	3234-21	2	Screw-HHF	14:3	121-8322	1	Grommet-Mounting, Large
6	104-7201	2	Nut-Flange, NI	14:4	121-8327	1	Washer
7	130-6198	1	LH Door ASM	14:5	121-8328	1	Nut
7:2	130-5568	1	Trim-Door	14:6	121-8627	1	Cylinder-Mounting, End
8	125-9520	8	Screw-Shoulder, HSH	14:7	121-8323	1	Grommet-Mounting, Small
9	125-9619	2	Hinge-Door, LH	14:8	125-9531	1	Key-Set
10	125-9676	4	Washer-Backup	15	33103-025	1	Screw-HHF
11	104-8300	9	Nut-Flange, NI				


RH Door Assembly

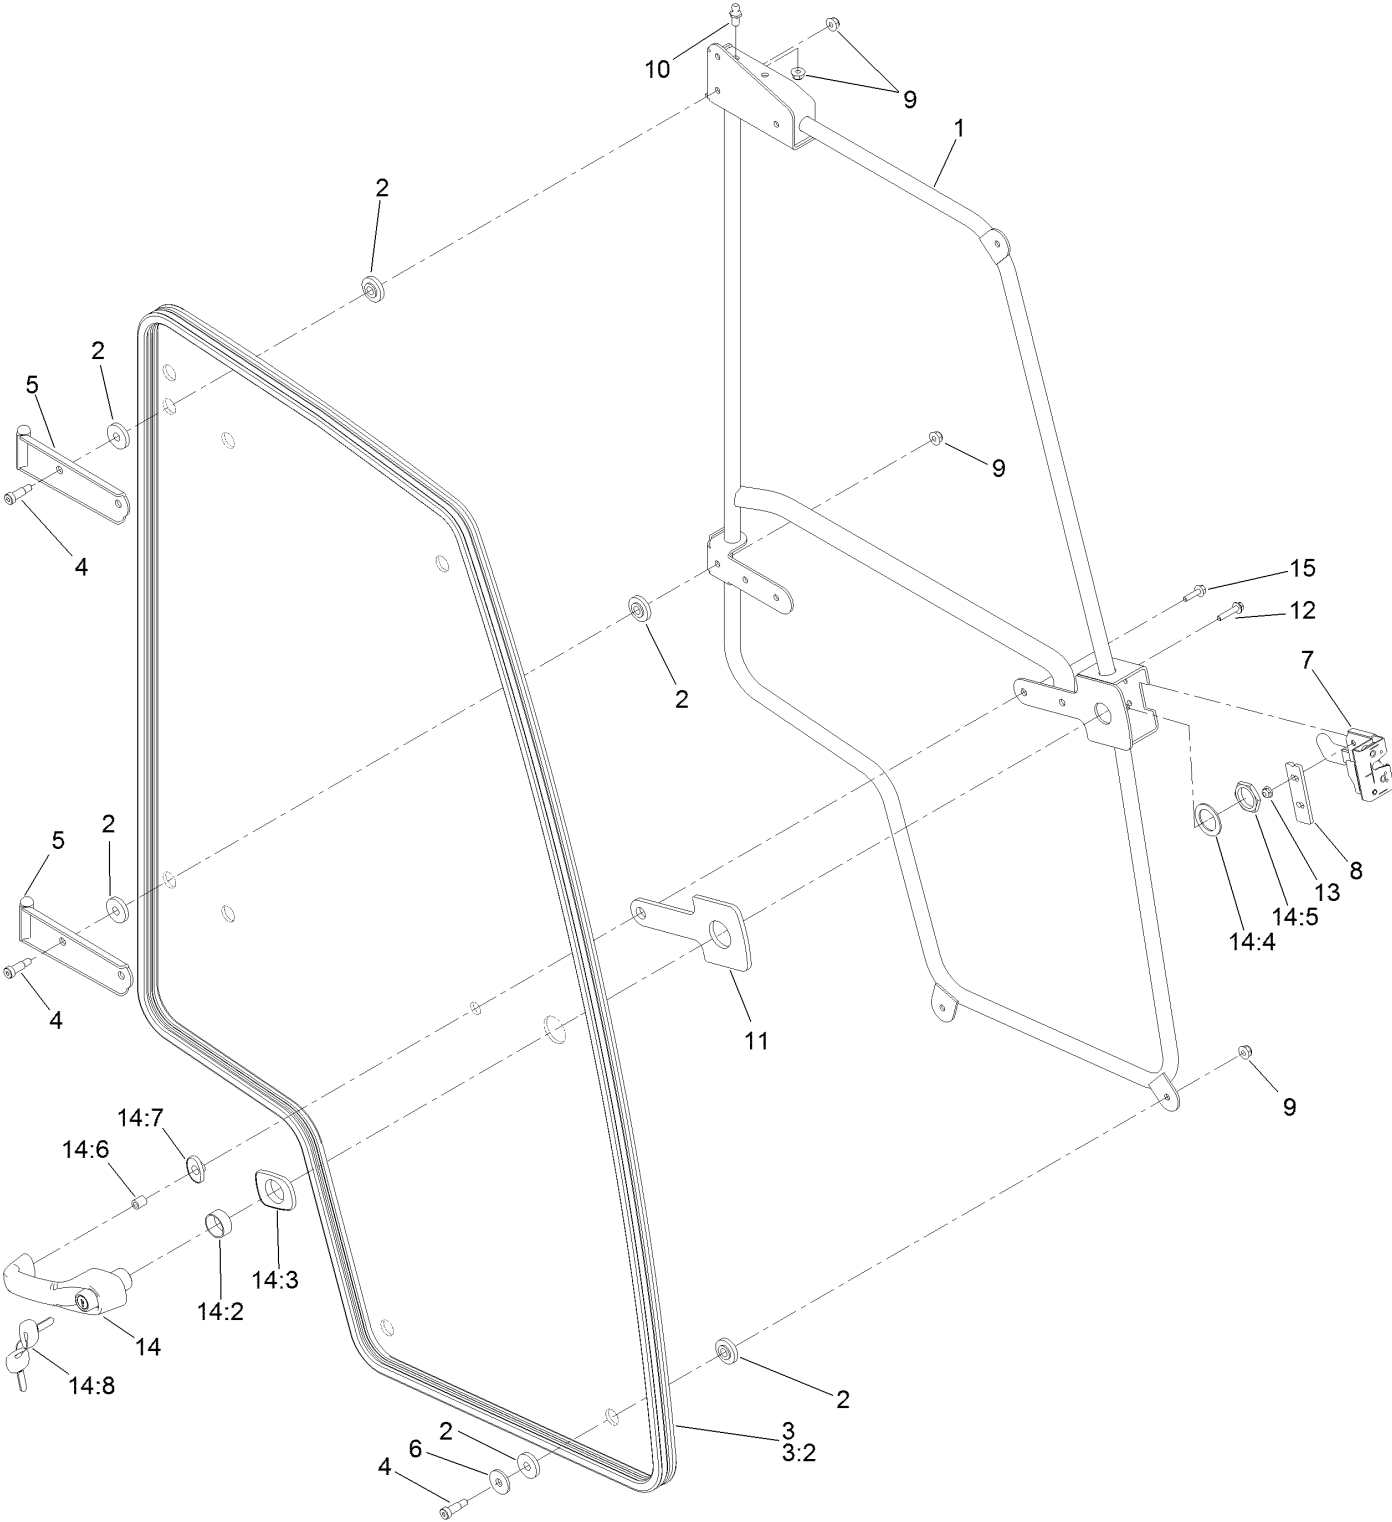

RH Door Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	130-5574-03	1	Frame-Door, RH	12	3234-21	2	Screw-HHF
2	125-9982	16	Bushing-Flange	13	104-7201	2	Nut-Flange, NI
3	130-6197	1	RH Door ASM	14	121-8630	1	Handle ASM
3:2	130-5568	1	Trim-Door	14:2	121-8628	1	Cylinder-Mounting, Key
4	125-9520	8	Screw-Shoulder, HSH	14:3	121-8322	1	Grommet-Mounting, Large
5	125-9618	2	Hinge-Door, RH	14:4	121-8327	1	Washer
6	125-9676	4	Washer-Backup	14:5	121-8328	1	Nut
7	121-8390	1	Latch-RH	14:6	121-8627	1	Cylinder-Mounting, End
8	121-8395	1	Plate-Support, Latch	14:7	121-8323	1	Grommet-Mounting, Small
9	104-8300	9	Nut-Flange, NI	14:8	125-9531	1	Key-Set
10	98-3104	1	Stud-Ball	15	33103-025	1	Screw-HHF
11	121-8331	1	Gasket-Handle				


Heater Hose Routing and Washer Bottle Assembly

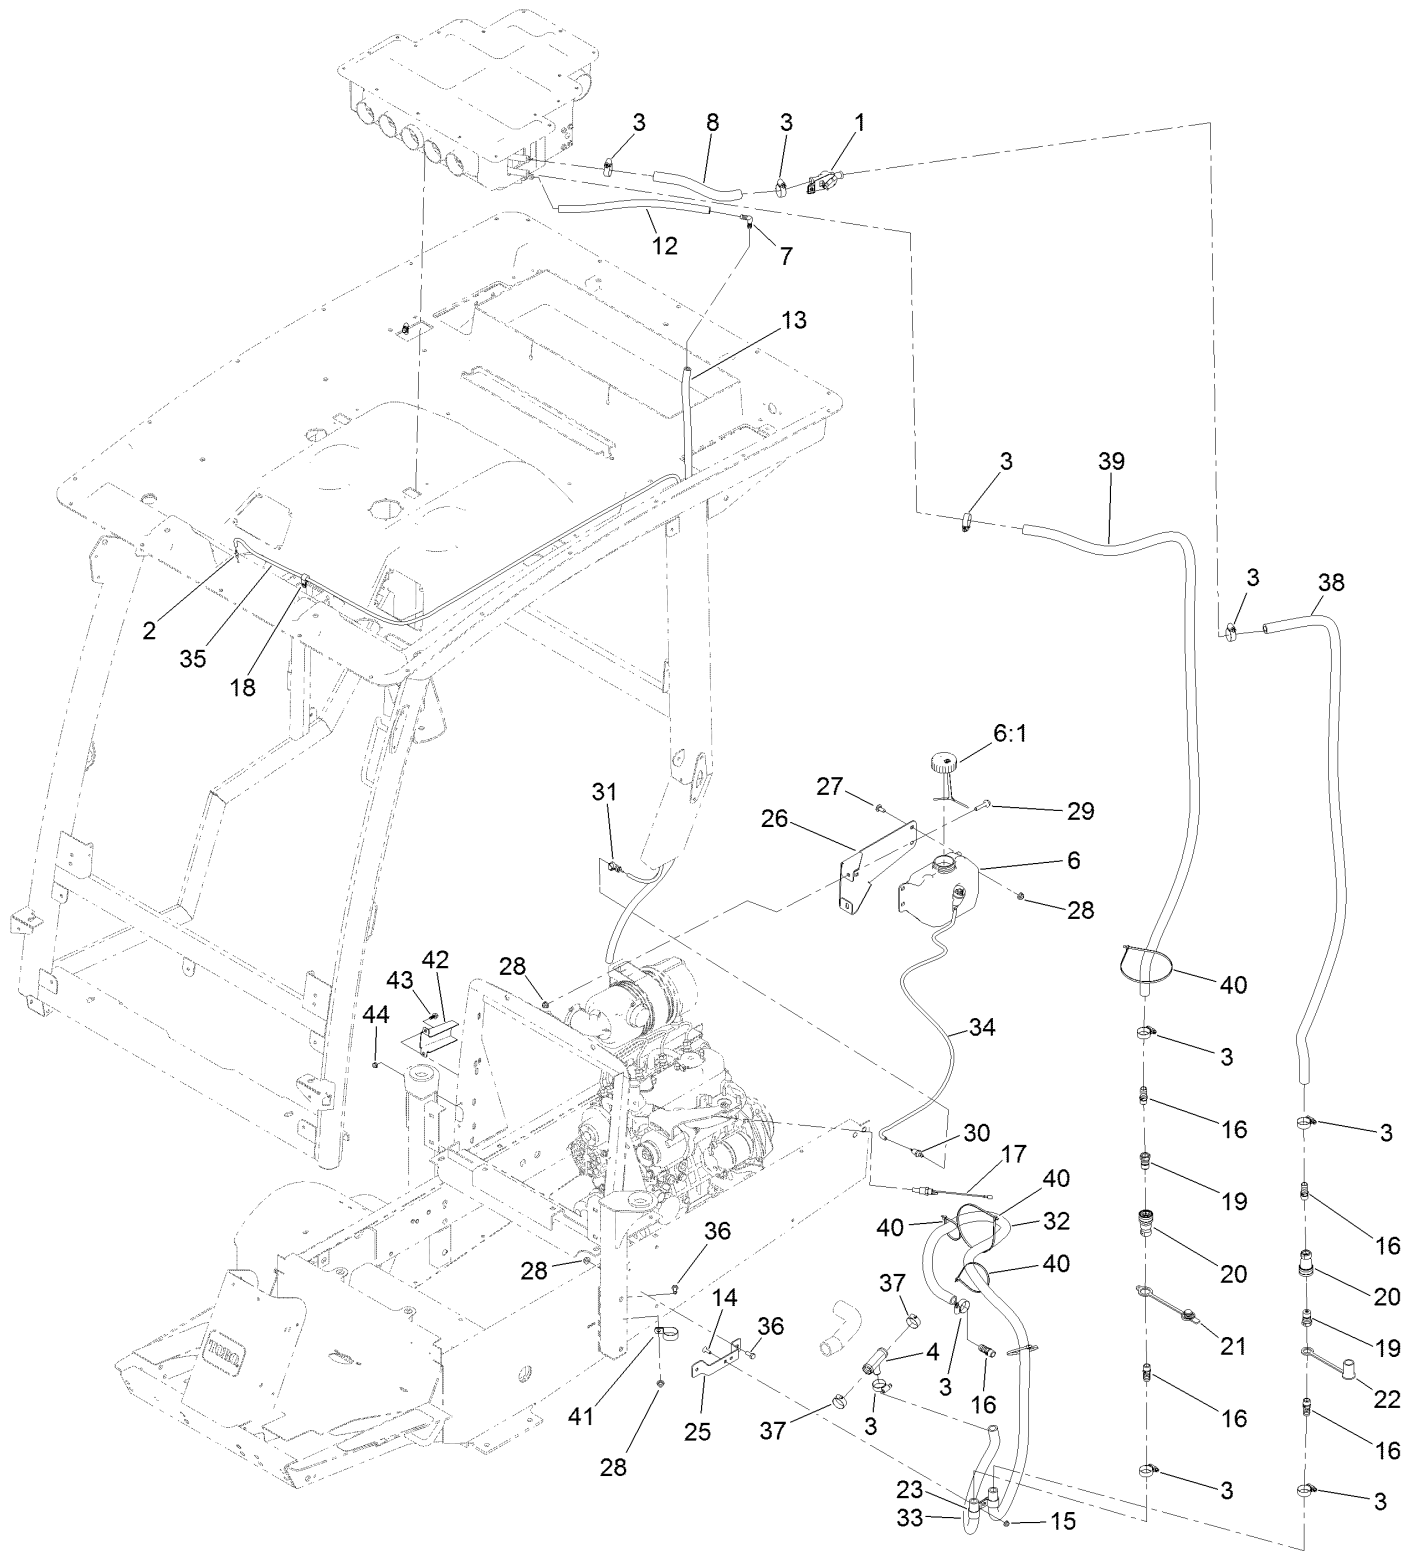

Heater Hose Routing and Washer Bottle Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	120-4947	1	Valve-Heater	25	130-5845-01	1	Bracket-Coupler
2	127-9905	1	Fitting-Hose, Barb	26	130-5898-03	1	Bracket-Mount, Bottle
3	2412-129	10	Clamp-Hose	27	3230-23	4	Screw-CARR
4	132-3416	1	Tee	28	104-8300	10	Nut-Flange, NI
6	125-5257	1	Tank-Fluid, Washer	29	112-9318	2	Screw-HHF, Locking
6:1	125-5258	1	Lid-Tank, Washer Fluid	30	130-5794	1	Fitting-Straight
7	130-0578	2	Fitting-Barb, 90 DEG	31	130-5795	1	Fitting-Straight
8	125-9706	1	Hose-Heater	32	130-6145	1	Hose-Heater
12	125-9865	2	Hose-Drain	33	130-6146	1	Hose-Heater
13	125-9866	2	Hose-Drain	34	130-6147	1	Hose-Washer Fluid
14	1-807512	2	Bolt-CARR	35	130-6148	1	Hose-Washer Fluid
15	104-7201	2	Nut-Flange, NI	36	322-3	4	Screw-HH
16	117-9410	5	Fitting-Straight	37	2412-34	2	Clamp-Hose
17	112-6347	1	Switch-Temp, Dual	38	130-6143	1	Hose-Heater
18	2412-73	1	Clamp-R	39	130-6144	1	Hose-Heater
19	125-9680	2	Coupler-Male	40	3290-379	6	Tie-Cable
20	125-9679	2	Coupler-Female	41	2412-74	2	R-Clamp
21	105-7962	1	Plug-Dust	42	132-3713-03	1	Cover-Harness
22	105-7963	1	Cap-Dust	43	99-6810	2	Screw-HHF
23	2412-39	2	R-Clamp	44	104-7201	2	Nut-Flange, NI

Roof, Headliner and Heat Mixing Box Assembly

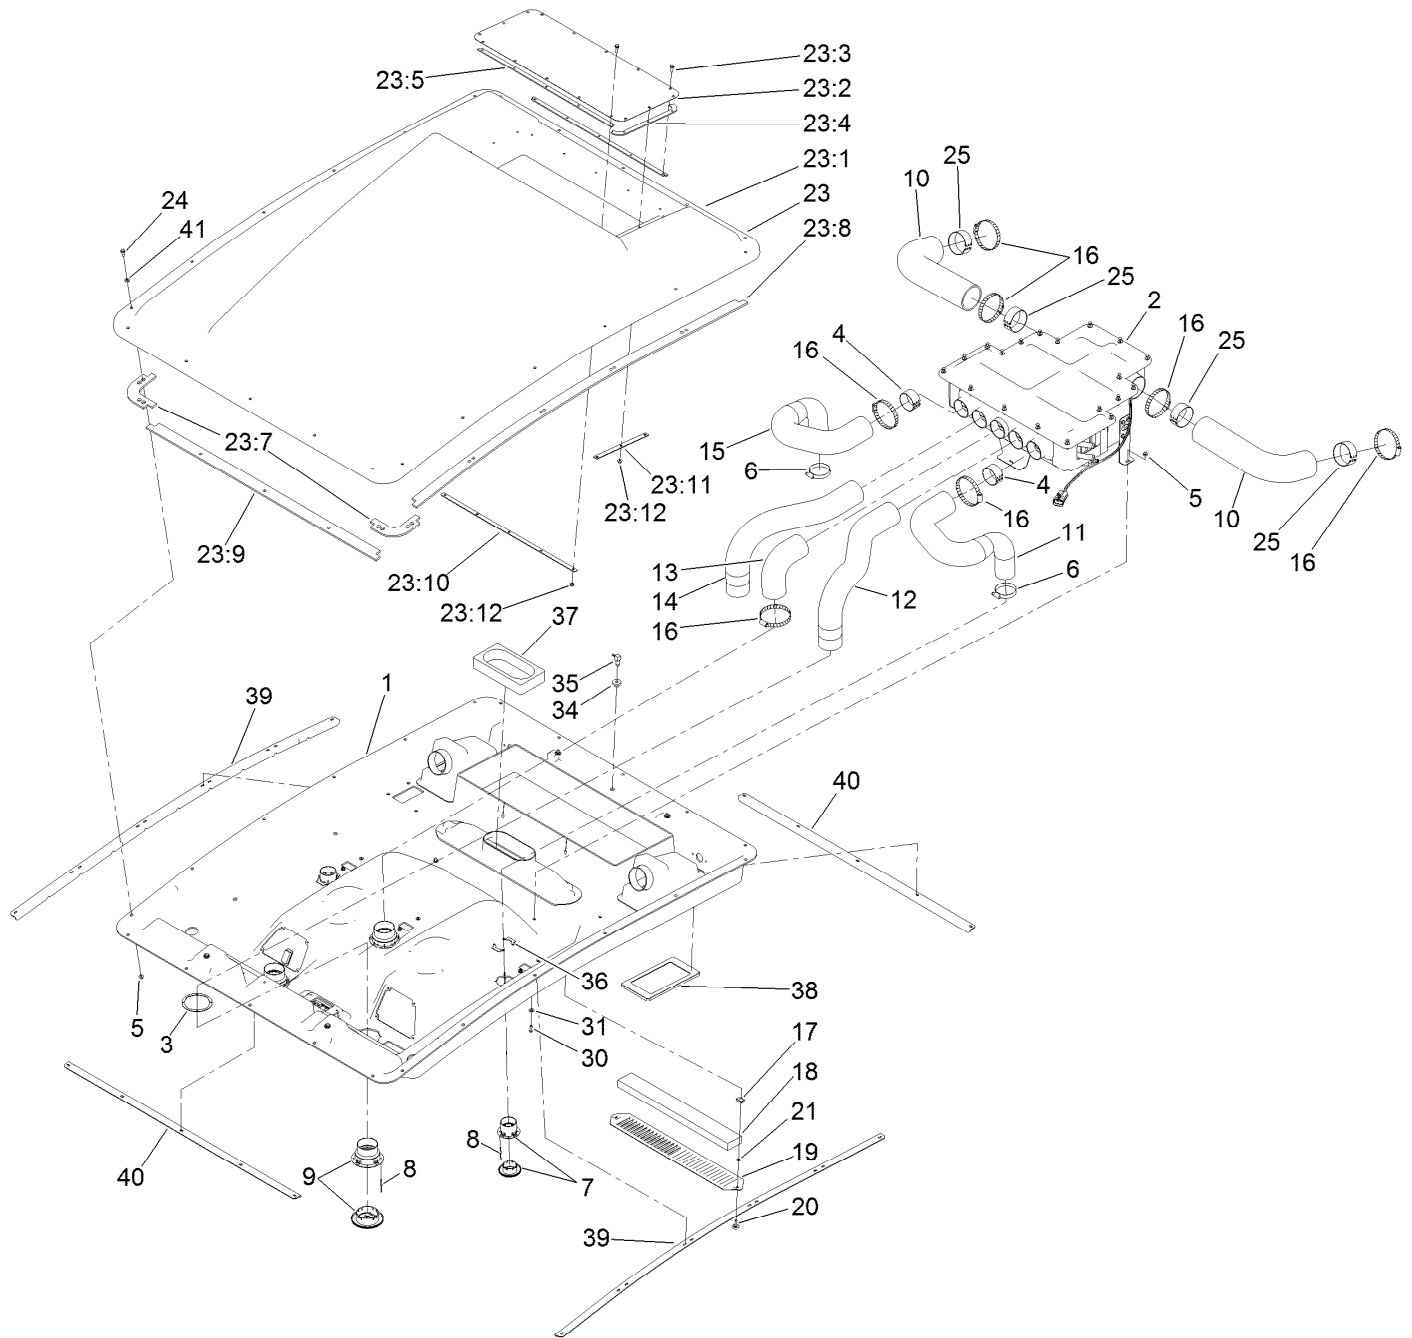


Roof, Headliner and Heat Mixing Box Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	121-8470	1	Headliner	23:1	125-9607	1	Roof
2	121-8603	1	Heat Mixing Box ASM	23:2	125-9527-03	1	Cover-Roof
3	130-0558	3	Backplate-Rivet	23:3	32105-15	16	Screw-HWH
4	130-5938	2	Tube-Support	23:4	132-3668	2	Seal-Cover, Short Side
5	104-7201	24	Nut-Flange, NI	23:5	132-3669	2	Seal-Cover, Long Side
6	2412-130	2	Clamp-Hose	23:7	130-5961	4	Seal-Corner
7	130-0455	2	Louver-Round, Snap-In (2 Inch)	23:8	130-5960	2	Seal-Side
8	125-7503	20	Rivet-Pop	23:9	130-5962	2	Seal-Front, Rear
9	130-0465	3	Louver-Round, Snap-In (4 Inch)	23:10	132-3670-03	2	Strap-Roof, Long
10	121-8473	2	Hose-Intake, Fresh Air	23:11	132-3671-03	2	Strap-Roof, Short
11	130-0440	1	Hose-Vent, LH	23:12	104-7201	16	Nut-Flange, NI
12	121-8477	1	Hose-Vent, Defrost-LH	24	119-3301	22	Bolt-Pivot, Eccentric
13	130-0437	1	Hose-Vent, Center	25	130-5939	4	Tube-Support
14	121-8478	1	Hose-Vent, Defrost-RH	30	3274-69	2	Screw-HSBH
15	130-0441	1	Hose-Vent, RH	31	3256-1	2	Washer-Flat
16	2412-110	7	Clamp-Hose	34	46-6560	1	Bushing
17	107069	2	Clip	35	104-5228	1	Fitting-Elbow, 90 DEG
18	125-9532	1	Filter-Cab, Inside	36	130-0445	4	Backplate-Rivet
19	125-9604-03	1	Plate-Cover, Recirculation	37	130-0444	1	Foam-Inlet, Airbox
20	125-7438	2	Knob-Screw, Thumb	38	132-3474	2	Insert-Seal, Filter
21	106-8737	2	Nut-Retainer	39	132-1461-03	2	Strap-Cab, Side
23		1	Roof ASM ●	40	132-1462-03	2	Strap-Cab
				41	3256-74	22	Washer-Flat

● Not serviced separately


Headliner Wire Harness and Control Assembly

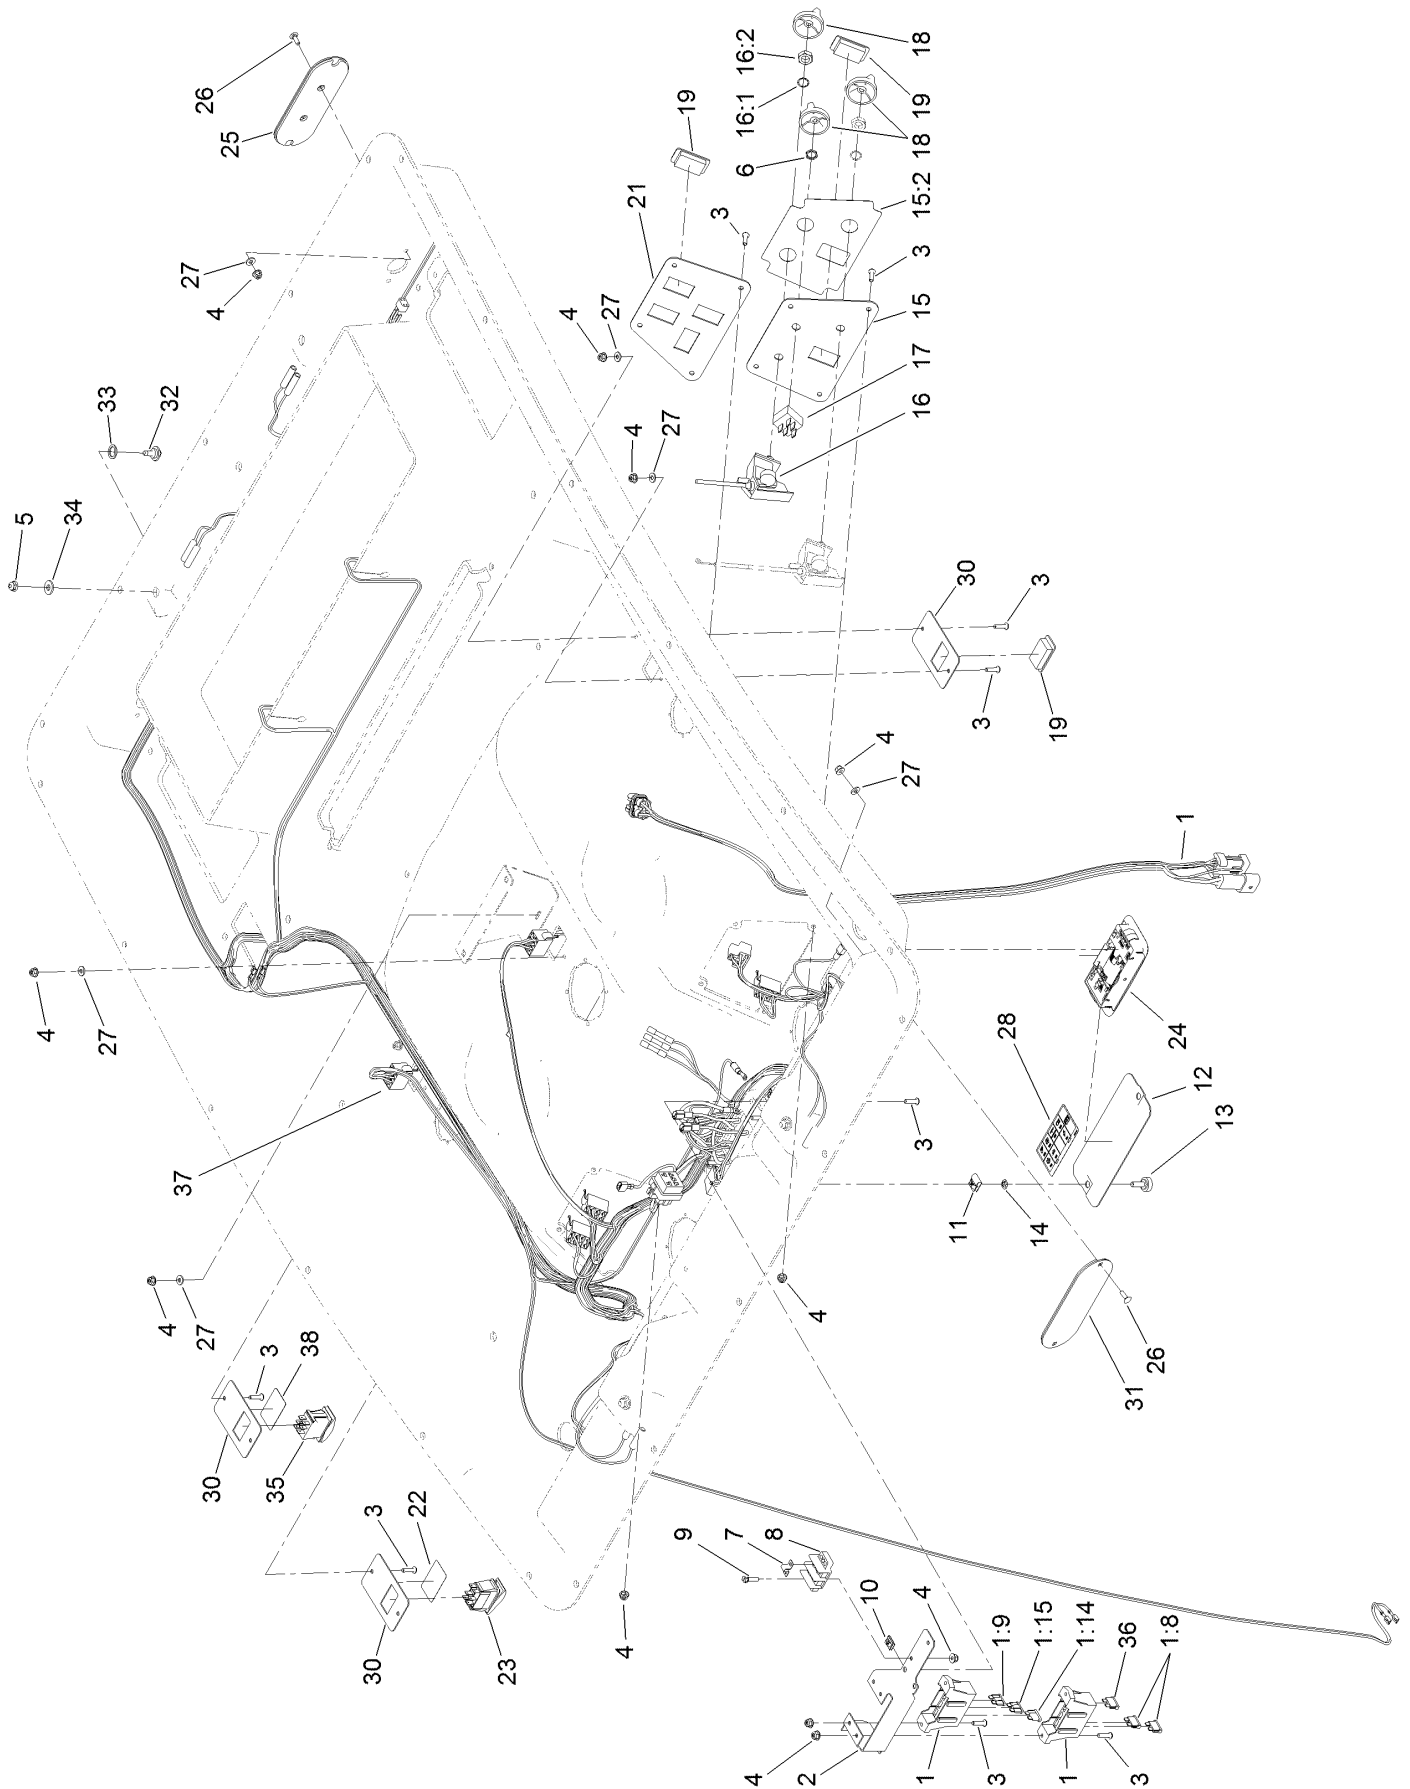

Headliner Wire Harness and Control Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	122-0723	1	Harness-Wire, Headliner	16:2	3220-4	1	Nut-Jam
1:8	109355	2	Fuse-Blade, 15 Amp	17	122-0150	1	Switch, Rotary
1:9	109103	1	Fuse-Blade, 30 Amp	18	125-9510	3	Knob-Control
1:14	109101	1	Fuse-Blade, 20 Amp	19	99-7420	6	Plug-Hole
1:15	109102	1	Fuse-Blade, 25 Amp	21	125-9658-03	1	Panel-Switch, Lights
2	125-9606-03	1	Bracket-Fuse Block	22	125-9688	1	Decal-Washer
3	104-2408	22	Screw-HSBH	23	119-8355	1	Switch-Rocker
4	120-4578	28	Nut-HF	24	125-7437	1	Light-Dome
5	104-7201	4	Nut-Flange, NI	25	130-5867	2	Cover-Light, Rear
6	130-0588	1	Nut-Switch	26	3229-34	8	Screw-CARR
7	42863	1	Strip-Jumper	27	3256-14	14	Washer-Flat
8	42862	1	Block-Terminal, Ground	28	132-3600	1	Decal-Panel, Fuse
9	32105-13	2	Screw-HWH	30	130-0436	3	Panel-Switch
10	107-1013	4	Nut-Speed, U-Type	31	130-5868	2	Cover-Light, Front
11	609900	2	Nut-Speed	32	92-9698	4	Screw-Shoulder
12	125-9603-03	1	Plate-Cover, Fuse	33	94-8196	4	Washer-Nylon
13	125-7438	2	Knob-Screw, Thumb	34	3256-2	4	Washer-Flat
14	106-8737	2	Nut-Retainer	35	100-1535	1	Switch
15	121-8481	1	Panel-Air/Heat	36	109355	1	Fuse-Blade, 15 Amp
15:2	121-8378	1	Decal, Air/Heat	37	122-0158	1	Harness-Wire, Power Point
16	125-9677	1	Control-Rotary, Linear	38	130-0457	1	Decal-Power Point
16:1	3254-20	1	Washer-Lock, Int				


Blower Mount Assembly

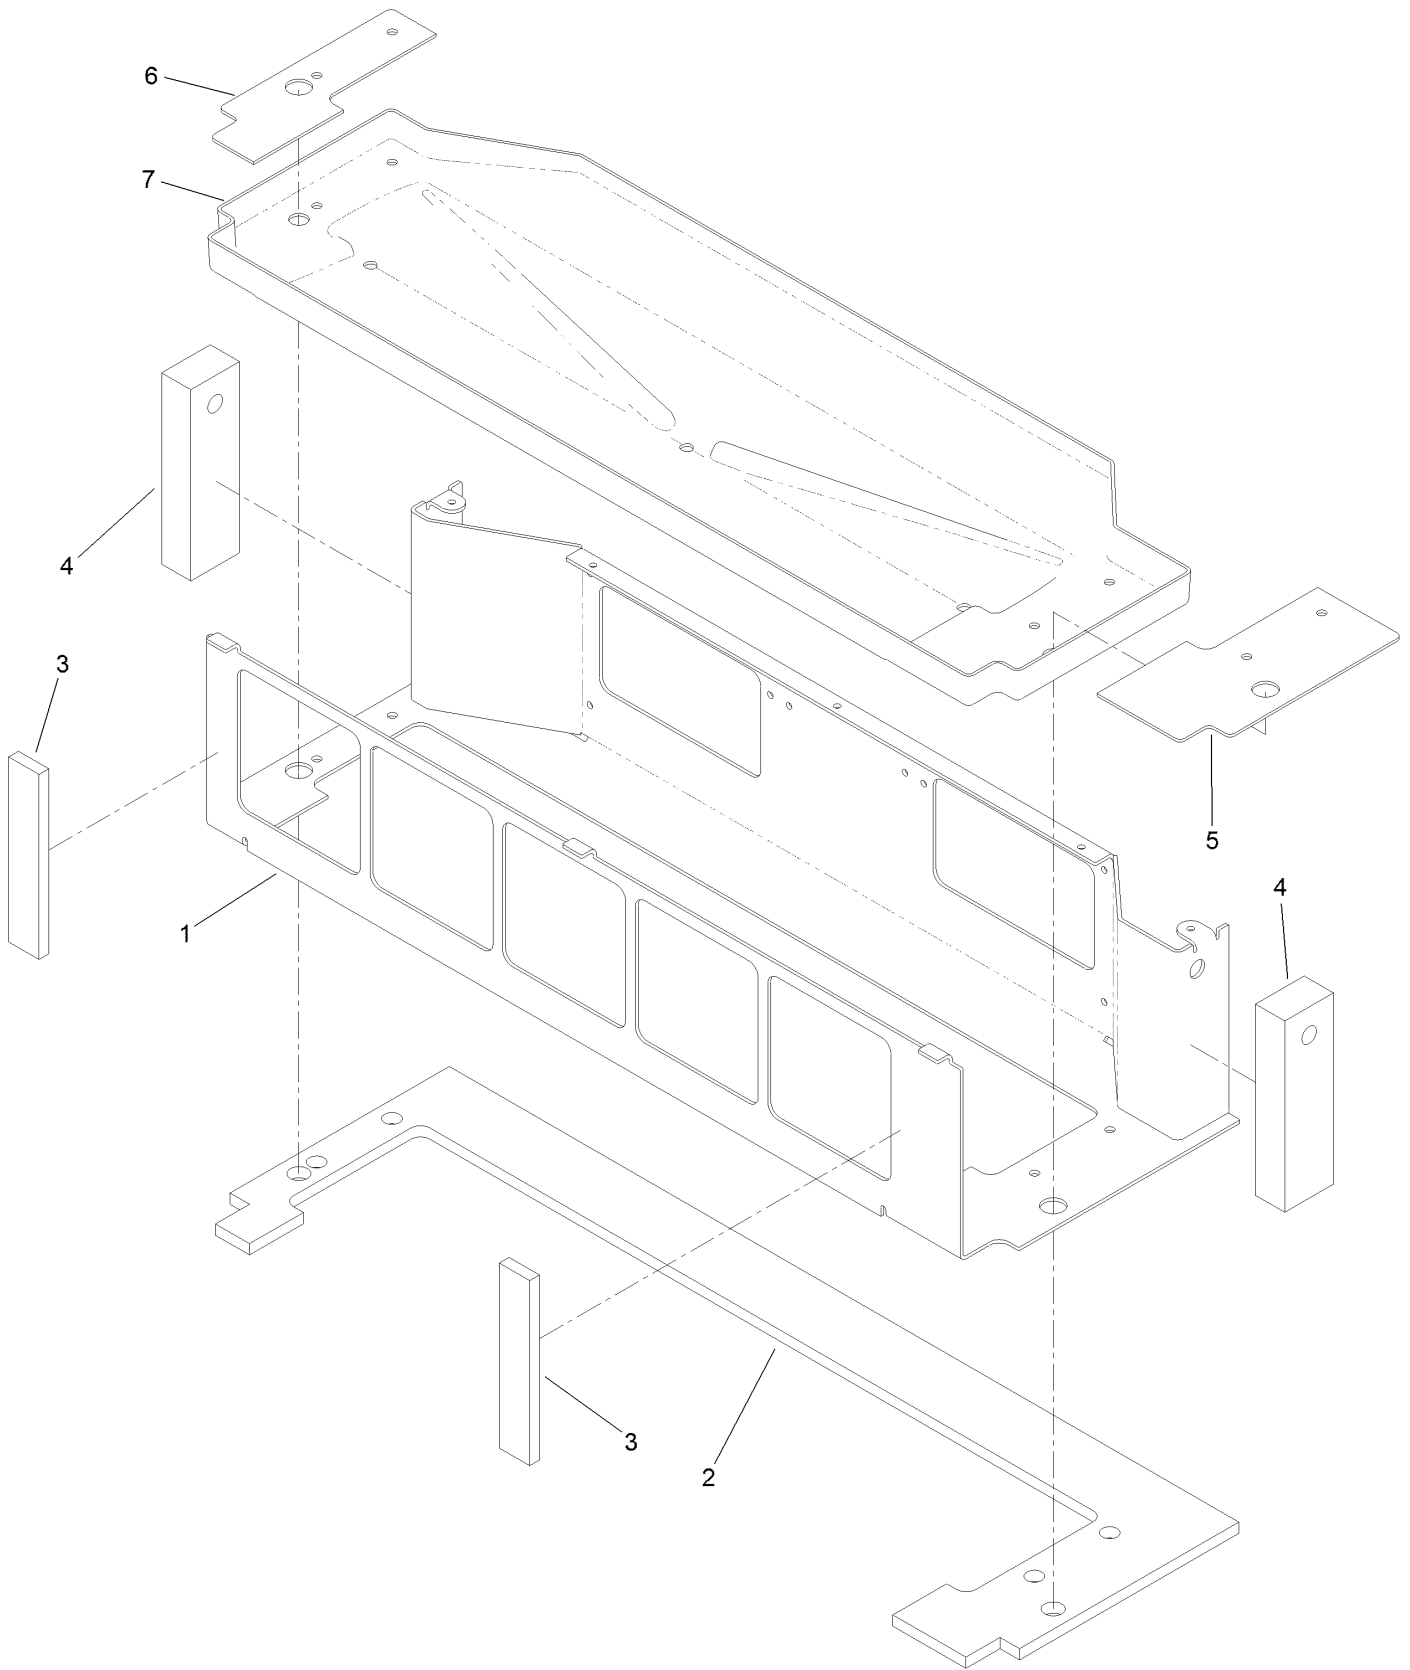

Blower Mount Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	130-5655-03	1	Bracket-Mount	5	130-5653	1	Gasket-Mount, LH Bracket
2	130-5659	1	Seal-Foam	6	130-5654	1	Gasket-Mount, RH Bracket
3	130-5808	2	Seal-Foam, Front	7	130-5664	1	Water-Tray
4	130-0602	2	Seal-End				


Heater Core Bracket and Cover Assembly

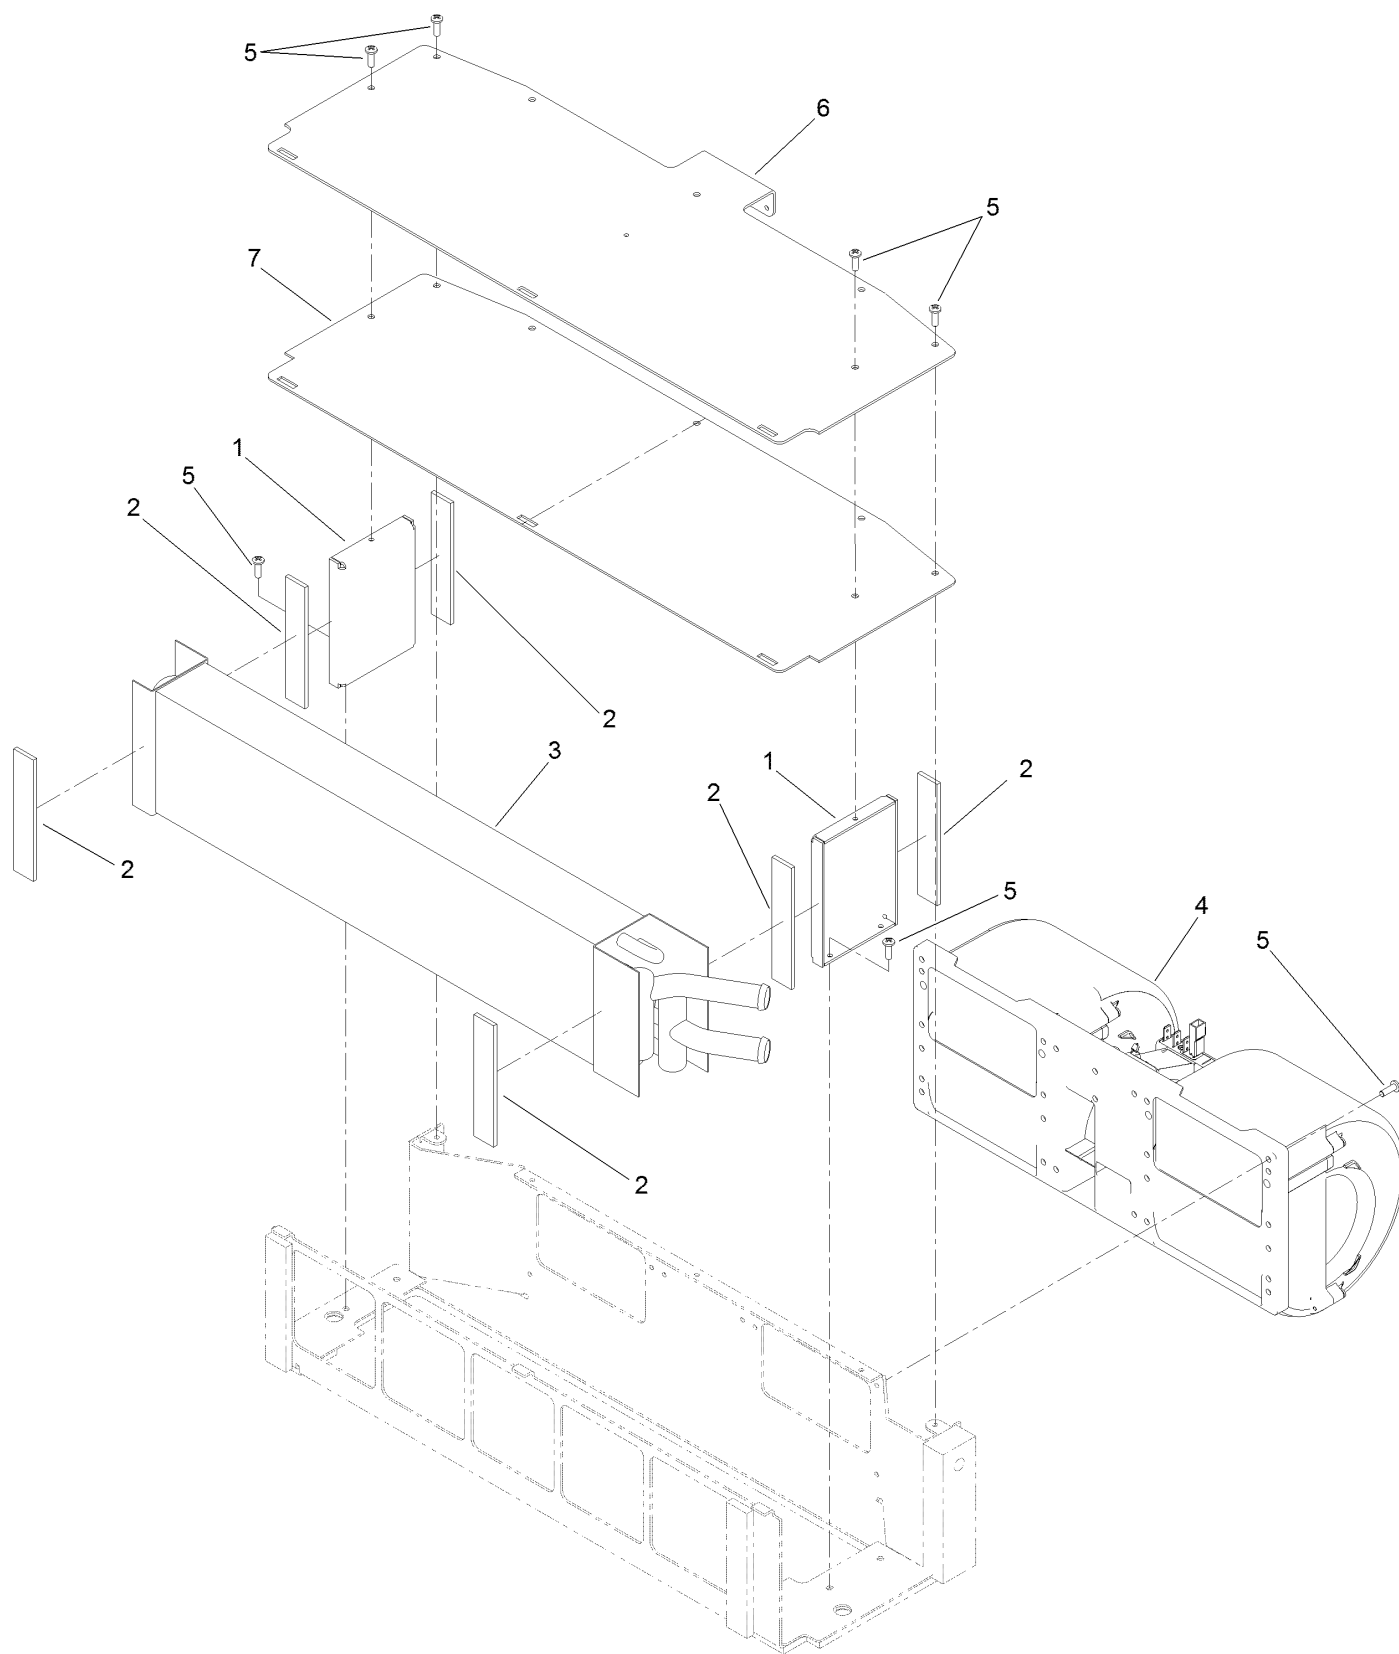

Heater Core Bracket and Cover Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	130-5812-03	2	Bracket-Mount, Heater Core	5	363-8245	17	Screw-TAP
2	130-5658	6	Gasket-Coil	6	130-5656-03	1	Cover, Bracket-Mount
3	127-9915	1	Core-Heater	7	130-5652	1	Gasket-Mount, Cover
4	121-8451	1	Fan-Blower				Bracket


Heat / AC Mixing Box Housing Assembly

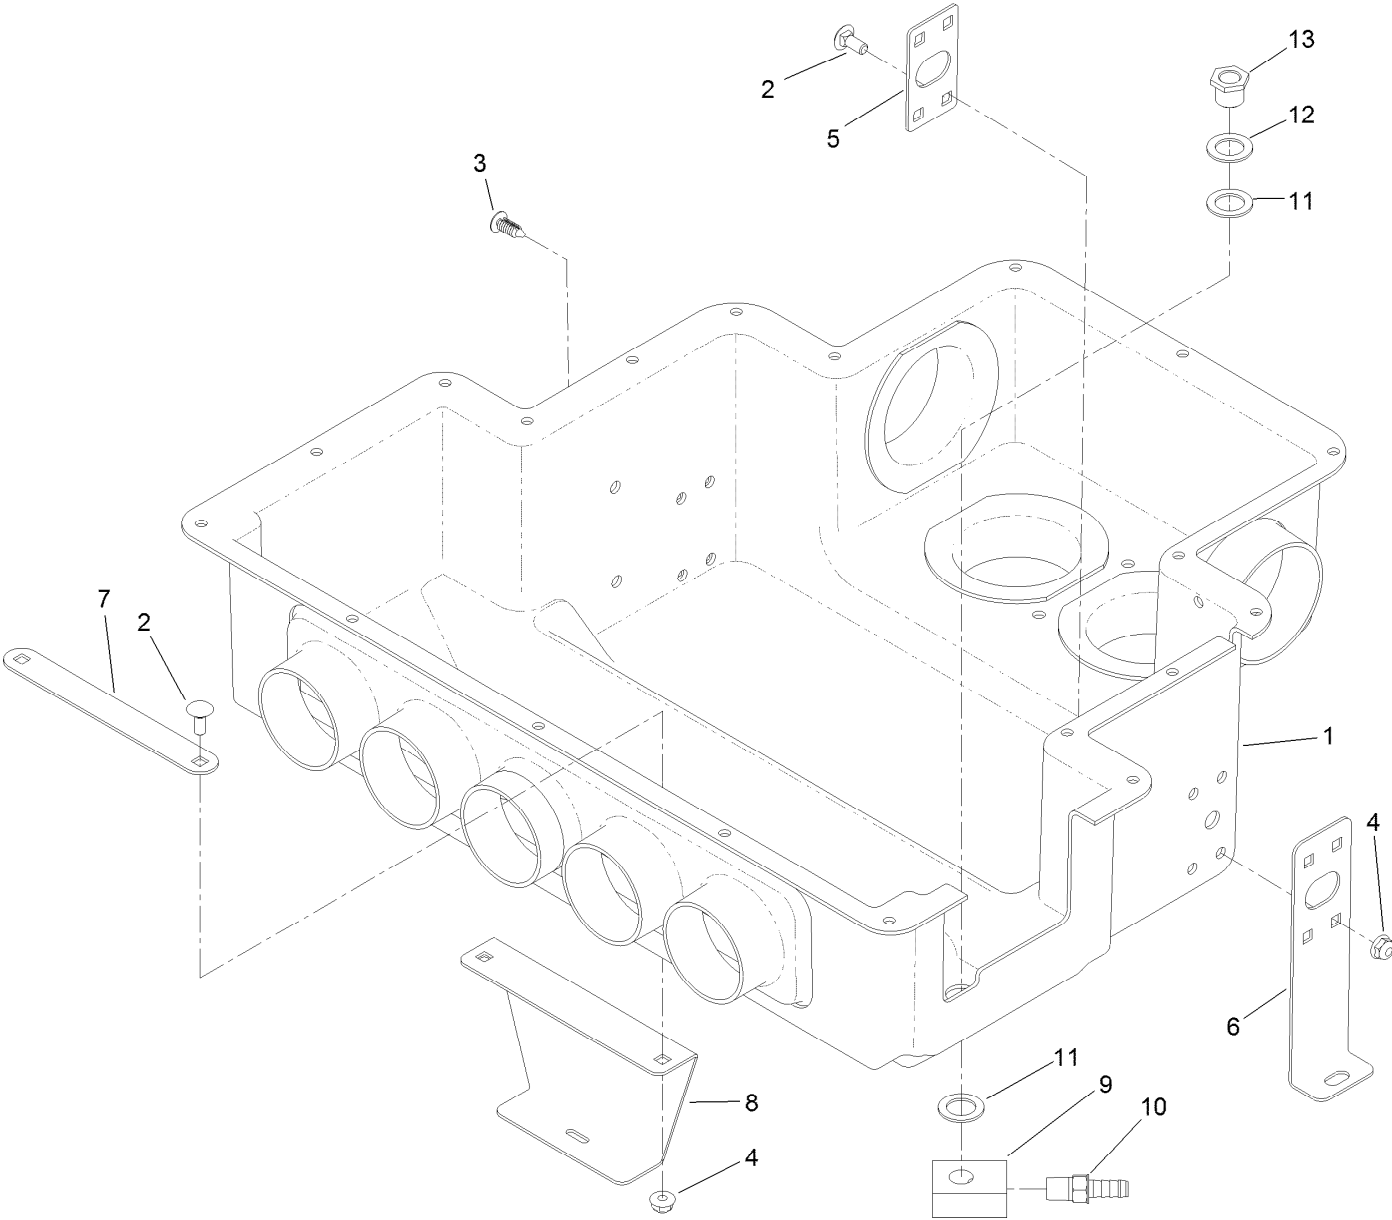

Heat / AC Mixing Box Housing Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	130-5830	1	Heat/AC Housing ASM	8	130-0554	1	Bracket-Airbox, Center
2	3229-11	10	Screw-CARR	9	130-5601	2	Drain-Lower
3	114-4899	2	Plug-Plastic	10	108-0342	2	Fitting-Straight
4	104-7201	10	Nut-Flange, NI	11	121-6840	4	Washer-Rubber
5	130-5834	2	Bracket-Support	12	107-3041	2	Washer-Flat
6	130-5821	2	Bracket-Airbox, Side	13	130-0293	2	Drain-Upper
7	125-7504	1	Plate-Backer, Center				


Air Diverter Assembly

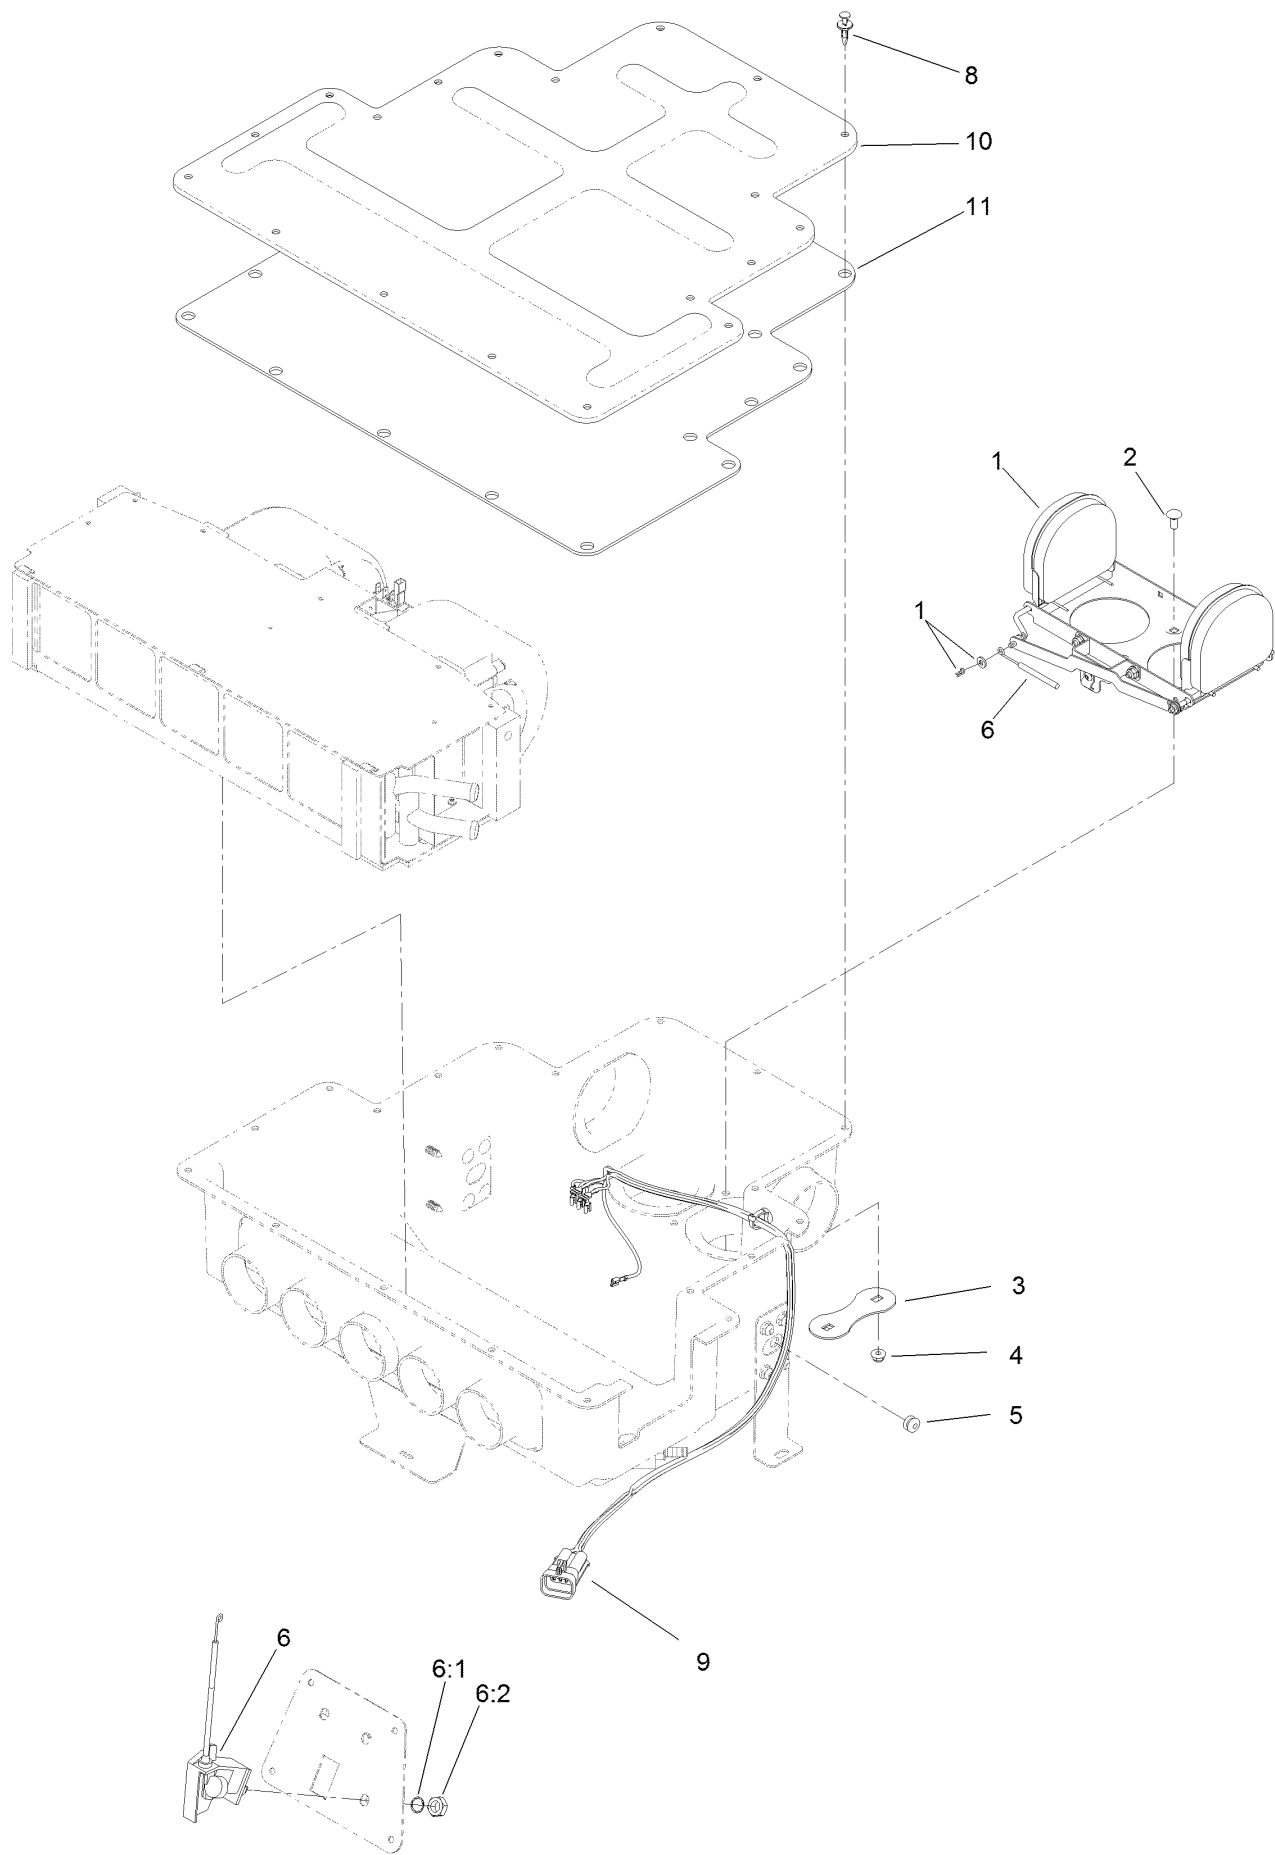

Air Diverter Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	121-8369	1	Air Diverter ASM	6:2	3220-4	1	Nut-Jam
2	3229-11	2	Screw-CARR	8	125-9622	19	Rivet-Blind
3	121-8491	1	Plate-Support	9	122-0153	1	Harness-Wire, Heat/AC
4	104-7201	2	Nut-Flange, NI				Blower
5	125-7528	1	Grommet-Cable	10	121-8449	1	Housing-Ventilation, Upper
6	125-9678	1	Control-Rotary, Linear	11	130-5614	1	Insulation-Cover
6:1	3254-20	1	Washer-Lock, Int				

Air Diverter Assembly No. 121-8369

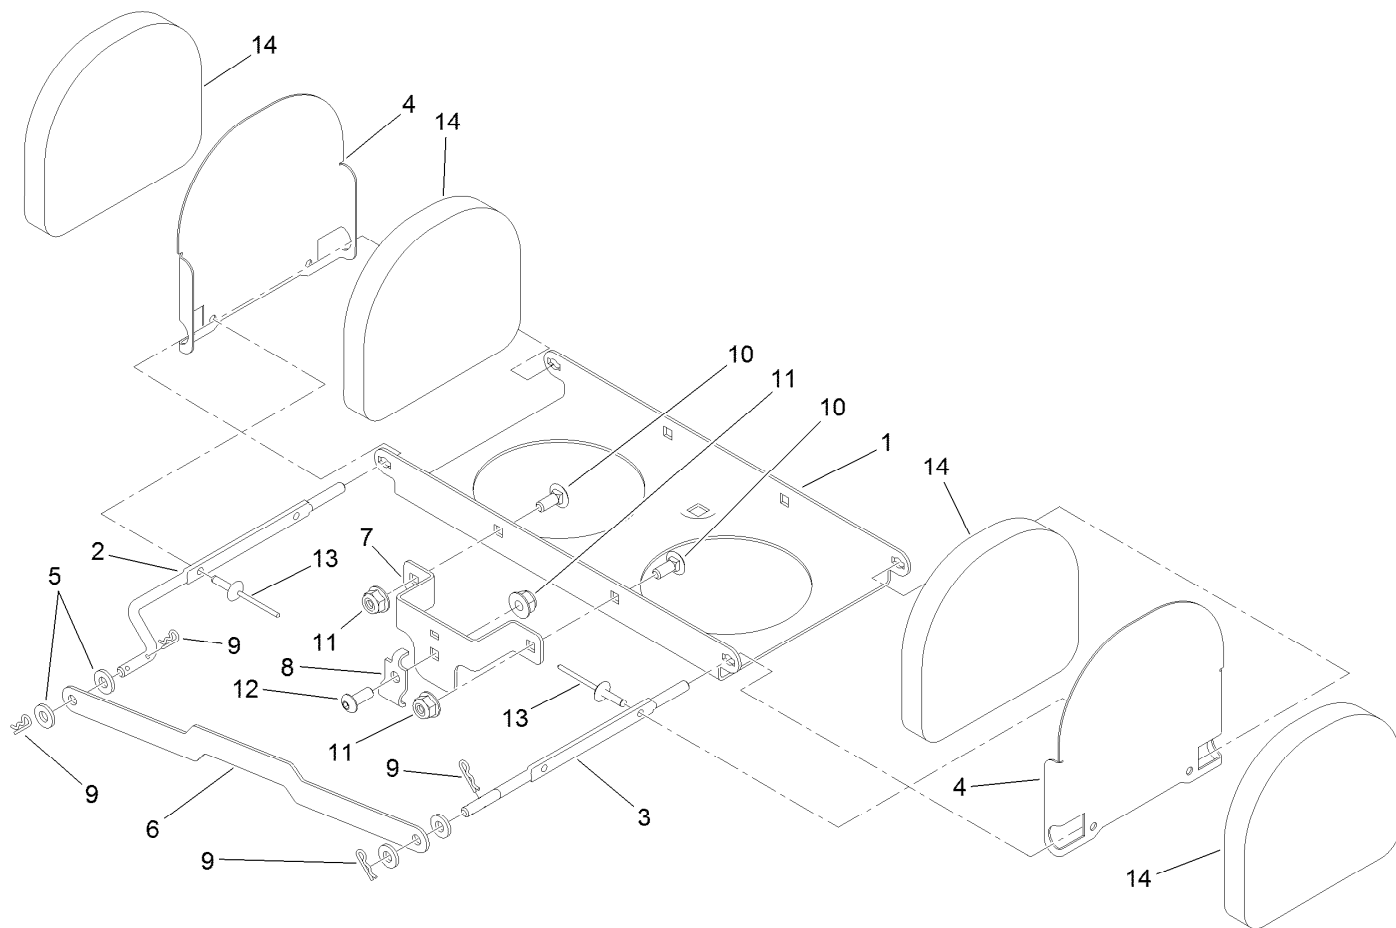

Air Diverter Assembly No. 121-8369 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-9697	1	Base-Mount	8	121-8256	1	Clamp-Conduit
2	121-8381	1	Shaft-Baffle, RH	9	108-2992	4	Pin-Hair
3	121-8382	1	Shaft-Baffle, LH	10	1-807513	2	Bolt-CARR
4	125-9698	2	Baffle-Air	11	120-4578	3	Nut-HF
5	3256-51	4	Washer-Flat	12	115-9830	1	Screw-HSBH
6	125-9696	1	Link-Baffle	13	3290-271	4	Rivet-Pop
7	121-8374	1	Mount-Cable	14	125-9699	4	Damper-Foam

Notes:

Notes:



Count on it.