Instrument Board Service Kit Groundsmaster® 580-D Traction Unit

Model No. 132-1320

Installation Instructions

A WARNING

CALIFORNIA

Proposition 65 Warning

This product contains a chemical or chemicals known to the State of California to cause cancer, birth defects, or reproductive harm.

Note: Determine the left and right sides of the machine from the normal operating position.

This kit fits Groundsmaster® models 30580, 30581, 30582, and 30583.

Installation

Loose Parts

Use the chart below to verify that all parts have been shipped.

Procedure	Description	Qty.	Use
1	No parts required	_	Prepare the machine to install the kit.
	Gauge plate	1	
	Switch	2	
	Decal	1	
	Screw (6-32 x 1/2 inch)	2	
	Locknut (6-32)	2	
2	Connector bracket	1	Install the kit.
_	Screw (10-24 x 3/4 inch)	6	
	Locknut (10-24)	7	
	Relay	1	
	Screw (#10 x 1/2 inch)	1	
	Bridge rectifier	4	
3	Gauge panel wire harness	1	Route the wire harness.
4	No parts required	_	Complete the installation.



Preparing to Install the Kit

No Parts Required


Procedure

Note: Retain all parts that you remove from the instrument board for later use.

- 1. Move the machine to a level surface, shut off the engine, engage the parking brake, and remove the key from the ignition switch.
- 2. Disconnect the battery wires from the battery posts.


Important: Disconnect the negative cable from the battery post before disconnecting the positive cable.

- 3. Remove the 4 bolts and 4 washers securing the instrument board to the machine (Figure 1).
- 4. Slightly lift up the board, disconnect the main wire harness from the board, and remove the instrument board (Figure 1).

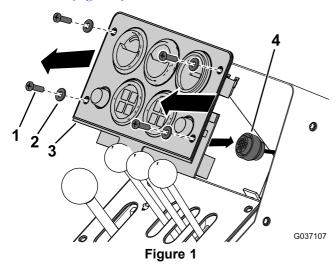

- 1. Bolt (4)
- 2. Washer (4)
- 3. Instrument board
- 4. Main wire harness
- 5. Unscrew the 2 red buttons from the front of the instrument board.
- 6. Remove the 4 connector nuts and 4 washers from the gauge brackets and remove the brackets (Figure 2).
- 7. Remove the 6 eyelet connector nuts and then remove the eyelet connectors from the temperature gauge and fuel gauge (Figure 2).
- 8. Remove the temperature gauge and fuel gauge (Figure 2).

- 9. Disconnect the 2 hour meter connectors from the hour meter and then remove the hour meter (Figure 2).
- 10. Remove the 8 light sockets from the warning light gauges (Figure 2).

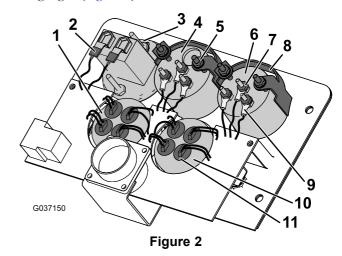

- 1. Warning light gauge
- 2. Hour meter connector (2)
- 3. Hour meter
- 4. Fuel gauge
- 5. Gauge bracket nut (4)
- 6. Temperature gauge
- 7. Eyelet connector nuts (6)
- 8. Gauge bracket (2)
- 9. Eyelet connectors (6)
- 10. Warning light gauge
- 11. Light sockets (8)

11. Loosen the gauge clamps and slide out the warning light gauges and clamps.




Installing the Kit

Parts needed for this procedure:

1	Gauge plate
2	Switch
1	Decal
2	Screw (6-32 x 1/2 inch)
2	Locknut (6-32)
1	Connector bracket
6	Screw (10-24 x 3/4 inch)
7	Locknut (10-24)
1	Relay
1	Screw (#10 x 1/2 inch)
4	Bridge rectifier


Procedure

1. Install the 2 switches to the panel and screw on the red buttons as shown in Figure 3.

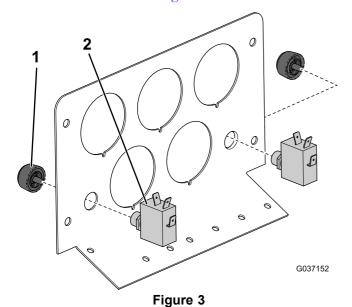

- 1. Red button
- 2. Switch
- 2. Install the decal onto the front of the plate (Figure 4).
- 3. Install the round connector on the harness onto the connector bracket with 2 bolts (6-32 x 1/2 inch) and 2 locknuts (6-32) as shown in Figure 4.
- 4. Install the connector bracket onto the gauge plate with 2 bolts (10-24 x 3/4 inch) and 2 locknuts (10-24) as shown in Figure 4.

- 5. Install the relay onto the gauge plate with a bolt (#10 x 1/2 inch) and a locknut (10-24) as shown in Figure 4.
- 6. Install the 4 bridge rectifiers onto the gauge plate with 4 bolts (10-24 x 3/4 inch) and 4 locknuts (10-24) as shown in Figure 4.

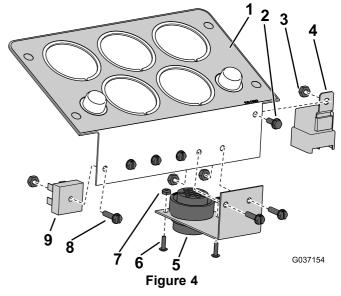

- 1. Decal
- 2. Bolt (#10 x 1/2 inch)
- 3. Locknut (10-24)
- 4. Relay
- 5. Round connector (on the wire harness)
- 6. Bolt (6-32 x 1/2 inch)
- 7. Locknut (6-32)
- 8. Bolt (10-24 x 3/4 inch)
- 9. Bridge rectifier
- 7. Install the temperature gauge and fuel gauge onto the plate with the 2 gauge brackets, 4 connector nuts, and 4 washers.
- 8. Install the hour meter onto the plate.
- 9. Install the 2 warning light gauges onto the plate with the gauge clamps and corresponding hardware.

Routing the Wire Harness

Parts needed for this procedure:


1 Gauge panel wire harness

Procedure

Install the wire harness; refer to

Note: Refer to Figure 5 and Schematics (page 6) for the following steps:

- 1. Attach the 4 switch connectors to the switches.
- 2. Attach the 2 hour meter connectors to the hour meter.
- 3. Attach the 6 eyelet connectors to the fuel gauge and temperature gauge.
- 4. Attach the 8 light sockets to the warning light gauges.
- 5. Plug the relay connector into the relay.
- 6. Plug the 16 bridge rectifier connectors into the 4 bridge rectifiers.
- 7. Plug the main wire harness into the main harness connector.

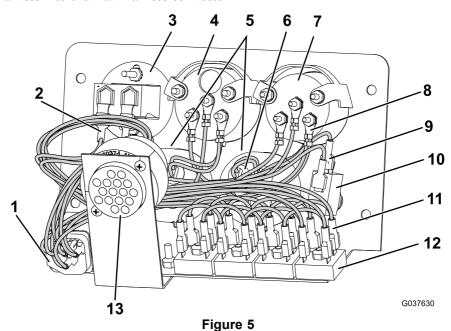

Wire Harness Final View

- 1. Relay connector
- 2. Hour meter connector (2)
- 3. Hour meter
- 4. Fuel gauge

- 6. Warning light gage (2)
- 6. Light sockets (8)
- 7. Temperature gauge
- 8. Eyelet connector (6)
- 9. Switch connector (4)
- 10. Switch (2)
- 11. Rectifier connector (16)
- 12. Bridge rectifier (4)
- 13. Main harness connector



Completing the Installation


No Parts Required

Procedure

- 1. Install the plate onto the machine with the 4 screws previously removed.
- 2. Connect the battery cables.

Note: Connect the positive cable before connecting the negative cable.

Schematics

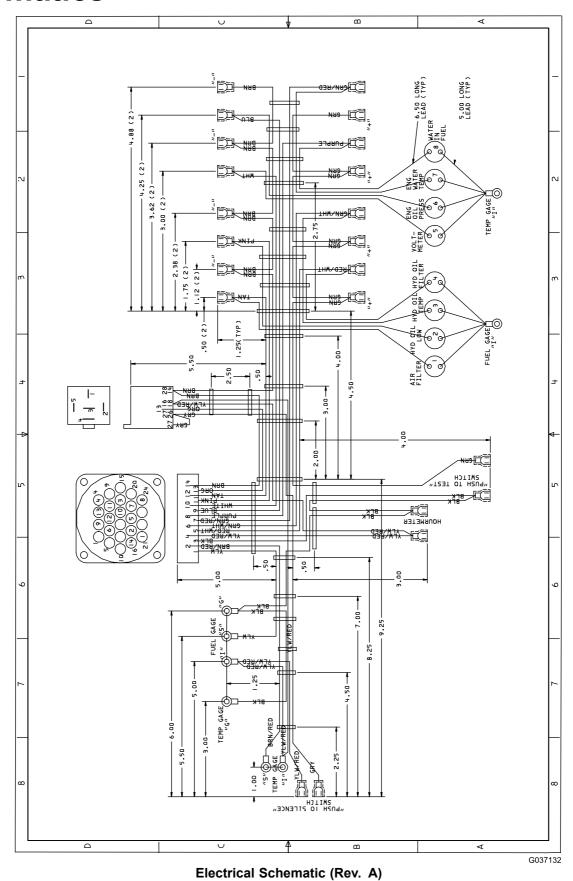

Notes:

