



Form No. 3407-172 Rev A

Count on it.

Parts Catalog

60in E-Z Vac™

Blower and Drive Kit 2016 and After Grandstand® Mower

Model No. 78576—Serial No. 400010798 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HP: high pressure

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: low pressure

LPG: Liquefied Petroleum Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping


TTH: torx truss head

Contents

Blower and Drive Assembly 4

Idler Assembly No. 136-0595..... 5


Blower Assembly No. 136-0570 6

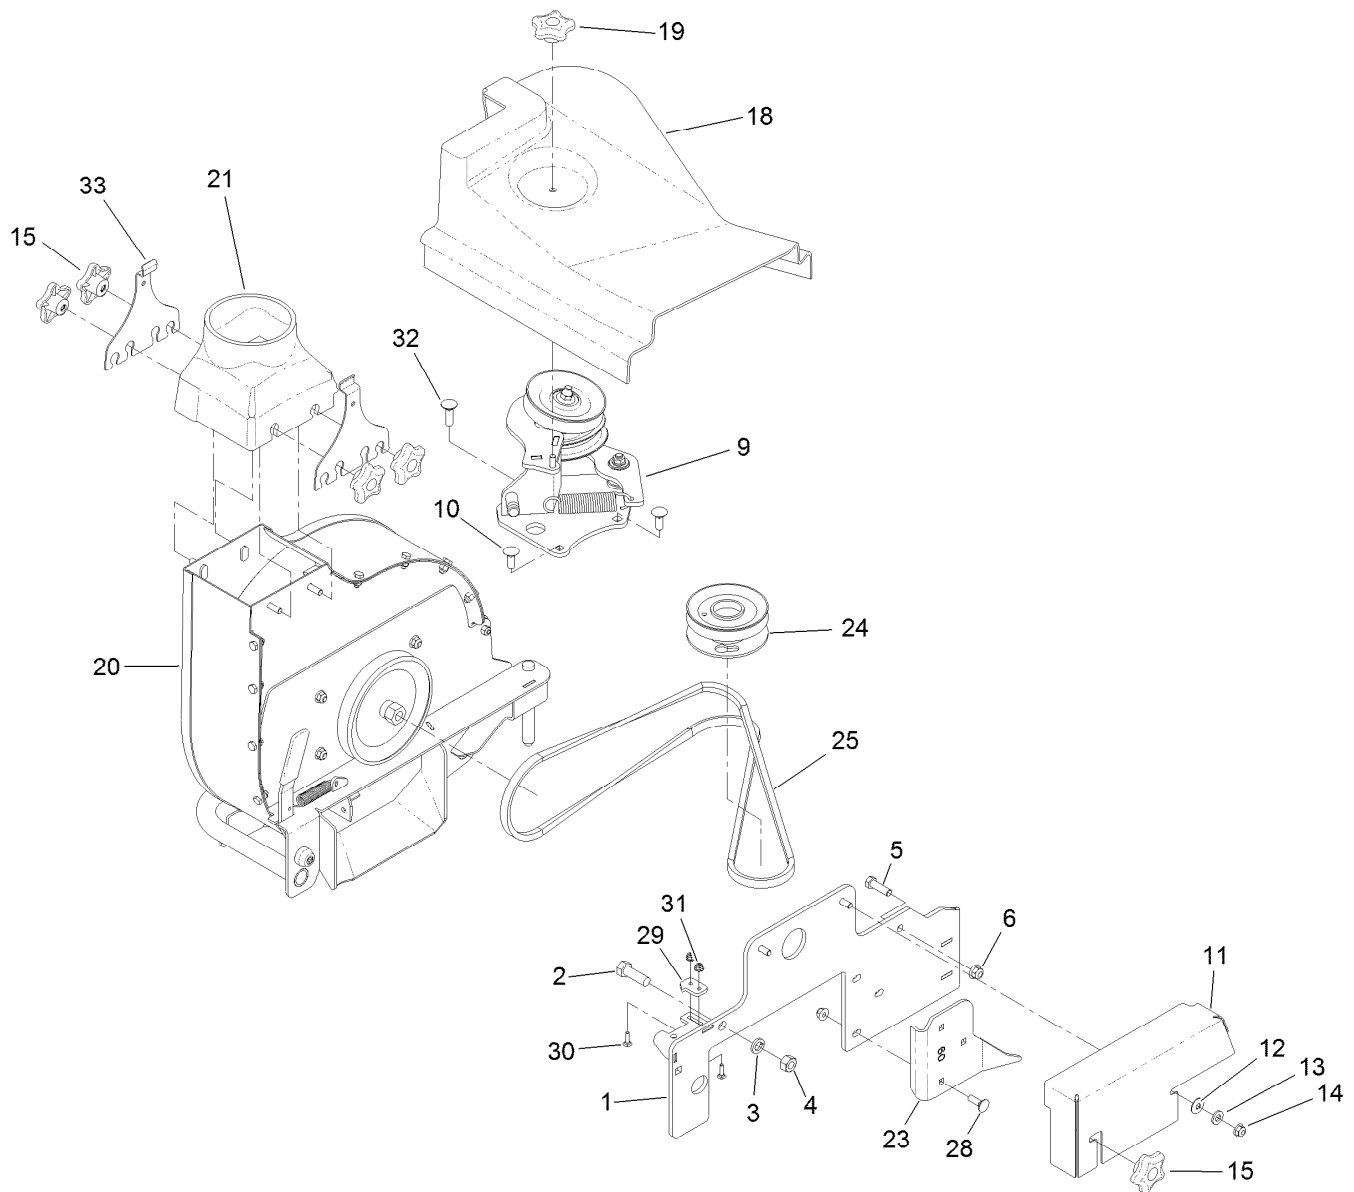

Blower and Drive Assembly


Ref.	Part Number	Qty.	Description
1	136-0569-03	1	Mount-Deck, Blower
2	325-6	1	Screw-HH
3	3253-7	1	Washer-Lock
4	3217-9	1	Nut-HH
5	323-7	1	Screw-HH
6	104-8301	1	Nut-Flange, NI
9	136-0595	1	Idler ASM
10	3231-2	2	Bolt-CARR
11	133-8735-03	1	Guard-Belt, Blower
12	3290-456	1	Washer-Belleville
13	62-1230	1	Washer-Rubber
14	104-8300	4	Nut-Flange, NI
15	117-5976	5	Knob-Handle

Ref.	Part Number	Qty.	Description
18	136-0503	1	Cover-Belt
19	106-4161	1	Knob-Handle
20	136-0570	1	Blower ASM
21	133-8682	1	Transition-Blower
23	136-4082-03	1	Baffle
24	112-8669-03	1	Pulley-Blower
25	136-4108	1	Belt-V
28	3230-2	3	Bolt-CARR
29	136-4118	1	Plate-Latch
30	3229-20	2	Screw-CARR
31	120-4578	2	Nut-HF
32	3231-25	1	Bolt-CARR
33	136-5688-03	2	Clamp-Hose

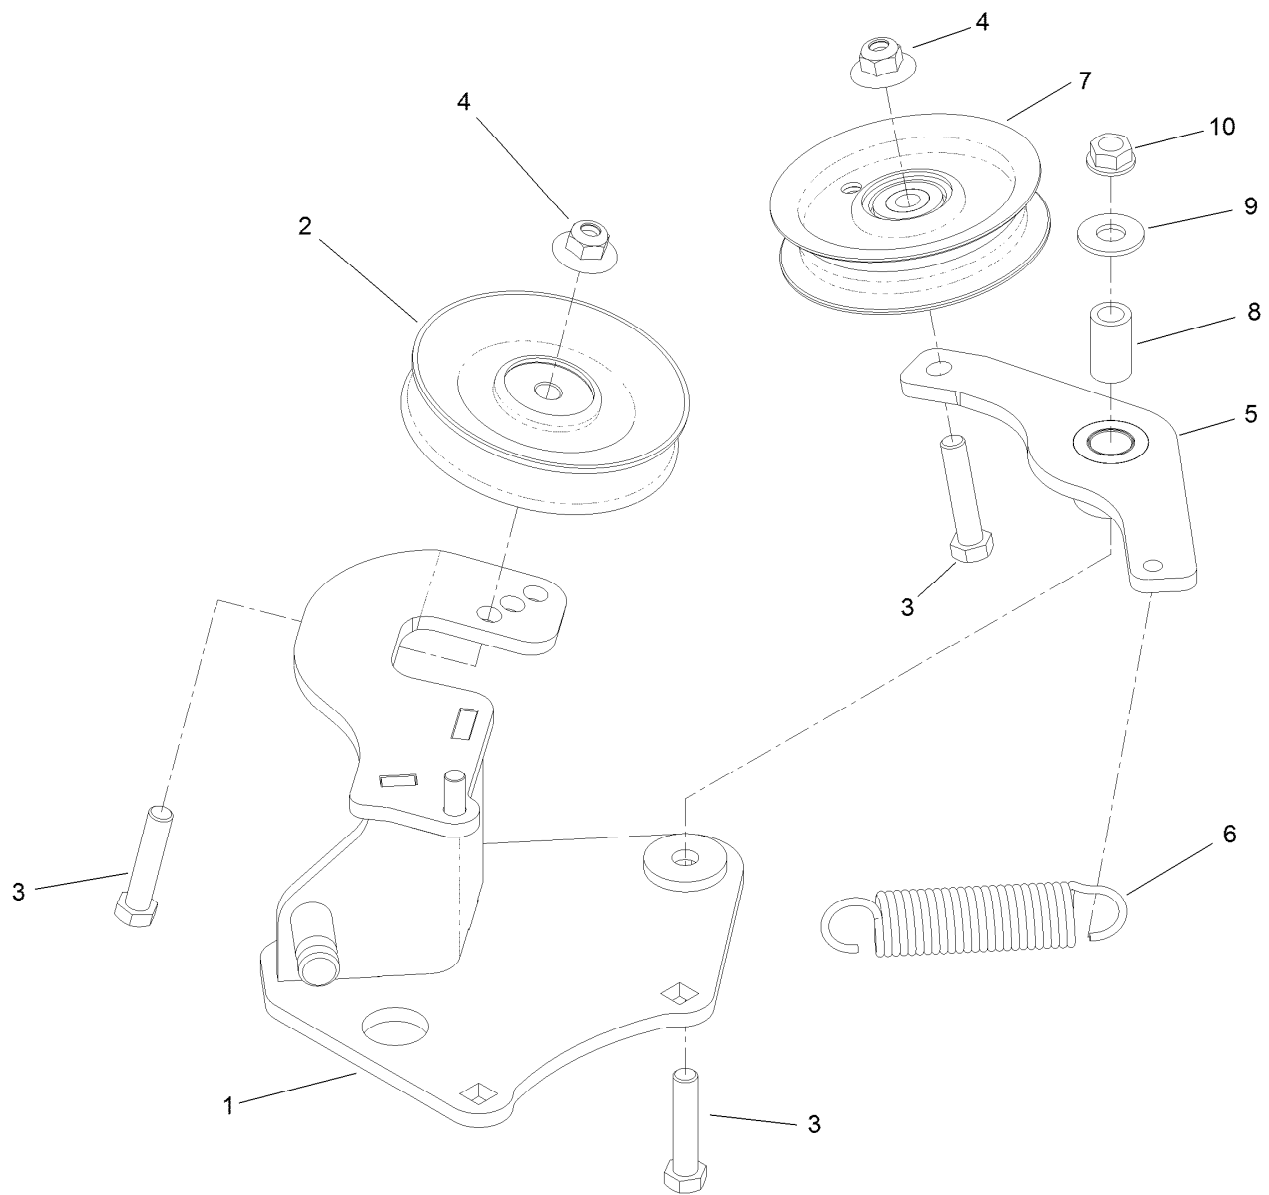

Idler Assembly No. 136-0595

Ref.	Part Number	Qty.	Description
1	136-0580-03	1	Bracket-Idler
2	92-7099	1	Pulley-Idler
3	323-9	3	Screw-HH
4	109-6658	2	Nut-Flange, NI
5	136-0554	1	Idler ASM
6	115-4712	1	Spring-Extension
7	92-7084	1	Pulley-Idler, Flat
8	103-0130	1	Bushing-Pivot, Idler
9	3256-4	1	Washer-Flat
10	3290-357	1	Nut-HHF, Whiz

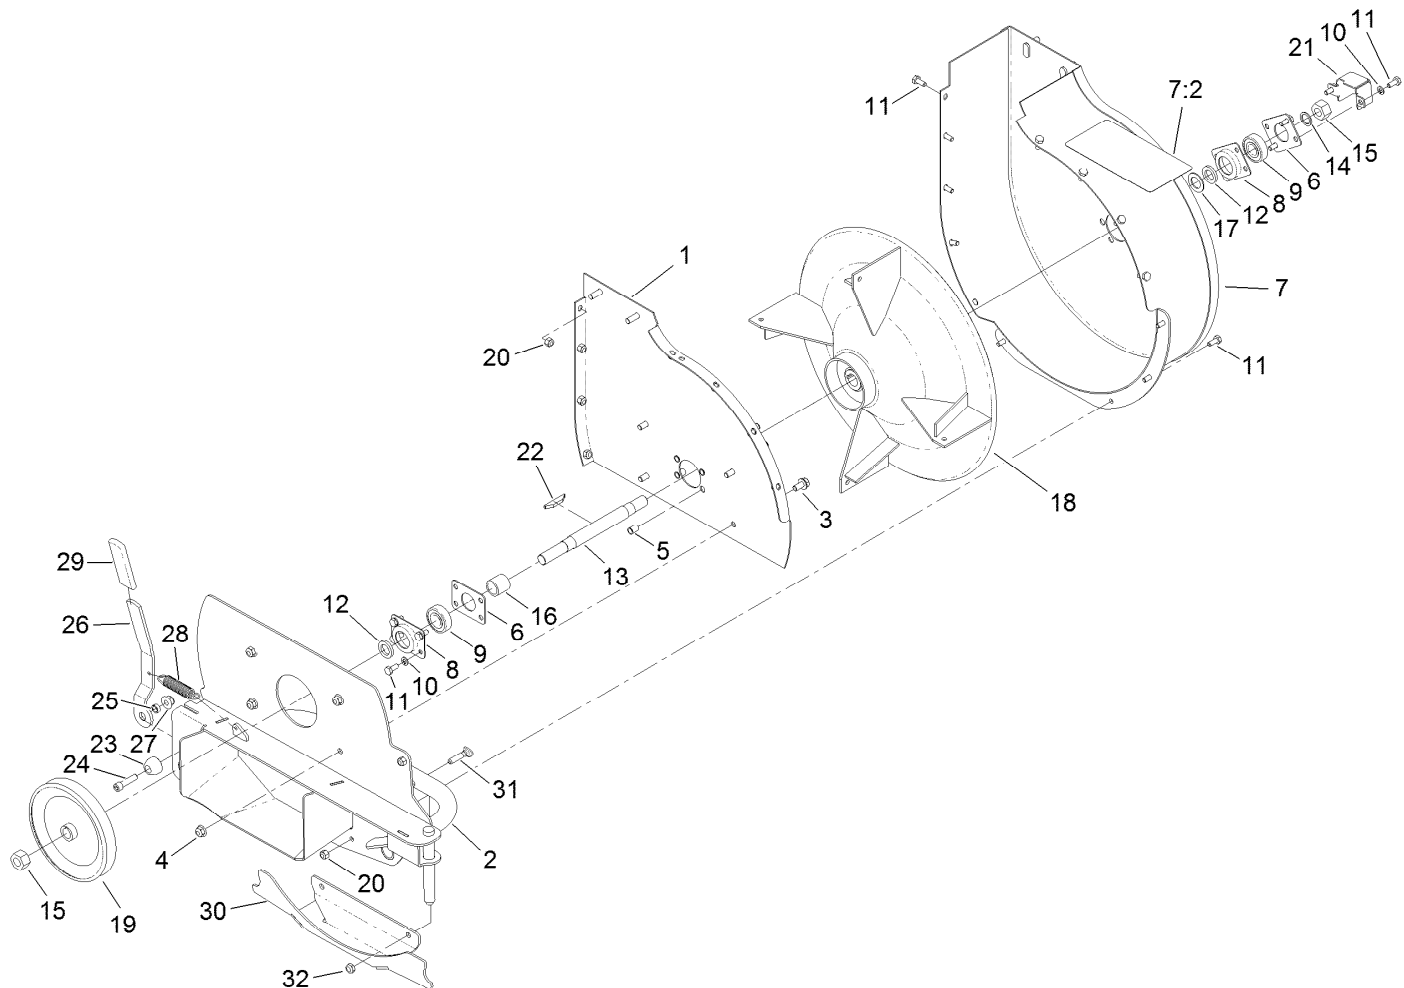

Blower Assembly No. 136-0570

Ref.	Part Number	Qty.	Description
1	133-8665-03	1	Mounting Plate ASM
2	136-0573-03	1	Blower Pivot ASM
3	3234-14	4	Screw-HHF
4	104-8300	4	Nut-Flange, NI
5	32117-2	8	Insert-Threaded
6	63-9700-03	2	Plate-Cover
7	136-0578	1	Blower Housing Outer ASM
7:2	136-4087	1	Decal-Warning, Blower
8	37-6730	2	Cup-Bearing
9	38-7820	2	Bearing-Ball
10	3253-3	8	Washer-Lock
11	321-3	20	Screw-HH
12	63-9710	2	Spacer-Bearing
13	105-5893	1	Shaft-Blower
14	9202154	1	Washer-Flat
15	3217-11	2	Nut-Hex
16	7989	1	Spacer

Ref.	Part Number	Qty.	Description
17	1535	1	Washer-Thrust
18	56-4780-03	1	Impeller ASM
19	92-0874	1	Pulley-Transaxle
20	3296-42	12	Nut-Lock, NI
21	106-3076-03	1	Cover-Shaft
22	3257-40	1	Key
23	136-4135	1	Pin-Guide
24	3274-18	1	Screw-HSH
25	99-2018	1	Spacer-Arm, Idler
26	136-4116	1	Handle
27	104-8301	1	Nut-Flange, NI
28	104-6415	1	Spring-Return, Pedal
29	47-1970	1	Grip
30	136-4097-03	1	Plate-Skid
31	92-4095	2	Screw-Handle
32	3296-47	2	Nut-Lock, NI

Notes:



Count on it.