



Form No. 3407-200 Rev A

Count on it.

Parts Catalog

E-Z Vac™ Twin Bagger 2016 and After Grandstand® Mower

Model No. 78570—Serial No. 400010798 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HP: high pressure

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: low pressure

LPG: Liquefied Petroleum Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard


TAP: self tapping

TTH: torx truss head

Contents

Bagger Assembly 4


Bag and Frame Assembly..... 6

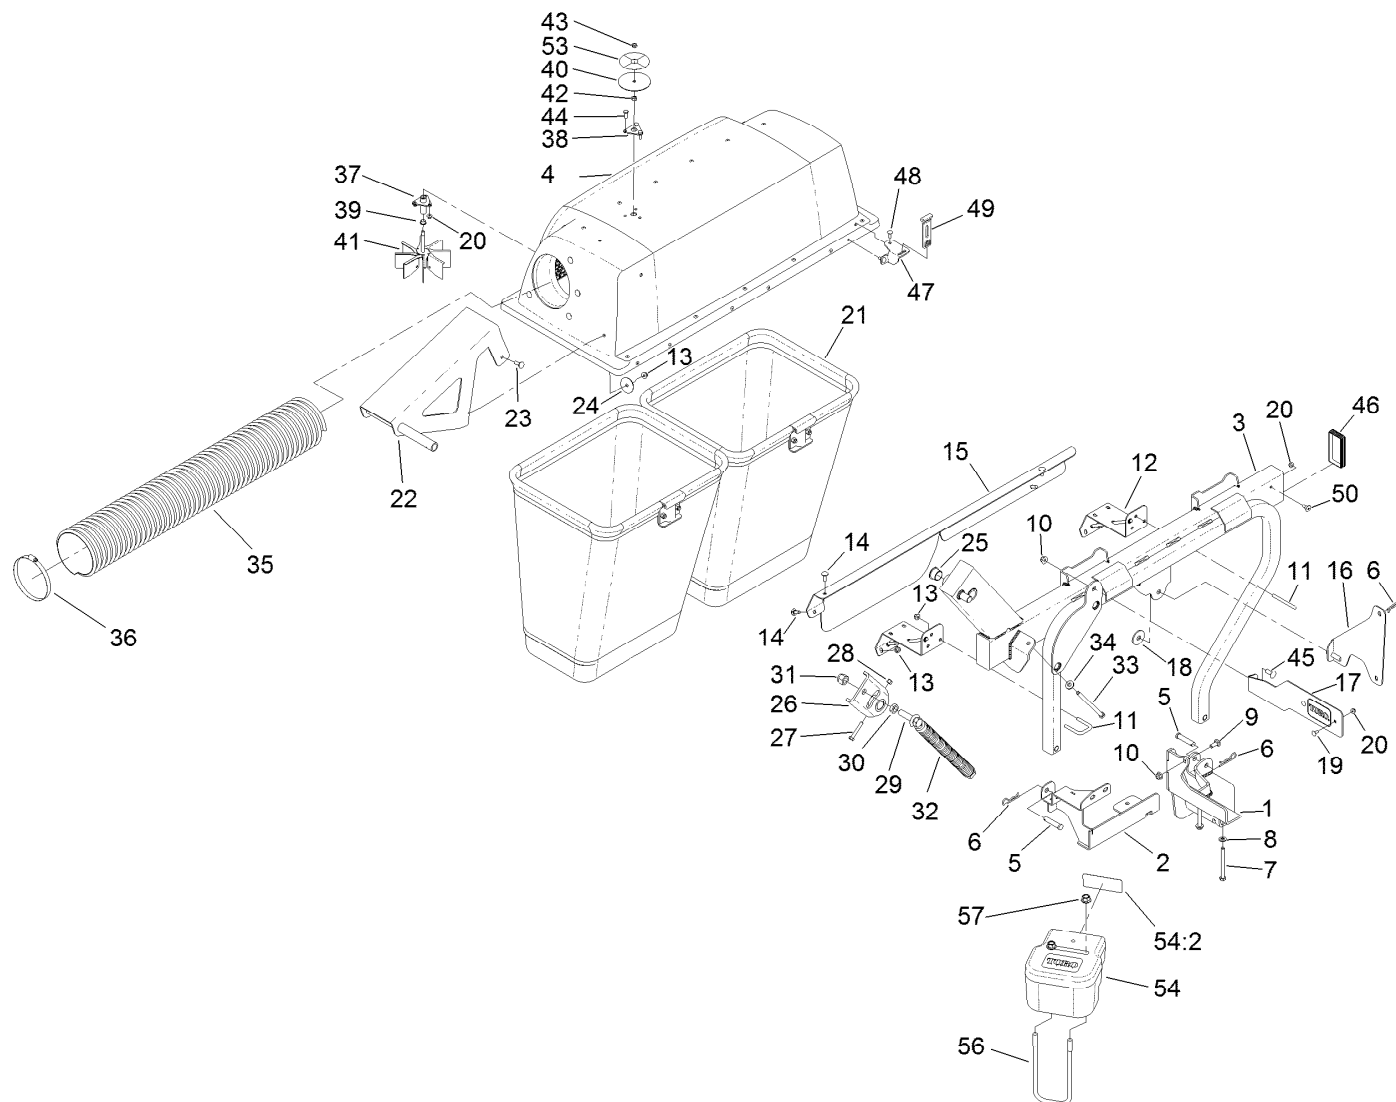

Bagger Assembly

Ref.	Part Number	Qty.	Description
1	133-8655-01	1	Mount-Bagger
2	133-8670-01	1	Bracket-Extension, Tube
3	136-4055-03	1	Frame-Bagger
4	136-0525	1	Hood ASM
5	92-2739	2	Pin-Clevis
6	1-806005	3	Pin-Cotter
7	323-16	2	Screw-HH
8	3256-24	2	Washer-Flat
9	3231-2	1	Bolt-CARR
10	104-8301	2	Nut-Flange, NI
11	301950	2	U-Bolt-Square
12	133-8706-03	2	Cover, Wheel
13	104-8300	11	Nut-Flange, NI
14	3230-10	4	Screw-CARR
15	133-8707-03	1	Cover-Wheel
16	133-8668-03	1	Mount-Support, Bagger
17	136-4072	1	Bracket-Mount, Bagger W/Decal
18	86-1990	1	Washer-Thrust
19	3229-11	2	Screw-CARR
20	104-7201	8	Nut-Flange, NI


Ref.	Part Number	Qty.	Description
21	133-8700	2	Bag And Frame ASM
22	136-4060-03	1	Pivot-Hood
23	3230-2	3	Bolt-CARR
24	1-653036	3	Washer
25	127-0369	2	Bushing
26	136-4070-03	1	Bellcrank ASM
27	112-3305	1	Screw-HH
28	3296-29	1	Nut-Lock, NI
29	327-7	1	Screw-HH
30	3218-6	1	Nut-Jam
31	3296-53	1	Nut-Lock, NI
32	116-0000	1	Spring-Extension
33	323-58	1	Bolt-TAP, HH
34	98-5975	1	Washer-Belleville
35	133-8734	1	Hose-Flexible
36	136-4110	1	Clamp-Hose, 5.5 Inch
37	136-4100-03	1	Mount-Fill Indicator
38	136-4099-03	1	Plate-Fill Indicator
39	1-603735	2	Bushing-Flanged
40	136-4104-03	1	Plate-Fill Indicator
41	136-4140-03	1	Bag Fill Fan ASM

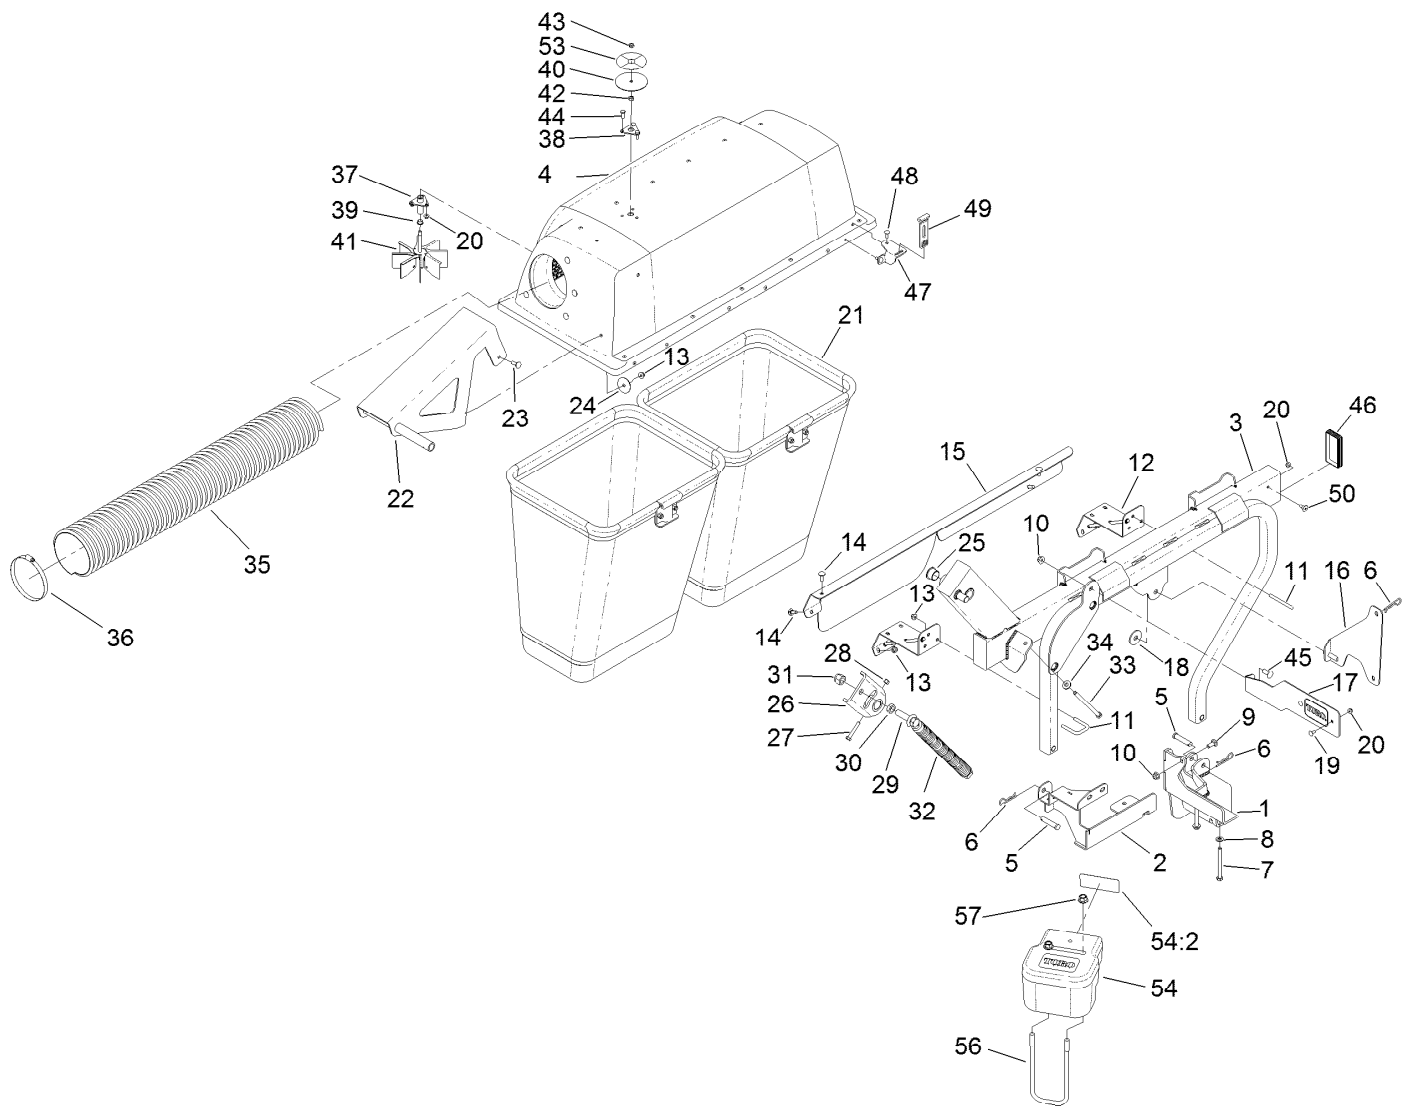

Bagger Assembly (continued)

Ref.	Part Number	Qty.	Description
42	32153-3	1	Nut-Hex, Side Deform
43	3218-2	1	Nut-Jam
44	321-4	3	Screw-HH
45	3231-22	1	Screw-CARR
46	136-4112	3	Cap-End
47	136-4115-03	1	Bracket-Strap
48	3229-1	2	Bolt-CARR
49	131-8402	1	Strap-Hold Down

Ref.	Part Number	Qty.	Description
50	125-1122	1	Screw
53	136-5663	1	Decal-Rotation Indicator
54	106-0872	1	Weight ASM
54:2	136-4053	1	Decal-Warning, Counterweight
56	136-4090	1	U-Bolt
57	99-5107	2	Nut-Lock

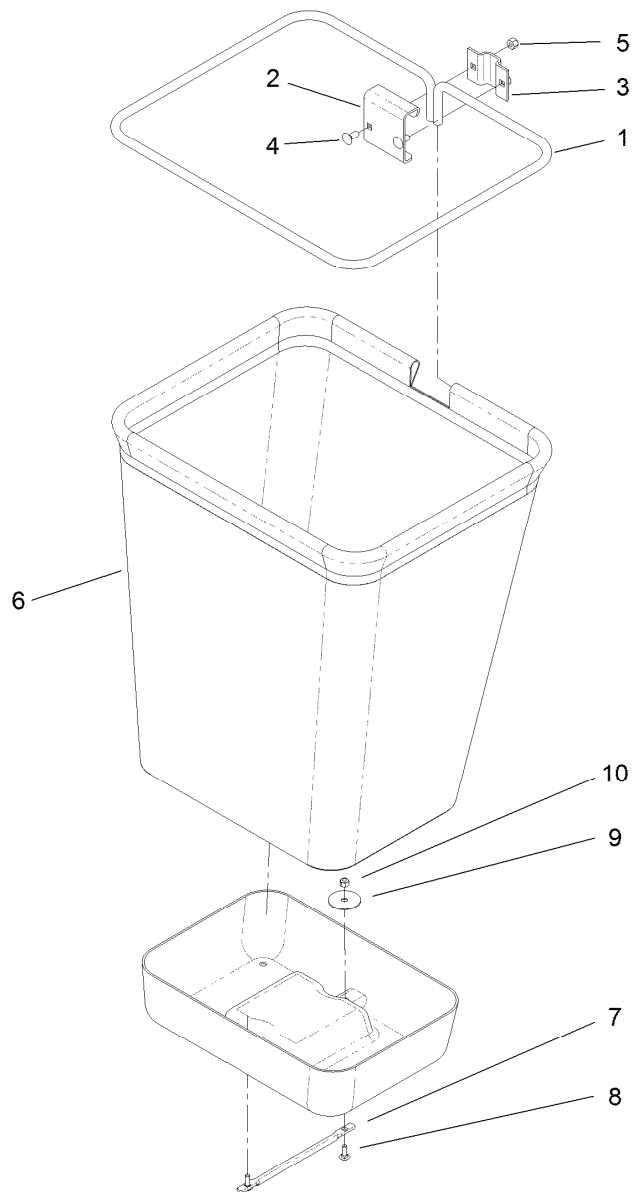

Bag and Frame Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	1-653529-03	1	Frame-Bag
2	114973-03	1	Hanger-Bag
3	114974-03	1	Clamp
4	3230-1	2	Bolt-CARR
5	3296-29	2	Nut-Lock, NI
6	133-8701	1	Bag ASM
7	1-653566	1	Handle-Bag
8	3229-1	2	Bolt-CARR
9	1-653036	2	Washer
10	3296-42	2	Nut-Lock, NI

Notes:



Count on it.