



# TITAN® HD Series Riding Mowers

Model No. All models

Form No. 3407-539 Rev A

## Setup Instructions

# Setup

## Loose Parts

Use the chart below to verify that all parts have been shipped.

Procedure	Description	Qty.	Use
<b>1</b>	No parts required	–	Remove the machine from the crate.
<b>2</b>	No parts required	–	Add fuel to the machine.
<b>3</b>	No parts required	–	Check the engine-oil level.
<b>4</b>	No parts required	–	Service the hydraulic oil.
<b>5</b>	No parts required	–	Check the tire pressure.
<b>6</b>	No parts required	–	Servicing the battery.
<b>7</b>	No parts required	–	Raise the rollover protection system (ROPS).
<b>8</b>	No parts required	–	Check the grass deflector.
<b>9</b>	No. 2 lithium or molybdenum-based grease (purchase separately)	1 tube	Check the machine for grease.
<b>10</b>	Locknut (3/8 inch) Carriage bolt (3/8 x 2-1/4 inches)	3 3	Install the right bumper (rear discharge models only).
<b>11</b>	No parts required	–	Check the mower adjustment.
<b>12</b>	No parts required	–	Check the machine before delivery to the customer (all machines).
<b>13</b>	Operator's Manual Engine owner's manual (non-Toro engines) Operator-training material Key Registration card	1 1 1 2 1	Deliver the machine to the customer (all machines).

**Note:** Determine the left and right sides of the machine from the normal operating position.



# 1

## Removing the Machine from the Crate

No Parts Required

### Procedure

If removing the machine from a metal crate, refer to the *Dealer/Distributor Portal* for further information.

# 2

## Adding Fuel to the Machine

No Parts Required

### Procedure

Add fuel to the machine before starting it. Refer to your *Operator's Manual* for the correct fuel and procedure.

# 3

## Checking the Engine-Oil Level

No Parts Required

### Procedure

Before you start the engine and use the machine, check the oil level in the engine crankcase; refer to Servicing the Engine-Oil Level in the *Operator's Manual*.

# 4

## Servicing the Hydraulic Oil

No Parts Required

### Procedure

This machine is shipped filled with hydraulic fluid in the reservoirs.

Check the expansion tank; if necessary, add Toro® HYPR-OIL™ 500 hydraulic fluid, as recommended in the *Operator's Manual*, to the FULL COLD line (Figure 1).

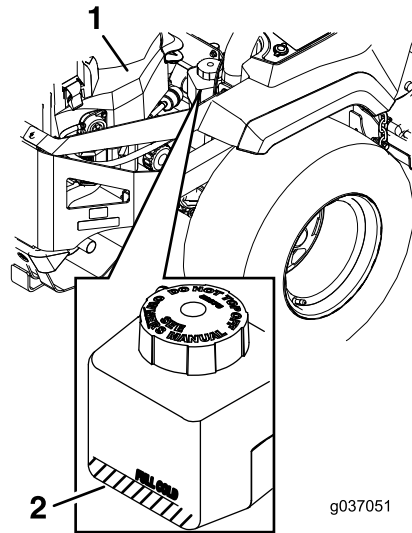


Figure 1

1. Engine

2. Expansion tank

# 5

## Checking the Tire Pressure

No Parts Required

### Procedure

Pressure: 13 psi (90 kPa)

**Note:** Check the tire pressure before starting the machine. Refer to your *Operator's Manual* for the correct tire type and procedure.

# 6

## Servicing the Battery

No Parts Required

### Procedure

#### ⚠ WARNING

Charging the battery produces gasses that can explode and cause serious injury.

- Keep cigarettes, sparks, and flames away from the battery.
- Make sure that the ignition switch is off.
- Ventilate when charging or using the battery in an enclosed space.

**Important:** Do not run the machine with the battery disconnected; electrical damage may occur to the engine.

1. Charge the battery. Refer to the *Operator's Manual* for instructions.
2. Connect the negative battery cable.

**Note:** If the positive cable is also disconnected, connect the positive (red) cable to the positive battery terminal first, then the negative (black) cable to the negative battery terminal. Slip insulator boot over the positive terminal.

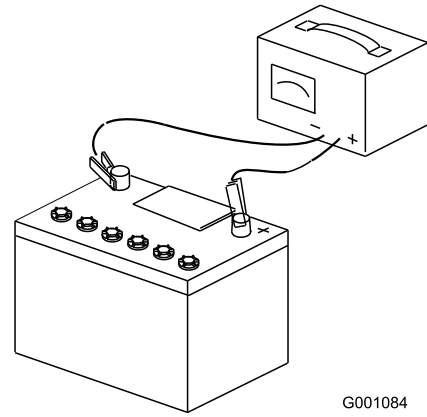


Figure 2

G001084

# 7

## Raising the Rollover Protection System (ROPS)

No Parts Required

### Procedure

1. Pull both knobs out and rotate them 90 degrees so that they are not engaged (Figure 3).
2. Raise the roll bar to the operating position and rotate the knobs until they move partially into the grooves (Figure 3).

# 8

## Checking the Grass Deflector

No Parts Required

### Procedure

If there are plastic ties holding the grass deflector up, remove them and lower the deflector into place.

### ⚠ WARNING

An uncovered discharge opening could allow the machine to throw objects in the operator's or bystander's direction and result in serious injury or death. Also, contact with the blade could occur.

Never operate the machine without a cover plate, a mulch plate, grass deflector, or bagger installed.

1. Make sure that one end of the spring is installed behind the deck edge before installing the bolt as shown in [Figure 4](#).
2. Place the other end of the spring around grass deflector ([Figure 4](#)).

**Important:** The grass deflector must be free to rotate with downward tension. Lift the deflector up to the full open position and ensure that it rotates freely, without binding into the full down position.

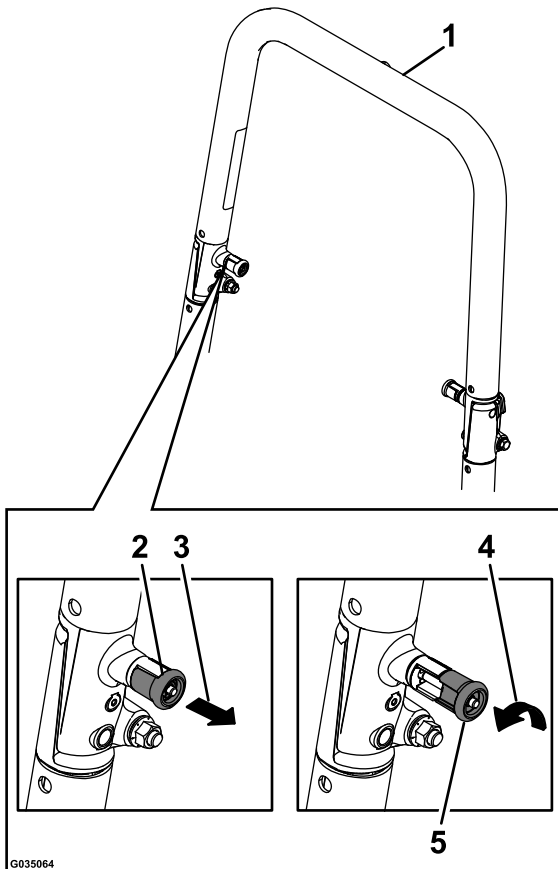


Figure 3

1. Roll bar in the upright position
  2. ROPS knob in the latched position
  3. Pull the ROPS knob out.
  4. Rotate the ROPS knob 90 degrees.
  5. ROPS knob in the unlatched position
- 
3. Raise the roll bar to the full upright position while pushing on the upper roll bar so that the pins snap into position when the holes align with the pins.
  4. Push on the roll bar and ensure that both pins are engaged ([Figure 3](#)).

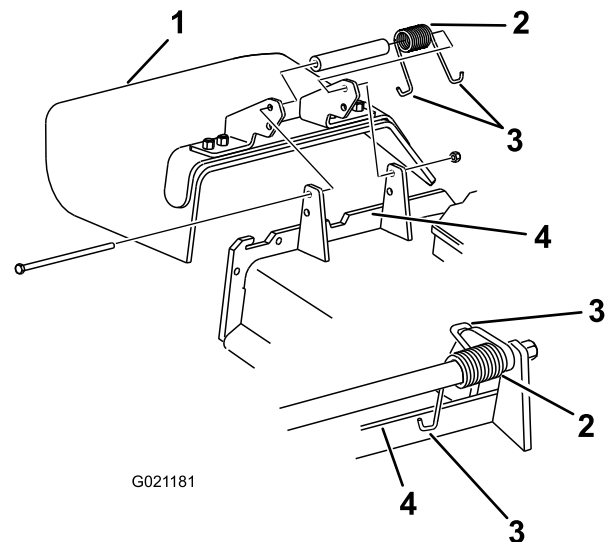


Figure 4

1. Grass deflector
2. Spring
3. End of spring
4. Deck edge

# 9

## Checking the Machine for Grease

### Parts needed for this procedure:

1 tube	No. 2 lithium or molybdenum-based grease (purchase separately)
--------	--

### Procedure

Before you use the machine, check the machine for grease; refer to Lubrication in the *Operator's Manual*.

# 10

## Installing the Right Bumper


### Parts needed for this procedure:

3	Locknut (3/8 inch)
3	Carriage bolt (3/8 x 2-1/4 inches)

### Procedure

Mount the side bumpers in the top holes when operating in height of cut higher than 64 mm (2-1/2 inches) and in the center holes when operating in height of cut lower than 64 mm (2-1/2 inches).

1. Raise the mower deck to the 12.7 cm (5 inch) height position (also the transport position).
2. The right bumper is zip tied to the machine for shipping. Remove and discard the plastic zip ties.

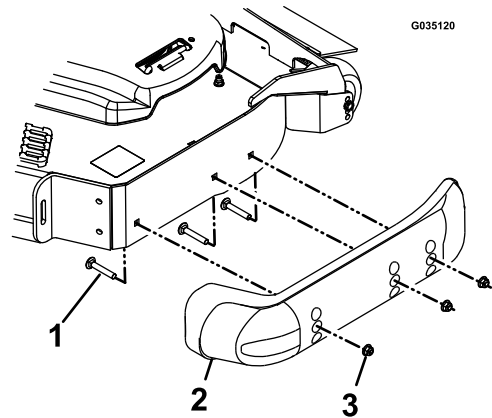

1. Carriage bolt
2. Bumper (center-hole mounting shown)
3. Locknut

3. Move each bumper to the desired position and secure it with 3 carriage bolts (3/8 x 2-1/4 inches) and 3 locknuts (3/8 inch).
4. Torque the bolts to 14 to 16 N·m (10 to 12 ft-lb).

# 11

## Checking the Mower Adjustment

**No Parts Required**

### **Procedure**

Adjust the side-to-side level and the front-to-rear blade slope. Use the relevant procedures in the *Operator's Manual* to verify that the deck is level, and make any adjustments as necessary.

# 12

## Checking the Machine Before Delivery to the Customer (All Machines)

No Parts Required

### Procedure

Before delivering the machine to the customer, ensure that you have performed the procedures listed in the following table and initial each when finished. Refer to the *Operator's Manual* for instructions on performing these procedures.

Initial	Check Procedure
	Check the tire pressure.
	Check the level of the mower deck.
	Check the engine-oil level.
	Check the hydraulic-fluid level.
	Check that the ROPS is secure.
	Check the adjustment of the parking brake.
	Ensure that the machine tracks correctly; refer to the <i>Operator's Manual</i> for the adjustment procedure.
	Check the safety interlock system; refer to the <i>Operator's Manual</i> .
	Ensure that the PTO works.
	Check all fasteners that you installed to ensure that they are tight.

When you finish setting up the machine, sign and date in the space provided below:

Signature: \_\_\_\_\_ Date: \_\_\_\_\_

# 13

## Delivering the Machine to the Customer (All Machines)

Parts needed for this procedure:

1	<i>Operator's Manual</i>
1	<i>Engine owner's manual (non-Toro engines)</i>
1	Operator-training material
2	Key
1	Registration card

### Procedure

At delivery, fill in the model and serial number, complete the items listed in the following table, and initial each when finished.

Model No. \_\_\_\_\_ Serial No. \_\_\_\_\_

Dealer Initial	Customer Initial	Check Procedure
		<p>Show the customer where the following features are located and how they function:</p> <ul style="list-style-type: none"> <li>• Fuel tank</li> <li>• Oil-fill cap/Oil dipstick</li> <li>• Spark plug(s)</li> <li>• Engine-oil filter</li> <li>• Engine-oil drain</li> <li>• Fuel gauge, valve, and hose</li> <li>• Air filter</li> <li>• Hydraulic-fluid reservoir</li> <li>• Hydraulic filter</li> <li>• Battery</li> <li>• Ignition switch</li> <li>• Throttle lever</li> <li>• Choke (if applicable)</li> <li>• Power takeoff switch (PTO)</li> <li>• Motion-control levers</li> <li>• Parking brake</li> <li>• Height of cut</li> <li>• Lift-assist lever (if applicable)</li> <li>• Adjustable seat</li> <li>• Hydraulic-bypass valves</li> <li>• Rollover Protection System (ROPS)</li> </ul>
		Refer to the <i>Operator's Manual</i> to point out safety procedures, operation, and maintenance procedures.
		Review the warranty statement as shown in the <i>Operator's Manual</i> .
		Describe the post-sale service procedures for your store.
		Assist the customer in filling out and mailing the registration card or register online at <a href="http://www.Toro.com">www.Toro.com</a> .
		Make sure that the customer receives the <i>Operator's Manual</i> , <i>engine owner's manual</i> (non-Toro engines), <i>Set Up Instructions</i> , and operator training material.
		Make sure the customer knows that the <i>Parts Catalog</i> is available at <a href="http://www.Toro.com">www.Toro.com</a> .
		Assist the customer in loading the machine.

**Note:** When you, the dealer representative, have finished delivering the machine to the customer, sign and date in the space provide below and keep a copy of this page for dealer records. Also, the dealer must remind the customer to use a full-width trailer ramp to load the machine.

**Signature:** \_\_\_\_\_ **Date:** \_\_\_\_\_

**Signature:** \_\_\_\_\_ **Date:** \_\_\_\_\_