



Count on it.

Form No. 3408-103 Rev A

Parts Catalog

Tow Chassis and Fender Kit ProPass 200 Top Dresser

Model No. 44724



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.


For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Tow Chassis Assembly 4

Walking Beam Assembly No. 119-6930 5


Fender Assembly 6

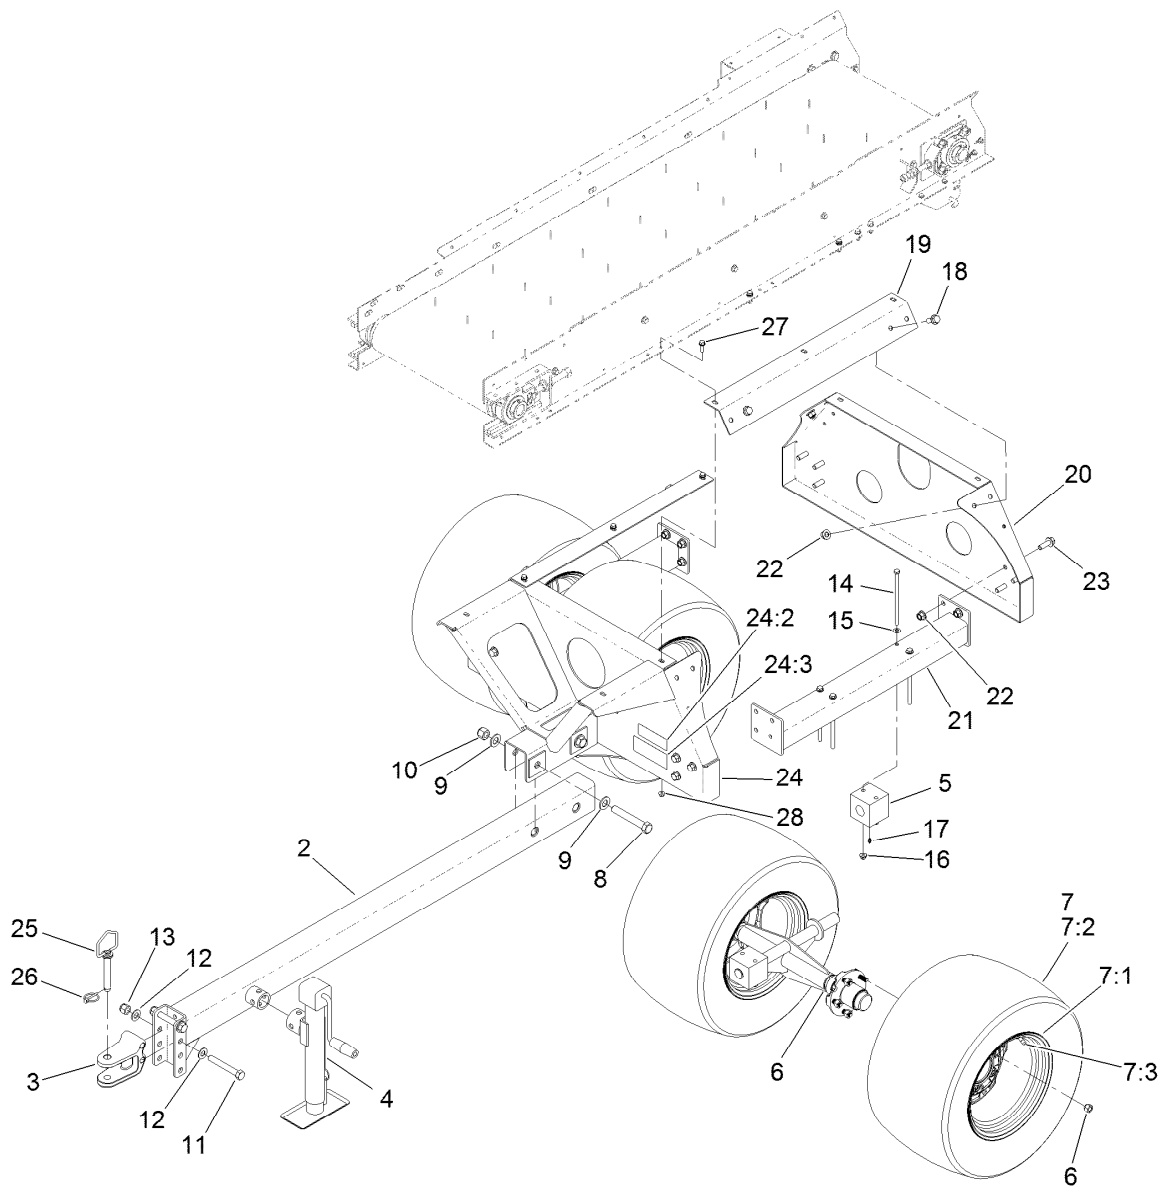

Tow Chassis Assembly


Ref.	Part Number	Qty.	Description
2	T36052110-01	1	Hitch
3	47-3550-01	1	Clevis-Hitch
4	T0000-3423	1	Jack-Sidewind
5	T36032010	4	Bearing-Beam, Walking
6	119-6930	2	Walking Beam ASM
7	T68030000	4	Tire And Wheel ASM
7:1	T54011017	1	Wheel
7:2	T68021060	1	Tire
7:3	232-27	1	Stem-Valve
8	328-9	2	Screw-HH
9	3256-28	4	Washer-Flat
10	3296-51	2	Nut-Lock, NI
11	327-23	2	Screw-HH
12	3256-27	4	Washer-Flat
13	3296-53	2	Nut-Lock, NI
14	323-36	8	Screw-HH
15	3256-24	8	Washer-Flat

Ref.	Part Number	Qty.	Description
16	104-8301	8	Nut-Flange, NI
17	302-5	4	Fitting-Grease
18	3234-38	4	Screw-HHF
19	T36052305-01	2	Member-Cross, Top
20	T36052300-01	1	Brace-Frame
21	T36052340-01	2	Cross Member
22	99-5107	16	Nut-Lock
23	100-6116	12	Screw-HHF
24	119-6931	1	Front Brace ASM
24:2	119-6828	1	Decal-Weight, Tow-Behind
24:3	119-6812	1	Decal-Warning, Tipping Hazard
25	T50991348	1	Pin-Hitch
26	92-1298	1	Pin-Lynch
27	3234-29	6	Screw-HHF
28	104-8300	6	Nut-Flange, NI

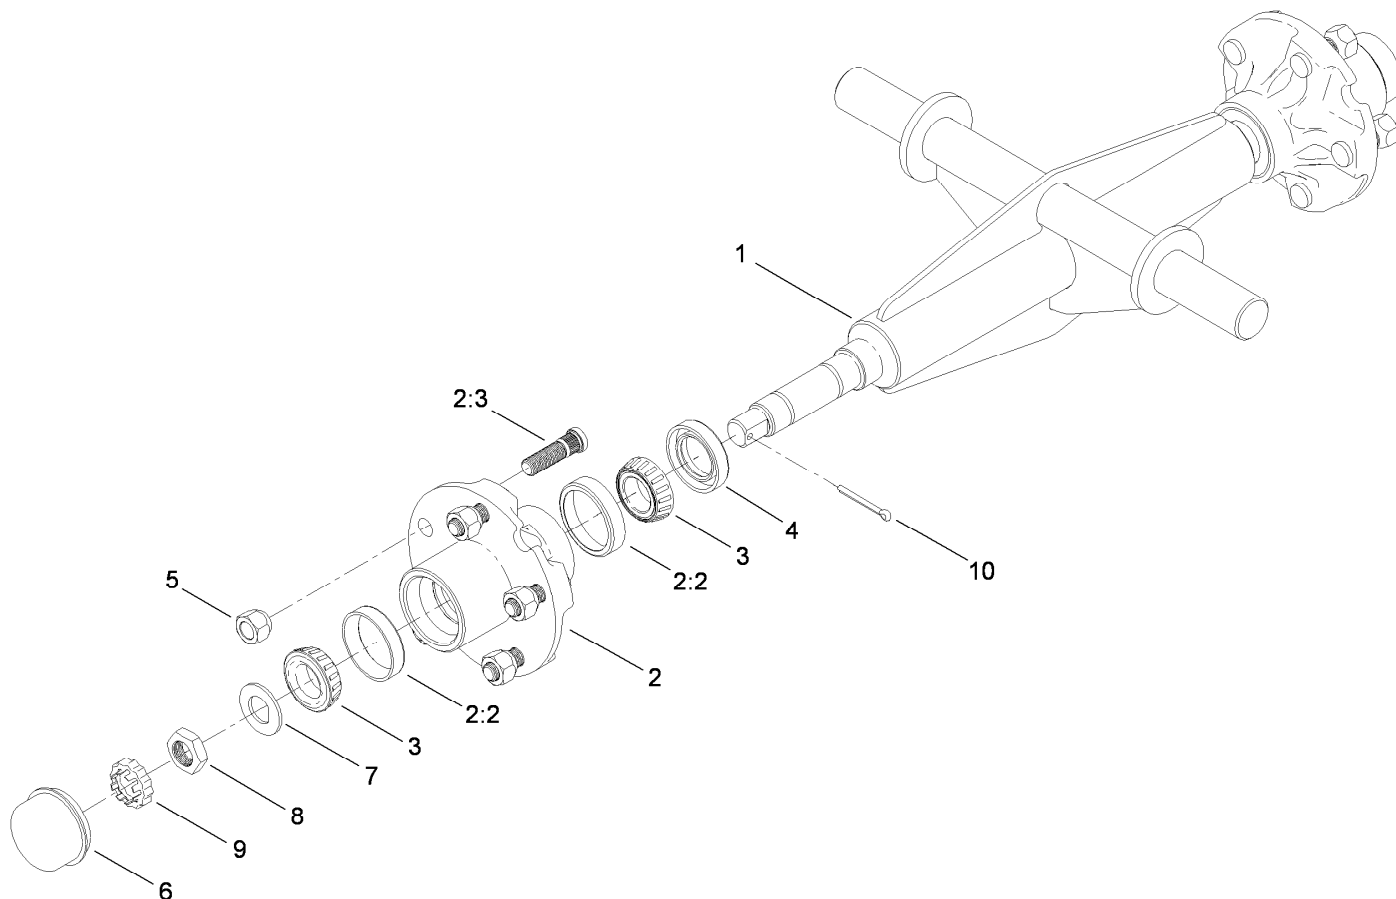

Walking Beam Assembly No. 119-6930

Ref.	Part Number	Qty.	Description
1	119-6932	1	Beam-Walking
2	117-8963	2	Hub ASM
2:2	254-72	2	Bearing-Cup, Tapered
2:3	114-3918	5	Stud-Wheel
3	254-94	4	Bearing-Cone, Tapered
4	112-1690	2	Seal-Oil
5	242-50	10	Nut-Lug
6	241-119	2	Cap-Dust
7	117-8259	2	Washer-Spindle
8	117-8260	2	Nut
9	93-0307	2	Nut-Lock, Retainer
10	3272-18	2	Pin-Cotter

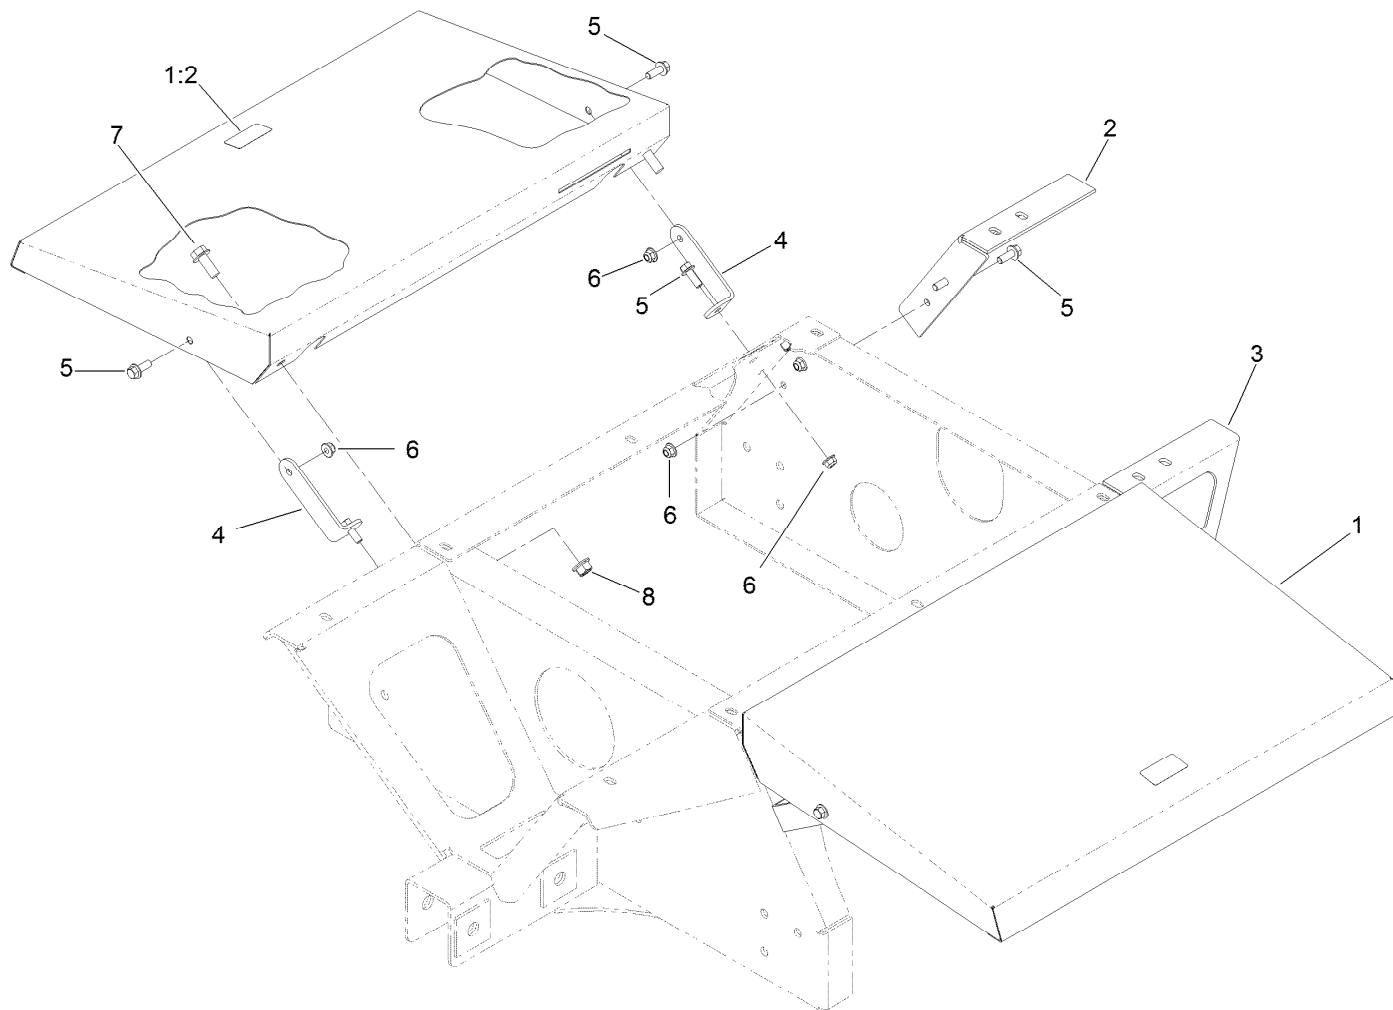

Fender Assembly

Ref.	Part Number	Qty.	Description
1	T36052320	2	Fender ASM
1:2	119-6807	1	Decal-Warning, Do Not Step
2	T36052306-01	1	Gusset-Rear, Right
3	T36052307-01	1	Gusset-Rear, Left
4	T36052325-01	4	Strut-Fender, Short
5	3234-42	12	Screw-HHF
6	104-8301	12	Nut-Flange, NI
7	3234-38	4	Screw-HHF
8	99-5107	4	Nut-Lock

Notes:



Count on it.