



Count on it.

Parts Catalog

Combo for Heavy Duty Drive Trencher and P105 Plow

RT1200 Traction Unit

Model No. 25205

Model No. 25205E



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HP: high pressure

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: low pressure

LPG: Liquefied Petroleum Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping

TTH: torx truss head

Contents

Combo Mount Assembly with Tracks 4


Combo Mount Assembly with Wheels 6

Drive Hose and Valve Assembly 8

Trencher Lift and Plow Swing Hose Assembly..... 10

Plow Hose Assembly 12

Combo Mount Assembly with Tracks

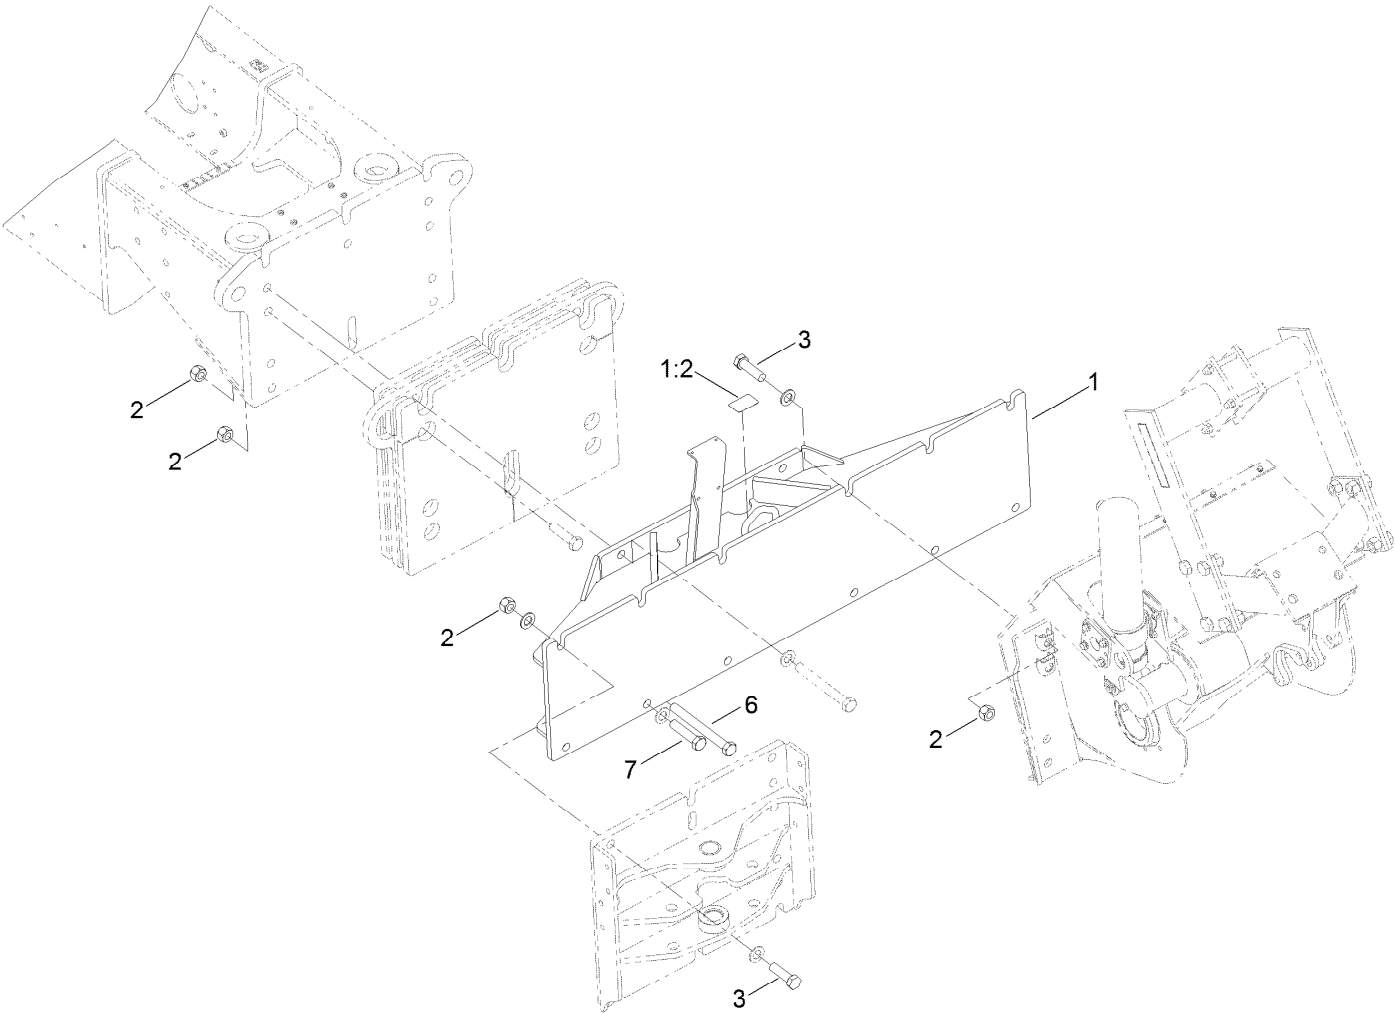


Combo Mount Assembly with Tracks (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	131-2690	1	Mount-Combo, Rt1200
1:2	125-6139	1	Decal-Lift/Tie Down
2	AU232-41116	19	Nut-Hex

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
3	AU426-1656	10	Screw-Cap, HH
6	AU426-16160	1	Screw-HH
7	AU426-1672	1	Bolt


Combo Mount Assembly wth Wheels

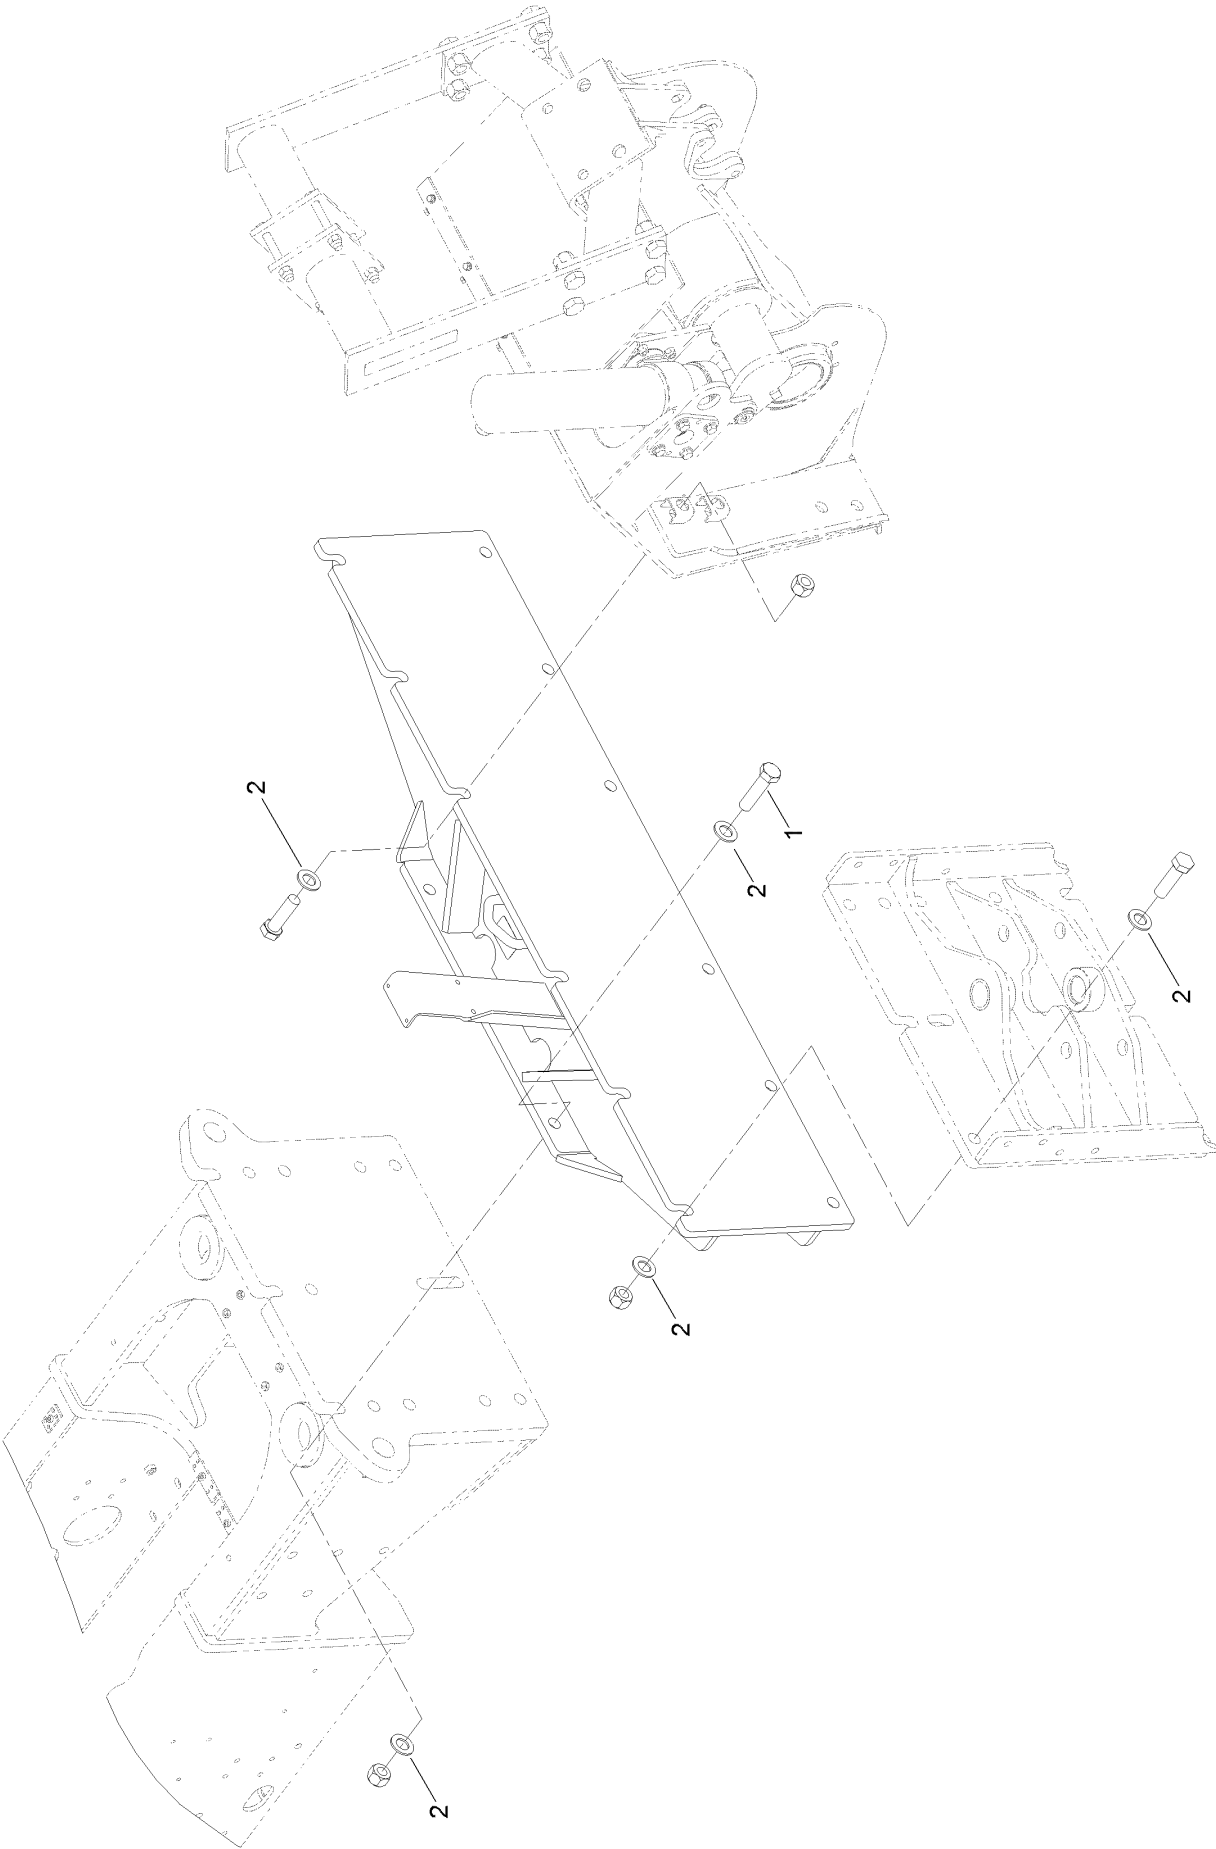

Combo Mount Assembly wth Wheels (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU426-1664	6	Bolt
2	AUH426833	30	Washer


Drive Hose and Valve Assembly

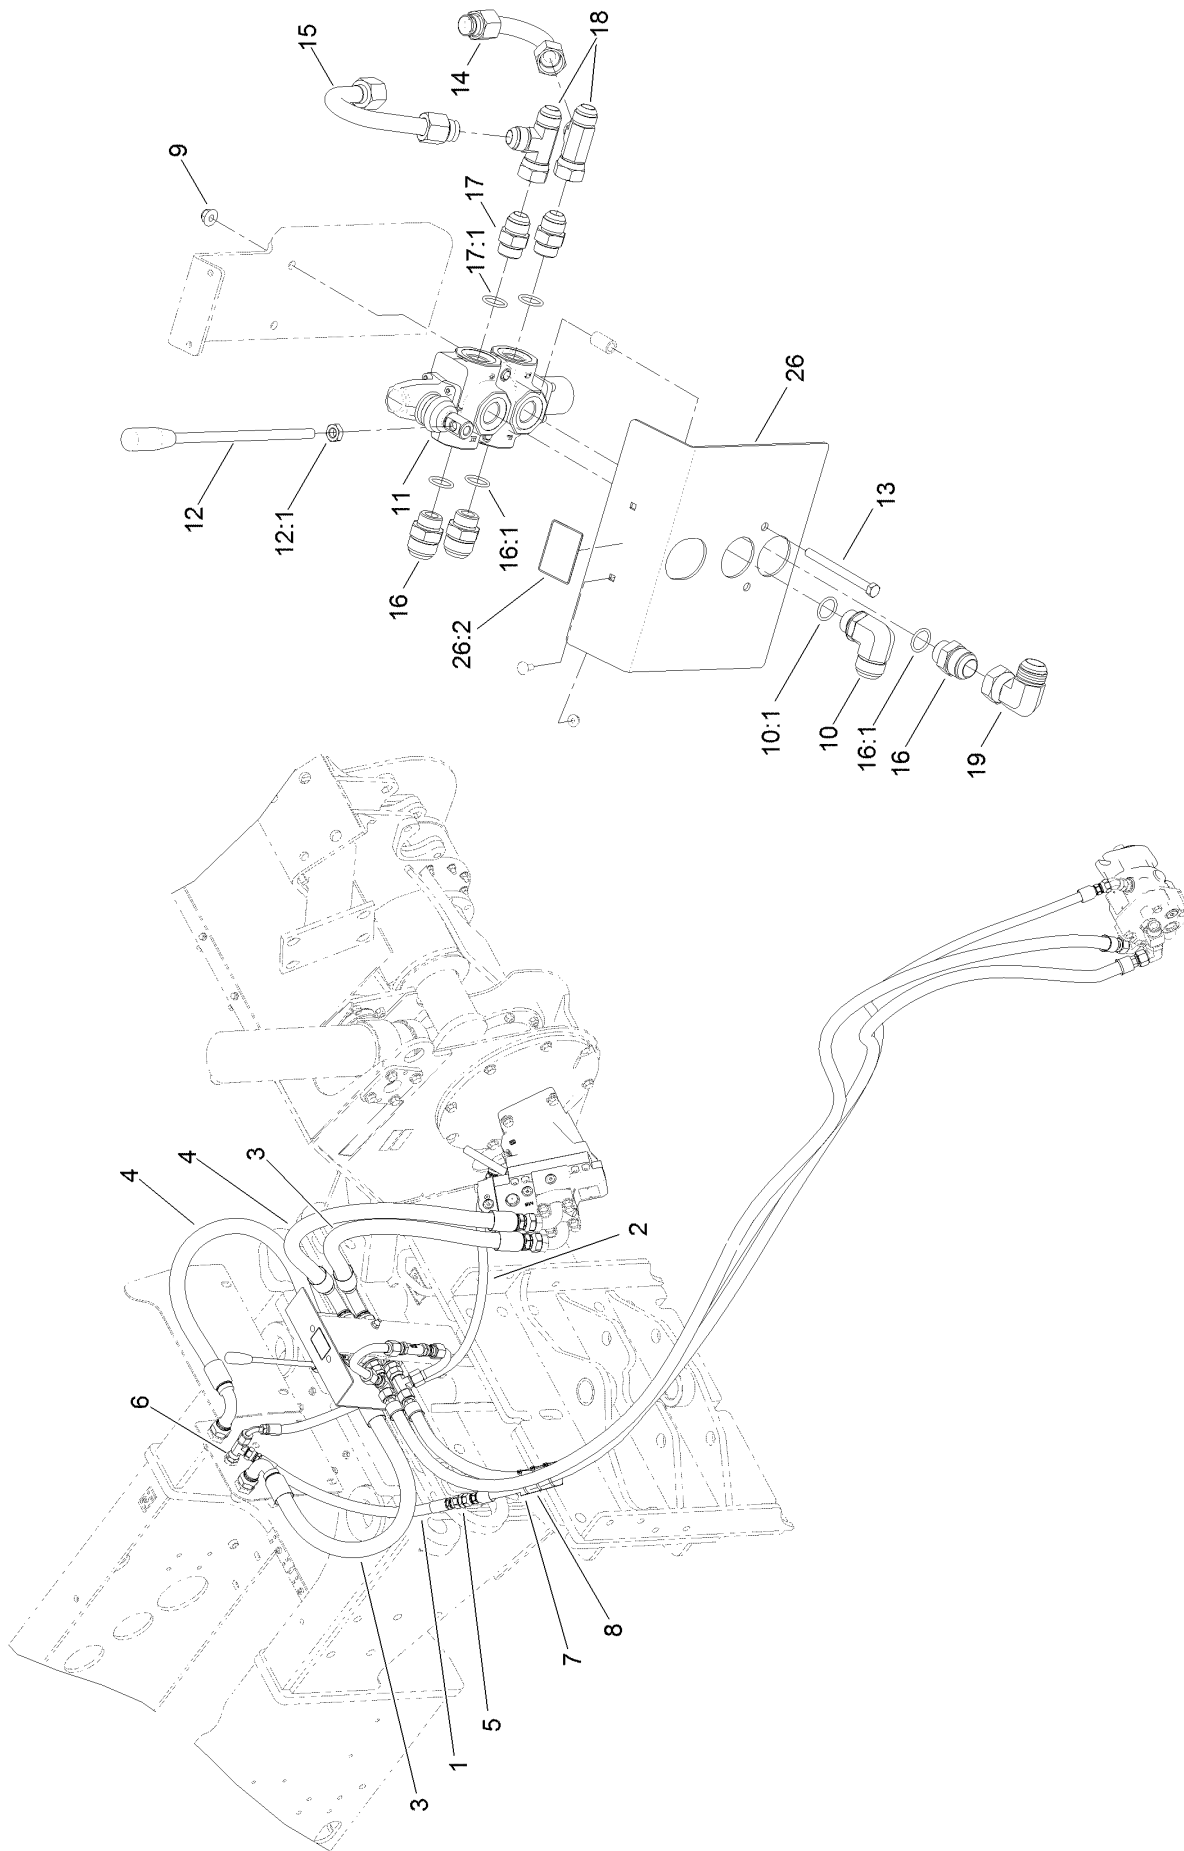

Drive Hose and Valve Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-6708	1	Hose ASM	12:1	51-2070	1	Nut
2	130-7493	1	HYD Hose ASM	13	323-17	2	Screw-HH
3	130-8446	1	Hose ASM	14	AU107330A1	1	Tube ASM
4	130-8447	1	Hose ASM	15	AU107331A1	1	Tube ASM
5	AU218-736	1	Fitting-Union	16	AU218-5050	3	Fitting-Straight
6	94-7022	1	Fitting-Tee	16:1	237-81	1	O-Ring
7	3290-379	3	Tie-Cable	17	AU218-5064	2	Fitting-Straight
8	AU112950	1	Protector-Hose, 4 Inch	17:1	237-81	1	O-Ring
9	104-8301	2	Nut-Flange, NI	18	AU218-5221	2	Fitting-Tee
10	127-9663	1	Fitting-Elbow, 90	19	AU218-5234	1	Fitting-Elbow, 90
10:1	237-81	1	O-Ring	26	136-3992	1	Guard Plate ASM
11	131-2666	1	Valve-Selector	26:2	131-2682	1	Decal-Selector
12	136-4001	1	Handle-Selector, Long				

Trencher Lift and Plow Swing Hose Assembly

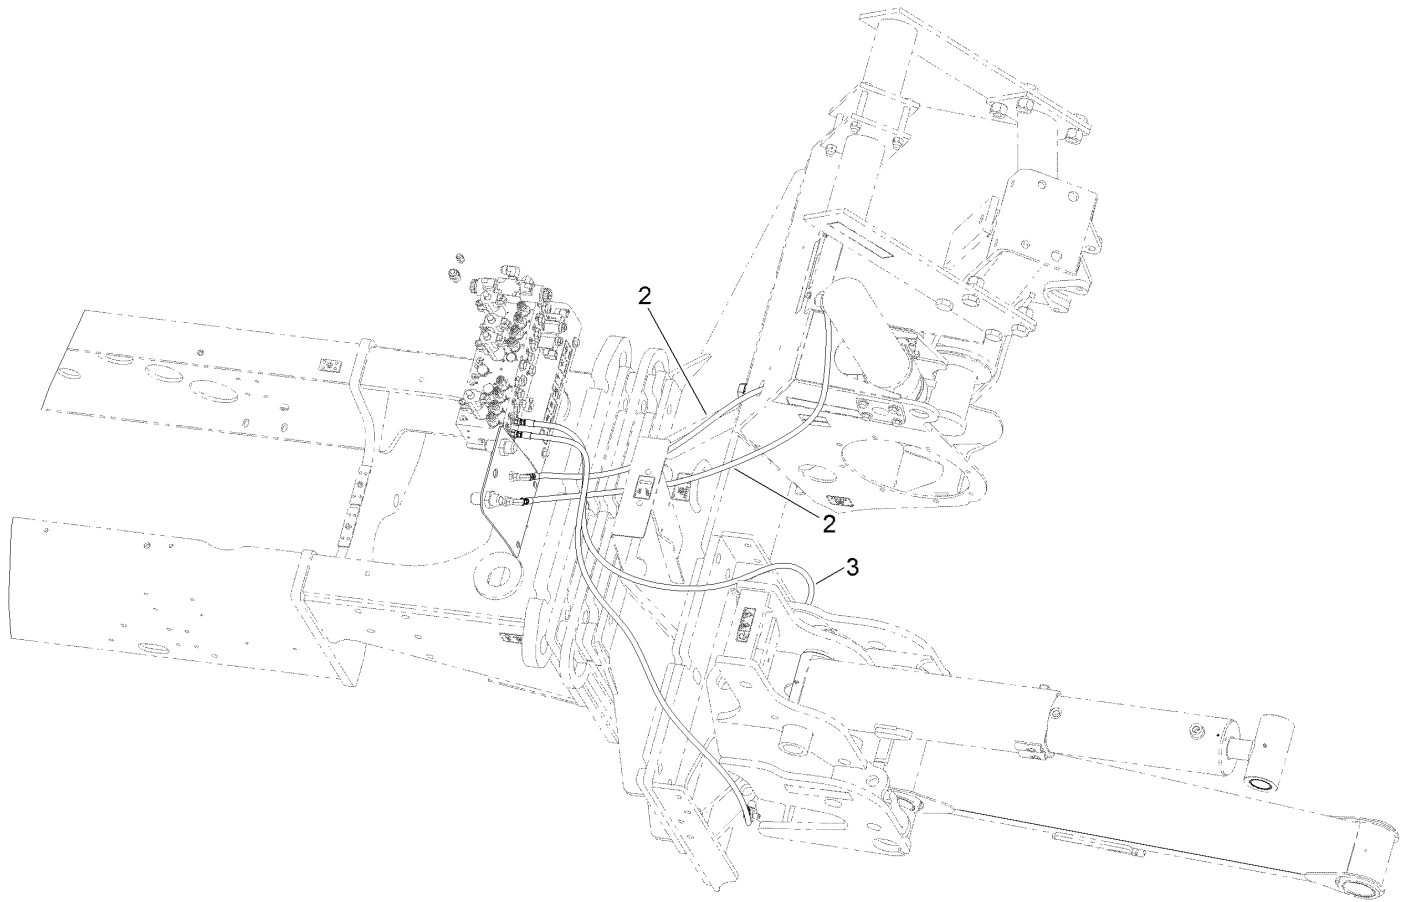

Trencher Lift and Plow Swing Hose Assembly (continued)


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	127-1818	2	HYD Hose ASM
2:1		1	Fitting-Straight, Rigid ■●

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2:1:1	237-42	1	O-Ring ●
3	130-8414	1	HYD Hose ASM

● Not illustrated

■ Not serviced separately

Plow Hose Assembly

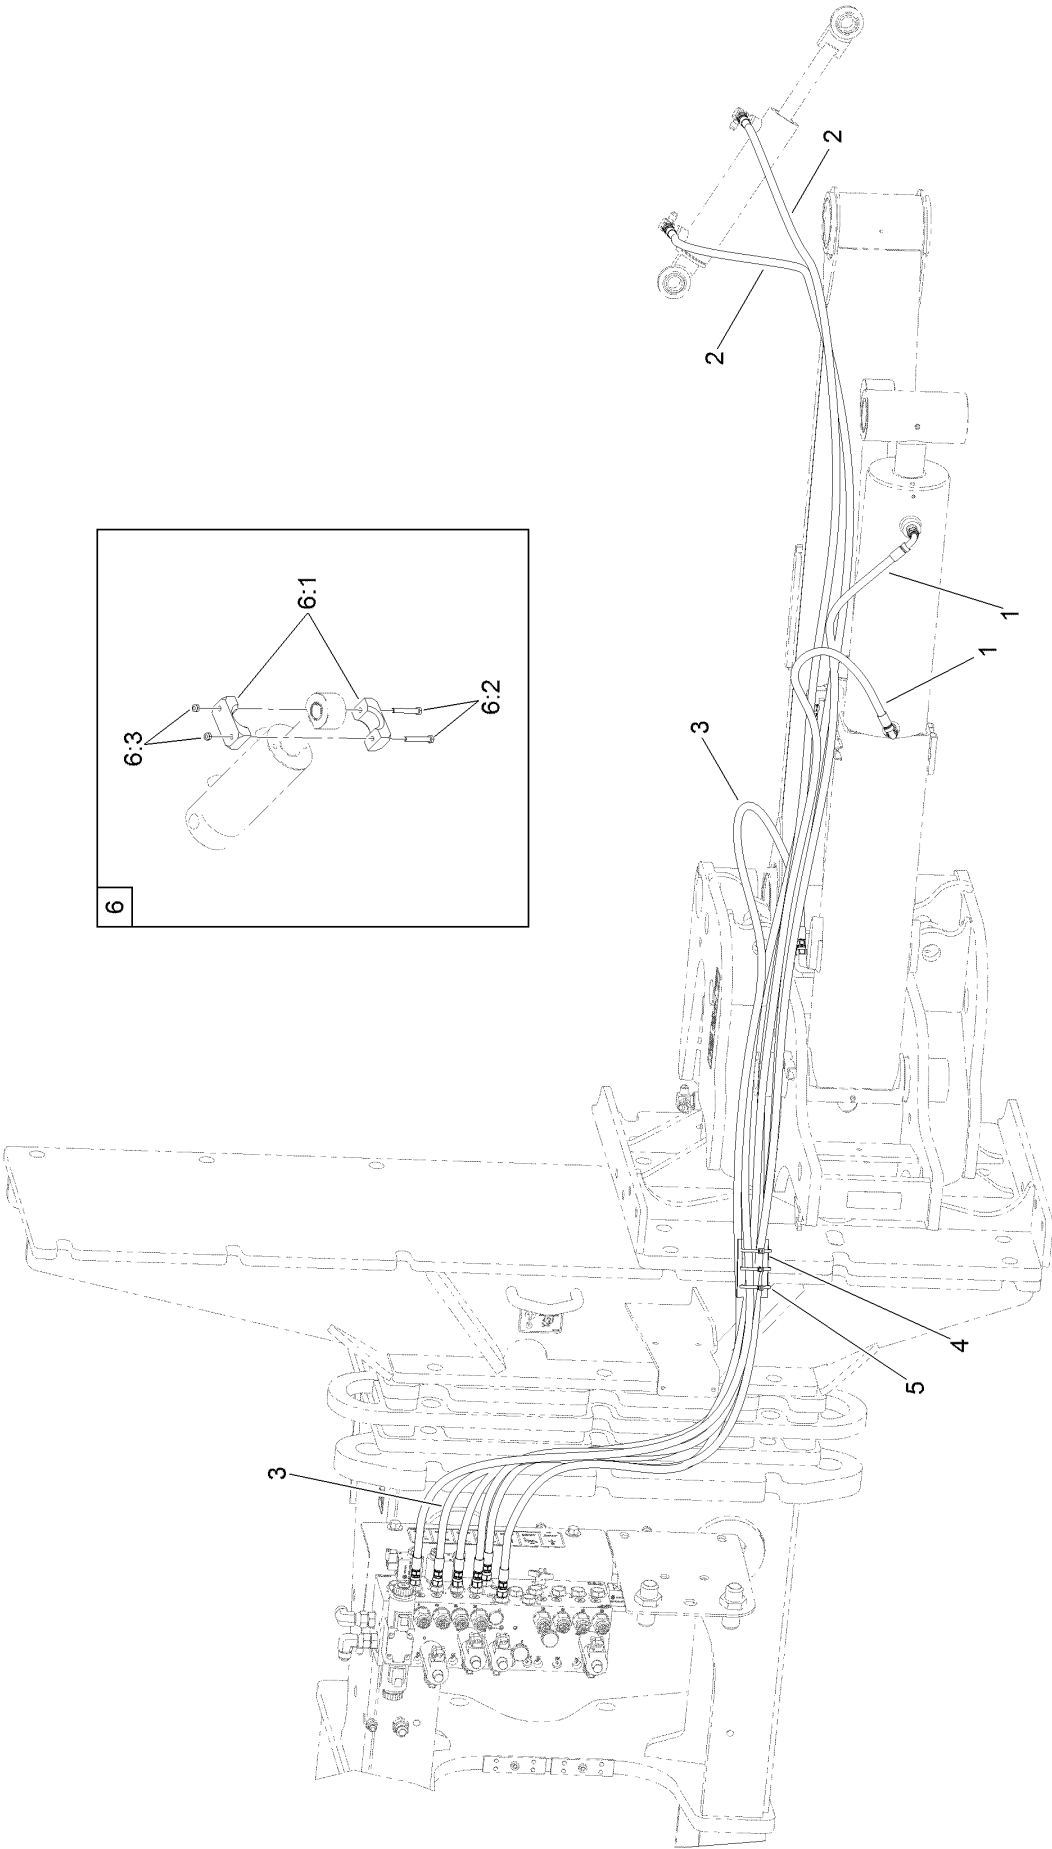

Plow Hose Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	131-2688	2	HYD Hose ASM	6	131-2695	1	2.00 Inch Stop Block ASM
2	131-2689	2	HYD Hose ASM	6:1	131-2693	1	Block-Stop
3	127-1250	2	Hose ASM	6:2	323-13	2	Screw-HH
4	AU112950	1	Protector-Hose, 4 Inch	6:3	AU232-4116	2	Nut-Hex
5	3290-379	3	Tie-Cable				

Notes:

Notes:



Count on it.