



**Count on it.**

# Parts Catalog

## TimeCutter® ZS 3200S

### Riding Mower

Model No. 74650—Serial No. 400000000 and Up



# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

## Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

## Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

## Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# Contents


|                                                        |    |
|--------------------------------------------------------|----|
| Frame and Front Axle Assembly .....                    | 4  |
| Deck Lift Assembly.....                                | 6  |
| Caster, Wheel and Tire Assembly .....                  | 8  |
| Traction Drive Assembly .....                          | 10 |
| Left Hand Hydro Transaxle Assembly No. 119-3330 .....  | 12 |
| Right Hand Hydro Transaxle Assembly No. 119-3331 ..... | 14 |
| Brake Assembly .....                                   | 16 |
| Rear Tire Assembly .....                               | 18 |
| Seat Assembly .....                                    | 20 |
| Motion Control Assembly .....                          | 22 |
| Engine and Muffler Assembly.....                       | 24 |
| Fuel System Assembly .....                             | 26 |
| Air Intake and Filtration Assembly .....               | 28 |
| Ignition and Electrical Assembly .....                 | 30 |
| Crankcase Assembly .....                               | 32 |
| Governor Control Assembly .....                        | 34 |
| Piston and Cylinder Head Assembly .....                | 36 |
| Blower Housing Assembly .....                          | 38 |
| Gasket and Seal Kit Assembly .....                     | 40 |
| Body Styling and Fuel Tank Assembly .....              | 42 |
| Battery and Electrical Assembly.....                   | 44 |
| 32 Inch Deck Assembly.....                             | 46 |
| Model Specific Decal Assembly .....                    | 48 |
| Frame Decal Assembly .....                             | 50 |
| Clutch Assembly.....                                   | 52 |
| Attachments and Accessories .....                      | 54 |

[illegible]

## Frame and Front Axle Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>        | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>         |
|-------------|--------------------|-------------|---------------------------|-------------|--------------------|-------------|----------------------------|
| 1           | 127-3444-01        | 1           | Frame ASM                 | 18          | 131-0901-01        | 1           | Mount-Hydro, Front (Right) |
| 2           | 119-3435-03        | 1           | Brace-Seat, Rear (Narrow) | 19          | 131-0902-01        | 1           | Mount-Hydro, Front (Left)  |
| 3           | 131-1040-03        | 1           | Support-Pod               | 20          | 130-6950-01        | 1           | Crossmember-Rear, Narrow   |
| 4           | 119-3431-03        | 2           | Support-Tank, Rear        | 21          | 117-1232-03        | 1           | Bracket-Hitch              |
| 5           | 131-0914-03        | 1           | Bracket-Battery           | 25          | 121-2989           | 2           | Decal-Bypass               |
| 6           | 125-1742-01        | 1           | Axle-Front, Narrow        | 27          | 32144-70           | 18          | Screw-HWHTF                |
| 10          | 116-4348           | 2           | Cap-Grease                | 28          | 3234-29            | 4           | Screw-HHF                  |
| 11          | 109-3678           | 4           | Bearing-Ball              | 29          | 3234-42            | 6           | Screw-HHF                  |
| 13          | 132-0890           | 1           | Footrest ASM              | 30          | 3234-47            | 8           | Screw-HHF                  |
| 13:2        | 105-8278           | 1           | Decal                     | 34          | 104-8300           | 12          | Nut-Flange, NI             |
| 13:3        | 132-0869           | 1           | Decal-Danger              | 35          | 104-8301           | 6           | Nut-Flange, NI             |
| 16          | 127-3353-03        | 1           | Guard-Engine, Narrow      |             |                    |             |                            |


# Deck Lift Assembly

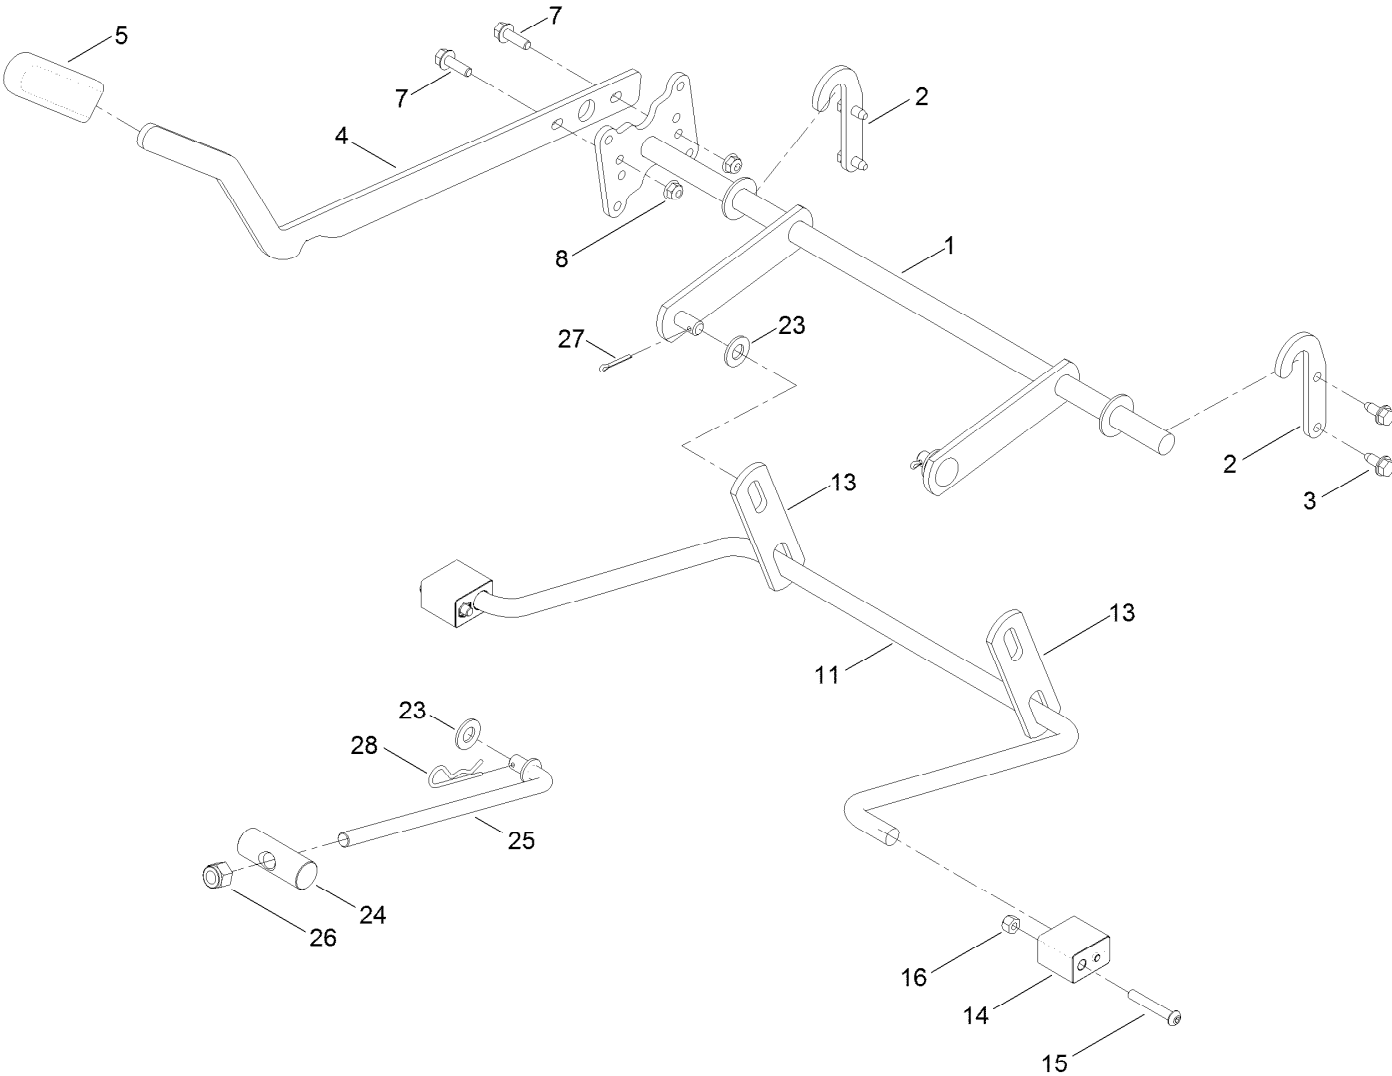

## Deck Lift Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|--------------------|
| 1           | 132-6872-03        | 1           | Lift-Deck, Narrow  | 14          | 108-7845           | 2           | Block-Pivot        |
| 2           | 119-8875           | 2           | Bracket-Lift       | 15          | 120-5499           | 2           | Screw-HSBH         |
| 3           | 32144-70           | 4           | Screw-HWHTF        | 16          | 3296-29            | 2           | Nut-Lock, NI       |
| 4           | 119-3427-03        | 1           | Lever-Lift         | 23          | 3256-26            | 3           | Washer-Flat        |
| 5           | 1-633268           | 1           | Grip-Lever         | 24          | 119-8810           | 1           | Pin-Pivot          |
| 7           | 3234-29            | 2           | Screw-HHF          | 25          | 133-4319           | 1           | Rod-Mount, Deck    |
| 8           | 104-8300           | 2           | Nut-Flange, NI     | 26          | 3296-19            | 1           | Nut-Hex            |
| 11          | 108-7839           | 1           | Arm-Lift, Rear     | 27          | 3272-11            | 2           | Pin-Cotter         |
| 13          | 108-7840           | 2           | Link-Lift          | 28          | 1-806005           | 1           | Pin-Cotter         |

# Caster, Wheel and Tire Assembly

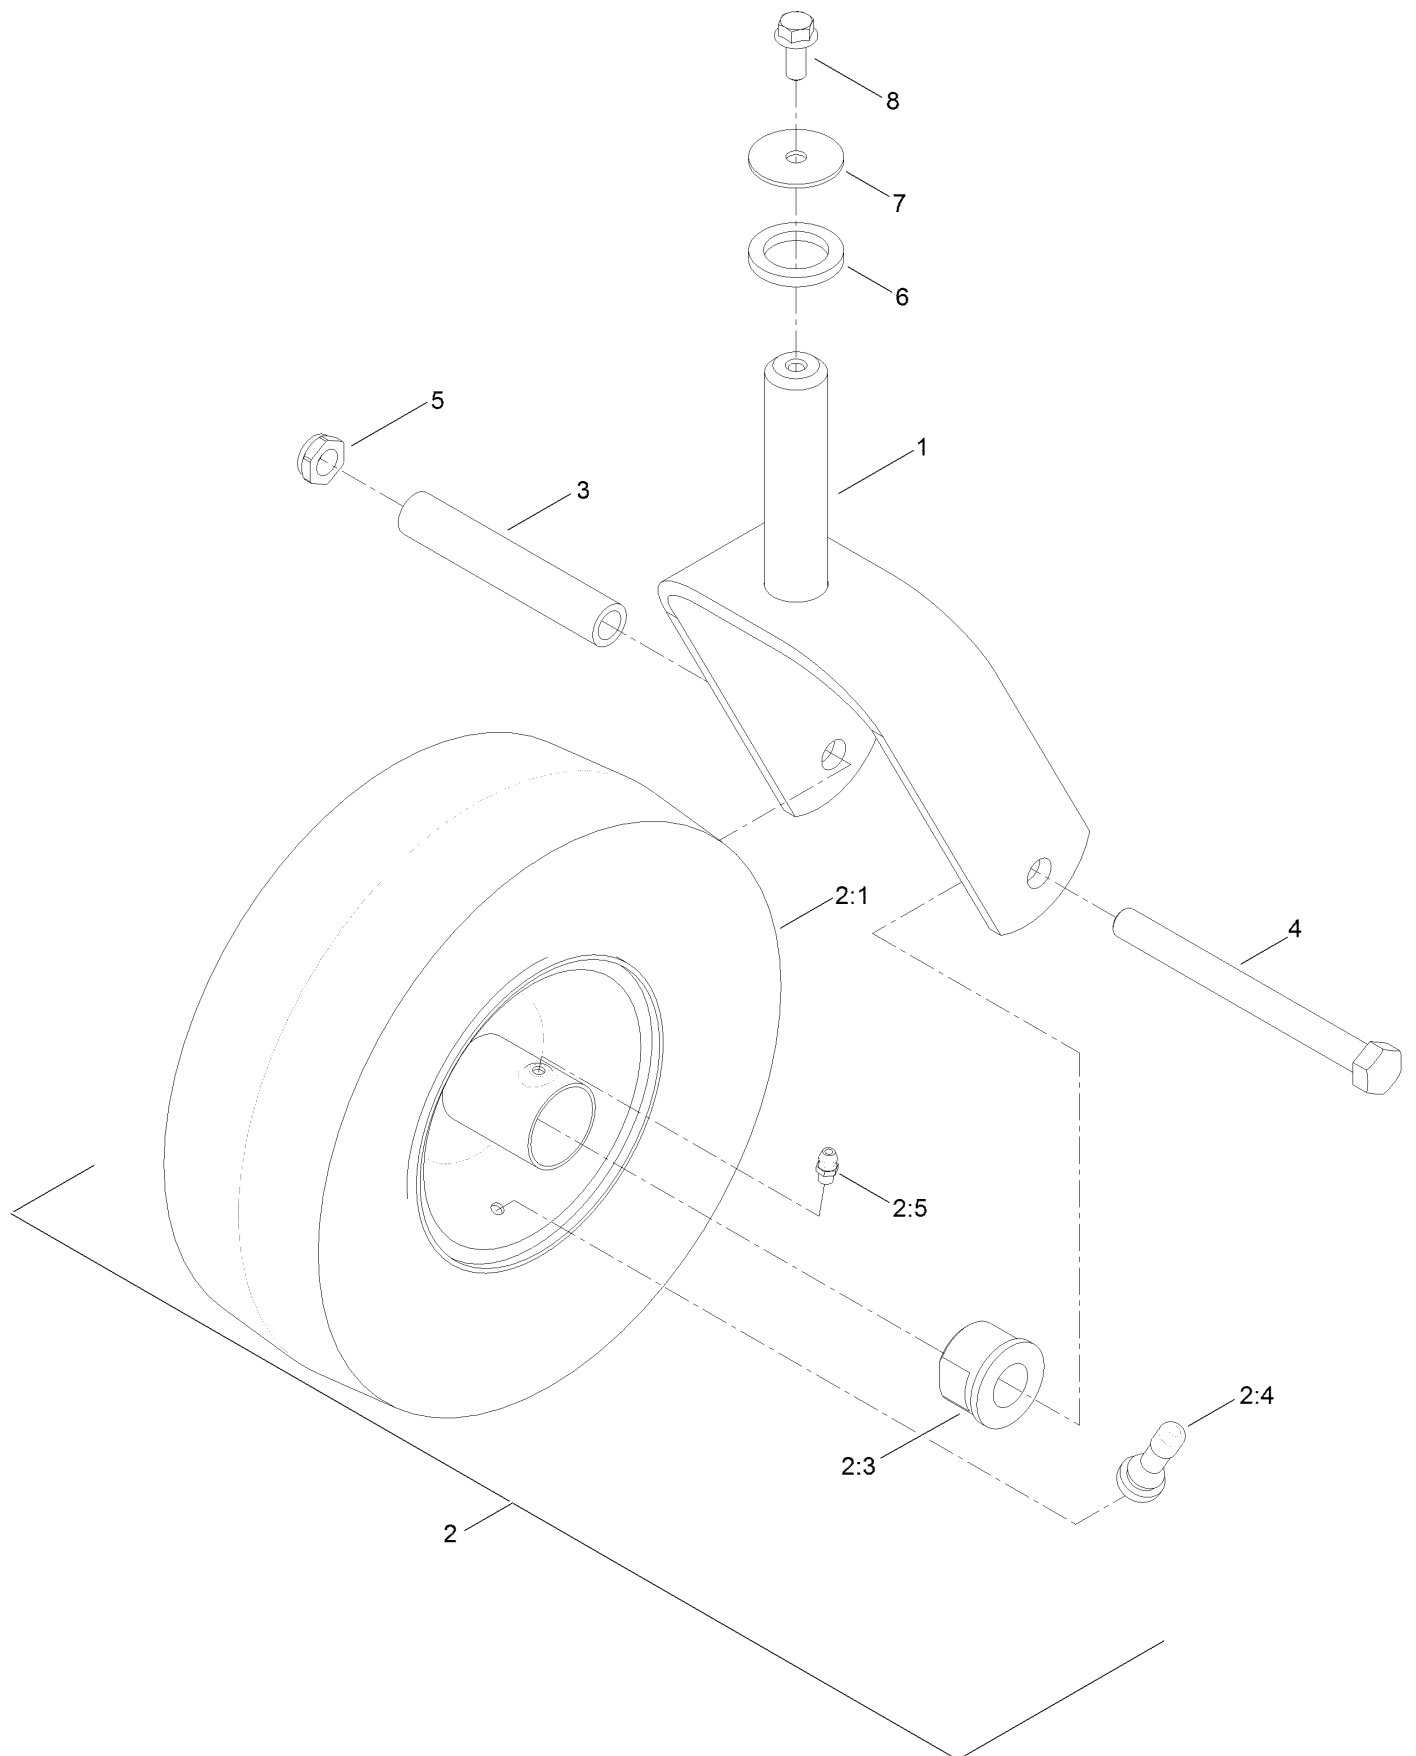

## Caster, Wheel and Tire Assembly (continued)


| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 120-7964-01        | 2           | Caster Fork ASM    |
| 2           | 130-0736           | 2           | Caster Wheel ASM   |
| 2:1         | 130-0735           | 1           | Tire               |
| 2:3         | 114-1640           | 2           | Bushing-Flange     |
| 2:4         | 232-27             | 1           | Stem-Valve         |
| 2:5         | 302-5              | 1           | Fitting-Grease     |
| 2:6         | 105-0844           | 1           | Tube-Inner ●■      |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 3           | 104-3667           | 2           | Spanner-Wheel      |
| 4           | 325-22             | 2           | Screw-HH           |
| 5           | 3296-45            | 2           | Nut-Lock, NI       |
| 6           | 117-7394           | 2           | Washer-Thrust      |
| 7           | 3256-68            | 2           | Washer-Flat        |
| 8           | 3234-47            | 2           | Screw-HHF          |

● Not illustrated

■ Optional Equipment


# Traction Drive Assembly

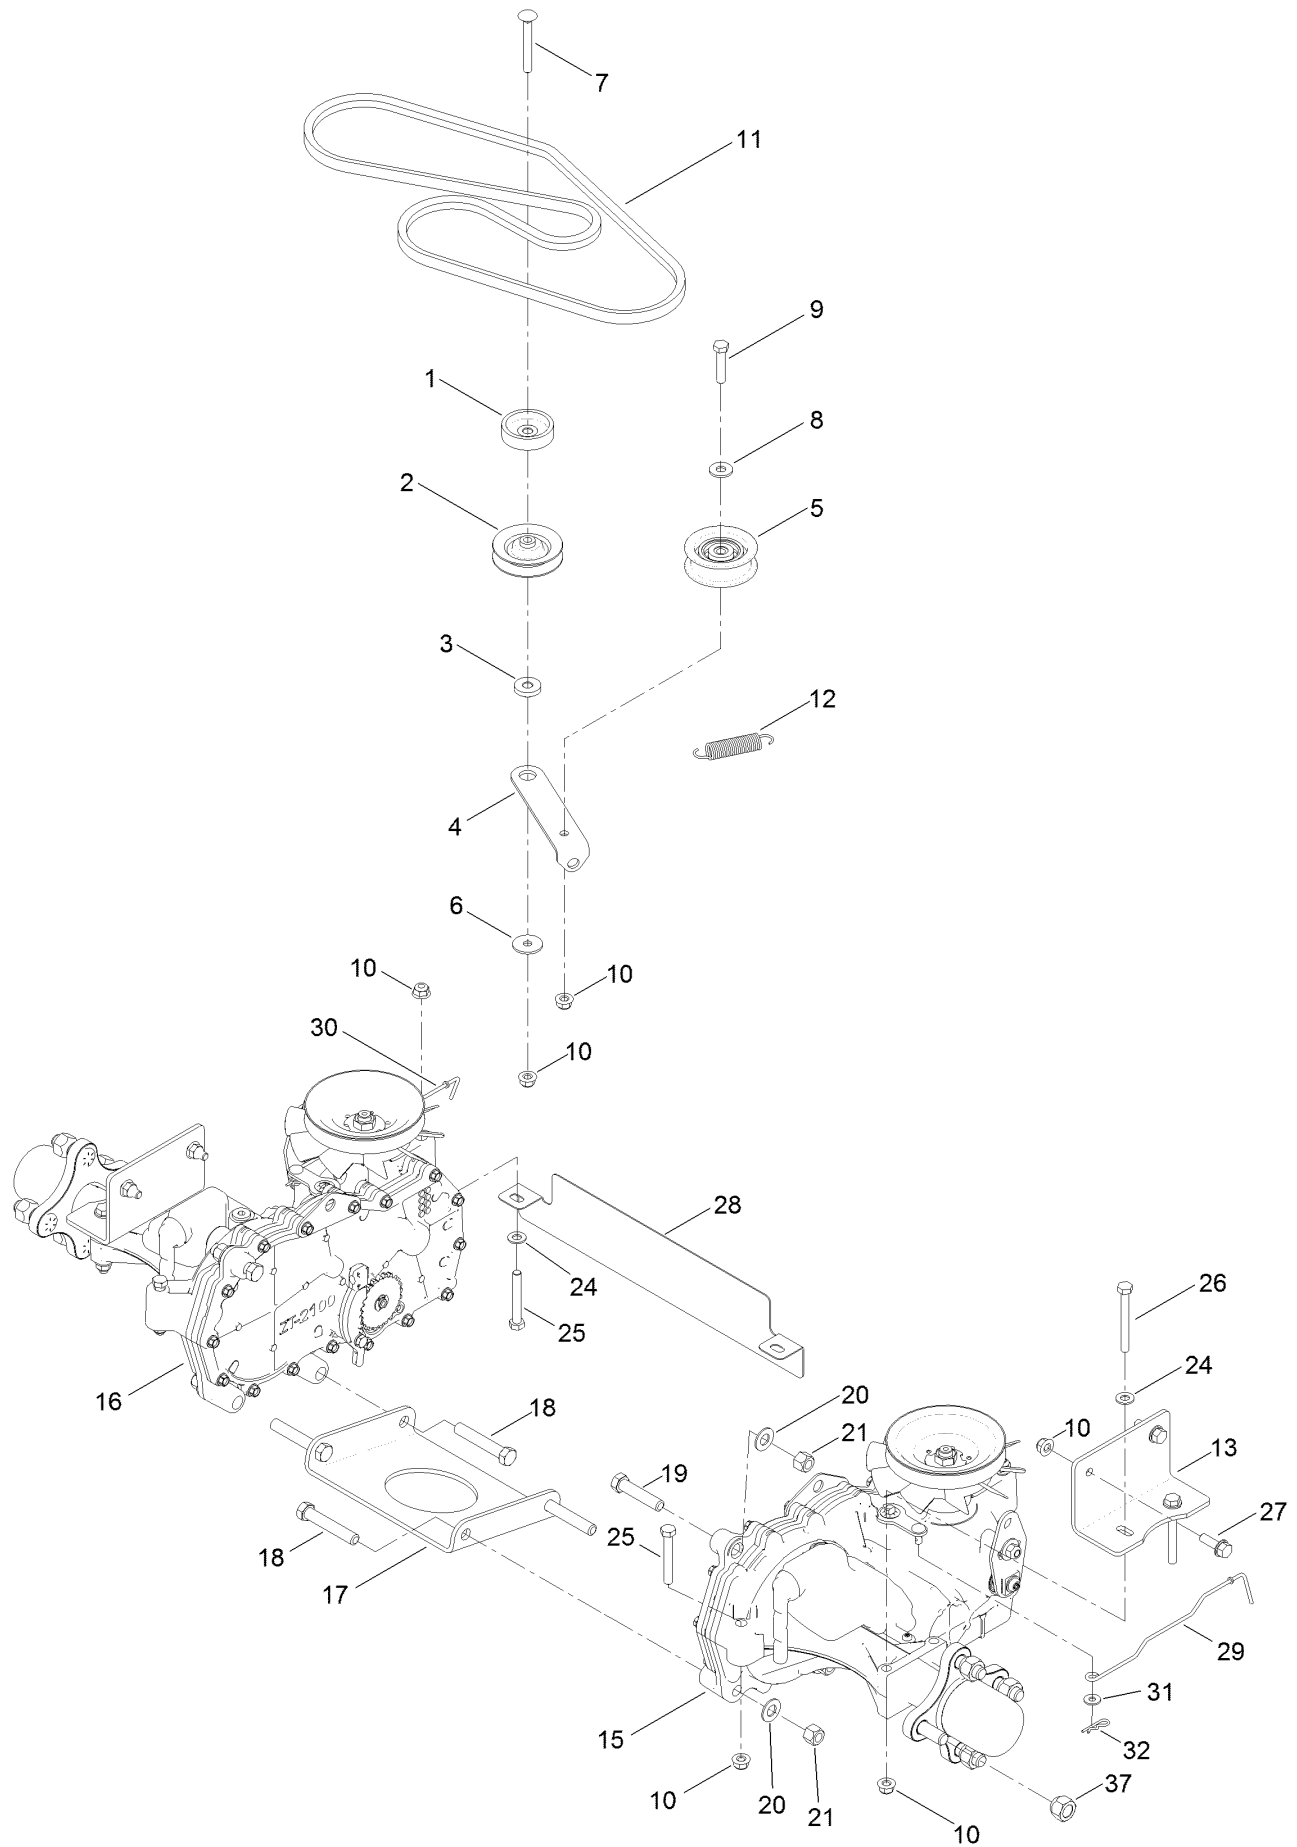

## Traction Drive Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|------------------------|-------------|--------------------|-------------|--------------------|
| 1           | 119-3353           | 1           | Spacer                 | 17          | 119-3339-03        | 1           | Plate-Cross, Hydro |
| 2           | 119-8822           | 1           | Pulley-Idler           | 18          | 324-10             | 4           | Screw-HH           |
| 3           | 119-3327           | 1           | Spacer-Arm, Idler      | 19          | 324-8              | 2           | Screw-HH           |
| 4           | 119-3326           | 1           | Arm-Idler              | 20          | 3256-25            | 6           | Washer-Flat        |
| 5           | 106-2176           | 1           | Pulley-Idler           | 21          | 3296-48            | 6           | Nut-Lock, NI       |
| 6           | 5-4460             | 1           | Washer-Pivot           | 24          | 3256-23            | 6           | Washer-Flat        |
| 7           | 3230-8             | 1           | Screw-CARR             | 25          | 322-11             | 4           | Screw-HH           |
| 8           | 3256-3             | 1           | Washer-Flat            | 26          | 322-13             | 4           | Screw-HH           |
| 9           | 322-7              | 1           | Screw-HH               | 27          | 3234-29            | 4           | Screw-HHF          |
| 10          | 104-8300           | 14          | Nut-Flange, NI         | 28          | 131-3668-03        | 1           | Guard Rear, Narrow |
| 11          | 130-6975           | 1           | V-Belt                 | 29          | 131-0900           | 1           | Rod-Bypass, LH     |
| 12          | 104-6415           | 1           | Spring-Return, Pedal   | 30          | 130-7049           | 1           | Rod-Bypass, RH     |
| 13          | 117-7264-03        | 2           | Mount-Hydro            | 31          | 119-8952           | 2           | Washer             |
| 15          | 119-3330           | 1           | LH Hydro Transaxle ASM | 32          | 3290-307           | 2           | Pin-Cotter         |
| 16          | 119-3331           | 1           | RH Hydro Transaxle ASM | 37          | 242-50             | 8           | Nut-Lug            |

# Left Hand Hydro Transaxle Assembly No. 119-3330

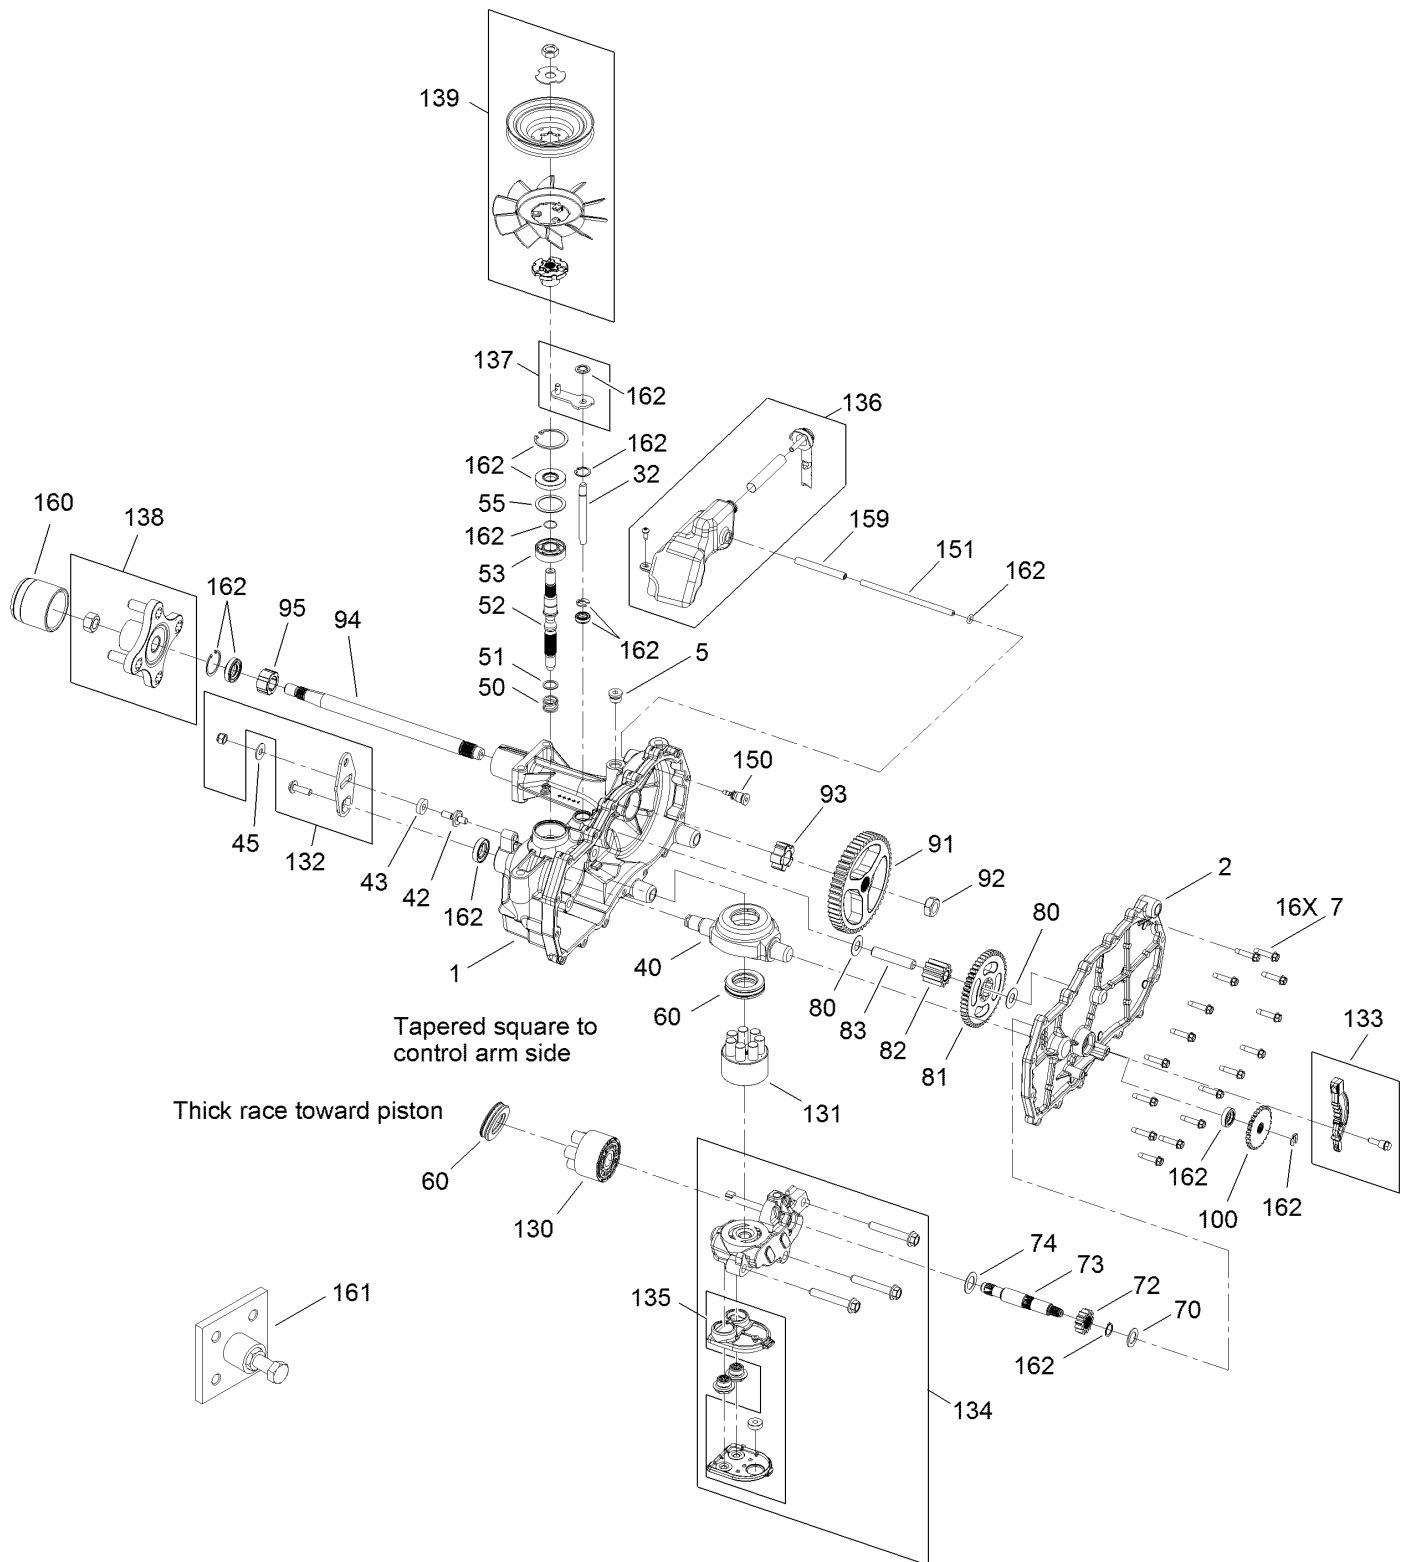


# Left Hand Hydro Transaxle Assembly No. 119-3330 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>        |
|-------------|--------------------|-------------|-----------------------|-------------|--------------------|-------------|---------------------------|
| 1           | 120-5532           | 1           | Main Housing ASM      | 83          | 104-5329           | 1           | Pin-Jackshaft             |
| 2           | 120-5534           | 1           | Housing Side Kit      | 91          | 120-5539           | 1           | Gear-Bull                 |
| 5           | 104-2189           | 1           | Plug-Thread, Straight | 92          | 104-2142           | 1           | Nut-HJ                    |
| 7           | 117-5359           | 16          | Screw-HHF             | 93          | 115-8314           | 1           | Bushing-Inboard           |
| 13          | 104-2147           | 1           | Sealant ●             | 94          | 120-5540           | 1           | Shaft-Axle                |
| 32          | 106-8678           | 2           | Rod-Bypass            | 95          | 120-5541           | 1           | Bearing-Sleeve            |
| 40          | 104-5304           | 1           | Swashplate-Trunnion   | 100         | 106-8694           | 1           | Disc-Brake, Cog           |
| 42          | 104-2116           | 1           | Stud                  | 130         | 103-2666           | 1           | Cylinder Block Kit        |
| 43          | 112-9853           | 1           | Puck-Friction         | 131         | 110-8561           | 1           | Pump Block ASM            |
| 45          | 114-8491           | 1           | Washer                | 132         | 117-5362           | 1           | Arm Control Kit           |
| 50          | 120-5537           | 1           | Spring-Compression    | 133         | 106-8688           | 1           | Brake Arm Kit             |
| 51          | 120-5538           | 1           | Washer                | 134         | 112-9861           | 1           | Center Section Filter Kit |
| 52          | 104-5306           | 1           | Shaft-Input           | 135         | 114-1634           | 1           | Filter Kit                |
| 53          | 104-5311           | 1           | Bearing-Ball          | 136         | 121-5730           | 1           | RH Expansion Tank Kit     |
| 55          | 104-5308           | 1           | Spacer                | 137         | 120-5549           | 1           | Bypass Kit                |
| 60          | 94-6922            | 1           | Bearing-Thrust        | 138         | 121-5731           | 1           | Hub Kit                   |
| 70          | 104-5339           | 1           | Washer-Flat           | 139         | 121-5729           | 1           | Fan Pulley Kit            |
| 72          | 104-5316           | 1           | Gear-Pinnion, 13T     | 150         | 104-5349           | 1           | Fitting-SAE               |
| 73          | 106-8683           | 1           | Shaft-Motor           | 151         | 115-8302           | 1           | Hose                      |
| 74          | 104-5360           | 1           | Washer                | 159         | 121-5728           | 1           | Case-Tube                 |
| 80          | 119-5541           | 2           | Washer                | 160         | 125-0041           | 1           | Cap-Axle                  |
| 81          | 104-5317           | 1           | Gear-10T/48T          | 161         | 114-8467           | 1           | Hub-Puller, 4 Bolt        |
| 82          | 104-5318           | 1           | Gear-Jackshaft, 10T   | 162         | 120-7103           | 1           | Seal And Ring Kit         |

● Not illustrated

# Right Hand Hydro Transaxle Assembly No. 119-3331

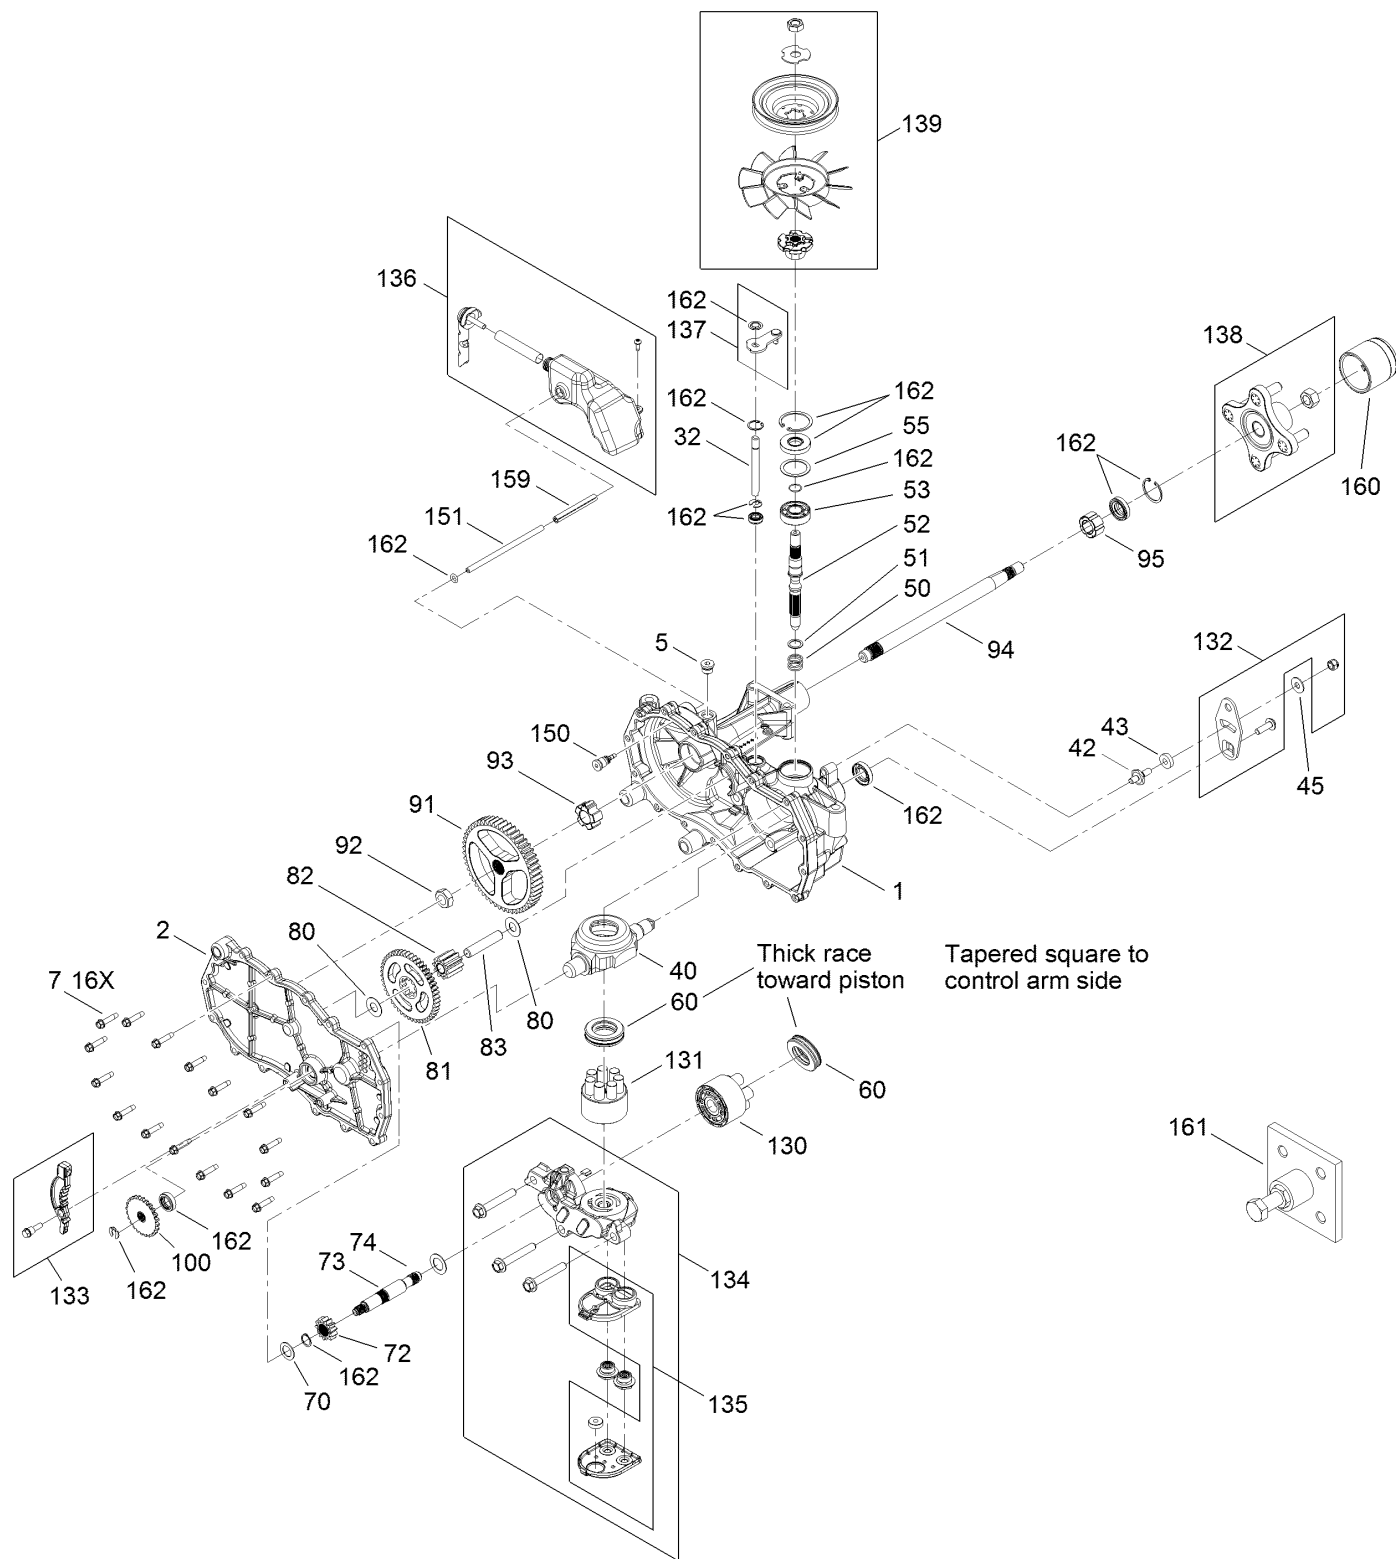


# Right Hand Hydro Transaxle Assembly No. 119-3331 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>        |
|-------------|--------------------|-------------|-----------------------|-------------|--------------------|-------------|---------------------------|
| 1           | 120-5531           | 1           | Main Housing ASM      | 83          | 104-5329           | 1           | Pin-Jackshaft             |
| 2           | 120-5533           | 1           | Housing Side Kit      | 91          | 120-5539           | 1           | Gear-Bull                 |
| 5           | 104-2189           | 1           | Plug-Thread, Straight | 92          | 104-2142           | 1           | Nut-HJ                    |
| 7           | 117-5359           | 16          | Screw-HHF             | 93          | 115-8314           | 1           | Bushing-Inboard           |
| 13          | 104-2147           | 1           | Sealant ●             | 94          | 120-5540           | 1           | Shaft-Axle                |
| 32          | 106-8678           | 2           | Rod-Bypass            | 95          | 120-5541           | 1           | Bearing-Sleeve            |
| 40          | 104-5304           | 1           | Swashplate-Trunnion   | 100         | 106-8694           | 1           | Disc-Brake, Cog           |
| 42          | 104-2116           | 1           | Stud                  | 130         | 103-2666           | 1           | Cylinder Block Kit        |
| 43          | 112-9853           | 1           | Puck-Friction         | 131         | 110-8561           | 1           | Pump Block ASM            |
| 45          | 114-8491           | 1           | Washer                | 132         | 117-5362           | 1           | Arm Control Kit           |
| 50          | 120-5537           | 1           | Spring-Compression    | 133         | 106-8688           | 1           | Brake Arm Kit             |
| 51          | 120-5538           | 1           | Washer                | 134         | 112-9862           | 1           | Center Section Filter Kit |
| 52          | 104-5306           | 1           | Shaft-Input           | 135         | 114-1634           | 1           | Filter Kit                |
| 53          | 104-5311           | 1           | Bearing-Ball          | 136         | 121-5735           | 1           | LH Expansion Tank Kit     |
| 55          | 104-5308           | 1           | Spacer                | 137         | 107-2489           | 1           | Bypass Arm Kit            |
| 60          | 94-6922            | 1           | Bearing-Thrust        | 138         | 121-5731           | 1           | Hub Kit                   |
| 70          | 104-5339           | 1           | Washer-Flat           | 139         | 121-5729           | 1           | Fan Pulley Kit            |
| 72          | 104-5316           | 1           | Gear-Pinnion, 13T     | 150         | 104-5349           | 1           | Fitting-SAE               |
| 73          | 106-8683           | 1           | Shaft-Motor           | 151         | 115-8302           | 1           | Hose                      |
| 74          | 104-5360           | 1           | Washer                | 159         | 121-5728           | 1           | Case-Tube                 |
| 80          | 119-5541           | 2           | Washer                | 160         | 125-0041           | 1           | Cap-Axle                  |
| 81          | 104-5317           | 1           | Gear-10T/48T          | 161         | 114-8467           | 1           | Hub-Puller, 4 Bolt        |
| 82          | 104-5318           | 1           | Gear-Jackshaft, 10T   | 162         | 120-7103           | 1           | Seal And Ring Kit         |

● Not illustrated


Brake Assembly

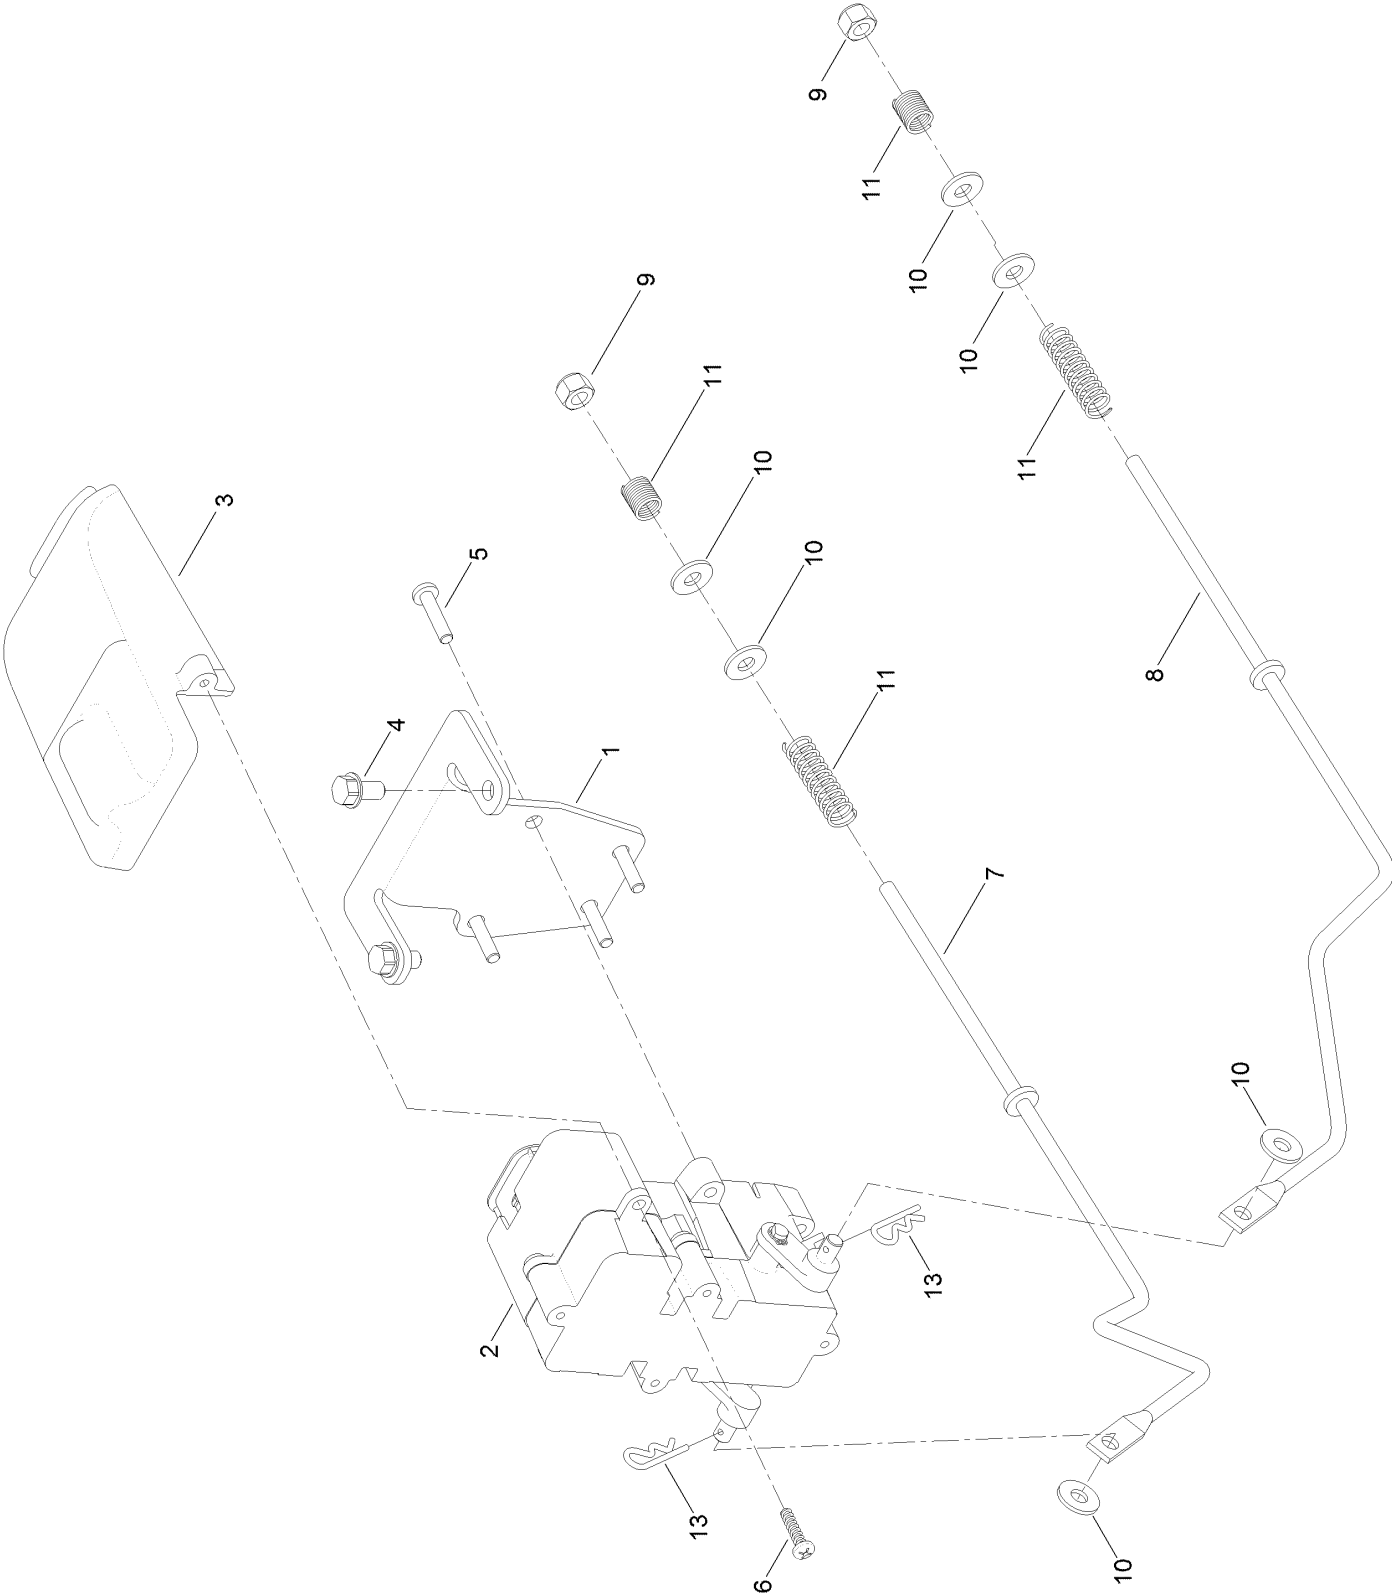

## Brake Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|----------------------|-------------|--------------------|-------------|--------------------|
| 1           | 130-0790-03        | 1           | Bracket-Mount, Brake | 7           | 121-2974           | 1           | Rod-Brake, RH      |
| 2           | 132-0935           | 1           | Brake Box ASM        | 8           | 121-2975           | 1           | Rod-Brake, LH      |
| 3           | 132-6949           | 1           | Cover-Connector      | 9           | 3296-42            | 2           | Nut-Lock, NI       |
| 4           | 32144-4            | 2           | Screw-HWH            | 10          | 119-8952           | 6           | Washer             |
| 5           | 32144-36           | 4           | Screw-PPH            | 11          | 117-1169           | 4           | Spring-Compression |
| 6           | 94-4496            | 2           | Screw-PPH            | 13          | 3290-307           | 2           | Pin-Cotter         |


Rear Tire Assembly

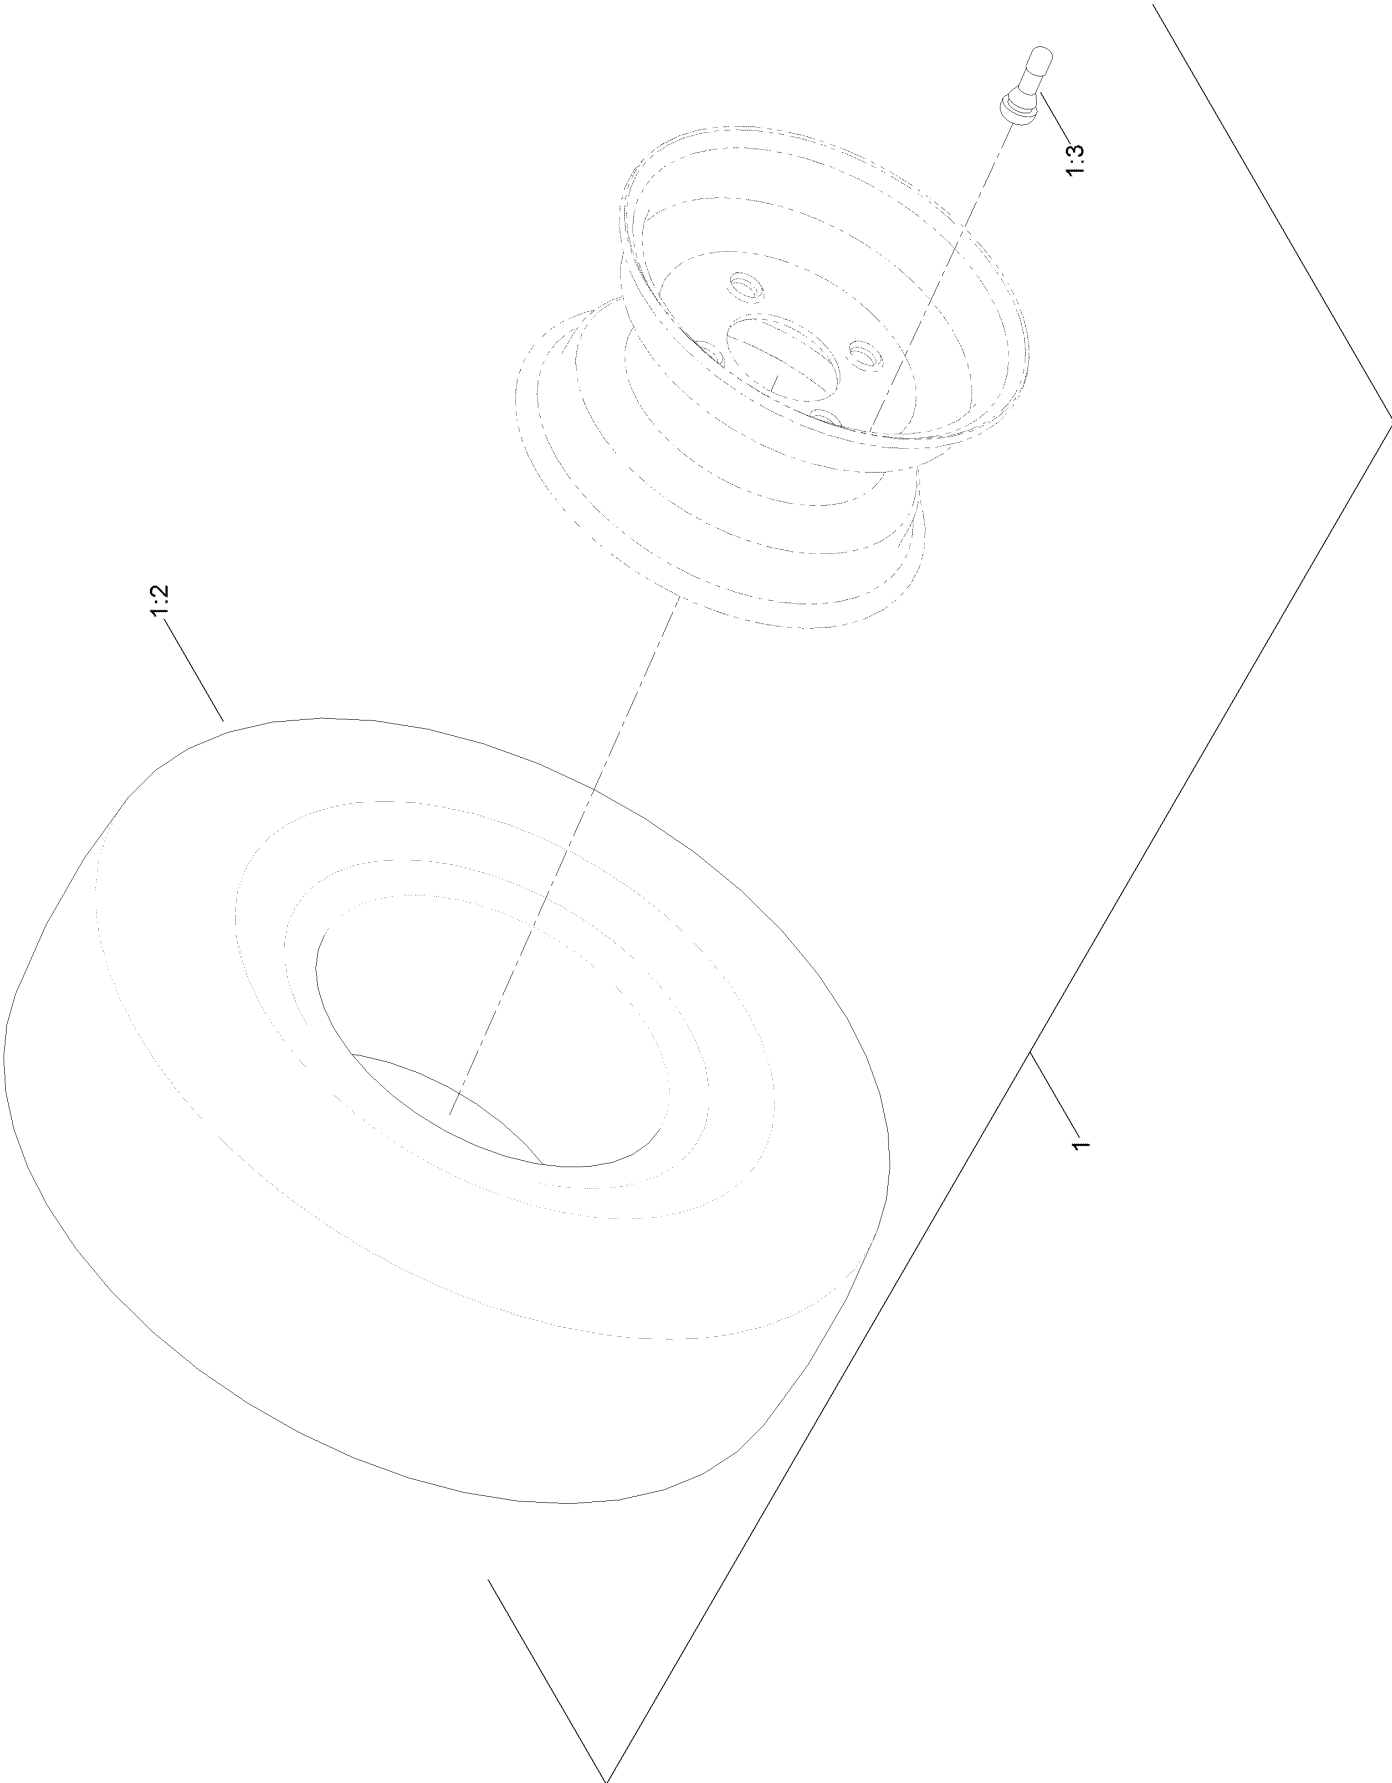

## Rear Tire Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       |
|-------------|--------------------|-------------|--------------------------|
| 1           | 131-3670           | 2           | 2 Ply Tire And Wheel ASM |
| 1:2         | 131-3677           | 1           | Tire-2 Ply               |
| 1:3         | 232-27             | 1           | Stem-Valve               |


Seat Assembly

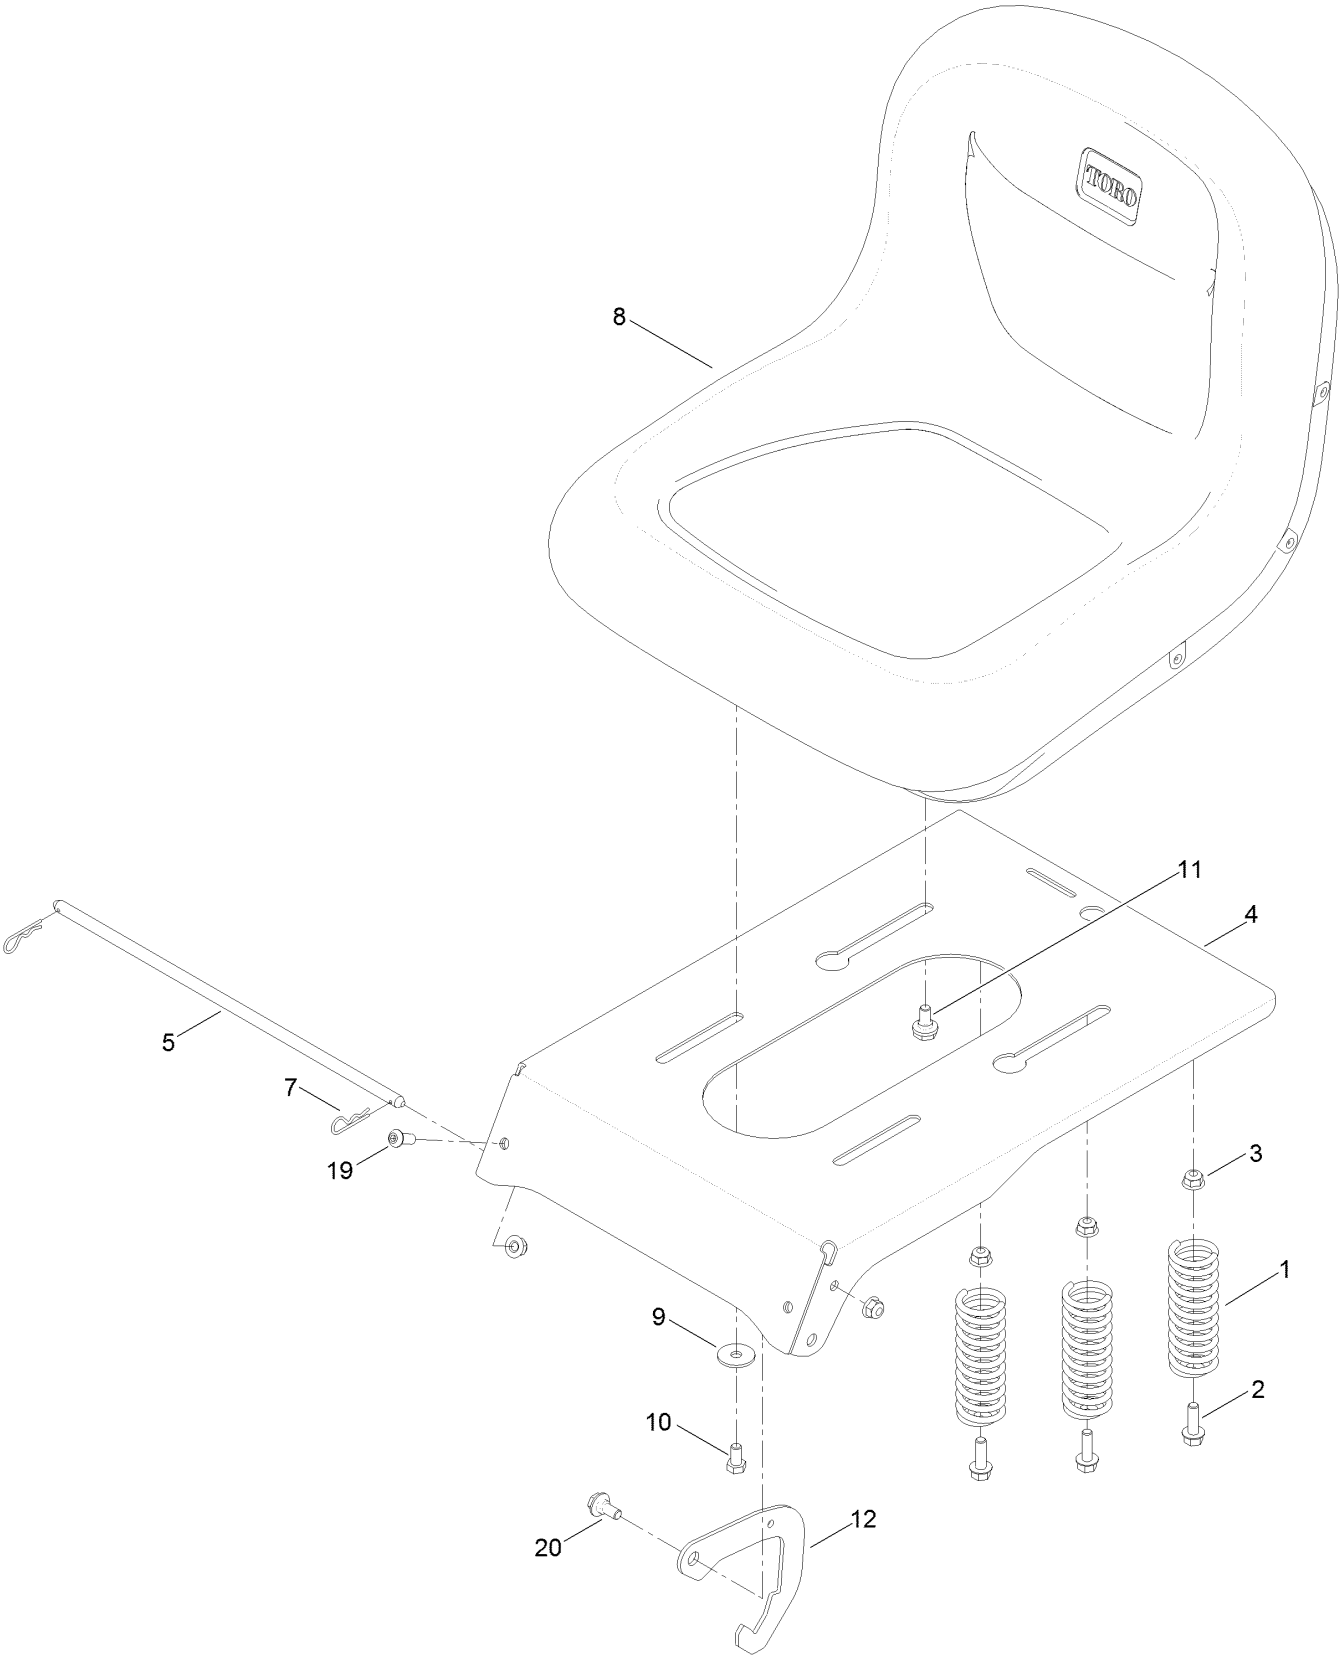

## Seat Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|--------------------|
| 1           | 92-7054            | 3           | Spring-Compression | 9           | 5-4460             | 2           | Washer-Pivot       |
| 2           | 3234-29            | 3           | Screw-HHF          | 10          | 322-2              | 2           | Screw-HH           |
| 3           | 104-8300           | 6           | Nut-Flange, NI     | 11          | 37-8771            | 2           | Bolt-Shoulder      |
| 4           | 131-4037-01        | 1           | Pan-Seat           | 12          | 132-9353           | 1           | Latch-Seat         |
| 5           | 119-3433           | 1           | Rod-Pivot, Narrow  | 19          | 3274-55            | 2           | Screw-HSBH         |
| 7           | 3290-250           | 2           | Pin-Cotter         | 20          | 19-1470            | 1           | Screw-Shoulder     |
| 8           | 119-8828           | 1           | Seat-15 Inch       |             |                    |             |                    |


# Motion Control Assembly

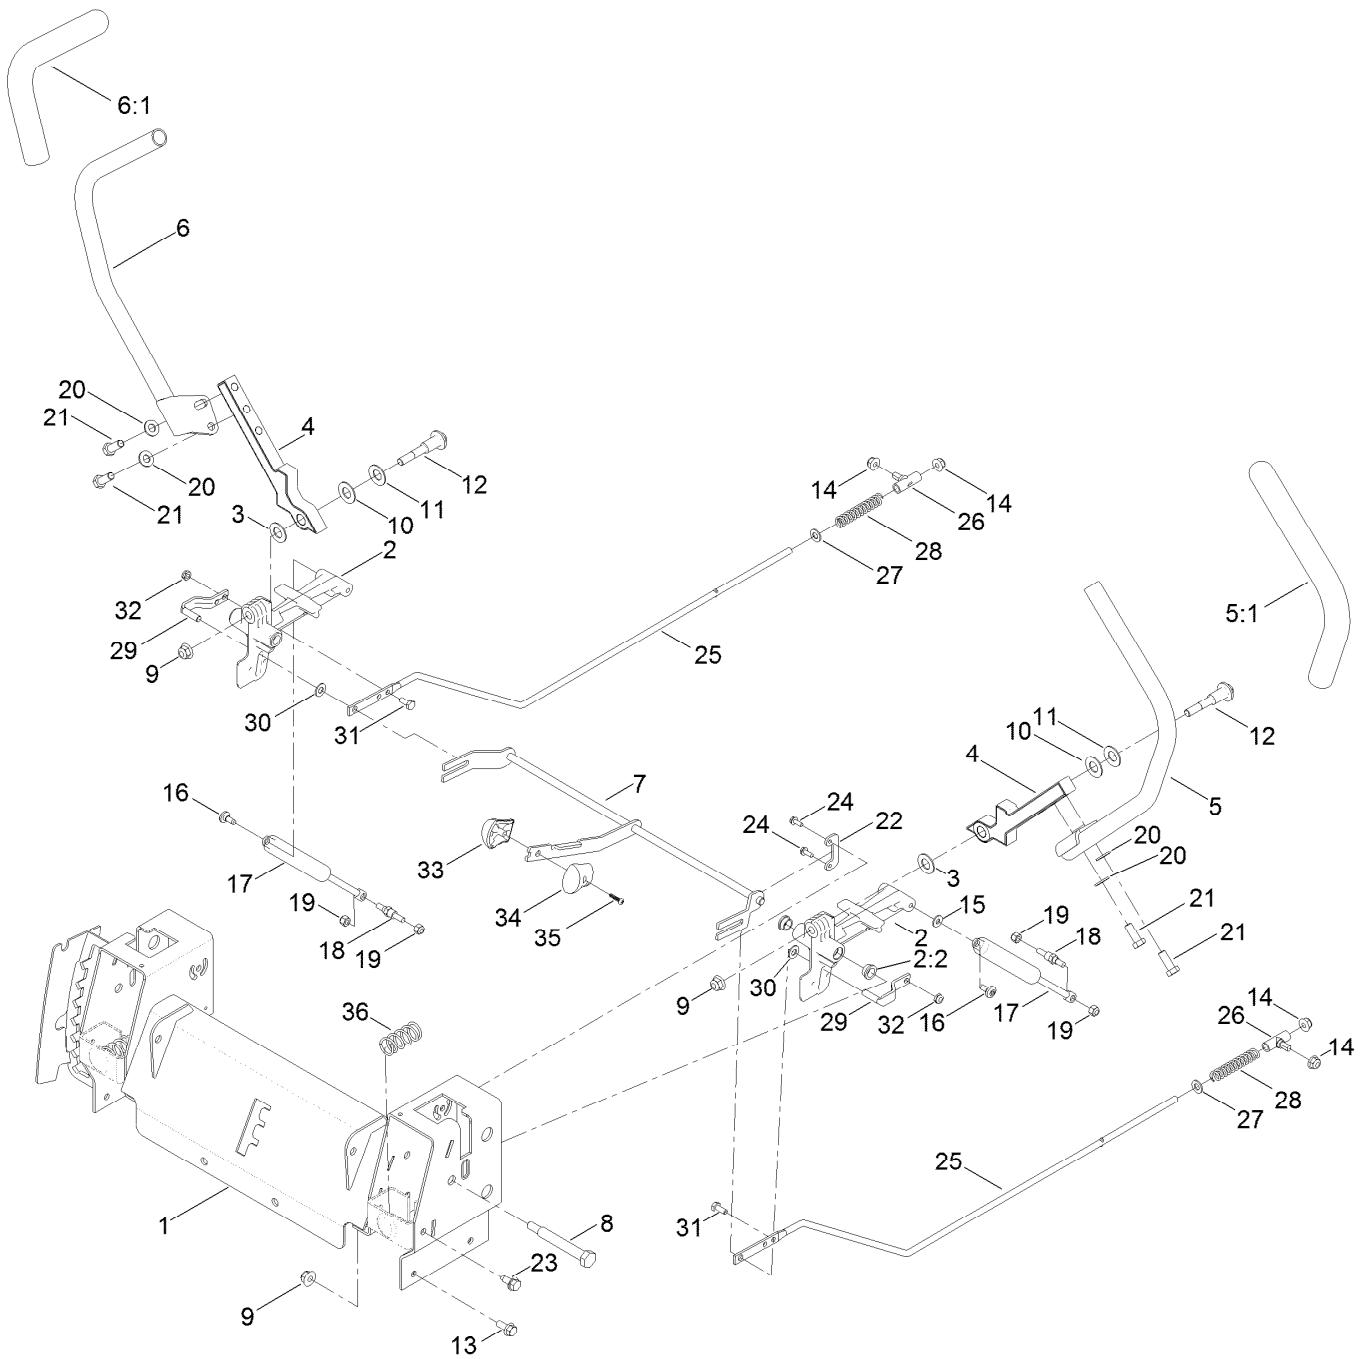

## Motion Control Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|------------------------|
| 1           | 136-4156-03        | 1           | Control Box ASM    | 18          | 110-6810           | 2           | Stud-Damper            |
| 2           | 119-3470           | 2           | Actuator Arm ASM   | 19          | 3296-42            | 4           | Nut-Lock, NI           |
| 2:2         | 256-156            | 2           | Bushing-Flange     | 20          | 3256-24            | 4           | Washer-Flat            |
| 3           | 120-2273           | 2           | Washer-Nylon       | 21          | 323-6              | 4           | Screw-HH               |
| 4           | 115-5098-05        | 2           | Lever-Control      | 22          | 117-5385           | 2           | Retainer               |
| 5           | 121-0730           | 1           | Handle-Control, LH | 23          | 32144-70           | 4           | Screw-HWHTF            |
| 5:1         | 121-0726           | 1           | Grip               | 24          | 32144-1            | 4           | Screw-Taptite          |
| 6           | 121-0731           | 1           | Handle-Control, RH | 25          | 117-5388           | 2           | Rod-Hydro              |
| 6:1         | 121-0726           | 1           | Grip               | 26          | 119-8842           | 2           | Mount-Rod, Hydro       |
| 7           | 131-1094           | 1           | Speed Control ASM  | 27          | 3256-23            | 2           | Washer-Flat            |
| 8           | 115-5099           | 2           | Bolt-Pivot         | 28          | 1-603807           | 2           | Spring-Return, Neutral |
| 9           | 104-8301           | 4           | Nut-Flange, NI     | 29          | 119-3303           | 2           | Pin-Rod, Hydro         |
| 10          | 117-1240           | 2           | Washer             | 30          | 93-6079            | 2           | Spacer-Nylon           |
| 11          | 119-8925           | 2           | Washer-Belleville  | 31          | 321-3              | 2           | Screw-HH               |
| 12          | 117-1198           | 2           | Bolt-Pivot         | 32          | 3296-56            | 2           | Nut-Lock, NI           |
| 13          | 3234-47            | 6           | Screw-HHF          | 33          | 119-8935           | 1           | Knob-RH                |
| 14          | 104-8300           | 10          | Nut-Flange, NI     | 34          | 119-8936           | 1           | Knob-LH                |
| 15          | 119-8952           | 2           | Washer             | 35          | 94-4496            | 1           | Screw-PPH              |
| 16          | 120-7950           | 2           | Screw-Shoulder     | 36          | 119-8876           | 2           | Spring-Return          |
| 17          | 131-4132           | 2           | Damper             |             |                    |             |                        |


# Engine and Muffler Assembly

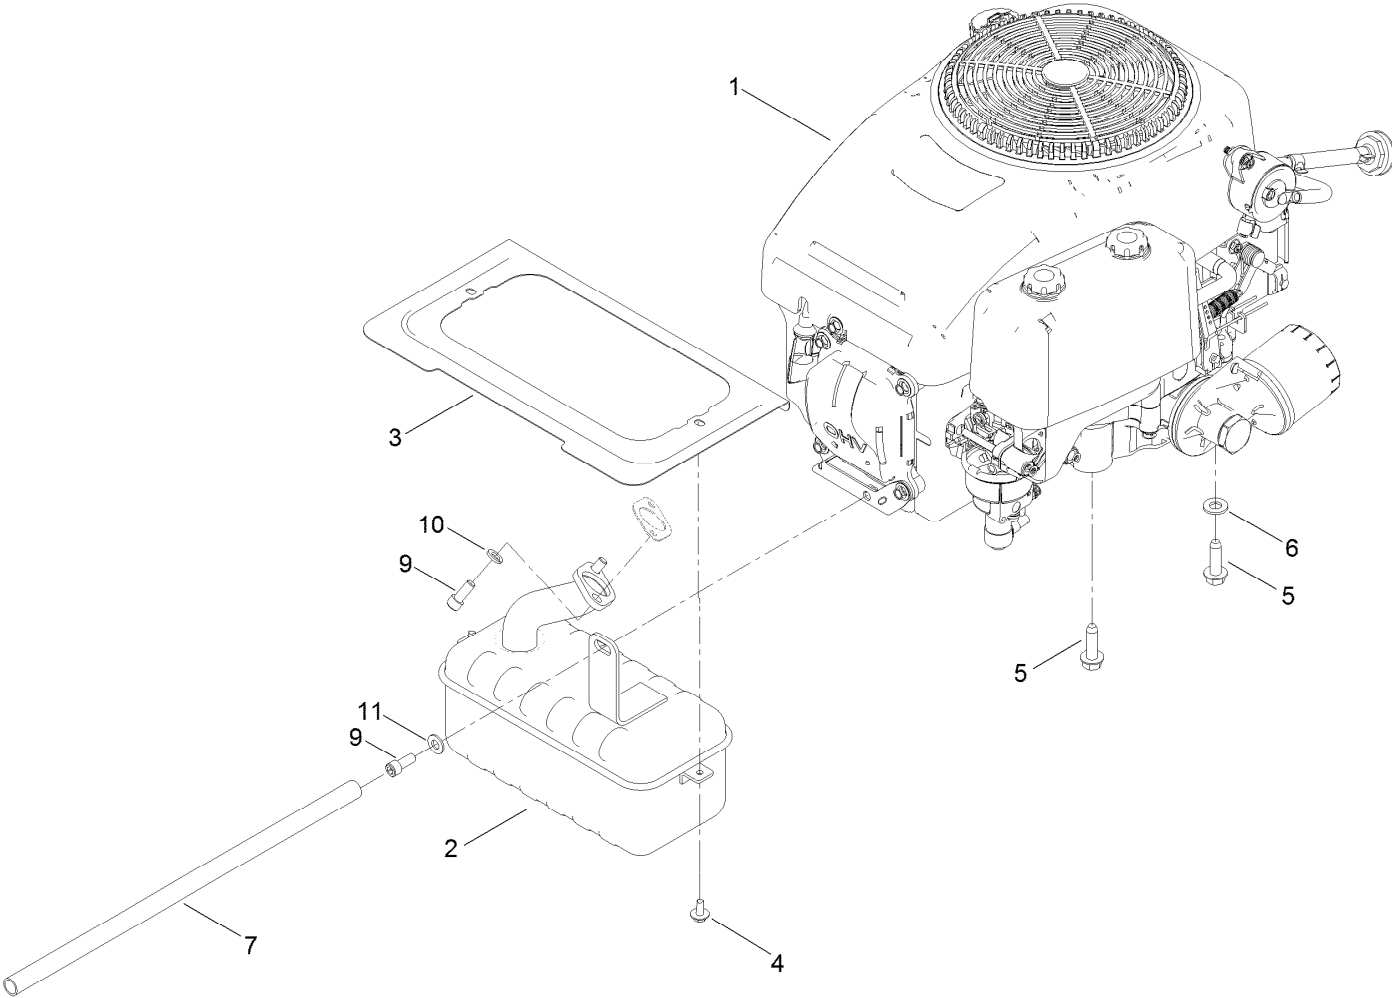

## Engine and Muffler Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|--------------------|
| 1           | 127-9358           | 1           | Engine-1P92F-1     | 6           | 3256-24            | 3           | Washer-Flat        |
| 2           | 130-0691           | 1           | Muffler            | 7           | 106-7022           | 1           | Tube-Drain, Oil    |
| 3           | 131-1071-03        | 1           | Shield-Heat        | 9           | 3274-10            | 3           | Screw-HSH          |
| 4           | 46-8560            | 2           | Screw-HHFTF        | 10          | 3253-4             | 2           | Washer-Lock        |
| 5           | 32144-109          | 4           | Screw-Taptite      | 11          | 3256-23            | 1           | Washer-Flat        |

# Fuel System Assembly

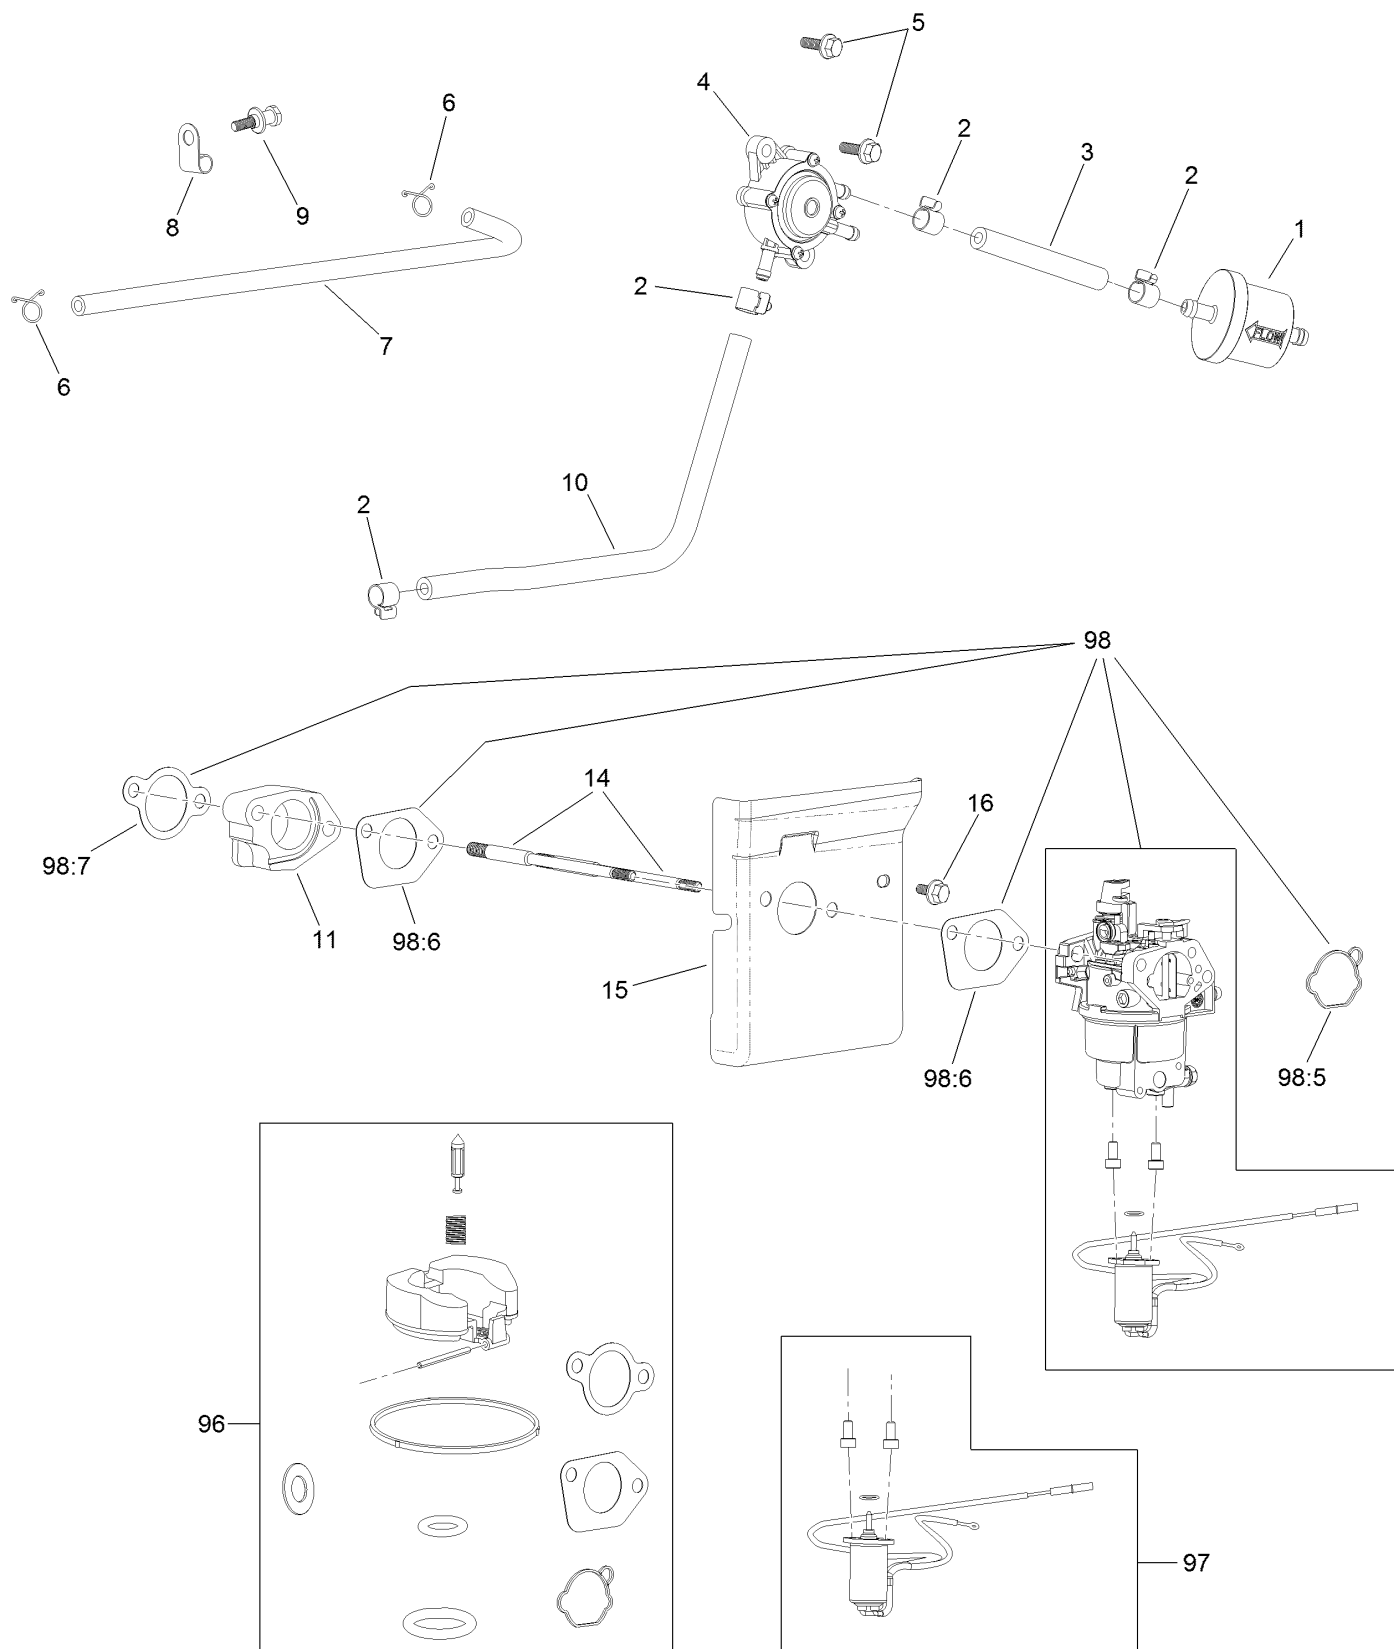


## Fuel System Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>           |
|-------------|--------------------|-------------|----------------------|-------------|--------------------|-------------|------------------------------|
| 1           | 133-1563           | 1           | Filter-Fuel          | 14          | 120-4202           | 2           | Stud-Mount, Carburetor       |
| 2           | 120-4251           | 4           | Clamp-Fuel Line      | 15          | 120-4248           | 1           | Shield-Heat                  |
| 3           | 120-4371           | 1           | Line-Fuel            | 16          | 120-4216           | 1           | Screw-HHF                    |
| 4           | 120-4353           | 1           | Pump-Pulse, Fuel     | 96          | 127-9194           | 1           | Carb Repair Kit With Gaskets |
| 5           | 120-4232           | 2           | Screw-HHF            | 97          | 127-9190           | 1           | Solenoid Kit                 |
| 6           | 121-0114           | 2           | Clamp-Hose           | 98          | 127-9183           | 1           | Carburetor Kit               |
| 7           | 120-4372           | 1           | Line-Pulse           | 98:5        | 127-9185           | 1           | Gasket-Carburetor            |
| 8           | 120-4287           | 1           | Clamp-J              | 98:6        | 120-4247           | 2           | Gasket-Carburetor            |
| 9           | 120-4217           | 1           | Screw-Shoulder, HH   | 98:7        | 120-4250           | 1           | Gasket-Carburetor            |
| 10          | 120-4370           | 1           | Line-Fuel            | 99          | 127-9362           | 1           | High Altitude Kit (1P92)●    |
| 11          | 120-4249           | 1           | Insulator-Carburetor |             |                    |             |                              |

● Not illustrated

# Air Intake and Filtration Assembly

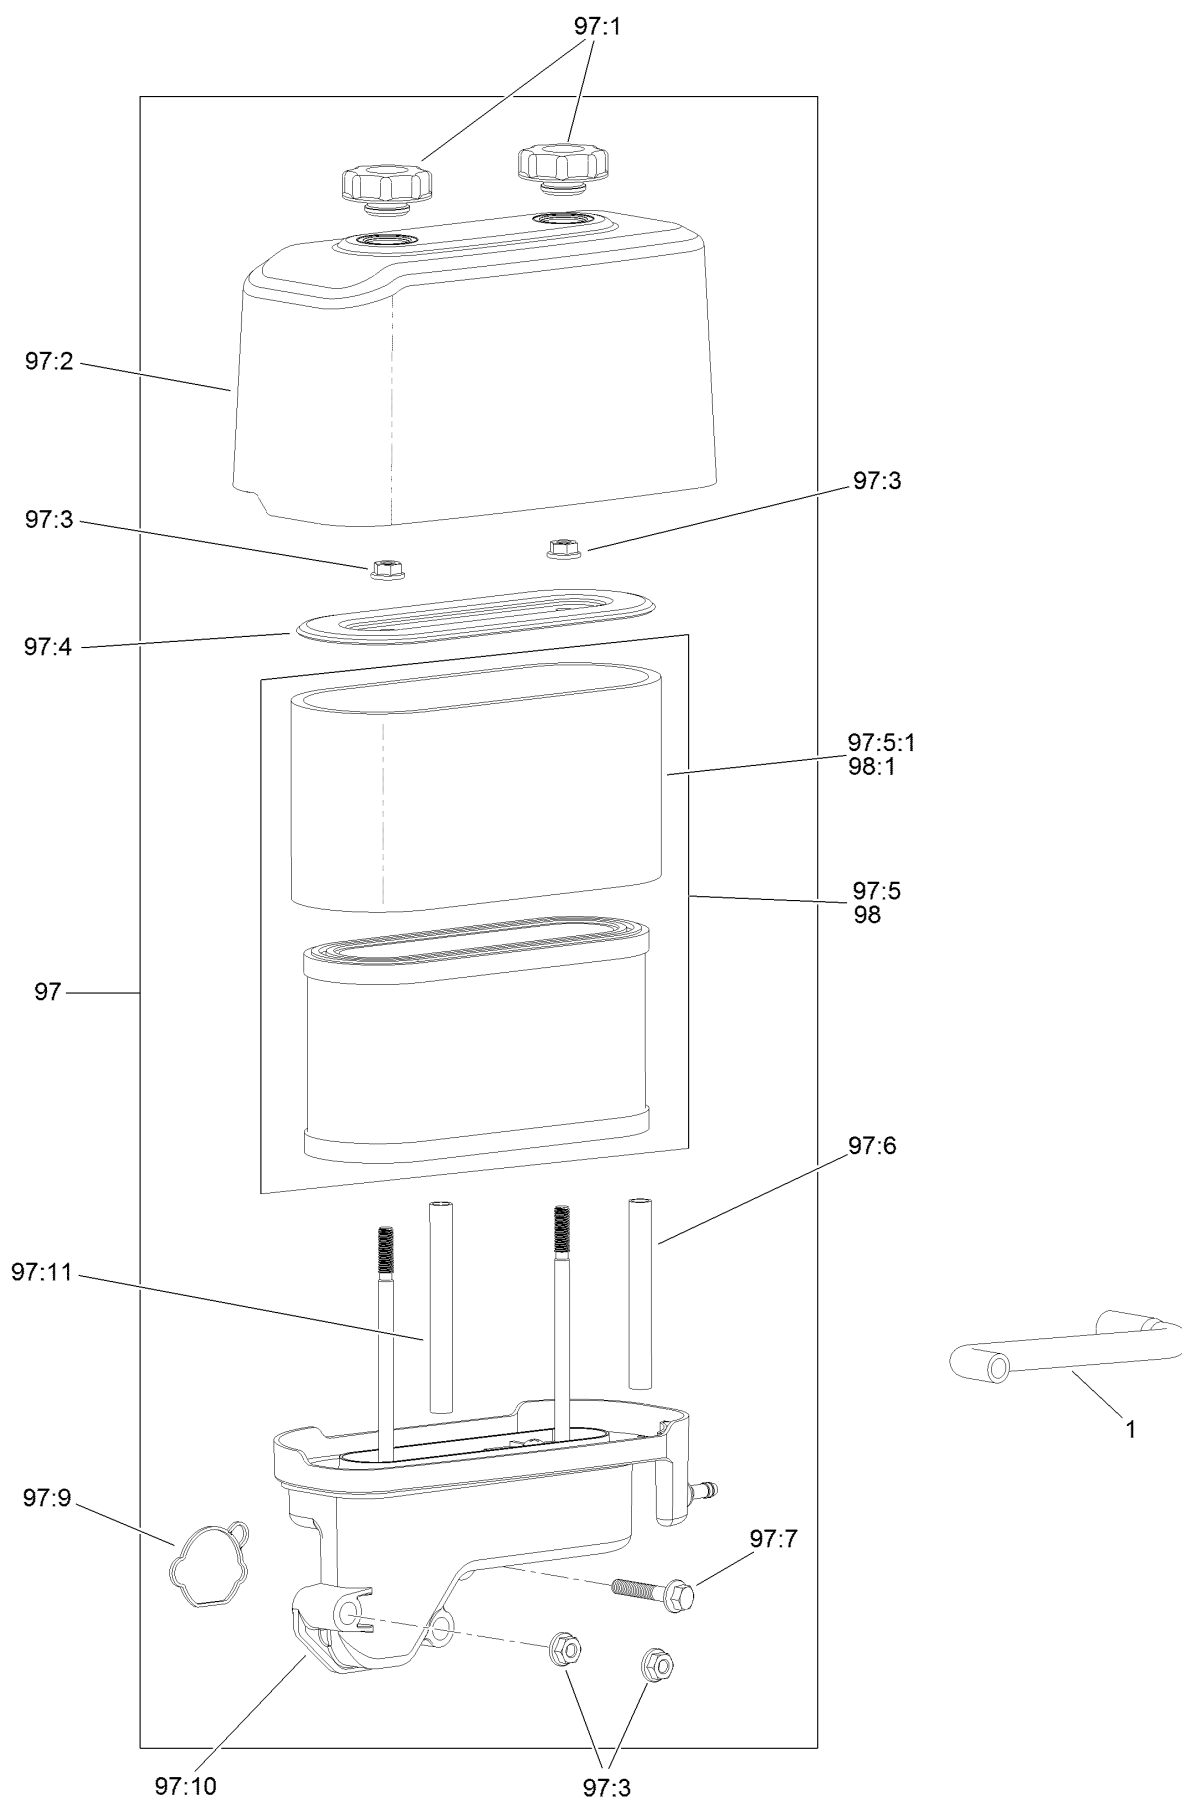


## Air Intake and Filtration Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  |
|-------------|--------------------|-------------|---------------------|
| 1           | 120-4255           | 1           | Tube-Breather       |
| 97          | 127-9186           | 1           | Air Cleaner Kit     |
| 97:1        | 120-4312           | 2           | Nut-Speed           |
| 97:2        | 120-4311           | 1           | Cover-Filter, Air   |
| 97:3        | 120-4236           | 4           | Nut-Flange          |
| 97:4        | 120-4310           | 1           | Retainer-Air Filter |
| 97:5        | 127-9193           | 1           | Air Filter Kit      |
| 97:5:1      | 120-4309           | 1           | Prefilter           |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 97:6        | 120-4333           | 1           | Spacer-Filter, Air |
| 97:7        | 120-4284           | 1           | Screw-HHF          |
| 97:9        | 127-9185           | 1           | Gasket-Carburetor  |
| 97:10       | 127-9191           | 1           | Base-Filter, Air   |
| 97:11       | 120-4334           | 1           | Spacer-Filter, Air |
| 98          | 127-9193           | 1           | Air Filter Kit     |
| 98:1        | 120-4309           | 1           | Prefilter          |


# Ignition and Electrical Assembly

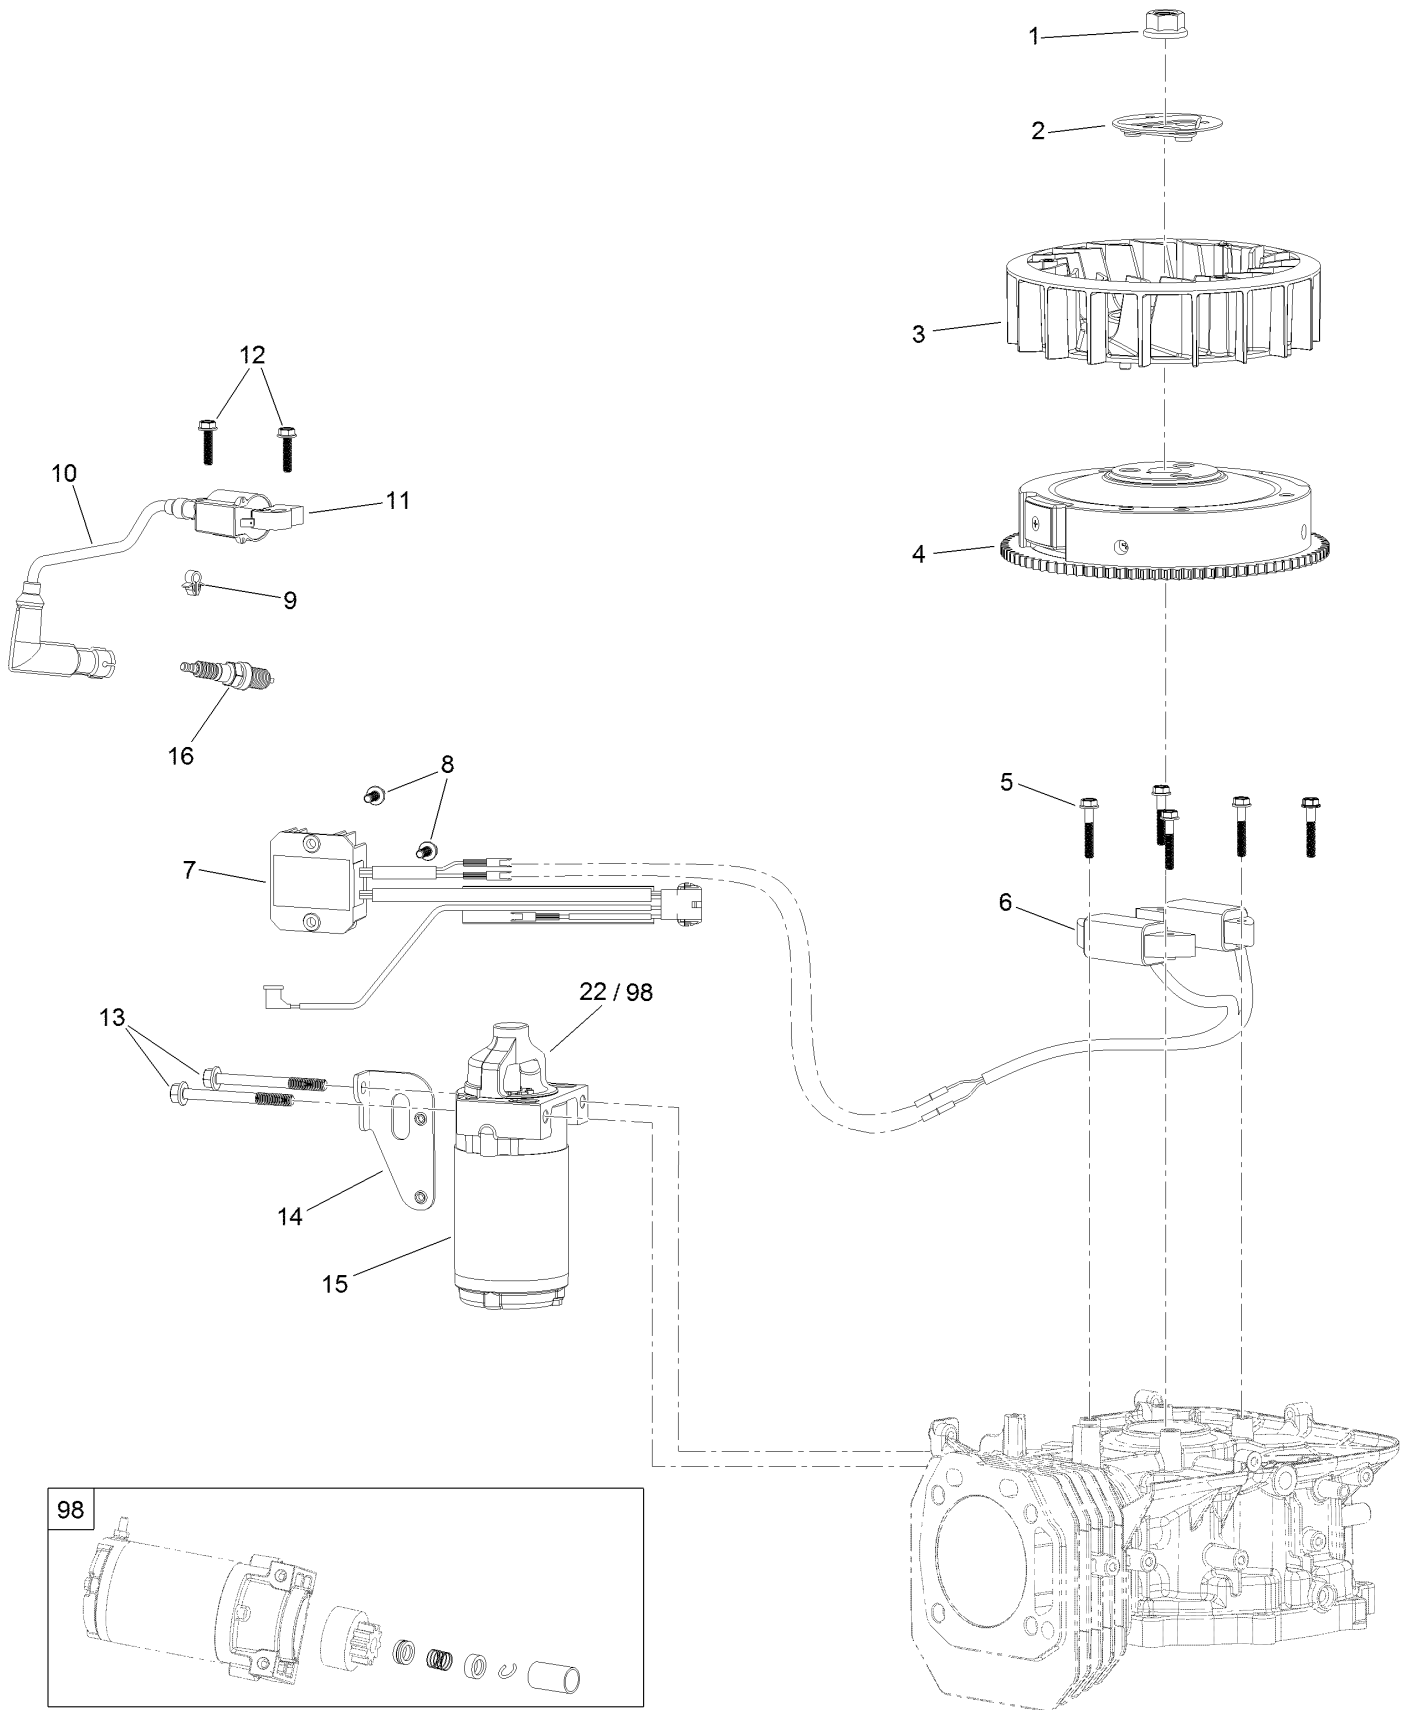

## Ignition and Electrical Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|--------------------|
| 1           | 120-4213           | 1           | Nut-Flange         | 10          | 120-4226           | 1           | Boot-Plug, Spark   |
| 2           | 120-4212           | 1           | Pulley-Starter     | 11          | 127-9177           | 1           | Ignition Coil ASM  |
| 3           | 120-4211           | 1           | Fan-Cooling        | 12          | 120-4225           | 2           | Screw-HHF          |
| 4           | 120-4399           | 1           | Flywheel           | 13          | 120-4231           | 2           | Screw-HHF          |
| 5           | 120-4223           | 4           | Screw-HHF          | 14          | 120-4230           | 1           | Bracket-Starter    |
| 6           | 127-9176           | 1           | Alternator         | 15          | 133-9832           | 1           | Motor-Starter      |
| 7           | 127-9178           | 1           | Voltage Regulator  | 16          | 77-7330            | 1           | Plug-Spark         |
| 8           | 120-4216           | 3           | Screw-HHF          | 22          | 133-1562           | 1           | Pinion-Starter     |
| 9           | 120-4316           | 1           | Clamp-Wire         | 98          | 120-4392           | 1           | Starter Repair Kit |


# Crankcase Assembly

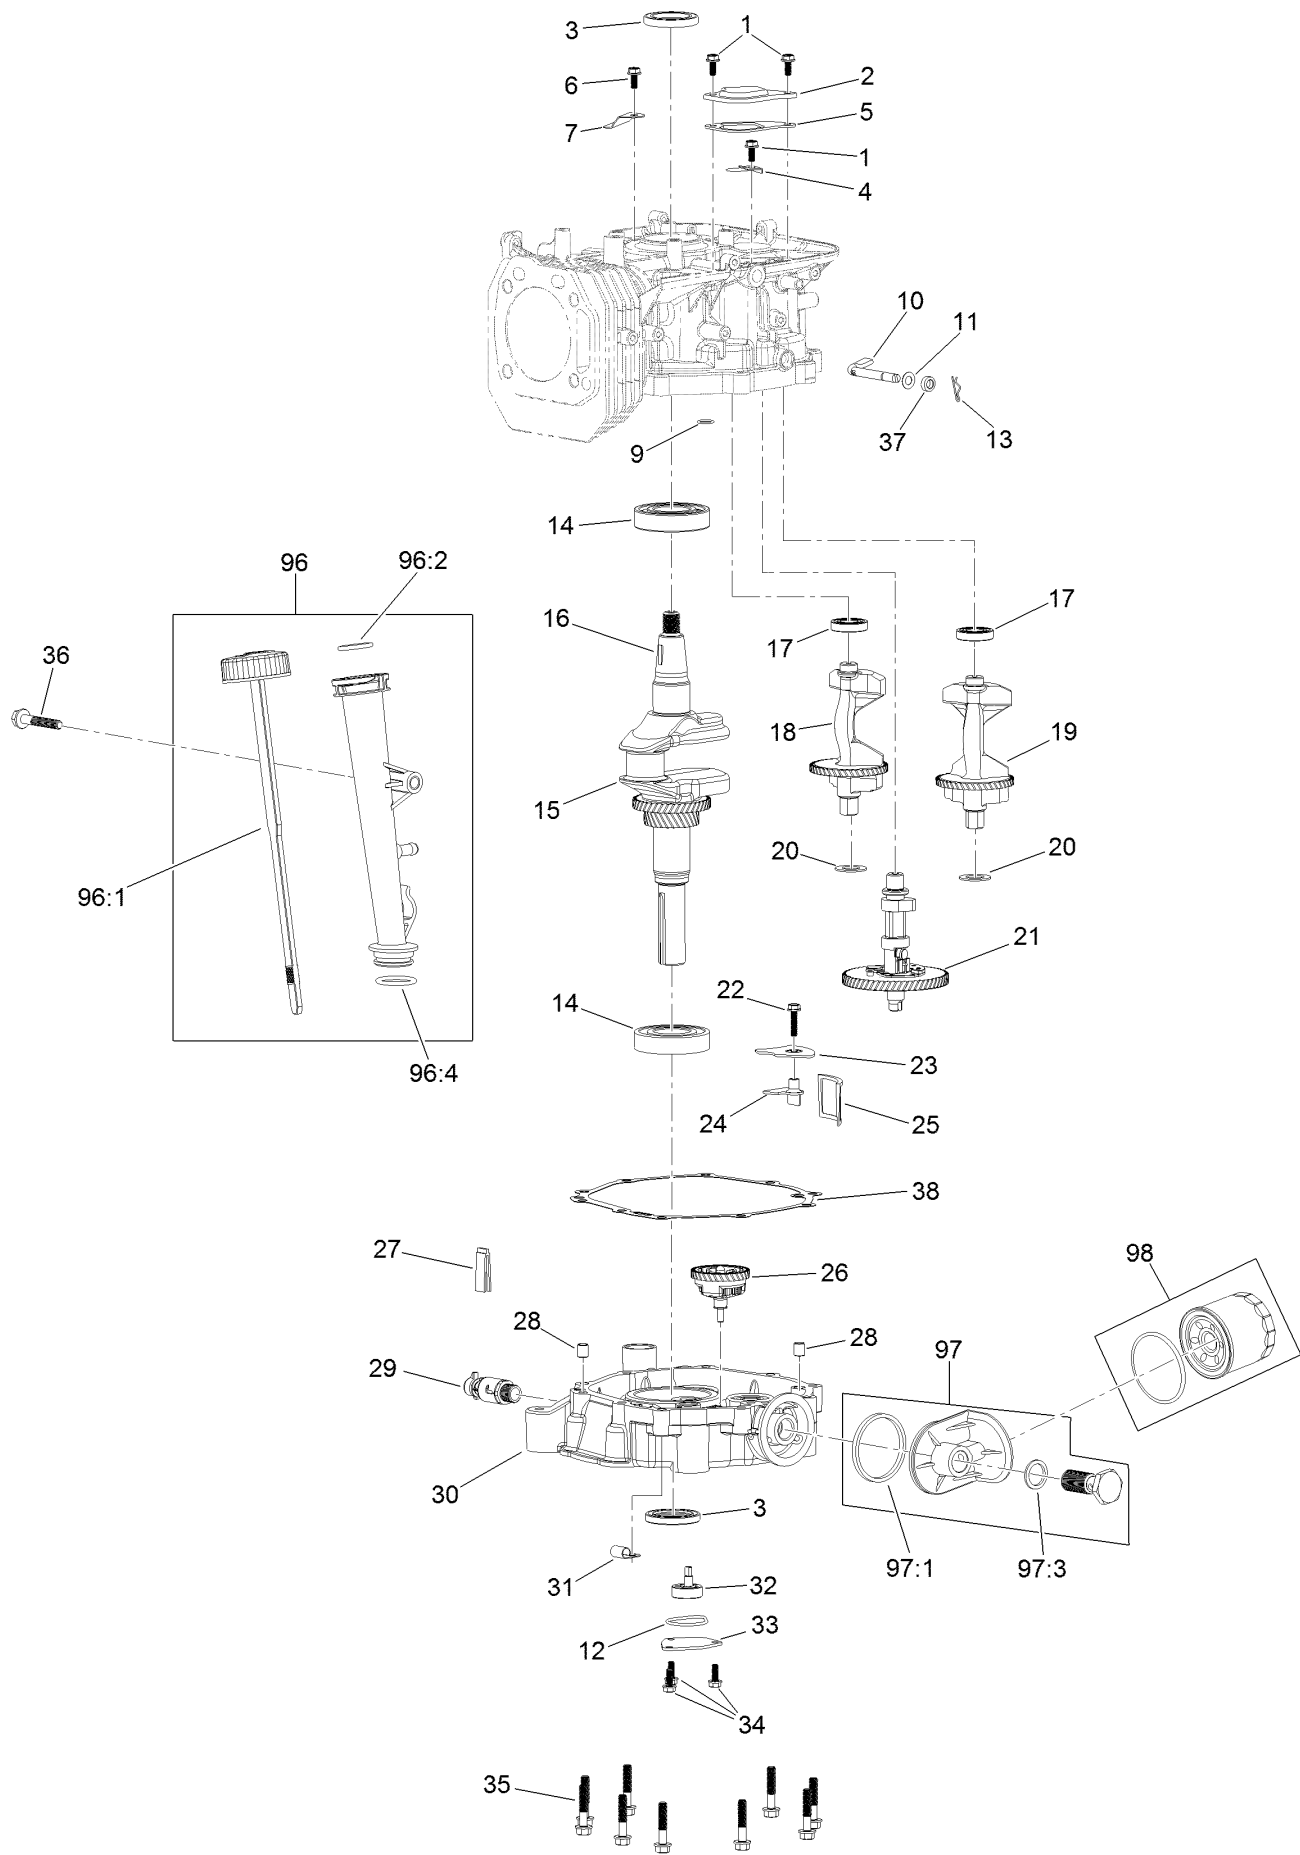

## Crankcase Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    |
|-------------|--------------------|-------------|---------------------|-------------|--------------------|-------------|-----------------------|
| 1           | 120-4216           | 3           | Screw-HHF           | 25          | 120-4341           | 1           | Strainer-Oil          |
| 2           | 120-4265           | 1           | Plate-Breather      | 26          | 120-4338           | 1           | Gear-Governor         |
| 3           | 120-4267           | 2           | Seal-Oil            | 27          | 120-4275           | 1           | Deflector-Oil, Rubber |
| 4           | 120-4263           | 1           | Valve-Reed          | 28          | 120-4274           | 2           | Pin-Dowel             |
| 5           | 120-4264           | 1           | Gasket-Breather     | 29          | 120-4321           | 1           | Valve-Drain, Oil      |
| 6           | 120-4234           | 1           | Screw-HHF           | 30          | 120-4327           | 1           | Cover-Crankcase       |
| 7           | 120-4268           | 1           | Retainer            | 31          | 127-9188           | 1           | Clamp-Hose            |
| 9           | 120-4262           | 1           | O-Ring              | 32          | 120-4344           | 1           | Oil Pump ASM          |
| 10          | 120-4382           | 1           | Shaft-Governor      | 33          | 120-4270           | 1           | Cover-Pump, Oil       |
| 11          | 120-4258           | 1           | Washer-Plain        | 34          | 120-4232           | 3           | Screw-HHF             |
| 12          | 120-4343           | 1           | Seal-Pump, Oil      | 35          | 120-4273           | 10          | Screw-HHF             |
| 13          | 120-4256           | 1           | Pin-Hair            | 36          | 120-4284           | 1           | Screw-HHF             |
| 14          | 120-4261           | 2           | Bearing-Ball        | 37          | 120-4257           | 1           | Seal-Oil              |
| 15          | 120-4293           | 1           | Crankshaft          | 38          | 120-4260           | 1           | Gasket-Crankcase      |
| 16          | 120-4320           | 1           | Key-Woodruff        | 96          | 120-4355           | 1           | Dipstick And Tube Kit |
| 17          | 120-4266           | 2           | Bearing-Ball        | 96:1        | 120-4350           | 1           | Dipstick ASM          |
| 18          | 127-9179           | 1           | Shaft-Balance, R    | 96:2        | 120-4348           | 1           | O-Ring                |
| 19          | 127-9180           | 1           | Shaft-Balance, L    | 96:4        | 120-4282           | 1           | O-Ring                |
| 20          | 120-4295           | 2           | Washer              | 97          | 120-4363           | 1           | Oil Adaptor Kit       |
| 21          | 120-4297           | 1           | Camshaft            | 97:1        | 120-4362           | 1           | Seal-Adaptor, Oil     |
| 22          | 120-4225           | 1           | Screw-HHF           | 97:3        | 120-4360           | 1           | Washer-Filter, Oil    |
| 23          | 120-4342           | 1           | Cover-Strainer, Oil | 98          | 120-4276           | 1           | Filter-Oil            |
| 24          | 120-4279           | 1           | Plate-Baffle, Oil   |             |                    |             |                       |


# Governor Control Assembly

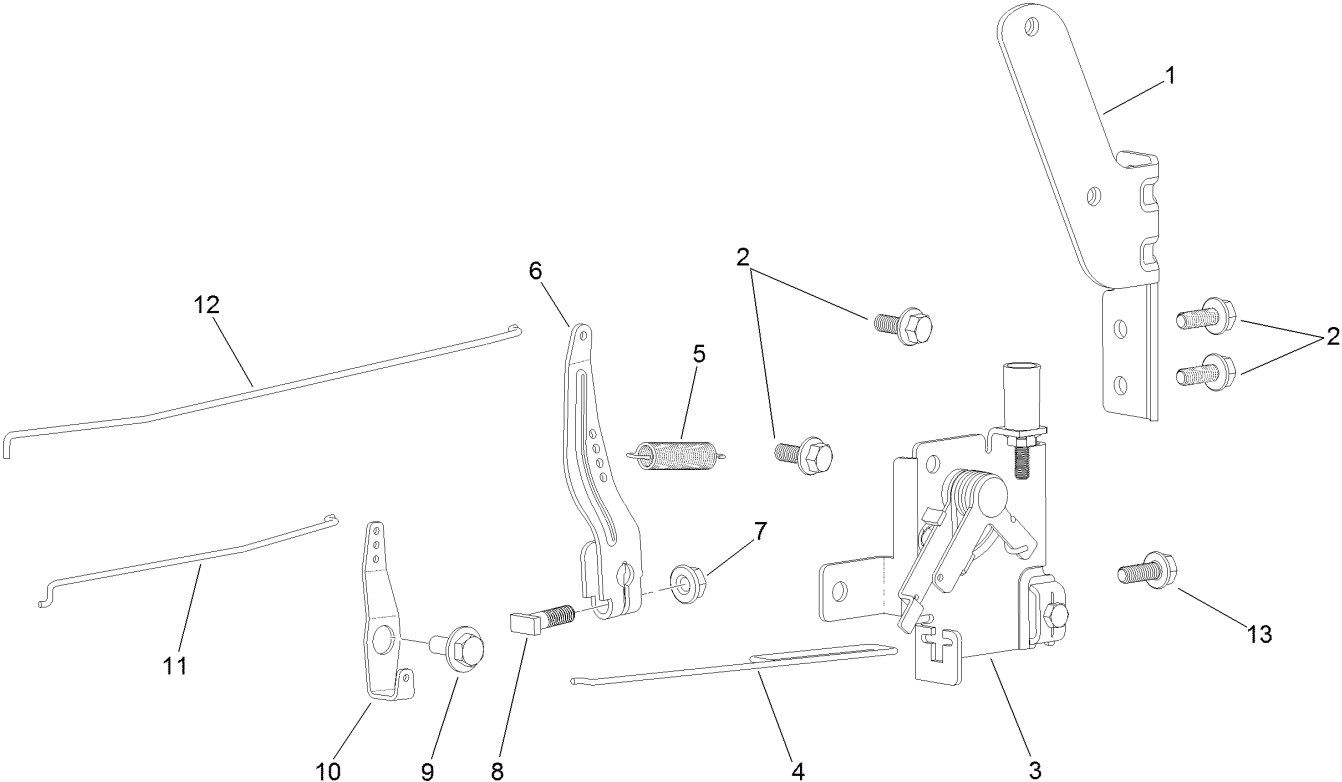

## Governor Control Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|---------------------|
| 1           | 120-4357           | 1           | Bracket-Pump, Fuel | 8           | 120-4238           | 1           | Bolt-Arm, Governor  |
| 2           | 120-4234           | 4           | Screw-HHF          | 9           | 120-4241           | 1           | Screw-Shoulder, HHF |
| 3           | 120-4358           | 1           | Control-Throttle   | 10          | 120-4242           | 1           | Bellcrank-Choke     |
| 4           | 120-4243           | 1           | Rod-Throttle       | 11          | 120-4240           | 1           | Rod-Choke           |
| 5           | 120-4337           | 1           | Spring-Governor    | 12          | 120-4239           | 1           | Rod-Governor        |
| 6           | 120-4237           | 1           | Arm-Governor       | 13          | 120-4232           | 1           | Screw-HHF           |
| 7           | 120-4236           | 1           | Nut-Flange         |             |                    |             |                     |


# Piston and Cylinder Head Assembly

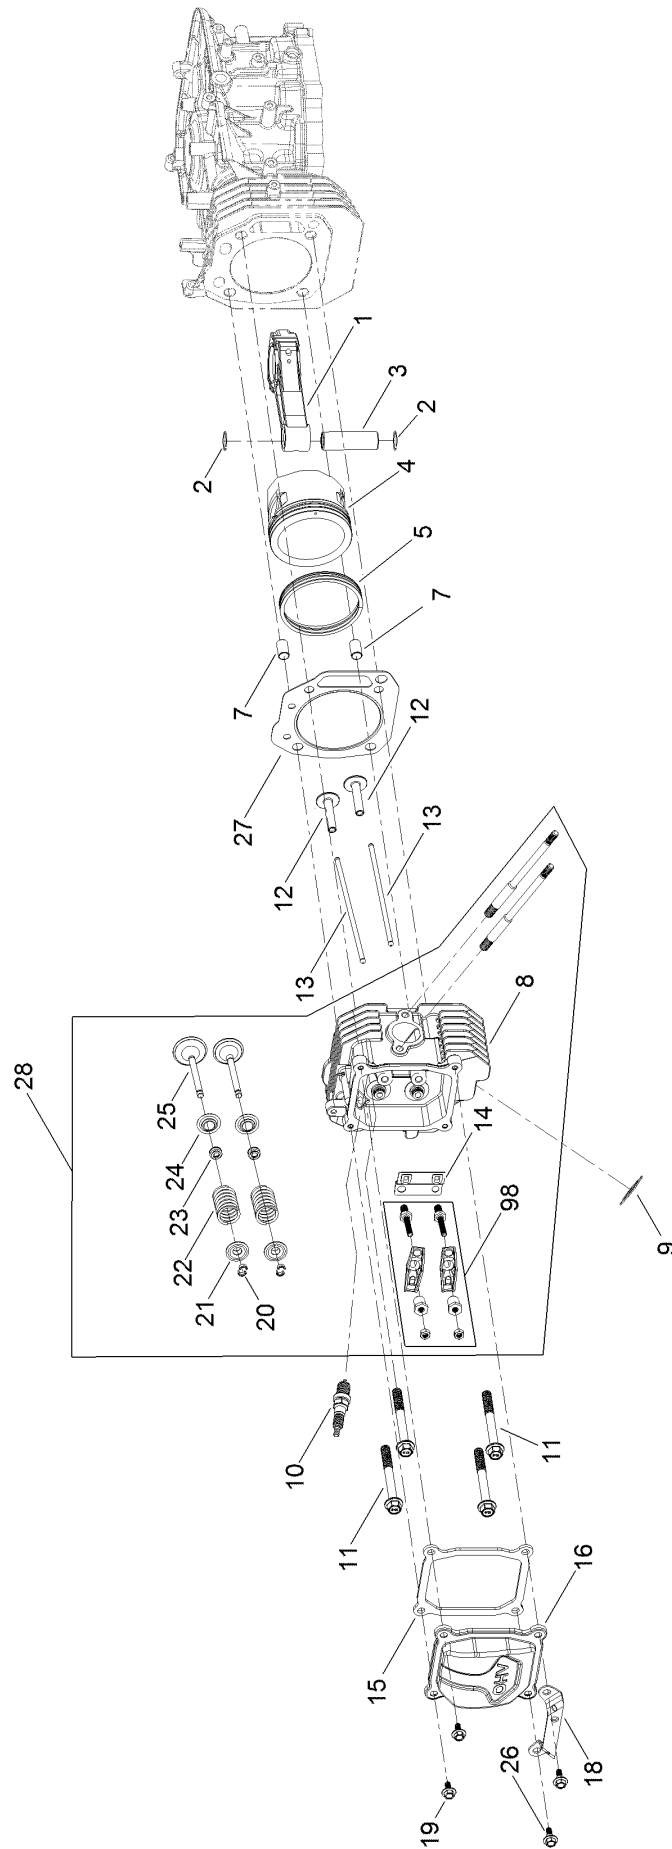

## Piston and Cylinder Head Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>         | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     |
|-------------|--------------------|-------------|----------------------------|-------------|--------------------|-------------|------------------------|
| 1           | 120-4292           | 1           | Connecting Rod ASM         | 16          | 120-4207           | 1           | Cover-Valve            |
| 2           | 120-4288           | 2           | Ring-Retaining, Piston Pin | 18          | 120-4345           | 1           | Bracket-Muffler        |
| 3           | 120-4291           | 1           | Pin-Piston                 | 19          | 120-4209           | 2           | Screw-Shoulder, HHF    |
| 4           | 120-4290           | 1           | Piston                     | 20          | 120-4307           | 4           | Keeper-Valve           |
| 5           | 120-4289           | 1           | Ring Set                   | 21          | 120-4306           | 2           | Retainer-Spring, Valve |
| 7           | 120-4200           | 2           | Pin-Dowel                  | 22          | 120-4305           | 2           | Spring-Valve           |
| 8           | 120-4203           | 1           | Head-Cylinder              | 23          | 120-4304           | 2           | Seal-Stem, Valve       |
| 9           | 120-4317           | 1           | Gasket-Exhaust             | 24          | 120-4303           | 2           | Seat-Spring, Valve     |
| 10          | 120-4204           | 1           | Plug-Spark                 | 25          | 120-4302           | 2           | Valve Set              |
| 11          | 120-4205           | 4           | Screw-HHF                  | 26          | 120-4210           | 2           | Screw-Shoulder, HHF    |
| 12          | 120-4298           | 2           | Lifter-Valve               | 27          | 120-4201           | 1           | Gasket-Cylinder        |
| 13          | 120-4340           | 2           | Rod-Push                   | 28          | 133-9845           | 1           | Complete Head ASM      |
| 14          | 120-4300           | 1           | Plate-Guide, Push Rod      | 98          | 120-4301           | 1           | Rocker Arm Kit         |
| 15          | 120-4206           | 1           | Gasket-Cover, Valve        |             |                    |             |                        |

# Blower Housing Assembly

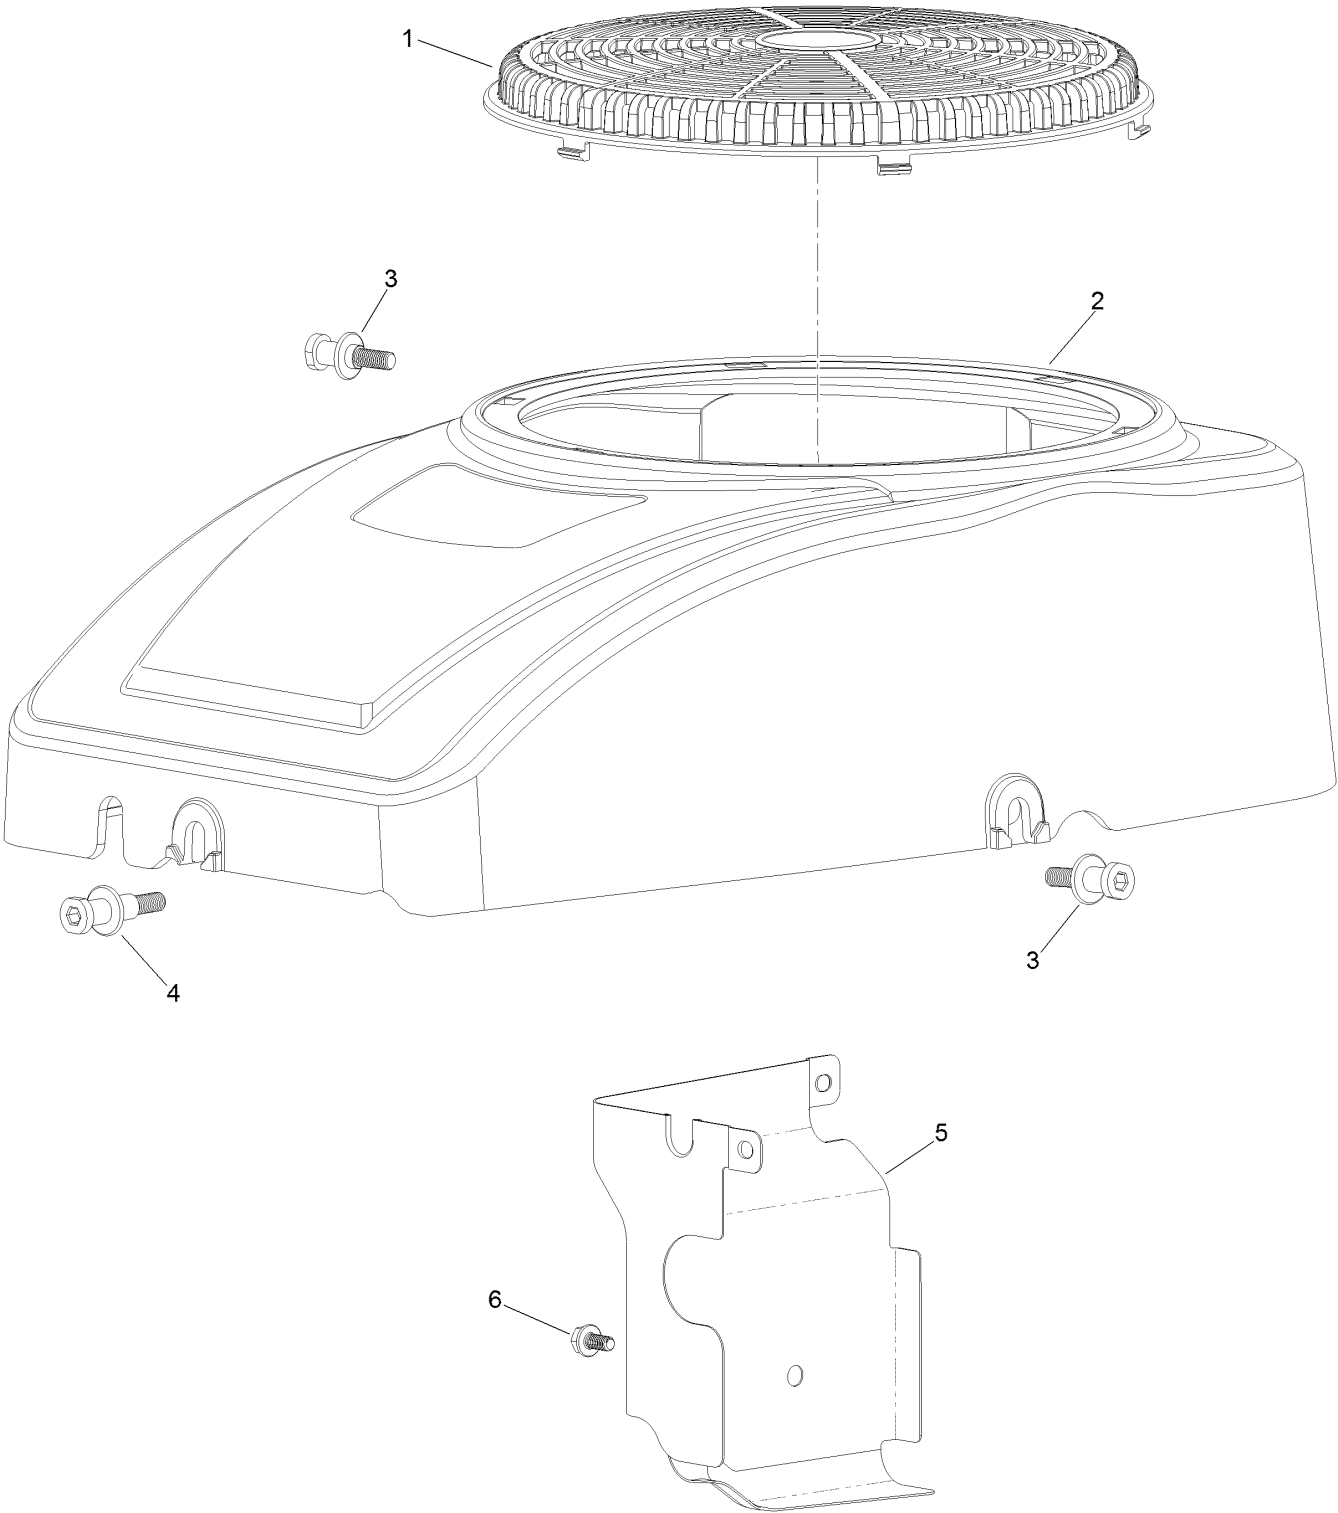


## Blower Housing Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 120-4219           | 1           | Screen-Stationary  |
| 2           | 120-4218           | 1           | Shroud-Fan         |
| 3           | 120-4217           | 2           | Screw-Shoulder, HH |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 4           | 120-4214           | 1           | Screw-Shoulder, HH |
| 5           | 120-4215           | 1           | Shield             |
| 6           | 120-4216           | 1           | Screw-HHF          |

# Gasket and Seal Kit Assembly

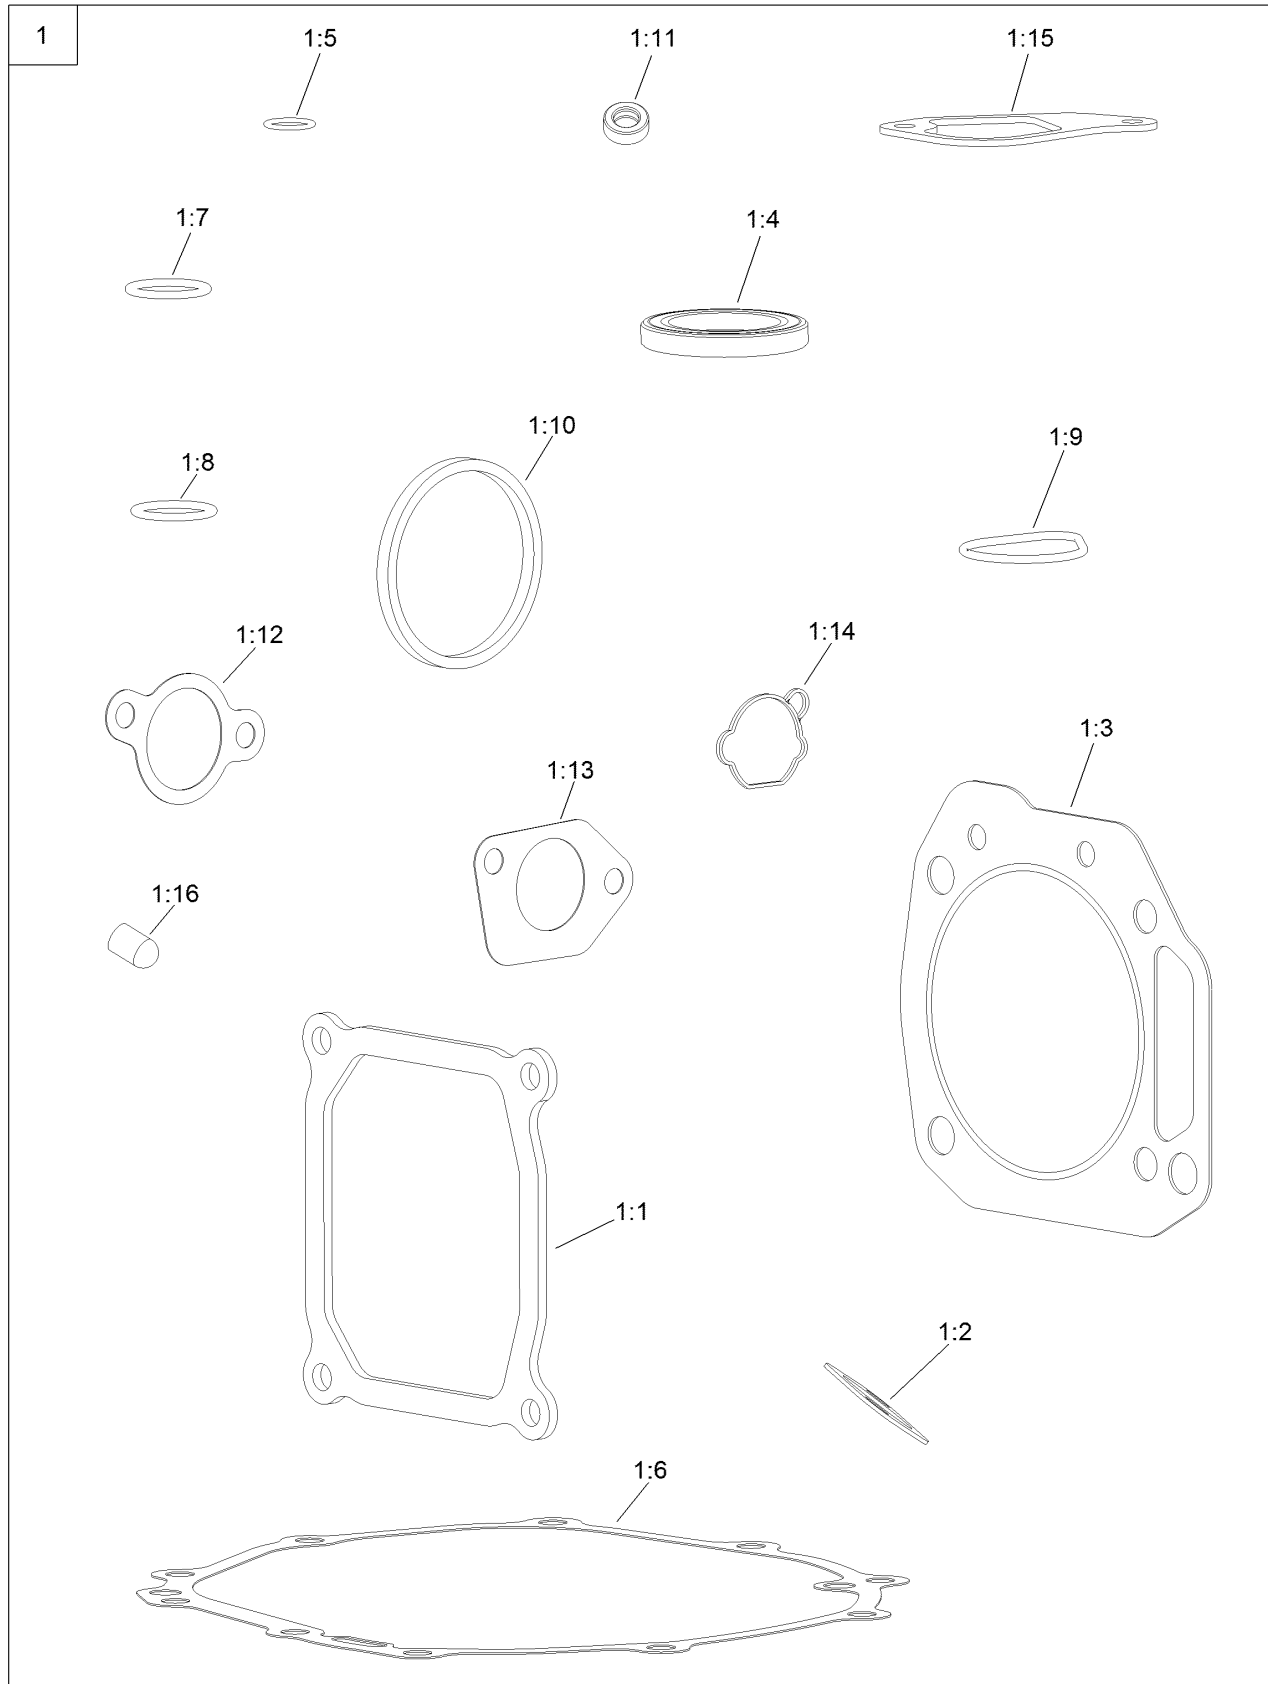


## Gasket and Seal Kit Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  |
|-------------|--------------------|-------------|---------------------|
| 1           | 127-9192           | 1           | Gasket And Seal Kit |
| 1:1         | 120-4206           | 1           | Gasket-Cover, Valve |
| 1:2         | 120-4317           | 1           | Gasket-Exhaust      |
| 1:3         | 120-4201           | 1           | Gasket-Cyclinder    |
| 1:4         | 120-4267           | 2           | Seal-Oil            |
| 1:5         | 120-4262           | 1           | O-Ring              |
| 1:6         | 120-4260           | 1           | Gasket-Crankcase    |
| 1:7         | 120-4348           | 1           | O-Ring              |
| 1:8         | 120-4282           | 1           | O-Ring              |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1:9         | 120-4343           | 1           | Seal-Pump, Oil     |
| 1:10        | 120-4362           | 1           | Seal-Adaptor, Oil  |
| 1:11        | 120-4257           | 1           | Seal-Oil           |
| 1:12        | 120-4250           | 1           | Gasket-Carburetor  |
| 1:13        | 120-4247           | 2           | Gasket-Carburetor  |
| 1:14        | 127-9185           | 1           | Gasket-Carburetor  |
| 1:15        | 120-4264           | 1           | Gasket-Breather    |
| 1:16        | 127-9189           | 1           | Cap-Seal           |


# Body Styling and Fuel Tank Assembly

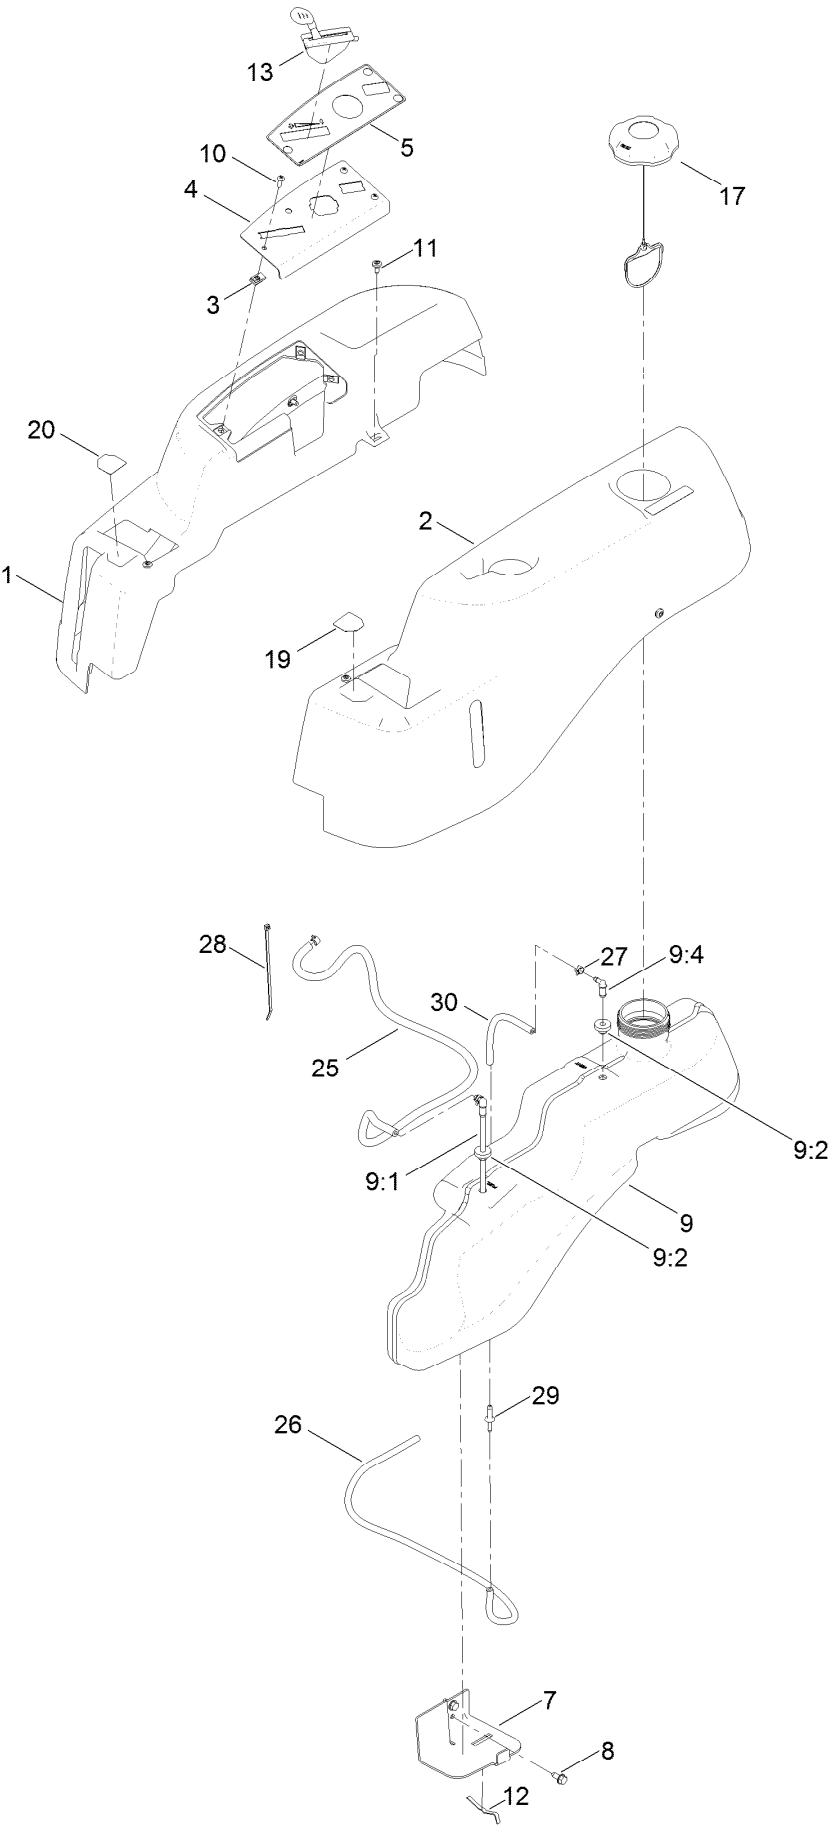

## Body Styling and Fuel Tank Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       |
|-------------|--------------------|-------------|-------------------------|-------------|--------------------|-------------|--------------------------|
| 1           | 119-3335           | 1           | Pod-RH                  | 11          | 120-7950           | 6           | Screw-Shoulder           |
| 2           | 119-3334           | 1           | Pod-LH                  | 12          | 609830             | 2           | Spring                   |
| 3           | 107069             | 3           | Clip                    | 13          | 121-0767           | 1           | Cable-Throttle And Choke |
| 4           | 119-3378-03        | 1           | Plate-Control           | 17          | 120-5461           | 1           | Cap-Fuel, Ratcheting     |
| 5           | 121-0771           | 1           | Decal-Panel, Control    | 19          | 119-8814           | 1           | Decal-Control Lever, LH  |
| 7           | 119-3476-03        | 1           | Support-Tank, Front     | 20          | 119-8815           | 1           | Decal-Control Lever, RH  |
| 8           | 32144-70           | 2           | Screw-HWHTF             | 25          | 109-0307           | 1           | Hose-Fuel                |
| 9           | 119-3324           | 1           | Fuel Tank ASM           | 26          | 110-3254           | 1           | Hose-Fuel                |
| 9:1         | 121-0793           | 1           | Connector-Elbow, 90 DEG | 27          | 2412-98            | 3           | Clamp-Hose               |
| 9:2         | 46-6560            | 2           | Bushing                 | 28          | 614249             | 3           | Tie-Cable                |
| 9:4         | 117-7400           | 1           | Fitting-Plastic         | 29          | 117-5399           | 1           | Adaptor-Orifice          |
| 10          | 3258-166           | 3           | Screw-PRH               | 30          | 110-1876           | 1           | Hose-Fuel                |

# Battery and Electrical Assembly

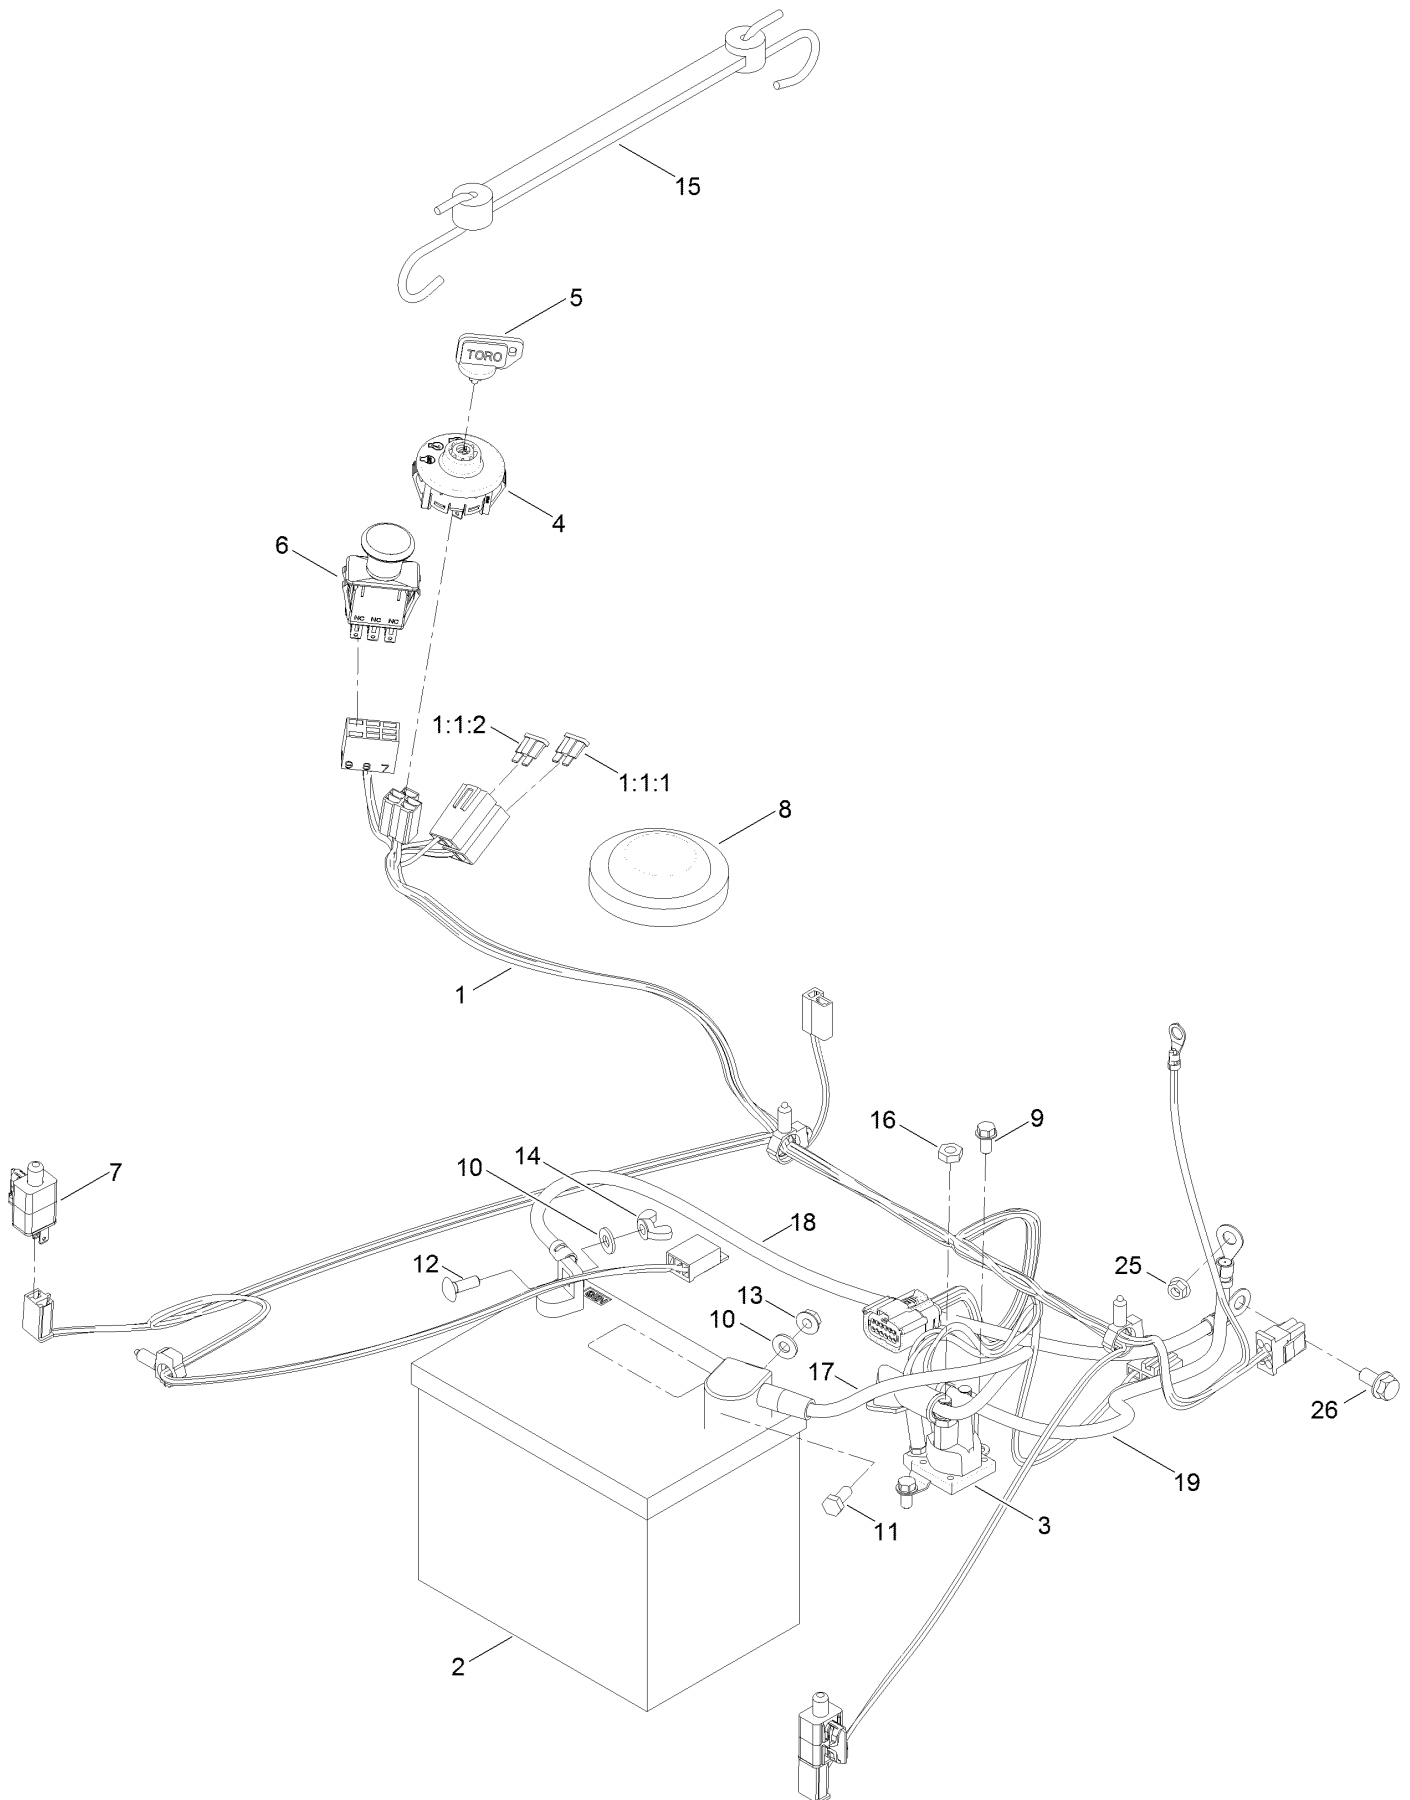


## Battery and Electrical Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 136-7482           | 1           | Harness-Wire       |
| 1:1:1       | 109103             | 1           | Fuse-Blade, 30 Amp |
| 1:1:2       | 109102             | 1           | Fuse-Blade, 25 Amp |
| 2           | 105-1692           | 1           | Battery-Dry        |
| 3           | 117-1197           | 1           | Solenoid           |
| 4           | 117-2221           | 1           | Switch-Ignition    |
| 5           | 63-8360            | 1           | Key-Ignition       |
| 6           | 103-5221           | 1           | Switch-PTO         |
| 7           | 110-6765           | 2           | Switch             |
| 8           | 100-3524           | 1           | Switch-Seat        |
| 9           | 32144-4            | 2           | Screw-HWH          |
| 10          | 3256-22            | 2           | Washer-Flat        |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      |
|-------------|--------------------|-------------|-------------------------|
| 11          | 321-3              | 1           | Screw-HH                |
| 12          | 3229-1             | 1           | Bolt-CARR               |
| 13          | 32128-33           | 1           | Nut-HF                  |
| 14          | 32103-22           | 1           | Nut-Wing                |
| 15          | 104-2466           | 1           | Holddown-Battery        |
| 16          | 3220-2             | 2           | Nut-Jam                 |
| 17          | 119-8897           | 1           | Cable-Battery, Red      |
| 18          | 121-0711           | 1           | Cable-Battery, Positive |
| 19          | 119-8899           | 1           | Cable-Battery, Black    |
| 25          | 33003-00           | 1           | Nut-HF                  |
| 26          | 3234-14            | 1           | Screw-HHF               |


# 32 Inch Deck Assembly

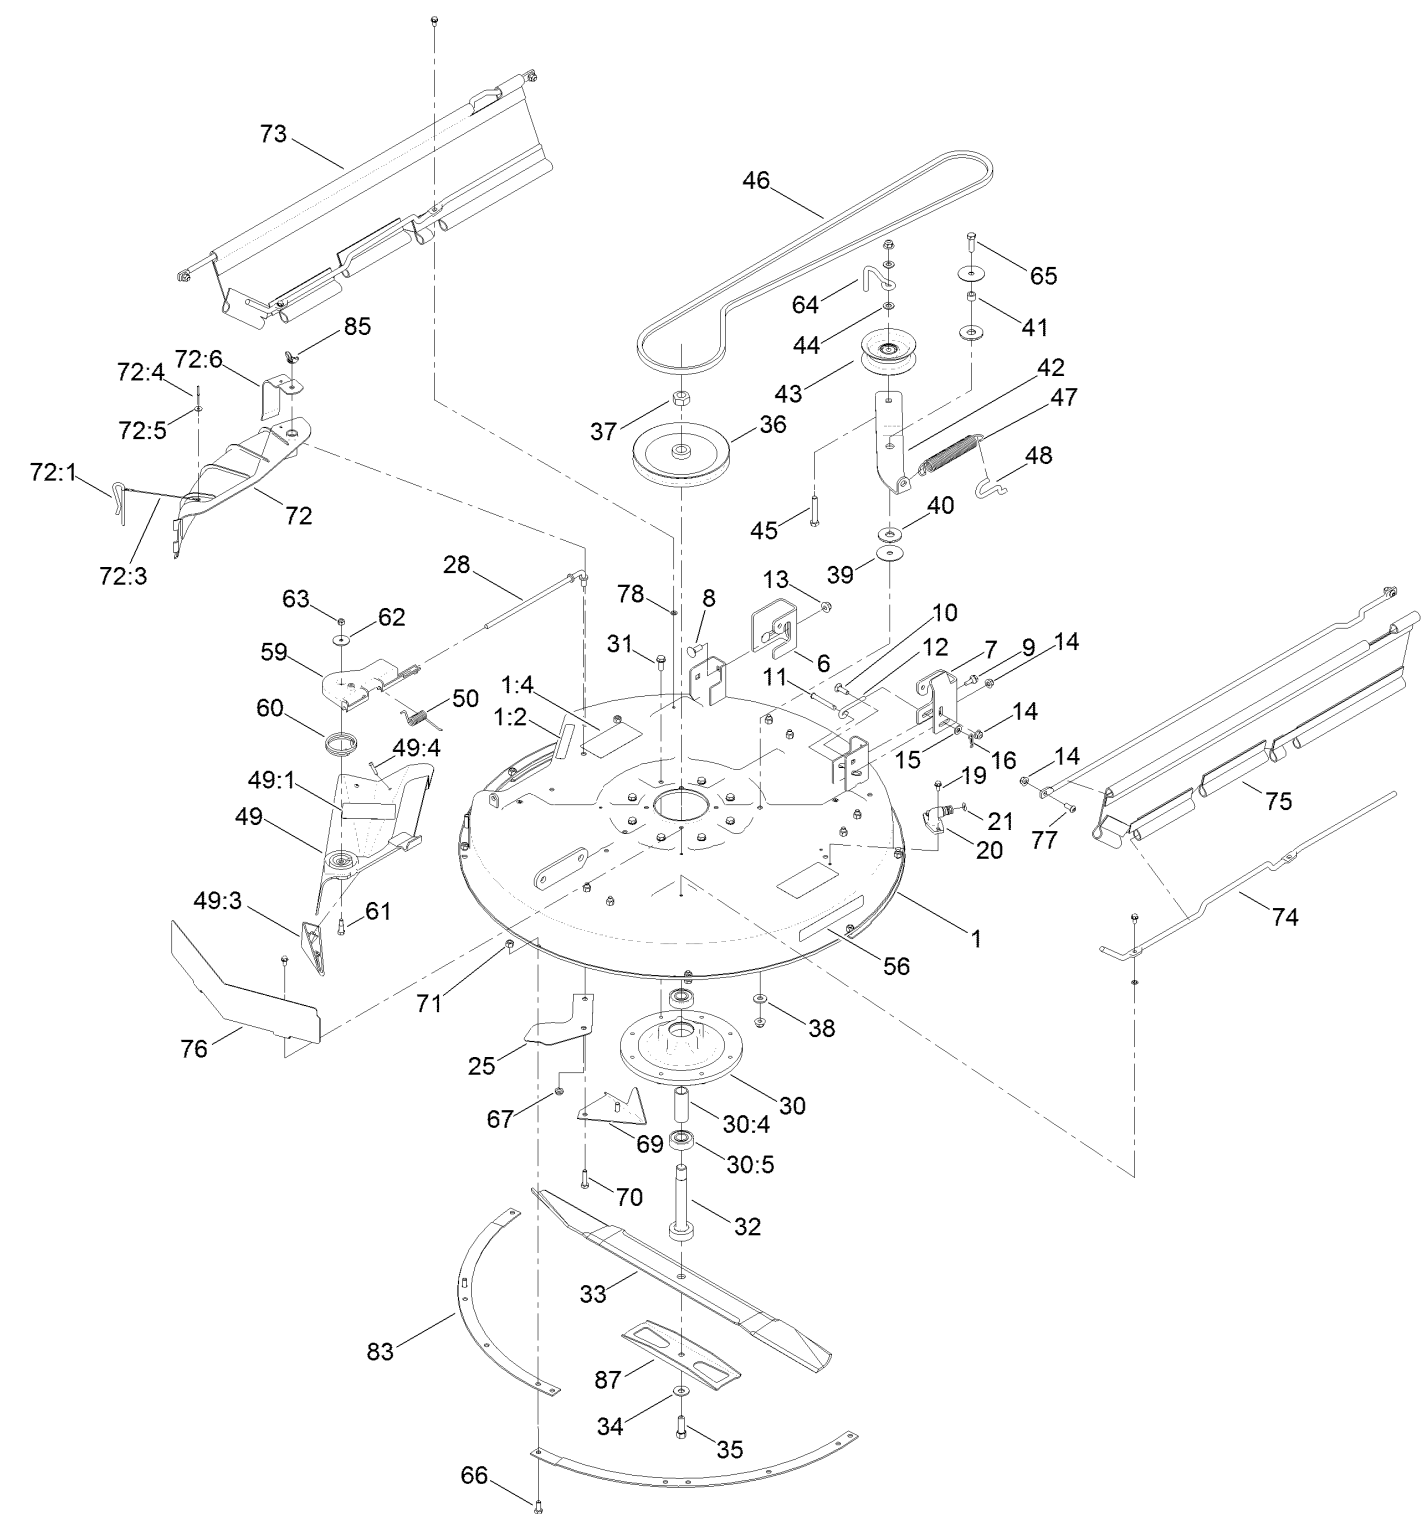

## 32 Inch Deck Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>         | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     |
|-------------|--------------------|-------------|----------------------------|-------------|--------------------|-------------|------------------------|
| 1           | 131-3602           | 1           | 32 Inch Deck And Decal ASM | 45          | 323-11             | 1           | Screw-HH               |
| 1:2         | 93-7009            | 1           | Decal-Danger               | 46          | 119-8821           | 1           | V-Belt, 81.8 Inch      |
| 1:4         | 132-0872           | 2           | Decal-Danger, Deck         | 47          | 106-2177           | 1           | Spring-Extension       |
| 6           | 131-4138           | 1           | Bracket-Hanger, RH         | 48          | 88-5970            | 1           | Hook-Return, Spring    |
| 7           | 131-1091           | 1           | Bracket-Hanger, LH         | 49          | 120-2298           | 1           | 32 Inch Deflector ASM  |
| 8           | 3231-2             | 2           | Bolt-CARR                  | 49:1        | 110-6691           | 1           | Decal-Danger           |
| 9           | 120-7024           | 1           | Screw-Shoulder, HHF        | 49:3        | 93-7696            | 2           | Kicker                 |
| 10          | 3230-22            | 1           | Screw-CARR                 | 49:4        | 93-0231            | 4           | Screw-PPH              |
| 11          | 110-0618           | 1           | Pin-Clevis                 | 50          | 92-2493            | 1           | Spring-Torsion         |
| 12          | 131-0955           | 1           | Rod-Level, Deck            | 56          | 119-2368           | 1           | Decal-Recycler         |
| 13          | 104-8301           | 4           | Nut-Flange, NI             | 59          | 88-4540            | 1           | Pivot-Hinge, Deflector |
| 14          | 104-8300           | 6           | Nut-Flange, NI             | 60          | 88-6160            | 1           | Spring-Torsion         |
| 15          | 3256-23            | 1           | Washer-Flat                | 61          | 92-8916            | 1           | Bolt-Shoulder          |
| 16          | 1-806003           | 1           | Pin-Cotter                 | 62          | 3256-55            | 1           | Washer-Flat            |
| 19          | 32144-4            | 8           | Screw-HWH                  | 63          | 3296-42            | 1           | Nut-Lock, NI           |
| 20          | 95-2747            | 1           | Fitting-Washout            | 64          | 107-7307           | 1           | Guide-Idler, Belt      |
| 21          | 46-6290            | 1           | O-Ring                     | 65          | 323-7              | 1           | Screw-HH               |
| 25          | 119-8877-03        | 1           | Ramp-Deflector             | 66          | 322-3              | 15          | Screw-HH               |
| 28          | 119-8858           | 1           | Rod-Pivot                  | 67          | 3296-59            | 1           | Nut-Lock, NI           |
| 30          | 119-0368           | 1           | Spindle Housing ASM        | 69          | 80-2630-03         | 4           | Kicker                 |
| 30:4        | 251-297            | 2           | Bearing-Ball               | 70          | 322-6              | 1           | Screw-HH               |
| 30:5        | 83-7020            | 1           | Spacer-Bearing             | 71          | 3296-29            | 15          | Nut-Lock, NI           |
| 31          | 32144-41           | 8           | Screw-Taptite              | 72          | 82-6151            | 1           | Discharge Cover ASM    |
| 32          | 119-8825           | 1           | Shaft-Spindle              | 72:1        | 28-8130            | 1           | Pin-Locking, Chute     |
| 33          | 80-4430-03         | 1           | Blade-Recycler, 31.35 Inch | 72:3        | 28-8070            | 1           | Lanyard                |
| 34          | 3290-465           | 1           | Washer-Belleville          | 72:4        | 3290-282           | 2           | Rivet-Blind            |
| 35          | 26-0671            | 1           | Screw-HH                   | 72:5        | 3256-49            | 1           | Washer-Flat            |
| 36          | 119-8804           | 1           | Pulley-Deck                | 72:6        | 83-7010-03         | 1           | Brace                  |
| 37          | 3219-7             | 1           | Nut-Hex                    | 73          | 131-3669           | 2           | Rod-Support, Upper     |
| 38          | 80-6990            | 1           | Washer-Hardened            | 74          | 131-3681           | 2           | Rod-Support, Lower     |
| 39          | 120-2229           | 2           | Washer                     | 75          | 131-3685           | 2           | Guard-Side             |
| 40          | 114-0463           | 2           | Washer-Friction, Composite | 76          | 131-3666-03        | 1           | Shield-Front           |
| 41          | 115-4986           | 1           | Spacer                     | 77          | 3274-55            | 4           | Screw-HSBH             |
| 42          | 119-8966           | 1           | Arm-Idler                  | 78          | 1-803037           | 4           | Nut-Retaining          |
| 43          | 106-2175           | 1           | Pulley-Idler, Flat         | 83          | 80-4490-03         | 4           | Ring-Deck              |
| 44          | 3256-24            | 2           | Washer-Flat                | 85          | 32103-2            | 1           | Nut-Wing               |
|             |                    |             |                            | 87          | 80-4570-03         | 1           | Stiffener              |


## Model Specific Decal Assembly

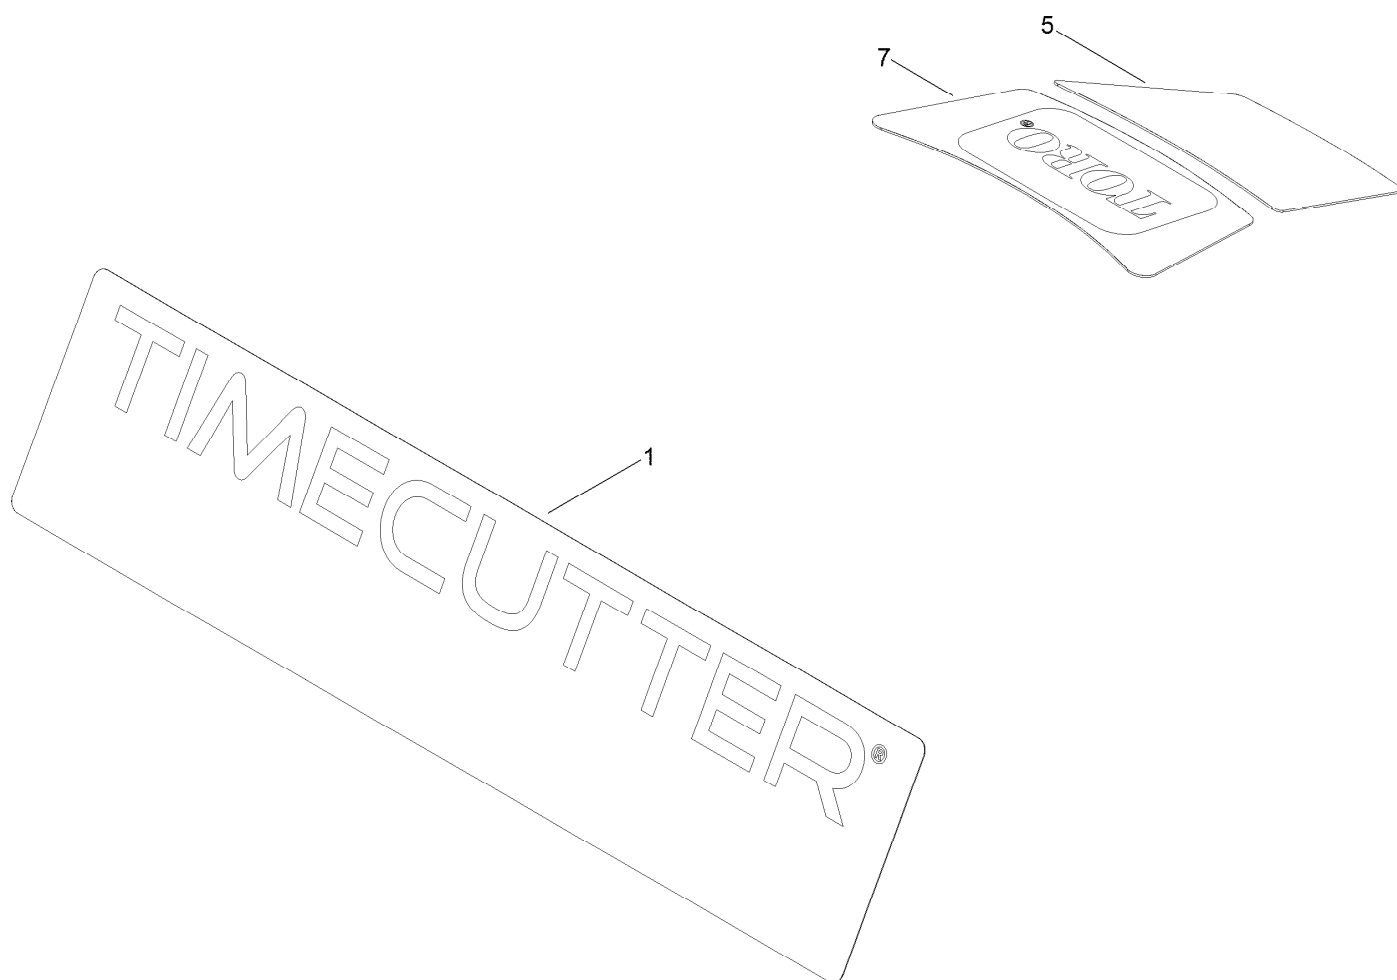

## Model Specific Decal Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>        |
|-------------|--------------------|-------------|---------------------------|
| 1           | 121-3032           | 1           | Decal-Timecutter          |
| 5           | 130-0682           | 1           | Decal-Engine Displacement |
| 7           | 125-1700           | 1           | Decal-Engine              |


# Frame Decal Assembly

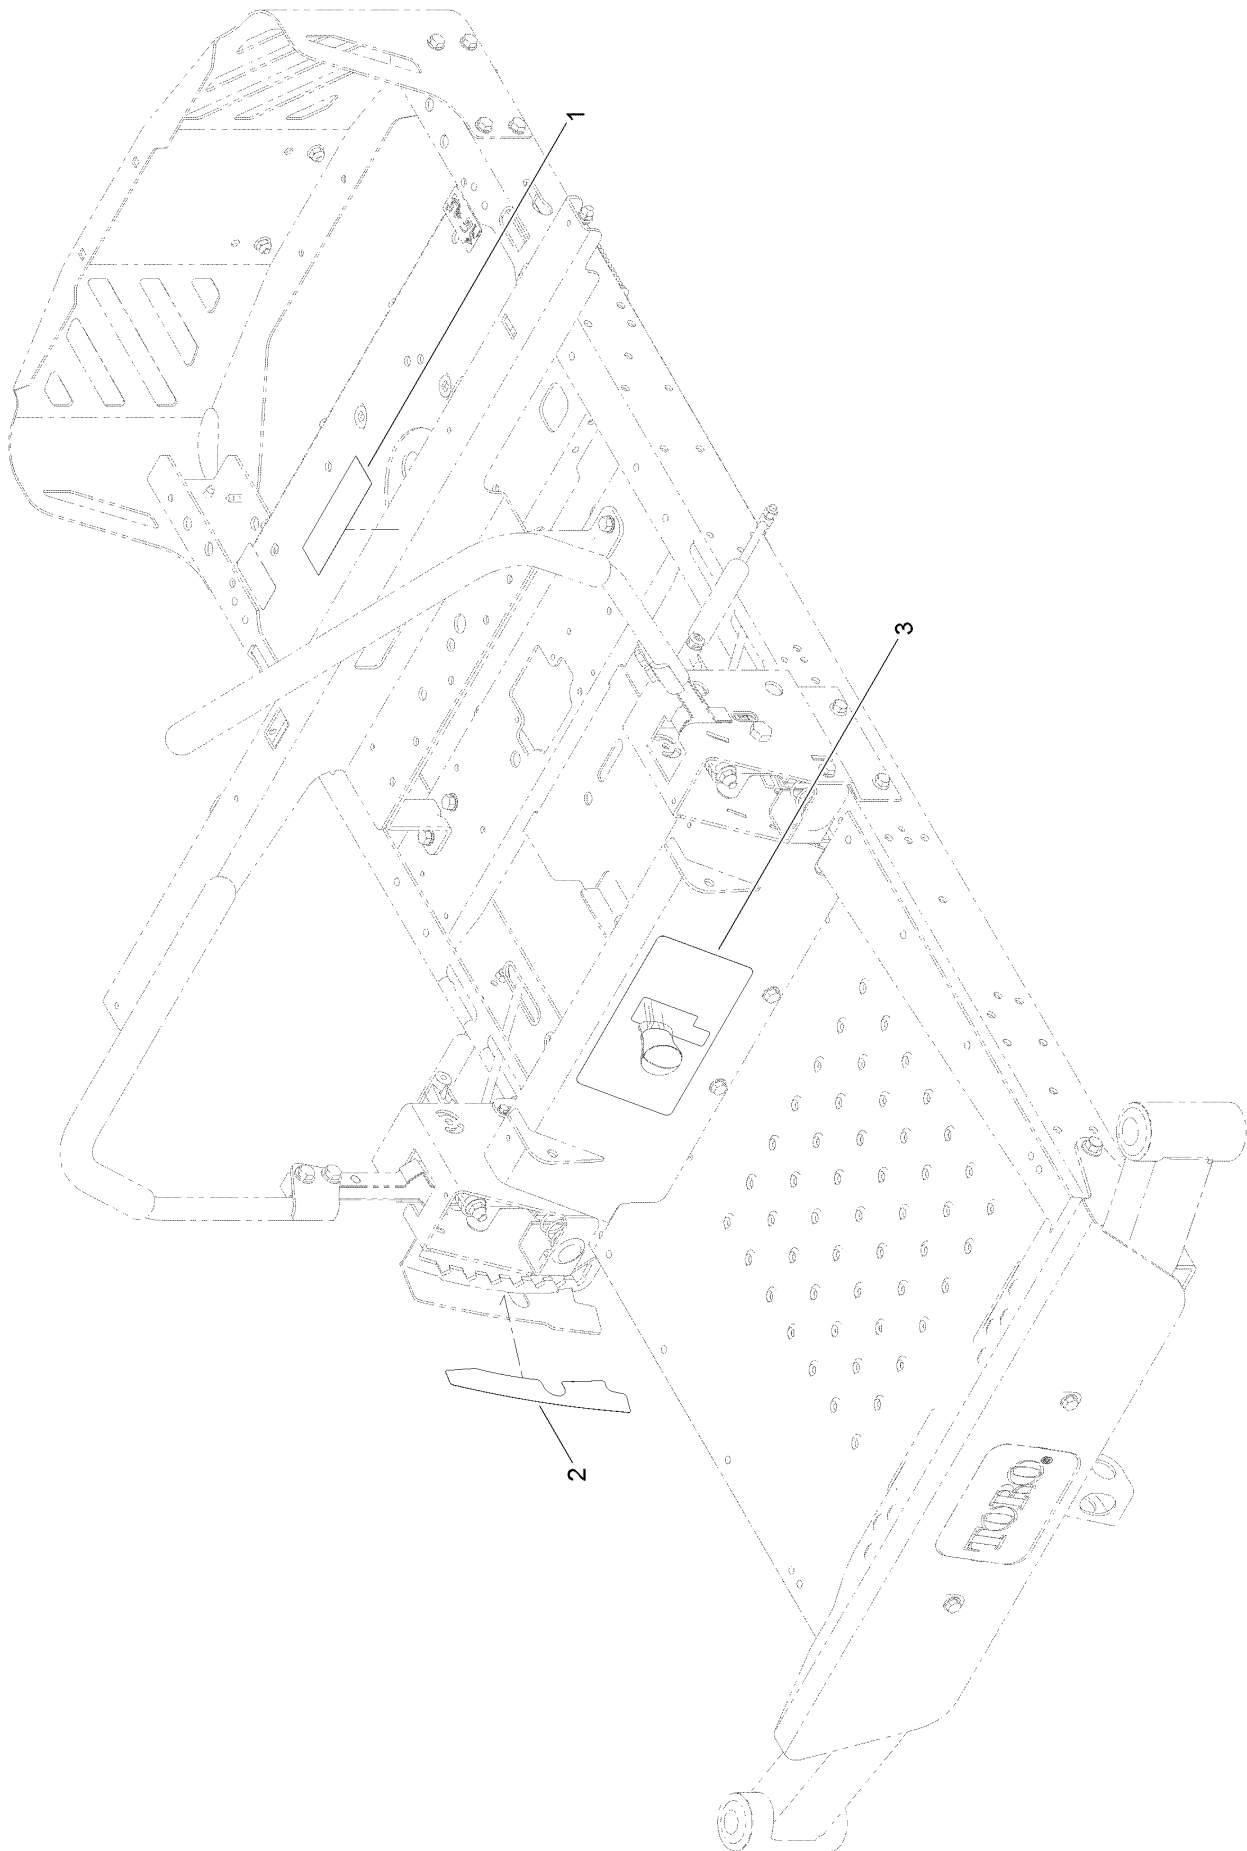

## Frame Decal Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  |
|-------------|--------------------|-------------|---------------------|
| 1           | 106-8717           | 1           | Decal-Service       |
| 2           | 120-5469           | 1           | Decal               |
| 3           | 131-3948           | 1           | Decal-Speed Control |

# Clutch Assembly

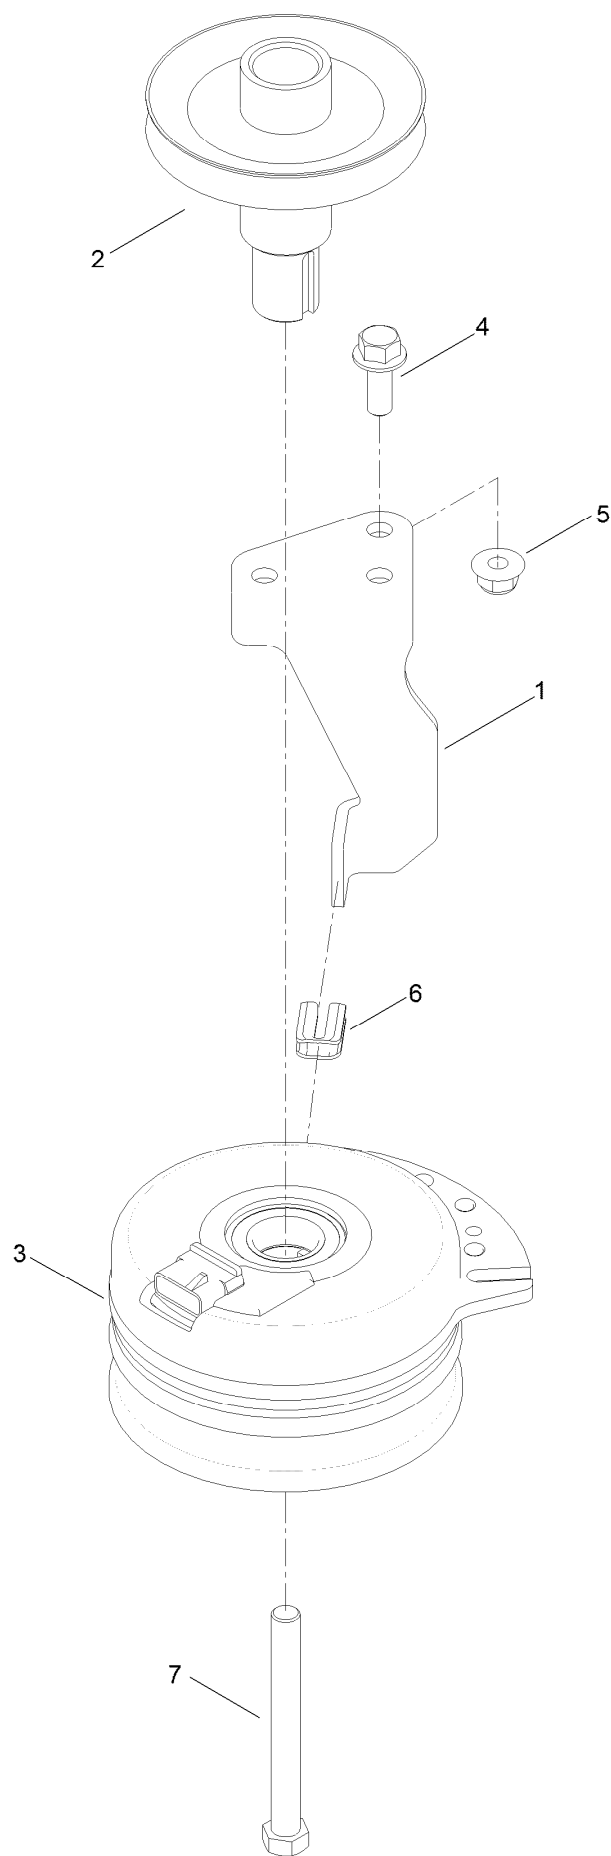

## Clutch Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|--------------------|
| 1           | 119-8884           | 1           | Stop-Clutch        | 5           | 104-8301           | 1           | Nut-Flange, NI     |
| 2           | 130-6854           | 1           | Pulley-Engine      | 6           | 120-2217           | 1           | Isolator-Clutch    |
| 3           | 125-0038           | 1           | Clutch-Electric    | 7           | 3212-16            | 1           | Screw-HH           |
| 4           | 3234-42            | 1           | Screw-HHF          |             |                    |             |                    |

# Attachments and Accessories

## For 74650 TimeCutter ZS 3200S Riding Mower

| Product Name                                                                  | Model/Part |
|-------------------------------------------------------------------------------|------------|
| Hourmeter Kit .....                                                           | 116-5461   |
| All Season Synthetic Oil.....                                                 | 117-0066   |
| Fuel Stabilizer (4oz).....                                                    | 117-0089   |
| Fuel Stabilizer (16oz).....                                                   | 117-0090   |
| Seat With Armrests-18in .....                                                 | 119-8830   |
| Jack Mount Kit .....                                                          | 126-5251   |
| Jack Kit .....                                                                | 127-6666   |
| Attachment Mount Kit .....                                                    | 131-3966   |
| Weight Kit .....                                                              | 131-7658   |
| Deluxe Seat Kit.....                                                          | 131-7699   |
| Floor Mat Kit .....                                                           | 132-6921   |
| 10w30 4-cycle Engine Oil (32oz Bottle) .....                                  | 38280      |
| Toro 4-cycle Sae 30 Oil (32oz Bottle).....                                    | 38903      |
| Storage Cover .....                                                           | 490-7516   |
| Foot Assist Deck Lift Kit, 2011 and After Zero-Turn-Radius Riding Mower ..... | 79010      |
| Sunshade Kit .....                                                            | 79011      |
| Cargo Carrier .....                                                           | 79040      |
| Assist Handle and Step Kit .....                                              | 79339      |
| 32in Bagger .....                                                             | 79390      |

**Notes:**



**Count on it.**