



Count on it.

Parts Catalog

Road Light Kit including Brake Lights

LT3340 Traction Unit

Model No. 02915—Serial No. 400000000 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.


For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Front Light Assembly 4

Rear Light Assembly 6


Front Light Assembly

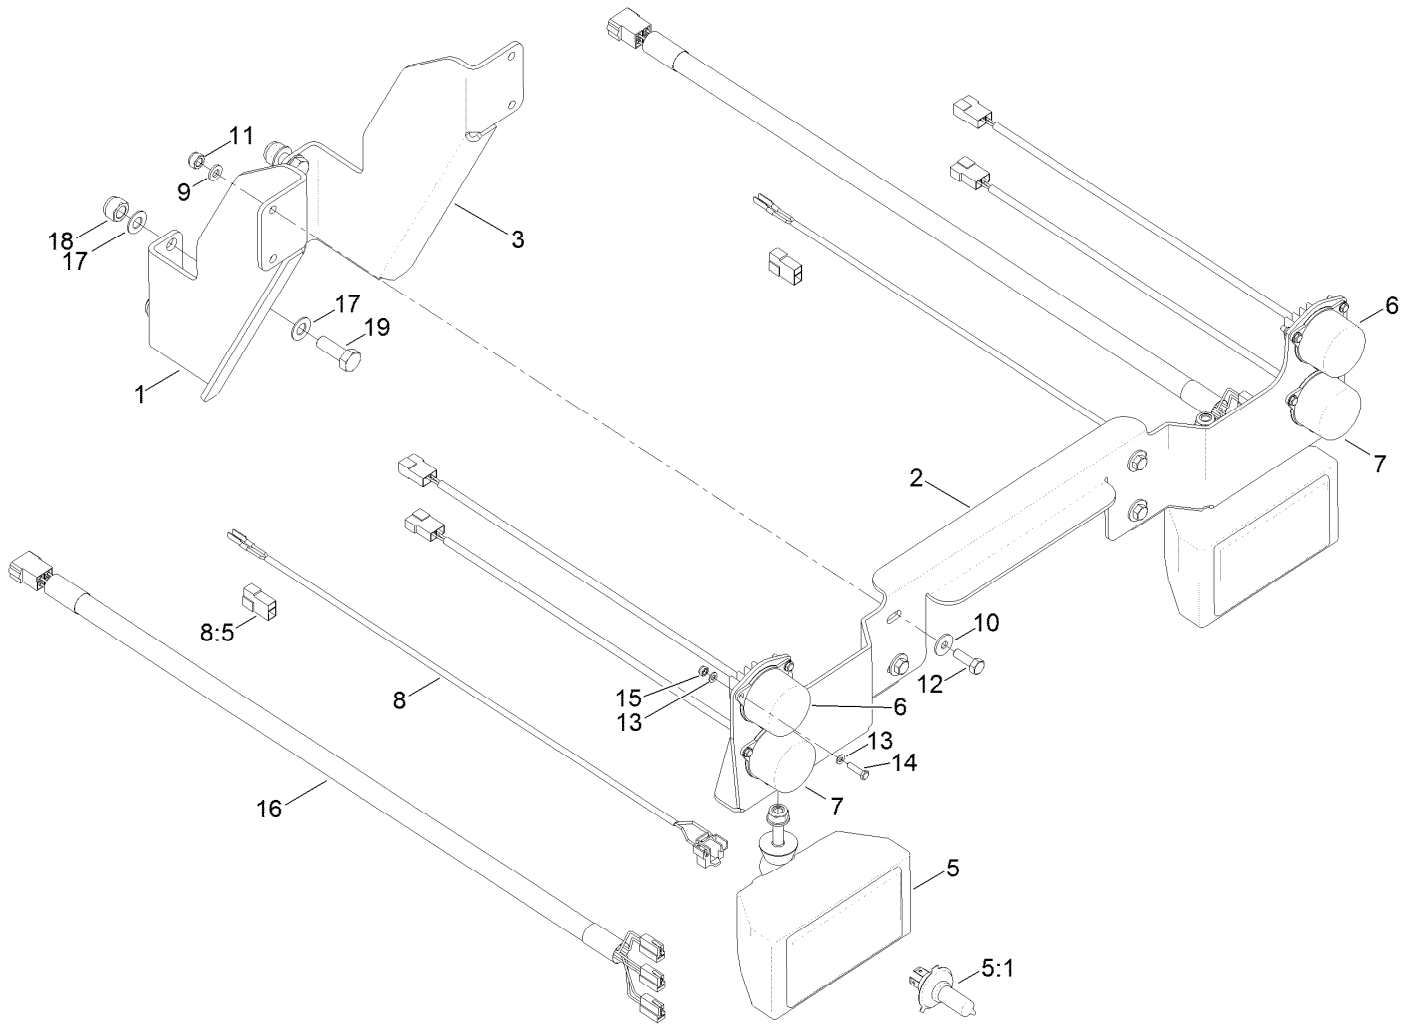

Front Light Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	111-5060-03	1	Support-Lights, Front (Lt-Right)	9	ZWP1H000U	4	Washer-Plain
2	111-5059-03	1	Bracket-Lights, Front (Lt)	10	09267	4	Washer
3	111-5153-03	1	Support-Lights, Front (Lt-Left)	11	09441	4	Nut-Hex, NI
5	924633	2	Headlamp-Dip/Main	12	03162	4	Screw-HH
5:1	924632	1	Headlamp-Bulb	13	09470	24	Washer
6	111-6177	2	Indicator-Light, Front	14	ZDH1E020U	12	Screw-HH
7	111-6176	2	Light-Marker, Front	15	09430	12	Nut-Nyloc
8	111-8034	2	Cable-Headlamp	16	111-6174	2	Harness-Light, Front
8:5	111-6086	1	Housing	17	ZWP1L000U	8	Washer-Plain
				18	ZNN1L000U	4	Nut-Nyloc
				19	ZDH1L035U	4	Screw-HH

Rear Light Assembly

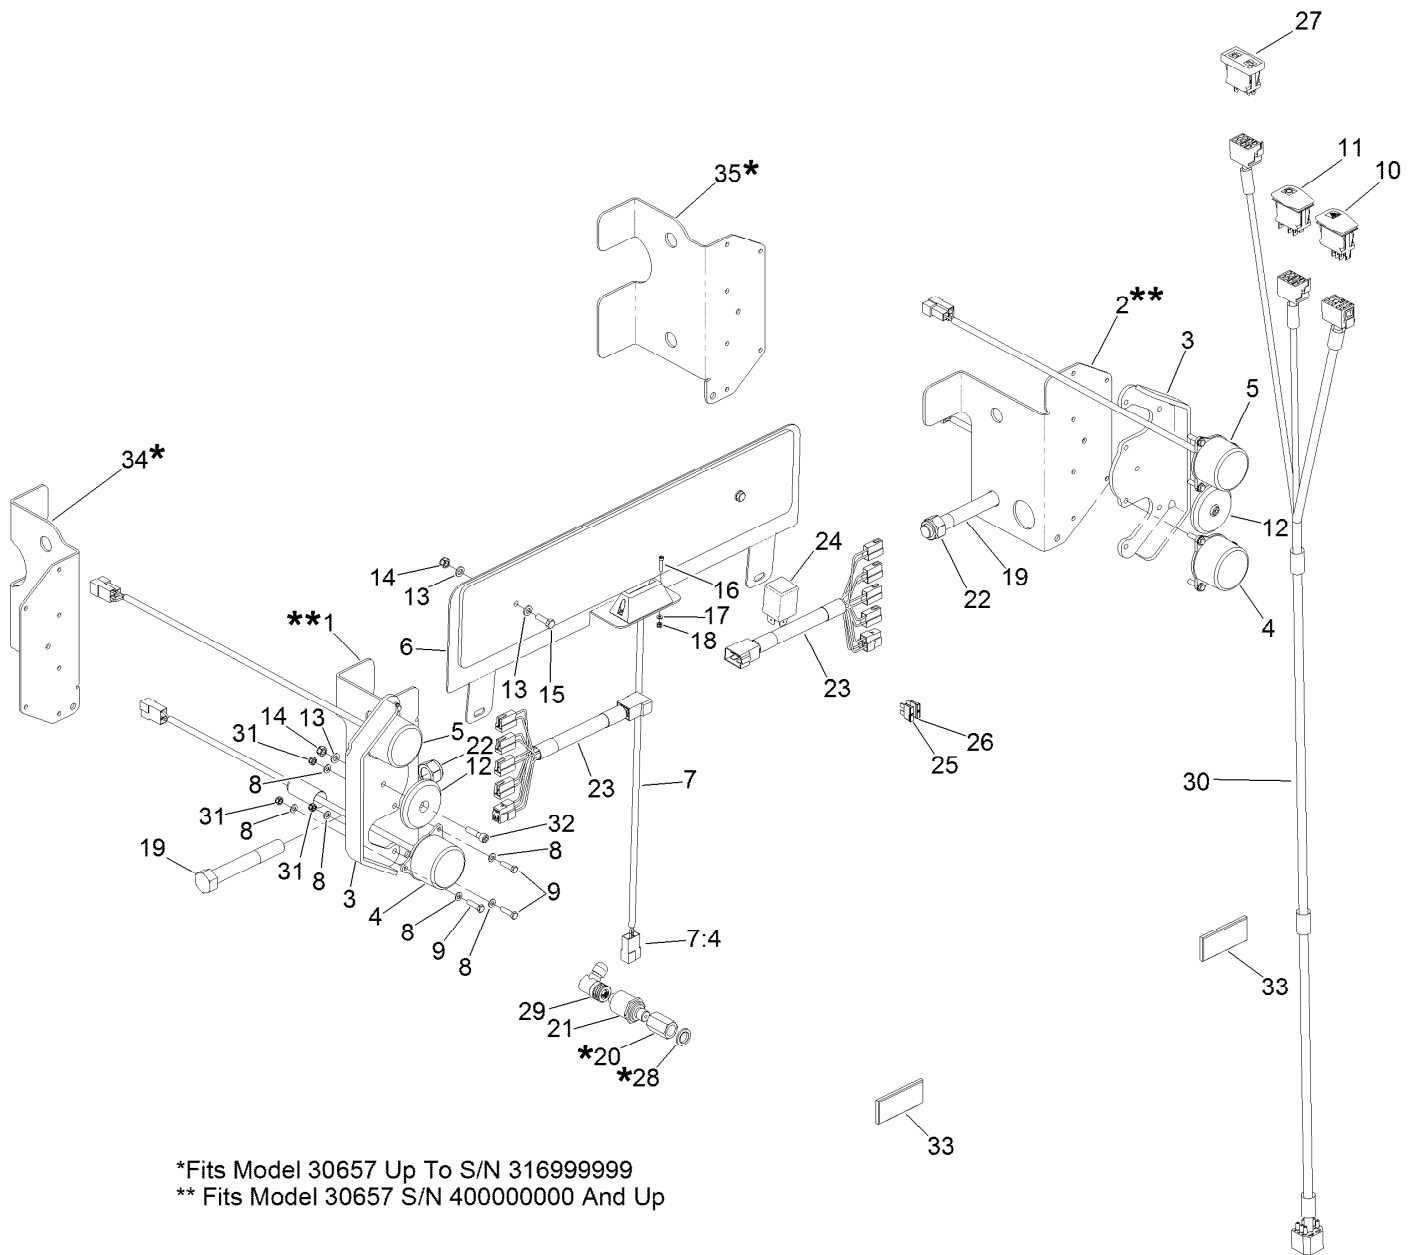

Rear Light Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	111-9511-03	1	Bracket-Light, Rear	18	HY09698	2	Nut-Nyloc
2	111-9510-03	1	Bracket-Light, Rear	19	ZBH1P110U	2	Bolt
3	111-3710-03	2	Guard-Light	20	111-3765	1	Adaptor-Switch, Pressure
4	111-6180	2	Light-Indicator, Rear	21	111-3759	1	Switch-Pressure
5	111-6179	2	Light-Stop/Tail	22	09456	2	Nut
6	111-4710-03	1	Bracket-Plate, Number	23	111-6181	2	Connector-Lights, Rear
7	111-6178	1	Light-Plate, Number	24	111-3766	1	Relay-Flasher
7:4	111-6086	1	Housing ●	25	70-09-026	1	Fuse-10A
8	09470	24	Washer	26	70-09-151	1	Fuse-15A
9	ZDH1E020U	12	Screw-HH	27	111-2244	1	Switch-Indicator
10	111-2223	1	Switch-Warning, Hazard	28	10-06-030	1	Seal-Dowty
11	111-2252	1	Switch-Lights	29	111-3921	1	Connector-Switch, Pressure
12	111-3760	2	Reflector-Red	30	111-3893	1	Lead-Connector
13	09472	6	Washer-Plain	31	09430	12	Nut-Nyloc
14	09438	4	Nut-Nyloc	32	ZCS1F025U	2	Screw
15	09363	2	Screw-HH	33	111-5020	2	Reflector-Adhesive
16	111-3764	2	Setscrew	34	111-4765-03	1	Bracket-Light, Left
17	HY09697	2	Washer-Plain	35	111-3119-03	1	Bracket-Light, Right

● Not illustrated



Count on it.