



Count on it.

Form No. 3412-345 Rev A

Parts Catalog

Log Splitter

Model No. 22618—Serial No. 400000000 and Up

Model No. 22618HD—Serial No. 400000000 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Engine, Axle and Hydraulic Tank Assembly 4


Frame and Jack Assembly 6

Jack Assembly No. 120-1421 8

Hydraulic System Assembly 10

Attachments and Accessories 12

Engine, Axle and Hydraulic Tank Assembly

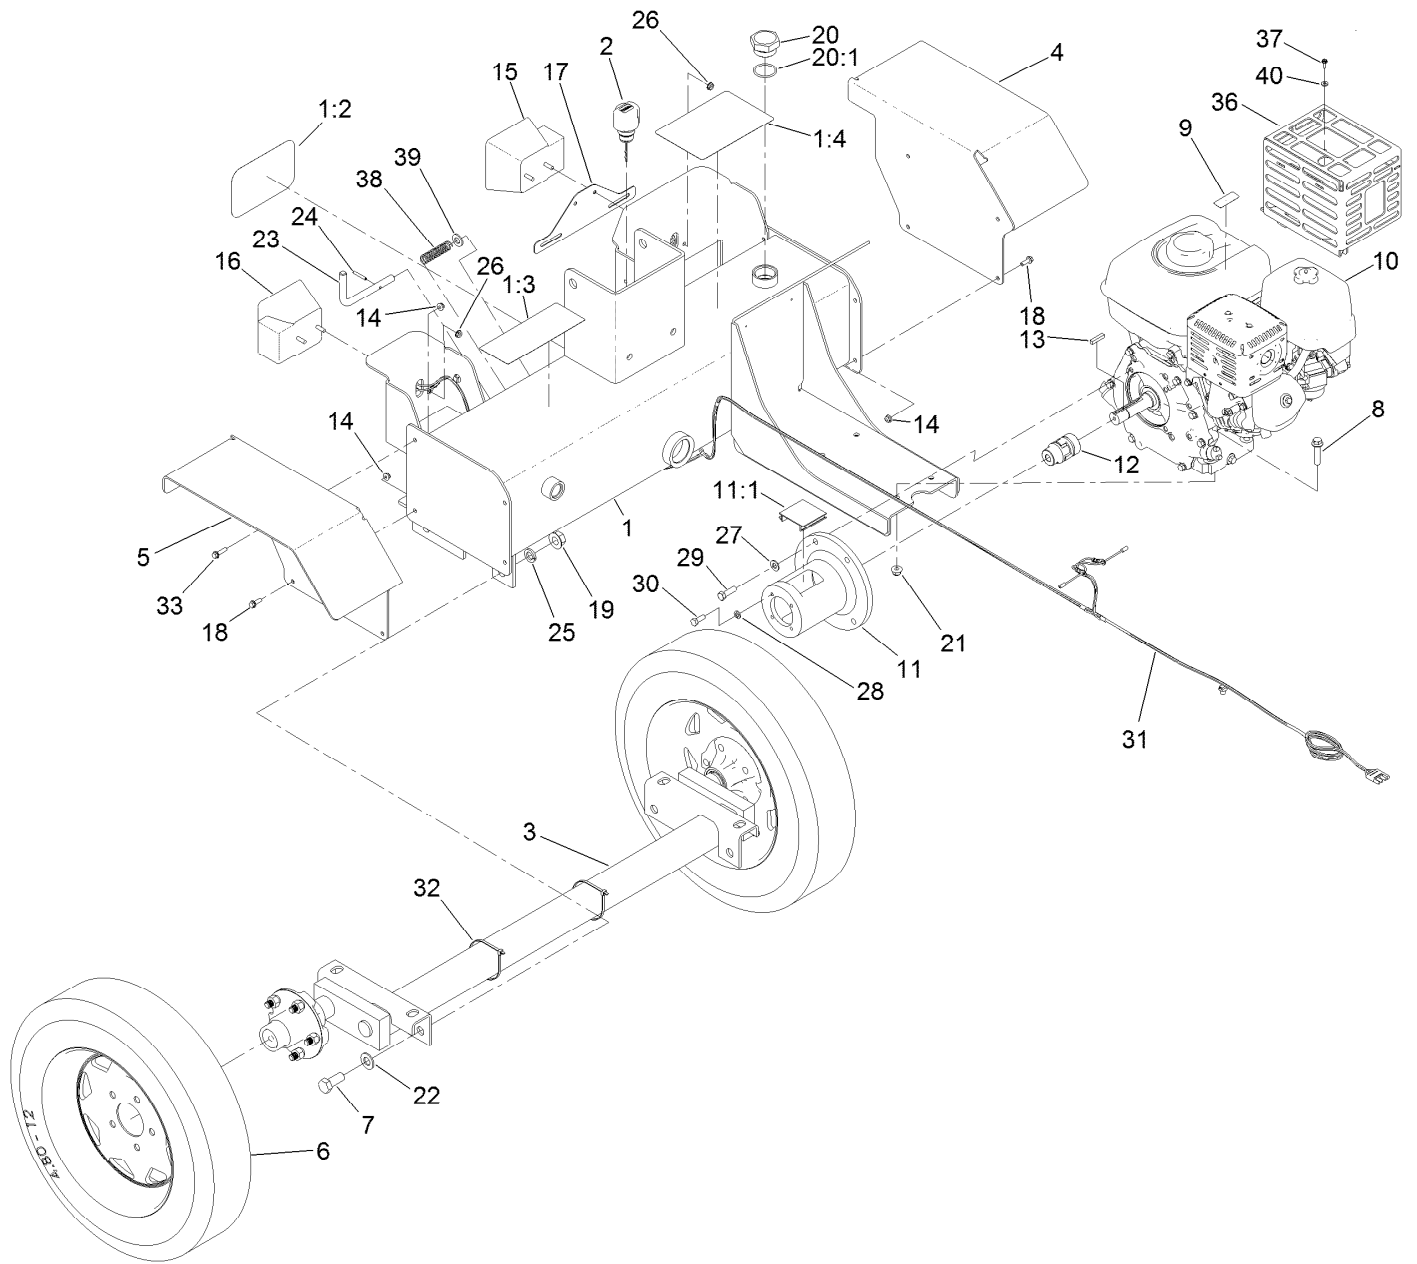


Engine, Axle and Hydraulic Tank Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	137-0637	1	HYD Tank ASM
1:2	62-5550	1	Decal
1:3	137-0551	1	Decal-Warning
1:4	137-0590	1	Decal-Service
2	132-9292	1	Breather
3	136-4575	1	Axle ASM
4	137-0639-03	1	Fender-LH
5	137-0638-03	1	Fender-RH
6	120-1206	2	Wheel And Tire ASM
7	327-4	4	Screw-HH
8	3234-19	4	Screw-HHF
9	130-8322	1	Decal-Warning, Ethanol
10	136-4563	1	Engine-Honda, Gx270
11	120-1213	1	Housing-Mount,Pump
11:1	120-1846	1	Cover-Access
12	137-0566	1	Coupler-Flex
13	13-2840	1	Key-Square
14	104-7201	8	Nut-HF
15	120-3735	1	Light-Tail, LH
16	120-3734	1	Light-Tail, RH
17	125-8659-03	1	Holder-Plate, License
18	115-5103	6	Screw-HHF

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
19	32128-50	4	Nut-Flange
20	108-8468	1	Plug-HH
20:1	237-101	1	O-Ring
21	104-8301	4	Nut-HF, NI
22	119-1868	4	Washer
23	137-0601	1	Pin-Latch
24	32121-6	1	Pin-Roll, Slotted
25	3253-23	4	Washer-Lock/Sp
26	32149-2	4	Nut-Keps
27	3256-24	4	Washer-Flat
28	3253-4	4	Washer-Lock
29	323-7	4	Screw-HH
30	322-4	4	Screw-HH
31	136-4571	1	Harness-Wire
32	3290-379	2	Tie-Cable
33	120-4654	2	Screw-HHF
36	137-0595-03	1	Guard-Muffler
37	32144-19	2	Screw-SHWH
38	95-4256	1	Spring-Compression
39	106-9888	1	Washer-Flat
40	3256-14	2	Washer-Flat


Frame and Jack Assembly

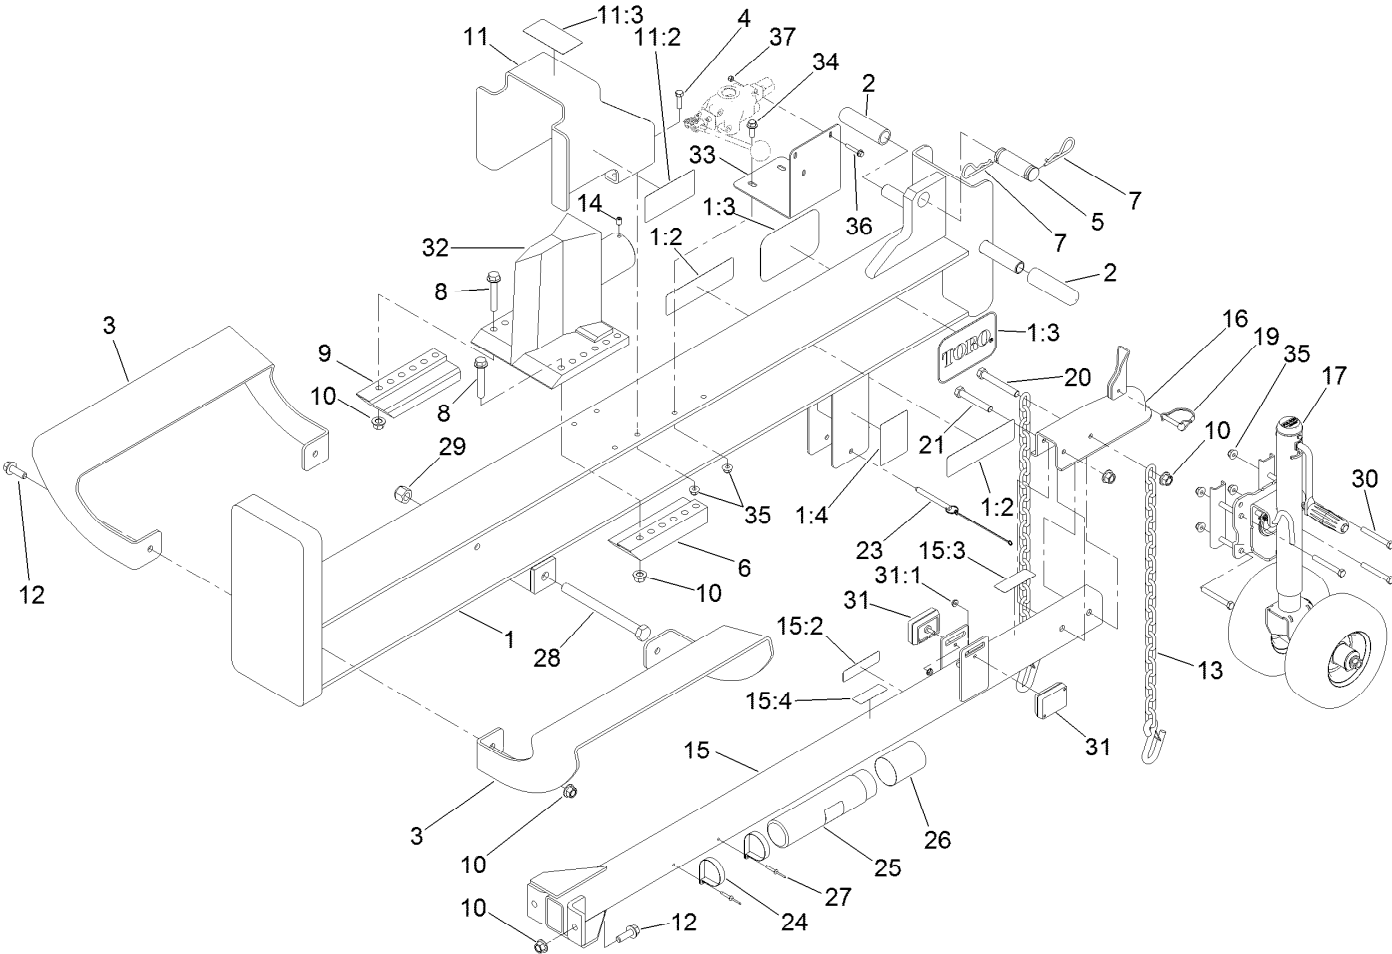

Frame and Jack Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	137-0634	1	Beam ASM	15:4	120-0625	1	Decal-Warning, Pinch Point
1:2	137-0552	2	Decal-Ls922	16	117-8371	1	Receiver-Hitch, Ball
1:3	62-5550	2	Decal	17	120-1421	1	Jack ASM
1:4	137-0588	1	Decal-Warning, Pin	19	105-9245	1	Pin-Lock
2	120-1333	2	Grip-Handle	20	325-15	1	Screw-HH
3	136-4668-03	2	Plate-Catch	21	325-13	1	Screw-HH
4	323-7	4	Screw-HH	23	136-4588	1	Pin
5	120-1420	1	Pin-Pivot	24	2412-120	2	Clamp-R
6	120-1804-03	1	Bar-Slide, LH	25	104-7050	1	Tube-Manual
7	3290-256	2	Pin-Hair	26	104-7048	1	Cap-Housing
8	3234-40	12	Screw-HF	27	107-0386	3	Rivet-Blind
9	120-1809-03	1	Bar-Slide, RH	28	120-1796	1	Bolt-HH
10	99-5107	18	Nut-Lock	29	3296-51	1	Nut-Lock, NI
11	137-0636	1	Dislodger Bracket ASM	30	323-14	4	Screw-HH
11:2	137-0564	1	Decal-Caution, Dangerous Area	31	127-7562	2	Lamp-Marker, Front Side
11:3	137-0555	1	Decal-Warning, Pinch Point	31:1	32149-2	1	Nut-Keps
12	130-6482	4	Screw-HHF	32	137-0569-03	1	Wedge ASM
13	119-3045	2	Chain-Safety, Trailer	33	137-0571-03	1	Bracket-Valve
14	3247-4	1	Screw-Set	34	3234-42	2	Screw-HHF
15	137-0635	1	Tube ASM	35	104-8301	10	Nut-HF, NI
15:2	117-2718	1	Decal-Arrester, Spark	36	94-5781	3	Screw-HHF
15:3	137-0554	1	Decal-Caution	37	3296-42	3	Nut-Lock, NI

Jack Assembly No. 120-1421

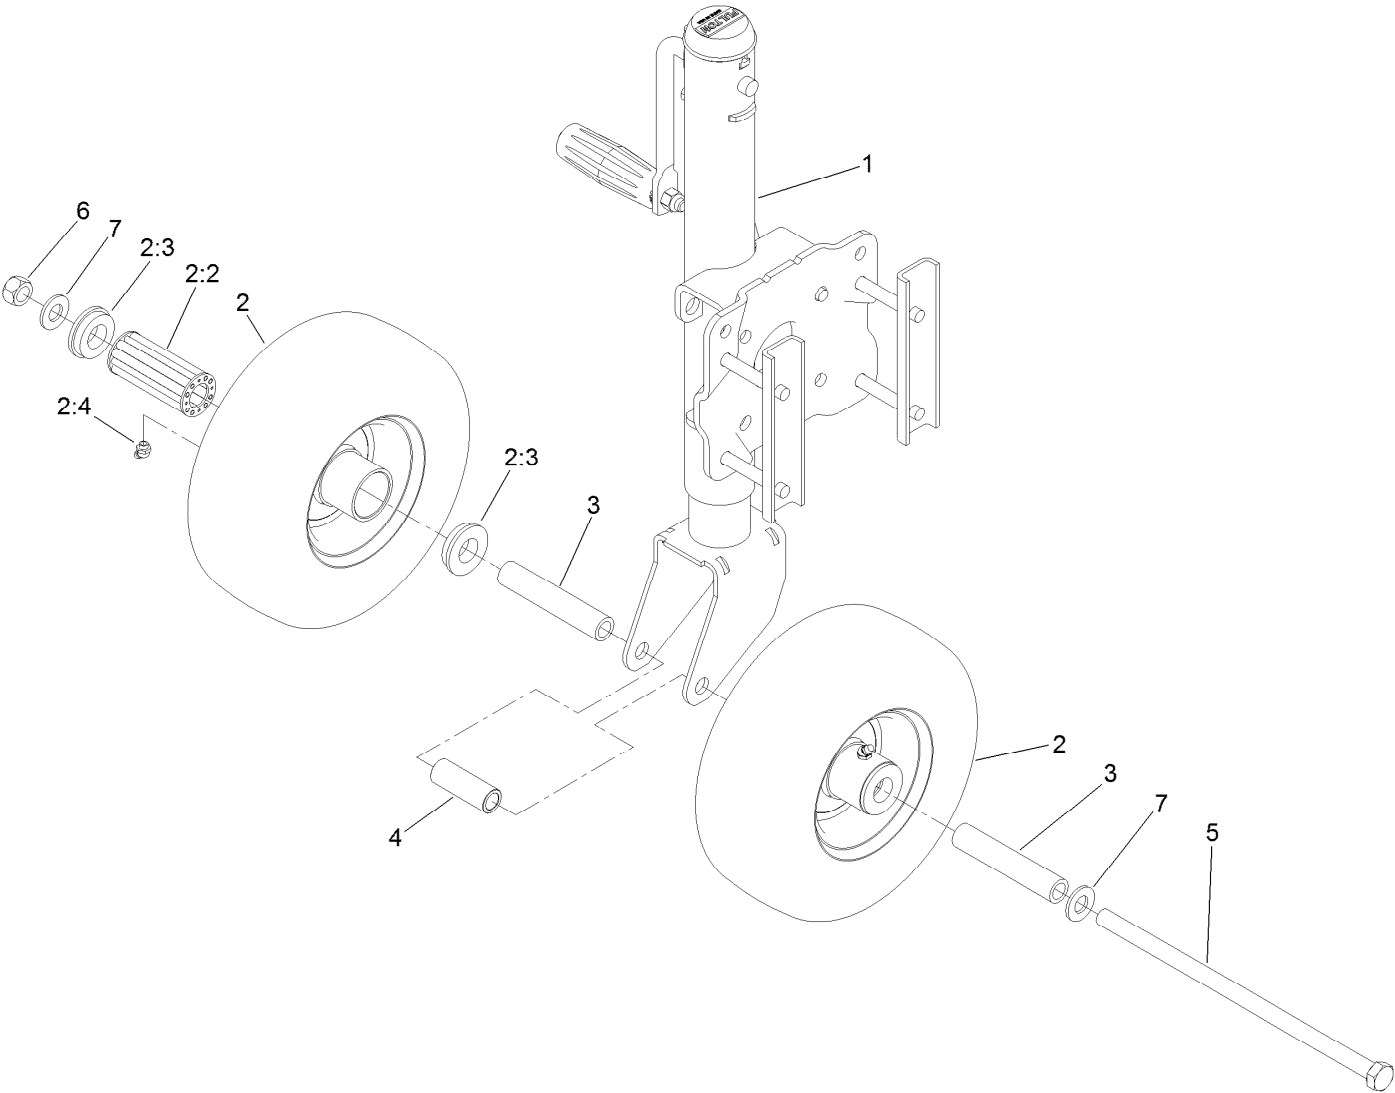


Jack Assembly No. 120-1421 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	120-1208	1	Jack-Trailer
2	110-5024	2	Wheel And Tire ASM
2:2	112-7066	1	Bearing-Roller
2:3	1-513810	2	Bushing
2:4	302-61	1	Fitting-Grease

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
3	100-6453	2	Bushing-Spanner
4	109-6653	1	Spacer
5	120-1827	1	Screw-HH
6	32153-5	1	Nut-Hex
7	3256-26	2	Washer-Flat

Hydraulic System Assembly

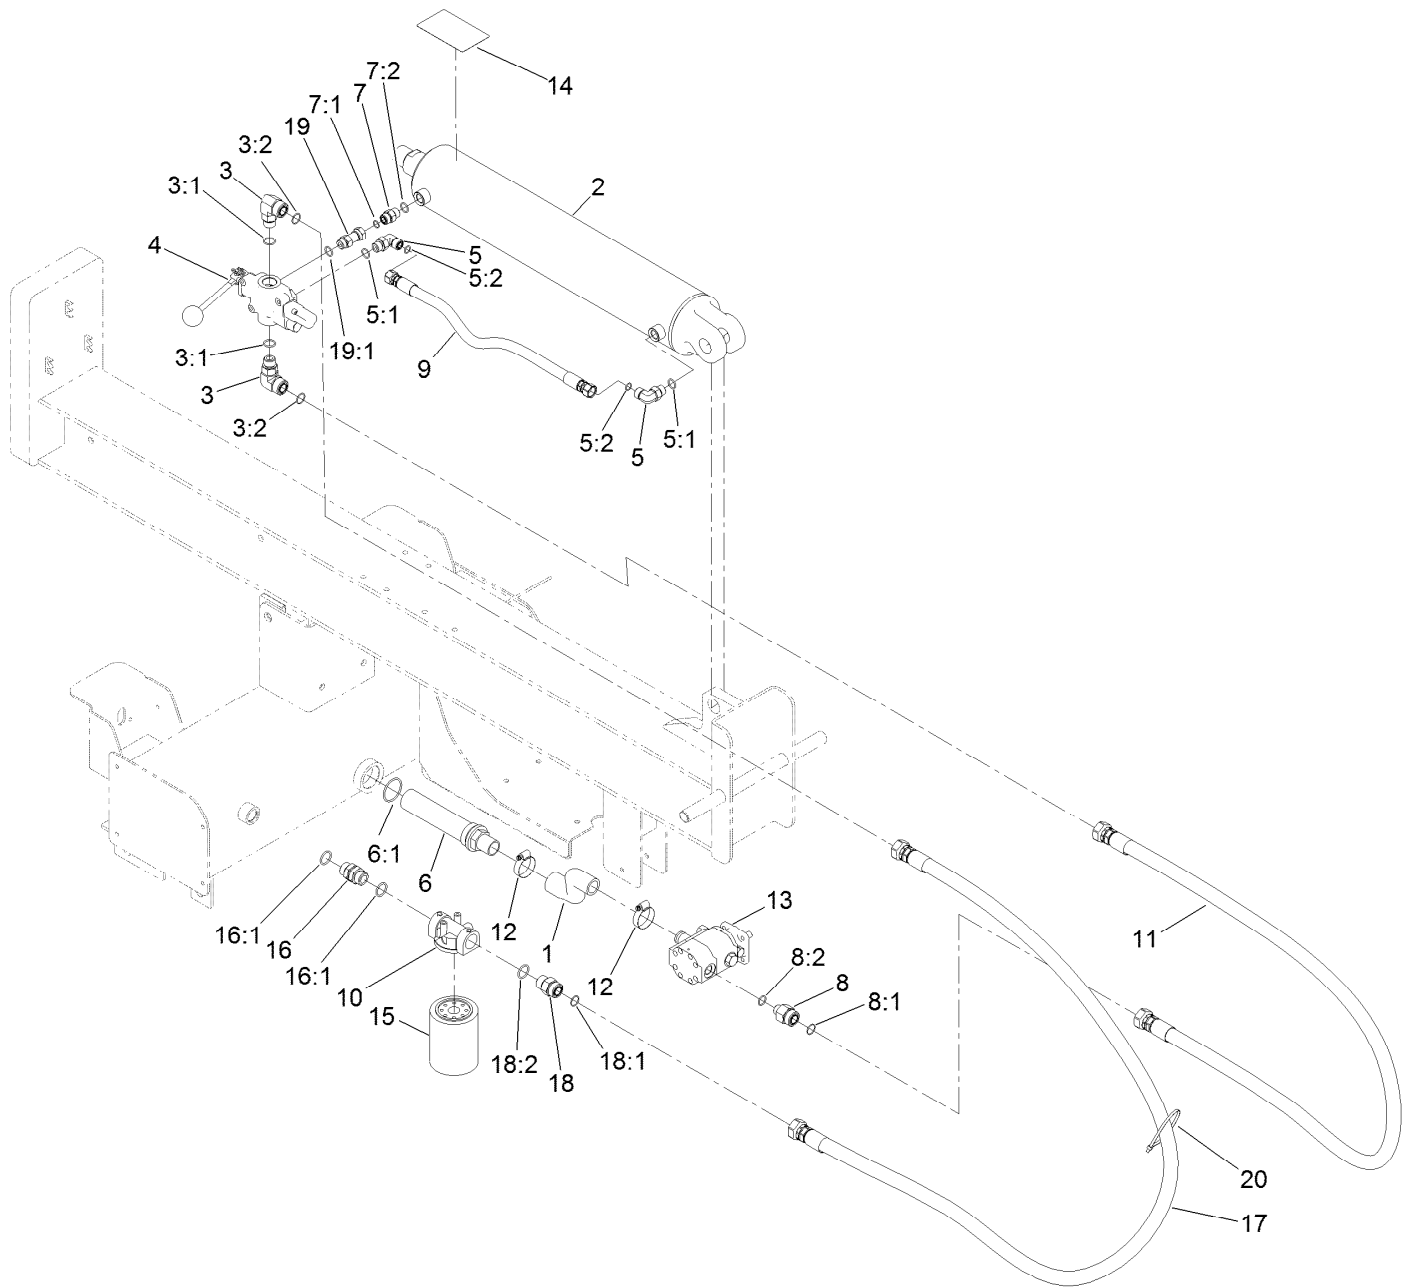

Hydraulic System Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	136-4675	1	Hose-Molded	9	132-4013	1	Hose-HYD
2	136-4562	1	Cylinder-HYD	10	92-5821	1	Head-Filter
3	340-16	2	Fitting-HYD, 90 DEG	11	137-4853	1	HYD Hose ASM
3:1	237-80	1	O-Ring	12	2412-111	2	Clamp
3:2	237-58	1	O-Ring	13	136-4569	1	Pump-HYD
4	136-4583	1	Valve-Control	14	137-0587	1	Decal- Caution, Control
5	340-98	2	Fitting-HYD, 90 DEG	15	54-0110	1	Filter-Oil, Transmission
5:1	237-79	1	O-Ring	16	98-9906	1	Fitting-Thread, Straight
5:2	237-30	1	O-Ring	16:1	237-81	2	O-Ring
6	105-0131	1	Strainer-Tank, Oil	17	137-4854	1	HYD Hose ASM
6:1	340-136	1	O-Ring	18	340-9	1	Fitting-Str
7	340-4	1	Fitting-Straight	18:1	237-58	1	O-Ring
7:1	237-30	1	O-Ring	18:2	237-81	1	O-Ring
7:2	237-79	1	O-Ring	19	100-7671	1	Adapter-HYD
8	98-9921	1	Fitting-Str	19:1	237-79	1	O-Ring
8:1	237-145	1	O-Ring	20	3290-379	3	Tie-Cable
8:2	237-79	1	O-Ring				

Attachments and Accessories

For 22618 Log Splitter

Product Name	Model/Part
Spark Arrester Kit	137-0592
Pump Service Kit	137-4850
Cylinder Service Kit	137-4852

Notes:

Notes:

Notes:



Count on it.