



Z Master® Professional Series Riding Mower with TURBO FORCE® Side Discharge Mower

Model No. 75930—Serial No. 400000000 and Up

Model No. 75934—Serial No. 400000000 and Up

Model No. 75936—Serial No. 400000000 and Up

Model No. 75951—Serial No. 400000000 and Up

Model No. 75955—Serial No. 400000000 and Up

Model No. 75967—Serial No. 400000000 and Up

Model No. 75968—Serial No. 400000000 and Up

Model No. 75969TE—Serial No. 400000000 and Up

Model No. 75990—Serial No. 400000000 and Up

Addendum

This *Addendum* replaces the Greasing the Mower Deck section in your *Operator's Manual*.

Greasing the Mower Deck

Service Interval: Every 50 hours—Grease the mower deck spindles and idler arm.

Important: Make sure that the cutting unit spindles are full of grease weekly.

1. Disengage the blade-control switch (PTO), move the motion-control levers to the NEUTRAL-LOCK position, and engage the parking brake.
2. Shut off the engine, remove the key, and wait for all moving parts to stop before leaving the operating position.
3. Grease the mower-deck idler pulley pivot until grease comes out the bottom (Figure 1).
4. Grease the 3 spindle bearings until grease comes out the lower seals (Figure 1).

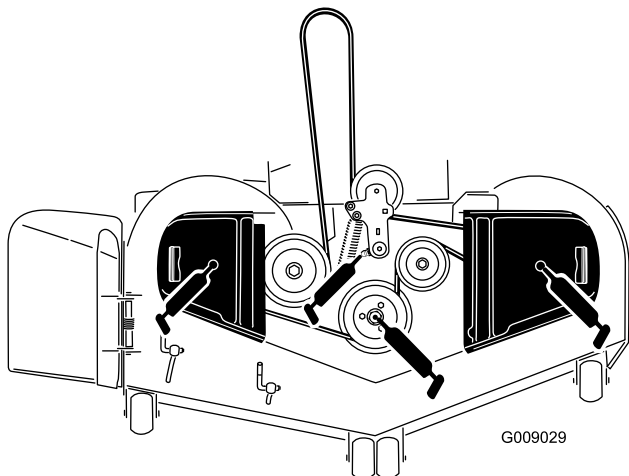


Figure 1

g009029

