



MODEL NO. 0742VY01—2000001 & up

**Pre-Delivery
Dealer Check List**

WHEEL HORSE®

Easy Twin Grass Bagger for 42-inch "Y" Series Mowers

❑ Prepare the mower according to the instructions under *Mower Preparation*, in the Easy Twin Grass Bagger Operator's Manual.

❑ Install the Grass Baffle

1. Remove the hex-head bolt and nut at the end of the grass plate (on the inside of the mower) near the back edge of the discharge opening. Do not use the bolt and nut again.

2. Install the grass baffle on the inside of the mower, using a $\frac{3}{8}$ " x 1" hex-head bolt and $\frac{3}{8}$ " nylon lock nut in the hole closest to the discharge opening (Fig. 1). Be sure the grass baffle is tight against the underside of the mower.

3. Rotate the blade to assure it does not hit the baffle. Adjust the baffle if the blade hits it.

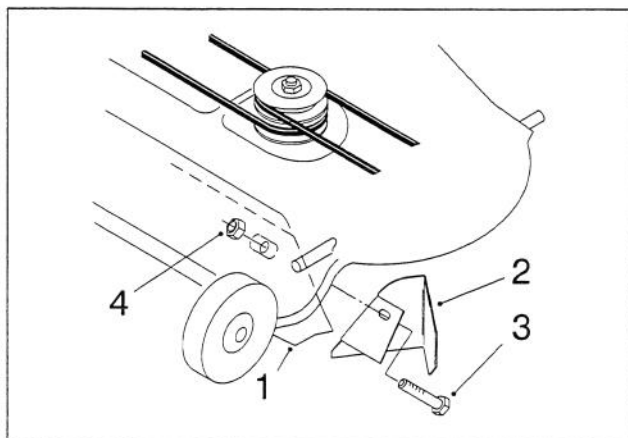


Figure 1

- | | |
|-----------------|--|
| 1. Grass plate | 3. Hex-head bolt ($\frac{3}{8}$ " x 1") |
| 2. Grass baffle | 4. Nylon lock nut ($\frac{3}{8}$ ") |

❑ Mount the Blower Pivot Support

1. Slide the pivot support onto the threaded rod that is welded onto the front of the mower near the discharge opening (Fig. 2).

Note: The pivot support has one hole for mounting it to a 42" mower and a different hole for a 48" mower (Fig. 2). Use the hole for a 42" mower for this installation.

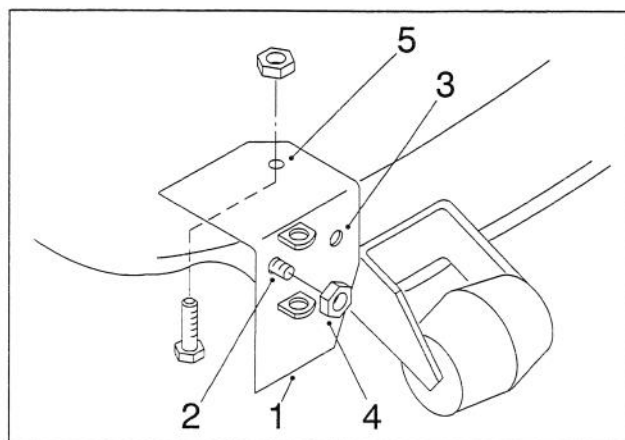


Figure 2

- | | |
|---------------------------------------|------------------------------------|
| 1. Pivot support | 4. Jam nut |
| 2. Hole for 42" Y Series mower | 5. $1\frac{1}{32}$ " diameter hole |
| 3. Hole for other mowers (do not use) | |

2. Screw the $\frac{3}{8}$ " deflector jam nut (Fig. 2) onto the threaded rod until the nut is flush with the end of the rod.

3. Push the vertical side (front) of the pivot support against the front of the mower and clamp it snugly, making sure the top of the pivot support lies flat on the top of the mower.

4. Drill an $1\frac{1}{32}$ " diameter hole in the mower, using the hole in the pivot support as a template (Fig. 2). Remove the clamp after you drill the hole.

5. Secure the pivot support to the top of the mower using a $\frac{5}{16}$ " x $\frac{3}{4}$ " hex-head bolt (from the underside of the mower) and a $\frac{5}{16}$ " hex-head flange nut.

❑ Assemble the Blower

1. Install the blower mounting plate assembly to the blower housing using three $\frac{5}{16}$ " x $\frac{3}{4}$ " carriage bolts and $\frac{5}{16}$ " hex-head flange nuts (Fig. 3).

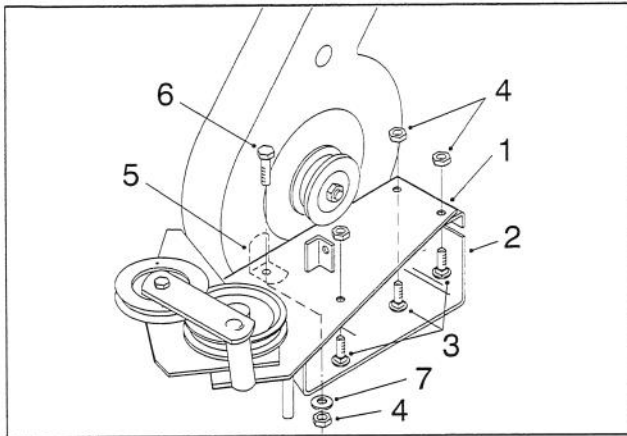


Figure 3

- | | |
|----------------------------------|-------------------------------|
| 1. Blower mounting plate | 5. L-Shaped bracket |
| 2. Blower housing | 6. Hex-head bolt (5/16" x 1") |
| 3. Carriage bolts (5/16" x 3/4") | 7. Flat washer (5/16") |
| 4. Hex-head flange nuts (5/16") | |

2. Install the L-shaped support bracket inside the blower housing using a 5/16" x 1" hex-head bolt, 5/16" flat washer and 5/16" hex-head flange nut (Fig 3). Do not tighten the flange nut.

3. Pull the L-shaped support bracket up tight against the inside wall of the blower housing and tighten the flange nut (Fig. 3).

4. Insert a #10 x 3/4" screw through the extended loop at the end of the tension spring (Fig. 4). Screw one #10 nut to within 1/8 inch (3.2 mm) from the screw head, allowing the spring to pivot freely (Fig. 4).

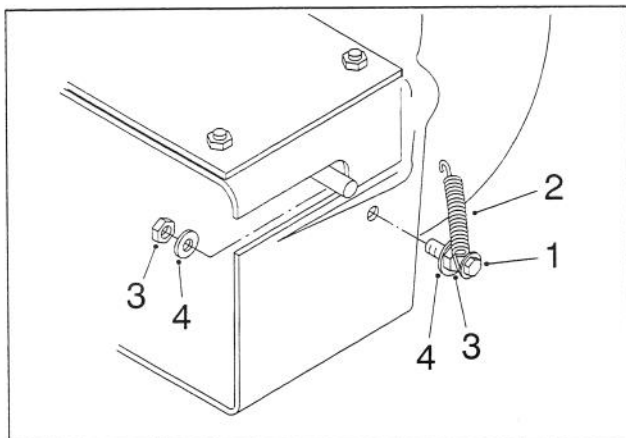


Figure 4

- | | |
|-----------------------|------------------------|
| 1. Screw (#10 x 3/4") | 3. Nut (#10) |
| 2. Spring | 4. Flat washer (7/32") |

5. Slide one 7/32" flat washer onto the spring and screw assembly (Fig. 4). Insert the screw through

the hole in the blower housing from the outside and secure in place with another flat washer and nut (Fig. 4). Tighten the nut.

6. To install the latch, hook the end of the spring in the small hole in the latch. Slide the 1/4" x 3/4" hex-head bolt through the latch and the hole in the blower housing. Secure in place with a 1/4" washer and 1/4" nylon lock nut (Fig. 5) **but make sure the latch pivots freely.**

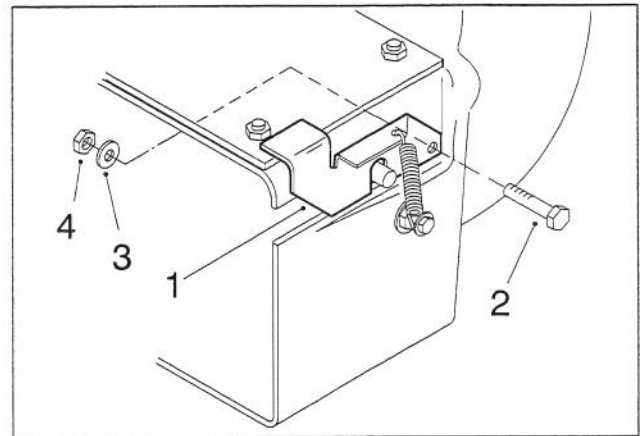


Figure 5

- | | |
|--------------------------------|--------------------------|
| 1. Latch | 3. Flat washer (1/4") |
| 2. Hex-head bolt (1/4" x 3/4") | 4. Nylon lock nut (1/4") |

☐ **Mount the Blower to the Mower**

Refer to the instructions under *Mount the Blower to the Mower*, in the Easy Twin Grass Bagger Operator's Manual.

☐ **Install the Belt Covers**

Refer to the instructions under *Install the Belt Covers*, in the Easy Twin Grass Bagger Operator's Manual.

☐ **Assemble the Bagger**

1. Install the "full-bag" indicator rod through the hole in the rubber seal and the slot in the bagger cover (Fig. 6). Mount the full-bag indicator rod against the bagger cover using two clips, 1/4" x 5/8" pan-head screws, and 1/4" nylon lock nuts (Fig. 6).

2. Screw the jam nut completely onto the indicator rod (Fig. 6). Then screw the handle (Fig. 6) close to the jam nut so you can read the decal from the operator's position. Tighten the jam nut up against the handle to lock it in place.

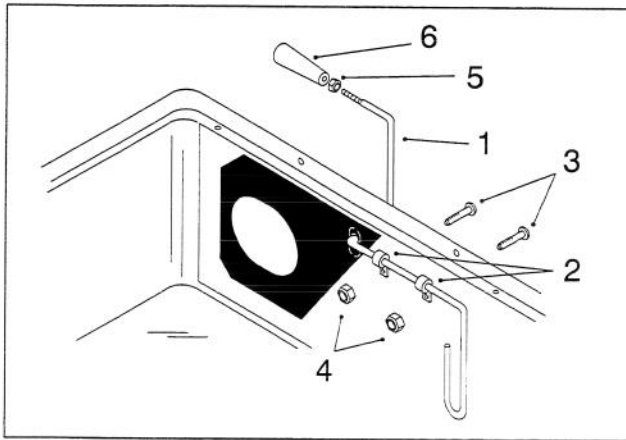


Figure 6

- | | |
|---------------------------------|--------------------------|
| 1. "Full-bag" indicator rod | 4. Nylon lock nut (1/4") |
| 2. Clips | 5. Jam nut |
| 3. Pan-head screw (1/4" x 5/8") | 6. Handle |

3. Mount the frame and hinge assembly to the bagger top (Fig. 7) using two 1/4" x 3/4" bolts (already installed on the hinge assembly) and two 1/4" nylon lock nuts.

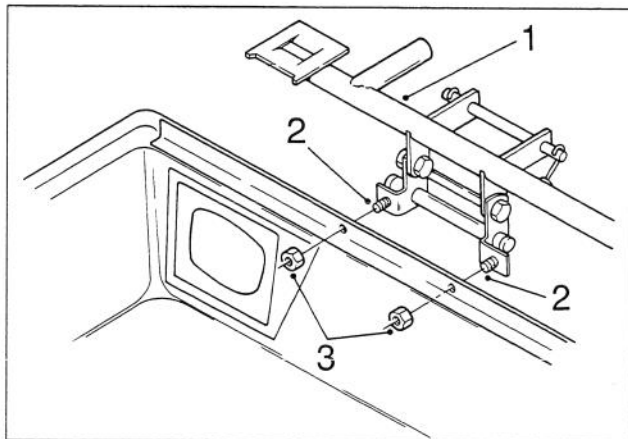


Figure 7

- | | |
|--------------------------------|--------------------------|
| 1. Frame and hinge assembly | 3. Nylon lock nut (1/4") |
| 2. Hex-head bolt (1/4" x 3/4") | |

❑ Install the Bagger Assembly

Refer to the instructions under *Install the Bagger Assembly* in the Easy Twin Grass Bagger Operator's Manual.

❑ Assemble the Discharge Tube

1. Attach the rubber latch to the **middle** hole in the discharge tube using the plastic two-piece fastener (Fig. 8). Install the flanged spacer through the hole in the discharge tube from the inside. Place the rubber latch (grip tab up) over the spacer shaft.

2. Insert the barbed fastener into the hole in the flanged spacer and push them together.

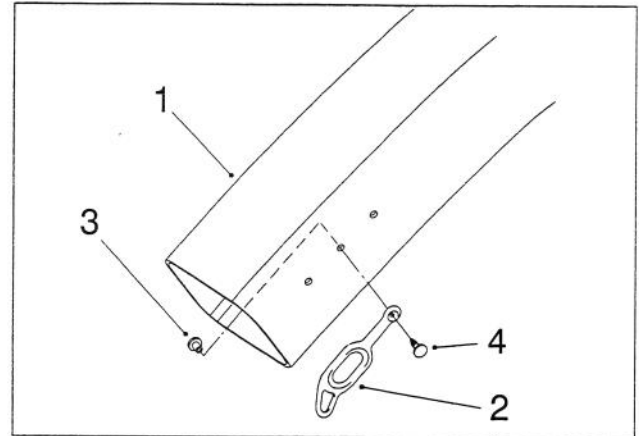


Figure 8

- | | |
|-------------------|--------------------|
| 1. Discharge tube | 3. Flanged spacer |
| 2. Rubber latch | 4. Barbed fastener |

❑ Install the Discharge Tube

1. Insert the upper end of the discharge tube into the bagger cover. Slide the lower end of the discharge tube over the blower discharge opening.

2. Hook the rubber latch onto the blower knob (Fig. 9).

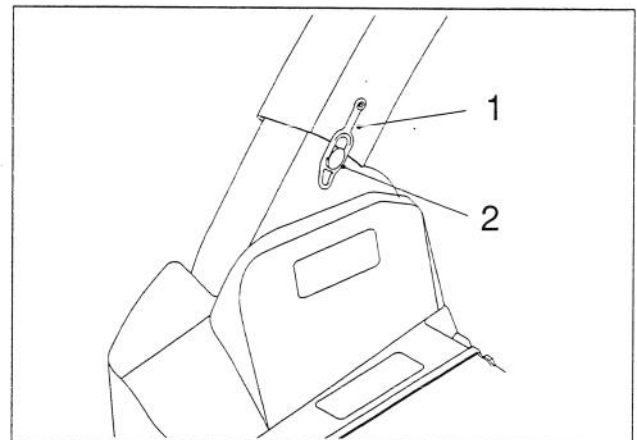


Figure 9

- | | |
|-----------------|----------------|
| 1. Rubber latch | 2. Blower knob |
|-----------------|----------------|