



**Count on it.**

# Parts Catalog

## **SnowMax 724 ZXR Snowthrower**

Model No. 38720—Serial No. 400000000 and Up



# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

## Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

## Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

## Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# Contents

Main Frame Assembly ..... 4

Rotor Assembly ..... 6

Rotor Drive Assembly ..... 8

Transmission, Drive and Tire Assembly ..... 10

Engine Assembly ..... 12

Fuel System and Carburetor Assembly ..... 14

Intake and Exhaust Assembly ..... 16

Ignition and Electrical Assembly ..... 18

Crankcase Assembly ..... 20

Governor Assembly ..... 22

Piston and Head Assembly ..... 24

Blower Housing and Shrouds Assembly ..... 26

 
Engine Decal Assembly ..... 28

Chute Assembly ..... 30

Handle and Control Assembly ..... 32

Attachments and Accessories ..... 34


# Main Frame Assembly

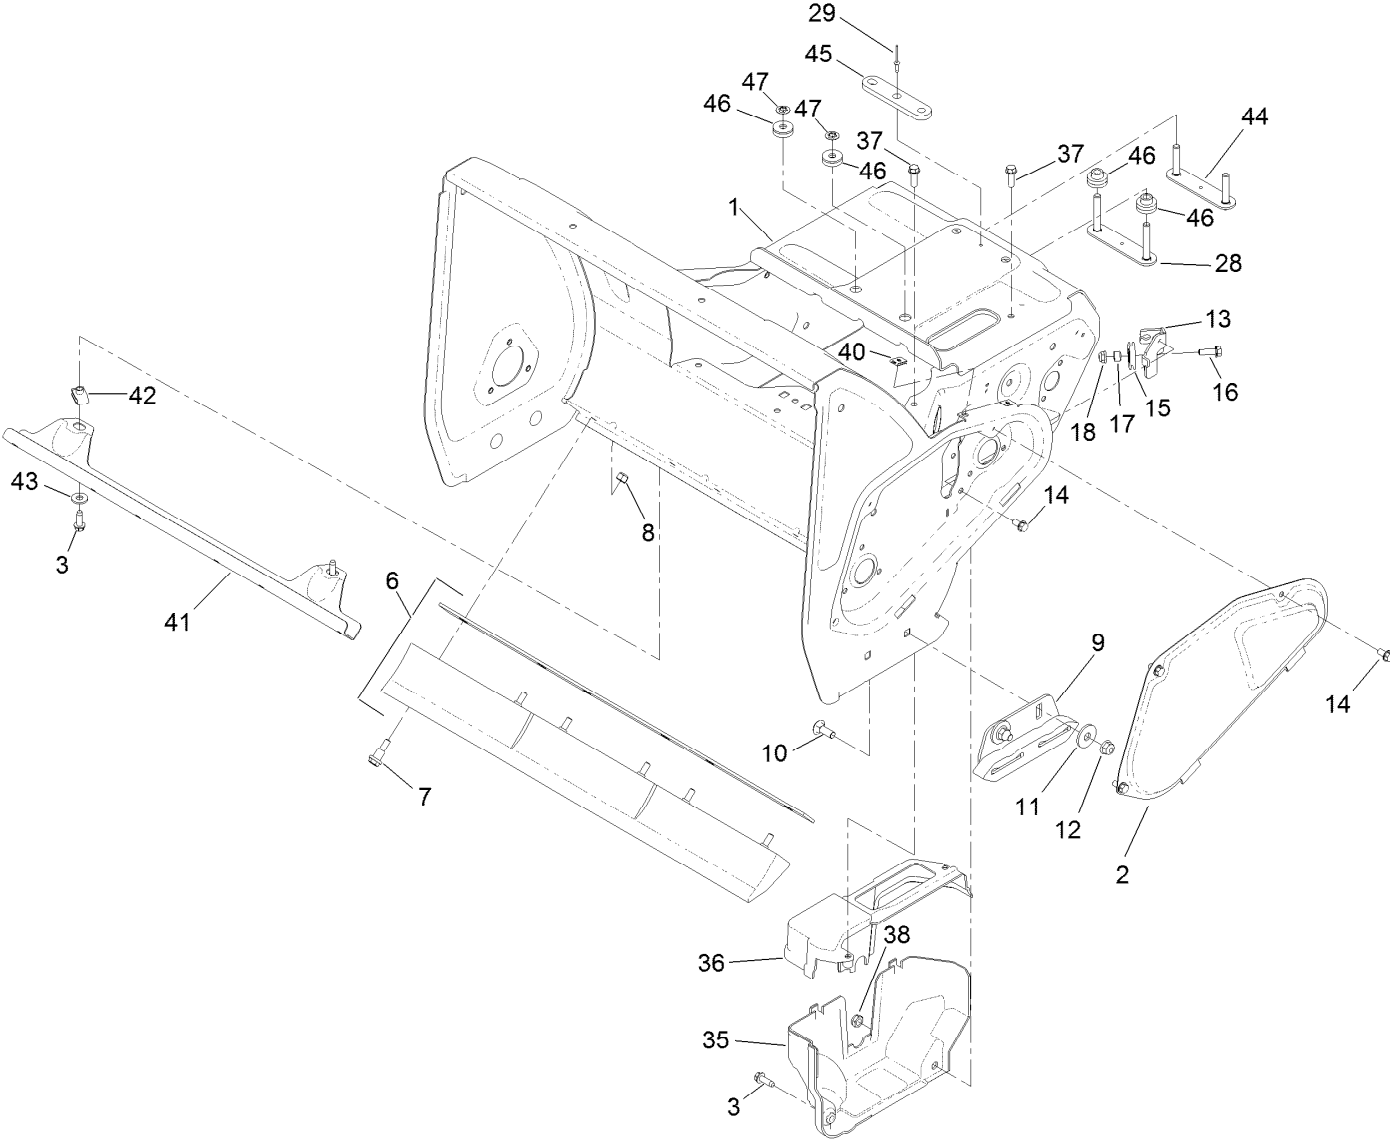

## Main Frame Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    |
|-------------|--------------------|-------------|---------------------|-------------|--------------------|-------------|-----------------------|
| 1           | 130-9550-01        | 1           | Frame               | 18          | 137-3005           | 1           | Nut-HF                |
| 2           | 130-9581-01        | 1           | Cover-Belt          | 28          | 136-7172           | 1           | Plate-Stud, Front ASM |
| 3           | 49-2040            | 3           | Screw-HWHTF         | 29          | 923786             | 1           | Rivet                 |
| 6           | 130-9628           | 1           | Scraper ASM         | 35          | 131-1763           | 1           | Cover-Belt, Lower     |
| 7           | 104-0858           | 6           | Bolt-Shoulder       | 36          | 131-1764           | 1           | Cover-Belt, Upper     |
| 8           | 137-3088           | 6           | Nut-Hex             | 37          | 137-3099           | 2           | Screw-Plastite, HWH   |
| 9           | 130-9619           | 2           | Skid ASM            | 38          | 137-3089           | 1           | Nut-Hex               |
| 10          | 137-3059           | 4           | Bolt-CARR           | 40          | 107-1013           | 2           | Nut-Speed, U-Type     |
| 11          | 119-4150           | 4           | Washer-Flat         | 41          | 131-1797-01        | 1           | Support-Frame, Lower  |
| 12          | 119-4041           | 4           | Nut-HF              | 42          | 107069             | 2           | Clip                  |
| 13          | 131-1793-03        | 1           | Bracket-Cable       | 43          | 120-9646           | 2           | Washer-Flat           |
| 14          | 32144-4            | 4           | Screw-HWH           | 44          | 136-7177           | 1           | Plate-Stud, Rear ASM  |
| 15          | 95-7949            | 1           | Cable-Pulley        | 45          | 131-5944-01        | 1           | Plate-Spacer          |
| 16          | 120-9678           | 1           | Screw-HHF           | 46          | 131-5945           | 2           | Isolator-Engine       |
| 17          | 55-9370            | 1           | Spacer-Blade, Rotor | 47          | 109-5667           | 2           | Ring-Retaining, Bolt  |

 
# Rotor Assembly

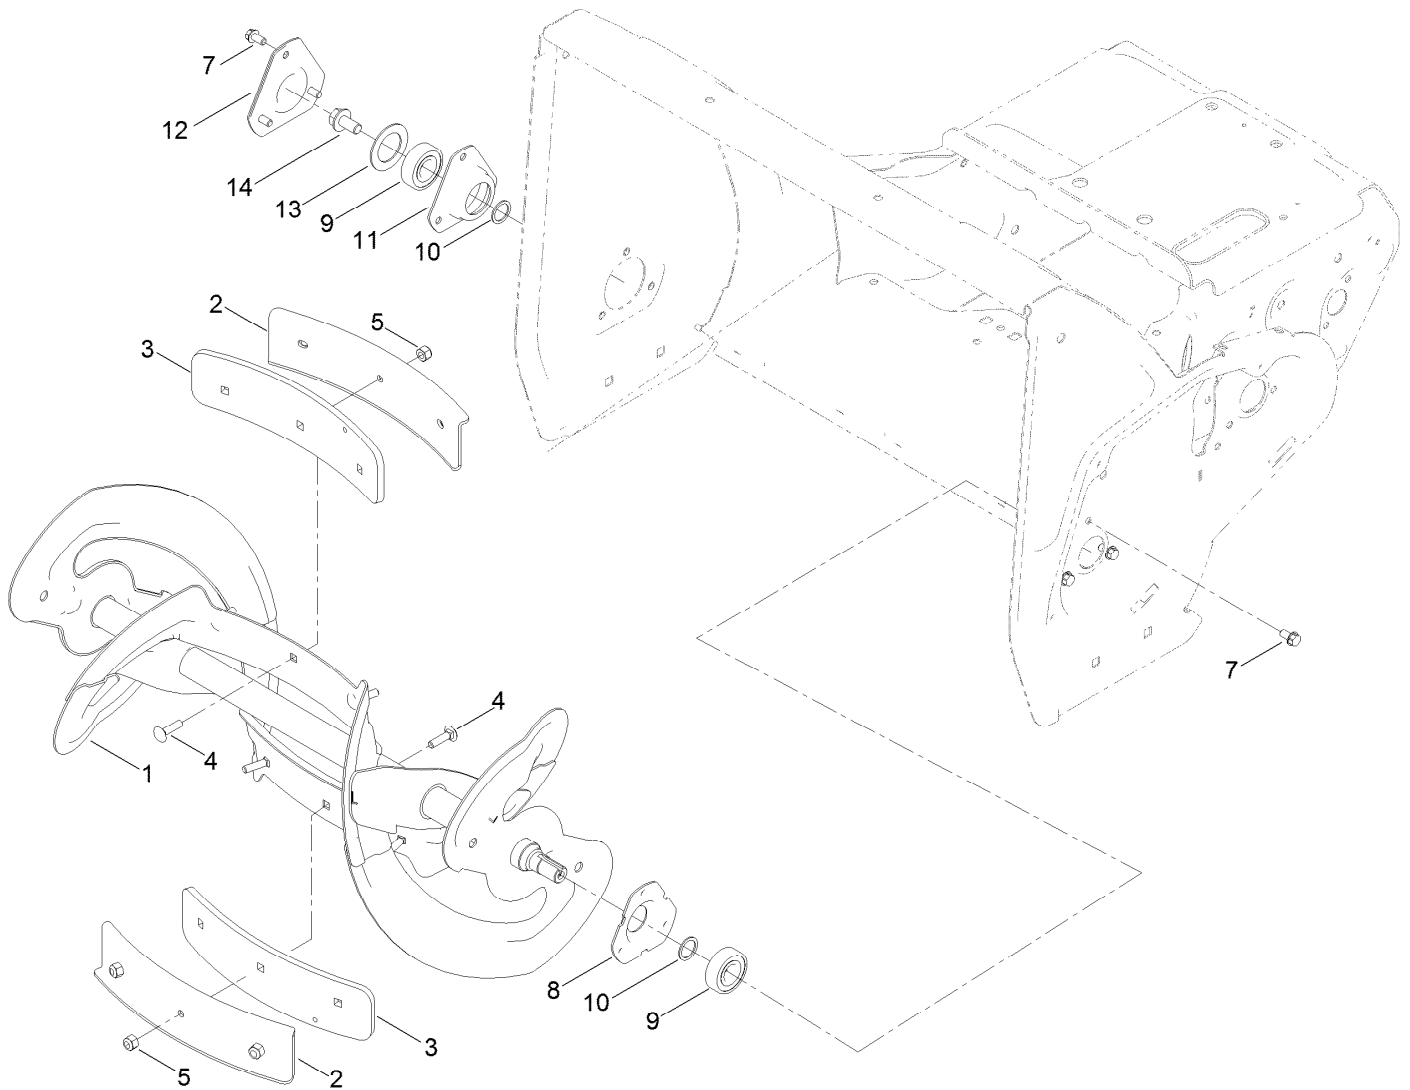

## Rotor Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|-----------------------|-------------|--------------------|-------------|--------------------|
| 1           | 130-9571-03        | 1           | Rotor ASM             | 9           | 38-7820            | 2           | Bearing-Ball       |
| 2           | 130-9568-03        | 2           | Support-Center, Rotor | 10          | 52-7280            | 2           | Washer-Thrust      |
| 3           | 130-9569           | 2           | Paddle-Center         | 11          | 136-7169           | 1           | Flange-Bearing     |
| 4           | 137-3055           | 6           | Bolt-CARR             | 12          | 130-9558-01        | 1           | Cap-Bearing        |
| 5           | 137-3088           | 6           | Nut-Hex               | 13          | 131-5905           | 1           | Washer-Rubber      |
| 7           | 32144-4            | 6           | Screw-HWH             | 14          | 110-9380           | 1           | Screw-HWH          |
| 8           | 136-7134           | 1           | Flange-Bearing        |             |                    |             |                    |

 
## Rotor Drive Assembly

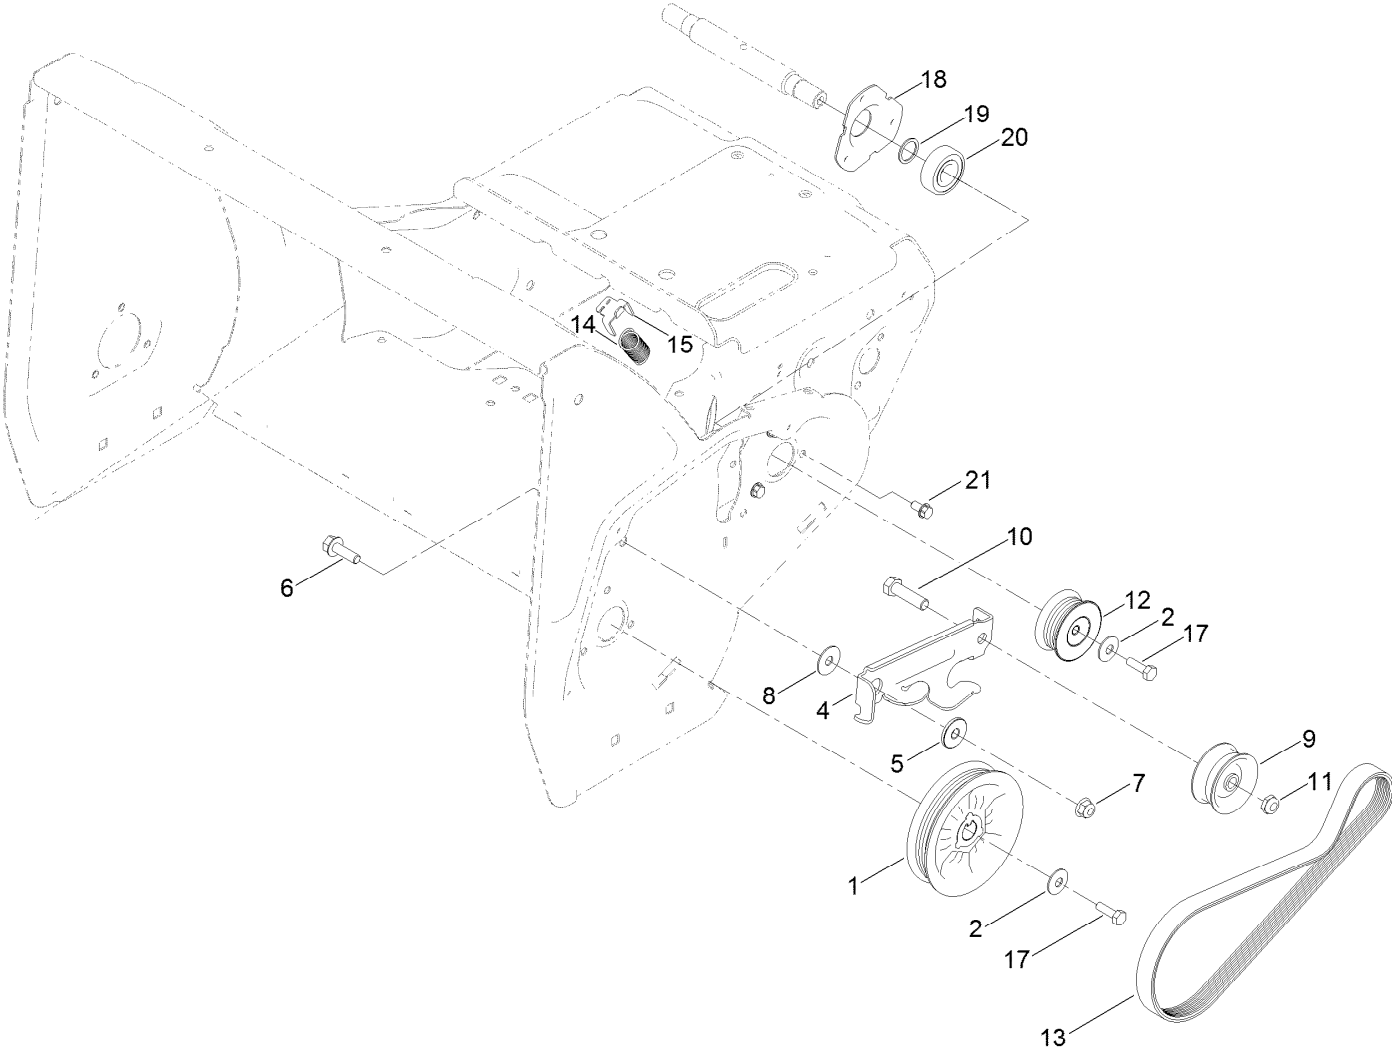

## Rotor Drive Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      |
|-------------|--------------------|-------------|-----------------------|-------------|--------------------|-------------|-------------------------|
| 1           | 130-9574           | 1           | Pulley-Rotor          | 12          | 130-9577           | 1           | Pulley-Jackshaft, Rotor |
| 2           | 3290-456           | 2           | Washer-Belleville     | 13          | 131-5967           | 1           | Belt-Poly V             |
| 4           | 136-7179           | 1           | Arm-Engagement, Rotor | 14          | 130-9572           | 1           | Spring-Extension        |
| 5           | 117-7711           | 1           | Bushing-Idler         | 15          | 136-7133           | 1           | Clip-Spring             |
| 6           | 137-3067           | 1           | Screw-HHF             | 17          | 9080046            | 2           | Screw-HH                |
| 7           | 119-4041           | 1           | Nut-HF                | 18          | 136-7134           | 1           | Flange-Bearing          |
| 8           | 108-4925           | 1           | Washer                | 19          | 52-7280            | 1           | Washer-Thrust           |
| 9           | 131-5988           | 1           | Pulley-Idler, Flat    | 20          | 38-7820            | 1           | Bearing-Ball            |
| 10          | 137-3065           | 1           | Screw-HH              | 21          | 32144-4            | 3           | Screw-HWH               |
| 11          | 121-4600           | 1           | Nut-Hex               |             |                    |             |                         |
 
# Transmission, Drive and Tire Assembly

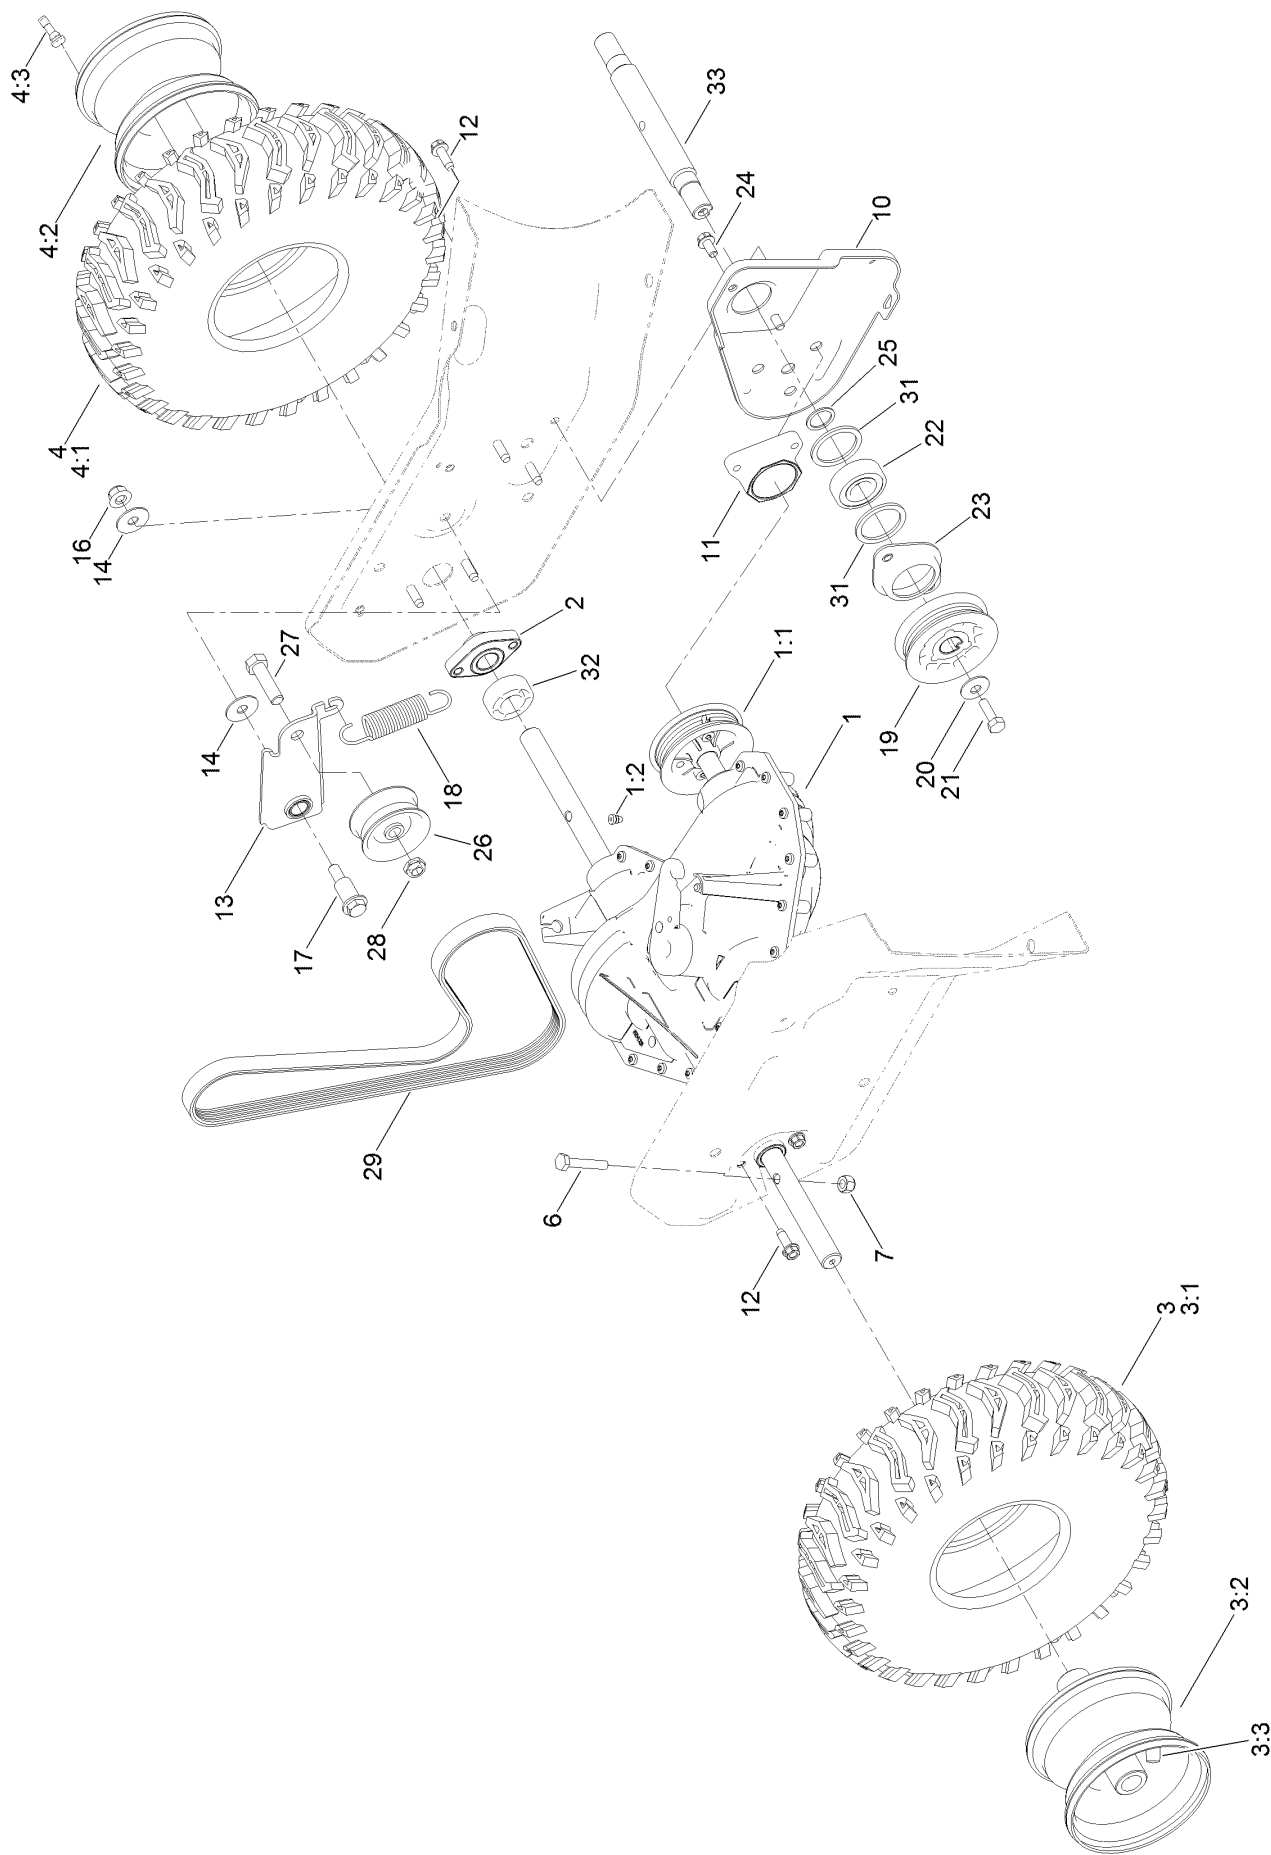


## Transmission, Drive and Tire Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------------|-------------|--------------------|-------------|--------------------|
| 1           | 130-9642           | 1           | Transmission             | 14          | 108-4925           | 2           | Washer             |
| 1:1         | 131-5973           | 1           | Pulley Repair Kit        | 16          | 119-4041           | 1           | Nut-HF             |
| 1:2         | 131-5984           | 1           | Plug-Oil                 | 17          | 136-7192           | 1           | Bolt-Shoulder, HHF |
| 2           | 130-9643           | 2           | Bearing-Axle             | 18          | 130-9645           | 1           | Spring-Extension   |
| 3           |                    | 1           | RH Wheel And Tire ASM ●  | 19          | 130-9583           | 1           | Pulley-Jackshaft   |
| 3:1         | 130-9559           | 1           | Tire                     | 20          | 3290-456           | 1           | Washer-Belleville  |
| 3:2         | 130-9560           | 1           | Wheel                    | 21          | 137-3003           | 1           | Screw-HH,Lock      |
| 3:3         | 232-27             | 1           | Stem-Valve               | 22          | 38-7820            | 1           | Bearing-Ball       |
| 4           |                    | 1           | LH Wheel And Tire ASM ●  | 23          | 136-7171           | 1           | Retainer-Bearing   |
| 4:1         | 130-9559           | 1           | Tire                     | 24          | 32144-4            | 2           | Screw-HWH          |
| 4:2         | 130-9560           | 1           | Wheel                    | 25          | 52-7280            | 1           | Washer-Thrust      |
| 4:3         | 232-27             | 1           | Stem-Valve               | 26          | 131-5988           | 1           | Pulley-Idler, Flat |
| 6           | 137-3050           | 2           | Screw-HH                 | 27          | 137-3065           | 1           | Screw-HH           |
| 7           | 137-3088           | 2           | Nut-Hex                  | 28          | 121-4600           | 1           | Nut-Hex            |
| 10          | 130-9586-03        | 1           | Plate-Support, Jackshaft | 29          | 131-5968           | 1           | Belt-Poly V        |
| 11          | 131-1794           | 1           | Support-Bearing          | 31          | 131-5904           | 2           | Washer-Rubber      |
| 12          | 49-2040            | 7           | Screw-HWHTF              | 32          | 131-5910           | 1           | Spacer-Axle        |
| 13          | 131-1795           | 1           | Idler-Traction           | 33          | 130-9585           | 1           | Jackshaft          |

● Not serviced separately

 
# Engine Assembly

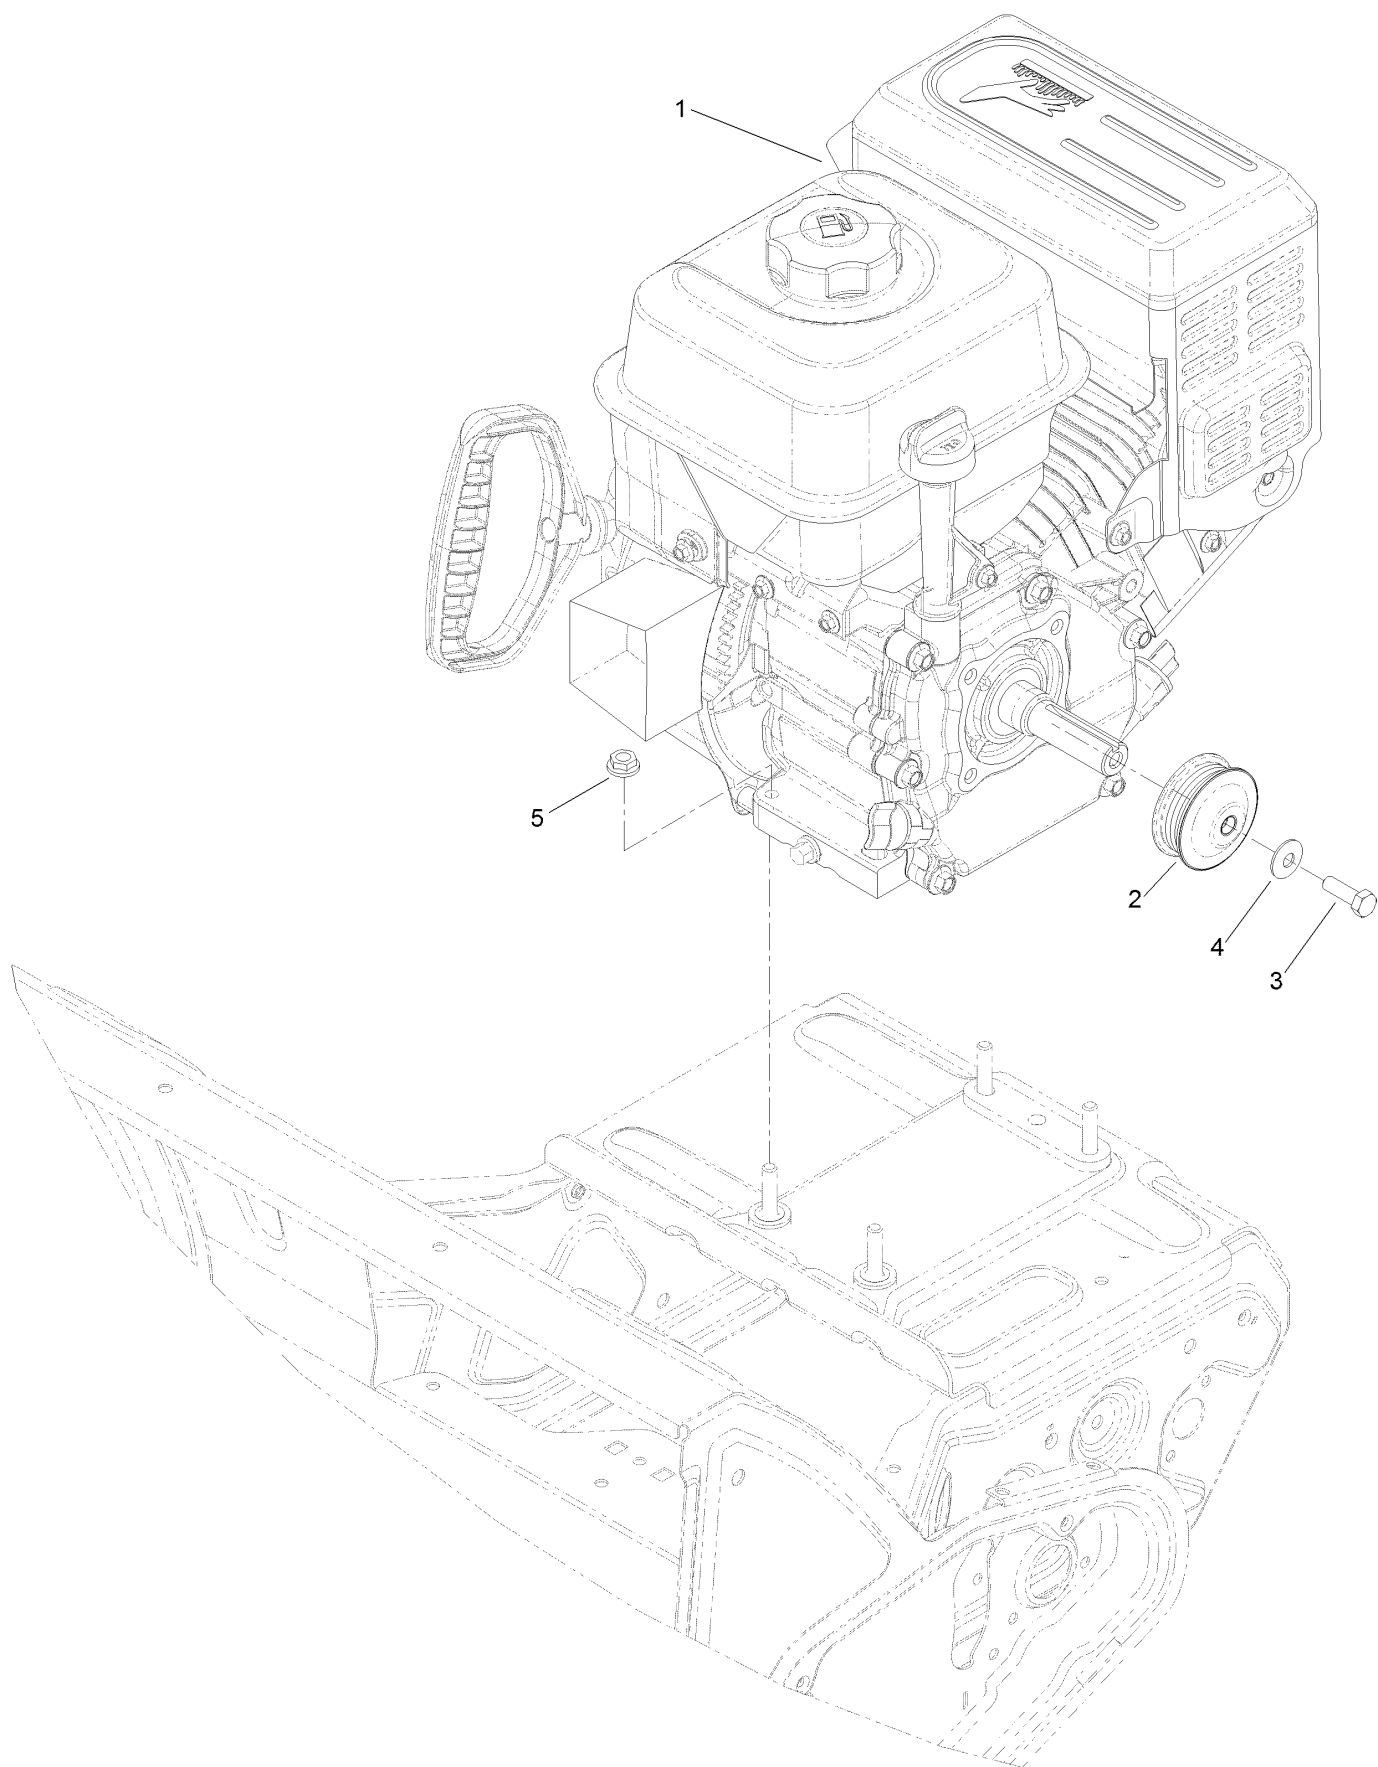

## Engine Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|--------------------|
| 1           | 127-9170           | 1           | Engine-G210Fs-2    | 4           | 3290-456           | 1           | Washer-Belleville  |
| 2           | 131-5908           | 1           | Pulley-Engine      | 5           | 137-3039           | 4           | Nut-HF             |
| 3           | 137-3026           | 1           | Screw-HH, Lock     |             |                    |             |                    |

# Fuel System and Carburetor Assembly

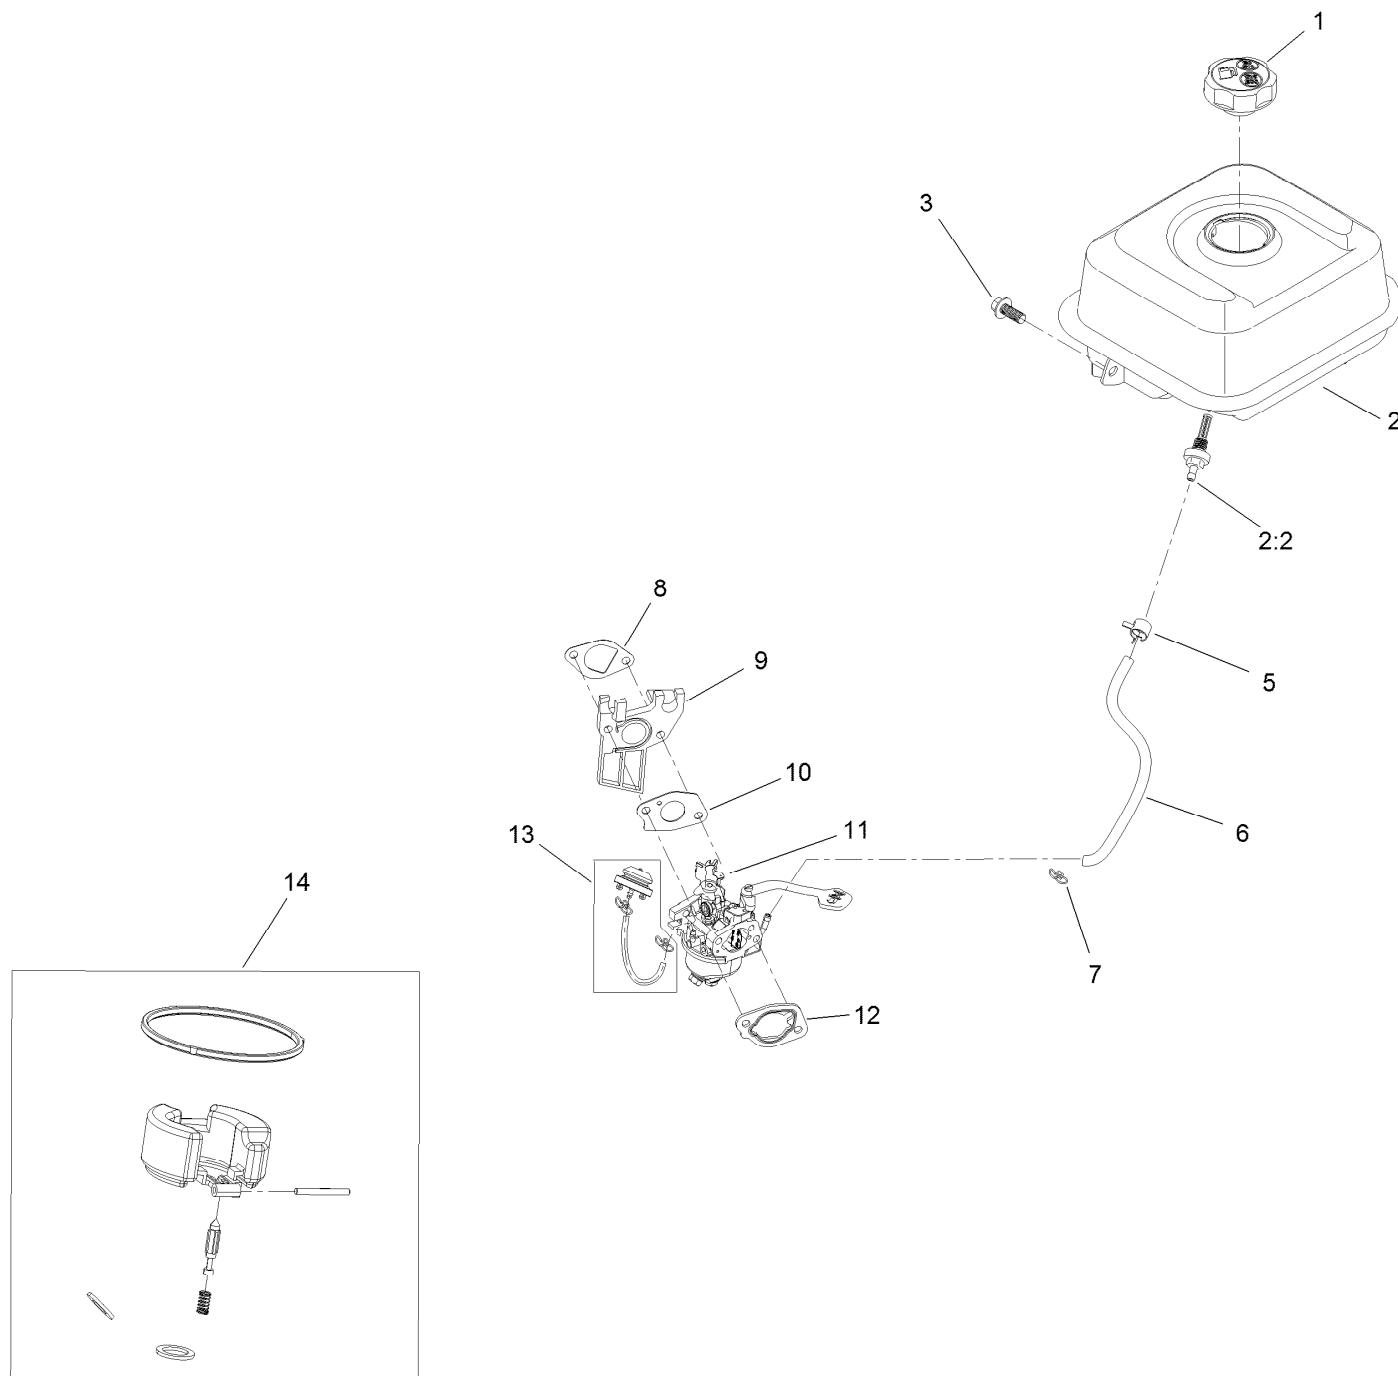


## Fuel System and Carburetor Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>         |
|-------------|--------------------|-------------|--------------------------|-------------|--------------------|-------------|----------------------------|
| 1           | 133-9823           | 1           | Cap-Fuel                 | 9           | 121-0077           | 1           | Insulator-Carburetor       |
| 2           | 127-9497           | 1           | Fuel Tank And Filter ASM | 10          | 121-0078           | 1           | Gasket-Carburetor          |
| 2:2         | 127-9065           | 1           | Filter-Fuel              | 11          | 127-9111           | 1           | Carburetor ASM             |
| 3           | 121-0294           | 1           | Screw-HHF                | 12          | 121-0080           | 1           | Gasket-Carburetor          |
| 5           | 127-9120           | 1           | Clamp-Hose               | 13          | 127-9079           | 1           | Primer Kit                 |
| 6           | 127-9403           | 1           | Hose-Fuel                | 14          | 127-9394           | 1           | Internal Carb Service Kit  |
| 7           | 121-0087           | 1           | Clamp-Hose               | 99          | 127-9301           | 1           | High Altitude Kit - G210 ● |
| 8           | 121-0076           | 1           | Gasket-Carburetor        |             |                    |             |                            |

● Not illustrated


# Intake and Exhaust Assembly

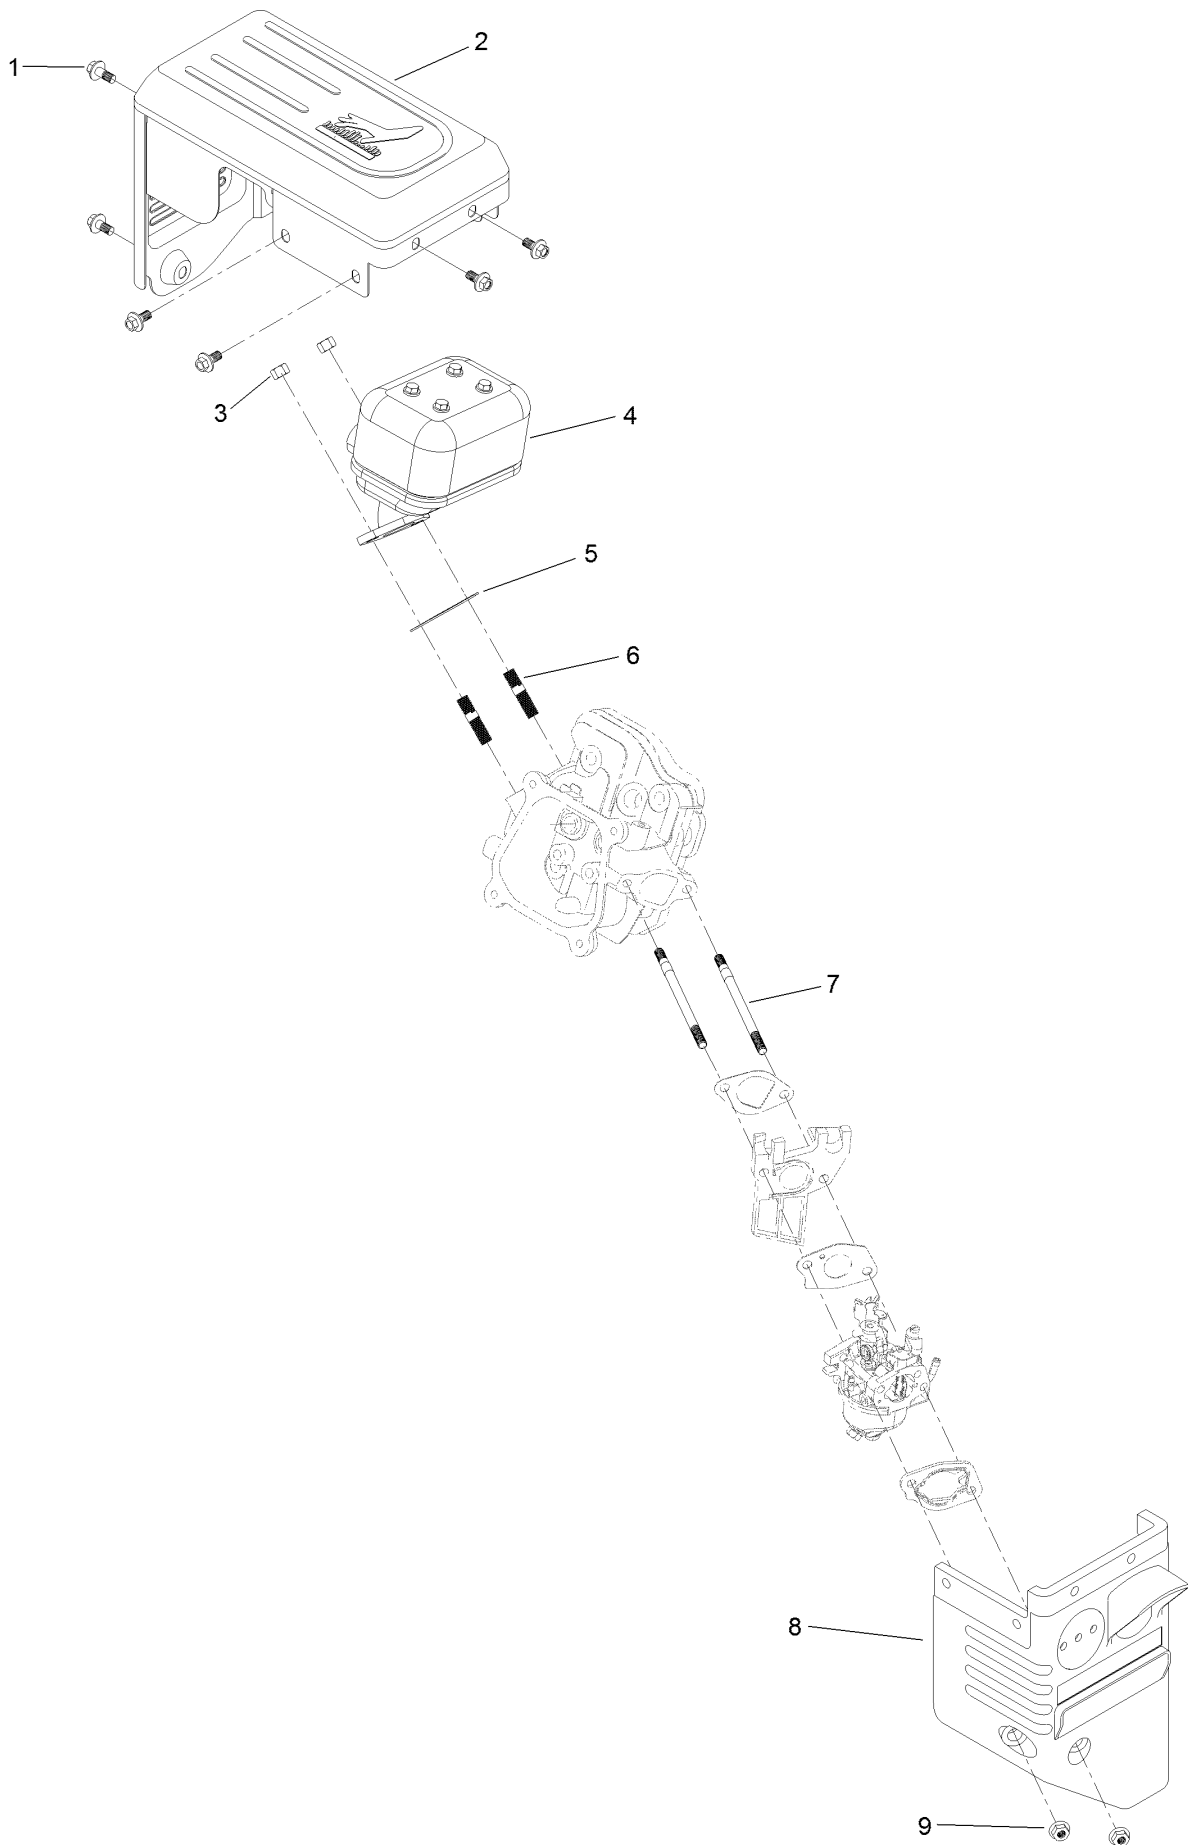

## Intake and Exhaust Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|--------------------|
| 1           | 121-0294           | 6           | Screw-HHF          | 6           | 121-0464           | 2           | Stud-Exhaust       |
| 2           | 136-7778           | 1           | Guard-Muffler      | 7           | 121-4112           | 2           | Stud-Intake        |
| 3           | 121-0199           | 2           | Nut-HH             | 8           | 127-9112           | 1           | Box-Heater         |
| 4           | 133-9846           | 1           | Muffler ASM        | 9           | 121-0308           | 2           | Nut-Flange         |
| 5           | 121-0167           | 1           | Gasket-Exhaust     |             |                    |             |                    |
 
# Ignition and Electrical Assembly

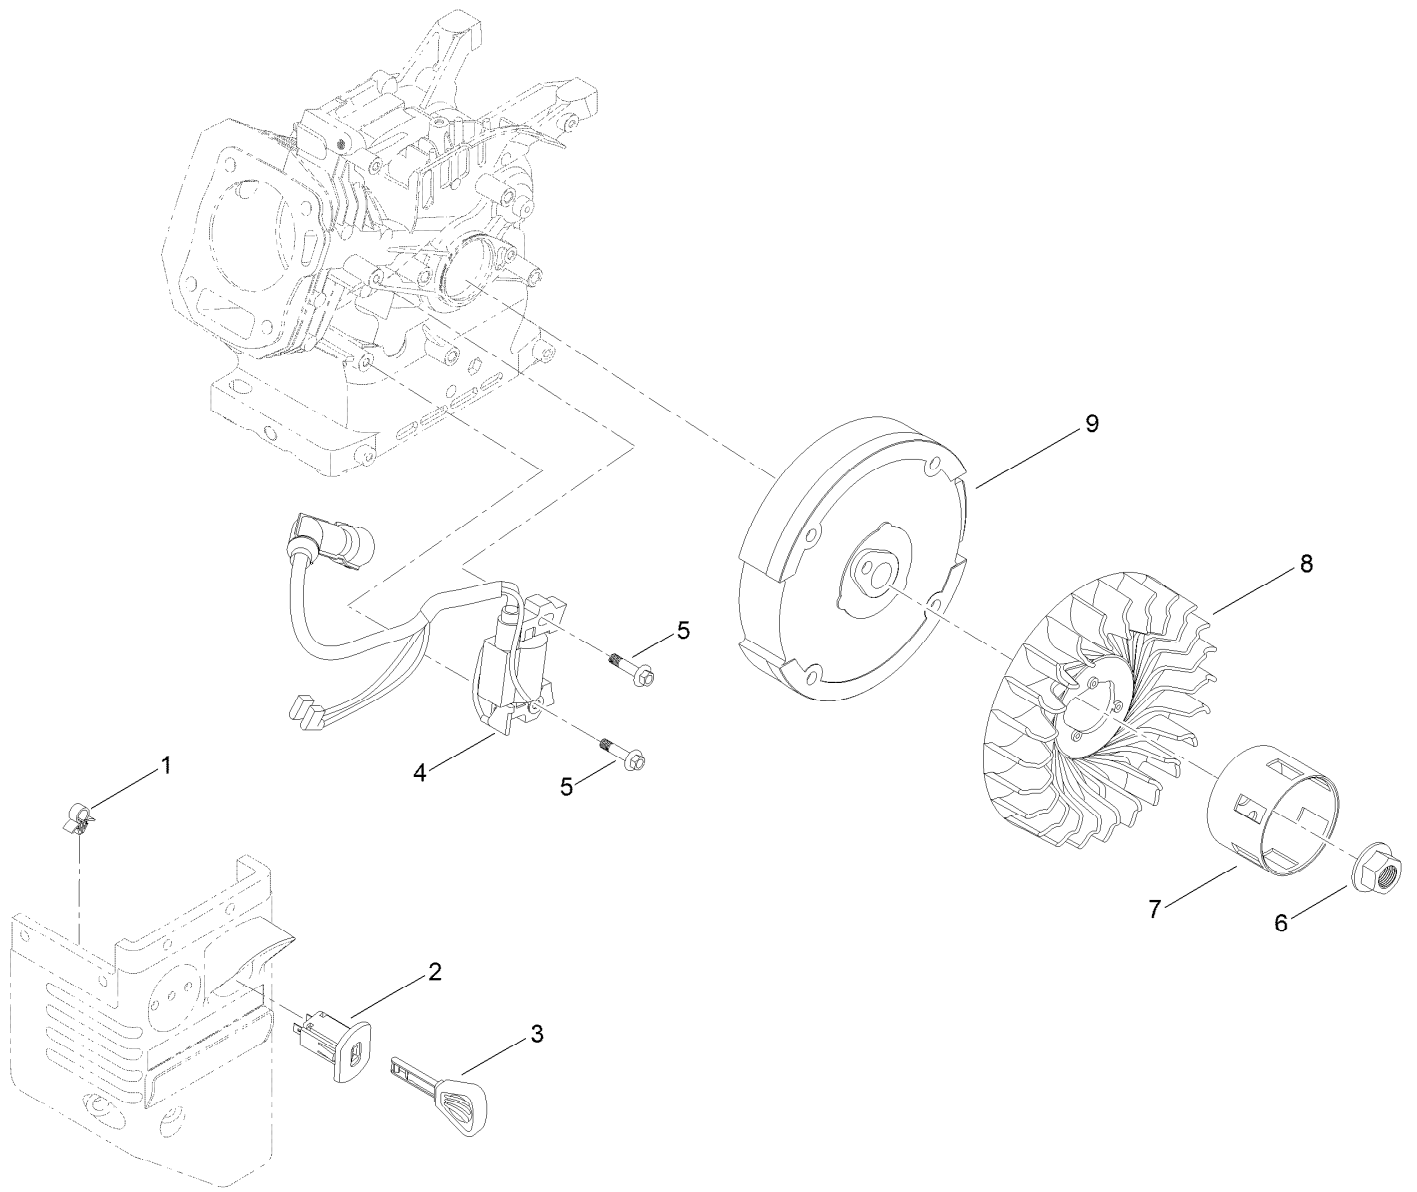


## Ignition and Electrical Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 121-0326           | 1           | Clip               |
| 2           | 121-0283           | 1           | Switch-Key         |
| 3           | 117-7728           | 1           | Key                |
| 4           | 136-7769           | 1           | Ignition Coil ASM  |
| 5           | 121-0097           | 2           | Screw-HHF          |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 6           | 121-0047           | 1           | Nut-Flange         |
| 7           | 127-9106           | 1           | Cup-Starter        |
| 8           | 127-9002           | 1           | Fan                |
| 9           | 127-9003           | 1           | Flywheel-Recoil    |

 
# Crankcase Assembly

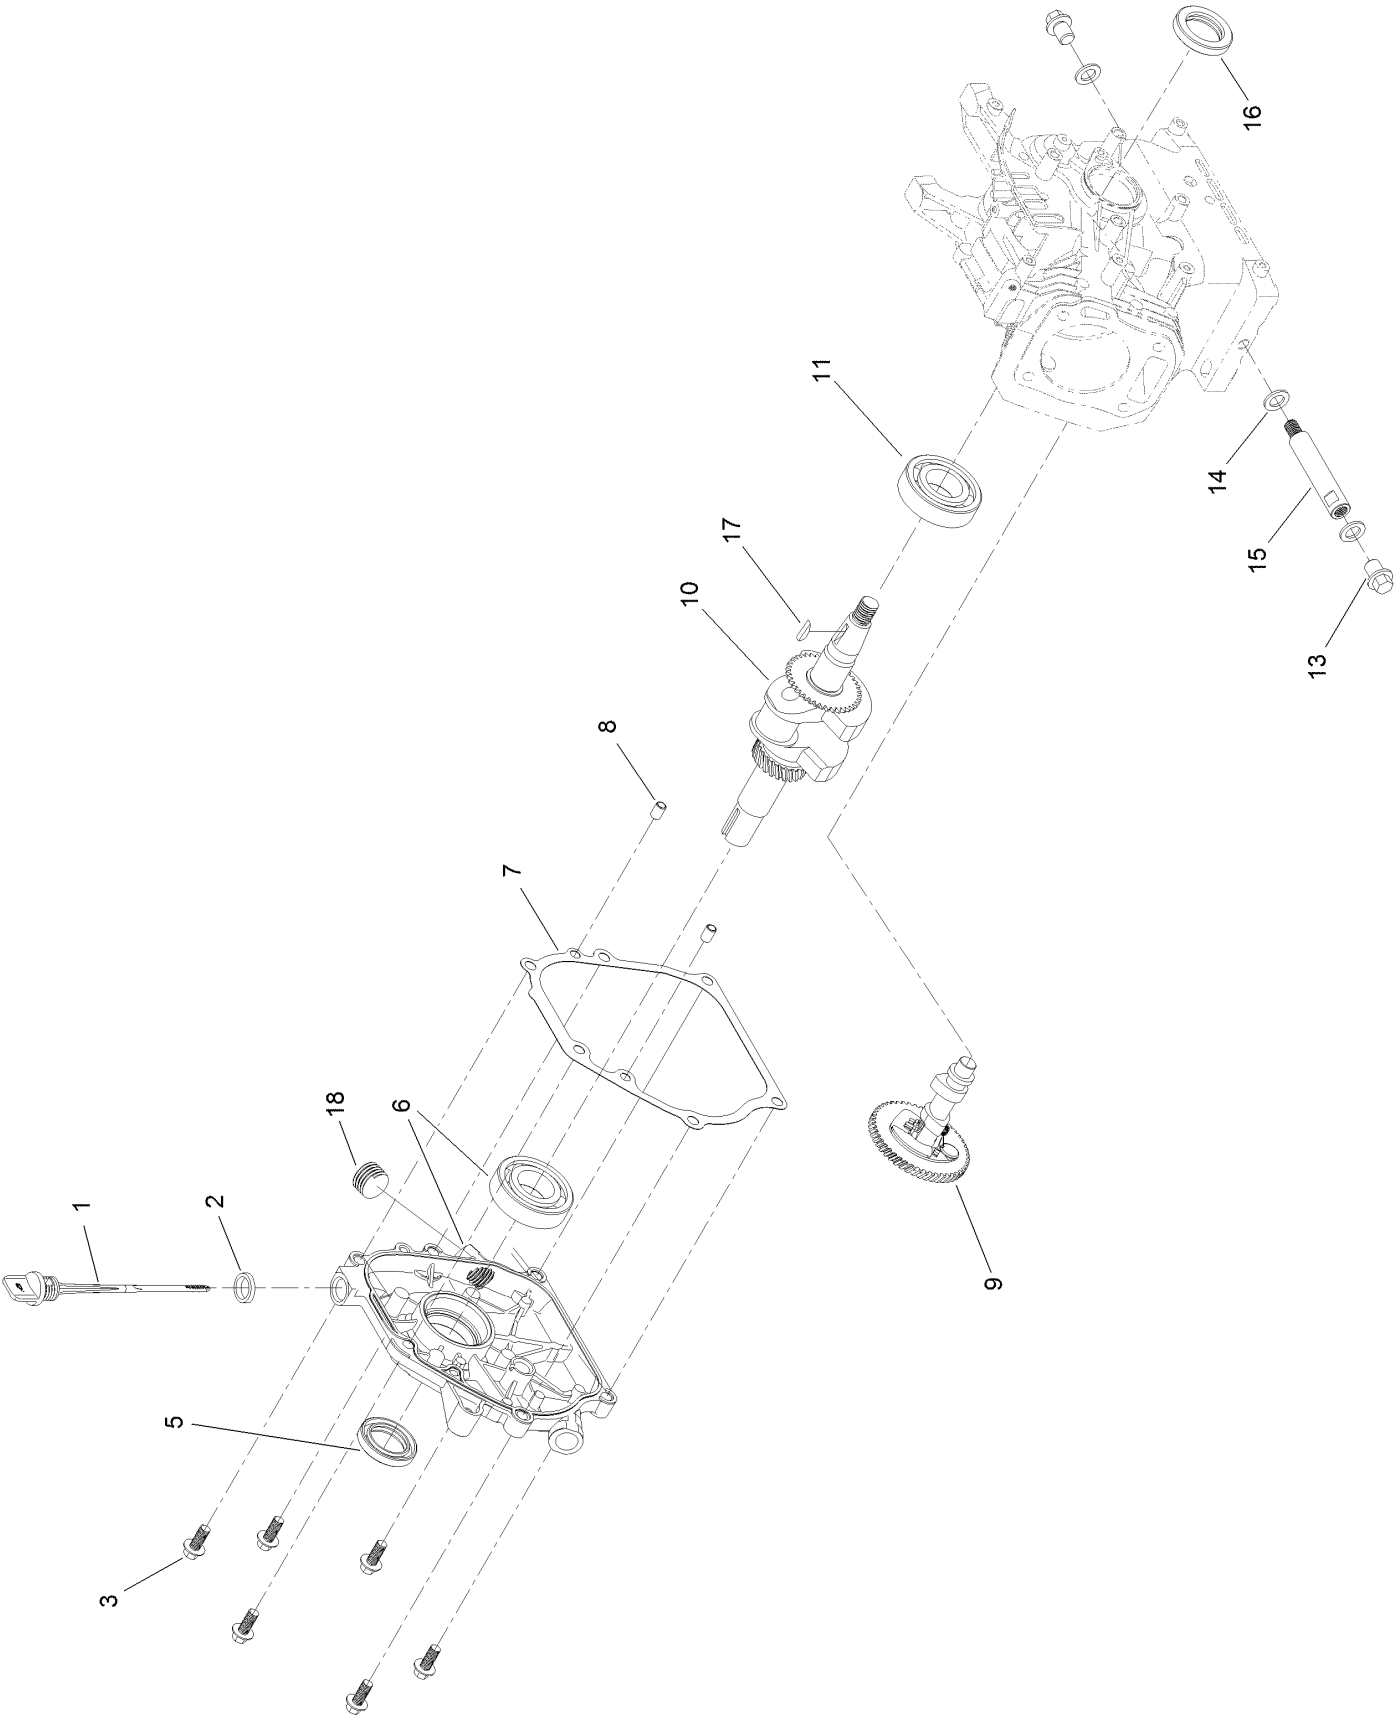

## Crankcase Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|-------------------------|-------------|--------------------|-------------|--------------------|
| 1           | 127-9409           | 1           | Dipstick-Oil            | 10          | 127-9399           | 1           | Crankshaft         |
| 2           | 127-9492           | 1           | Gasket-Dipstick, Rubber | 11          | 121-0056           | 1           | Bearing-Ball       |
| 3           | 121-4114           | 6           | Screw-HHF               | 13          | 121-0030           | 2           | Screw-HHF          |
| 5           | 121-0209           | 1           | Seal-Oil                | 14          | 121-0048           | 3           | Washer-Plain       |
| 6           | 133-9843           | 1           | Crankcase Cover ASM     | 15          | 127-9104           | 1           | Tube-Drain, Oil    |
| 7           | 121-0105           | 1           | Gasket-Cover, Crankcase | 16          | 121-0208           | 1           | Seal-Oil           |
| 8           | 121-0054           | 2           | Pin-Dowel               | 17          | 120-4320           | 1           | Key-Woodruff       |
| 9           | 133-9836           | 1           | Camshaft                | 18          | 133-9805           | 1           | Plug-Drain         |

 
# Governor Assembly

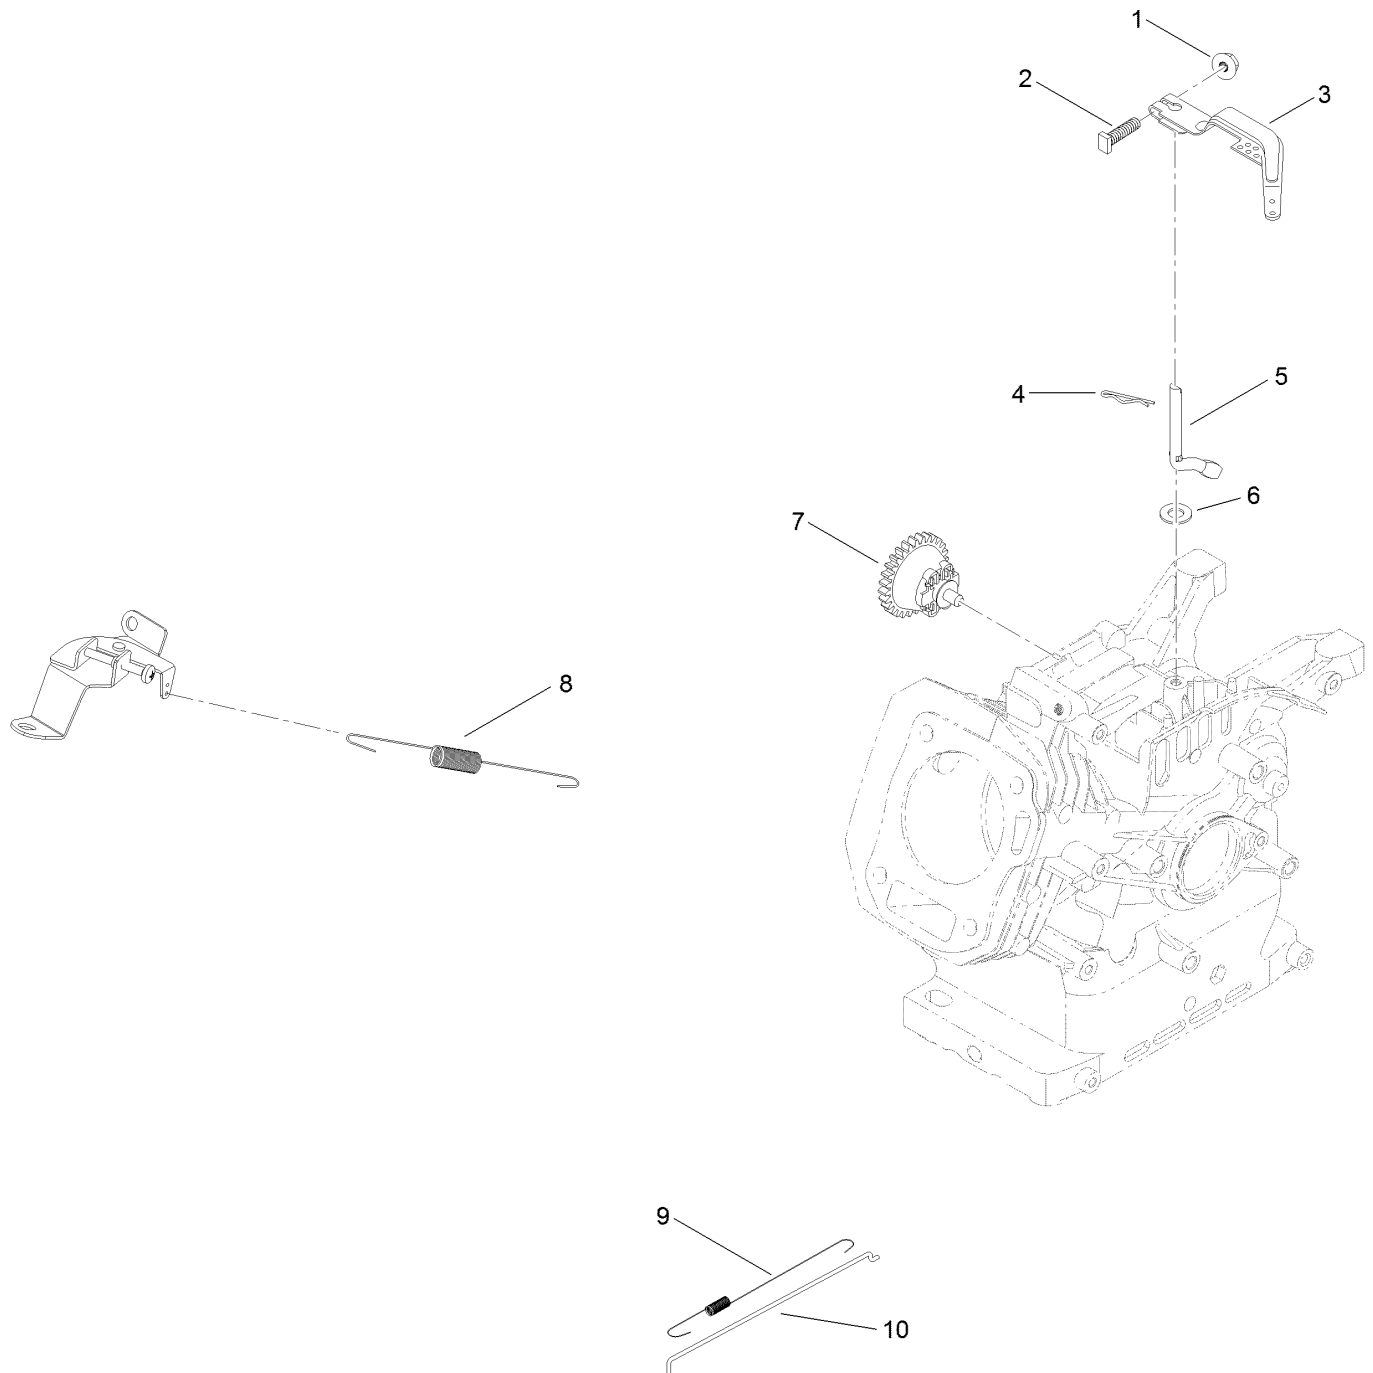

## Governor Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|-------------------------|
| 1           | 120-4236           | 1           | Nut-Flange         | 6           | 121-0498           | 1           | Washer-Plain            |
| 2           | 120-4238           | 1           | Bolt-Arm, Governor | 7           | 133-9994           | 1           | Governor Gear ASM       |
| 3           | 121-0155           | 1           | Arm-Governor       | 8           | 127-9398           | 1           | Spring-Governor         |
| 4           | 120-4256           | 1           | Pin-Hair           | 9           | 121-0153           | 1           | Spring-Return, Throttle |
| 5           | 136-7763           | 1           | Shaft-Governor     | 10          | 121-0148           | 1           | Rod-Governor            |

 
# Piston and Head Assembly

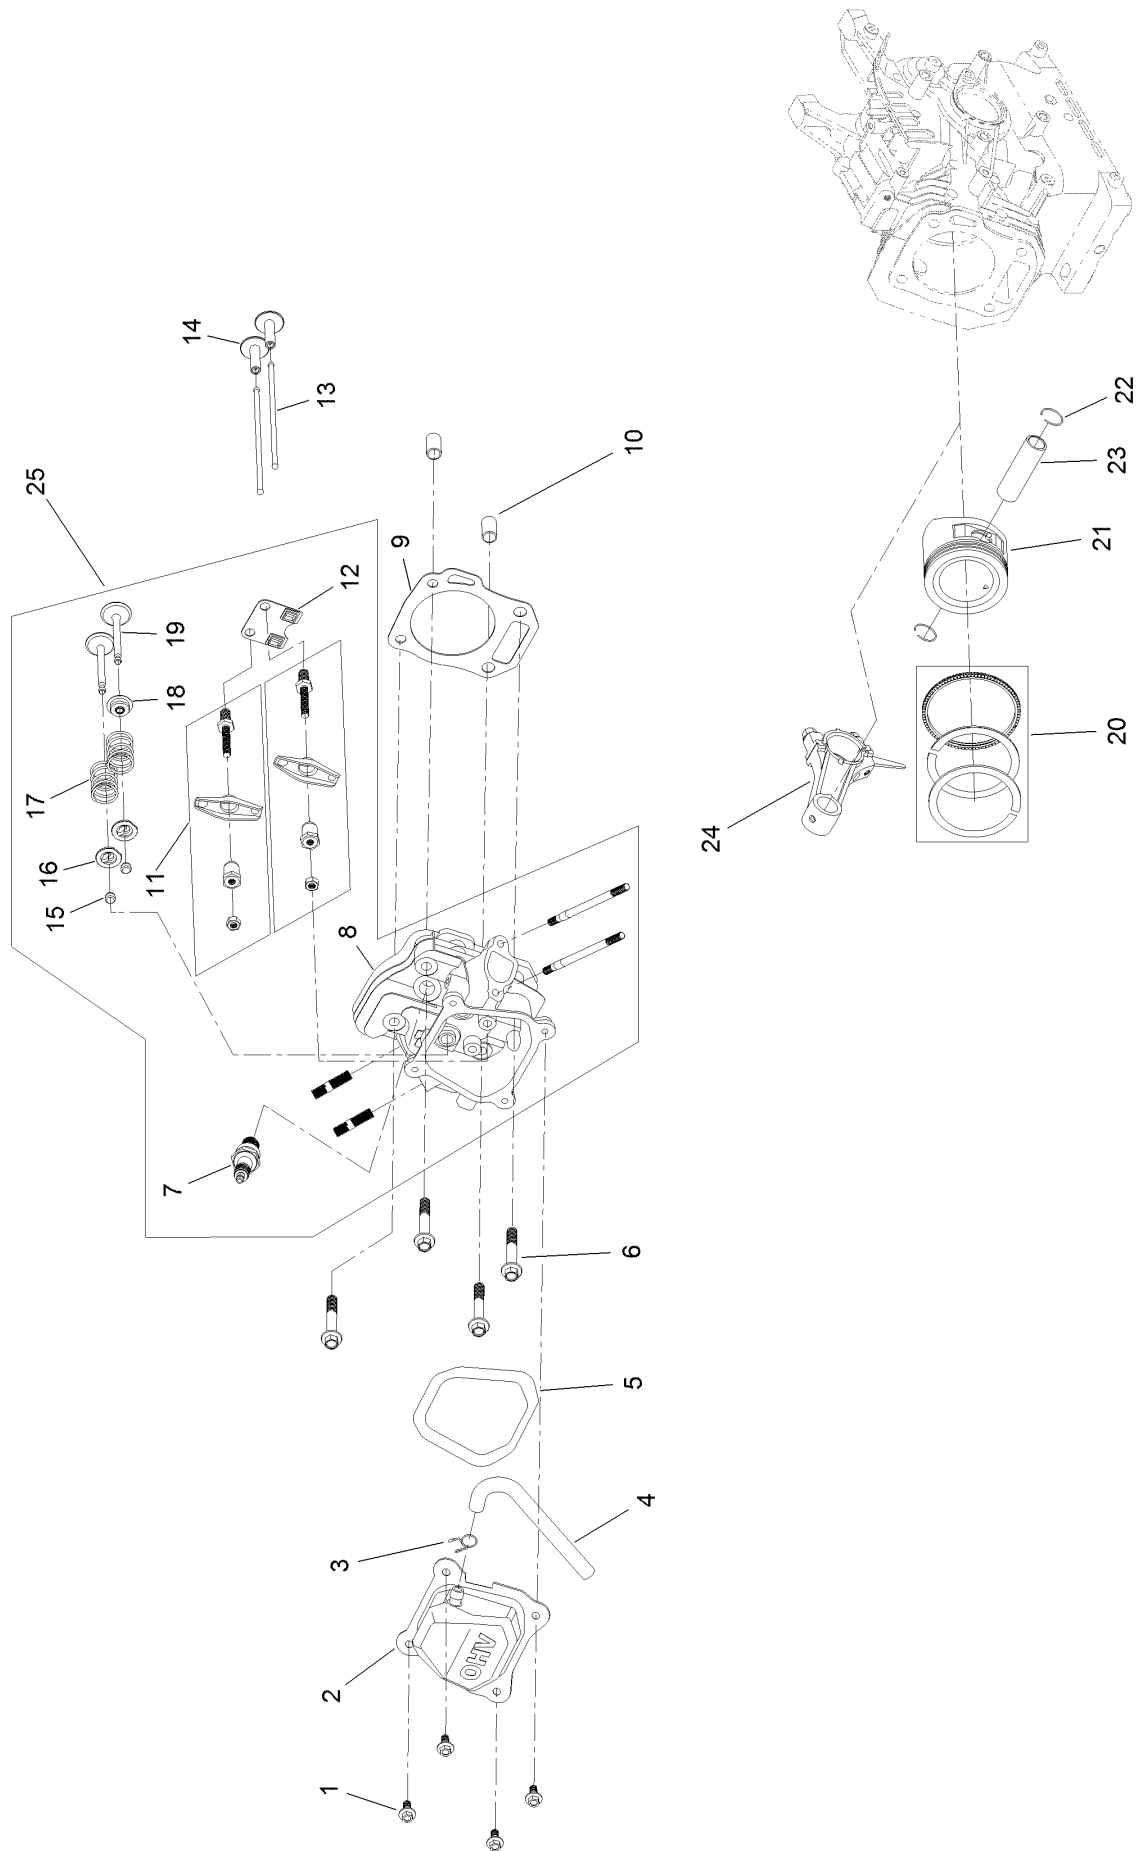

## Piston and Head Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     |
|-------------|--------------------|-------------|-----------------------|-------------|--------------------|-------------|------------------------|
| 1           | 120-4454           | 4           | Screw-HHF             | 14          | 127-9015           | 2           | Tappet-Valve           |
| 2           | 127-9094           | 1           | Cover-Valve           | 15          | 121-4116           | 2           | Rotator-Valve          |
| 3           | 127-9408           | 1           | Clamp-Hose            | 16          | 121-4117           | 2           | Retainer-Spring, Valve |
| 4           | 127-9095           | 1           | Tube-Breather         | 17          | 127-9014           | 2           | Spring-Valve           |
| 5           | 121-0109           | 1           | Gasket-Cover, Valve   | 18          | 121-4202           | 1           | Seal-Stem, Valve       |
| 6           | 121-4110           | 4           | Screw-HHF             | 19          | 127-9016           | 1           | Valve Set              |
| 7           | 81-3250            | 1           | Spark Plug            | 20          | 121-4295           | 1           | Ring Set, Piston       |
| 8           | 127-9013           | 1           | Head-Cylinder         | 21          | 121-4293           | 1           | Piston                 |
| 9           | 127-9000           | 1           | Gasket-Head, Cylinder | 22          | 121-0313           | 2           | Clip-Pin, Piston       |
| 10          | 121-0053           | 2           | Pin-Dowel             | 23          | 121-4128           | 1           | Pin-Piston             |
| 11          | 120-4475           | 2           | Rocker Arm ASM        | 24          | 127-9017           | 1           | Connecting Rod ASM     |
| 12          | 121-4120           | 1           | Plate-Guide, Push Rod | 25          | 133-9839           | 1           | Complete Head ASM      |
| 13          | 121-4121           | 2           | Rod-Push              |             |                    |             |                        |

 
# Blower Housing and Shrouds Assembly

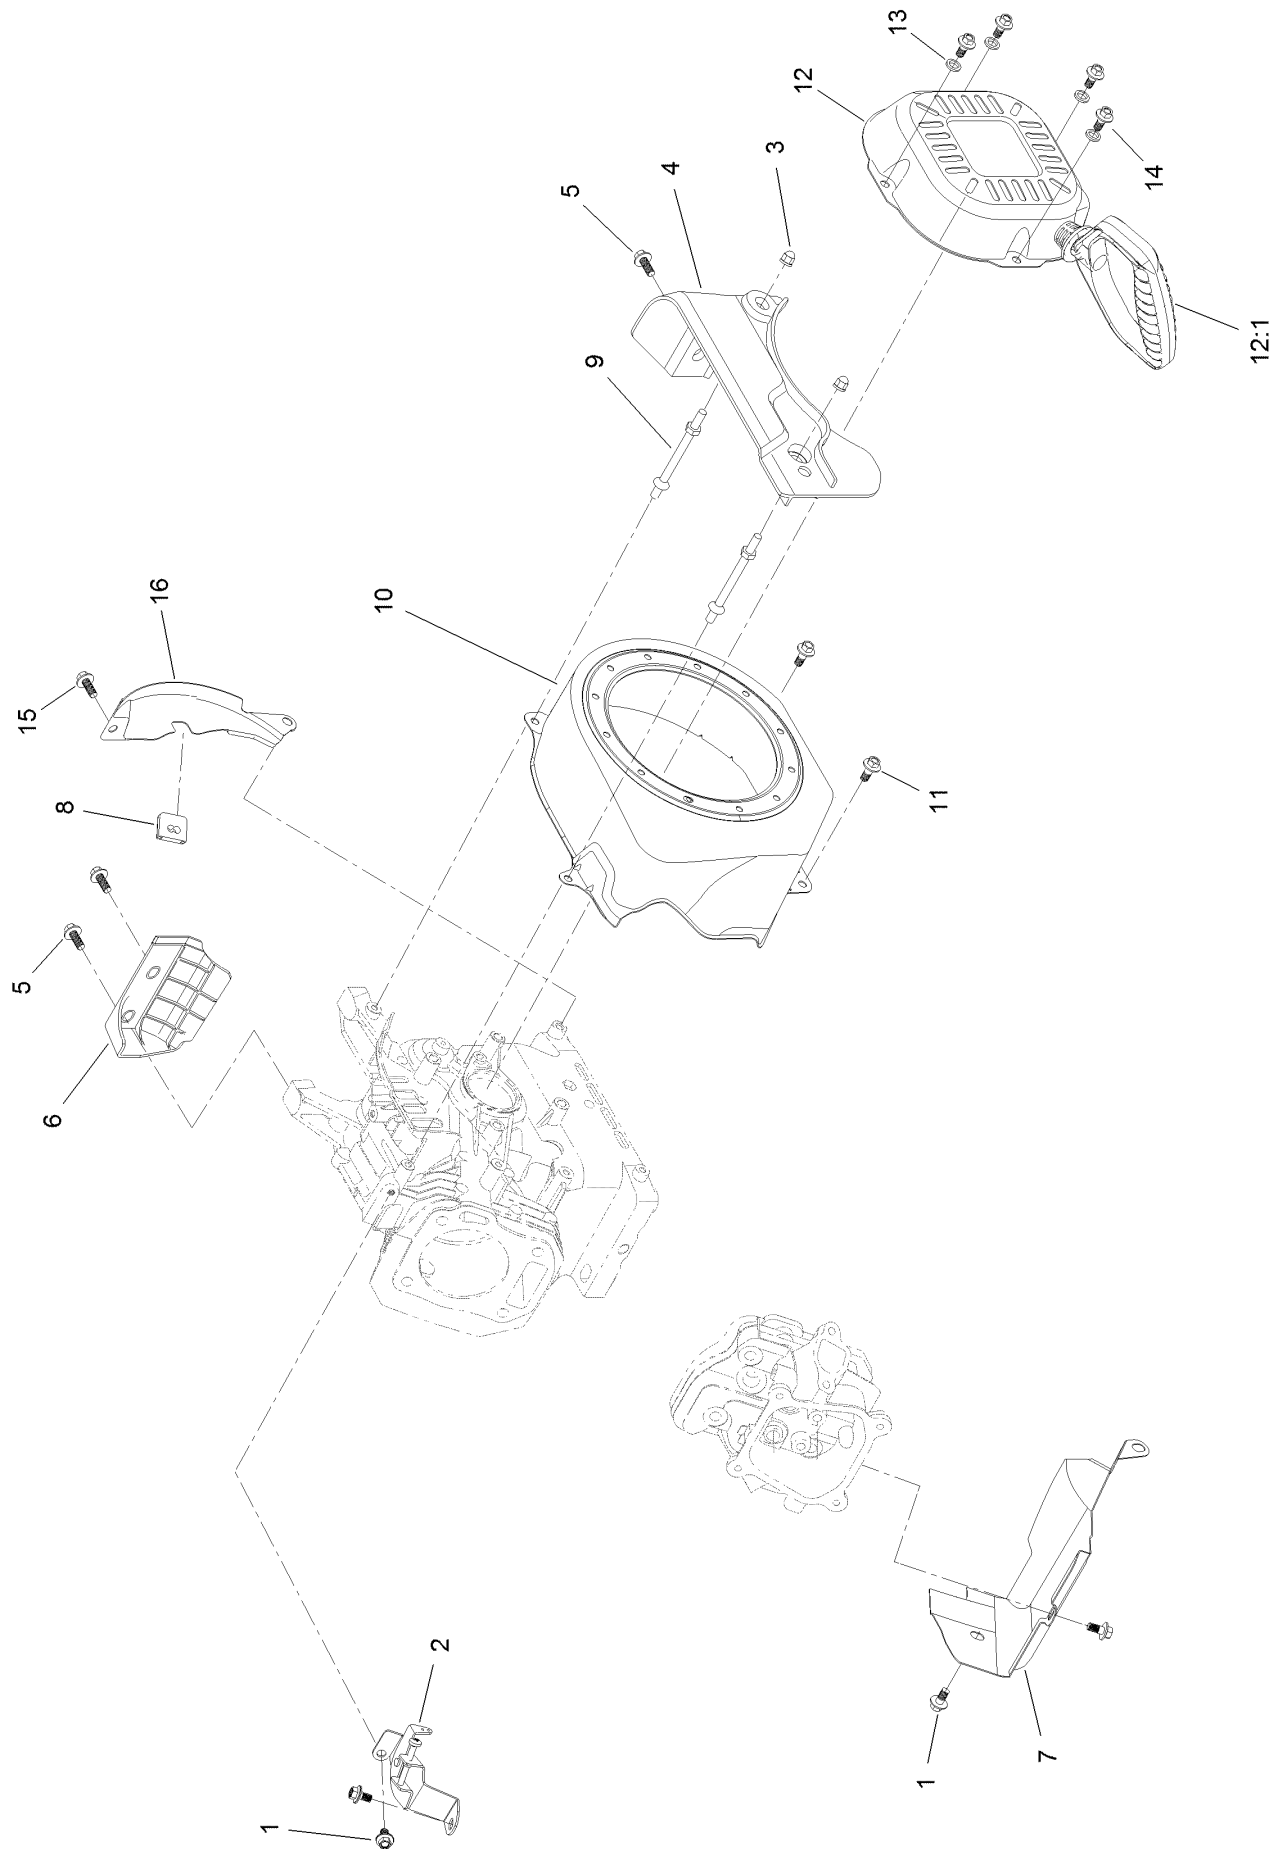

## Blower Housing and Shrouds Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|--------------------|
| 1           | 121-0118           | 4           | Screw-HHF          | 10          | 127-9498           | 1           | Shroud-Blower      |
| 2           | 127-9396           | 1           | Speed Control ASM  | 11          | 121-0294           | 2           | Screw-HHF          |
| 3           | 127-9383           | 2           | Nut-Acorn          | 12          | 127-9402           | 1           | Recoil Starter ASM |
| 4           | 127-9406           | 1           | Panel-Front        | 12:1        | 121-0287           | 1           | Handle-Recoil      |
| 5           | 127-9123           | 3           | Screw-HHF          | 13          | 127-9380           | 4           | Washer-Plain       |
| 6           | 133-1551           | 1           | Panel-Side, Engine | 14          | 127-9031           | 4           | Screw-HHF          |
| 7           | 127-9096           | 1           | Shroud-Lower       | 15          | 120-4454           | 1           | Screw-HHF          |
| 8           | 121-0325           | 1           | Grommet-Rubber     | 16          | 133-1550           | 1           | Shield-Flywheel    |
| 9           | 127-9110           | 2           | Stud-Mount         |             |                    |             |                    |

 
# Engine Decal Assembly

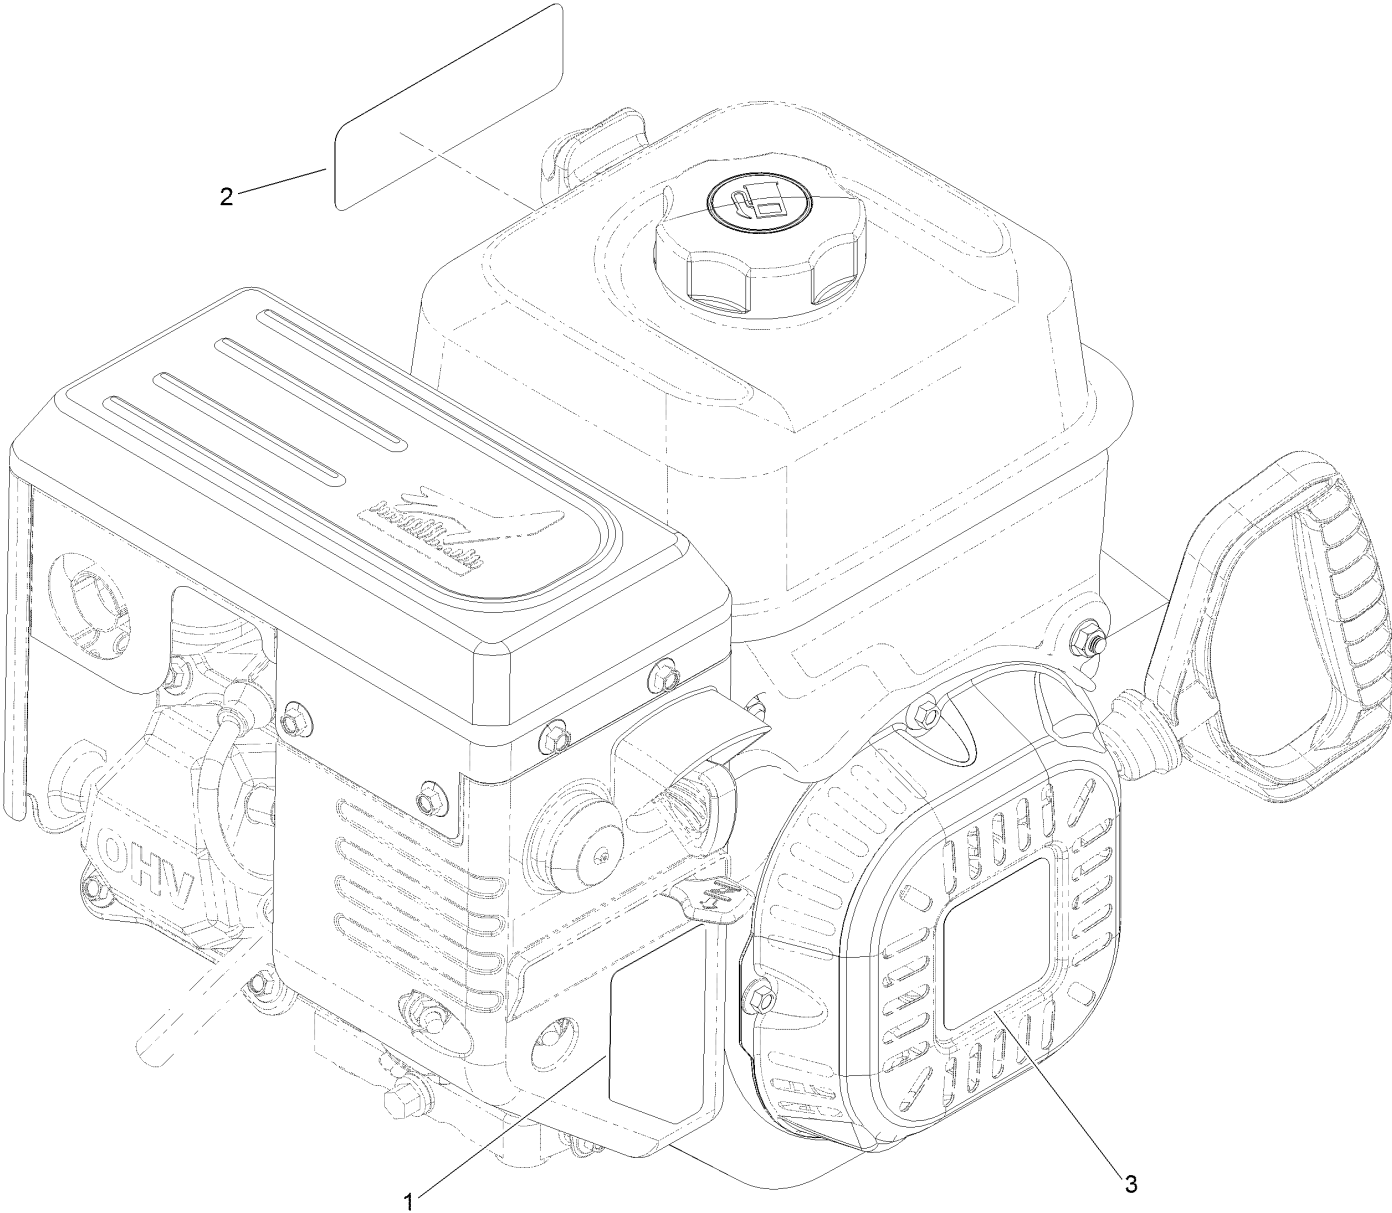

## Engine Decal Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>        |
|-------------|--------------------|-------------|---------------------------|
| 1           | 120-9805           | 1           | Decal-Control, Engine     |
| 2           | 120-9806           | 1           | Decal-Engine, Series G210 |
| 3           | 120-9809           | 1           | Decal-Recoil, G210        |

 
# Chute Assembly

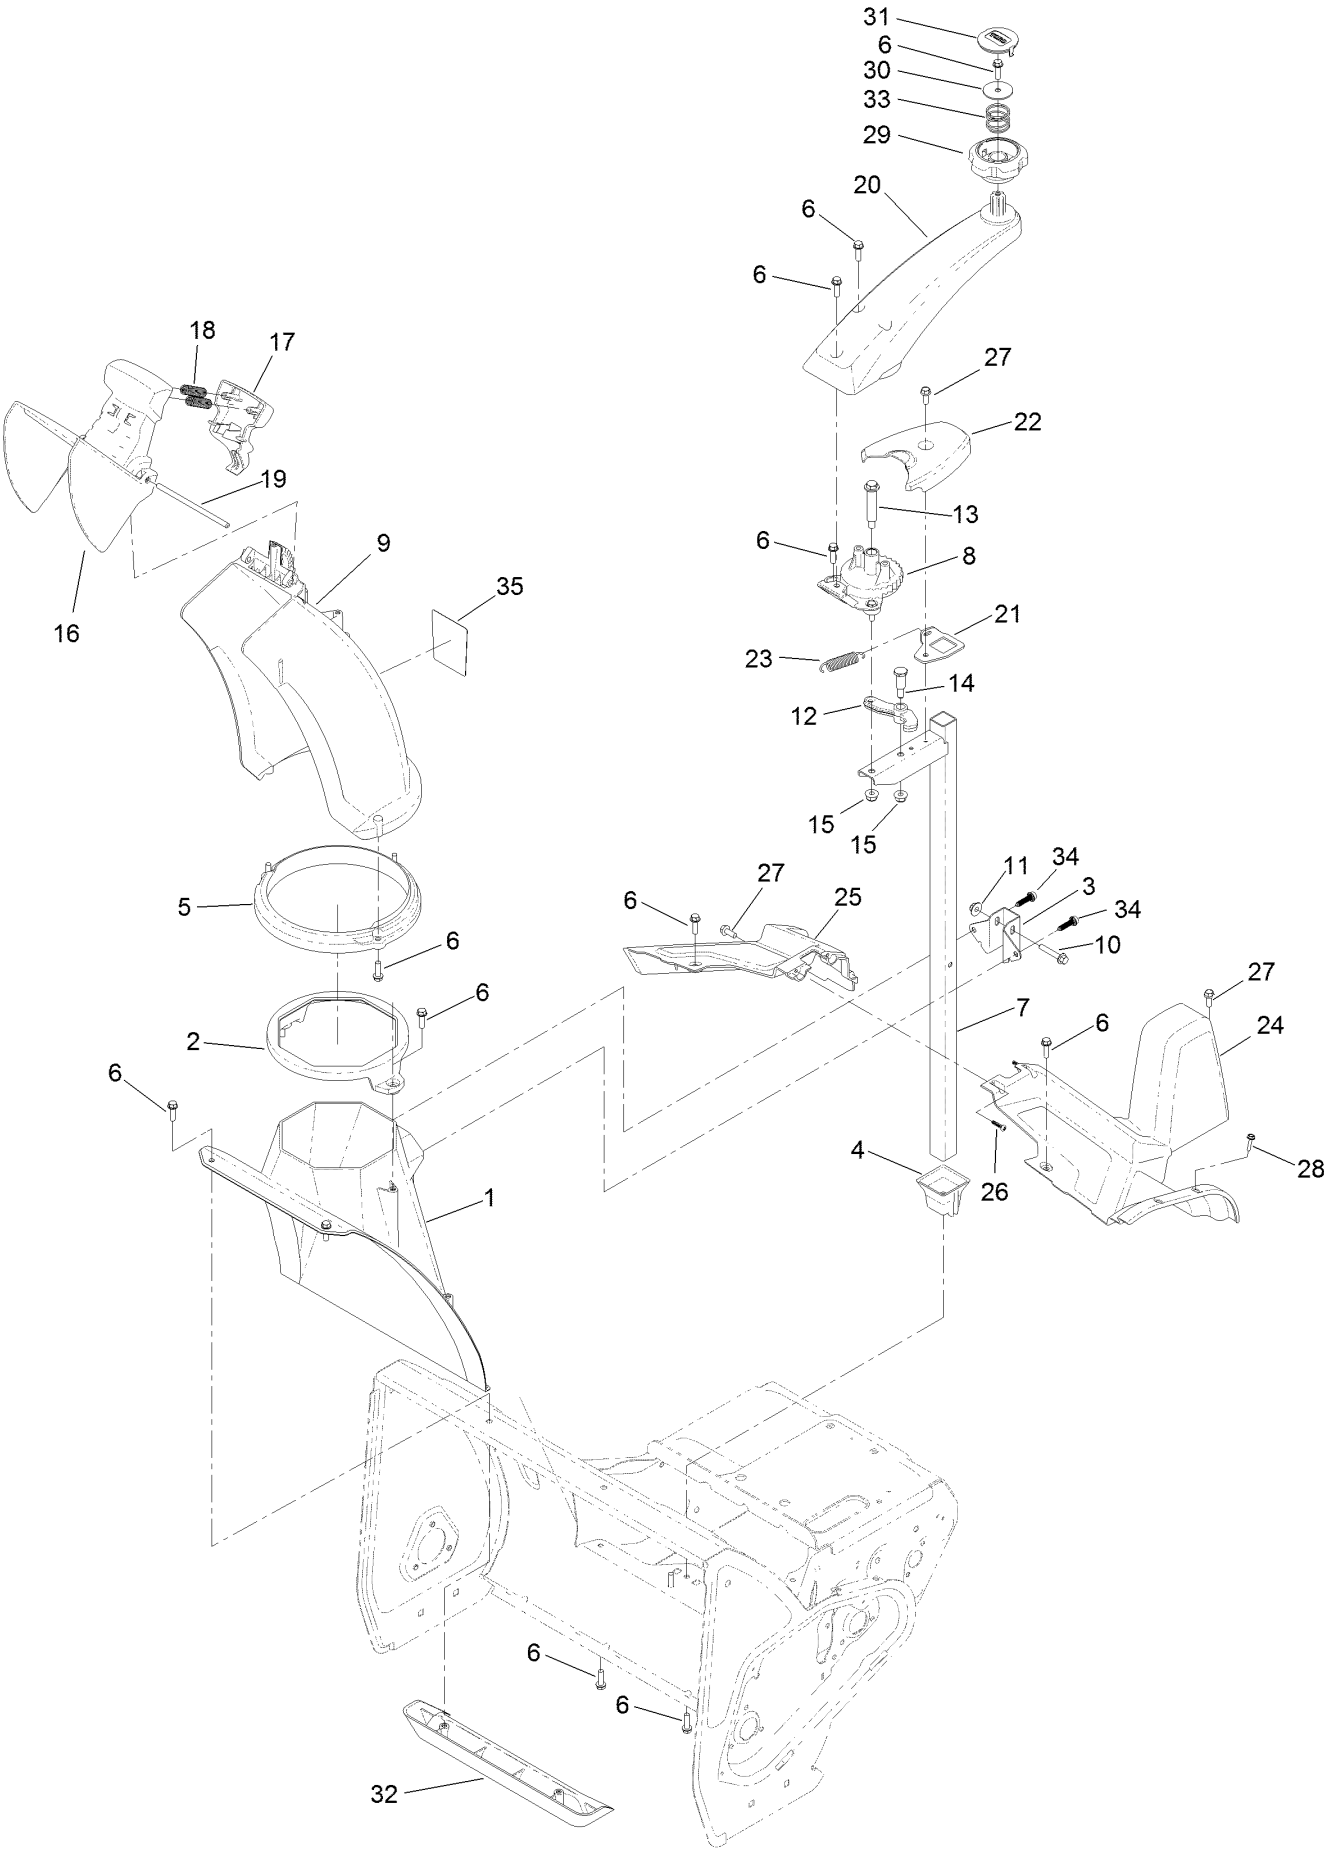

## Chute Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>               | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    |
|-------------|--------------------|-------------|----------------------------------|-------------|--------------------|-------------|-----------------------|
| 1           | 130-9587           | 1           | Chute-Lower                      | 18          | 136-7136           | 2           | Spring-Compression    |
| 2           | 130-9588           | 1           | Guide-Chute                      | 19          | 136-8672           | 1           | Hinge Pin-Deflector   |
| 3           | 130-9589-03        | 1           | Bracket-Post, Support<br>(Chute) | 20          | 130-9598           | 1           | Handle-Chute, Manual  |
| 4           | 130-9590           | 1           | Retainer- Post, Chute            | 21          | 136-7175           | 1           | Bkt-Spring Support    |
| 5           | 130-9596           | 1           | Ring-Chute                       | 22          | 131-1760           | 1           | Cover-Spring          |
| 6           | 137-3099           | 19          | Screw-Plastite, HWH              | 23          | 131-1790           | 1           | Spring-Extension      |
| 7           | 130-9591-03        | 1           | Post-Chute, Manual               | 24          | 131-1754           | 1           | Shroud-Upper, LH      |
| 8           | 131-1798           | 1           | Gear-Chute, Manual               | 25          | 131-1765           | 1           | Shroud-Lower, RH      |
| 9           | 133-5591           | 1           | Chute-Discharge                  | 26          | 94-4496            | 2           | Screw-PPH             |
| 10          | 137-3027           | 1           | Screw-HHF                        | 27          | 32144-85           | 3           | Screw-HWH             |
| 11          | 137-3016           | 1           | Nut-Hex Flg                      | 28          | 137-3110           | 2           | Screw-Plastite, HWH   |
| 12          | 131-1799           | 1           | Latch-Chute                      | 29          | 131-1774           | 1           | Knob-Control, Chute   |
| 13          | 136-7199           | 1           | Bolt-Shoulder                    | 30          | 136-7176           | 1           | Washer-Fender         |
| 14          | 137-3103           | 1           | Screw-Shoulder, HH               | 31          | 131-1777           | 1           | Insert-Knob           |
| 15          | 119-4041           | 2           | Nut-HF                           | 32          | 131-1768           | 1           | Kicker-Housing        |
| 16          | 131-5916           | 1           | Deflector-Chute                  | 33          | 131-5926           | 1           | Spring-Compression    |
| 17          | 117-2314           | 1           | Trigger-Deflector                | 34          | 130-6658           | 2           | Screw-Flange, Plastic |
|             |                    |             |                                  | 35          | 133-5592           | 1           | Decal                 |
 
# Handle and Control Assembly

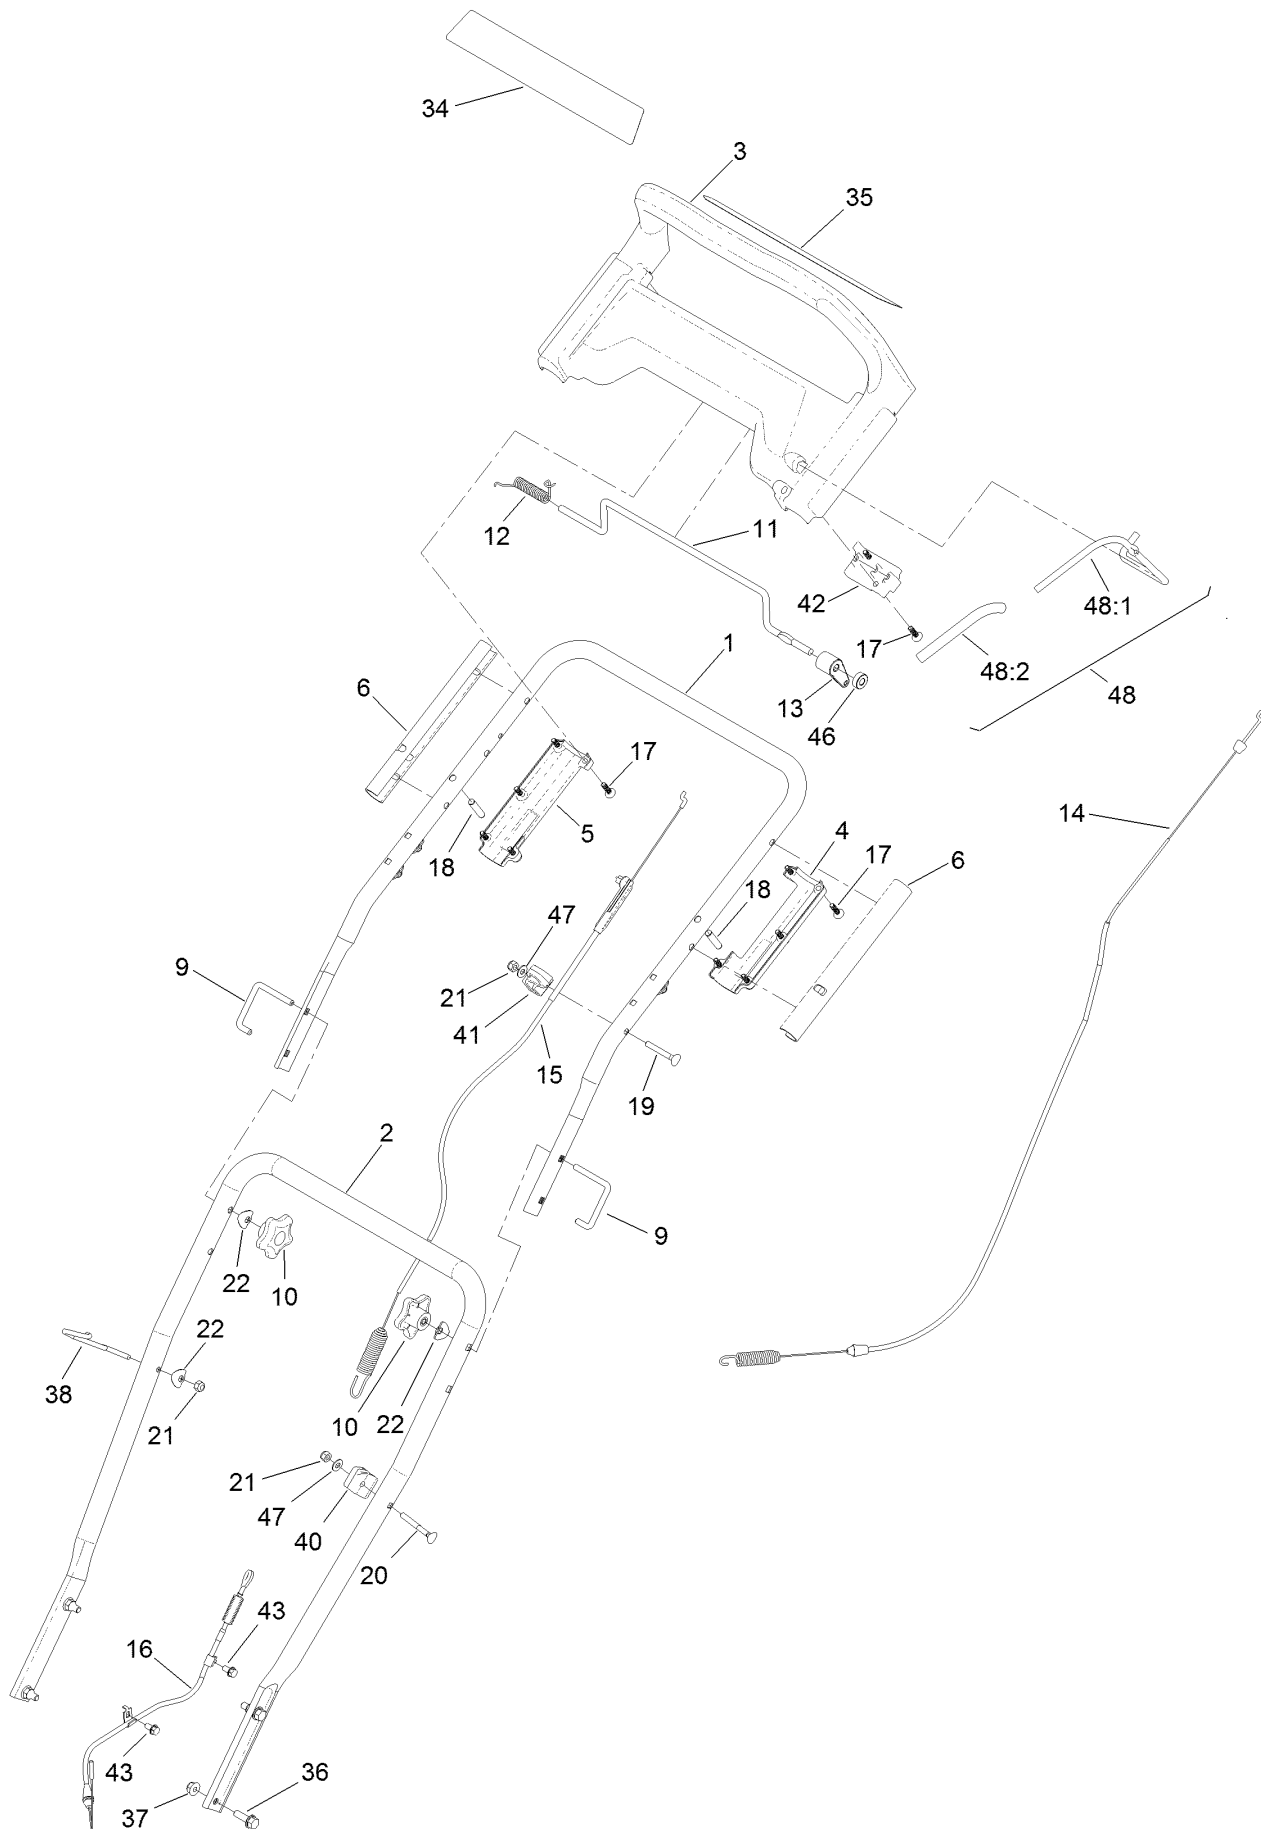

## Handle and Control Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   |
|-------------|--------------------|-------------|----------------------|-------------|--------------------|-------------|----------------------|
| 1           | 120-2333-03        | 1           | Handle-Upper         | 20          | 137-3108           | 1           | Screw-Handle         |
| 2           | 120-2334-03        | 1           | Handle-Lower         | 21          | 137-3094           | 3           | Nut-Hex              |
| 3           | 131-5921           | 1           | Handle               | 22          | 137-3009           | 3           | Washer-Cup           |
| 4           | 120-2336           | 1           | Handle-Bottom, LH    | 34          | 131-5937           | 1           | Decal-Display        |
| 5           | 131-1770           | 1           | Handle-Bottom, RH    | 35          | 131-1785           | 1           | Decal-Control, Panel |
| 6           | 120-2343           | 2           | Sleeve Handle        | 36          | 137-3067           | 4           | Screw-HHF            |
| 9           | 136-7130           | 2           | Lock-Handle          | 37          | 119-4041           | 4           | Nut-HF               |
| 10          | 106-4161           | 2           | Knob-Handle          | 38          | 136-7147           | 1           | Guide-Rope           |
| 11          | 136-7150           | 1           | Bar-Traction Control | 40          | 92-7729            | 1           | Anchor-Cable, Upper  |
| 12          | 136-7166           | 1           | Spring-Torsion       | 41          | 131-5903           | 1           | Cable-Guide          |
| 13          | 131-5917           | 1           | Lever-Traction       | 42          | 131-5901           | 1           | Bail-Mount           |
| 14          | 131-5924           | 1           | Cable-Transmission   | 43          | 32144-4            | 2           | Screw-HWH            |
| 15          | 120-2338           | 1           | Cable-Rotor, Upper   | 46          | 130-2343           | 1           | Spacer               |
| 16          | 131-1753           | 1           | Cable-Rotor, Lower   | 47          | 137-3072           | 2           | Washer-Plain         |
| 17          | 120-2349           | 12          | Screw                | 48          | 131-5943           | 1           | Bail ASM             |
| 18          | 131-1771           | 2           | Pin-Dowel            | 48:1        |                    | 1           | Bail-Auger ●         |
| 19          | 137-3109           | 1           | Bolt-CARR            | 48:2        | 131-5902           | 1           | Cover-Bail           |

● Not serviced separately

# Attachments and Accessories

## For 38720 SnowMax 724 ZXR Snowthrower

| Product Name                                       | Model/Part |
|----------------------------------------------------|------------|
| Case of 24 20-Ounce Bottles 5W30 Winter Oil .....  | 38908      |
| Rotor Belt.....                                    | 131-5967P  |
| Scraper Kit.....                                   | 130-9628P  |
| Center Paddle Replacement Kit.....                 | 130-9569P  |
| Toro 2-Stage Cover.....                            | 490-7466   |
| Skid Replacement Kit .....                         | 130-9619P  |
| Toro Snow Oil 0W30 Synthetic 20-Ounce Bottle ..... | 38913      |

**Notes:**



**Count on it.**