



53cm Side Discharge

Model No. 20716 – 8900001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Housing Assembly	1	Toro Part Number Index	15-16
Rear Axle Assembly	2	Maintenance	17
Gear Case Assembly	3		
Engine Assembly	4		
Handle Assembly	5		
Engine Briggs & Stratton			
Model 12U802-1739-E1	6-14		

Note:

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
Rear Discharge Grass			
Catcher Kit	Model No. 59187		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HWHTF	hex washer head
ASM	assembly		thread forming
CARR	carriage	INC	incorporated
DEG	degrees	LH	left hand
FH	flat head	PH	pan head
GA	gauge	PPH	Phillips pan head
HF	hex flange	PTO	power take off
HFW	hex flange washer	RH	right hand
HH	hex head	SFH	slotted fillister head
HHF	hex head flange	SH	square head
HHST	hex head self tapping	SHWH	slotted hex washer head
HJ	hex jam	SPH	slotted pan head
HOC	height-of-cut	STD	standard
HS	hex socket	TAP	self tapping
HSBH	hex socket button head	TH	truss head
HSFH	hex socket flat head	TTH	Torx truss head
HSB	hex socket head	WH	wing head
HWH	hex washer head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form $X:Y$. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form $X (Y)$. X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

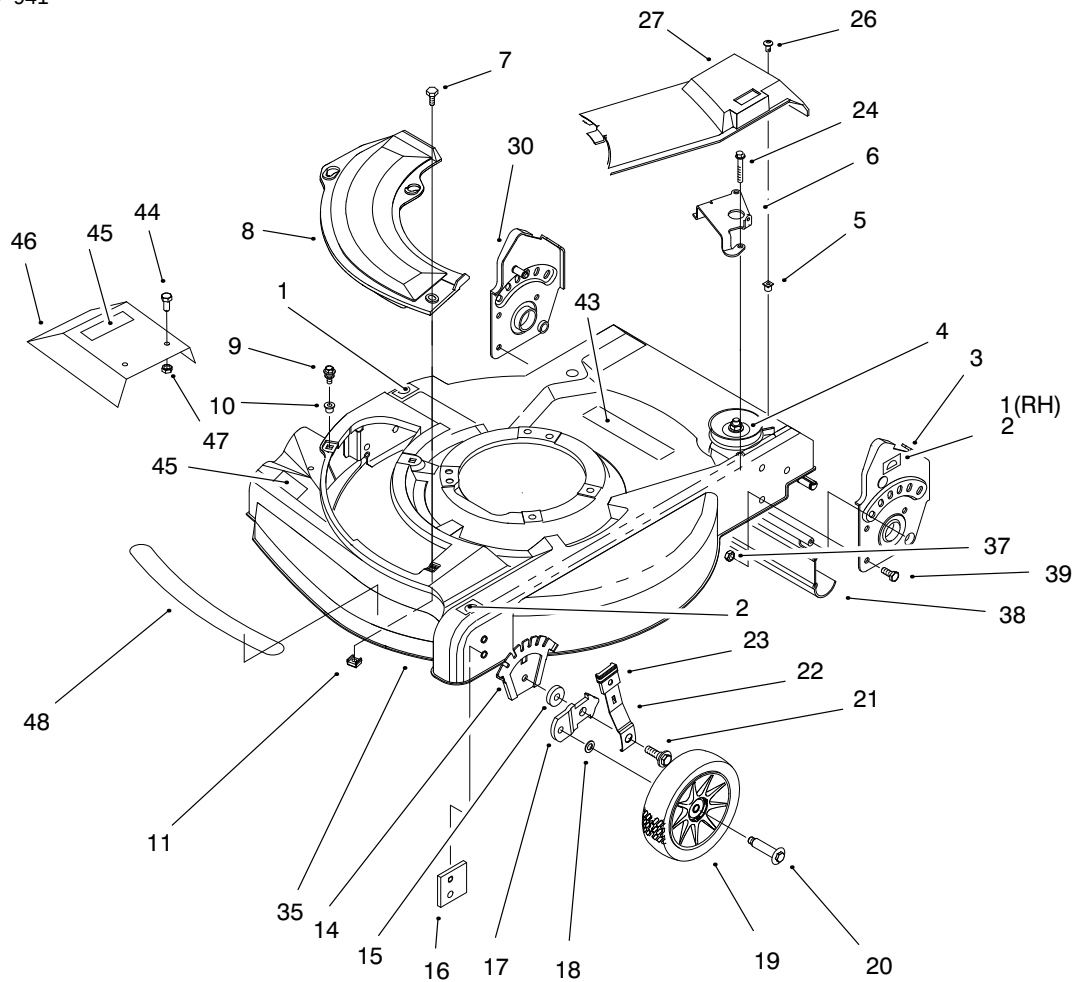


Sheet No.:2

Housing Assembly

Ref. No.	Part No.	Qty.	Description
1	93-6671	2	Decal-HOC
2	93-6670	2	Decal-HOC
3	92-7724	1	ASM-Handle Bracket
4	92-7735	1	ASM-Gear Case
5	605120	1	Grommet
6	92-7728	1	Guide-Transmission
7	46-6811	1	Screw-HWH
8	95-7052	1	Plate-Cover
9	614677	2	Screw-Sems
10	94-1610	2	Grommet-Plastic
11	613765	1	Nut-Cage
14	92-4881	2	Plate-Height Adjust
15	92-4890	2	Washer
16	92-7731	2	Plate-Baffle
17	95-7403	2	Bracket-Wheel Height Adj
18	40-1940	2	Washer
19	684776	2	ASM-Wheel & Tire 6"
20	92-1099	2	Bolt-Shoulder
21	614672	2	Bolt-Shoulder
22	614687	2	Spring Arm-Front
23	92-1008	2	Knob-Height Adjust
24	49-2040	2	Screw-HH
26	92-9665	1	Screw-Phil
27	95-7068	1	Cover-Drive
30	92-7723	1	ASM-Handle Bracket


Ref. No.	Part No.	Qty.	Description
35	95-7088	1	Housing & Baffle ASM
37	3296-29	6	Nut-Lock
38	92-8647	1	Shield-Trailing
39	322-3	6	Screw-HH
43	93-6657	1	Decal-Danger
44	32105-15	2	Screw-HH
45	93-6667	2	Decal-Danger
46	93-1697	1	Guard-Plate
47	3296-42	2	Nut-Lock
48	95-7051	1	Decal-Deck

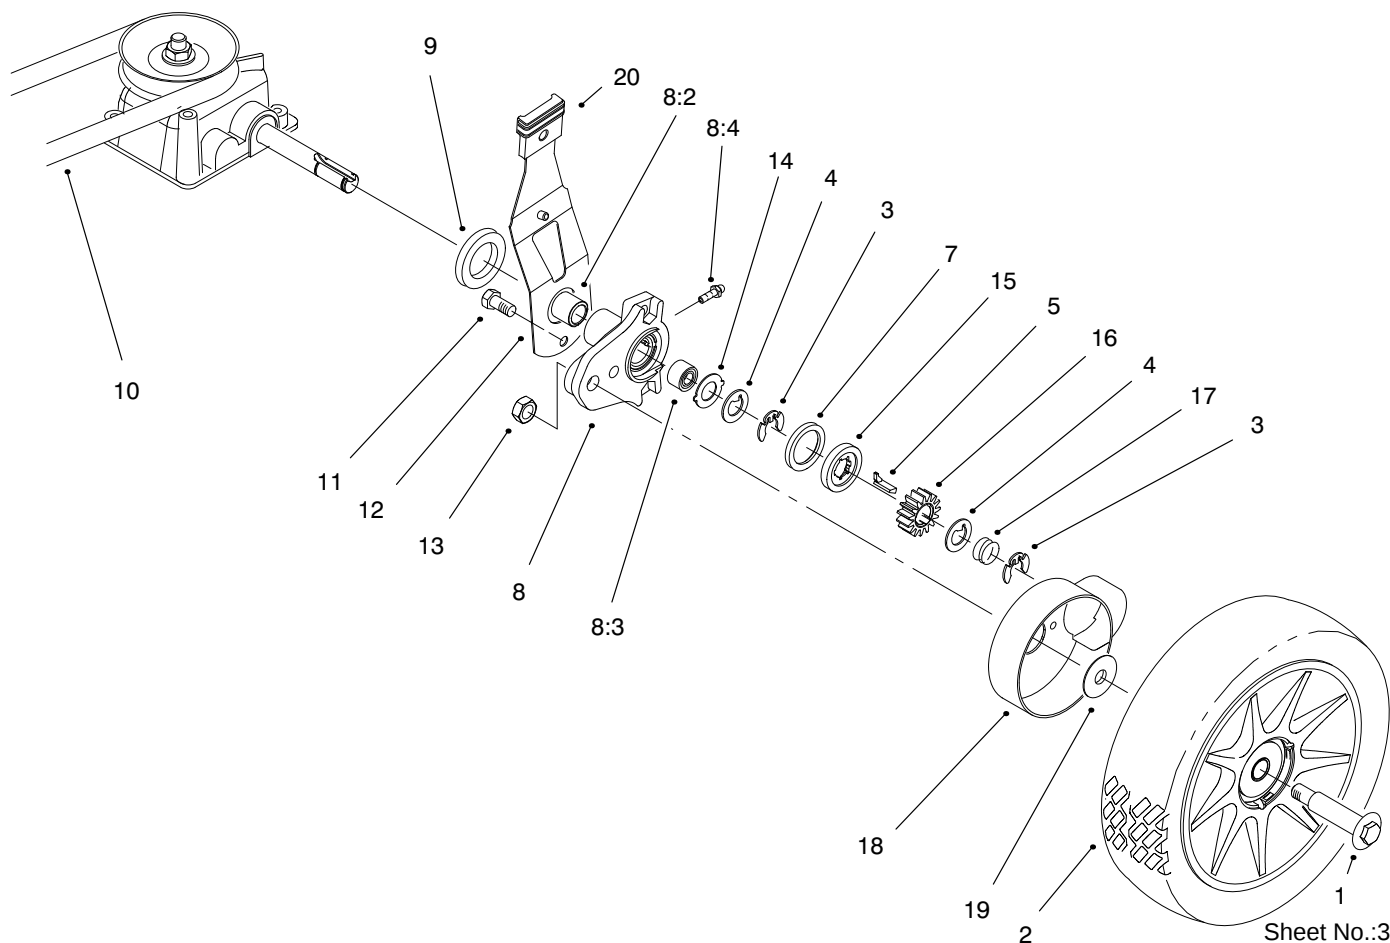

Rear Axle Assembly

Ref. No.	Part No.	Qty.	Description
1	92-1057	2	Bolt-Shoulder
2	92-1042	2	ASM-Whl
3	65-2720	4	Ring-Retaining
4	65-4740	4	Washer-Thrust
5	66-6050	1	Key-Rocking L.h.
6	66-6040	1	Key-Locking R.h.
7	65-4710	2	Ring-Friction
8	92-7746	2	ASM-Hgt Adj Arm
8:2	70-9760	2	Bushing
8:3	47-2900	2	Bushing
8:4	302-56	2	Fitting-Grease
9	614447	2	Spacer-Axle Shaft
10	93-7381	1	V-Belt
11	32144-85	2	Screw-HH
12	92-1004	2	ASM-Spring Arm
13	610358	2	Nut-Lock
14	65-4730	2	Washer-Thrust
15	65-4760	2	Washer
16	65-4750	2	Gear-Pinion
17	65-4720	2	Spring-Compression
18	94-1609	2	Cover-Wheel
19	614426	2	Washer-Stepped
20	92-1008	2	Knob-Height Adjust

Ref. No.	Part No.	Qty.	Description

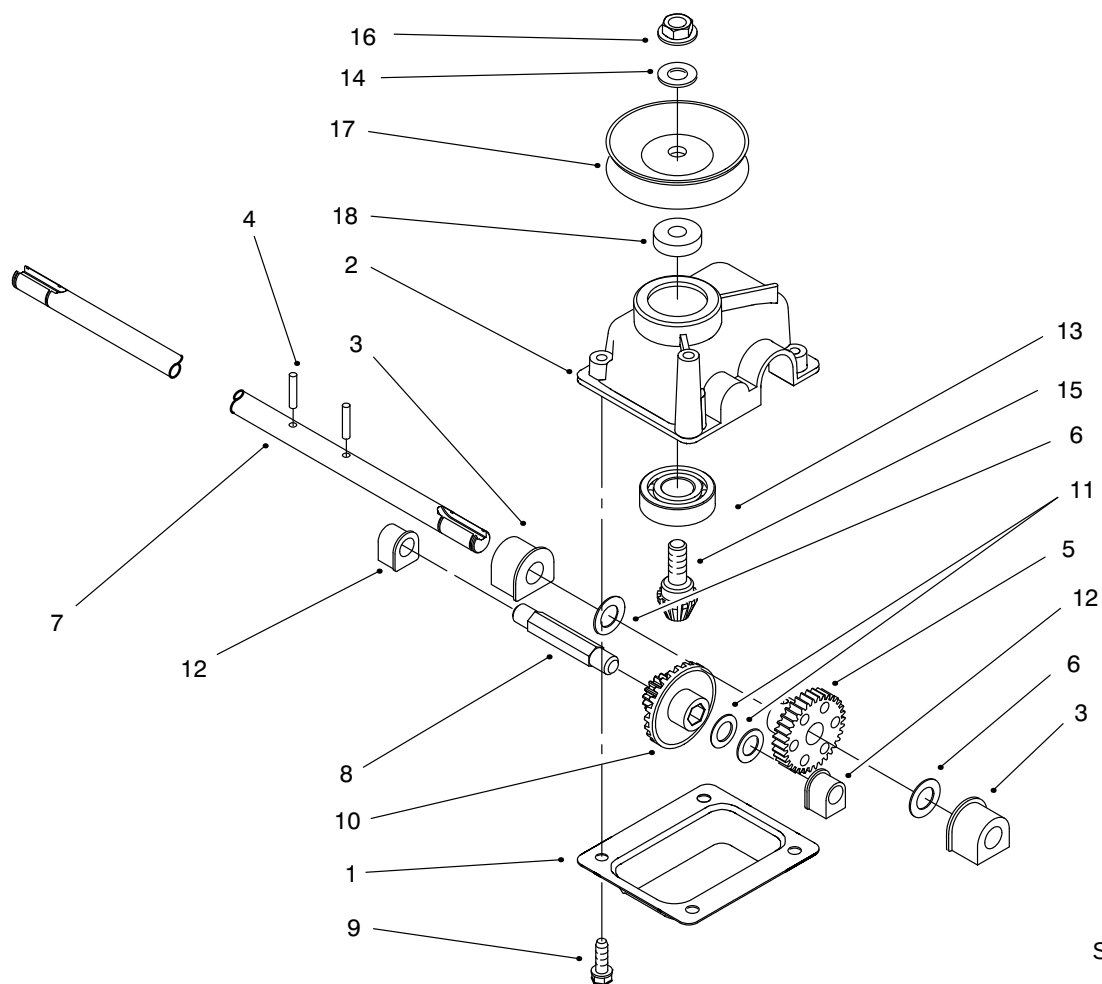


Sheet No.:100

Gear Case Assembly

Ref. No.	Part No.	Qty.	Description
1	614668	1	Cover—Gear Case
2	92-7727	1	Gearcase—Upper Ss
3	60-8850	2	Bushing—Output
4	3285-19	2	Pin—Spirol
5	614596	1	Gear—34t
6	36-4780	2	Washer—Thrust
7	93-0239	1	Shaft—Output
8	614696	1	Shaft—Intermediate
9	32144-4	4	Screw—TAP
10	55-3760	1	15 T Pinion
11	36-4791	2	Washer—Thrust
12	60-8750	2	Bushing
13	38-7820	1	Bearing—Ball
14	3256-24	1	Washer—Flat
15	60-8890	1	Gear—Pinnion
16	3296-5	1	Nut—Lock
17	614669	2	Pulley—Half
18	62-6660	1	Spacer—Pulley


Ref. No.	Part No.	Qty.	Description

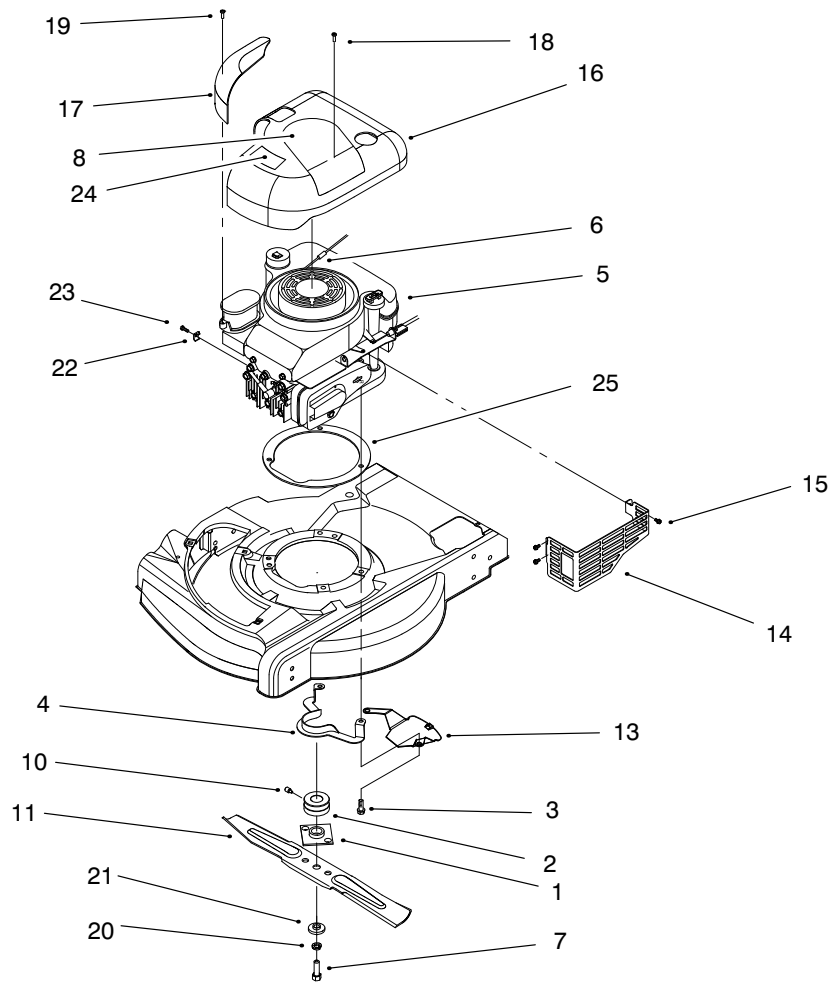

Sheet No.:4

Engine Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	677525	1	ASM-Plate & Collar	24	95-7061	1	Nameplate-Shroud
2	92-6542	1	Pulley-Engine	25	93-7152	1	Plate-Engine
3	95-1726	3	Screw-Engine Mount				
4	92-1024	1	Guide-Belt				
5		1	Engine ASM 4-Cyc				
6	2210-316	1	Rope-Stop (P/W Eng)				
7	95-1748	1	Bolt-Blade				
8	95-7053	1	Decal-Recoil				
10	613227	1	Screw-Set				
11	612543	1	Blade-21" Whirl				
13	93-4196	1	Shield-Grass				
14	82-8550	1	Shield-Muffler				
15	32144-73	3	Screw-HWHTF				
16	95-1704	1	Shroud-Engine				
17	95-1709	1	Cover A/C				
18	95-1706	2	Screw-Shroud (P/W Eng)				
19	95-1707	2	Screw-Air Cleaner (P/W)				
20	3253-22	1	Washer-Lock				
21	92-8626	1	Spacer-Blade				
22	2210-249	1	Clamp-Casing (P/W Eng)				
23	93-8470	1	Screw-Clamp (P/W Eng)				

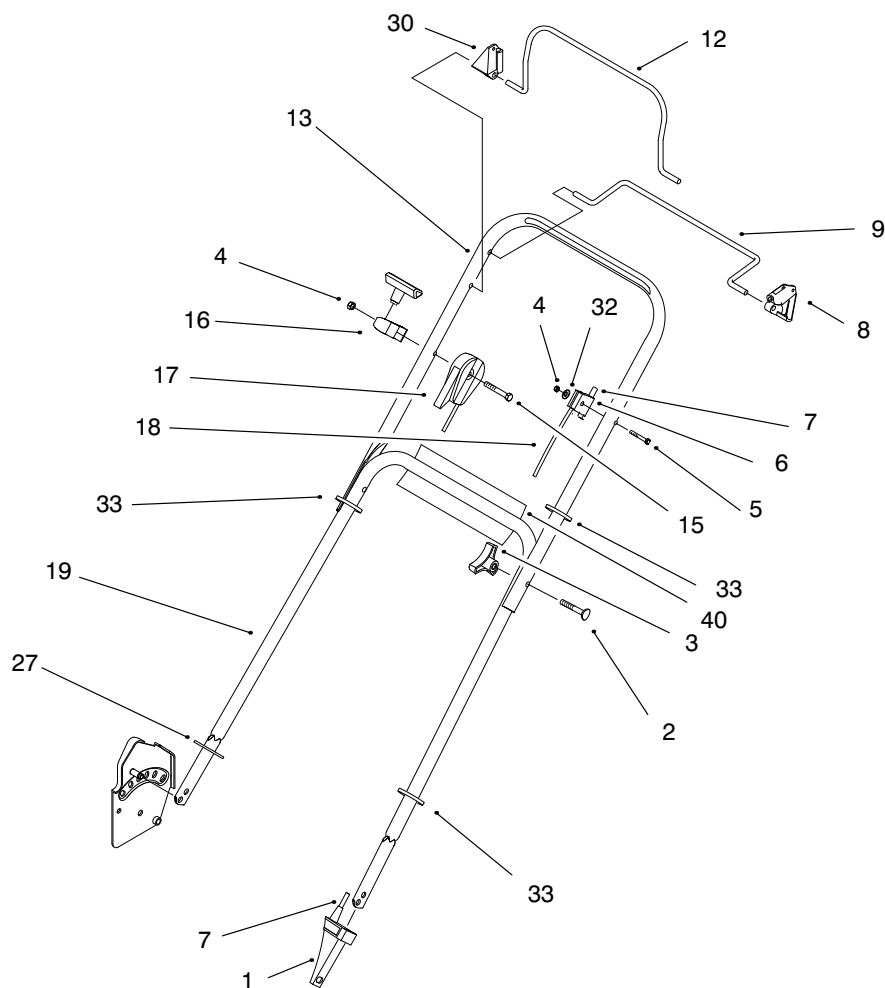


Sheet No.:5

Handle Assembly

Ref. No.	Part No.	Qty.	Description
1	93-7380	1	Anchor-Cable
2	614697	2	Screw-Handle
3	614243	2	Knob
4	3296-73	2	Nut-Lock
5	92-2269	1	Screw-Handle
6	94-6096	1	Anchor-Cable
7	95-5590	1	Cable-Traction
8	92-5412	1	Stop-Pivot
9	92-1001	1	Bail-Sp Control
12	94-6099	1	Bail-Flywheel Brake
13	95-1713	1	Handle Section-Upper
15	321-50	1	Screw
16	93-7383	1	Guide-Rope
17	95-7064	1	Cable-Throttle
18	95-1718	1	ASM-Brake Cable
19	614643	1	Handle Section-Lower
27	93-3653	1	Handle-Guard
30	94-6097	1	Stop-Bail
32	3256-1	1	Washer-Flat
33	3290-378	3	Tie-Cable
40	98-3248	1	Decal-Operation

Ref. No.	Part No.	Qty.	Description

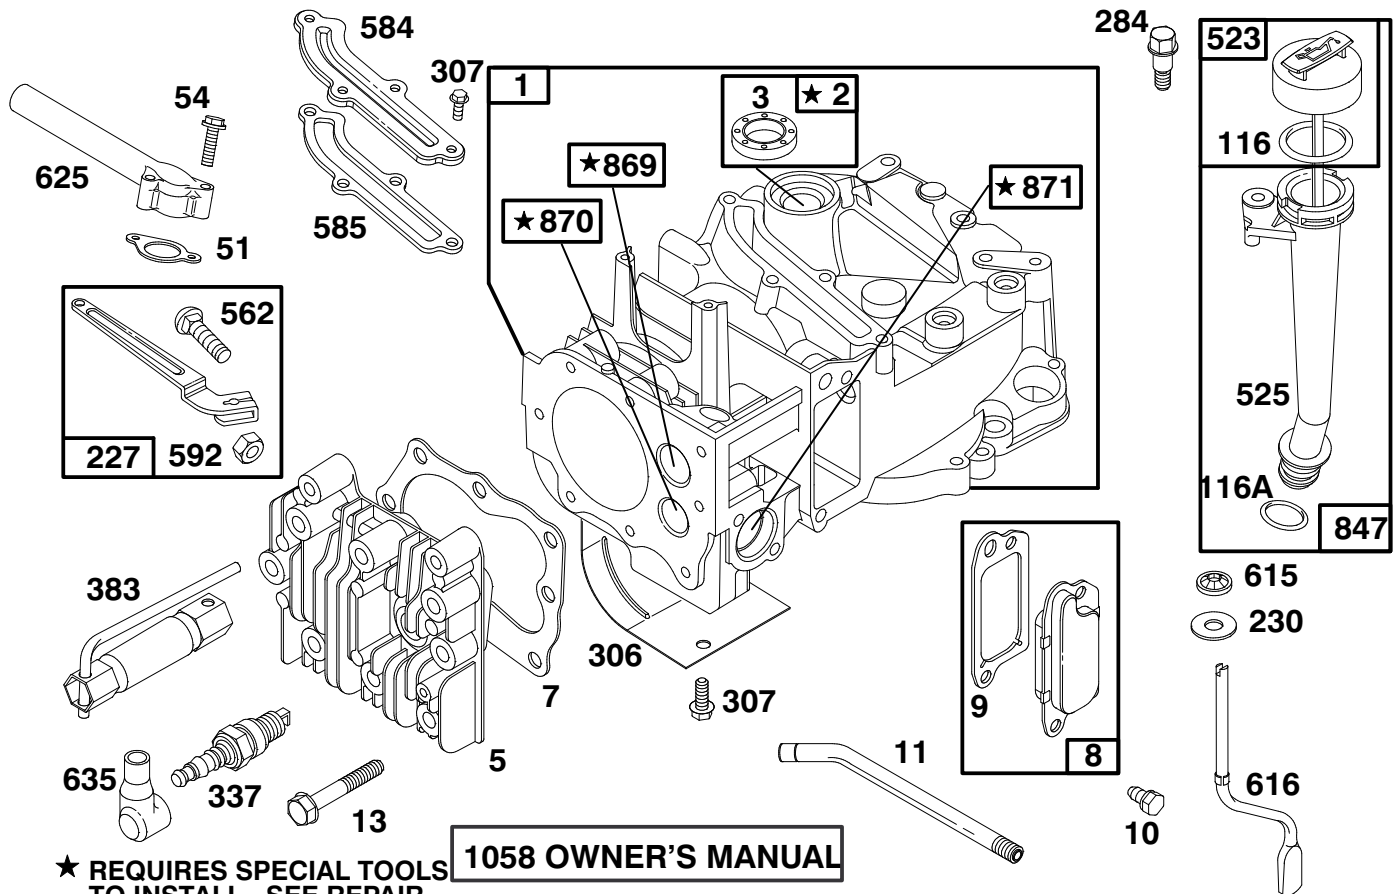

★ REQUIRES SPECIAL TOOLS
TO INSTALL. SEE REPAIR
INSTRUCTION MANUAL.

1058 OWNER'S MANUAL


Assemblies include all parts shown in
frames.

ENGINE BRIGGS & STRATTON MODEL 12U802-1739-E1

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	493260	Cylinder Assembly	1	★524	280393	Seal - Filler Tube	1
2	293708	Bushing - Cylinder	1	525	495265	Tube - Oil Filler	1
5	214626	Head - Cylinder	1	562	94852	Bolt - Carriage	1
★†7	272916	Gasket - Cylinder Head	1	584	224328	Baffle - Cylinder	1
8	495786	Breather - Valve Chamber	1	★585	272238	Gasket - Baffle Plate	1
★†9	272481	Gasket - Breather	1	592	231082	Nut - Hex.	1
10	94650	Screw - Breather Mtg.	1	615	94474	Fastener	1
11	231933	Tube - Breather	1	616	263175	Crank - Governor	1
13	94547	Screw - Cylinder Head	1	625	497465	Tube - Fuel Intake	1
★51	272199	Gasket - Intake Elbow	1	635	66538	Elbow - Spark Plug	1
54	94526	Screw - Intake Elbow Mtg.	1	★842	280966	Seal - O-Ring	1
★116A	280966	Seal - O Ring	1	847	495263	Oil Fill Tube Assy.	1
227	492349	Lever Assembly - Gov.	1	869	213512	Seat - Intake Valve	1
230	67072	Washer - Gov. Crank	1	870	213513	Seat - Exhaust Valve	1
284	94511	Screw - Hex. Head	1	871	262001	Guide - Exhaust Valve	1
306	224324	Shield - Cylinder	1			Note: 63709 Guide - Intake Valve	1
307	94515	Screw - Hex. Head	1	1058	273693	Owner's Manual	1
337	802592	Plug - Spark	1				
383	89838	Wrench - Spark Plug	1				
523	495264	Cap With Dipstick - Oil Filler	1				

★ Included in Gasket Set-Part No. 497316.

† Included in Valve Overhaul Gasket Set-Part No. 498528.

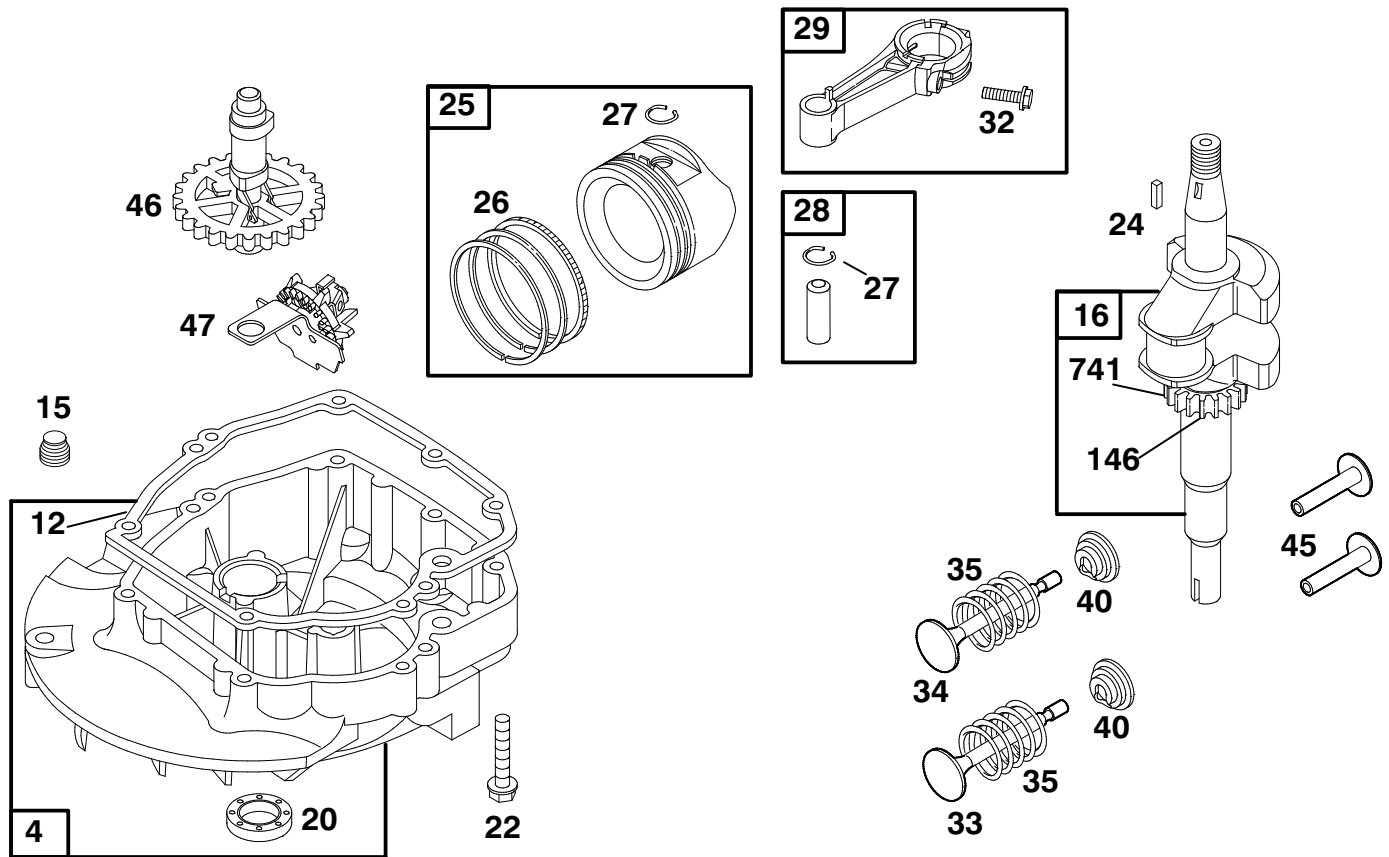


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12U802-1739-E1

Ref. No.	Part No.	Description	No. Used
4	493279	Sump – Engine	1
★12	272198	Gasket – Crankcase	1
15	94880	Plug – Oil Drain	1
16	499147	Crankshaft	1
★20	399781	Seal – Oil	1
22	94220	Screw – Hex.	1
		Note: 94612 Screw – Hex. (One Used in Hole Nearest Breather)	1
24	222698	Key – Flywheel	1
25	499429	Piston Assy. (Standard)	1
	499430	Piston Assy. (0.010" O.S.)	1
	499431	Piston Assy. (0.020" O.S.)	1
	499432	Piston Assy. (0.030" O.S.)	1

Ref. No.	Part No.	Description	No. Used
26	499425	Ring Set (Standard)	1
	499426	Ring Set (0.010" O.S.)	1
	499427	Ring Set (0.020" O.S.)	1
	499428	Ring Set (0.030" O.S.)	1
27	263190	Lock – Piston Pin	1
28	499423	Pin – Piston (Standard)	1
29	499424	Rod Assembly – Connecting	1
32	94699	Screw – Connecting Rod	1
33	262651	Valve – Exhaust	1
34	262652	Valve – Intake	1
35	262224	Spring – Valve	1
40	93312	Retainer – Valve Spring	1
45	262204	Tappet – Valve	1
46	498275	Gear – Cam	1
47	493737	Slinger – Oil	1
146	94388	Key – Timing	1
741	262598	Gear – Timing	1

★ Included in Gasket Set—Part No. 497316.

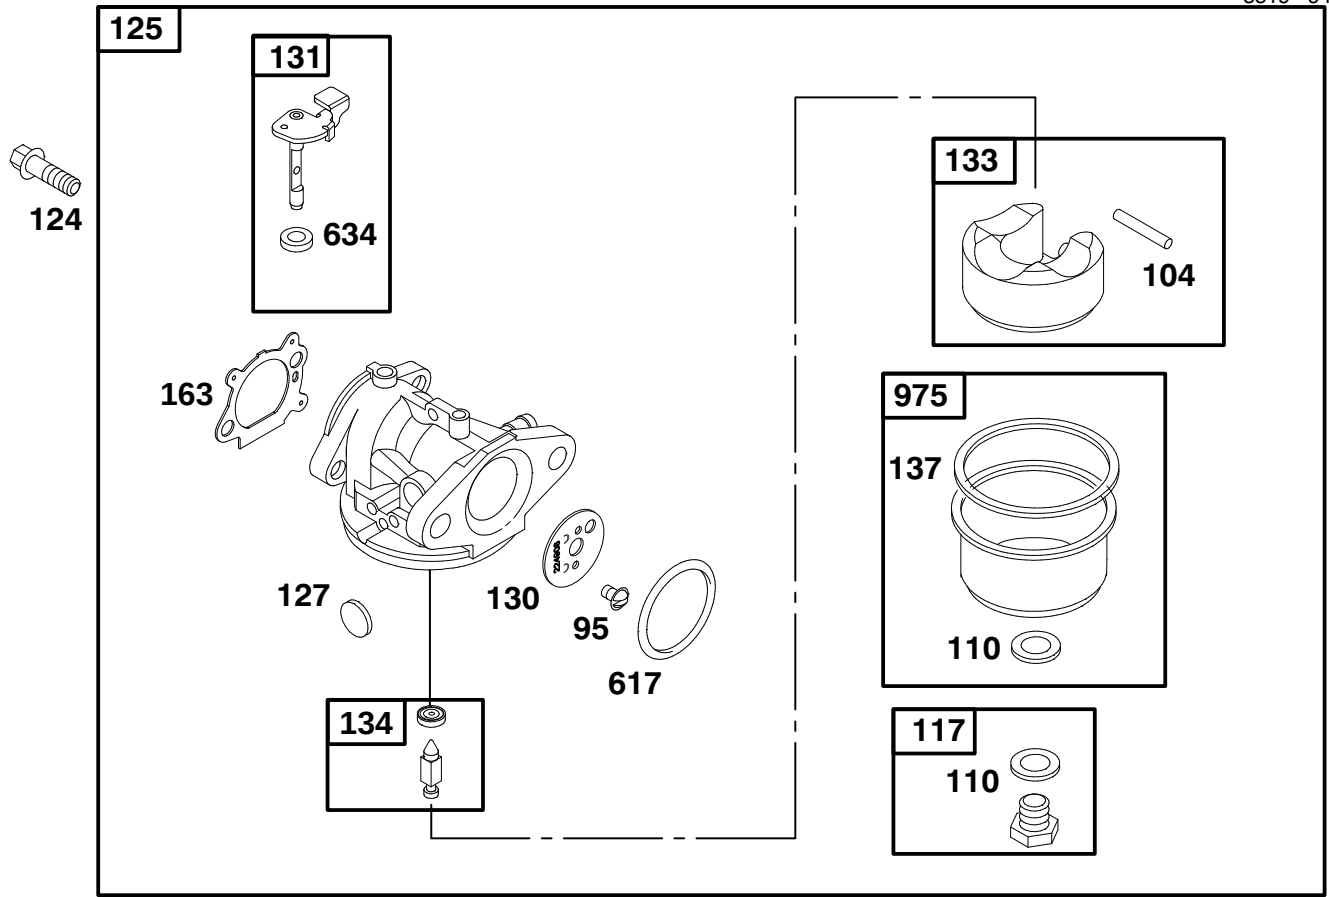

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12U802-1739-E1

Ref. No.	Part No.	Description	No. Used
95	T94098	Screw – Throttle Valve Mtg.	1
●104	T231371	Pin – Float Hinge	1
◆110		Gasket–Sealing (Sold in Kit Only)	1
117	498975	Screw – Bowl Mtg. (Std.) Note: 496495 Screw – Bowl Mtg. (High Altitude)	1
124	94525	Screw – Carburetor Mtg.	1
125	498966	Carburetor	1
●127		Plug – Welch (Sold in Kit Only)	1

★ Included in Gasket Set–Part No. 497316.

Ref. No.	Part No.	Description	No. Used
130	224908	Valve – Throttle	1
131	T493267	Shaft – Throttle	1
133	398187	Float Assy. – Carburetor	1
●134	398188	Kit – Needle/Seat	1
◆137		Gasket – Bowl (Sold in Kit Only)	1
★◆163	272653	Gasket – Air Cleaner	1
◆617	270344	Seal – Fuel Intake Tube	1
◆634		Washer – Shaft (Sold in Kit Only)	1
975	493640	Bowl Assy. – Carburetor	1

● Included in Carburetor Kit–Part No. 498260.

◆ Included in Carburetor Gasket Set–Part No. 498261.

3319-941

969

968

535

445

971

161

387

529

163

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12U802-1739-E1


Ref. No.	Part No.	Description	No. Used
161	497915	Base – Air Cleaner	1
★◆163	272653	Gasket – Air Cleaner	1
387	496115	Primer–Carburetor	1
445	497725	Filter – Air	1
529	281556	Grommet – Breather	1

★ Included in Gasket Set–Part No. 497316.

Ref. No.	Part No.	Description	No. Used
535	273185	Filter – Air	1
968	281535	Cover – Air Cleaner	1
969	94777	Screw – Slotted Hex.	1
971	94655	Screw – Shoulder	1

◆ Included in Carburetor Kit–Part No. 498260.

◆ Included in Carburetor Gasket Set–Part No. 498261.

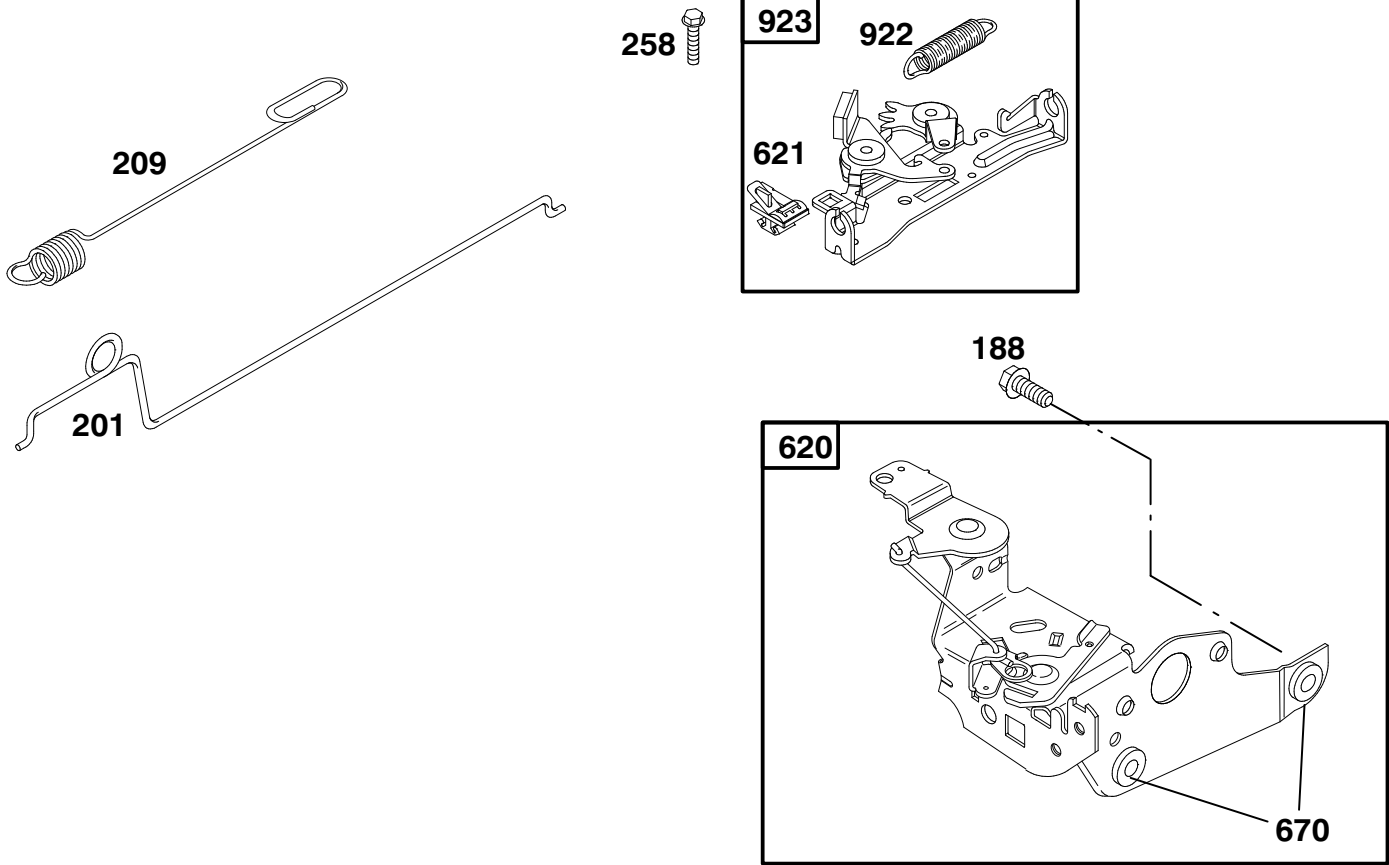


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12U802-1739-E1

Ref. No.	Part No.	Description	No. Used
188	94644	Screw – Hex.	1
201	262579	Link – Governor	1
209	263047	Spring – Governor	1
258	94512	Screw – Hex. Head	1
620	497837	Bracket – Carburetor	1

Ref. No.	Part No.	Description	No. Used
621	396847	Switch – Stop	1
★670	493823	Spacer – Bracket (Includes 2)	1
922	262640	Spring – Brake	1
923	493442	Brake Assembly	1

★ Included in Gasket Set – Part No. 497316.



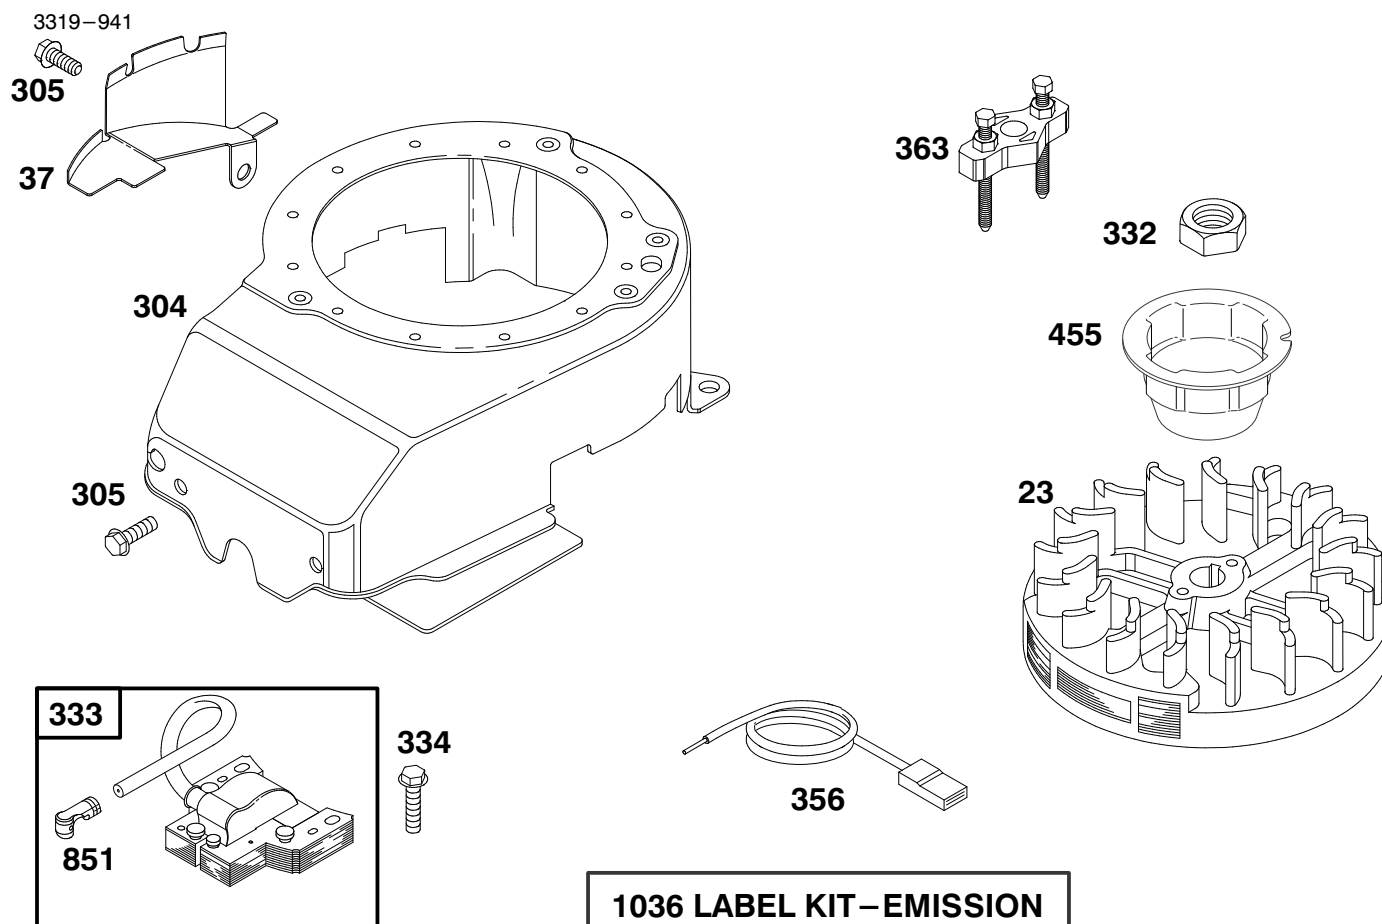


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12U802-1739–E1

Ref. No.	Part No.	Description	No. Used
23	492177	Flywheel	1
37	224511	Guard – Flywheel	1
304	493293	Housing – Blower	1
305	94744	Screw – Hex.	1
332	92284	Nut – Flywheel	1
333	802574	Armature – Magneto	1

Ref. No.	Part No.	Description	No. Used
334	94731	Screw – Hex.	1
356	497833	Wire – Ground	1
363	19069	Flywheel Puller	1
455	225121	Cup – Starter	1
851	493880	Terminal – Ignition Cable	1
1036	499341	Label Kit – Emission	1

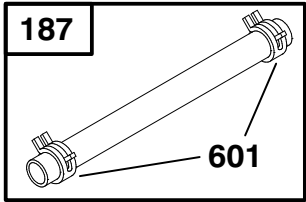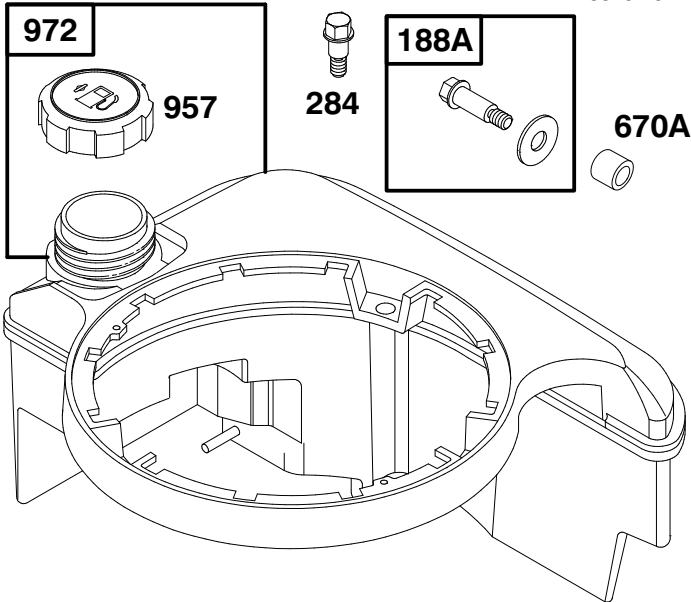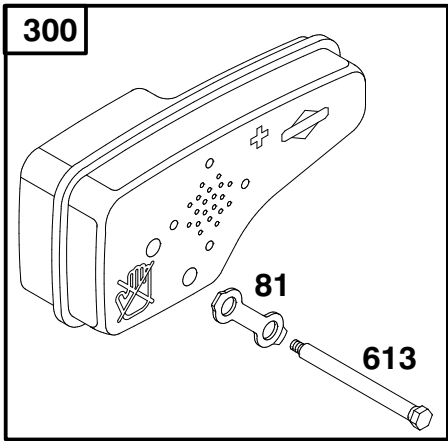


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12U802-1739-E1

Ref. No.	Part No.	Description	No. Used
81	223664	Lock – Muffler Screw	1
187	298049	Hose – Fuel (Cut to Required Length)	1
188A	398540	Screw – Shoulder	1
284	94511	Screw – Shoulder	1
300	496106	Muffler – Exhaust	1

Ref. No.	Part No.	Description	No. Used
601	95162	Clamp – Hose	1
613	94231	Screw – Shoulder	1
670A	280512	Spacer – Fuel Tank	1
957	397974	Cap – Fuel Tank	1
972	495224	Tank Assembly – Fuel	1

★ Included in Gasket Set – Part No. 497316.




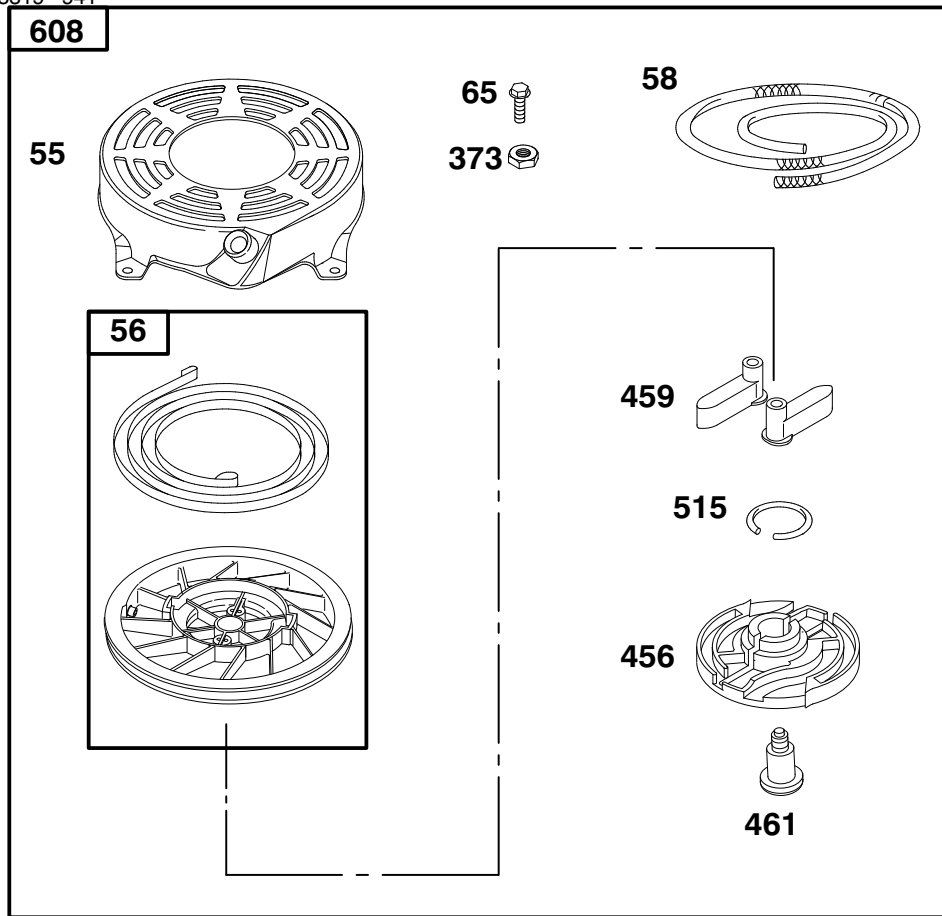


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12U802-1739-E1

Ref. No.	Part No.	Description	No. Used
55	497440	Housing – Rewind Starter	1
56	498144	Pulley – Rewind Starter	1
58	280399	Rope – Rewind Starter (Cut to Required Length)	1
59	T224467	Insert – Starter Grip	1
60	T494212	Handle – Rewind Starter	1
65	94904	Screw – Hex.	1

Ref. No.	Part No.	Description	No. Used
373	94908	Nut – Hex.	1
456	281503	Retainer – Rewind Starter	1
459	281505	Pawl – Starter	1
461	94943	Pin – Starter	1
515	263073	Spring – Torsion	1
608	497680	Starter Assy. – Rewind	1

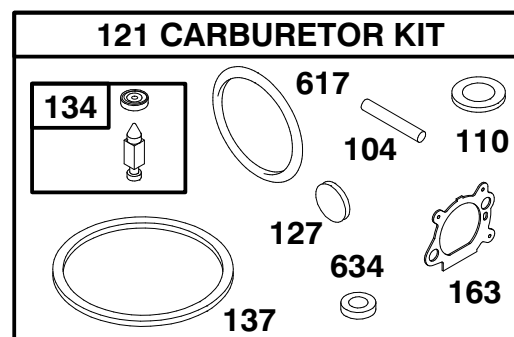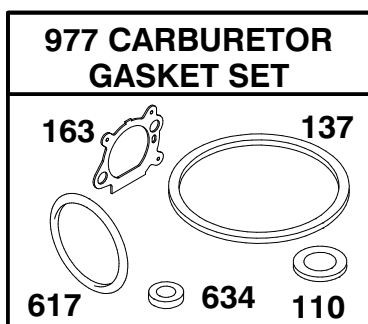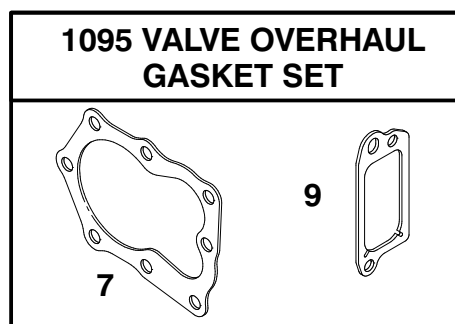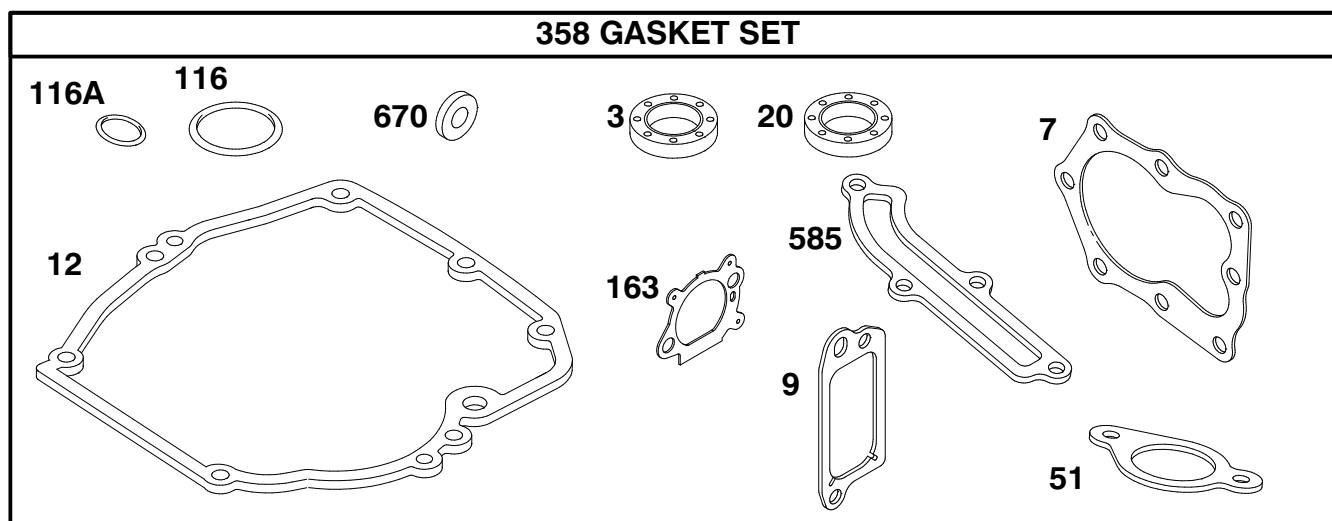

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12U802-1739-E1

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
★3	299819	Seal – Oil	1	●134	398188	Kit – Needle/Seat	1
★†7	272916	Gasket – Cylinder Hd.	1	◆◆137		Gasket – Bowl (Sold in Kit Only)	1
★†9	272481	Gasket – Breather	1	★◆163	272653	Gasket – Air Cleaner	1
★12	272198	Gasket – Crankcase	1	358	497316	Gasket Set	1
★20	399781	Seal – Oil	1	★585	272238	Gasket – Baffle Plate	1
★51	272199	Gasket – Intake Elbow	1	◆◆617	270344	Seal – Fuel Intake Tube	1
●104	231371	Pin – Float Hinge	1	◆◆634		Washer – Shaft (Sold in Kit Only)	1
◆◆110		Gasket – Sealing (Sold in Kit Only)	1	★670	493823	Spacer – Bracket (Includes 2)	1
★116	280393	Seal – O Ring	1	977	498261	Gasket Set – Carburetor	1
★116A	280966	Seal – O Ring	1	1095	498528	Gasket Set – Valve Overhaul	1
121	498260	Carburetor Kit	1				
●127		Plug – Welch (Sold in Kit Only)	1				

● Included in Carburetor Kit—Part No. 498260.

◆◆ Included in Carburetor Gasket Set—Part No. 498261.

★ Included in Gasket Set—Part No. 497316.

† Included in Valve Overhaul Gasket Set—Part No. 498528.

Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
605120	1	5	1	Grommet
610358	2	13	2	Nut—Lock
612543	4	11	1	Blade—21" Whirl
613227	4	10	1	Screw—Set
613765	1	11	1	Nut—Cage
614243	5	3	2	Knob
614426	2	19	2	Washer—Stepped
614447	2	9	2	Spacer—Axle Shaft
614596	3	5	1	Gear—34t
614643	5	19	1	Handle Section—Lower
614668	3	1	1	Cover—Gear Case
614669	3	17	2	Pulley—Half
614672	1	21	2	Bolt—Shoulder
614677	1	9	2	Screw—Sems
614687	1	22	2	Spring Arm—Front
614696	3	8	1	Shaft—Intermediate
614697	5	2	2	Screw—Handle
677525	4	1	1	ASM—Plate & Collar
684776	1	19	2	ASM—Wheel & Tire 6"
36-4780	3	6	2	Washer—Thrust
36-4791	3	11	2	Washer—Thrust
38-7820	3	13	1	Bearing—Ball
40-1940	1	18	2	Washer
46-6811	1	7	1	Screw—HWH
47-2900	2	8:3	2	Bushing
49-2040	1	24	2	Screw—HH
55-3760	3	10	1	15 T Pinion
60-8750	3	12	2	Bushing
60-8850	3	3	2	Bushing—Output
60-8890	3	15	1	Gear—Pinnion
62-6660	3	18	1	Spacer—Pulley
65-2720	2	3	4	Ring—Retaining
65-4710	2	7	2	Ring—Friction
65-4720	2	17	2	Spring—Compression
65-4730	2	14	2	Washer—Thrust
65-4740	2	4	4	Washer—Thrust
65-4750	2	16	2	Gear—Pinion
65-4760	2	15	2	Washer
66-6040	2	6	1	Key—Locking R.h.
66-6050	2	5	1	Key—Rocking L.h.
70-9760	2	8:2	2	Bushing
82-8550	4	14	1	Shield—Muffler
92-1001	5	9	1	Bail—Sp Control
92-1004	2	12	2	ASM—Spring Arm
92-1008	1	23	2	Knob—Height Adjust
92-1008	2	20	2	Knob—Height Adjust
92-1024	4	4	1	Guide—Belt
92-1042	2	2	2	ASM—Whl
92-1057	2	1	2	Bolt—Shoulder
92-1099	1	20	2	Bolt—Shoulder
92-2269	5	5	1	Screw—Handle
92-4881	1	14	2	Plate—Height Adjust
92-4890	1	15	2	Washer
92-5412	5	8	1	Stop—Pivot
92-6542	4	2	1	Pulley—Engine
92-7723	1	30	1	ASM—Handle Bracket
92-7724	1	3	1	ASM—Handle Bracket
92-7727	3	2	1	Gearcase—Upper Ss
92-7728	1	6	1	Guide—Transmission
92-7731	1	16	2	Plate—Baffle
92-7735	1	4	1	ASM—Gear Case
92-7746	2	8	2	ASM—Hgt Adj Arm

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
92-8626	4	21	1	Spacer-Blade
92-8647	1	38	1	Shield-Trailing
92-9665	1	26	1	Screw-Phil
93-0239	3	7	1	Shaft-Output
93-1697	1	46	1	Guard-Plate
93-3653	5	27	1	Handle-Guard
93-4196	4	13	1	Shield-Grass
93-6657	1	43	1	Decal-Danger
93-6667	1	45	2	Decal-Danger
93-6670	1	2	2	Decal-HOC
93-6671	1	1	2	Decal-HOC
93-7152	4	25	1	Plate-Engine
93-7380	5	1	1	Anchor-Cable
93-7381	2	10	1	V-Belt
93-7383	5	16	1	Guide-Rope
93-8470	4	23	1	Screw-Clamp (P/W Eng)
94-1609	2	18	2	Cover-Wheel
94-1610	1	10	2	Grommet-Plastic
94-6096	5	6	1	Anchor-Cable
94-6097	5	30	1	Stop-Bail
94-6099	5	12	1	Bail-Flywheel Brake
95-1704	4	16	1	Shroud-Engine
95-1706	4	18	2	Screw-Shroud (P/W Eng)
95-1707	4	19	2	Screw-Air Cleaner (P/W)
95-1709	4	17	1	Cover A/C
95-1713	5	13	1	Handle Section-Upper
95-1718	5	18	1	ASM-Brake Cable
95-1726	4	3	3	Screw-Engine Mount
95-1748	4	7	1	Bolt-Blade
95-5590	5	7	1	Cable-Traction
95-7051	1	48	1	Decal-Deck
95-7052	1	8	1	Plate-Cover
95-7053	4	8	1	Decal-Recoil
95-7061	4	24	1	Nameplate-Shroud
95-7064	5	17	1	Cable-Throttle
95-7068	1	27	1	Cover-Drive
95-7088	1	35	1	Housing & Baffle ASM
95-7403	1	17	2	Bracket-Wheel Height Adj
98-3248	5	40	1	Decal-Operation
2210-249	4	22	1	Clamp-Casing (P/W Eng)
2210-316	4	6	1	Rope-Stop (P/W Eng)
302-56	2	8:4	2	Fitting-Grease
321-50	5	15	1	Screw
322-3	1	39	6	Screw-HH
3253-22	4	20	1	Washer-Lock
3256-1	5	32	1	Washer-Flat
3256-24	3	14	1	Washer-Flat
3285-19	3	4	2	Pin-Spirol
3290-378	5	33	3	Tie-Cable
3296-5	3	16	1	Nut-Lock
3296-29	1	37	6	Nut-Lock
3296-42	1	47	2	Nut-Lock
3296-73	5	4	2	Nut-Lock
32105-15	1	44	2	Screw-HH
32144-4	3	9	4	Screw-TAP
32144-73	4	15	3	Screw-HWHTF
32144-85	2	11	2	Screw-HH

*Not Illustrated

[illegible]