 


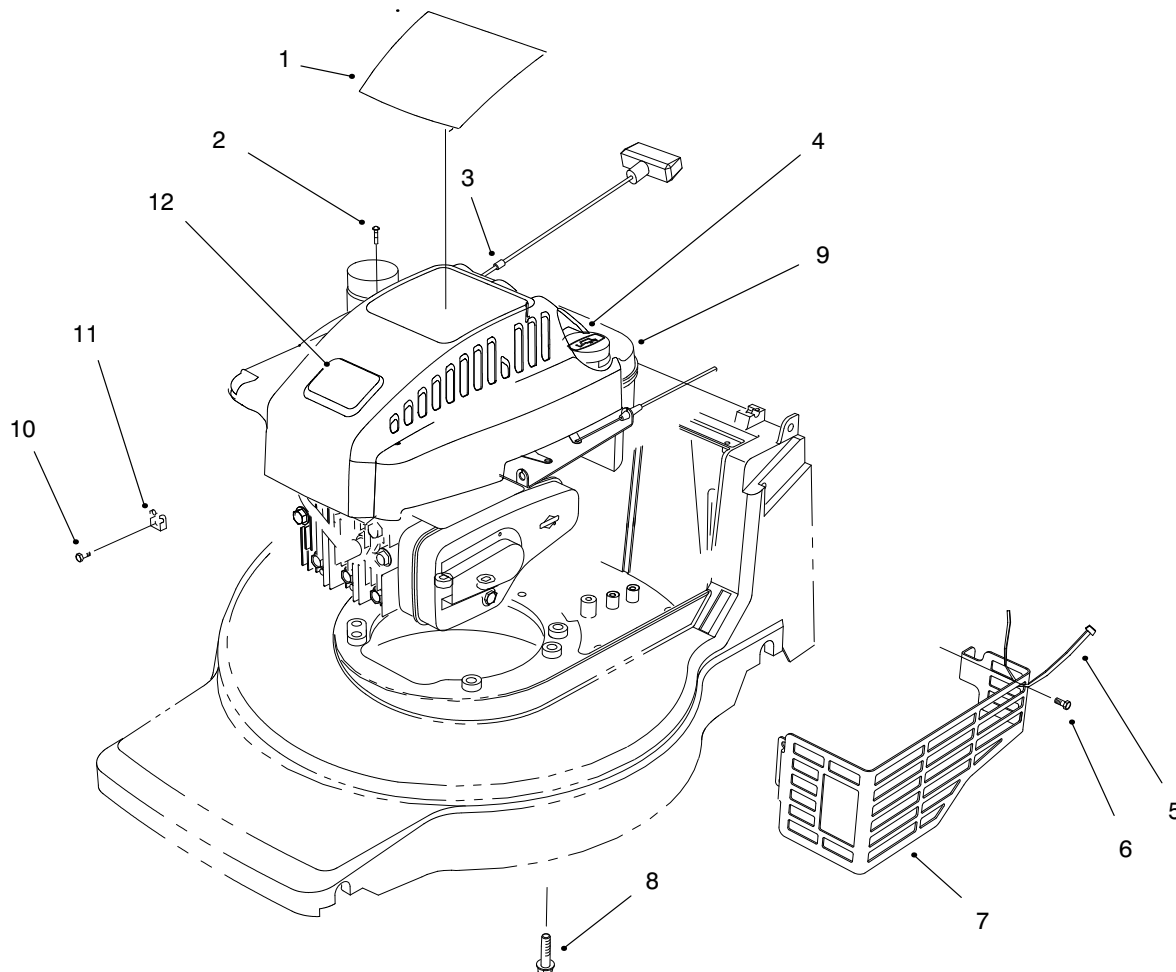


MODEL NO. 20808-8900001 & UP

**PARTS
CATALOG**
**48cm RECYCLER®
REAR BAGGING MOWER**


C-2273

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	93-4354	Decal - Engine	1	7	82-8550	Shield - Muffler	1
2	32144-121	Screw - Mounting	2	8	32144-102	Screw - Engine	3
3	2210-316	Stop - Rope	1	9		Engine	1
4	93-0243	Shroud - QT Wedge	1	10	93-8470	Screw - Clamp	1
5	3290-378	Tie - Cable	1	11	2210-249	Clamp - Casing	1
6	32144-73	Screw - Hex Washer Hd. Thread Forming	3	12	92-2289	Plate - Logo Toro	1

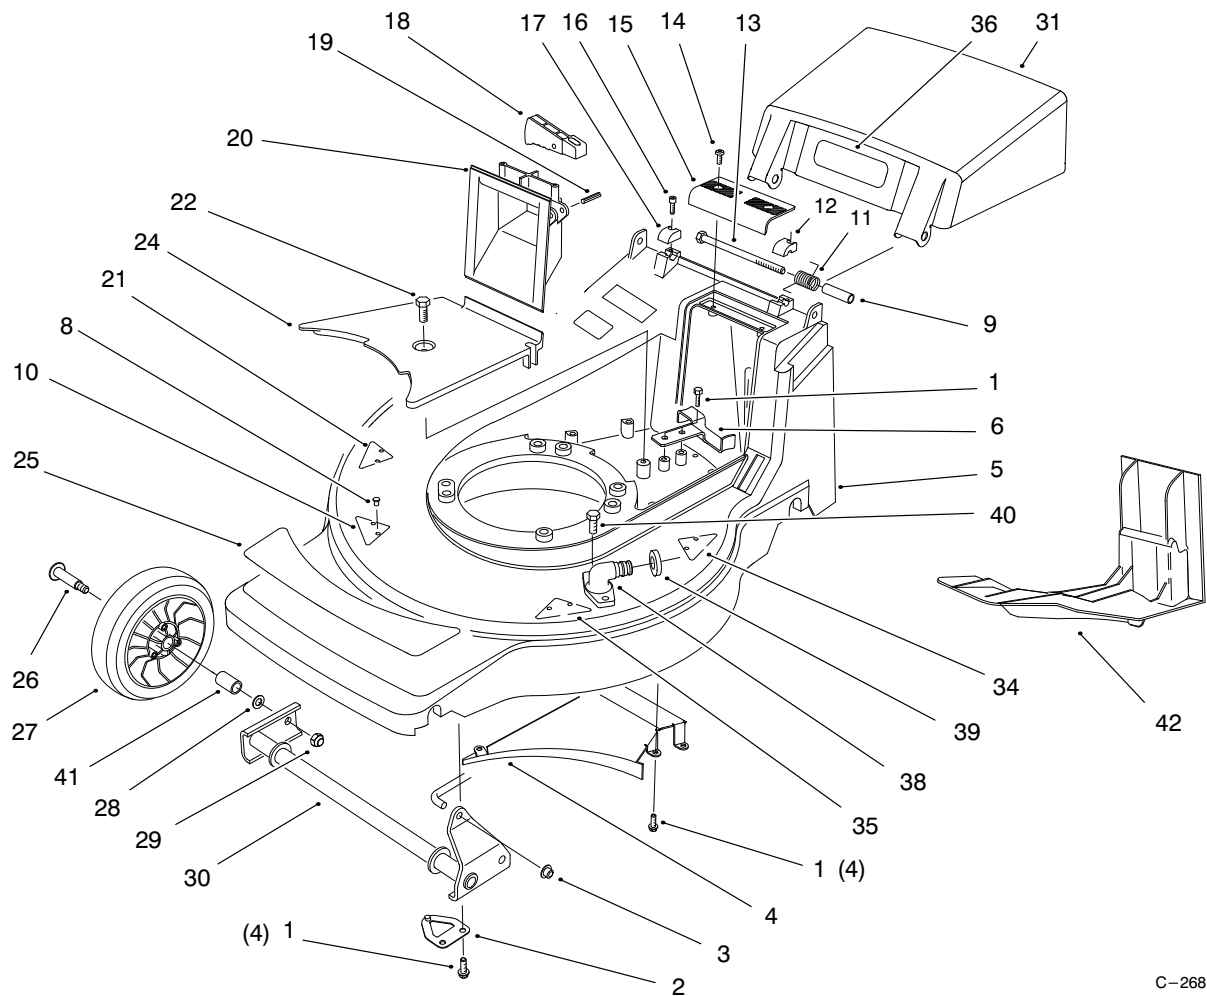 


C-2681

HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144-4	Screw - Hex Head	10
2	71-8830	Retainer - Shaft Assembly	2
3	32112-11	Nut - Push	1
4	71-7990	Ramp - Discharge	1
5	95-6134	Housing Assembly (Incl. Ref. # 8, 10, 21, 25, 34, 35, 38-40)	1
6	71-7890	Guide - Belt, Rear	1
8	32144-111	Screw - Phillips Pan Head	8
9	71-8580	Spacer - Door	2
10	71-8920	Kicker - Front, Right	1
11	71-9840	Spring - Door	2
12	71-7900	Cap - Bolt, Hinge (LH)	1
13	322-29	Screw - Hex Head	2
14	32144-97	Screw - Phillips Pan Head	2
15	71-7860	Grip - Upper	1
16	65-5210	Screw - Thread Forming	2
17	71-7910	Cap - Bolt, Hinge (RH)	1
18	71-7930	Trigger - Height of Cut	1
19	3284-5	Pin - Groove	1
20	71-7870	Grip - Lower	1

Ref. No.	Part No.	Description	No. Used
21	71-9230	Kicker - Right, Rear	1
22	32144-70	Screw - Tap	1
24	71-7920	Cover - Belt	1
25	92-7863	Decal - Deck	1
26	27-6230	Bolt - Wheel	2
27	46-1113	Wheel & Tire Assembly (Incl. Ref. #41)	2
28	40-1940	Washer	2
29	3296-5	Nut - Lock	2
30	71-7820	Pivot - Front	1
31	17-1569	Discharge Door Assembly (Incl. Ref. # 36)	1
34	71-9250	Kicker - Rear, Left	1
35	71-9440	Kicker - Front, Left	1
36	93-4105	Decal - Danger	1
38	95-2747	Fitting - Washout	1
39	46-6290	O-Ring	1
40	46-6811	Screw - Hex Washer Head	2
41	27-6250	Bushing	2
42	71-9990	Plug - Recycler	1

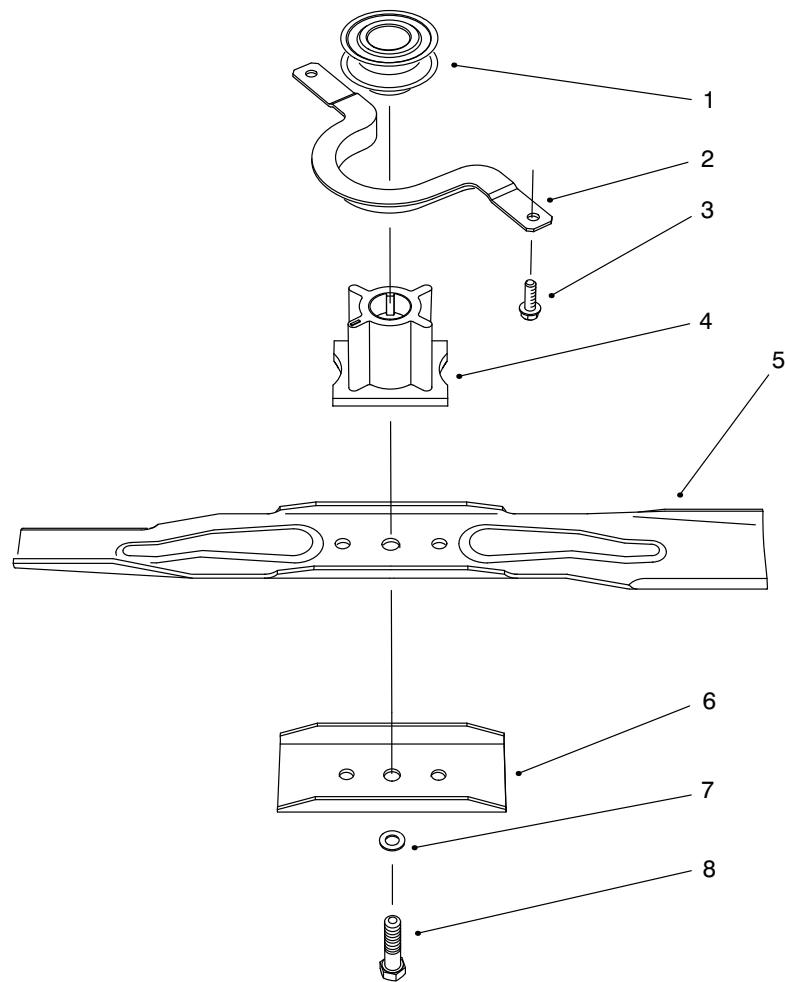 


C-1012

BLADE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	62-7550	Pulley - Driver	1
2	71-7960	Guide - Engine Belt	1
3	32144-4	Screw - Tapping	2
4	71-7940	Retainer - Blade	1

Ref. No.	Part No.	Description	No. Used
5	71-9260	Blade - 48cm Recycler	1
6	80-0510	Stiffener - Blade	1
7	3253-22	Washer - Lock	1
8	26-0672	Bolt - Blade	1

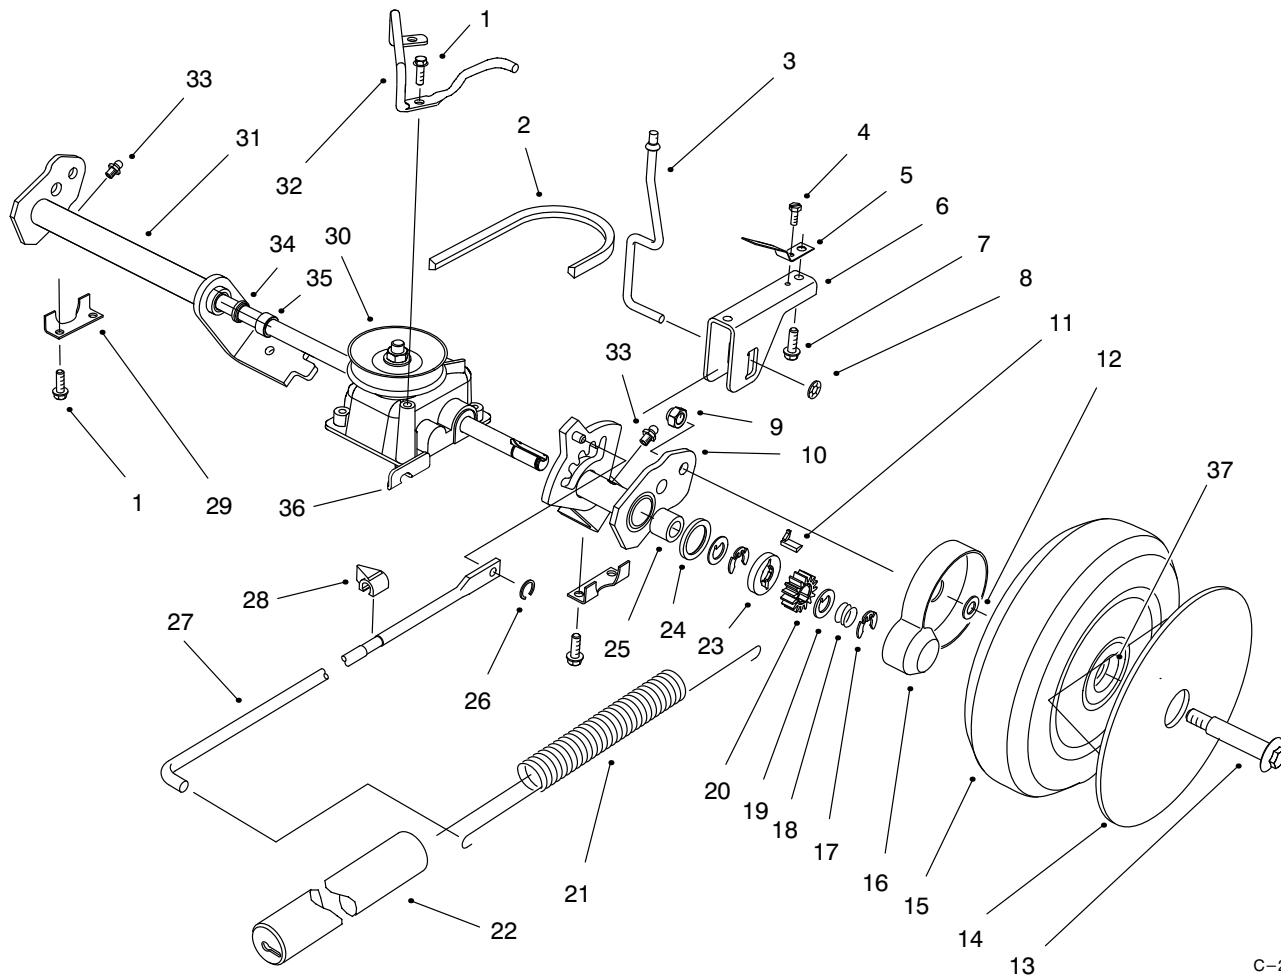 


C-2013

REAR AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144-4	Screw - Tapping	6
2	71-9450	V-Belt	1
3	71-7840	Rod - Trigger	1
4	32144-31	Screw - Tapping	1
5	71-8060	Spring - Trigger Ret.	2
6	71-8080	Saddle - H.O.C.	1
7	63-8590	Screw	2
8	32112-13	Nut - Push	1
9	3296-5	Nut - Lock	2
10	92-9677	Arm - Pivot L.H. (Incl. Ref. #25, & 33-35)	1
11	66-6050	Key - Rocking L.H.	1
*	66-6040	Key - Rocking R.H.	1
12	74-1671	Spacer - Wheel	2
13	27-6230	Bolt - Wheel	2
14	92-7663	Cover - Wheel	1
15	14-9959	Wheel & Tire Assembly 8"	2
16	74-1660	Cover - Wheel	2
17	65-2720	Ring - Retaining	4
18	65-4720	Spring - Compression	2

Ref. No.	Part No.	Description	No. Used
19	65-4740	Washer - Thrust Keyed	4
20	65-4750	Gear - Pinion	2
21	71-7740	Spring - Counterbalance	1
22	71-8450	Cover - Spring	1
23	65-4760	Washer	2
24	65-4710	Ring - Friction	2
25	48-2060	Bearing - Roller	2
26	32151-93	Ring - Grip	1
27	71-7970	Rod - Link	1
28	71-7980	Indicator - H.O.C.	1
29	71-7770	Plate - Securing Rear	2
30	71-9600	Gear Case Assembly	1
31	92-9680	Arm - Pivot R.H. (Incl. Ref. #25, & 33-35)	1
32	95-2740	Retainer - Belt	1
33	302-26	Fitting - Grease	2
34	47-6730	Seal - Oil	2
35	47-2890	Bushing	2
36	98-2039	Bracket - Traction	1
37	27-6250	Bushing	2

 *Not Illustrated

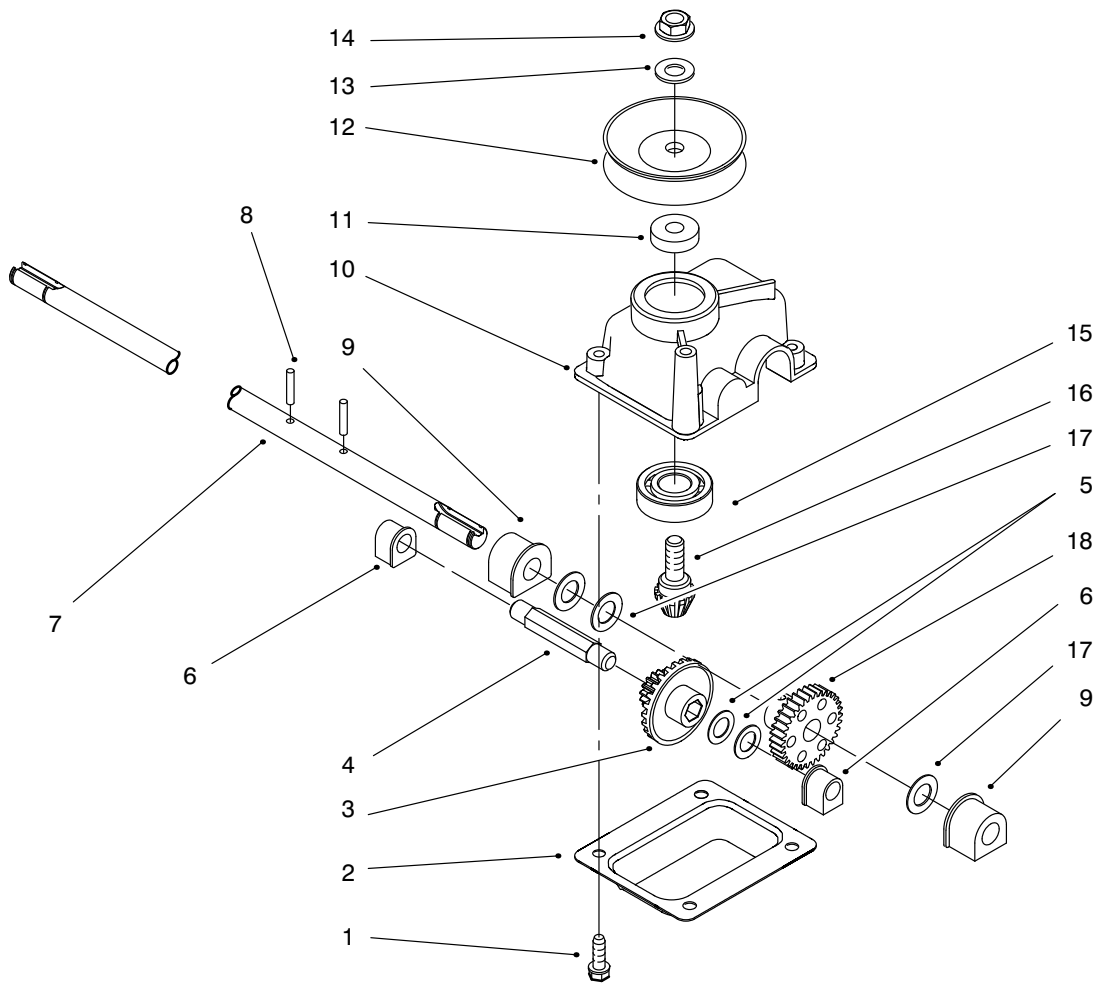


C-1292a

GEAR CASE ASSEMBLY #71-9600

Ref. No.	Part No.	Description	No. Used
1	49-2040	Screw - Taptite	4
2	614668	Cover - Gear Case	1
3	55-3760	Pinion - 15 Tooth	1
4	614696	Shaft - Intermediate	1
5	36-4791	Washer	2
6	60-8750	Bushing	2
7	71-9620	Shaft - Output	1
8	32121-63	Pin - Groove	2
9	60-8850	Bushing - Output	2
10	614578	Cover - Gearcase	1

Ref. No.	Part No.	Description	No. Used
11	62-6660	Spacer	1
12	71-9610	Pulley - Half	2
13	3256-24	Washer	1
14	3296-5	Nut	1
15	38-7820	Bearing - Ball	1
16	60-8890	Gear - Bevel Pinion	1
17	36-4780	Washer - Thrust	3
18	614596	Gear 34 Tooth	1
*	71-9600	Gear Case Ass'y Complete	1

 *Not Illustrated

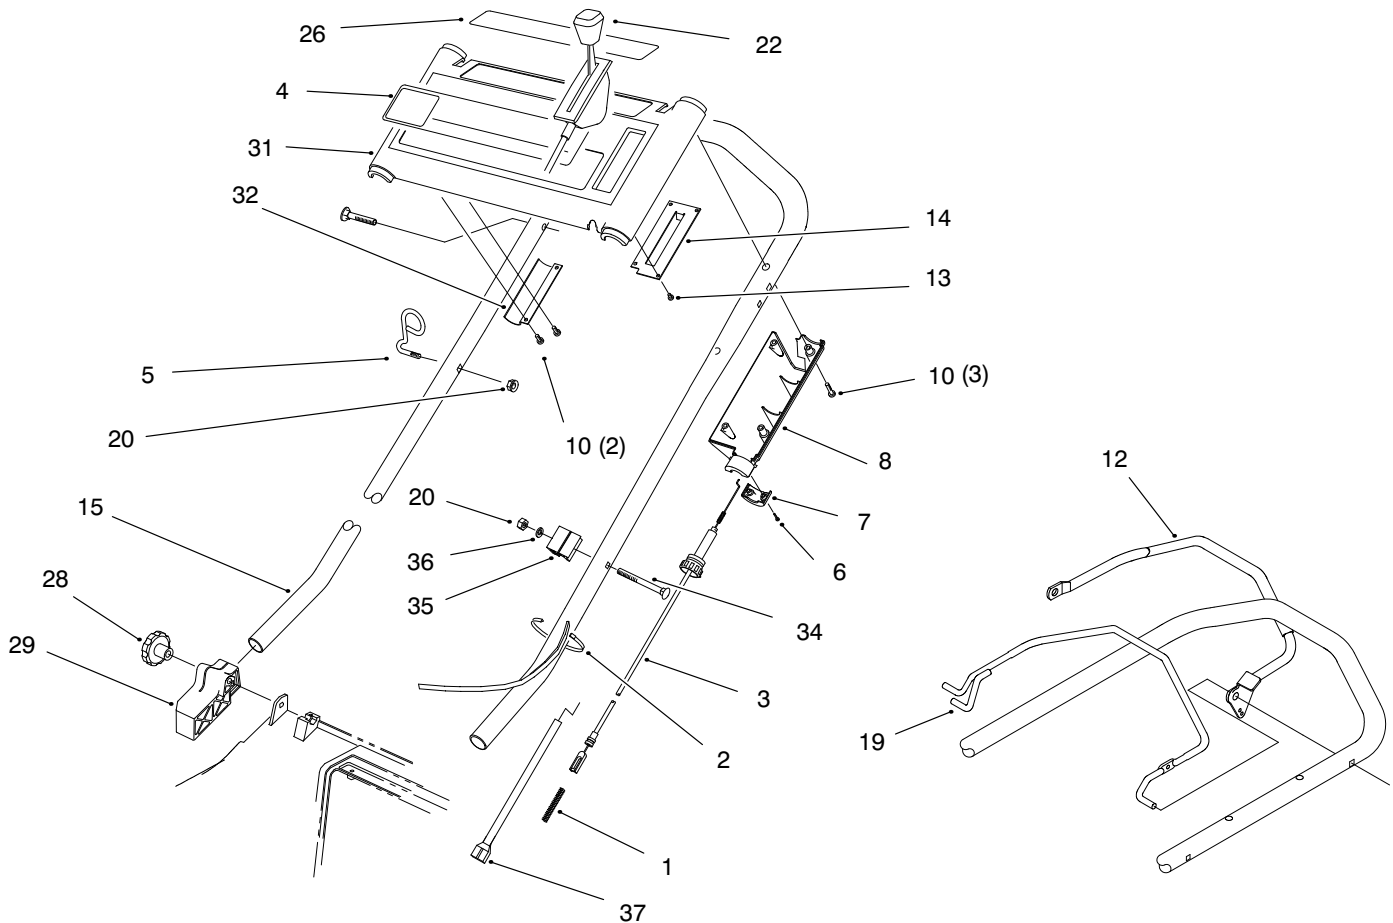


C-2680

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	71-8310	Spring - Compression	1
2	3290-378	Tie - Cable	1
3	95-9649	Cable - Traction	1
4	92-7865	Decal - Panel SP	1
5	95-4457	Guide - Rope	1
6	32144-99	Screw - Phillips Pan Hd.	2
7	71-7630	Cap - Throttle Lower	1
8	93-0339	Cover - Throttle Lower	1
10	32144-97	Screw - Phillips Pan Hd.	5
12	95-4450	Bail - Traction	1
13	32144-98	Screw - Phillips Pan Hd.	4
14	71-8040	Plate - Throttle	1
15	94-4367	Handle SP	1
19	95-4454	Bail - Brake	1

Ref. No.	Part No.	Description	No. Used
20	3296-73	Nut - Lock, Insert	2
22	93-1117	Control - Throttle	1
26	94-6026	Decal - Instruction	1
28	19-4050	Knob	2
29	71-8100	Mount - Handle R.H.	1
*	71-8090	Mount - Handle L.H.	1
31	17-4319	Panel - Control (Incl. Ref. #4,26)	1
32	71-8130	Bracket - Control	1
34	95-4453	Screw - Handle	1
35	92-7729	Support - Cable	1
36	3256-1	Washer - Flat	1
37	93-1116	Cable - Brake	1

 *Not Illustrated

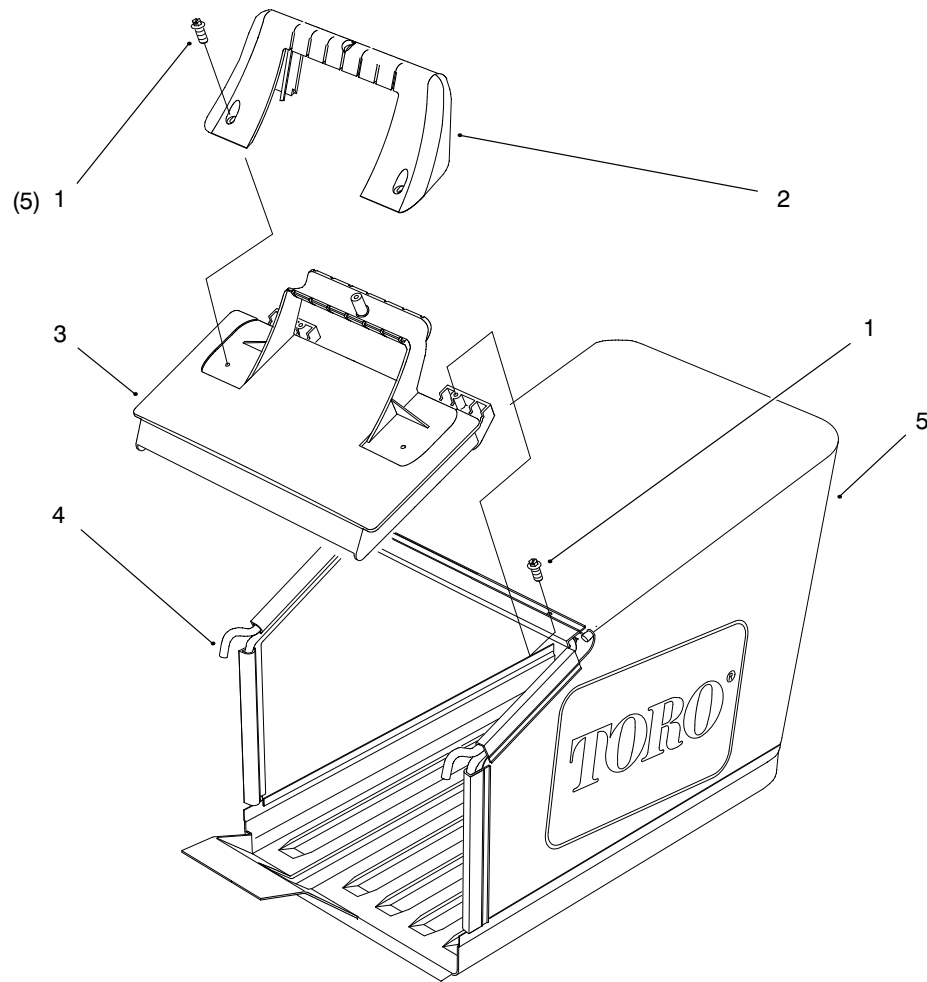


C-1509

GRASS BAG ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144-111	Screw - Thread Forming	5
2	71-9480	Handle - Door	1
3	71-9470	Door - Bag	1

Ref. No.	Part No.	Description	No. Used
4	71-9900	Frame - Bag	1
5	71-9460	Bag - Grass	1

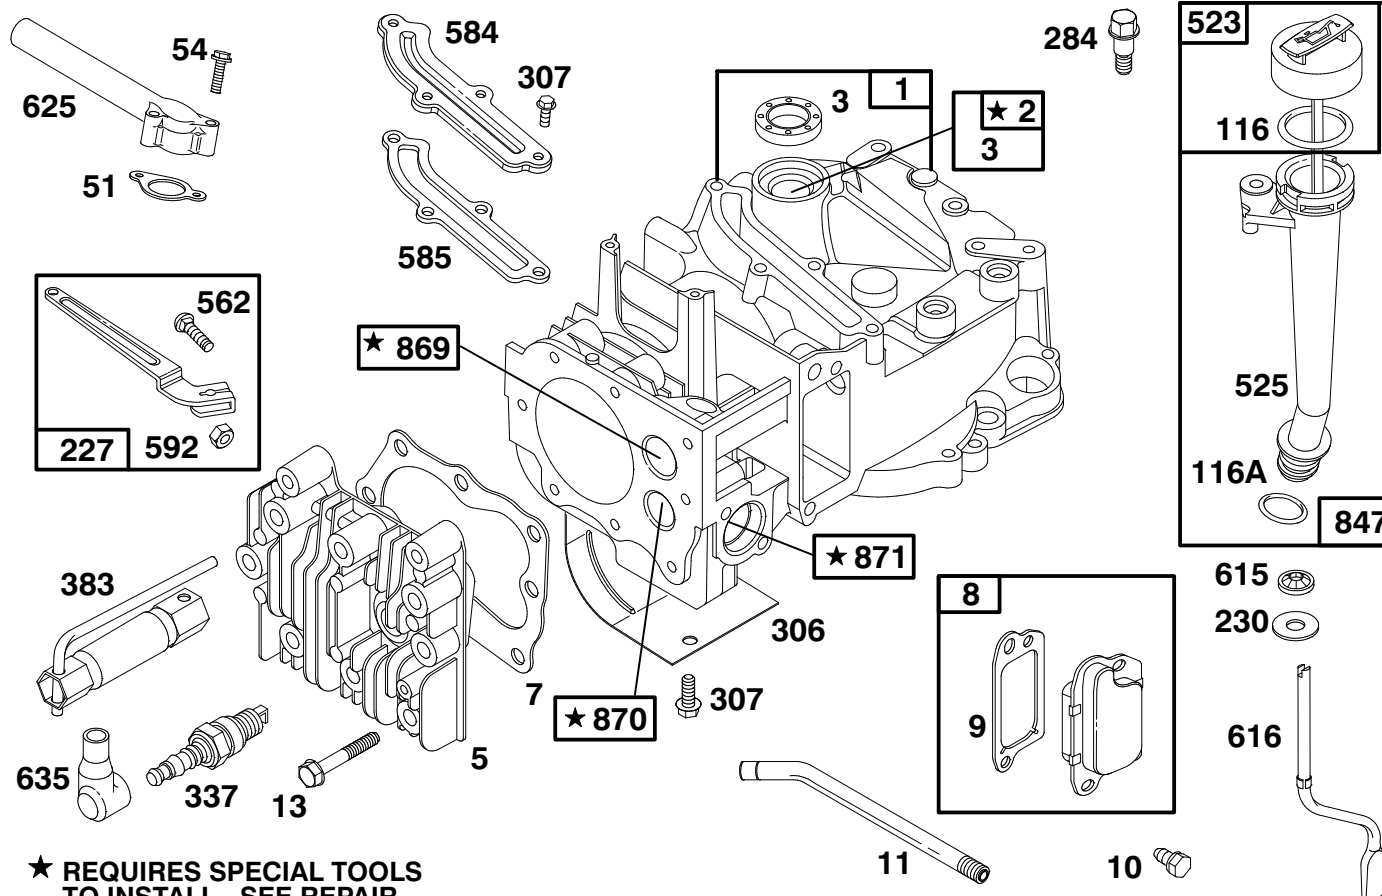 

★ REQUIRES SPECIAL TOOLS
TO INSTALL. SEE REPAIR
INSTRUCTION MANUAL.

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-1767-E1


Ref. No.	Part No.	Description	No. Used
1	493260	Cylinder Assembly	1
2	293708	Bushing	1
★3	299819	Seal – Oil	1
5	214626	Head – Cylinder	1
†★7	272916	Gasket – Cylinder Head	1
8	495786	Breather Assy.	1
†★9	272481	Gasket – Breather	1
10	94650	Screw – Hex.	1
11	231933	Tube – Breather	1
13	94547	Screw – Hex.	1
★51	272199	Gasket – Intake Elbow	1
54	94526	Screw – Hex	1
★116	280393	Seal – O Ring	1
★116A	280966	Seal – O Ring	1
227	492349	Lever Assembly – Gov.	1
230	67072	Washer – Gov. Crank	1
284	94511	Screw – Hex.	1
306	224324	Shield – Cylinder	1
307	94515	Screw – Hex.	1

Ref. No.	Part No.	Description	No. Used
337	802592	Plug – Spark	1
383	89838	Wrench – Spark Plug	1
523	495264	Dipstick	1
525	495265	Tube – Oil Filler	1
562	94582	Screw – Hex.	1
584	224328	Baffle – Cylinder	1
★585	272238	Gasket – Breather	1
592	231082	Nut – Hex.	1
615	94474	Fastener	1
616	263175	Crank – Governor	1
625	497465	Tube – Fuel Intake	1
635	66538	Elbow – Spark Plug	1
847	495263	Dipstick/Tube Assy.	1
869	213512	Seat – Valve (Intake)	1
870	213513	Seat – Valve (Exhaust)	1
871	262001	Bushing – Guide (Exhaust)	1
		Note: 63709 Bushing – Guide (Intake)	1

★ Included in Gasket Set—Part No. 497316.

† Included in Valve Overhaul Gasket Set—Part No. 498528.

 Obtain Parts From Briggs & Stratton

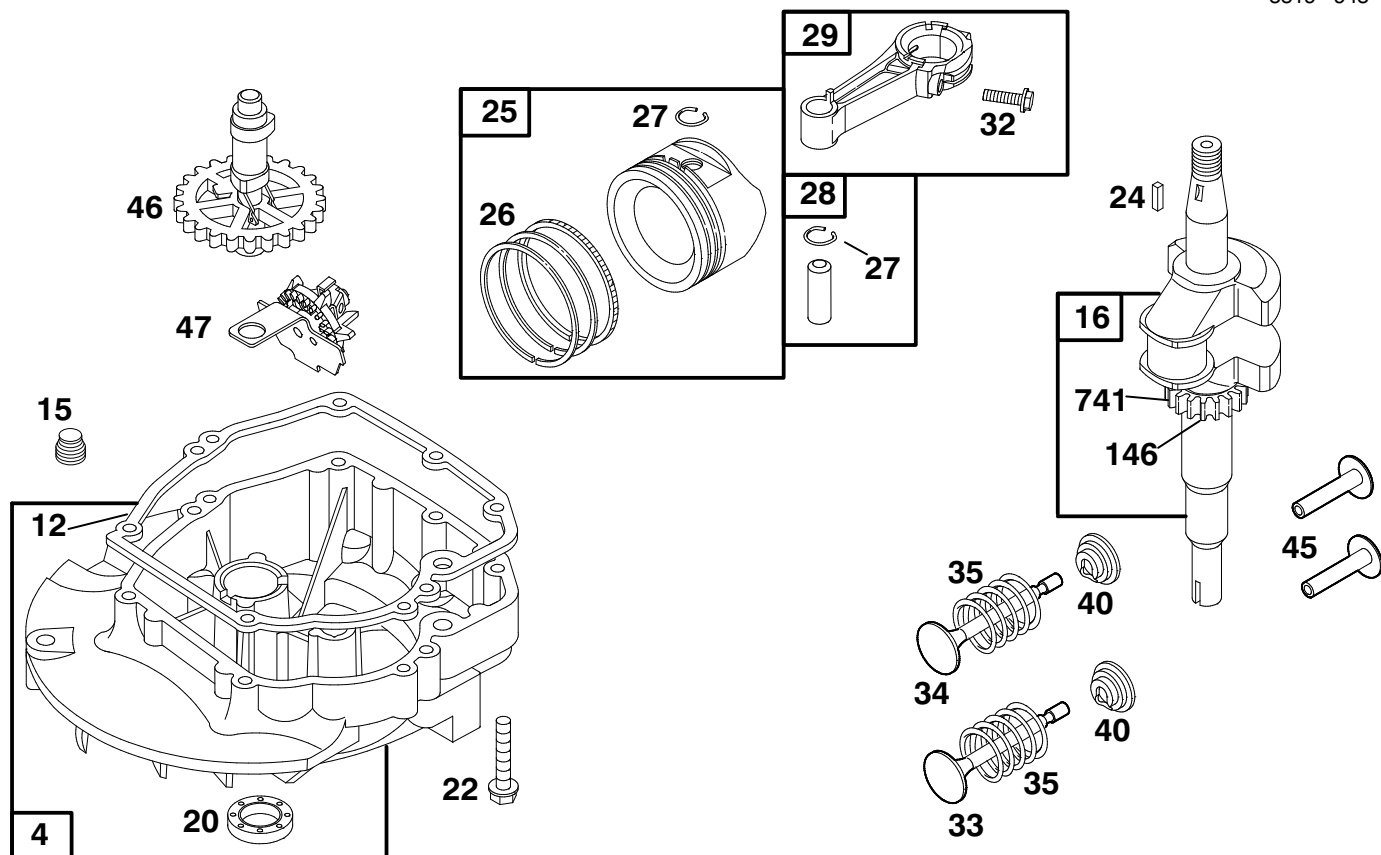

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 12F802-1767-E1

Ref. No.	Part No.	Description	No. Used
4	493279	Sump – Engine	1
★12	272198	Gasket – Crankcase	1
15	94880	Plug – Oil Drain	1
16	498573	Crankshaft	1
★20	399781	Seal – Oil	1
22	94220	Screw – Hex.	1
		Note: 94612 Screw – Hex. (One (1) Used in Hole Nearest Breather.)	1
24	222698	Key – Flywheel	1
25	499429	Piston Assy. (Standard)	1
	499430	Piston Assy. (0.010" O.S.)	1
	499431	Piston Assy. (0.020" O.S.)	1
	499432	Piston Assy. (0.030" O.S.)	1

Ref. No.	Part No.	Description	No. Used
26	499425	Ring Set (Standard)	1
	499426	Ring Set (0.010" O.S.)	1
	499427	Ring Set (0.020" O.S.)	1
	499428	Ring Set (0.030" O.S.)	1
27	263190	Lock – Piston Pin	1
28	499423	Pin – Piston (Standard)	1
29	499424	Rod Assembly – Connecting	1
32	94699	Screw – Connecting Rod	1
33	262651	Valve – Exhaust	1
34	262652	Valve – Intake	1
35	262224	Spring – Valve	1
40	93312	Retainer – Valve Spring	1
45	262204	Tappet – Valve	1
46	498275	Gear – Cam	1
47	493737	Slinger – Oil	1
146	94388	Key – Timing	1
741	262598	Gear – Timing	1

★ Included in Gasket Set–Part No. 497316.

 Obtain Parts From Briggs & Stratton

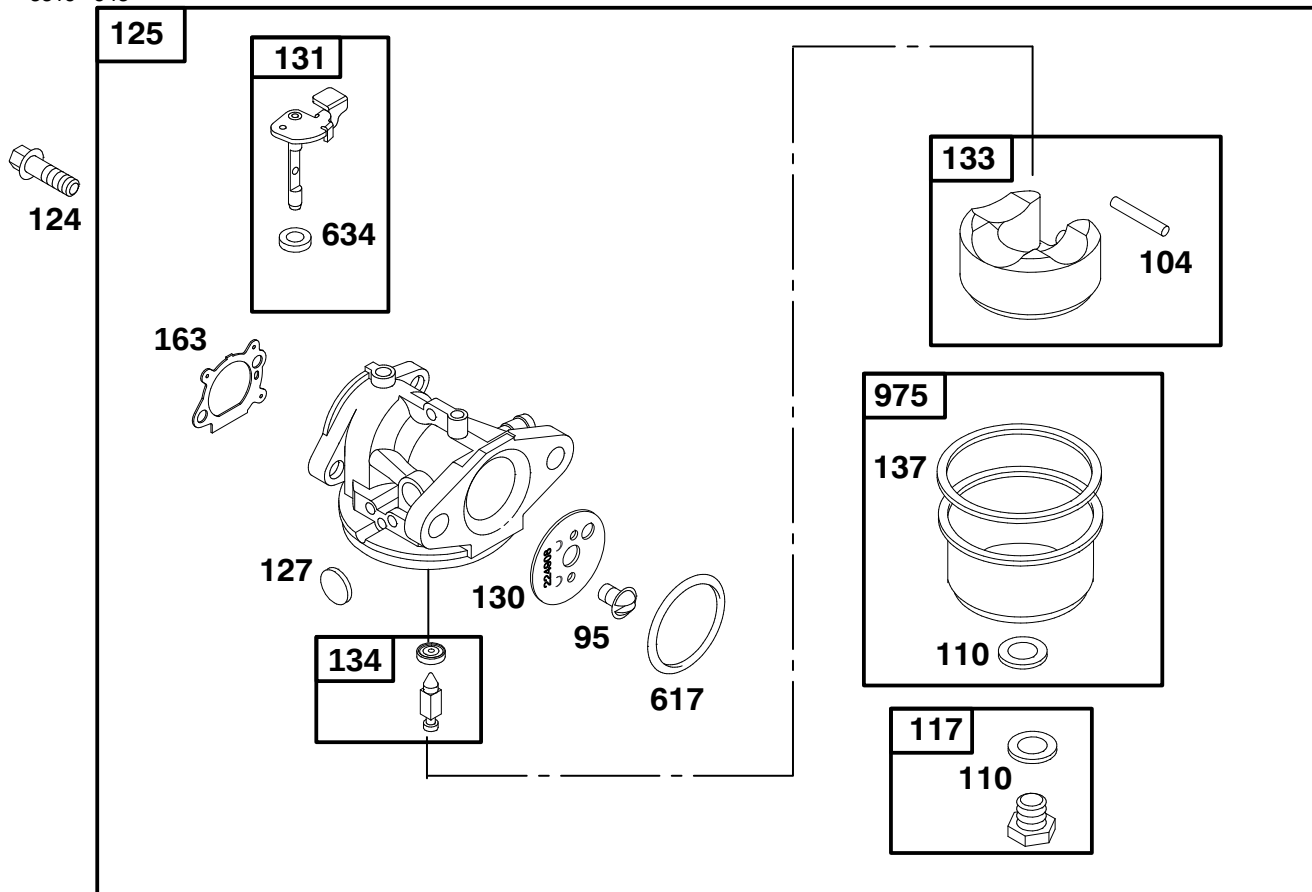

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-1767-E1



Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
95	94098	Screw – Slotted	1	130	224908	Valve – Throttle	1
●104	231371	Pin – Float Hinge	1	131	493267	Shaft – Throttle	1
◆110		Washer – Bowl		133	398187	Float – Carburetor	1
		(Sold in Kit Only).	1	●134	398188	Kit – Needle/Seat	1
117	494870	Jet – Main (Std.)		◆137		Gasket – Bowl	
		Note: 497315 Jet – Main				(Sold in Kit Only).	1
		(High Altitude)	1	◆◆★163	272653	Gasket – Air Cleaner	1
124	94840	Screw – Hex	1	◆◆617	270344	Seal – Intake Manifold	1
125	498170	Carburetor	1	◆◆634		Washer – Foam	
●127		Plug – Welch				(Sold in Kit Only).	1
		(Sold in Kit Only).	1	975	493640	Bowl – Float	1

★ Included in Gasket Set – Part No. 497316.

Obtain Parts From Briggs & Stratton

● Included in Carburetor Kit – Part No. 498260.

  ◆ Included in Carburetor Gasket Set – Part No. 498261.

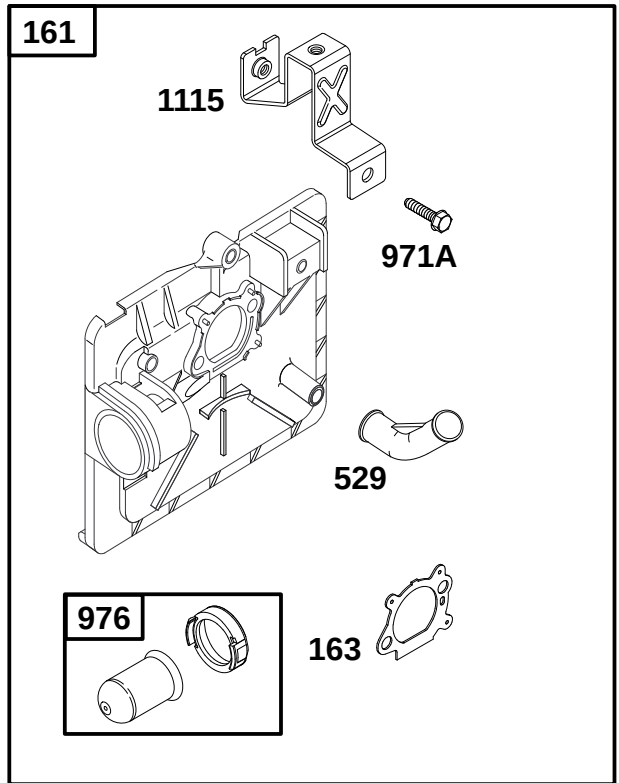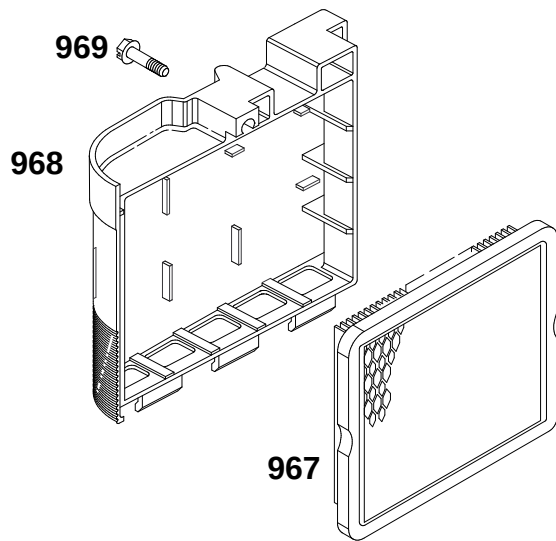

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-1767-E1

Ref. No.	Part No.	Description	No. Used
161	496116	Base – Air Cleaner	1
◆★163	272653	Gasket – Air Cleaner	1
529	281299	Grommet	1
967	491588	Filter – Air	1
968	281340	Cover – Air Cleaner	1


Ref. No.	Part No.	Description	No. Used
969	94872	Screw – Slotted Hex.	1
971	94873	Screw – Hex.	1
971A	94749	Screw – Hex.	1
976	496115	Primer – Carburetor	1
1115	224815	Bracket – Support	1

★ Included in Gasket Set—Part No. 497316.

Obtain Parts From Briggs & Stratton

● Included in Carburetor Kit—Part No. 498260.

 ◆ Included in Carburetor Gasket Set—Part No. 498261.

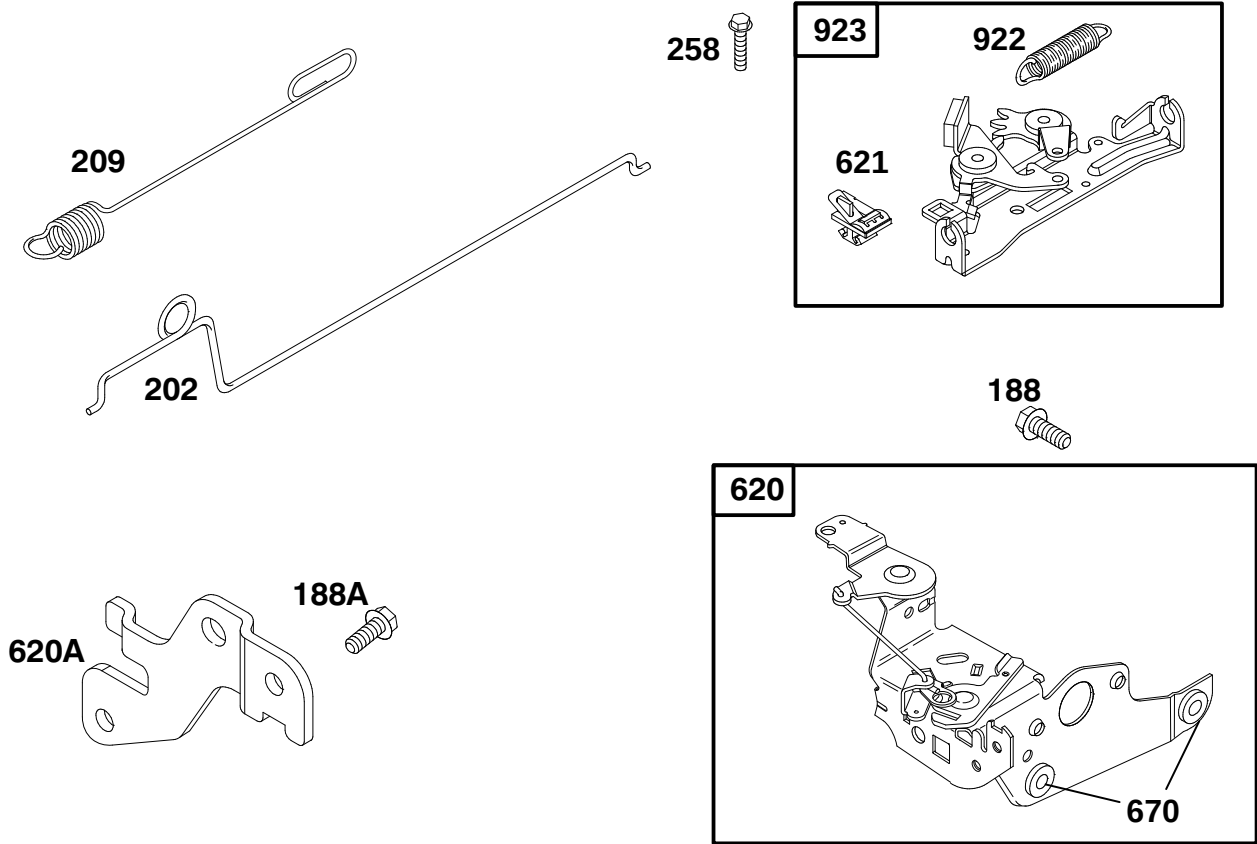


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-1767-E1

Ref. No.	Part No.	Description	No. Used
188	94644	Screw – Hex.	1
188A	94874	Screw – Hex.	1
202	262579	Link – Governor	1
209	263046	Spring – Governor	1
258	94512	Screw – Hex.	1
620	497203	Bracket – Carburetor	1

Ref. No.	Part No.	Description	No. Used
620A	225152	Bracket – Control	1
621	396847	Switch – Stop	1
★670	493823	Spacer – Bracket	2
922	262640	Spring – Brake	1
923	493442	Brake Assembly	1

 ★ Included in Gasket Set–Part No. 497316.
Obtain Parts From Briggs & Stratton

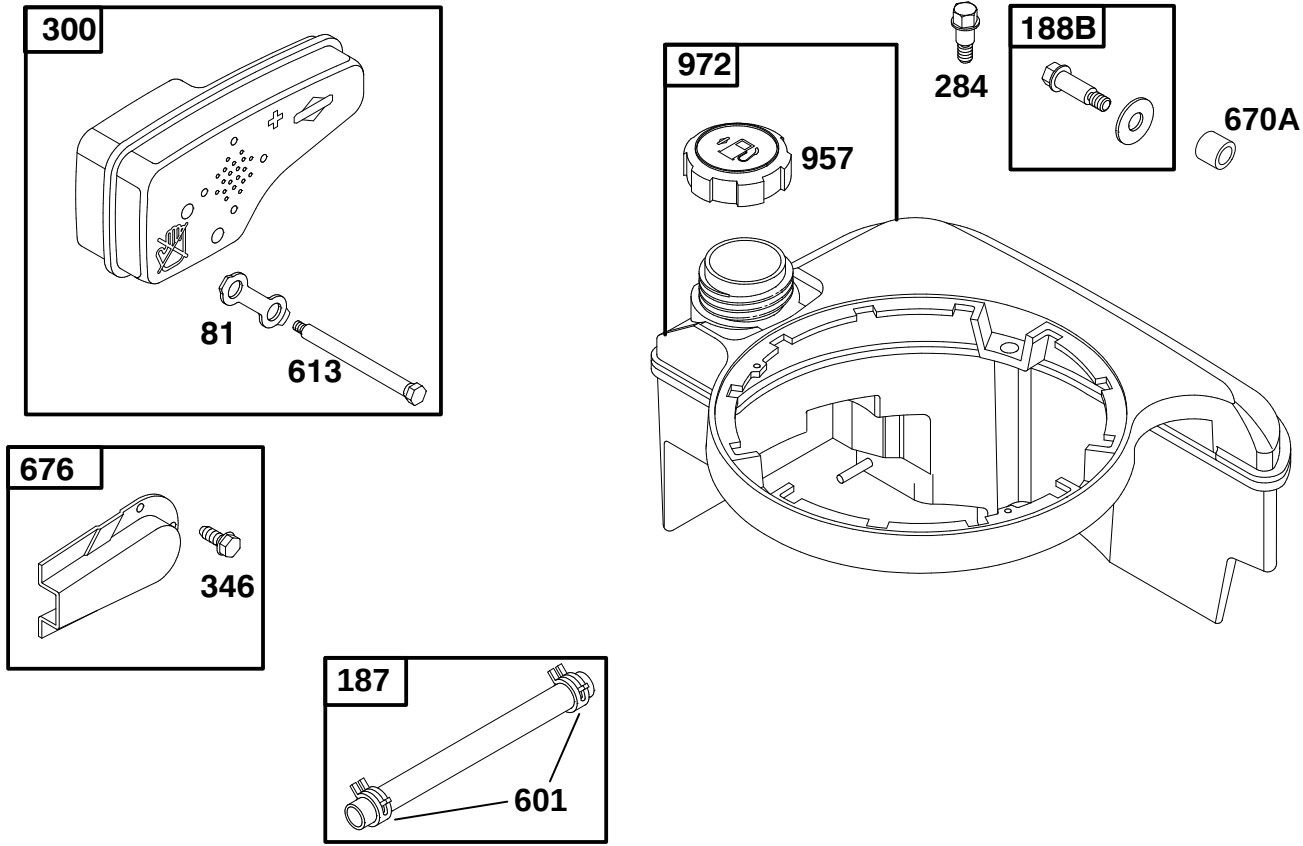


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-1767-E1

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
81	223664	Lock – Muffler Screw	1	601	95162	Clamp – Hose	1
187	298049	Line – Fuel	1	613	94231	Screw – Shoulder	1
		(Cut to Required Length)	1	670A	280512	Spacer – Fuel Tank	1
188B	398540	Screw – Shoulder	1	676	493871	Deflector – Muffler	1
284	94511	Screw – Shoulder	1	957	397974	Cap – Fuel Tank	1
300	496106	Muffler – Exhaust	1	972	495224	Tank – Fuel	1
346	94896	Screw – Hex.	1				

 Obtain Parts From Briggs & Stratton

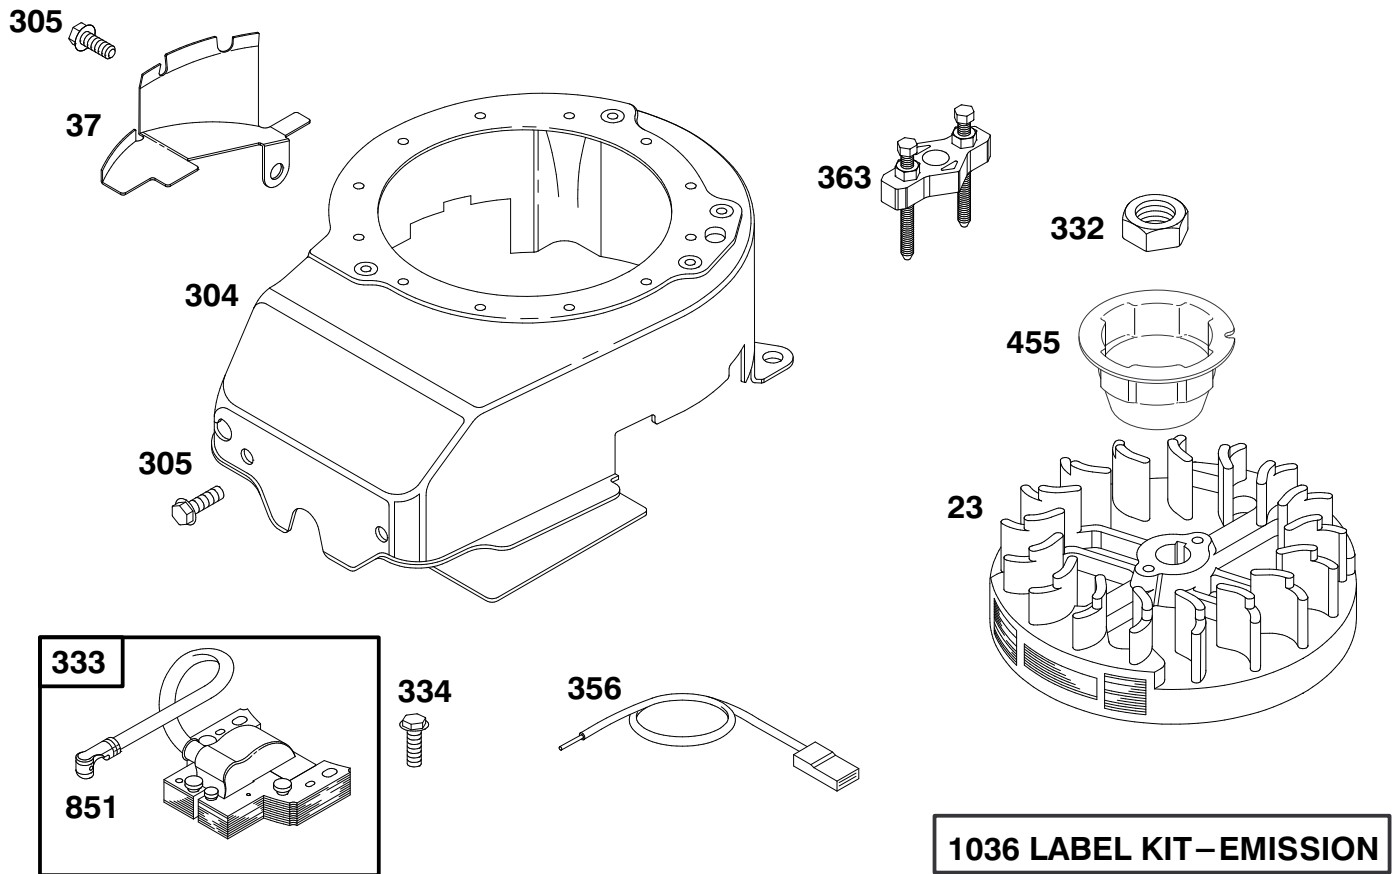


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-1767-E1

Ref. No.	Part No.	Description	No. Used
23	492177	Flywheel	1
37	224511	Guard - Flywheel	1
304	493293	Housing - Blower	1
305	94744	Screw - Hex.	1
332	94877	Nut - Flywheel	1
333	802574	Armature - Magneto	1

Ref. No.	Part No.	Description	No. Used
334	94731	Screw - Hex.	1
356	497833	Wire - Stop	1
363	19069	Puller - Flywheel	1
455	225121	Cup - Flywheel	1
851	493880	Terminal - Cable	1
1036	499341	Label Kit - Emission	1

 Obtain Parts From Briggs & Stratton




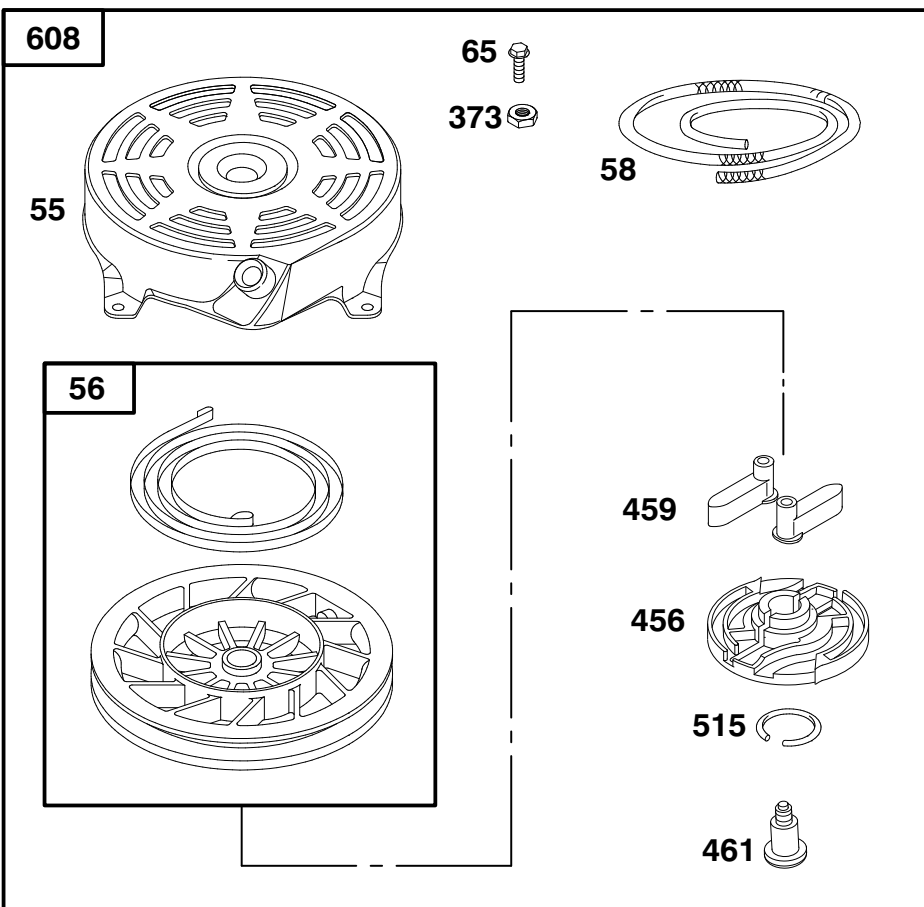


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-1767-E1

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
55	497440	Housing - Rewind Starter	1	373	94908	Nut - Hex.	1
56	498144	Pulley - Starter	1	456	281503	Retainer - Spring	1
58	280399	Rope - Starter	1	459	281505	Pawl - Ratchet	1
59	224467	Insert - Starter Grip	1	461	94943	Screw - Shoulder	1
60	493926	Grip - Starter Rope	1	515	263073	Spring - Friction	1
65	94904	Screw - Hex.	1	608	497680	Starter - Rewind	1

    Obtain Parts From Briggs & Stratton

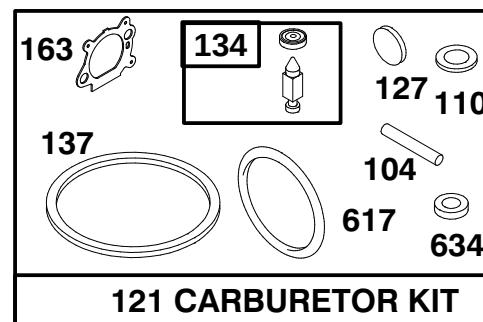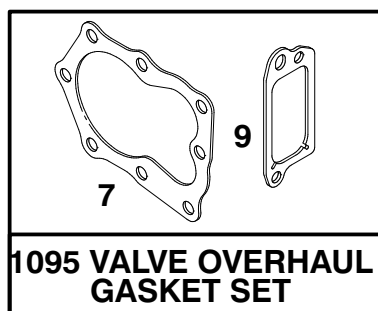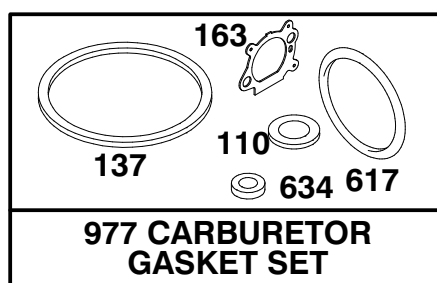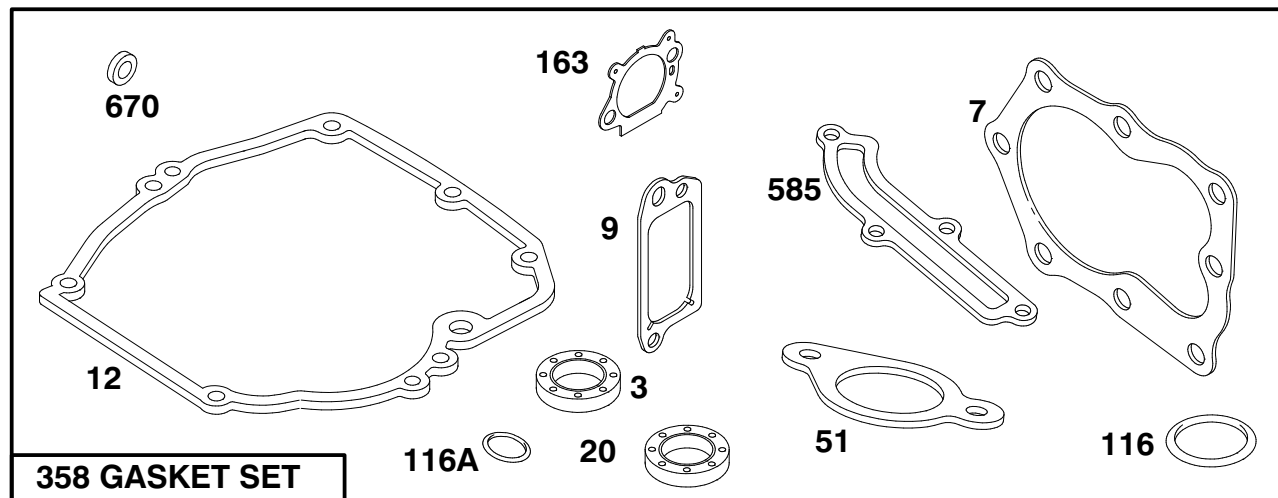

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-1767-E1

Ref. No.	Part No.	Description	No. Used
★3	299819	Seal – Oil	1
†★7	272916	Gasket – Cylinder Head	1
†★9	272481	Gasket – Breather	1
★12	272198	Gasket – Crankcase	1
★20	399781	Seal – Oil	1
★51	272199	Gasket – Intake	1
●104	231371	Pin – Float Hinge	1
◆110		Washer – Bowl (Sold in Kit Only).	1
★116	280393	Seal – O Ring	1
★116A	280966	Seal – O Ring	1
121	498260	Carburetor Kit	1
●127		Plug – Welch (Sold in Kit Only).	1

Ref. No.	Part No.	Description	No. Used
●134	398188	Kit – Needle/Seat	1
◆137		Gasket – Bowl (Sold in Kit Only).	1
◆★163	272653	Gasket – Air Cleaner	1
358	497316	Gasket Set	1
★585	272238	Gasket – Breather	1
◆◆617	270344	Seal – Intake Manifold	1
◆◆634		Washer – Foam (Sold in Kit Only).	1
★670	493823	Spacer – Bracket	2
977	498261	Gasket Set – Carburetor	1
1095	498528	Gasket Set – Valve Overhaul	1

● Included in Carburetor Kit—Part No. 498260.
 ◆ Included in Carburetor Gasket Set—Part No. 498261.
Obtain Parts From Briggs & Stratton

★ Included in Gasket Set—Part No. 497316.
 † Included in Valve Overhaul Gasket Set—Part No. 498528.

TORO PART NUMBER INDEX

3319-943

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
614578	Cover – Gearcase	5 10 1	71-9450	V-Belt	4 2 1
614596	Gear 34 Tooth	5 18 1	71-9460	Bag – Grass	7 5 1
614668	Cover – Gear Case	5 2 1	71-9470	Door – Bag	7 3 1
614696	Shaft – Intermediate	5 4 1	71-9480	Handle – Door	7 2 1
14-9959	Wheel & Tire Assembly 8	4 15 2	71-9600	Gear Case Ass'y Complete	5 * 1
17-1569	Door – Discharge	2 31 1	71-9600	Gear Case Assembly	4 30 1
17-4319	Panel – Control	6 31 1	71-9610	Pulley – Half	5 12 2
19-4050	Knob	6 28 2	71-9620	Shaft – Output	5 7 1
26-0672	Bolt – Blade	3 8 1	98-2039	Bracket – Traction	4 36 1
27-6230	Bolt – Wheel	2 26 2	71-9840	Spring – Door	2 11 2
27-6230	Bolt – Wheel	4 13 2	71-9900	Frame – Bag	7 4 1
27-6250	Bushing	2 41 2	71-9990	Plug – Recycler	2 42 1
27-6250	Bushing	4 37 2	74-1660	Cover – Wheel	4 16 2
36-4780	Washer – Thrust	5 17 3	74-1671	Spacer – Wheel	4 12 2
36-4791	Washer	5 5 2	80-0510	Stiffener – Blade	3 6 1
38-7820	Bearing – Ball	5 15 1	82-8550	Shield – Muffler	1 7 1
40-1940	Washer	2 28 2	92-2289	Plate – Logo Toro	1 12 1
46-1113	Wheel & Tire Assembly	2 27 2	92-7663	Cover – Wheel	4 14 1
46-6290	O-Ring	2 39 1	92-7729	Support – Cable	6 35 1
46-6811	Screw – Hex Washer Head	2 40 2	92-7863	Decal – Deck	2 25 1
47-2890	Bushing	4 35 2	92-7865	Decal – Panel SP	6 4 1
47-6730	Seal – Oil	4 34 2	92-9677	Arm – Pivot L.H.	4 10 1
48-2060	Bearing – Roller	4 25 2	92-9680	Arm – Pivot R.H.	4 31 1
49-2040	Screw – Taprite	5 1 4	93-0243	Shroud – QT Wedge	1 4 1
55-3760	Pinion – 15 Tooth	5 3 1	93-0339	Cover – Throttle Lower	6 8 1
60-8750	Bushing	5 6 2	93-1116	Cable – Brake	6 37 1
60-8850	Bushing – Output	5 9 2	93-1117	Control – Throttle	6 22 1
60-8890	Gear – Bevel Pinion	5 16 1	93-4105	Decal – Danger	2 36 1
62-6660	Spacer	5 11 1	93-4354	Decal – Engine	1 1 1
62-7550	Pulley – Driver	3 1 1	93-8470	Screw – Clamp	1 10 1
63-8590	Screw	4 7 2	94-4367	Handle SP	6 15 1
65-2720	Ring – Retaining	4 17 4	94-6026	Decal – Instruction	6 26 1
65-4710	Ring – Friction	4 24 2	95-2740	Retainer – Belt	4 32 1
65-4720	Spring – Compression	4 18 2	95-2747	Fitting – Washout	2 38 1
65-4740	Washer – Thrust Keyed	4 19 4	95-4450	Bail – Traction	6 12 1
65-4750	Gear – Pinion	4 20 2	95-4453	Screw – Handle	6 34 1
65-4760	Washer	4 23 2	95-4454	Bail – Brake	6 19 1
65-5210	Screw – Thread Forming	2 16 2	95-4457	Guide – Rope	6 5 1
66-6040	Key – Rocking R.H.	4 * 1	95-6134	Housing Assembly	2 5 1
66-6050	Key – Rocking L.H.	4 11 1	95-9649	Cable – Traction	6 3 1
71-7630	Cap – Throttle Lower	6 7 1	2210-249	Clamp – Casing	1 11 1
71-7740	Spring – Counterbalance	4 21 1	2210-316	Stop – Rope	1 3 1
71-7770	Plate – Securing Rear	4 29 2	302-26	Fitting – Grease	4 33 2
71-7820	Pivot – Front	2 30 1	322-29	Screw – Hex Head	2 13 2
71-7840	Rod – Trigger	4 3 1	3253-22	Washer – Lock	3 7 1
71-7860	Grip – Upper	2 15 1	3256-1	Washer – Flat	6 36 1
71-7870	Grip – Lower	2 20 1	3256-24	Washer	5 13 1
71-7890	Guide – Belt, Rear	2 6 1	3284-5	Pin – Groove	2 19 1
71-7900	Cap – Bolt, Hinge (LH)	2 12 1	3290-378	Tie – Cable	6 2 1
71-7910	Cap – Bolt, Hinge (RH)	2 17 1	3290-378	Tie – Cable	1 5 1
71-7920	Cover – Belt	2 24 1	3296-5	Nut	5 14 1
71-7930	Trigger – Height of Cut	2 18 1	3296-5	Nut – Lock	4 9 2
71-7940	Retainer – Blade	3 4 1	3296-5	Nut – Lock	2 29 2
71-7960	Guide – Engine Belt	3 2 1	3296-73	Nut – Lock, Insert	6 20 2
71-7970	Rod – Link	4 27 1	32112-11	Nut – Push	2 3 1
71-7980	Indicator – H.O.C.	4 28 1	32112-13	Nut – Push	4 8 1
71-7990	Ramp – Discharge	2 4 1	32121-63	Pin – Groove	5 8 2
71-8040	Plate – Throttle	6 14 1	32144-4	Screw – Hex Head	2 1 10
71-8060	Spring – Trigger Ret.	4 5 2	32144-4	Screw – Tapping	4 1 6
71-8080	Saddle – H.O.C.	4 6 1	32144-4	Screw – Tapping	3 3 2
71-8090	Mount – Handle L.H.	6 * 1	32144-31	Screw – Tapping	4 4 1
71-8100	Mount – Handle R.H.	6 29 1	32144-70	Screw – Tap	2 22 1
71-8130	Bracket – Control	6 32 1	32144-73	Screw – Hex Washer Hd.	1 6 3
71-8310	Spring – Compression	6 1 1	32144-97	Screw – Phillips Pan Hd.	6 10 5
71-8450	Cover – Spring	4 22 1	32144-97	Screw – Phillips Pan Head	2 14 2
71-8580	Spacer – Door	2 9 2	32144-98	Screw – Phillips Pan Hd.	6 13 4
71-8830	Retainer – Shaft Assembly	2 2 2	32144-99	Screw – Phillips Pan Hd.	6 6 2
71-8920	Kicker – Front, Right	2 10 1	32144-102	Screw – Engine	1 8 3
71-9230	Kicker – Right, Rear	2 21 1	32144-111	Screw – Phillips Pan Head	2 8 8
71-9250	Kicker – Rear, Left	2 34 1	32144-111	Screw – Thread Forming	7 1 5
71-9260	Blade – 48cm Recycler	3 5 1	32144-121	Screw – Mounting	1 2 2
71-9440	Kicker – Front, Left	2 35 1	32151-93	Ring – Grip	4 26 1

*Not Illustrated

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

[illegible]

[illegible]

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.