



**Count on it.**

# Parts Catalog

## **Super Recycler® Lawn Mower**

**Model No. 20381—Serial No. 400000000 and Up**



# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

## Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

## Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

## Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# Contents

Frame Assembly..... 4

Housing Assembly No. 115-2854 ..... 6

Rear Door and Mulch Plug Assembly ..... 8

Bag Assembly..... 10

Engine and Blade Assembly..... 12

Fuel System Assembly ..... 14

Air Intake and Filtration Assembly ..... 16

Ignition and Electrical Assembly ..... 18

Crankcase Assembly..... 20

Governor Control Assembly ..... 22

Piston and Cylinder Head Assembly..... 24

Blower Housing Assembly ..... 26

 
Front Wheel and Height-of-Cut Assembly ..... 28

Rear Wheel and Height-of-Cut Assembly..... 30

Handle Assembly ..... 32

Attachments and Accessories ..... 34


# Frame Assembly

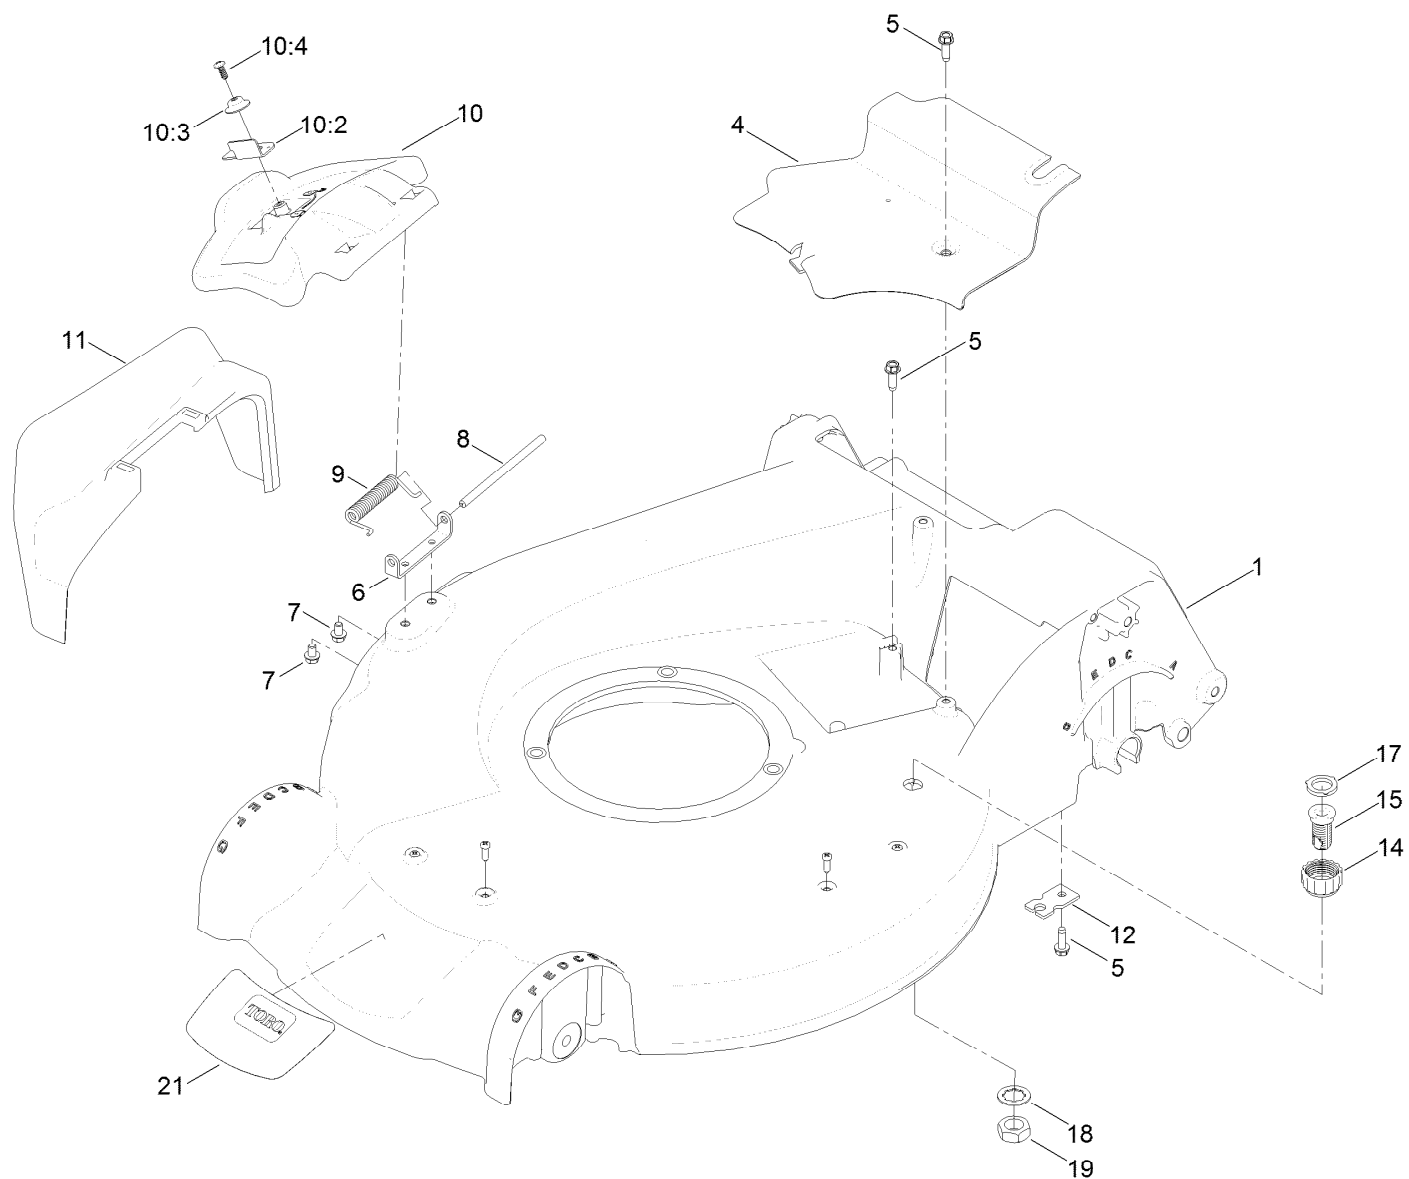

## Frame Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>          |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|-----------------------------|
| 1           | 115-2854           | 1           | Housing ASM        | 10:4        | 107-7461           | 1           | Screw-Plastite              |
| 4           | 107-7494           | 1           | Cover-Belt         | 11          | 108-3753           | 1           | Chute-Discharge, Side       |
| 5           | 49-2040            | 2           | Screw-HWHTF        | 12          | 107-7497           | 1           | Bracket-Cable, Traction     |
| 6           | 112-6416           | 1           | Bracket-Cover      | 14          | 112-6401           | 1           | Coupling-Hose, Washout Port |
| 7           | 99-8445            | 2           | Screw-HWH          | 15          | 112-6400           | 1           | Port-Washout                |
| 8           | 99-5291            | 1           | Rod-Cover          | 17          | 112-6438           | 1           | Washer-Seal, Washout Port   |
| 9           | 99-5293            | 1           | Spring-Torsion     | 18          | 3254-5             | 1           | Washer-Tooth, Internal      |
| 10          | 107-3717           | 1           | Discharge Door ASM | 19          | 3218-6             | 1           | Nut-Jam                     |
| 10:2        | 107-0795           | 1           | Latch-Door         | 21          | 136-7097           | 1           | Decal-Deck                  |
| 10:3        | 107-7456           | 1           | Cap-Door           |             |                    |             |                             |
 
# Housing Assembly No. 115-2854

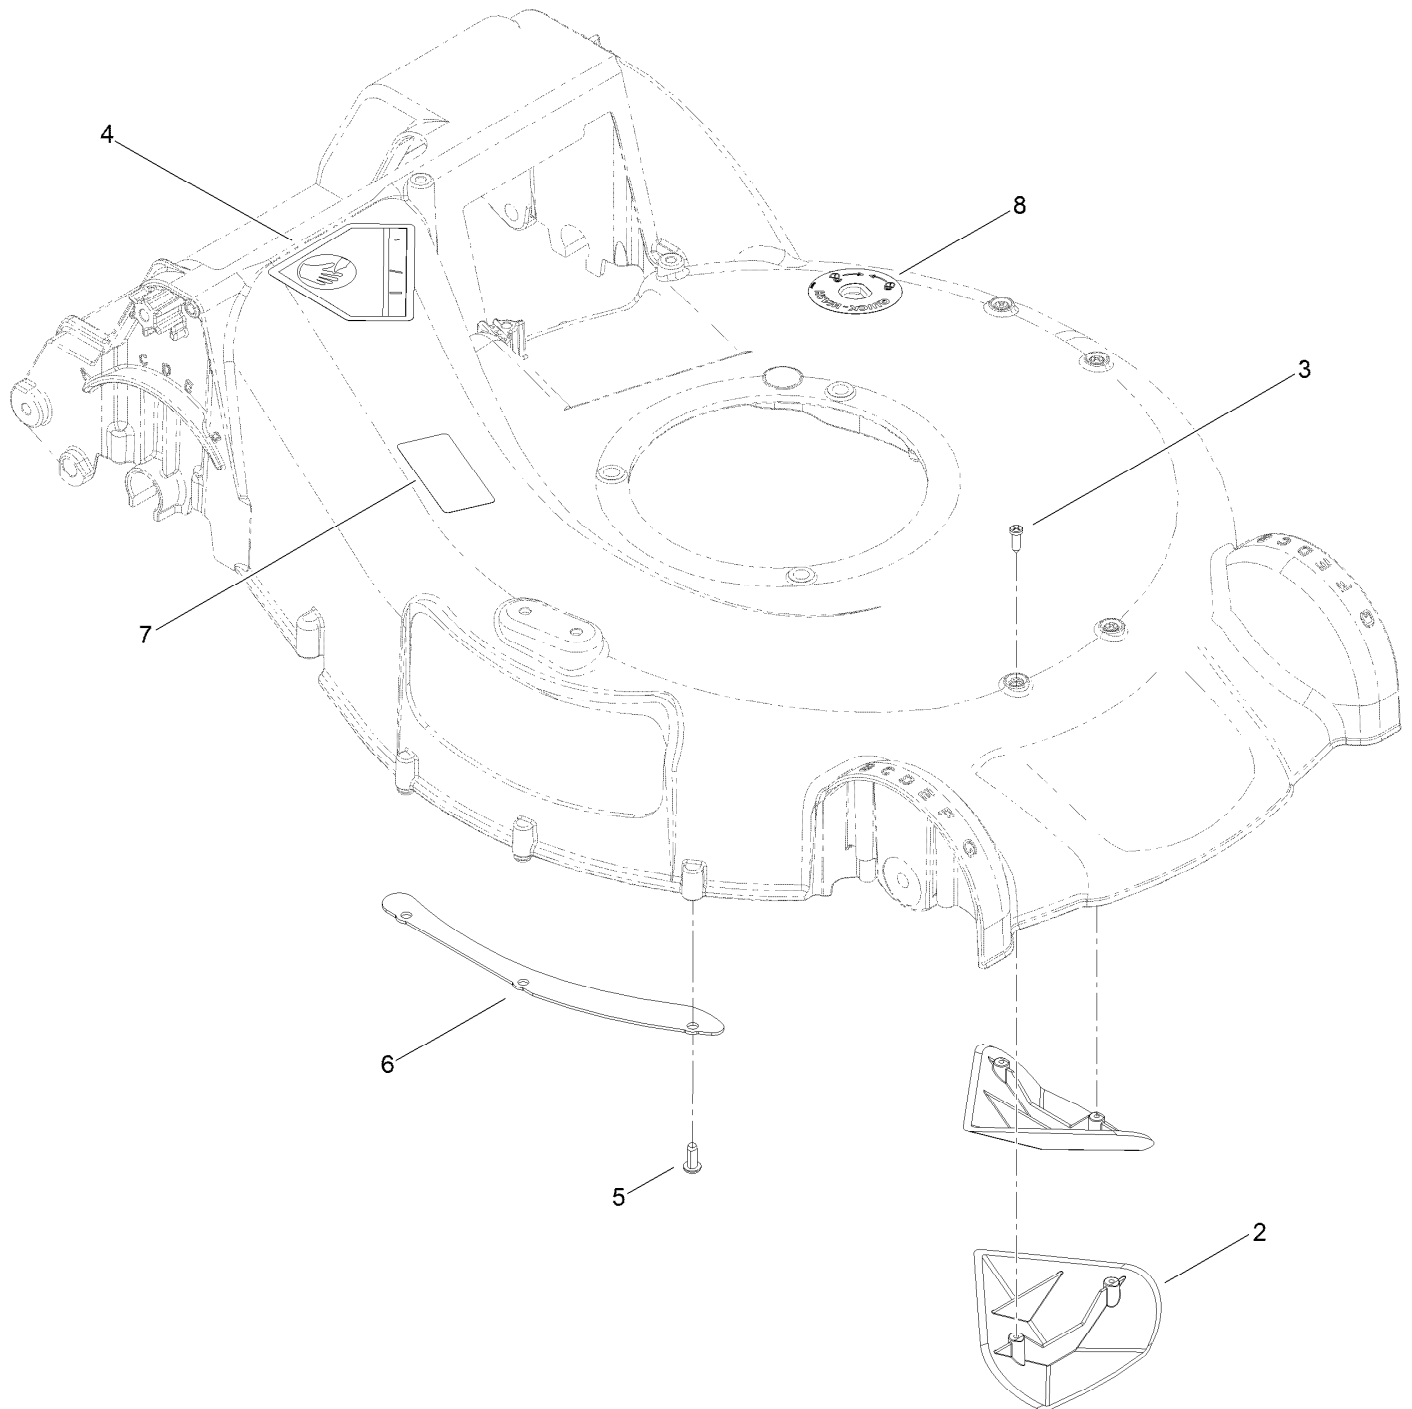


## Housing Assembly No. 115-2854 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 2           | 108-3798           | 2           | Kicker-Housing     |
| 3           | 32144-111          | 4           | Screw-PPH          |
| 4           | 94-8072            | 1           | Decal-Danger       |
| 5           | 63-8590            | 3           | Screw              |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    |
|-------------|--------------------|-------------|-----------------------|
| 6           | 105-1316-03        | 1           | Sheet-Lip             |
| 7           | 125-5092           | 1           | Decal-Placement, Foot |
| 8           | 112-8867           | 1           | Decal-Port, Washout   |

 
# Rear Door and Mulch Plug Assembly

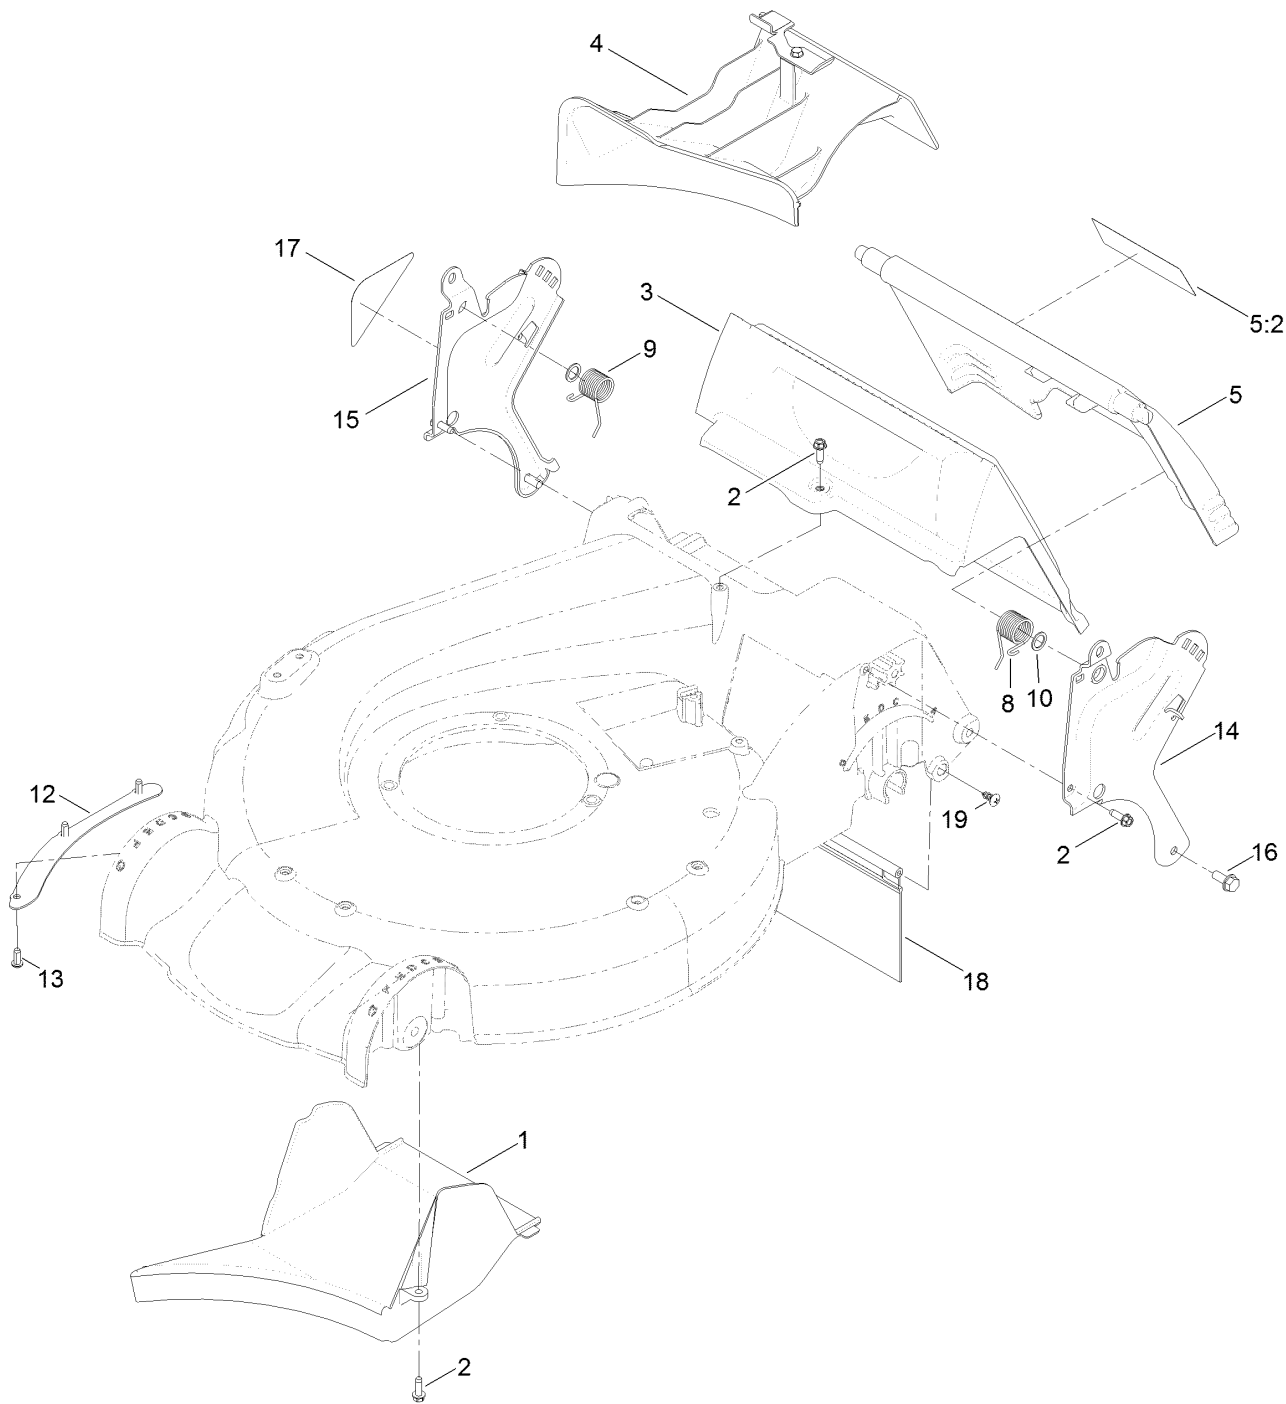

## Rear Door and Mulch Plug Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|--------------------|
| 1           | 107-7495           | 1           | Tunnel-Discharge   | 12          | 105-1316-03        | 1           | Sheet-Lip          |
| 2           | 49-2040            | 5           | Screw-HWHTF        | 13          | 63-8590            | 3           | Screw              |
| 3           | 114-2668           | 1           | Chute              | 14          | 114-2671-03        | 1           | Bracket-Handle, LH |
| 4           | 115-8413           | 1           | Mulch Plug ASM     | 15          | 114-2672-03        | 1           | Bracket-Handle, RH |
| 5           | 121-5776           | 1           | Rear Door ASM      | 16          | 32144-11           | 2           | Screw-HWHTF        |
| 5:2         | 131-4514           | 1           | Decal-Warning      | 17          | 115-2884           | 1           | Decal-Instruction  |
| 8           | 115-2859           | 1           | Spring-Torsion     | 18          | 120-7011           | 1           | Shield-Trailing    |
| 9           | 114-7924           | 1           | Spring-Torsion     | 19          | 117-1092           | 2           | Screw-PTH          |
| 10          | 94-8196            | 2           | Washer-Nylon       |             |                    |             |                    |

 
# Bag Assembly

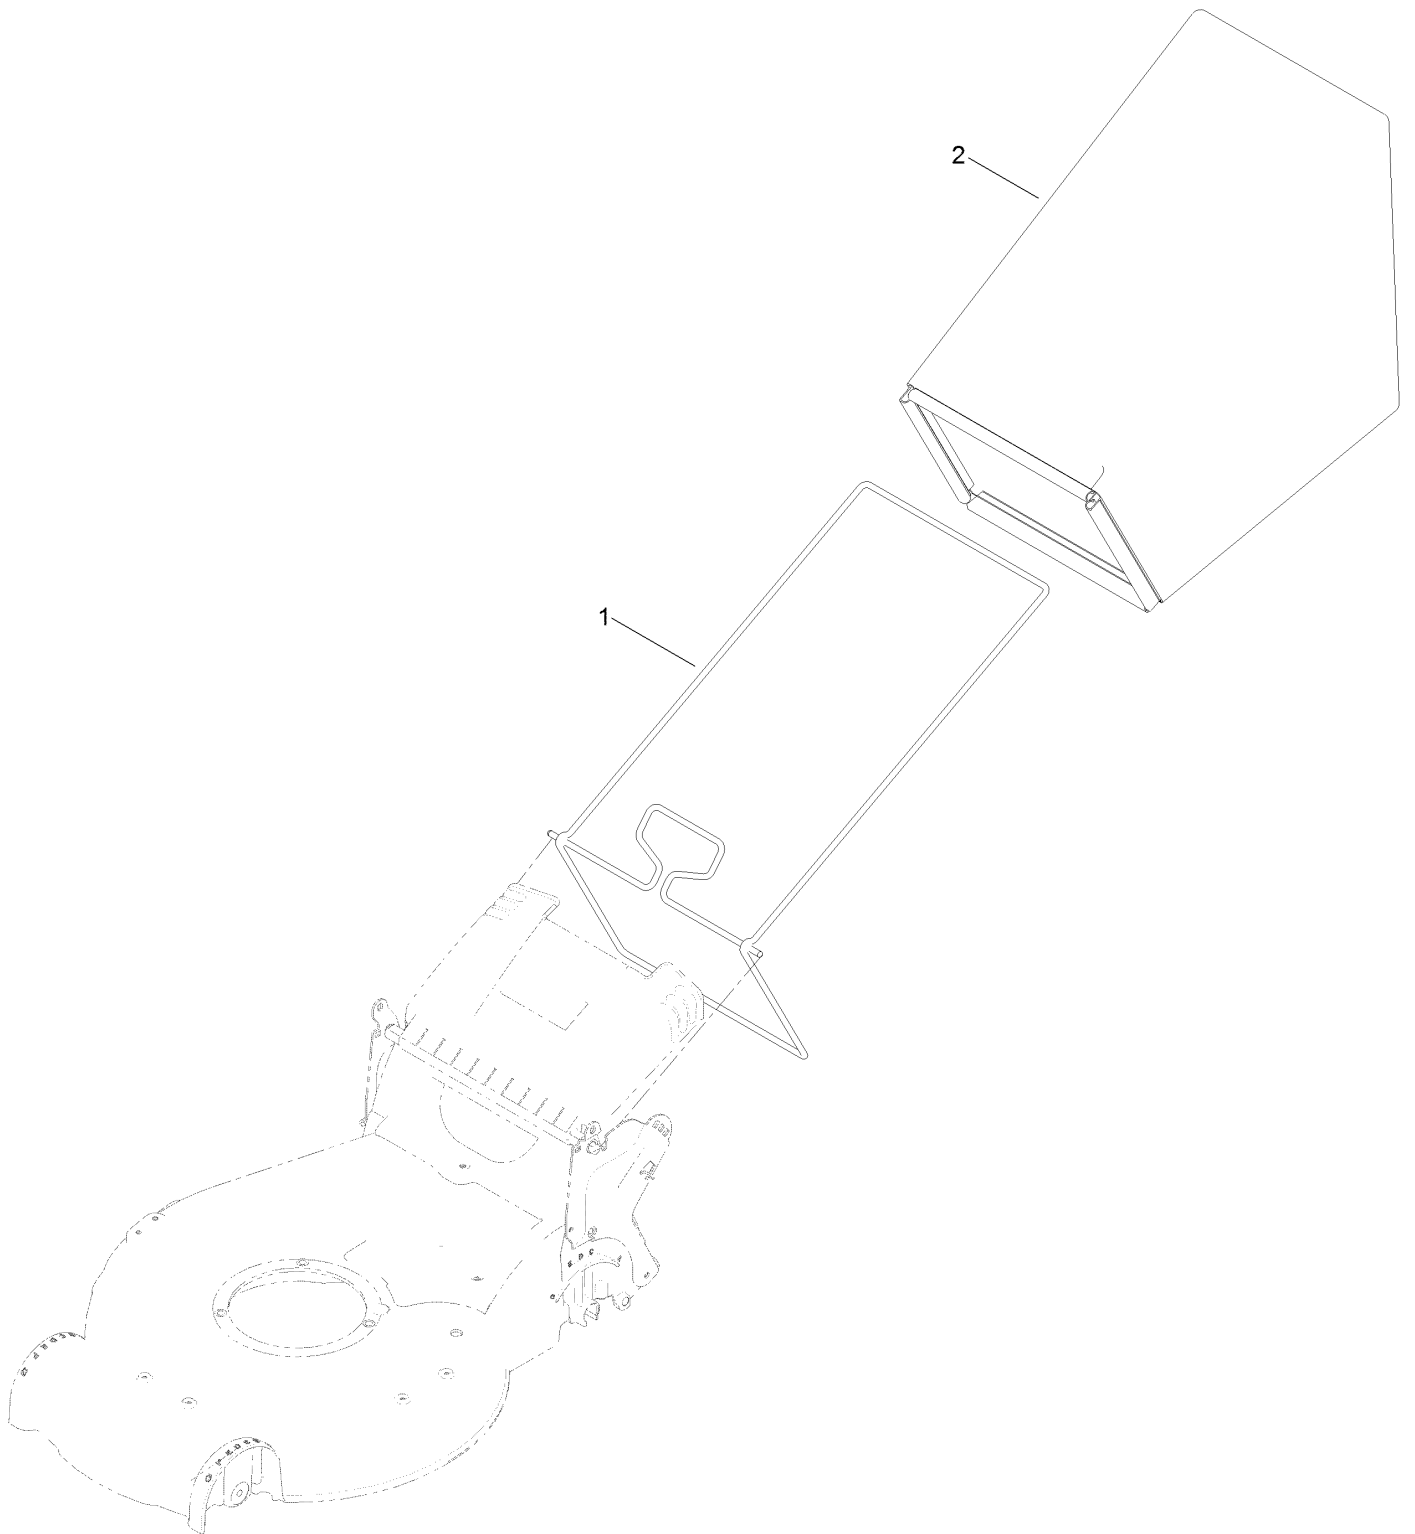

## Bag Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 132-4529-03        | 1           | Bag Frame ASM      |
| 2           | 114-2664           | 1           | Grass Bag ASM      |
 
# Engine and Blade Assembly

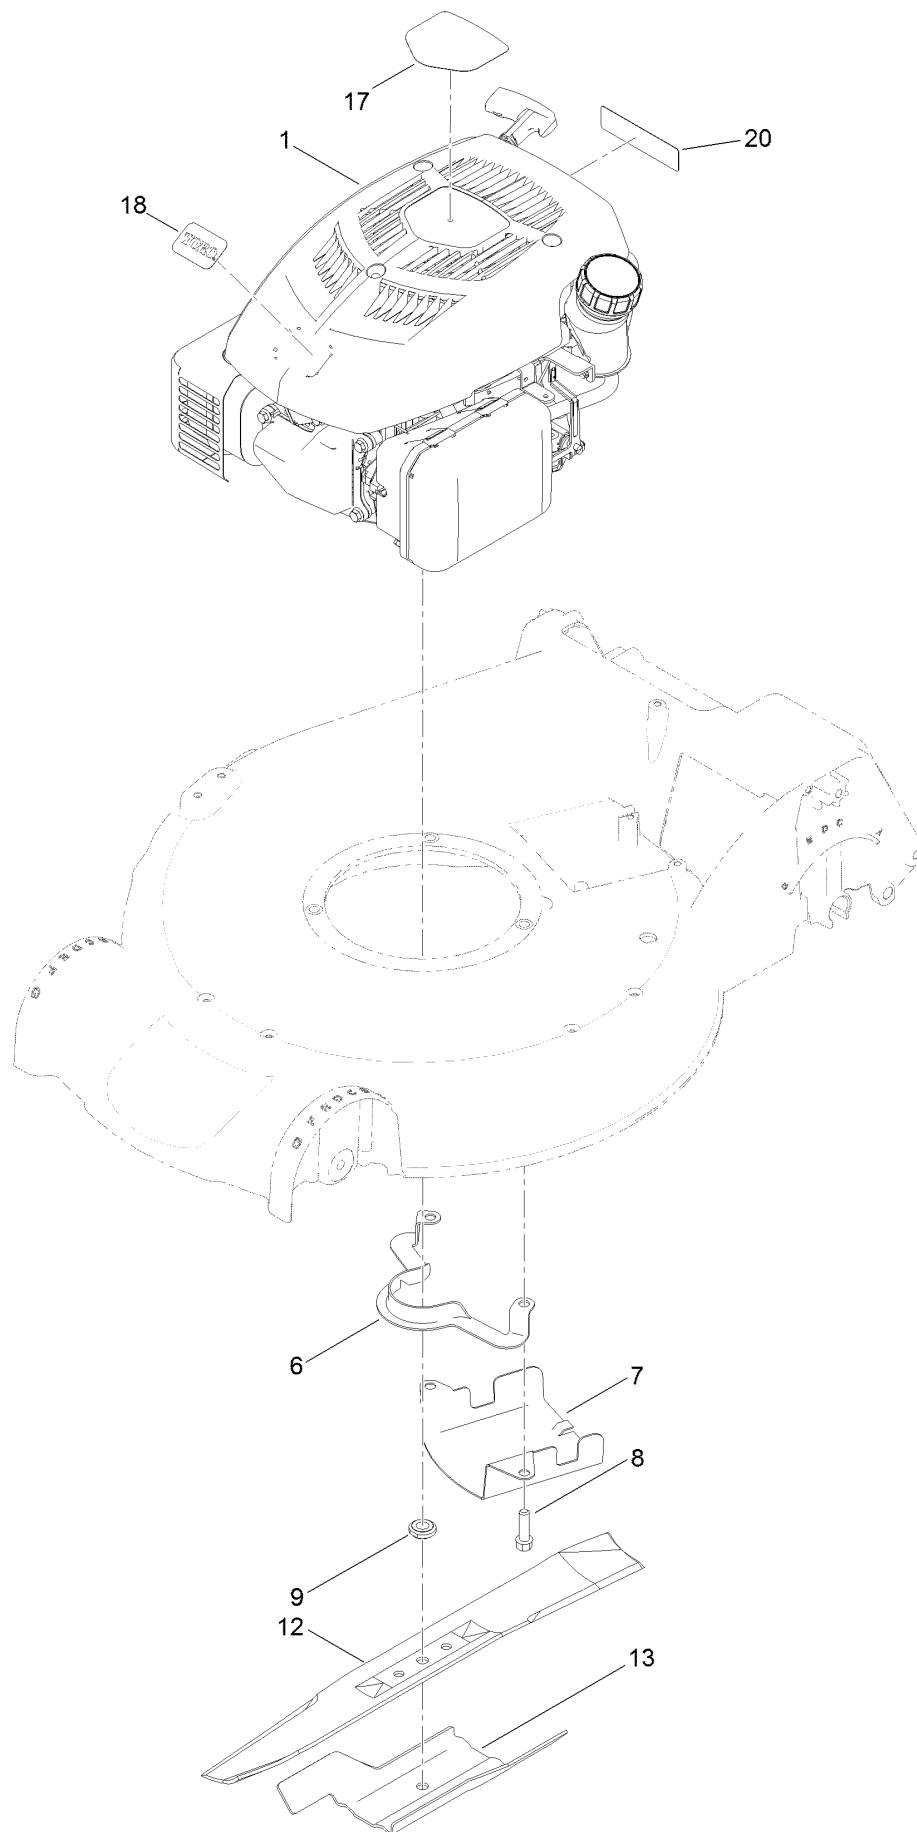


## Engine and Blade Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 133-9860           | 1           | Engine-1P65F       |
| 6           | 108-8110-03        | 1           | Guide-Belt         |
| 7           | 107-7489-03        | 1           | Shield-Grass       |
| 8           | 95-1727            | 3           | Screw-Taptite      |
| 9           | 106-3999           | 1           | Spacer-Driver      |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    |
|-------------|--------------------|-------------|-----------------------|
| 12          | 108-3762-03        | 1           | Blade-Recycling       |
| 13          | 105-6848-03        | 1           | Accelerator-Blade     |
| 17          | 136-9054           | 1           | Decal-Shroud          |
| 18          | 136-5863           | 1           | Decal                 |
| 20          | 117-2718           | 1           | Decal-Arrester, Spark |
 
# Fuel System Assembly

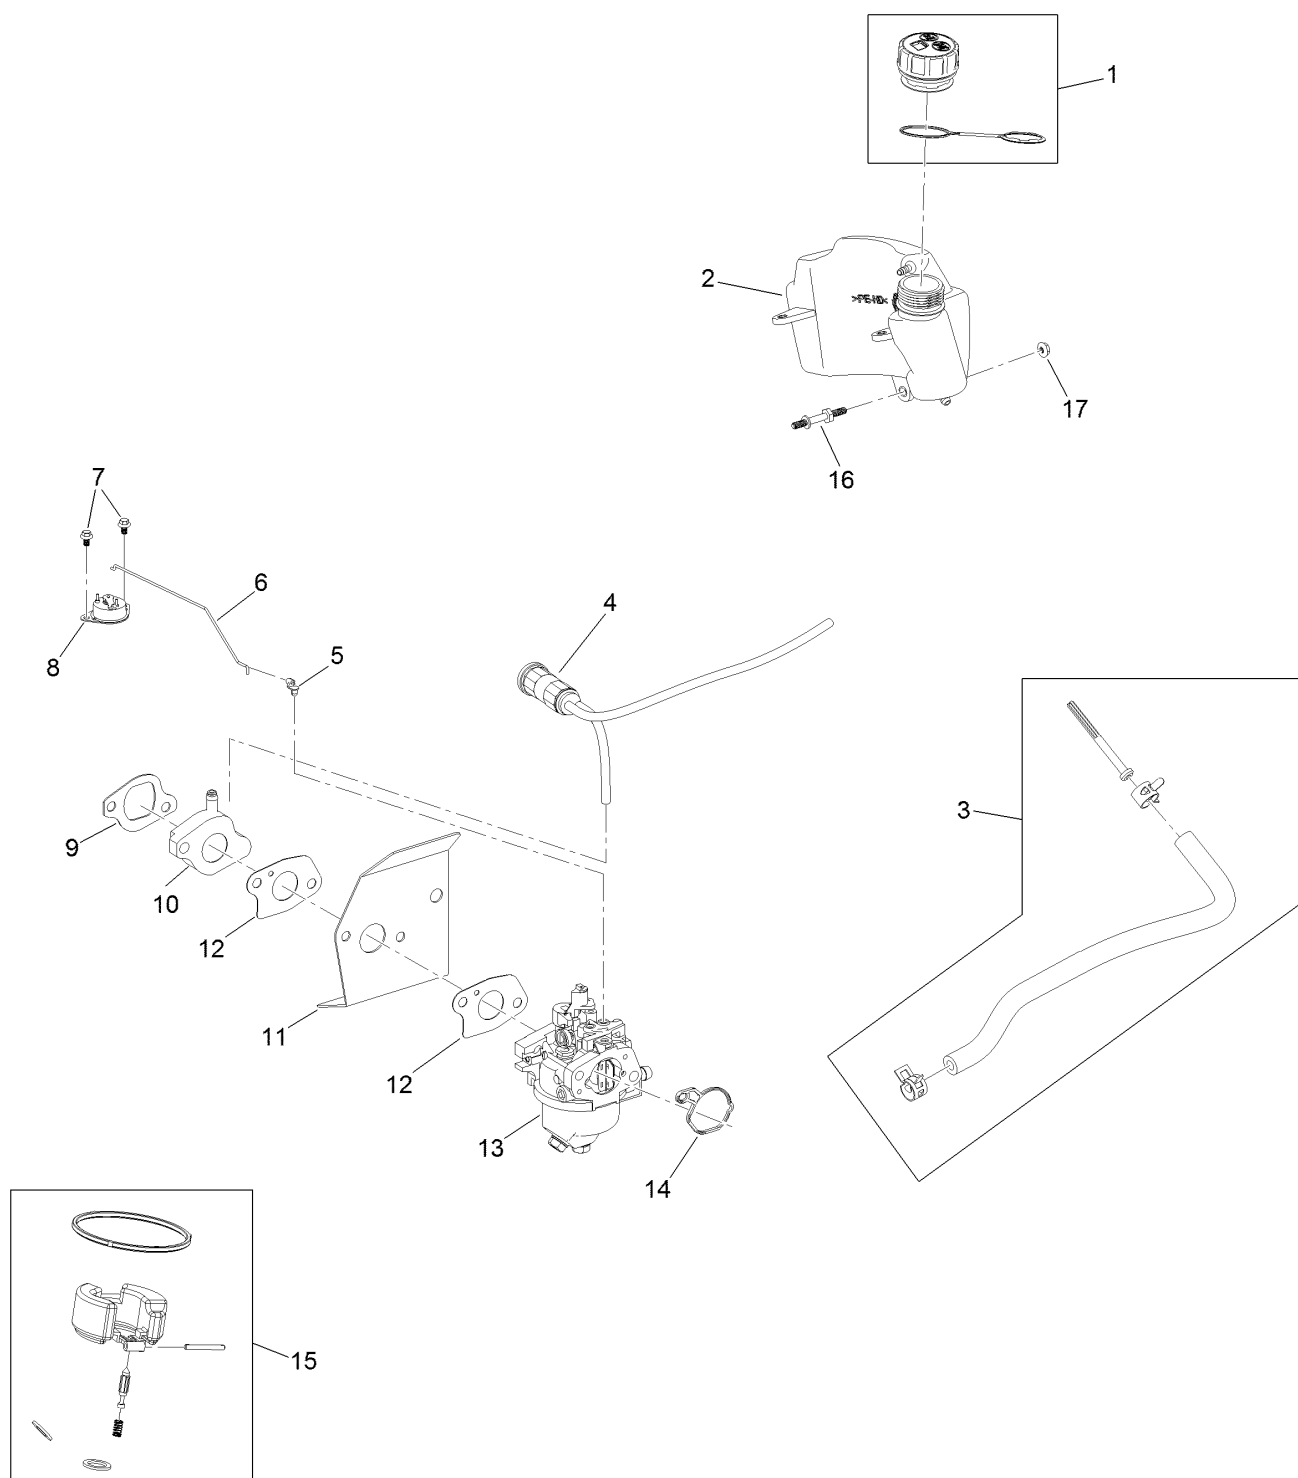


## Fuel System Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>        |
|-------------|--------------------|-------------|------------------------|-------------|--------------------|-------------|---------------------------|
| 1           | 133-9887           | 1           | Cap-Fuel, Sealed       | 10          | 133-9902           | 1           | Spacer-Carburetor         |
| 2           | 133-9888           | 1           | Tank-Fuel              | 11          | 133-9901           | 1           | Insulator-Carburetor      |
| 3           | 121-4167           | 1           | Fuel Line Kit          | 12          | 121-4184           | 2           | Gasket-Carburetor         |
| 4           | 133-9874           | 1           | Canister-Carbon, 19 Cc | 13          | 133-9900           | 1           | Carburetor                |
| 5           | 120-4451           | 1           | Lock-Throttle          | 14          | 133-9899           | 1           | Gasket-Carburetor         |
| 6           | 133-9909           | 1           | Linkage-Choke, Thermal | 15          | 127-9395           | 1           | Internal Carb Service Kit |
| 7           | 133-9908           | 2           | Screw-HWH, Thd Form    | 16          | 121-0016           | 1           | Bolt-Stud                 |
| 8           | 133-9907           | 1           | Control-Thermal        | 17          | 120-4236           | 1           | Nut-Flange                |
| 9           | 121-4183           | 1           | Gasket-Intake          | 99          | 133-9943           | 1           | High Altitude Kit ●       |

● Not illustrated

 
## Air Intake and Filtration Assembly

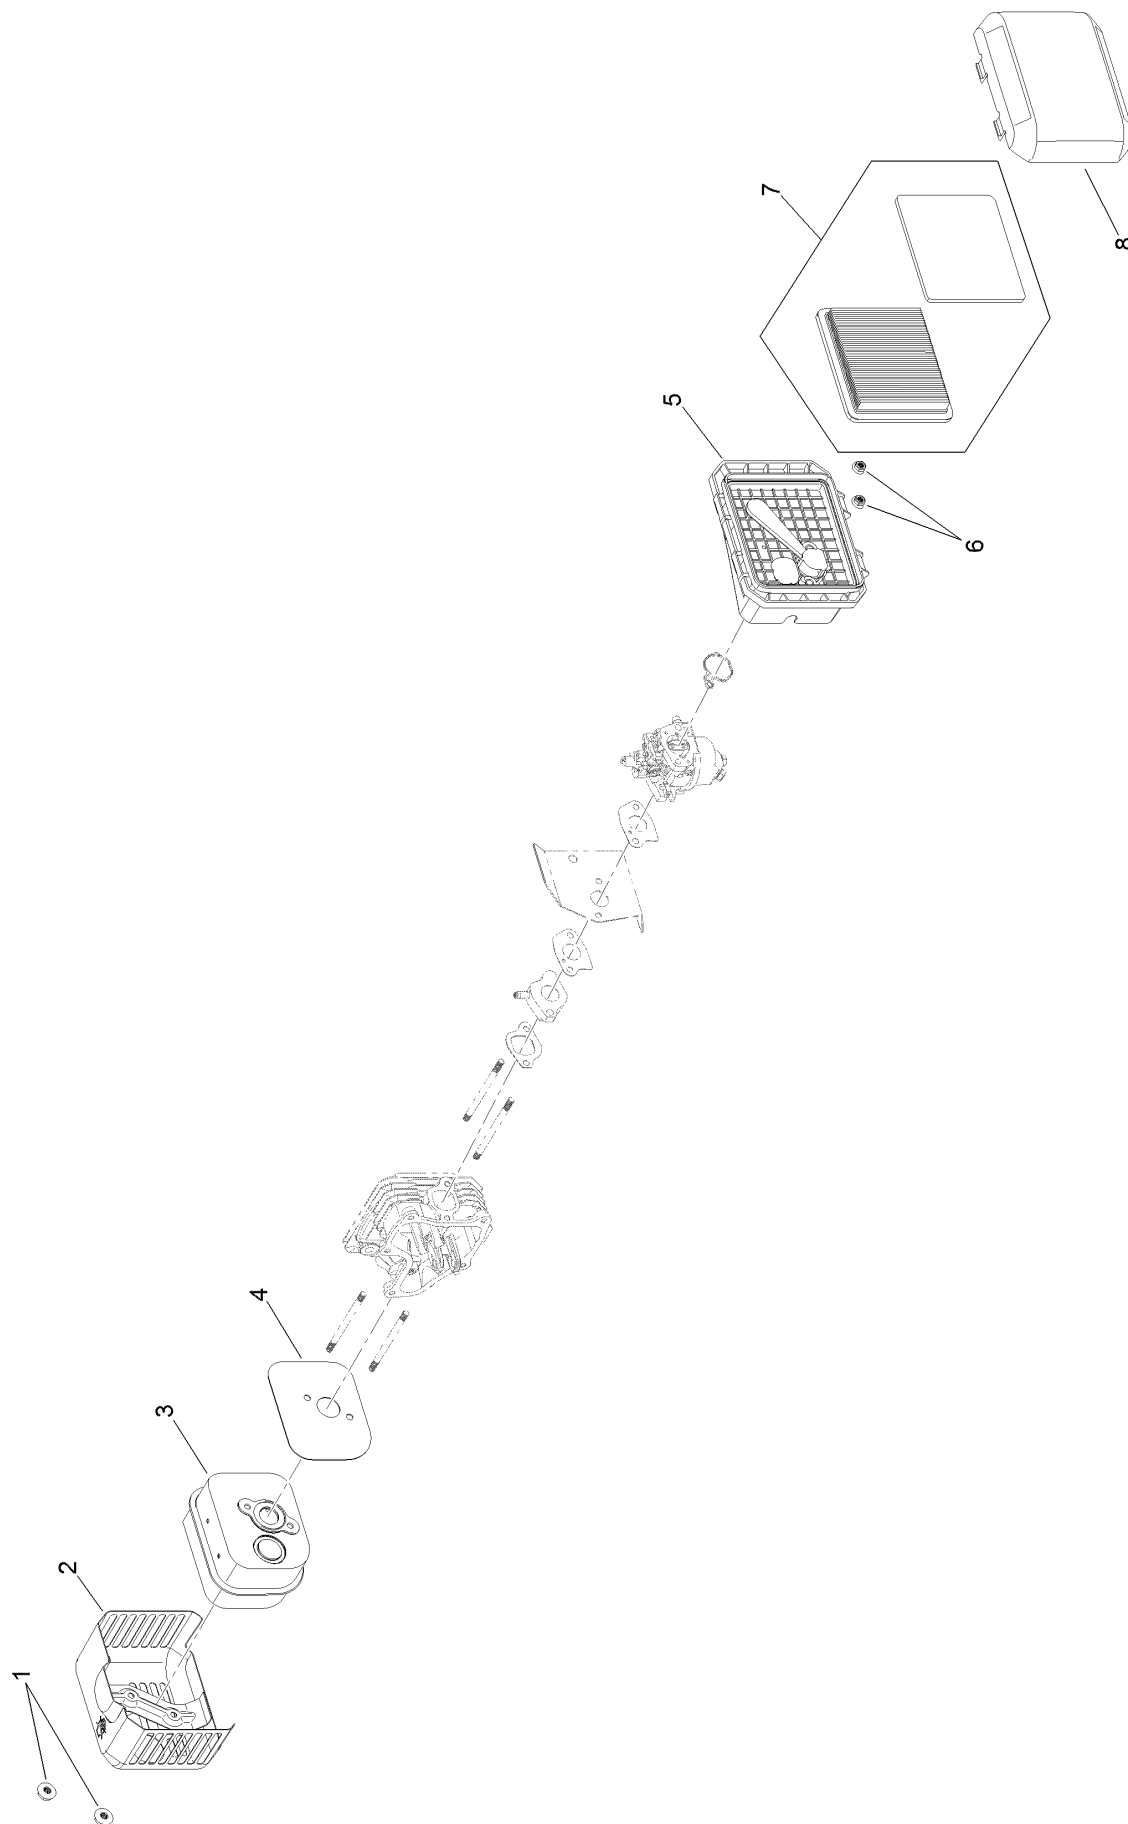

## Air Intake and Filtration Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>           |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|------------------------------|
| 1           | 121-0010           | 2           | Nut-Flange         | 5           | 133-9898           | 1           | Base-Cleaner, Air            |
| 2           | 133-9906           | 1           | Shield-Muffler     | 6           | 120-4236           | 2           | Nut-Flange                   |
| 3           | 121-0166           | 1           | Muffler ASM        | 7           | 119-1909           | 1           | Air Filter And Prefilter Kit |
| 4           | 121-0034           | 1           | Gasket-Exhaust     | 8           | 121-0364           | 1           | Cover-Cleaner, Air           |
 
# Ignition and Electrical Assembly

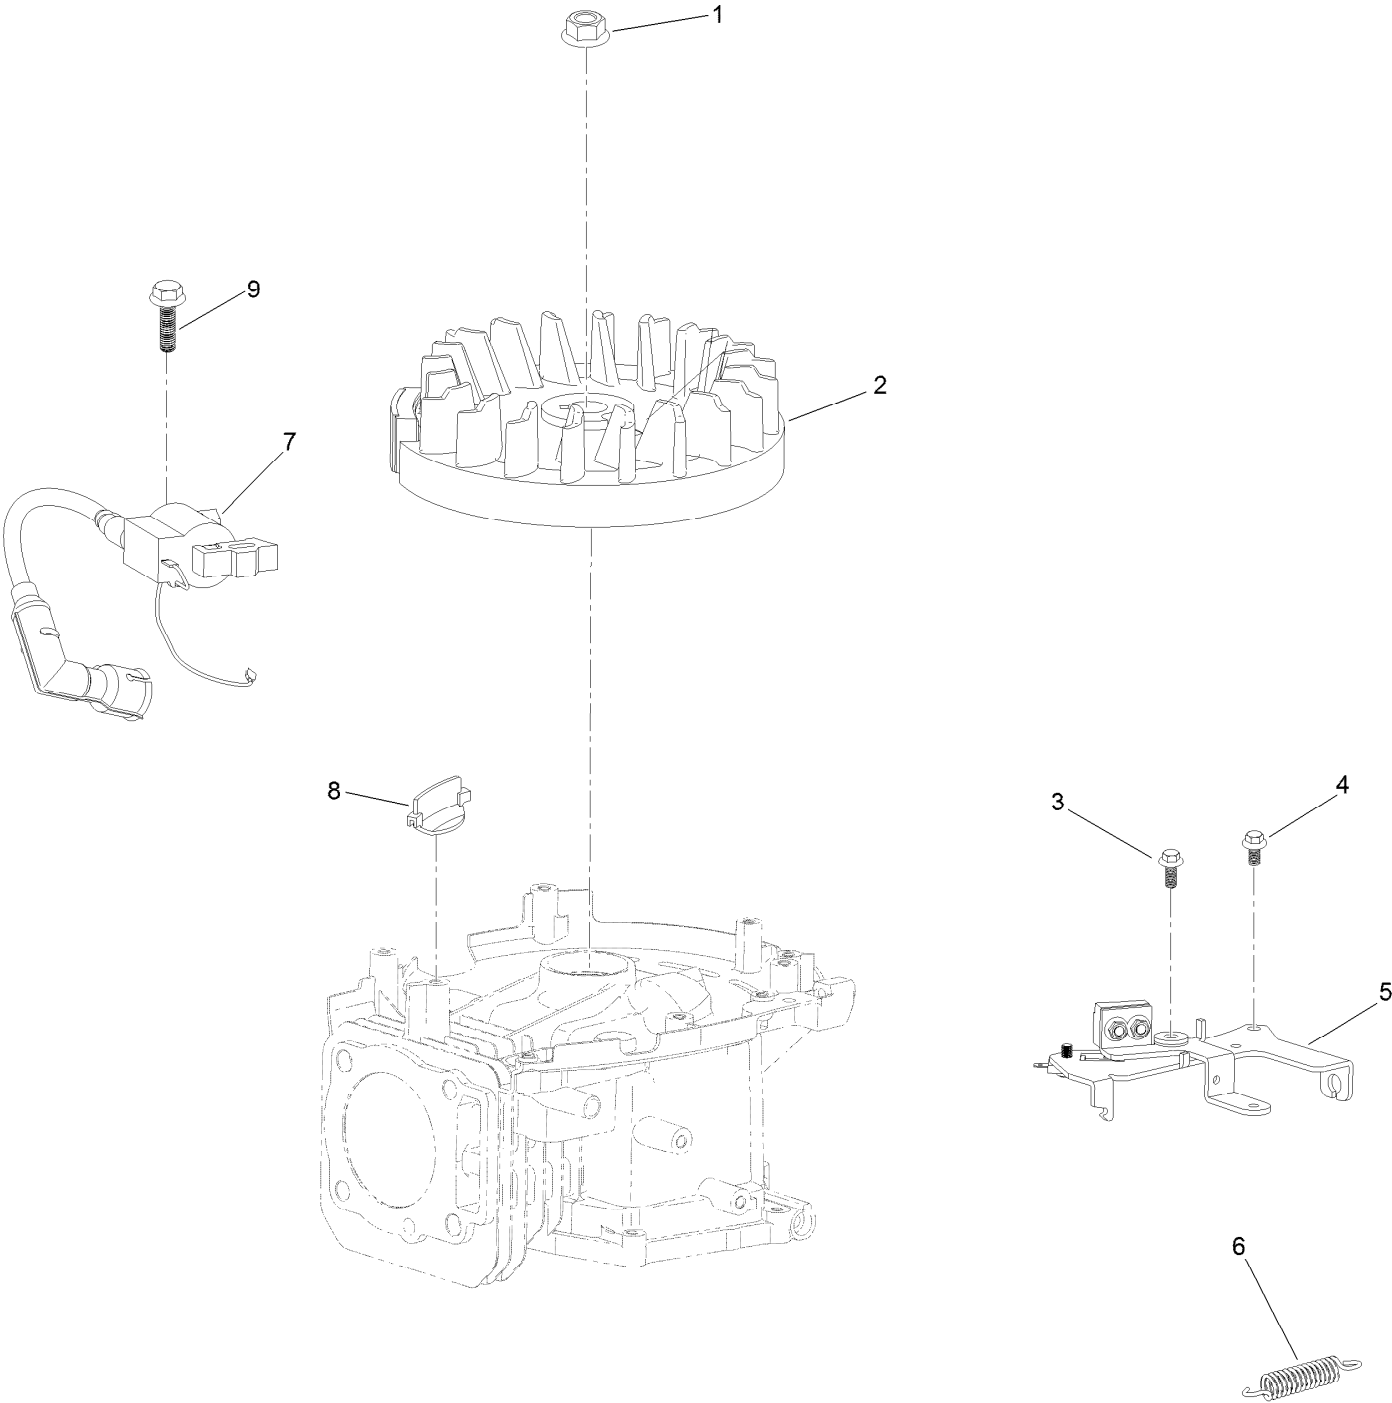


## Ignition and Electrical Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 121-0047           | 1           | Nut-Flange         |
| 2           | 133-9876           | 1           | Flywheel           |
| 3           | 121-0007           | 1           | Bolt-Flange        |
| 4           | 120-4232           | 1           | Screw-HHF          |
| 5           | 133-9889           | 1           | Brake ASM          |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 6           | 133-9890           | 1           | Spring-Brake       |
| 7           | 121-4187           | 1           | Ignition Coil ASM  |
| 8           | 133-9881           | 1           | Guard-Flywheel     |
| 9           | 120-4225           | 1           | Screw-HHF          |

 
# Crankcase Assembly

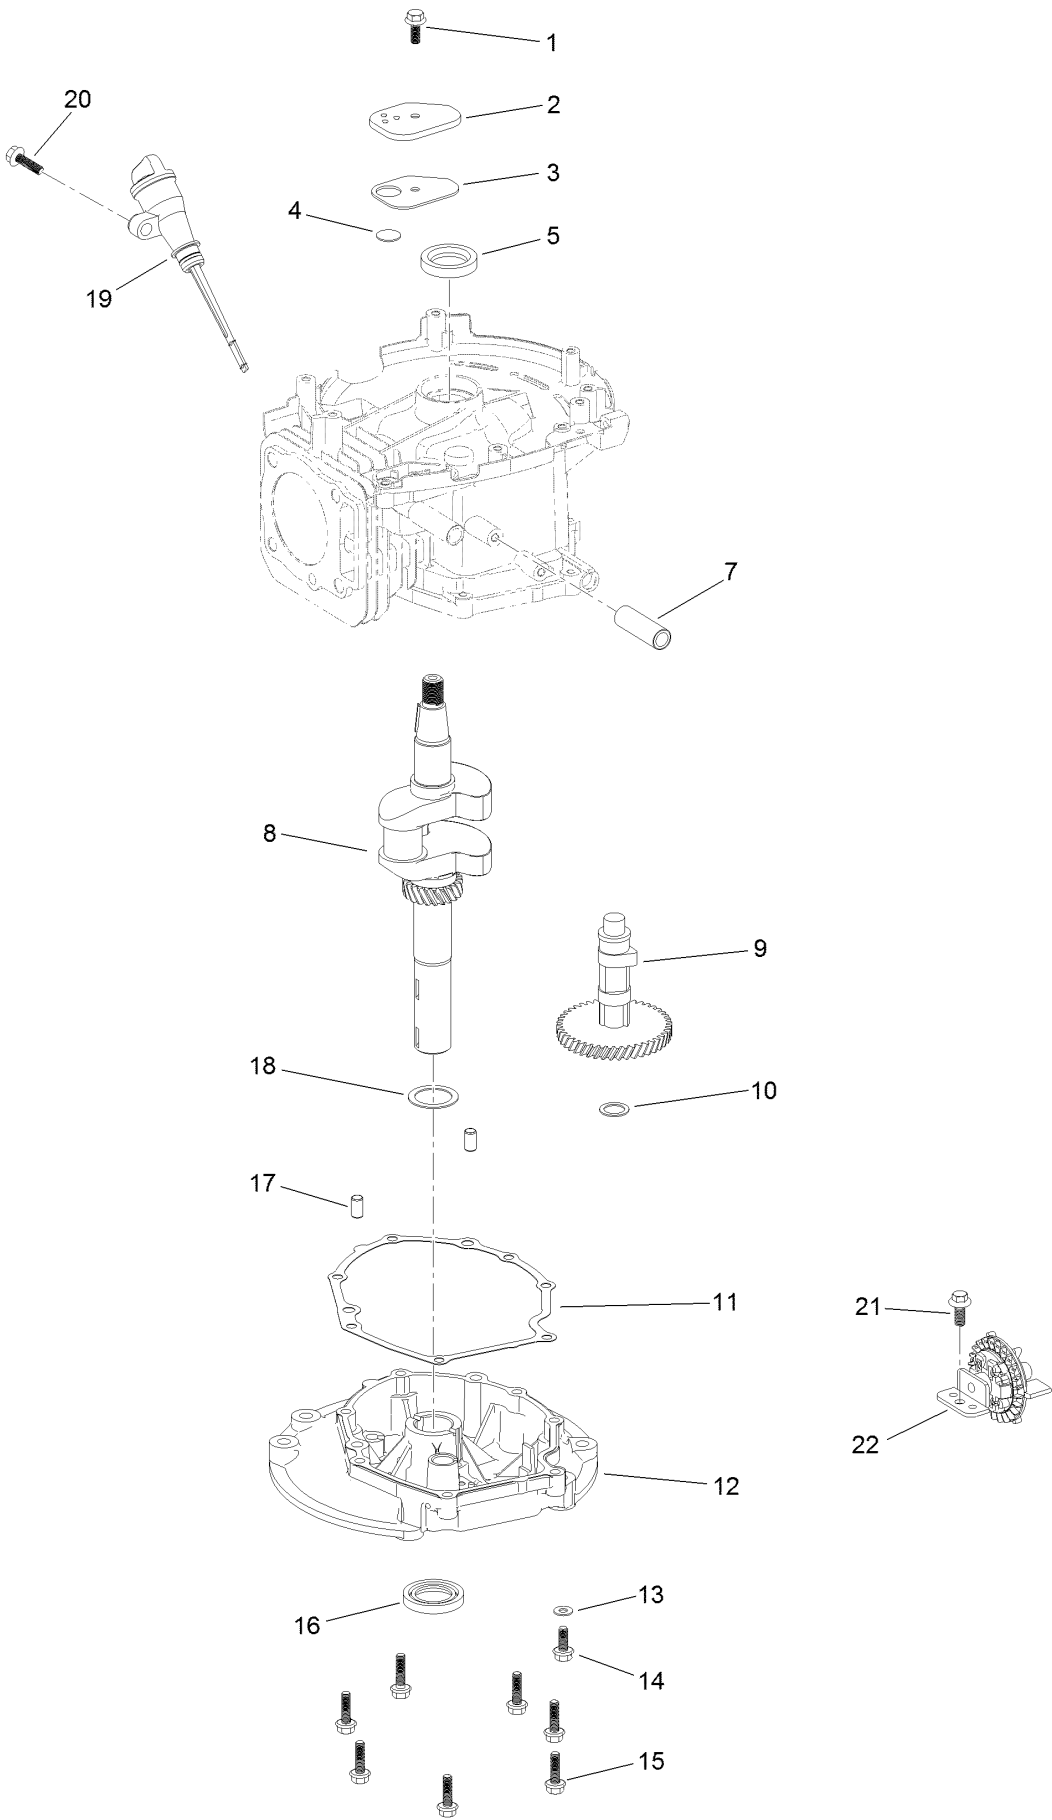

## Crankcase Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>         |
|-------------|--------------------|-------------|------------------------|-------------|--------------------|-------------|----------------------------|
| 1           | 120-4216           | 1           | Screw-HHF              | 13          | 121-0048           | 1           | Washer-Plain               |
| 2           | 133-9882           | 1           | Cover-Breather         | 14          | 121-0030           | 1           | Screw-HHF                  |
| 3           | 133-9883           | 1           | Gasket-Cover, Breather | 15          | 120-4223           | 7           | Screw-HHF                  |
| 4           | 133-9884           | 1           | Valve-Breather         | 16          | 121-0022           | 1           | Seal-Oil                   |
| 5           | 121-0019           | 1           | Seal-Oil               | 17          | 121-0054           | 2           | Pin-Dowel                  |
| 7           | 133-9911           | 1           | Tube-Breather          | 18          | 121-0049           | 1           | Washer-Flat                |
| 8           | 133-9894           | 1           | Crankshaft ASM         | 19          | 133-9886           | 1           | Dipstick And Fill Tube Kit |
| 9           | 121-4174           | 1           | Camshaft ASM           | 20          | 121-0007           | 1           | Bolt-Flange                |
| 10          | 121-0051           | 1           | Washer-Flat            | 21          | 121-0369           | 1           | Screw-HWH, Thd Form        |
| 11          | 133-9895           | 1           | Gasket-Cover, Case     | 22          | 133-9896           | 1           | Governor Gear ASM          |
| 12          | 133-9897           | 1           | Cover-Crankcase        |             |                    |             |                            |

 
# Governor Control Assembly

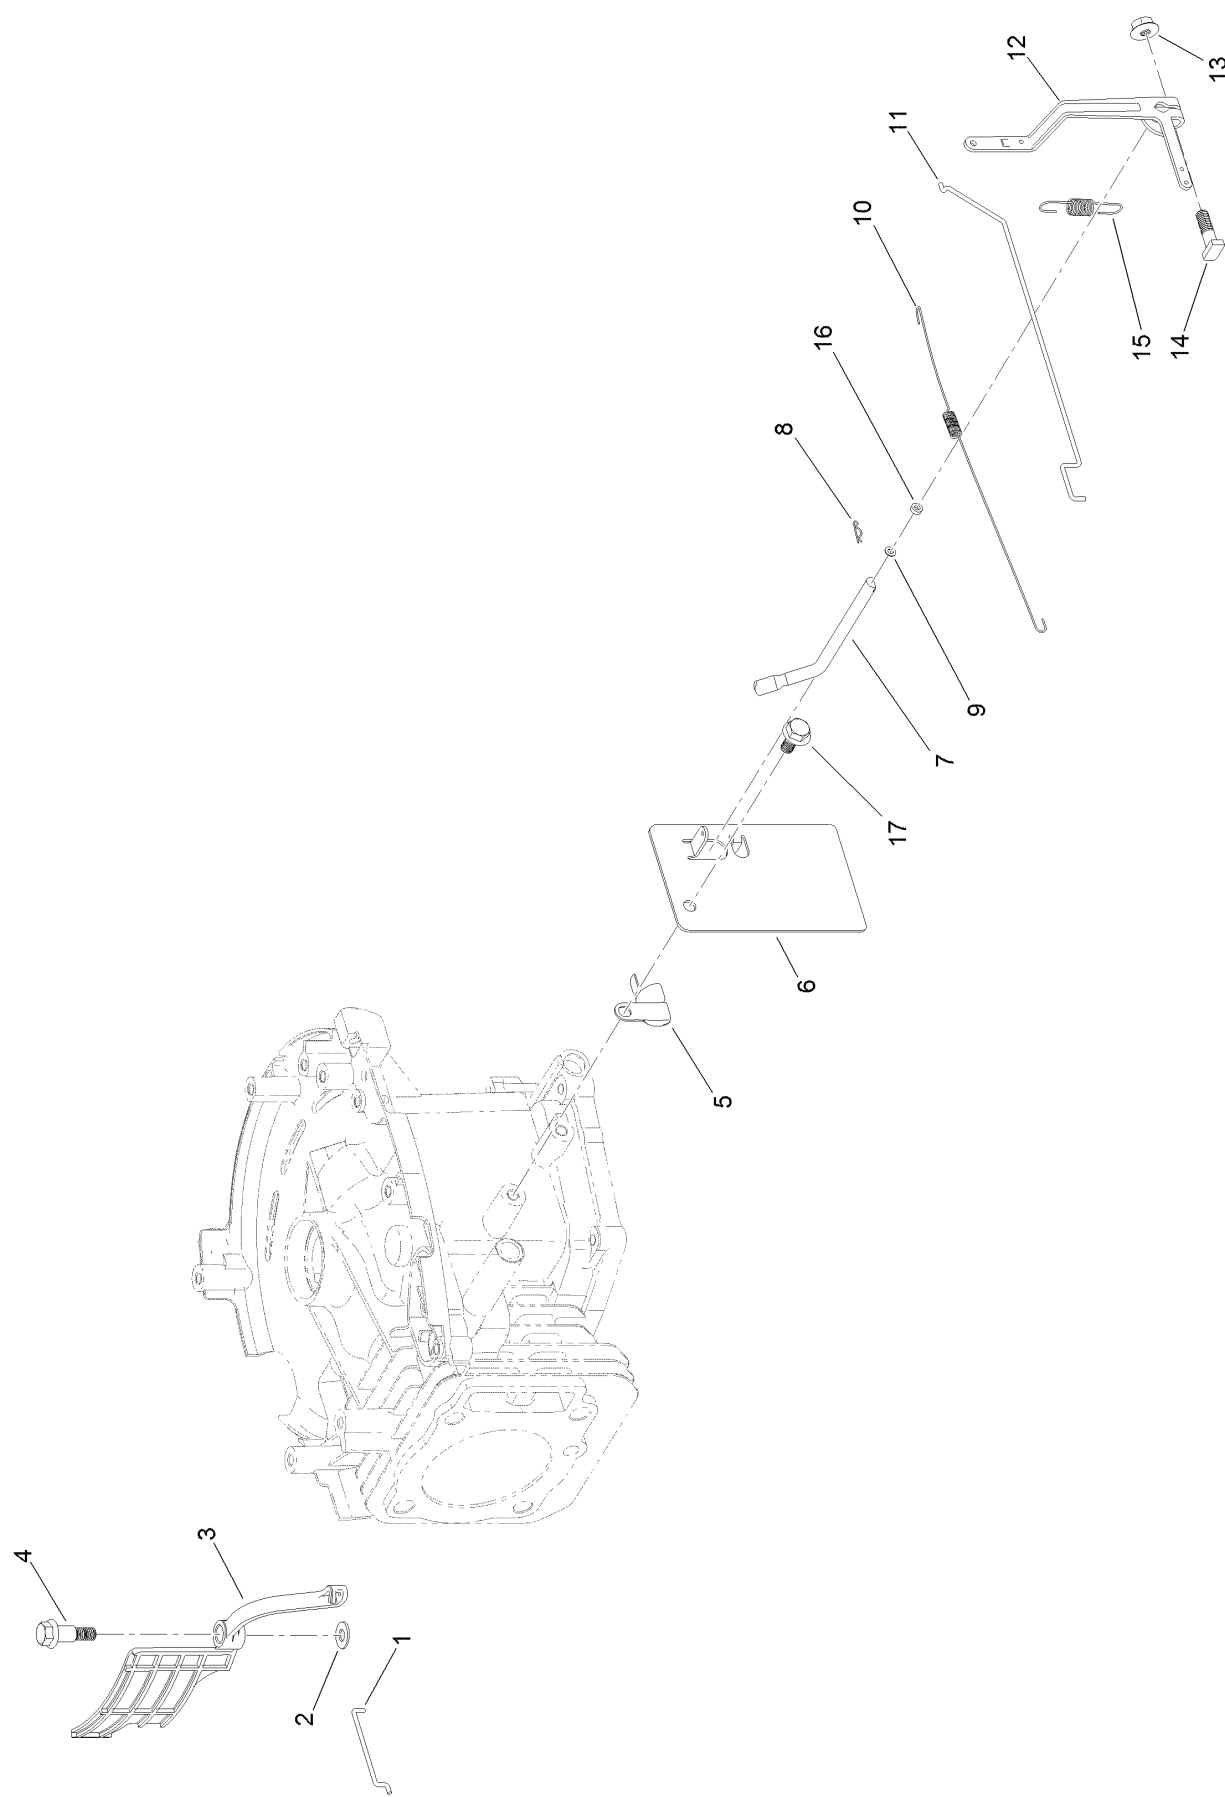

## Governor Control Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      |
|-------------|--------------------|-------------|-------------------------|-------------|--------------------|-------------|-------------------------|
| 1           | 133-9880           | 1           | Linkage-Choke           | 10          | 121-0023           | 1           | Spring-Return, Throttle |
| 2           | 121-0498           | 1           | Washer-Plain            | 11          | 133-9892           | 1           | Rod-Governor            |
| 3           | 133-9879           | 1           | Air Vane-Autochoke      | 12          | 121-0028           | 1           | Arm-Governor            |
| 4           | 127-9196           | 1           | Screw-Shoulder, HWH     | 13          | 120-4236           | 1           | Nut-Flange              |
| 5           | 121-0017           | 1           | Clip-Harness, Wire      | 14          | 120-4238           | 1           | Bolt-Arm, Governor      |
| 6           | 133-9891           | 1           | Plate-Control, Throttle | 15          | 133-9893           | 1           | Spring-Governor         |
| 7           | 120-4458           | 1           | Arm-Governor            | 16          | 121-0021           | 1           | Seal-Oil                |
| 8           | 120-4256           | 1           | Pin-Hair                | 17          | 120-4216           | 1           | Screw-HHF               |
| 9           | 121-0050           | 1           | Washer-Flat             |             |                    |             |                         |
 
# Piston and Cylinder Head Assembly

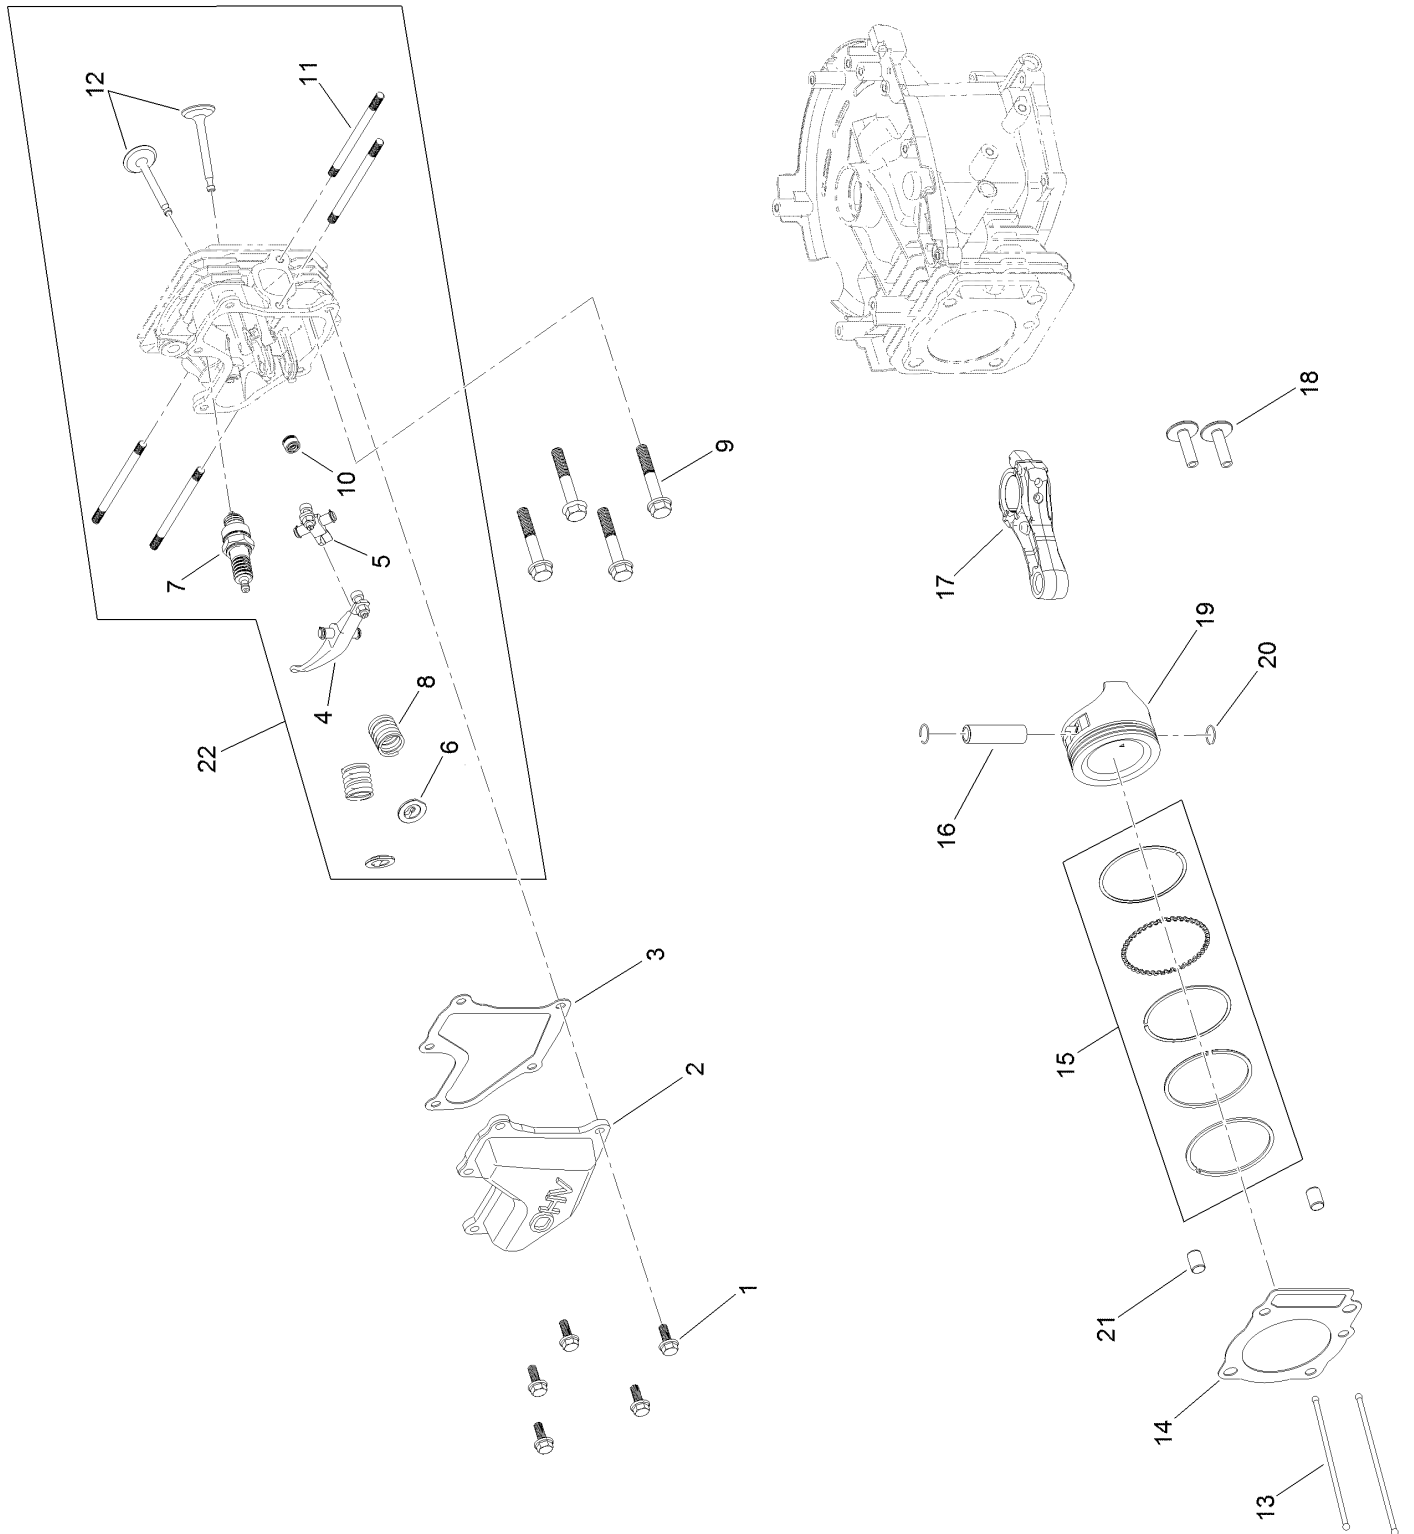


## Piston and Cylinder Head Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     |
|-------------|--------------------|-------------|------------------------|
| 1           | 120-4232           | 5           | Screw-HHF              |
| 2           | 133-9905           | 1           | Cover-Valve            |
| 3           | 133-9904           | 1           | Gasket-Cover, Valve    |
| 4           | 121-4196           | 1           | Exhaust Rocker Arm ASM |
| 5           | 121-4195           | 1           | Intake Rocker Arm ASM  |
| 6           | 120-4474           | 2           | Retainer-Valve, Spring |
| 7           | 121-0187           | 1           | Spark Plug             |
| 8           | 120-4473           | 2           | Spring-Valve           |
| 9           | 121-0043           | 4           | Bolt-Flange            |
| 10          | 121-4202           | 1           | Seal-Stem, Valve       |
| 11          | 121-0045           | 4           | Stud-Exhaust           |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 12          | 121-4192           | 1           | Valve Set          |
| 13          | 121-4193           | 2           | Rod-Push           |
| 14          | 133-9910           | 1           | Gasket-Head        |
| 15          | 121-4171           | 1           | Piston Ring Set    |
| 16          | 120-4467           | 1           | Pin-Piston         |
| 17          | 120-4469           | 1           | Connecting Rod ASM |
| 18          | 120-4477           | 2           | Tappet-Valve       |
| 19          | 121-4173           | 1           | Piston             |
| 20          | 121-0052           | 2           | Clip-Pin, Wrist    |
| 21          | 121-0053           | 2           | Pin-Dowel          |
| 22          | 133-9923           | 1           | Cylinder Head ASM  |

 
# Blower Housing Assembly

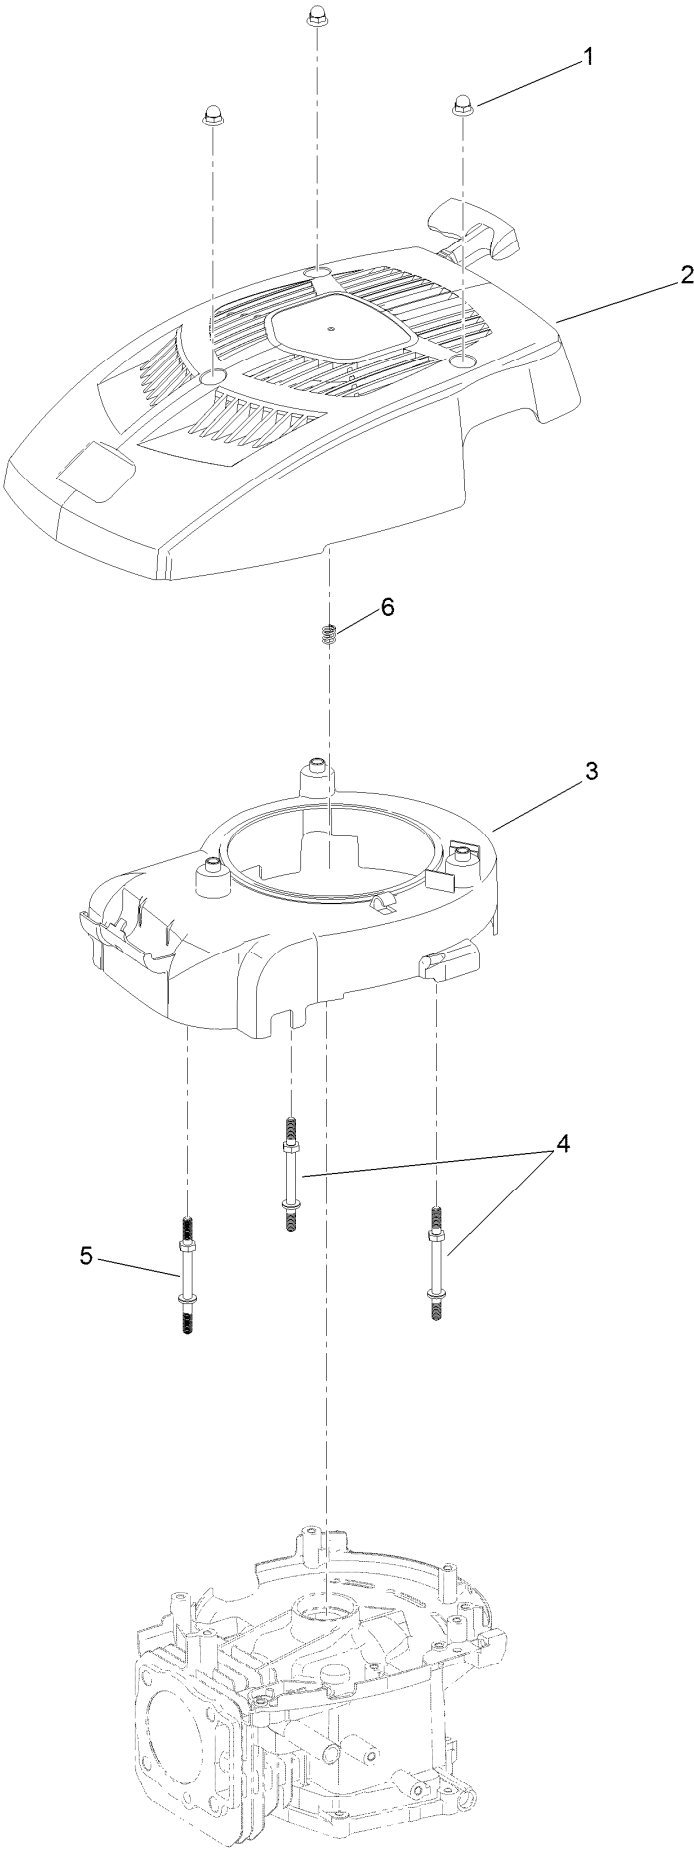

## Blower Housing Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>         |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|----------------------------|
| 1           | 127-9115           | 3           | Nut-Acorn          | 4           | 133-9877           | 2           | Stud-Shroud                |
| 2           | 133-9857           | 1           | Recoil Shroud ASM  | 5           | 133-9878           | 1           | Stud-Shroud                |
| 3           | 133-9875           | 1           | Shroud-Fan         | 6           | 136-7770           | 1           | Spring-Compression, Recoil |

 
# Front Wheel and Height-of-Cut Assembly

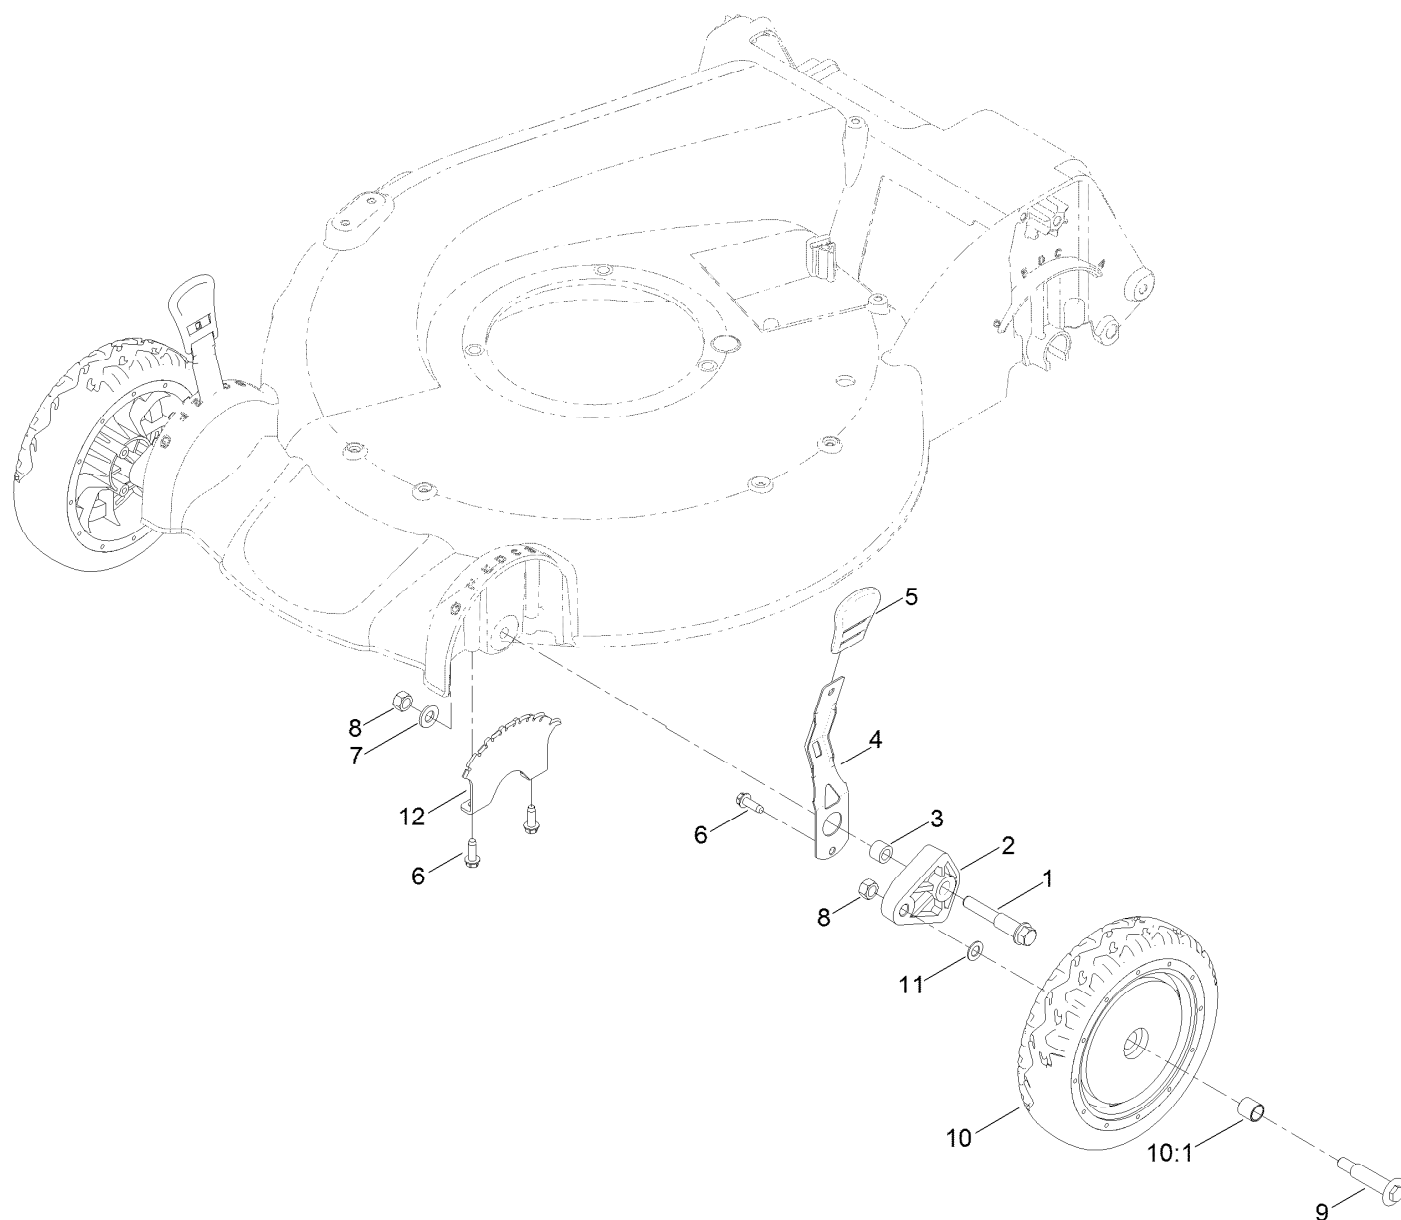

## Front Wheel and Height-of-Cut Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|--------------------|
| 1           | 114-3467           | 2           | Screw-Shoulder     | 8           | 125-5069           | 4           | Nut-Hex            |
| 2           | 107-7492           | 2           | Arm-Pivot          | 9           | 92-1057            | 2           | Bolt-Shoulder      |
| 3           | 52-2480            | 2           | Spacer-Wheel       | 10          | 107-3708           | 2           | Wheel ASM          |
| 4           | 107-7491           | 2           | Arm-Spring         | 10:1        | 27-6250            | 2           | Bushing            |
| 5           | 110-0549           | 2           | Knob-HOC           | 11          | 40-1940            | 2           | Washer             |
| 6           | 49-2040            | 6           | Screw-HWHTF        | 12          | 107-7478           | 2           | Plate-HOC          |
| 7           | 3256-24            | 2           | Washer-Flat        |             |                    |             |                    |
 
# Rear Wheel and Height-of-Cut Assembly

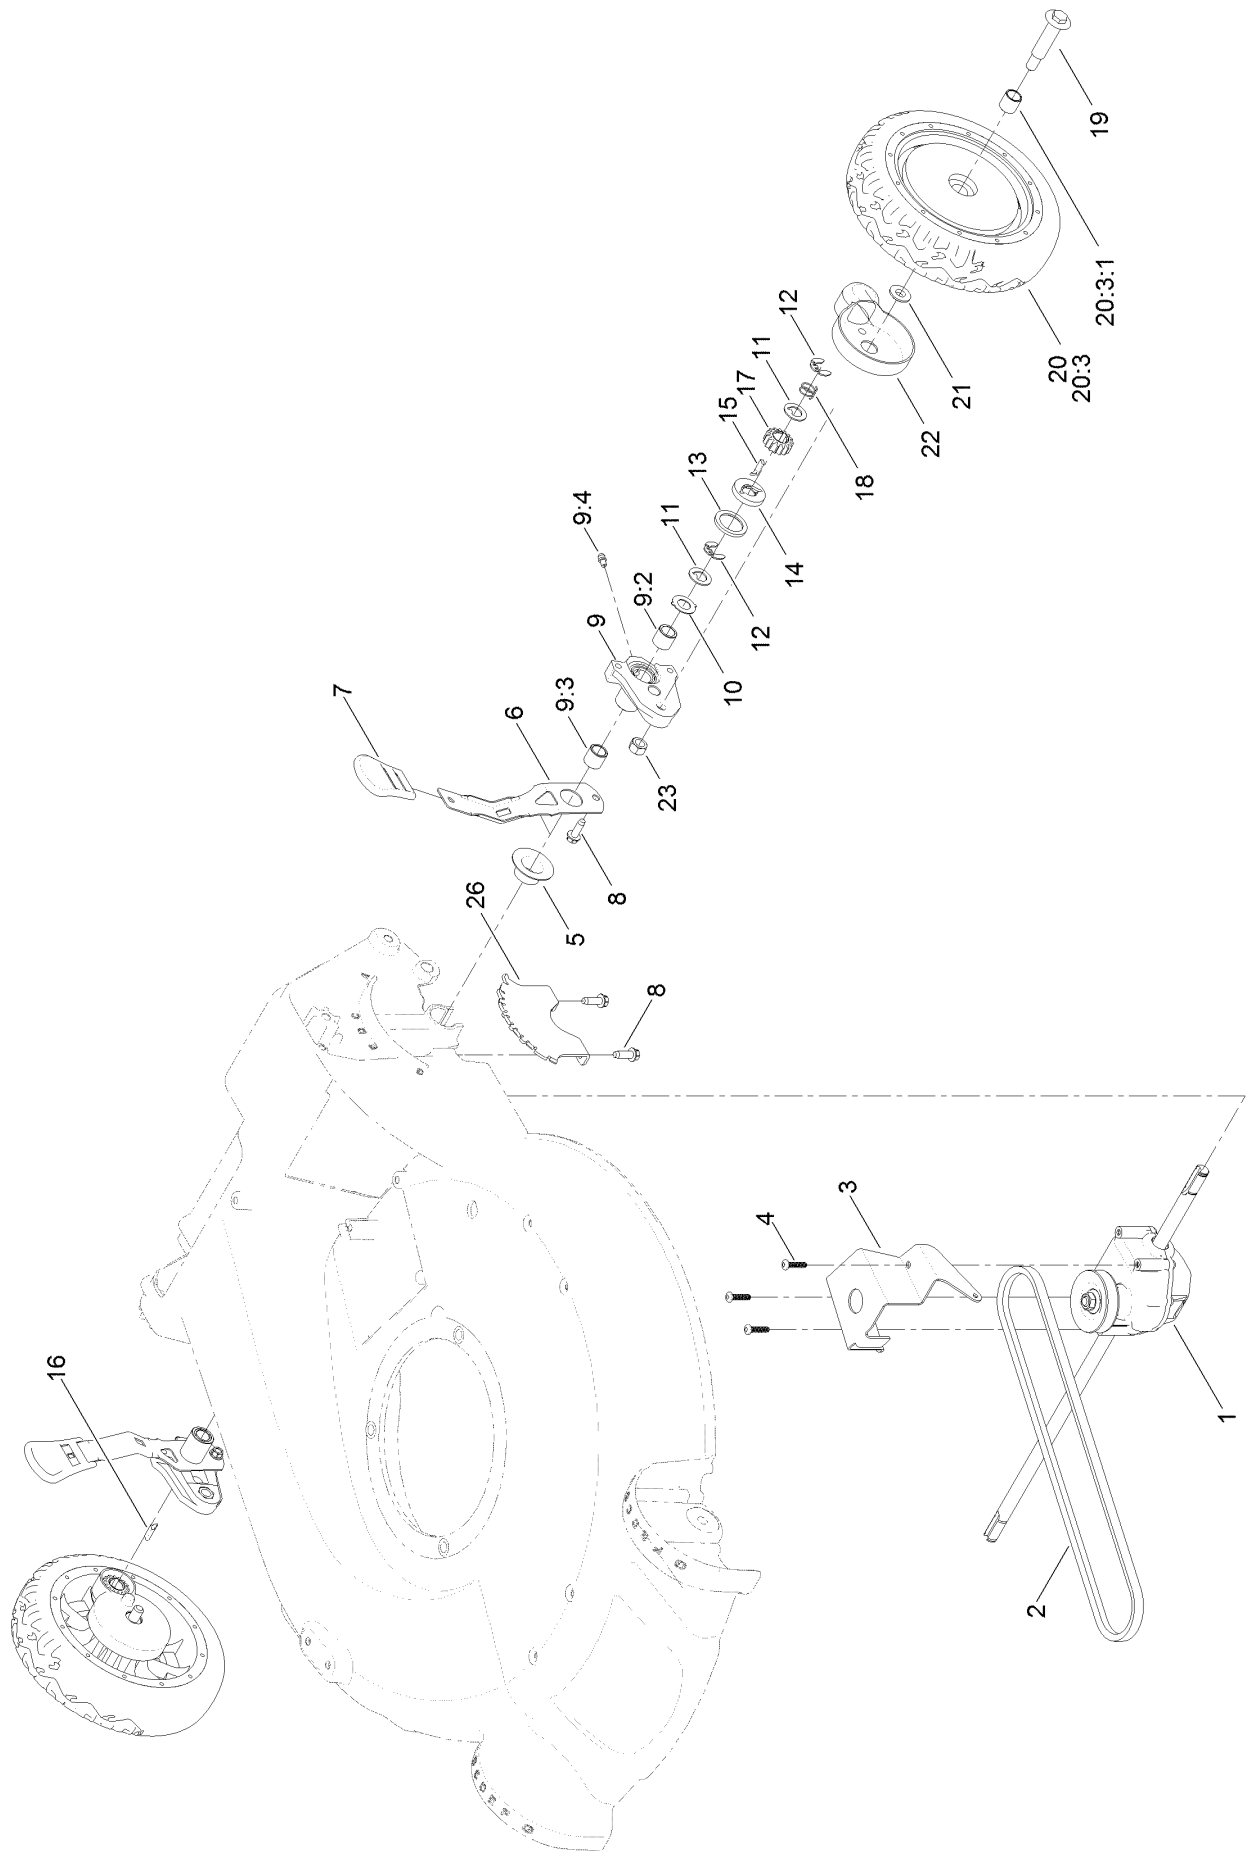


## Rear Wheel and Height-of-Cut Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  |
|-------------|--------------------|-------------|----------------------|-------------|--------------------|-------------|---------------------|
| 1           | 121-9184           | 1           | Transmission ASM     | 13          | 65-4710            | 2           | Ring-Friction       |
| 2           | 115-4669           | 1           | Belt-V               | 14          | 65-4760            | 2           | Washer-Clutch       |
| 3           | 114-7977-03        | 1           | Bracket-Transmission | 15          | 66-6050            | 1           | Key-Rocking, LH     |
| 4           | 108-7476           | 3           | Screw-Plastite       | 16          | 66-6040            | 1           | Key-Rocking, RH     |
| 5           | 42-3520            | 2           | Cap-End              | 17          | 65-4750            | 2           | Gear-Pinion         |
| 6           | 107-7491           | 2           | Arm-Spring           | 18          | 65-4720            | 2           | Spring-Compression  |
| 7           | 110-0549           | 2           | Knob-HOC             | 19          | 92-1057            | 2           | Bolt-Shoulder       |
| 8           | 49-2040            | 6           | Screw-HWHTF          | 20          | 107-3709           | 2           | Wheel Gear ASM      |
| 9           | 100-8774           | 2           | Pivot Arm ASM        | 20:3        |                    | 1           | Wheel ASM ●         |
| 9:2         | 47-2900            | 1           | Bushing              | 20:3:1      | 27-6250            | 2           | Bushing             |
| 9:3         | 70-9760            | 1           | Bushing              | 21          | 74-1671            | 2           | Spacer-Cover, Wheel |
| 9:4         | 302-56             | 1           | Fitting-Grease       | 22          | 74-1660            | 2           | Cover-Wheel         |
| 10          | 65-4730            | 2           | Washer-Arm, Pivot    | 23          | 125-5069           | 2           | Nut-Hex             |
| 11          | 65-4740            | 4           | Washer-Thrust, Keyed | 26          | 107-7478           | 2           | Plate-HOC           |
| 12          | 65-2720            | 4           | Ring-Clip, Locking   |             |                    |             |                     |

● Not serviced separately
 
# Handle Assembly

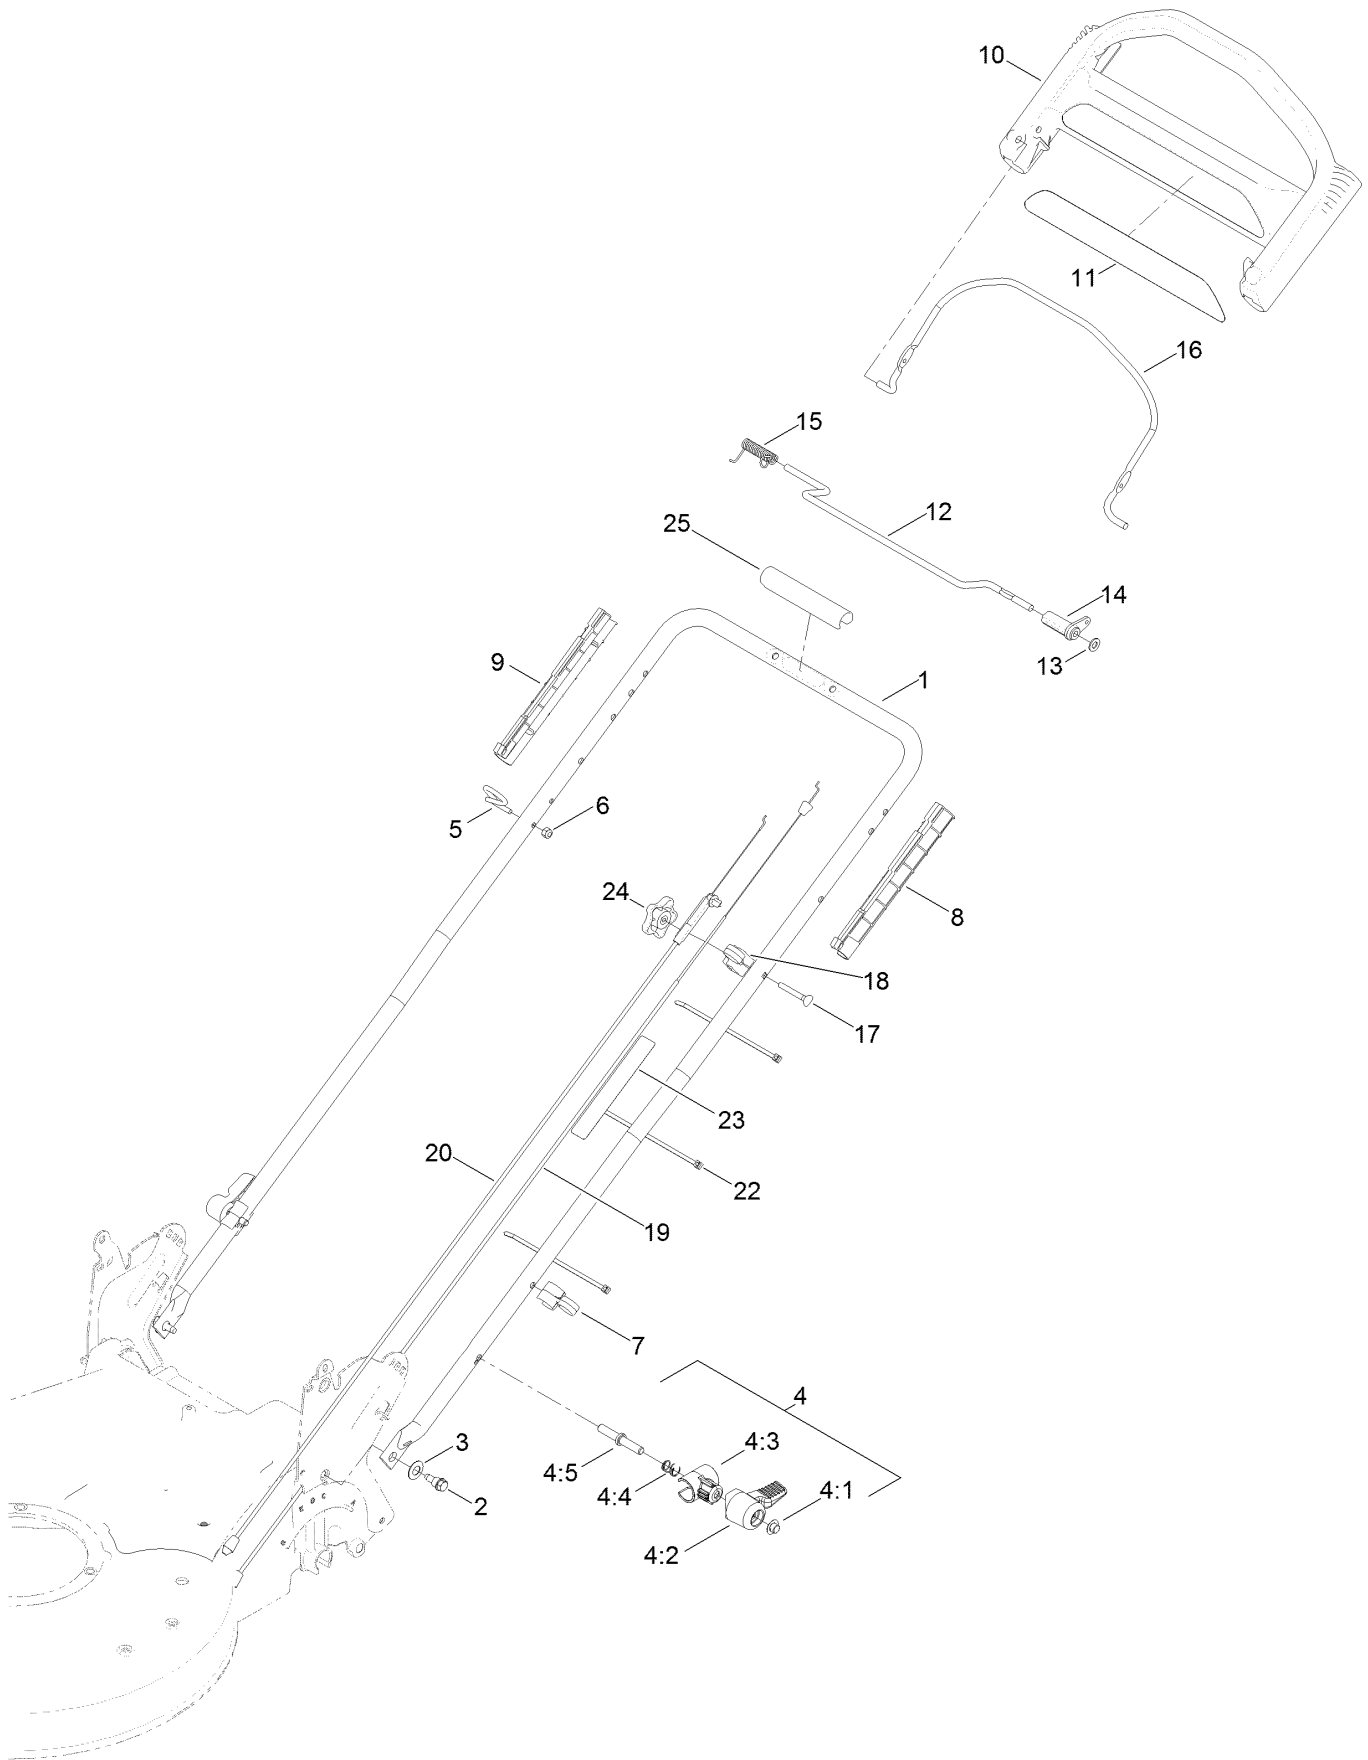

## Handle Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     |
|-------------|--------------------|-------------|------------------------|
| 1           | 132-4460-05        | 1           | Handle                 |
| 2           | 115-1958           | 2           | Bolt-Shoulder          |
| 3           | 112-9972           | 2           | Washer-Spring, Conical |
| 4           | 115-2860           | 2           | Quick Release ASM      |
| 4:1         | 109-0917           | 1           | Nut-Push               |
| 4:2         | 114-7995           | 1           | Lever                  |
| 4:3         | 114-7996           | 1           | Anchor-Spring          |
| 4:4         | 115-2858           | 1           | Spring-Compression     |
| 4:5         | 114-2675           | 1           | Rod-Release            |
| 5           | 86-9671            | 1           | Guide-Rope             |
| 6           | 3296-73            | 1           | Nut-Lock, NI           |
| 7           | 114-7988           | 1           | Guide-Cable            |
| 8           | 105-6842           | 1           | Guide-LH               |
| 9           | 105-6841           | 1           | Guide-RH               |
| 10          | 104-8678           | 1           | Handle-Control         |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     |
|-------------|--------------------|-------------|------------------------|
| 11          | 117-1019           | 1           | Decal                  |
| 12          | 99-1588            | 1           | Bar-Control, Traction  |
| 13          | 3256-23            | 1           | Washer-Plain           |
| 14          | 99-1589            | 1           | Lever-Traction         |
| 15          | 121-9118           | 1           | Spring-Torsion         |
| 16          | 131-0880-03        | 1           | Bail-Brake             |
| 17          | 95-4453            | 1           | Screw                  |
| 18          | 136-5864           | 1           | Anchor-Cable           |
| 19          | 108-8158           | 1           | Cable-Traction         |
| 20          | 120-3921           | 1           | Cable-Brake            |
| 22          | 614249             | 3           | Tie-Cable              |
| 23          | 132-4470           | 1           | Decal-Traction, Adjust |
| 24          | 131-0897           | 1           | Knob-Handle, Locking   |
| 25          | 131-4551           | 1           | Handle-Cover           |

# Attachments and Accessories

## For 20381 Super Recycler Lawn Mower

| Product Name                    | Model/Part  |
|---------------------------------|-------------|
| Bagging Blade .....             | 108-3759-03 |
| High-Altitude Kit.....          | 121-4242    |
| Traction Assist Handle Kit..... | 131-4590    |
| Engine Maintenance Kit.....     | 20240       |
| Lawnmower Cover.....            | 490-7462    |

**Notes:**



**Count on it.**