



RECYCLER[®]

48cm Rear Bagger Mower

Model No. 20914-8900001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description Note:	Page
-------------	------	----------------------	------

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
..			

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HWHTF	hex washer head thread forming
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	PH	pan head
FH	flat head	PPH	Phillips pan head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HFw	hex flange washer	SFH	slotted fillister head
HH	hex head	SH	square head
HHF	hex head flange	SHWH	slotted hex washer head
HHST	hex head self tapping	SPH	slotted pan head
HJ	hex jam	STD	standard
HOC	height-of-cut	TAP	self tapping
HS	hex socket	TH	truss head
HSBH	hex socket button head	TTH	Torx truss head
HSFH	hex socket flat head	WH	wing head
HSH	hex socket head		
HWH	hex washer head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form X:Y. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.

 
For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form $X(Y)$. X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.


For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

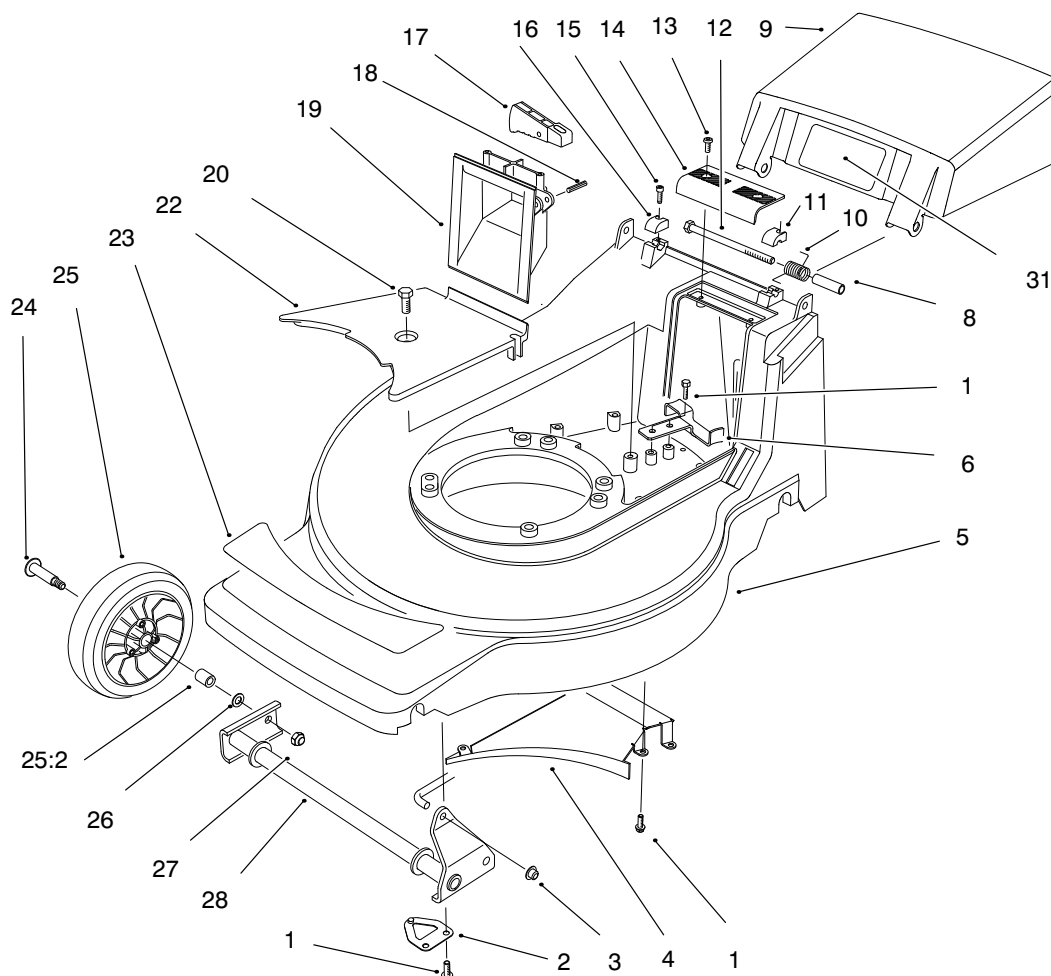

Sheet No.:2

Deck Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	32144-4	10	Screw-TAP	28	71-7820	1	Pivot
2	71-8830	2	Retainer-ASM	31	93-4105	1	Decal-Danger
3	32112-11	1	Nut				
4	71-7990	1	Ramp-Discharge				
5	16-5979	1	Housing-Deck				
6	71-7890	1	Guide-Belt				
8	71-8580	2	Spacer-Door				
9	71-9800	1	Door-Discharge				
10	71-9840	2	Spring-Door				
11	71-7900	1	Cap-Bolt LH				
12	322-29	2	Screw-HH				
13	32144-97	2	Screw-PPH				
14	71-7860	1	Grip-Upper				
15	65-5210	2	Screw-Tf				
16	71-7910	1	Cap-Bolt RH				
17	71-7930	1	Trigger-HOC				
18	3284-5	1	Pin-Groove				
19	71-7870	1	Grip-Lower				
20	32144-70	1	Screw-TAP				
22	71-7920	1	Cover-Belt				
23	71-9860	1	Decal-Deck				
24	27-6230	2	Bolt-Wheel				
25	46-1113	2	Wheel & Tire ASM				
25:2	27-6250	4	Bushing				
26	40-1940	2	Washer				
27	3296-5	2	Nut-Lock				

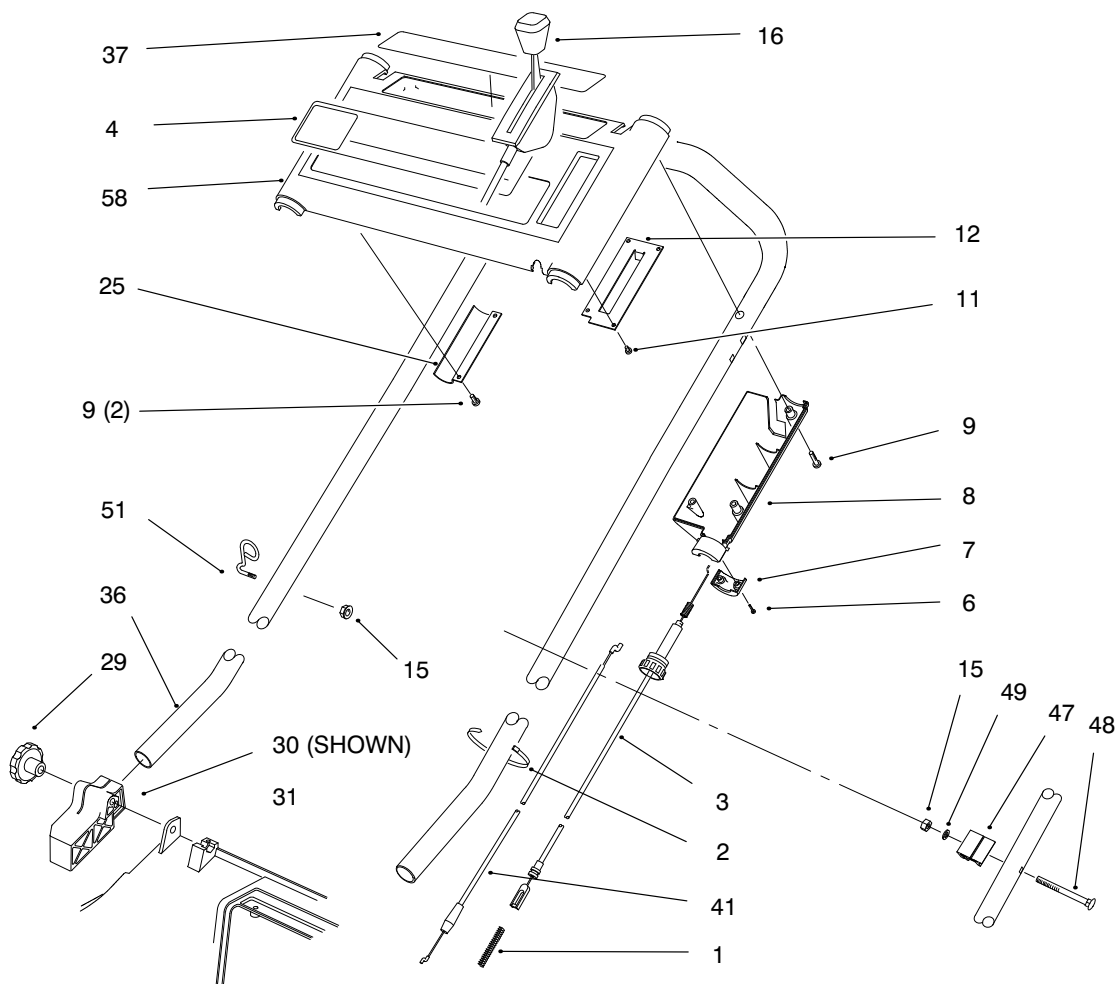 


Sheet No.:3

Handle Assembly

Ref. No.	Part No.	Qty.	Description
1	71-8310	1	Spring-Compression
2	3290-378	1	Tie-Cable
3	95-9649	1	Cable-Traction
4	71-9861	1	Decal-Panel 4-Cycle
6	32144-99	2	Screw-PPH
7	71-7630	1	Cap-Throttle
8	93-0339	1	Cover-Throttle
9	32144-97	5	Screw-PPH
11	32144-98	4	Screw-PPH
12	71-8040	1	Plate-Throttle
15	3296-73	2	Nut-Lock
16	93-1117	1	Control-Throttle
25	71-8130	1	Bracket-Control
29	19-4050	2	Knob
30	71-8100	1	Mount-Handle RH
31	71-8090	1	Mount-Handle LH
36	94-4367	1	Handle-Sp
37	94-6026	1	Decal-Instruction
41	93-1116	1	Cable-Brake
47	92-7729	1	Anchor-Cable
48	95-4453	1	Screw-Handle
49	3256-1	1	Washer-Flat
51	95-4457	1	Rope-Guide
58	94-9436	1	Panel-Control (Incl. Ref.# 4, 37)

Ref. No.	Part No.	Qty.	Description

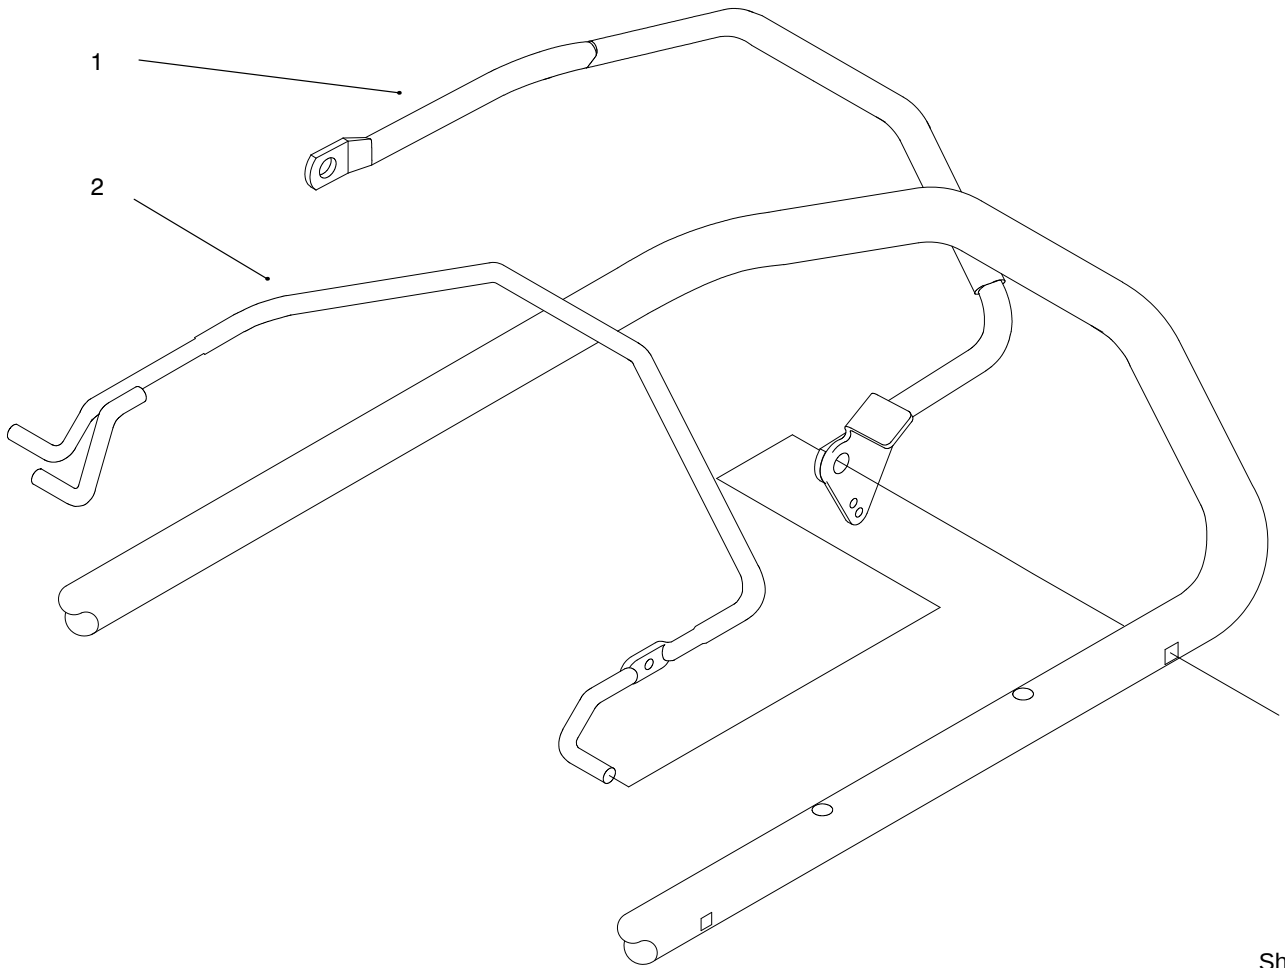 


Sheet No.:4

Deck Suspension Assembly

Ref. No.	Part No.	Qty.	Description
1	95-4450	1	Bail-Traction
2	95-4454	1	Bail-Brake

Ref. No.	Part No.	Qty.	Description

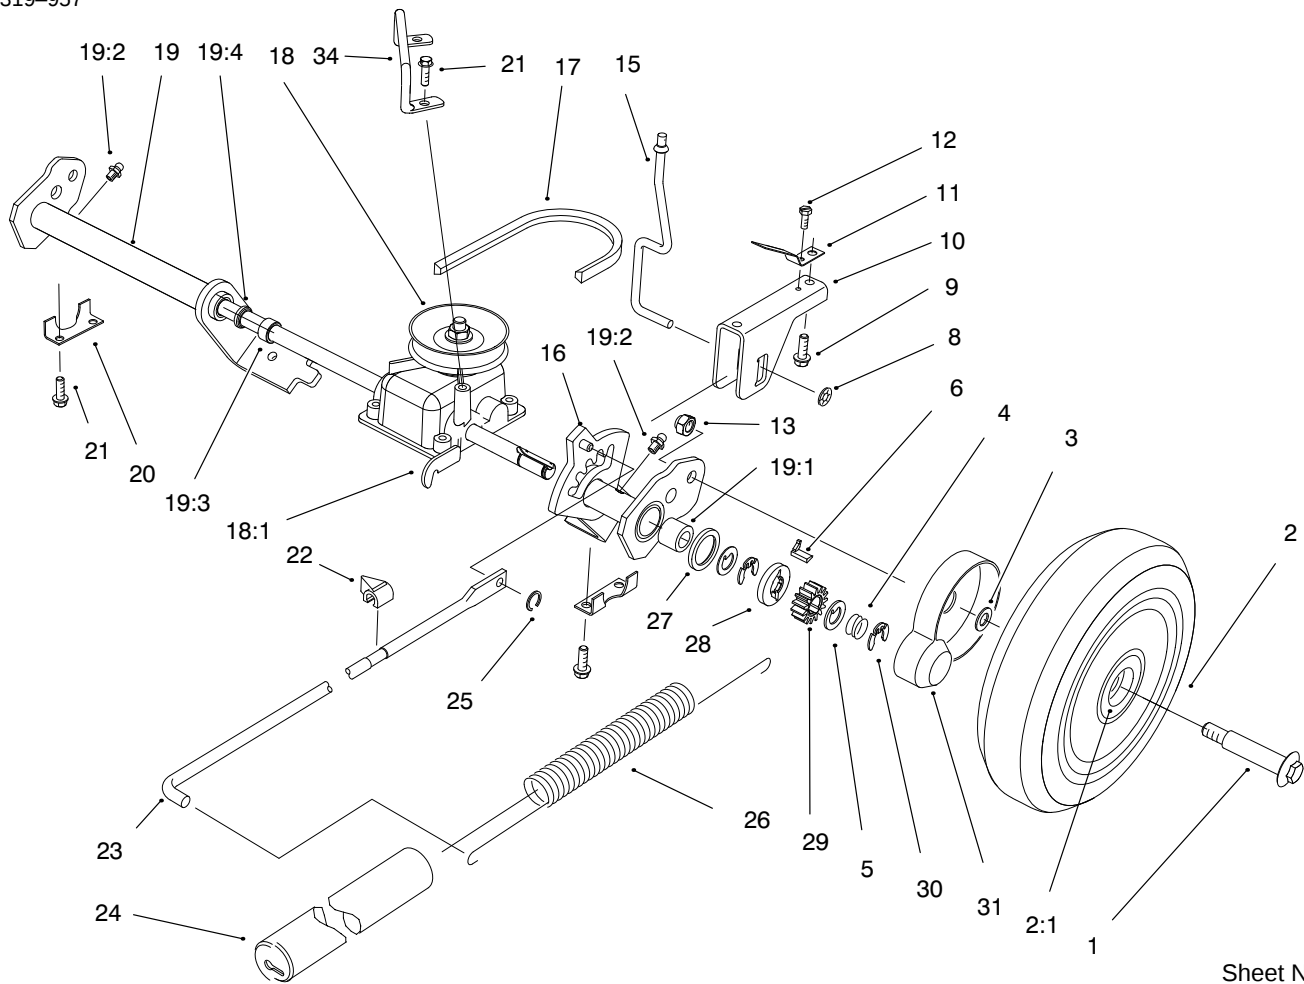 


Sheet No.:5

Deck Suspension Assembly

Ref. No.	Part No.	Qty.	Description
1	27-6230	2	Bolt-Wheel
2	51-2742	2	Wheel-ASM
2:1	27-6250	4	Bushing
3	74-1671	2	Spacer-Cover
4	65-4720	2	Spring-Compression
5	65-4740	4	Washer-Thrust
6	66-6050	1	Key-Rocking LH
*7	66-6040	1	Key-Locking RH
8	32112-13	1	Nut-Push
9	63-8590	2	Screw
10	71-8080	1	Saddle-HOC
11	71-8060	2	Spring-Trigger
12	32144-31	1	Screw
13	3296-5	2	Nut-Lock
15	71-7840	1	Rod-Trigger
*16	92-9677	1	Arm-Pivot LH
17	71-9450	1	V Belt
18	71-9600	1	ASM-Gear Case
18:1	98-2039	1	Bracket - Traction
19	92-9680	1	Arm-Pivot RH
19:1	48-2060	1	Bearing-Caged Needle
19:2	302-26	2	Fitting-Grease
19:3	47-2890	1	Bushing
19:4	47-6730	1	Seal-Oil
20	71-7770	2	Plate-Securing

Ref. No.	Part No.	Qty.	Description
21	32144-4	6	Screw-TAP
22	71-7980	1	Indicator-HOC
23	71-7970	1	Rod-Link
24	71-8450	1	Cover-Spring
25	32151-93	1	Ring-Grip
26	71-7740	1	Spring
27	65-4710	2	Ring-Friction
28	65-4760	2	Washer
29	65-4750	2	Gear-Pinion
30	65-2720	4	Ring-Retaining
31	74-1660	2	Cover-Wheel
34	95-2740	1	Retainer-Belt

 
* Not illustrated

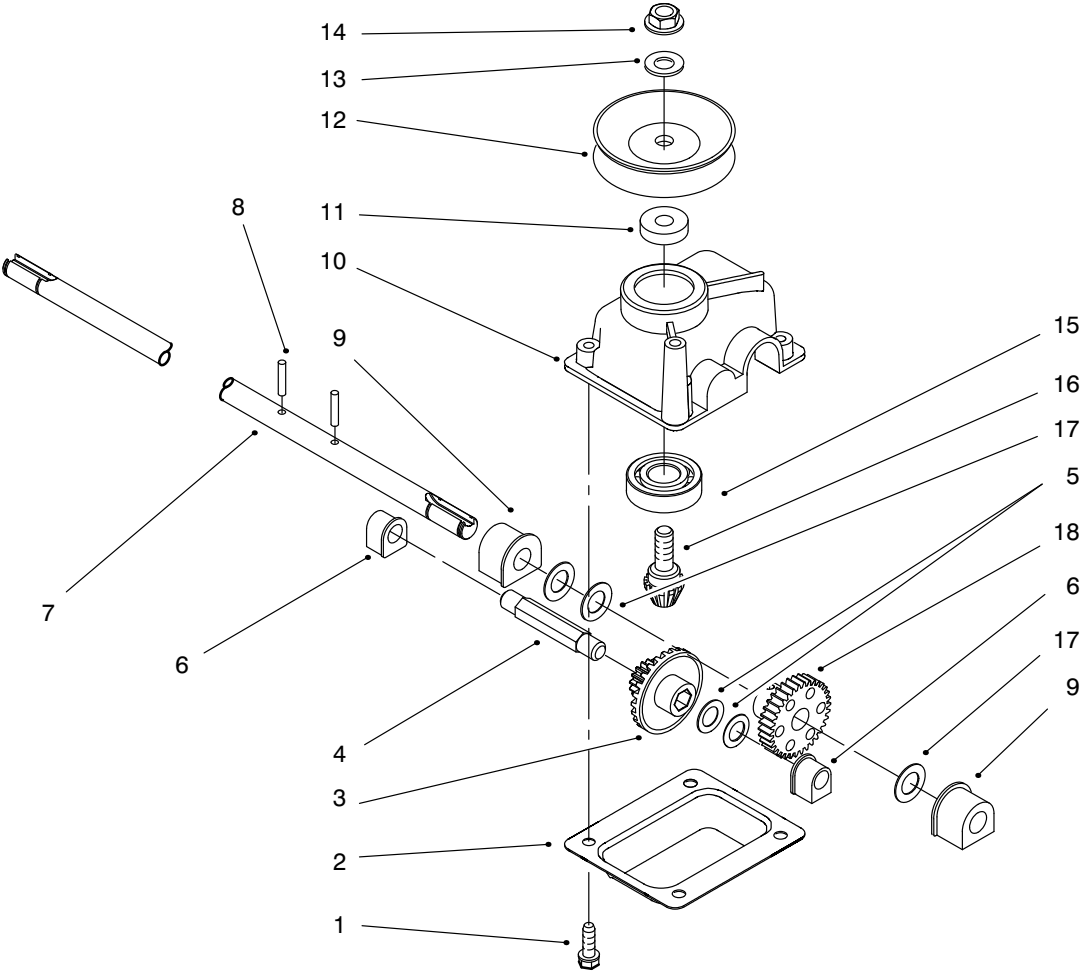

Gear Case Assembly #71-9600

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	49-2040	4	Screw – Taptite				
2	614668	1	Cover – Gear Case				
3	55-3760	1	Pinion – 15 Tooth				
4	614696	1	Shaft – Intermediate				
5	36-4791	2	Washer				
6	60-8750	2	Bushing				
7	71-9620	1	Shaft – Output				
8	32121-114	2	Pin – Groove				
9	60-8850	2	Bushing – Output				
10	614578	1	Cover – Gearcase				
11	62-6660	1	Spacer				
12	71-9610	2	Pulley – Half				
13	3256-24	1	Washer				
14	3296-5	1	Nut				
15	38-7820	1	Bearing – Ball				
16	60-8890	1	Gear – Bevel Pinion				
17	36-4780	3	Washer – Thrust				
18	614596	1	Gear 34 Tooth				
*	71-9600	1	Gear Case Ass’y Complete				

 * Not illustrated

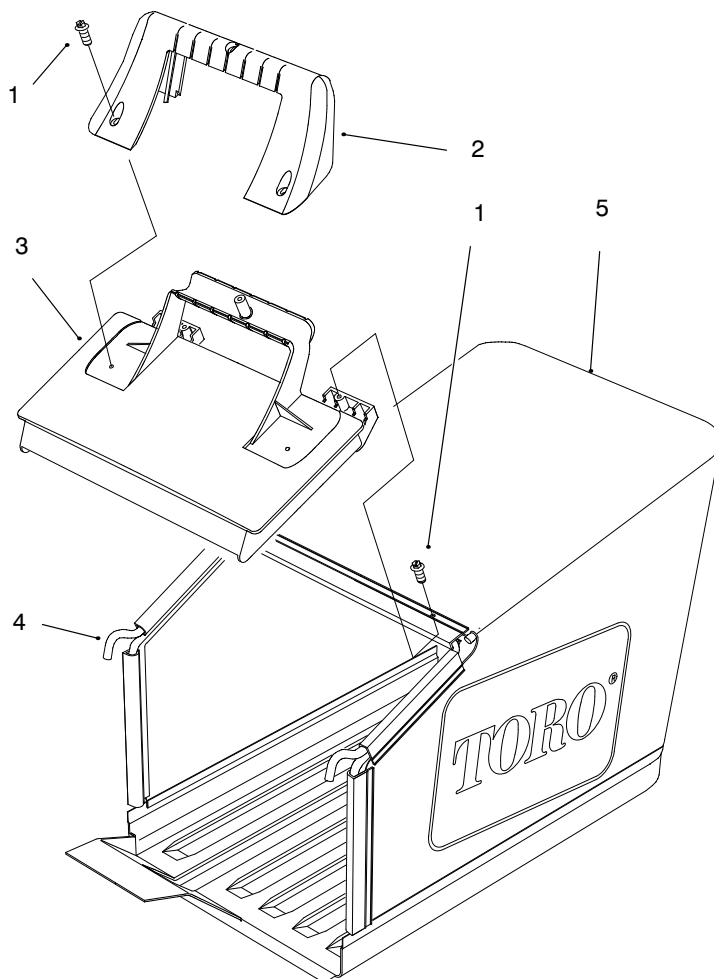


Sheet No.:6

Bag and Components Assembly

Ref. No.	Part No.	Qty.	Description
1	32144-111	5	Screw – PPH
2	71-9480	1	Handle-Door
3	71-9470	1	Door-Bag
4	71-9900	1	Frame
5	71-9460	1	Bag-Grass

Ref. No.	Part No.	Qty.	Description

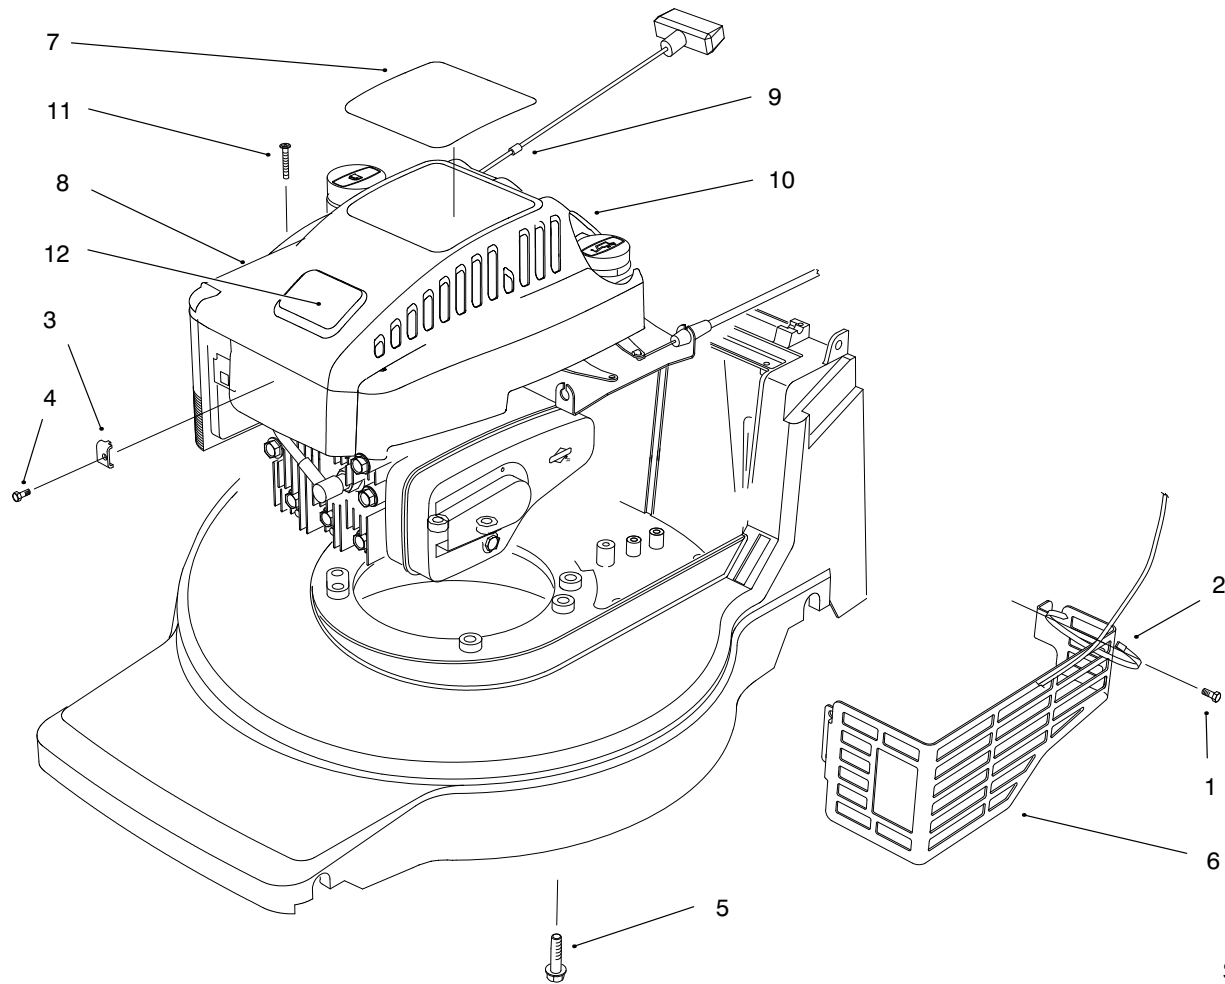 


Sheet No.:7

Engine Assembly

Ref. No.	Part No.	Qty.	Description
1	32144-73	3	Screw-HWHTF
2	3290-378	1	Tie-Cable
3	2210-249	1	Clamp-Casing
4	93-8470	1	Screw-Clamp
5	32144-102	3	Screw
6	82-8550	1	Shield-Muffler
7	93-4354	1	Decal-Engine
8		1	Engine
9	2210-316	1	Rope-Stop
10	93-0243	1	Shroud
11	32144-121	2	Screw
12	92-2289	1	Plate-Logo

Ref. No.	Part No.	Qty.	Description

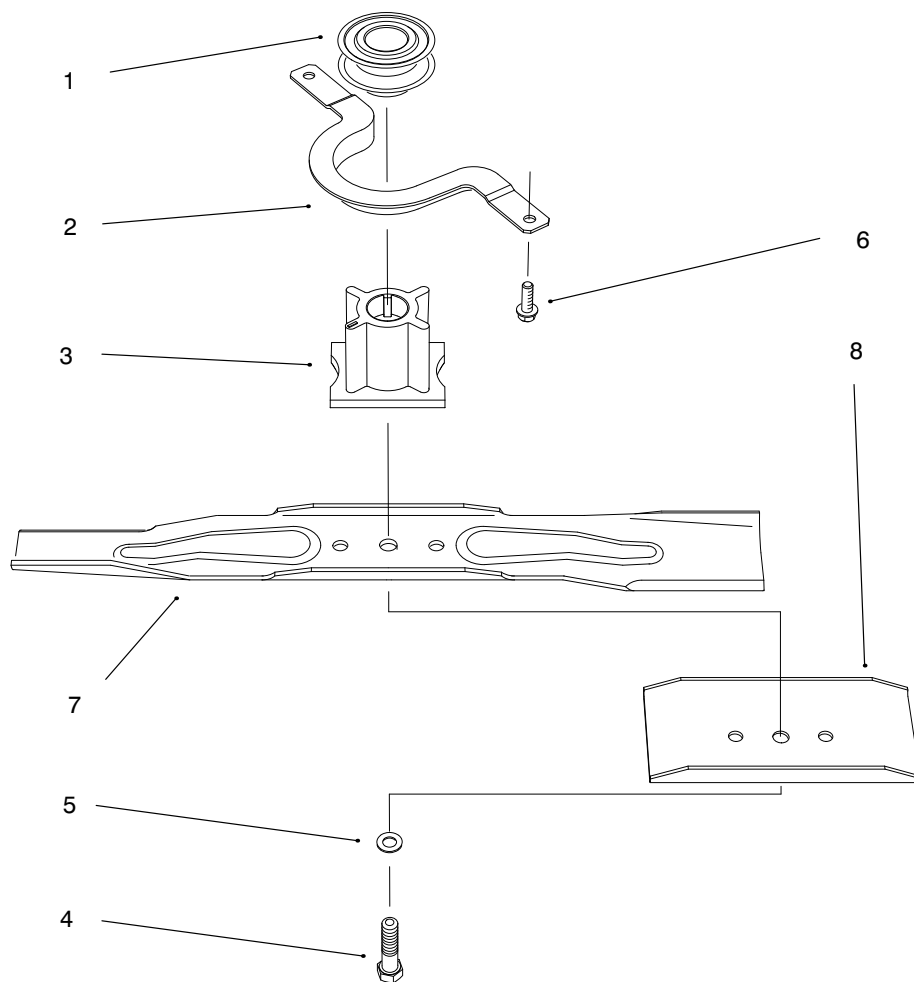 


Sheet No.:9

Blade Assembly

Ref. No.	Part No.	Qty.	Description
1	62-7550	1	Pulley-Driver
2	71-7960	1	Guide-Belt Engine
3	71-7940	1	Retainer-Blade
4	26-0672	1	Bolt-Blade
5	3253-22	1	Washer-Lock
6	32144-4	2	Screw-TAP
7	92-9813	1	Blade
8	92-9812	1	Stiffener-Blade

Ref. No.	Part No.	Qty.	Description

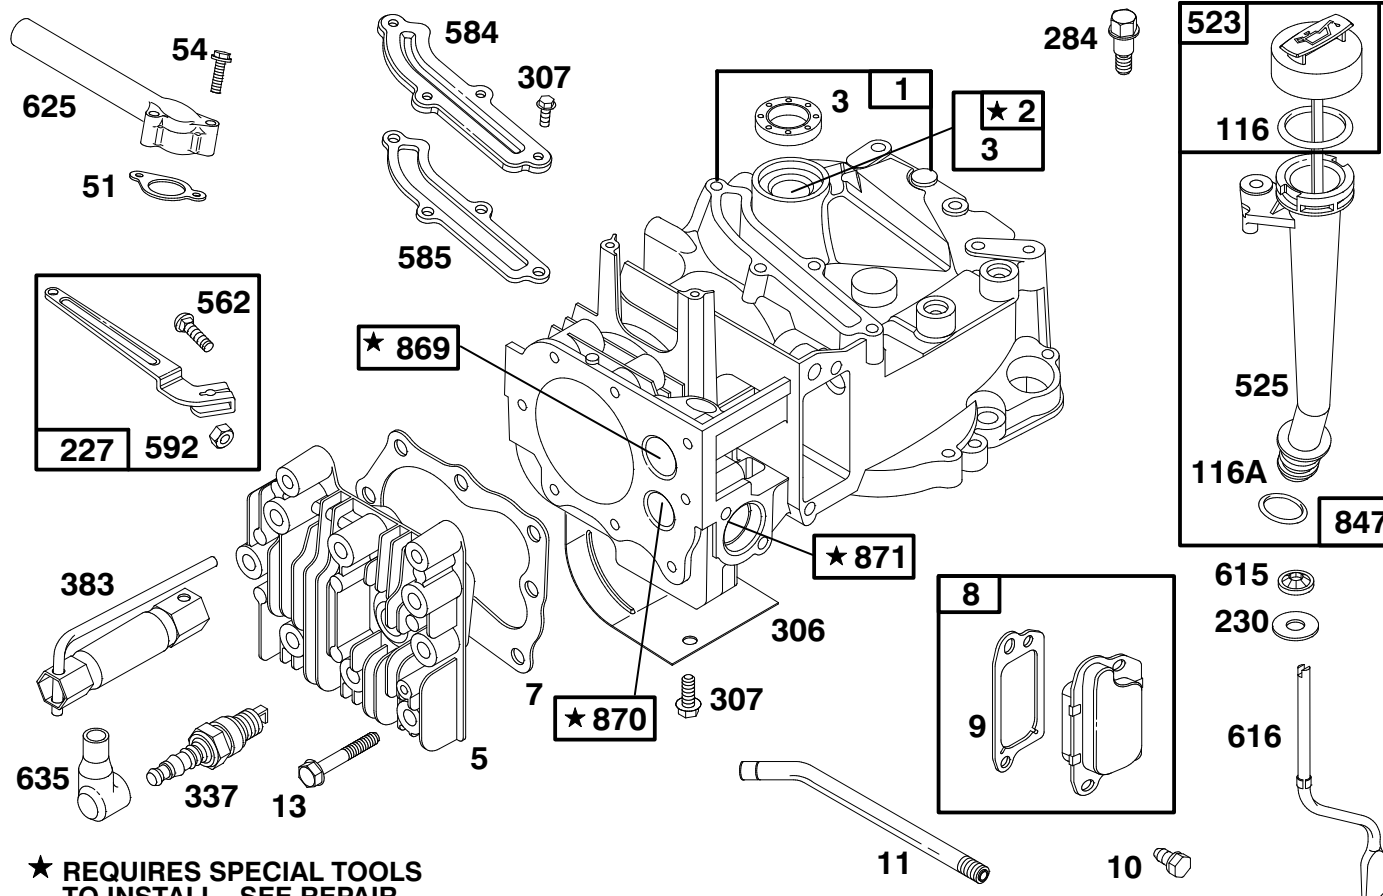 

ENGINE BRIGGS & STRATTON MODEL 12F802-1767-E1


Ref. No.	Part No.	Description	No. Used
1	493260	Cylinder Assembly	1
2	293708	Bushing	1
★3	299819	Seal - Oil	1
5	214626	Head - Cylinder	1
†★7	272916	Gasket - Cylinder Head	1
8	495786	Breather Assy.	1
†★9	272481	Gasket - Breather	1
10	94650	Screw - Hex.	1
11	231933	Tube - Breather	1
13	94547	Screw - Hex.	1
★51	272199	Gasket - Intake Elbow	1
54	94526	Screw - Hex	1
★116	280393	Seal - O Ring	1
★116A	280966	Seal - O Ring	1
227	492349	Lever Assembly - Gov.	1
230	67072	Washer - Gov. Crank	1
284	94511	Screw - Hex.	1
306	224324	Shield - Cylinder	1
307	94515	Screw - Hex.	1

Ref. No.	Part No.	Description	No. Used
337	802592	Plug - Spark	1
383	89838	Wrench - Spark Plug	1
523	495264	Dipstick	1
525	495265	Tube - Oil Filler	1
562	94582	Screw - Hex.	1
584	224328	Baffle - Cylinder	1
★585	272238	Gasket - Breather	1
592	231082	Nut - Hex.	1
615	94474	Fastener	1
616	263175	Crank - Governor	1
625	497465	Tube - Fuel Intake	1
635	66538	Elbow - Spark Plug	1
847	495263	Dipstick/Tube Assy.	1
869	213512	Seat - Valve (Intake)	1
870	213513	Seat - Valve (Exhaust)	1
871	262001	Bushing-Guide (Exhaust)	1
		Note: 63709 Bushing - Guide (Intake)	1

★ Included in Gasket Set-Part No. 497316.

† Included in Valve Overhaul Gasket Set-Part No. 498528.

 Obtain Parts From Briggs & Stratton

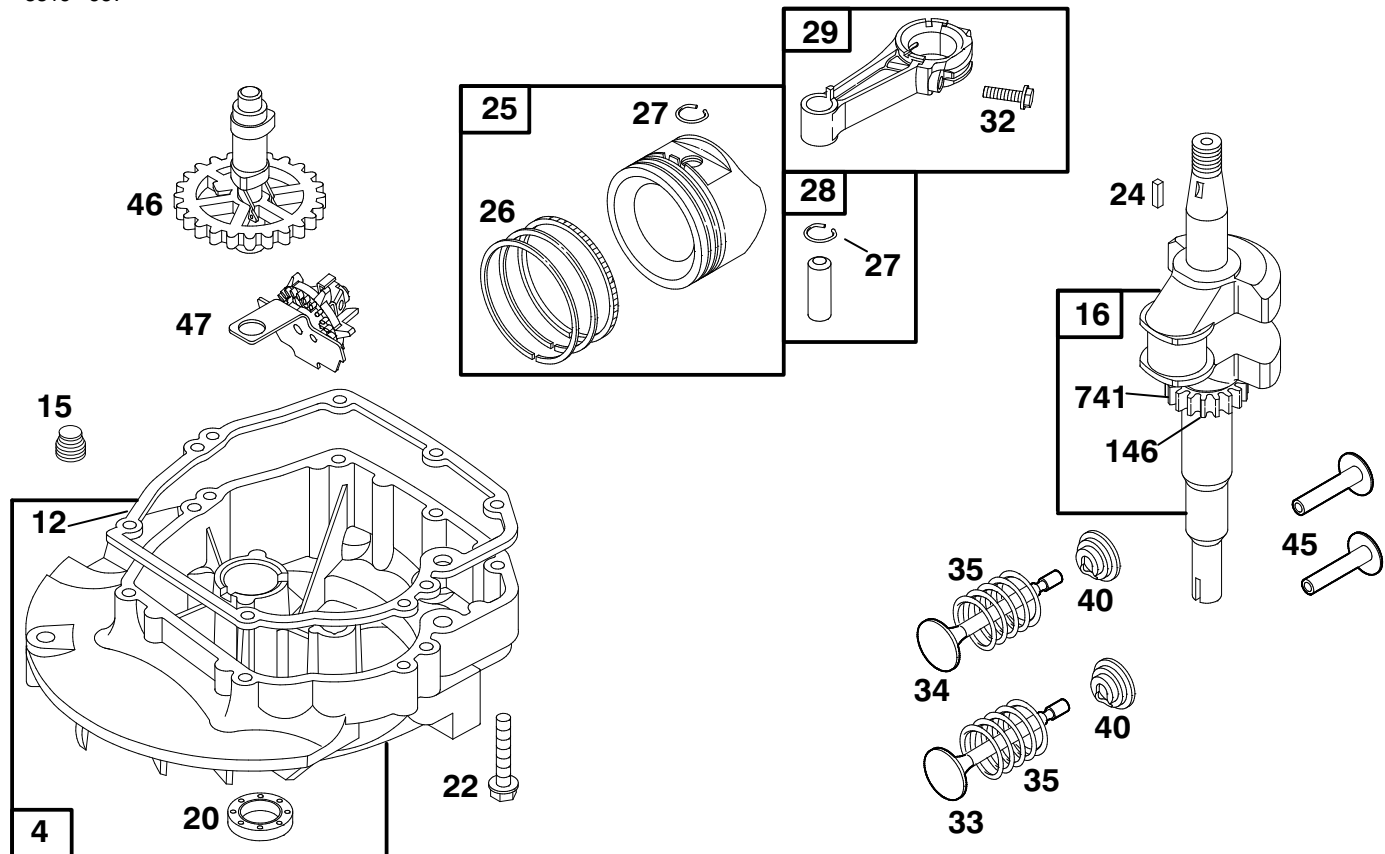

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 12F802-1767-E1

Ref. No.	Part No.	Description	No. Used
4	493279	Sump – Engine	1
★12	272198	Gasket – Crankcase	1
15	94880	Plug – Oil Drain	1
16	498573	Crankshaft	1
★20	399781	Seal – Oil	1
22	94220	Screw – Hex.	1
		Note: 94612 Screw – Hex. (One (1) Used in Hole Nearest Breather.)	1
24	222698	Key – Flywheel	1
25	499429	Piston Assy. (Standard)	1
	499430	Piston Assy. (0.010" O.S.)	1
	499431	Piston Assy. (0.020" O.S.)	1
	499432	Piston Assy. (0.030" O.S.)	1

Ref. No.	Part No.	Description	No. Used
26	499425	Ring Set (Standard)	1
	499426	Ring Set (0.010" O.S.)	1
	499427	Ring Set (0.020" O.S.)	1
	499428	Ring Set (0.030" O.S.)	1
27	263190	Lock – Piston Pin	1
28	499423	Pin – Piston (Standard)	1
29	499424	Rod Assembly – Connecting	1
32	94699	Screw – Connecting Rod	1
33	262651	Valve – Exhaust	1
34	262652	Valve – Intake	1
35	262224	Spring – Valve	1
40	93312	Retainer – Valve Spring	1
45	262204	Tappet – Valve	1
46	498275	Gear – Cam	1
47	493737	Slinger – Oil	1
146	94388	Key – Timing	1
741	262598	Gear – Timing	1

★ Included in Gasket Set–Part No. 497316.

 Obtain Parts From Briggs & Stratton

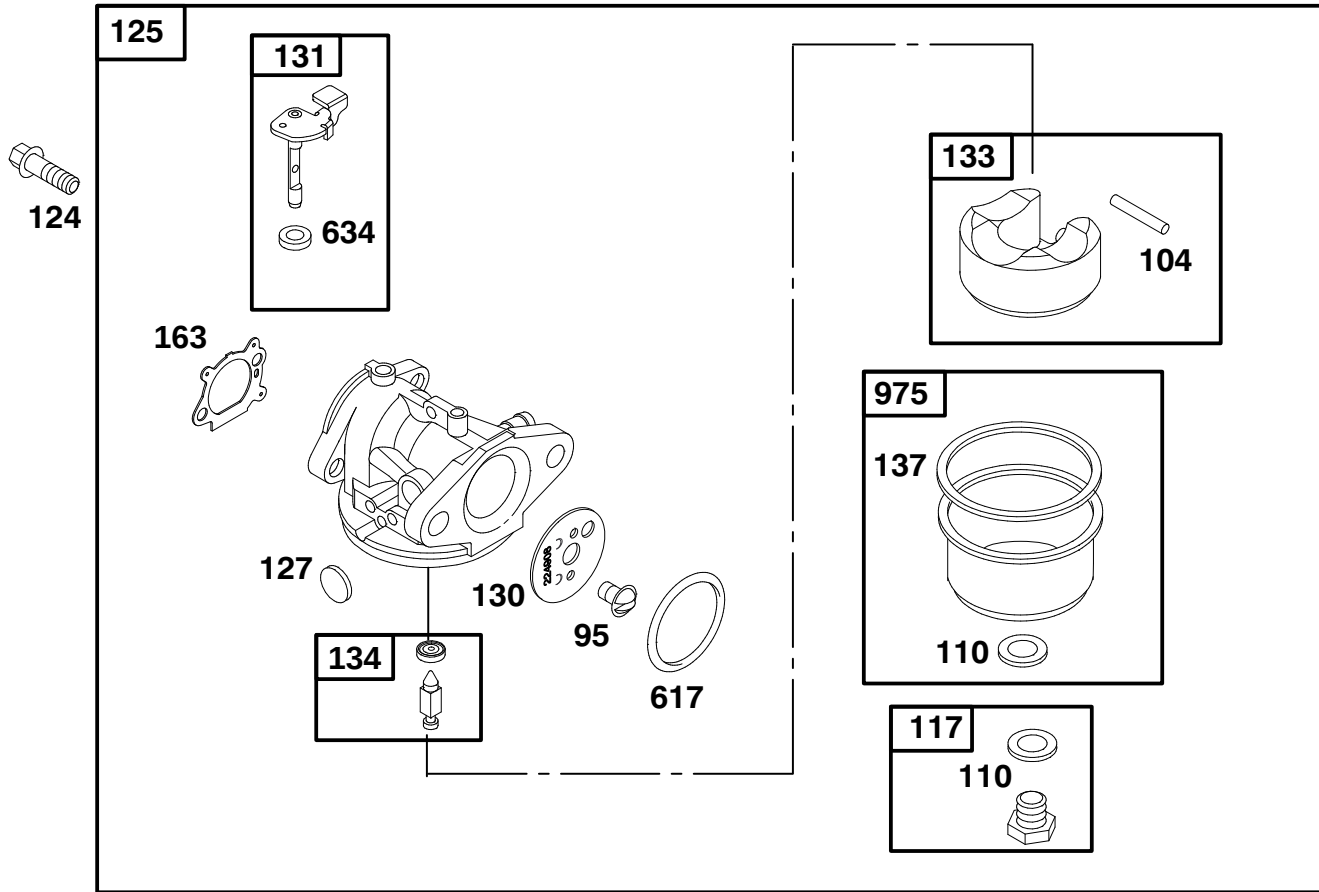

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-1767-E1


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
95	94098	Screw - Slotted	1	130	224908	Valve - Throttle	1
●104	231371	Pin - Float Hinge	1	131	493267	Shaft - Throttle	1
◆110		Washer - Bowl	1	133	398187	Float - Carburetor	1
		(Sold in Kit Only).		●134	398188	Kit - Needle/Seat	1
117	494870	Jet - Main (Std.)	1	◆137		Gasket - Bowl	1
		Note: 497315 Jet - Main				(Sold in Kit Only).	1
		(High Altitude)	1	◆◆★163	272653	Gasket - Air Cleaner	1
124	94840	Screw - Hex	1	◆◆617	270344	Seal - Intake Manifold	1
125	498170	Carburetor	1	◆◆634		Washer - Foam	1
●127		Plug - Welch	1			(Sold in Kit Only).	1
		(Sold in Kit Only).	1	975	493640	Bowl - Float	1

★ Included in Gasket Set-Part No. 497316.

Obtain Parts From Briggs & Stratton

● Included in Carburetor Kit-Part No. 498260.

 ◆ Included in Carburetor Gasket Set-Part No. 498261.

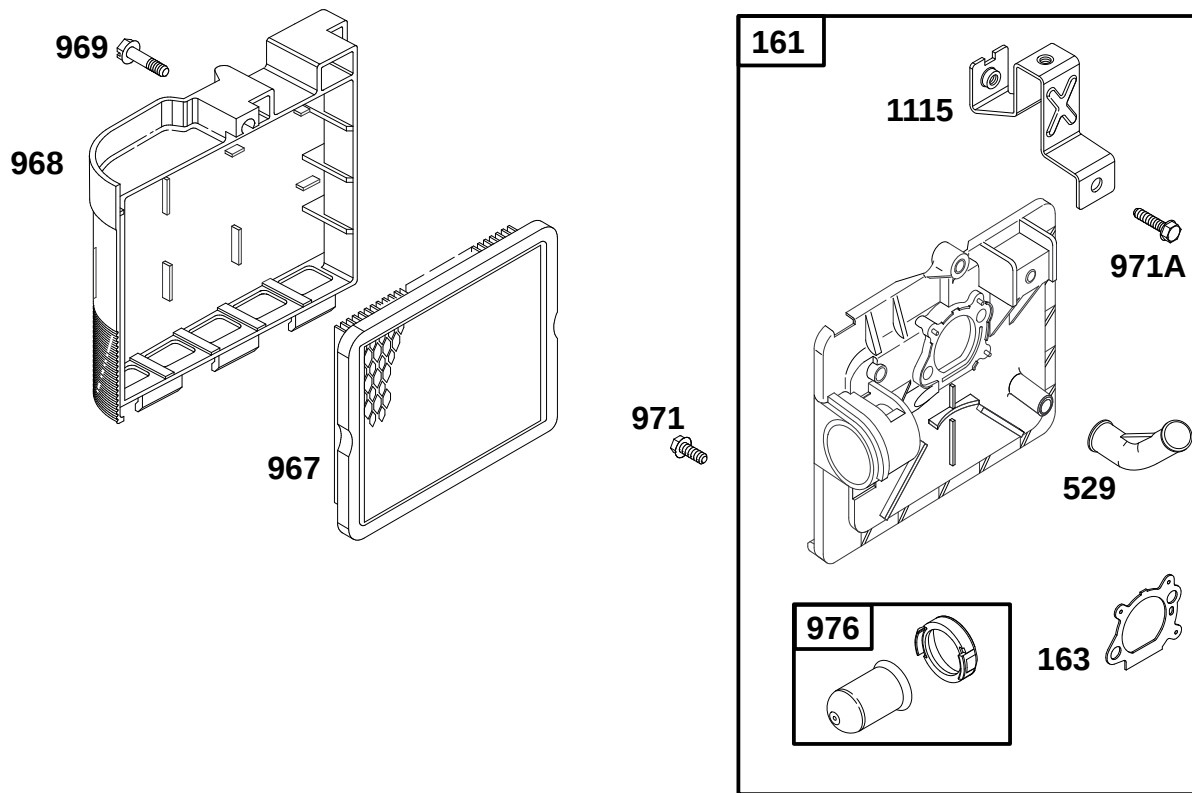

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-1767-E1

Ref. No.	Part No.	Description	No. Used
161	496116	Base – Air Cleaner	1
◆★163	272653	Gasket – Air Cleaner	1
529	281299	Grommet	1
967	491588	Filter – Air	1
968	281340	Cover – Air Cleaner	1


Ref. No.	Part No.	Description	No. Used
969	94872	Screw – Slotted Hex.	1
971	94873	Screw – Hex.	1
971A	94749	Screw – Hex.	1
976	496115	Primer – Carburetor	1
1115	224815	Bracket – Support	1

★ Included in Gasket Set–Part No. 497316.

Obtain Parts From Briggs & Stratton

● Included in Carburetor Kit–Part No. 498260.

 ◆ Included in Carburetor Gasket Set–Part No. 498261.

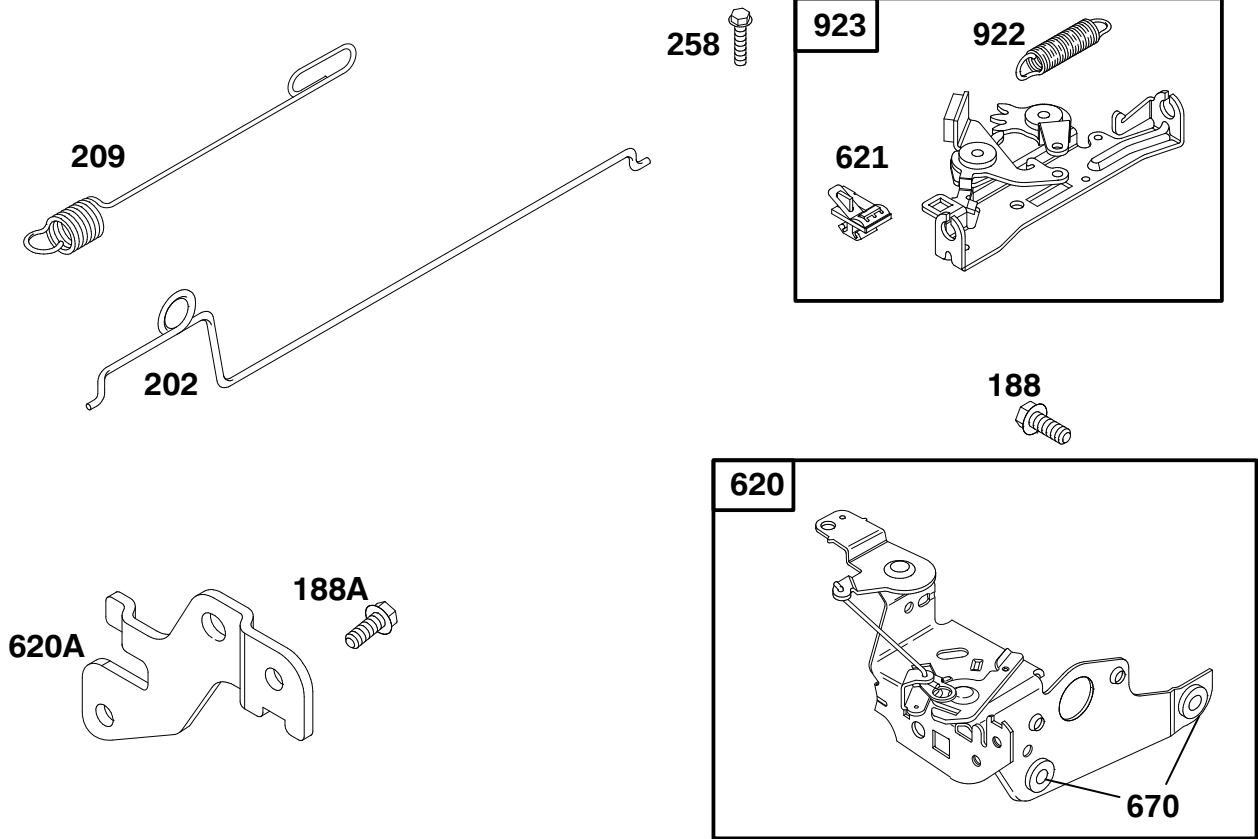


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-1767-E1

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
188	94644	Screw – Hex.	1	620A	225152	Bracket – Control	1
188A	94874	Screw – Hex.	1	621	396847	Switch – Stop	1
202	262579	Link – Governor	1	★670	493823	Spacer – Bracket	2
209	263046	Spring – Governor	1	922	262640	Spring – Brake	1
258	94512	Screw – Hex.	1	923	493442	Brake Assembly	1
620	497203	Bracket – Carburetor	1				

 ★ Included in Gasket Set—Part No. 497316.
Obtain Parts From Briggs & Stratton

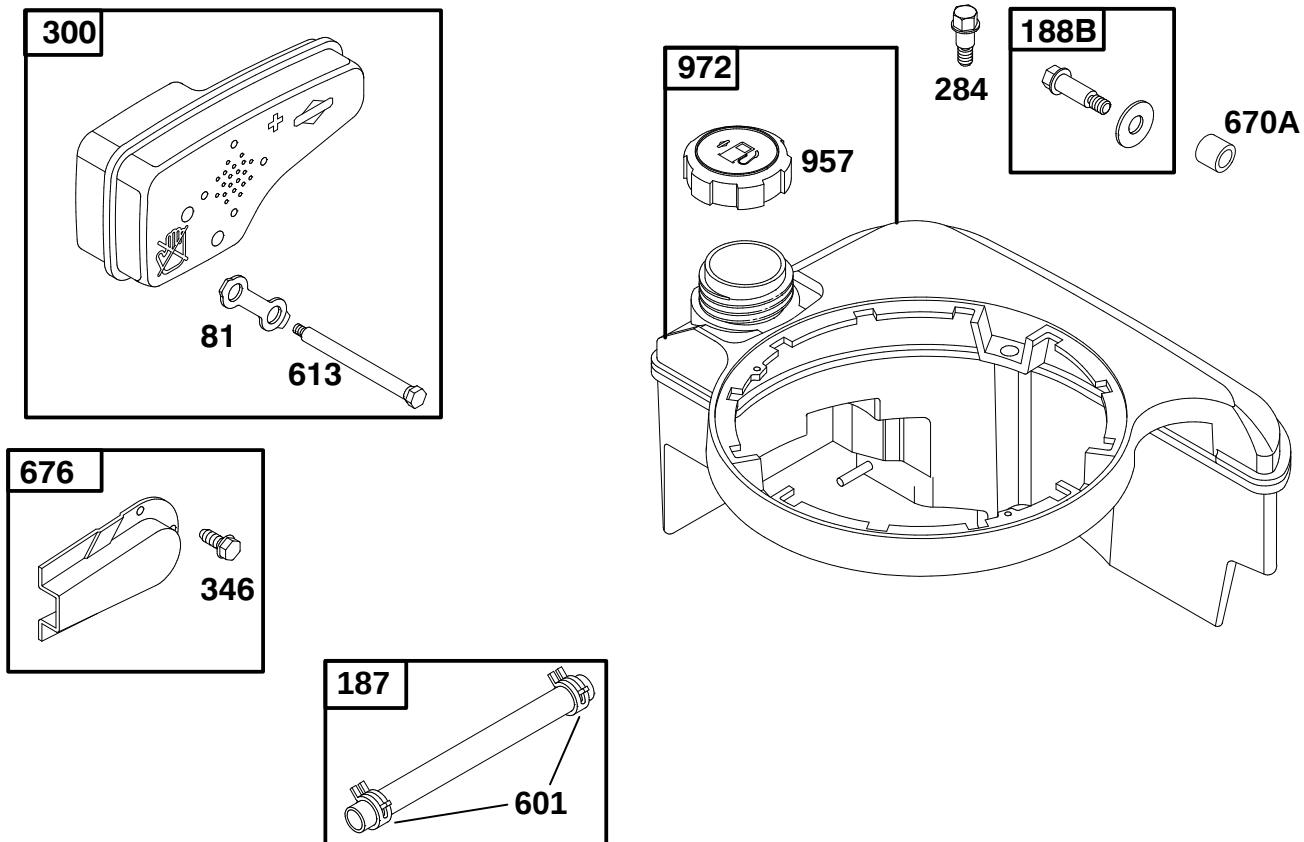


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-1767-E1

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
81	223664	Lock – Muffler Screw	1	601	95162	Clamp – Hose	1
187	298049	Line – Fuel (Cut to Required Length)	1	613	94231	Screw – Shoulder	1
188B	398540	Screw – Shoulder	1	670A	280512	Spacer – Fuel Tank	1
284	94511	Screw – Shoulder	1	676	493871	Deflector – Muffler	1
300	496106	Muffler – Exhaust	1	957	397974	Cap – Fuel Tank	1
346	94896	Screw – Hex.	1	972	495224	Tank – Fuel	1

 Obtain Parts From Briggs & Stratton

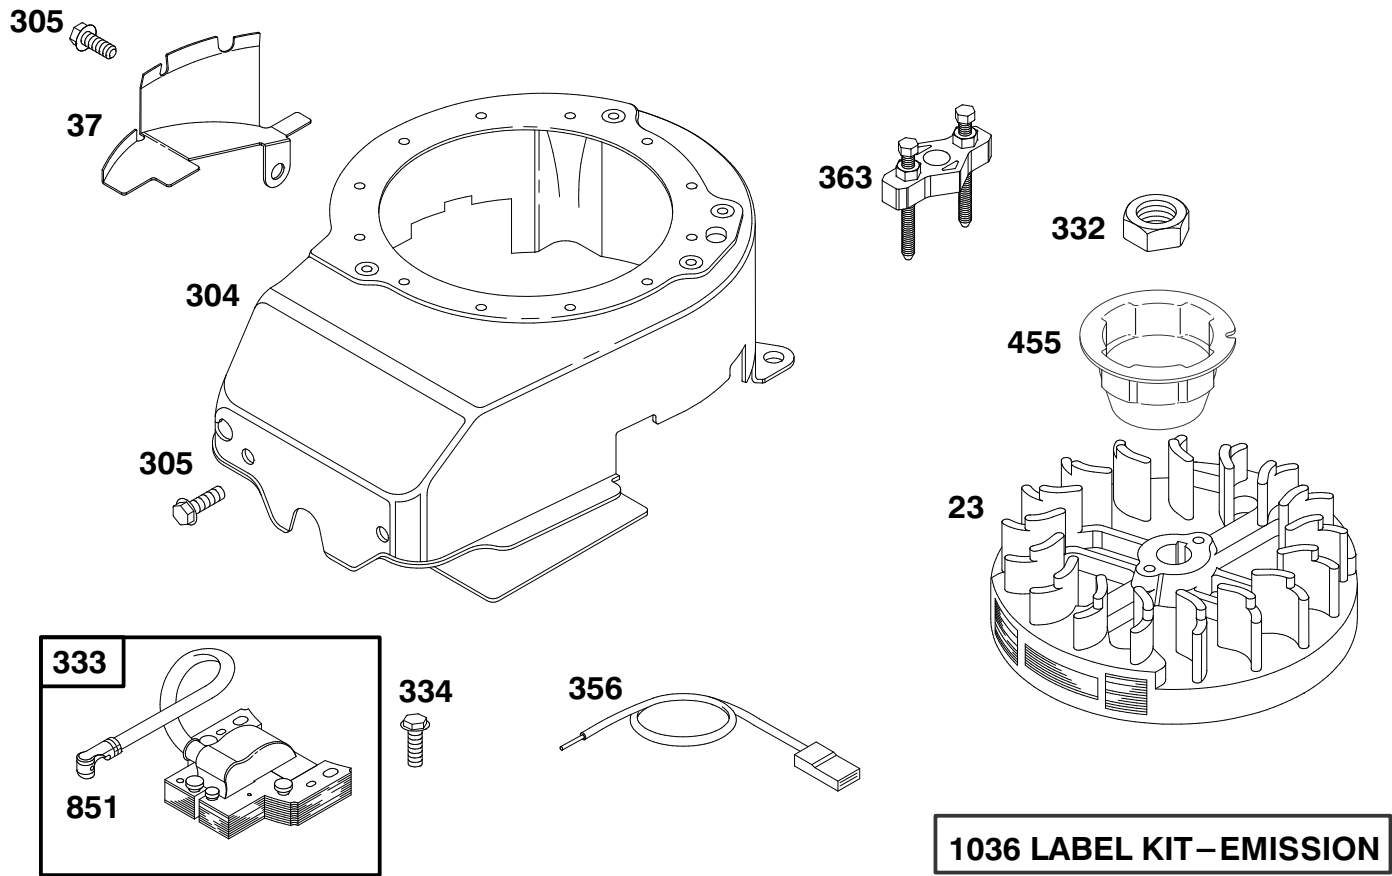


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-1767-E1

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
23	492177	Flywheel	1	334	94731	Screw - Hex.	1
37	224511	Guard - Flywheel	1	356	497833	Wire - Stop	1
304	493293	Housing - Blower	1	363	19069	Puller - Flywheel	1
305	94744	Screw - Hex.	1	455	225121	Cup - Flywheel	1
332	94877	Nut - Flywheel	1	851	493880	Terminal - Cable	1
333	802574	Armature - Magneto	1	1036	499341	Label Kit - Emission	1

 Obtain Parts From Briggs & Stratton




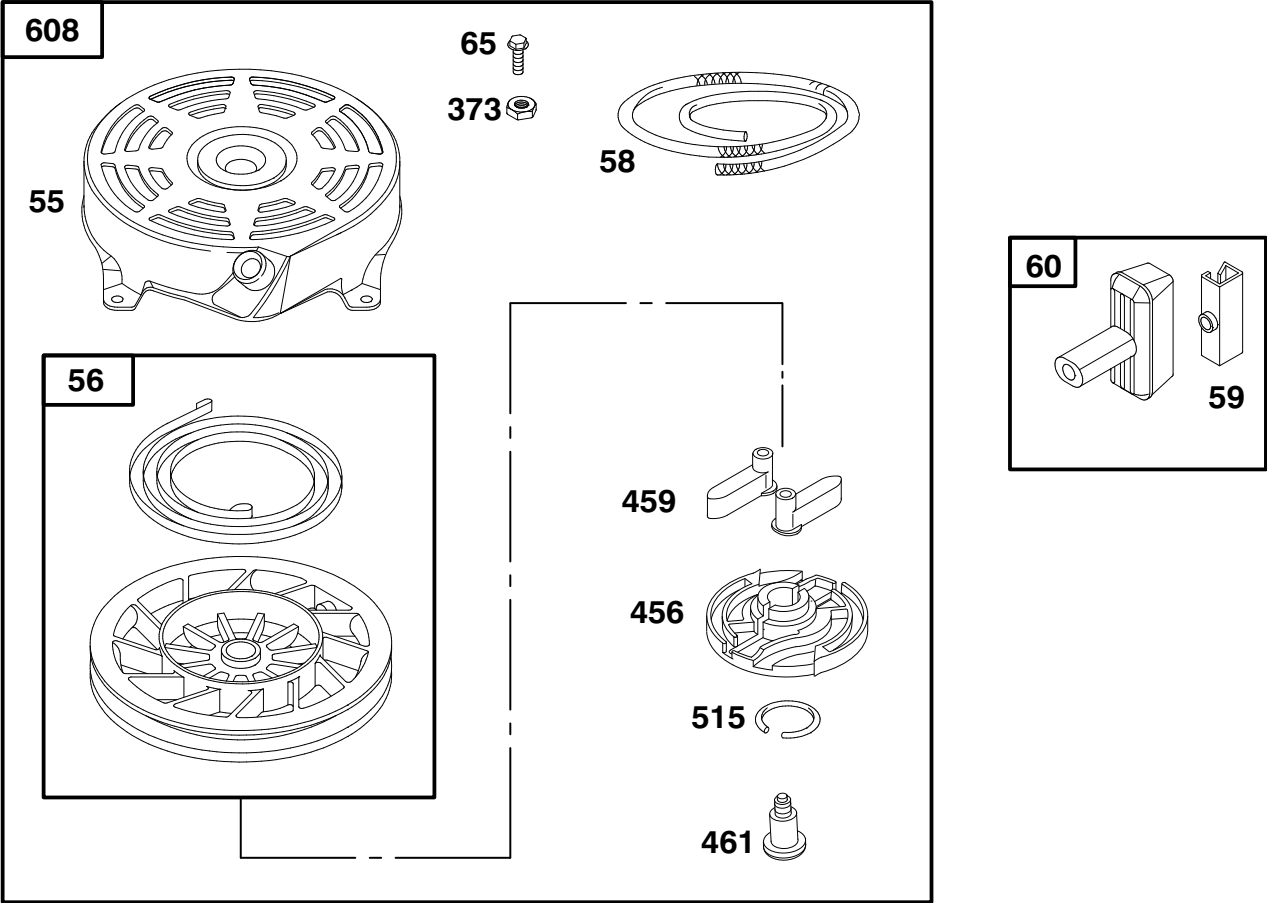


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-1767-E1

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
55	497440	Housing – Rewind Starter	1	373	94908	Nut – Hex.	1
56	498144	Pulley – Starter	1	456	281503	Retainer – Spring	1
58	280399	Rope – Starter	1	459	281505	Pawl – Ratchet	1
59	224467	Insert – Starter Grip	1	461	94943	Screw – Shoulder	1
60	493926	Grip – Starter Rope	1	515	263073	Spring – Friction	1
65	94904	Screw – Hex.	1	608	497680	Starter – Rewind	1

    Obtain Parts From Briggs & Stratton

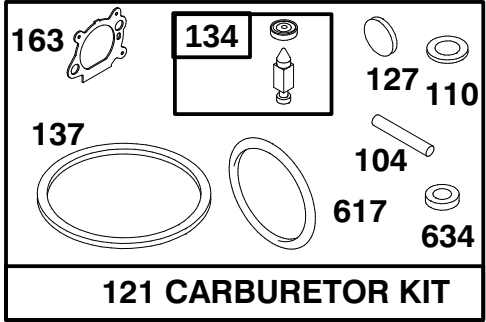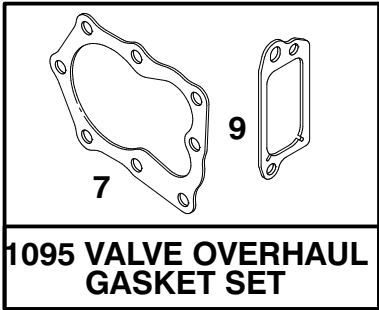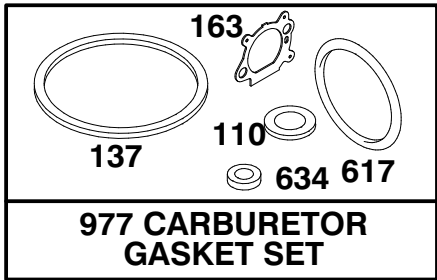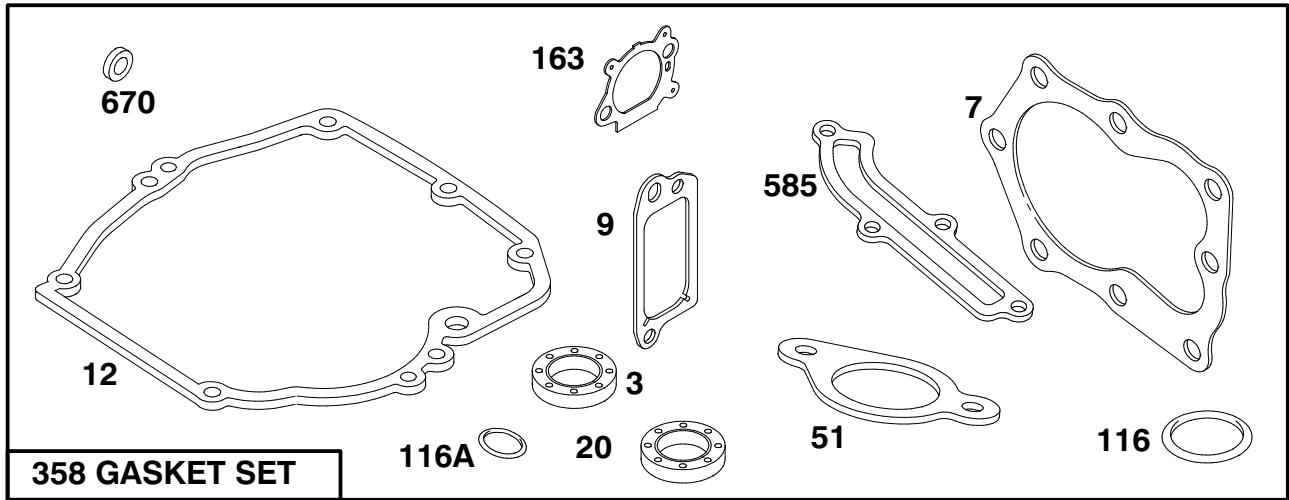

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-1767-E1

Ref. No.	Part No.	Description	No. Used
★3	299819	Seal – Oil	1
†★7	272916	Gasket – Cylinder Head	1
†★9	272481	Gasket – Breather	1
★12	272198	Gasket – Crankcase	1
★20	399781	Seal – Oil	1
★51	272199	Gasket – Intake	1
●104	231371	Pin – Float Hinge	1
◆◆110		Washer – Bowl (Sold in Kit Only).	1
★116	280393	Seal – O Ring	1
★116A	280966	Seal – O Ring	1
121	498260	Carburetor Kit	1
●127		Plug – Welch (Sold in Kit Only).	1

Ref. No.	Part No.	Description	No. Used
●134	398188	Kit – Needle/Seat	1
◆◆137		Gasket – Bowl (Sold in Kit Only).	1
◆◆★163	272653	Gasket – Air Cleaner	1
358	497316	Gasket Set	1
★585	272238	Gasket – Breather	1
◆◆617	270344	Seal – Intake Manifold	1
◆◆634		Washer – Foam (Sold in Kit Only).	1
★670	493823	Spacer – Bracket	2
977	498261	Gasket Set – Carburetor	1
1095	498528	Gasket Set – Valve Overhaul	1

● Included in Carburetor Kit–Part No. 498260.
 ◆ Included in Carburetor Gasket Set–Part No. 498261.
Obtain Parts From Briggs & Stratton

★ Included in Gasket Set–Part No. 497316.
 † Included in Valve Overhaul Gasket Set–Part No. 498528.

Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
14-9959	4	2	2	Wheel-ASM
16-5979	1	5	1	Housing-Deck
19-4050	2	29	2	Knob
26-0672	7	4	1	Bolt-Blade
27-6230	1	24	2	Bolt-Wheel
27-6230	4	1	2	Bolt-Wheel
27-6250	1	25:2	4	Bushing
27-6250	4	2:1	4	Bushing
40-1940	1	26	2	Washer
46-1113	1	25	2	Wheel & Tire ASM
47-2890	4	19:3	1	Bushing
47-6730	4	19:4	1	Seal-Oil
48-2060	4	19:1	1	Bearing-Needle
62-7550	7	1	1	Pulley-Driver
63-8590	4	9	2	Screw
65-2720	4	30	4	Ring-Retaining
65-4710	4	27	2	Ring-Friction
65-4720	4	4	2	Spring-Compression
65-4740	4	5	4	Washer-Thrust
65-4750	4	29	2	Gear-Pinion
65-4760	4	28	2	Washer
65-5210	1	15	2	Screw-Tf
66-6040	4	7	1	Key-Locking RH
66-6050	4	6	1	Key-Rocking LH
71-7630	2	7	1	Cap-Throttle
71-7740	4	26	1	Spring
71-7770	4	20	2	Plate-Securing
71-7820	1	28	1	Pivot
71-7840	4	15	1	Rod-Trigger
71-7860	1	14	1	Grip-Upper
71-7870	1	19	1	Grip-Lower
71-7890	1	6	1	Guide-Belt
71-7900	1	11	1	Cap-Bolt LH
71-7910	1	16	1	Cap-Bolt RH
71-7920	1	22	1	Cover-Belt
71-7930	1	17	1	Trigger-HOC
71-7940	7	3	1	Retainer-Blade
71-7960	7	2	1	Guide-Belt Engine
71-7970	4	23	1	Rod-Link
71-7980	4	22	1	Indicator-HOC
71-7990	1	4	1	Ramp-Discharge
71-8040	2	12	1	Plate-Throttle
71-8060	4	11	2	Spring-Trigger
71-8080	4	10	1	Saddle-HOC
71-8090	2	31	1	Mount-Handle LH
71-8100	2	30	1	Mount-Handle RH
71-8130	2	25	1	Bracket-Control
71-8310	2	1	1	Spring-Compression
71-8450	4	24	1	Cover-Spring
71-8580	1	8	2	Spacer-Door
71-8830	1	2	2	Retainer-ASM
71-9450	4	17	1	V Belt
71-9460	5	5	1	Bag-Grass
71-9470	5	3	1	Door-Bag
71-9480	5	2	1	Handle-Door
71-9600	4	18	1	ASM-Gear Case
71-9800	1	9	1	Door-Discharge
71-9840	1	10	2	Spring-Door
71-9860	1	23	1	Decal-Deck
71-9861	2	4	1	Decal-Panel 4-Cycle
71-9900	5	4	1	Frame

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
74-1660	4	31	2	Cover-Wheel
74-1671	4	3	2	Spacer-Cover
82-8550	6	6	1	Shield-Muffler
92-2289	6	12	1	Plate-Logo
92-7729	2	47	1	Anchor-Cable
92-9677	4	16	1	Arm-Pivot LH
92-9680	4	19	1	Arm-Pivot RH
92-9812	7	8	1	Stiffener-Blade
92-9813	7	7	1	Blade
93-0243	6	10	1	Shroud
93-0339	2	8	1	Cover-Throttle
93-1116	2	41	1	Cable-Brake
93-1117	2	16	1	Control-Throttle
93-4105	1	31	1	Decal-Danger
93-4354	6	7	1	Decal-Engine
93-8470	6	4	1	Screw-Clamp
94-4367	2	36	1	Handle-Sp
94-6026	2	37	1	Decal-Instruction
94-9436	2	58	1	Panel-Control
95-2740	4	34	1	Retainer-Belt
95-4450	3	1	1	Bail-Traction
95-4453	2	48	1	Screw-Handle
95-4454	3	2	1	Bail-Brake
95-4457	2	51	1	Rope-Guide
95-9649	2	3	1	Cable-Traction
98-2039	4	18:1	1	Bracket - Traction
2210-249	6	3	1	Clamp-Casing
2210-316	6	9	1	Rope-Stop
302-26	4	19:2	2	Fitting-Grease
322-29	1	12	2	Screw-HH
3253-22	7	5	1	Washer-Lock
3256-1	2	49	1	Washer-Flat
3284-5	1	18	1	Pin-Groove
3290-378	2	2	1	Tie-Cable
3290-378	6	2	1	Tie-Cable
3296-5	1	27	2	Nut-Lock
3296-5	4	13	2	Nut-Lock
3296-73	2	15	2	Nut-Lock
32112-11	1	3	1	Nut
32112-13	4	8	1	Nut-Push
32144-4	1	1	10	Screw-TAP
32144-4	4	21	6	Screw-TAP
32144-4	7	6	2	Screw-TAP
32144-31	4	12	1	Screw
32144-70	1	20	1	Screw-TAP
32144-73	6	1	3	Screw-HWHTF
32144-97	1	13	2	Screw-PPH
32144-97	2	9	5	Screw-PPH
32144-98	2	11	4	Screw-PPH
32144-99	2	6	2	Screw-PPH
32144-102	6	5	3	Screw
32144-111	5	1	5	Screw - PPH
32144-121	6	11	2	Screw
32151-93	4	25	1	Ring-Grip

*Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you

are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

[illegible]

[illegible]