




MODEL NO. 03803-80001 & UP
MODEL NO. 03804-80001 & UP

PARTS CATALOG

REELMASTER® 6500D - 2WD/4WD
TRACTION UNIT

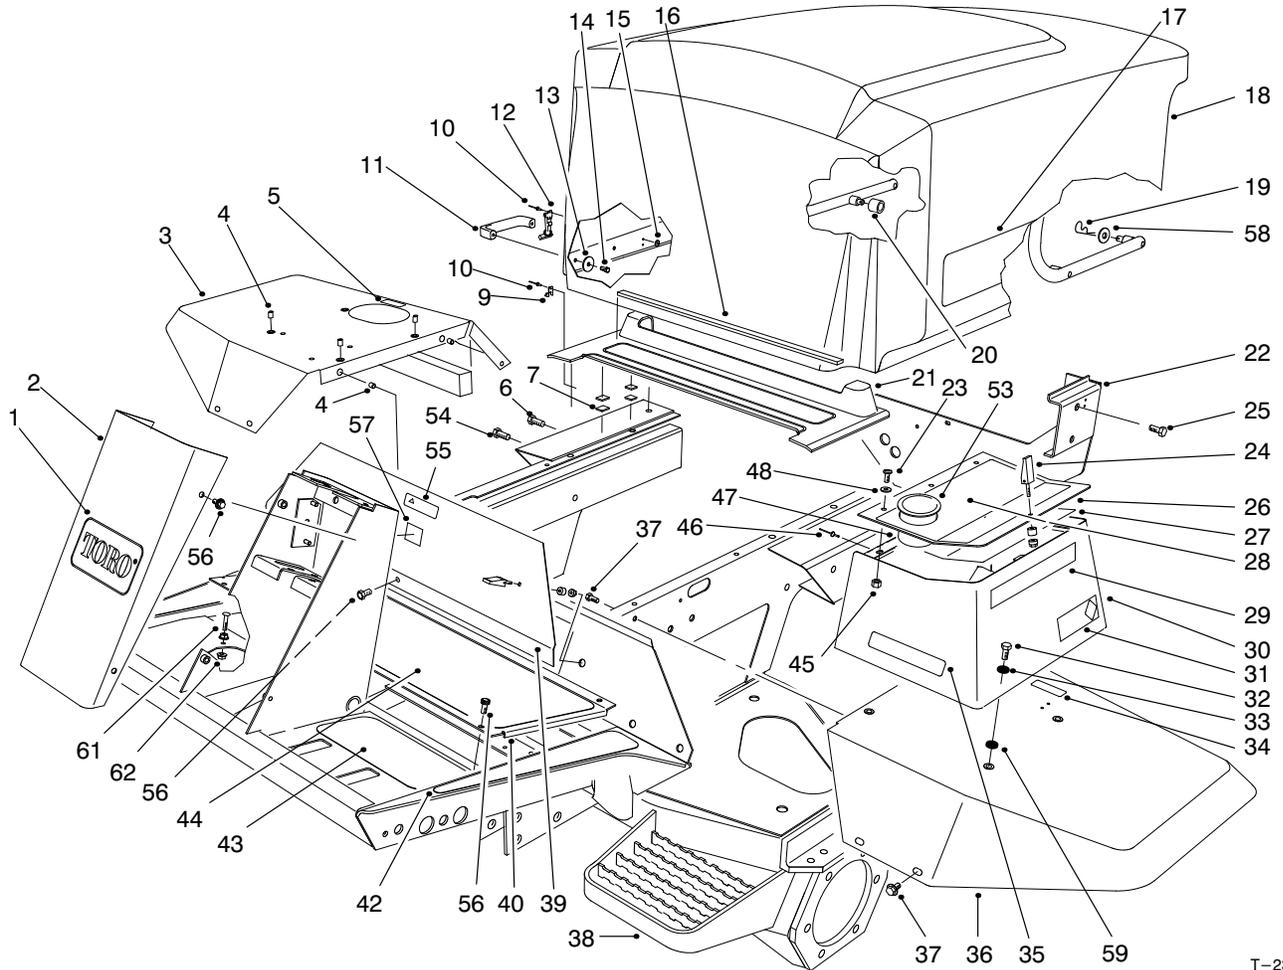


T-2366-7

FRAME & BODY ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	62-5550	Decal-Toro	1
2	93-7996	Cover-Tower	1
3	93-7579	Fender-RH	1
4	32148-7	Nut-Clinch	5
5	93-6686	Decal-Hydraulic Oil	1
5	88-1980	Decal-Hydraulic Oil (Japan)	1
6	33106-035	Screw-HHF	8
7	93-9155	Velcro	2
9	249-40	Keeper	1
10	3269-13	Rivet-Pop	4
11	65-5100	Handle-Hood	1
12	59-9740	Latch-Draw	1
13	3256-78	Washer-Flat	2
14	46-8091	Screw-Tapping	2
15	3269-10	Washer-Flat	2
16	92-7633	Strip-Bumper, Hood	1
17	92-7532	Decal-RM6500D	2

Ref. No.	Part No.	Description	No. Used
18	92-7511	Hood	1
19	3290-467	Pin-Cotter, Hair	2
20	93-7582	Hose	1
21	94-2617	Cover-Pump	1
22	98-8814	Frame-Rear (Incl. Ref. #1, Page 51)	1
23	3258-166	Screw	3
24	74-5950	Latch-Swell	3
25	33108-035	Screw	6
26	93-9180	Cover-Box, Tool	1
27	98-3728	Decal-Service	1
27	98-8135	Decal-Service (Danish)	1
27	98-8136	Decal-Service (Dutch)	1
27	98-8137	Decal-Service (Finnish)	1
27	98-8138	Decal-Service (French)	1
27	98-8139	Decal-Service (German)	1
27	98-8140	Decal-Service (Italian)	1
27	98-8141	Decal-Service (Norwegian)	1

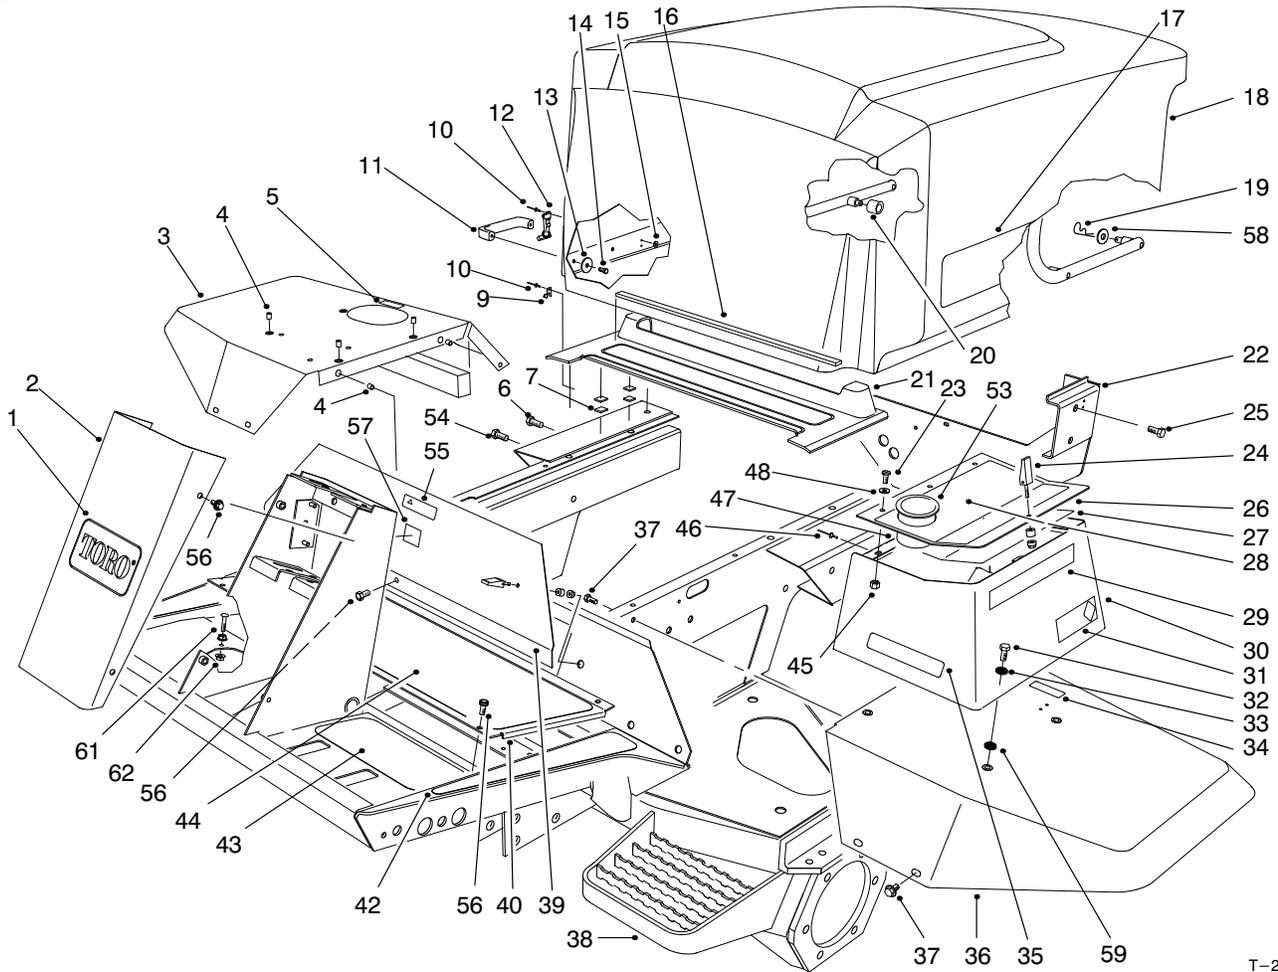


T-2366-7

FRAME & BODY ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
27	94-2943	Decal-Service (Portuguese)	1
27	94-2944	Decal-Service (Spanish)	1
27	94-2945	Decal-Service (Swedish)	1
27	94-2941	Decal-Service (Japan)	1
28	93-1262	Decal-Hillside	1
28	94-4572	Decal-Hillside (Japan)	1
29	72-3560	Decal-4WD (Model 03804)	1
30	75-5810	Box-Tool	1
31	93-0096	Decal-ACE	2
32	322-3	Screw-HH	4
33	3256-3	Washer-Flat	4
34	93-6680	Decal-Fuel, Diesel	1
34	84-2860	Decal-Fuel, Diesel (Japan)	1
35	93-6689	Decal-No Riders	1
35	84-3420	Decal-No Riders (Japan)	1
36	75-3860	Fender-LH	1
37	3234-14	Screw-Flange	10
38	94-9953	Frame-Front (Incl. Ref. #42, 43 & on Page 67, #21)	1

Ref. No.	Part No.	Description	No. Used
39	75-1390	Cover-Access, Front	1
40	75-1410	Plate-Access, Floor	1
42	93-7592	Tread-Footrest	2
43	75-0620	Tread-Foot, LH	1
*	75-0610	Tread-Foot, RH	1
44	75-0630	Tread-Foot, Center	1
45	32128-33	Nut-Flange	3
46	93-8744	Rivet-Pop	3
47	75-5780	Hinge-Cover	1
48	3256-1	Washer-Flat	3
53	94-1410	Holder-Can, Beverage	1
54	3234-18	Screw-Flange	2
55	93-9425	Decal-Danger	1
55	94-4579	Decal-Danger (Japan)	1
56	3234-7	Screw	9
57	93-7252	Decal-CE (Europe)	1
58	66-6480	Washer	2
59	66-2920	Washer	4
61	17-9420	Screw-Handle	1
62	32128-20	Nut-Lock	2


*Not Illustrated

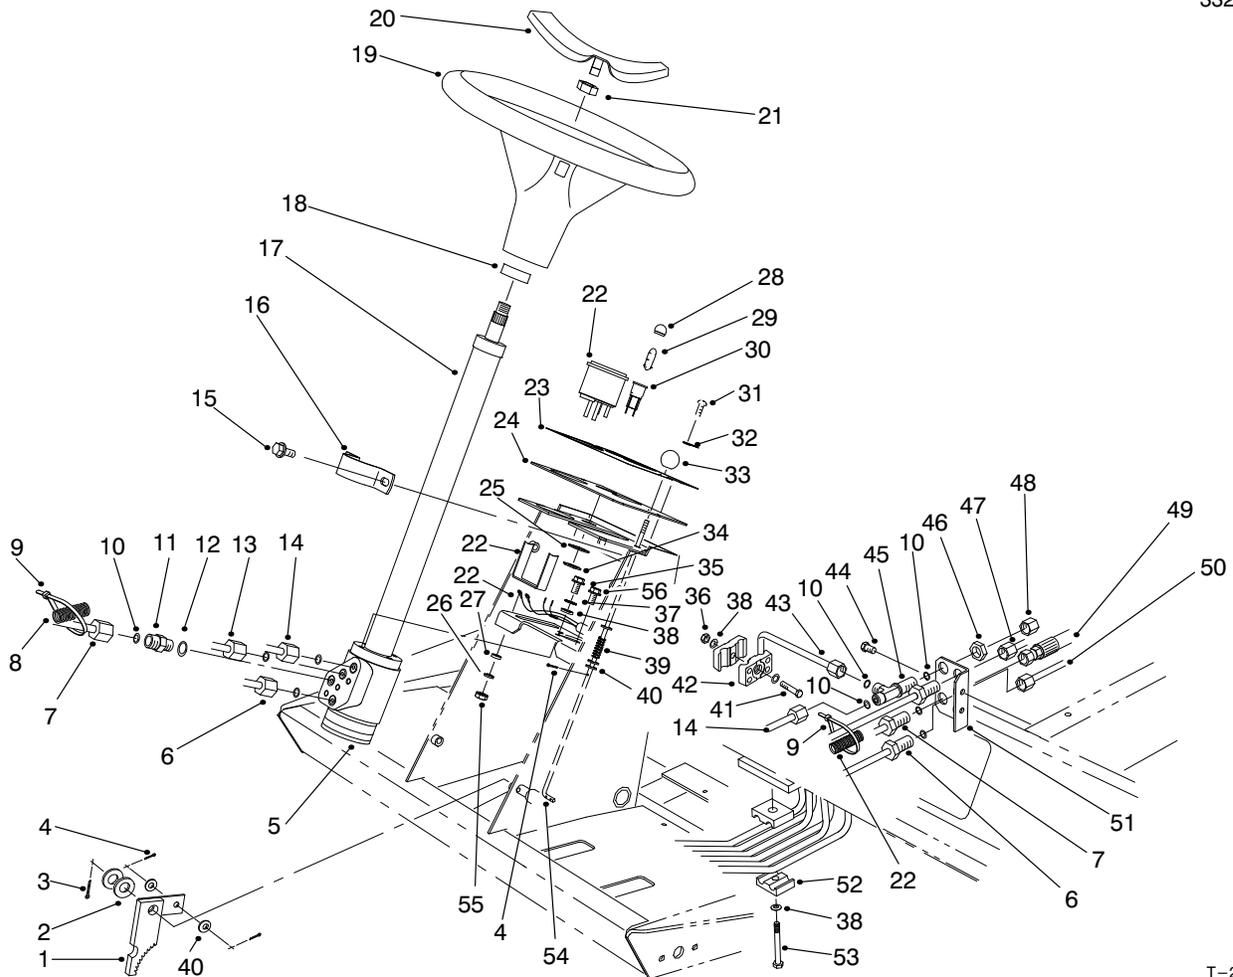

T-2447-3

STEERING TOWER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	63-7900	Rack	1	24	93-7998	Plate-Instrument	1
2	3256-26	Washer-Flat	2	25	218-536	Washer-Lock, Int. Tooth	1
3	3272-10	Pin-Cotter	3	26	3219-14	Washer-Lock	3
4	3272-5	Pin-Cotter	1	27	3256-14	Washer-Flat	2
5	94-9950	Asm-Valve, Steering	1	28	218-533	Lens-Red	1
6	94-3059	Tube-Steering, RH	1	29	93-7480	Bulb-LED	1
7	94-3061	Tube-Steering, Front, In	1	30	44-2210	Asm-Light, Warning (Incl. Ref. #25, 28, 29, & 34)	1
8	94-3090	Harness-Wire, Main	1	31	87-6620	Screw-Torx Pan Hd.	2
9	3290-378	Tie-Cable	7	32	3256-1	Washer-Flat	2
10	237-22	O-Ring	10	33	233-17	Knob	1
11	340-2	Adapter (Incl. Ref. #10 & 12)	4	34	218-535	Nut-Lock	1
12	237-42	O-Ring	4	35	33103-025	Screw-HHF	1
13	94-3060	Tube-Steering, Front LH	1	36	3296-47	Nut-Lock	1
14	94-3062	Tube-Steering, Front, Out	1	37	3255-8	Washer-Lock	1
15	3234-7	Screw	2	38	3256-23	Washer-Flat	6
16	75-2810	Bracket-Column, Steering	1	39	95-1821	Spring-Brake, Park	1
17	94-9951	Asm-Column, Steering	1	40	3256-22	Washer-Flat	5
18	21-9260	Cover-Dust	1	41	322-7	Screw-HH	1
19	94-3500	Wheel-Steering (Incl. Ref. #20)	1	42	56-7972	Clamp	2
20	88-3870	Cover	1	43	94-1447	Tube-Steering, Return	1
21	94-9952	Nut-Jam	1	44	32144-11	Screw-Thread Forming	2
22	93-4213	Asm-Speedometer (Incl. Ref. #26, 27 & 53)	1	45	340-68	Fitting-Tee, Bulkhead (Incl. Ref. #10)	1
23	93-1263	Decal-Tower	1	46	340-70	Nut-Lock, Bulkhead	4
23	94-4573	Decal-Tower (Japan)	1	47	92-7495	Asm-Tube, Steering Rear	1
				48	340-117	Cap-Fitting	1

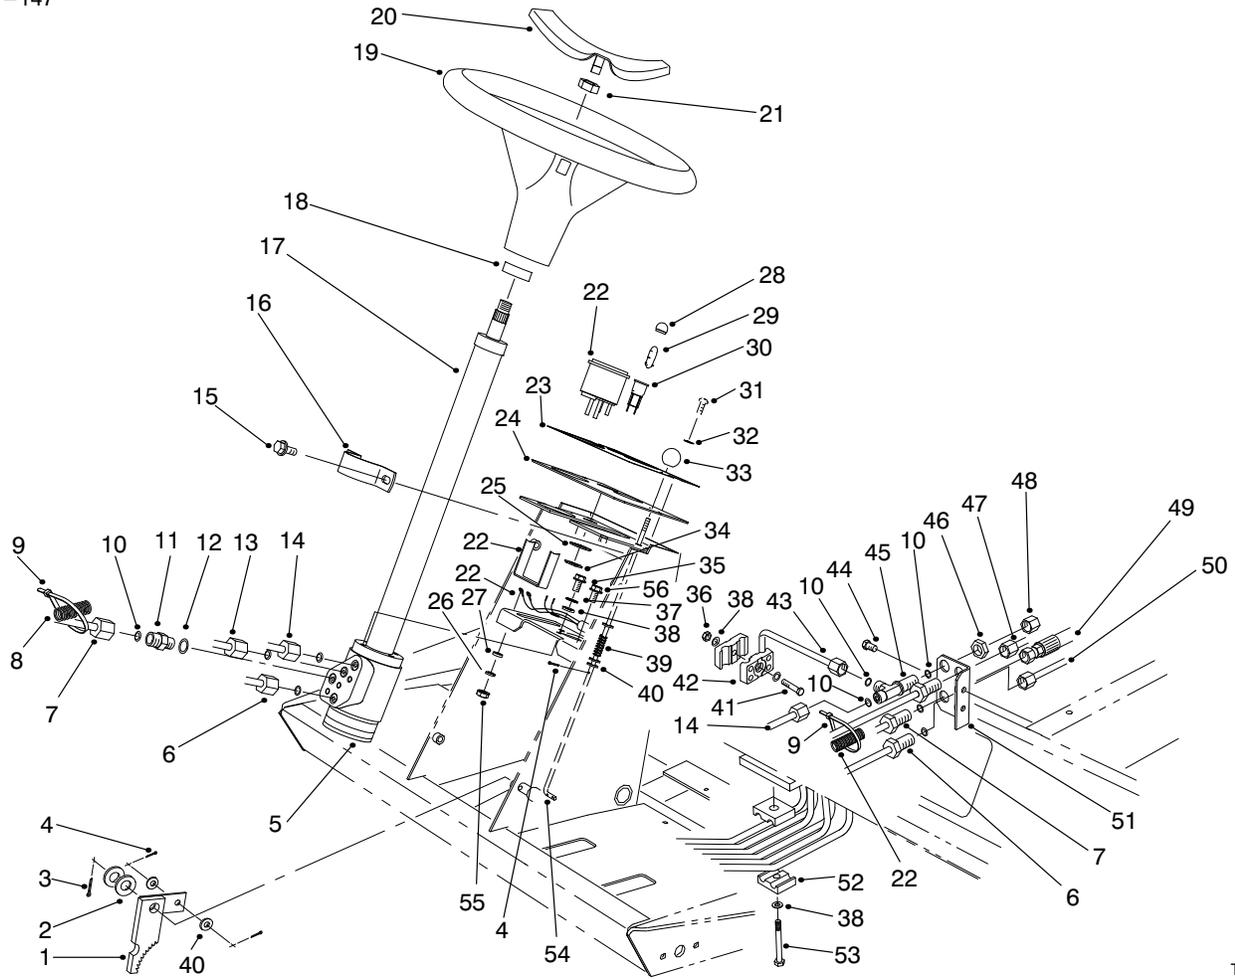


T-2447-3

STEERING TOWER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
49	92-7622	Hose-Steering	1
50	92-7494	Asm-Tube Steering Rear	1
51	92-7606	Bracket-Bulkhead	1
52	56-7973	Clamp	6

Ref. No.	Part No.	Description	No. Used
53	322-6	Screw-HH	3
54	75-1490	Rod-Brake, Park	1
55	3253-2	Nut-Hex.	9
56	33103-020	Screw-HHF	2

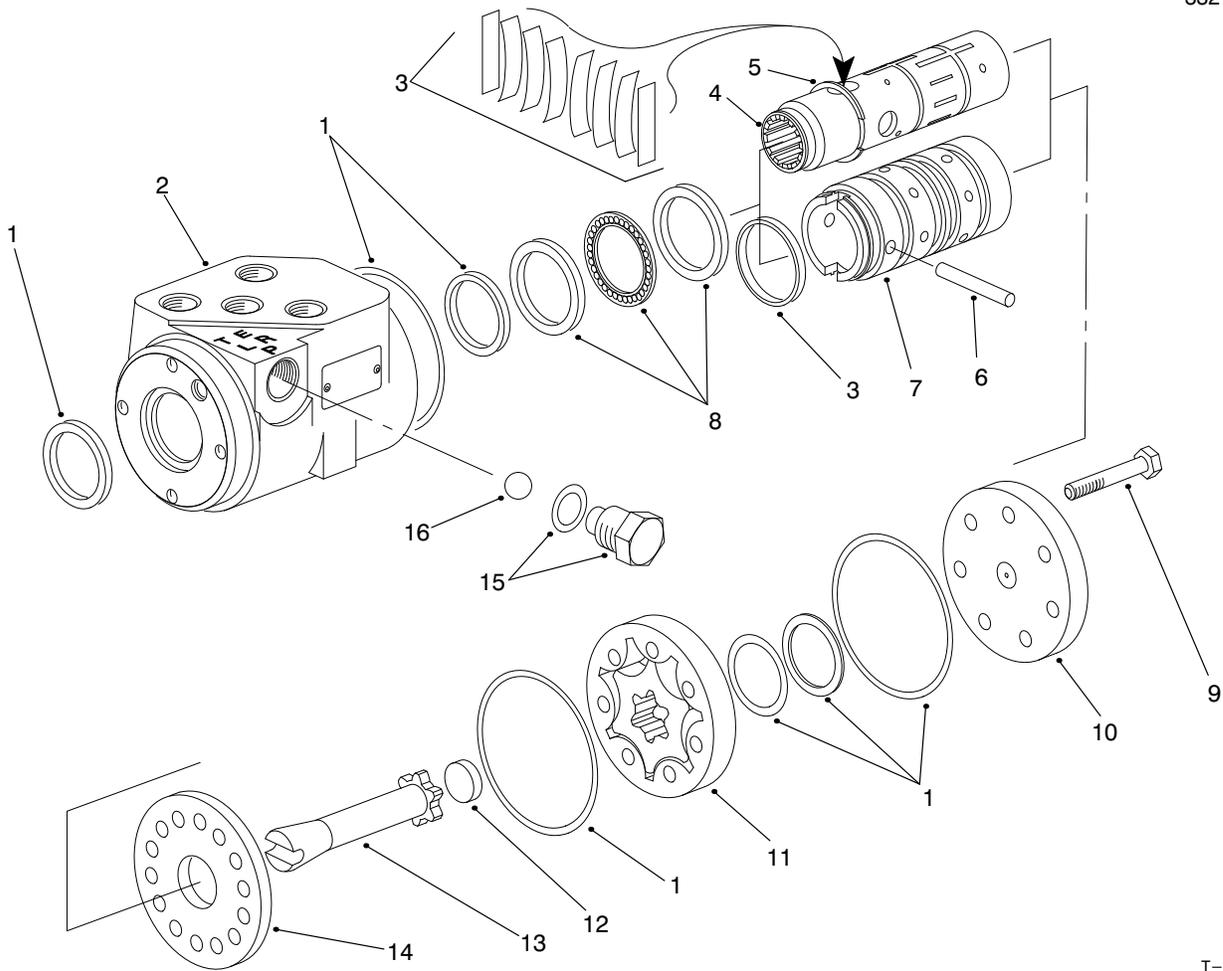


T-2312-3

STEERING VALVE ASSEMBLY NO. 94-9950

Ref. No.	Part No.	Description	No. Used
1	94-4099	Kit-Seal	1
†2		Housing	1
3	94-4095	Kit-Spring, Centering	1
†4		Spool	1
5	94-4098	Ring-Retaining	1
6	94-4094	Pin	1
†7		Sleeve	1
8	94-4096	Kit-Bearing	1

Ref. No.	Part No.	Description	No. Used
9	94-4088	Screw	7
10	94-4089	Cap-End	1
11	94-4090	Gerotor	1
12	94-4091	Spacer	1
13	94-4093	Drive	1
14	94-4092	Plate-Wear	1
15	94-4097	Asm-Plug	1
16	94-4100	Ball	1

† Not Serviced Separately.

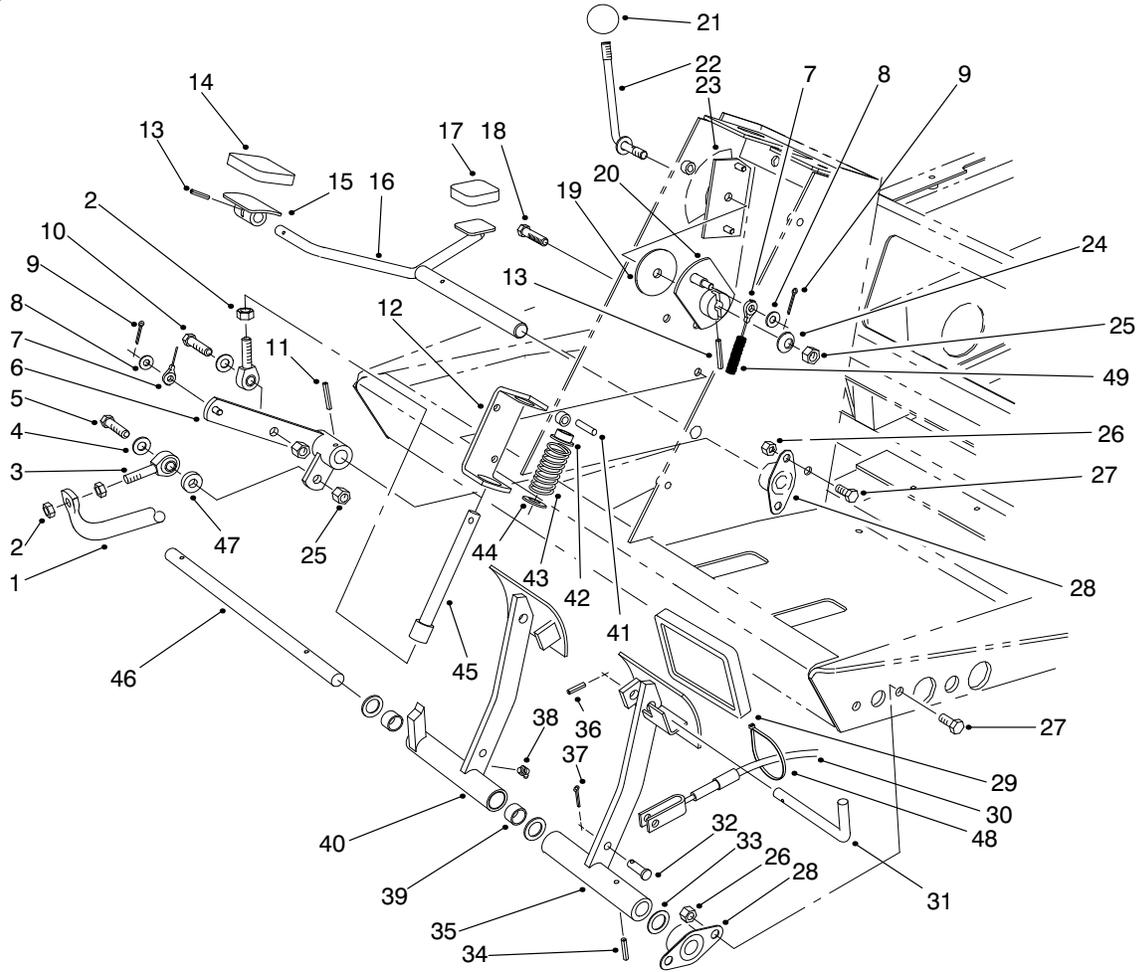


T-2063-4

TRACTION & BRAKE PEDAL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92-7531	Tube-Control, Pump	1
2	3220-3	Nut-Jam	3
3	2411-36	Bearing-Rod End	2
4	3256-24	Washer-Flat	2
5	323-9	Screw-HH	1
6	75-3270	Hub-Pivot, Traction	1
7	75-6580	Cable-Pedal	1
8	3256-22	Washer-Flat	2
9	3272-2	Pin-Cotter	2
10	323-7	Screw-HH	1
11	32121-6	Pin-Roll	1
12	92-7608	Bracket-Spring	1
13	32121-45	Pin-Roll	2
14	74-9100	Pad-Pedal, Forward	1
15	49-6440	Pedal-Accelerator	1
16	75-2970	Pedal-Traction	1
17	74-9110	Pad-Pedal, Reverse	1
18	32144-14	Screw-HH	2
19	75-6550	Disc-Friction	1
20	75-6510	Bracket-Lever	1
21	233-42	Knob	1
22	75-6490	Lever	1
23	93-6699	Decal-Fast/Slow	1
23	84-3500	Decal-Fast/Slow (Japan)	1
24	3290-461	Washer-Belleville	1
25	3296-39	Nut-Lock	3

Ref. No.	Part No.	Description	No. Used
26	32128-20	Nut-Lock	8
27	322-3	Screw-HH	8
28	256-236	Bearing-Flange	4
29	93-8742	Pad-Brake	2
30	92-7530	Asm-Cable, Brake LH	1
*	92-7529	Asm-Cable, Brake RH	1
31	63-7880	Pin-Latch, Brake	1
32	283-58	Pin-Clevis	2
33	3256-69	Washer-Flat	3
34	32121-16	Pin-Roll	1
35	75-1440	Pedal-Brake, LH	1
36	32121-50	Pin-Roll	1
37	3272-10	Pin-Cotter	2
38	302-60	Fitting-Grease	1
39	256-42	Bushing	2
40	75-1430	Pedal-Brake, RH (Incl. Ref. #38 & 39)	1
41	32121-11	Pin-Roll	1
42	92-7610	Retainer-Spring	1
43	60-5700	Spring-Compression	1
44	3256-5	Washer-Flat	1
45	92-7609	Shaft-Spring	1
46	75-1470	Pin-Pivot, Brake	1
47	5-0652	Spacer	1
48	3290-378	Tie-Cable	1
49	95-7151	Tube-Convolved	1

*Not Illustrated

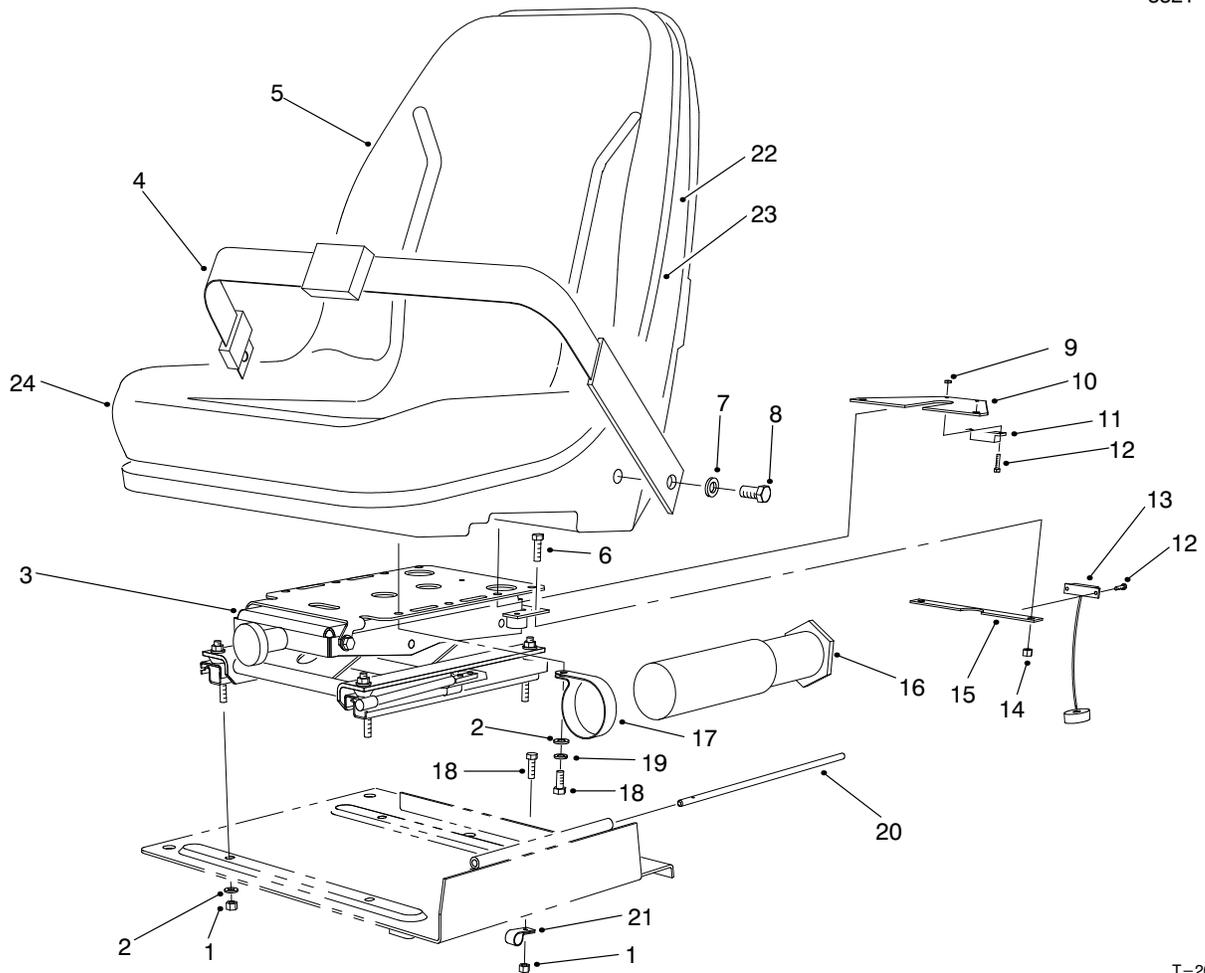


T-2064-2

SEAT FRAME & THROTTLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296-29	Nut-Lock	5
2	3256-23	Washer-Flat	8
3		Suspension-Seat	1
4	21-4191	Asm-Seat Belt (Model 03804 Only)	1
5	92-1180	Asm-Seat (Incl. Ref. #22-24)	1
6	323-4	Screw-HH	2
7	3253-6	Washer-Lock (Model 03804 Only)	2
8	3212-4	Screw (Model 03804 Only)	2
9	3296-54	Nut-Lock	4
10	75-4370	Bracket-Seat	1


Ref. No.	Part No.	Description	No. Used
11	92-8753	Magnet-Switch, Reed	1
12	3250-29	Screw	4
13	92-8001	Sensor-Switch, Reed	1
14	3296-39	Nut-Lock	2
15	75-4360	Bracket-Suspension, Seat	1
16	74-0720	Tube-Manual	1
17	2412-133	Clamp-R	2
18	322-3	Screw-HH	2
19	3253-4	Washer-Lock	4
20	75-3400	Shaft-Pivot, Seat	1
21	2412-93	Clamp-R	1
22	92-6534	Shell	1
23	351-78	Edging	1
24	92-6533	Kit-Cushion	1

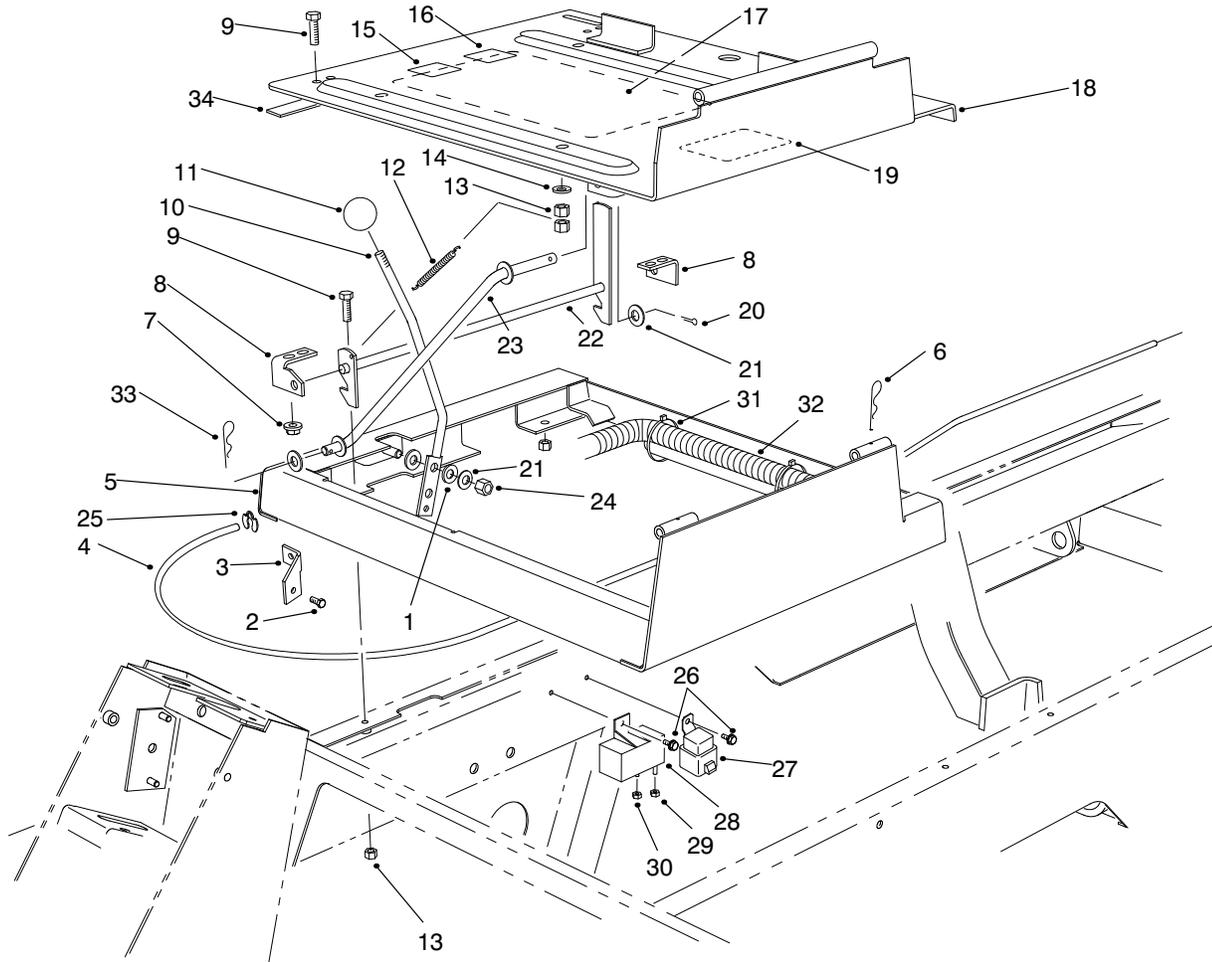

T-2065-2

SEAT FRAME & THROTTLE ASSEMBLY (Continued)


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	66-2920	Washer-Nylon	2	18	98-2350	Plate-Seat	1
2	49-2040	Screw-HH	1	19	98-8108	Decal-Rear Manifold Block	1
3	92-7396	Mount-Cable	1	19	94-2919	Decal-Rear Manifold (Japan)	1
4	92-7520	Cable-Throttle	1	20	3272-10	Pin-Cotter	1
5	98-2352	Frame-Seat	1	21	3256-24	Washer-Flat	3
6	3290-467	Pin-Cotter, Hair	1	22	98-2354	Latch-Seat	1
7	32128-25	Nut-Lock	4	23	75-3680	Rod-Seat	1
8	98-2353	Bracket-Latch, Seat	2	24	3296-39	Nut-Lock	1
9	322-3	Screw-HH	8	25	52-5910	Ring-Retaining	1
10	93-7598	Lever-Throttle	1	26	32144-10	Screw	2
11	233-42	Knob	1	27	70-1480	Relay	1
12	66-4190	Spring	1	28	76-5260	Relay-Glow Plug	1
13	3296-29	Nut-Lock	9	29	48-7880	Nut	1
14	3256-23	Washer-Flat	4	30	48-7890	Nut	1
15	63-9920	Decal-EEC 105 DBA	1	31	3290-378	Tie-Cable	2
16	85-6910	Decal-EEC 86 DBA	1	32	94-3090	Harness-Wire, Main	1
17	98-8110	Decal-Instructions, Clip	1	33	3290-307	Pin-Cotter, Hair	1
17	95-3477	Decal-Clip (Japan)		34	94-8146	Strip-Foam, Seat	1

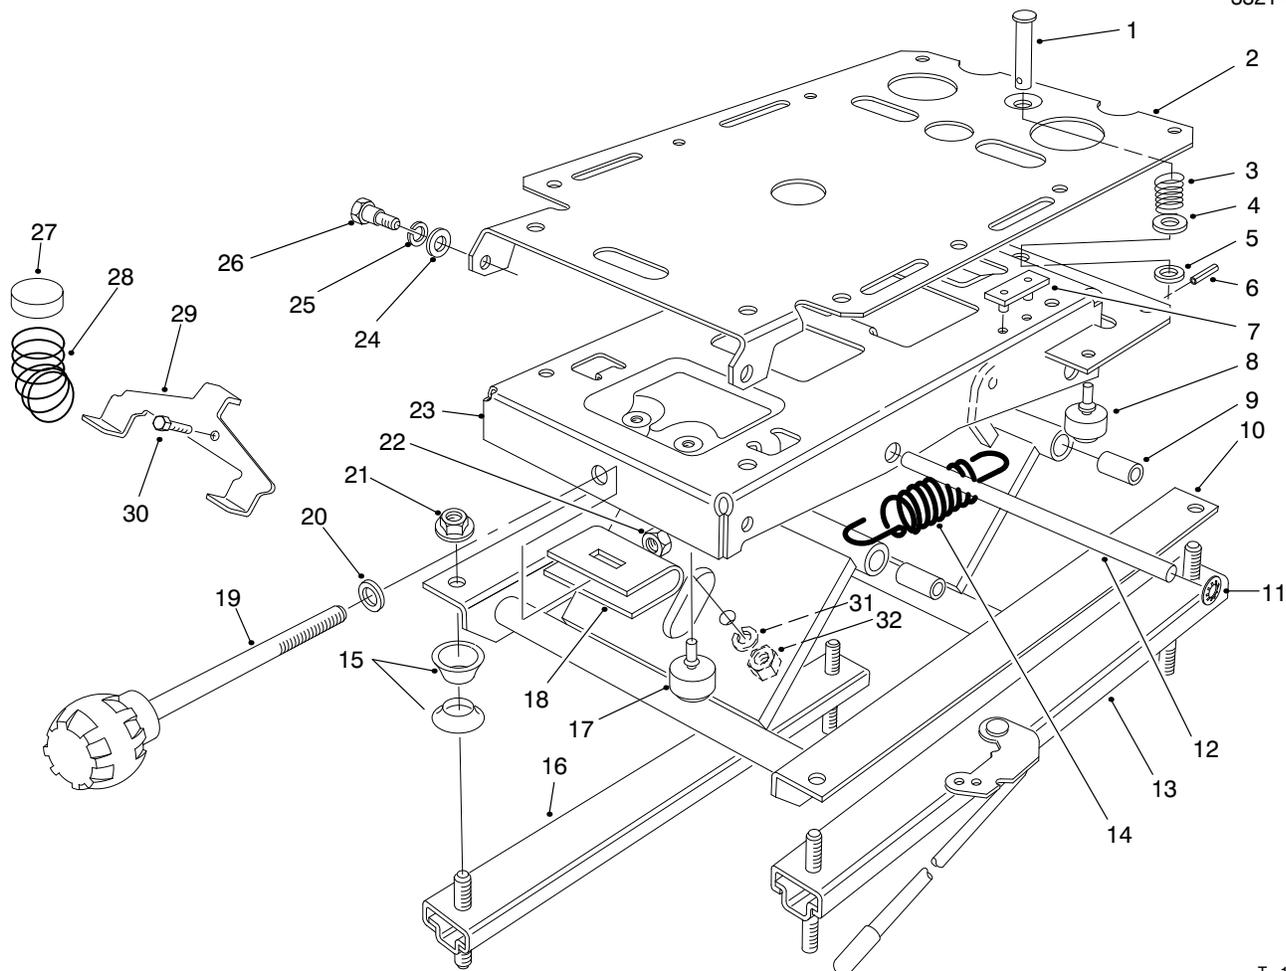

T-1031-1

SEAT SUSPENSION ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	80-4860	Pin-Clevis	1	17	66-8520	Bumper-Down Stop	2
2	75-3580	Plate-Mounting, Seat	1	18	77-2870	Weldment-Hanger	1
3	75-3530	Spring-Compression	1	19	76-1930	Knob-Tension Adjustment	1
4	3256-5	Washer-Flat	1	20	3256-46	Washer-Flat	1
5	3256-24	Washer	1	21	32128-26	Nut-Flange	4
6	75-3540	Pin-Roll	1	22	3296-44	Nut-Lock	1
7	75-3550	Bumper-Seat	2	23	75-3480	Weldment-Upper	1
8	76-2940	Bumper-Rubber	2	24	3256-26	Washer-Flat	2
9	76-1920	Bushing-Sleeve	4	25	3253-6	Washer-Lock	2
10	66-8610	Weldment-Lower	1	26	75-3510	Bolt-Shoulder	2
11	66-8560	Nut-Push	4	27	93-3164	Cap	2
12	76-1910	Shaft-Pivot	2	28	93-3163	Spring	1
13	82-9060	Adjuster W/Handle	1	29	93-3165	Bracket	1
14	76-1940	Spring-Extension	2	30	322-6	Screw-HH	1
15	66-9290	Spacer	6	31	3253-33	Washer-Lock	1
16	66-8530	Adjuster	1	32	3217-6	Nut-Jam	1

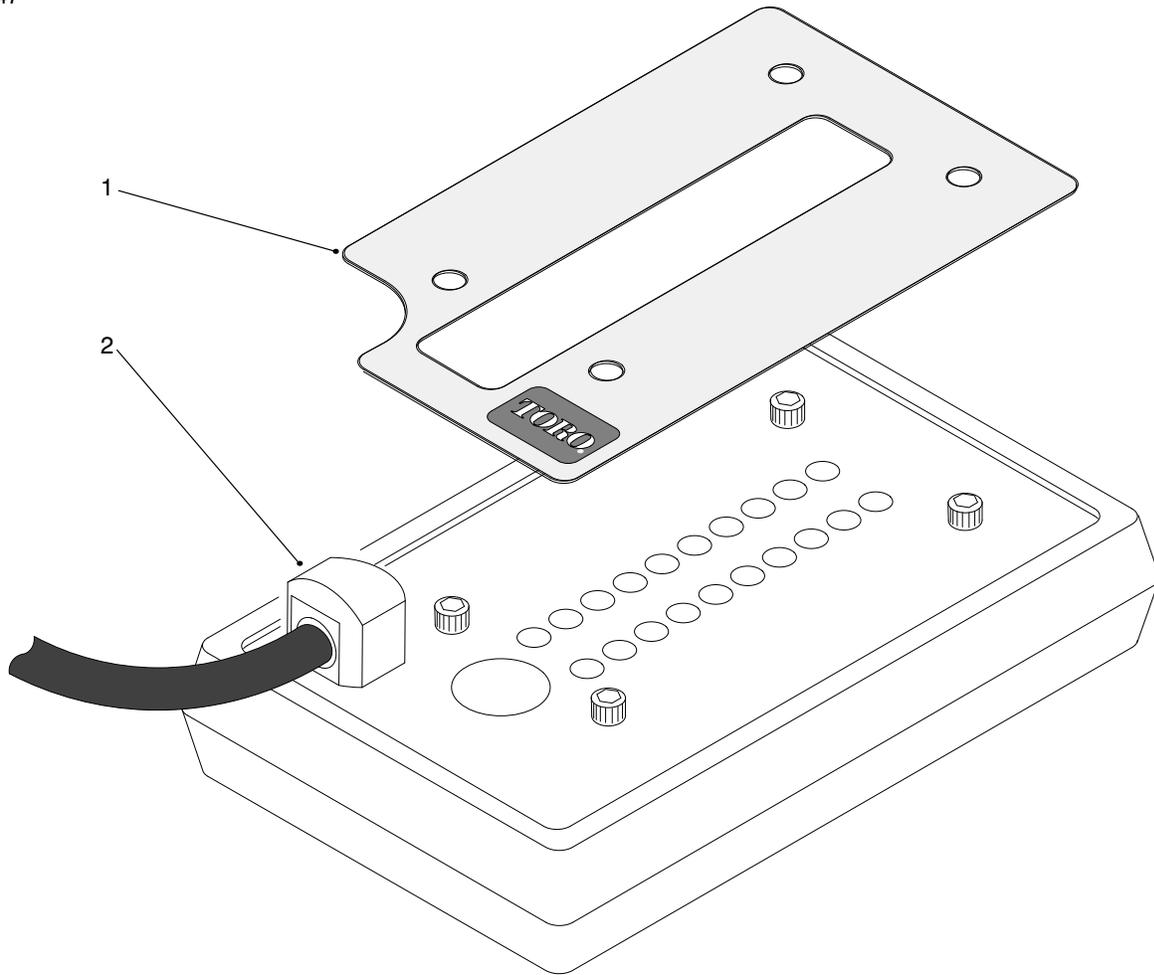

T-1458-1


DIAGNOSTIC – ACE DISPLAY ASSEMBLY


Ref. No.	Part No.	Description	No. Used
1	94-2837	Decal-Diagnostic ACE V 1.0	1
1	94-3354	Decal-Diagnostic ACE V 1.0 (Danish)	1
1	94-3355	Decal-Diagnostic ACE V 1.0 (Dutch)	1
1	94-3356	Decal-Diagnostic ACE V 1.0 (Finnish)	1
1	94-3357	Decal-Diagnostic ACE V 1.0 (French)	1
1	94-3358	Decal-Diagnostic ACE V 1.0 (German)	1

Ref. No.	Part No.	Description	No. Used
1	94-3359	Decal-Diagnostic ACE V 1.0 (Italian)	1
1	94-3361	Decal-Diagnostic ACE V 1.0 (Norwegian)	1
1	94-3362	Decal-Diagnostic ACE V 1.0 (Portuguese)	1
1	94-3363	Decal-Diagnostic ACE V 1.0 (Spanish)	1
1	94-3364	Decal-Diagnostic ACE V 1.0 (Swedish)	1
1	94-3360	Decal-Diagnostic ACE V 1.0 (Japan)	1
2	85-4750	Display-Diagnostic ACE	1

*Not Illustrated

ELECTRICAL SCHEMATIC

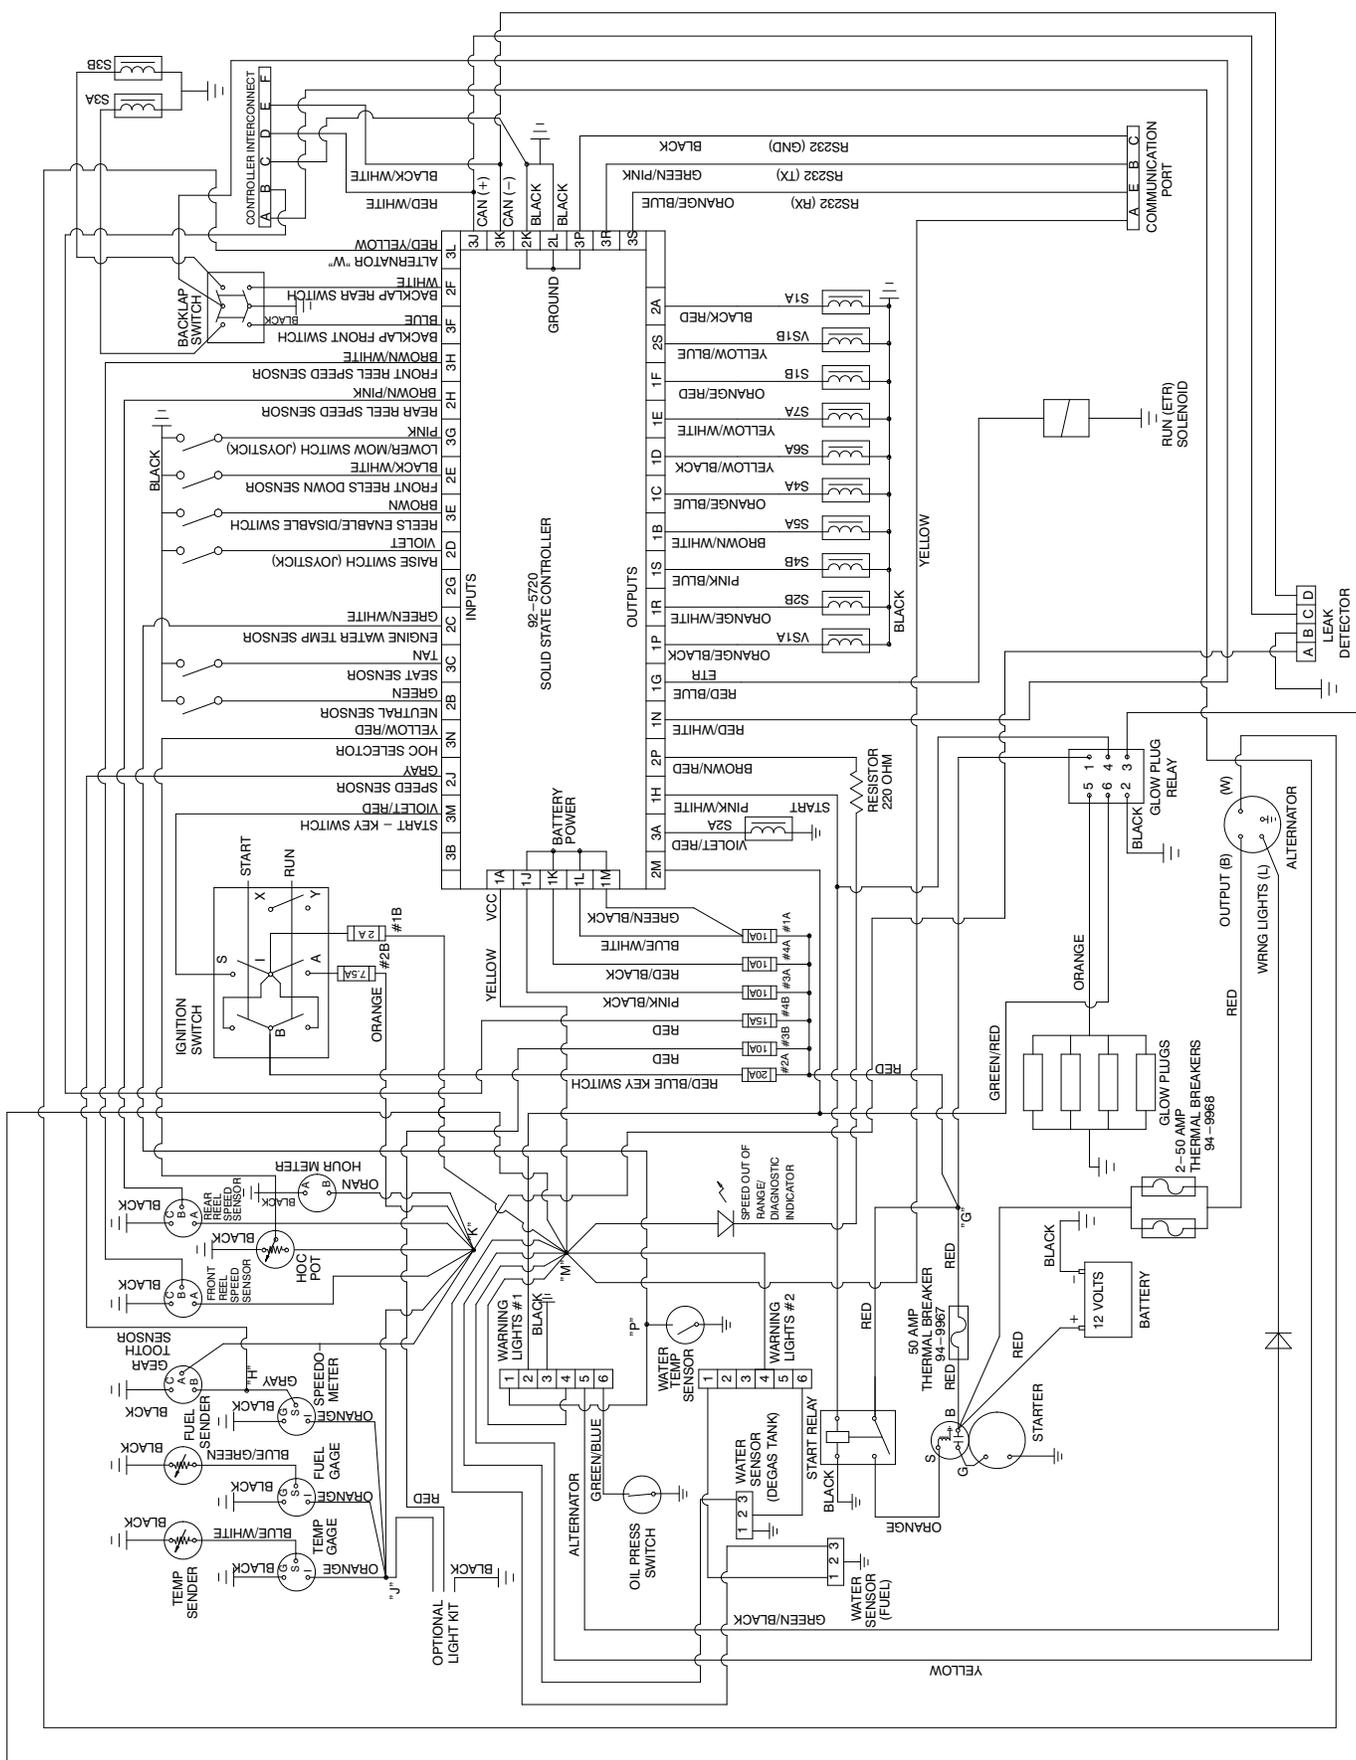

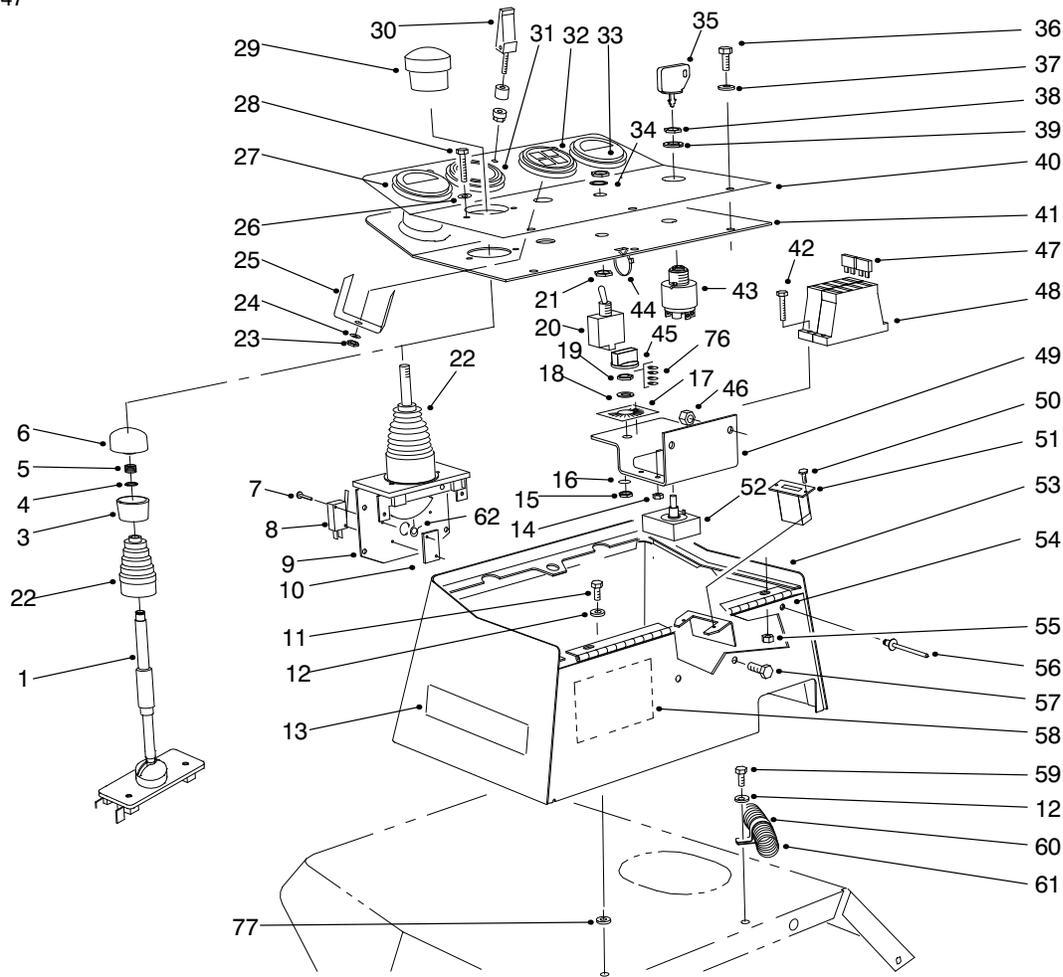


T-2066-6

CONTROL CONSOLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	94-8102	Tube-Interlock (Europe)	1
3	94-3055	Cap-Lower, Joystick (Europe)	1
4	94-3056	Snap Ring-Joystick (Europe)	1
5	94-3057	Spring-Compression (Europe)	1
6	94-3058	Cap-Upper, Joystick (Europe)	1
7	3290-93	Screw-HH	4
8	94-8104	Switch-Micro	2
9	98-2195	Lever-Control (Incl. Ref. #7-8, 10, 22 & 29)	1
9	93-7183	Lift Control Kit (Europe) (Incl. Ref. #1-6, 7-8, 10 & 22)	1
10	3290-354	Plate-Nut	2
11	322-3	Screw-HH	2
12	3256-23	Washer-Flat	3
13	93-6689	Decal-No Riders	1
13	84-3420	Decal-No Riders (Japan)	1
14	3296-2	Nut-Lock	1
15		Nu-Lock	1
16		Washer-Lock	1
17	93-1268	Decal-HOC Selector	1
17	94-4575	Decal-HOC Selector (Japan)	1

Ref. No.	Part No.	Description	No. Used
18	3254-6	Washer-Lock	1
19	3220-24	Nut-Lock	1
20	75-1010	Switch (Incl. Ref. #21, 34 & 74-75)	1
21	218-498	Nut-Hex.	2
22	94-8103	Boot-Control, Lift	1
23	3217-26	Nut	1
24	3254-1	Washer-Lock	1
25		Clamp	1
26	3256-14	Washer-Flat	2
27	93-8497	Gauge-Fuel	1
28	3250-31	Screw-PH	2
29	3290-489	Knob-Control, Lift	1
30	74-5950	Latch-Swell	1
31	93-7484	Light-Warning Bank (Incl. Ref. #23-25 & 62-63)	1
32	93-7483	Light-Warning Bank (Incl. Ref. #23-25 & 62-63)	1
33	76-9060	Gauge-Temperature (Incl. Ref. #64-65)	1
34	218-589	Washer-Lock	1
35	63-8360	Key-Ignition	1
36	3258-166	Screw	3
37	3256-1	Washer	3
38	218-447	Nut-Hex.	1
39	218-446	Washer-Lock	1
40	93-1261	Decal-Console	1
40	94-4574	Decal-Console (Japan)	1

†Included in Main Wiring Harness

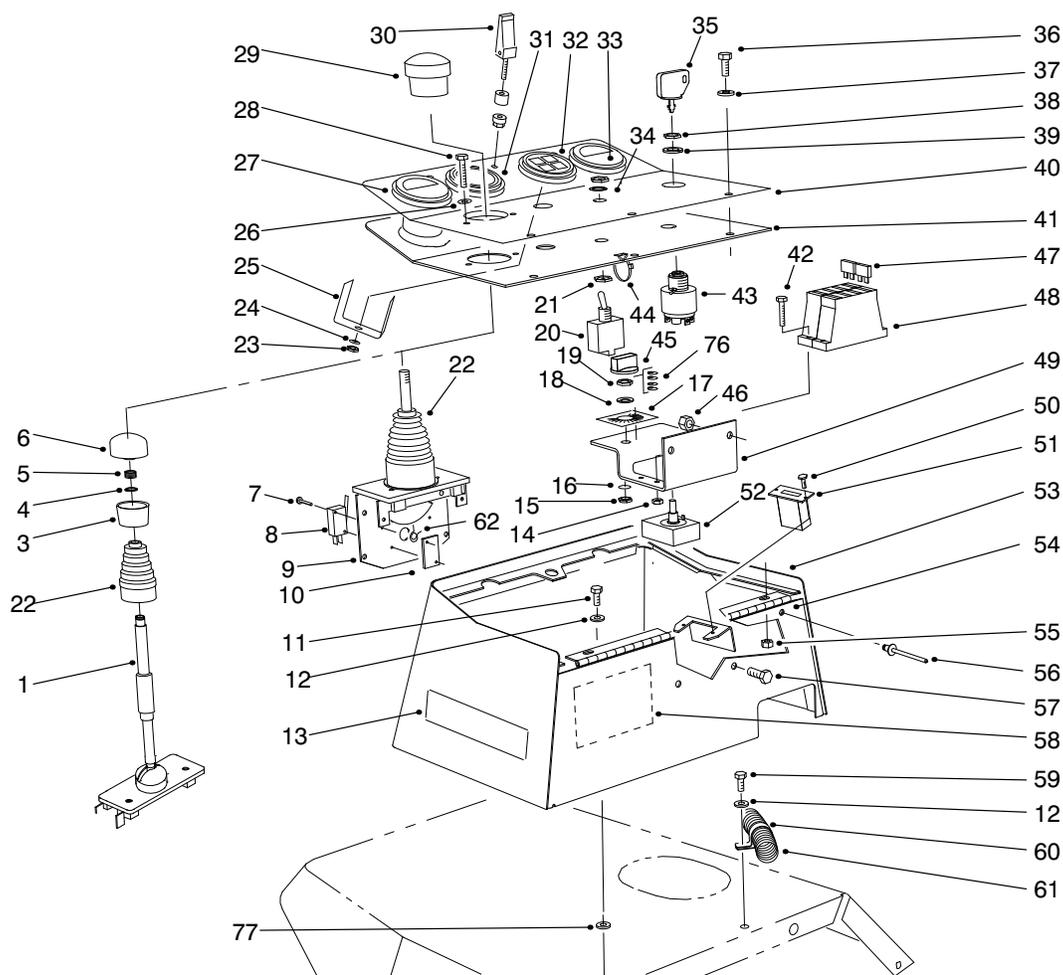

T-2066-6


CONTROL CONSOLE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
†41	94-1417	Cover-Box, Control	1	54	75-5780	Hinge-Cover	1
42	32105-13	Screw-HH	4	55	32128-33	Nut-Lock	3
43	27-2360	Switch-Ignition (Incl. Ref. #38 & 39)	1	56	93-8744	Rivet-Pop	3
44	3290-378	Tie-Cable	2	57	321-39	Screw-HH	2
45	85-4480	Knob	1	58	94-6349	Decal-Fuses	1
46	3296-42	Nut-Lock	2	58	94-3091	Decal-Fuses (Japan)	1
†47	218-594	Fuse-20A	1	59	322-5	Screw-HH	1
†47	218-578	Fuse-10A	4	60	2412-126	Clamp-R	1
†47	218-581	Fuse-15A	1	61	94-3090	Harness-Wire, Main	1
†47	218-574	Fuse-7.5A	1	62	93-3625	Spring-Return, Joystick	1
†47	94-6710	Fuse-2A	1	*63	87-6270	Socket-Light	4
48	67-7160	Block-Fuse	2	*64	219-17	Bulb	4
49	93-7587	Bracket-Fuse Block	1	*65	3217-25	Nut-Hex.	2
50	32144-18	Screw-HWH	2	*66	3253-15	Washer-Lock	2
51	75-6820	Hour Meter	1	*67	3217-29	Nut-Hex.	6
52	85-4470	Potentiometer (Incl. Ref. #18 & 19) Note: Replacement of this part requires recalibration of electronic controller by distributor after installation.	1	*68	3255-24	Washer-Lock, Ext. Tooth	3
53	75-5740	Box-Control	1	*69	3219-14	Nut-Hex.	8
				*70	3253-2	Washer-Lock	5
				*74	218-588	Screw	2
				*75	3255-19	Washer-Lock	2
				*	94-6343	Decal-Wire Identification #1	1
				76	237-7	O-Ring	4
				77	66-2920	Washer	3

*Not Illustrated


†Included in Main Wiring Harness

HYDRAULIC SCHEMATIC (Model 03803)

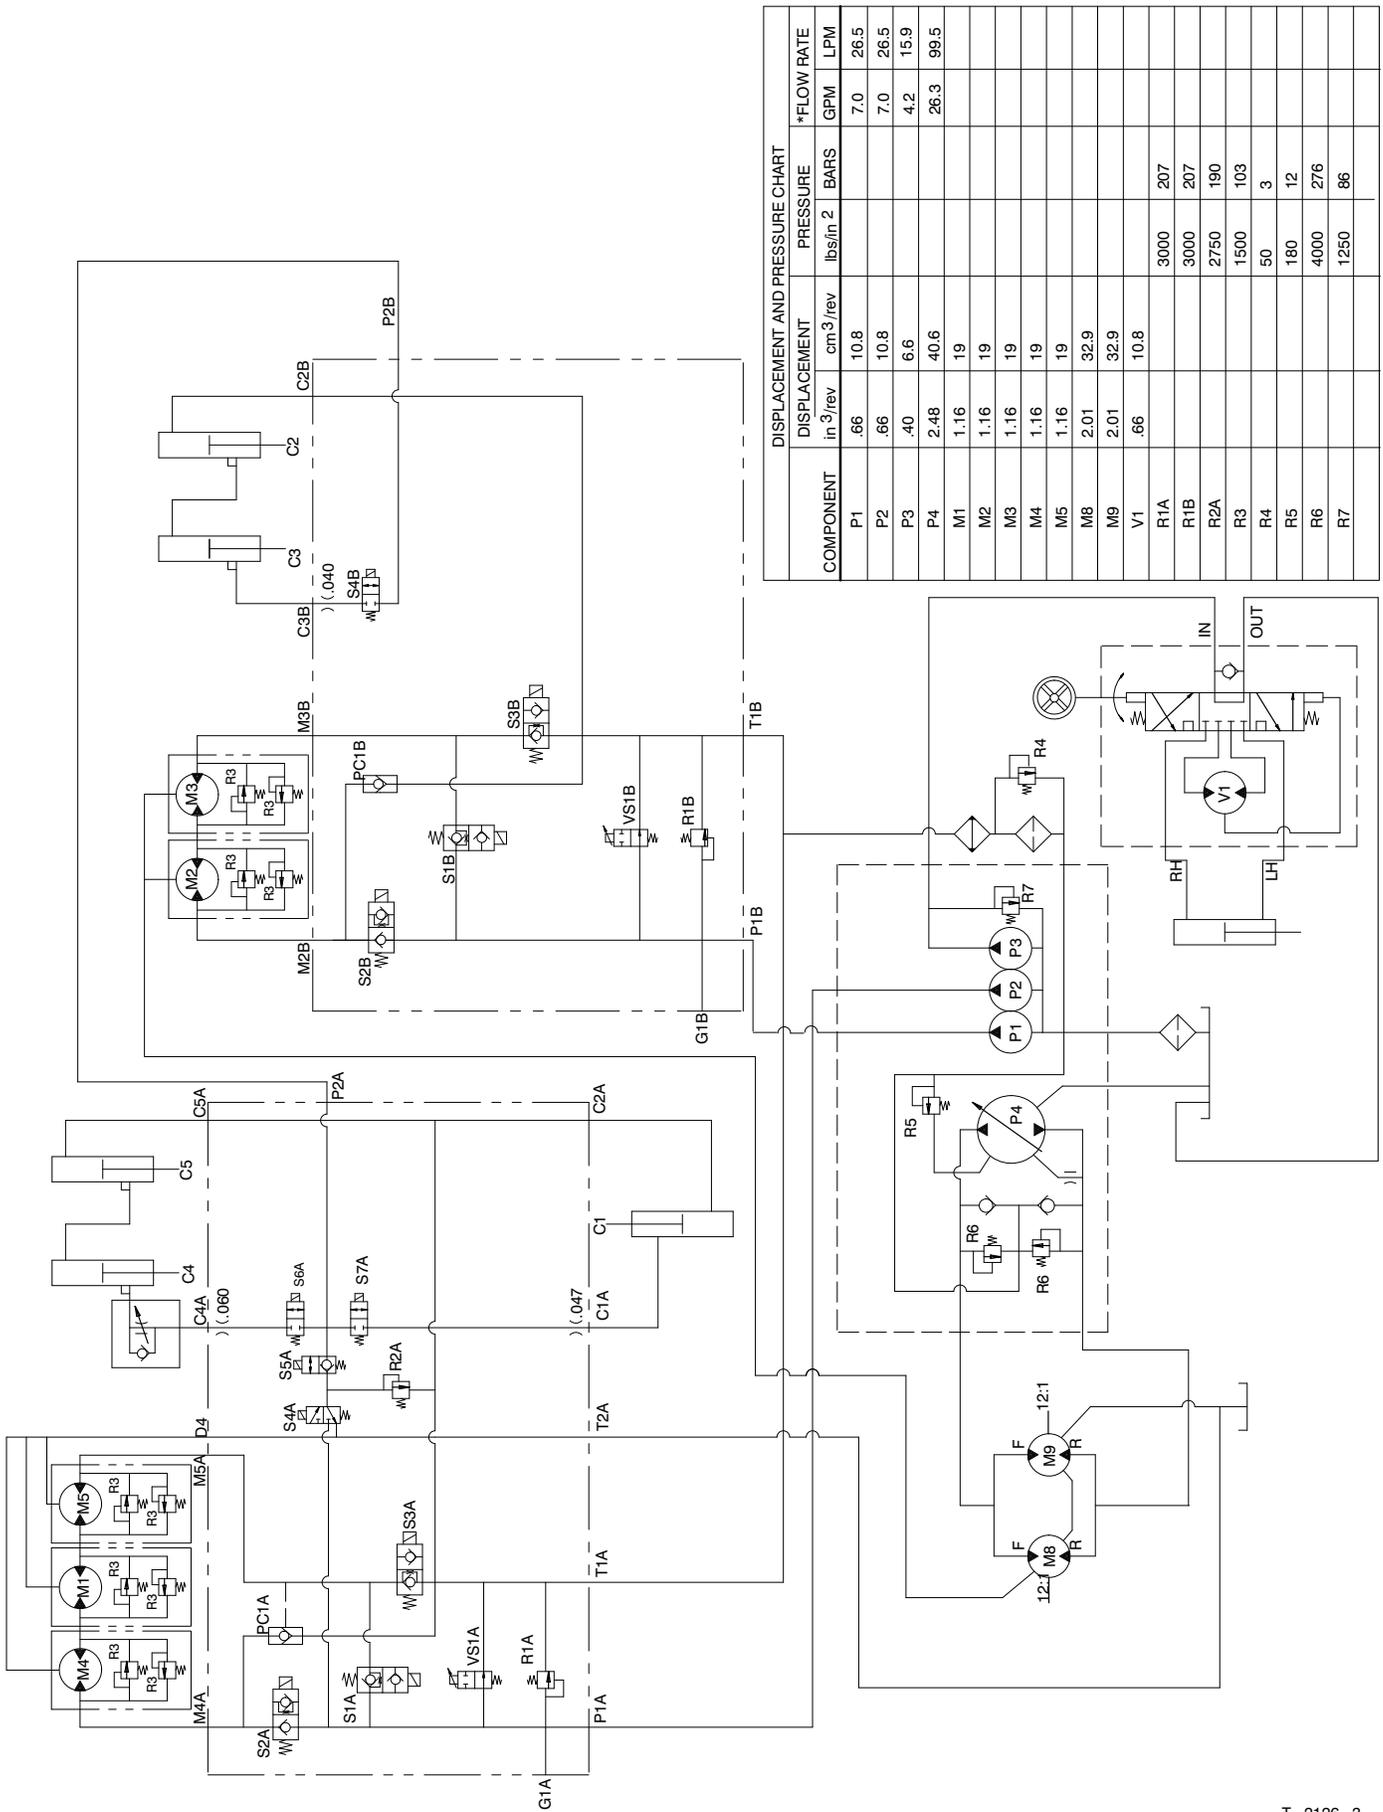


COMPONENT	DISPLACEMENT		PRESSURE		*FLOW RATE	
	in ³ /rev	cm ³ /rev	lbs/in ²	BARS	GPM	LPM
P1	.66	10.8			7.0	26.5
P2	.66	10.8			7.0	26.5
P3	.40	6.6			4.2	15.9
P4	2.48	40.6			26.3	99.5
M1	1.16	19				
M2	1.16	19				
M3	1.16	19				
M4	1.16	19				
M5	1.16	19				
M8	2.01	32.9				
M9	2.01	32.9				
V1	.66	10.8				
R1A			3000	207		
R1B			3000	207		
R2A			2750	190		
R3			1500	103		
R4			50	3		
R5			180	12		
R6			4000	276		
R7			1250	86		

HYDRAULIC SCHEMATIC (Model 03804)

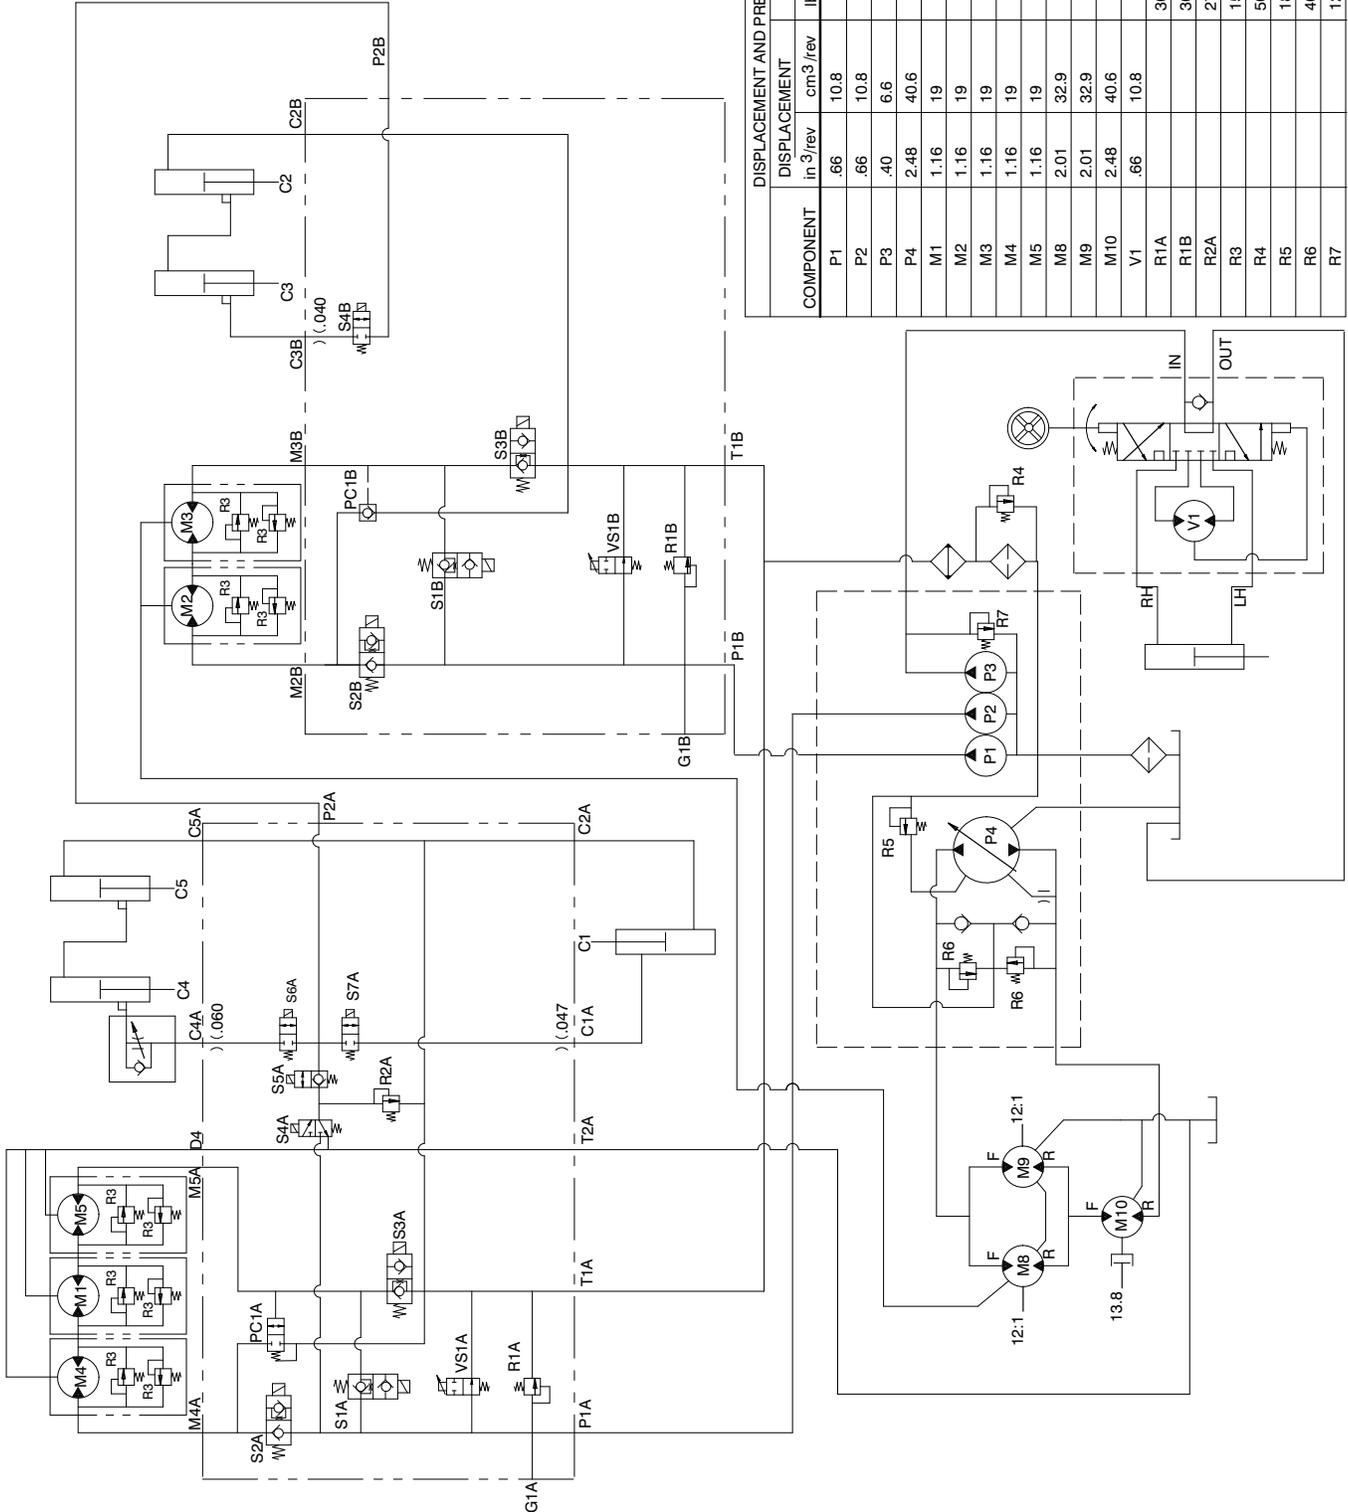

COMPONENT	DISPLACEMENT		PRESSURE		*FLOW RATE	
	in ³ /rev	cm ³ /rev	lbs/in ²	BARS	GPM	LPM
P1	.66	10.8	7.0	26.5		
P2	.66	10.8			7.0	26.5
P3	.40	6.6			4.2	15.9
P4	2.48	40.6			26.3	99.5
M1	1.16	19				
M2	1.16	19				
M3	1.16	19				
M4	1.16	19				
M5	1.16	19				
M8	2.01	32.9				
M9	2.01	32.9				
M10	2.48	40.6				
V1	.66	10.8				
R1A			3000	207		
R1B			3000	207		
R2A			2750	190		
R3			1500	103		
R4			50	3		
R5			180	12		
R6			4000	276		
R7			1250	86		

*FLOW RATE CALCULATED AT 2500 RPM AND 98% EFFICIENCY.

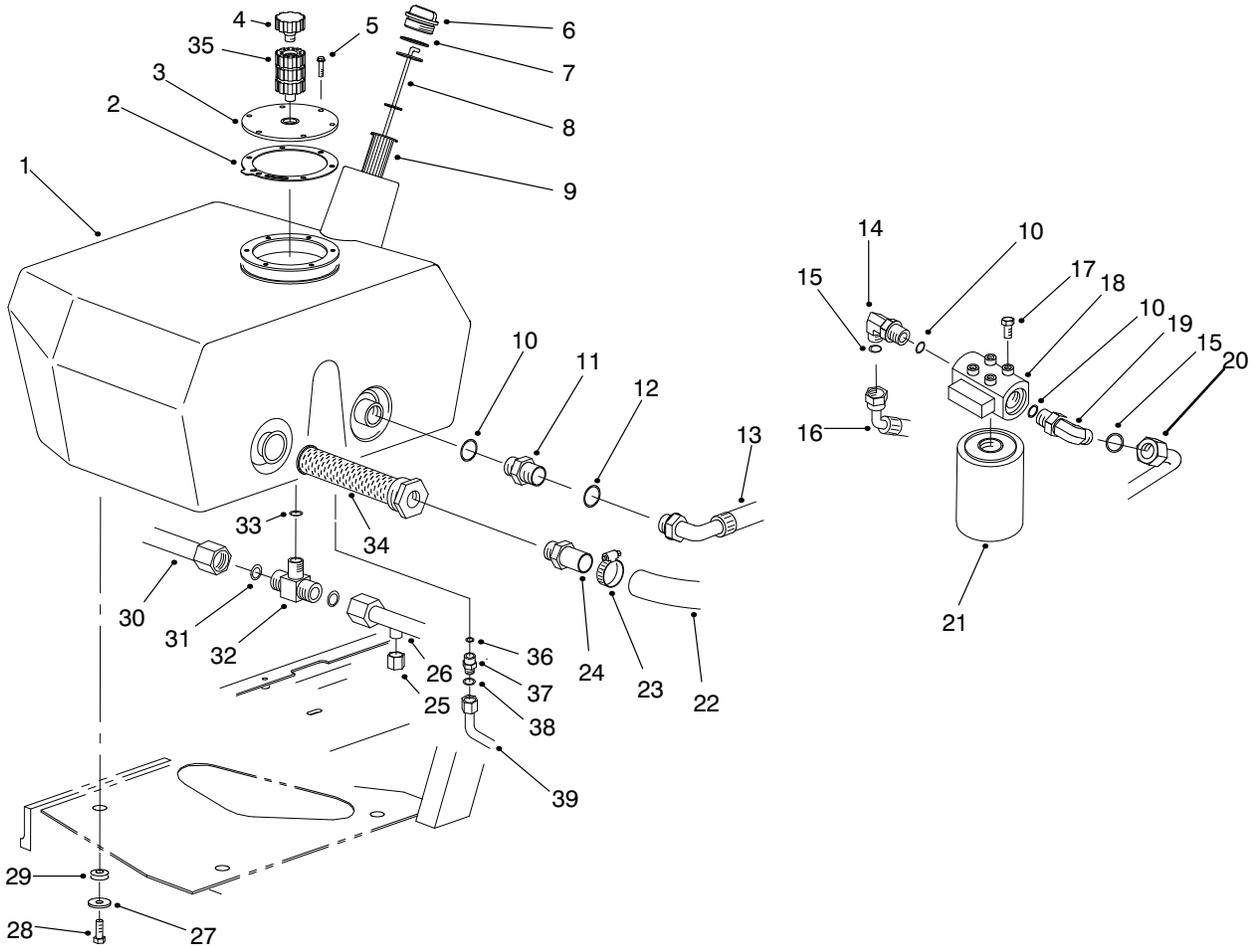


T-2067-1

HYDRAULIC FILTER & RESERVOIR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93-7488	Tank-Hydraulic	1
2	93-7499	Gasket-Flange	1
3	93-7588	Cover-Tank	1
4	68-6150	Breather-Air	1
5	33104-020	Screw-HHF	6
6	93-7498	Plug-Plastic	1
7	94-8166	O-Ring	1
8	75-3710	Dipstick	1
9	61-2790	Filter-Screen	1
10	237-81	O-Ring	3
11	340-9	Fitting-Hydraulic (Incl. Ref. #10 & 12)	1
12	237-58	O-Ring	1
13	92-7489	Hose-Return	1
14	340-139	Fitting-Elbow 90° (Incl. Ref. #10 & 15)	1
15	237-65	O-Ring	2
16	92-7490	Hose-Filter	1
17	3234-1	Screw	2
18	94-2620	Head-Filter (Incl. Ref. #21)	1
19	340-142	Fitting-Hydraulic 90° (Incl. Ref. #10 & 15)	1

Ref. No.	Part No.	Description	No. Used
20	92-7493	Hose-Filter	1
21	94-2621	Element	1
22	92-7465	Hose-Suction	1
23	2412-111	Clamp	1
24	92-7525	Fitting-Hose	1
25	92-7551	Cap-Fitting	1
26	94-1446	Tube-Drain	1
27	63-8410	Washer-Flat	3
28	33105-025	Screw-HHF	3
29	240-11	Grommet	3
30	92-7478	Tube-Motor, RH	1
31	237-30	O-Ring	2
32	340-157	Fitting-Tee (Incl. Ref. #31 & 33)	1
33	237-79	O-Ring	1
34	92-7527	Strainer-Suction	1
35	92-8020	Adapter-Breather	3
36	237-42	O-Ring	1
37	340-2	Adapter (Incl. Ref. #36 & 38)	1
38	237-22	O-Ring	1
39	94-1447	Tube-Steering, Return	1

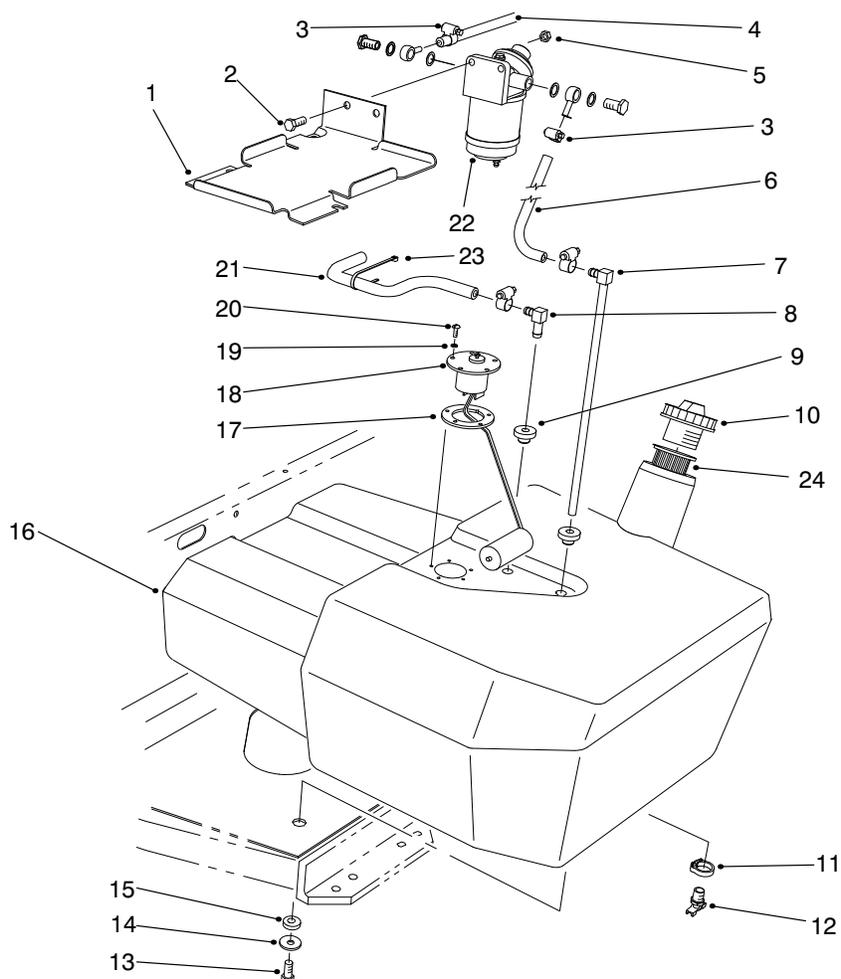


T-2068-1

FUEL TANK & FILTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	93-7974	Plate-Box, Battery	1	14	63-8410	Washer-Flat	3
2	33105-030	Screw-HHF	2	15	240-11	Grommet	3
3	2412-108	Clamp-Hose	4	16	92-7422	Tank-Fuel (Incl. Ref. #11 & 12)	1
4	63-7627	Hose-Fuel	1	17	62-7650	Gasket	1
5	33005-00	Nut-HF	2	18	63-7640	Sender-Fuel	1
6	92-7522	Hose-Fuel	1	19	3253-15	Washer-Lock	5
7	66-8121	Standpipe	1	20	32122-24	Screw	5
8	46-6550	Fitting-Connector	1	21	92-7521	Hose-Fuel	1
9	46-6560	Bushing	2	†22	76-5300	Asm-Filter, Fuel	1
10	93-3102	Cap-Fuel, Diesel	1	23	3290-378	Tie-Cable	3
11	2412-36	Clamp-Drain	1	24	61-2790	Filler-Screen	1
12	304-46	Fitting-Drain	1				
13	33105-025	Screw-HHF	3				

†Furnished with engine.

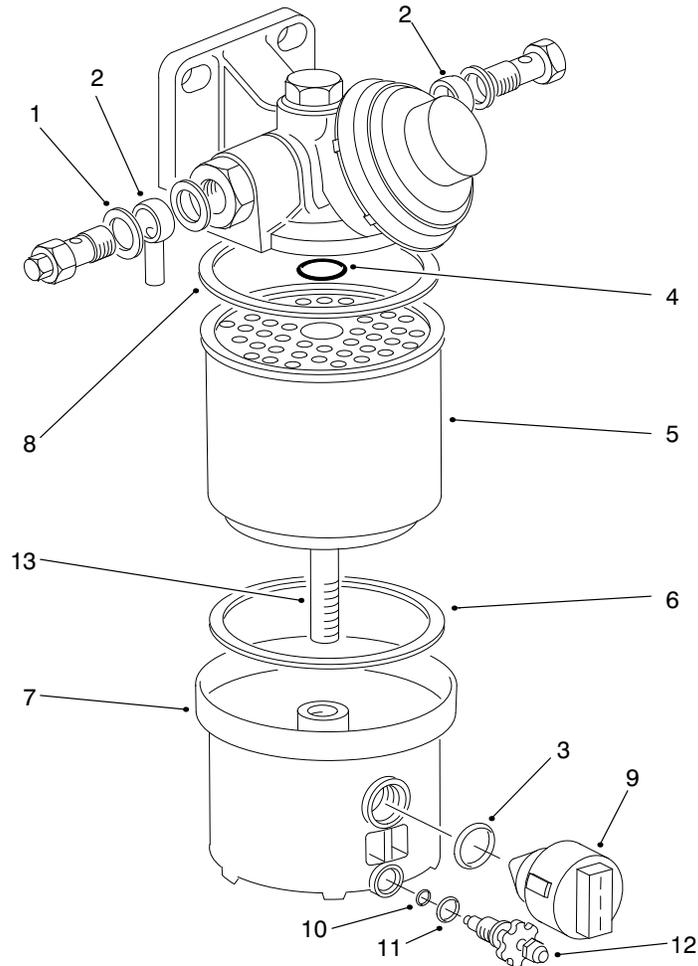


T-0966-2

FUEL FILTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	76-5180	Washer-Copper	4
2	76-5190	Fitting-Adjustable	2
3	94-8025	O-Ring	1
4		O-Ring	1
5	76-5220	Element-Filter (Incl. Ref. #4, 6 & 8)	1
6		Seal-Gasket	1
7		Cap-Filter, Fuel	1
8		Seal-Gasket	1

Ref. No.	Part No.	Description	No. Used
9	76-5320	Sensor-Water (Incl. Ref. #3)	1
10	94-8027	O-Ring	1
11	94-8028	O-Ring	1
12	94-8026	Asm-Vent (Incl. Ref. #10 & 11)	1
13		Bolt	1

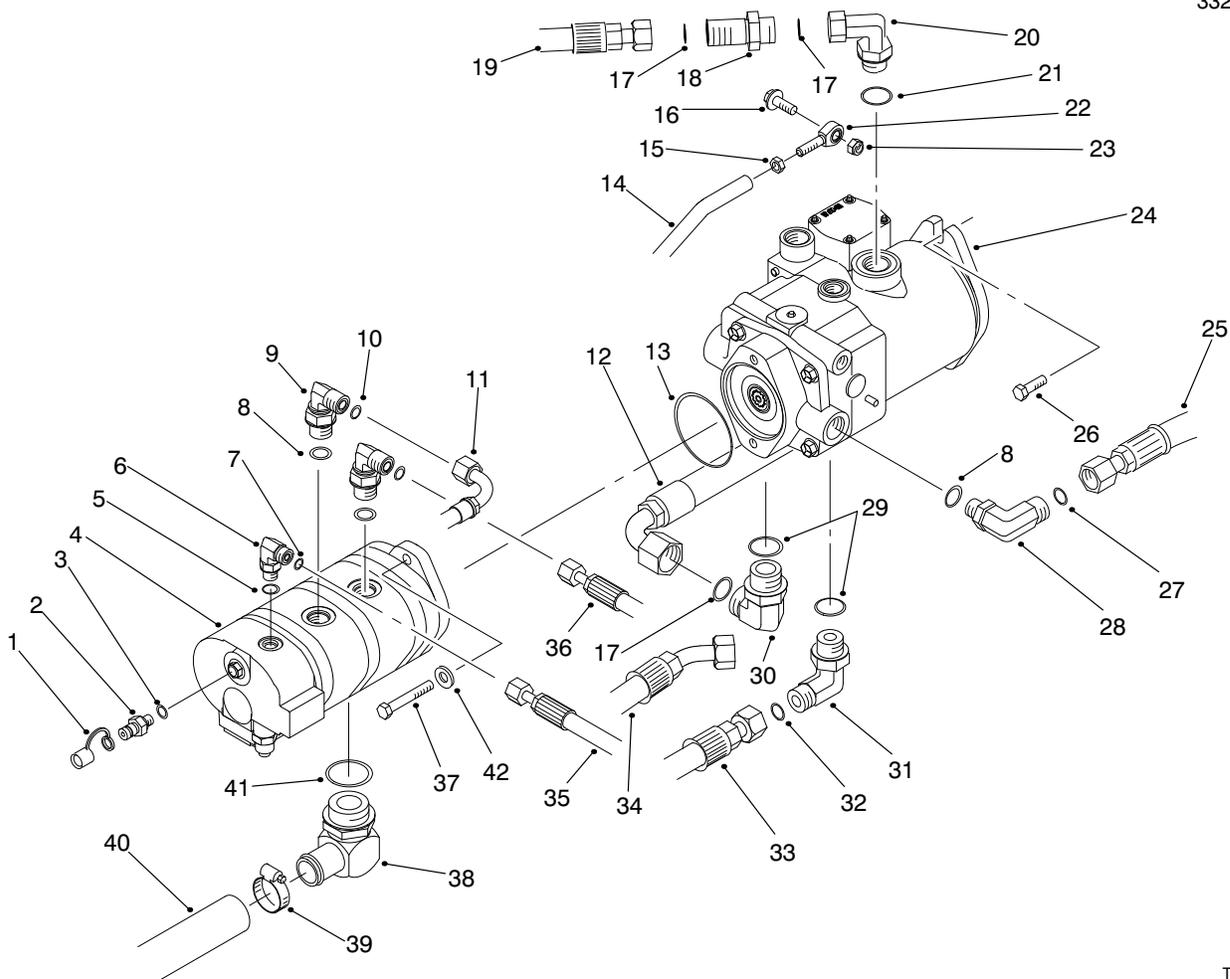


T-2072-1

PUMP INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	354-79	Cap-Dust	4
2	354-77	Fitting-Quick Connect (Incl. Ref. #3)	4
3	237-78	O-Ring	4
4	93-2175	Asm-Pump, Gear	1
5	237-42	O-Ring	1
6	340-77	Fitting-Hydraulic 90° (Incl. Ref. #5 & 7)	1
7	237-22	O-Ring	1
8	237-80	O-Ring	3
9	340-105	Fitting-Hydraulic 90° (Incl. Ref. #8 & 10)	2
10	237-30	O-Ring	2
11	92-7491	Asm-Hose	1
12	92-7484	Asm-Hose (Model No. 03804)	1
13	237-99	O-Ring	1
14	92-7531	Tube-Rod, Control	1
15	3220-3	Nut-Jam	1
16	3234-11	Screw-HF	1
17	237-58	O-Ring	3
18	94-2637	Fitting-Hydraulic, Straight (Incl. Ref. #17)	1
19	92-7489	Hose-Return	1
20	94-2636	Fitting-Hydraulic 90°	1
21	237-81	O-Ring	1
22	2411-36	Bearing-Rod End	1
23	3296-59	Nut-Lock	1

Ref. No.	Part No.	Description	No. Used
24	98-3730	Pump-Piston	1
25	92-7490	Asm-Hose, Filter	1
26	82-5050	Screw-HH	2
27	237-65	O-Ring	1
28	340-17	Fitting-Hydraulic 90° (Incl. Ref. #8 & 27)	1
29	237-146	O-Ring	2
30	340-15	Fitting-Hydraulic 90° (Incl. Ref. #17 & 29) (Model No. 03804)	1
30	340-129	Fitting-Hydraulic 90° (Incl. Ref. #29 & 32) (Model #03803)	1
31	340-129	Fitting-Hydraulic 90° (Incl. Ref. #29 & 32)	1
32	340-65	O-Ring	2
33	92-7485	Asm-Hose	1
34	92-7634	Asm-Hose, Traction (Model No. 03803)	1
35	92-7622	Asm-Hose, Steering	1
36	92-7492	Asm-Hose	1
37	323-7	Screw-HH	2
38	92-7526	Fitting-Hydraulic, Suction	1
39	2412-111	Clamp-Hose	2
40	92-7465	Hose-Suction	1
41	237-101	O-Ring	1
42	3256-46	Washer-Flat	2

GEAR PUMP ASSEMBLY NO. 93-2175

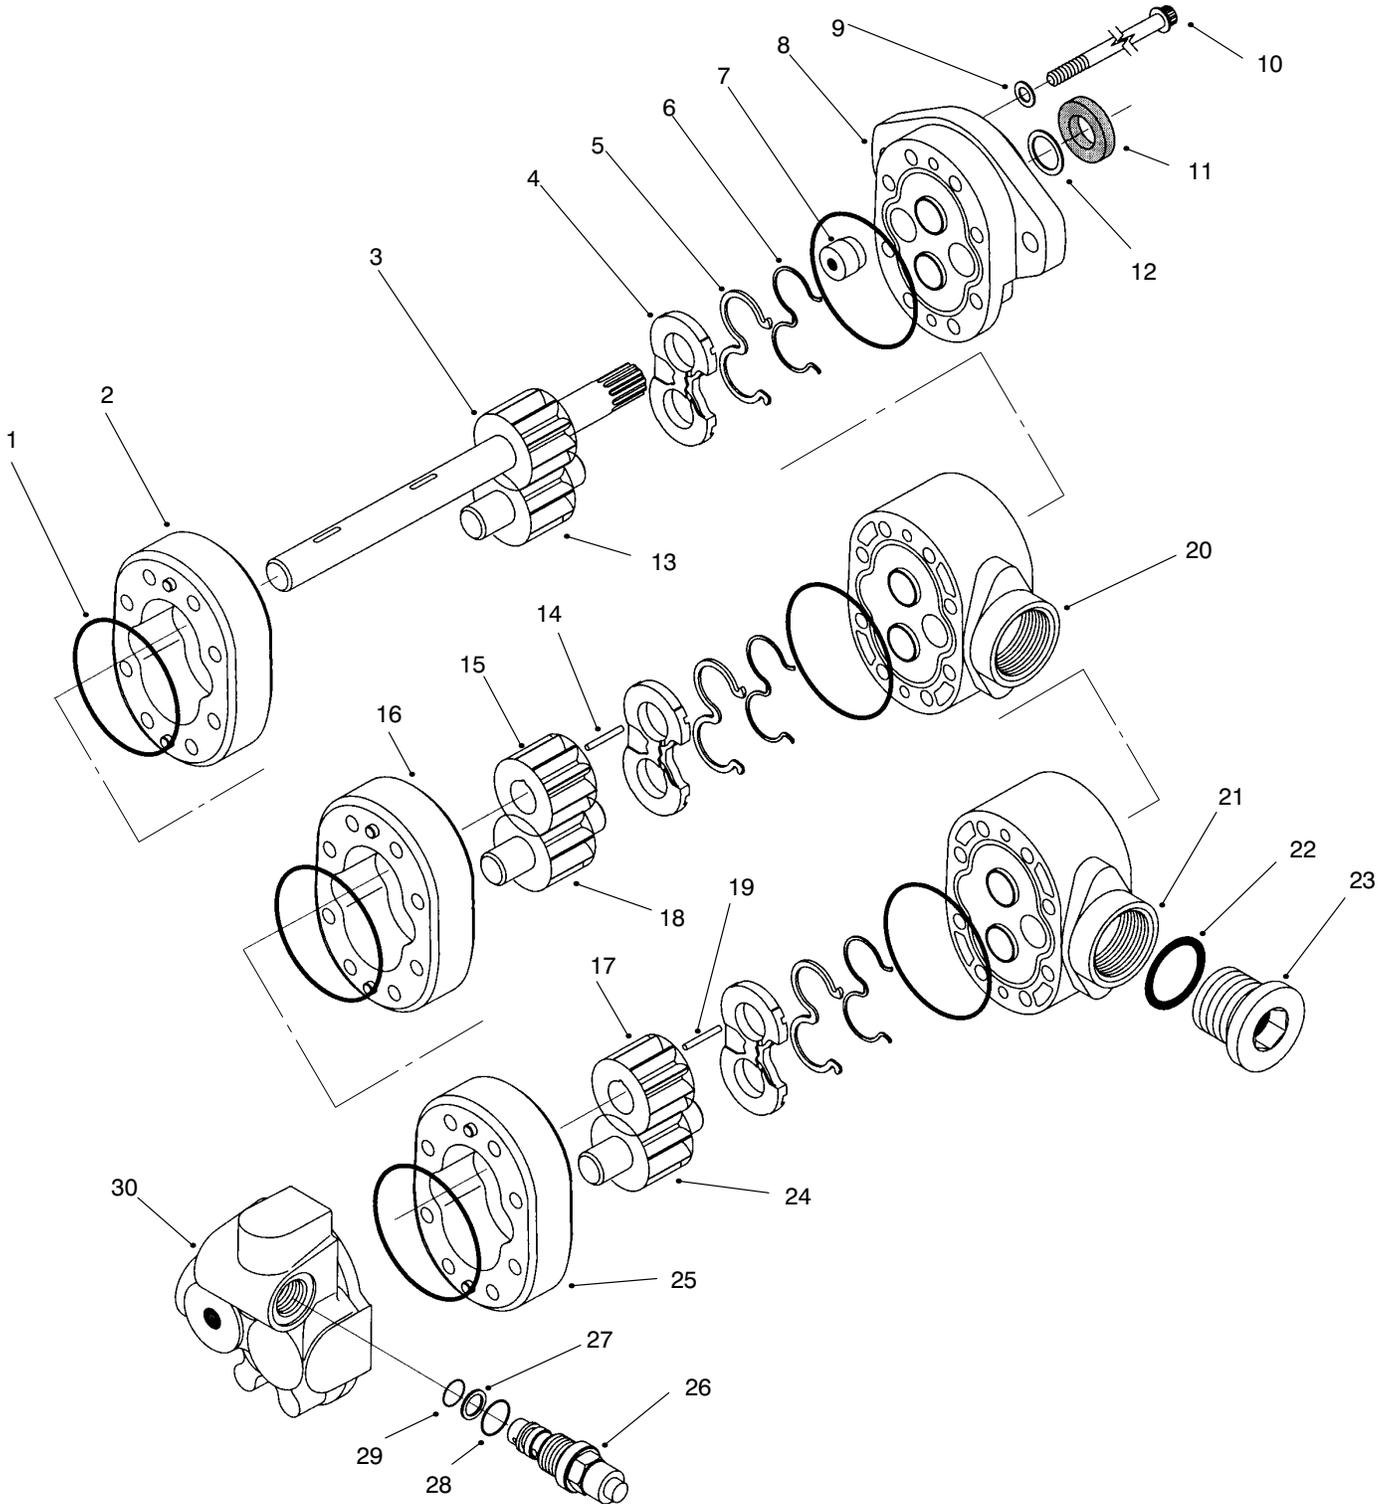


GEAR PUMP ASSEMBLY NO. 93-2175

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	56-6710	O-Ring	6	†18		Gear-Idler	1
†2		Body	1	†19		Key	1
†3		Asm-Gear, Drive	1	†20		Plate-Adaptor	1
4		Plate-Wear	3	†21		Plate-Adaptor	1
5		Seal-Pressure, Balance	3	†22		O-Ring	1
6		Gasket-Backup	3	23	94-3013	Plug (Incl. Ref. #22)	1
7	94-3011	Plug	1	†24		Gear-Idler	1
†8		Asm-Plate, Front	1	†25		Body	1
9	74-8920	Washer-Copper	4	26	94-3014	Valve-Relief (Incl. Ref. #27-29)	1
10	94-3012	Screw	8	†27		Washer-Backup	1
11	49-2640	Seal-Shaft	1	†28		O-Ring	1
12	60-5890	Washer	1	†29		O-Ring	1
†13		Gear-Idler	1	†30		Asm-Backplate	1
†14		Key	1	*	94-3015	Kit-Seal (Incl. Ref. #1, & 4-6)	1
†15		Gear	1				
†16		Body	1				
†17		Gear	1				

*Not Illustrated

† Not Serviced Separately

SERVO CONTROLLED PISTON PUMP ASM. NO. 98-3730

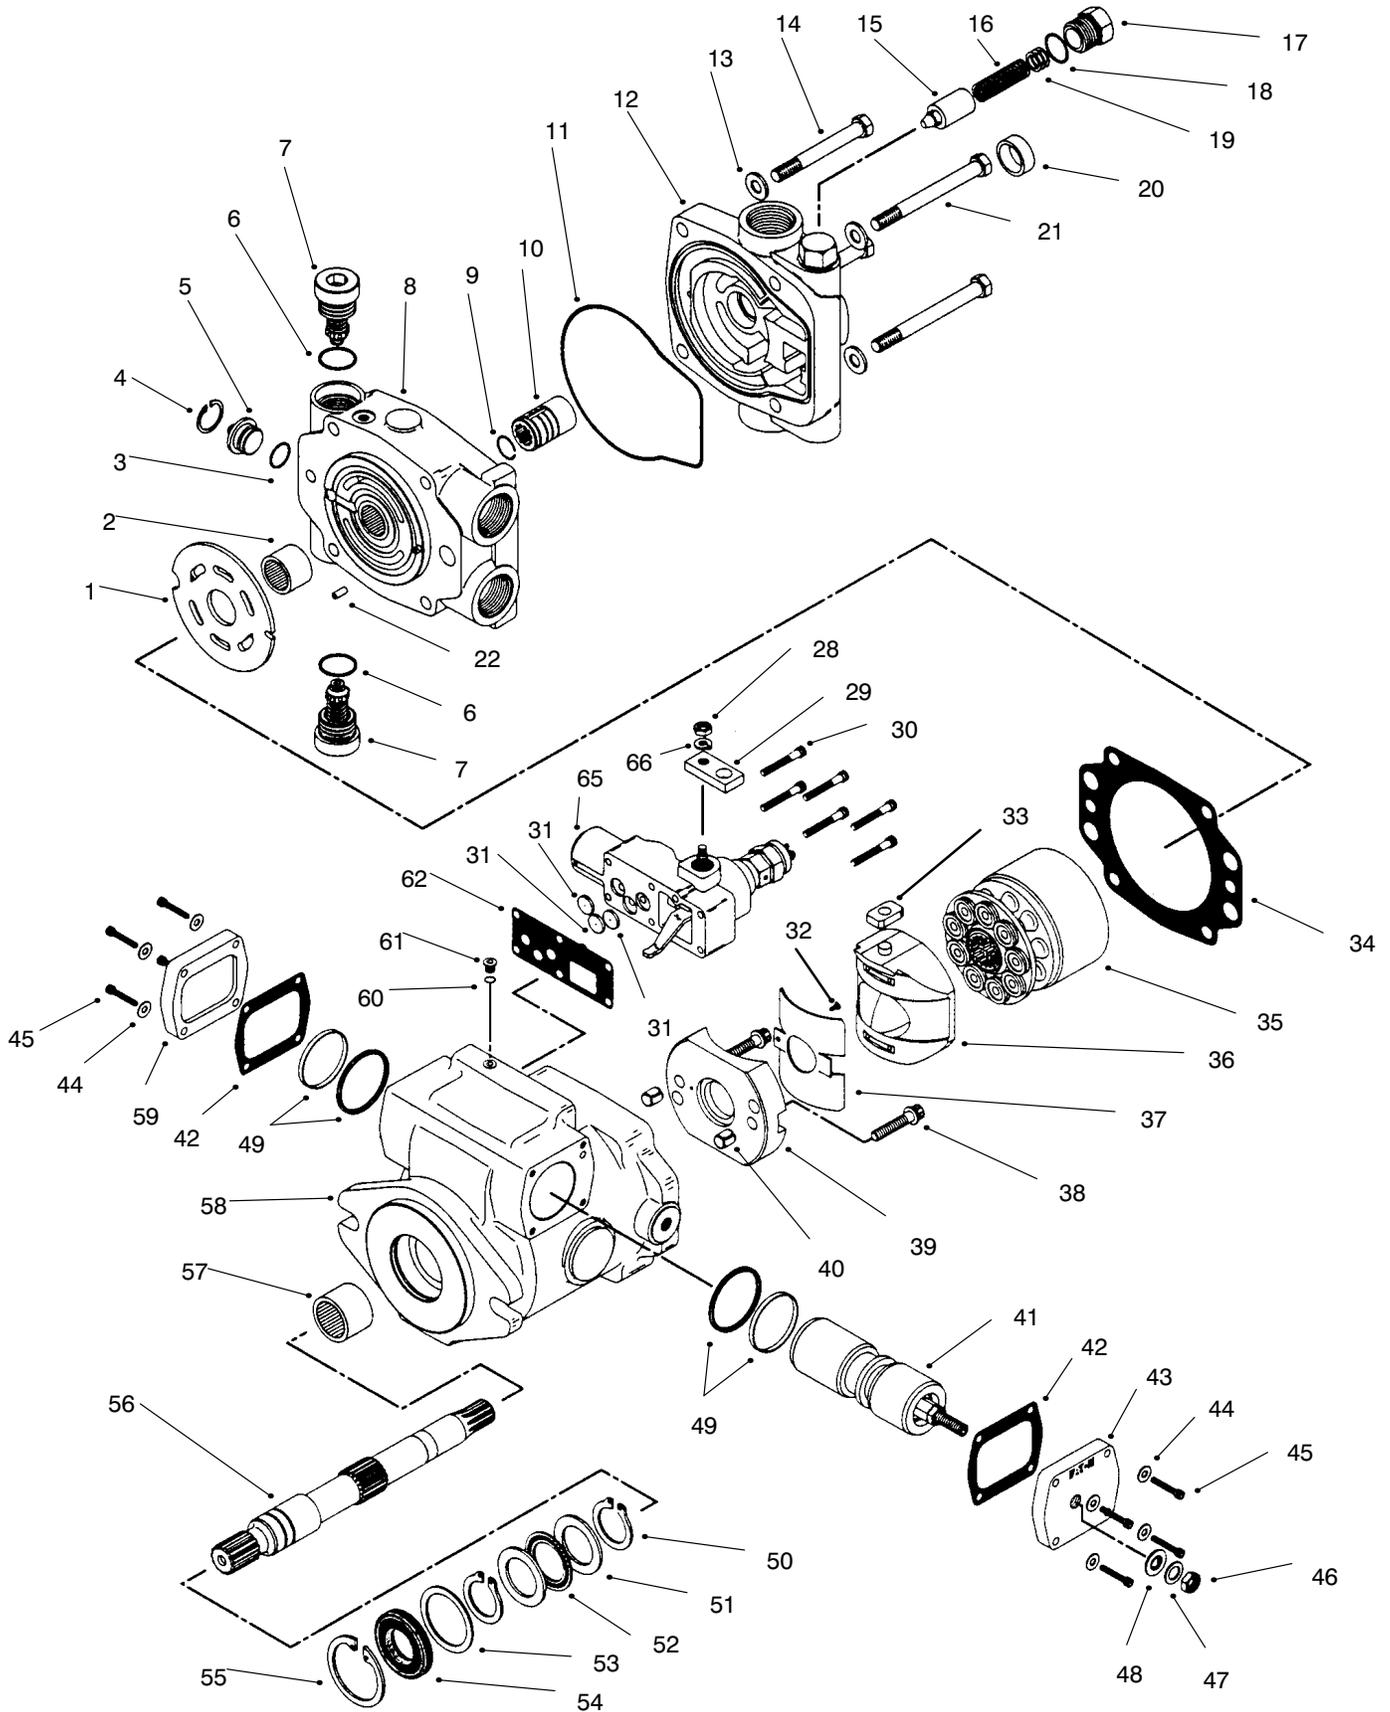


SERVO CONTROLLED PISTON PUMP ASM. NO. 98-3730

Ref. No.	Part No.	Description	No. Used
1	94-3022	Plate-Valve	1
†2		Bearing	1
3	94-3036	Ring-Quad	1
4	94-3037	Ring-Retaining	1
5	94-3038	Plug-Dump Valve	1
†6		O-Ring	2
7	94-9999	Valve-Relief	2
8	94-3016	Asm-Backplate (Incl. Ref. #2 & 22)	1
9	94-3035	Ring-Lock	1
10	94-3023	Coupler	1
†11		O-Ring-Molded	1
12	94-3017	Adaptor-Charge Relief (Incl. Ref. #15-20)	1
13	3256-24	Washer-Flat	4
14	94-3028	Screw	2
†15		Poppet	2
†16		Spring	2
†17		Plug	1
†18		O-Ring	1
†19		Washer	3
†20		Bushing	1
21	94-3029	Screw	2
†22		Pin-Roll	1
28	3217-5	Nut	1
29	94-3031	Arm-Control	1
30	3274-59	Screw-HH	6
31	94-3040	Orifice-Valve, Control	3
†32		Screw	1
33	94-3032	Follower-Piston	1
†34		Gasket-Housing	1
35	94-3021	Asm-Kit, Rotating	1
36	94-3026	Asm-Camplate	1

Ref. No.	Part No.	Description	No. Used
†37		Bushing	1
†38		Screw	1
†39		Asm-Cradle	1
†40		Dowel-Bushing	2
41	94-3025	Asm-Piston, Servo	1
†42		Gasket-Plate, Cover	2
43	94-3034	Plate-Cover	1
44	3256-77	Washer-Flat	8
45	3274-81	Screw	8
46	3220-3	Nut-Jam	1
47	94-3030	Washer	1
48	94-3027	Washer-Seal	1
†49		Seal	2
50	76-7000	Ring-Retaining	2
51	76-6950	Race-Thrust	1
52	76-6960	Bearing-Thrust	1
53	94-3007	Washer	1
54	94-3008	Seal-Shaft	1
55	76-7010	Ring-Retaining	1
56	94-3020	Shaft-Drive	1
†57		Bearing	1
58	94-3018	Asm-Housing (Incl. Ref. #32, 37-40, 49, 57, & 60-61)	1
59	94-3033	Plate-Cover	1
†60		O-Ring	1
†61		Plug	1
†62		Gasket	1
65	94-3019	Control-Servo, Manual	1
66	3253-3	Washer-Lock	1
*	94-3039	Kit-Seal (Incl. Ref. #11, 34, 42 & 62)	1

*Not Illustrated

† Not Serviced Separately.

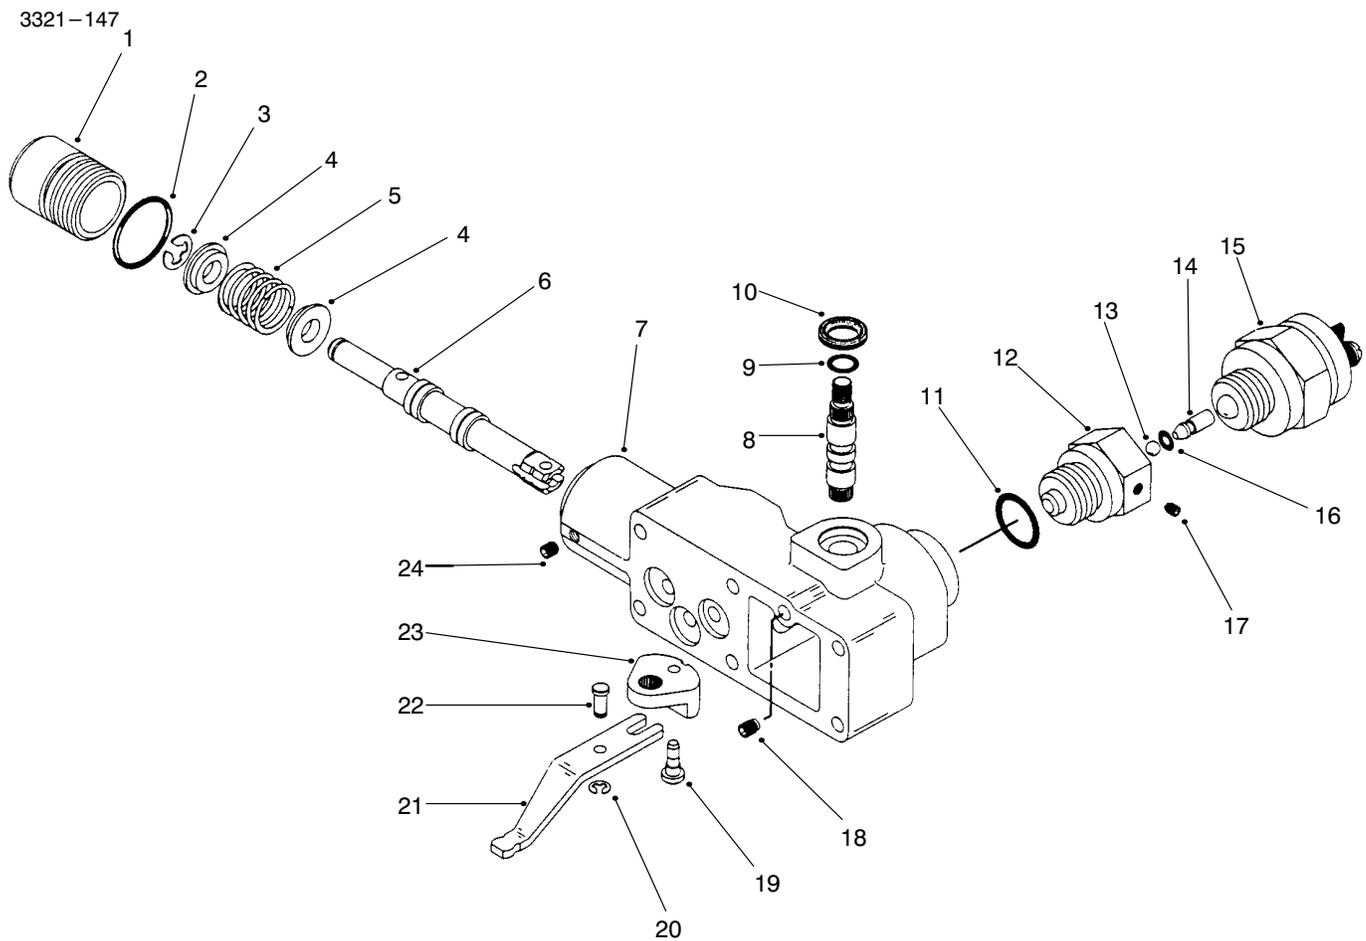


T-2119-1

MANUAL SERVO CONTROL NO. 94-3019

Ref. No.	Part No.	Description	No. Used
1		Plug	1
2		O-Ring	1
3		Ring-Retaining	1
4		Retainer-Spring	2
5		Spring	1
6		Valve-Spool	1
7		Housing-Control	1
8		Shaft-Input	1
9		O-Ring	1
10		Seal-Wiper	1
11		O-Ring	1
12		Adaptor	1
13		Ball	1

Ref. No.	Part No.	Description	No. Used
14		Pin	1
15	94-3043	Switch	1
16		O-Ring	1
17		Screw-Set	1
18		Screw-Set	1
19		Pin	1
20		Ring-Retaining	1
21		Link	1
22		Pin-Dowel	1
23		Crank-Bell	1
24		Screw-Set	1
*	94-3044	Kit-Seal (Incl. Ref. #2, 9-11 & 16)	1

*Not Illustrated

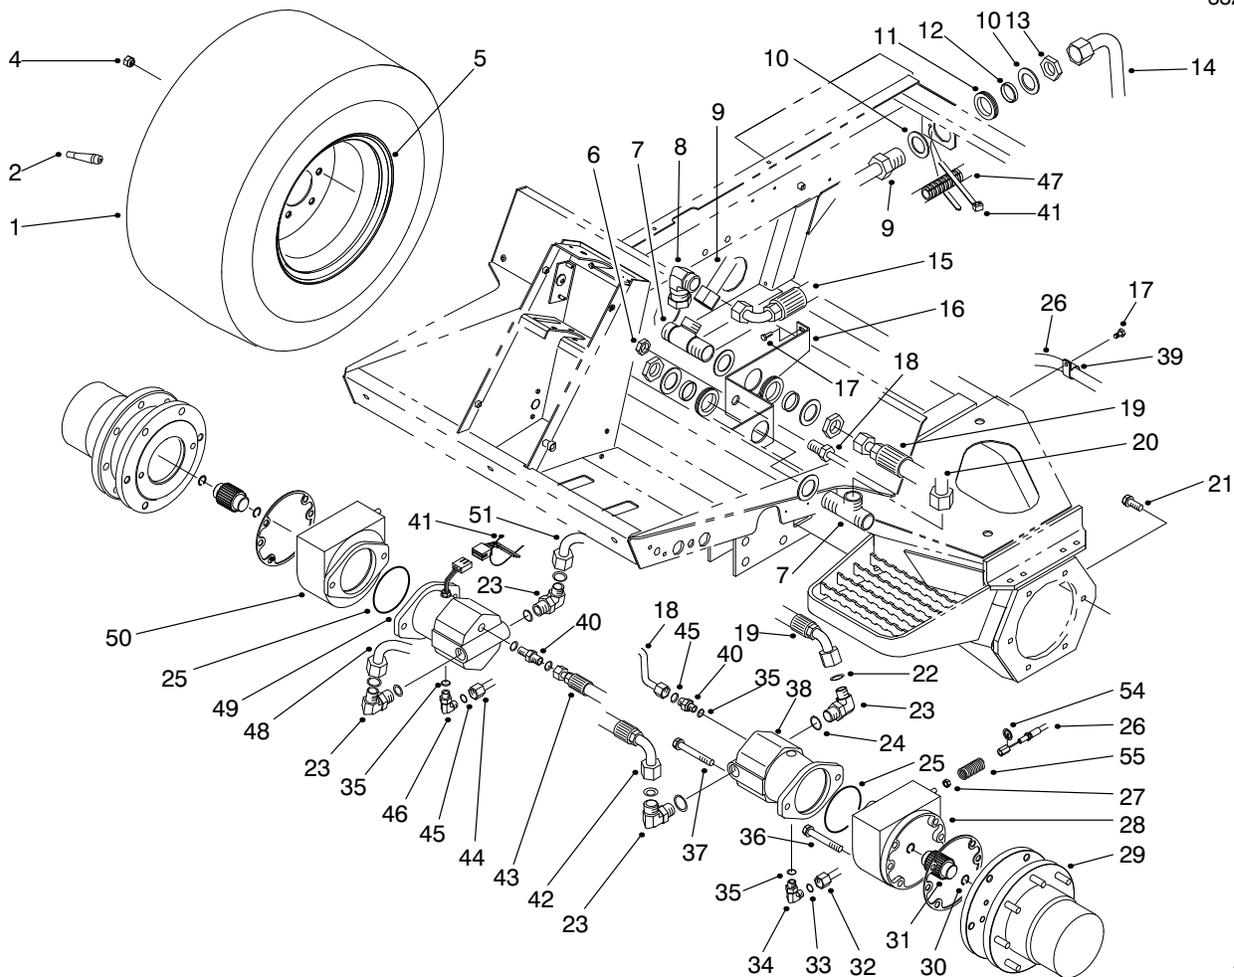


T-2069-2

FRONT HYDRAULIC DRIVE & BRAKE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	95-3465	Tire	2
2	232-24	Stem-Valve	2
4	92-7483	Nut-Lug	16
5	95-3464	Rim	2
6	340-127	Nut-Bulkhead	1
7	92-7550	Fitting-Tee, Bulkhead (Incl. Ref. #53)	2
8	92-7645	Fitting-Hydraulic 90° (Model 03803)	1
9	92-7474	Assembly-Tube, Front (Model 03804)	1
10	69-8920	Washer (Model 03803)	4
10	69-8920	Washer (Model 03804)	6
11	240-2	Grommet (Model 03803)	2
11	240-2	Grommet (Model 03804)	3
12	69-8950	Spacer (Model 03803)	2
12	69-8950	Spacer (Model 03804)	3
13	340-128	Nut-Bulkhead (Model 03803)	2
13	340-128	Nut-Bulkhead (Model 03804)	3

Ref. No.	Part No.	Description	No. Used
14	92-7473	Asm-Tube, Rear (Model 03804)	1
15	92-7634	Asm-Hose, Traction (Model 03803)	1
16	92-7455	Plate-Bulkhead	1
17	32144-11	Screw-Thread Forming	5
18	92-7477	Asm-Tube, Motor Drain	1
19	92-7486	Asm-Hose	1
20	92-7485	Asm-Hose	1
21	33106-030	Screw-HHF	12
22	237-58	O-Ring	4
23	340-142	Fitting-Hydraulic 90° (Incl. Ref. #22 & 24)	4
24	237-81	O-Ring	4
25	237-166	O-Ring	2
26	92-7530	Cable-Brake, LH	1
27	3218-4	Nut-Jam	2
28	92-7417	Asm-Brake, LH	1
29	92-7415	Asm-Drive, Planetary	2
30	93-7972	Ring-Retaining	4
31	93-7966	Shaft-Splined, Brake	2
32	92-7598	Asm-Tube, Frt. Drain	1
33	237-22	O-Ring	1
34	340-18	Fitting-Hydraulic 90° (Incl. Ref. #33 & 35)	1
35	237-79	O-Ring	4
36	33106-090	Screw-HHF	8

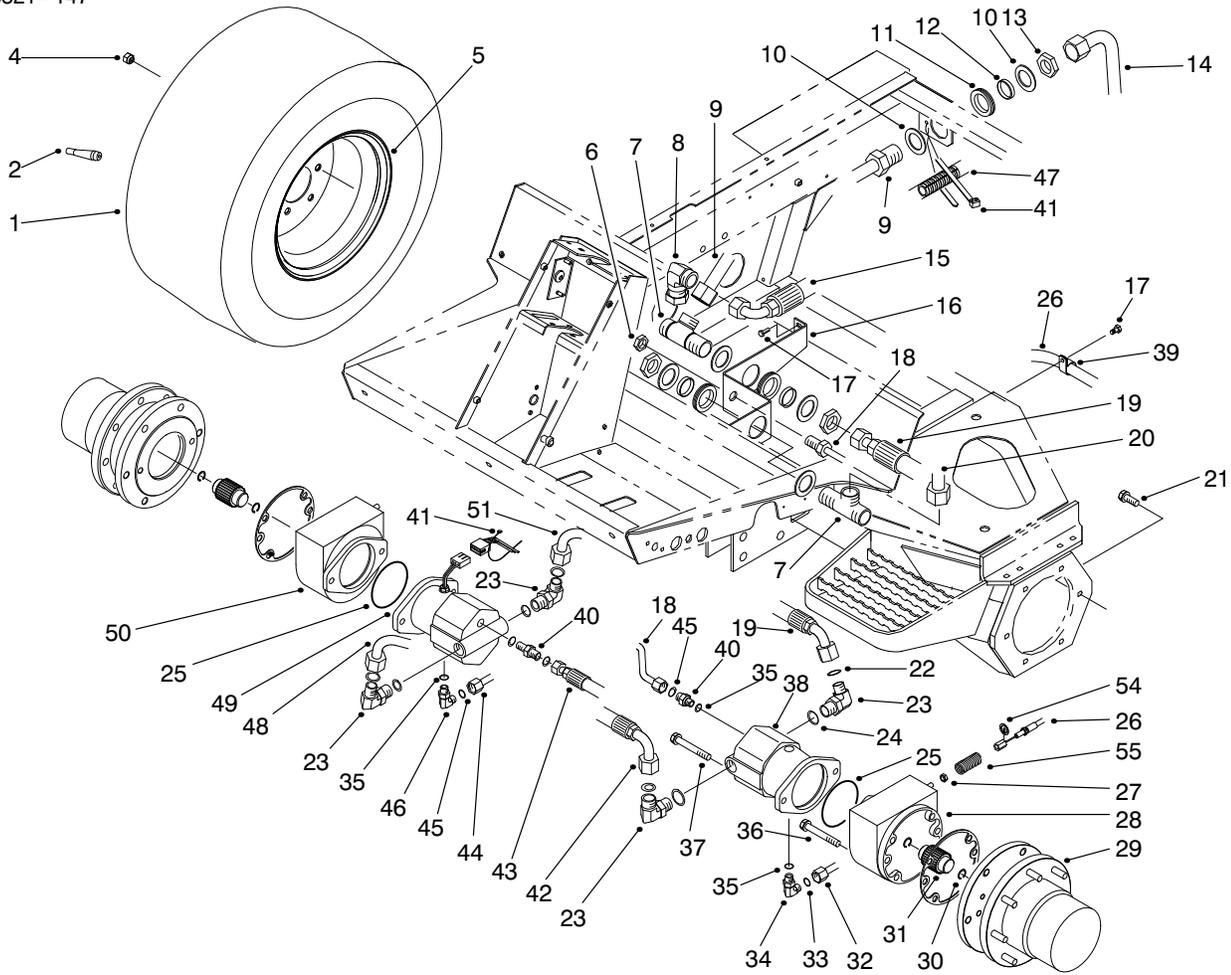


T-2069-2

FRONT HYDRAULIC DRIVE & BRAKE ASM. (Continued)

Ref. No.	Part No.	Description	No. Used
37	33116-120	Screw-HH	4
38	92-7385	Motor-Planetary	1
39	2412-93	R-Clamp	2
40	340-5	Fitting-Hydraulic (Incl. Ref. #22 & 24)	2
41	3290-378	Tie-Cable	3
42	92-7487	Asm-Tube	1
43	92-7488	Asm-Hose	1
44	92-7478	Asm-Tube, Motor RH	1
45	237-30	O-Ring	3

Ref. No.	Part No.	Description	No. Used
46	340-98	Fitting-Hydraulic 90° (Incl. Ref. #35 & 45)	1
47	94-3090	Harness-Wire, Main	1
48	92-7476	Assembly-Tube, Traction	1
49	93-7476	Motor-Hydraulic W/Sensor	1
50	92-7414	Assembly-Brake, RH	1
51	92-7475	Assembly-Tube, Traction	1
*53	340-65	O-Ring	6
54	94-3050	Plate-Spring	2
55	94-3088	Spring-Brake	2

*Not Illustrated

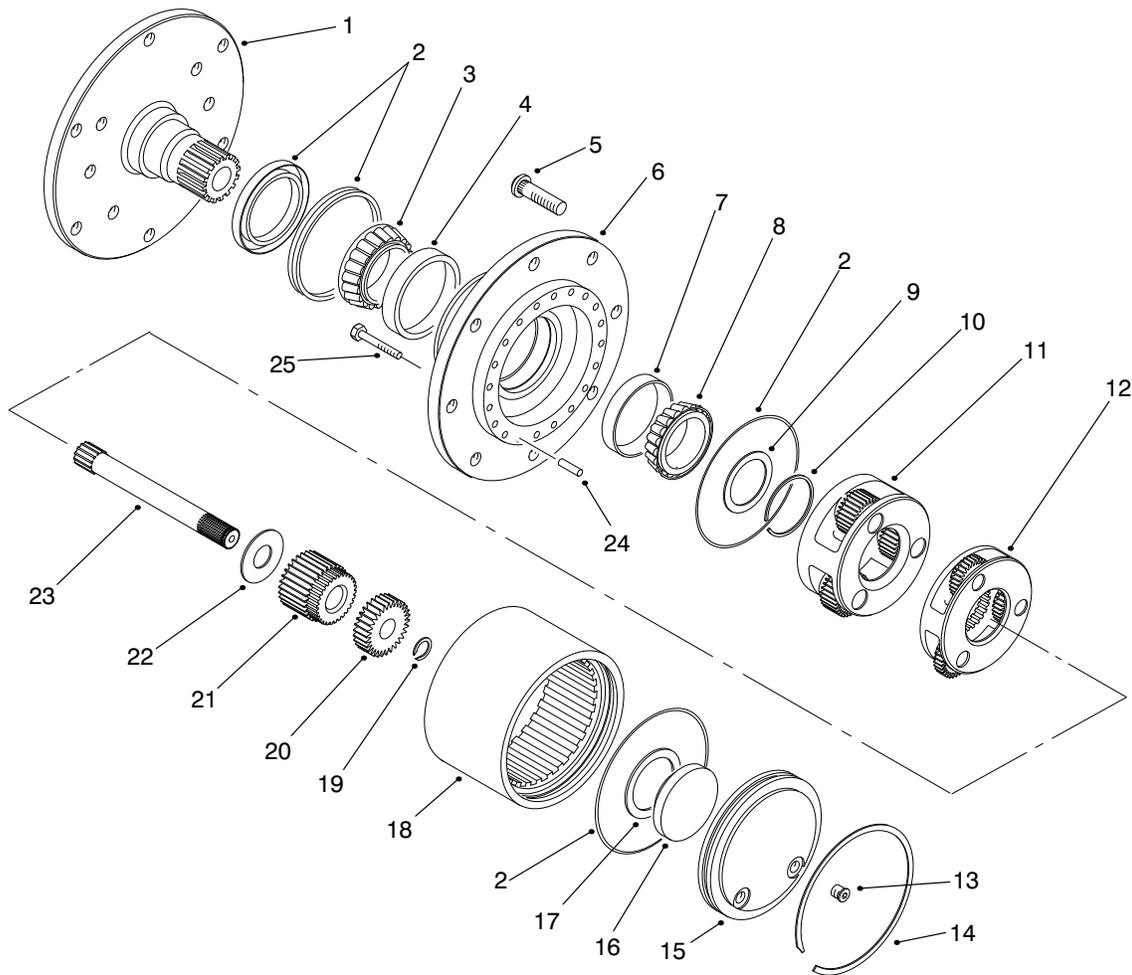


T-2070-1

PLANETARY DRIVE ASSEMBLY NO. 92-7415

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	93-7450	Spindle	1	15	93-7458	Plate-Cover	1
2	93-7474	Kit-Seal	1	16	93-7457	Spacer-Input	1
3	93-7451	Cone-Bearing	1	17	93-7460	Washer-Thrust	1
4	93-7452	Cup-Bearing	1	18	93-7456	Gear-Ring	1
5	93-7455	Stud-Wheel	8	19	93-7459	Ring-Retaining, External	1
6	93-7453	Housing	1	20	93-7463	Gear-Sun	1
7	93-7470	Cup-Bearing	1	21	93-7464	Gear-Sun	1
8	93-7469	Cone-Bearing	1	22	93-7465	Washer-Thrust	1
9	93-7468	Washer-Thrust	1	23	93-7471	Shaft-Input	1
10	93-7467	Ring-Retaining, External	1	24	93-7466	Pin-Dowel	2
11	93-7472	Asm-Carrier, Secondary	1	25	93-7454	Screw-HH	18
12	93-7473	Asm-Carrier, Primary	1	*	92-7415	Asm-Complete (Incl. Ref. #1-25)	1
13	93-7461	Plug-Pipe	2				
14	93-7462	Ring-Retaining, Internal	1				

*Not Illustrated

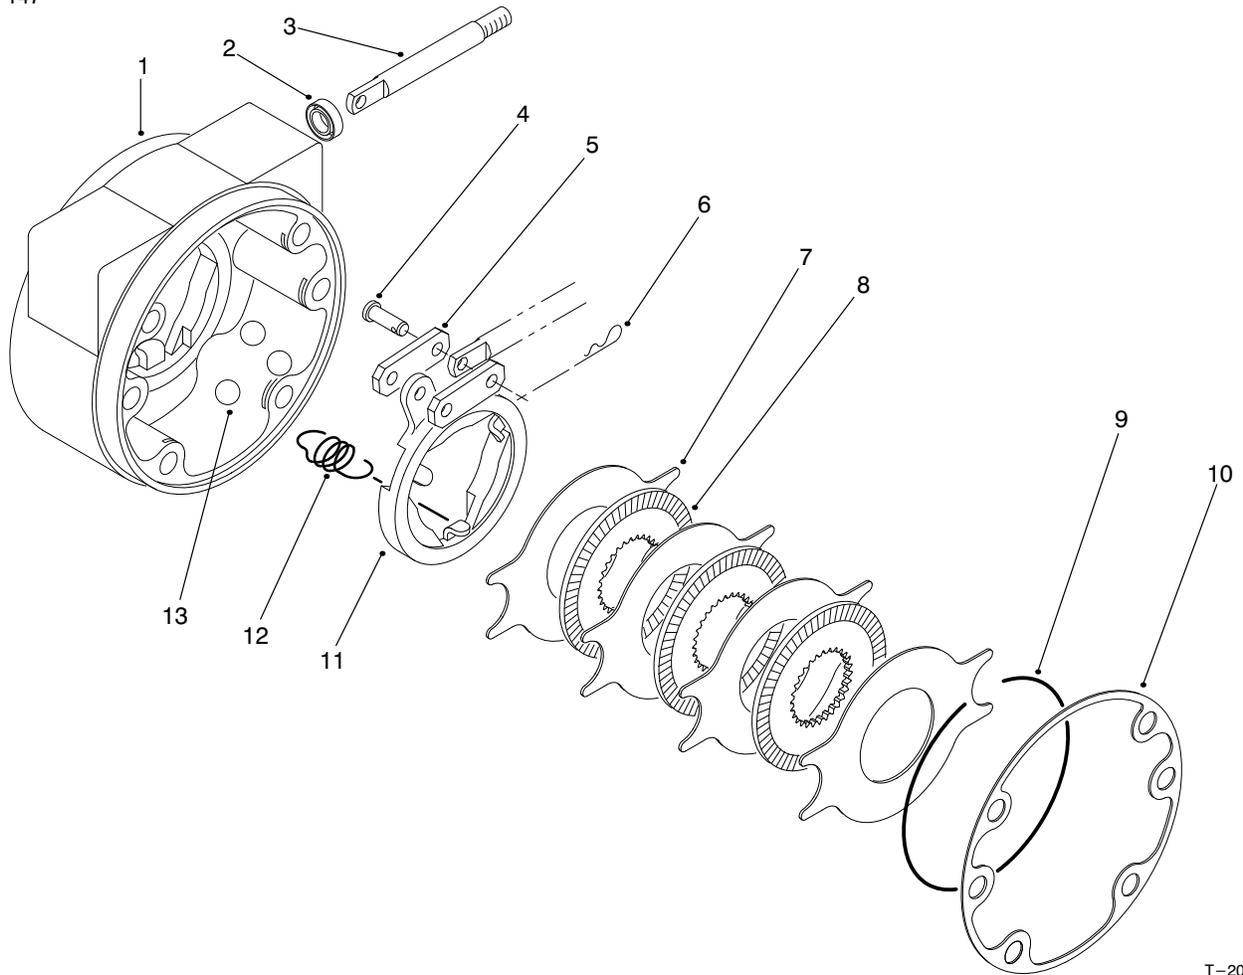

T-2071-1


BRAKE ASM NO. 92-7414 RH & 92-7417 LH (Shown)

Ref. No.	Part No.	Description	No. Used
†1		Housing-Brake, LH	1
†*		Housing-Brake, RH	1
2	93-7977	Seal	1
3	93-7978	Rod-Pull	1
4	93-7983	Pin-Clevis	2
5	93-7980	Link	2
6	93-7979	Pin-Cotter, Hair	2

Ref. No.	Part No.	Description	No. Used
7	93-7986	Disc-Stationary	4
8	93-7981	Disc-Rotating	3
9	93-7976	Ring-Retaining	1
10	93-7984	Gasket	1
11	93-7982	Actuator	1
12	93-7987	Spring-Extension	3
13	93-7985	Ball	3

*Not Illustrated

†Not Serviced Separately

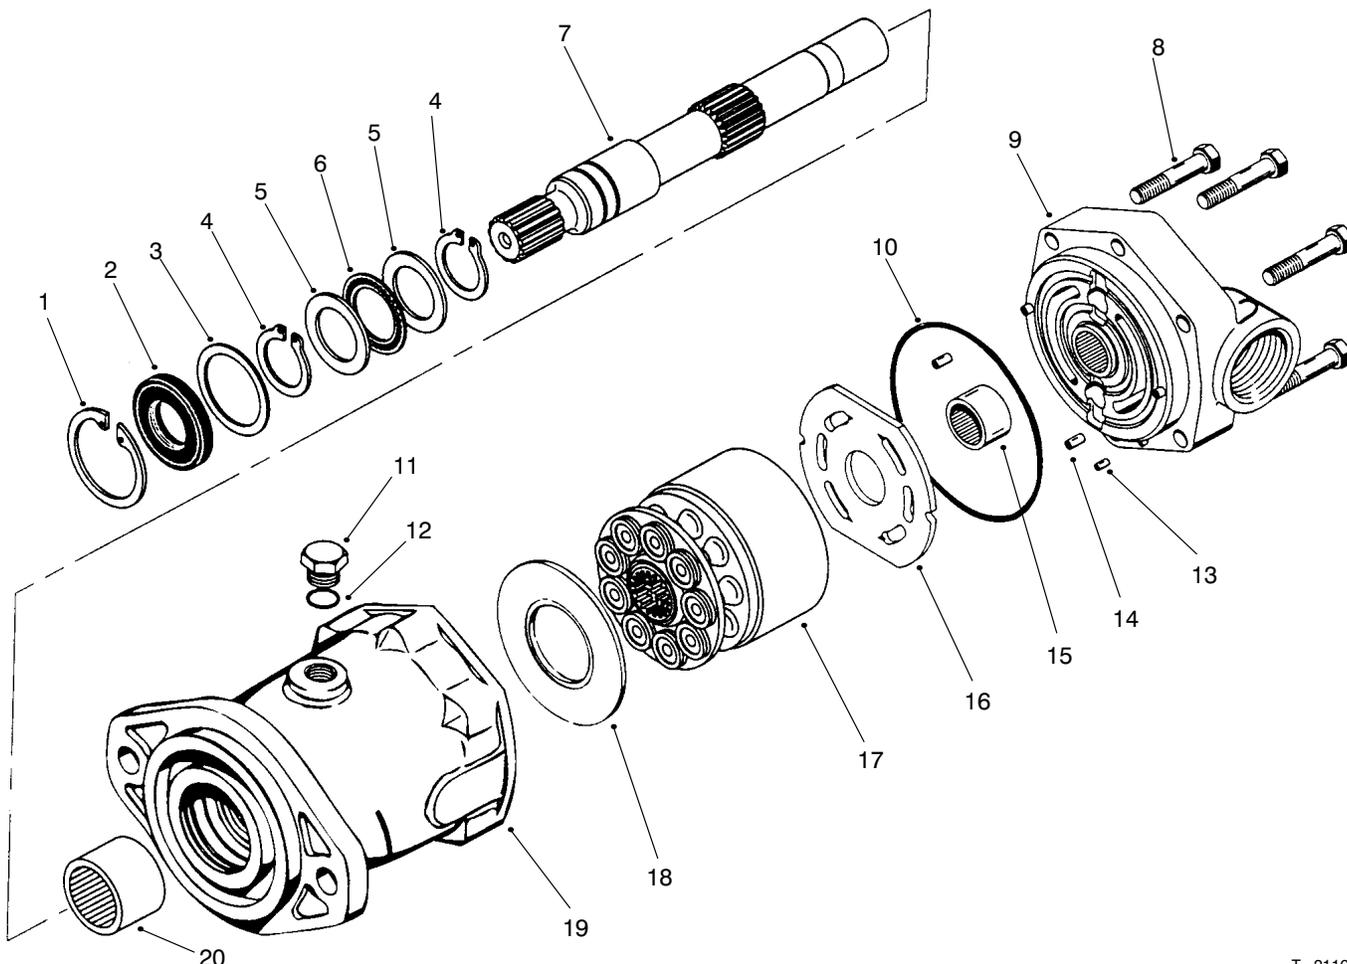


T-2116-1

HYDRAULIC MOTOR ASSEMBLY NO. 92-7385

Ref. No.	Part No.	Description	No. Used
1	76-7010	Ring-Retaining	1
2	94-3008	Seal-Shaft	1
3	94-3007	Washer	1
4	76-7000	Ring-Retaining	2
5	76-6950	Race-Thrust	2
6	76-6960	Bearing-Thrust	1
7	94-3004	Shaft-Drive, Splined	1
8	94-3002	Screw-HH	6
9	94-3005	Asm- Backplate (Incl. Ref. #13-15)	1
10	76-6980	O-Ring	1
11	94-3009	Asm-Plug (Incl. Ref. #12)	1

Ref. No.	Part No.	Description	No. Used
12		O-Ring	1
13		Pin-Dowel	1
14		Pin-Dowel	3
15		Bearing-Needle	1
16	94-3003	Plate-Valve	1
17	76-6910	Kit-Rotating	1
18	76-6970	Insert-Camplate	1
19	94-3006	Housing (Incl. Ref. #20)	1
20		Bearing-Needle	1

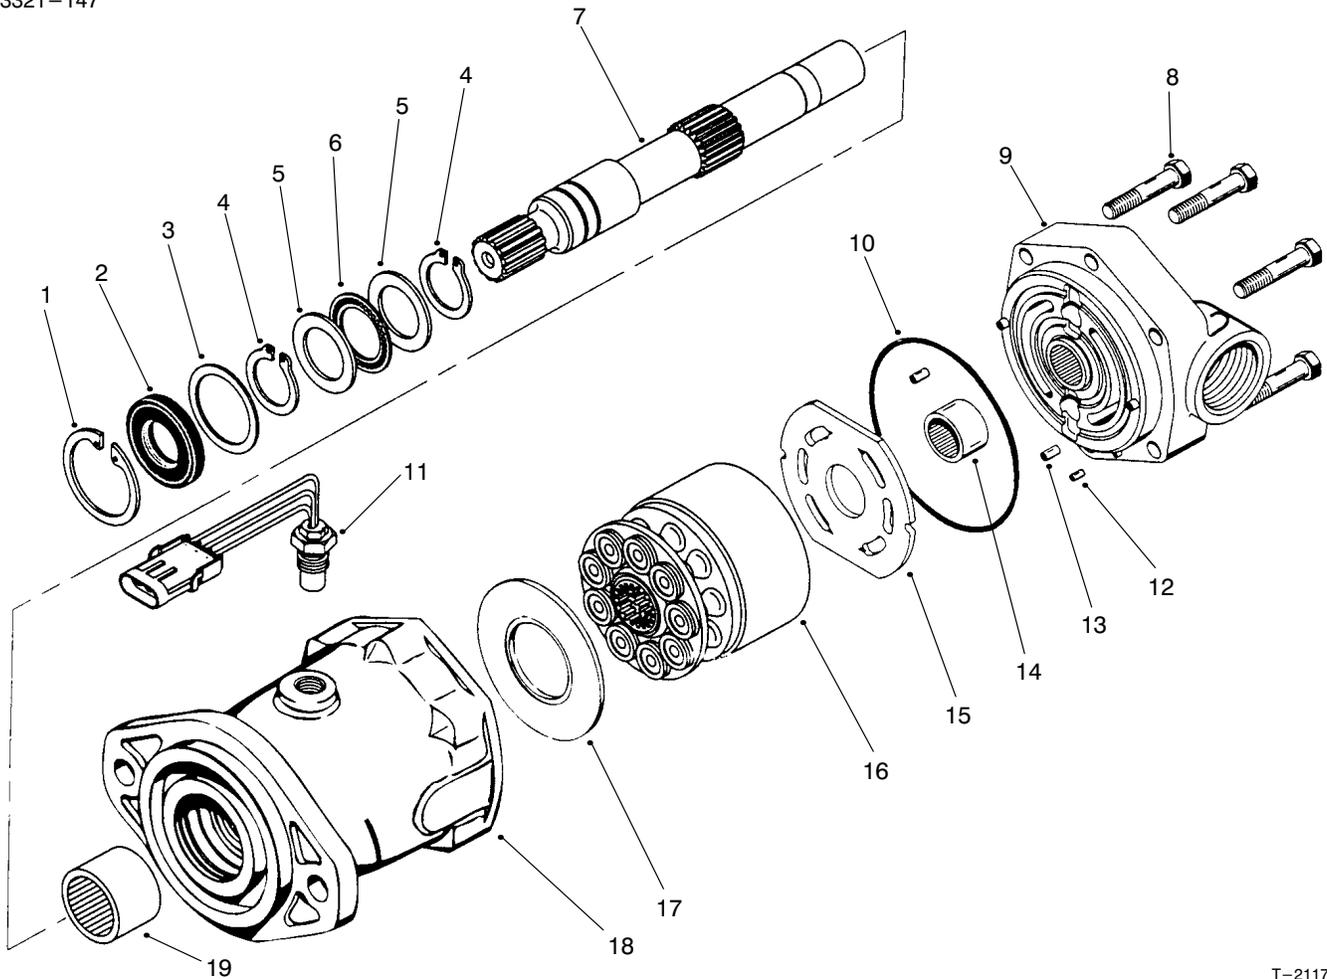


T-2117-1

HYDRAULIC MOTOR ASM. NO. 93-7476 W/SENSOR

Ref. No.	Part No.	Description	No. Used
1	76-7010	Ring-Retaining	1
2	94-3008	Seal-Shaft	1
3	94-3007	Washer	1
4	76-7000	Ring-Retaining	2
5	76-6950	Race-Thrust	2
6	76-6960	Bearing-Thrust	1
7	94-3004	Shaft-Drive, Splined	1
8	94-3002	Screw-HH	6
9	94-3005	Asm-Backplate (Incl. Ref. #12-14)	1
10	76-6980	O-Ring	1

Ref. No.	Part No.	Description	No. Used
11	94-3010	Sensor-Speed Pickup	1
12		Pin-Dowel	1
13		Pin-Dowel	3
14		Bearing-Needle	1
15	94-3003	Plate-Valve	1
16	76-6910	Kit-Rotating	1
17	76-6970	Insert-Camplate	1
18	94-3006	Housing (Incl. Ref. #19)	1
19		Bearing-Needle	1

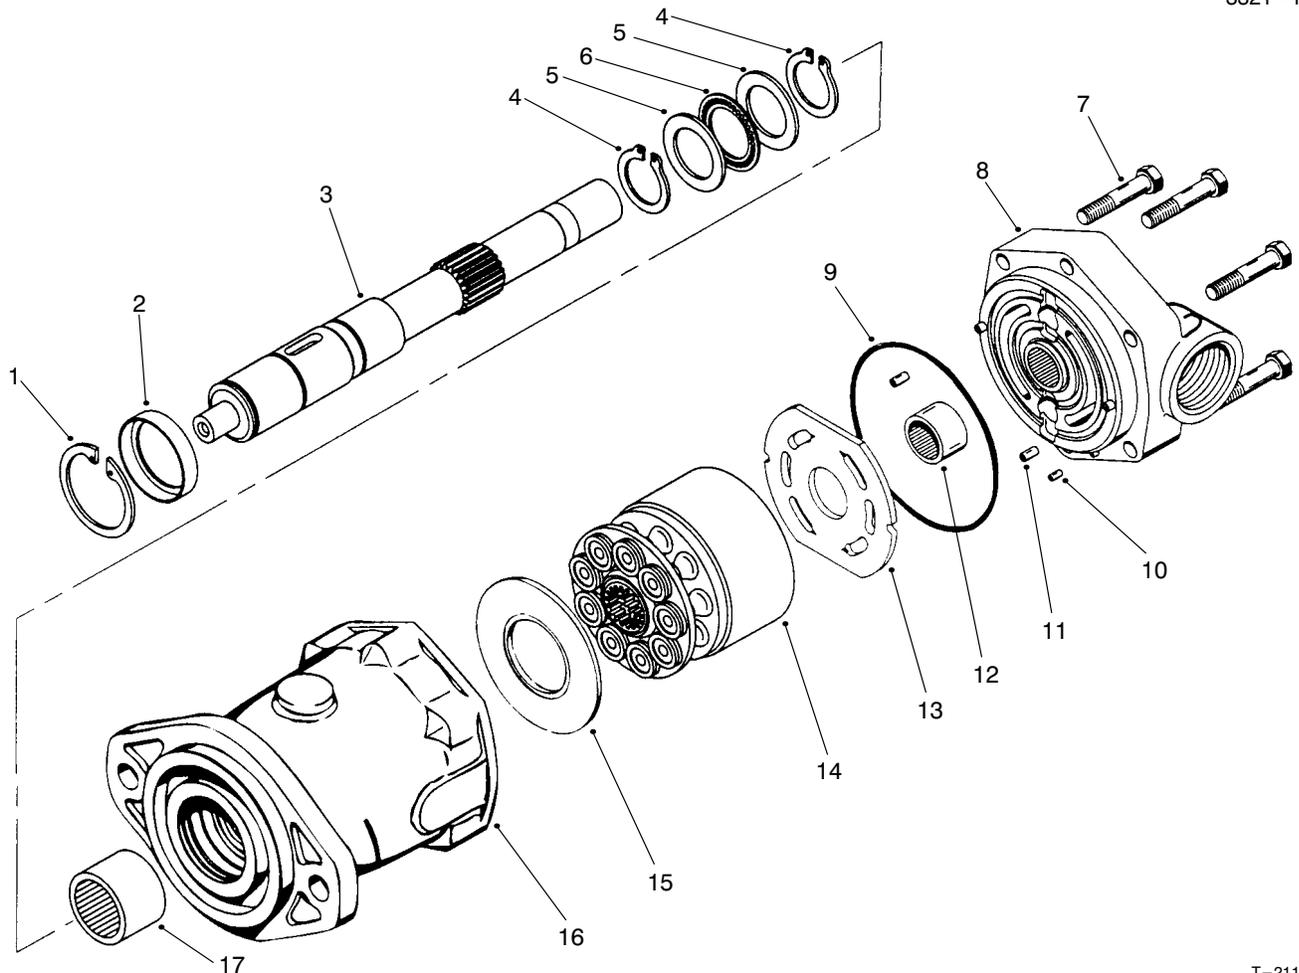


T-2118-1

4 WD HYDRAULIC MOTOR ASM. NO. 92-7386

Ref. No.	Part No.	Description	No. Used
1	76-7010	Ring-Retaining	1
2	76-7020	Spacer	1
3	76-6930	Shaft-Drive, Straight	1
4	76-7000	Ring-Retaining	2
5	76-6950	Race-Thrust	2
6	76-6960	Bearing-Thrust	1
7	94-3002	Screw-HH	6
8	94-3000	Asm.-Backplate (Incl. Ref. #10-12)	1
9	76-6980	O-Ring	1

Ref. No.	Part No.	Description	No. Used
10		Pin-Dowel	3
11		Pin-Dowel	1
12		Bearing-Needle	1
13	94-3003	Plate-Valve	1
14	76-6910	Kit-Rotating	1
15	76-6970	Insert-Camplate	1
16	94-3001	Housing (Incl. Ref. #17)	1
17		Bearing-Needle	1

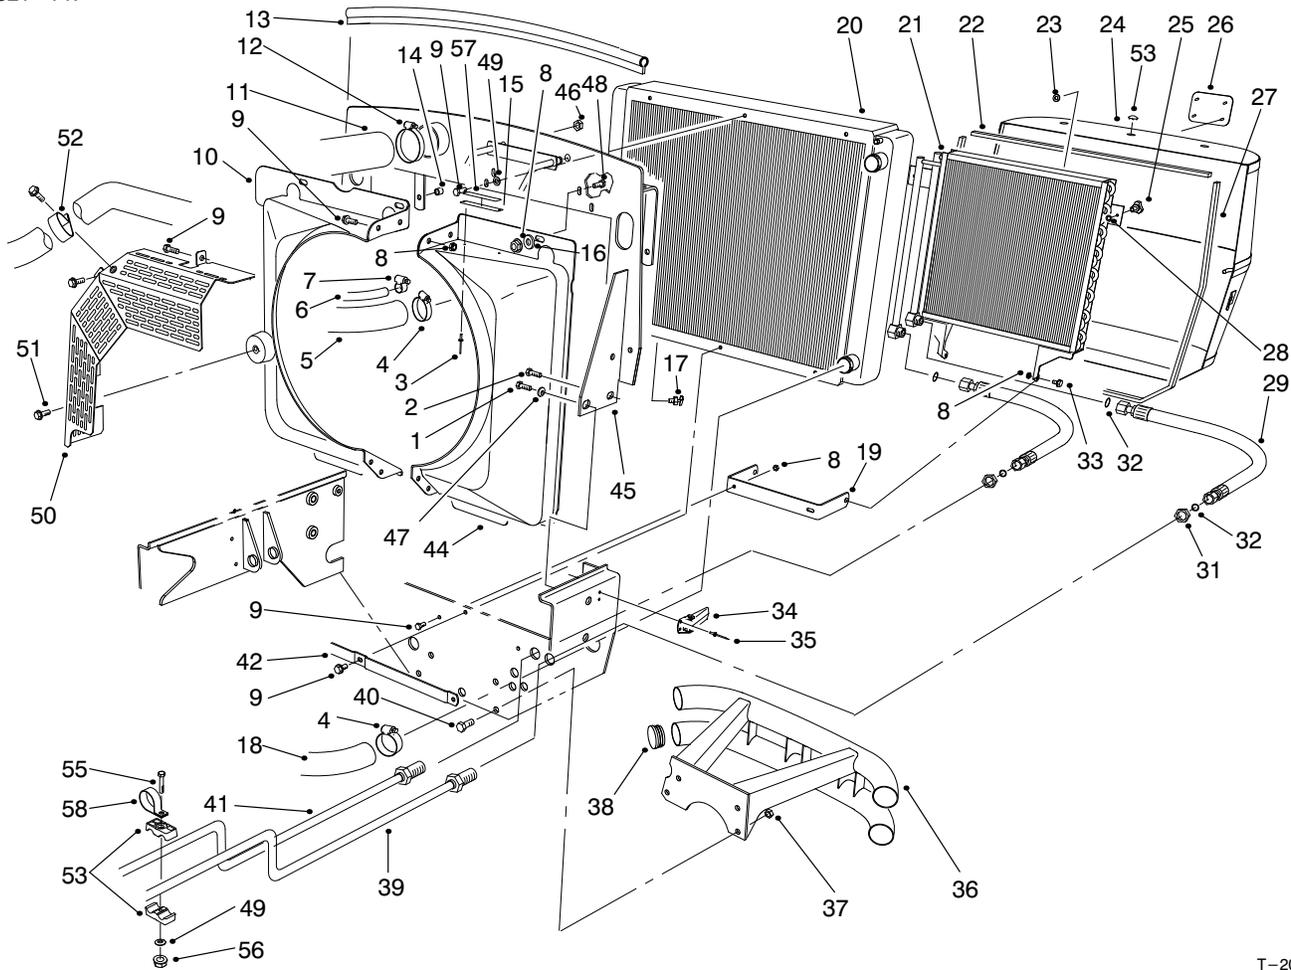


T-2073-5

RADIATOR & SHROUD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	33108-025	Screw-HHF	2
2	3234-18	Screw-HHF	2
3	3290-271	Rivet-Pop	2
4	2412-3	Clamp-Hose	2
5	93-4215	Hose-Radiator, Upper Rear	1
6	92-7424	Hose-Radiator, Overflow	1
7	2412-36	Clamp-Hose	1
8	32128-20	Nut-Flange	4
9	3234-5	Screw-HF	10
10	92-7374	Shroud-Fan RH	1
11	93-7584	Hose-Intake	1
12	2412-125	Clamp-Hose	1
13	93-7553	Seal-Hood	1
14	32148-10	Nut-Clinch	2
15	76-8750	Plate - Warning, Fan	1
16	3256-56	Washer-Flat	3
17	304-46	Nut-Drain Cock	1
18	92-7463	Hose-Radiator, Lower	1
19	92-7516	Bracket-Support, Cooler	1
20	74-3410	Asm-Radiator	1
21	82-3740	Cooler-Oil	1
22	92-7631	Sealstrip-Screen	1
23	94-2638	Nut-Push On	4
24	92-7505	Screen	1
25	77-3620	Retainer-Cover	2
26	93-6028	Plate-Logo, Toro	1
27	93-4208	Strip-Seal, Screen	1
28	32151-72	Retainer-Push On	2

Ref. No.	Part No.	Description	No. Used
29	92-7535	Asm-Hose, Oil Cooler	2
31	340-74	Nut-Bulkhead	2
32	237-65	O-Ring	4
33	37-8771	Bolt-Shoulder	2
34	69-3020	Latch-Draw	2
35	3269-4	Rivet-Pop	4
36	94-3084	Bumper (Model 03803)	1
36	92-7623	Bumper (Model 03804)	1
37	3296-23	Nut-Lock	4
38	2410-42	Cap-Bumper (Model 03803)	2
38	2410-42	Cap-Bumper (Model 03804)	4
39	92-7493	Asm-Tube, Filter	1
40	325-5	Screw-HH	2
41	92-7558	Asm-Tube, Cooler	1
42	92-7416	Strap-Radiator	1
44	92-7375	Shroud-Fan LH	1
45	92-7388	Support-Radiator	1
46	3296-23	Nut-Lock	2
47	3256-27	Washer-Flat	2
48	3230-2	Screw-Carriage	3
49	3256-23	Washer-Flat	4
50	94-2646	Guard-Fan (Europe)	1
51	33104-020	Screw-HHF (Europe)	3
52	2412-96	Clamp-R (Europe)	1
53	2410-64	Button-Plug	3
54	94-8105	Clamp-Tube	2

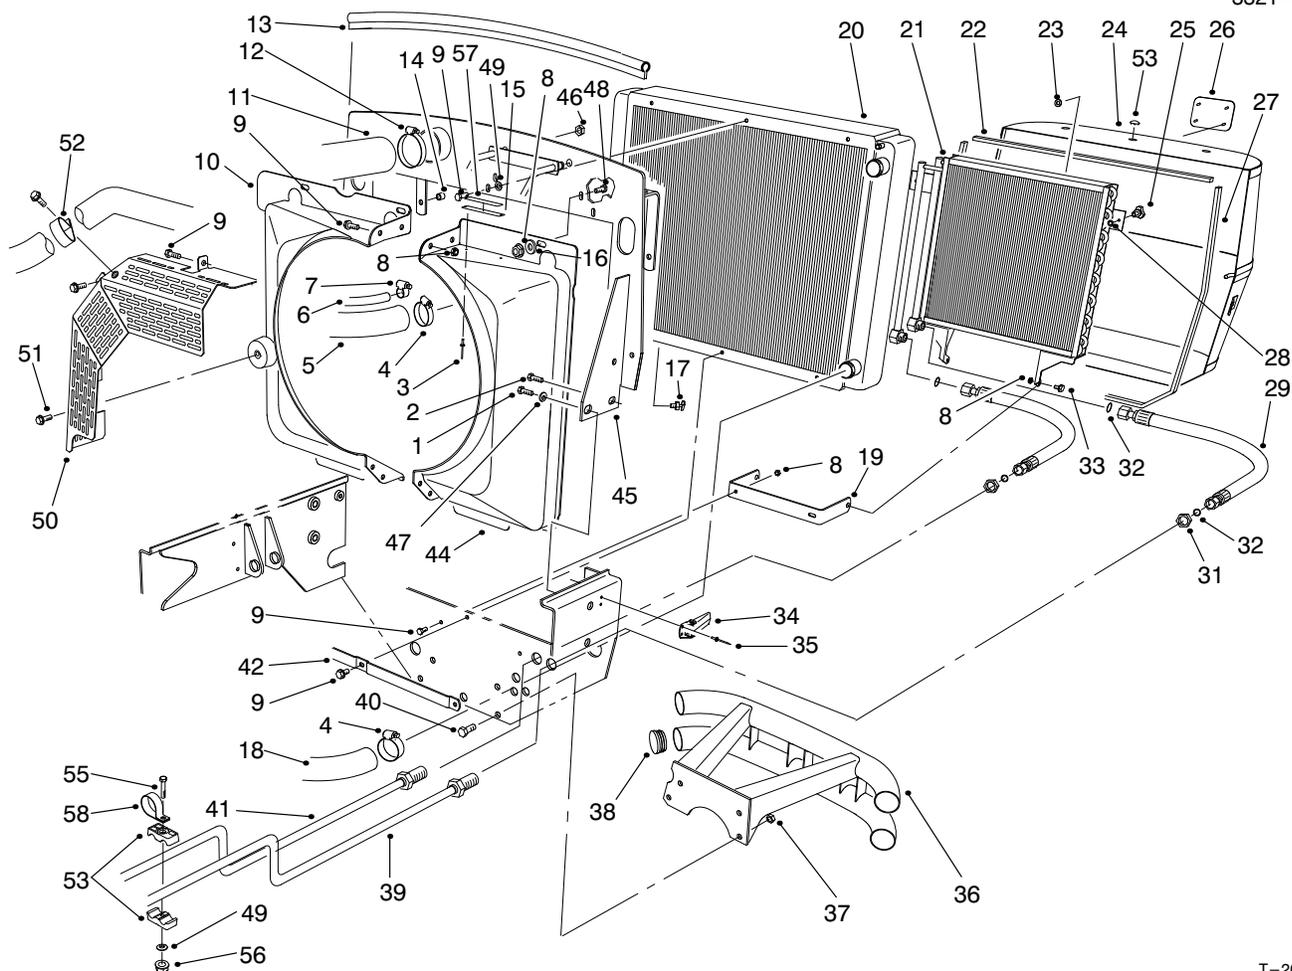


T-2073-5

RADIATOR & SHROUD ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
55	322-9	Screw-HH	1
56	3296-47	Nut-Lock	1

Ref. No.	Part No.	Description	No. Used
57	93-6681	Decal-Warning, Fan (Europe)	1
58	2412-147	Clamp - R	1

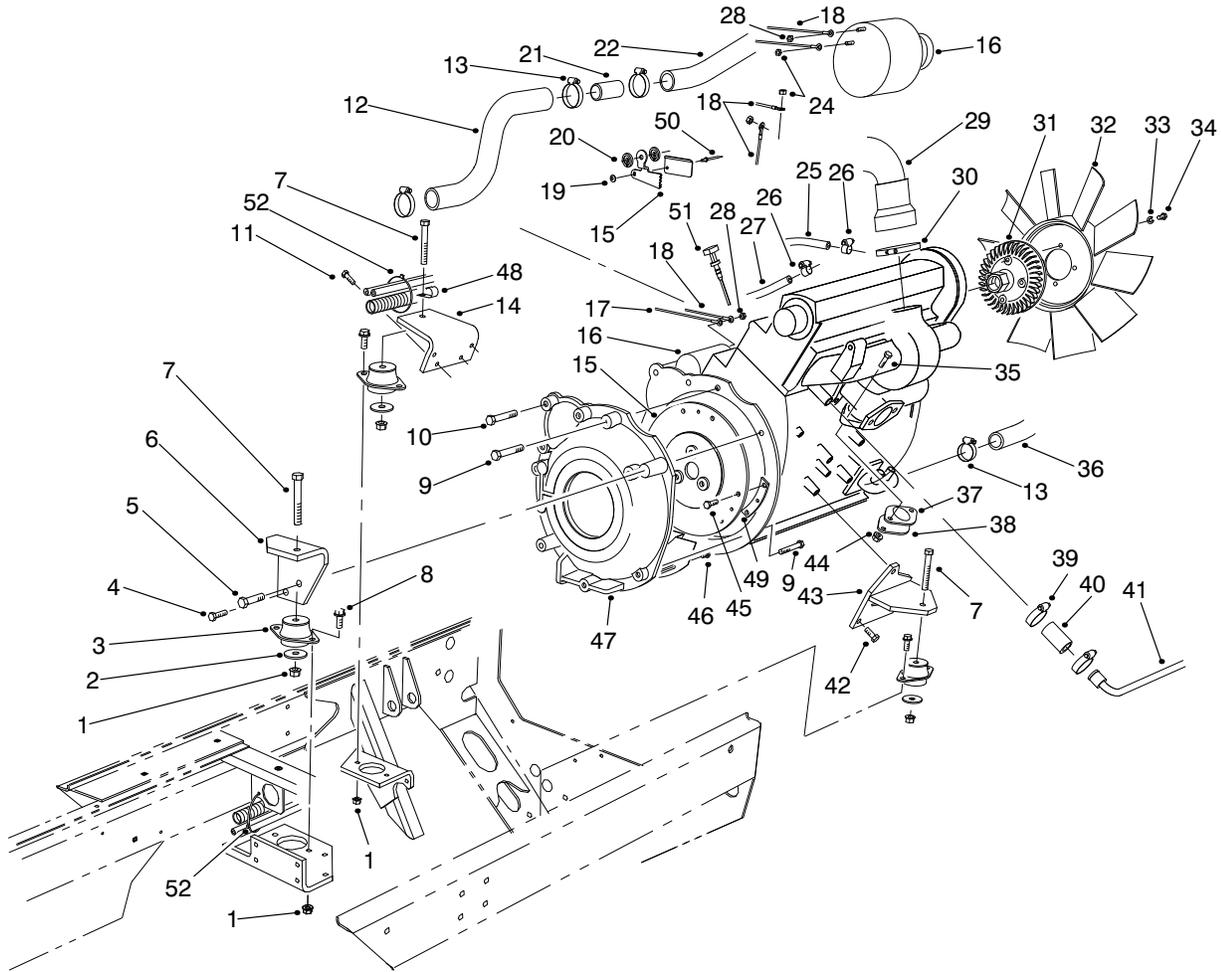


T-2074-1

ENGINE INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	33005-00	Nut-HF	9	27	63-7627	Hose-Fuel	1
2	87-5100	Washer-Snubbing	3	28	48-7930	Nut-Hex.	2
3	53-9681	Mount-Rubber	3	29	94-2624	Hose-Manifold	1
4	48-9470	Screw	1	30	2412-125	Clamp-Hose	1
5	48-7840	Screw-HH	1	31	92-7466	Clutch-Fan	1
6	92-7425	Support-Mount, Engine	1	32	74-3650	Fan-Engine	1
7	33105-070	Screw-HHF	3	33	3253-4	Washer-Lock	4
8	33105-030	Screw-HHF	6	34	322-3	Screw-HH	4
9	48-7570	Screw-HH	3	35	33104-020	Screw-HHF	2
10	48-7810	Screw-HH	3	36	92-7463	Hose-Radiator, Lower	1
11	66-3160	Screw	4	37	77-3700	Gasket-Exhaust, Manifold	1
12	94-1418	Hose-Radiator, Upper	1	38	92-7382	Cover-Manifold	1
13	2412-3	Clamp-Hose	4	39	2412-129	Clamp-Hose	4
14	92-7429	Mount-Motor, RH	1	40	74-6490	Hose-Water Line	2
15	94-1421	Coupling-Center, Spring	1	41	92-7381	Tube-Water, Return	1
16	93-4233	Asm-Engine	1	42	48-7780	Screw-HH	3
17	75-1370	Cable-Battery, Positive	1	43	92-7426	Mount-Motor	1
18	94-3090	Harness-Wire, Main	1	44	33004-00	Nut-HF	2
*	94-9967	Circuit Breaker-50 Amp	1	45	48-7700	Screw-HH	6
*	94-9968	Circuit Braker-100 Amp	1	46	48-7610	Screw-HH	3
19	3256-49	Washer-Flat	1	47	82-5120	Adapter-Pump To Engine	1
20	86-2990	Mount-Cable, Throttle	2	48	2412-150	J-Clip	1
21	93-7594	Spacer-Tubular	1	49	92-1422	Spacer-Coupler	3
22	93-4215	Hose-Radiator, Upper Rear	1	50	3290-282	Rivet-Pop	1
24	48-7880	Nut	3	51	93-9176	Dipstick-Peugeot	1
25	92-7521	Hose-Fuel	1	52	3290-378	Tie-Cable	2
26	2412-108	Clamp-Hose	2				

*Not Illustrated

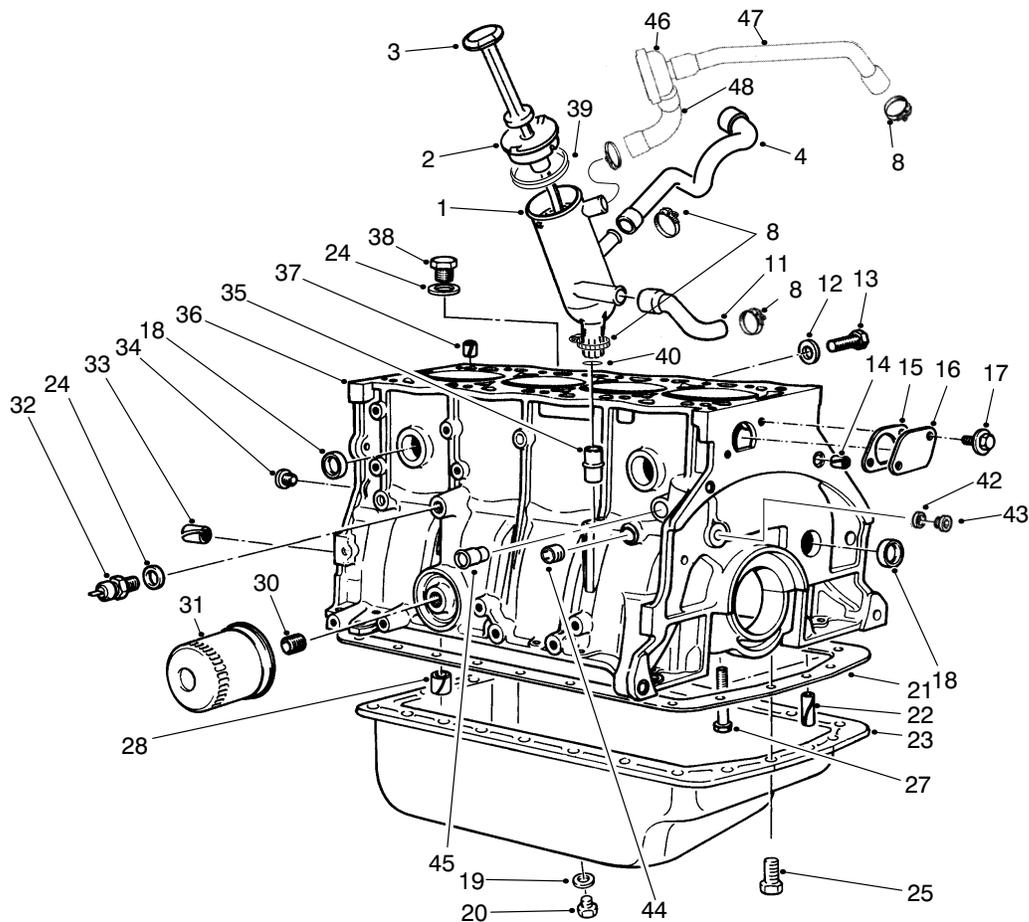


T-2142-3

CRANKCASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	94-3181	Oil Filler (Incl. Ref. 39)	1	27	74-7930	Screw-Bearing Cap	10
2	94-3182	Plug	1	28	74-7940	Bushing-Spring	1
3	93-9176	Dipstick-Oil	1	29	74-7950	Screw-Plate	6
4	94-3184	Union	1	30	74-7960	Stud-Filter	1
8	2412-129	Clamp-Hose	8	31	74-7970	Filter-Oil	1
11	74-7770	Hose-Crankcase	1	32	94-3180	Switch-Pressure	1
12	74-7780	Gasket	1	33	74-7990	Pin-Spring	4
13	74-7790	Screw	1	34	74-8000	Plug	2
14	94-3102	Pin	2	35	74-8010	Guide-Dipstick	1
15	74-7810	Gasket-Plate	1	36	94-3100	Asm-Short Block (Incl. Pistons next page)	1
16	74-7820	Plate	1	37	74-8030	Pin-Spring	1
17	94-3112	Screw-Washer Hd.	2	38	94-3105	Plug-Drain	1
18	74-7840	Plug-27 mm Dia.	8	39	94-3183	Gasket	1
*	94-3108	Plug-27.5 mm Dia.	8	40	94-3186	O-Ring	1
*	94-3109	Plug-28.5 mm Dia.	9	42	94-3106	Gasket	2
19	74-7320	Gasket	1	43	94-3104	Plug-Threaded	2
20	74-7310	Plug-Threaded	1	44	94-3103	Plug-Threaded	1
21	74-7380	Gasket-Oil Pan	1	45	94-3110	Stud	1
22	94-3111	Pin-Groove	2	46	94-3190	PCV Valve	1
23	74-7300	Pan-Oil	1	47	94-3192	Union	1
24	94-3107	Gasket	2	48	94-3191	Union	1
25	74-7330	Screw-HH	23	*	94-3101	Gasket Set (Without Head Gasket)	1
26	77-3790	Plug-Drain	1				

*Not Illustrated

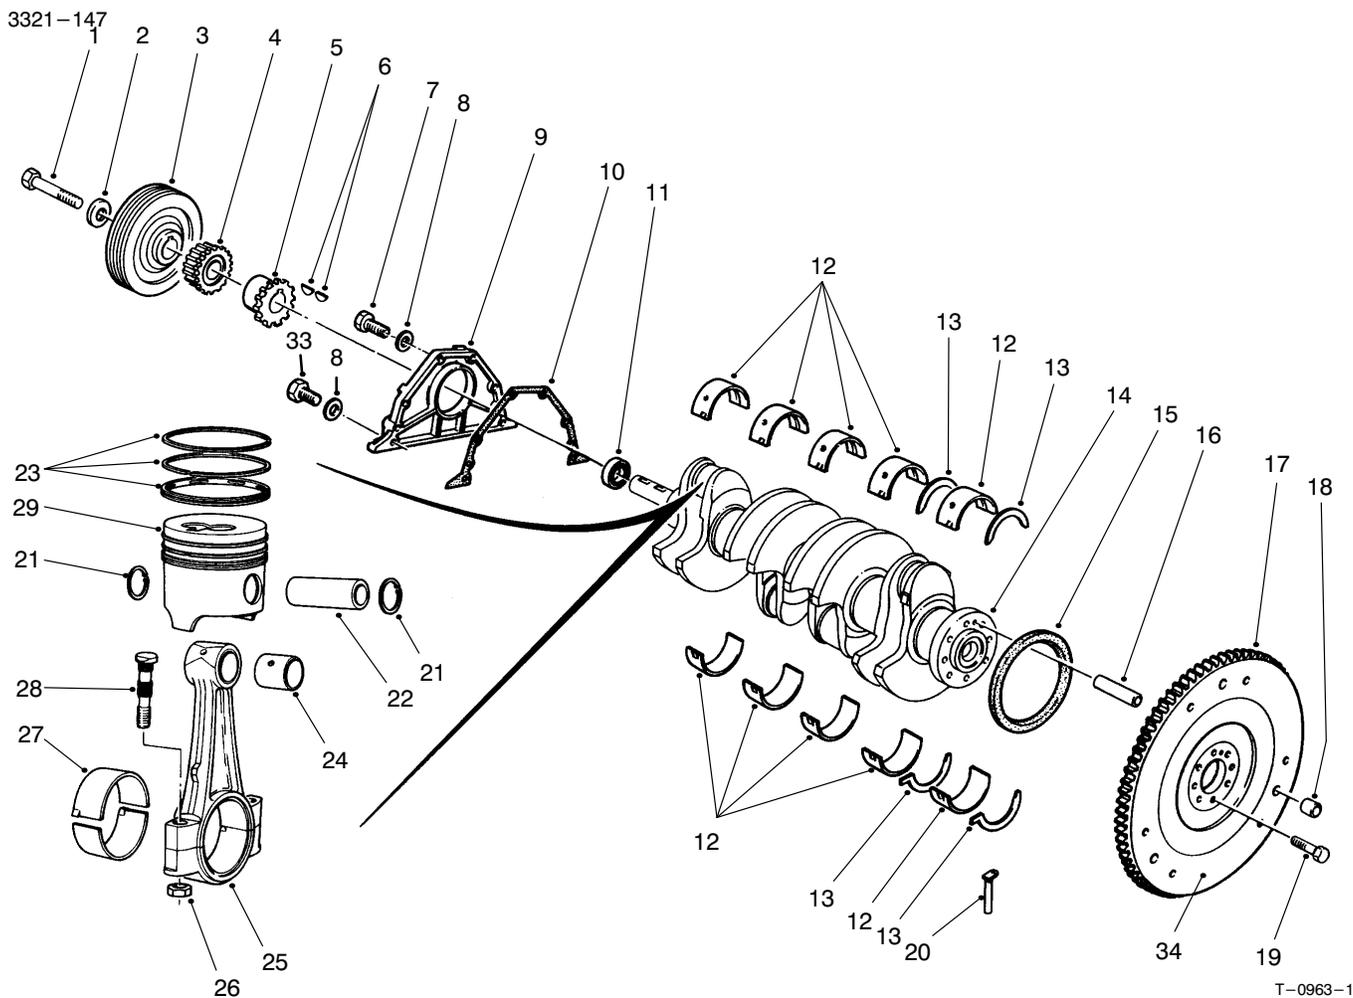


T-0963-1

CRANKSHAFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	94-3145	Screw-HH	1
2	94-3146	Washer	1
3	94-3144	Pulley	1
4	74-8100	Gear-Pinion	1
5	95-3485	Sprocket-Oil Pump	1
6	74-8120	Key-Woodruff	2
7	94-3150	Screw-HH	4
8	94-3151	Washer	6
9	74-8140	Cover	1
10	74-8150	Gasket-Cover	1
11	94-3148	Seal-Shaft	1
12	74-8170	Bearing Set (Std.)	2
*	94-3140	Bearing Set (.30mm OS)	2
13	94-3141	Thrust Bearing Set (Std.)	2
*	94-3142	Thrust Bearing Set (.10mm OS)	2
*	74-8210	Thrust Bearing Set (.15mm OS)	2
*	94-3143	Thrust Bearing Set (.20mm OS)	2
14	74-8230	Crankshaft	1
15	94-3147	Seal	1
16	74-7990	Pin	1
17	94-3149	Gear-Flywheel	1
18	74-8270	Pin	3
19	95-3484	Screw-HH	8
20	74-8290	Seal-#1 Bearing Cap	2
21	74-8300	Clip-Piston Pin	8

Ref. No.	Part No.	Description	No. Used
22	74-8310	Pin-Piston	4
23	94-3158	Piston Ring Set Std.	4
*	74-8320	Piston Ring Set-0.20 mm	4
*	74-8330	Piston Ring Set-0.50 mm	4
*	74-8340	Piston Ring Set-0.80 mm	4
24	98-9965	Bushing-Sleeve	4
25	74-8360	Rod-Connecting (Set of 4)	4
26		Nut-Hex.	8
27	74-8380	Bearing-Connecting Rod (Std.)	4
*	94-3155	Bearing-Connecting Rod (49.7mm ID)	4
28	94-3156	Bolt-Connecting Rod (Incl. Ref. #26)	8
29	94-3157	Piston Set-Std. (Incl. Ref. #21-23)	1
29	74-8420	Piston Set-Stage #1 (83.13mm OD) (Incl. Ref. #21-23)	1
*	74-8430	Piston Set-Stage #2 (83.43mm OD) (Incl. Ref. #21-23)	1
*	74-8440	Piston Set-Stage #3 (83.73mm OD) (Incl. Ref. #21-23)	1
33	94-3152	Screw-HH	2
34	74-8260	Flywheel	1

*Not Illustrated

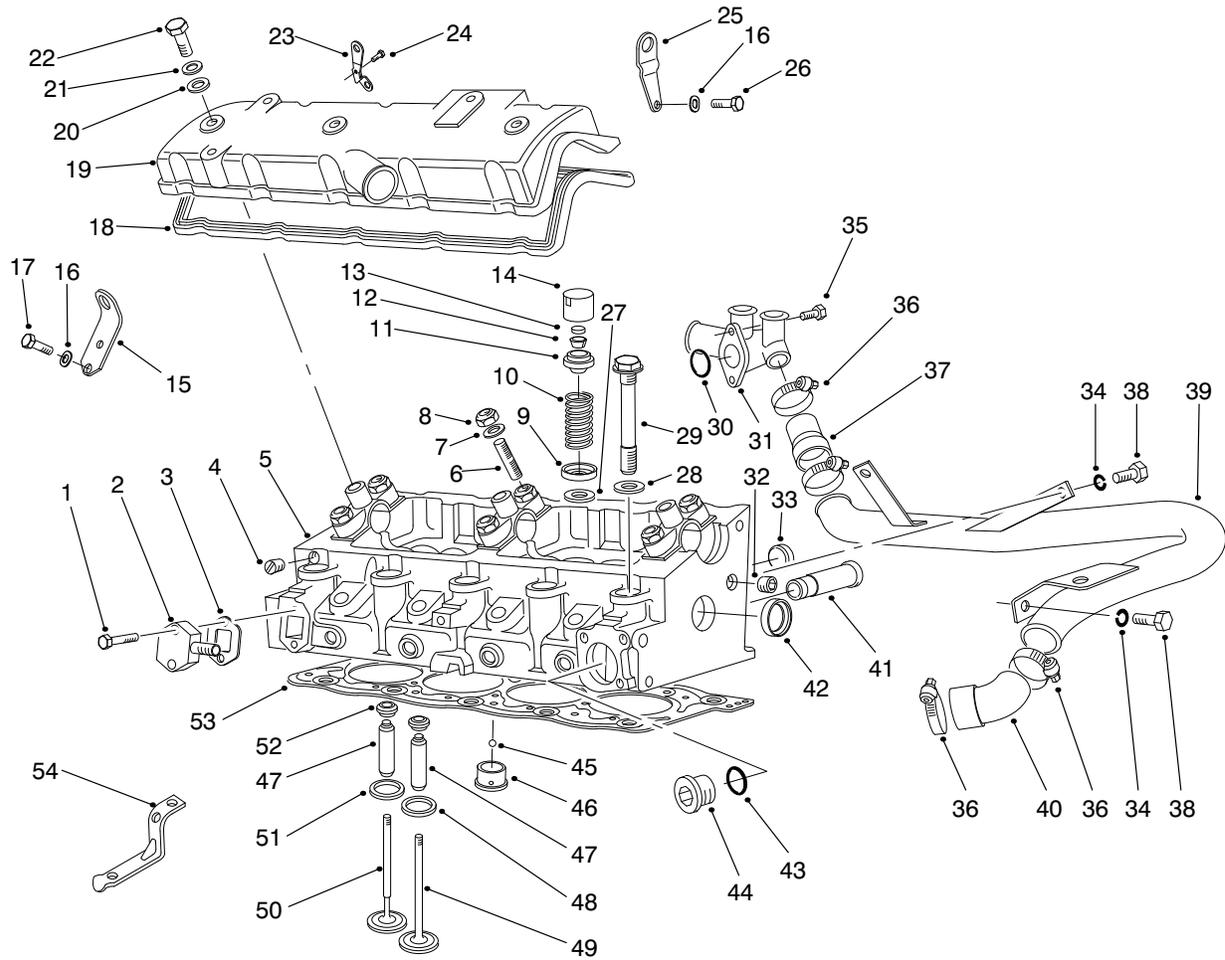


T-2148-4

CYLINDER HEAD ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	94-3123	Screw-HH	2	13	74-6720	Insert-Valve (2.400mm)	8
2	94-3117	Plate	1	*	74-6730	Insert-Valve (2.425mm)	8
3	94-3116	Gasket	1	*	74-6740	Insert-Valve (2.450mm)	8
4	74-7600	Plug	4	*	74-6750	Insert-Valve (2.475mm)	8
5	94-3113	Asm-Cylinder Head	1	*	74-6760	Insert-Valve (2.500mm)	8
6	76-5130	Stud	6	*	74-6770	Insert-Valve (2.525mm)	8
7	74-8900	Washer-Flat	6	*	74-6780	Insert-Valve (2.550mm)	8
8	94-3115	Nut-Lock	6	*	74-6790	Insert-Valve (2.575mm)	8
9	74-6570	Cup-Lower Valve Spring	8	*	74-6800	Insert-Valve (2.600mm)	8
10	74-6560	Spring-Valve	8	*	74-6810	Insert-Valve (2.625mm)	8
11	74-6550	Cup-Upper Valve Spring	8	*	74-6820	Insert-Valve (2.650mm)	8
12	74-7240	Collar-Split	16	*	74-6830	Insert-Valve (2.675mm)	8
13	74-6580	Insert-Valve (1.650mm)	8	*	74-6840	Insert-Valve (2.700mm)	8
*	74-6590	Insert-Valve (1.725mm)	8	*	74-6850	Insert-Valve (2.725mm)	8
*	74-6600	Insert-Valve (1.800mm)	8	*	74-6860	Insert-Valve (2.750mm)	8
*	74-6610	Insert-Valve (1.900mm)	8	*	74-6870	Insert-Valve (2.775mm)	8
*	74-6620	Insert-Valve (1.975mm)	8	*	74-6880	Insert-Valve (2.800mm)	8
*	74-6630	Insert-Valve (2.050mm)	8	*	74-6890	Insert-Valve (2.825mm)	8
*	74-6640	Insert-Valve (2.125mm)	8	*	74-6900	Insert-Valve (2.850mm)	8
*	74-6650	Insert-Valve (2.225mm)	8	*	74-6910	Insert-Valve (2.875mm)	8
*	74-6660	Insert-Valve (2.250mm)	8	*	74-6920	Insert-Valve (2.900mm)	8
*	74-6670	Insert-Valve (2.275mm)	8	*	74-6930	Insert-Valve (2.925mm)	8
*	74-6680	Insert-Valve (2.300mm)	8	*	74-6940	Insert-Valve (2.950mm)	8
*	74-6690	Insert-Valve (2.325mm)	8	*	74-6950	Insert-Valve (2.975mm)	8
*	74-6700	Insert-Valve (2.350mm)	8	*	74-6960	Insert-Valve (3.000mm)	8
*	74-6710	Insert-Valve (2.375mm)	8	*	74-6970	Insert-Valve (3.025mm)	8

*Not Illustrated

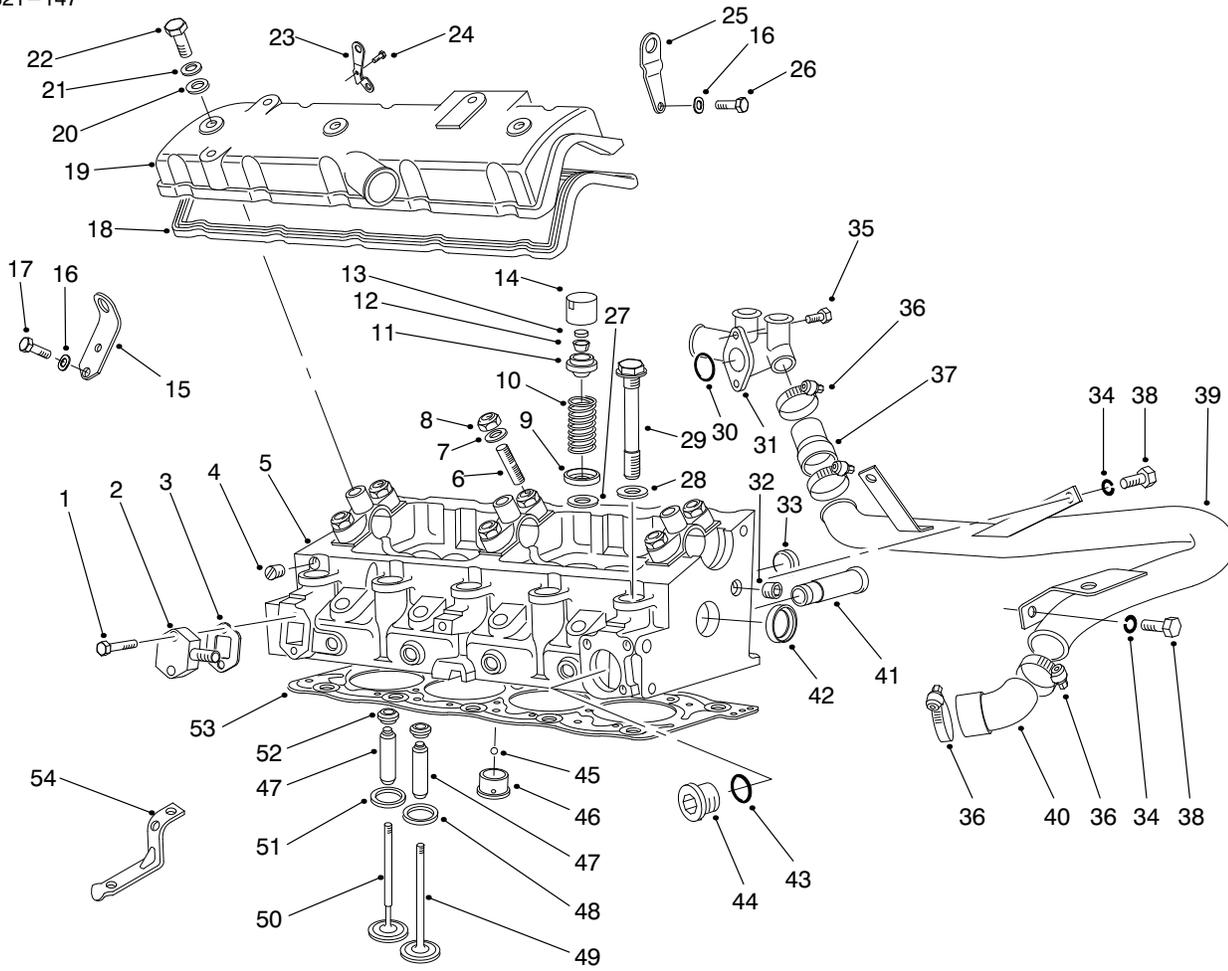


CYLINDER HEAD ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
13	74-6980	Insert-Valve (3.050mm)	8
*	74-6990	Insert-Valve (3.075mm)	8
*	74-7000	Insert-Valve (3.100mm)	8
*	74-7010	Insert-Valve (3.125mm)	8
*	74-7020	Insert-Valve (3.150mm)	8
*	74-7030	Insert-Valve (3.175mm)	8
*	74-7040	Insert-Valve (3.200mm)	8
*	74-7050	Insert-Valve (3.225mm)	8
*	74-7060	Insert-Valve (3.250mm)	8
*	74-7070	Insert-Valve (3.275mm)	8
*	74-7080	Insert-Valve (3.300mm)	8
*	74-7090	Insert-Valve (3.325mm)	8
*	74-7100	Insert-Valve (3.350mm)	8
*	74-7110	Insert-Valve (3.375mm)	8
*	74-7120	Insert-Valve (3.400mm)	8
*	74-7130	Insert-Valve (3.425mm)	8
*	74-7140	Insert-Valve (3.450mm)	8
*	74-7150	Insert-Valve (3.475mm)	8
*	74-7160	Insert-Valve (3.500mm)	8
*	74-7170	Insert-Valve (3.550mm)	8
*	74-7180	Insert-Valve (3.625mm)	8
*	74-7190	Insert-Valve (3.700mm)	8
*	74-7200	Insert-Valve (3.775mm)	8
*	74-7210	Insert-Valve (3.850mm)	8
*	74-7220	Insert-Valve (3.925mm)	8
*	74-7230	Insert-Valve (4.000mm)	8

*Not Illustrated

Ref. No.	Part No.	Description	No. Used
14	74-6540	Tappet-Valve	8
15	94-3135	Bracket-Lifting	1
16	74-7560	Washer-Spring	3
17	76-5440	Screw	2
18	74-7630	Gasket-Valve Cover	1
19	74-7640	Cover-Valve	1
20	74-7650	Washer-Flat	3
21	94-3125	Washer	3
22	94-3124	Bolt-Valve Cover	3
23	94-3136	Bracket-Lifting	1
24	94-3138	Screw	1
25	94-3137	Bracket-Lifting	1
26	94-3139	Screw	1
27	94-3174	Washer	8
28	74-7270	Washer-Flat	10
29	74-7260	Bolt-Head	10
30	94-3197	O-Ring	1
31	94-3196	Inlet-Water	1
32	94-3118	Plug	1
33	74-7840	Plug-27 mm Dia.	2
*	94-3108	Plug-27.5 mm Dia.	2
*	94-3109	Plug-28.5 mm Dia.	2
34	68-9420	Washer-Lock	3
35	94-3198	Screw	2
36	2412-129	Clamp-Hose	4
37	94-3200	Hose-By-Pass	1

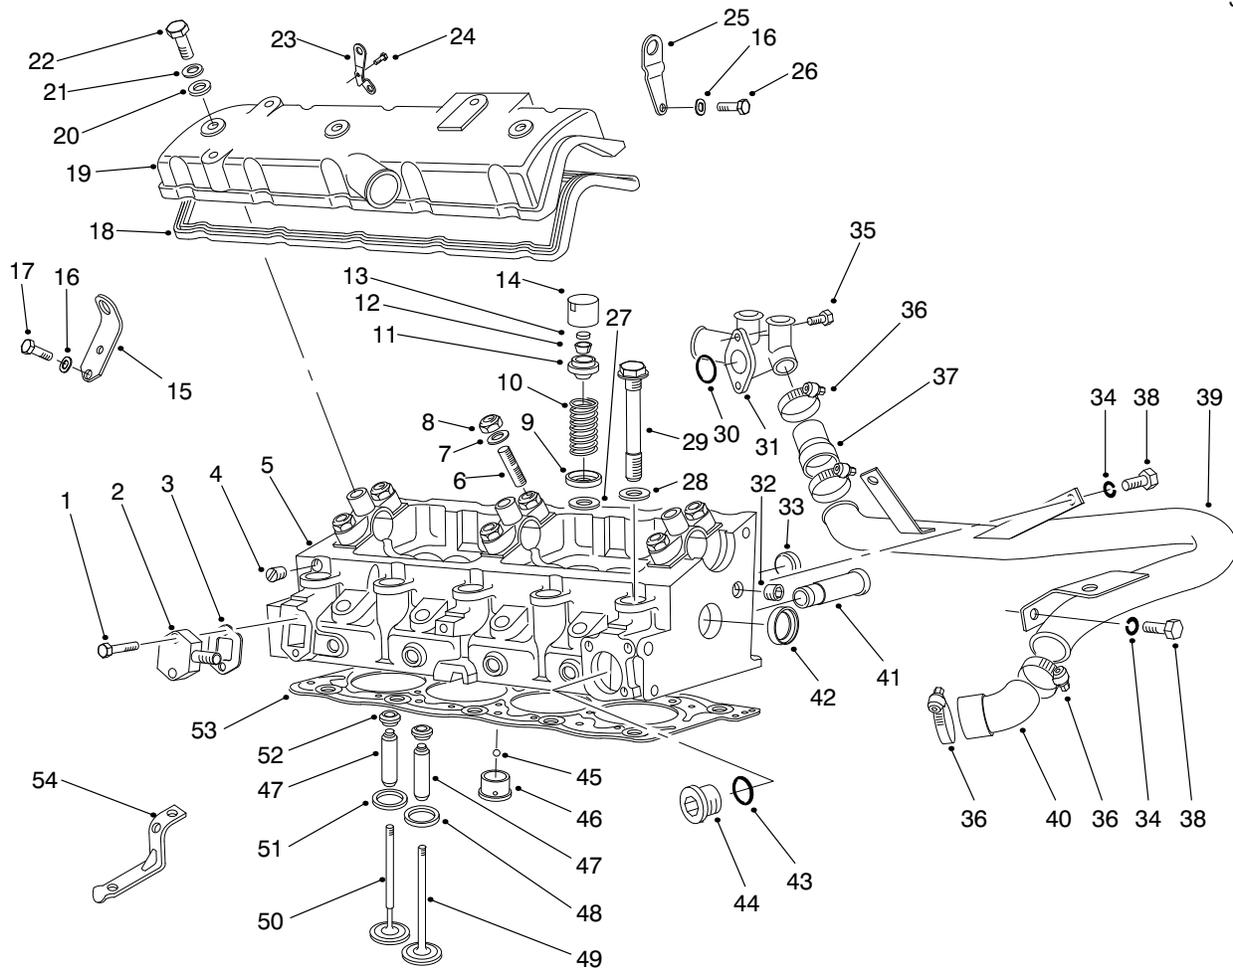


T-2148-4

CYLINDER HEAD ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
38	48-7700	Screw-HH	3
39	94-3199	Pipe-By-Pass	1
40	98-9971	Hose-By-Pass	1
41	74-7400	Tube	1
42	74-7840	Plug	2
43	94-3122	Gasket	1
44	94-3121	Plug	1
45	74-7420	Ball	4
46	74-7430	Chamber-Turbulence (32.45mm)	4
*	74-7440	Chamber-Turbulence (32.65mm)	4
47	92-7792	Guide-Valve (14.29mm)	8
*	92-7793	Guide-Valve (14.59mm)	8
48	74-7450	Seat-Intake Valve (39.3mm)	4
*	74-7460	Seal-Intake Valve (39.5mm)	4

Ref. No.	Part No.	Description	No. Used
49	74-7480	Valve-Intake	4
50	92-7794	Valve-Exhaust	4
51	92-7795	Seat-Exhaust Valve (34.5mm)	4
52	92-7791	Seal-Valve	8
53	94-8132	Gasket-Head (1.48 mm)	1
*	94-8133	Gasket-Head (1.52 mm)	1
*	94-8134	Gasket-Head (1.58 mm)	1
*	94-8135	Gasket-Head (1.62 mm)	1
54	94-3120	Bracket	1
*	74-7670	Head Bolt & Washer Set (Incl. Ref. #28 & 29)	1
*	94-3119	Kit-Gasket	1
*	94-9965	Asm-Head, Cylinder	1

*Not Illustrated

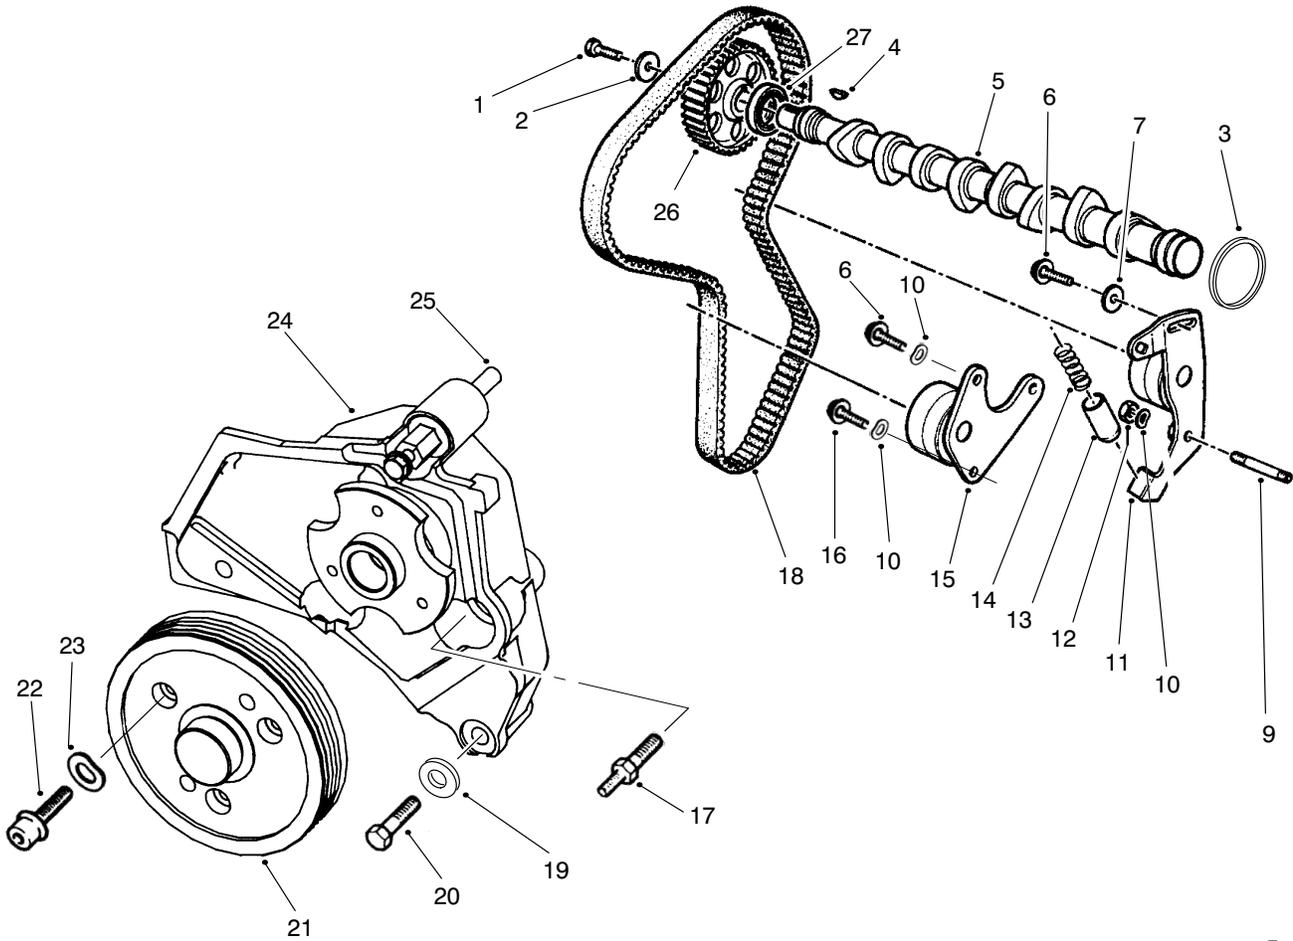


T-2141-1

CAMSHAFT & FAN SUPPORT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	77-3440	Screw	2
2	77-3450	Washer	2
3	77-3420	Gasket	1
4	77-3410	Key	1
5	77-3400	Camshaft	1
6	94-3163	Screw	1
7	94-3166	Washer-Flat	1
9	94-3162	Stud	1
10	94-3164	Washer-Spring	4
11	94-3159	Asm-Roller	1
12	94-3165	Nut-Lock	1
13	77-3520	Cup	1
14	77-3510	Spring	1

Ref. No.	Part No.	Description	No. Used
15	94-3160	Asm-Roller	1
16	94-3161	Screw	2
17	94-3170	Screw	1
18	74-8830	Belt	1
19	94-3172	Washer	3
20	94-3171	Screw	2
21	94-3168	Pulley-Fan	1
22	94-3173	Screw	3
23	76-5010	Washer	3
24	94-3167	Bracket-Fan	1
25	94-3169	Screw	1
26	92-7787	Pulley-Camshaft	1
27	94-9994	Gasket-Camshaft	1

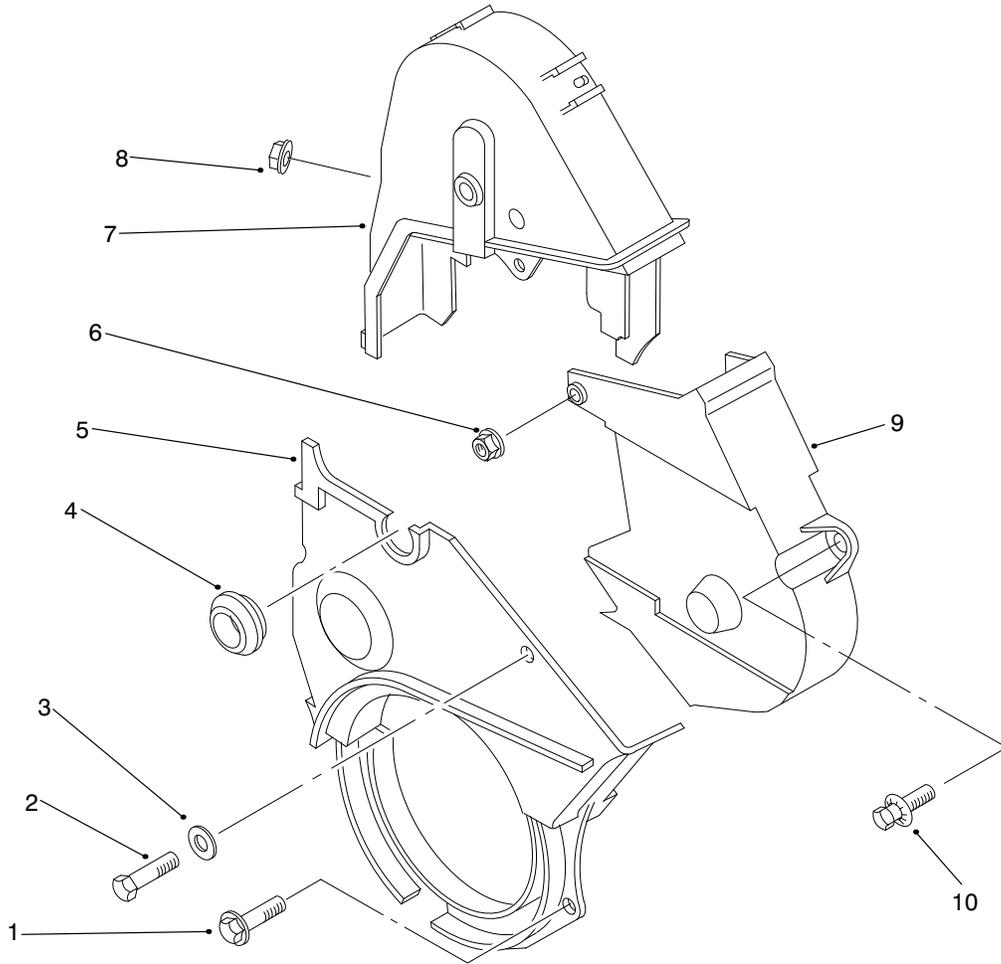


T-2140-2

TIMING COVER

Ref. No.	Part No.	Description	No. Used
1	94-3132	Screw	2
2	94-3130	Screw	1
3	94-3125	Washer-Flat	1
4	94-3129	Plug	1
5	94-3126	Protector-Lower	1

Ref. No.	Part No.	Description	No. Used
6	94-3133	Nut W/Washer	1
7	94-3127	Case-Timing, Left	1
8	94-3134	Nut	1
9	94-3128	Case-Timing, Right	1
10	94-3131	Screw	1

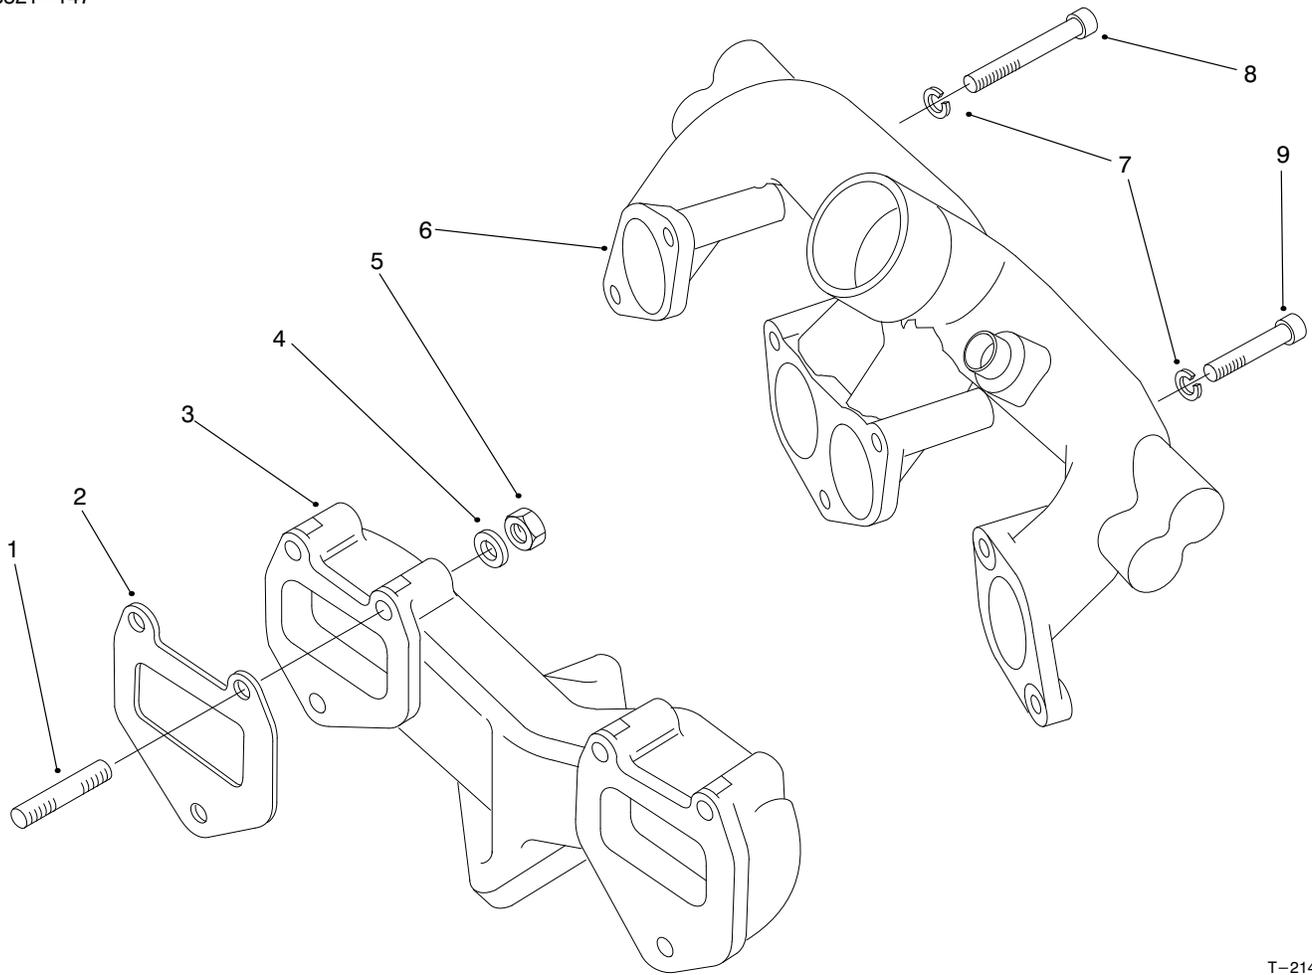


T-2149-3

INTAKE & EXHAUST MANIFOLD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	77-3300	Stud	6
2	77-3310	Gasket	2
3	77-3340	Manifold-Exhaust	1
4	68-9420	Washer-Lock	6
5	77-3320	Nut-Hex	6

Ref. No.	Part No.	Description	No. Used
6	94-3215	Manifold-Intake	1
7	94-3164	Washer-Spring	7
8	94-3216	Screw	5
9	94-3217	Screw	4
*	94-3218	Screw	1


*Not Illustrated

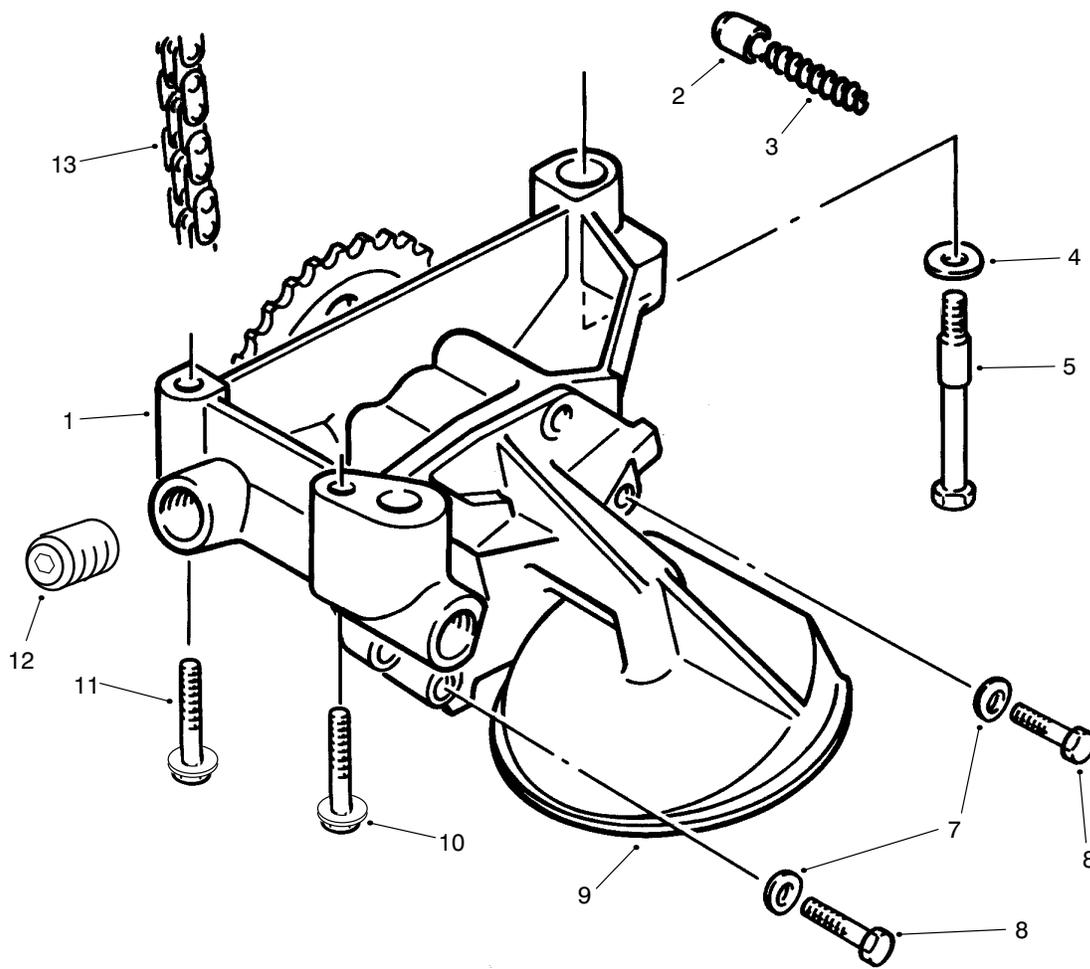

T-0964-2

OIL PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	76-5070	Asm-Oil Pump	1	8	94-3124	Screw-HH	2
2	94-3176	Gear-Oil Pump	1	9	94-3178	Strainer	1
3	76-5090	Spring-Piston	1	10	77-3470	Screw	1
4	94-3179	Washer-Spring	3	11	77-3490	Screw	1
5	76-5100	Bolt-Shoulder	1	12	94-3177	Plug	2
7	76-5010	Washer-Spring	5	13	76-5170	Chain-Pump Drive	1

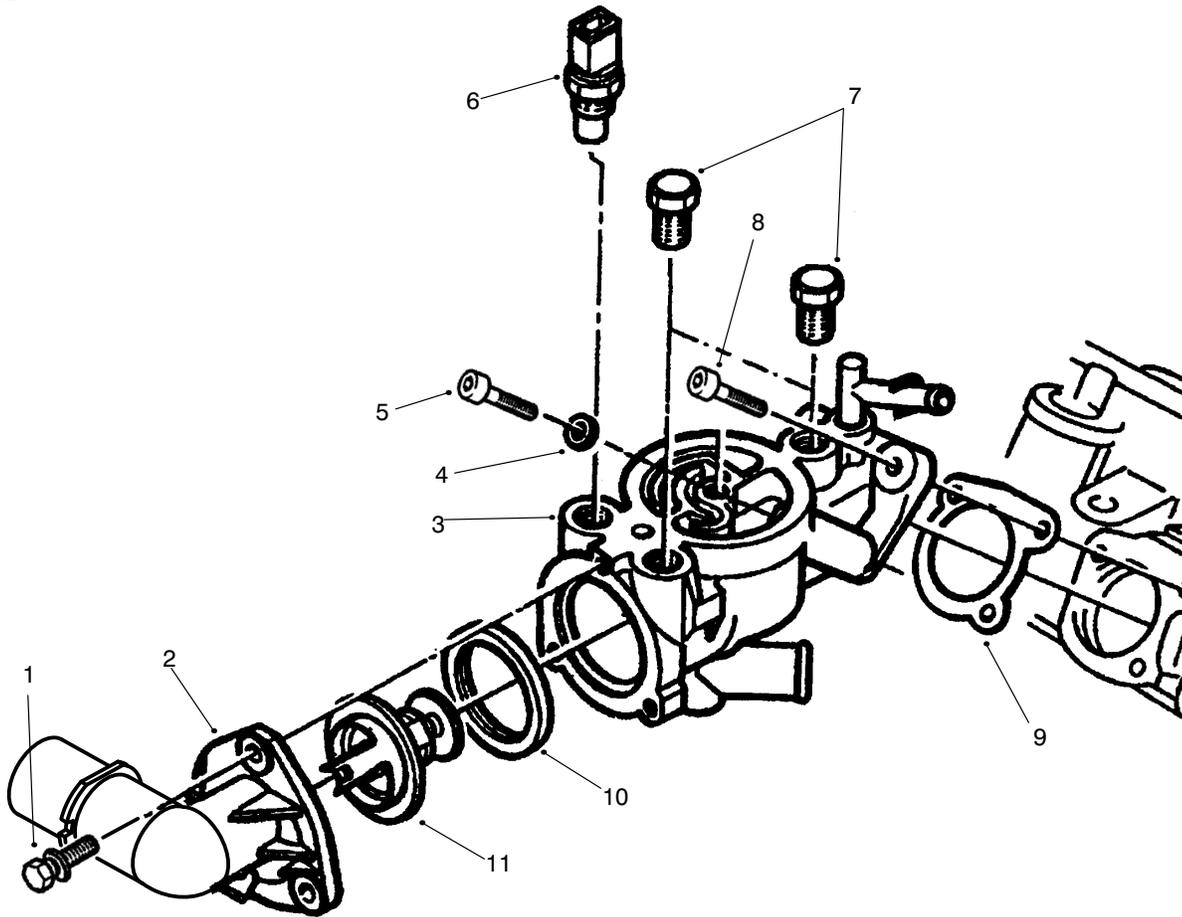


T-2143-3

COLLECTOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	94-3131	Screw	3
2	94-3208	Stub-Outlet	1
3	98-9970	Box-Outlet	1
4	94-3207	Ring	1
5	94-3214	Screw	1
6	94-3211	Temp Sending Unit	1

Ref. No.	Part No.	Description	No. Used
7	94-3212	Plug	2
8	94-3213	Screw	1
9	94-3206	Gasket	1
10	94-3210	Gasket	1
11	94-3209	Thermostat	1

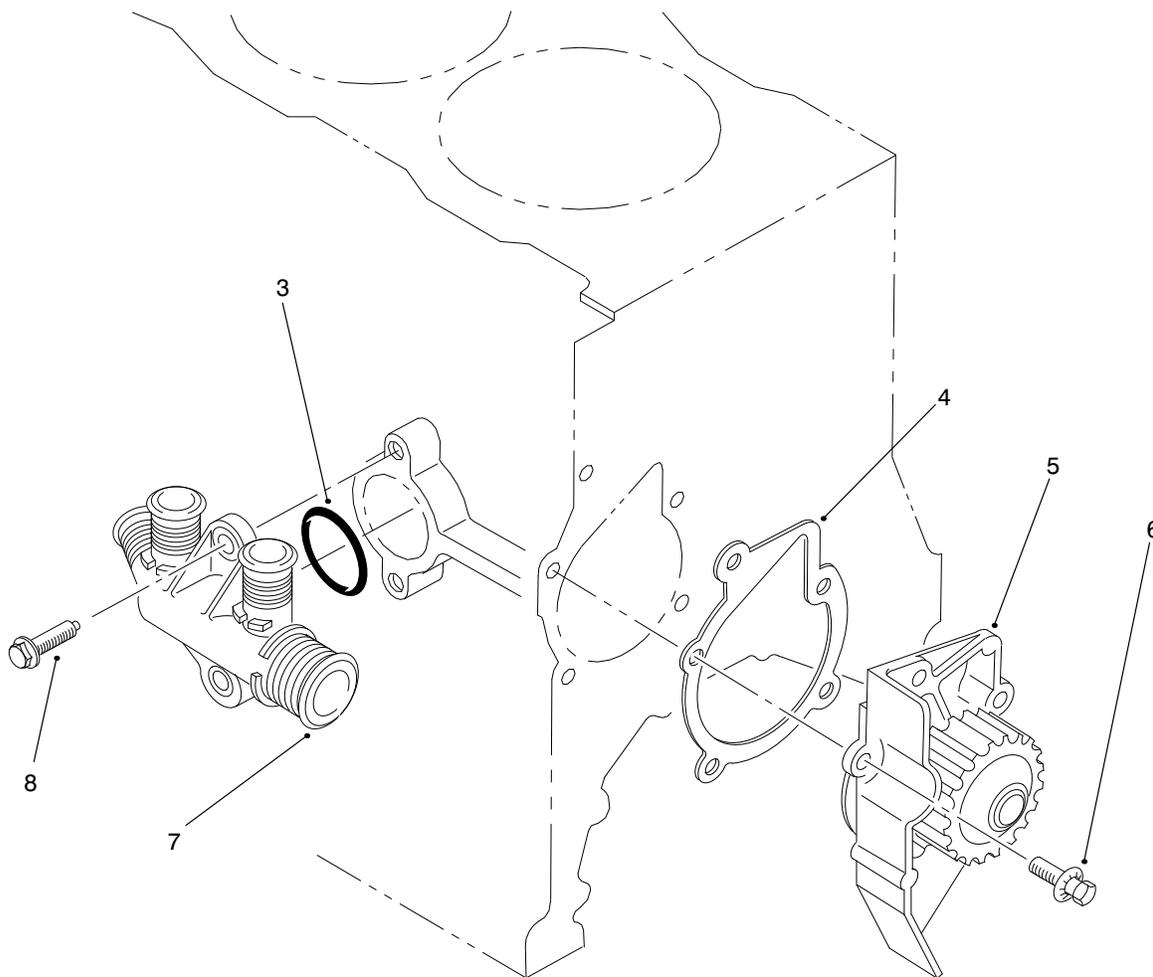


T-2144-1

WATER PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
3	94-3197	O-Ring	1
4	94-3195	Gasket-Pump, Water	1
5	98-9972	Cover-Pump, Water (Incl. Ref. #4)	1

Ref. No.	Part No.	Description	No. Used
6	76-5500	Screw	5
7	94-3196	Inlet-Water	1
8	94-3198	Screw	2

3321-147

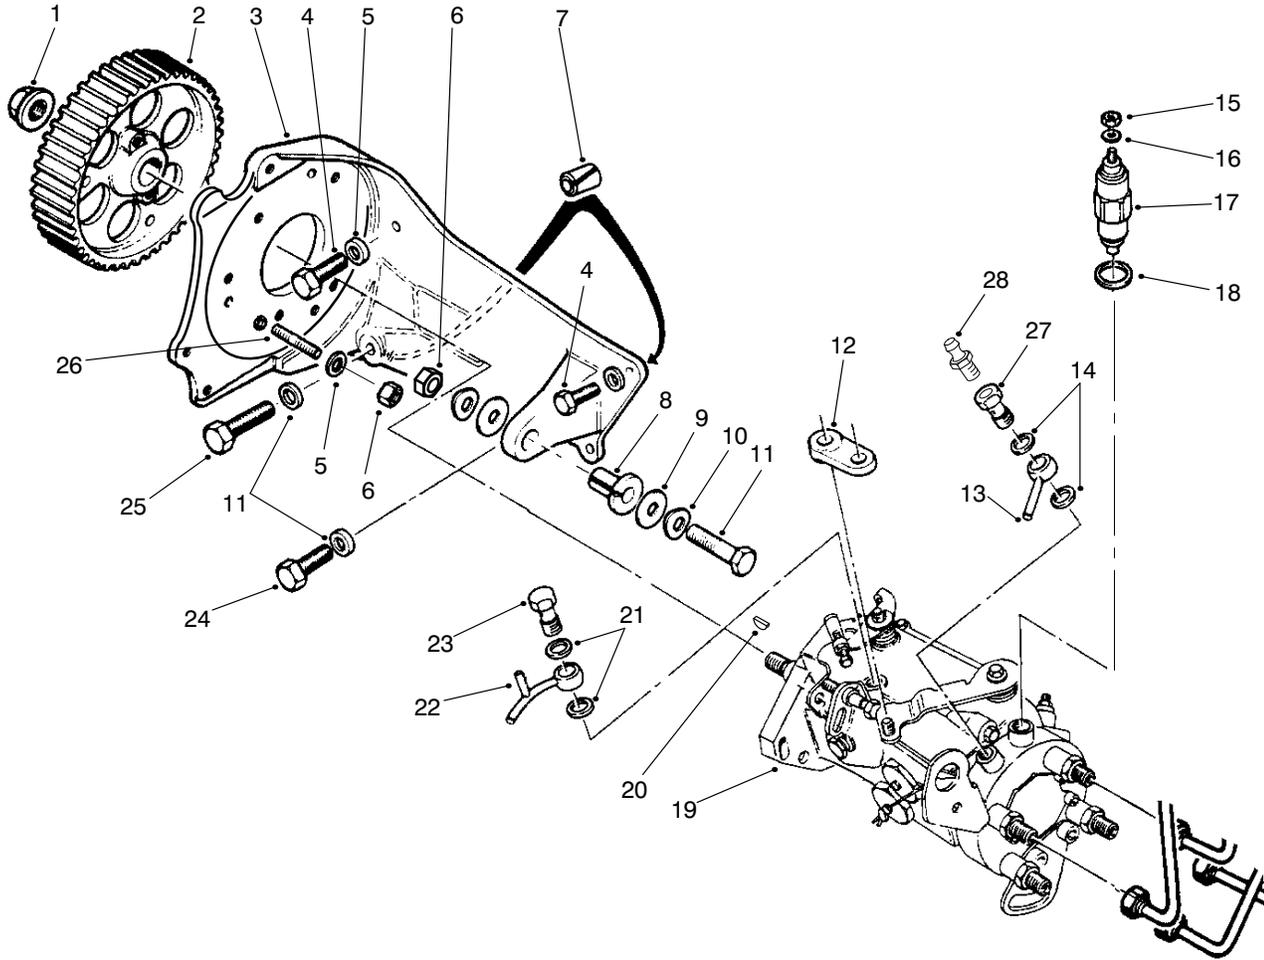


T-2146-1

FUEL INJECTION PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	76-4950	Nut	1
2	76-4940	Gear-Pump, Injection	1
3	94-3220	Bracket	1
4	94-3225	Screw	2
5	76-4930	Washer	3
6	94-3165	Nut	4
7	74-8610	Pin	2
8	74-8630	Bushing-Flange	1
9	94-3224	Washer-Flat	2
10	94-3164	Washer-Spring	6
11	94-3221	Screw	1
12	74-8650	Journal	1
13	74-8670	Union-Inlet	1
14	74-8680	Gasket	2

Ref. No.	Part No.	Description	No. Used
15	94-3251	Nut	1
16	74-8710	Washer	1
17	98-8806	Valve-Solenoid	1
18	94-3274	O-Ring	1
19	94-3219	Pump-Injection	1
20	94-3222	Key	1
21	74-8870	Gasket	2
22	94-3249	Tube-Outlet	1
23	94-3250	Screw-Connection	1
24	94-3161	Screw	1
25	94-3223	Screw	1
26	76-4910	Stud	3
27	94-9969	Screw-Connection	1
28	93-5835	Screw-Purge	1

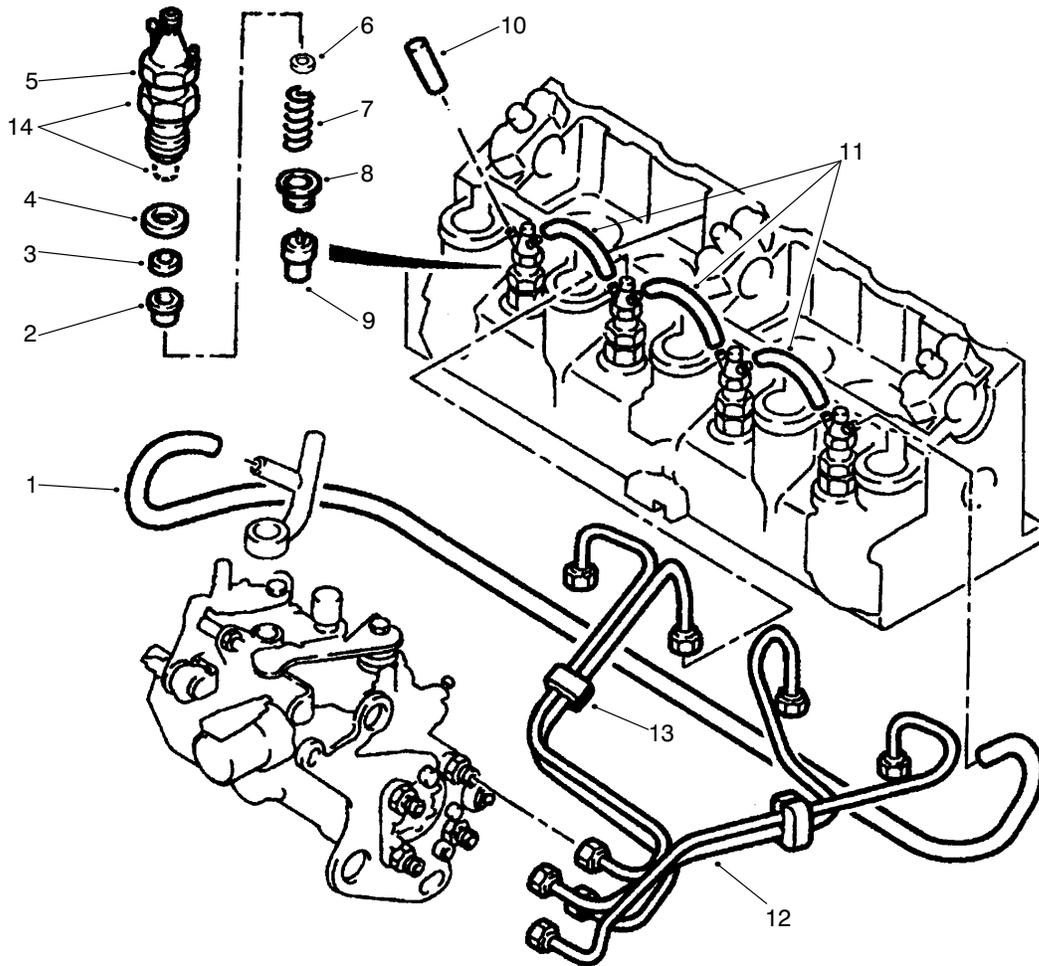


T-2145-2

FUEL INJECTOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	94-3230	Hose	1	6	94-3242	Washer-1.30 mm	4
2	76-5540	Plug	4	*	94-3243	Washer-1.33 mm	4
3	76-5530	Gasket-Injector	4	*	94-3244	Washer-1.36 mm	4
4	94-3226	Gasket-Injector	4	*	94-3245	Washer-1.39 mm	4
5	76-5520	Holder-Injector	4	*	94-3246	Washer-1.42 mm	4
6	94-3232	Washer-0.79 mm	4	*	94-3247	Washer-1.45 mm	4
*	94-3233	Washer-0.82 mm	4	*	94-3248	Washer-1.48 mm	4
*	94-3234	Washer-0.85 mm	4	7	94-3228	Spring	4
*	94-3235	Washer-0.88 mm	4	8	94-3227	Spacer	4
*	94-3236	Washer-0.91 mm	4	9	94-8147	Nozzle-Injector	4
*	94-3237	Washer-0.94 mm	4	10	74-8770	Plug	1
*	94-3238	Washer-0.97 mm	4	11	94-3229	Union	3
*	94-3239	Washer-1.00 mm	4	12	74-8750	Pipe	1
*	94-3240	Washer-1.03 mm	4	13	94-3231	Bracket	2
*	94-3241	Washer-1.06 mm	4	14	76-5600	Asm-Holder, Injector	4

*Not Illustrated

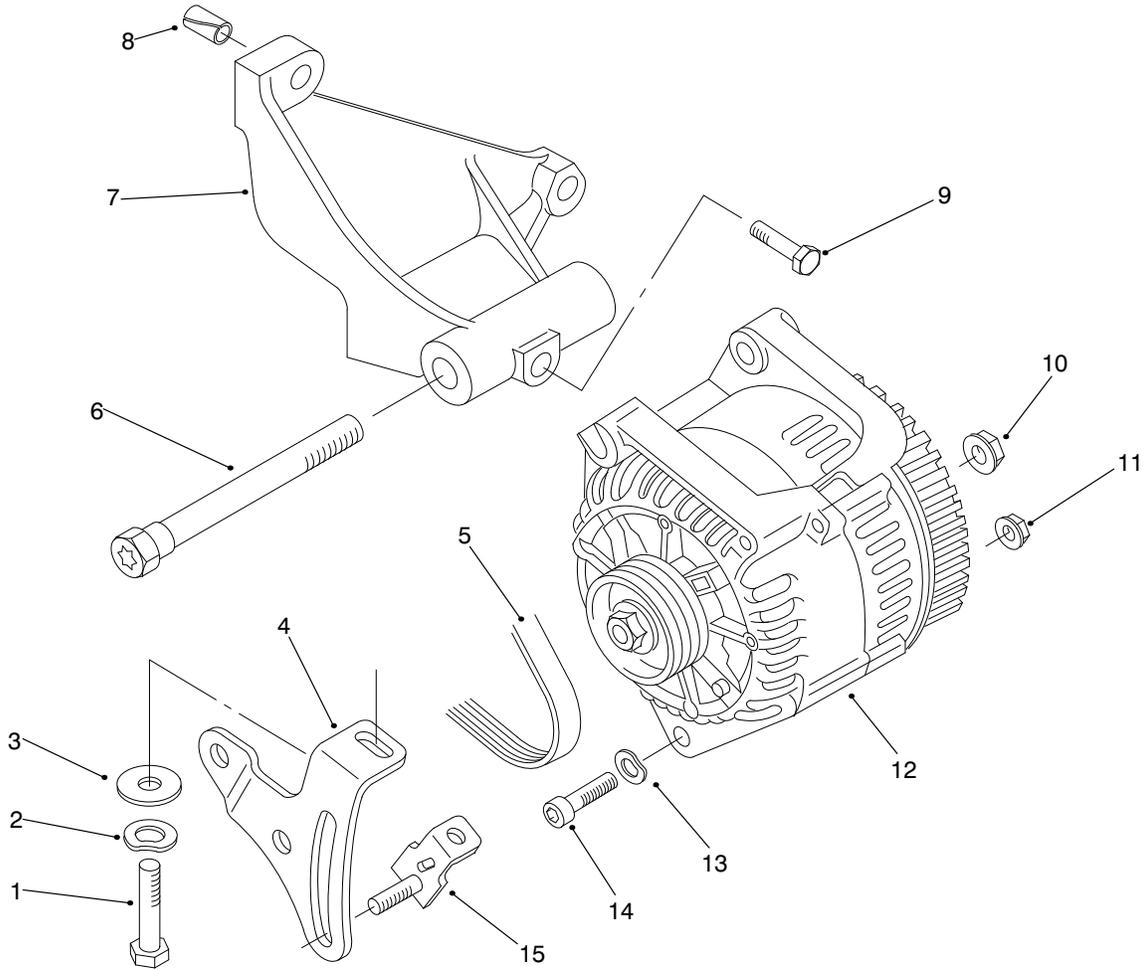


T-2147

ALTERNATOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	76-5060	Screw	1
2	76-5010	Washer-Spring	1
3	94-3260	Washer-Flat	1
4	94-3255	Slide	1
5	94-3256	Belt	1
6	94-3254	Screw	1
7	94-3253	Bracket	1
8	74-8610	Pin	2

Ref. No.	Part No.	Description	No. Used
9	94-3259	Screw	1
10	94-3262	Nut	1
11	94-3261	Nut	1
12	94-3252	Alternator	1
13	94-3257	Washer-Spring	1
14	94-3258	Screw	1
15	76-4990	Bracket	1

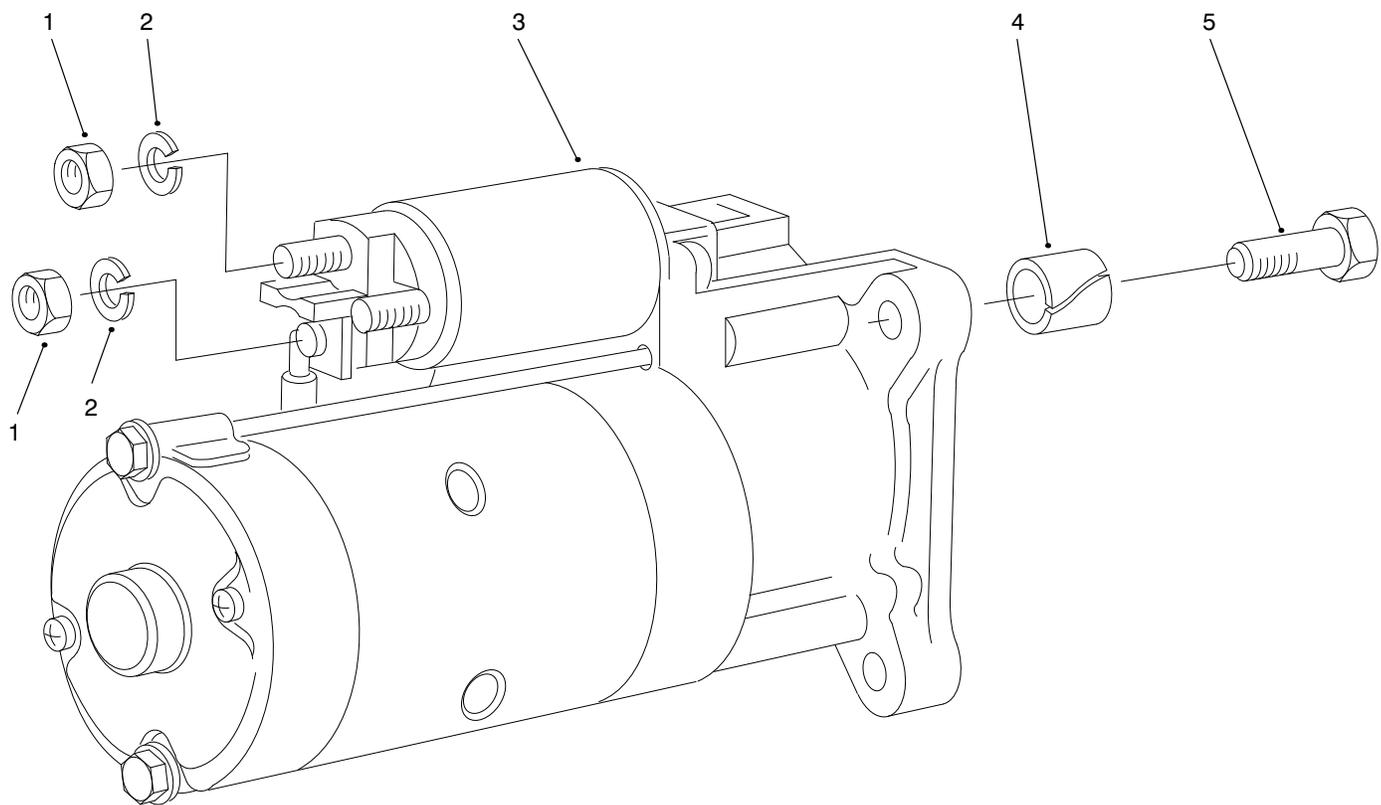

T-0968-1


STARTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	46-0330	Nut-Hex	2
2	76-5570	Washer-Lock	2
3	94-3263	Starter	1
4	76-5590	Sleeve-Spring	1

Ref. No.	Part No.	Description	No. Used
5	48-7810	Screw-Mounting	3
*	94-3275	Solenoid-Starter	1

*Not Illustrated

3321-147

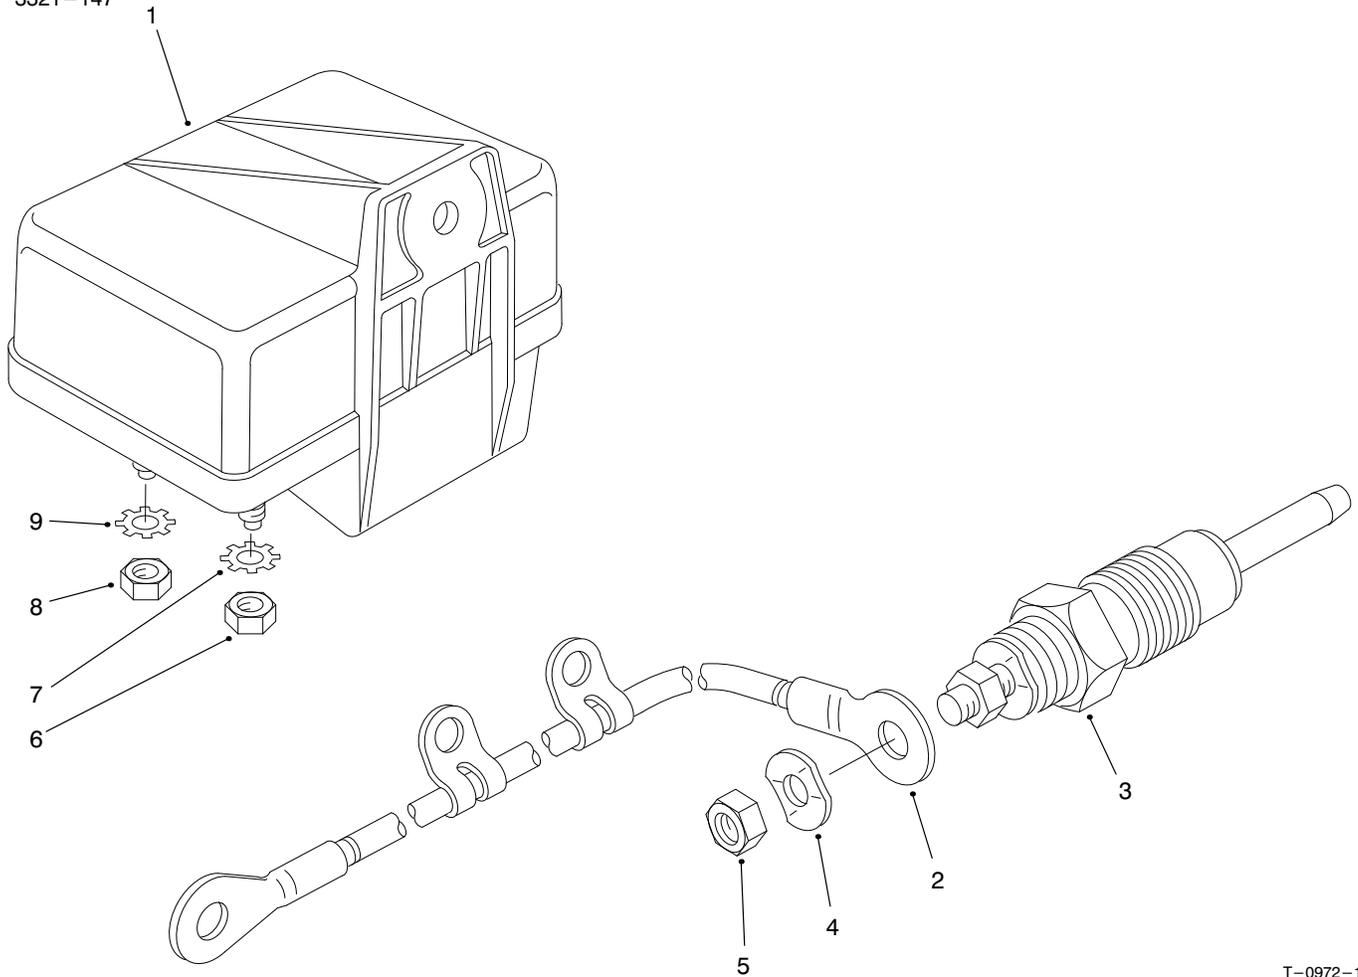


T-0972-1

GLOW PLUG & GLOW RELAY

Ref. No.	Part No.	Description	No. Used
1	76-5260	Relay-Glow Plug	1
2	94-3265	Cable-Glow Plug	4
3	94-3264	Plug-Glow	4
4	76-5290	Washer-Spring	4
5	94-3266	Nut-Hex.	4

Ref. No.	Part No.	Description	No. Used
6	94-3267	Nut-Lock	1
7	76-5310	Washer-E.T.L.W.	1
8	94-3251	Nut-Lock	1
9	74-8710	Washer-E.T.L.W.	1

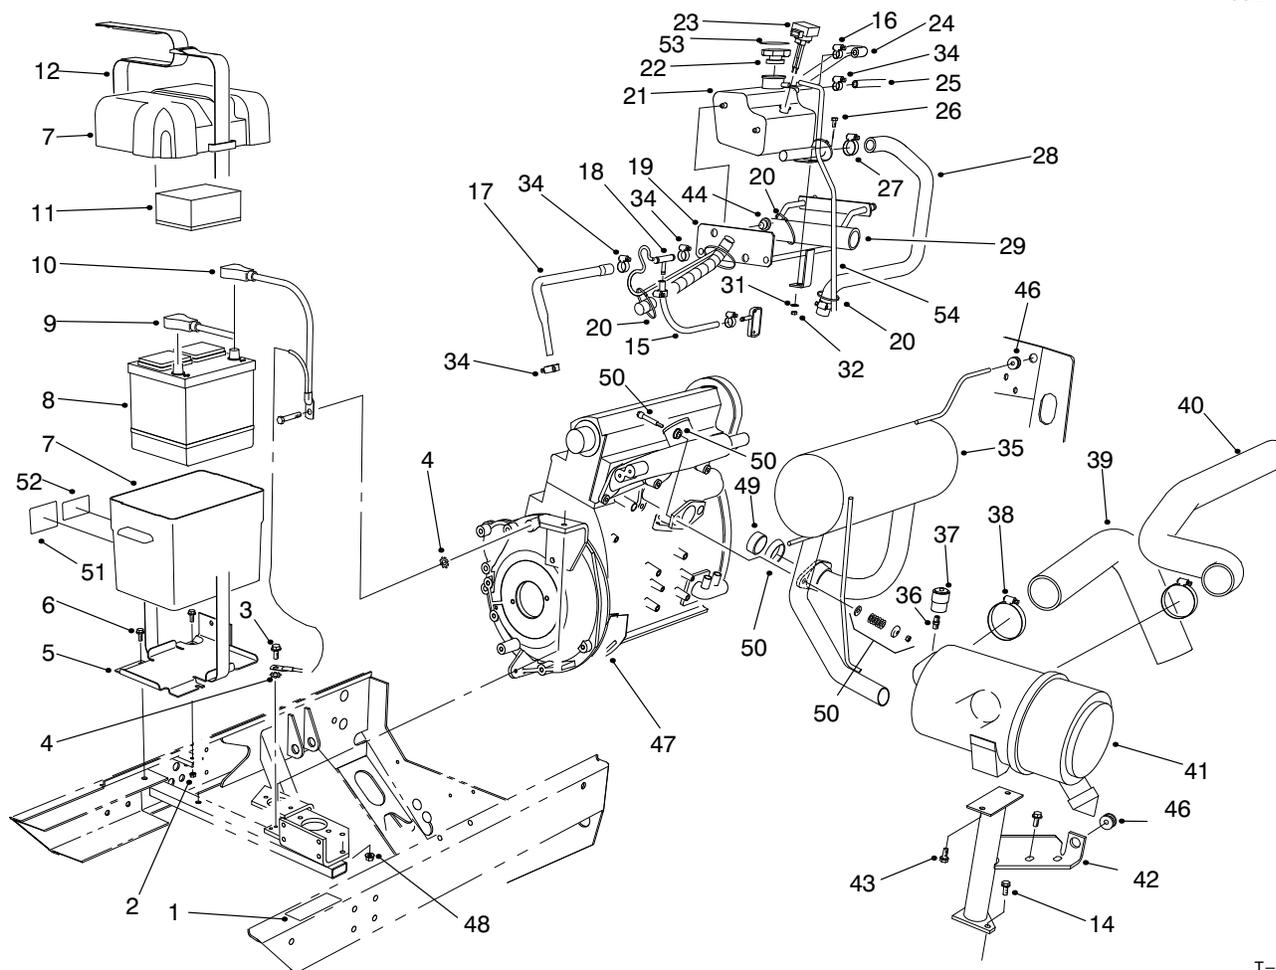


T-2373-7

ENGINE COMPONENTS ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	93-1265	Decal-Hot Surface	1	27	2412-129	Clamp-Hose	2
1	94-4578	Decal-Hot Surface (Japan)	1	28	93-7589	Hose-Overflow	1
2	3296-29	Nut-Lock	1	29	93-4215	Hose-Radiator, Upper Rear	1
4	3255-9	Washer-Lock, Ext. Tooth	2	31	33093-00	Washer	1
5	93-7974	Plate-Battery, Box	1	32	33023-00	Nut-Lock	1
6	3234-5	Screw-FH	3	34	2412-36	Clamp-Hose	4
7	93-7595	Asm-Box, Battery	1	35	93-9178	Muffler	1
†8		Battery	1	*	94-2849	Muffler-Spark Arrestor	1
9	75-1370	Cable-Battery, Positive	1	36	94-1416	Adapter-Indicator	1
10	94-1411	Cable-Battery, Negative	1	37	93-9164	Indicator-Service	1
11	93-7968	Pad-Foam, Battery	1	38	2412-125	Clamp-Hose	2
12	94-1445	Strap-Battery	1	39	94-2624	Hose-Manifold	1
14	33105-030	Screw-HHF	2	40	93-7584	Hose-Intake	1
15	63-7622	Hose-Fuel	1	41	93-7485	Asm-Filter, Air	1
16	2412-108	Clamp-Hose	3	42	94-8108	Support-Filter, Air	1
17	94-2630	Hose-Return	1	43	33104-016	Screw-HHF	2
18	93-4207	Fitting-Tee	1	†44	94-2801	Grommet-Rubber	2
19	94-1408	Wireform-Overflow	1	46	94-2812	Grommet	2
20	3290-378	Tie-Cable	5	†47	77-3600	Plate-Closing	1
†21	98-1805	Box-Degassing	1	48	33005-00	Nut-Hex. Flange	2
†22	94-2800	Cap-Radiator	1	†49	94-2815	Sleeve-Exhaust Flange	1
22	66-3240	Cap-Radiator (Europe)	1	†50	94-2814	Kit-Exhaust Coupler	1
†23	94-9984	Sensor-Water Level	1	51	93-6668	Decal-Charging (Europe)	1
24	93-7591	Hose-Return	1	52	93-7276	Decal-Danger (Europe)	1
25	92-7424	Hose-Overflow, Radiator	1	53	93-7840	Decal-Cap (Europe)	1
26	33103-020	Screw-HHF	1	54	55-4130	Hose-Fuel	1

† Furnished with engine.

‡ Obtain locally.

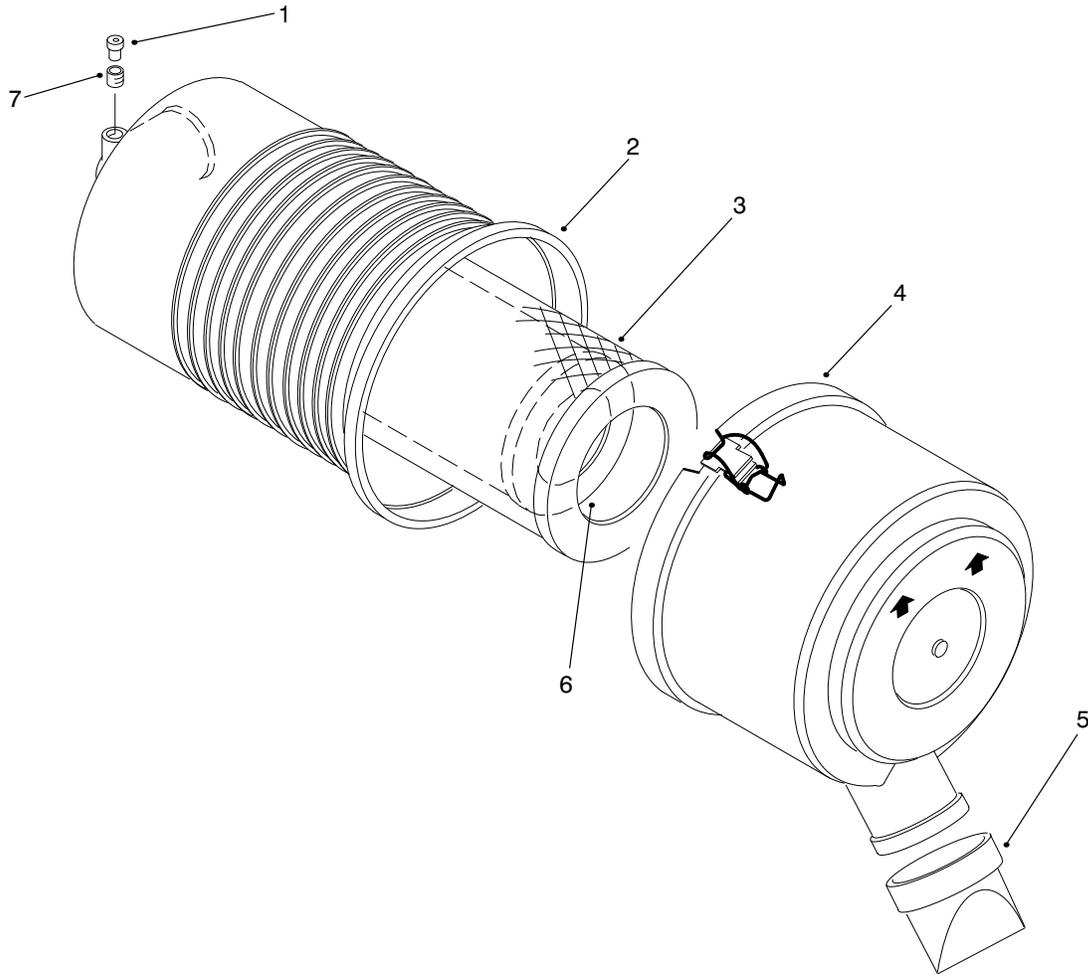


T-2076-1

AIR CLEANER ASSEMBLY NO. 93-7485

Ref. No.	Part No.	Description	No. Used
1	93-9164	Indicator	1
2		Asm-Body	1
3	93-9162	Filter-Primary	1
4	93-5986	Asm-Cover	1


Ref. No.	Part No.	Description	No. Used
5	94-1414	Valve-Vacuator	1
6	93-9163	Filter-Safety	1
7	94-1416	Asm-Adaptor	1

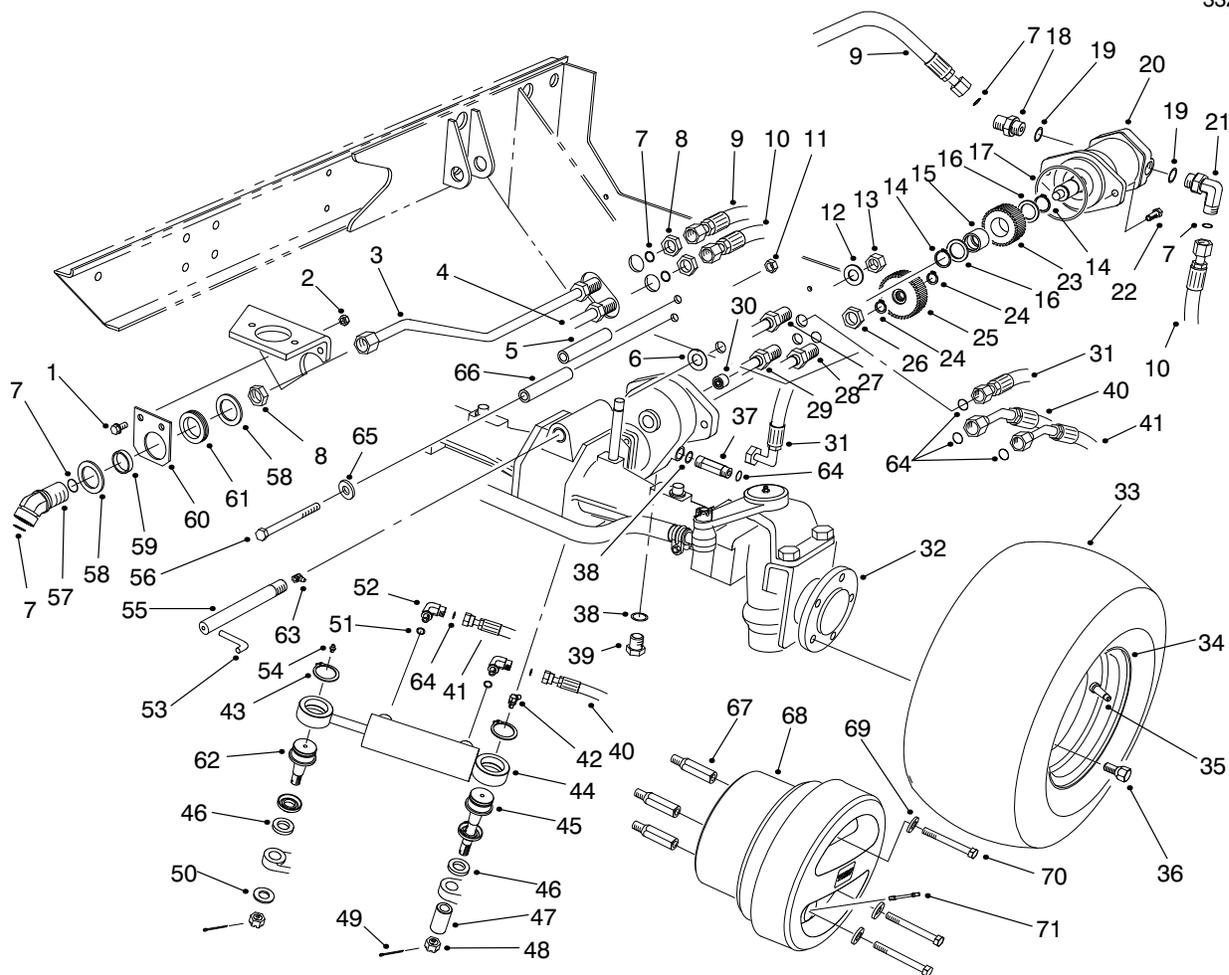

T-2077-6

4-WD AXLE ASSEMBLY (Model No. 03804)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	323-6	Screw-HH	2	25	94-3098	Gear-Driven	1
2	32128-21	Nut-HHF	2	26	340-70	Nut-Lock	3
3	92-7472	Asm-Tube, Rear (Incl. Ref. #7)	1	27	92-7553	Asm-Tube, Rear Drain (Incl. Ref. #64)	1
4	92-7473	Asm-Tube, Rear (Incl. Ref. #7)	1	28	92-7495	Asm-Tube, Steering (Incl. Ref. #64)	1
5	76-8350	Stop-Axle, 4WD	2	29	92-7494	Asm-Tube, Steering (Incl. Ref. #64)	1
6	93-7247	Washer-Thrust	1	30	74-5700	Bearing-Needle	1
7	237-58	O-Ring	6	31	92-7534	Assembly-Hose	1
8	340-126	Nut-Bulkhead	3	32	98-2447	Axle-4WD	1
9	92-7536	Asm-Hose, Rear Motor	1	33	86-5910	Tire	2
10	92-7537	Asm-Hose, Rear Motor	1	34	217-125	Wheel	2
11	3296-23	Nut-Lock	4	35	232-27	Stem-Valve	2
12	3256-29	Washer-Flat	1	36	74-5500	Bolt-Wheel	10
13	94-8000	Nut-Lock	1	37	340-2	Adapter (Incl. Ref. #38 & 64)	1
14	32151-96	Ring-Retaining	1	38	237-42	O-Ring	2
15	71-4580	Clutch-Roller	1	39	353-508	Plug (Incl. Ref. #38)	1
16	71-4590	Washer-Thrust	2	40	92-7539	Asm-Hose	1
17	237-166	O-Ring	1	41	92-7538	Asm-Hose	1
18	340-9	Fitting-Hydraulic (Incl. Ref. #7 & 19)	1	42	302-60	Fitting-Grease 90°	1
19	237-81	O-Ring	2	43	98-9973	Ring-Retaining	2
20	92-7386	Motor-Hydraulic	1	44	94-8141	Cylinder-Hydraulic	1
21	340-142	Fitting-Hydraulic 90° (Incl. Ref. #7 & 19)	1	45	92-5839	Ball Joint	1
22	325-4	Screw-HH	2	46	92-5833	Spacer-Ball Joint	2
23	94-3099	Gear-Driver	1	47	92-5844	Spacer-Ball Joint	1
24	32120-15	Ring-Retaining	2				

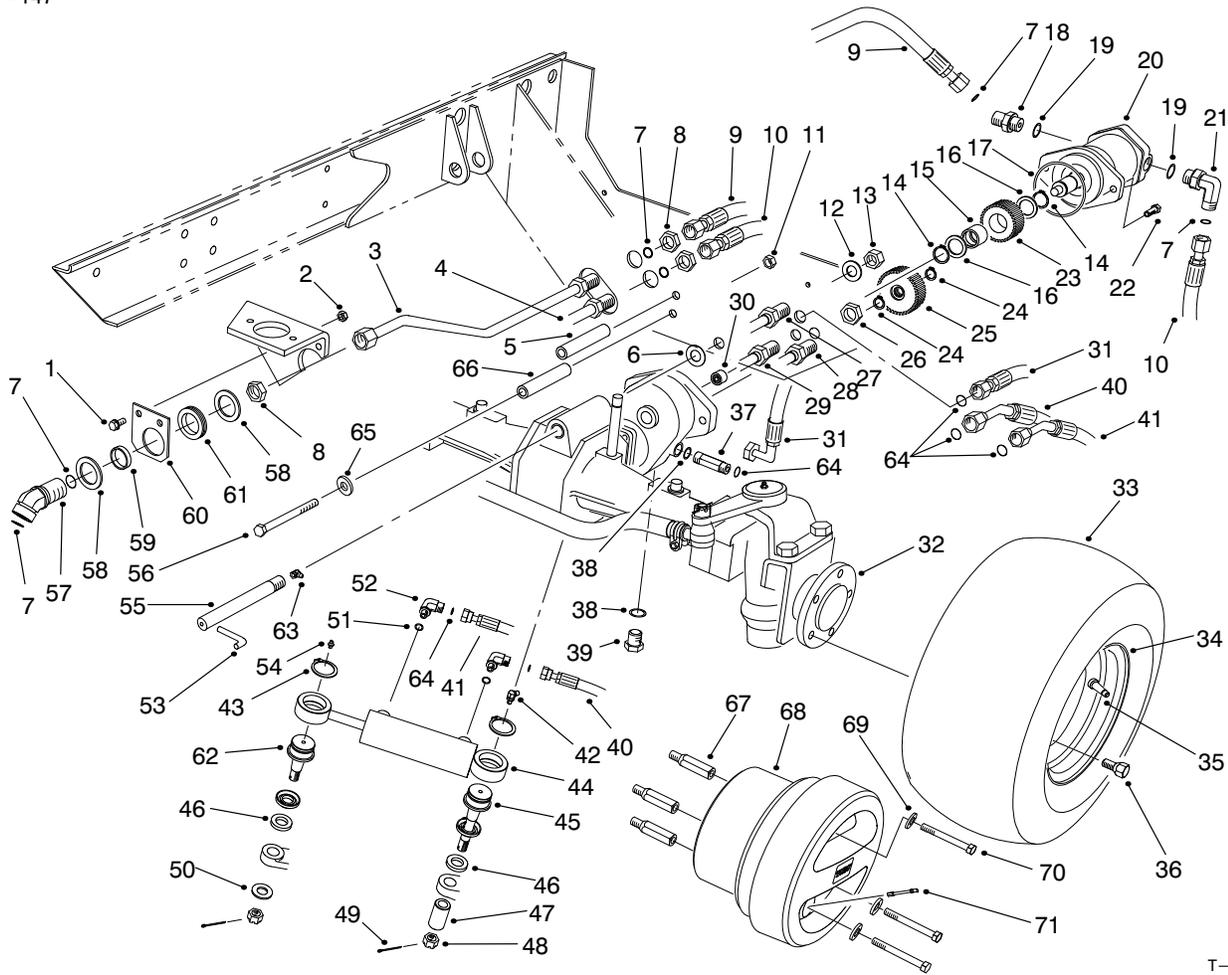


T-2077-6

4-WD AXLE ASSEMBLY (Model No. 03804)

Ref. No.	Part No.	Description	No. Used
48	32136-14	Nut-Hex. Slotted	2
49	3272-12	Pin-Cotter	4
50	92-5836	Washer-Axle	1
51	237-78	O-Ring	2
52	340-97	Fitting-Hydraulic 90° (Incl. Ref. #51 & 64)	2
53	92-7604	Pin-Stop	1
54	302-5	Fitting-Grease	1
55	94-8115	Pin-Axle, Pivot	1
56	325-33	Screw-HH	4
57	92-7646	Fitting-Hydraulic 45° (Incl. Ref. #7)	1
58	69-8910	Washer	2
59	69-8900	Spacer	1

Ref. No.	Part No.	Description	No. Used
60	92-7552	Bracket-Bulkhead	1
61	240-7	Grommet	1
62	92-5838	Ball Joint	1
63	302-33	Fitting-Grease	1
64	237-22	O-Ring	6
65	3256-26	Washer	1
66	88-1550	Stop-Axle	2
67	94-2806	Adapter-Nut (Europe)	6
68	94-3052	Weight-Wheel (Europe)	2
69	3256-26	Washer-Flat (Europe)	6
70	3213-14	Screw-HH	6
71	94-3063	Extension-Stem, Valve (Europe)	2

*Not Illustrated

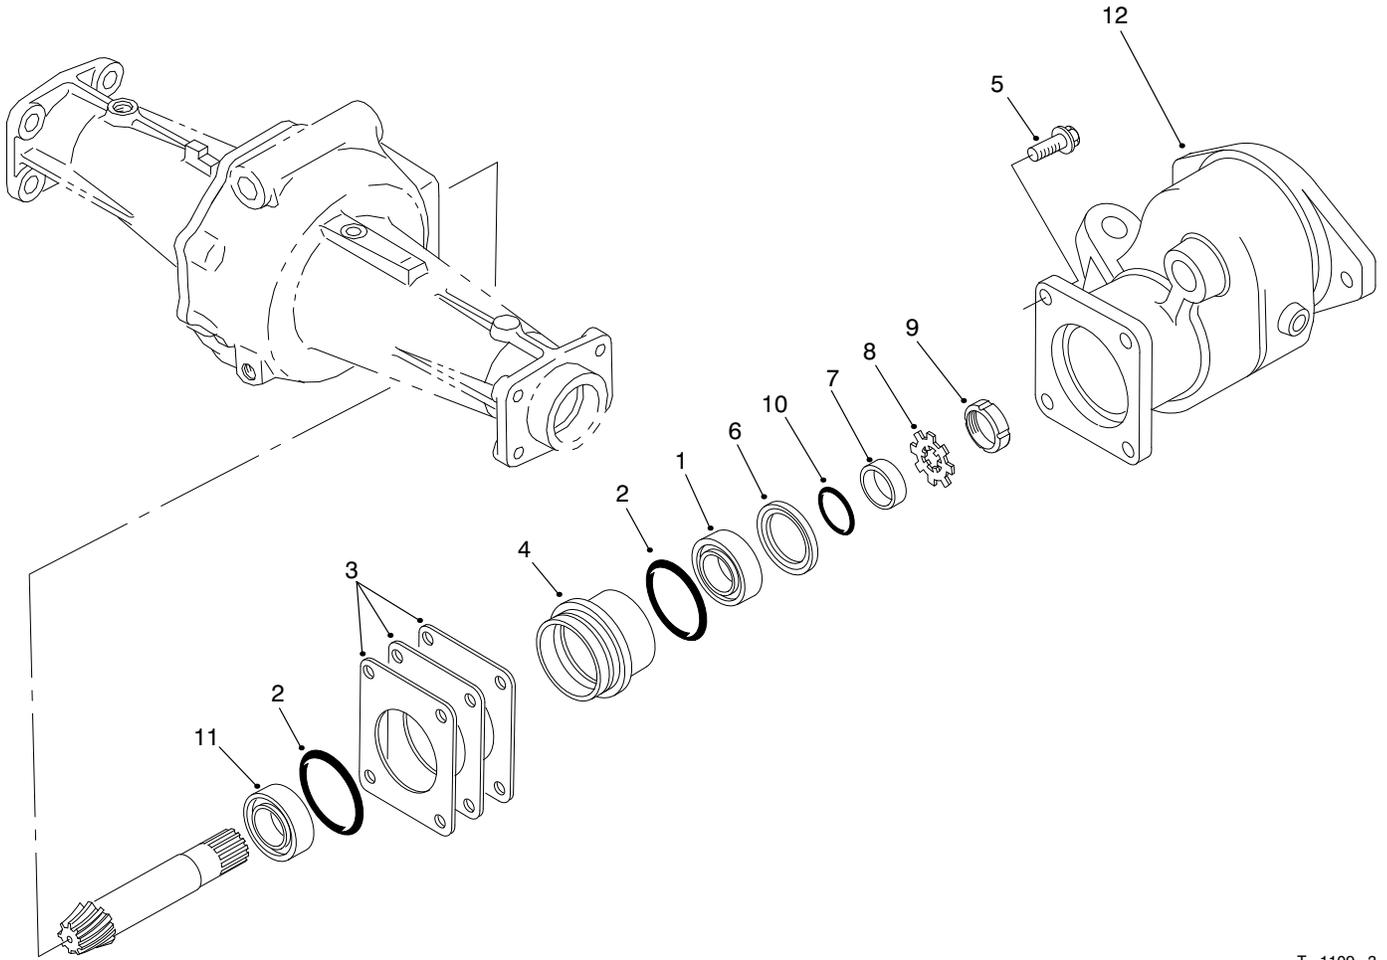


T-1109-3

SLEEVE ASSEMBLY AXLE NO. 98-2447 (Model No. 03804 Only)

Ref. No.	Part No.	Description	No. Used
1	76-7330	Bearing	1
2	76-7400	O-Ring	2
3	76-7410	Shim-0.1 mm	A/R
*	76-7420	Shim-0.2 mm	A/R
*	76-7430	Shim-0.4 mm	A/R
4	76-7320	Sleeve	1
5	93-7773	Bolt	4
6	76-7340	Seal-Oil	1

Ref. No.	Part No.	Description	No. Used
7	76-7350	Bushing	1
8	76-7380	Washer	1
9	76-7390	Nut-Lock	1
10	76-7360	O-Ring	1
11	76-7370	Bearing	1
12	76-8070	Adapter	1
*	77-4010	Shim Set (Incl. Ref. #3)	1

*Not Illustrated

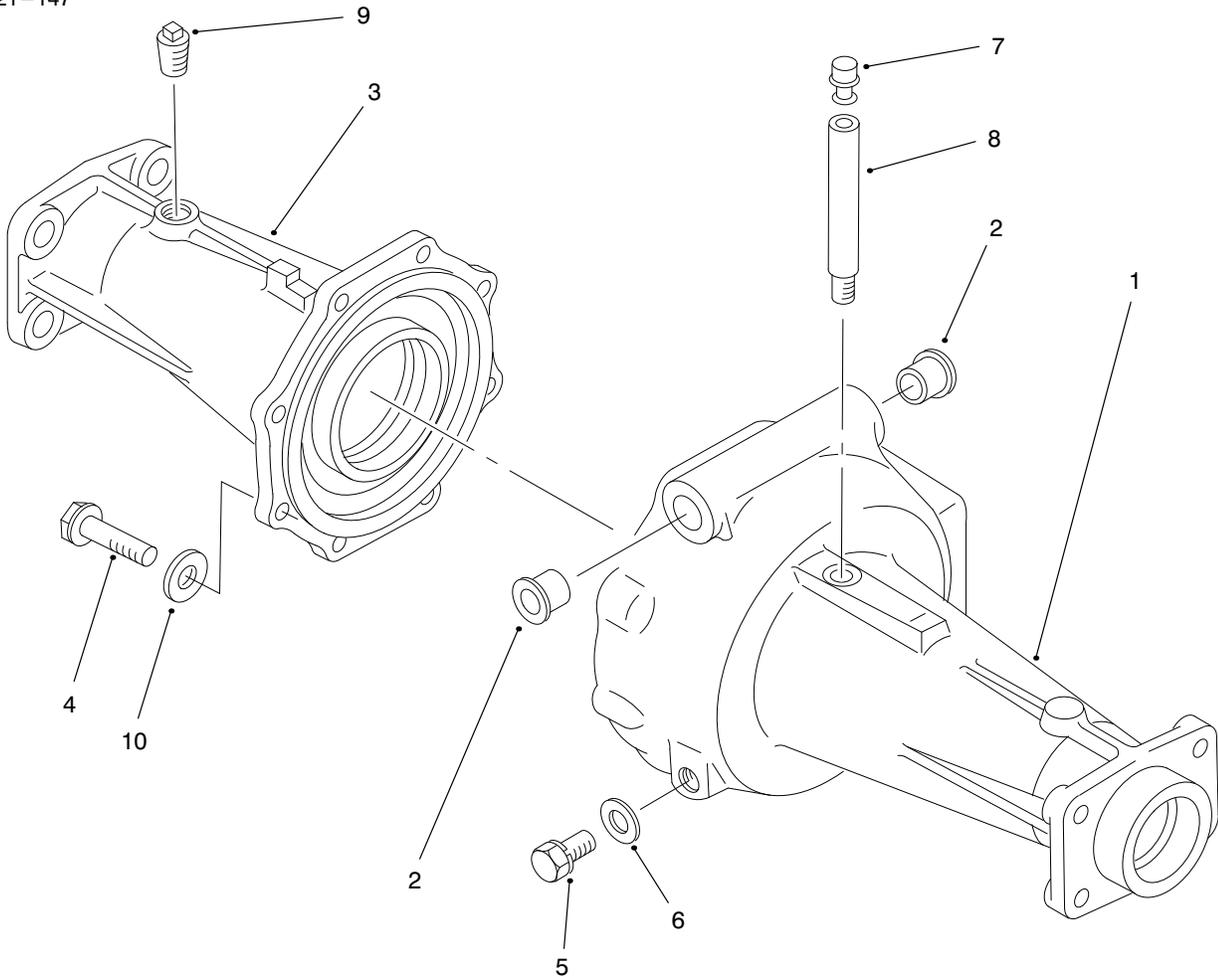


T-1112-2

AXLE HOUSING ASSEMBLY AXLE NO. 98-2447 (Model No. 03804 Only)

Ref. No.	Part No.	Description	No. Used
1	93-7778	Housing-Axle A	1
2	93-7787	Bushing-Flange	2
3	93-7779	Housing-Axle B	1
4	93-7782	Screw-HHF	8
5	76-7110	Plug	1

Ref. No.	Part No.	Description	No. Used
6	76-7120	Seal-Washer	1
7	76-7480	Plug-Vent	1
8	76-7470	Pipe	1
9	76-7140	Plug	1
10	93-7781	Washer	8

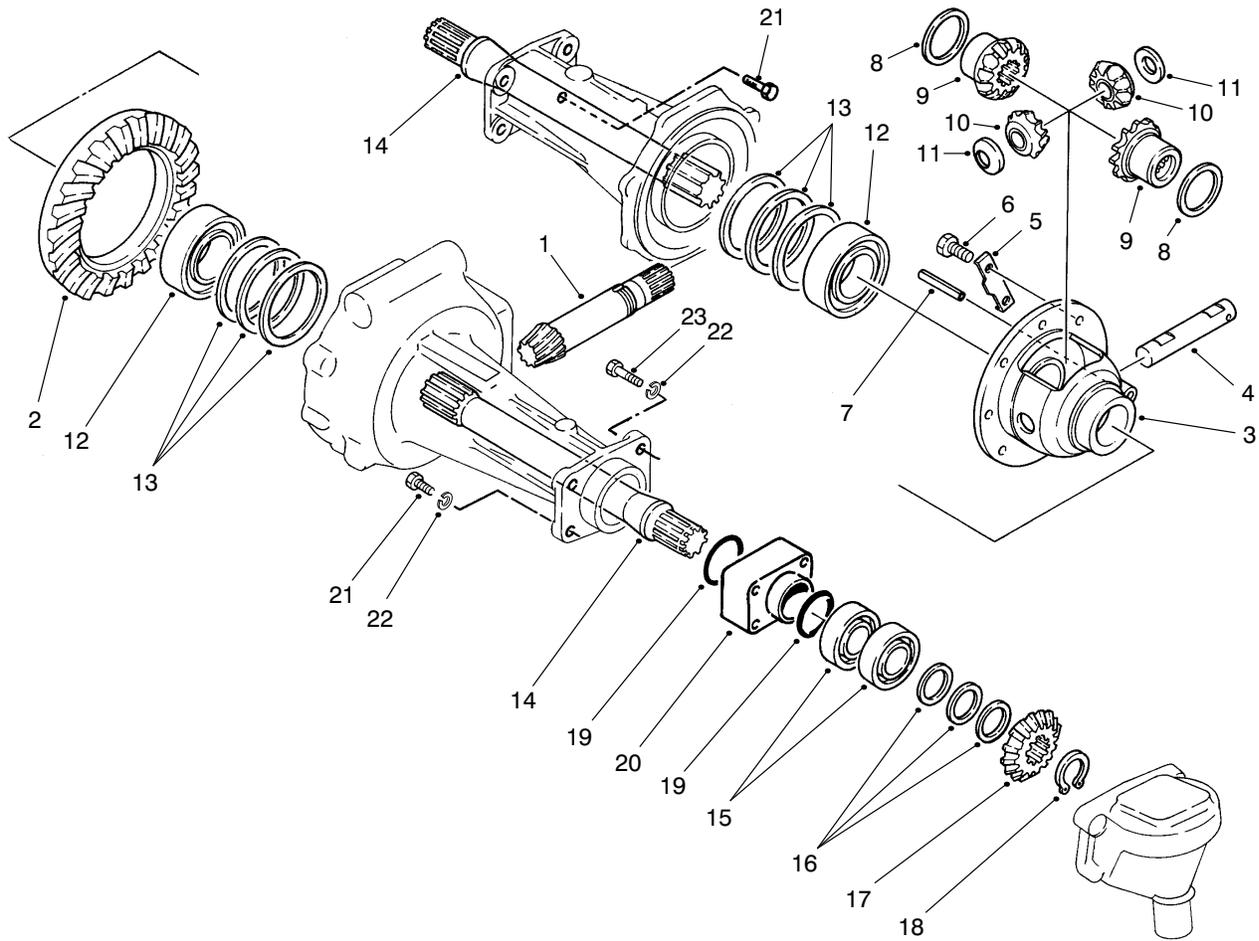


T-1111-2

DIFFERENTIAL & SHAFT ASSEMBLY AXLE NO. 98-2447 (Model No. 03804 Only)

Ref. No.	Part No.	Description	No. Used
1	76-7250	Shaft-Drive	1
2	76-7240	Ring-Gear	1
3	76-7170	Case-Differential	1
4	76-7200	Shaft-Pinion	1
5	76-7230	Washer-Lock	4
6	76-7260	Bolt	8
7	76-7270	Pin-Spring	1
8	76-7220	Washer-Thrust	2
9	76-7190	Gear-Side	2
10	76-7180	Pinion-Mate	2
11	76-7210	Washer-Thrust	2
12	76-7280	Bearing	2
13	76-7290	Shim-0.1 mm	A/R
*	76-7300	Shim-0.2 mm	A/R
*	76-7310	Shim-0.3 mm	A/R
14	76-7490	Shaft-Differential	2
15	76-7500	Bearing	4

Ref. No.	Part No.	Description	No. Used
16	76-7520	Shim-0.1 mm	A/R
*	76-7530	Shim-0.2 mm	A/R
*	76-7540	Shim-0.4 mm	A/R
17	76-7510	Pinion-14T	2
18	76-7550	Ring-Retaining	2
19	76-7580	O-Ring	4
20	76-7590	Spacer	2
21	76-7600	Bolt-Reamer	2
22	76-7620	Washer-Lock	8
23	76-7610	Bolt	6
*	76-7160	Asm-Gear Case (Incl. Ref. #2-11)	1
*	77-4000	Shim Set (Incl. Ref. #13)	1
*	77-4020	Shim Set (Incl. Ref. #16)	1

*Not Illustrated

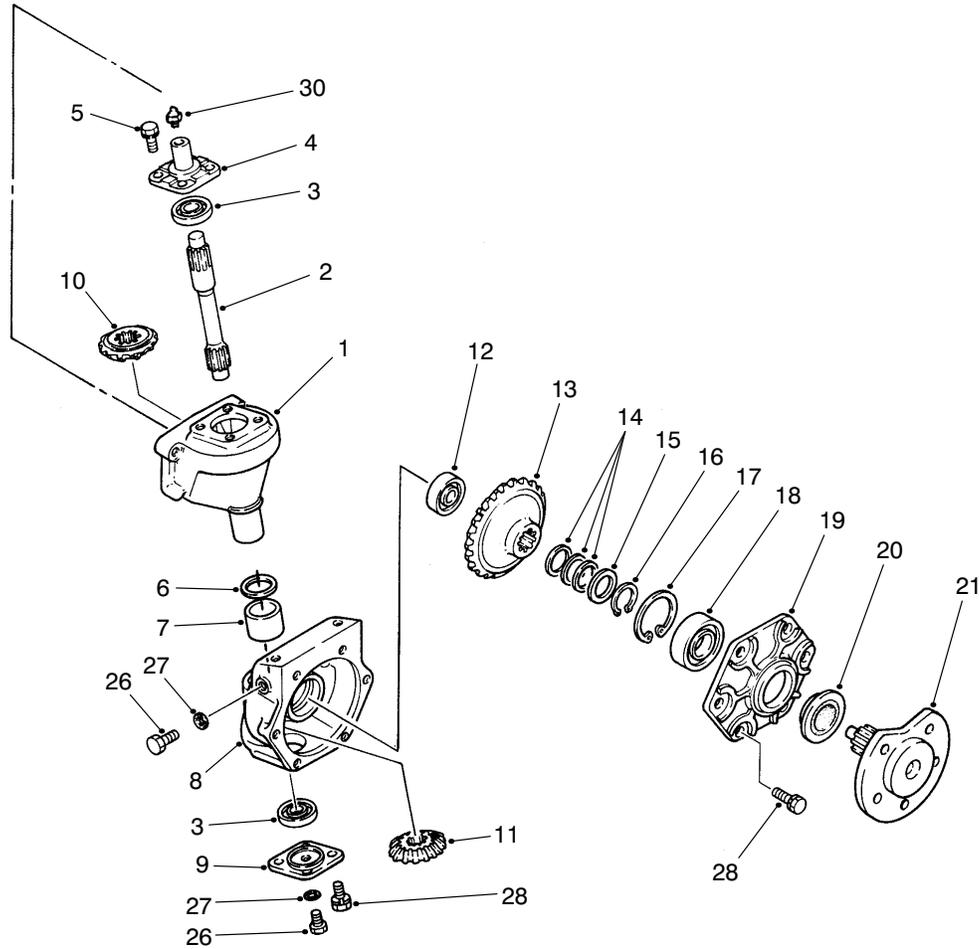


T-1110-1

STEERING GEAR CASE ASSEMBLY AXLE NO. 98-2447 (Model No. 03804 Only)

Ref. No.	Part No.	Description	No. Used
1	76-7560	Case-Gear	2
2	76-7650	Shaft-Final Drive	2
3	76-7670	Bearing	4
4	76-7660	Holder-20 mm L.H.	1
*	76-7630	Holder-25 mm R.H.	1
5	76-7640	Bolt	8
6	76-7740	Seal-Oil	2
7	76-7730	Bushing	2
8	76-7680	Case-Final Drive	2
9	76-7770	Cover	2
10	76-7510	Pinion-14T	2
11	76-7750	Pinion-15T	2
12	94-2803	Bearing	2
13	76-7840	Gear-Bevel	2
14	76-7890	Shim-0.15 mm	A/R
*	76-7900	Shim-0.2 mm	A/R
*	76-7910	Shim-0.4 mm	A/R

Ref. No.	Part No.	Description	No. Used
15	76-7880	Spacer	2
16	76-7920	Ring-Retaining	2
17	76-7930	Ring-Retaining	2
18	93-7775	Bearing	2
19	76-7810	Holder-Bearing	2
20	76-7870	Seal-Oil	2
21	76-7830	Shaft-Wheel	2
26	76-7110	Plug	4
27	76-7120	Seal-Washer	4
28	76-7640	Bolt	20
30	76-7960	Fitting-Grease	2
*	77-4030	Shim Set (Incl. Ref. #14)	1

*Not Illustrated

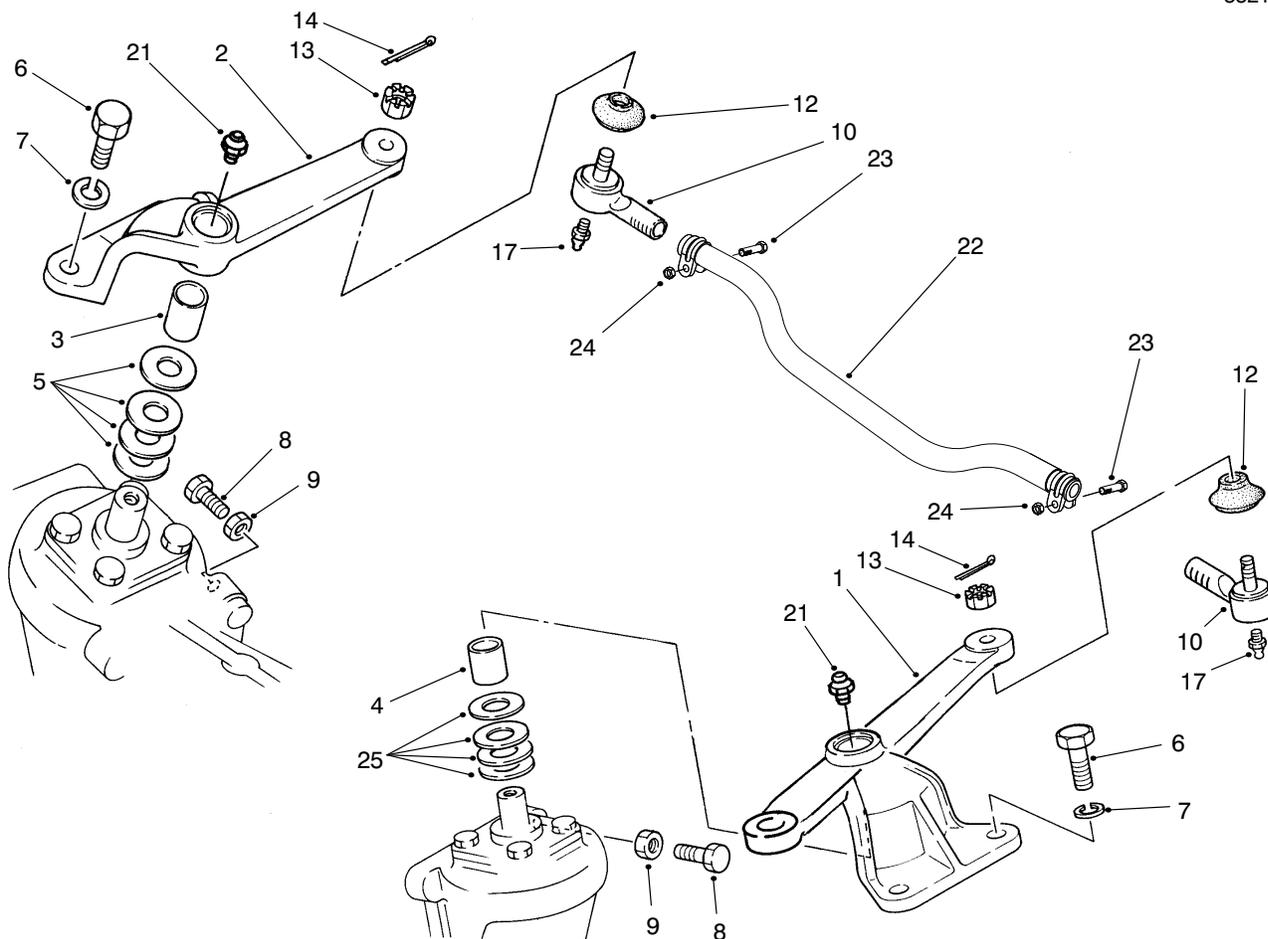


T-2937-1

STEERING ARM LINKAGE AXLE NO. 98-2447 (Model No. 03804 Only)

Ref. No.	Part No.	Description	No. Used
1	98-2444	Arm-Drag Link	1
2	98-2446	Arm-Tie Rod	1
3	76-4260	Bushing	1
4	76-7950	Bushing	1
5	76-7820	Shim-1.0 mm	A/R
*	76-7970	Shim-1.4 mm	A/R
*	76-7980	Shim-1.2 mm	A/R
*	76-7990	Shim-.08 mm	A/R
6	76-8000	Bolt	4
7	76-8010	Washer	2
8	76-7710	Bolt	2
9	76-7720	Nut	4
10	2411-45	Tie Rod End	2
12	71-4760	Seal	2
13	32136-13	Nut-Hex. Slotted	2
14	3272-7	Pin-Cotter	2

Ref. No.	Part No.	Description	No. Used
17	302-55	Fitting-Grease	2
21	76-7960	Fitting-Grease	2
22	98-8841	Bar & Clamp Assembly	1
23	323-9	Screw-HH	2
24	3296-39	Nut-Hex. Lock	2
25	76-7700	Shim-0.8 mm	A/R
*	76-7760	Shim-1.0 mm	A/R
*	76-7780	Shim-1.2 mm	A/R
*	76-7790	Shim-1.4 mm	A/R
*	77-4050	Shim Set (Incl. Ref. #5)	1
*	77-4040	Shim Set (Incl. Ref. #25)	1
*	98-8838	Tie Rod-4WD (Incl. Ref. #10-13, 17 & 22-24)	1

*Not Illustrated

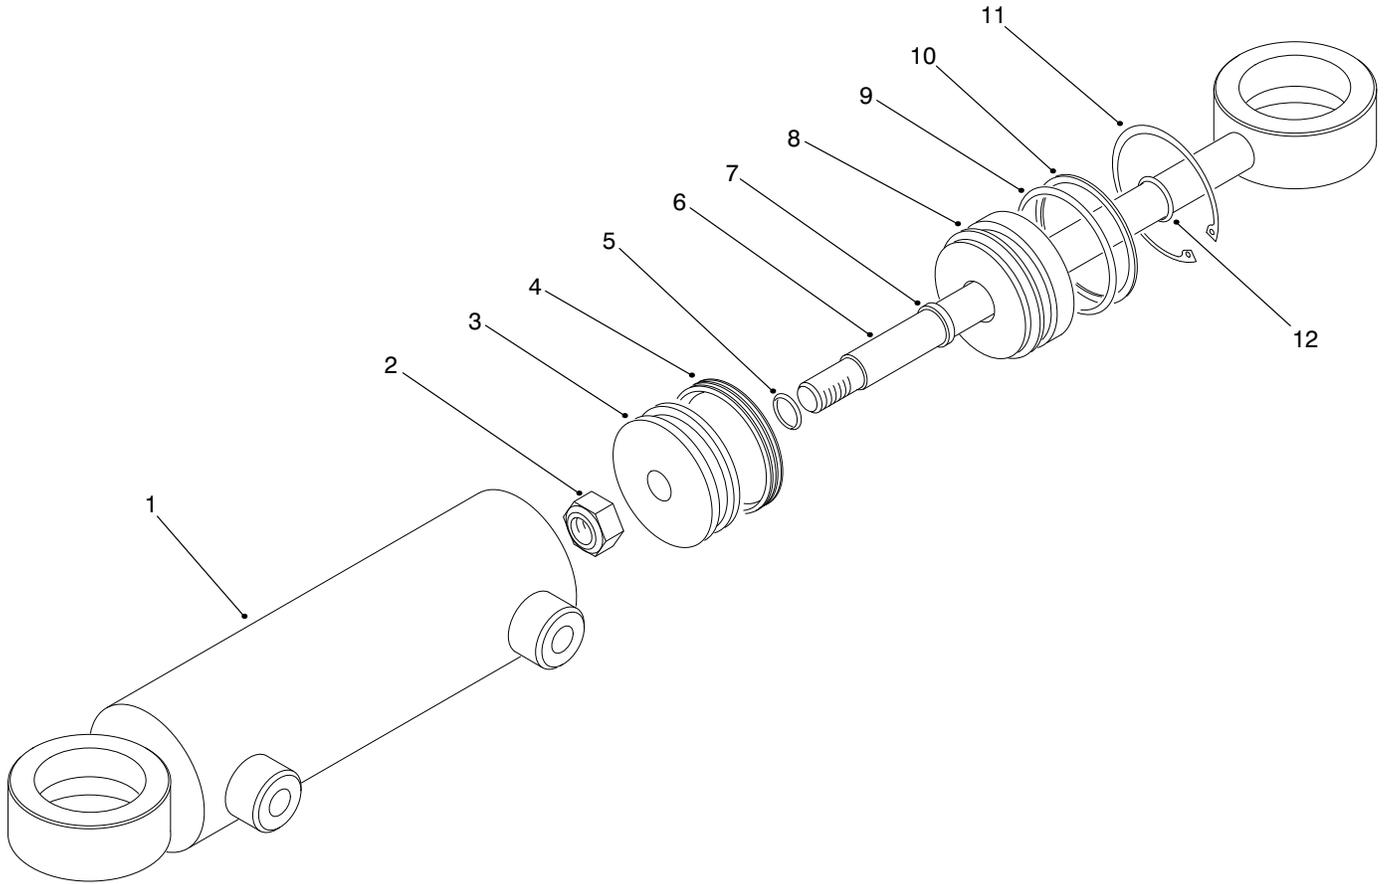


T-2452-1

HYDRAULIC CYLINDER NO. 94-8141 (Model No. 03804)

Ref. No.	Part No.	Description	No. Used
1	94-9955	Asm-Barrel	1
2	32152-10	Nut-Lock	1
3	94-9957	Piston	1
4		Uniring	1
5		O-Ring	1
6	94-9956	Asm-Piston Rod	1
7		Seal-Rod	1
8	94-9958	Gland-Cylinder	1

Ref. No.	Part No.	Description	No. Used
9		O-Ring	1
10		Backup	1
11	32120-8	Ring-Retaining	1
12		O-Ring	1
*	86-5390	Kit-Seal (Incl. Ref. #4, 5, 7, 9, 10 & 12)	1


*Not Illustrated

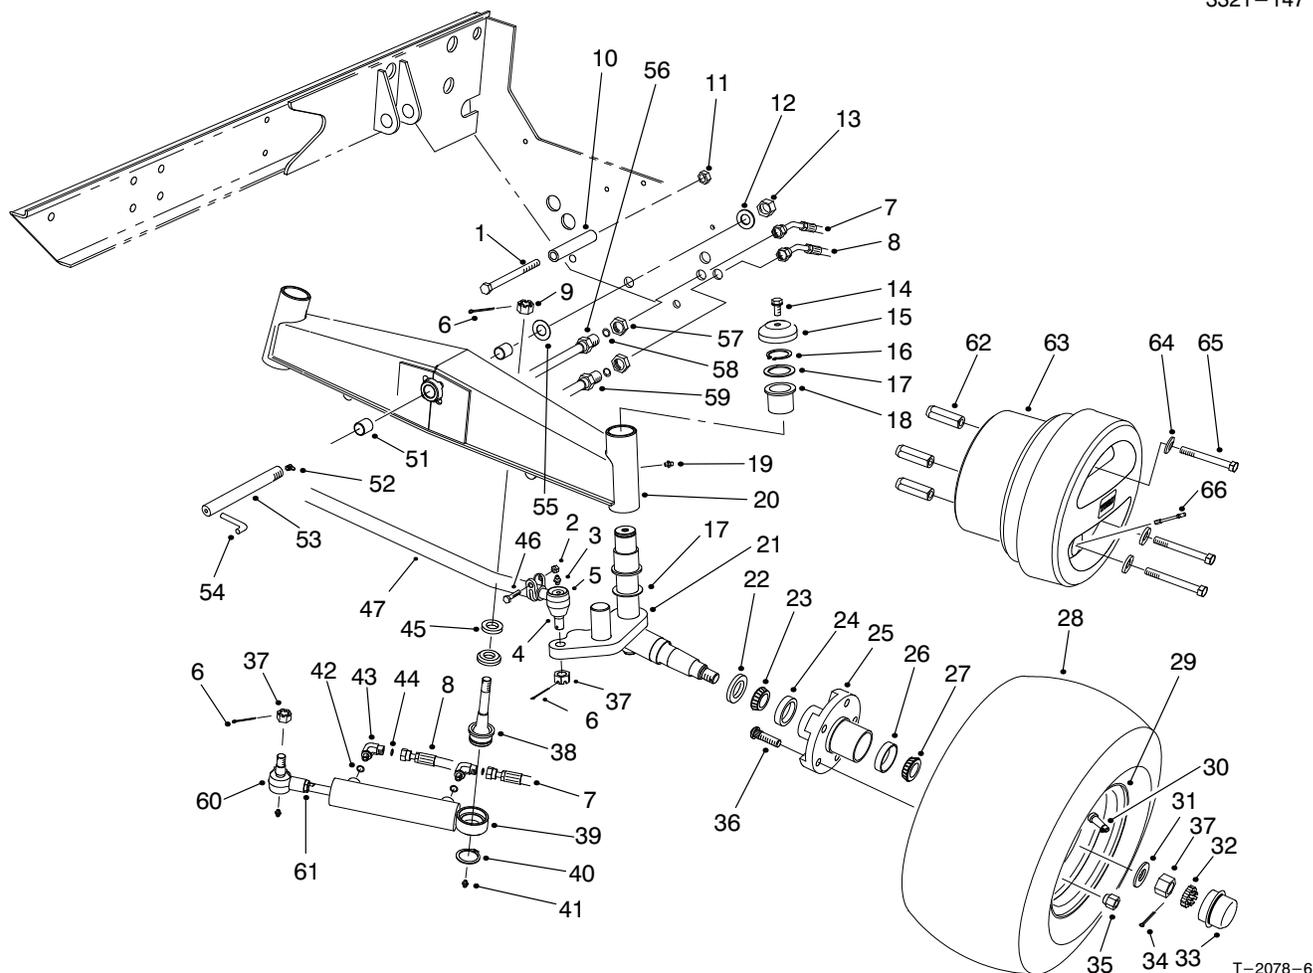

T-2078-6

2-WD REAR AXLE ASSEMBLY (Model No. 03803)


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	325-20	Screw-HH	2	25	92-9651	Asm-Hub (Incl. Ref. #24, 26, & 36)	2
2	3296-39	Nut-Hex. Lock	2	26	254-72	Cup-Bearing	2
3	302-55	Fitting-Grease	2	27	254-92	Cone-Bearing	2
4	71-4760	Seal	2	28	86-5910	Tire	2
5	2411-45	Tie Rod End (Incl. Ref. #3-4 & 37)	2	29	217-125	Wheel	2
6	3272-12	Pin-Cotter	2	30	232-27	Stem-Valve	2
7	92-7594	Asm-Hose	1	31	93-0309	Washer-Tab	2
8	92-7595	Asm-Hose	1	32	93-0307	Nut-Retainer	2
9	32136-14	Nut-Hex. Slotted	4	33	95-7152	Protector - Bearing	2
10	76-8350	Stop-Axle	2	34	3272-13	Pin-Cotter	2
11	3296-45	Nut-Lock	2	35	242-50	Nut-Lug	10
12	3256-29	Washer-Flat	1	36	92-9652	Stud-Drive	10
13	94-8000	Nut-Lock	1	37	32136-13	Nut-Hex. Slotted	2
14	3234-12	Screw-HHF	2	38	92-5839	Ball Joint	1
15	69-8890	Cap-Spindle	2	39	94-8142	Asm-Cylinder	1
16	32151-10	Ring-Retaining	2	40	94-9973	Ring-Retaining	1
17	62-2170	Washer-Thrust	4	41	302-5	Fitting-Grease	1
18	69-6470	Bushing-Flange	4	42	237-78	O-Ring	2
19	302-11	Fitting-Grease	2	43	340-97	Fitting-Hydraulic 90° (Incl. Ref. #42 & 44)	2
20	94-5607	Asm-Axle, Rear (Incl. Ref. #18, 19 & 51)	1	43	340-97	Fitting-Hydraulic 90° (Incl. Ref. #42 & 44)	2
21	92-9725	Spindle-LH	1	44	237-22	O-Ring	2
*	92-9724	Spindle-RH	1	45	92-5833	Spacer-Ball Joint	1
22	69-2980	Seal-Inner	2	46	323-9	Screw-HH	2
23	254-106	Cone-Bearing	2	47	98-8840	Tube & Clamp Assembly	1
24	254-107	Cup-Bearing	2				

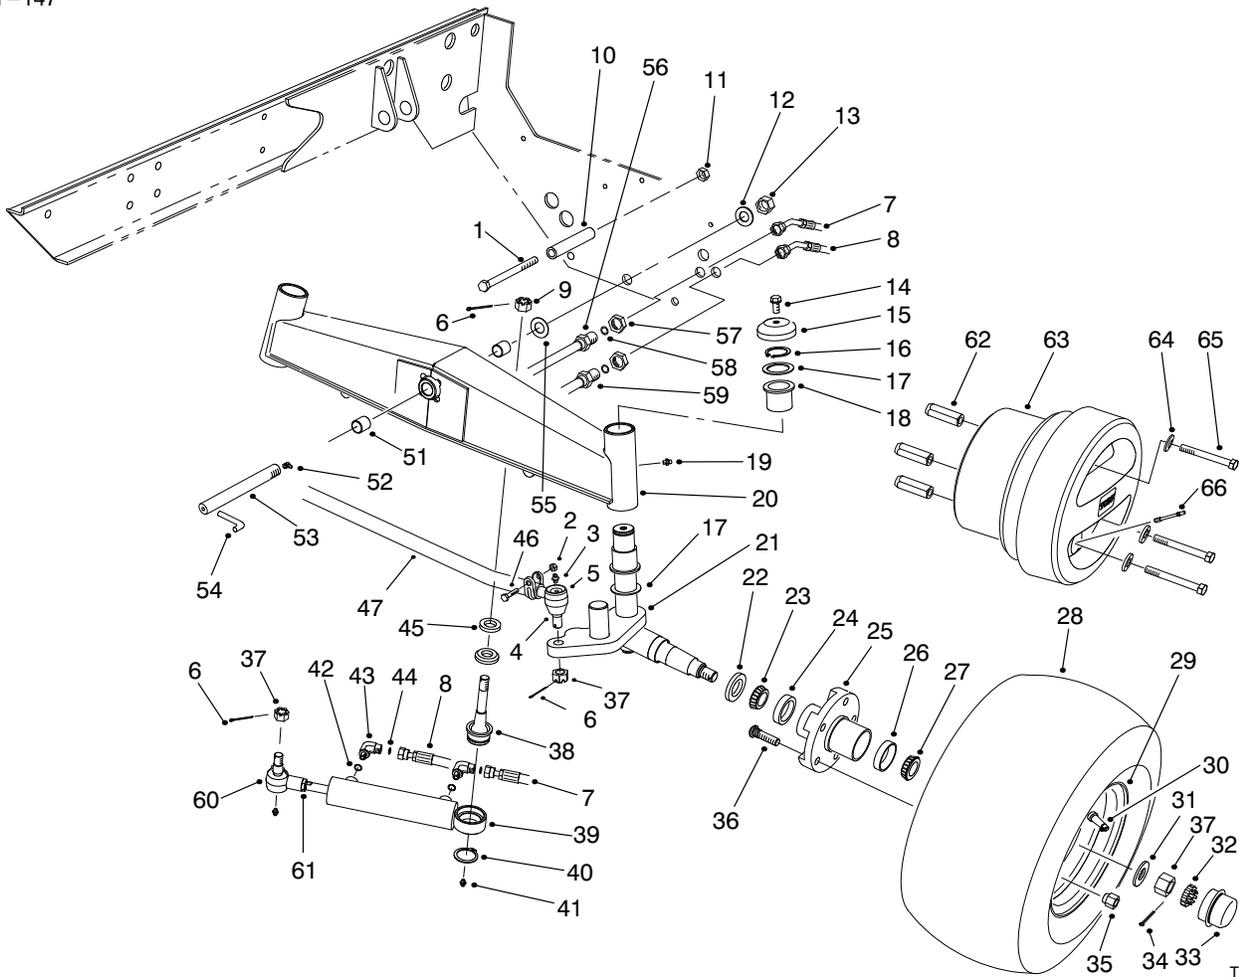

2-WD REAR AXLE ASSEMBLY (Model No. 03803) (Cont.)

Ref. No.	Part No.	Description	No. Used
51	94-5603	Bushing-Sleeve	2
52	302-33	Fitting-Grease 90°	1
53	94-8115	Pin-Axle, Pivot	1
54	92-7604	Pin-Stop	1
55	93-7247	Washer-Thrust	1
56	92-7495	Asm-Tube, Steering Rear	1
57	340-70	Nut-Lock, Bulkhead	2
58	237-22	O-Ring	2
59	92-7494	Asm-Tube, Steering Rear	1
60	92-5837	Asm-Rod End	1

Ref. No.	Part No.	Description	No. Used
61	3220-11	Nut-Jam	1
62	94-2807	Adapter-Nut (Europe)	6
63	94-3052	Weight-Wheel (Europe)	2
64	3256-26	Washer-Flat (Europe)	6
65	3213-14	Screw-HH (Europe)	6
66	94-3063	Extension-Stem, Valve (Europe)	2
*	98-8839	Tie Rod Assembly (Incl. Ref. #2-5, 37, 46 & 47)	1

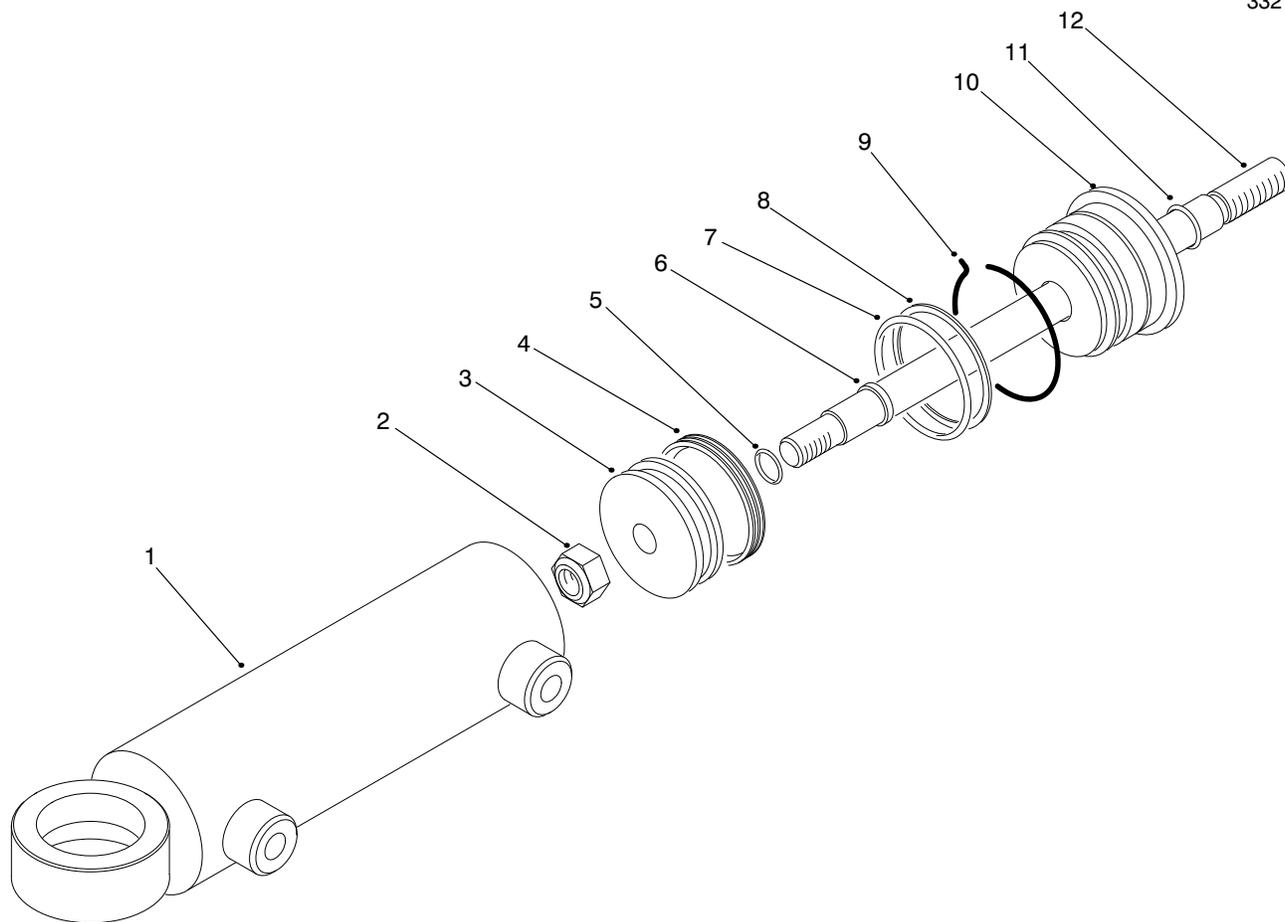


T-2453-1

HYDRAULIC CYLINDER NO. 94-8142 (Model No. 03803)

Ref. No.	Part No.	Description	No. Used
1	94-9959	Asm-Barrel	1
2	32152-10	Nut-Lock	1
3	94-9961	Piston	1
4		Uniring	1
5		O-Ring	1
6		Seal-Rod	1
7		O-Ring	1

Ref. No.	Part No.	Description	No. Used
8		Backup	1
9	94-9963	Ring-Retaining	1
10	94-9962	Gland-Cylinder	1
11		O-Ring	1
12	94-9960	Asm-Rod, Piston	1
*	94-9964	Kit-Seal (Incl. Ref. #4-8, & 11)	1

*Not Illustrated

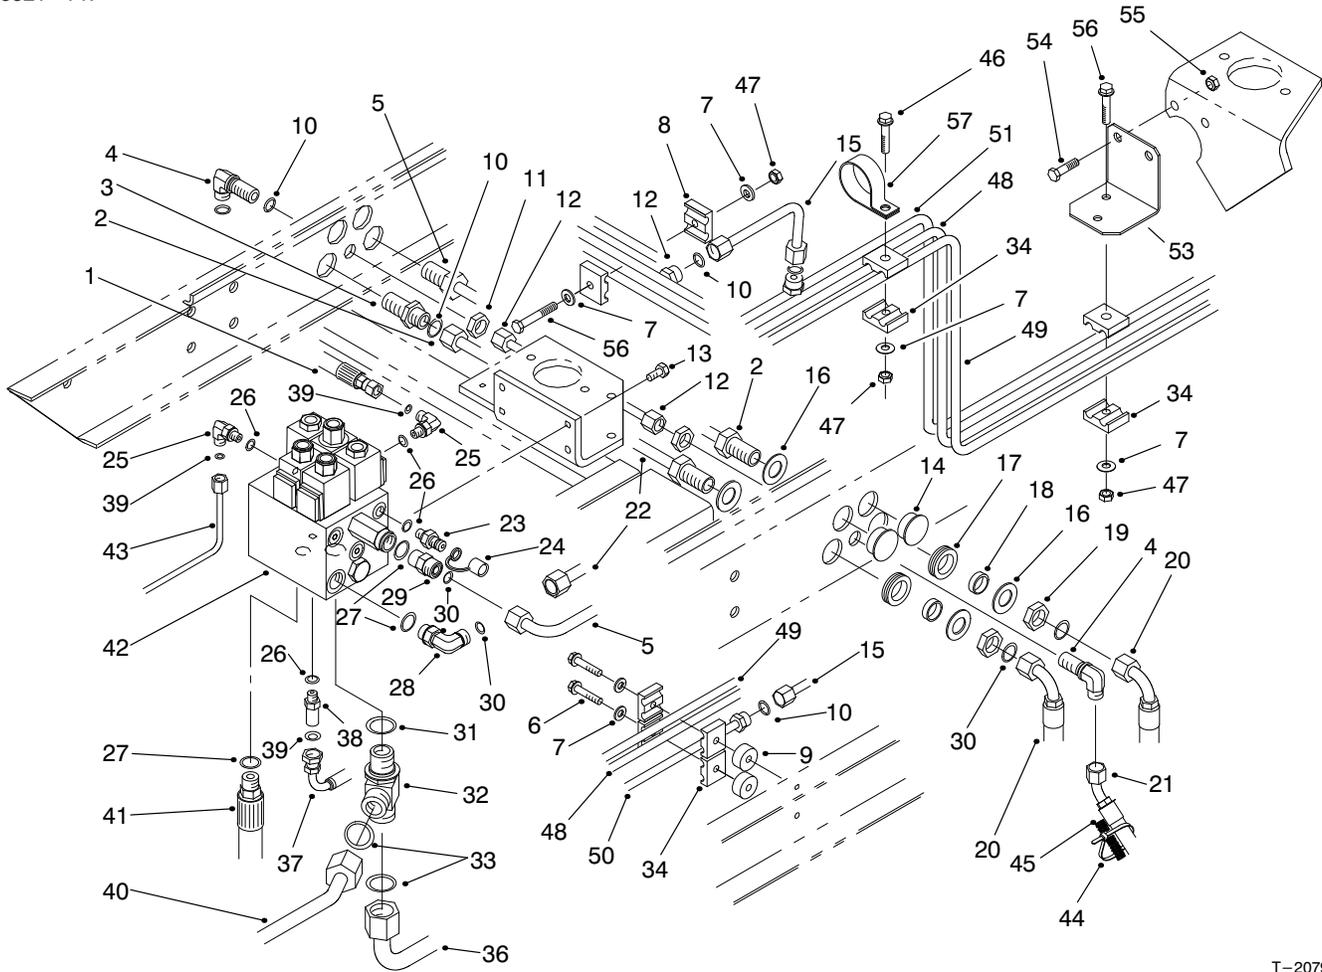


T-2079-2

REAR HYDRAULIC CONTROL BLOCK & TUBES

Ref. No.	Part No.	Description	No. Used
1	92-7638	Asm-Hose	1
2	92-7648	Asm-Hose	1
3	340-161	Fitting-Adapter (Incl. Ref. #30)	1
4	340-154	Fitting-Hydraulic 90° (Incl. Ref. #10)	2
5	92-7584	Asm-Tube	1
6	32104-37	Screw-HH	2
7	3256-23	Washer-Flat (Model 03803)	8
7	3256-23	Washer-Flat (Model 03804)	9
8	56-7972	Clamp-Tube	2
9	80-8660	Spacer	2
10	237-22	O-Ring	2
11	340-70	Nut-Bulkhead	7
12	92-7647	Asm-Tube, Drain	1
13	33104-025	Screw-HHF	4
14	94-1402	Plug	4
15	93-4205	Asm-Tube, Drain (Model 03803)	1
15	93-4206	Asm-Tube, Drain (Model 03804)	1
16	69-8930	Washer	8
17	240-5	Grommet	4
18	69-8960	Spacer	4
19	340-127	Nut-Bulkhead	4
20	92-7649	Asm-Hose	4
21	93-4201	Asm-Hose	2

Ref. No.	Part No.	Description	No. Used
22	92-7585	Asm-Tube	1
23	354-77	Fitting-Quick Connect (Incl. Ref. #26)	1
24	354-79	Cap-Fitting	1
25	340-132	Fitting-Hydraulic 90° (Incl. Ref. #26 & 39)	2
26	237-78	O-Ring	4
27	237-79	O-Ring	3
28	340-98	Fitting-Hydraulic 90° (Incl. Ref. #27 & 30)	1
29	340-4	Fitting-Hydraulic (Incl. Ref. #27 & 30)	1
30	237-30	O-Ring	6
31	237-81	O-Ring	1
32	340-148	Fitting-Tee (Incl. Ref. #31, 33)	1
33	237-58	O-Ring	2
34	56-7973	Clamp-Tube (Model 03803)	8
34	56-7973	Clamp-Tube (Model 03804)	10
36	92-7558	Asm-Tube, Cooler Rear	1
37	92-7639	Asm-Hose	1
38	94-1403	Fitting-Hydraulic (Incl. Ref #26 & 39)	1
39	237-21	O-Ring	2
40	92-7557	Asm-Tube, Cooler Front	1
41	92-7492	Asm-Hose	1
42	92-7419	Asm-Block, Manifold	1

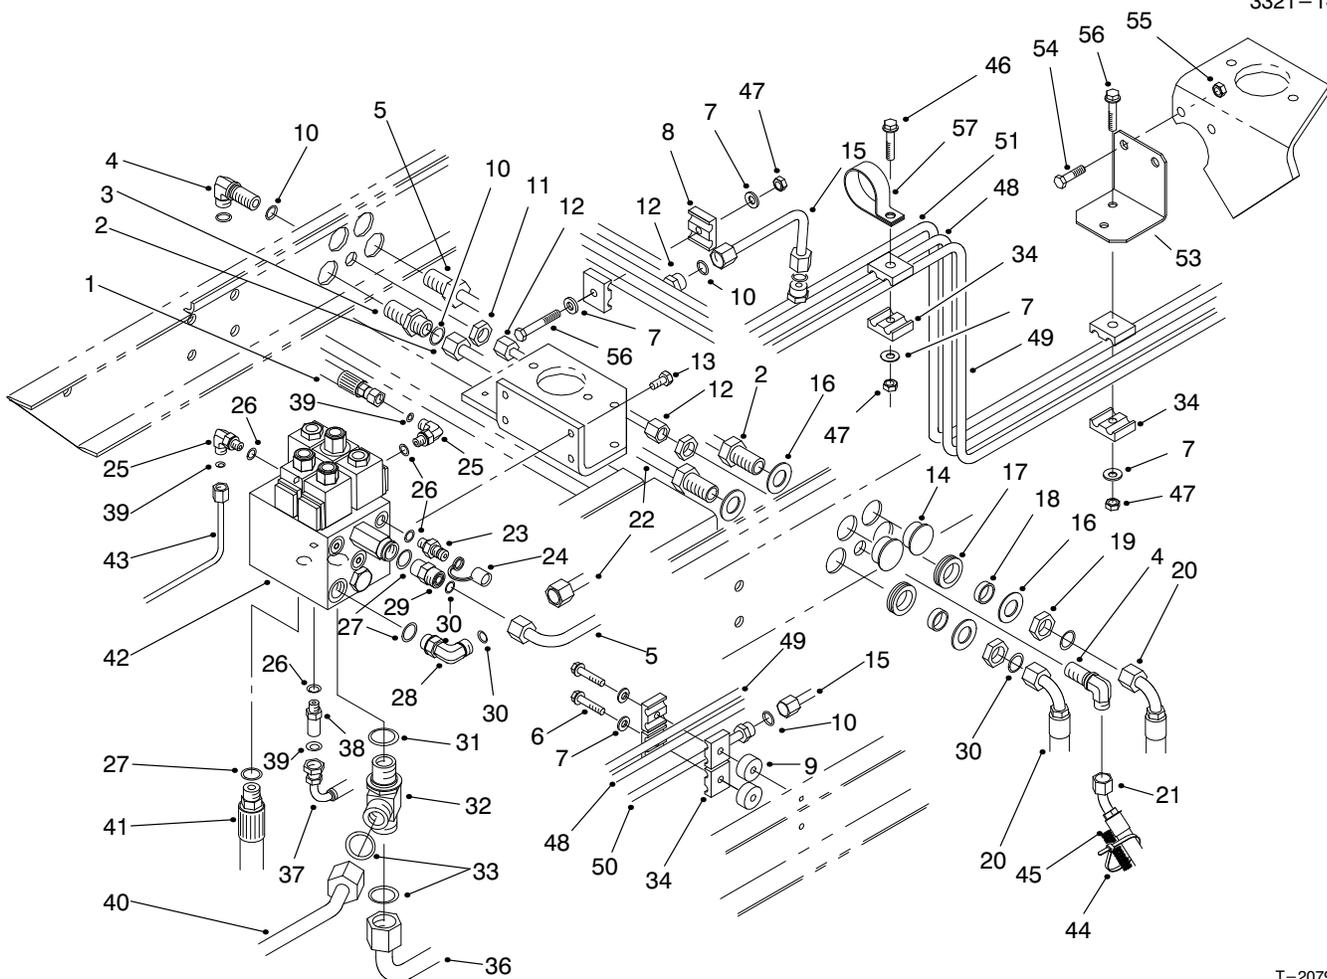


T-2079-2

REAR HYDRAULIC CONTROL BLOCK & TUBES (Cont.)

Ref. No.	Part No.	Description	No. Used
43	92-7591	Asm-Tube, P2A	1
44	3290-378	Tie-Cable	6
45	94-3090	Harness-Wire, Main	1
46	322-6	Screw-HH	1
47	3296-47	Nut-Lock (Model 03803)	4
47	3296-47	Nut-Lock (Model 03804)	5
48	92-7494	Asm-Tube, Steering, Rear	1
49	92-7495	Asm-Tube, Steering, Rear	1
50	92-7598	Asm-Tube, Front Drain	1

Ref. No.	Part No.	Description	No. Used
51	92-7553	Asm-Tube, Rear Drain (Model 03804)	1
52	237-42	O-Ring	2
53	94-2834	Bracket-Clamp	1
54	323-6	Screw-HH	2
55	32128-21	Nut-Lock	2
56	322-7	Screw-HH (Model 03803)	4
56	322-7	Screw-HH (Model 03804)	5
57	2412-147	Clamp - R	1

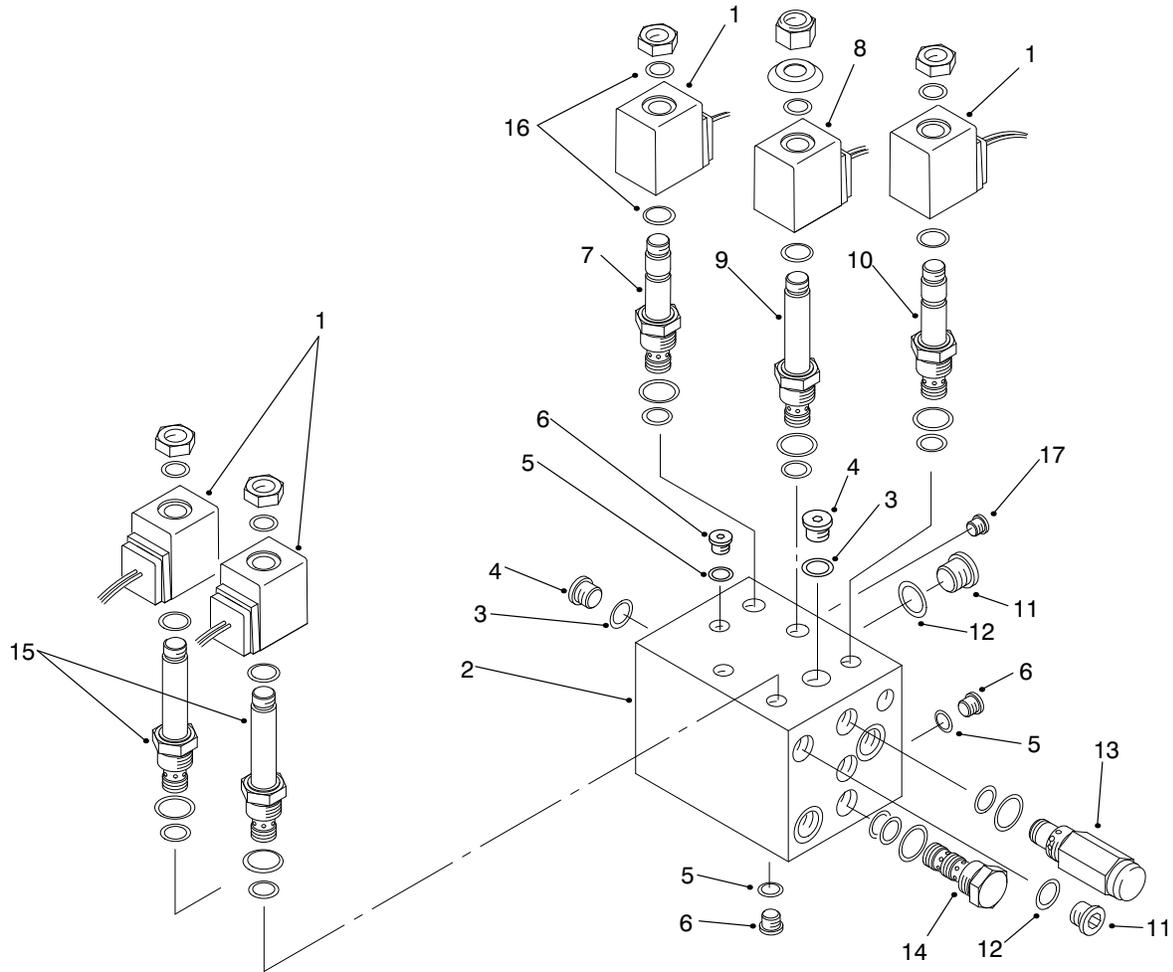

T-2080-1


MANIFOLD ASSEMBLY NO. 92-7419

Ref. No.	Part No.	Description	No. Used
1	88-9190	Solenoid-20 Watt	4
†2		Block-Manifold, Rear	1
3	237-78	O-Ring	4
4	353-990	Plug (Incl. Ref. #30)	4
5	237-56	O-Ring	4
6	353-991	Plug (Incl. Ref. #5)	4
7	88-6990	Cartridge-N.C. Spool (Use Seal Kit 75-2080)	1
8	88-9200	Solenoid-28 Watt	1
9	95-3459	Cartridge-No Flow (Use Seal Kit 75-2080)	1
10	88-6980	Cartridge-N.C. Poppet (Use Seal Kit 75-2080)	1

Ref. No.	Part No.	Description	No. Used
11	353-989	Plug (Incl. Ref. #12)	5
12	237-42	O-Ring	5
13	75-0920	Cartridge-Relief 3000 psi (Use Seal Kit 75-2080)	1
14	93-7491	Cartridge-Pilot Check (Use Seal Kit 69-4260)	1
15	93-7494	Cartridge-N.O. Poppet (Use Seal Kit 75-2080)	2
16	94-5438	Seal-Solenoid	10
17	94-2626	Plug-Orifice	1
*	75-2080	Kit-Seal	5
*	69-4260	Kit-Seal	1

*Not Illustrated


†Not Serviced Separately

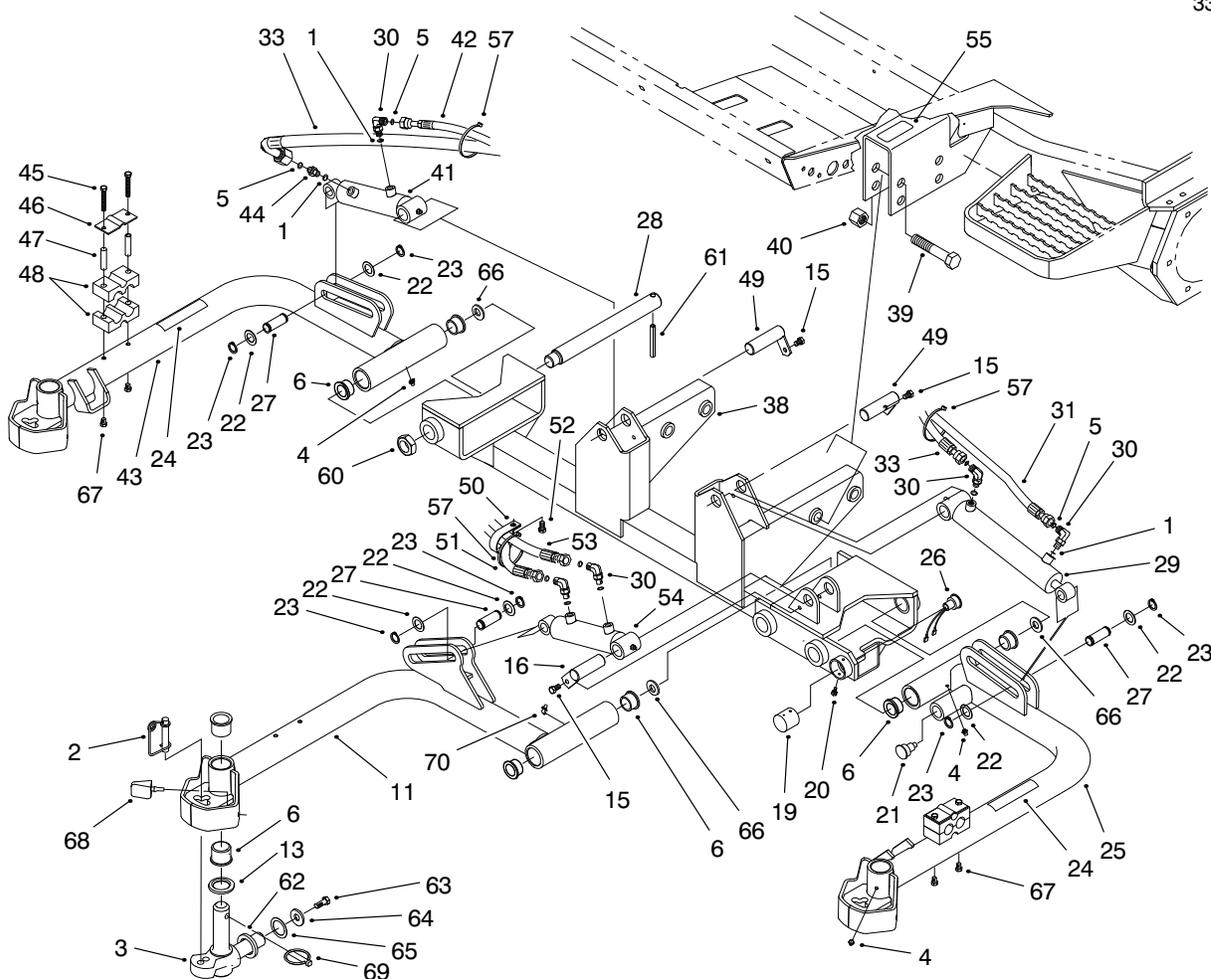

T-2934-1

FRONT LIFT ARMS ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	237-78	O-Ring	6	41	98-8069	Cylinder-Hydraulic	1
2	93-9161	Pin	3	42	92-7564	Hose Assembly	1
3	98-1880	Knuckle-Pivot	3	43	98-2408	Lift Arm #5	1
4	302-5	Fitting-Grease, Straight	3	44	340-92	Fitting-Hydraulic (Incl. Ref. #1 & 5)	1
5	237-21	O-Ring	6	45	60-6700	Screw-HH	6
6	94-8947	Bushing-Flange	12	46	93-7961	Clamp-Case Drain	3
11	98-2400	Lift Arm Assembly #1	1	47	93-7960	Spacer	6
13	94-8946	Washer	3	48	82-8170	Clamp	6
15	32144-14	Screw-HWH Thread Form	3	49	83-6780	Cylinder Pin Assembly	2
16	83-6790	Cylinder Pin Assembly	1	50	2412-96	Clamp-R	1
19	75-6370	Cap-Sensor	1	51	92-7565	Hose Assembly	1
20	32104-76	Screw-Self Tap	2	52	322-4	Screw-HH	1
21	92-8754	Magnet-Reed Switch	1	53	92-7562	Hose Assembly	1
22	94-9998	Washer-Thrust	6	54	93-2650	Cylinder-Hydraulic	1
23	94-9974	Ring-Retaining	6	55	93-6693	Decal-Floor Plate	1
24	93-6687	Decal-No Step	2	57	3290-378	Tie-Cable	3
25	98-2406	Lift Arm #4	1	60	3296-49	Nut-Lock NI	3
26	92-8002	Sensor-Reed Switch	1	61	32121-110	Pin-Spring	3
27	75-5350	Pin-Cylinder	3	62	98-7974	Washer-Thrust	3
28	95-7158	Pin-Pivot	3	63	98-7993	Screw-Flange	3
29	98-8811	Cylinder-Hydraulic	1	64	3256-6	Washer-Flat	3
30	340-132	Fitting-Hydraulic (Incl. Ref. #1 & 5)	5	65	3-6781	Washer-Thrust	3
31	82-6490	Hose	1	66	76-2980	Washer-Thrust	3
33	75-5890	Hose	1	67	33114-010	Screw-HH	4
38	95-7184	Carrier Frame Assembly	1	68	98-9976	Bumper	6
39	328-7	Screw-HH	4	69	283-71	Pin-Lynch	3
40	3296-51	Nut-Lock	4	70	302-60	Fitting-Grease	1

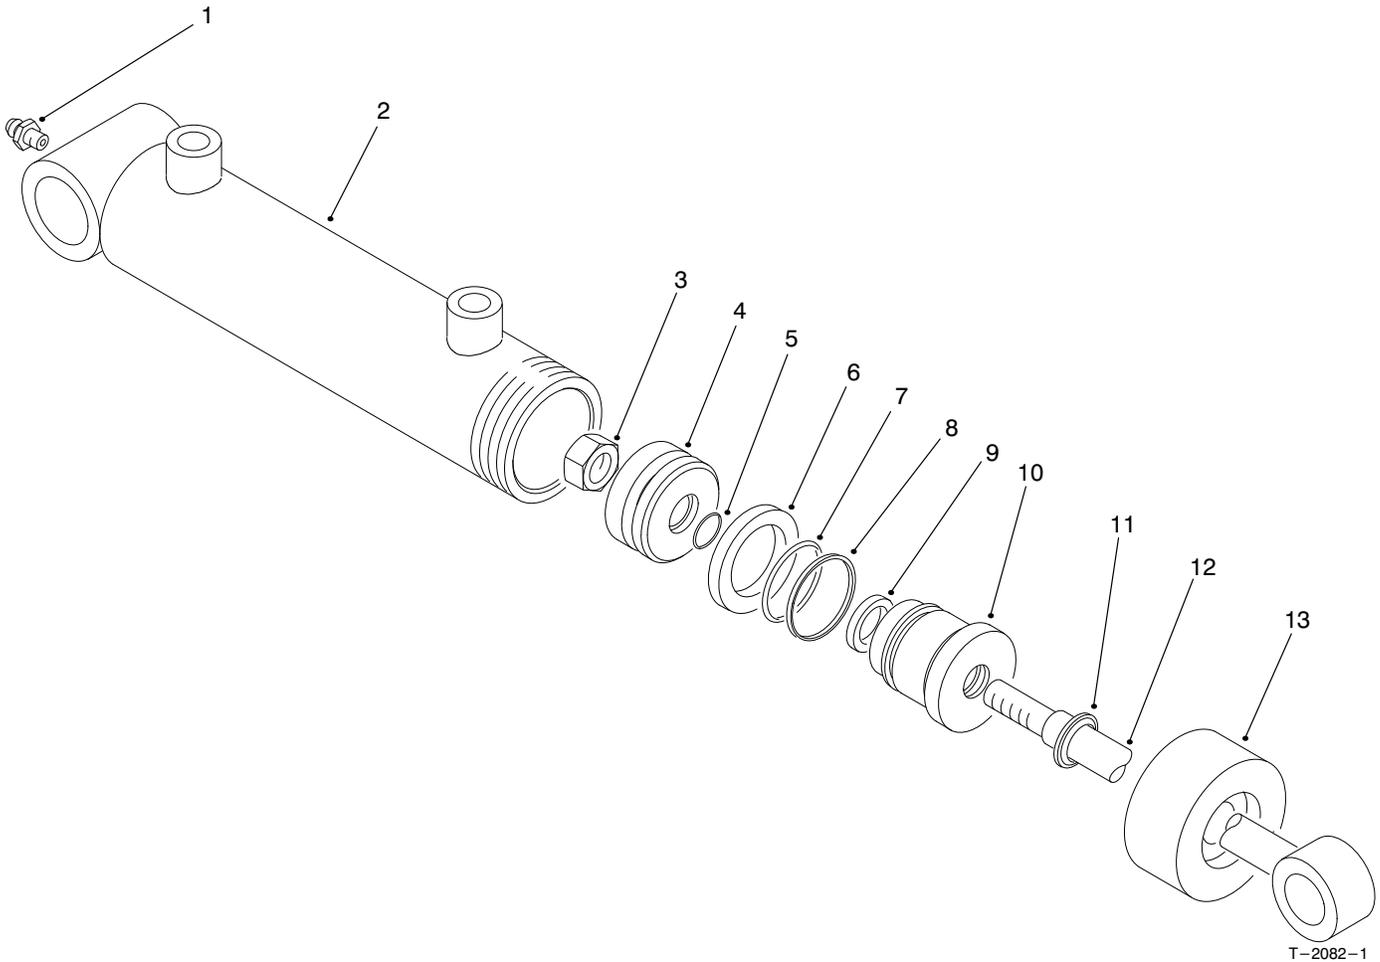


HYDRAULIC CYLINDER NO. 98-8811

Ref. No.	Part No.	Description	No. Used
1	302-5	Fitting-Grease	1
†2		Assembly-Barrel	1
3	32152-10	Nut-Lock	1
4	70-2780	Piston	1
†5		O-Ring	1
†6		Seal-Special	1
†7		O-Ring	1
†8		Backup	1

Ref. No.	Part No.	Description	No. Used
†9		Seal-Rod	1
10	98-7353	Head	1
†11		Seal-Dust	1
12	75-2120	Shaft With Clevis	1
13	93-7991	Collar	1
*	86-7330	Kit-Seal Repair (Incl. Ref. #5-9, & 11)	1

†Not Serviced Separately.

*Not Illustrated

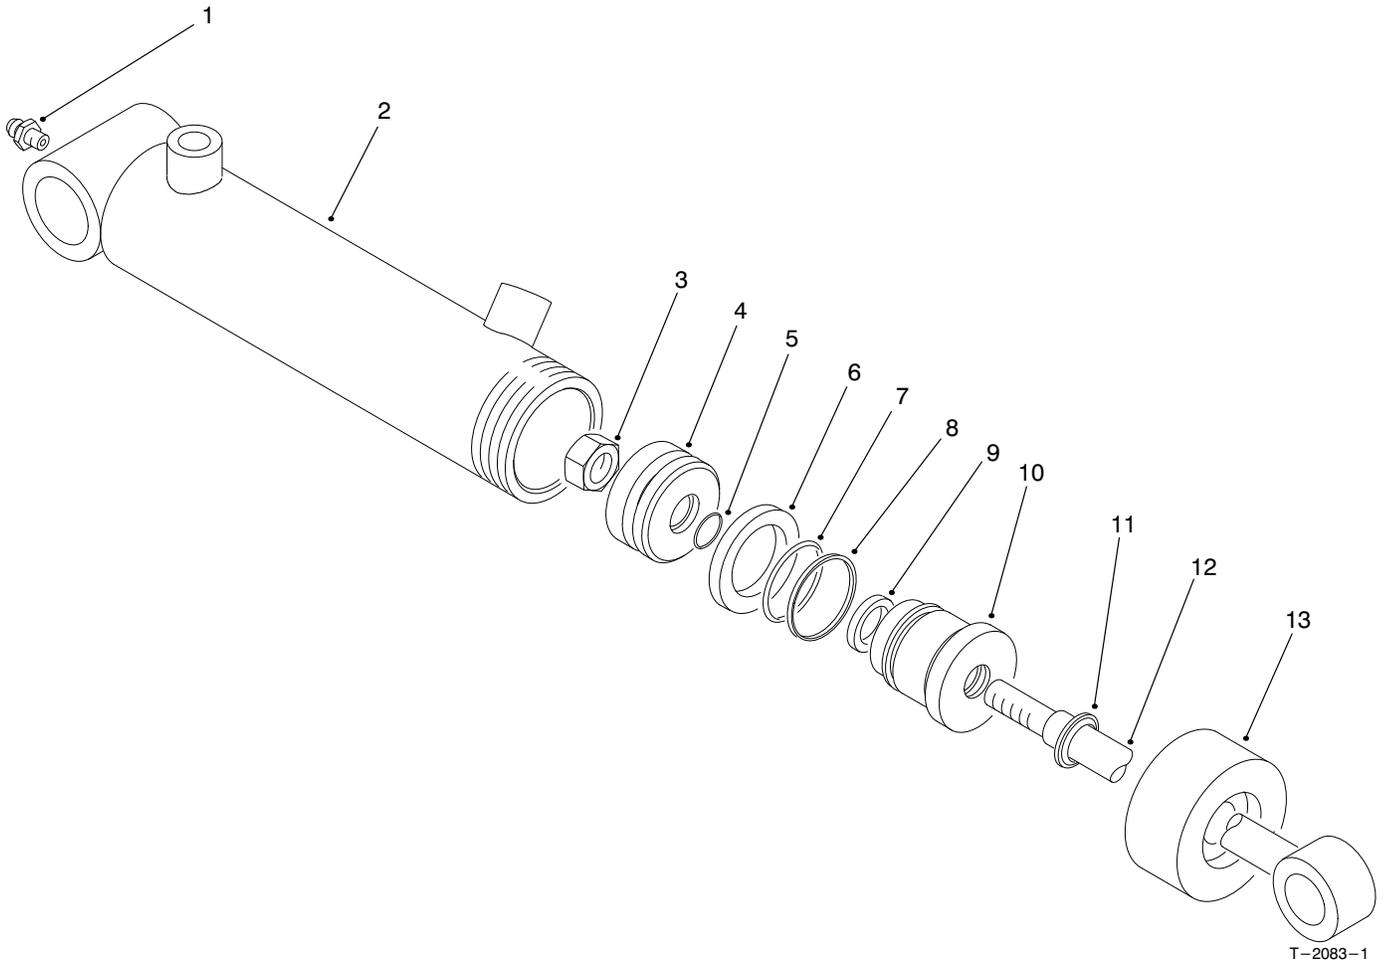


HYDRAULIC CYLINDER NO. 98-8069

Ref. No.	Part No.	Description	No. Used
1	302-5	Fitting-Grease	1
2	93-7558	Asm-Barrel	1
3	32152-10	Nut-Lock	1
4	84-1710	Piston	1
†5		O-Ring	1
†6		Seal-Special	1
†7		O-Ring	1
†8		Backup	1

Ref. No.	Part No.	Description	No. Used
†9		Seal-Rod	1
10	98-7354	Head	1
†11		Seal-Dust	1
12	84-1740	Shaft With Clevis	1
13	93-7994	Collar	1
*	84-1760	Kit-Seal Repair (Incl. Ref. #5-9, & 11)	1

† Not Serviced Separately.
*Not Illustrated

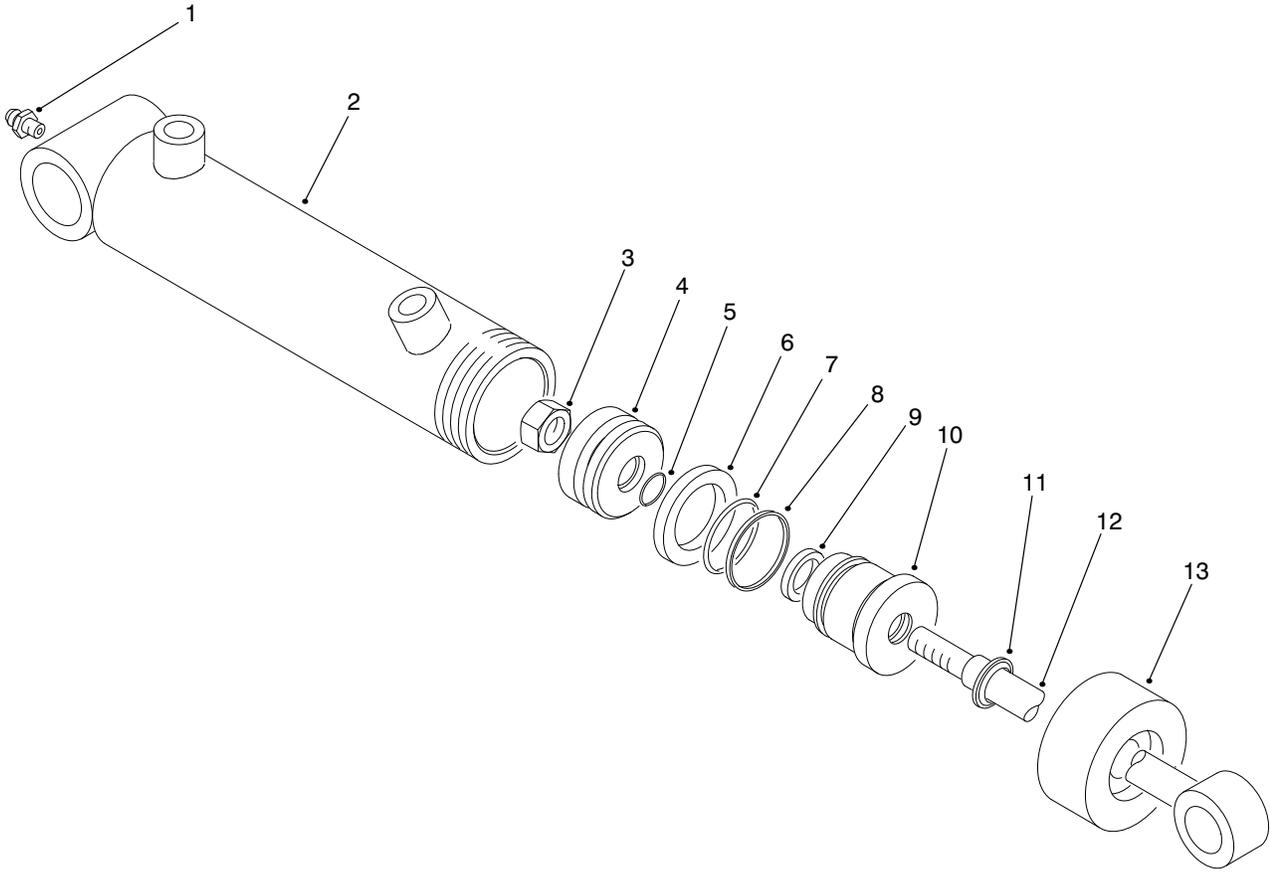

T-2084-1


HYDRAULIC CYLINDER NO. 93-2650

Ref. No.	Part No.	Description	No. Used
1	302-5	Fitting-Grease	1
†2		Assembly-Barrel	1
3	32152-10	Nut-Lock	1
4	70-2780	Piston	1
†5		O-Ring	1
†6		Seal-Special	1
†7		O-Ring	1
†8		Backup	1

Ref. No.	Part No.	Description	No. Used
†9		Seal-Rod	1
10	93-7990	Head	1
†11		Seal-Dust	1
12	94-2644	Shaft With Clevis	1
13	93-7991	Collar	1
*	86-7330	Kit-Seal Repair (Incl. Ref. #5-9, & 11)	1

† Not Serviced Separately.

*Not Illustrated

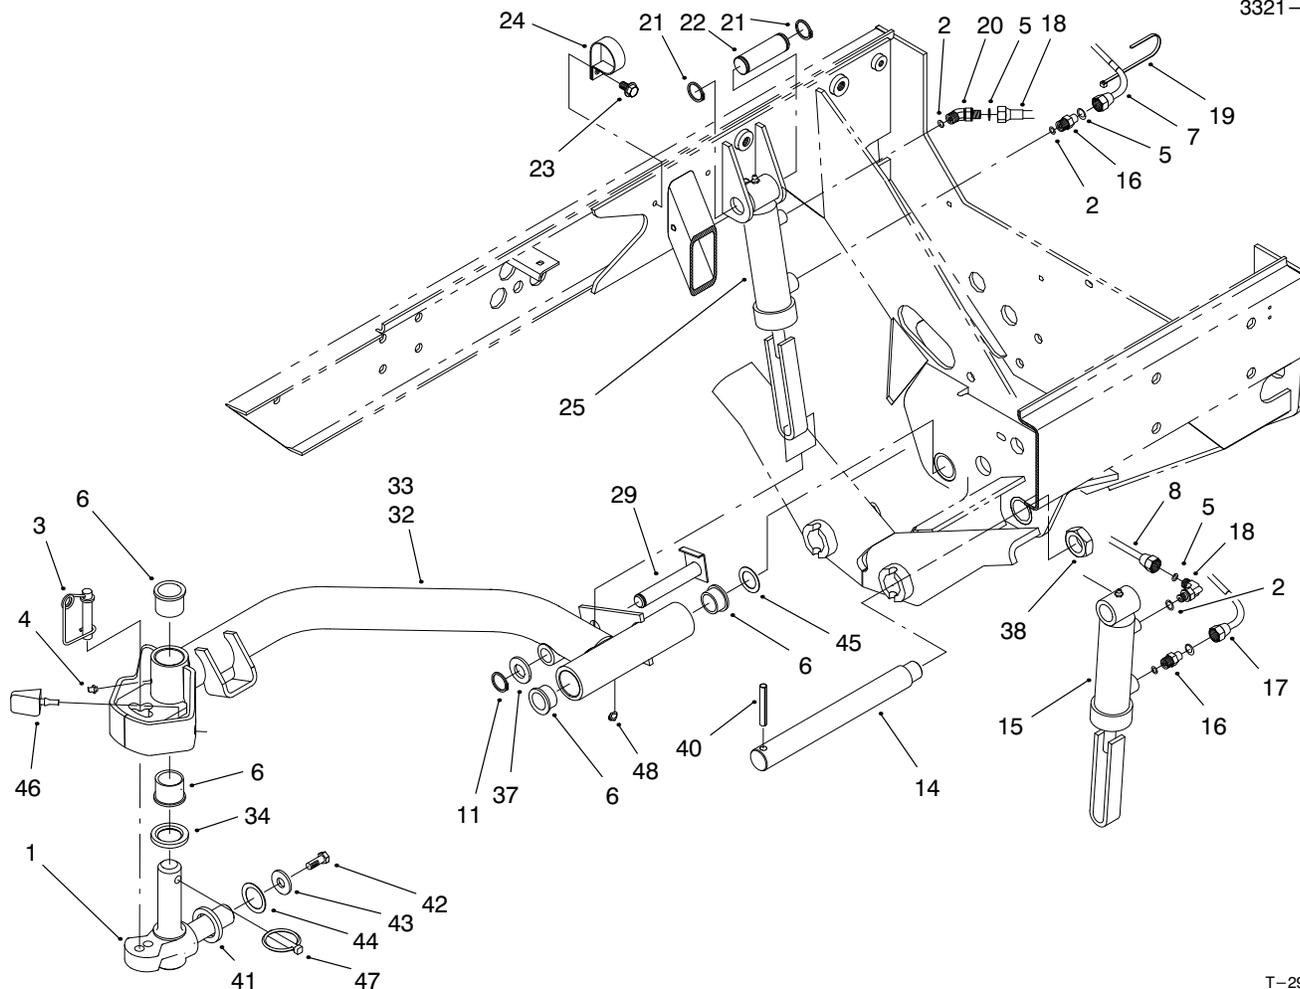


T-2936-1

REAR LIFT ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	98-1880	Knuckle-Pivot	2
2	237-78	O-Ring	4
3	93-9161	Pin	2
4	302-5	Fitting-Grease, Straight	2
5	237-21	O-Ring	4
6	94-8947	Bushing-Flange	8
7	92-7638	Hose Assembly	1
8	92-7639	Hose Assembly	1
11	94-9974	Ring-Retaining	2
14	95-7158	Pin-Pivot	2
15	98-8813	Cylinder-Hydraulic	1
16	340-92	Fitting-Straight (Incl. Ref. #2 & 5)	2
17	92-7636	Hose Assembly	1
18	340-132	Fitting-Hydraulic (Incl. Ref. #2 & 5)	1
19	3290-378	Tie-Cable	2
20	340-103	Fitting-Hydraulic (Incl. Ref. #2 & 5)	1
21	32151-36	Ring-Retaining	4

Ref. No.	Part No.	Description	No. Used
22	92-7548	Pin-Cylinder	2
23	32144-11	Screw-Thread Form	1
24	2412-96	Clamp-R	1
25	98-8812	Cylinder-Hydraulic	1
29	92-7456	Pin Assembly	2
32	98-2404	Lift Arm #3	1
33	98-2402	Lift Arm #2	1
34	94-8946	Washer	2
37	67-6570	Spacer-Wheel	2
38	3296-49	Nut-Lock NI	2
40	32121-110	Pin-Spring	2
41	98-7974	Screw-Flange	2
42	98-7993	Screw-Flange	2
43	3256-6	Washer-Flat	2
44	3-6781	Washer-Thrust	2
45	76-2980	Washer-Thrust	2
46	98-9976	Bumper	4
47	283-71	Pin-Lynch	2
48	302-11	Fitting-Grease 45°	2

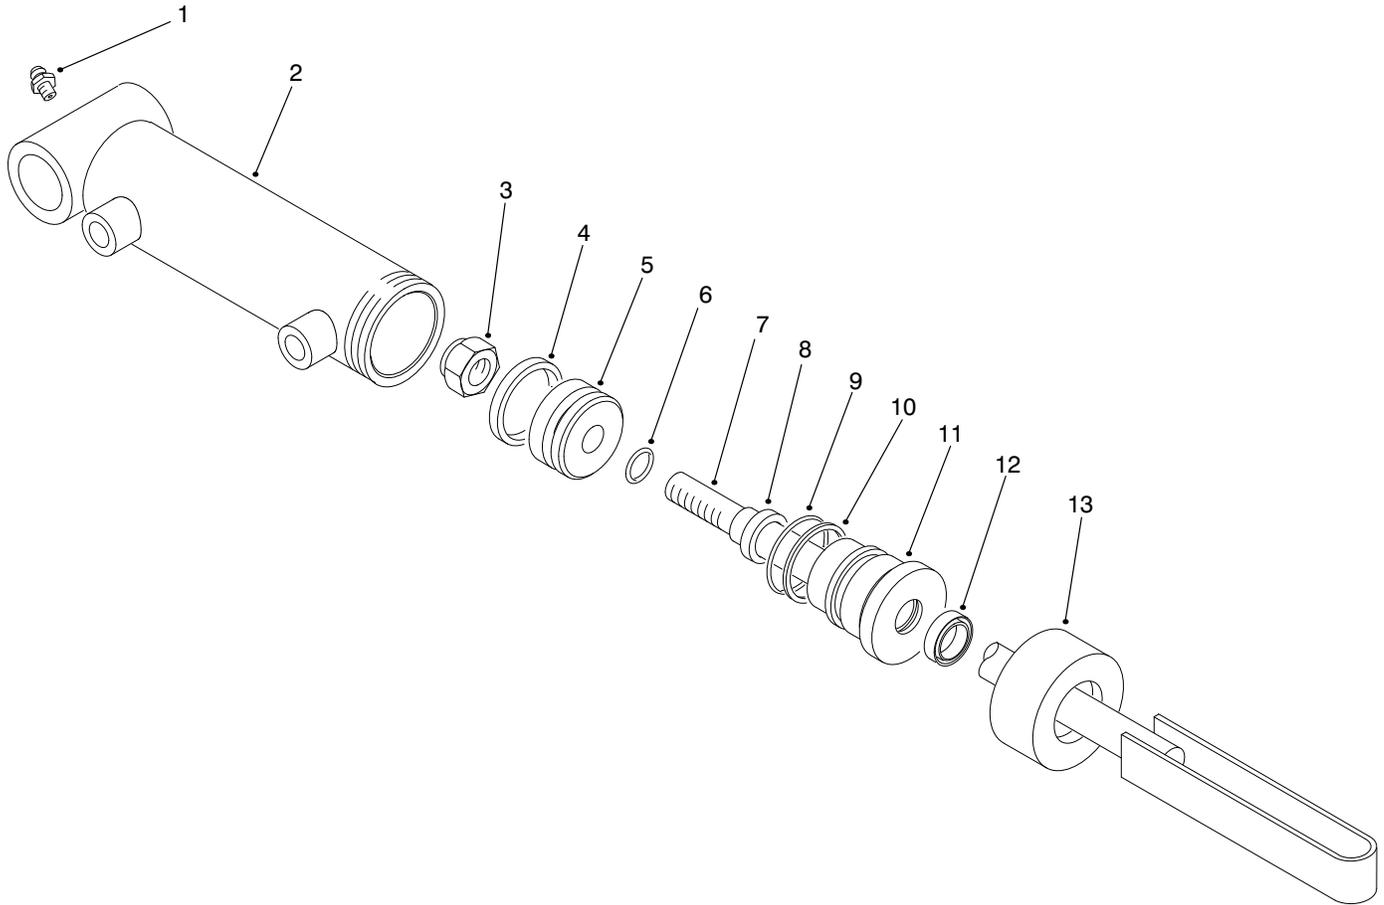

T-2087-1


HYDRAULIC CYLINDER NO. 98-8813

Ref. No.	Part No.	Description	No. Used
1	302-5	Fitting-Grease	1
†2		Asm-Barrel	1
3	32152-10	Nut	1
†4		Uni-ring	1
5	84-1710	Piston	1
†6		O-Ring	1
7	93-7989	Shaft W/Clevis	1
†8		Seal-Rod	1

Ref. No.	Part No.	Description	No. Used
†9		O-Ring	1
†10		Backup	1
11	98-7354	Head	1
†12		Seal-Dust	1
13	93-7994	Collar	1
*	84-1760	Kit-Seal repair (Incl. Ref. #4, 6, 8-10 & 12)	1

*Not Illustrated

†Not Serviced Separately.

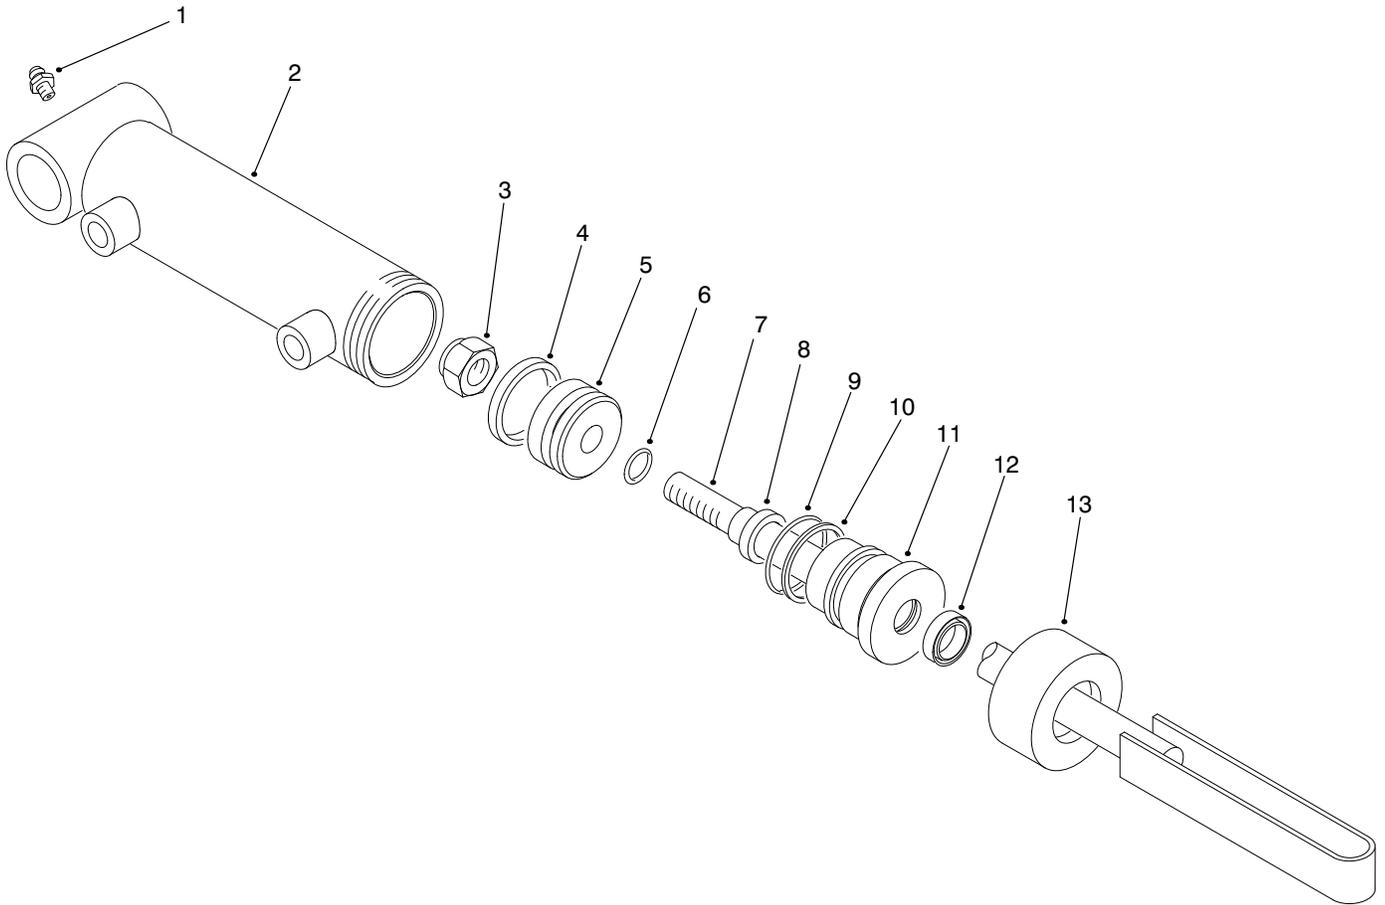

T-2087-1


HYDRAULIC CYLINDER NO. 98-8812

Ref. No.	Part No.	Description	No. Used
1	302-5	Fitting-Grease	1
†2		Asm.-Barrel	1
3	32152-10	Nut	1
†4		Uni-ring	1
5	70-2780	Piston	1
†6		O-Ring	1
7	93-7989	Shaft W/Clevis	1
†8		Seal-Rod	1

Ref. No.	Part No.	Description	No. Used
9		O-Ring	1
†10		Backup	1
11	98-7353	Head	1
†12		Seal-Dust	1
13	93-7991	Collar	1
*	86-7330	Kit-Seal repair (Incl. Ref. #4, 6, 8-10 & 12)	1

*Not Illustrated

† Not Serviced Separately.

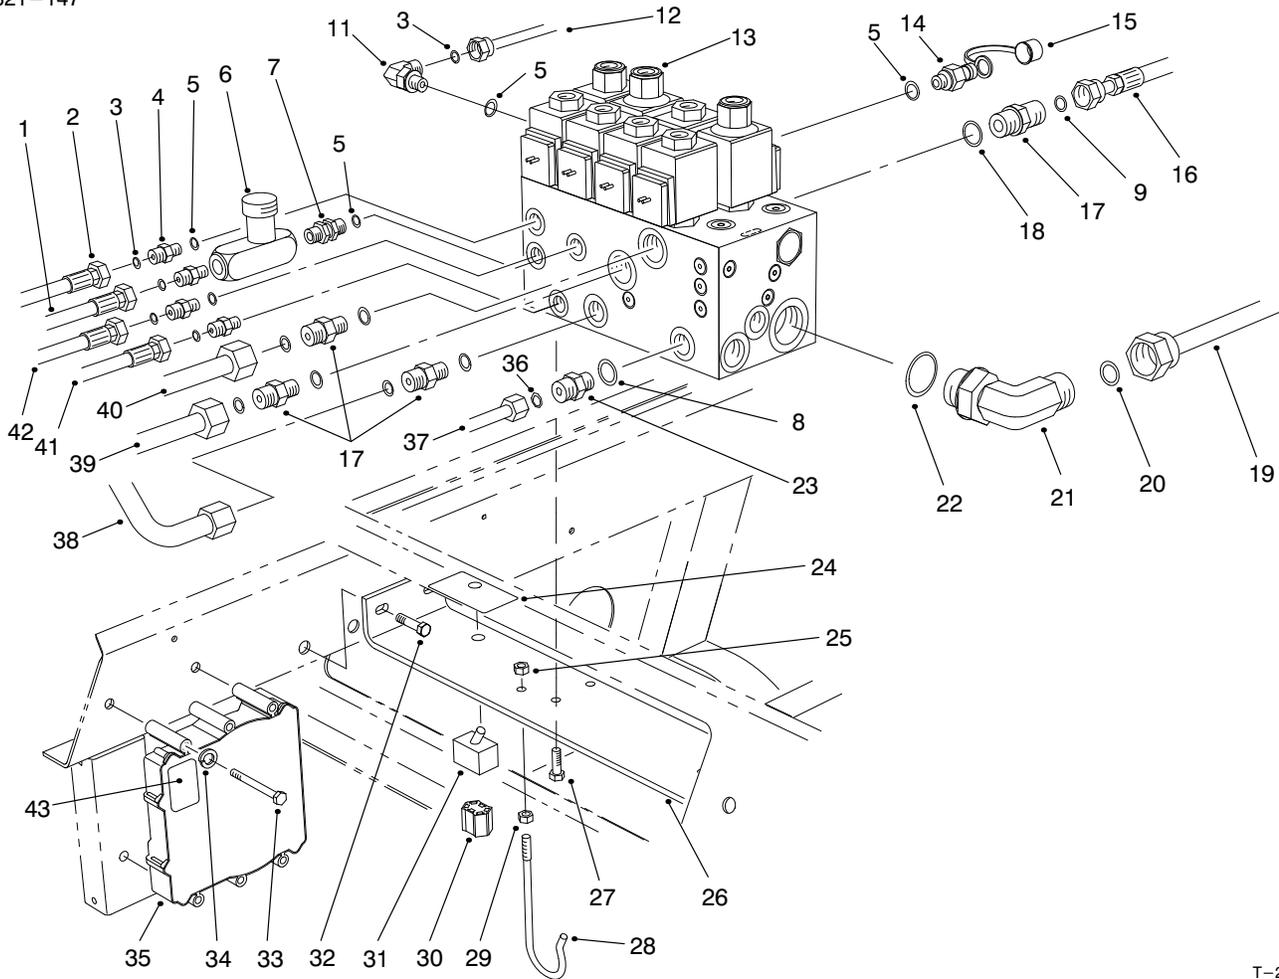


T-2088-1

FRONT HYDRAULIC CONTROL BLOCK & HOSES

Ref. No.	Part No.	Description	No. Used
1	82-6490	Asm-Hose	1
2	92-7562	Asm-Hose	1
3	237-21	O-Ring	5
4	340-92	Fitting-Hydraulic (Incl. Ref. #3 & 5)	4
5	237-78	O-Ring	8
6	93-7489	Valve-Control, Flow	1
7	93-7597	Fitting-SAE (Incl. Ref. #5)	1
8	237-42	O-Ring	1
9	237-30	O-Ring	4
10	92-7479	Asm-Tube	1
11	340-132	Fitting-Hydraulic 90° (Incl. Ref. #3 & 5)	1
12	92-7591	Asm-Tube	1
13	92-7418	Asm-Block, Control	1
14	354-77	Fitting-Quick Connect (Incl. Ref. #5)	1
15	354-79	Cap-Fitting	1
16	92-7491	Asm-Hose	1
17	340-4	Fitting-Hydraulic (Incl. Ref. #9 & 18)	4
18	237-79	O-Ring	4
19	92-7557	Asm-Tube	1
20	237-65	O-Ring	1

Ref. No.	Part No.	Description	No. Used
21	340-139	Fitting-Hydraulic 90° (Incl. Ref. #20 & 22)	1
22	237-81	O-Ring	1
23	340-2	Adapter-Hydraulic (Incl. Ref. #8 & 36)	1
24	93-1264	Decal-Switch, Backlap	1
24	94-4580	Decal-Backlap (Japan)	1
25	3296-29	Nut-Lock	1
26	92-7519	Bracket-Block, Manifold	1
27	33104-016	Screw-HHF	4
28	93-7970	Form-Wire, Hose Mount	1
29	3217-6	Nut-Jam	1
30	94-3090	Harness-Wire, Main	1
31	93-7487	Switch-Toggle	1
32	3234-17	Screw-HF	4
33	321-15	Screw-HH	3
34	3253-3	Washer-Lock	3
35	92-5720	Controller-Solid State	1
36	237-22	O-Ring	1
37	93-4222	Asm-Tube, Drain Return	1
38	94-1447	Asm-Tube, Steering Ret.	1
39	93-4217	Asm-Tube	1
40	93-4216	Asm-Tube	1
41	92-7565	Asm-Hose	1
42	92-7564	Asm-Hose	1
43	93-8053	Decal-ECU Label (Europe)	1

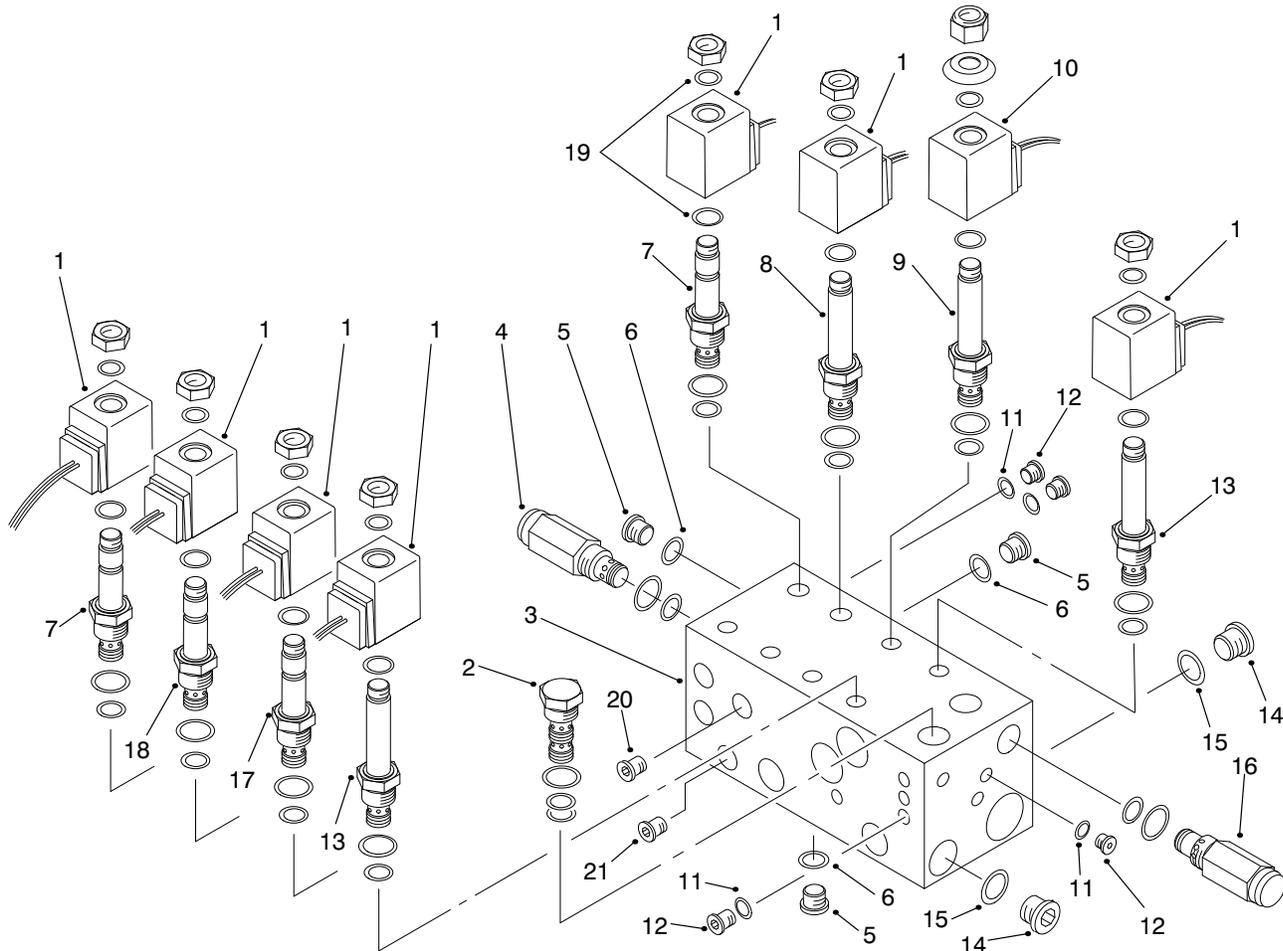


T-2089-2

CONTROL BLOCK ASSEMBLY NO. 92-7418

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	88-9190	Solenoid-20 Watt	7	13	93-7494	Cartridge-N.O. Poppet (Use Seal Kit 75-2080)	2
2	93-7491	Cartridge-Pilot Check (Use Seal Kit 69-4260)	1	14	353-989	Plug (Incl. Ref. #15)	5
†3		Block-Manifold, Front	1	15	237-42	O-Ring	5
4	93-7492	Cartridge-Relief 2300 psi (Use Seal Kit 75-2080)	1	16	75-0920	Cartridge-Relief 3000 psi (Use Seal Kit 75-2080)	1
5	353-990	Plug (Incl. Ref. #6)	10	17	88-6980	Cartridge-N.O. Poppet (Use Seal Kit 75-2080)	1
6	237-78	O-Ring	10	18	92-6315	Cartridge-N.C. Poppet (Use Seal Kit 75-2080)	1
7	88-6990	Cartridge-N.C. (Use Seal Kit 75-2080)	2	19	94-5438	Seal-Solenoid	16
8	92-3071	Solenoid (Use Seal Kit 69-4260)	1	20	94-3077	Plug-Orifice	1
9	95-3459	Cartridge-N.O. (Use Seal Kit 75-2080)	1	21	94-8140	Plug-Orifice	1
10	88-9200	Solenoid-28 Watt	1	*	75-2080	Kit-Seal	7
11	237-156	O-Ring	10	*	69-4260	Kit-Seal	2
12	353-991	Plug (Incl. Ref. #11)	10				

*Not Illustrated

†Not Serviced Separately

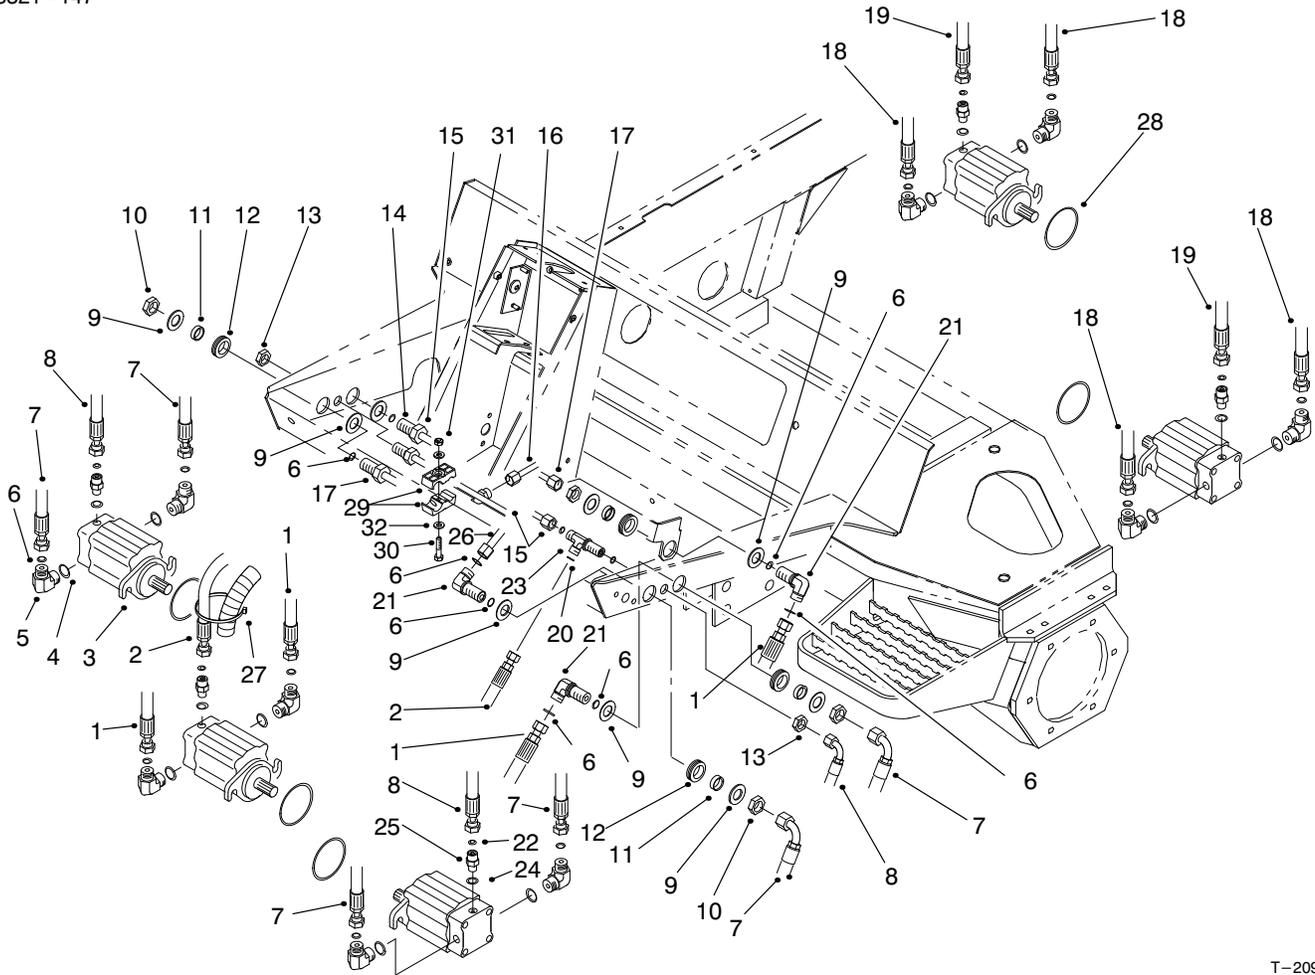


T-2090-1

REEL MOTORS & HOSES

Ref. No.	Part No.	Description	No. Used
1	92-7556	Asm-Hose	1
2	92-7560	Asm-Hose	1
3	92-7387	Motor-Hydraulic	5
4	237-79	O-Ring	10
5	340-98	Fitting-Hydraulic 90° (Incl. Ref. #4 & 6)	10
6	237-30	O-Ring	18
7	92-7555	Asm-Hose	4
8	92-7559	Asm-Hose	2
9	69-8930	Washer	10
10	340-127	Nut-Bulkhead	5
11	69-8960	Spacer	5
12	240-5	Grommet	5
13	340-70	Nut-Bulkhead	2
14	93-4216	Asm-Tube (Incl. Ref. #6)	1
15	93-4223	Asm-Tube, Front Drain (Incl. Ref. #20)	1
16	93-4222	Asm-Tube, Drain Return	1
17	93-4219	Asm-Tube, #1 Bulkhead (Incl. Ref. #6)	1

Ref. No.	Part No.	Description	No. Used
18	92-7649	Asm-Hose	4
19	93-4201	Asm-Hose	2
20	237-22	O-Ring	3
21	93-9151	Fitting-Hydraulic 90° (Incl. Ref. #6)	3
22	237-21	O-Ring	5
23	340-68	Fitting-Hydraulic, Tee (Incl. Ref. #20)	1
24	237-78	O-Ring	5
25	340-92	Fitting-Hydraulic (Incl. Ref. #22 & 24)	5
26	93-4217	Asm-Tube	1
27	3290-378	Tie-Cable	1
28	93-9783	O-Ring	10
29	56-7972	Clamp-Tube	4
30	322-7	Screw-HH	2
31	3296-47	Nut-Lock	2
32	3256-23	Washer-Flat	4

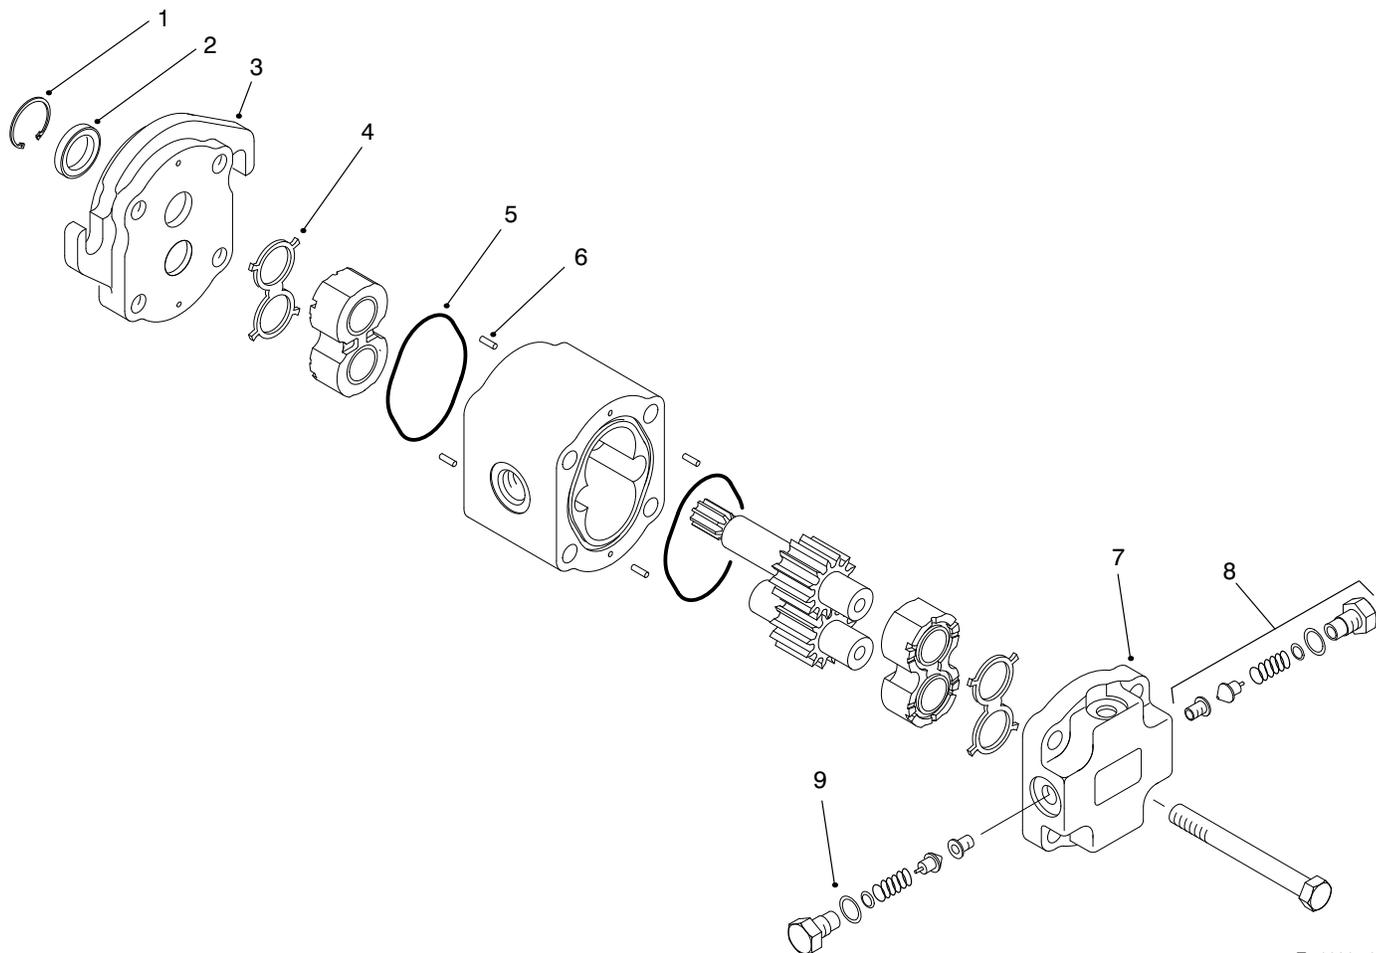


T-2091-1

REEL MOTOR ASSEMBLY NO. 92-7387

Ref. No.	Part No.	Description	No. Used
1		Ring—Retaining	1
2		Seal—Shaft	1
3		Flange	1
4		E—Seal	2
5		O—Ring	2
6		Pin—Dowel	4
7		Block—Valve (Incl. Ref. #8)	1

Ref. No.	Part No.	Description	No. Used
8		Valve—Adjusting	2
9		O—Ring	2
*	93-9152	Kit—Flange (Incl. Ref. #1-3 & 6)	1
*	93-9153	Kit—Seal (Incl. Ref. #1, 2, 4, 5 & 9)	1
*	93-9154	Kit—Valve Block (Incl. Ref. #6 & 7)	1

*Not Illustrated

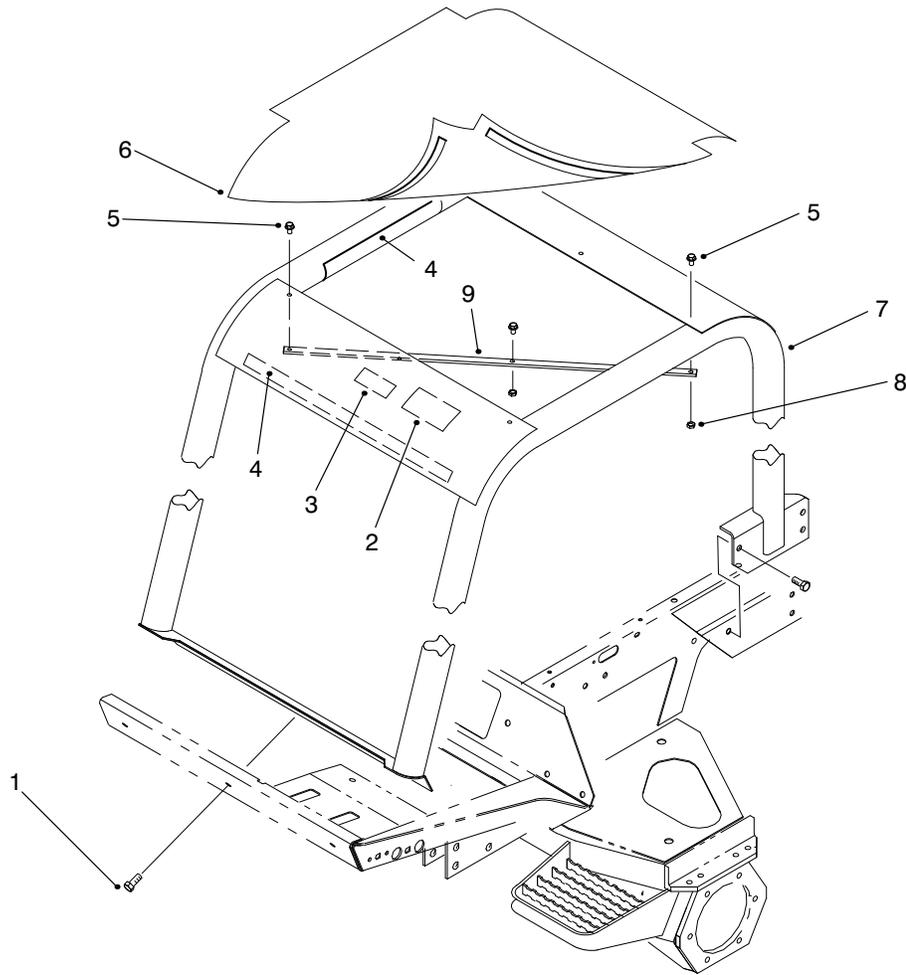


T-2092-1

ROLL OVER PROTECTION SYSTEM (ROPS)

Ref. No.	Part No.	Description	No. Used
1	33106-035	Screw-HHF	3
2	93-8050	Decal-Warning	1
2	84-4300	Decal-Warning (Japan)	1
3	92-7540	Decal-ROPS	1
4	93-9157	Velcro	4
5	33104-030	Screw-HHF	5

Ref. No.	Part No.	Description	No. Used
6	93-9160	Cover-ROPS	1
7	94-2643	Frame-ROPS (Incl. Ref. #2-4)	1
8	33024-00	Nut-Lock	5
9	93-9159	Strap-Cover	2

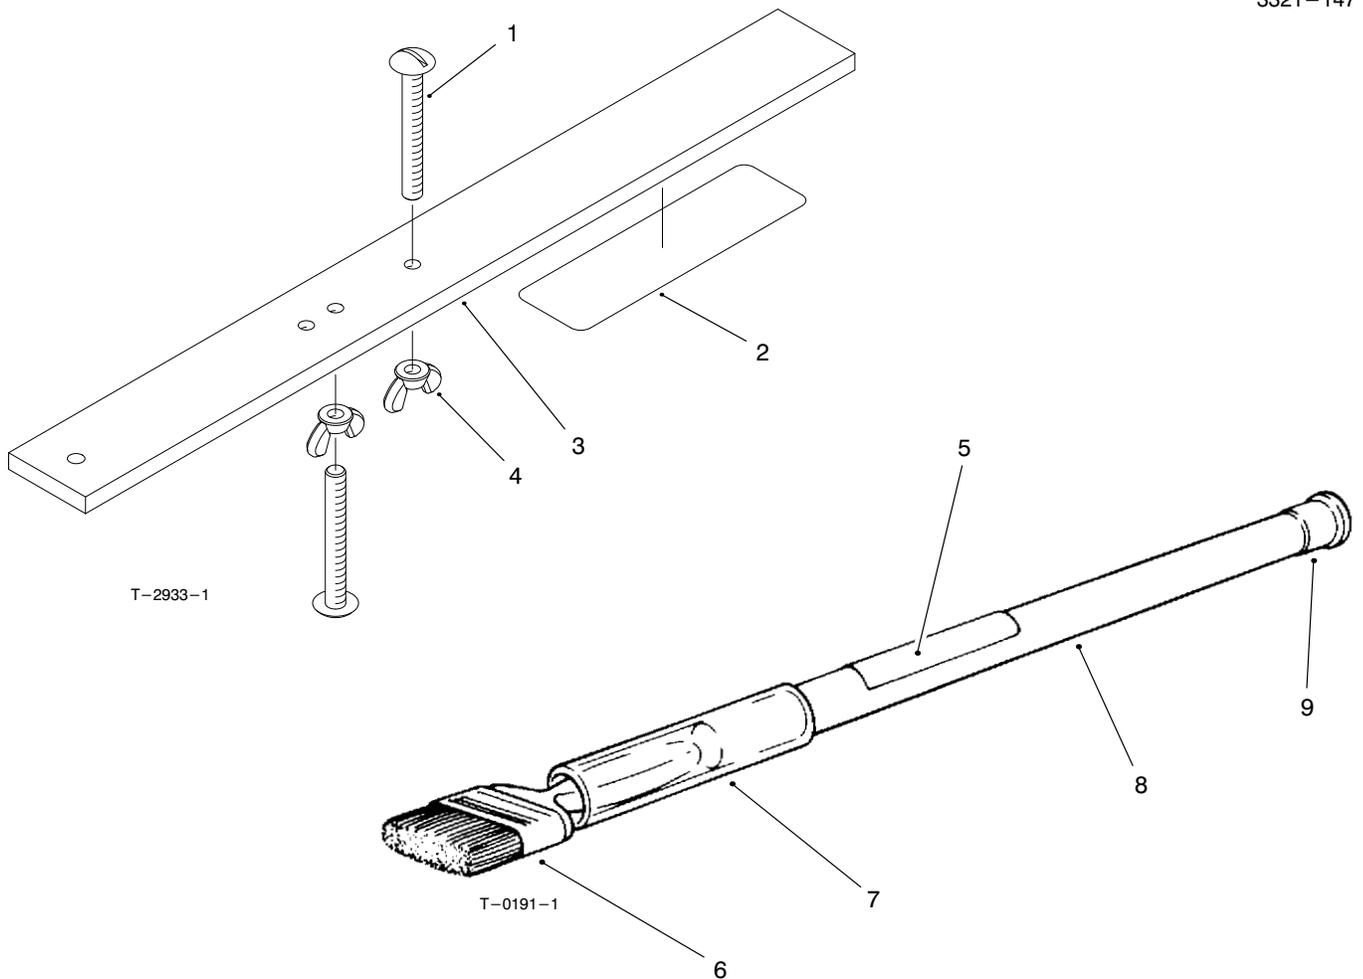

GAUGE BAR & BACKLAPPING BRUSH ASSEMBLIES

Ref. No.	Part No.	Description	No. Used
1	32122-54	Screw-Machine Slot Hd.	2
2	98-7976	Decal	1
3	98-1852	Asm-Gauge Bar (Incl. Ref. #1-2 & 4)	1
4	32103-3	Nut-Wing	2
5	12-9140	Decal	1

Ref. No.	Part No.	Description	No. Used
6	36-4310	Brush	1
7	29-9090	Hose-Handle	1
8	29-9080	Handle	1
9	2410-18	Plug	1
*	29-9100	Asm-Backlapping Brush (Incl. Ref. #5-9)	1

*Not Illustrated

TORO PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
3-6781	Washer-Thrust	71	44	2	66-8121	Standpipe	17	7	1
3-6781	Washer-Thrust	67	65	3	66-8520	Bumper-Down Stop	9	17	2
5-0652	Spacer	6	47	1	66-8530	Adjuster	9	16	1
12-9140	Decal	79	5	1	66-8560	Nut-Push	9	11	4
17-9420	Screw-Handle	2	61	1	66-8610	Weldment-Lower	9	10	1
21-4191	Asm-Seat Belt	7	4	1	66-9290	Spacer	9	15	6
21-9260	Cover-Dust	3	18	1	67-6570	Spacer-Wheel	71	37	2
27-2360	Switch-Ignition	13	43	1	67-7160	Block-Fuse	13	48	2
29-9080	Handle	79	8	1	68-6150	Breather-Air	16	4	1
29-9090	Hose-Handle	79	7	1	68-9420	Washer-Lock	42	4	6
29-9100	Asm-Backlapping Brush	79	*	1	68-9420	Washer-Lock	38	34	3
36-4310	Brush	79	6	1	69-2980	Seal-Inner	61	22	2
37-8771	Bolt-Shoulder	32	33	2	69-3020	Latch-Draw	32	34	2
44-2210	Asm-Light, Warning	3	30	1	69-4260	Kit-Seal	66	*	1
46-0330	Nut-Hex	49	1	2	69-4260	Kit-Seal	75	*	2
46-6550	Fitting-Connector	17	8	1	69-6470	Bushing-Flange	61	18	4
46-6560	Bushing	17	9	2	69-8890	Cap-Spindle	61	15	2
46-8091	Screw-Tapping	1	14	2	69-8900	Spacer	54	59	1
48-7570	Screw-HH	34	9	3	69-8910	Washer	54	58	2
48-7610	Screw-HH	34	46	3	69-8920	Washer	25	10	4
48-7700	Screw-HH	39	38	3	69-8920	Washer	25	10	6
48-7700	Screw-HH	34	45	6	69-8930	Washer	76	9	10
48-7780	Screw-HH	34	42	3	69-8930	Washer	64	16	8
48-7810	Screw-HH	34	10	3	69-8950	Spacer	25	12	2
48-7810	Screw-Mounting	49	5	3	69-8950	Spacer	25	12	3
48-7840	Screw-HH	34	5	1	69-8960	Spacer	76	11	5
48-7880	Nut	34	24	3	69-8960	Spacer	64	18	4
48-7880	Nut	8	29	1	70-1480	Relay	8	27	1
48-7890	Nut	8	30	1	70-2780	Piston	68	4	1
48-7930	Nut-Hex.	34	28	2	70-2780	Piston	70	4	1
48-9470	Screw	34	4	1	70-2780	Piston	73	5	1
49-2040	Screw-HH	8	2	1	71-4580	Clutch-Roller	53	15	1
49-2640	Seal-Shaft	21	11	1	71-4590	Washer-Thrust	53	16	2
49-6440	Pedal-Accelerator	6	15	1	71-4760	Seal	61	4	2
52-5910	Ring-Retaining	8	25	1	71-4760	Seal	59	12	2
53-9681	Mount-Rubber	34	3	3	72-3560	Decal-4WD (Model 03804)	2	29	1
55-4130	Hose - Fuel	51	54	1	74-0720	Tube-Manual	7	16	1
56-6710	O-Ring	21	1	6	74-3410	Asm-Radiator	32	20	1
56-7972	Clamp	3	42	2	74-3650	Fan-Engine	34	32	1
56-7972	Clamp-Tube	64	8	2	74-5500	Bolt-Wheel	53	36	10
56-7972	Clamp-Tube	76	29	4	74-5700	Bearing-Needle	53	30	1
56-7973	Clamp	4	52	6	74-5950	Latch-Swell	1	24	3
56-7973	Clamp-Tube (Model 03803)	64	34	8	74-5950	Latch-Swell	12	30	1
56-7973	Clamp-Tube (Model 03804)	64	34	10	74-6490	Hose-Water Line	34	40	2
59-9740	Latch-Draw	1	12	1	74-6540	Tappet-Valve	38	14	8
60-5700	Spring-Compression	6	43	1	74-6550	Cup-Upper Valve Spring	37	11	8
60-5890	Washer	21	12	1	74-6560	Spring-Valve	37	10	8
60-6700	Screw-HH	67	45	6	74-6570	Cup-Lower Valve Spring	37	9	8
61-2790	Filler-Screen	17	24	1	74-6580	Insert-Valve (1.650mm)	37	13	8
61-2790	Filter-Screen	16	9	1	74-6590	Insert-Valve (1.725mm)	37	*	8
62-2170	Washer-Thrust	61	17	4	74-6600	Insert-Valve (1.800mm)	37	*	8
62-5550	Decal-Toro	1	1	1	74-6610	Insert-Valve (1.900mm)	37	*	8
62-7650	Gasket	17	17	1	74-6620	Insert-Valve (1.975mm)	37	*	8
63-7622	Hose-Fuel	51	15	1	74-6630	Insert-Valve (2.050mm)	37	*	8
63-7627	Hose-Fuel	17	4	1	74-6640	Insert-Valve (2.125mm)	37	*	8
63-7627	Hose-Fuel	34	27	1	74-6650	Insert-Valve (2.225mm)	37	*	8
63-7640	Sender-Fuel	17	18	1	74-6660	Insert-Valve (2.250mm)	37	*	8
63-7880	Pin-Latch, Brake	6	31	1	74-6670	Insert-Valve (2.275mm)	37	*	8
63-7900	Rack	3	1	1	74-6680	Insert-Valve (2.300mm)	37	*	8
63-8360	Key-Ignition	12	35	1	74-6690	Insert-Valve (2.325mm)	37	*	8
63-8410	Washer-Flat	17	14	3	74-6700	Insert-Valve (2.350mm)	37	*	8
63-8410	Washer-Flat	16	27	3	74-6710	Insert-Valve (2.375mm)	37	*	8
63-9920	Decal-EEC 105 DBA	8	15	1	74-6720	Insert-Valve (2.400mm)	37	13	8
65-5100	Handle-Hood	1	11	1	74-6730	Insert-Valve (2.425mm)	37	*	8
66-2920	Washer	2	59	4	74-6740	Insert-Valve (2.450mm)	37	*	8
66-2920	Washer	13	77	3	74-6750	Insert-Valve (2.475mm)	37	*	8
66-2920	Washer-Nylon	8	1	2	74-6760	Insert-Valve (2.500mm)	37	*	8
66-3160	Screw	34	11	4	74-6770	Insert-Valve (2.525mm)	37	*	8
66-3240	Cap-Radiator (Europe)	51	22	1	74-6780	Insert-Valve (2.550mm)	37	*	8
66-4190	Spring	8	12	1	74-6790	Insert-Valve (2.575mm)	37	*	8
66-6480	Washer	2	58	2	74-6800	Insert-Valve (2.600mm)	37	*	8

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3321-147

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
74-6810	Insert-Valve (2.625mm)	37 * 8	74-7840	Plug-27 mm Dia.	38 33 2
74-6820	Insert-Valve (2.650mm)	37 * 8	74-7930	Screw-Bearing Cap	35 27 10
74-6830	Insert-Valve (2.675mm)	37 * 8	74-7940	Bushing-Spring	35 28 1
74-6840	Insert-Valve (2.700mm)	37 * 8	74-7950	Screw-Plate	35 29 6
74-6850	Insert-Valve (2.725mm)	37 * 8	74-7960	Stud-Filter	35 30 1
74-6860	Insert-Valve (2.750mm)	37 * 8	74-7970	Filter-Oil	35 31 1
74-6870	Insert-Valve (2.775mm)	37 * 8	74-7990	Pin	36 16 1
74-6880	Insert-Valve (2.800mm)	37 * 8	74-7990	Pin-Spring	35 33 4
74-6890	Insert-Valve (2.825mm)	37 * 8	74-8000	Plug	35 34 2
74-6900	Insert-Valve (2.850mm)	37 * 8	74-8010	Guide-Dipstick	35 35 1
74-6910	Insert-Valve (2.875mm)	37 * 8	74-8030	Pin-Spring	35 37 1
74-6920	Insert-Valve (2.900mm)	37 * 8	74-8100	Gear-Pinion	36 4 1
74-6930	Insert-Valve (2.925mm)	37 * 8	74-8120	Key-Woodruff	36 6 2
74-6940	Insert-Valve (2.950mm)	37 * 8	74-8140	Cover	36 9 1
74-6950	Insert-Valve (2.975mm)	37 * 8	74-8150	Gasket-Cover	36 10 1
74-6960	Insert-Valve (3.000mm)	37 * 8	74-8170	Bearing Set (Std.)	36 12 2
74-6970	Insert-Valve (3.025mm)	37 * 8	74-8210	Thrust Bearing Set	36 * 2
74-6980	Insert-Valve (3.050mm)	38 13 8	74-8230	Crankshaft	36 14 1
74-6990	Insert-Valve (3.075mm)	38 * 8	74-8260	Flywheel	36 34 1
74-7000	Insert-Valve (3.100mm)	38 * 8	74-8270	Pin	36 18 3
74-7010	Insert-Valve (3.125mm)	38 * 8	74-8290	Seal-#1 Bearing Cap	36 20 2
74-7020	Insert-Valve (3.150mm)	38 * 8	74-8300	Clip-Piston Pin	36 21 8
74-7030	Insert-Valve (3.175mm)	38 * 8	74-8310	Pin-Piston	36 22 4
74-7040	Insert-Valve (3.200mm)	38 * 8	74-8320	Piston Ring Set-0.20 mm	36 * 4
74-7050	Insert-Valve (3.225mm)	38 * 8	74-8330	Piston Ring Set-0.50 mm	36 * 4
74-7060	Insert-Valve (3.250mm)	38 * 8	74-8340	Piston Ring Set-0.80 mm	36 * 4
74-7070	Insert-Valve (3.275mm)	38 * 8	74-8360	Rod-Connecting	36 25 4
74-7080	Insert-Valve (3.300mm)	38 * 8	74-8380	Bearing-Connecting Rod	36 27 4
74-7090	Insert-Valve (3.325mm)	38 * 8	74-8420	Piston Set-Stage #1	36 29 1
74-7100	Insert-Valve (3.350mm)	38 * 8	74-8430	Piston Set-Stage #2	36 * 1
74-7110	Insert-Valve (3.375mm)	38 * 8	74-8440	Piston Set-Stage #3	36 * 1
74-7120	Insert-Valve (3.400mm)	38 * 8	74-8610	Pin	46 7 2
74-7130	Insert-Valve (3.425mm)	38 * 8	74-8610	Pin	48 8 2
74-7140	Insert-Valve (3.450mm)	38 * 8	74-8630	Bushing-Flange	46 8 1
74-7150	Insert-Valve (3.475mm)	38 * 8	74-8650	Journal	46 12 1
74-7160	Insert-Valve (3.500mm)	38 * 8	74-8670	Union-Inlet	46 13 1
74-7170	Insert-Valve (3.550mm)	38 * 8	74-8680	Gasket	46 14 2
74-7180	Insert-Valve (3.625mm)	38 * 8	74-8710	Washer	46 16 1
74-7190	Insert-Valve (3.700mm)	38 * 8	74-8710	Washer-E.T.L.W.	50 9 1
74-7200	Insert-Valve (3.775mm)	38 * 8	74-8750	Pipe	47 12 1
74-7210	Insert-Valve (3.850mm)	38 * 8	74-8770	Plug	47 10 1
74-7220	Insert-Valve (3.925mm)	38 * 8	74-8830	Belt	40 18 1
74-7230	Insert-Valve (4.000mm)	38 * 8	74-8870	Gasket	46 21 2
74-7240	Collar-Split	37 12 16	74-8900	Washer-Flat	37 7 6
74-7260	Bolt-Head	38 29 10	74-8920	Washer-Copper	21 9 4
74-7270	Washer-Flat	38 28 10	74-9100	Pad-Pedal, Forward	6 14 1
74-7300	Pan-Oil	35 23 1	74-9110	Pad-Pedal, Reverse	6 17 1
74-7310	Plug-Threaded	35 20 1	75-0610	Tread-Foot, RH	2 * 1
74-7320	Gasket	35 19 1	75-0620	Tread-Foot, LH	2 43 1
74-7330	Screw-HH	35 25 23	75-0630	Tread-Foot, Center	2 44 1
74-7380	Gasket-Oil Pan	35 21 1	75-0920	Cartridge-Relief 3000 psi	66 13 1
74-7400	Tube	39 41 1	75-0920	Cartridge-Relief 3000 psi	75 16 1
74-7420	Ball	39 45 4	75-1010	Switch	12 20 1
74-7430	Chamber-Turbulence	39 46 4	75-1370	Cable-Battery, Positive	51 9 1
74-7440	Chamber-Turbulence	39 * 4	75-1370	Cable-Battery, Positive	34 17 1
74-7450	Seat-Intake Valve	39 48 4	75-1390	Cover-Access, Front	2 39 1
74-7460	Seal-Intake Valve	39 * 4	75-1410	Plate-Access, Floor	2 40 1
74-7480	Valve-Intake	39 49 4	75-1430	Pedal-Brake, RH	6 40 1
74-7560	Washer-Spring	38 16 3	75-1440	Pedal-Brake, LH	6 35 1
74-7600	Plug	37 4 4	75-1470	Pin-Pivot, Brake	6 46 1
74-7630	Gasket-Valve Cover	38 18 1	75-1490	Rod-Brake, Park	4 54 1
74-7640	Cover-Valve	38 19 1	75-2080	Kit-Seal	66 * 5
74-7650	Washer-Flat	38 20 3	75-2080	Kit-Seal	75 * 7
74-7670	Head Bolt & Washer Set	39 * 1	75-2120	Shaft With Clevis	68 12 1
74-7770	Hose-Crankcase	35 11 1	75-2810	Bracket-Column, Steering	3 16 1
74-7780	Gasket	35 12 1	75-2970	Pedal-Traction	6 16 1
74-7790	Screw	35 13 1	75-3270	Hub-Pivot, Traction	6 6 1
74-7810	Gasket-Plate	35 15 1	75-3400	Shaft-Pivot, Seat	7 20 1
74-7820	Plate	35 16 1	75-3480	Weldment-Upper	9 23 1
74-7840	Plug	39 42 2	75-3510	Bolt-Shoulder	9 26 2
74-7840	Plug-27 mm Dia.	35 18 8	75-3530	Spring-Compression	9 3 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
75-3540	Pin-Roll	9	6	1	76-6970	Insert-Camplate	31	15	1
75-3550	Bumper-Seat	9	7	2	76-6970	Insert-Camplate	30	17	1
75-3580	Plate-Mounting, Seat	9	2	1	76-6970	Insert-Camplate	29	18	1
75-3680	Rod-Seat	8	23	1	76-6980	O-Ring	31	9	1
75-3710	Dipstick	16	8	1	76-6980	O-Ring	29	10	1
75-3860	Fender-LH	2	36	1	76-6980	O-Ring	30	10	1
75-4360	Bracket-Suspension, Seat	7	15	1	76-7000	Ring-Retaining	29	4	2
75-4370	Bracket-Seat	7	10	1	76-7000	Ring-Retaining	30	4	2
75-5350	Pin-Cylinder	67	27	3	76-7000	Ring-Retaining	31	4	2
75-5740	Box-Control	13	53	1	76-7000	Ring-Retaining	23	50	2
75-5780	Hinge-Cover	2	47	1	76-7010	Ring-Retaining	29	1	1
75-5780	Hinge-Cover	13	54	1	76-7010	Ring-Retaining	30	1	1
75-5810	Box-Tool	2	30	1	76-7010	Ring-Retaining	31	1	1
75-5890	Hose	67	33	1	76-7010	Ring-Retaining	23	55	1
75-6370	Cap-Sensor	67	19	1	76-7020	Spacer	31	2	1
75-6490	Lever	6	22	1	76-7110	Plug	56	5	1
75-6510	Bracket-Lever	6	20	1	76-7110	Plug	58	26	4
75-6550	Disc-Friction	6	19	1	76-7120	Seal-Washer	56	6	1
75-6580	Cable-Pedal	6	7	1	76-7120	Seal-Washer	58	27	4
75-6820	Hour Meter	13	51	1	76-7140	Plug	56	9	1
76-1910	Shaft-Pivot	9	12	2	76-7160	Asm-Gear Case	57	*	1
76-1920	Bushing-Sleeve	9	9	4	76-7170	Case-Differential	57	3	1
76-1930	Knob-Tension Adjustment	9	19	1	76-7180	Pinion-Mate	57	10	2
76-1940	Spring-Extension	9	14	2	76-7190	Gear-Side	57	9	2
76-2940	Bumper-Rubber	9	8	2	76-7200	Shaft-Pinion	57	4	1
76-2980	Washer-Thrust	71	45	2	76-7210	Washer-Thrust	57	11	2
76-2980	Washer-Thrust	67	66	3	76-7220	Washer-Thrust	57	8	2
76-4260	Bushing	59	3	1	76-7230	Washer-Lock	57	5	4
76-4910	Stud	46	26	3	76-7240	Ring-Gear	57	2	1
76-4930	Washer	46	5	3	76-7250	Shaft-Drive	57	1	1
76-4940	Gear-Pump, Injection	46	2	1	76-7260	Bolt	57	6	8
76-4950	Nut	46	1	1	76-7270	Pin-Spring	57	7	1
76-4990	Bracket	48	15	1	76-7280	Bearing	57	12	2
76-5010	Washer	40	23	3	76-7290	Shim-0.1 mm	57	13	A/R
76-5010	Washer-Spring	48	2	1	76-7300	Shim-0.2 mm	57	*	A/R
76-5010	Washer-Spring	43	7	5	76-7310	Shim-0.3 mm	57	*	A/R
76-5060	Screw	48	1	1	76-7320	Sleeve	55	4	1
76-5070	Asm-Oil Pump	43	1	1	76-7330	Bearing	55	1	1
76-5090	Spring-Piston	43	3	1	76-7340	Seal-Oil	55	6	1
76-5100	Bolt-Shoulder	43	5	1	76-7350	Bushing	55	7	1
76-5130	Stud	37	6	6	76-7360	O-Ring	55	10	1
76-5170	Chain-Pump Drive	43	13	1	76-7370	Bearing	55	11	1
76-5180	Washer-Copper	18	1	4	76-7380	Washer	55	8	1
76-5190	Fitting-Adjustable	18	2	2	76-7390	Nut-Lock	55	9	1
76-5220	Element-Filter	18	5	1	76-7400	O-Ring	55	2	2
76-5260	Relay-Glow Plug	50	1	1	76-7410	Shim-0.1 mm	55	3	A/R
76-5260	Relay-Glow Plug	8	28	1	76-7420	Shim-0.2 mm	55	*	A/R
76-5290	Washer-Spring	50	4	4	76-7430	Shim-0.4 mm	55	*	A/R
76-5300	Asm-Filter, Fuel	17	22	1	76-7470	Pipe	56	8	1
76-5310	Washer-E.T.L.W.	50	7	1	76-7480	Plug-Vent	56	7	1
76-5320	Sensor-Water	18	9	1	76-7490	Shaft-Differential	57	14	2
76-5440	Screw	38	17	2	76-7500	Bearing	57	15	4
76-5500	Screw	45	6	5	76-7510	Pinion-14T	58	10	2
76-5520	Holder-Injector	47	5	4	76-7510	Pinion-14T	57	17	2
76-5530	Gasket-Injector	47	3	4	76-7520	Shim-0.1 mm	57	16	A/R
76-5540	Plug	47	2	4	76-7530	Shim-0.2 mm	57	*	A/R
76-5570	Washer-Lock	49	2	2	76-7540	Shim-0.4 mm	57	*	A/R
76-5590	Sleeve-Spring	49	4	1	76-7550	Ring-Retaining	57	18	2
76-5600	Asm-Holder, Injector	47	14	4	76-7560	Case-Gear	58	1	2
76-6910	Kit-Rotating	31	14	1	76-7580	O-Ring	57	19	4
76-6910	Kit-Rotating	30	16	1	76-7590	Spacer	57	20	2
76-6910	Kit-Rotating	29	17	1	76-7600	Bolt-Reamer	57	21	2
76-6930	Shaft-Drive, Straight	31	3	1	76-7610	Bolt	57	23	6
76-6950	Race-Thrust	29	5	2	76-7620	Washer-Lock	57	22	8
76-6950	Race-Thrust	30	5	2	76-7630	Holder-25 mm R.H.	58	*	1
76-6950	Race-Thrust	31	5	2	76-7640	Bolt	58	5	8
76-6950	Race-Thrust	23	51	1	76-7640	Bolt	58	28	20
76-6960	Bearing-Thrust	29	6	1	76-7650	Shaft-Final Drive	58	2	2
76-6960	Bearing-Thrust	30	6	1	76-7660	Holder-20 mm L.H.	58	4	1
76-6960	Bearing-Thrust	31	6	1	76-7670	Bearing	58	3	4
76-6960	Bearing-Thrust	23	52	1	76-7680	Case-Final Drive	58	8	2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3321-147

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
76-7700	Shim-0.8 mm	59 25 A/R	84-1740	Shaft With Clevis	69 12 1
76-7710	Bolt	59 8 2	84-1760	Kit-Seal Repair	69 * 1
76-7720	Nut	59 9 4	84-1760	Kit-Seal repair	72 * 1
76-7730	Bushing	58 7 2	84-2860	Decal-Fuel, Diesel (Japan)	2 34 1
76-7740	Seal-Oil	58 6 2	84-3420	Decal-No Riders (Japan)	12 13 1
76-7750	Pinion-15T	58 11 2	84-3420	Decal-No Riders (Japan)	2 35 1
76-7760	Shim-1.0 mm	59 * A/R	84-3500	Decal -Fast/Slow (Japan)	6 23 1
76-7770	Cover	58 9 2	84-4300	Decal-Warning (Japan)	78 2 1
76-7780	Shim-1.2 mm	59 * A/R	85-4470	Potentiometer	13 52 1
76-7790	Shim-1.4 mm	59 * A/R	85-4480	Knob	13 45 1
76-7810	Holder-Bearing	58 19 2	85-4750	Display-Diagnostic ACE	10 2 1
76-7820	Shim-1.0 mm	59 5 A/R	85-6910	Decal-EEC 86 DBA	8 16 1
76-7830	Shaft-Wheel	58 21 2	86-2990	Mount-Cable, Throttle	34 20 2
76-7840	Gear-Bevel	58 13 2	86-5390	Kit-Seal	60 * 1
76-7870	Seal-Oil	58 20 2	86-5910	Tire	61 28 2
76-7880	Spacer	58 15 2	86-5910	Tire	53 33 2
76-7890	Shim-0.15 mm	58 14 A/R	86-7330	Kit-Seal Repair	68 * 1
76-7900	Shim-0.2 mm	58 * A/R	86-7330	Kit-Seal Repair	70 * 1
76-7910	Shim-0.4 mm	58 * A/R	86-7330	Kit-Seal repair	73 * 1
76-7920	Ring-Retaining	58 16 2	87-5100	Washer-Snubbing	34 2 3
76-7930	Ring-Retaining	58 17 2	87-6270	Socket-Light	13 *63 4
76-7950	Bushing	59 4 1	87-6620	Screw-Torx Pan Hd.	3 31 2
76-7960	Fitting-Grease	59 21 2	88-1550	Stop-Axle	54 66 2
76-7960	Fitting-Grease	58 30 2	88-1980	Decal- Hydraulic Oil	1 5 1
76-7970	Shim-1.4 mm	59 * A/R	88-3870	Cover	3 20 1
76-7980	Shim-1.2 mm	59 * A/R	88-6980	Cartridge-N.C. Poppet	66 10 1
76-7990	Shim-.08 mm	59 * A/R	88-6980	Cartridge-N.O. Poppet	75 17 1
76-8000	Bolt	59 6 4	88-6990	Cartridge-N.C.	75 7 2
76-8010	Washer	59 7 2	88-6990	Cartridge-N.C. Spool	66 7 1
76-8070	Adapter	55 12 1	88-9190	Solenoid-20 Watt	66 1 4
76-8350	Stop-Axle	61 10 2	88-9190	Solenoid-20 Watt	75 1 7
76-8350	Stop-Axle, 4WD	53 5 2	88-9200	Solenoid-28 Watt	66 8 1
76-8750	Plate - Warning, Fan	32 15 1	88-9200	Solenoid-28 Watt	75 10 1
76-9060	Gauge-Temperature	12 33 1	92-1180	Asm-Seat	7 5 1
77-2870	Weldment-Hanger	9 18 1	92-1422	Spacer-Coupler	34 49 3
77-3300	Stud	42 1 6	92-3071	Solenoid	75 8 1
77-3310	Gasket	42 2 2	92-5720	Controller-Solid State	74 35 1
77-3320	Nut-Hex	42 5 6	92-5833	Spacer-Ball Joint	61 45 1
77-3340	Manifold-Exhaust	42 3 1	92-5833	Spacer-Ball Joint	53 46 2
77-3400	Camshaft	40 5 1	92-5836	Washer-Axle	54 50 1
77-3410	Key	40 4 1	92-5837	Asm-Rod End	62 60 1
77-3420	Gasket	40 3 1	92-5838	Ball Joint	54 62 1
77-3440	Screw	40 1 2	92-5839	Ball Joint	61 38 1
77-3450	Washer	40 2 2	92-5839	Ball Joint	53 45 1
77-3470	Screw	43 10 1	92-5844	Spacer-Ball Joint	53 47 1
77-3490	Screw	43 11 1	92-6315	Cartridge-N.C. Poppet	75 18 1
77-3510	Spring	40 14 1	92-6533	Kit-Cushion	7 24 1
77-3520	Cup	40 13 1	92-6534	Shell	7 22 1
77-3600	Plate-Closing	51 47 1	92-7374	Shroud-Fan RH	32 10 1
77-3620	Retainer-Cover	32 25 2	92-7375	Shroud-Fan LH	32 44 1
77-3700	Gasket-Exhaust, Manifold	34 37 1	92-7381	Tube-Water, Return	34 41 1
77-3790	Plug-Drain	35 26 1	92-7382	Cover-Manifold	34 38 1
77-4000	Shim Set	57 * 1	92-7385	Motor-Planetary	26 38 1
77-4010	Shim Set	55 * 1	92-7386	Motor-Hydraulic	53 20 1
77-4020	Shim Set	57 * 1	92-7387	Motor-Hydraulic	76 3 5
77-4030	Shim Set	58 * 1	92-7388	Support-Radiator	32 45 1
77-4040	Shim Set	59 * 1	92-7396	Mount-Cable	8 3 1
77-4050	Shim Set	59 * 1	92-7414	Assembly-Brake, RH	26 50 1
80-4860	Pin-Clevis	9 1 1	92-7415	Asm-Complete	27 * 1
80-8660	Spacer	64 9 2	92-7415	Asm-Drive, Planetary	25 29 2
82-3740	Cooler-Oil	32 21 1	92-7416	Strap-Radiator	32 42 1
82-5050	Screw-HH	19 26 2	92-7417	Asm-Brake, LH	25 28 1
82-5120	Adapter-Pump To Engine	34 47 1	92-7418	Asm-Block, Control	74 13 1
82-6490	Asm-Hose	74 1 1	92-7419	Asm-Block, Manifold	64 42 1
82-6490	Hose	67 31 1	92-7422	Tank-Fuel	17 16 1
82-8170	Clamp	67 48 6	92-7424	Hose-Overflow, Radiator	51 25 1
82-9060	Adjuster W/Handle	9 13 1	92-7424	Hose-Radiator, Overflow	32 6 1
83-6780	Cylinder Pin Assembly	67 49 2	92-7425	Support-Mount, Engine	34 6 1
83-6790	Cylinder Pin Assembly	67 16 1	92-7426	Mount-Motor	34 43 1
84-1710	Piston	69 4 1	92-7429	Mount-Motor, RH	34 14 1
84-1710	Piston	72 5 1	92-7455	Plate-Bulkhead	25 16 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
92-7456	Pin Assembly	71	29	2	92-7555	Asm-Hose	76	7	4
92-7463	Hose-Radiator, Lower	32	18	1	92-7556	Asm-Hose	76	1	1
92-7463	Hose-Radiator, Lower	34	36	1	92-7557	Asm-Tube	74	19	1
92-7465	Hose-Suction	16	22	1	92-7557	Asm-Tube, Cooler Front	64	40	1
92-7465	Hose-Suction	19	40	1	92-7558	Asm-Tube, Cooler	32	41	1
92-7466	Clutch-Fan	34	31	1	92-7558	Asm-Tube, Cooler Rear	64	36	1
92-7472	Asm-Tube, Rear	53	3	1	92-7559	Asm-Hose	76	8	2
92-7473	Asm-Tube, Rear	53	4	1	92-7560	Asm-Hose	76	2	1
92-7473	Asm-Tube, Rear	25	14	1	92-7562	Asm-Hose	74	2	1
92-7474	Assembly-Tube, Front	25	9	1	92-7562	Hose Assembly	67	53	1
92-7475	Assembly-Tube, Traction	26	51	1	92-7564	Asm-Hose	74	42	1
92-7476	Assembly-Tube, Traction	26	48	1	92-7564	Hose Assembly	67	42	1
92-7477	Asm-Tube, Motor Drain	25	18	1	92-7565	Asm-Hose	74	41	1
92-7478	Asm-Tube, Motor RH	26	44	1	92-7565	Hose Assembly	67	51	1
92-7478	Tube-Motor, RH	16	30	1	92-7584	Asm-Tube	64	5	1
92-7479	Asm-Tube	74	10	1	92-7585	Asm-Tube	64	22	1
92-7483	Nut-Lug	25	4	16	92-7591	Asm-Tube	74	12	1
92-7484	Asm-Hose	19	12	1	92-7591	Asm-Tube, P2A	65	43	1
92-7485	Asm-Hose	25	20	1	92-7594	Asm-Hose	61	7	1
92-7485	Asm-Hose	19	33	1	92-7595	Asm-Hose	61	8	1
92-7486	Asm-Hose	25	19	1	92-7598	Asm-Tube, Front Drain	65	50	1
92-7487	Asm-Tube	26	42	1	92-7598	Asm-Tube, Frt. Drain	25	32	1
92-7488	Asm-Hose	26	43	1	92-7604	Pin-Stop	54	53	1
92-7489	Hose-Return	16	13	1	92-7604	Pin-Stop	62	54	1
92-7489	Hose-Return	19	19	1	92-7606	Bracket-Bulkhead	4	51	1
92-7490	Asm-Hose, Filter	19	25	1	92-7608	Bracket-Spring	6	12	1
92-7490	Hose-Filter	16	16	1	92-7609	Shaft-Spring	6	45	1
92-7491	Asm-Hose	19	11	1	92-7610	Retainer-Spring	6	42	1
92-7491	Asm-Hose	74	16	1	92-7622	Asm-Hose, Steering	19	35	1
92-7492	Asm-Hose	19	36	1	92-7622	Hose-Steering	4	49	1
92-7492	Asm-Hose	64	41	1	92-7623	Bumper (Model 03804)	32	36	1
92-7493	Asm-Tube, Filter	32	39	1	92-7631	Sealstrip-Screen	32	22	1
92-7493	Hose-Filter	16	20	1	92-7633	Strip-Bumper, Hood	1	16	1
92-7494	Asm-Tube Steering Rear	4	50	1	92-7634	Asm-Hose, Traction	25	15	1
92-7494	Asm-Tube, Steering	53	29	1	92-7634	Asm-Hose, Traction	19	34	1
92-7494	Asm-Tube, Steering Rear	62	59	1	92-7636	Hose Assembly	71	17	1
92-7494	Asm-Tube, Steering, Rear	65	48	1	92-7638	Asm-Hose	64	1	1
92-7495	Asm-Tube, Steering	53	28	1	92-7638	Hose Assembly	71	7	1
92-7495	Asm-Tube, Steering Rear	3	47	1	92-7639	Asm-Hose	64	37	1
92-7495	Asm-Tube, Steering Rear	62	56	1	92-7639	Hose Assembly	71	8	1
92-7495	Asm-Tube, Steering, Rear	65	49	1	92-7645	Fitting-Hydraulic 90°	25	8	1
92-7505	Screen	32	24	1	92-7646	Fitting-Hydraulic 45°	54	57	1
92-7511	Hood	1	18	1	92-7647	Asm-Tube, Drain	64	12	1
92-7516	Bracket-Support, Cooler	32	19	1	92-7648	Asm-Hose	64	2	1
92-7519	Bracket-Block, Manifold	74	26	1	92-7649	Asm-Hose	76	18	4
92-7520	Cable-Throttle	8	4	1	92-7649	Asm-Hose	64	20	4
92-7521	Hose-Fuel	17	21	1	92-7787	Pulley-Camshaft	40	26	1
92-7521	Hose-Fuel	34	25	1	92-7791	Seal-Valve	39	52	8
92-7522	Hose-Fuel	17	6	1	92-7792	Guide-Valve (14.29mm)	39	47	8
92-7525	Fitting-Hose	16	24	1	92-7793	Guide-Valve (14.59mm)	39	*	8
92-7526	Fitting-Hydraulic, Suction	19	38	1	92-7794	Valve-Exhaust	39	50	4
92-7527	Strainer-Suction	16	34	1	92-7795	Seat-Exhaust Valve	39	51	4
92-7529	Asm-Cable, Brake RH	6	*	1	92-8001	Sensor-Switch, Reed	7	13	1
92-7530	Asm-Cable, Brake LH	6	30	1	92-8002	Sensor-Reed Switch	67	26	1
92-7530	Cable-Brake, LH	25	26	1	92-8020	Adapter-Breather	16	35	3
92-7531	Tube-Control, Pump	6	1	1	92-8753	Magnet-Switch, Reed	7	11	1
92-7531	Tube-Rod, Control	19	14	1	92-8754	Magnet-Reed Switch	67	21	1
92-7532	Decal-RM6500D	1	17	2	92-9651	Asm-Hub	61	25	2
92-7534	Assembly-Hose	53	31	1	92-9652	Stud-Drive	61	36	10
92-7535	Asm-Hose, Oil Cooler	32	29	2	92-9724	Spindle-RH	61	*	1
92-7536	Asm-Hose, Rear Motor	53	9	1	92-9725	Spindle-LH	61	21	1
92-7537	Asm-Hose, Rear Motor	53	10	1	93-0096	Decal-ACE	2	31	2
92-7538	Asm-Hose	53	41	1	93-0307	Nut-Retainer	61	32	2
92-7539	Asm-Hose	53	40	1	93-0309	Washer-Tab	61	31	2
92-7540	Decal-ROPS	78	3	1	93-1261	Decal-Console	12	40	1
92-7548	Pin-Cylinder	71	22	2	93-1262	Decal-Hillside	2	28	1
92-7550	Fitting-Tee, Bulkhead	25	7	2	93-1263	Decal-Tower	3	23	1
92-7551	Cap-Fitting	16	25	1	93-1264	Decal-Switch, Backlap	74	24	1
92-7552	Bracket-Bulkhead	54	60	1	93-1265	Decal-Hot Surface	51	1	1
92-7553	Asm-Tube, Rear Drain	53	27	1	93-1268	Decal-HOC Selector	12	17	1
92-7553	Asm-Tube, Rear Drain	65	51	1	93-2175	Asm-Pump, Gear	19	4	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3321-147

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
93-2650	Cylinder-Hydraulic	67	54	1	93-7485	Asm-Filter, Air	51	41	1
93-3102	Cap-Fuel, Diesel	17	10	1	93-7487	Switch-Toggle	74	31	1
93-3163	Spring	9	28	1	93-7488	Tank-Hydraulic	16	1	1
93-3164	Cap	9	27	2	93-7489	Valve-Control, Flow	74	6	1
93-3165	Bracket	9	29	1	93-7491	Cartridge-Pilot Check	75	2	1
93-3625	Spring-Return, Joystick	13	62	1	93-7491	Cartridge-Pilot Check	66	14	1
93-4201	Asm-Hose	76	19	2	93-7492	Cartridge-Relief 2300 psi	75	4	1
93-4201	Asm-Hose	64	21	2	93-7494	Cartridge-N.O. Poppet	75	13	2
93-4205	Asm-Tube, Drain	64	15	1	93-7494	Cartridge-N.O. Poppet	66	15	2
93-4206	Asm-Tube, Drain	64	15	1	93-7498	Plug-Plastic	16	6	1
93-4207	Fitting-Tee	51	18	1	93-7499	Gasket-Flange	16	2	1
93-4208	Strip-Seal, Screen	32	27	1	93-7553	Seal-Hood	32	13	1
93-4213	Asm-Speedometer	3	22	1	93-7558	Asm-Barrel	69	2	1
93-4215	Hose-Radiator, Upper Rear	32	5	1	93-7579	Fender-RH	1	3	1
93-4215	Hose-Radiator, Upper Rear	34	22	1	93-7582	Hose	1	20	1
93-4215	Hose-Radiator, Upper Rear	51	29	1	93-7584	Hose-Intake	32	11	1
93-4216	Asm-Tube	76	14	1	93-7584	Hose-Intake	51	40	1
93-4216	Asm-Tube	74	40	1	93-7587	Bracket-Fuse Block	13	49	1
93-4217	Asm-Tube	76	26	1	93-7588	Cover-Tank	16	3	1
93-4217	Asm-Tube	74	39	1	93-7589	Hose-Overflow	51	28	1
93-4219	Asm-Tube, #1 Bulkhead	76	17	1	93-7591	Hose-Return	51	24	1
93-4222	Asm-Tube, Drain Return	76	16	1	93-7592	Tread-Footrest	2	42	2
93-4222	Asm-Tube, Drain Return	74	37	1	93-7594	Spacer-Tubular	34	21	1
93-4223	Asm-Tube, Front Drain	76	15	1	93-7595	Asm-Box, Battery	51	7	1
93-4233	Asm-Engine	34	16	1	93-7597	Fitting-SAE	74	7	1
93-5835	Screw-Purge	46	28	1	93-7598	Lever-Throttle	8	10	1
93-5986	Asm-Cover	52	4	1	93-7773	Bolt	55	5	4
93-6028	Plate-Logo, Toro	32	26	1	93-7775	Bearing	58	18	2
93-6668	Decal-Charging (Europe)	51	51	1	93-7778	Housing-Axle A	56	1	1
93-6680	Decal-Fuel, Diesel	2	34	1	93-7779	Housing-Axle B	56	3	1
93-6681	Decal-Warning, Fan	33	57	1	93-7781	Washer	56	10	8
93-6686	Decal-Hydraulic Oil	1	5	1	93-7782	Screw-HHF	56	4	8
93-6687	Decal-No Step	67	24	2	93-7787	Bushing-Flange	56	2	2
93-6689	Decal-No Riders	12	13	1	93-7840	Decal-Cap (Europe)	51	53	1
93-6689	Decal-No Riders	2	35	1	93-7960	Spacer	67	47	6
93-6693	Decal-Floor Plate	67	55	1	93-7961	Clamp-Case Drain	67	46	3
93-6699	Decal-Fast/Slow	6	23	1	93-7966	Shaft-Splined, Brake	25	31	2
93-7183	Lift Control Kit (Europe)	12	9	1	93-7968	Pad-Foam, Battery	51	11	1
93-7247	Washer-Thrust	53	6	1	93-7970	Form-Wire, Hose Mount	74	28	1
93-7247	Washer-Thrust	62	55	1	93-7972	Ring-Retaining	25	30	4
93-7252	Decal-CE (Europe)	2	57	1	93-7974	Plate-Battery, Box	51	5	1
93-7276	Decal-Danger (Europe)	51	52	1	93-7974	Plate-Box, Battery	17	1	1
93-7450	Spindle	27	1	1	93-7976	Ring-Retaining	28	9	1
93-7451	Cone-Bearing	27	3	1	93-7977	Seal	28	2	1
93-7452	Cup-Bearing	27	4	1	93-7978	Rod-Pull	28	3	1
93-7453	Housing	27	6	1	93-7979	Pin-Cotter, Hair	28	6	2
93-7454	Screw-HH	27	25	18	93-7980	Link	28	5	2
93-7455	Stud-Wheel	27	5	8	93-7981	Disc-Rotating	28	8	3
93-7456	Gear-Ring	27	18	1	93-7982	Actuator	28	11	1
93-7457	Spacer-Input	27	16	1	93-7983	Pin-Clevis	28	4	2
93-7458	Plate-Cover	27	15	1	93-7984	Gasket	28	10	1
93-7459	Ring-Retaining, External	27	19	1	93-7985	Ball	28	13	3
93-7460	Washer-Thrust	27	17	1	93-7986	Disc-Stationary	28	7	4
93-7461	Plug-Pipe	27	13	2	93-7987	Spring-Extension	28	12	3
93-7462	Ring-Retaining, Internal	27	14	1	93-7989	Shaft W/Clevis	72	7	1
93-7463	Gear-Sun	27	20	1	93-7989	Shaft W/Clevis	73	7	1
93-7464	Gear-Sun	27	21	1	93-7990	Head	70	10	1
93-7465	Washer-Thrust	27	22	1	93-7991	Collar	68	13	1
93-7466	Pin-Dowel	27	24	2	93-7991	Collar	70	13	1
93-7467	Ring-Retaining, External	27	10	1	93-7991	Collar	73	13	1
93-7468	Washer-Thrust	27	9	1	93-7994	Collar	69	13	1
93-7469	Cone-Bearing	27	8	1	93-7994	Collar	72	13	1
93-7470	Cup-Bearing	27	7	1	93-7996	Cover-Tower	1	2	1
93-7471	Shaft-Input	27	23	1	93-7998	Plate-Instrument	3	24	1
93-7472	Asm-Carrier, Secondary	27	11	1	93-8050	Decal-Warning	78	2	1
93-7473	Asm-Carrier, Primary	27	12	1	93-8053	Decal-ECU Label (Europe)	74	43	1
93-7474	Kit-Seal	27	2	1	93-8497	Gauge-Fuel	12	27	1
93-7476	Motor-Hydraulic W/Sensor	26	49	1	93-8742	Pad-Brake	6	29	2
93-7480	Bulb-LED	3	29	1	93-8744	Rivet-Pop	2	46	3
93-7483	Light-Warning Bank	12	32	1	93-8744	Rivet-Pop	13	56	3
93-7484	Light-Warning Bank	12	31	1	93-9151	Fitting-Hydraulic 90°	76	21	3

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
93-9152	Kit-Flange	77	*	1	94-3003	Plate-Valve	29	16	1
93-9153	Kit-Seal	77	*	1	94-3004	Shaft-Drive, Splined	29	7	1
93-9154	Kit-Valve Block	77	*	1	94-3004	Shaft-Drive, Splined	30	7	1
93-9155	Velcro	1	7	2	94-3005	Asm-Backplate	29	9	1
93-9157	Velcro	78	4	4	94-3005	Asm-Backplate	30	9	1
93-9159	Strap-Cover	78	9	2	94-3006	Housing	30	18	1
93-9160	Cover-ROPS	78	6	1	94-3006	Housing	29	19	1
93-9161	Pin	67	2	3	94-3007	Washer	29	3	1
93-9161	Pin	71	3	2	94-3007	Washer	30	3	1
93-9162	Filter-Primary	52	3	1	94-3007	Washer	23	53	1
93-9163	Filter-Safety	52	6	1	94-3008	Seal-Shaft	29	2	1
93-9164	Indicator	52	1	1	94-3008	Seal-Shaft	30	2	1
93-9164	Indicator-Service	51	37	1	94-3008	Seal-Shaft	23	54	1
93-9176	Dipstick-Oil	35	3	1	94-3009	Asm-Plug	29	11	1
93-9176	Dipstick-Peugeot	34	51	1	94-3010	Sensor-Speed Pickup	30	11	1
93-9178	Muffler	51	35	1	94-3011	Plug	21	7	1
93-9180	Cover-Box, Tool	1	26	1	94-3012	Screw	21	10	8
93-9425	Decal-Danger	2	55	1	94-3013	Plug	21	23	1
93-9783	O-Ring	76	28	10	94-3014	Valve-Relief	21	26	1
94-1402	Plug	64	14	4	94-3015	Kit-Seal	21	*	1
94-1403	Fitting-Hydraulic	64	38	1	94-3016	Asm-Backplate	23	8	1
94-1408	Wireform-Overflow	51	19	1	94-3017	Adaptor-Charge Relief	23	12	1
94-1410	Holder-Can, Beverage	2	53	1	94-3018	Asm-Housing	23	58	1
94-1411	Cable-Battery, Negative	51	10	1	94-3019	Control-Servo, Manual	23	65	1
94-1414	Valve-Vacuator	52	5	1	94-3020	Shaft-Drive	23	56	1
94-1416	Adapter-Indicator	51	36	1	94-3021	Asm-Kit, Rotating	23	35	1
94-1416	Asm-Adaptor	52	7	1	94-3022	Plate-Valve	23	1	1
94-1417	Cover-Box, Control	13	41	1	94-3023	Coupler	23	10	1
94-1418	Hose-Radiator, Upper	34	12	1	94-3025	Asm-Piston, Servo	23	41	1
94-1421	Coupling-Center, Spring	34	15	1	94-3026	Asm-Camplate	23	36	1
94-1445	Strap-Battery	51	12	1	94-3027	Washer-Seal	23	48	1
94-1446	Tube-Drain	16	26	1	94-3028	Screw	23	14	2
94-1447	Asm-Tube, Steering Ret.	74	38	1	94-3029	Screw	23	21	2
94-1447	Tube-Steering, Return	16	39	1	94-3030	Washer	23	47	1
94-1447	Tube-Steering, Return	3	43	1	94-3031	Arm-Control	23	29	1
94-2617	Cover-Pump	1	21	1	94-3032	Follower-Piston	23	33	1
94-2620	Head-Filter	16	18	1	94-3033	Plate-Cover	23	59	1
94-2621	Element	16	21	1	94-3034	Plate-Cover	23	43	1
94-2624	Hose-Manifold	34	29	1	94-3035	Ring-Lock	23	9	1
94-2624	Hose-Manifold	51	39	1	94-3036	Ring-Quad	23	3	1
94-2626	Plug-Orifice	66	17	1	94-3037	Ring-Retaining	23	4	1
94-2630	Hose-Return	51	17	1	94-3038	Plug-Dump Valve	23	5	1
94-2636	Fitting-Hydraulic 90°	19	20	1	94-3039	Kit-Seal	23	*	1
94-2637	Fitting-Hydraulic, Straight	19	18	1	94-3040	Orifice-Valve, Control	23	31	3
94-2638	Nut-Push On	32	23	4	94-3043	Switch	24	15	1
94-2643	Frame-ROPS	78	7	1	94-3044	Kit-Seal	24	*	1
94-2644	Shaft With Clevis	70	12	1	94-3050	Plate-Spring	26	54	2
94-2646	Guard-Fan (Europe)	32	50	1	94-3052	Weight-Wheel (Europe)	62	63	2
94-2800	Cap-Radiator	51	22	1	94-3052	Weight-Wheel (Europe)	54	68	2
94-2801	Grommet-Rubber	51	44	2	94-3055	Cap-Lower, Joystick	12	3	1
94-2803	Bearing	58	12	2	94-3056	Snap Ring-Joystick	12	4	1
94-2806	Adapter-Nut (Europe)	54	67	6	94-3057	Spring-Compression	12	5	1
94-2807	Adapter-Nut (Europe)	62	62	6	94-3058	Cap-Upper, Joystick	12	6	1
94-2812	Grommet	51	46	2	94-3059	Tube-Steering, RH	3	6	1
94-2814	Kit-Exhaust Coupler	51	50	1	94-3060	Tube-Steering, Front LH	3	13	1
94-2815	Sleeve-Exhaust Flange	51	49	1	94-3061	Tube-Steering, Front, In	3	7	1
94-2834	Bracket-Clamp	65	53	1	94-3062	Tube-Steering, Front, Out	3	14	1
94-2837	Decal-Diagnostic ACE	10	1	1	94-3063	Extension-Stem, Valve	62	66	2
94-2849	Muffler-Spark Arrestor	51	*	1	94-3063	Extension-Stem, Valve	54	71	2
94-2919	Decal-Rear Manifold (Japan)	8	19	1	94-3077	Plug-Orifice	75	20	1
94-2941	Decal-Service (Japan)	2	27	1	94-3084	Bumper (Model 03803)	32	36	1
94-2943	Decal-Service (Portuguese)	2	27	1	94-3088	Spring-Brake	26	55	2
94-2944	Decal-Service (Spanish)	2	27	1	94-3090	Harness-Wire, Main	3	8	1
94-2945	Decal-Service (Swedish)	2	27	1	94-3090	Harness-Wire, Main	34	18	1
94-3000	Asm.-Backplate	31	8	1	94-3090	Harness-Wire, Main	74	30	1
94-3001	Housing	31	16	1	94-3090	Harness-Wire, Main	8	32	1
94-3002	Screw-HH	31	7	6	94-3090	Harness-Wire, Main	65	45	1
94-3002	Screw-HH	29	8	6	94-3090	Harness-Wire, Main	26	47	1
94-3002	Screw-HH	30	8	6	94-3090	Harness-Wire, Main	13	61	1
94-3003	Plate-Valve	31	13	1	94-3091	Decal-Fuses (Japan)	13	58	1
94-3003	Plate-Valve	30	15	1	94-3098	Gear-Driven	53	25	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3321-147

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
94-3099	Gear-Driver	53 23 1	94-3165	Nut	46 6 4
94-3100	Asm-Short Block	35 36 1	94-3165	Nut-Lock	40 12 1
94-3101	Gasket Set	35 * 1	94-3166	Washer-Flat	40 7 1
94-3102	Pin	35 14 2	94-3167	Bracket-Fan	40 24 1
94-3103	Plug-Threaded	35 44 1	94-3168	Pulley-Fan	40 21 1
94-3104	Plug-Threaded	35 43 2	94-3169	Screw	40 25 1
94-3105	Plug-Drain	35 38 1	94-3170	Screw	40 17 1
94-3106	Gasket	35 42 2	94-3171	Screw	40 20 2
94-3107	Gasket	35 24 2	94-3172	Washer	40 19 3
94-3108	Plug-27.5 mm Dia.	35 * 8	94-3173	Screw	40 22 3
94-3108	Plug-27.5 mm Dia.	38 * 2	94-3174	Washer	38 27 8
94-3109	Plug-28.5 mm Dia.	35 * 9	94-3176	Gear-Oil Pump	43 2 1
94-3109	Plug-28.5 mm Dia.	38 * 2	94-3177	Plug	43 12 2
94-3110	Stud	35 45 1	94-3178	Strainer	43 9 1
94-3111	Pin-Groove	35 22 2	94-3179	Washer-Spring	43 4 3
94-3112	Screw-Washer Hd.	35 17 2	94-3180	Switch-Pressure	35 32 1
94-3113	Asm-Cylinder Head	37 5 1	94-3181	Oil Filler	35 1 1
94-3115	Nut-Lock	37 8 6	94-3182	Plug	35 2 1
94-3116	Gasket	37 3 1	94-3183	Gasket	35 39 1
94-3117	Plate	37 2 1	94-3184	Union	35 4 1
94-3118	Plug	38 32 1	94-3186	O-Ring	35 40 1
94-3119	Kit-Gasket	39 * 1	94-3190	PCV Valve	35 46 1
94-3120	Bracket	39 54 1	94-3191	Union	35 48 1
94-3121	Plug	39 44 1	94-3192	Union	35 47 1
94-3122	Gasket	39 43 1	94-3195	Gasket-Pump, Water	45 4 1
94-3123	Screw-HH	37 1 2	94-3196	Inlet-Water	45 7 1
94-3124	Bolt-Valve Cover	38 22 3	94-3196	Inlet-Water	38 31 1
94-3124	Screw-HH	43 8 2	94-3197	O-Ring	45 3 1
94-3125	Washer	38 21 3	94-3197	O-Ring	38 30 1
94-3125	Washer-Flat	41 3 1	94-3198	Screw	45 8 2
94-3126	Protector-Lower	41 5 1	94-3198	Screw	38 35 2
94-3127	Case-Timing, Left	41 7 1	94-3199	Pipe-By-Pass	39 39 1
94-3128	Case-Timing, Right	41 9 1	94-3200	Hose-By-Pass	38 37 1
94-3129	Plug	41 4 1	94-3206	Gasket	44 9 1
94-3130	Screw	41 2 1	94-3207	Ring	44 4 1
94-3131	Screw	44 1 3	94-3208	Stub-Outlet	44 2 1
94-3131	Screw	41 10 1	94-3209	Thermostat	44 11 1
94-3132	Screw	41 1 2	94-3210	Gasket	44 10 1
94-3133	Nut W/Washer	41 6 1	94-3211	Temp Sending Unit	44 6 1
94-3134	Nut	41 8 1	94-3212	Plug	44 7 2
94-3135	Bracket-Lifting	38 15 1	94-3213	Screw	44 8 1
94-3136	Bracket-Lifting	38 23 1	94-3214	Screw	44 5 1
94-3137	Bracket-Lifting	38 25 1	94-3215	Manifold-Intake	42 6 1
94-3138	Screw	38 24 1	94-3216	Screw	42 8 5
94-3139	Screw	38 26 1	94-3217	Screw	42 9 4
94-3140	Bearing Set (.30mm OS)	36 * 2	94-3218	Screw	42 * 1
94-3141	Thrust Bearing Set (Std.)	36 13 2	94-3219	Pump-Injection	46 19 1
94-3142	Thrust Bearing Set	36 * 2	94-3220	Bracket	46 3 1
94-3143	Thrust Bearing Set	36 * 2	94-3221	Screw	46 11 1
94-3144	Pulley	36 3 1	94-3222	Key	46 20 1
94-3145	Screw-HH	36 1 1	94-3223	Screw	46 25 1
94-3146	Washer	36 2 1	94-3224	Washer-Flat	46 9 2
94-3147	Seal	36 15 1	94-3225	Screw	46 4 2
94-3148	Seal-Shaft	36 11 1	94-3226	Gasket-Injector	47 4 4
94-3149	Gear-Flywheel	36 17 1	94-3227	Spacer	47 8 4
94-3150	Screw-HH	36 7 4	94-3228	Spring	47 7 4
94-3151	Washer	36 8 6	94-3229	Union	47 11 3
94-3152	Screw-HH	36 33 2	94-3230	Hose	47 1 1
94-3155	Bearing-Connecting Rod	36 * 4	94-3231	Bracket	47 13 2
94-3156	Bolt-Connecting Rod	36 28 8	94-3232	Washer-0.79 mm	47 6 4
94-3157	Piston Set-Std.	36 29 1	94-3233	Washer-0.82 mm	47 * 4
94-3158	Piston Ring Set Std.	36 23 4	94-3234	Washer-0.85 mm	47 * 4
94-3159	Asm-Roller	40 11 1	94-3235	Washer-0.88 mm	47 * 4
94-3160	Asm-Roller	40 15 1	94-3236	Washer-0.91 mm	47 * 4
94-3161	Screw	40 16 2	94-3237	Washer-0.94 mm	47 * 4
94-3161	Screw	46 24 1	94-3238	Washer-0.97 mm	47 * 4
94-3162	Stud	40 9 1	94-3239	Washer-1.00 mm	47 * 4
94-3163	Screw	40 6 1	94-3240	Washer-1.03 mm	47 * 4
94-3164	Washer-Spring	42 7 7	94-3241	Washer-1.06 mm	47 * 4
94-3164	Washer-Spring	40 10 4	94-3242	Washer-1.30 mm	47 6 4
94-3164	Washer-Spring	46 10 6	94-3243	Washer-1.33 mm	47 * 4

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
94-3244	Washer-1.36 mm	47 * 4	94-8028	O-Ring	18 11 1
94-3245	Washer-1.39 mm	47 * 4	94-8102	Tube-Interlock (Europe)	12 1 1
94-3246	Washer-1.42 mm	47 * 4	94-8103	Boot-Control, Lift	12 22 1
94-3247	Washer-1.45 mm	47 * 4	94-8104	Switch-Micro	12 8 2
94-3248	Washer-1.48 mm	47 * 4	94-8105	Clamp-Tube	32 54 2
94-3249	Tube-Outlet	46 22 1	94-8108	Support-Filter, Air	51 42 1
94-3250	Screw-Connection	46 23 1	94-8115	Pin-Axle, Pivot	62 53 1
94-3251	Nut	46 15 1	94-8115	Pin-Axle, Pivot	54 55 1
94-3251	Nut-Lock	50 8 1	94-8132	Gasket-Head (1.48 mm)	39 53 1
94-3252	Alternator	48 12 1	94-8133	Gasket-Head (1.52 mm)	39 * 1
94-3253	Bracket	48 7 1	94-8134	Gasket-Head (1.58 mm)	39 * 1
94-3254	Screw	48 6 1	94-8135	Gasket-Head (1.62 mm)	39 * 1
94-3255	Slide	48 4 1	94-8140	Plug-Orifice	75 21 1
94-3256	Belt	48 5 1	94-8141	Cylinder-Hydraulic	53 44 1
94-3257	Washer-Spring	48 13 1	94-8142	Asm-Cylinder	61 39 1
94-3258	Screw	48 14 1	94-8146	Strip-Foam, Seat	8 34 1
94-3259	Screw	48 9 1	94-8147	Nozzle-Injector	47 9 4
94-3260	Washer-Flat	48 3 1	94-8166	O-Ring	16 7 1
94-3261	Nut	48 11 1	94-8946	Washer	67 13 3
94-3262	Nut	48 10 1	94-8946	Washer	71 34 2
94-3263	Starter	49 3 1	94-8947	Bushing-Flange	67 6 12
94-3264	Plug-Glow	50 3 4	94-8947	Bushing-Flange	71 6 8
94-3265	Cable-Glow Plug	50 2 4	94-9950	Asm-Valve, Steering	3 5 1
94-3266	Nut-Hex.	50 5 4	94-9951	Asm-Column, Steering	3 17 1
94-3267	Nut-Lock	50 6 1	94-9952	Nut-Jam	3 21 1
94-3274	O-Ring	46 18 1	94-9953	Frame-Front	2 38 1
94-3275	Solenoid-Starter	49 * 1	94-9955	Asm-Barrel	60 1 1
94-3354	Decal-Diagnostic ACE	10 1 1	94-9956	Asm-Piston Rod	60 6 1
94-3355	Decal-Diagnostic ACE	10 1 1	94-9957	Piston	60 3 1
94-3356	Decal-Diagnostic ACE	10 1 1	94-9958	Gland-Cylinder	60 8 1
94-3357	Decal-Diagnostic ACE	10 1 1	94-9959	Asm-Barrel	63 1 1
94-3358	Decal-Diagnostic ACE	10 1 1	94-9960	Asm-Rod, Piston	63 12 1
94-3359	Decal-Diagnostic ACE	10 1 1	94-9961	Piston	63 3 1
94-3360	Decal-Diagnostic ACE	10 1 1	94-9962	Gland-Cylinder	63 10 1
94-3361	Decal-Diagnostic ACE	10 1 1	94-9963	Ring-Retaining	63 9 1
94-3362	Decal-Diagnostic ACE	10 1 1	94-9964	Kit-Seal	63 * 1
94-3363	Decal-Diagnostic ACE	10 1 1	94-9965	Asm-Head, Cylinder	39 * 1
94-3364	Decal-Diagnostic ACE	10 1 1	94-9967	Circuit Breaker-50 Amp	34 * 1
94-3500	Wheel-Steering	3 19 1	94-9968	Circuit Braker-100 Amp	34 * 1
94-4088	Screw	5 9 7	94-9969	Screw-Connection	46 27 1
94-4089	Cap-End	5 10 1	94-9973	Ring-Retaining	61 40 1
94-4090	Gerotor	5 11 1	94-9974	Ring-Retaining	71 11 2
94-4091	Spacer	5 12 1	94-9974	Ring-Retaining	67 23 6
94-4092	Plate-Wear	5 14 1	94-9984	Sensor-Water Level	51 23 1
94-4093	Drive	5 13 1	94-9994	Gasket-Camshaft	40 27 1
94-4094	Pin	5 6 1	94-9998	Washer-Thrust	67 22 6
94-4095	Kit-Spring, Centering	5 3 1	94-9999	Valve-Relief	23 7 2
94-4096	Kit-Bearing	5 8 1	95-1821	Spring-Brake, Park	3 39 1
94-4097	Asm-Plug	5 15 1	95-3459	Cartridge-N.O.	75 9 1
94-4098	Ring-Retaining	5 5 1	95-3459	Cartridge-No Flow	66 9 1
94-4099	Kit-Seal	5 1 1	95-3464	Rim	25 5 2
94-4100	Ball	5 16 1	95-3465	Tire	25 1 2
94-4572	Decal-Hillside (Japan)	2 28 1	95-3477	Decal-Clip (Japan)	8 17
94-4573	Decal-Tower (Japan)	3 23 1	95-3484	Screw-HH	36 19 8
94-4574	Decal-Console (Japan)	12 40 1	95-3485	Sprocket-Oil Pump	36 5 1
94-4575	Decal-HOC Selector	12 17 1	95-7151	Tube-Convolute	6 49 1
94-4578	Decal-Hot Surface (Japan)	51 1 1	95-7152	Protector - Bearing	61 33 2
94-4579	Decal-Danger (Japan)	2 55 1	95-7158	Pin-Pivot	71 14 2
94-4580	Decal-Backlap (Japan)	74 24 1	95-7158	Pin-Pivot	67 28 3
94-5438	Seal-Solenoid	66 16 10	95-7184	Carrier Frame Assembly	67 38 1
94-5438	Seal-Solenoid	75 19 16	98-1805	Box-Degassing	51 21 1
94-5603	Bushing-Sleeve	62 51 2	98-1852	Asm-Gauge Bar	79 3 1
94-5607	Asm-Axle, Rear	61 20 1	98-1880	Knuckle-Pivot	71 1 2
94-6343	Decal-Wire Identification #1	13 * 1	98-1880	Knuckle-Pivot	67 3 3
94-6349	Decal-Fuses	13 58 1	98-2195	Lever-Control	12 9 1
94-6710	Fuse-2A	13 47 1	98-2350	Plate-Seat	8 18 1
94-8000	Nut-Lock	53 13 1	98-2352	Frame-Seat	8 5 1
94-8000	Nut-Lock	61 13 1	98-2353	Bracket-Latch, Seat	8 8 2
94-8025	O-Ring	18 3 1	98-2354	Latch-Seat	8 22 1
94-8026	Asm-Vent	18 12 1	98-2400	Lift Arm Assembly #1	67 11 1
94-8027	O-Ring	18 10 1	98-2402	Lift Arm #2	71 33 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3321-147

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
98-2404	Lift Arm #3	71 32 1	237-22	O-Ring	3 10 10
98-2406	Lift Arm #4	67 25 1	237-22	O-Ring	64 10 2
98-2408	Lift Arm #5	67 43 1	237-22	O-Ring	76 20 3
98-2444	Arm- Drag Link	59 1 1	237-22	O-Ring	25 33 1
98-2446	Arm-Tie Rod	59 2 1	237-22	O-Ring	74 36 1
98-2447	Axle-4WD	53 32 1	237-22	O-Ring	16 38 1
98-3728	Decal-Service	1 27 1	237-22	O-Ring	61 44 2
98-3730	Pump-Piston	19 24 1	237-22	O-Ring	62 58 2
98-7353	Head	68 10 1	237-22	O-Ring	54 64 6
98-7353	Head	73 11 1	237-30	O-Ring	76 6 18
98-7354	Head	69 10 1	237-30	O-Ring	74 9 4
98-7354	Head	72 11 1	237-30	O-Ring	19 10 2
98-7974	Screw-Flange	71 41 2	237-30	O-Ring	64 30 6
98-7974	Washer-Thrust	67 62 3	237-30	O-Ring	16 31 2
98-7976	Decal	79 2 1	237-30	O-Ring	26 45 3
98-7993	Screw-Flange	67 63 3	237-42	O-Ring	19 5 1
98-7993	Screw-Flange	71 42 2	237-42	O-Ring	74 8 1
98-8069	Cylinder-Hydraulic	67 41 1	237-42	O-Ring	3 12 4
98-8108	Decal-Rear Manifold Block	8 19 1	237-42	O-Ring	66 12 5
98-8110	Decal-Instructions, Clip	8 17 1	237-42	O-Ring	75 15 5
98-8135	Decal-Service (Danish)	1 27 1	237-42	O-Ring	16 36 1
98-8136	Decal-Service (Dutch)	1 27 1	237-42	O-Ring	53 38 2
98-8137	Decal-Service (Finnish)	1 27 1	237-42	O-Ring	65 52 2
98-8138	Decal-Service (French)	1 27 1	237-56	O-Ring	66 5 4
98-8139	Decal-Service (German)	1 27 1	237-58	O-Ring	53 7 6
98-8140	Decal-Service (Italian)	1 27 1	237-58	O-Ring	16 12 1
98-8141	Decal-Service (Norwegian)	1 27 1	237-58	O-Ring	19 17 3
98-8806	Valve-Solenoid	46 17 1	237-58	O-Ring	25 22 4
98-8811	Cylinder-Hydraulic	67 29 1	237-58	O-Ring	64 33 2
98-8812	Cylinder-Hydraulic	71 25 1	237-65	O-Ring	16 15 2
98-8813	Cylinder-Hydraulic	71 15 1	237-65	O-Ring	74 20 1
98-8814	Frame-Rear	1 22 1	237-65	O-Ring	19 27 1
98-8838	Tie Rod-4WD	59 * 1	237-65	O-Ring	32 32 4
98-8839	Tie Rod Assembly	62 * 1	237-78	O-Ring	67 1 6
98-8840	Tube & Clamp Assembly	61 47 1	237-78	O-Ring	71 2 4
98-8841	Bar & Clamp Assembly	59 22 1	237-78	O-Ring	19 3 4
98-9965	Bushing-Sleeve	36 24 4	237-78	O-Ring	66 3 4
98-9970	Box-Outlet	44 3 1	237-78	O-Ring	74 5 8
98-9971	Hose-By-Pass	39 40 1	237-78	O-Ring	75 6 10
98-9972	Cover-Pump, Water	45 5 1	237-78	O-Ring	76 24 5
98-9973	Ring-Retaining	53 43 2	237-78	O-Ring	64 26 4
98-9976	Bumper	71 46 4	237-78	O-Ring	61 42 2
98-9976	Bumper	67 68 6	237-78	O-Ring	54 51 2
217-125	Wheel	61 29 2	237-79	O-Ring	76 4 10
217-125	Wheel	53 34 2	237-79	O-Ring	74 18 4
218-446	Washer-Lock	12 39 1	237-79	O-Ring	64 27 3
218-447	Nut-Hex.	12 38 1	237-79	O-Ring	16 33 1
218-498	Nut-Hex.	12 21 2	237-79	O-Ring	25 35 4
218-533	Lens-Red	3 28 1	237-80	O-Ring	19 8 3
218-535	Nut-Lock	3 34 1	237-81	O-Ring	16 10 3
218-536	Washer-Lock, Int. Tooth	3 25 1	237-81	O-Ring	53 19 2
218-574	Fuse-7.5A	13 47 1	237-81	O-Ring	19 21 1
218-578	Fuse-10A	13 47 4	237-81	O-Ring	74 22 1
218-581	Fuse-15A	13 47 1	237-81	O-Ring	25 24 4
218-588	Screw	13 *74 2	237-81	O-Ring	64 31 1
218-589	Washer-Lock	12 34 1	237-99	O-Ring	19 13 1
218-594	Fuse-20A	13 47 1	237-101	O-Ring	19 41 1
219-17	Bulb	13 *64 4	237-146	O-Ring	19 29 2
232-24	Stem-Valve	25 2 2	237-156	O-Ring	75 11 10
232-27	Stem-Valve	61 30 2	237-166	O-Ring	53 17 1
232-27	Stem-Valve	53 35 2	237-166	O-Ring	25 25 2
233-17	Knob	3 33 1	240-2	Grommet	25 11 2
233-42	Knob	8 11 1	240-2	Grommet	25 11 3
233-42	Knob	6 21 1	240-5	Grommet	76 12 5
237-7	O-Ring	13 76 4	240-5	Grommet	64 17 4
237-21	O-Ring	74 3 5	240-7	Grommet	54 61 1
237-21	O-Ring	67 5 6	240-11	Grommet	17 15 3
237-21	O-Ring	71 5 4	240-11	Grommet	16 29 3
237-21	O-Ring	76 22 5	242-50	Nut-Lug	61 35 10
237-21	O-Ring	64 39 2	249-40	Keeper	1 9 1
237-22	O-Ring	19 7 1	2410-18	Plug	79 9 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
2410-42	Cap-Bumper	32	38	2	322-4	Screw-HH	67	52	1
2410-42	Cap-Bumper	32	38	4	322-5	Screw-HH	13	59	1
2410-64	Button-Plug	32	53	3	322-6	Screw-HH	9	30	1
2411-36	Bearing-Rod End	6	3	2	322-6	Screw-HH	65	46	1
2411-36	Bearing-Rod End	19	22	1	322-6	Screw-HH	4	53	3
2411-45	Tie Rod End	61	5	2	322-7	Screw-HH	76	30	2
2411-45	Tie Rod End	59	10	2	322-7	Screw-HH	3	41	1
2412-3	Clamp-Hose	32	4	2	322-7	Screw-HH (Model 03803)	65	56	4
2412-3	Clamp-Hose	34	13	4	322-7	Screw-HH (Model 03804)	65	56	5
2412-36	Clamp-Drain	17	11	1	322-9	Screw-HH	33	55	1
2412-36	Clamp-Hose	32	7	1	323-4	Screw-HH	7	6	2
2412-36	Clamp-Hose	51	34	4	323-6	Screw-HH	53	1	2
2412-93	Clamp-R	7	21	1	323-6	Screw-HH	65	54	2
2412-93	R-Clamp	26	39	2	323-7	Screw-HH	6	10	1
2412-96	Clamp-R	71	24	1	323-7	Screw-HH	19	37	2
2412-96	Clamp-R	67	50	1	323-9	Screw-HH	6	5	1
2412-96	Clamp-R (Europe)	32	52	1	323-9	Screw-HH	59	23	2
2412-108	Clamp-Hose	17	3	4	323-9	Screw-HH	61	46	2
2412-108	Clamp-Hose	51	16	3	325-4	Screw-HH	53	22	2
2412-108	Clamp-Hose	34	26	2	325-5	Screw-HH	32	40	2
2412-111	Clamp	16	23	1	325-20	Screw-HH	61	1	2
2412-111	Clamp-Hose	19	39	2	325-33	Screw-HH	54	56	4
2412-125	Clamp-Hose	32	12	1	328-7	Screw-HH	67	39	4
2412-125	Clamp-Hose	34	30	1	3212-4	Screw	7	8	2
2412-125	Clamp-Hose	51	38	2	3213-14	Screw-HH	54	70	6
2412-126	Clamp-R	13	60	1	3213-14	Screw-HH (Europe)	62	65	6
2412-129	Clamp-Hose	35	8	8	3217-5	Nut	23	28	1
2412-129	Clamp-Hose	51	27	2	3217-6	Nut-Jam	74	29	1
2412-129	Clamp-Hose	38	36	4	3217-6	Nut-Jam	9	32	1
2412-129	Clamp-Hose	34	39	4	3217-25	Nut-Hex.	13	*65	2
2412-133	Clamp-R	7	17	2	3217-26	Nut	12	23	1
2412-147	Clamp - R	65	57	1	3217-29	Nut-Hex.	13	*67	6
2412-147	Clamp - R	33	58	1	3218-4	Nut-Jam	25	27	2
2412-150	J-Clip	34	48	1	3219-14	Nut-Hex.	13	*69	8
254-72	Cup-Bearing	61	26	2	3219-14	Washer-Lock	3	26	3
254-92	Cone-Bearing	61	27	2	3220-3	Nut-Jam	6	2	3
254-106	Cone-Bearing	61	23	2	3220-3	Nut-Jam	19	15	1
254-107	Cup-Bearing	61	24	2	3220-3	Nut-Jam	23	46	1
256-42	Bushing	6	39	2	3220-11	Nut-Jam	62	61	1
256-236	Bearing-Flange	6	28	4	3220-24	Nut-Lock	12	19	1
283-58	Pin-Clevis	6	32	2	3230-2	Screw-Carriage	32	48	3
283-71	Pin-Lynch	71	47	2	3234-1	Screw	16	17	2
283-71	Pin-Lynch	67	69	3	3234-5	Screw-FH	51	6	3
302-5	Fitting-Grease	68	1	1	3234-5	Screw-HF	32	9	10
302-5	Fitting-Grease	69	1	1	3234-7	Screw	3	15	2
302-5	Fitting-Grease	70	1	1	3234-7	Screw	2	56	9
302-5	Fitting-Grease	72	1	1	3234-11	Screw-HF	19	16	1
302-5	Fitting-Grease	73	1	1	3234-12	Screw-HHF	61	14	2
302-5	Fitting-Grease	61	41	1	3234-14	Screw-Flange	2	37	10
302-5	Fitting-Grease	54	54	1	3234-17	Screw-HF	74	32	4
302-5	Fitting-Grease, Straight	67	4	6	3234-18	Screw-Flange	2	54	2
302-5	Fitting-Grease, Straight	71	4	2	3234-18	Screw-HHF	32	2	2
302-11	Fitting-Grease	61	19	2	3250-29	Screw	7	12	4
302-11	Fitting-Grease 45°	71	48	2	3250-31	Screw-PH	12	28	2
302-33	Fitting-Grease	54	63	1	3253-2	Nut-Hex.	4	55	9
302-33	Fitting-Grease 90°	62	52	1	3253-2	Washer-Lock	13	*70	5
302-55	Fitting-Grease	61	3	2	3253-3	Washer-Lock	74	34	3
302-55	Fitting-Grease	59	17	2	3253-3	Washer-Lock	23	66	1
302-60	Fitting-Grease	6	38	1	3253-4	Washer-Lock	7	19	4
302-60	Fitting-Grease	67	70	1	3253-4	Washer-Lock	34	33	4
302-60	Fitting-Grease 90°	53	42	1	3253-6	Washer-Lock	7	7	2
304-46	Fitting-Drain	17	12	1	3253-6	Washer-Lock	9	25	2
304-46	Nut-Drain Cock	32	17	1	3253-15	Washer-Lock	13	*66	2
321-15	Screw-HH	74	33	3	3253-15	Washer-Lock	17	19	5
321-39	Screw-HH	13	57	2	3253-33	Washer-Lock	9	31	1
322-3	Screw-HH	8	9	8	3254-1	Washer-Lock	12	24	1
322-3	Screw-HH	12	11	2	3254-6	Washer-Lock	12	18	1
322-3	Screw-HH	7	18	2	3255-8	Washer-Lock	3	37	1
322-3	Screw-HH	6	27	8	3255-9	Washer-Lock, Ext. Tooth	51	4	2
322-3	Screw-HH	2	32	4	3255-19	Washer-Lock	13	*75	2
322-3	Screw-HH	34	34	4	3255-24	Washer-Lock, Ext. Tooth	13	*68	3

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3321-147

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
3256-1	Washer	12	37	3	3290-378	Tie-Cable	67	57	3
3256-1	Washer-Flat	3	32	2	3290-461	Washer-Belleville	6	24	1
3256-1	Washer-Flat	2	48	3	3290-467	Pin-Cotter, Hair	8	6	1
3256-3	Washer-Flat	2	33	4	3290-467	Pin-Cotter, Hair	1	19	2
3256-5	Washer-Flat	9	4	1	3290-489	Knob-Control, Lift	12	29	1
3256-5	Washer-Flat	6	44	1	3296-2	Nut-Lock	12	14	1
3256-6	Washer-Flat	71	43	2	3296-23	Nut-Lock	53	11	4
3256-6	Washer-Flat	67	64	3	3296-23	Nut-Lock	32	37	4
3256-14	Washer-Flat	12	26	2	3296-23	Nut-Lock	32	46	2
3256-14	Washer-Flat	3	27	2	3296-29	Nut-Lock	7	1	5
3256-22	Washer-Flat	6	8	2	3296-29	Nut-Lock	51	2	1
3256-22	Washer-Flat	3	40	5	3296-29	Nut-Lock	8	13	9
3256-23	Washer-Flat	7	2	8	3296-29	Nut-Lock	74	25	1
3256-23	Washer-Flat	12	12	3	3296-39	Nut-Hex. Lock	61	2	2
3256-23	Washer-Flat	8	14	4	3296-39	Nut-Hex. Lock	59	24	2
3256-23	Washer-Flat	76	32	4	3296-39	Nut-Lock	7	14	2
3256-23	Washer-Flat	3	38	6	3296-39	Nut-Lock	8	24	1
3256-23	Washer-Flat	32	49	4	3296-39	Nut-Lock	6	25	3
3256-23	Washer-Flat (Model 03803)	64	7	8	3296-42	Nut-Lock	13	46	2
3256-23	Washer-Flat (Model 03804)	64	7	9	3296-44	Nut-Lock	9	22	1
3256-24	Washer	9	5	1	3296-45	Nut-Lock	61	11	2
3256-24	Washer-Flat	6	4	2	3296-47	Nut-Lock	76	31	2
3256-24	Washer-Flat	23	13	4	3296-47	Nut-Lock	3	36	1
3256-24	Washer-Flat	8	21	3	3296-47	Nut-Lock	33	56	1
3256-26	Washer-Flat (Europe)	62	64	6	3296-47	Nut-Lock (Model 03803)	65	47	4
3256-26	Washer	54	65	1	3296-47	Nut-Lock (Model 03804)	65	47	5
3256-26	Washer-Flat	3	2	2	3296-49	Nut-Lock NI	71	38	2
3256-26	Washer-Flat	9	24	2	3296-49	Nut-Lock NI	67	60	3
3256-26	Washer-Flat (Europe)	54	69	6	3296-51	Nut-Lock	67	40	4
3256-27	Washer-Flat	32	47	2	3296-54	Nut-Lock	7	9	4
3256-29	Washer-Flat	53	12	1	3296-59	Nut-Lock	19	23	1
3256-29	Washer-Flat	61	12	1	32103-3	Nut-Wing	79	4	2
3256-46	Washer-Flat	9	20	1	32104-37	Screw-HH	64	6	2
3256-46	Washer-Flat	19	42	2	32104-76	Screw-Self Tap	67	20	2
3256-49	Washer-Flat	34	19	1	32105-13	Screw-HH	13	42	4
3256-56	Washer-Flat	32	16	3	32120-8	Ring-Retaining	60	11	1
3256-69	Washer-Flat	6	33	3	32120-15	Ring-Retaining	53	24	2
3256-77	Washer-Flat	23	44	8	32121-6	Pin-Roll	6	11	1
3256-78	Washer-Flat	1	13	2	32121-11	Pin-Roll	6	41	1
3258-166	Screw	1	23	3	32121-16	Pin-Roll	6	34	1
3258-166	Screw	12	36	3	32121-45	Pin-Roll	6	13	2
3269-4	Rivet-Pop	32	35	4	32121-50	Pin-Roll	6	36	1
3269-10	Washer-Flat	1	15	2	32121-110	Pin-Spring	71	40	2
3269-13	Rivet-Pop	1	10	4	32121-110	Pin-Spring	67	61	3
3272-2	Pin-Cotter	6	9	2	32122-24	Screw	17	20	5
3272-5	Pin-Cotter	3	4	3	32122-54	Screw-Machine Slot Hd.	79	1	2
3272-7	Pin-Cotter	59	14	2	32128-20	Nut-Flange	32	8	4
3272-10	Pin-Cotter	3	3	1	32128-20	Nut-Lock	6	26	8
3272-10	Pin-Cotter	8	20	1	32128-20	Nut-Lock	2	62	2
3272-10	Pin-Cotter	6	37	2	32128-21	Nut-HHF	53	2	2
3272-12	Pin-Cotter	61	6	2	32128-21	Nut-Lock	65	55	2
3272-12	Pin-Cotter	54	49	4	32128-25	Nut-Lock	8	7	4
3272-13	Pin-Cotter	61	34	2	32128-26	Nut-Flange	9	21	4
3274-59	Screw-HH	23	30	6	32128-33	Nut-Flange	2	45	3
3274-81	Screw	23	45	8	32128-33	Nut-Lock	13	55	3
3290-93	Screw-HH	12	7	4	32136-13	Nut-Hex. Slotted	59	13	2
3290-271	Rivet-Pop	32	3	2	32136-13	Nut-Hex. Slotted	61	37	2
3290-282	Rivet-Pop	34	50	1	32136-14	Nut-Hex. Slotted	61	9	4
3290-307	Pin-Cotter, Hair	8	33	1	32136-14	Nut-Hex. Slotted	54	48	2
3290-354	Plate-Nut	12	10	2	32144-10	Screw	8	26	2
3290-378	Tie-Cable	3	9	7	32144-11	Screw-Thread Form	71	23	1
3290-378	Tie-Cable	71	19	2	32144-11	Screw-Thread Forming	25	17	5
3290-378	Tie-Cable	51	20	5	32144-11	Screw-Thread Forming	3	44	2
3290-378	Tie-Cable	17	23	3	32144-14	Screw-HH	6	18	2
3290-378	Tie-Cable	76	27	1	32144-14	Screw-HWH Thread Form	67	15	3
3290-378	Tie-Cable	8	31	2	32144-18	Screw-HWH	13	50	2
3290-378	Tie-Cable	26	41	3	32148-7	Nut-Clinch	1	4	5
3290-378	Tie-Cable	13	44	2	32148-10	Nut-Clinch	32	14	2
3290-378	Tie-Cable	65	44	6	32151-10	Ring-Retaining	61	16	2
3290-378	Tie-Cable	6	48	1	32151-36	Ring-Retaining	71	21	4
3290-378	Tie-Cable	34	52	2	32151-72	Retainer-Push On	32	28	2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
32151-96	Ring-Retaining	53	14	1	340-70	Nut-Bulkhead	64	11	7
32152-10	Nut	72	3	1	340-70	Nut-Bulkhead	76	13	2
32152-10	Nut	73	3	1	340-70	Nut-Lock	53	26	3
32152-10	Nut-Lock	60	2	1	340-70	Nut-Lock, Bulkhead	3	46	4
32152-10	Nut-Lock	63	2	1	340-70	Nut-Lock, Bulkhead	62	57	2
32152-10	Nut-Lock	68	3	1	340-74	Nut-Bulkhead	32	31	2
32152-10	Nut-Lock	69	3	1	340-77	Fitting-Hydraulic 90°	19	6	1
32152-10	Nut-Lock	70	3	1	340-92	Fitting-Hydraulic	74	4	4
33004-00	Nut-HF	34	44	2	340-92	Fitting-Hydraulic	76	25	5
33005-00	Nut-HF	34	1	9	340-92	Fitting-Hydraulic	67	44	1
33005-00	Nut-HF	17	5	2	340-92	Fitting-Straight	71	16	2
33005-00	Nut-Hex. Flange	51	48	2	340-97	Fitting-Hydraulic 90°	61	43	2
33023-00	Nut-Lock	51	32	1	340-97	Fitting-Hydraulic 90°	61	43	2
33024-00	Nut-Lock	78	8	5	340-97	Fitting-Hydraulic 90°	54	52	2
33093-00	Washer	51	31	1	340-98	Fitting-Hydraulic 90°	76	5	10
33103-020	Screw-HHF	51	26	1	340-98	Fitting-Hydraulic 90°	64	28	1
33103-020	Screw-HHF	4	56	2	340-98	Fitting-Hydraulic 90°	26	46	1
33103-025	Screw-HHF	3	35	1	340-103	Fitting-Hydraulic	71	20	1
33104-016	Screw-HHF	74	27	4	340-105	Fitting-Hydraulic 90°	19	9	2
33104-016	Screw-HHF	51	43	2	340-117	Cap-Fitting	3	48	1
33104-020	Screw-HHF	16	5	6	340-126	Nut-Bulkhead	53	8	3
33104-020	Screw-HHF	34	35	2	340-127	Nut-Bulkhead	25	6	1
33104-020	Screw-HHF (Europe)	32	51	3	340-127	Nut-Bulkhead	76	10	5
33104-025	Screw-HHF	64	13	4	340-127	Nut-Bulkhead	64	19	4
33104-030	Screw-HHF	78	5	5	340-128	Nut-Bulkhead	25	13	2
33105-025	Screw-HHF	17	13	3	340-128	Nut-Bulkhead	25	13	3
33105-025	Screw-HHF	16	28	3	340-129	Fitting-Hydraulic 90°	19	30	1
33105-030	Screw-HHF	17	2	2	340-129	Fitting-Hydraulic 90°	19	31	1
33105-030	Screw-HHF	34	8	6	340-132	Fitting-Hydraulic	71	18	1
33105-030	Screw-HHF	51	14	2	340-132	Fitting-Hydraulic	67	30	5
33105-070	Screw-HHF	34	7	3	340-132	Fitting-Hydraulic 90°	74	11	1
33106-030	Screw-HHF	25	21	12	340-132	Fitting-Hydraulic 90°	64	25	2
33106-035	Screw-HHF	78	1	3	340-139	Fitting-Elbow 90°	16	14	1
33106-035	Screw-HHF	1	6	8	340-139	Fitting-Hydraulic 90°	74	21	1
33106-090	Screw-HHF	25	36	8	340-142	Fitting-Hydraulic 90°	53	21	1
33108-025	Screw-HHF	32	1	2	340-142	Fitting-Hydraulic 90°	25	23	4
33108-035	Screw	1	25	6	340-142	Fitting-Hydraulic 90°	16	19	1
33114-010	Screw-HH	67	67	4	340-148	Fitting-Tee	64	32	1
33116-120	Screw-HH	26	37	4	340-154	Fitting-Hydraulic 90°	64	4	2
340-2	Adapter	3	11	4	340-157	Fitting-Tee	16	32	1
340-2	Adapter	16	37	1	340-161	Fitting-Adapter	64	3	1
340-2	Adapter	53	37	1	351-78	Edging	7	23	1
340-2	Adapter-Hydraulic	74	23	1	353-508	Plug	53	39	1
340-4	Fitting-Hydraulic	74	17	4	353-989	Plug	66	11	5
340-4	Fitting-Hydraulic	64	29	1	353-989	Plug	75	14	5
340-5	Fitting-Hydraulic	26	40	2	353-990	Plug	66	4	4
340-9	Fitting-Hydraulic	16	11	1	353-990	Plug	75	5	10
340-9	Fitting-Hydraulic	53	18	1	353-991	Plug	66	6	4
340-15	Fitting-Hydraulic 90°	19	30	1	353-991	Plug	75	12	10
340-17	Fitting-Hydraulic 90°	19	28	1	354-77	Fitting-Quick Connect	19	2	4
340-18	Fitting-Hydraulic 90°	25	34	1	354-77	Fitting-Quick Connect	74	14	1
340-65	O-Ring	26	*53	6	354-77	Fitting-Quick Connect	64	23	1
340-65	O-Ring	19	32	2	354-79	Cap-Dust	19	1	4
340-68	Fitting-Hydraulic, Tee	76	23	1	354-79	Cap-Fitting	74	15	1
340-68	Fitting-Tee, Bulkhead	3	45	1	354-79	Cap-Fitting	64	24	1

*Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Reelmaster 6500D has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the main frame under the operator's platform. In any correspondence concerning the Reelmaster 6500D, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial number of the Reelmaster 6500D.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

Description	Page	Description	Page
Frame & Body Assembly	1-2	Collector Assembly	44
Steering Tower Assembly	3-4	Water Pump Assembly	44
Steering Control Valve Asm. 94-9950	5	Fuel Injection Pump Assembly	46
Traction & Brake Pedal Assembly	6	Fuel Injector Assembly	47
Seat Frame & Throttle Assembly	7-8	Alternator Assembly	48
Seat Suspension Assembly	9	Starter Assembly	49
Diagnostic - ACE Display Assembly	10	Glow Plug & Glow Relay	50
Electrical Schematic	11	Engine Components Assembly	51
Control Console Assembly	12-13	Air Cleaner Assembly No. 93-7485	52
Hydraulic Schematic Model 03803	14	4-WD Axle Assembly (Model No. 03804) ...	53-54
Hydraulic Schematic Model 03804	15	Sleeve Assembly (Model No. 03804)	55
Hydraulic Filter & Reservoir Assembly	16	Axle Housing Assembly (Model No. 03804)	56
Fuel Tank & Filter Assembly	17	Differential & Shaft Assembly (Model No. 03804) .	57
Fuel Filter Assembly	18	Steering Gear Case Asm. (Model No. 03804)	58
Pump Installation Assembly	19	Steering Arm Linkage (Model No. 03804)	59
Gear Pump Assembly No. 93-2175	20-21	Hydraulic Cylinder No. 94-8141	60
Servo Controlled Piston Pump Asm. No. 98-3730	22-23	2-WD Rear Axle Assembly (Model No.03803)	61-62
Manual Servo Control No. 94-3019	24	Hydraulic Cylinder No. 94-8142	63
Front Hydraulic Drive & Brake Assembly	25-26	Rear Hydraulic Control Block & Tubes	64-65
Planetary Drive Assembly No. 92-7415	27	Manifold Assembly No. 92-7419	66
Brake Asm. No. 92-7414 RH & 92-7417 LH	28	Front Lift Arms Assembly	67
Hydraulic Motor Assembly No. 92-7385	29	Hydraulic Cylinder No. 98-8811	68
Hydraulic Motor Asm. No. 93-7476 W/Sensor ...	30	Hydraulic Cylinder No. 98-8069	69
4-WD Hydraulic Motor Asm. No. 92-7386	31	Hydraulic Cylinder No. 93-2650	70
Radiator & Shroud Assembly	32-33	Rear Lift Arm Assembly	71
Engine Installation Assembly	34	Hydraulic Cylinder No. 98-8813	72
Crankcase Assembly	35	Hydraulic Cylinder No. 98-8812	73
Crankshaft Assembly	36	Front Hydraulic Control Block & Hoses	74
Cylinder Head Assembly	37-39	Control Block Assembly No. 92-7418	75
Camshaft & Fan Support Assembly	40	Reel Motor & Hoses	76
Timing Cover	41	Reel Motor Assembly No. 92-7387	77
Intake & Exhaust Manifold Assembly	42	Roll Over Protection System (ROPS)	7
Oil Pump Assembly	43	Guage Bar & Backlapping Brush Assemblies	79
		Numerical Parts Index	80-92

