



## Operator's Manual


MODEL NO. 30196 – 890001 & UP  
MODEL NO. 30197 – 890001 & UP

## ADDENDUM

The following adjustment has been added to the unit. Keep this sheet with the Operator's Manual for reference.

### Adjust PTO Bellcrank

1. Engage PTO lever and check the clearance between the bellcrank and the axle shaft (Fig. 1). Space should be 1/4" (6mm).
2. If adjustment is required, remove hairpin cotter and clevis pin from bellcrank. Rotate clevis clockwise on rod to increase or counterclockwise to decrease clearance (Fig. 1).

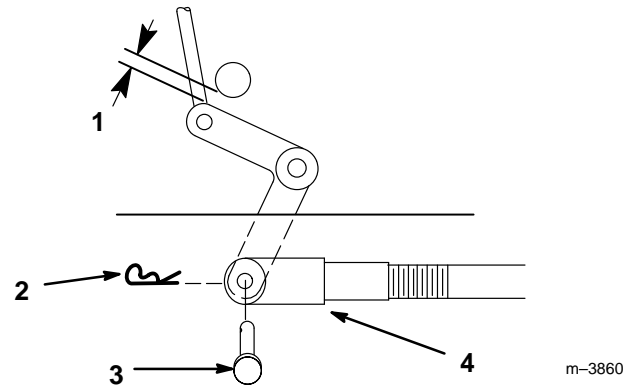

**Figure 1**

- |                   |               |
|-------------------|---------------|
| 1. 1/4" (6mm)     | 3. Clevis pin |
| 2. Hairpin cotter | 4. Clevis     |

m-3860