



**Count on it.**

# Parts Catalog

## TimeCutter® SS 5000

### Riding Mower

Model No. 74731—Serial No. 400000000 and Up



# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

## Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

## Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

## Reference Numbers Indicating Quantity

 
In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# Contents

|                                                            |    |
|------------------------------------------------------------|----|
| Frame Assembly . . . . .                                   | 4  |
| Deck Lift Assembly . . . . .                               | 6  |
| Caster, Wheel and Tire Assembly . . . . .                  | 8  |
| Traction Drive Assembly . . . . .                          | 10 |
| Left Hand Hydro Transaxle Assembly No. 119-3350 . . . . .  | 12 |
| Right Hand Hydro Transaxle Assembly No. 119-3351 . . . . . | 14 |
| Brake Assembly . . . . .                                   | 16 |
| Rear Tire Assembly . . . . .                               | 18 |
| Seat Pan Assembly . . . . .                                | 20 |
| Motion Control Assembly . . . . .                          | 22 |
| Engine and Muffler Assembly . . . . .                      | 24 |
| Fuel System Assembly . . . . .                             | 26 |
| Carburetor Assembly . . . . .                              | 28 |
| Air Intake and Filtration Assembly . . . . .               | 30 |
| Ignition and Electrical Assembly . . . . .                 | 32 |
| Crankcase and Crankshaft Assembly . . . . .                | 34 |
| Governor Control Assembly . . . . .                        | 36 |
| Piston and Cylinder Head Assembly . . . . .                | 38 |
| Blower Housing Assembly . . . . .                          | 40 |
| Gasket and Seal Kit . . . . .                              | 42 |
| Body Styling and Fuel Tank Assembly . . . . .              | 44 |
| Battery and Electrical Assembly . . . . .                  | 46 |
| 50 Inch Deck, Belt and Blade Assembly . . . . .            | 48 |
| 50 Inch Deck Decal Assembly No. 131-3606 . . . . .         | 50 |
| Model Specific Decal Assembly . . . . .                    | 52 |
| Frame Decal Assembly . . . . .                             | 54 |
| Clutch Assembly . . . . .                                  | 56 |
| Attachments and Accessories . . . . .                      | 58 |


# Frame Assembly

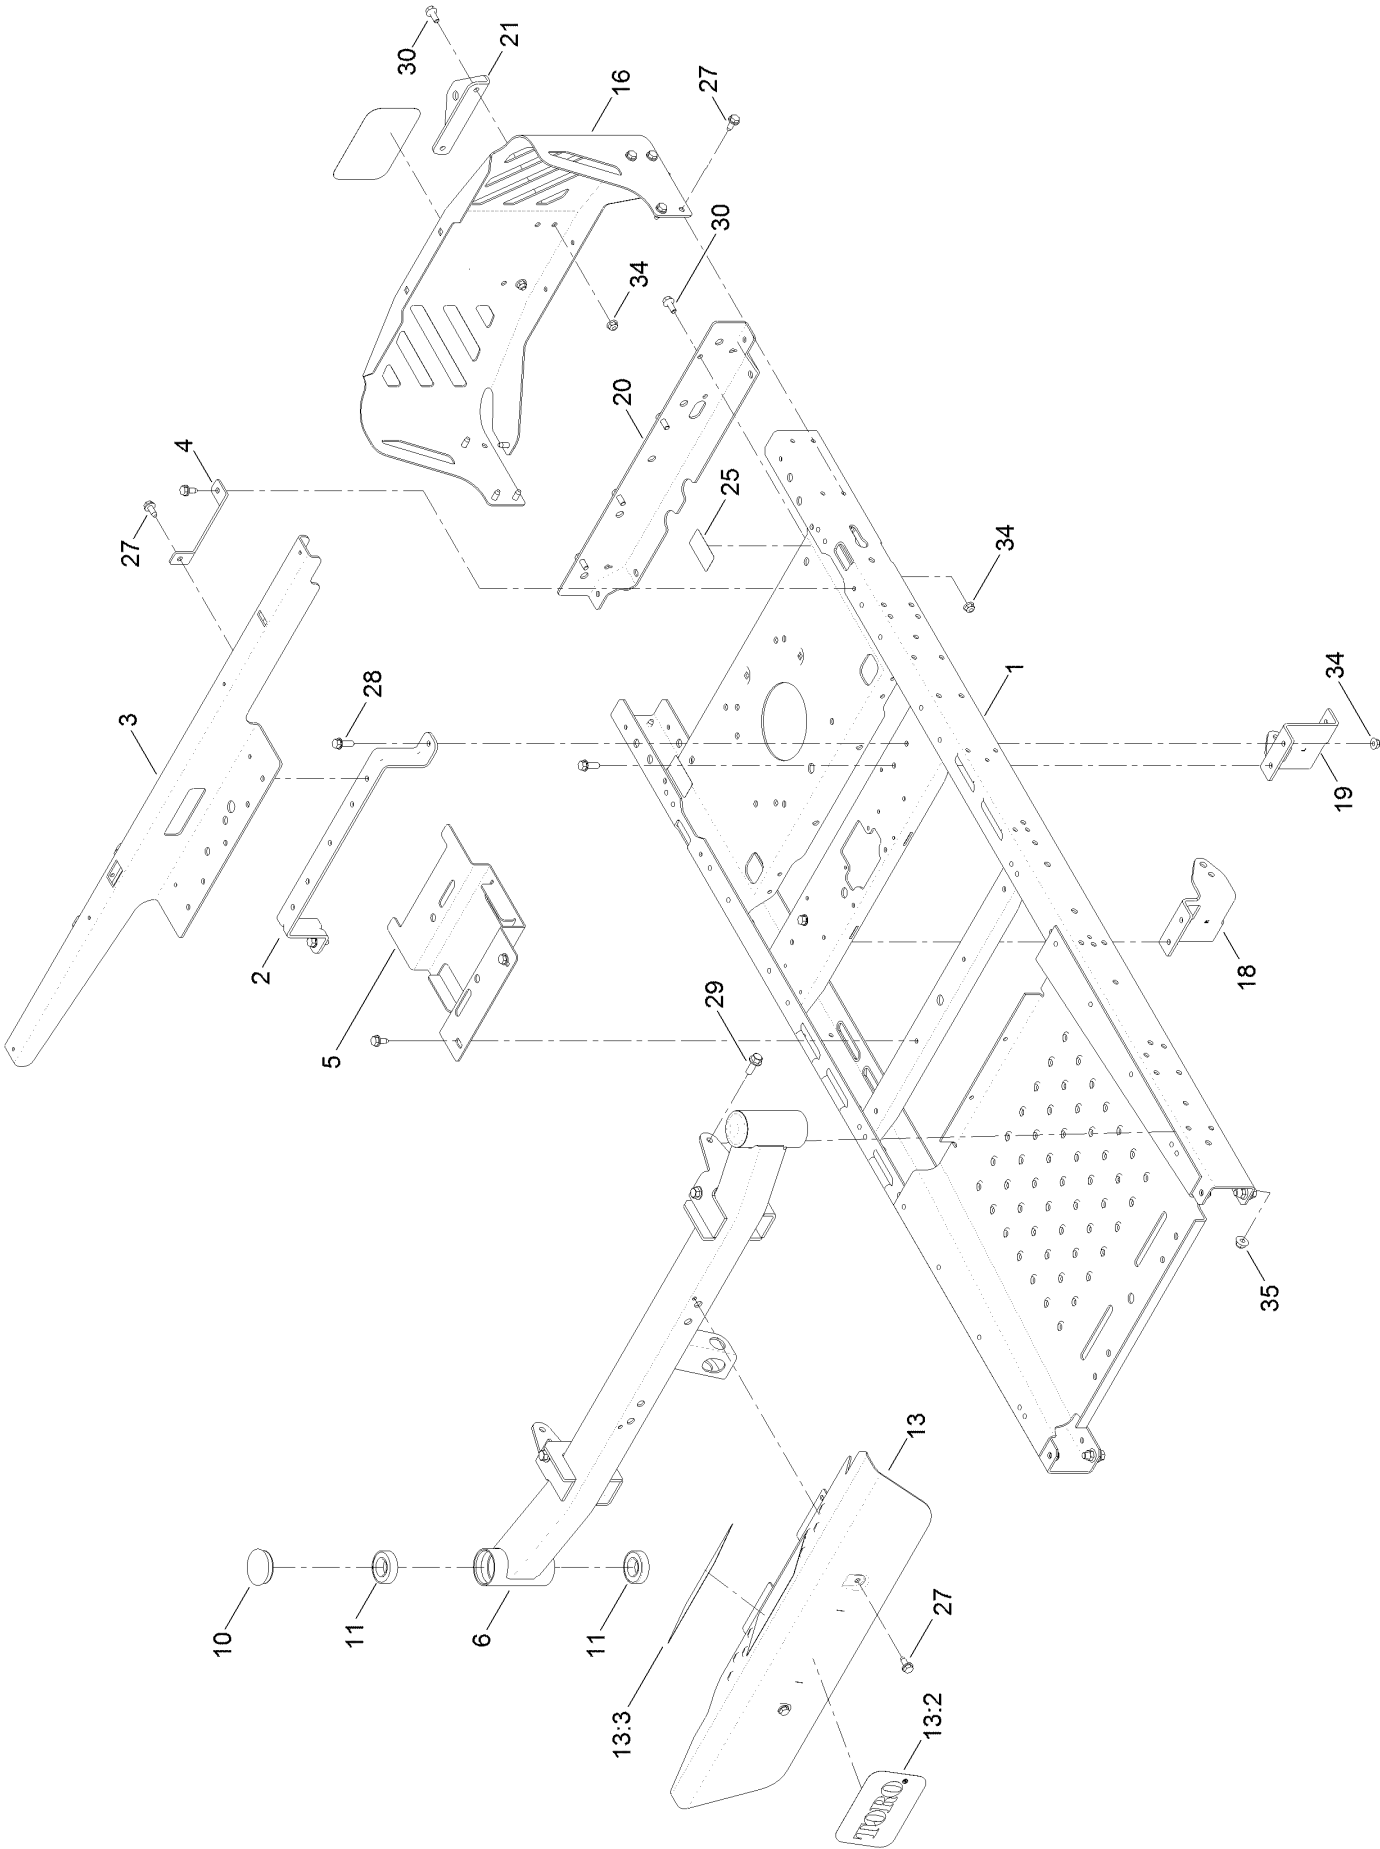

## Frame Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|-------------------------|
| 1           | 130-0699-01        | 1           | Frame ASM          | 18          | 131-0901-01        | 1           | Mount-Hydro, Front (RH) |
| 2           | 117-7337-03        | 1           | Brace-Seat, Rear   | 19          | 131-0902-01        | 1           | Mount-Hydro, Front (LH) |
| 3           | 131-1039-03        | 1           | Support-Pod, Wide  | 20          | 130-6946-01        | 1           | Crossmember-Rear, Wide  |
| 4           | 119-3431-03        | 2           | Support-Tank, Rear | 21          | 117-1232-03        | 1           | Bracket-Hitch           |
| 5           | 131-0914-03        | 1           | Bracket-Battery    | 25          | 121-2989           | 2           | Decal-Bypass            |
| 6           | 125-1726-01        | 1           | Axle ASM           | 27          | 32144-70           | 18          | Screw-HWHTF             |
| 10          | 116-4348           | 2           | Cap-Grease         | 28          | 3234-29            | 4           | Screw-HHF               |
| 11          | 109-3678           | 4           | Bearing-Ball       | 29          | 3234-42            | 6           | Screw-HHF               |
| 13          | 132-0892           | 1           | Footrest ASM       | 30          | 3234-47            | 8           | Screw-HHF               |
| 13:2        | 99-4693            | 1           | Decal              | 34          | 104-8300           | 12          | Nut-HF, NI              |
| 13:3        | 132-0869           | 1           | Decal-Danger       | 35          | 104-8301           | 6           | Nut-HF, NI              |
| 16          | 130-0701-03        | 1           | Guard-Engine, Wide |             |                    |             |                         |


# Deck Lift Assembly

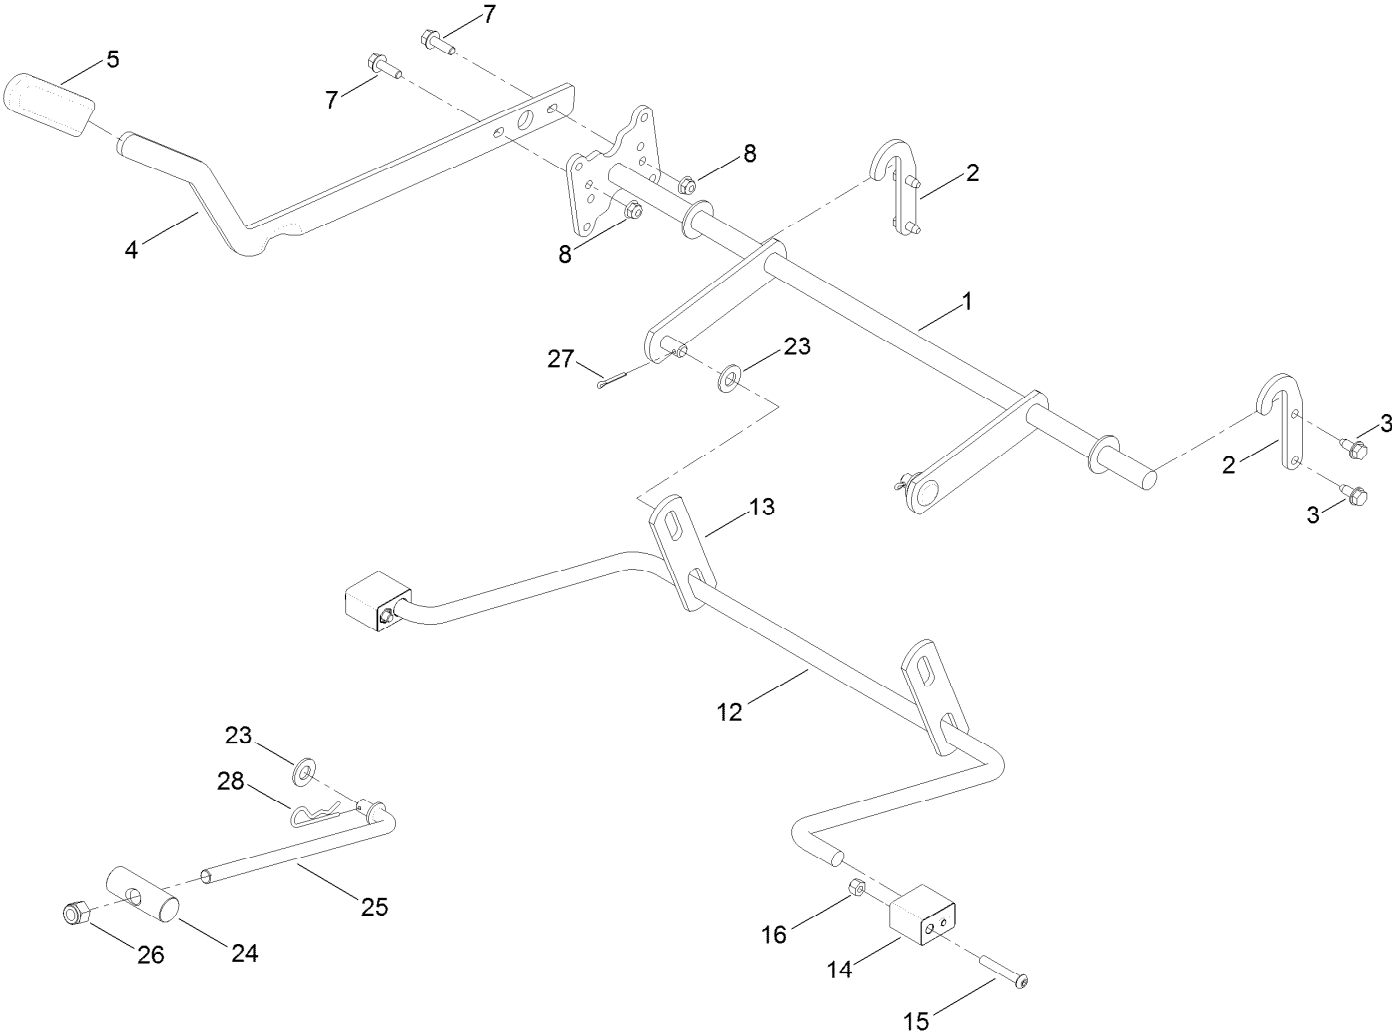

## Deck Lift Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|-----------------------|-------------|--------------------|-------------|--------------------|
| 1           | 132-6878-03        | 1           | Lift-Deck, Wide       | 14          | 108-7845           | 2           | Block-Pivot        |
| 2           | 119-8875           | 2           | Bracket-Lift          | 15          | 120-5499           | 2           | Screw-HSBH         |
| 3           | 32144-70           | 4           | Screw-HWHTF           | 16          | 3296-29            | 2           | Nut-Lock, NI       |
| 4           | 119-3427-03        | 1           | Lever-Lift            | 23          | 3256-26            | 3           | Washer-Flat        |
| 5           | 1-633268           | 1           | Grip-Lever            | 24          | 119-8810           | 1           | Pin-Pivot          |
| 7           | 3234-29            | 2           | Screw-HHF             | 25          | 133-4319           | 1           | Rod-Mount, Deck    |
| 8           | 104-8300           | 2           | Nut-HF, NI            | 26          | 3296-19            | 1           | Nut-Hex            |
| 12          | 119-3347           | 1           | Arm-Lift, Rear (Wide) | 27          | 3272-11            | 2           | Pin-Cotter         |
| 13          | 108-7840           | 2           | Link-Lift             | 28          | 1-806005           | 1           | Pin-Cotter         |
 
# Caster, Wheel and Tire Assembly

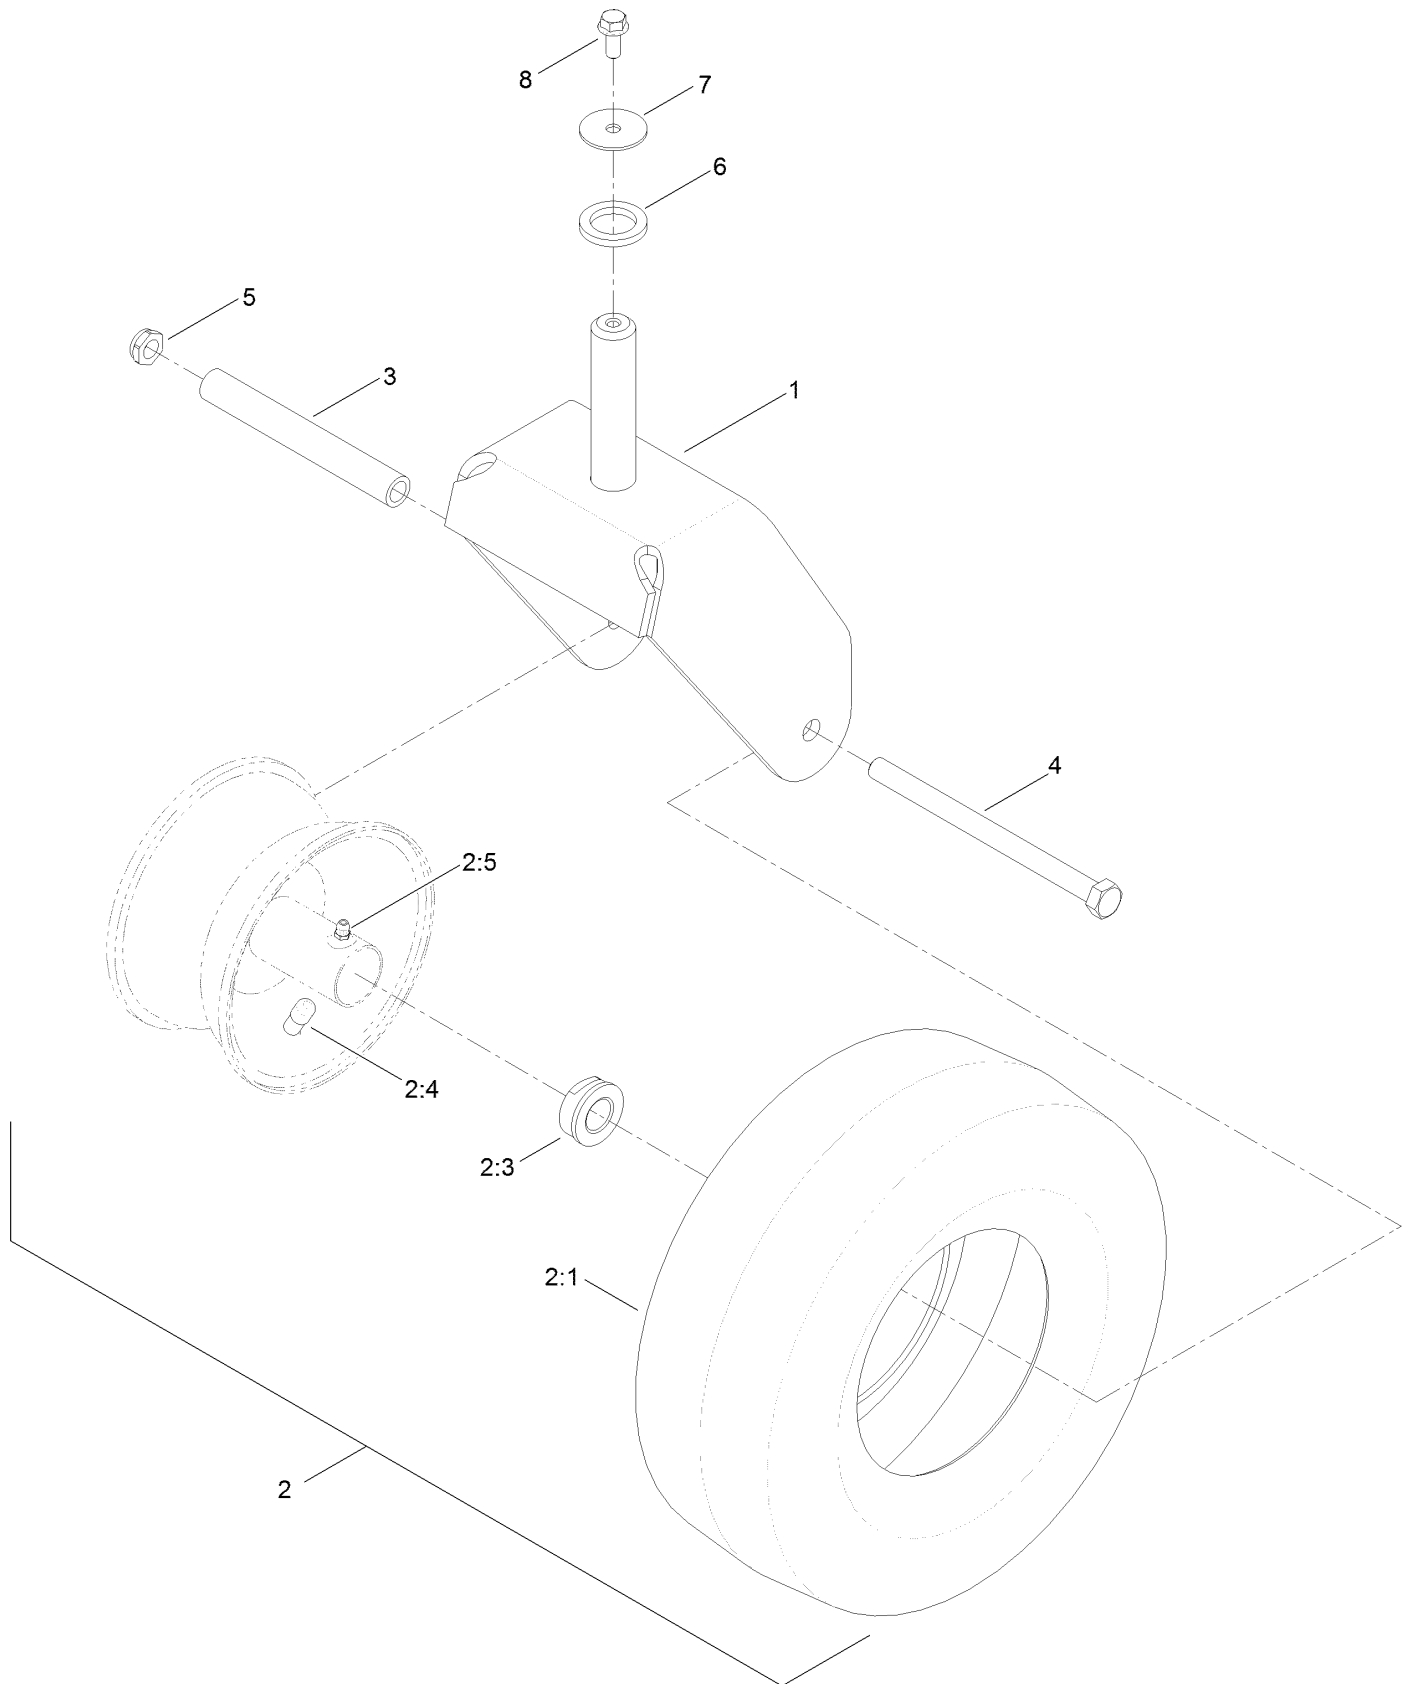


## Caster, Wheel and Tire Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>            | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|-------------------------------|-------------|--------------------|-------------|--------------------|
| 1           | 119-3349-01        | 2           | Fork-Caster                   | 2:99        | 232-46             | 1           | Tube-Inner●        |
| 2           | 119-3473           | 2           | 13 Inch Wheel And Tire<br>ASM | 3           | 119-3475           | 2           | Spanner            |
| 2:1         | 119-3471           | 1           | Tire-13 Inch                  | 4           | 325-37             | 2           | Screw-HH           |
| 2:3         | 114-1640           | 2           | Bushing-Flange                | 5           | 3296-45            | 2           | Nut-Lock, NI       |
| 2:4         | 232-27             | 1           | Stem-Valve                    | 6           | 117-7394           | 2           | Washer-Thrust      |
| 2:5         | 302-5              | 1           | Fitting-Grease                | 7           | 3256-68            | 2           | Washer-Flat        |
|             |                    |             |                               | 8           | 3234-47            | 2           | Screw-HHF          |

● Not illustrated

 
# Traction Drive Assembly

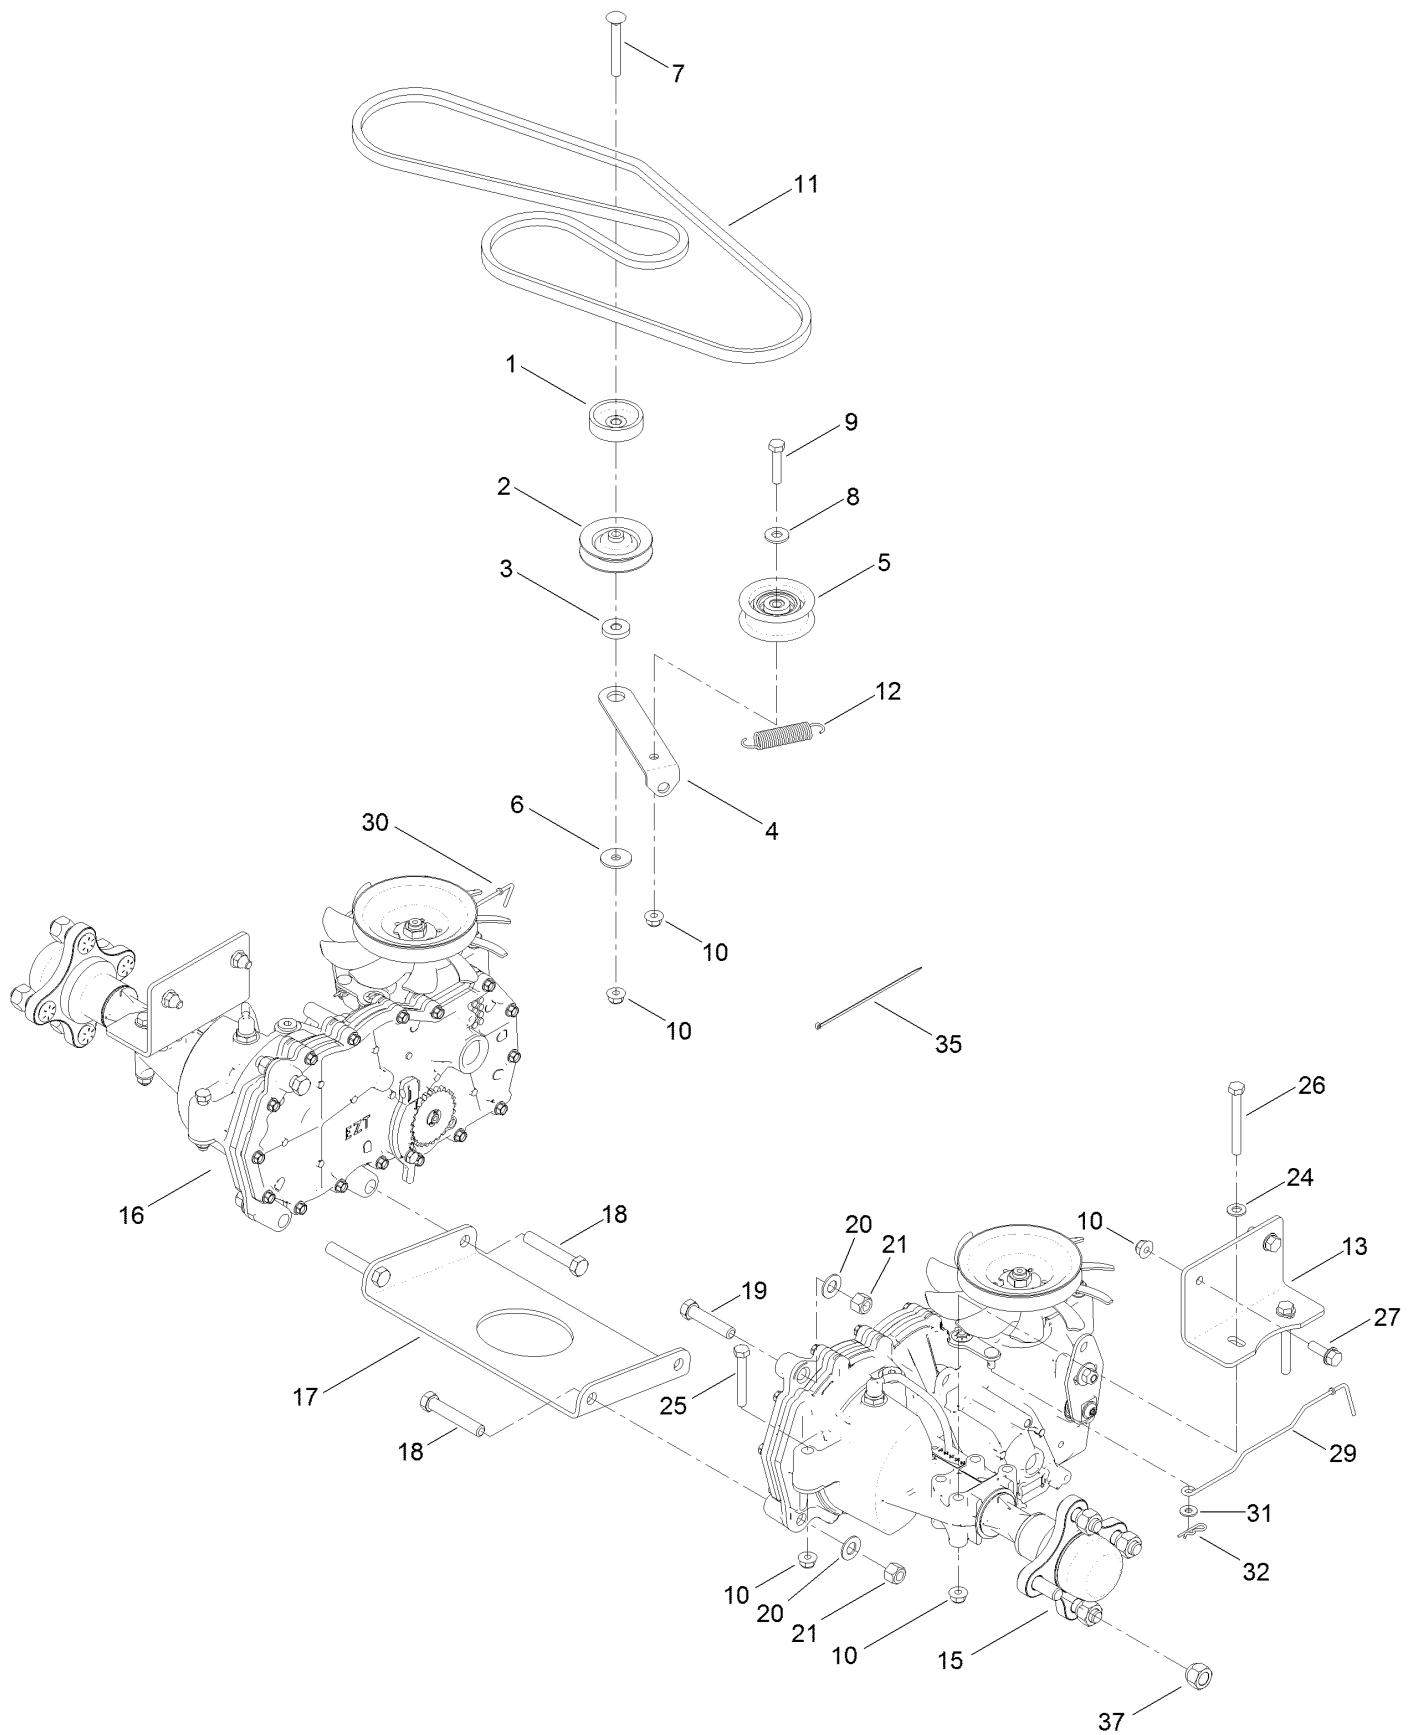

## Traction Drive Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|------------------------|-------------|--------------------|-------------|--------------------|
| 1           | 119-3353           | 1           | Spacer                 | 17          | 119-3342-03        | 1           | Plate-Cross, Hydro |
| 2           | 119-8822           | 1           | Pulley-Idler           | 18          | 324-10             | 4           | Screw-HH           |
| 3           | 119-3327           | 1           | Spacer-Arm, Idler      | 19          | 324-8              | 2           | Screw-HH           |
| 4           | 119-3326           | 1           | Arm-Idler              | 20          | 3256-25            | 6           | Washer-Flat        |
| 5           | 106-2176           | 1           | Pulley-Idler           | 21          | 3296-48            | 6           | Nut-Lock, NI       |
| 6           | 5-4460             | 1           | Washer-Pivot           | 24          | 3256-23            | 6           | Washer-Plain       |
| 7           | 3230-8             | 1           | Screw-CARR             | 25          | 322-11             | 4           | Screw-HH           |
| 8           | 3256-3             | 1           | Washer-Flat            | 26          | 322-13             | 4           | Screw-HH           |
| 9           | 322-7              | 1           | Screw-HH               | 27          | 3234-29            | 4           | Screw-HHF          |
| 10          | 104-8300           | 14          | Nut-HF, NI             | 29          | 131-0900           | 1           | Rod-Bypass, LH     |
| 11          | 130-6976           | 1           | V-Belt                 | 30          | 130-7049           | 1           | Rod-Bypass, RH     |
| 12          | 104-6415           | 1           | Spring-Return, Pedal   | 31          | 119-8952           | 2           | Washer             |
| 13          | 117-7264-03        | 2           | Mount-Hydro            | 32          | 3290-307           | 2           | Pin-Cotter         |
| 15          | 119-3350           | 1           | LH Hydro Transaxle ASM | 35          | 614249             | 2           | Tie-Cable          |
| 16          | 119-3351           | 1           | RH Hydro Transaxle ASM | 37          | 242-50             | 8           | Nut-Lug            |
 
# Left Hand Hydro Transaxle Assembly No. 119-3350

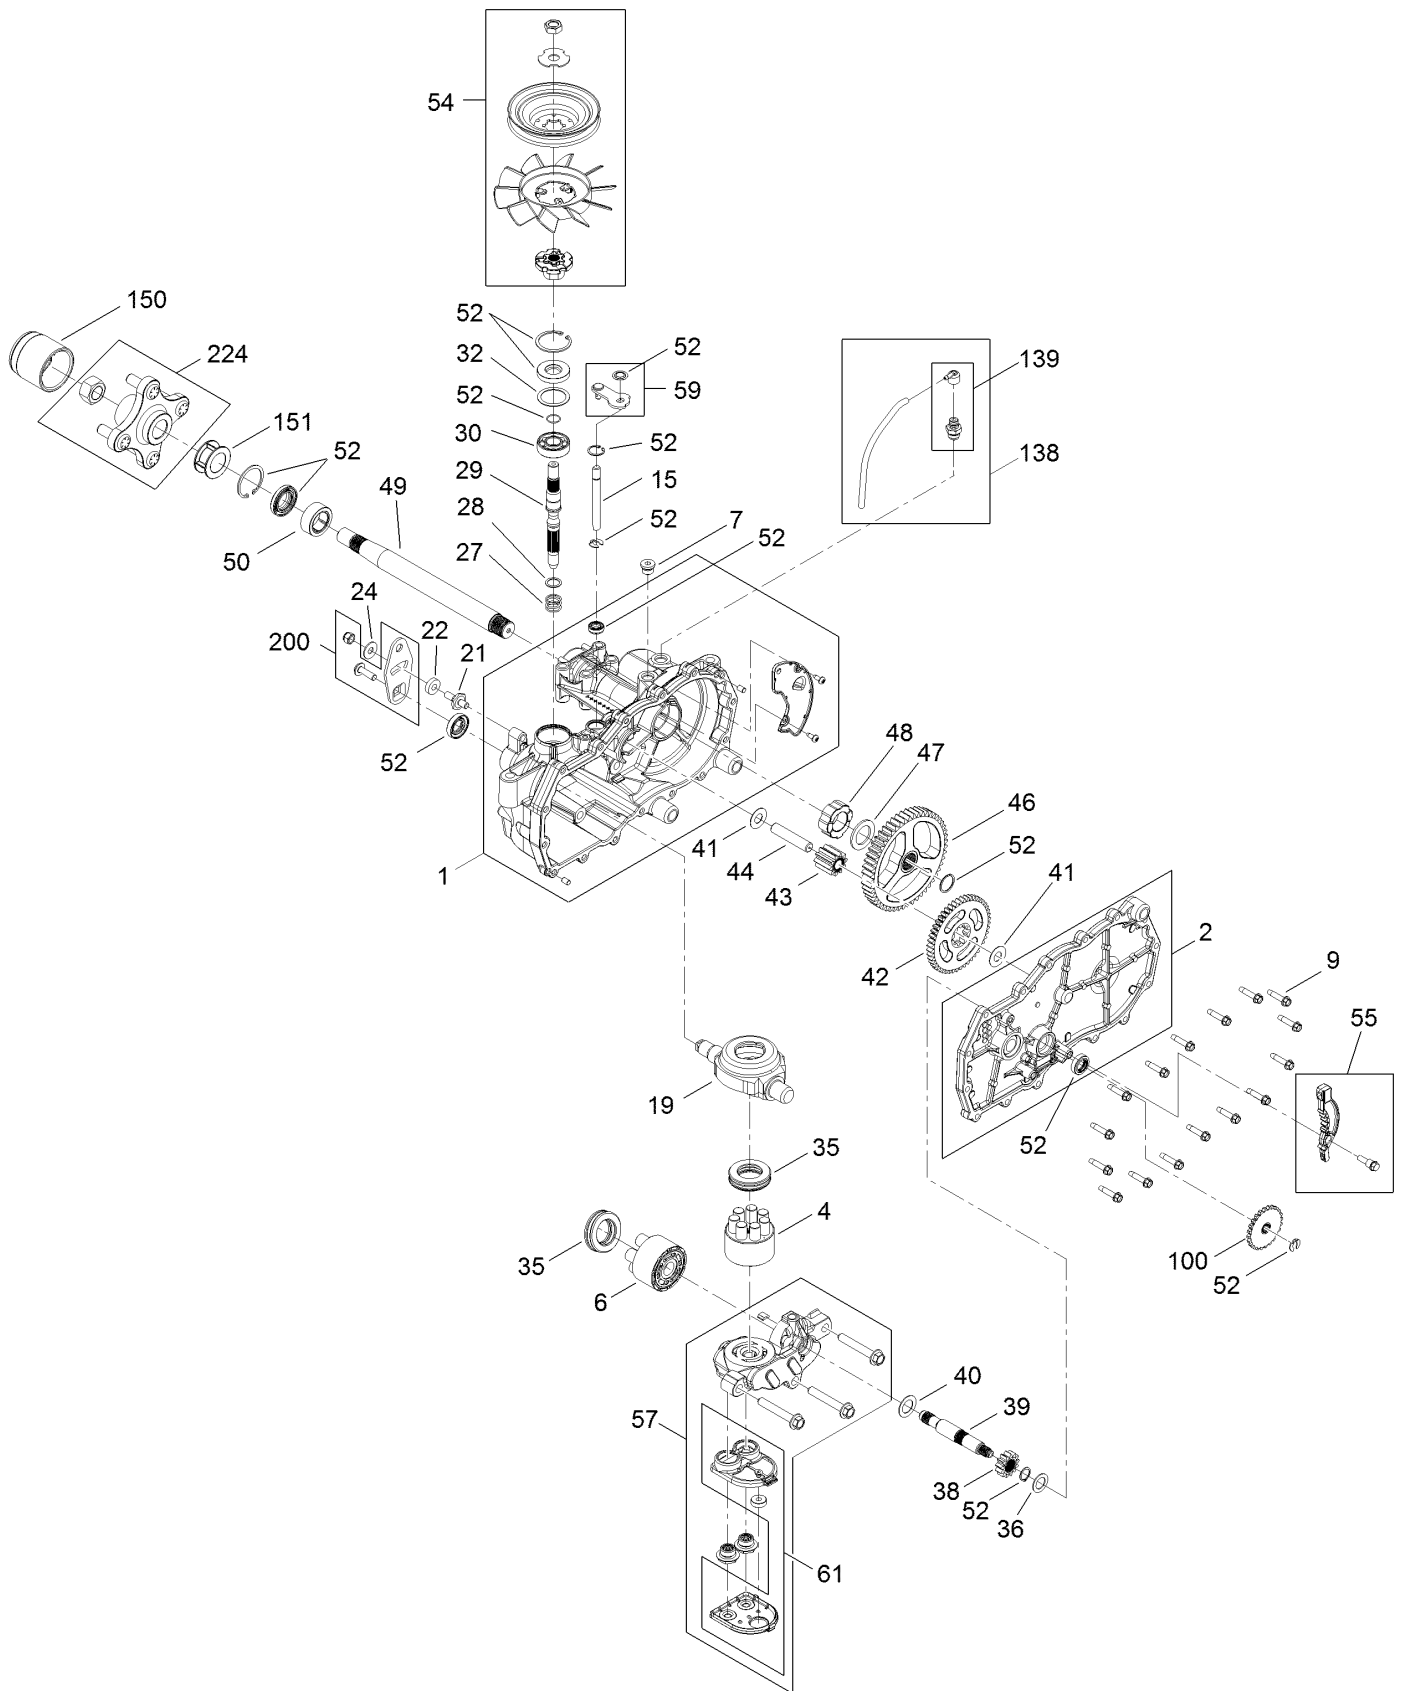


# Left Hand Hydro Transaxle Assembly No. 119-3350 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>        |
|-------------|--------------------|-------------|-----------------------|-------------|--------------------|-------------|---------------------------|
| 1           | 106-8695           | 1           | Main Housing ASM      | 42          | 104-5317           | 1           | Gear-10T/48T              |
| 2           | 106-8696           | 1           | Side ASM              | 43          | 104-5318           | 1           | Gear-Jackshaft, 10T       |
| 4           | 110-8561           | 1           | Pump Block ASM        | 44          | 104-5329           | 1           | Pin-Jackshaft             |
| 6           | 103-2666           | 1           | Cylinder Block Kit    | 46          | 112-9855           | 1           | Gear-52T, Bull            |
| 7           | 104-2189           | 1           | Plug-Thread, Straight | 47          | 112-9856           | 1           | Washer                    |
| 9           | 104-5305           | 16          | Screw-HHF             | 48          | 112-9857           | 1           | Bearing-Sleeve            |
| 15          | 106-8678           | 1           | Rod-Bypass            | 49          | 120-7104           | 1           | Shaft-Axle                |
| 19          | 104-5304           | 1           | Swashplate-Trunnion   | 50          | 112-9859           | 1           | Bushing-Axle              |
| 21          | 104-2116           | 1           | Stud                  | 52          | 106-8686           | 1           | Seal Kit ●                |
| 22          | 112-9853           | 1           | Puck-Friction         | 54          | 121-5746           | 1           | Fan Pulley Kit            |
| 24          | 114-8491           | 1           | Washer                | 55          | 106-8688           | 1           | Brake Arm Kit             |
| 27          | 120-5537           | 1           | Spring-Compression    | 57          | 112-9861           | 1           | Center Section Filter Kit |
| 28          | 120-5538           | 1           | Washer                | 58          | 104-2147           | 1           | Sealant ●                 |
| 29          | 104-5306           | 1           | Shaft-Input           | 59          | 120-5549           | 1           | Bypass Kit                |
| 30          | 104-5311           | 1           | Bearing-Ball          | 61          | 114-1634           | 1           | Filter Kit                |
| 32          | 104-5308           | 1           | Spacer                | 100         | 106-8694           | 1           | Disc-Brake, Cog           |
| 35          | 94-6922            | 2           | Bearing-Thrust        | 138         | 112-9866           | 1           | Breather Kit              |
| 36          | 104-5339           | 1           | Washer-Flat           | 139         | 114-1635           | 1           | Breather ASM              |
| 38          | 104-5316           | 1           | Gear-Pinnion, 13T     | 150         | 115-5057           | 1           | Cover-Nut, Axle           |
| 39          | 106-8683           | 1           | Shaft-Motor           | 151         | 120-7109           | 1           | Tube-Axle                 |
| 40          | 104-5360           | 1           | Washer                | 200         | 117-5362           | 1           | Control Arm Kit           |
| 41          | 119-5541           | 2           | Washer                | 224         | 109-5939           | 1           | Hub Kit                   |

● Not illustrated
 
# Right Hand Hydro Transaxle Assembly No. 119-3351

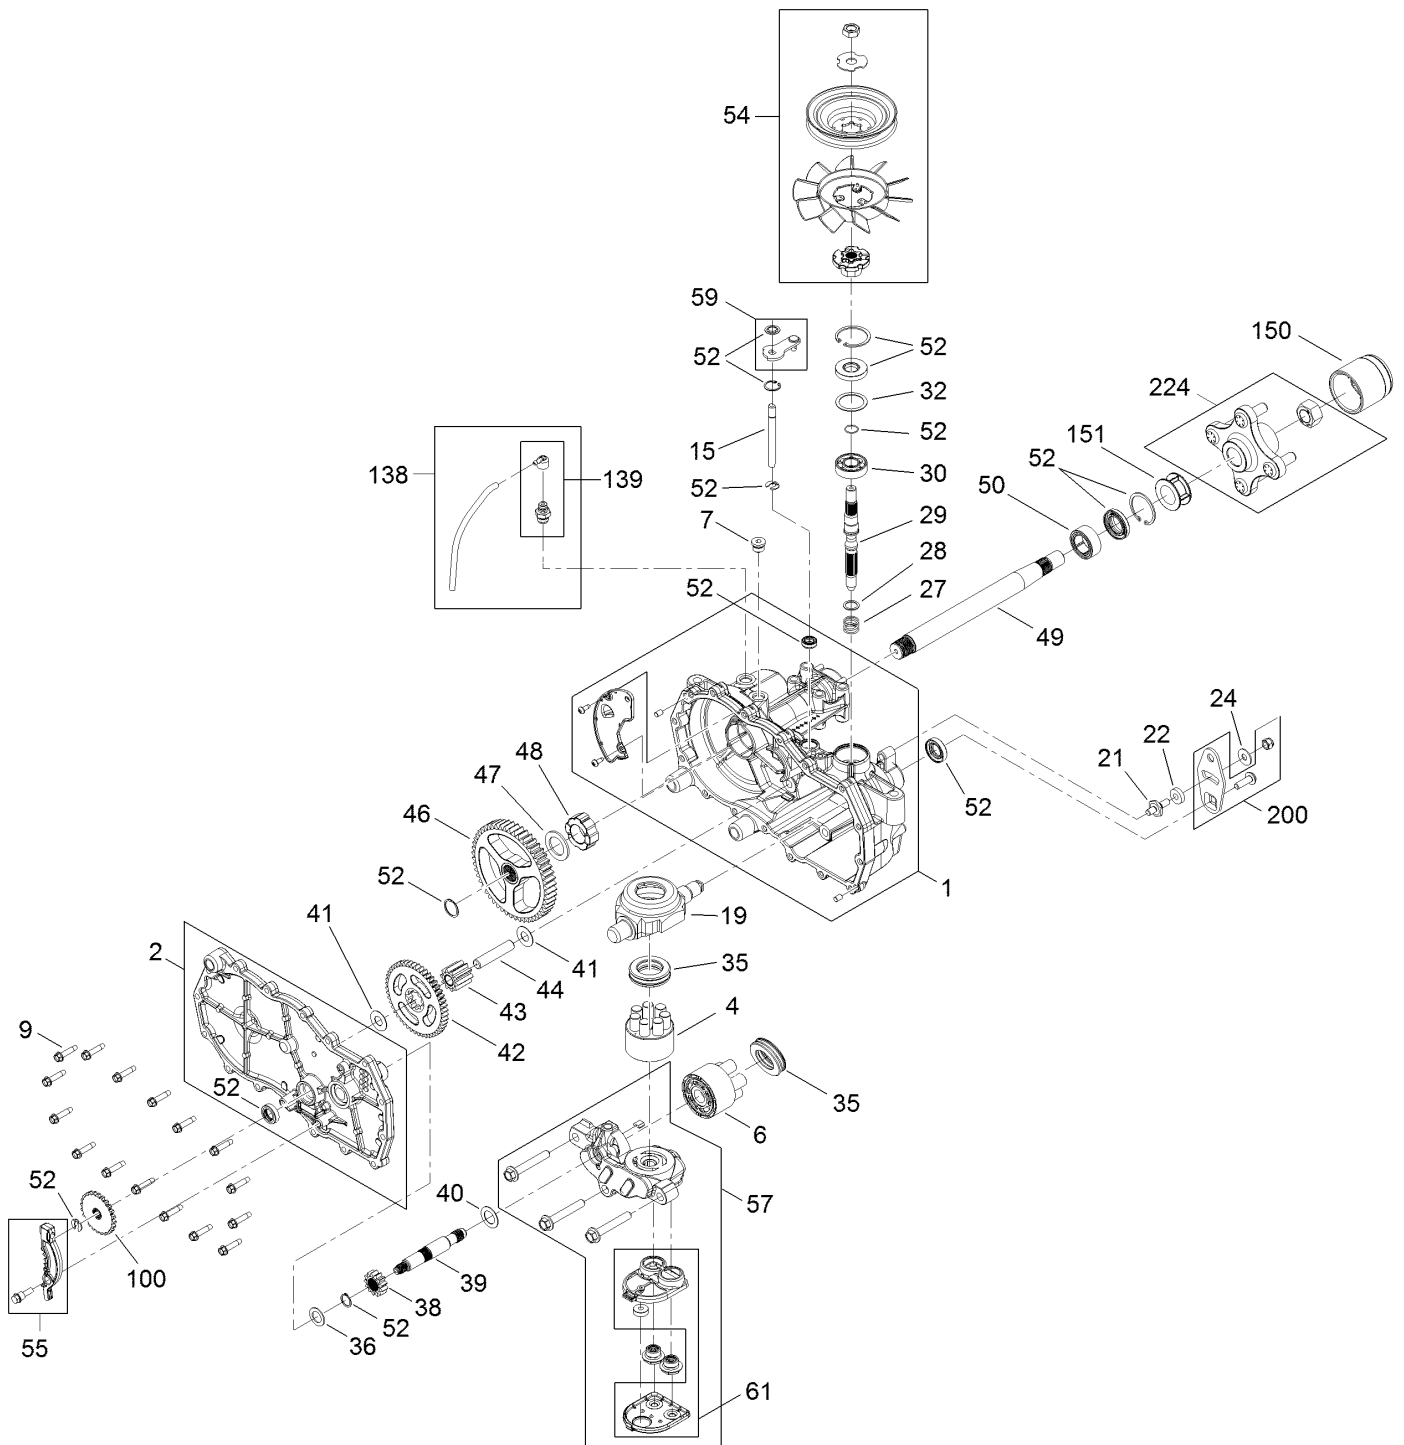


# Right Hand Hydro Transaxle Assembly No. 119-3351 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>        |
|-------------|--------------------|-------------|-----------------------|-------------|--------------------|-------------|---------------------------|
| 1           | 106-8674           | 1           | Main Housing ASM      | 42          | 104-5317           | 1           | Gear-10T/48T              |
| 2           | 106-8675           | 1           | Side ASM              | 43          | 104-5318           | 1           | Gear-Jackshaft, 10T       |
| 4           | 110-8561           | 1           | Pump Block ASM        | 44          | 104-5329           | 1           | Pin-Jackshaft             |
| 6           | 103-2666           | 1           | Cylinder Block Kit    | 46          | 112-9855           | 1           | Gear-52T, Bull            |
| 7           | 104-2189           | 1           | Plug-Thread, Straight | 47          | 112-9856           | 1           | Washer                    |
| 9           | 104-5305           | 16          | Screw-HHF             | 48          | 112-9857           | 1           | Bearing-Sleeve            |
| 15          | 106-8678           | 1           | Rod-Bypass            | 49          | 120-7104           | 1           | Shaft-Axle                |
| 19          | 104-5304           | 1           | Swashplate-Trunnion   | 50          | 112-9859           | 1           | Bushing-Axle              |
| 21          | 104-2116           | 1           | Stud                  | 52          | 106-8686           | 1           | Seal Kit ●                |
| 22          | 112-9853           | 1           | Puck-Friction         | 54          | 121-5746           | 1           | Fan Pulley Kit            |
| 24          | 114-8491           | 1           | Washer                | 55          | 106-8688           | 1           | Brake Arm Kit             |
| 27          | 120-5537           | 1           | Spring-Compression    | 57          | 112-9862           | 1           | Center Section Filter Kit |
| 28          | 120-5538           | 1           | Washer                | 58          | 104-2147           | 1           | Sealant ●                 |
| 29          | 104-5306           | 1           | Shaft-Input           | 59          | 107-2489           | 1           | Bypass Arm Kit            |
| 30          | 104-5311           | 1           | Bearing-Ball          | 61          | 114-1634           | 1           | Filter Kit                |
| 32          | 104-5308           | 1           | Spacer                | 100         | 106-8694           | 1           | Disc-Brake, Cog           |
| 35          | 94-6922            | 2           | Bearing-Thrust        | 138         | 112-9866           | 1           | Breather Kit              |
| 36          | 104-5339           | 1           | Washer-Flat           | 139         | 114-1635           | 1           | Breather ASM              |
| 38          | 104-5316           | 1           | Gear-Pinnion, 13T     | 150         | 115-5057           | 1           | Cover-Nut, Axle           |
| 39          | 106-8683           | 1           | Shaft-Motor           | 151         | 120-7109           | 1           | Tube-Axle                 |
| 40          | 104-5360           | 1           | Washer                | 200         | 117-5362           | 1           | Control Arm Kit           |
| 41          | 119-5541           | 2           | Washer                | 224         | 109-5939           | 1           | Hub Kit                   |

● Not illustrated

 
Brake Assembly

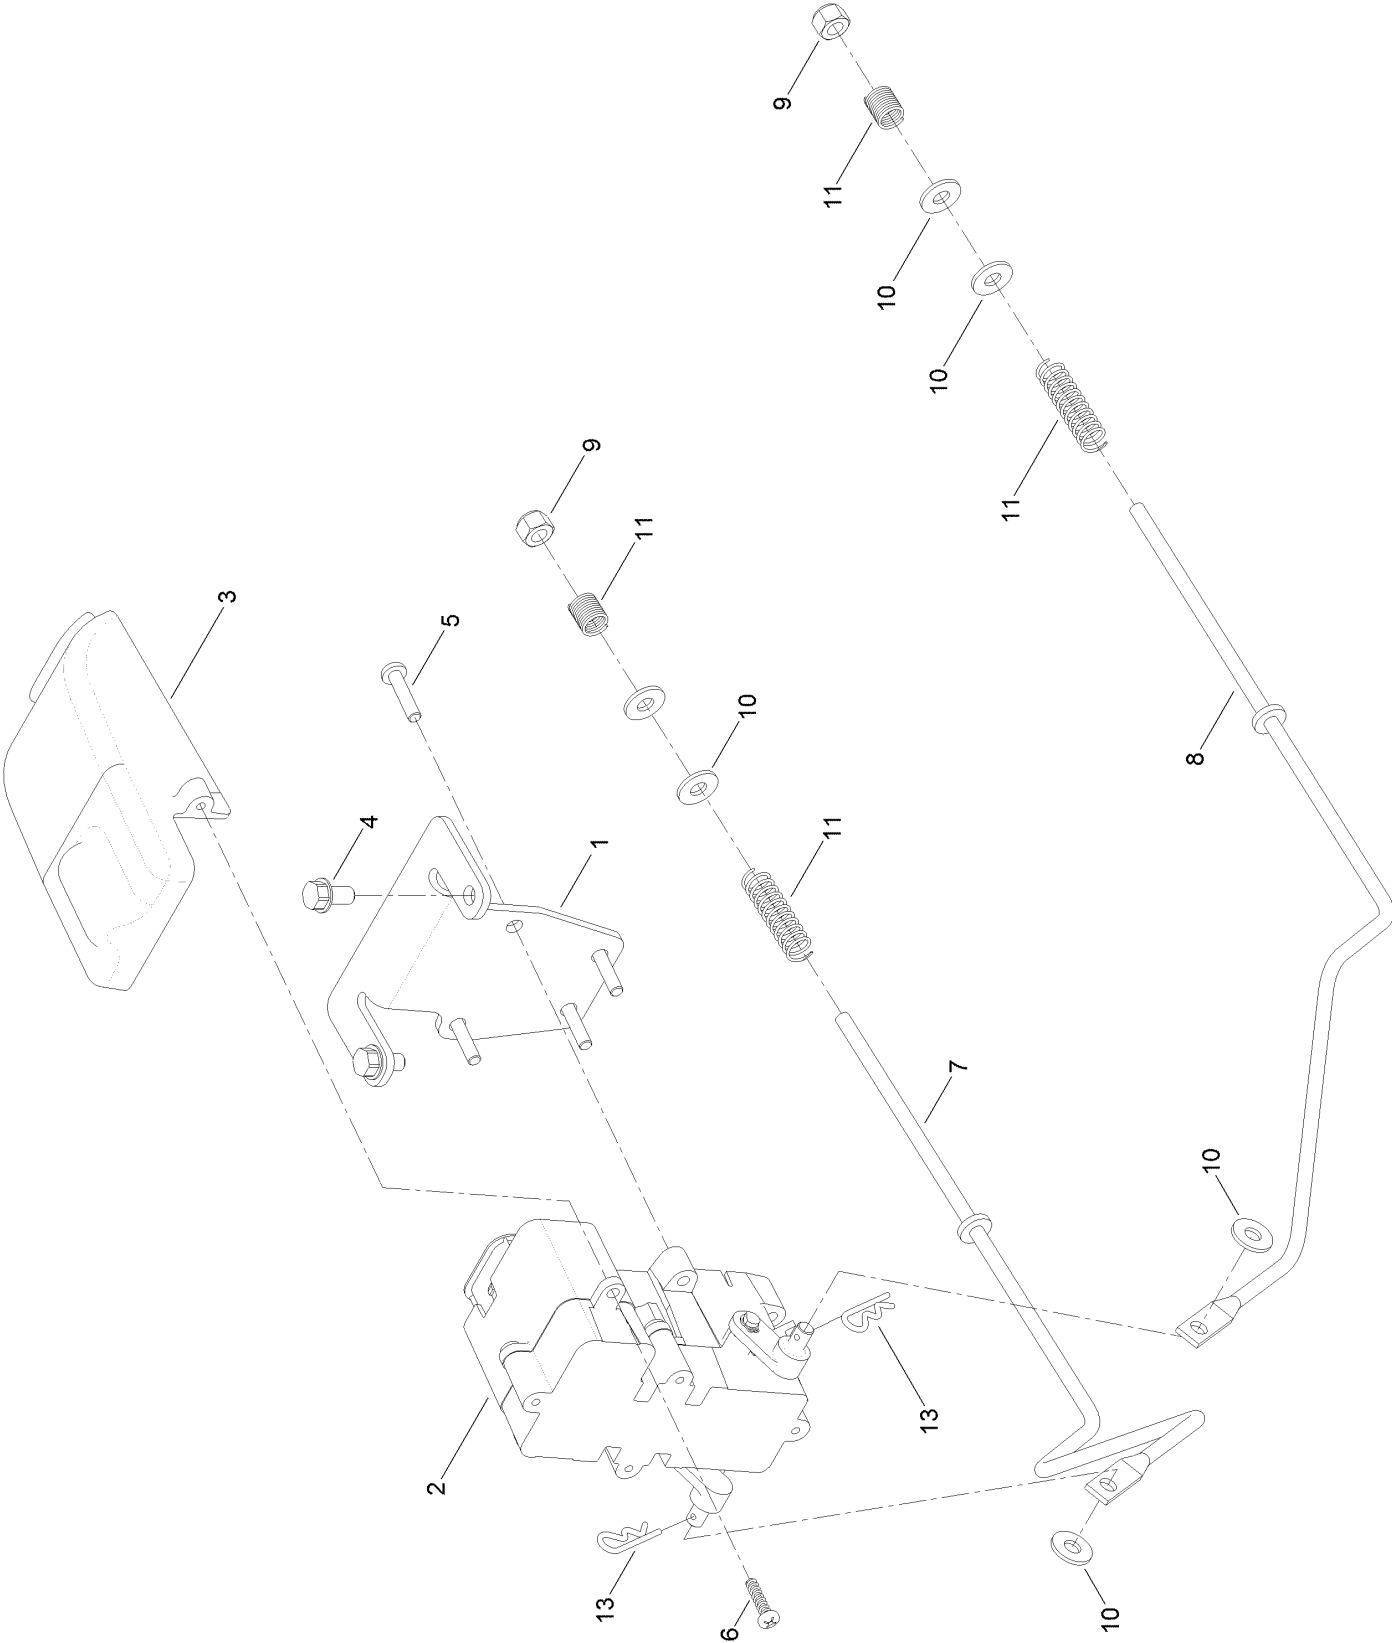

## Brake Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   |
|-------------|--------------------|-------------|----------------------|-------------|--------------------|-------------|----------------------|
| 1           | 130-0790-03        | 1           | Bracket-Mount, Brake | 7           | 121-2976           | 1           | Rod-Brake, Wide (RH) |
| 2           | 136-4213           | 1           | Brake Box ASM        | 8           | 121-2977           | 1           | Rod-Brake, Wide (LH) |
| 3           | 132-6949           | 1           | Cover-Connector      | 9           | 3296-42            | 2           | Nut-Lock, NI         |
| 4           | 32144-4            | 2           | Screw-HWH            | 10          | 119-8952           | 6           | Washer               |
| 5           | 32144-36           | 4           | Screw-PPH            | 11          | 117-1169           | 4           | Spring-Compression   |
| 6           | 94-4496            | 2           | Screw-PPH            | 13          | 3290-307           | 2           | Pin-Cotter           |
 
# Rear Tire Assembly

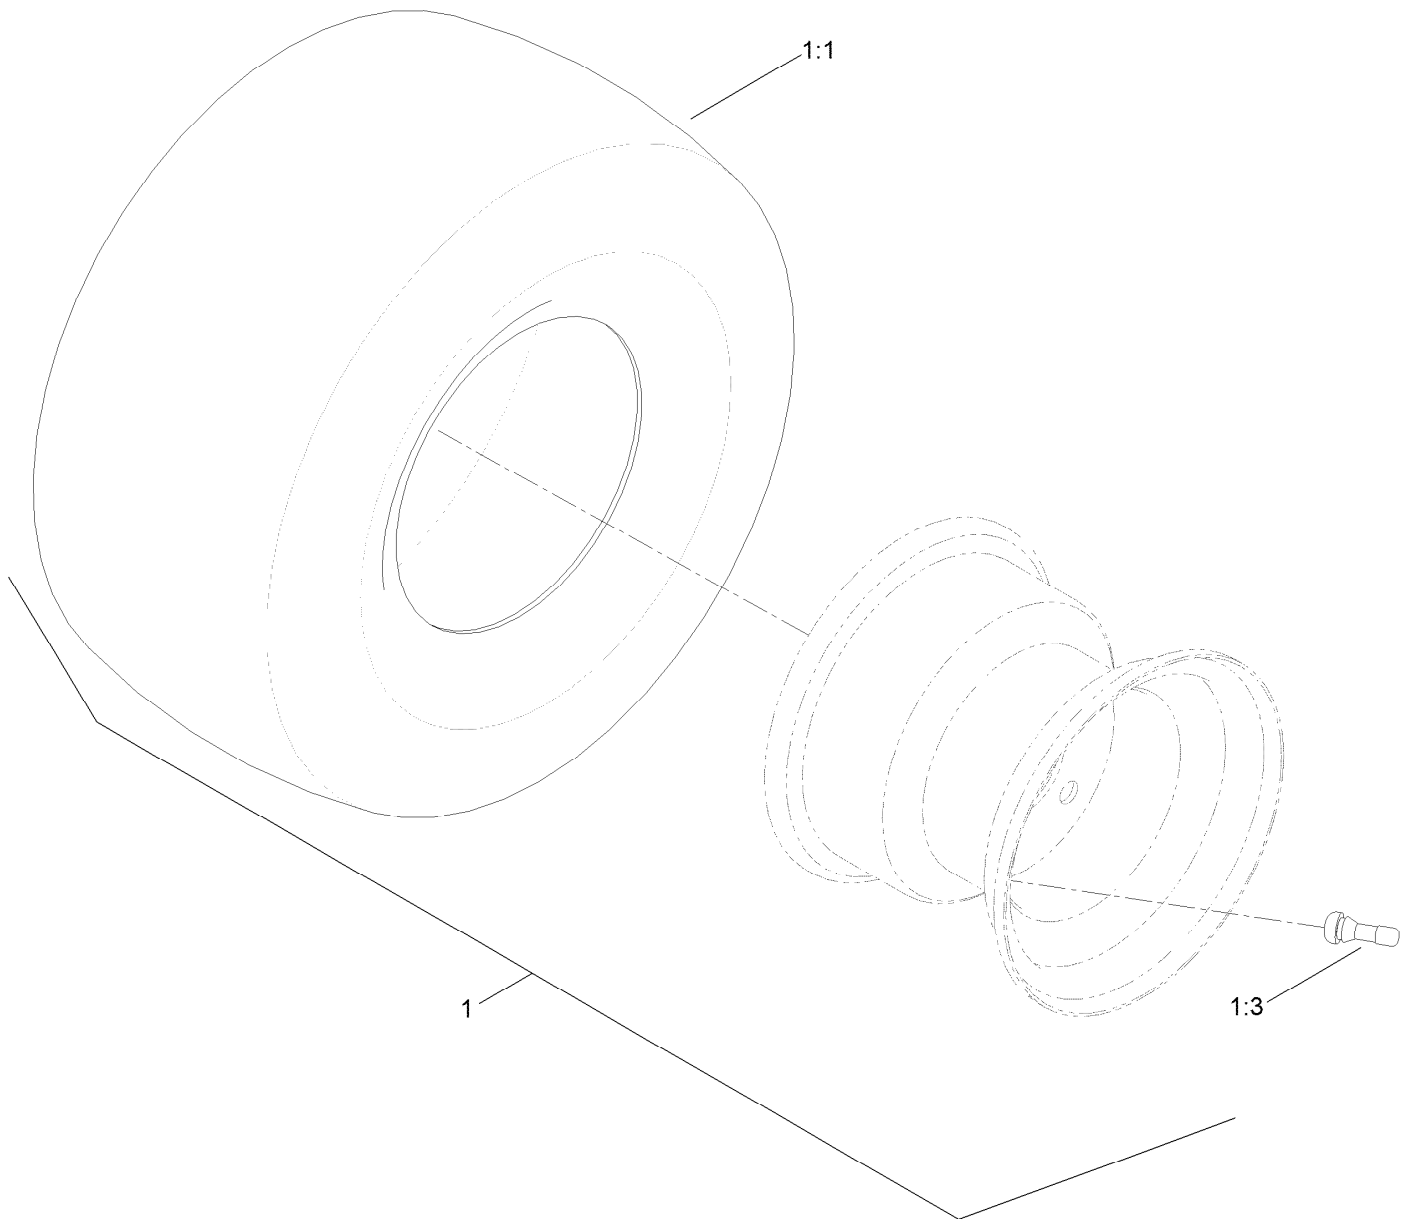


## Rear Tire Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------------|-------------|--------------------|-------------|--------------------|
| 1           | 131-3672           | 2           | 2 Ply Tire And Wheel ASM | 1:3         | 232-27             | 1           | Stem-Valve         |
| 1:1         | 131-3679           | 1           | Tire-2Ply                | 1:99        | 232-37             | 1           | Tube ●             |

● Not illustrated

 
# Seat Pan Assembly

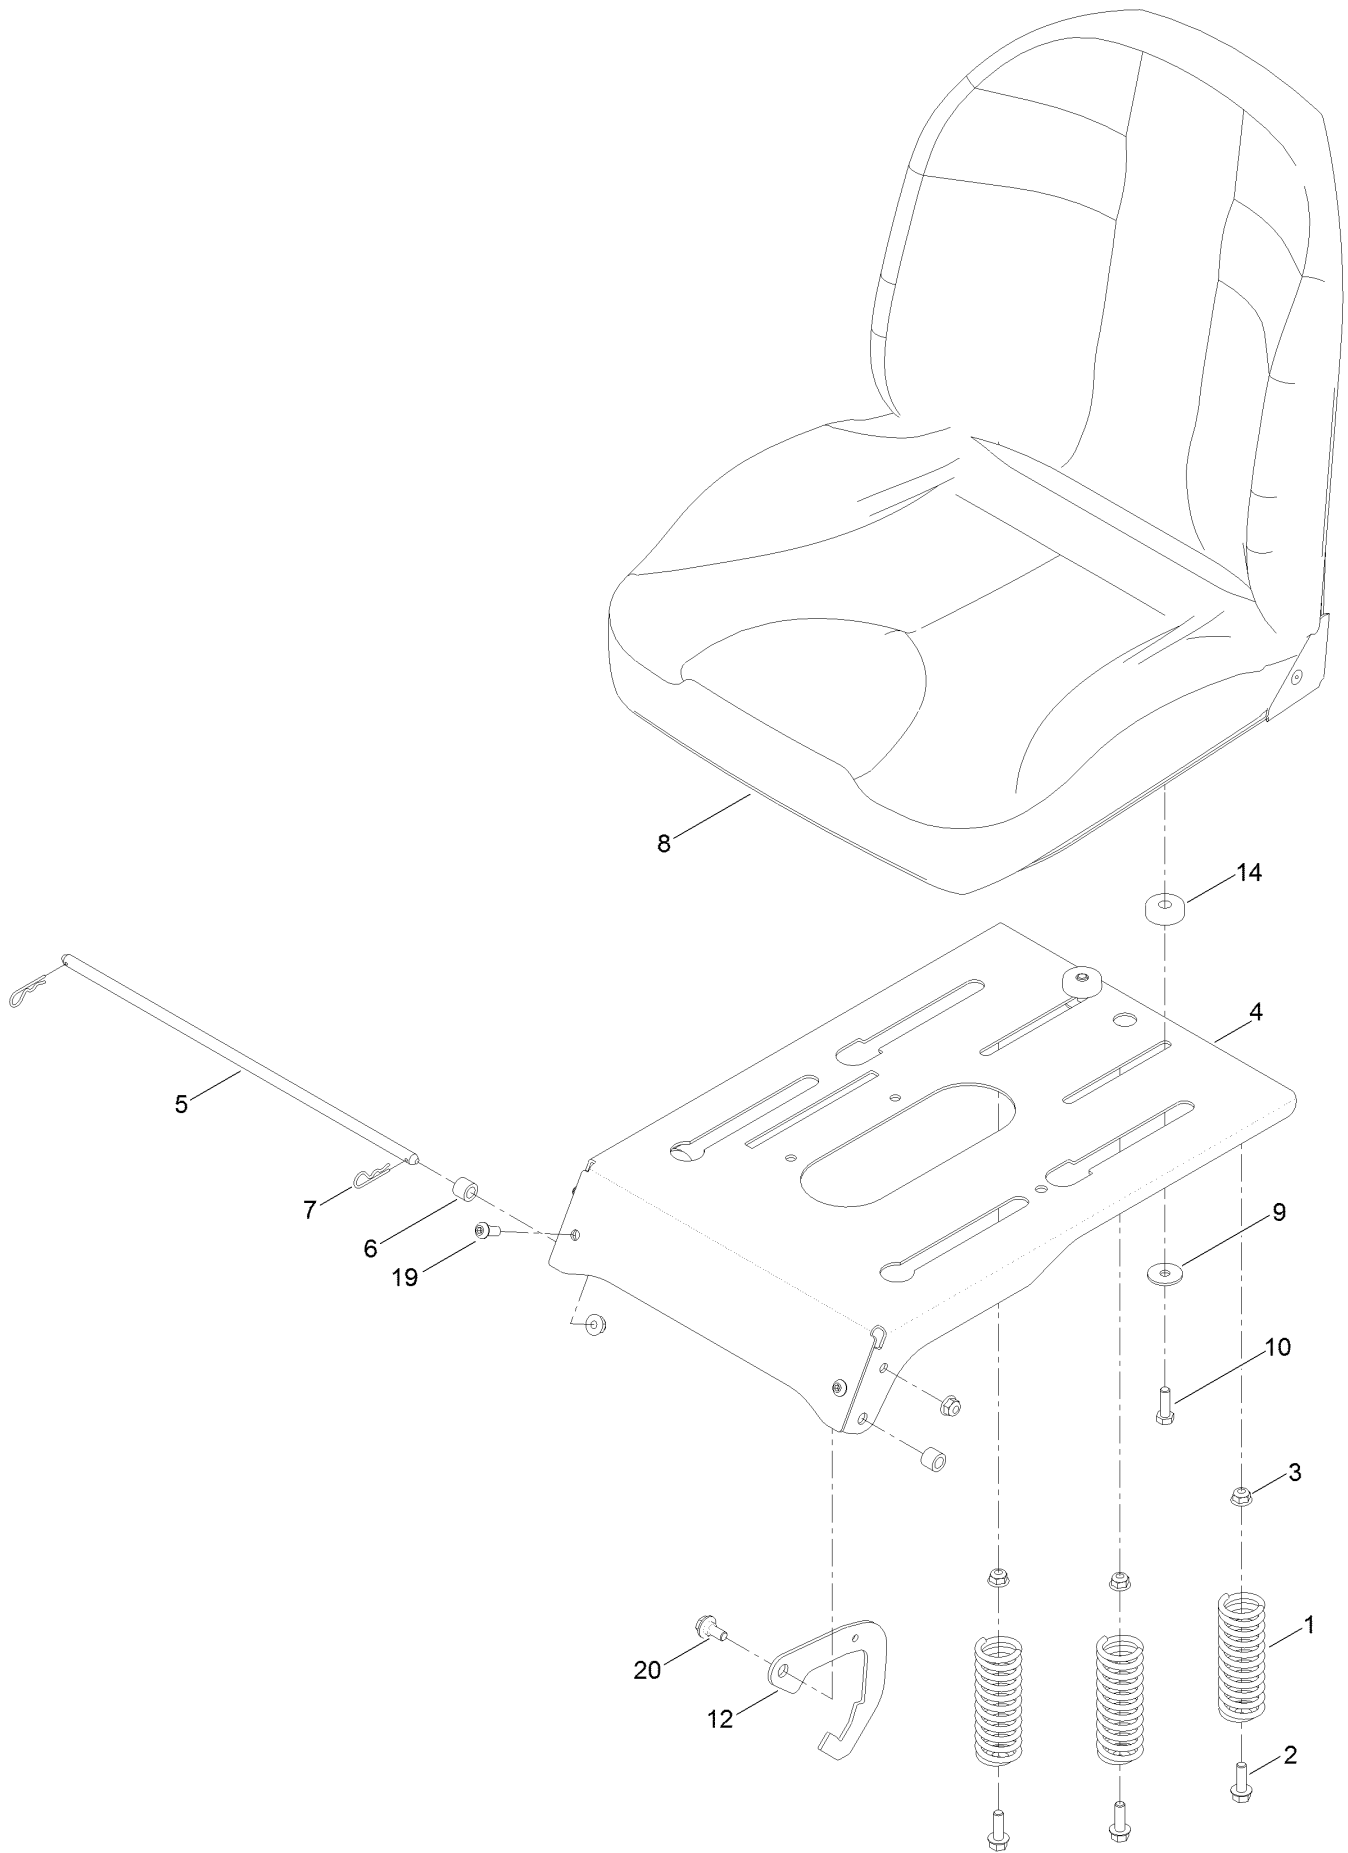

## Seat Pan Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  |
|-------------|--------------------|-------------|---------------------|-------------|--------------------|-------------|---------------------|
| 1           | 92-7054            | 3           | Spring-Compression  | 8           | 136-5575           | 1           | Seat ASM            |
| 2           | 3234-29            | 3           | Screw-HHF           | 9           | 5-4460             | 2           | Washer-Pivot        |
| 3           | 104-8300           | 7           | Nut-HF, NI          | 10          | 322-5              | 2           | Screw-HH            |
| 4           | 136-5571-01        | 1           | Pan-Seat, Deluxe    | 12          | 132-9353           | 2           | Latch-Seat          |
| 5           | 115-4966           | 1           | Rod-Stop            | 14          | 136-5572           | 2           | Bushing-Slide, Seat |
| 6           | 1-413088           | 2           | Bushing-Lever, Lift | 19          | 3274-55            | 2           | Screw-HSBH          |
| 7           | 3290-250           | 2           | Pin-Cotter          | 20          | 19-1470            | 2           | Screw-Shoulder      |

 
# Motion Control Assembly

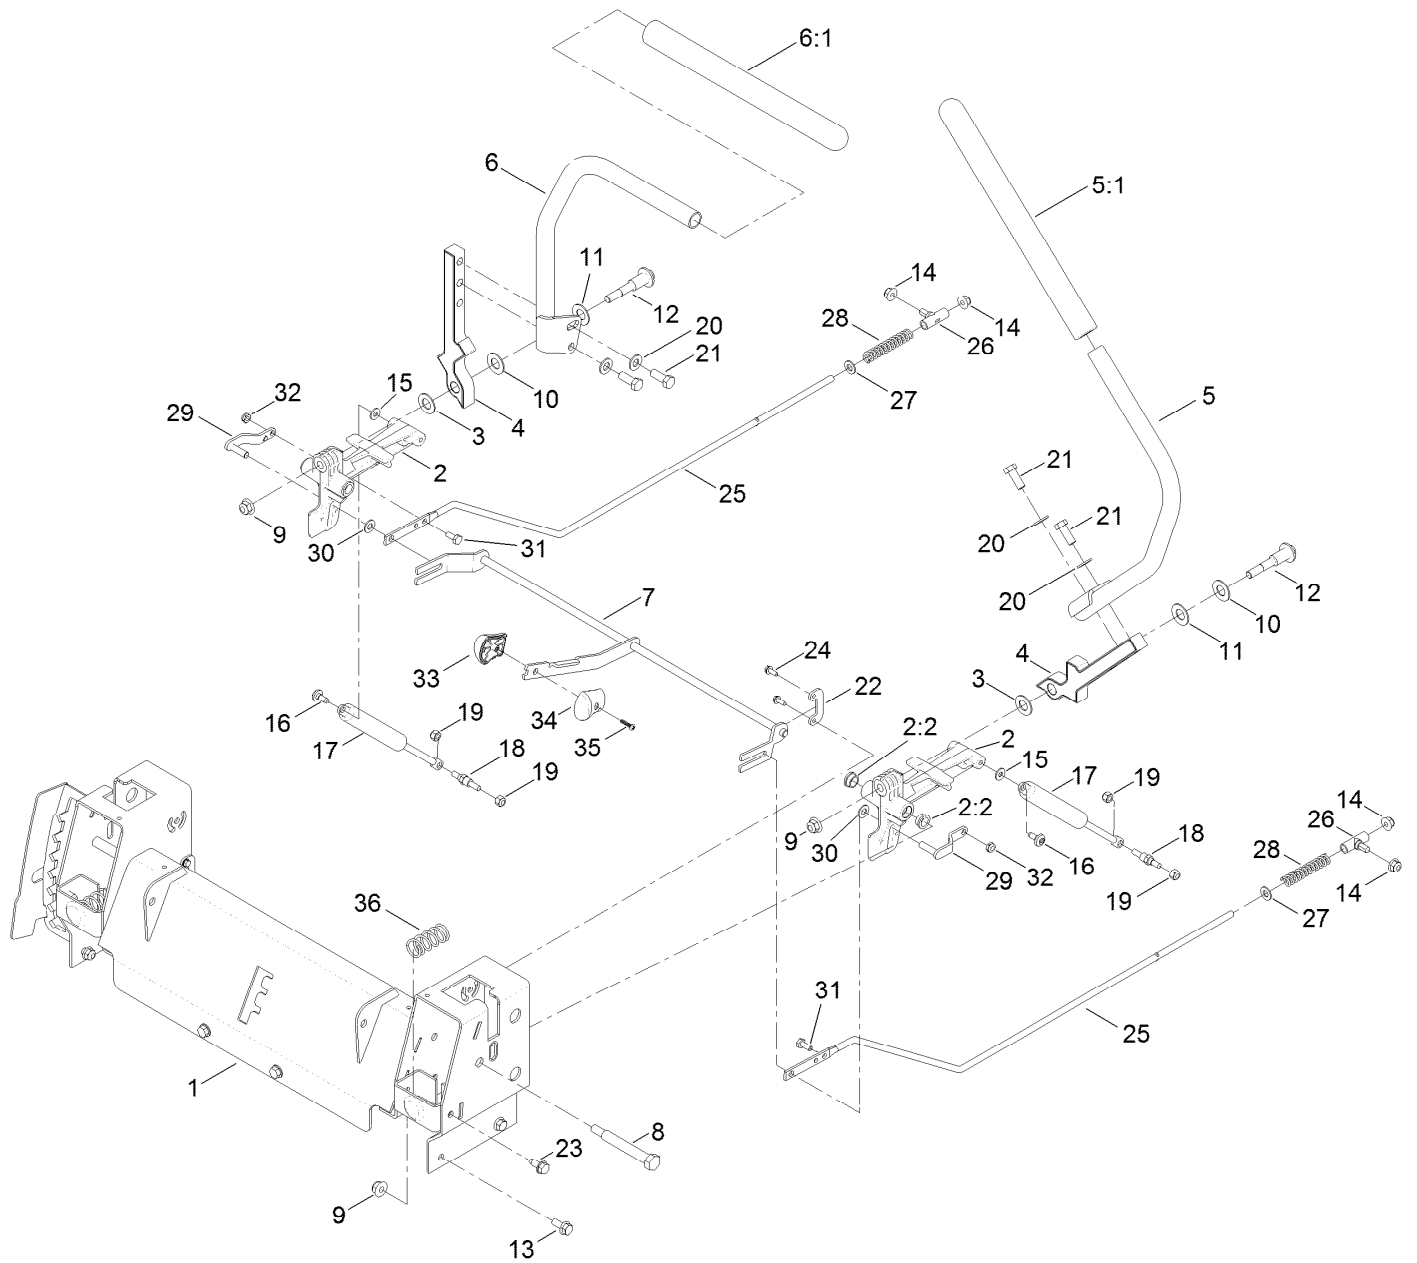

## Motion Control Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|------------------------|
| 1           | 136-4155-03        | 1           | Control Box ASM    | 18          | 110-6810           | 2           | Stud-Damper            |
| 2           | 119-3470           | 2           | Actuator Arm ASM   | 19          | 3296-42            | 4           | Nut-Lock, NI           |
| 2:2         | 256-156            | 2           | Bushing-Flange     | 20          | 3256-24            | 4           | Washer-Flat            |
| 3           | 120-2273           | 2           | Washer-Nylon       | 21          | 323-6              | 4           | Screw-HH               |
| 4           | 115-5098-05        | 2           | Lever-Control      | 22          | 117-5385           | 2           | Retainer               |
| 5           | 121-0730           | 1           | Handle-Control, LH | 23          | 32144-70           | 4           | Screw-HWHTF            |
| 5:1         | 121-0726           | 1           | Grip               | 24          | 32144-1            | 4           | Screw-Taptite          |
| 6           | 121-0731           | 1           | Handle-Control, RH | 25          | 117-5388           | 2           | Rod-Hydro              |
| 6:1         | 121-0726           | 1           | Grip               | 26          | 119-8842           | 2           | Mount-Rod, Hydro       |
| 7           | 131-1062           | 1           | Speed Control ASM  | 27          | 3256-23            | 2           | Washer-Plain           |
| 8           | 115-5099           | 2           | Bolt-Pivot         | 28          | 1-603807           | 2           | Spring-Return, Neutral |
| 9           | 104-8301           | 4           | Nut-HF, NI         | 29          | 119-3303           | 2           | Pin-Rod, Hydro         |
| 10          | 117-1240           | 2           | Washer             | 30          | 93-6079            | 2           | Spacer-Nylon           |
| 11          | 119-8925           | 2           | Washer-Belleville  | 31          | 321-3              | 2           | Screw-HH               |
| 12          | 117-1198           | 2           | Bolt-Pivot         | 32          | 3296-56            | 2           | Nut-Lock, NI           |
| 13          | 3234-47            | 6           | Screw-HHF          | 33          | 119-8935           | 1           | Knob-RH                |
| 14          | 104-8300           | 10          | Nut-HF, NI         | 34          | 119-8936           | 1           | Knob-LH                |
| 15          | 119-8952           | 2           | Washer             | 35          | 94-4496            | 1           | Screw-PPH              |
| 16          | 120-7950           | 2           | Screw-Shoulder     | 36          | 119-8876           | 2           | Spring-Return          |
| 17          | 131-4132           | 2           | Damper             |             |                    |             |                        |
 
# Engine and Muffler Assembly

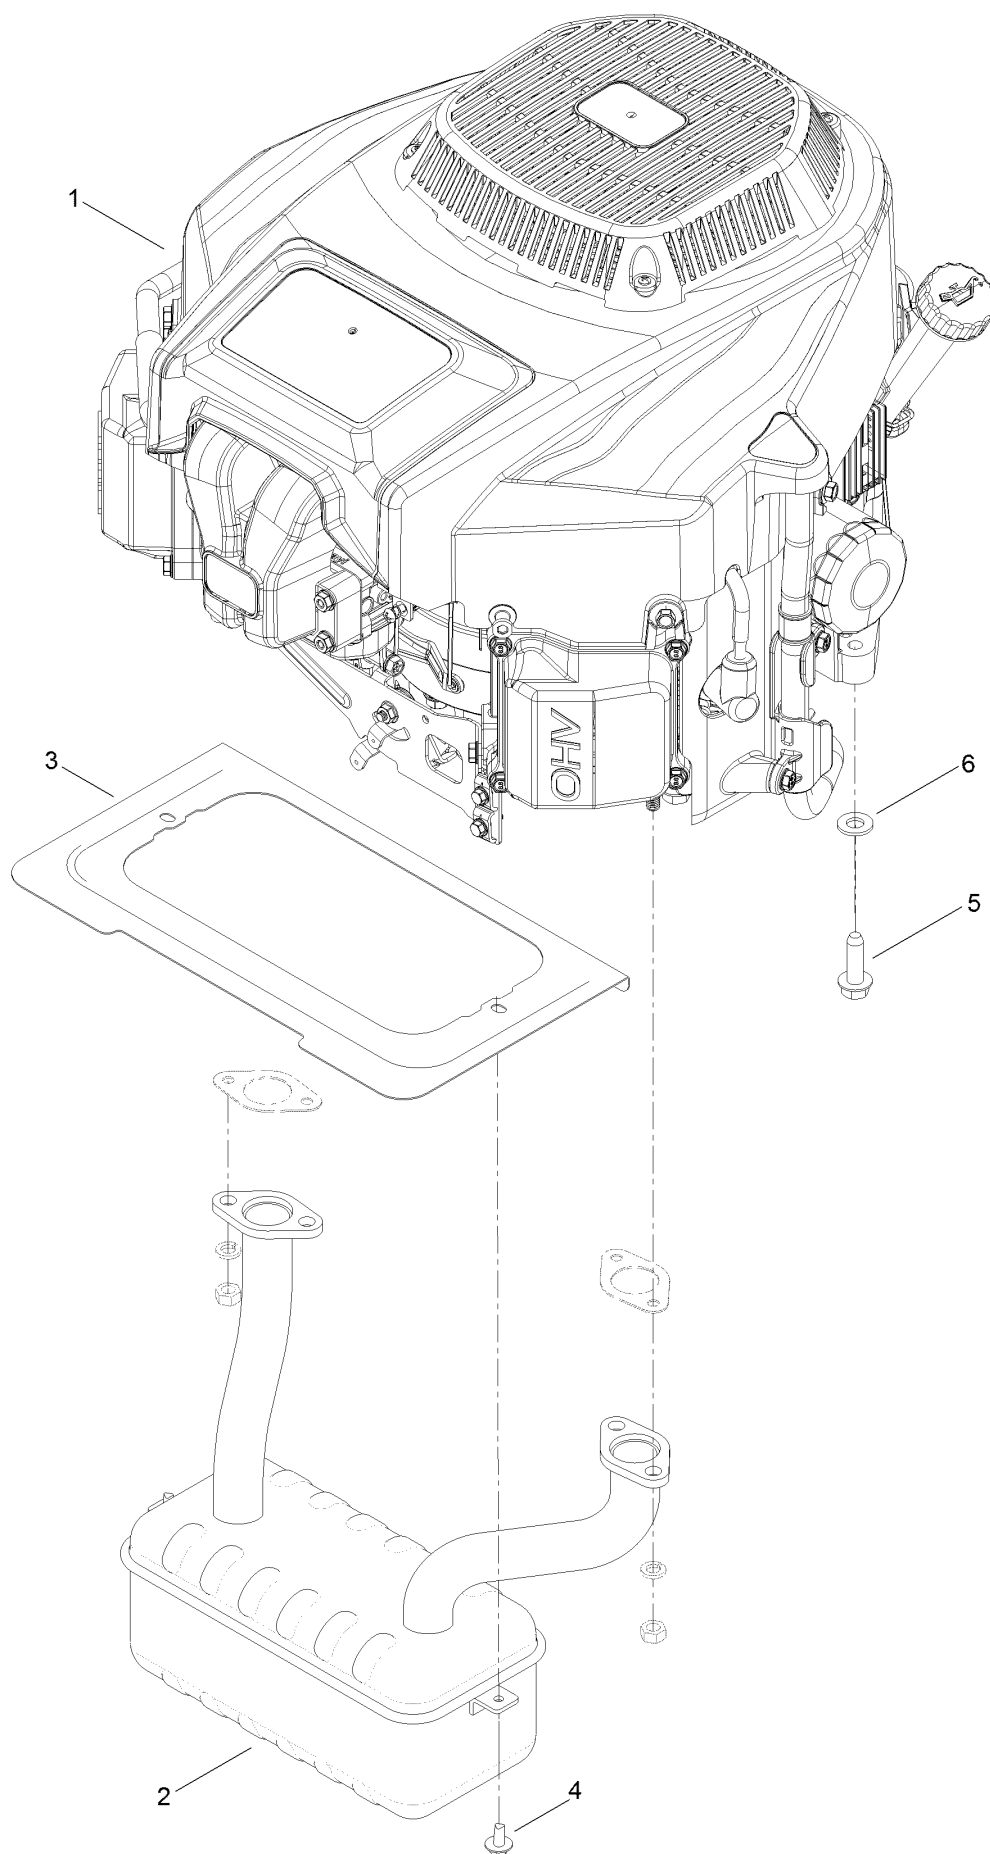


## Engine and Muffler Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 127-9041           | 1           | Engine-2P77F       |
| 2           | 130-6851           | 1           | Muffler            |
| 3           | 131-1071-03        | 1           | Shield-Heat        |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 4           | 46-8560            | 2           | Screw-HHFTF        |
| 5           | 32144-109          | 4           | Screw-Taptite      |
| 6           | 3256-24            | 3           | Washer-Flat        |
 
# Fuel System Assembly

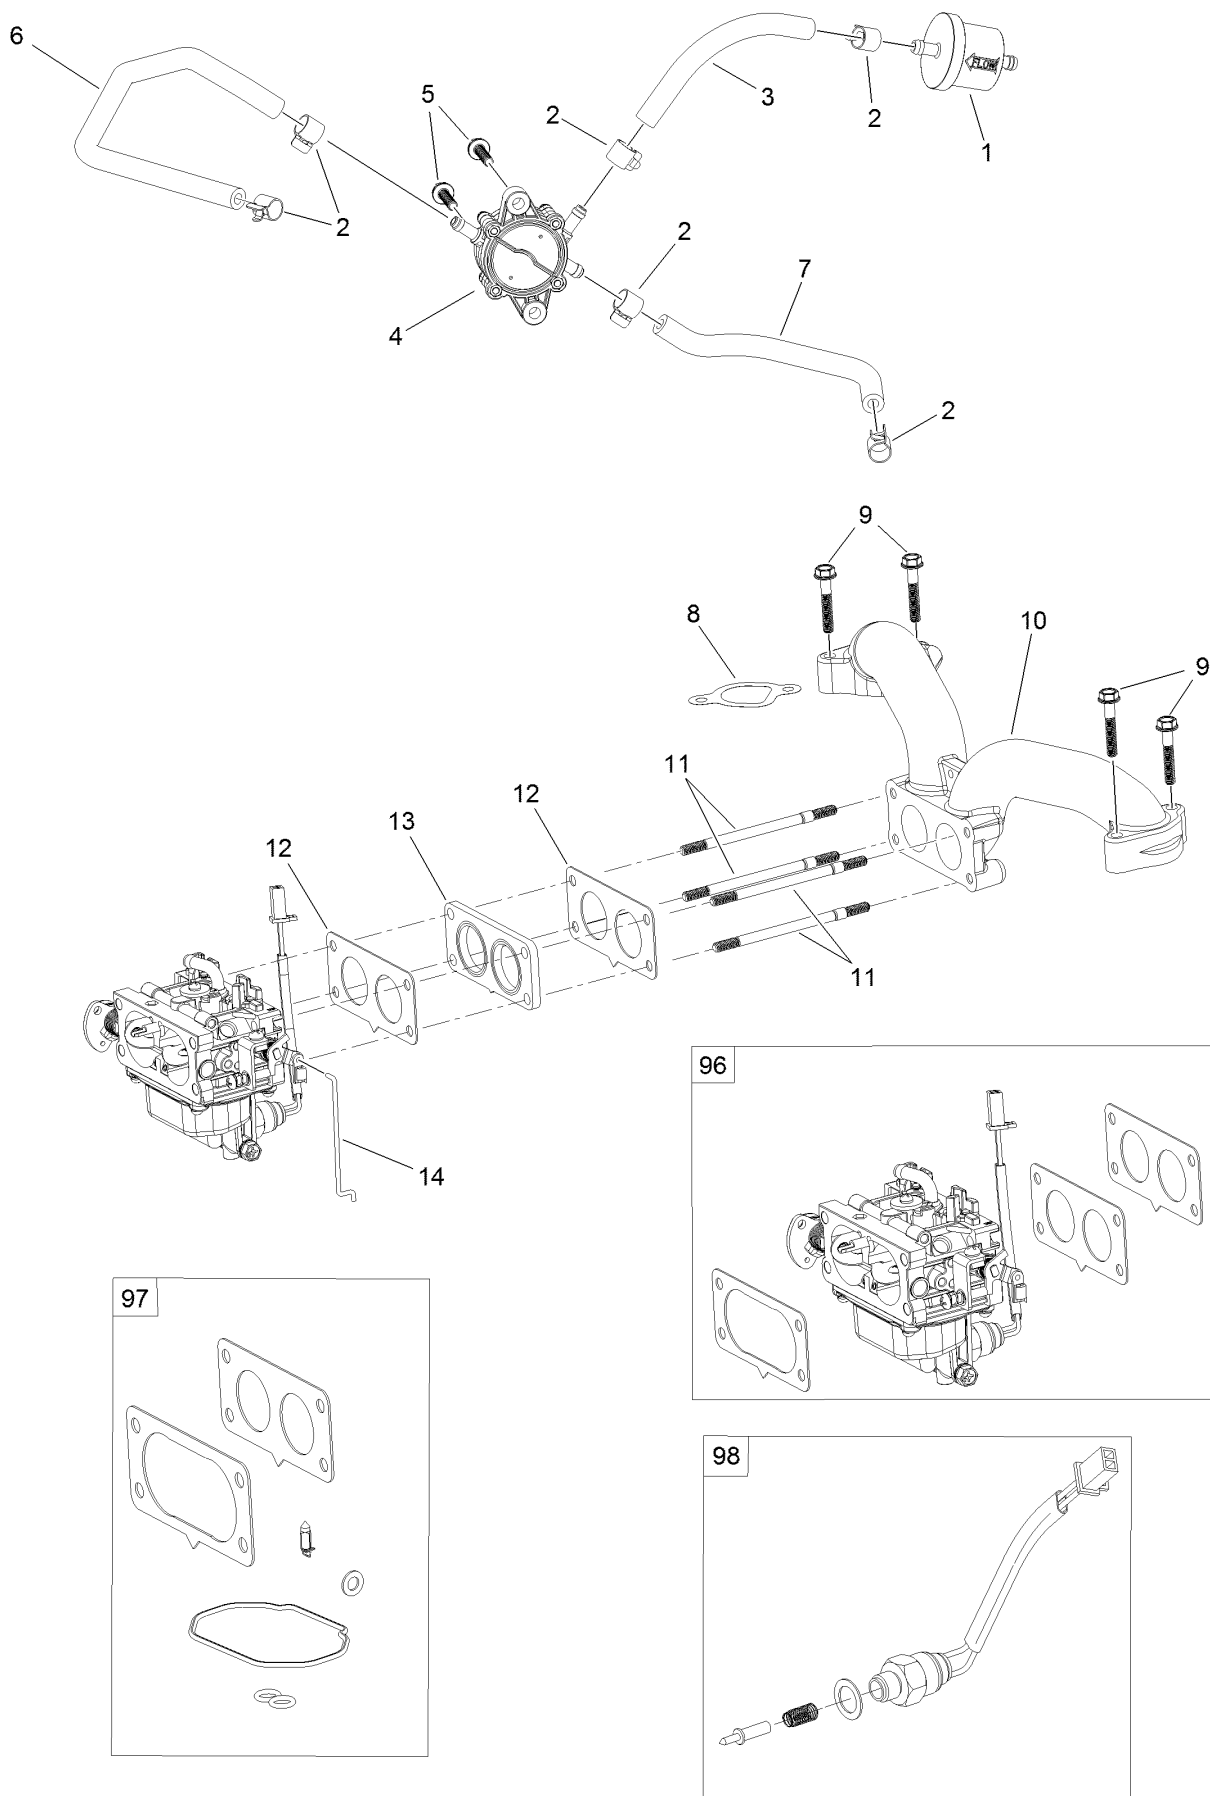


## Fuel System Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>         |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|----------------------------|
| 1           | 133-1563           | 1           | Filter-Fuel        | 10          | 127-9244           | 1           | Manifold-Intake            |
| 2           | 120-4251           | 6           | Clamp-Fuel Line    | 11          | 127-9245           | 4           | Stud                       |
| 3           | 120-4371           | 1           | Line-Fuel          | 12          | 127-9246           | 2           | Gasket-Carburetor          |
| 4           | 127-9206           | 1           | Pump-Fuel          | 13          | 127-9247           | 1           | Insulator-Carburetor       |
| 5           | 120-4225           | 2           | Screw-HHF          | 14          | 127-9248           | 1           | Linkage-Throttle           |
| 6           | 127-9205           | 1           | Hose-Fuel          | 96          | 127-9289           | 1           | Carburetor Replacement Kit |
| 7           | 127-9207           | 1           | Hose-Fuel          | 97          | 127-9290           | 1           | Carburetor Repair Kit      |
| 8           | 127-9230           | 2           | Gasket-Intake      | 98          | 127-9292           | 1           | Solenoid Kit               |
| 9           | 120-4284           | 4           | Screw-HHF          | 99          | 127-9303           | 1           | High Altitude Kit ●        |

● Not illustrated

 
# Carburetor Assembly

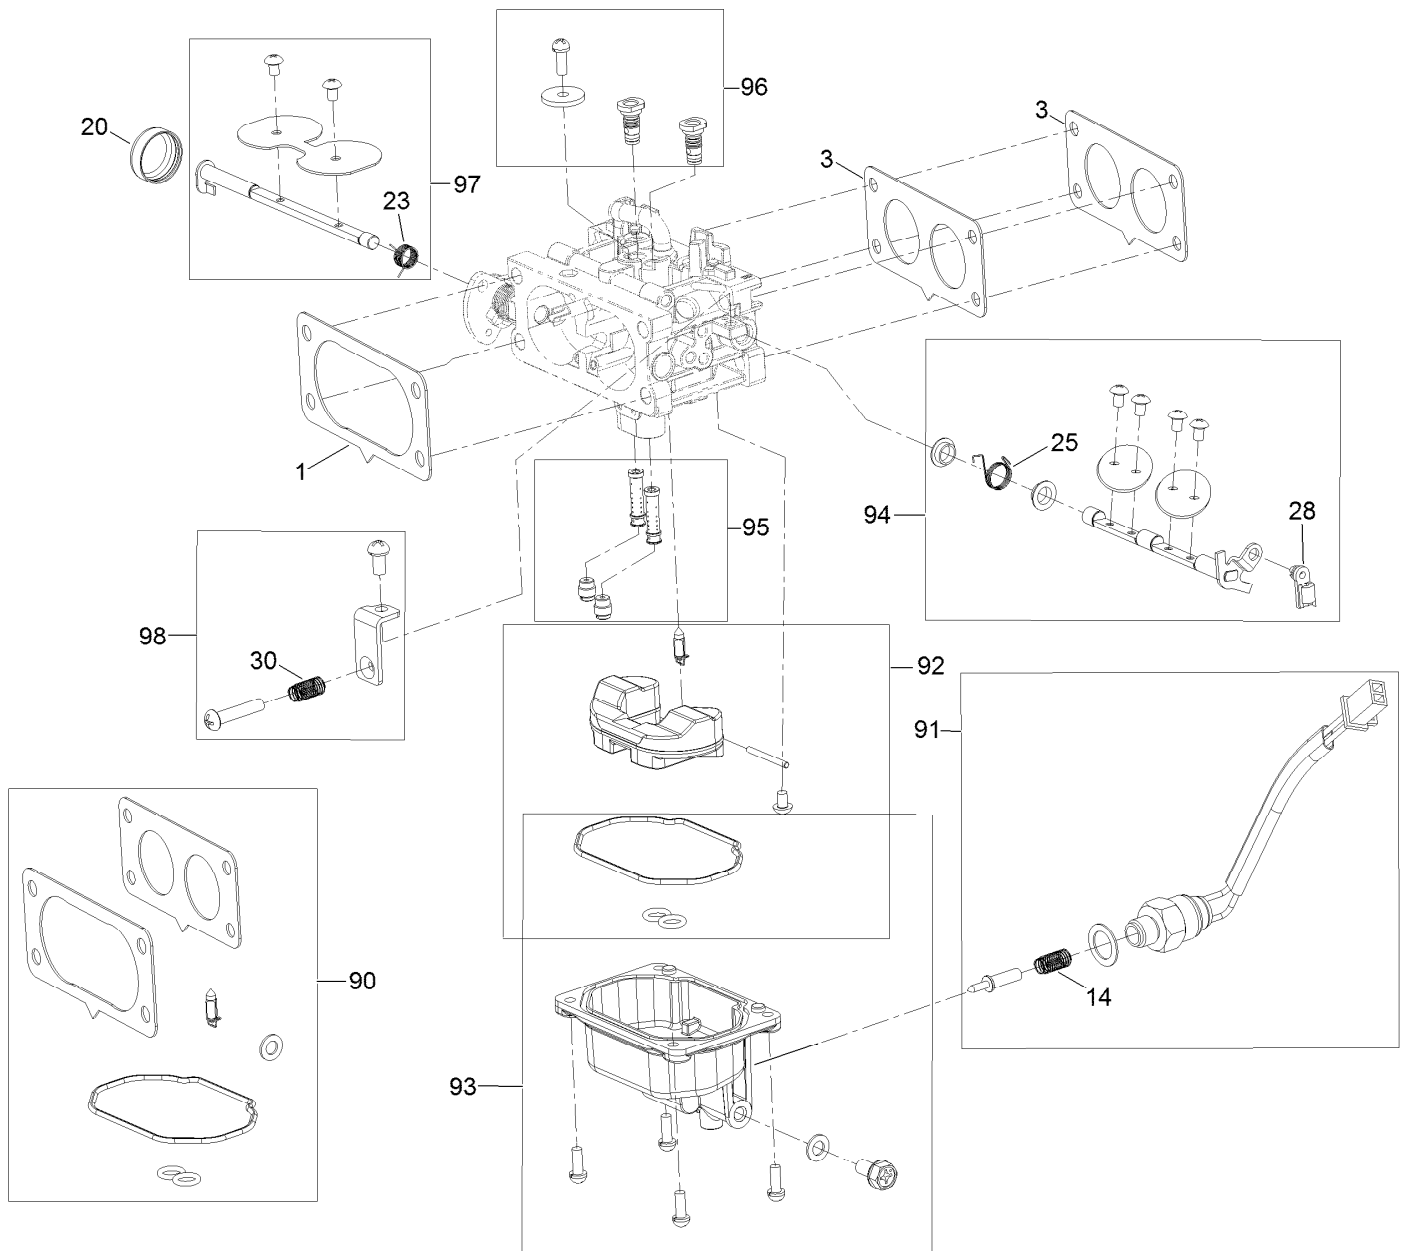

## Carburetor Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|-----------------------|-------------|--------------------|-------------|--------------------|
| 1           | 127-9251           | 1           | Gasket-Carburetor     | 91          | 127-9292           | 1           | Solenoid Kit       |
| 3           | 127-9246           | 2           | Gasket-Carburetor     | 92          | 127-9340           | 1           | Float Kit          |
| 14          | 127-9319           | 1           | Spring                | 93          | 127-9341           | 1           | Bowl Kit           |
| 20          | 127-9325           | 1           | Cover-Shaft, Choke    | 94          | 127-9342           | 1           | Throttle Shaft Kit |
| 23          | 127-9328           | 1           | Spring                | 95          | 127-9343           | 1           | Nozzle And Jet Kit |
| 25          | 127-9330           | 1           | Spring                | 96          | 127-9344           | 1           | Air Jet Kit        |
| 28          | 127-9333           | 1           | Clamp-Lock            | 97          | 127-9345           | 1           | Choke Shaft Kit    |
| 30          | 127-9335           | 1           | Spring                | 98          | 127-9347           | 1           | Idlestop Kit       |
| 90          | 127-9290           | 1           | Carburetor Repair Kit |             |                    |             |                    |


 
# Air Intake and Filtration Assembly

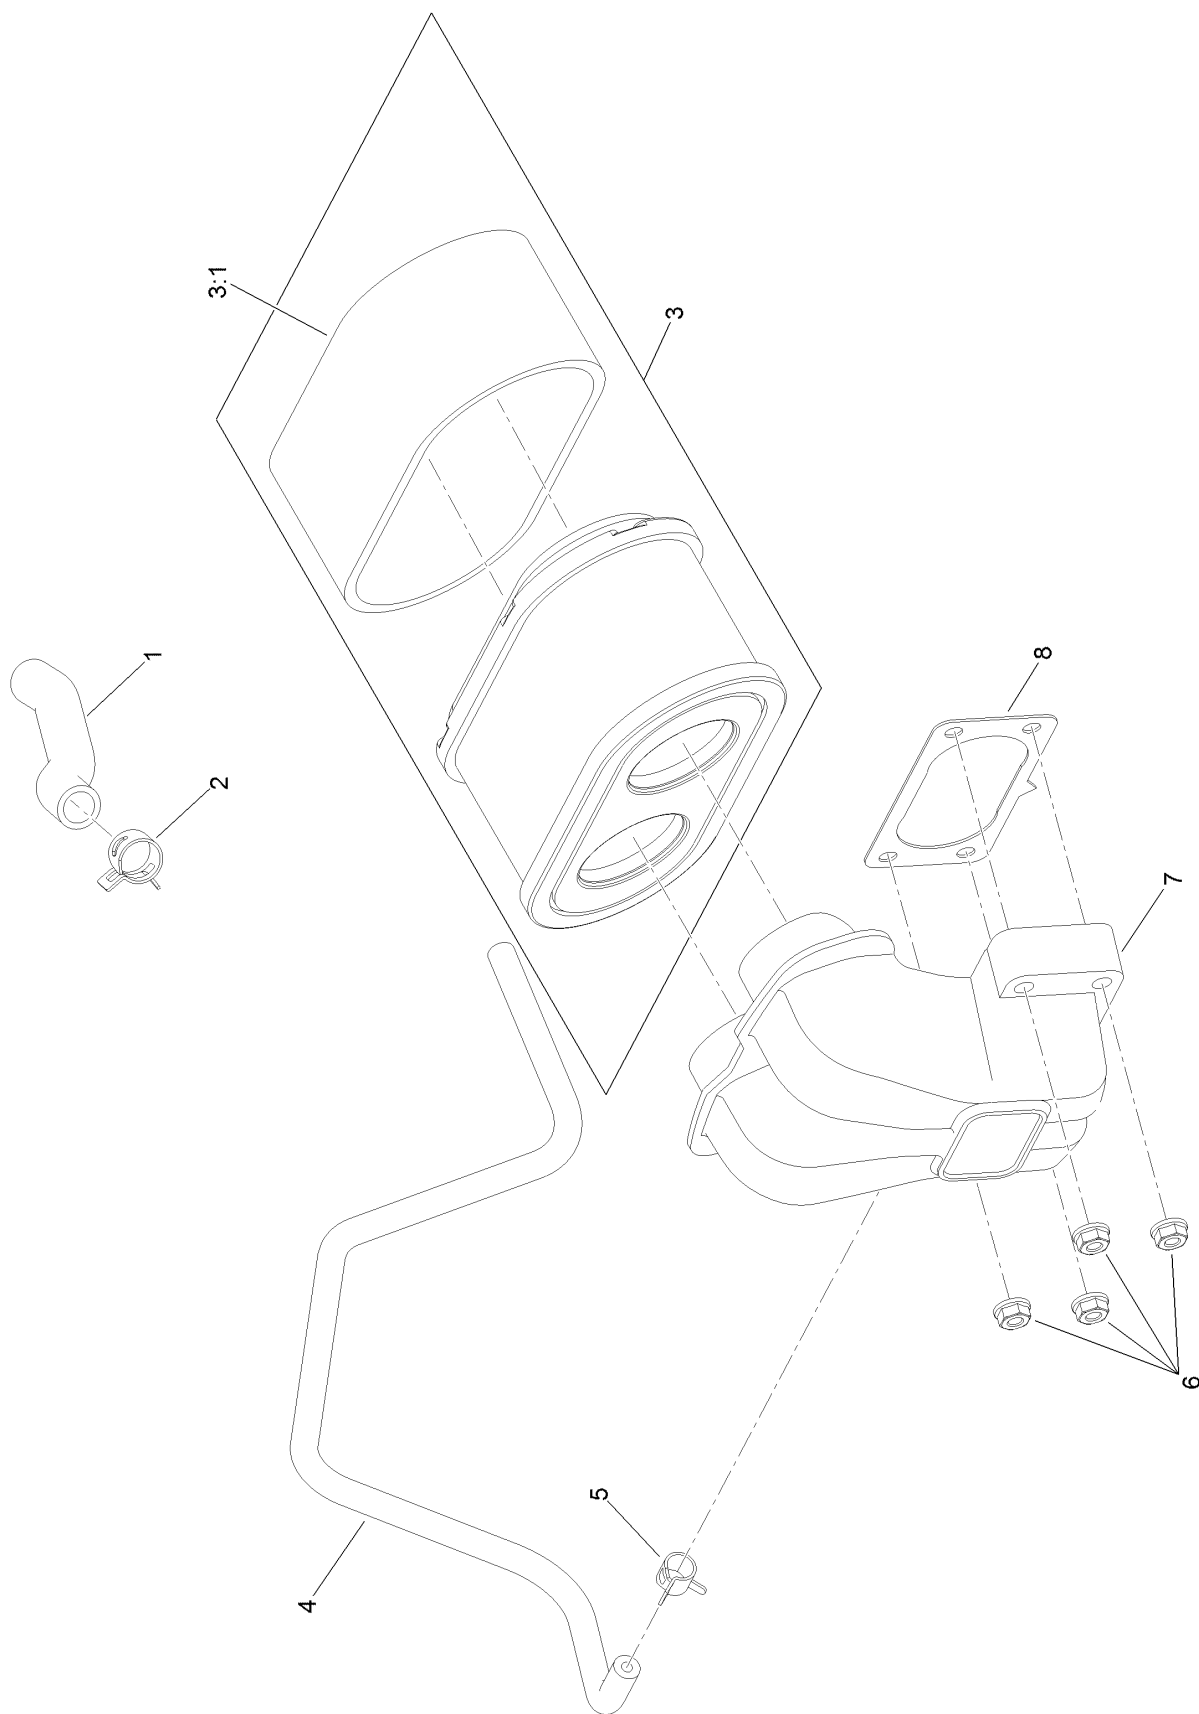

## Air Intake and Filtration Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   |
|-------------|--------------------|-------------|----------------------|-------------|--------------------|-------------|----------------------|
| 1           | 127-9235           | 1           | Tube-Breather        | 5           | 127-9187           | 1           | Clamp-Hose           |
| 2           | 127-9234           | 2           | Clamp-Hose           | 6           | 120-4236           | 4           | Nut-Flange           |
| 3           | 127-9252           | 1           | Filter-Air, Complete | 7           | 127-9047           | 1           | Manifold-Filter, Air |
| 3:1         | 127-9288           | 1           | Filter-Pre, Foam     | 8           | 127-9251           | 1           | Gasket-Carburetor    |
| 4           | 127-9253           | 1           | Hose-Fuel            |             |                    |             |                      |
  
# Ignition and Electrical Assembly

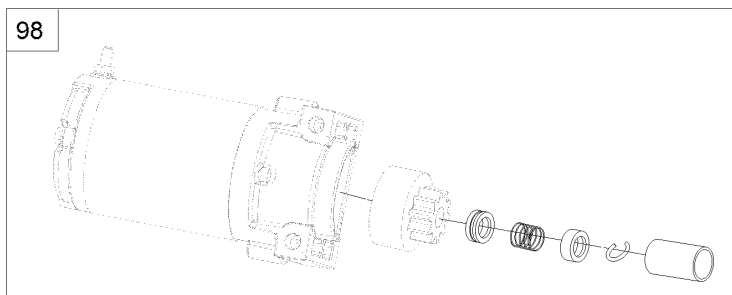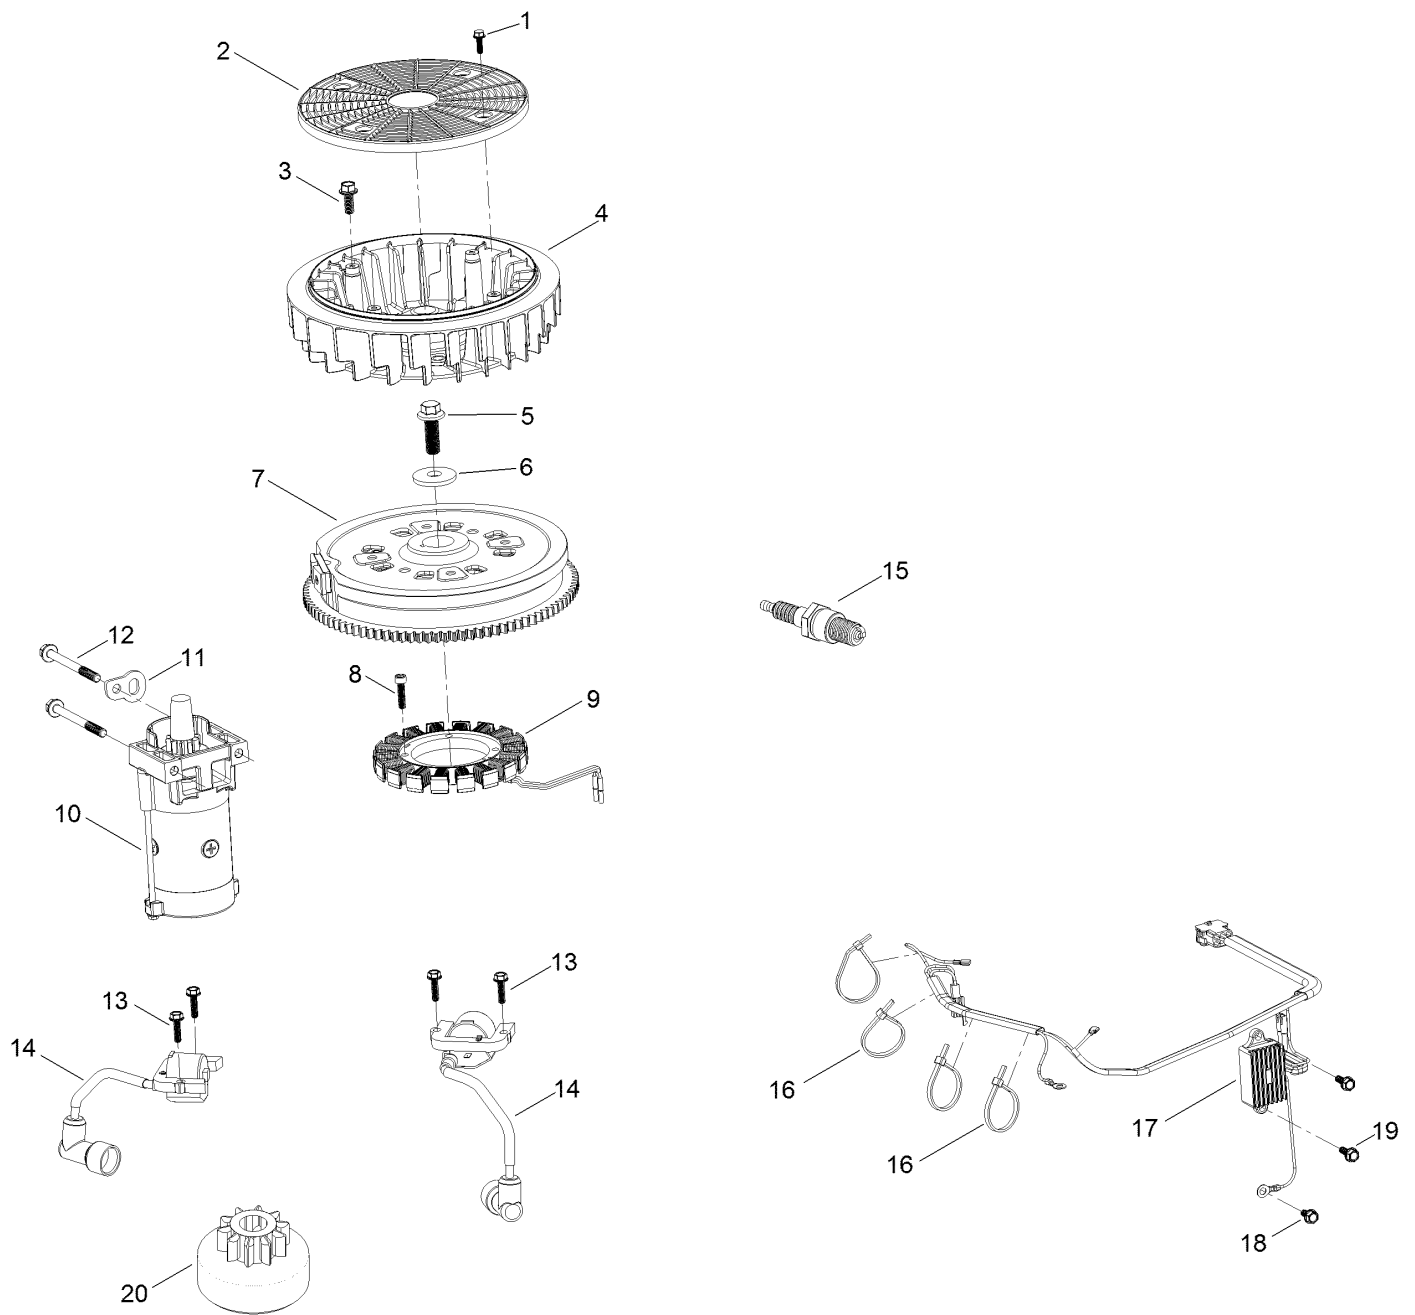


## Ignition and Electrical Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 127-9197           | 4           | Screw-HWH          |
| 2           | 127-9198           | 1           | Screen-Rotating    |
| 3           | 127-9199           | 4           | Screw-HWH          |
| 4           | 127-9200           | 1           | Fan-Cooling        |
| 5           | 127-9201           | 1           | Screw-HWH          |
| 6           | 127-9202           | 1           | Washer-Flat        |
| 7           | 127-9306           | 1           | Flywheel           |
| 8           | 127-9210           | 4           | Screw-HSH          |
| 9           | 127-9211           | 1           | Alternator         |
| 10          | 133-9828           | 1           | Motor-Starter      |
| 11          | 127-9208           | 1           | Bracket-Lift       |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>             |
|-------------|--------------------|-------------|--------------------------------|
| 12          | 120-4231           | 2           | Screw-HHF                      |
| 13          | 121-0007           | 4           | Bolt-Flange                    |
| 14          | 127-9216           | 2           | Ignition Coil ASM              |
| 15          | 81-3250            | 2           | Spark Plug                     |
| 16          | 127-9220           | 4           | Tie-Zip                        |
| 17          | 127-9219           | 1           | Regulator-Voltage<br>W/Harness |
| 18          | 120-4216           | 1           | Screw-HHF                      |
| 19          | 120-4232           | 2           | Screw-HHF                      |
| 20          | 133-1562           | 1           | Pinion-Starter                 |
| 98          | 133-1566           | 1           | Starter Repair Kit             |

 
# Crankcase and Crankshaft Assembly

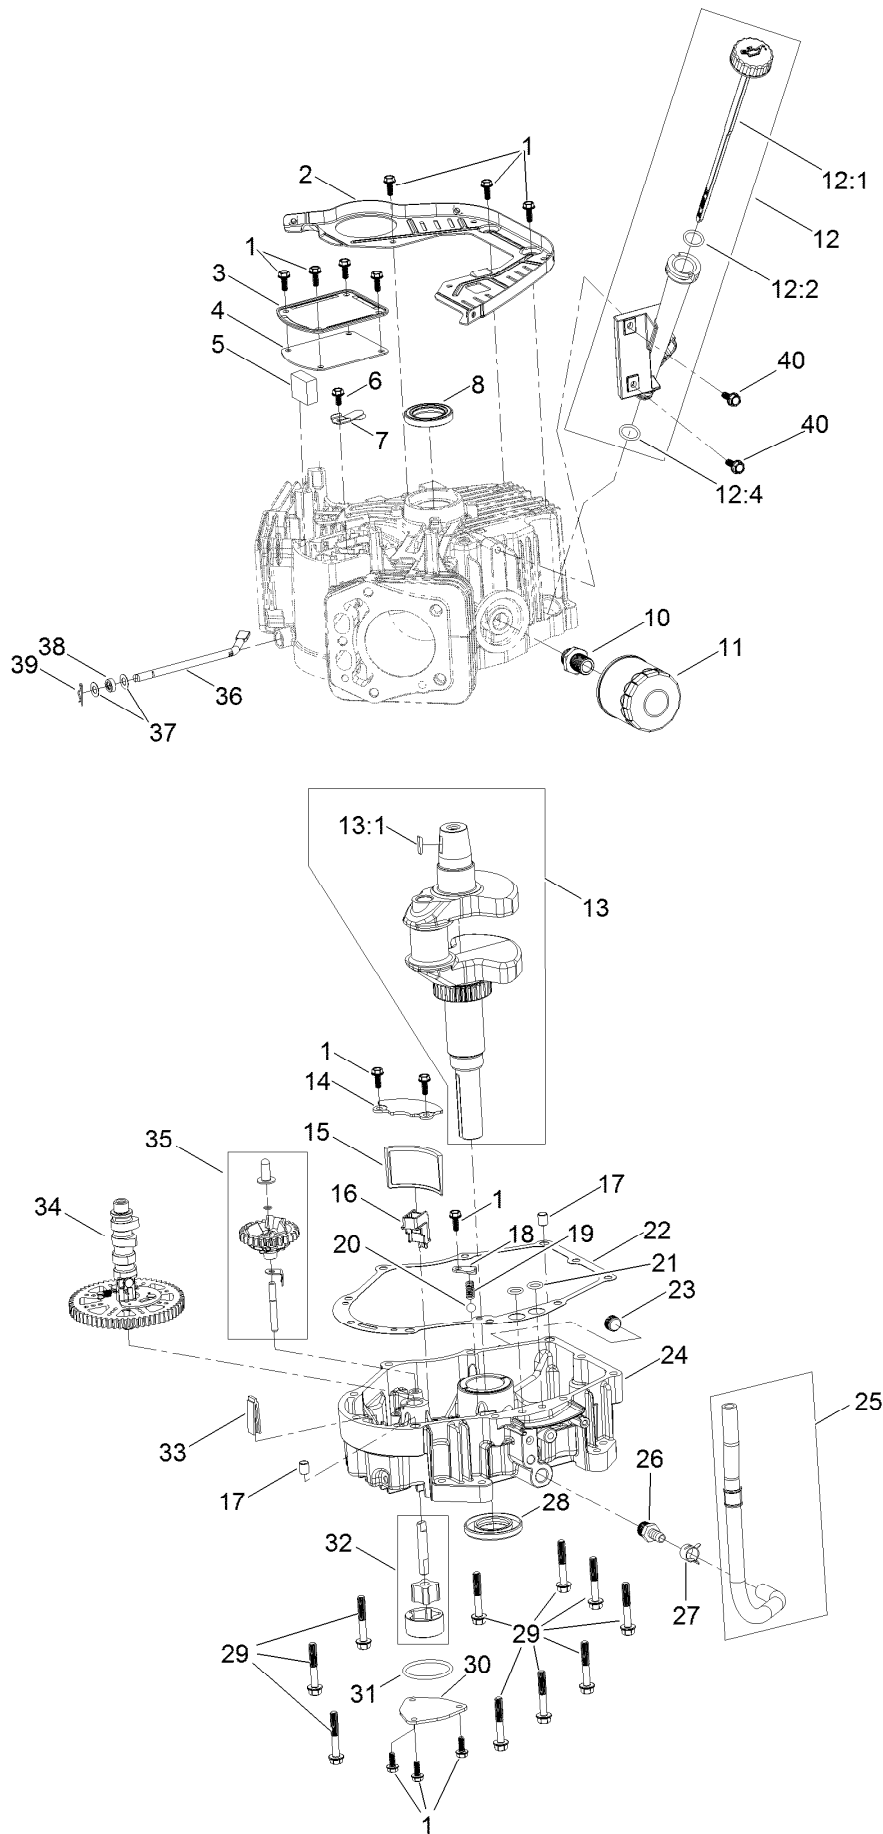

## Crankcase and Crankshaft Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      |
|-------------|--------------------|-------------|---------------------|-------------|--------------------|-------------|-------------------------|
| 1           | 120-4232           | 14          | Screw-HHF           | 20          | 127-9266           | 1           | Valve-Ball              |
| 2           | 127-9212           | 1           | Baffle              | 21          | 120-4262           | 2           | O-Ring                  |
| 3           | 127-9213           | 1           | Cover-Breather      | 22          | 127-9267           | 1           | Gasket-Cover, Crankcase |
| 4           | 127-9214           | 1           | Gasket-Breather     | 23          | 133-9805           | 1           | Plug-Drain              |
| 5           | 127-9215           | 1           | Filter-Breather     | 24          | 127-9268           | 1           | Cover-Crankcase         |
| 6           | 120-4216           | 1           | Screw-HHF           | 25          | 127-9293           | 1           | Oil Drain Hose ASM      |
| 7           | 127-9217           | 1           | Valve-Breather      | 26          | 127-9275           | 1           | Fitting-Hose            |
| 8           | 120-4267           | 1           | Seal-Oil            | 27          | 127-9276           | 1           | Clamp-Hose              |
| 10          | 120-4346           | 1           | Adaptor-Filter, Oil | 28          | 127-9271           | 1           | Seal                    |
| 11          | 120-4276           | 1           | Filter-Oil          | 29          | 121-0473           | 10          | Screw-HHF               |
| 12          | 127-9218           | 1           | Oil Tube ASM        | 30          | 127-9274           | 1           | Cover-Oil Pump          |
| 12:1        | 127-9283           | 1           | Dipstick            | 31          | 127-9273           | 1           | O-Ring                  |
| 12:2        | 127-9284           | 1           | O-Ring              | 32          | 127-9272           | 1           | Oil Pump ASM            |
| 12:4        | 127-9286           | 1           | O-Ring              | 33          | 120-4275           | 1           | Deflector-Oil, Rubber   |
| 13          | 127-9255           | 1           | Crankshaft          | 34          | 133-1568           | 1           | Camshaft                |
| 13:1        | 120-4320           | 1           | Key-Woodruff        | 35          | 133-9807           | 1           | Governor ASM            |
| 14          | 127-9261           | 1           | Cover-Screen, Oil   | 36          | 127-9238           | 1           | Rod-Governor            |
| 15          | 127-9262           | 1           | Screen-Oil          | 37          | 120-4258           | 2           | Washer-Plain            |
| 16          | 127-9263           | 1           | Retainer-Screen     | 38          | 120-4257           | 1           | Seal-Oil                |
| 17          | 120-4274           | 2           | Pin-Dowel           | 39          | 120-4256           | 1           | Pin-Hair                |
| 18          | 127-9264           | 1           | Plate-Retainer      | 40          | 120-4232           | 2           | Screw-HHF               |
| 19          | 127-9265           | 1           | Spring              |             |                    |             |                         |
 
# Governor Control Assembly



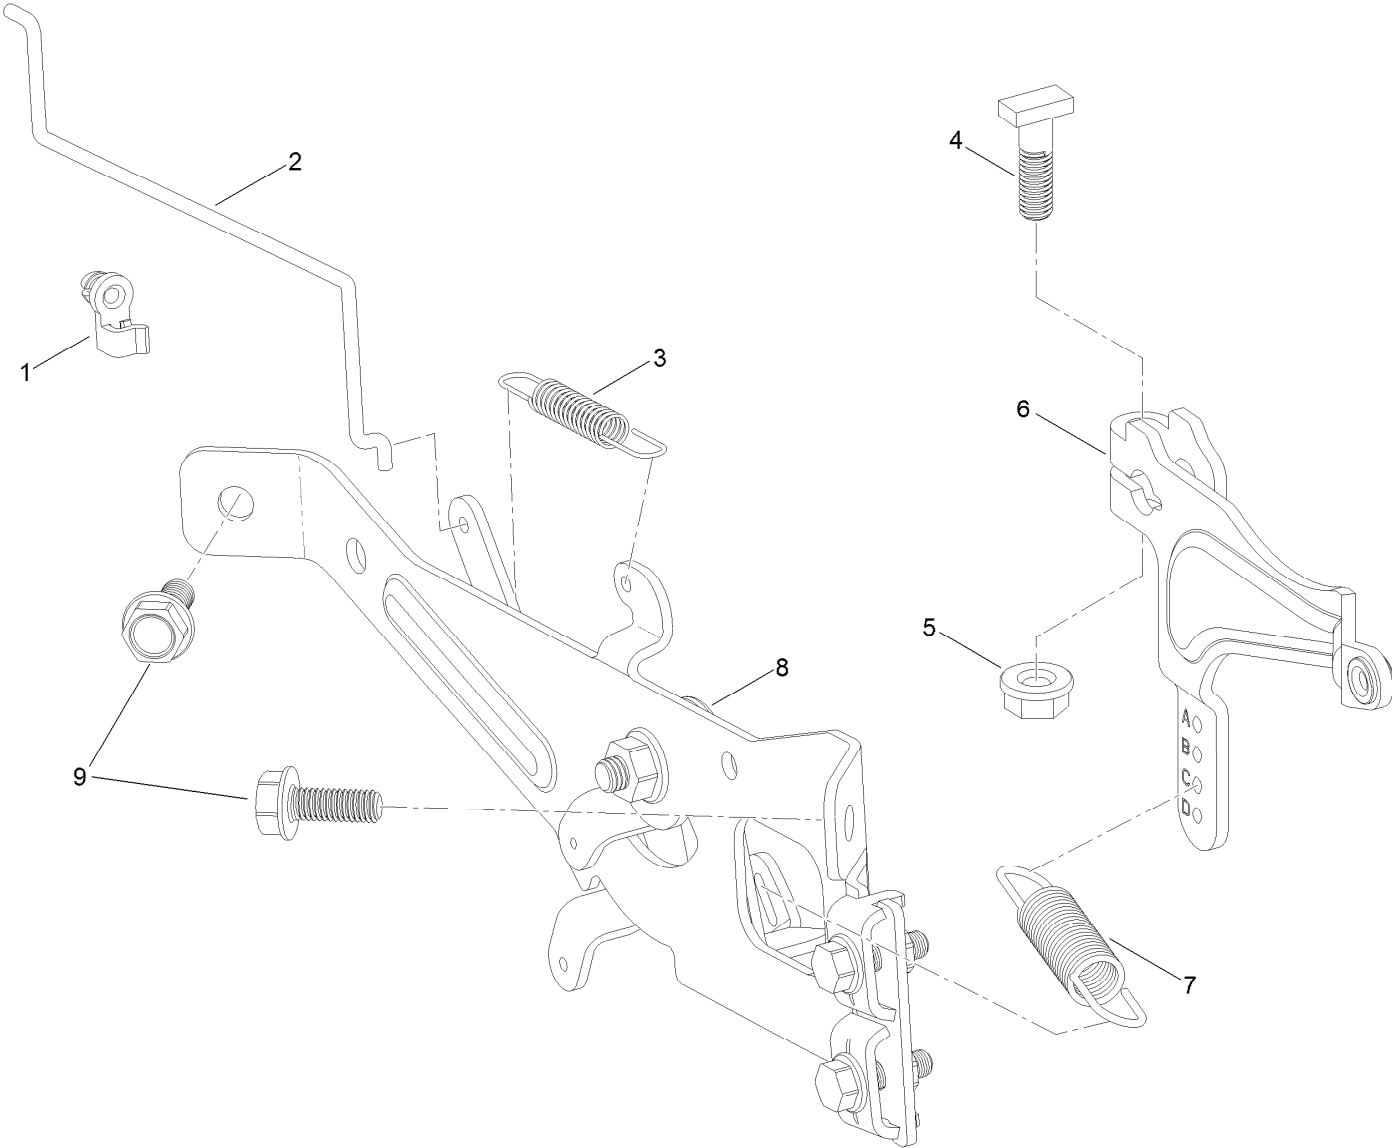


## Governor Control Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 127-9250           | 1           | Clip-Linkage       |
| 2           | 127-9242           | 1           | Linkage-Choke      |
| 3           | 127-9241           | 1           | Spring-Governor    |
| 4           | 120-4238           | 1           | Bolt-Arm, Governor |
| 5           | 120-4236           | 1           | Nut-Flange         |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 6           | 127-9239           | 1           | Arm-Governor       |
| 7           | 133-9809           | 1           | Spring-Governor    |
| 8           | 133-1570           | 1           | Control Plate ASM  |
| 9           | 120-4232           | 2           | Screw-HHF          |

   
## Piston and Cylinder Head Assembly

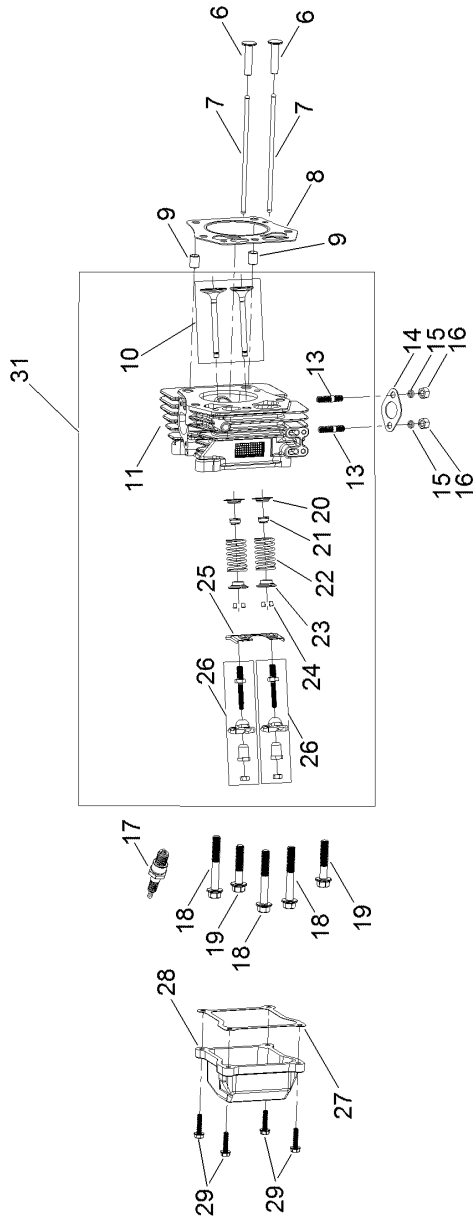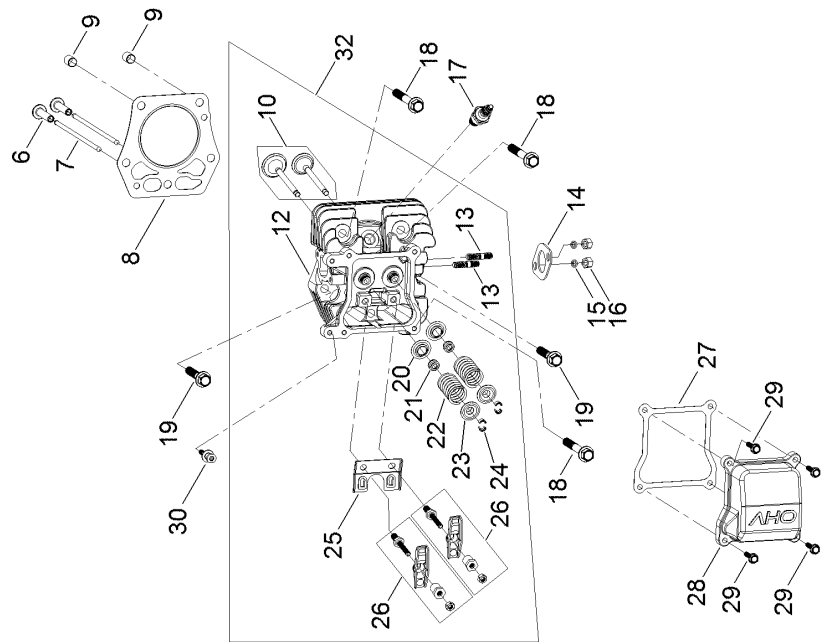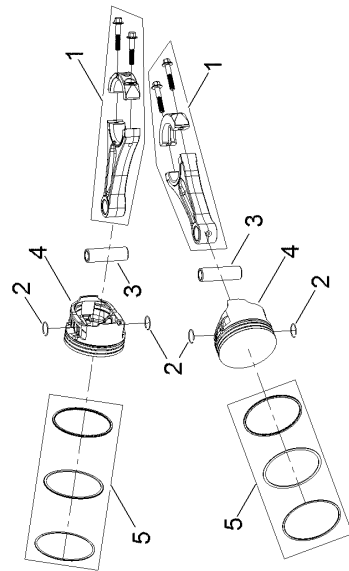

## Piston and Cylinder Head Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     |
|-------------|--------------------|-------------|-----------------------|-------------|--------------------|-------------|------------------------|
| 1           | 127-9256           | 2           | Connecting Rod ASM    | 17          | 81-3250            | 2           | Spark Plug             |
| 2           | 127-9258           | 4           | Clip-Pin, Piston      | 18          | 127-9231           | 6           | Screw-HWH              |
| 3           | 127-9257           | 2           | Pin-Piston            | 19          | 127-9232           | 4           | Screw-HWH              |
| 4           | 127-9259           | 2           | Piston                | 20          | 120-4303           | 4           | Seat-Spring, Valve     |
| 5           | 127-9260           | 2           | Piston Ring Set       | 21          | 120-4304           | 4           | Seal-Stem, Valve       |
| 6           | 127-9224           | 4           | Lifter-Valve          | 22          | 120-4305           | 4           | Spring-Valve           |
| 7           | 127-9225           | 4           | Rod-Push              | 23          | 120-4306           | 4           | Retainer-Spring, Valve |
| 8           | 127-9226           | 2           | Gasket-Head, Cylinder | 24          | 120-4307           | 8           | Keeper-Valve           |
| 9           | 127-9227           | 4           | Pin-Dowel             | 25          | 127-9233           | 2           | Plate-Guide, Push Rod  |
| 10          | 127-9228           | 2           | Valve Set             | 26          | 127-9294           | 4           | Rocker Arm ASM         |
| 11          | 127-9229           | 1           | Head-Cylinder         | 27          | 127-9295           | 2           | Gasket-Valve Cover     |
| 12          | 127-9254           | 1           | Head-Cylinder         | 28          | 127-9050           | 2           | Cover-Valve            |
| 13          | 121-0464           | 4           | Stud-Exhaust          | 29          | 120-4225           | 8           | Screw-HHF              |
| 14          | 120-4317           | 2           | Gasket-Exhaust        | 30          | 120-4214           | 1           | Screw-Shoulder, HH     |
| 15          | 127-9279           | 4           | Washer-Lock, Split    | 31          | 133-9819           | 1           | Right Head ASM         |
| 16          | 121-0199           | 4           | Nut-HH                | 32          | 133-9820           | 1           | Left Head ASM          |
 
# Blower Housing Assembly

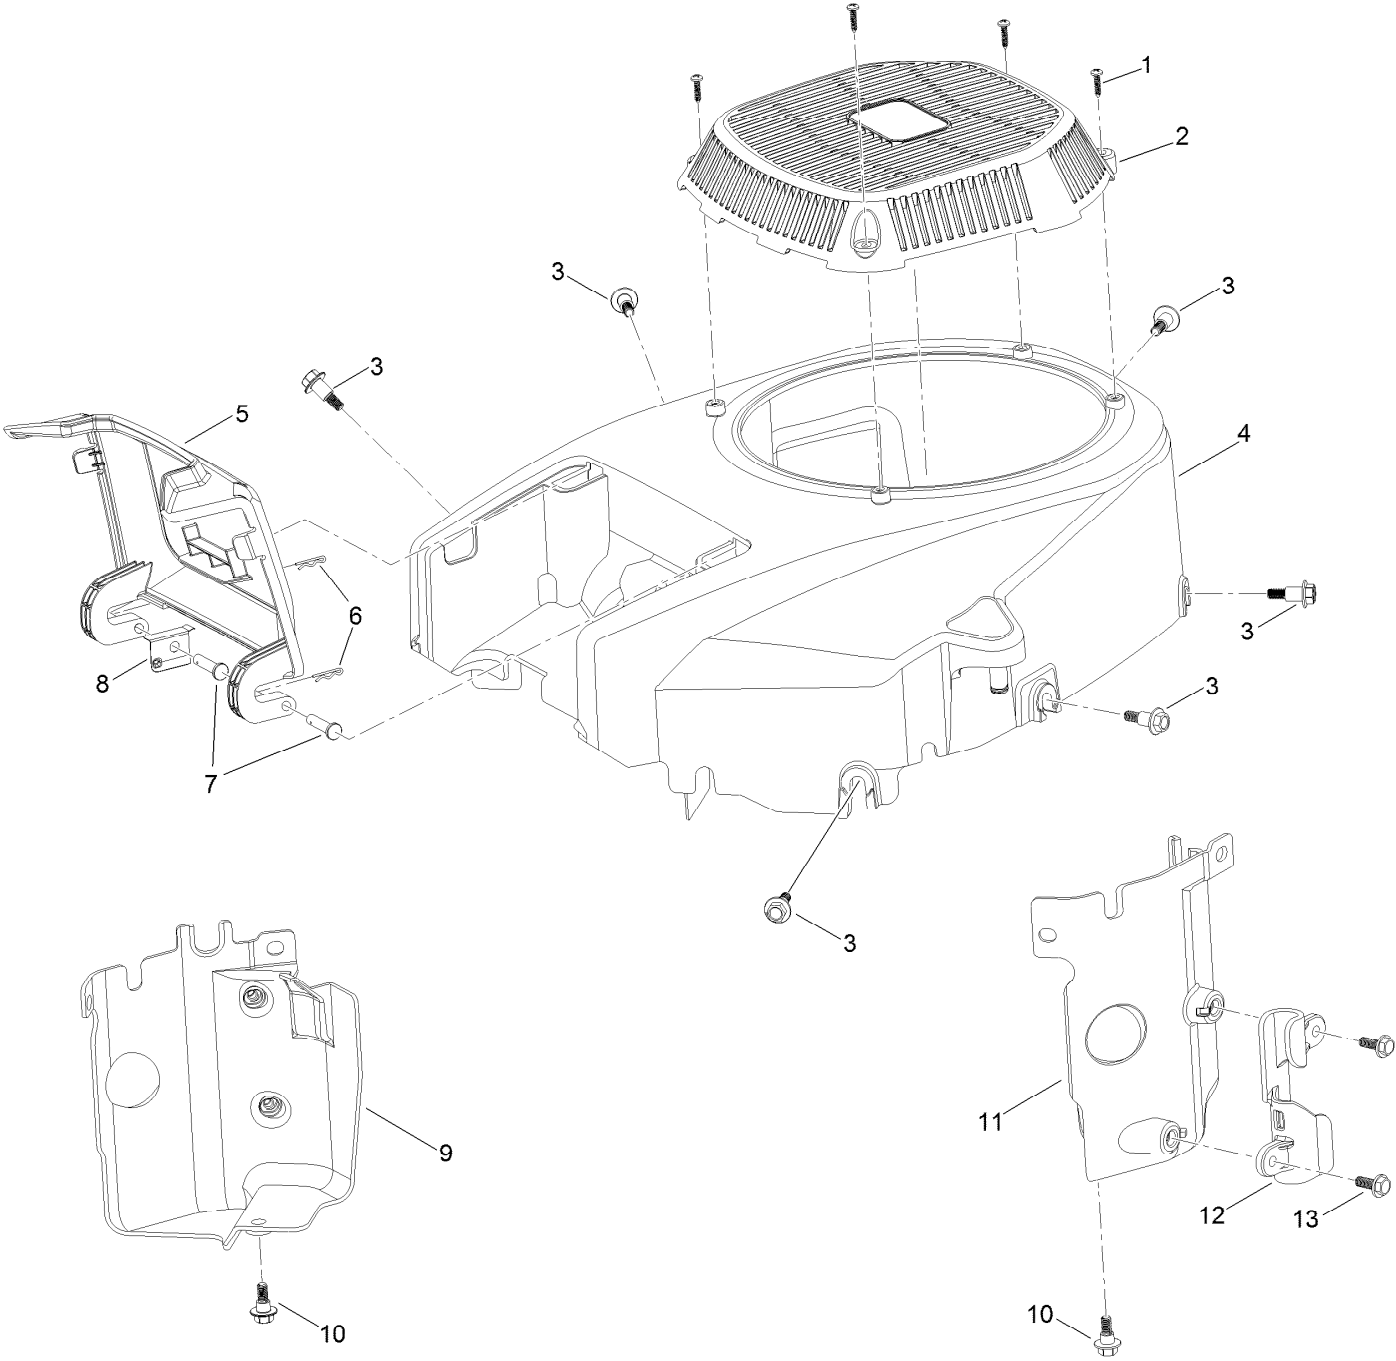


## Blower Housing Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  |
|-------------|--------------------|-------------|---------------------|
| 1           | 133-1571           | 4           | Screw-PPH, Plastic  |
| 2           | 127-9045           | 1           | Cover-Fan           |
| 3           | 127-9196           | 6           | Screw-Shoulder, HWH |
| 4           | 133-1572           | 1           | Shroud-Engine       |
| 5           | 127-9046           | 1           | Door-Filter, Air    |
| 6           | 127-9280           | 2           | Pin-Hair            |
| 7           | 127-9282           | 2           | Pin                 |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  |
|-------------|--------------------|-------------|---------------------|
| 8           | 127-9281           | 1           | Plate-Spring        |
| 9           | 127-9049           | 1           | Baffle-Air, Left    |
| 10          | 120-4210           | 2           | Screw-Shoulder, HHF |
| 11          | 127-9048           | 1           | Baffle-Air, Right   |
| 12          | 127-9287           | 1           | Cleat-Hose          |
| 13          | 120-4232           | 2           | Screw-HHF           |

# Gasket and Seal Kit

 
1

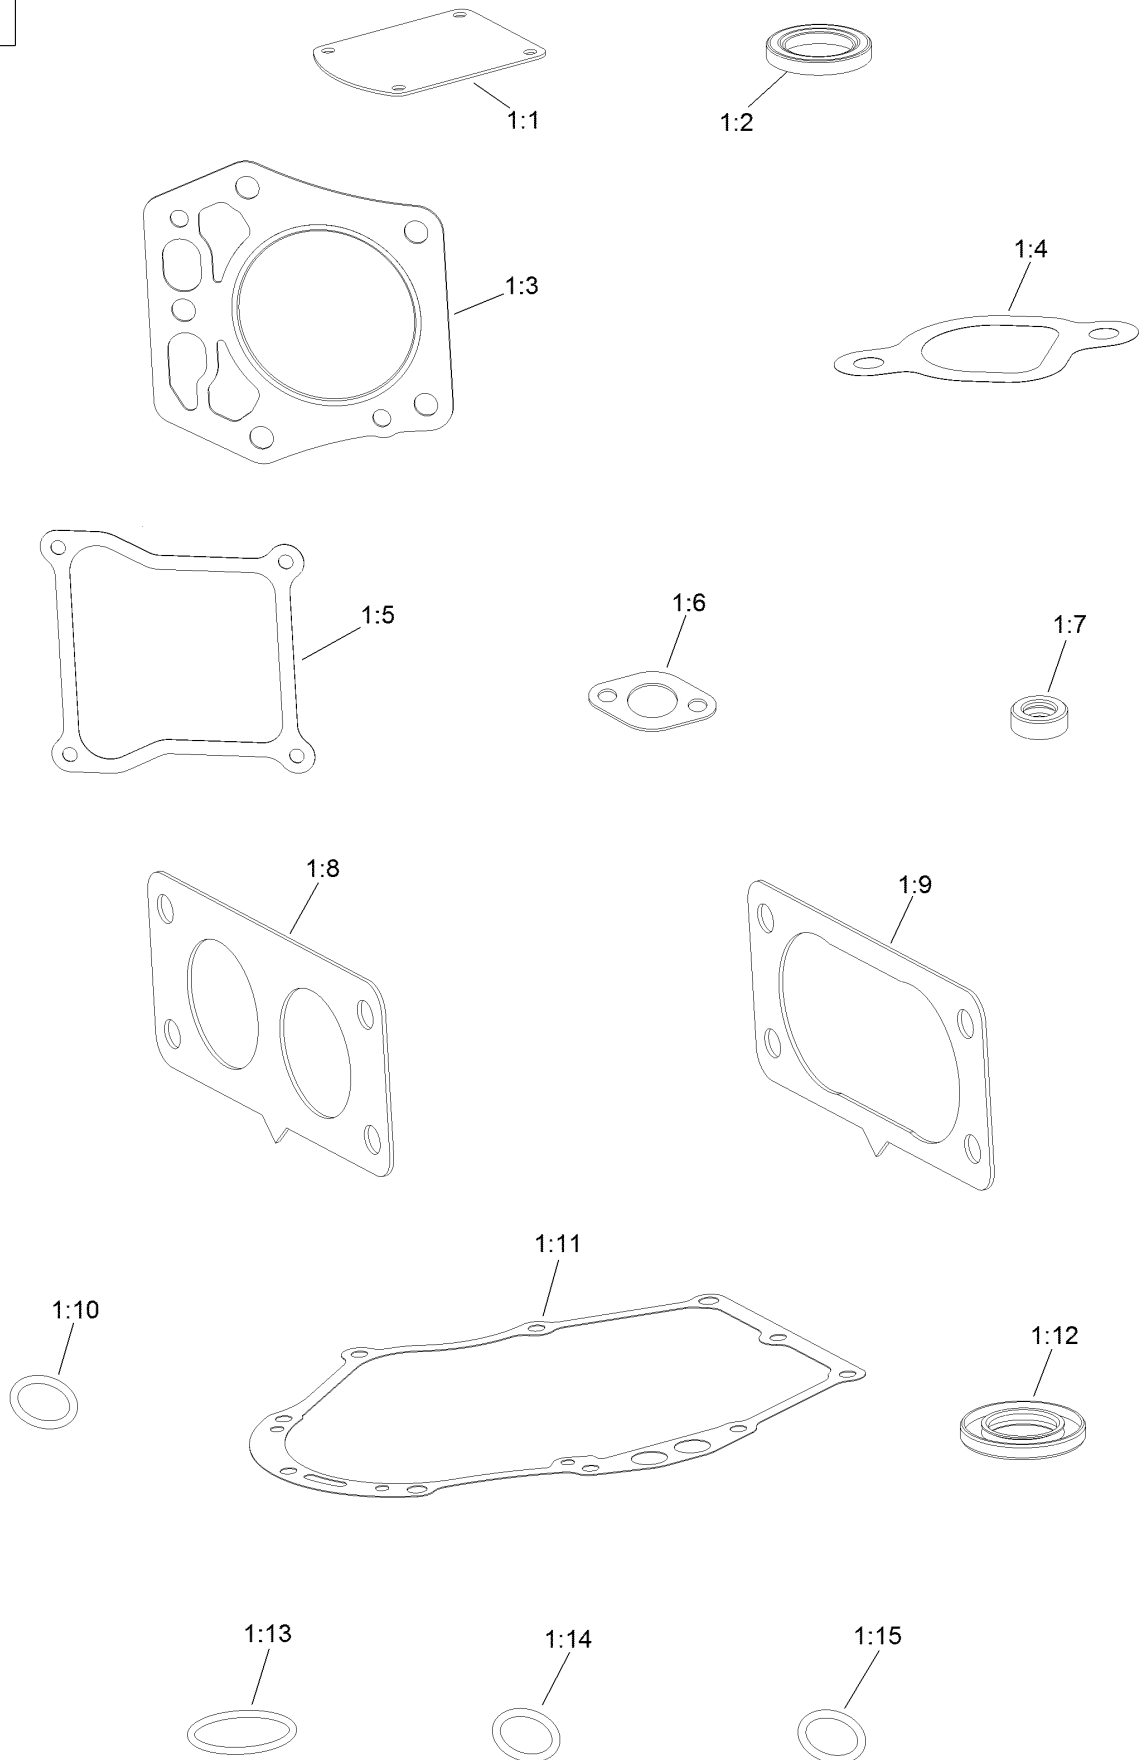

## Gasket and Seal Kit (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      |
|-------------|--------------------|-------------|-----------------------|-------------|--------------------|-------------|-------------------------|
| 1           | 127-9296           | 1           | Gasket And Seal Kit   | 1:8         | 127-9246           | 2           | Gasket-Carburetor       |
| 1:1         | 127-9214           | 1           | Gasket-Breather       | 1:9         | 127-9251           | 1           | Gasket-Carburetor       |
| 1:2         | 120-4267           | 1           | Seal-Oil              | 1:10        | 120-4262           | 2           | O-Ring                  |
| 1:3         | 127-9226           | 2           | Gasket-Head, Cylinder | 1:11        | 127-9267           | 1           | Gasket-Cover, Crankcase |
| 1:4         | 127-9230           | 2           | Gasket-Intake         | 1:12        | 127-9271           | 1           | Seal                    |
| 1:5         | 127-9295           | 2           | Gasket-Valve Cover    | 1:13        | 127-9273           | 1           | O-Ring                  |
| 1:6         | 120-4317           | 2           | Gasket-Exhaust        | 1:14        | 127-9284           | 1           | O-Ring                  |
| 1:7         | 120-4257           | 1           | Seal-Oil              | 1:15        | 127-9286           | 1           | O-Ring                  |

 
# Body Styling and Fuel Tank Assembly

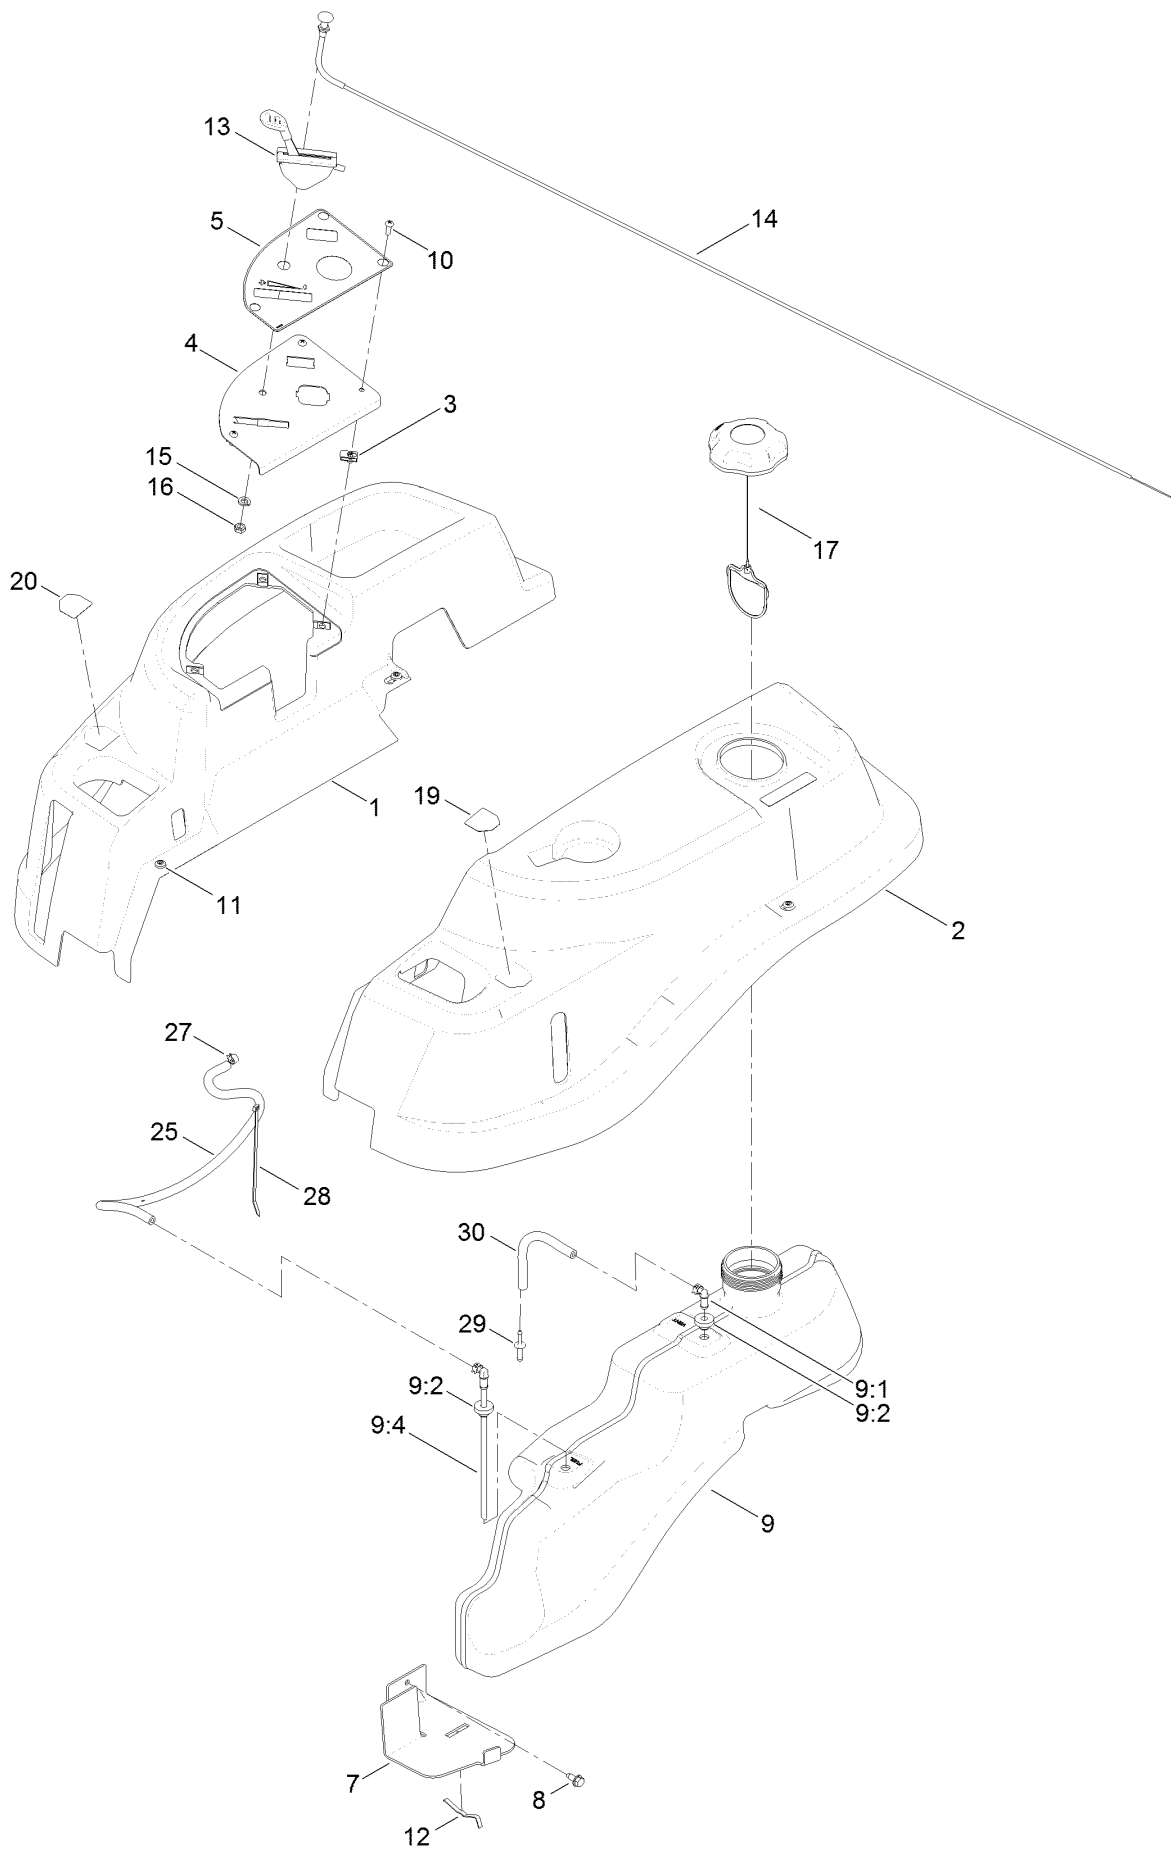

## Body Styling and Fuel Tank Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      |
|-------------|--------------------|-------------|-------------------------|-------------|--------------------|-------------|-------------------------|
| 1           | 119-3338           | 1           | Pod-RH                  | 12          | 609830             | 2           | Spring                  |
| 2           | 119-3337           | 1           | Pod-LH                  | 13          | 121-0769           | 1           | Cable-Throttle          |
| 3           | 107069             | 3           | Clip                    | 14          | 112-9753           | 1           | Cable-Choke             |
| 4           | 119-3377-03        | 1           | Plate-Control           | 15          | 3253-21            | 1           | Washer-Lock             |
| 5           | 121-0773           | 1           | Decal-Panel, Control    | 16          | 3220-3             | 1           | Nut-HJ                  |
| 7           | 119-3395-03        | 1           | Support-Tank, Front     | 17          | 120-5461           | 1           | Cap-Fuel, Ratcheting    |
| 8           | 32144-70           | 2           | Screw-HWHTF             | 19          | 119-8814           | 1           | Decal-Control Lever, LH |
| 9           | 119-3324           | 1           | Fuel Tank ASM           | 20          | 119-8815           | 1           | Decal-Control Lever, RH |
| 9:1         | 121-0793           | 1           | Connector-Elbow, 90 DEG | 25          | 109-0281           | 1           | Hose-Fuel               |
| 9:2         | 46-6560            | 2           | Bushing                 | 27          | 2412-98            | 3           | Clamp-Hose              |
| 9:4         | 117-7400           | 1           | Fitting-Plastic         | 28          | 614249             | 1           | Tie-Cable               |
| 10          | 3258-166           | 3           | Screw-PRH               | 29          | 117-5399           | 1           | Adaptor-Orifice         |
| 11          | 120-7950           | 6           | Screw-Shoulder          | 30          | 110-1876           | 1           | Hose-Fuel               |
 
## Battery and Electrical Assembly

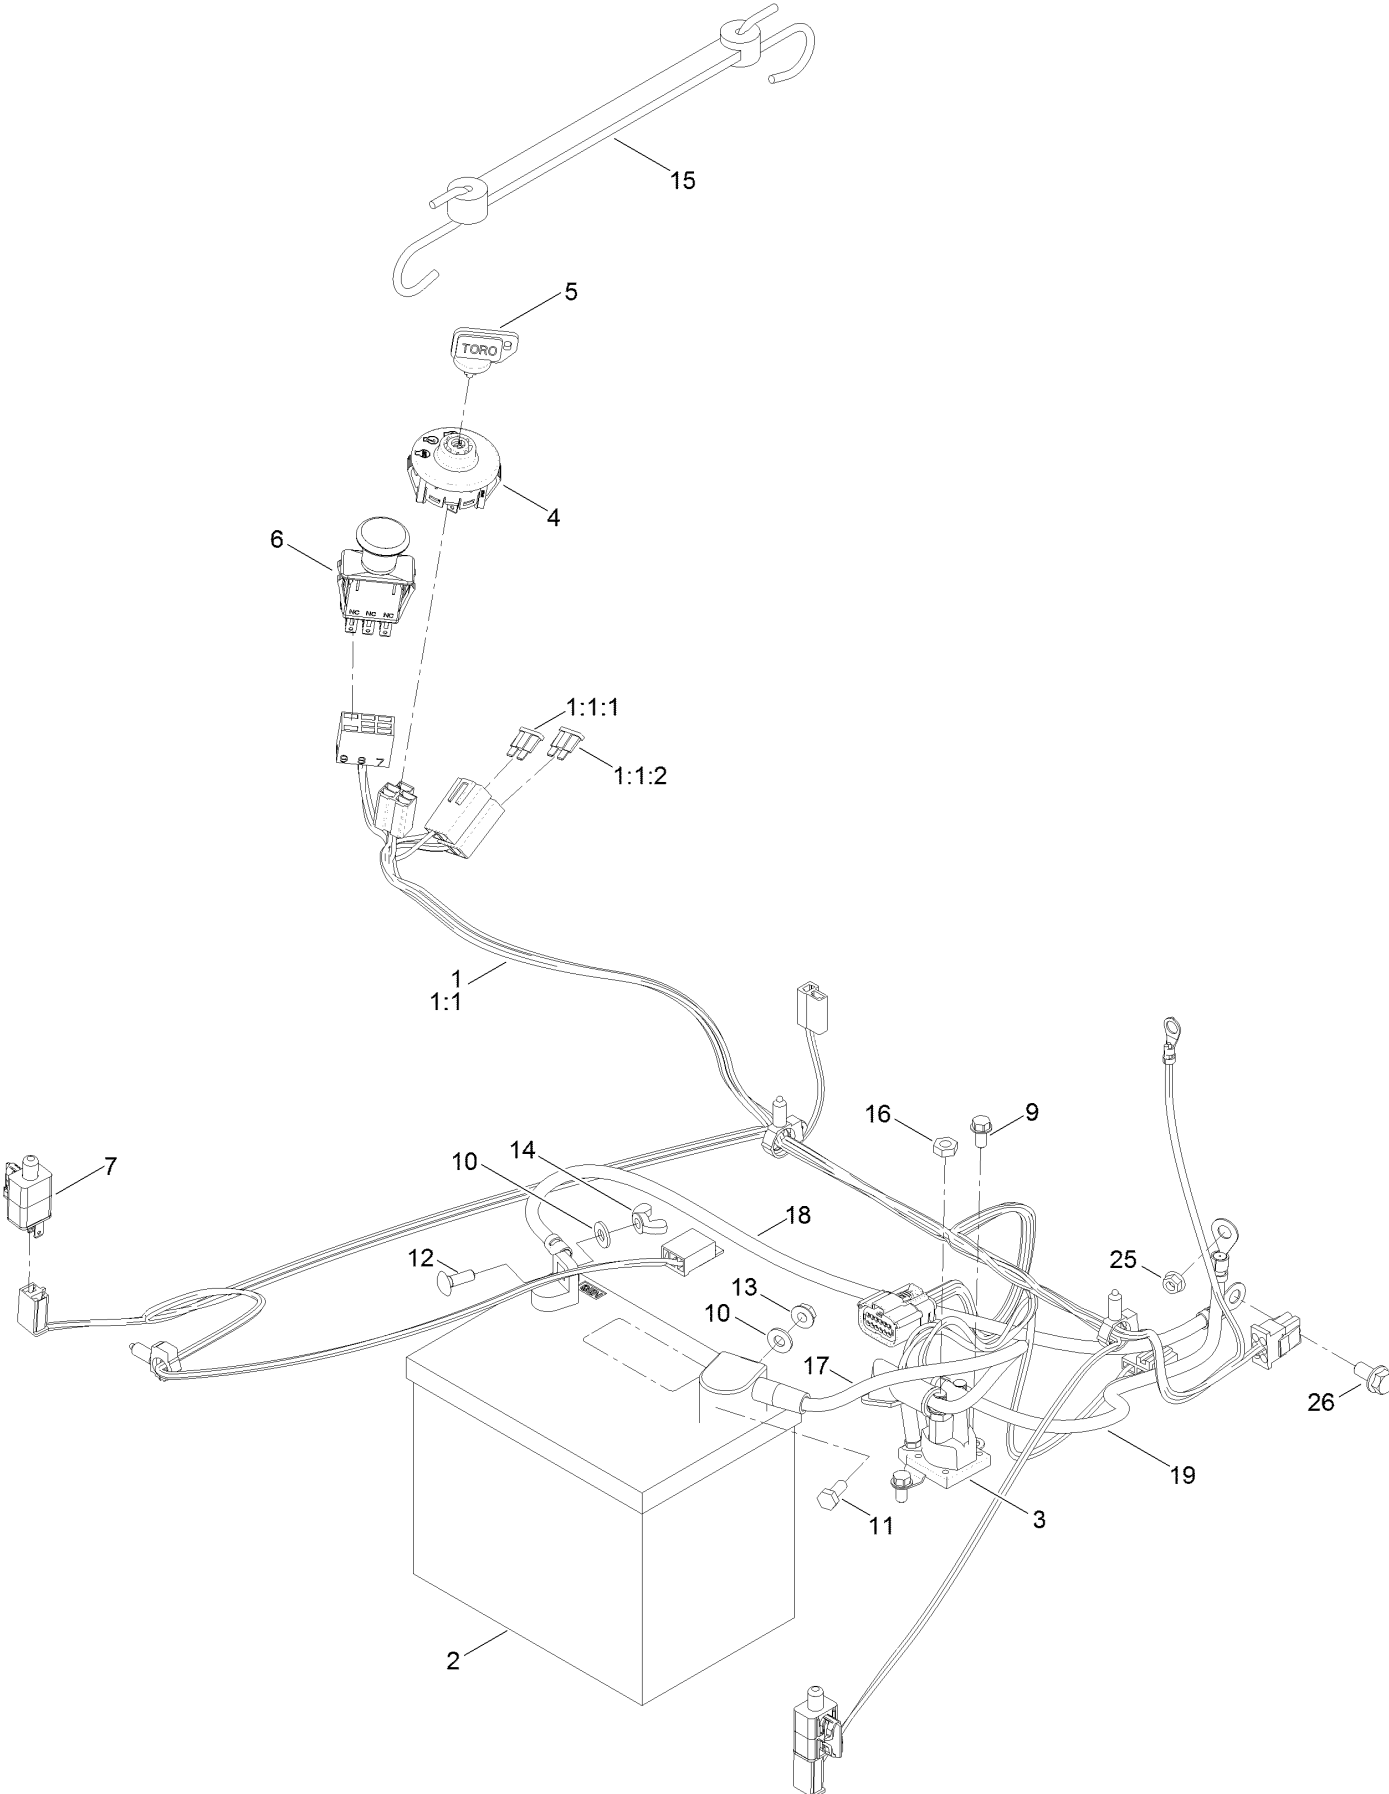


## Battery and Electrical Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 136-7482           | 1           | Harness-Wire       |
| 1:1         |                    | 1           | Harness-Wire ●     |
| 1:1:1       | 109103             | 1           | Fuse-Blade, 30 Amp |
| 1:1:2       | 109102             | 1           | Fuse-Blade, 25 Amp |
| 2           | 105-1692           | 1           | Battery            |
| 3           | 117-1197           | 1           | Solenoid           |
| 4           | 117-2221           | 1           | Switch-Ignition    |
| 5           | 63-8360            | 1           | Key-Ignition       |
| 6           | 103-5221           | 1           | Switch-PTO         |
| 7           | 110-6765           | 2           | Switch             |
| 9           | 32144-4            | 2           | Screw-HWH          |
| 10          | 3256-22            | 2           | Washer-Flat        |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      |
|-------------|--------------------|-------------|-------------------------|
| 11          | 321-3              | 1           | Screw-HH                |
| 12          | 3229-1             | 1           | Bolt-CARR               |
| 13          | 32128-33           | 1           | Nut-HF                  |
| 14          | 32103-22           | 1           | Nut-Wing                |
| 15          | 104-2466           | 1           | Holddown-Battery        |
| 16          | 3220-2             | 2           | Nut-Jam                 |
| 17          | 119-8897           | 1           | Cable-Battery, Red      |
| 18          | 121-0711           | 1           | Cable-Battery, Positive |
| 19          | 119-8899           | 1           | Cable-Battery, Black    |
| 25          | 33003-00           | 1           | Nut-HF                  |
| 26          | 3234-14            | 1           | Screw-HHF               |

● Not serviced separately

 
# 50 Inch Deck, Belt and Blade Assembly

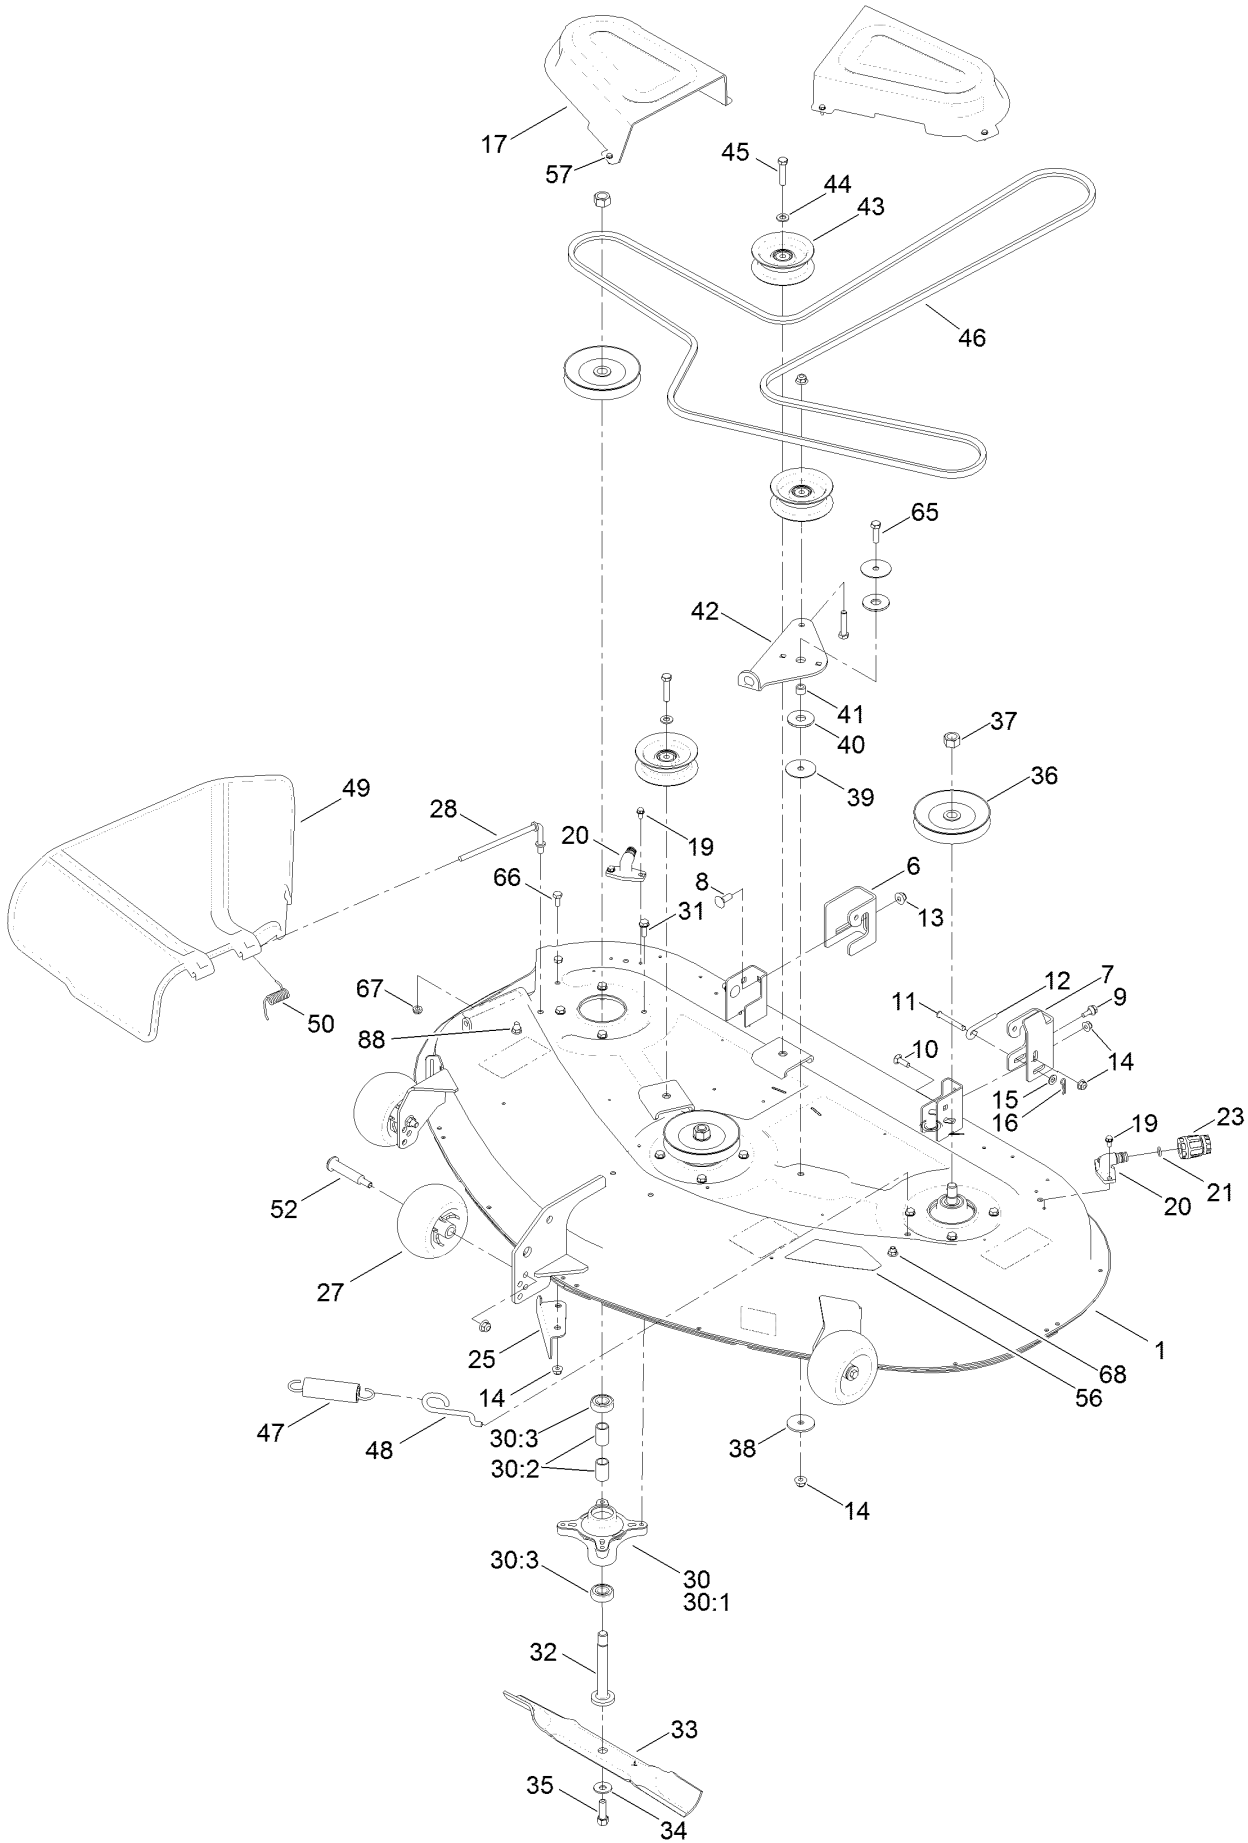

## 50 Inch Deck, Belt and Blade Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>         | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>         |
|-------------|--------------------|-------------|----------------------------|-------------|--------------------|-------------|----------------------------|
| 1           | 131-3606           | 1           | 50 Inch Deck And Decal ASM | 33          | 115-5059-03        | 3           | Blade-Hi Lift              |
| 6           | 131-4138           | 1           | Bracket-Hanger, RH         | 34          | 3290-465           | 3           | Washer-Belleville          |
| 7           | 131-1091           | 1           | Bracket-Hanger, LH         | 35          | 26-0671            | 3           | Screw-HH                   |
| 8           | 3231-2             | 2           | Bolt-CARR                  | 36          | 125-5575           | 3           | Pulley                     |
| 9           | 120-7024           | 1           | Screw-Shoulder, HHF        | 37          | 3219-6             | 3           | Nut-Hex                    |
| 10          | 3230-22            | 1           | Screw-CARR                 | 38          | 63-7400            | 1           | Washer-Rebound             |
| 11          | 110-0618           | 1           | Pin-Clevis                 | 39          | 120-2229           | 2           | Washer                     |
| 12          | 131-0955           | 1           | Rod-Level, Deck            | 40          | 114-0463           | 2           | Washer-Friction, Composite |
| 13          | 104-8301           | 7           | Nut-HF, NI                 | 41          | 115-4986           | 1           | Spacer                     |
| 14          | 104-8300           | 6           | Nut-HF, NI                 | 42          | 114-8540           | 1           | Arm-Idler                  |
| 15          | 3256-23            | 1           | Washer-Plain               | 43          | 106-2175           | 3           | Pulley-Idler, Flat         |
| 16          | 1-806003           | 1           | Pin-Cotter                 | 44          | 3256-24            | 2           | Washer-Flat                |
| 17          | 108-7890           | 2           | Cover-Belt                 | 45          | 323-9              | 3           | Screw-HH                   |
| 19          | 32144-4            | 4           | Screw-HWH                  | 46          | 119-8820           | 1           | V-Belt                     |
| 20          | 95-2747            | 2           | Fitting-Washout            | 47          | 1-603414           | 1           | Spring-Extension           |
| 21          | 46-6290            | 2           | O-Ring                     | 48          | 112-3973           | 1           | Hook-Return, Spring        |
| 23          | 95-3270            | 1           | Connector-Hose             | 49          | 108-7895           | 1           | Deflector                  |
| 25          | 112-3983-03        | 1           | Baffle-Cutoff              | 50          | 110-6694           | 1           | Spring-Torsion             |
| 27          | 1-603299           | 3           | Roller-Scalp, Anti         | 52          | 112-3977           | 3           | Bolt-Shoulder              |
| 28          | 112-3950           | 1           | Rod-Pivot                  | 56          | 117-1223           | 1           | Decal                      |
| 30          | 121-0751           | 3           | Spindle ASM                | 57          | 32144-1            | 6           | Screw-Taptite              |
| 30:1        | 117-7267           | 1           | Spindle                    | 65          | 323-7              | 1           | Screw-HH                   |
| 30:2        | 120-7935           | 2           | Spacer                     | 66          | 322-3              | 2           | Screw-HH                   |
| 30:3        | 38-7820            | 2           | Bearing-Ball               | 67          | 3296-59            | 1           | Nut-Lock, NI               |
| 31          | 32144-41           | 12          | Screw-Taptite              | 68          | 322-2              | 1           | Screw-HH                   |
| 32          | 117-7268           | 3           | Shaft-Spindle              | 88          | 3230-23            | 1           | Screw-CARR                 |

 
# 50 Inch Deck Decal Assembly No. 131-3606

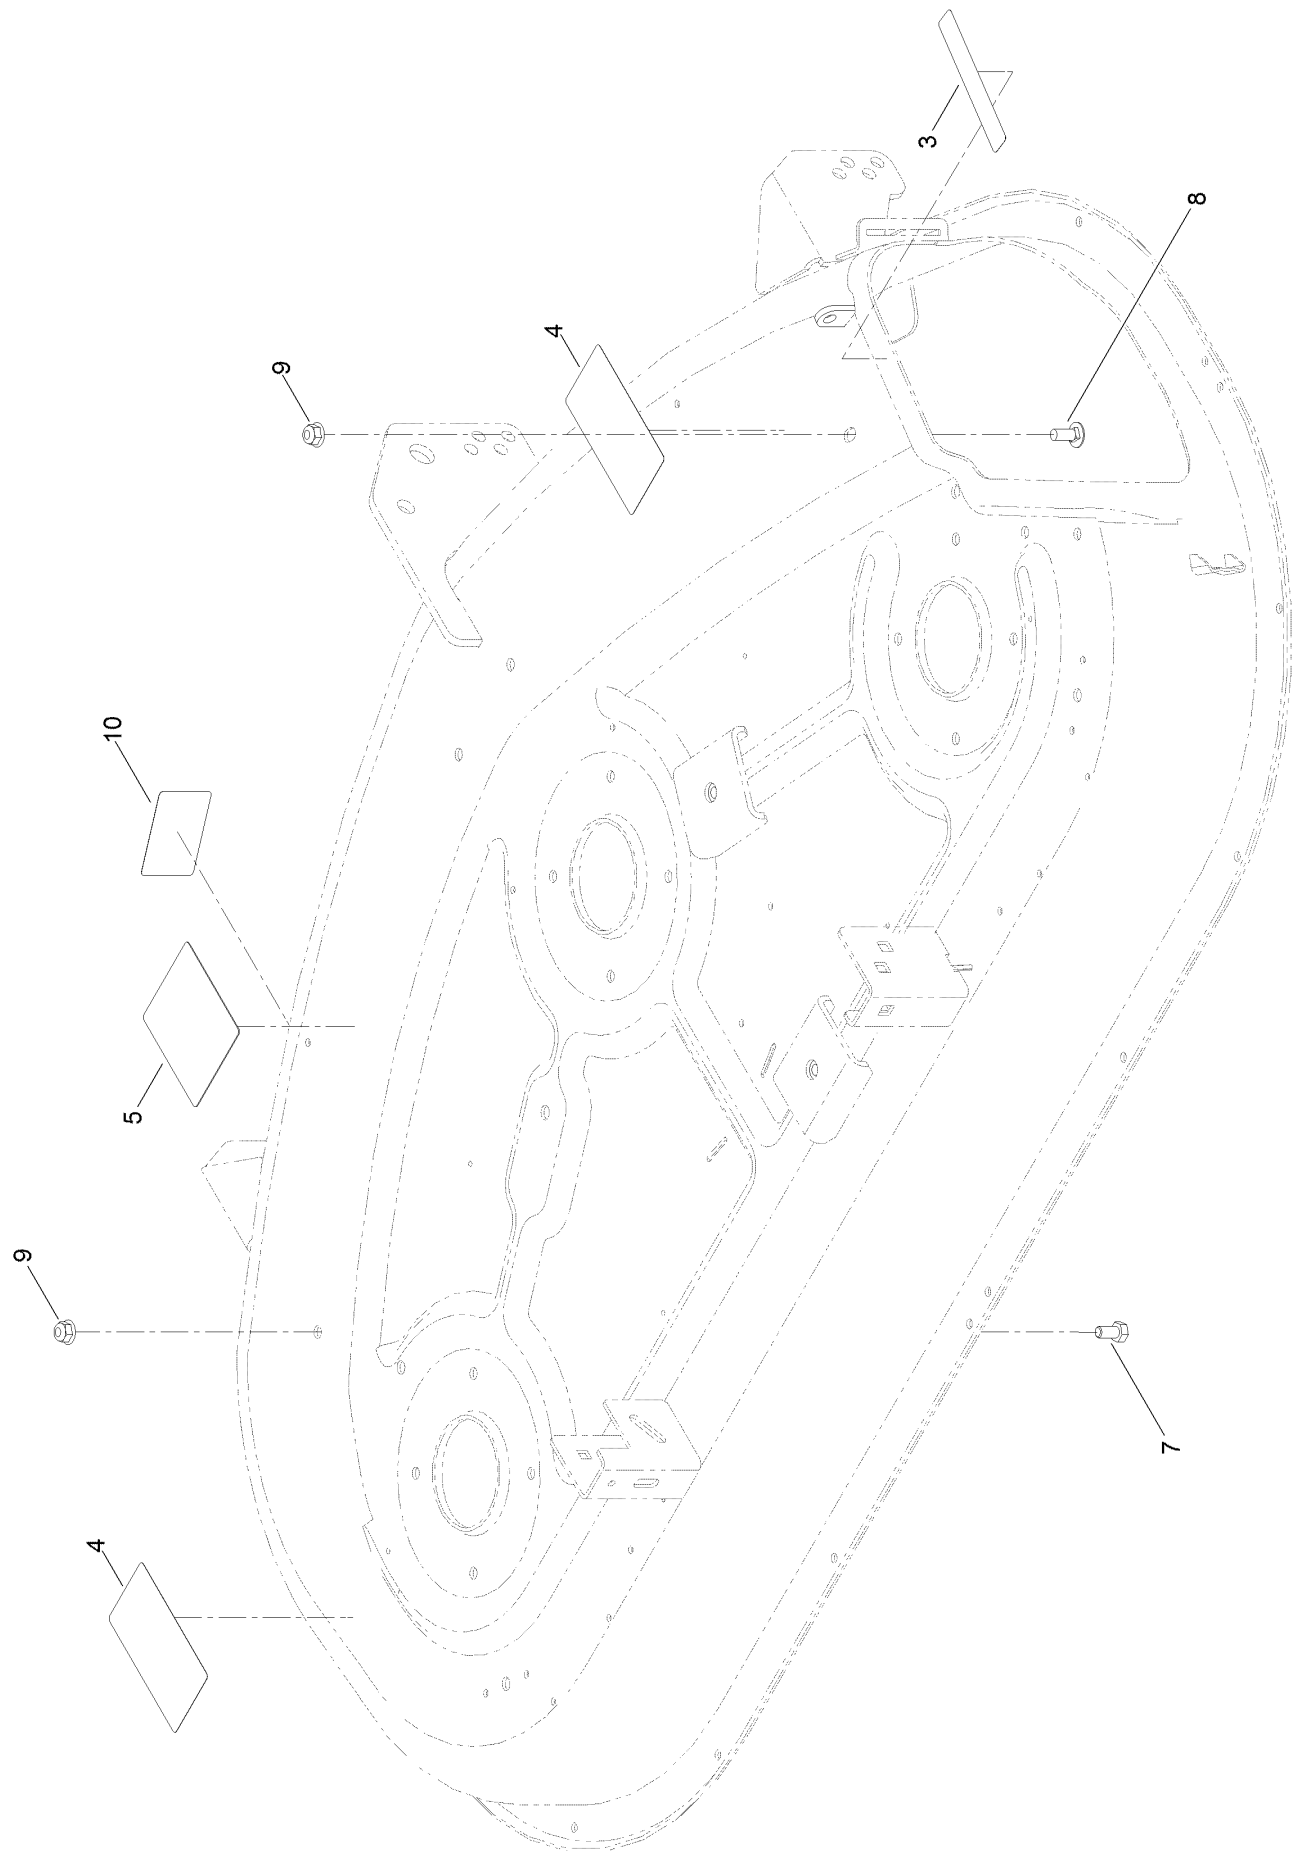

## 50 Inch Deck Decal Assembly No. 131-3606 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|---------------------|-------------|--------------------|-------------|--------------------|
| 3           | 93-7009            | 1           | Decal-Danger        | 8           | 3230-23            | 1           | Screw-CARR         |
| 4           | 132-0872           | 2           | Decal-Danger, Deck  | 9           | 104-8300           | 2           | Nut-HF, NI         |
| 5           | 99-3943            | 1           | Decal-Routing, Belt | 10          | 112-9840           | 1           | Decal-Scalp, Anti  |
| 7           | 322-2              | 1           | Screw-HH            |             |                    |             |                    |
 
# Model Specific Decal Assembly

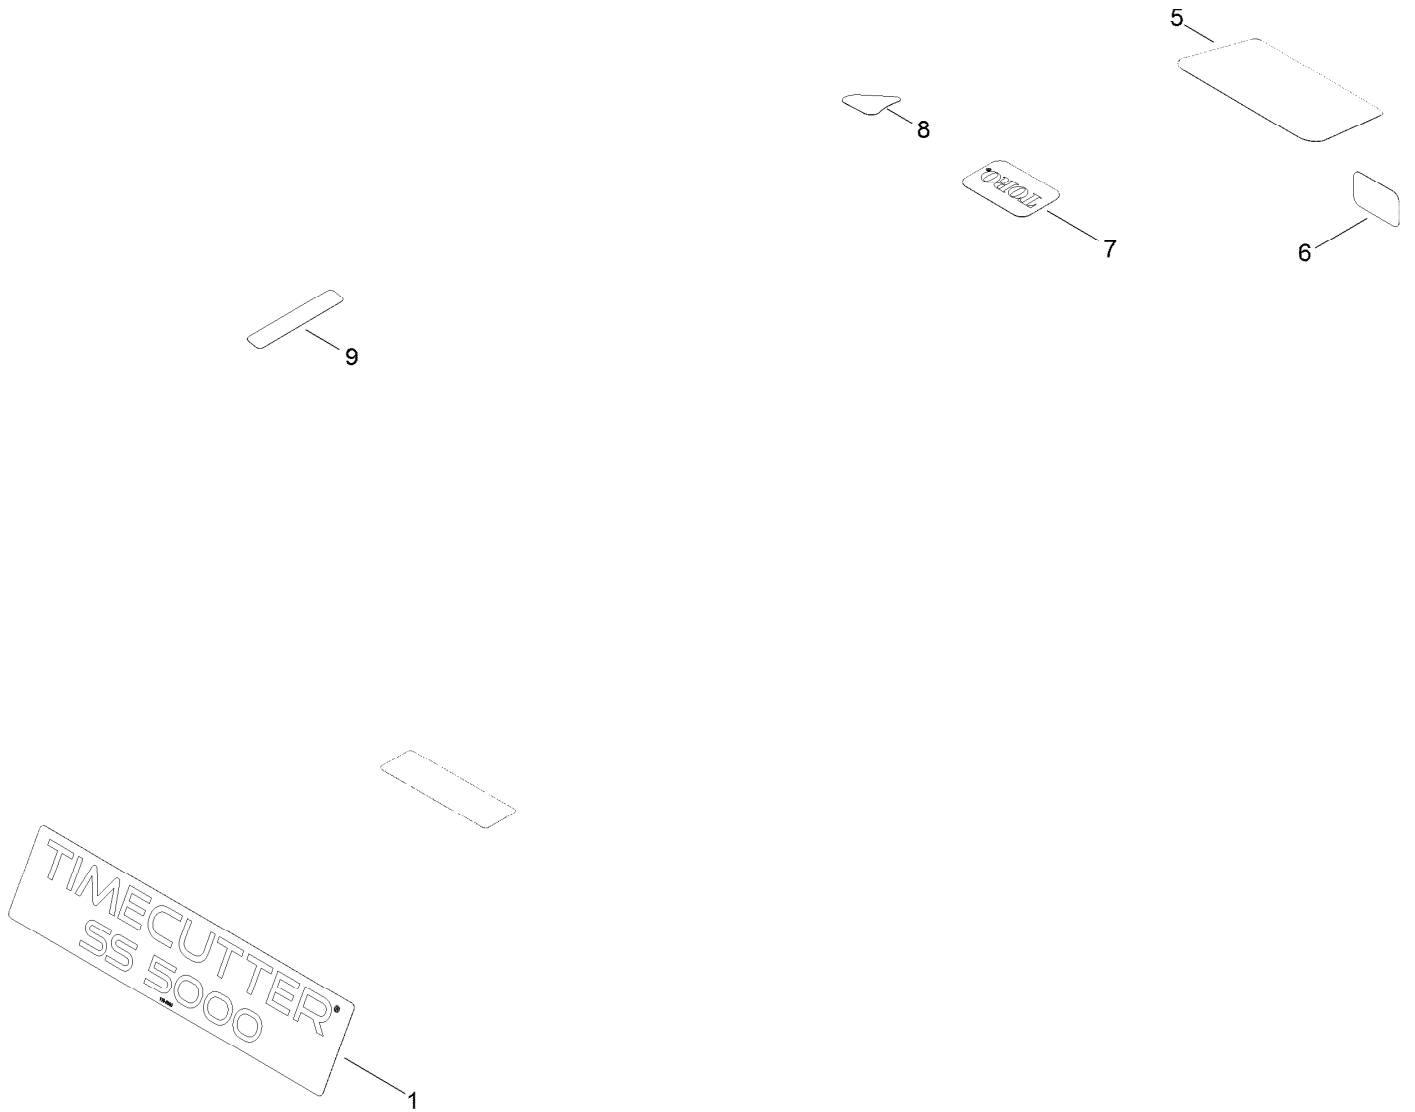


## Model Specific Decal Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 119-8903           | 1           | Decal-Timecutter   |
| 5           | 136-5597           | 1           | Decal-Engine       |
| 6           | 127-9076           | 1           | Placard-Intake     |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 7           | 131-4157           | 1           | Decal              |
| 8           | 131-1097           | 1           | Decal-Drain, Oil   |
| 9           | 132-0904           | 1           | Decal-Shutdown     |

 
# Frame Decal Assembly

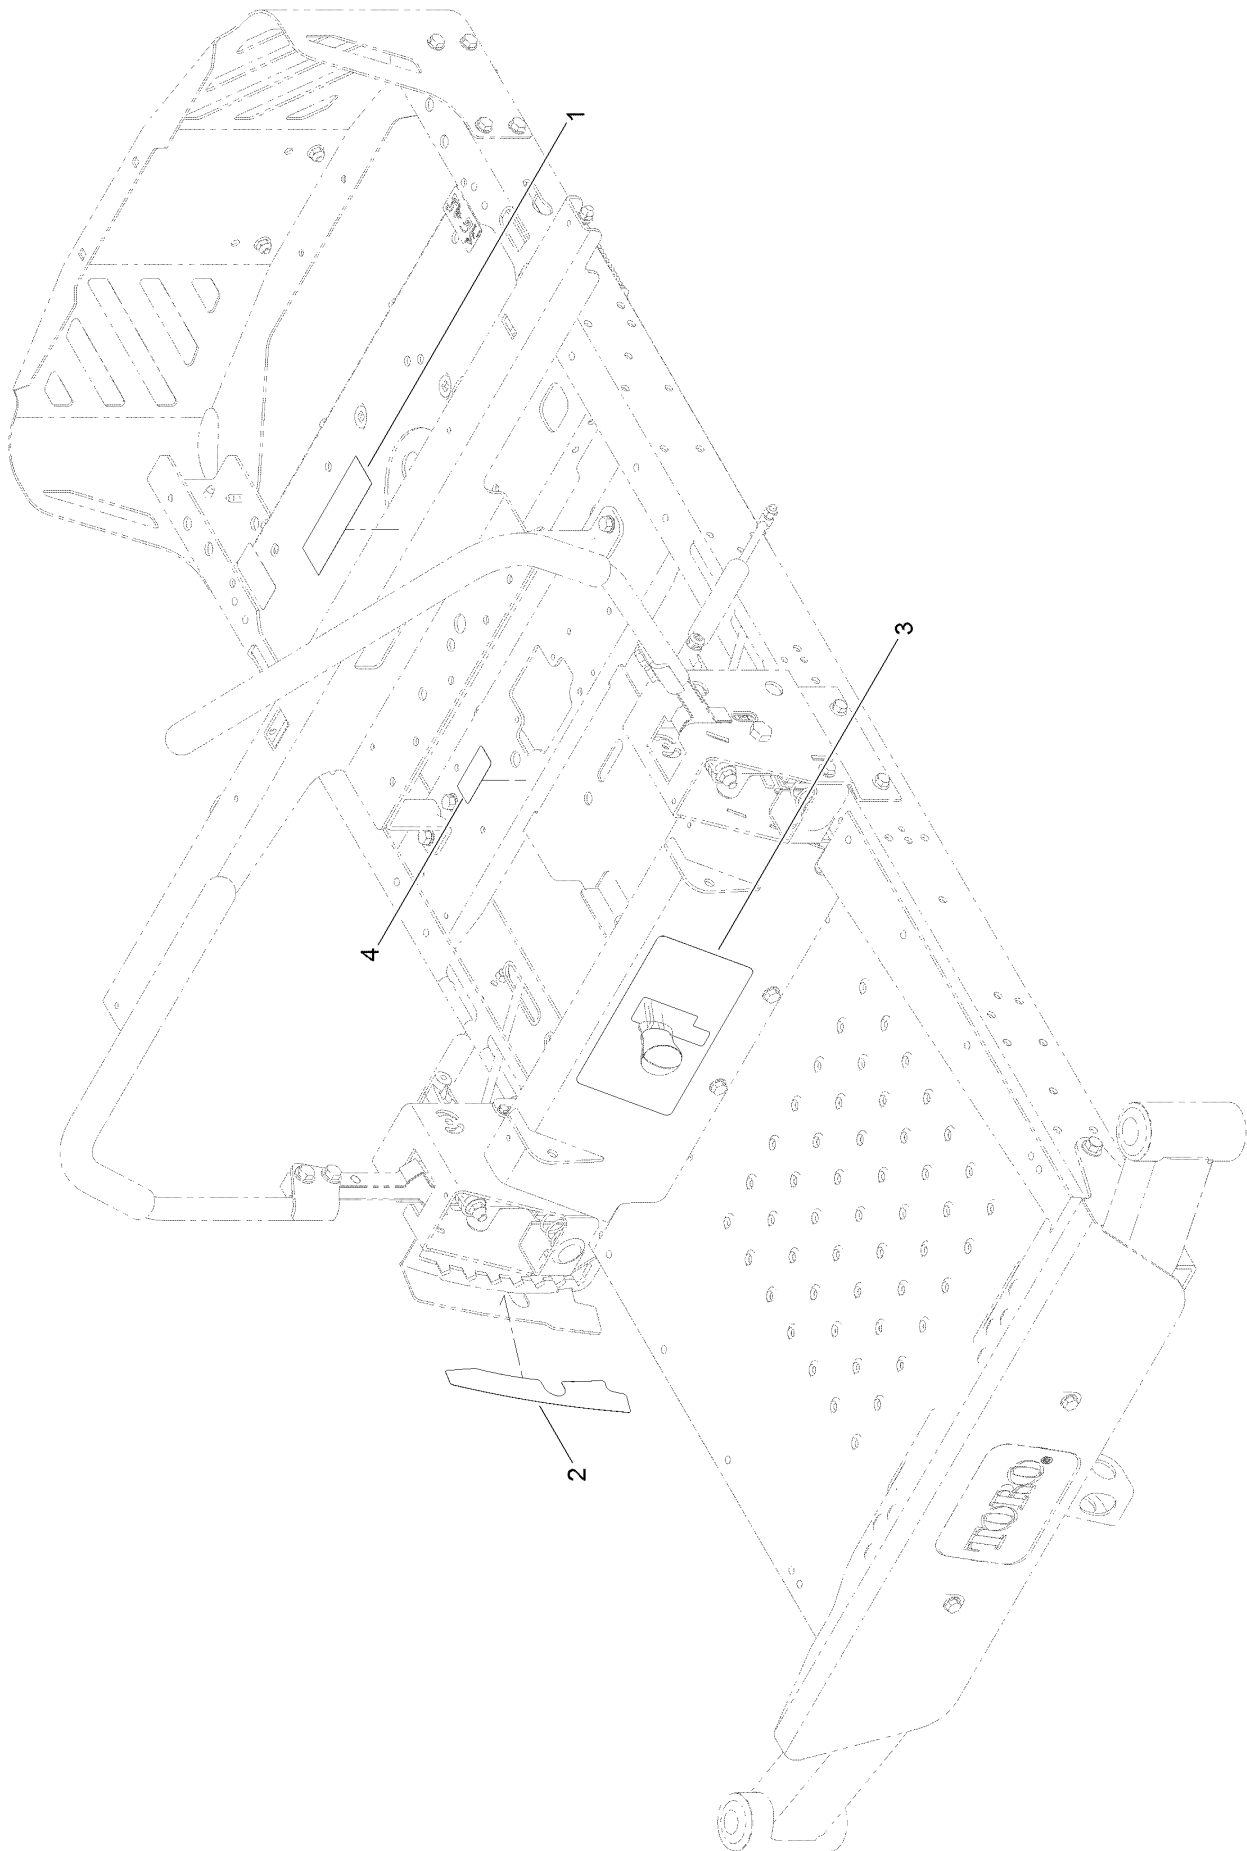

## Frame Decal Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>             |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|--------------------------------|
| 1           | 106-8717           | 1           | Decal-Service, CE  | 3           | 131-3947           | 1           | Decal-Control, Speed           |
| 2           | 119-8870           | 1           | Decal-HOC          | 4           | 121-5684           | 1           | Decal-Location, Service Dealer |
 
# Clutch Assembly

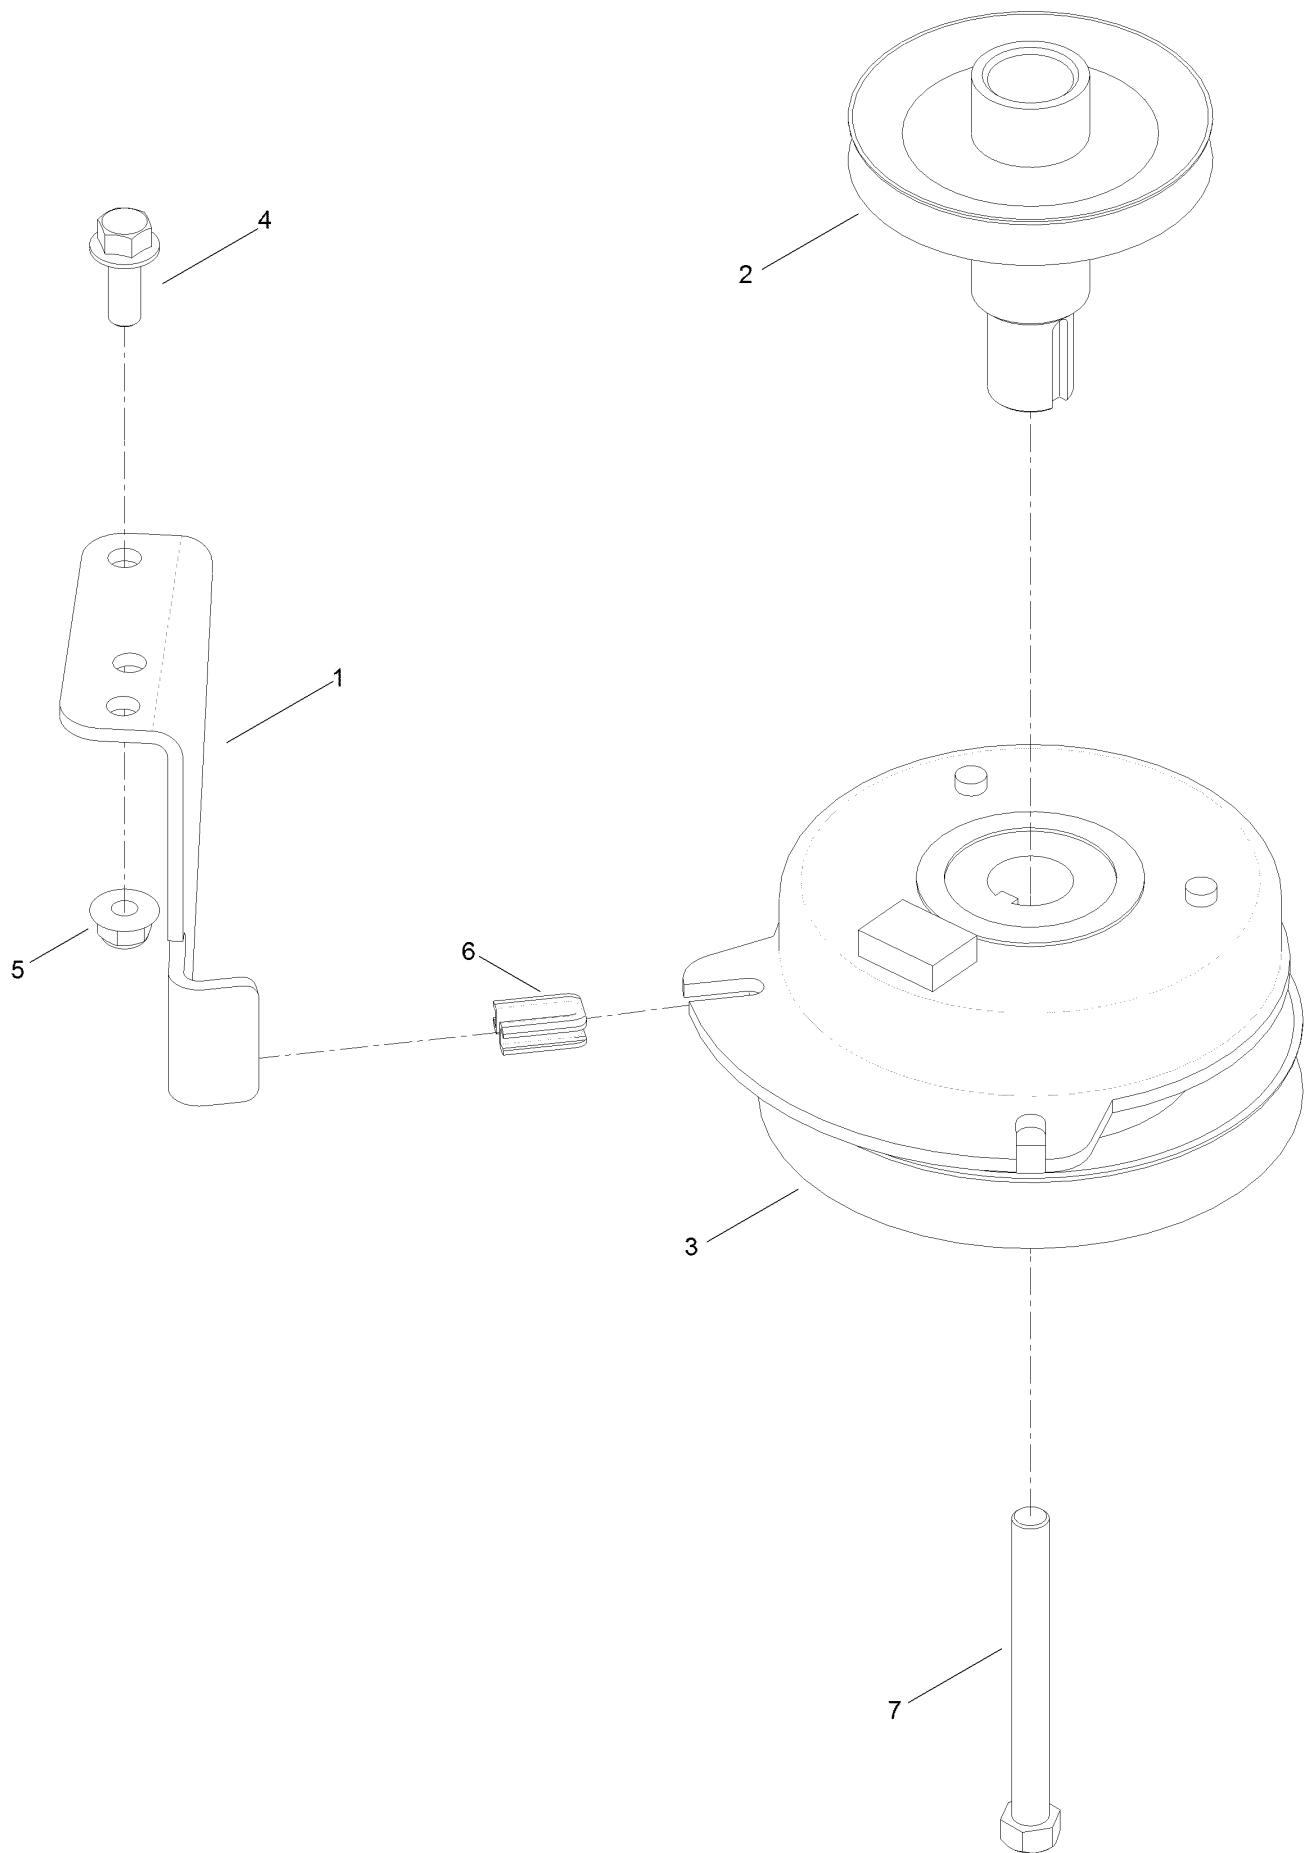

## Clutch Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|--------------------|
| 1           | 119-8885           | 1           | Stop-Clutch        | 5           | 104-8301           | 1           | Nut-HF, NI         |
| 2           | 130-6854           | 1           | Pulley-Engine      | 6           | 120-2217           | 1           | Isolator-Clutch    |
| 3           | 127-3408           | 1           | Clutch-PTO         | 7           | 3212-17            | 1           | Screw-HH           |
| 4           | 3234-42            | 1           | Screw-HHF          |             |                    |             |                    |

# Attachments and Accessories

## For 74731 TimeCutter SS 5000 Riding Mower

| Product Name                                                                  | Model/Part |
|-------------------------------------------------------------------------------|------------|
| Arm Rest Kit.....                                                             | 110-5719   |
| Deck Ring Kit.....                                                            | 114-1608   |
| Hourmeter Kit .....                                                           | 116-5461   |
| All Season Synthetic Oil.....                                                 | 117-0066   |
| Fuel Stabilizer (4oz).....                                                    | 117-0089   |
| Fuel Stabilizer (16oz).....                                                   | 117-0090   |
| Seat Cover W/o Arm Rest - TC 18in .....                                       | 117-0096   |
| Striping Kit .....                                                            | 120-7905   |
| Jack Mount Kit .....                                                          | 126-5251   |
| Jack Kit.....                                                                 | 127-6666   |
| Attachment Mount Kit .....                                                    | 131-3966   |
| Weight Kit .....                                                              | 131-7658   |
| Deluxe Seat Kit.....                                                          | 131-7699   |
| Floor Mat Kit .....                                                           | 132-6921   |
| 10w30 4-cycle Engine Oil (32oz Bottle) .....                                  | 38280      |
| Toro 4-cycle Sae 30 Oil (32oz Bottle).....                                    | 38903      |
| Storage Cover .....                                                           | 490-7516   |
| Foot Assist Deck Lift Kit, 2011 and After Zero-Turn-Radius Riding Mower ..... | 79010      |
| Sunshade Kit .....                                                            | 79011      |
| Blade Kit .....                                                               | 79016P     |
| 50in Recycler Kit, 2007 and After Riding Mower .....                          | 79019      |
| Cargo Carrier.....                                                            | 79040      |
| Assist Handle and Step Kit .....                                              | 79339      |
| 50in and 54in Bagger.....                                                     | 79392      |

**Notes:**



**Count on it.**