



Form No. 3369-216 Rev B

**Count on it.**

# Parts Catalog

## Workman® HD Utility Vehicle with Bed

Model No. 07369—Serial No. 311000501 and Up



# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

## Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

## Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

 
## Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# Contents


|                                                                     |    |
|---------------------------------------------------------------------|----|
| Hood and Bumper Assembly .....                                      | 4  |
| Dash Assembly .....                                                 | 5  |
| Pedal Assembly .....                                                | 7  |
| Master Cylinder Assembly No. 104-6782 .....                         | 8  |
| Hydraulic Brake Line Assembly .....                                 | 9  |
| Clutch Linkage Assembly .....                                       | 10 |
| Shroud and Seat Assembly .....                                      | 11 |
| Console Assembly .....                                              | 13 |
| Shift Assembly No. 106-7887 .....                                   | 15 |
| Steering Hydraulic Assembly .....                                   | 16 |
| Steering Valve Assembly No. 115-7926 .....                          | 17 |
| Lift Valve and Hydraulics Assembly .....                            | 18 |
| Control Valve Assembly No. 43-1950 .....                            | 20 |
| Hydraulic Cylinder Assembly No. 106-7939 .....                      | 21 |
| Front Wheel Assembly .....                                          | 22 |
| Brake Caliper Assembly No. 119-9535 .....                           | 23 |
| Hydraulic Cylinder Assembly No. 112-3217 .....                      | 24 |
| Steering Linkage Assembly .....                                     | 25 |
| Front Suspension Assembly .....                                     | 26 |
| Front Control Arm Assembly .....                                    | 27 |
| Rear Frame Assembly .....                                           | 28 |
| Rear Axle Assembly .....                                            | 29 |
| Driveshaft Assembly No. 114-8367 .....                              | 30 |
| Transaxle Assembly .....                                            | 31 |
| Case Assembly Transaxle Assembly No. 115-7783 .....                 | 32 |
| Center Plate Assembly Transaxle Assembly No. 115-7783 .....         | 33 |
| Main Shaft Assembly Transaxle Assembly No. 115-7783 .....           | 34 |
| Reduction Shaft Assembly Transaxle Assembly No. 115-7783 .....      | 35 |
| Reverse Shaft Assembly Transaxle Assembly No. 115-7783 .....        | 36 |
| Main Shift Assembly Transaxle Assembly No. 115-7783 .....           | 37 |
| Hi-Lo Shift Assembly Transaxle Assembly No. 115-7783 .....          | 38 |
| Countershaft Assembly Transaxle Assembly No. 115-7783 .....         | 39 |
| Differential Gear Assembly Transaxle Assembly No. 115-7783 .....    | 40 |
| Differential Carrier Assembly Transaxle Assembly No. 115-7783 ..... | 41 |
| Differential Lock Assembly Transaxle Assembly No. 115-7783 .....    | 42 |
| Axle Shaft Assembly Transaxle Assembly No. 115-7783 .....           | 43 |
| Battery Assembly .....                                              | 44 |
| Tail Light and Fender Assembly .....                                | 45 |
| Roll-Over Protection System Assembly .....                          | 46 |
| Relay Assembly .....                                                | 47 |
| Fuel System Assembly .....                                          | 48 |
| Engine Assembly .....                                               | 49 |
| Muffler Assembly .....                                              | 51 |
| Engine Support Assembly .....                                       | 52 |
| Hydraulic Gear Pump Assembly No. 112-2983 .....                     | 53 |
| Full Bed and Side Panel Assembly .....                              | 54 |
| Attachments and Accessories .....                                   | 55 |

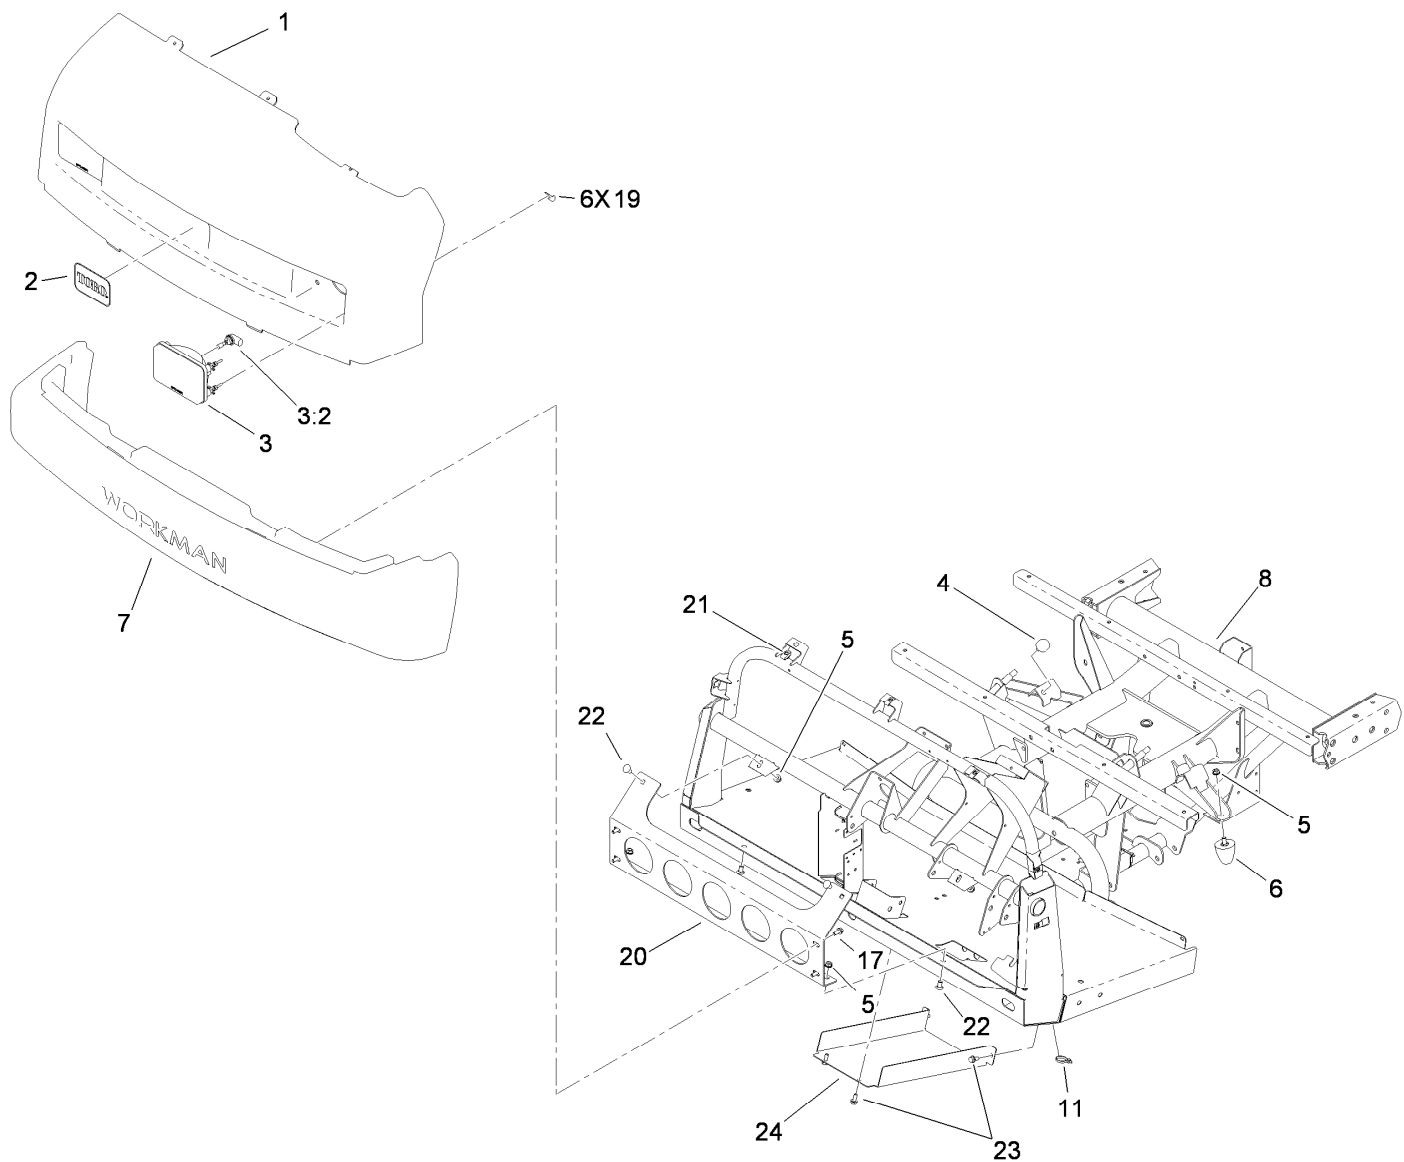

## Hood and Bumper Assembly

| Ref. | Part Number | Qty. | Description    |
|------|-------------|------|----------------|
| 1    | 112-3183    | 1    | Hood           |
| 2    | 117-4950    | 1    | Decal          |
| 3    | 114-8322    | 2    | Headlight ASM  |
| 3:2  | 115-2395    | 1    | Bulb-Light     |
| 4    | 87-2440     | 2    | Bumper-Rubber  |
| 5    | 3290-357    | 6    | Nut-HHF, Whiz  |
| 6    | 26-0071     | 2    | Snubber-Rubber |
| 7    | 112-3185    | 1    | Bumper         |
| 8    | 119-0949-03 | 1    | Frame-Front    |

 
| Ref. | Part Number | Qty. | Description    |
|------|-------------|------|----------------|
| 11   | 3290-379    | 1    | Tie-Cable      |
| 17   | 3234-5      | 4    | Screw-HHF      |
| 19   | 114-8341    | 6    | Clip           |
| 20   | 114-8272-03 | 1    | Bracket-Bumper |
| 21   | 94-2413     | 7    | Nut-U          |
| 22   | 3231-21     | 4    | Screw-CARR     |
| 23   | 32144-11    | 4    | Screw-HWHTF    |
| 24   | 106-2427-03 | 1    | Cover          |

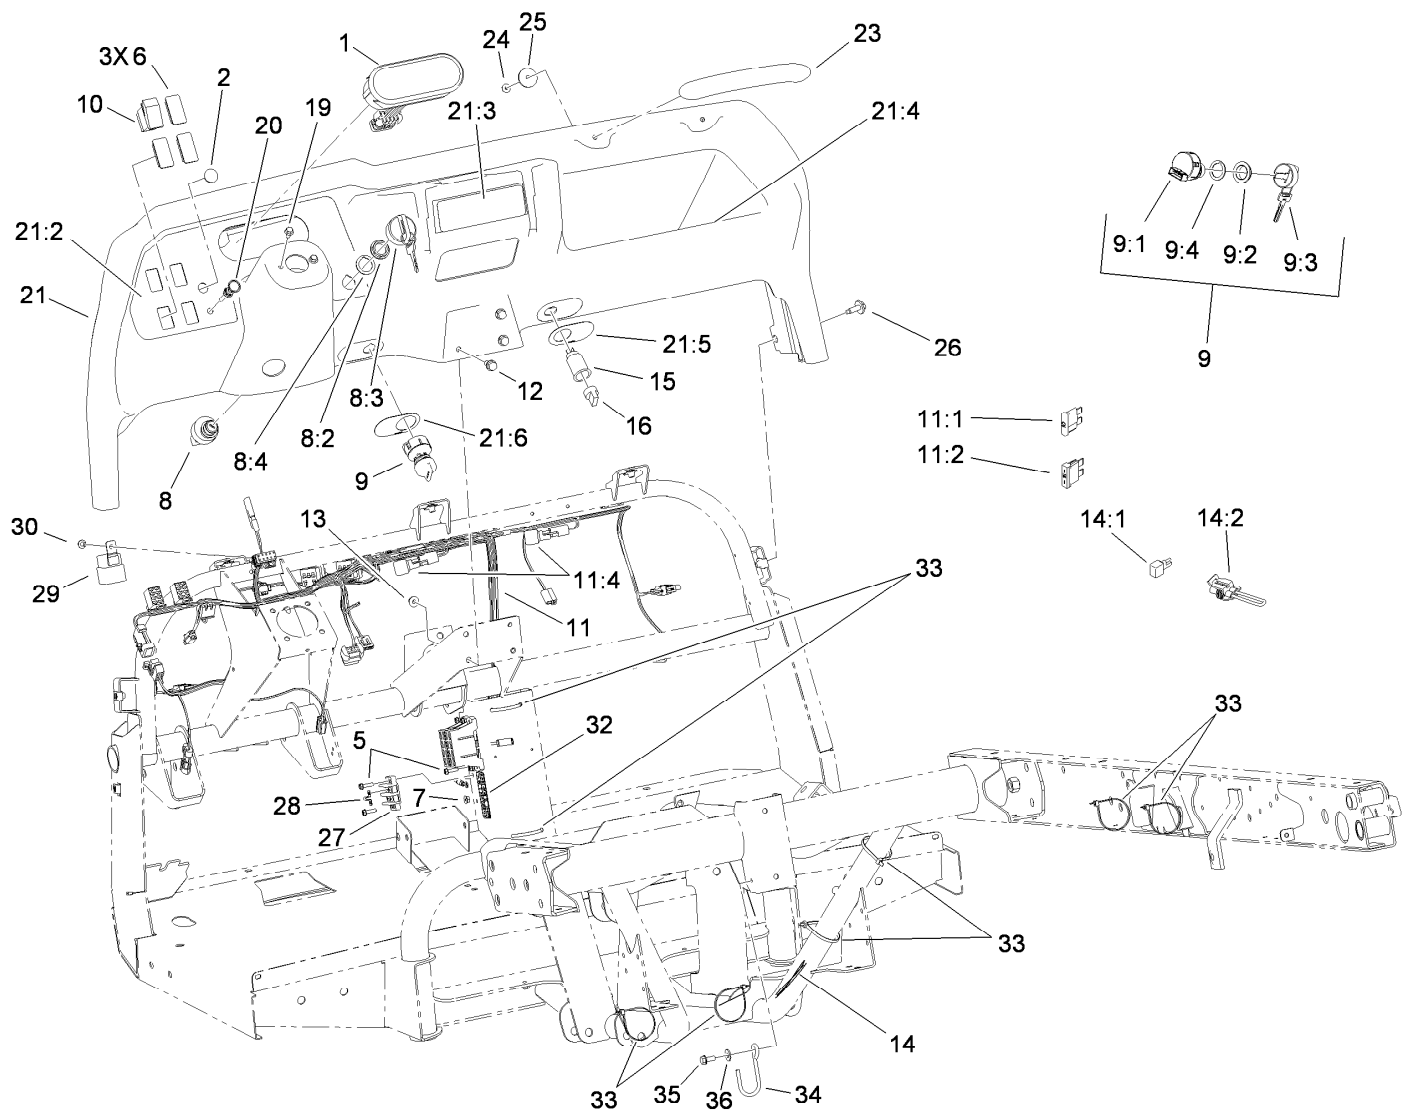

## Dash Assembly

| Ref. | Part Number | Qty. | Description            | Ref. | Part Number | Qty. | Description                       |
|------|-------------|------|------------------------|------|-------------|------|-----------------------------------|
| 1    | 114-8300    | 1    | Cluster-Instrument     | 11:4 | 100-4918    | 2    | Diode                             |
| 2    | 94-5627     | 1    | Plug                   | 12   | 3234-5      | 3    | Screw-HHF                         |
| 5    | 32105-13    | 6    | Screw-HWH              | 13   | 104-8300    | 3    | Nut-HF, NI                        |
| 6    | 99-7420     | 3    | Plug-Hole              | 14   | 114-8380    | 1    | Harness-Wire, Rear                |
| 7    | 3290-148    | 6    | Nut-HF                 | 14:1 | 100-4918    | 1    | Diode                             |
| 8    | 106-5269    | 1    | Ignition Switch ASM    | 14:2 | 119-7787    | 1    | Harness-Wire, Vertical Lift Shunt |
| 8:2  | 108-8660    | 1    | Nut-Mounting           | 15   | 99-7411     | 1    | Point-Power                       |
| 8:3  | 106-5270    | 1    | Ignition Key Set       | 16   | 99-7416     | 1    | Cap                               |
| 8:4  | 108-8659    | 1    | Washer-Backup          | 19   | 33103-012   | 2    | Screw-HHF                         |
| 9    | 110-2580    | 1    | Switch-Key, Supervisor | 20   | 106-7943    | 1    | Cable-Control, Choke              |
| 9:1  |             | 1    | Switch-Key ●           | 21   | 115-7912    | 1    | Dash ASM                          |
| 9:2  | 108-8660    | 1    | Nut-Mounting           | 21:2 | 115-2281    | 1    | Decal-Dash                        |
| 9:3  | 110-5221    | 1    | Set-Key, Supervisor    | 21:3 | 115-7746    | 1    | Decal-Danger                      |
| 9:4  | 108-8659    | 1    | Washer-Backup          | 21:4 | 115-2282    | 1    | Decal-Warning, Dash               |
| 10   | 95-8999     | 1    | Switch                 | 21:5 | 106-2353    | 1    | Decal-Powerpoint                  |
| 11   | 117-4998    | 1    | Harness-Wire, Front    | 21:6 | 106-2355    | 1    | Decal-Switch, Supervisor          |
| 11:1 | 218-578     | 5    | Fuse-Blade, 10 Amp     | 23   | 117-4948    | 1    | Handle-Grab                       |
| 11:2 | 109355      | 2    | Fuse-Blade, 15 Amp     |      |             |      |                                   |

 ● Not serviced separately

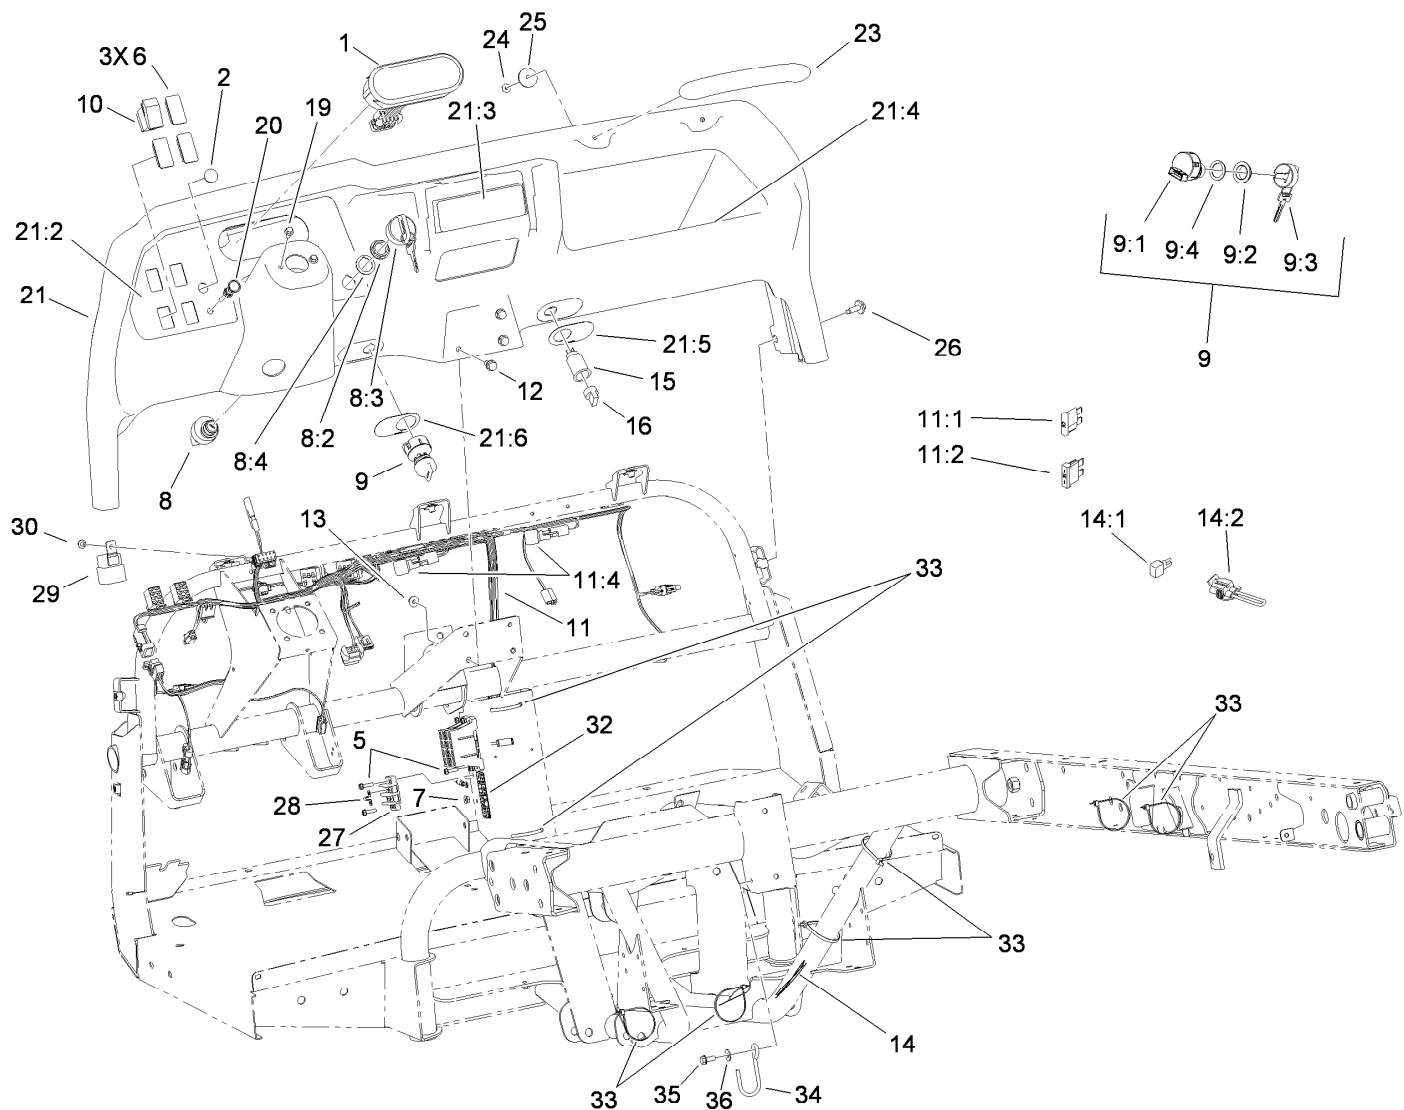


## Dash Assembly (continued)

| Ref. | Part Number | Qty. | Description            |
|------|-------------|------|------------------------|
| 24   | 104-7201    | 2    | Nut-HF                 |
| 25   | 103995      | 2    | Washer                 |
| 26   | 114-8418    | 7    | Screw-HWH, Sems        |
| 27   | 42862       | 1    | Block-Terminal, Ground |
| 28   | 42863       | 1    | Strip-Jumper           |
| 29   | 99-7430     | 1    | Relay                  |

| Ref. | Part Number | Qty. | Description |
|------|-------------|------|-------------|
| 30   | 32144-10    | 1    | Screw-HWH   |
| 32   | 115-7813    | 1    | Decal-Fuse  |
| 33   | 3290-379    | 8    | Tie-Cable   |
| 34   | 117-4860    | 1    | Guide-Cable |
| 35   | 32144-11    | 1    | Screw-HWHTF |
| 36   | 3256-71     | 1    | Washer-Flat |

 
● Not serviced separately

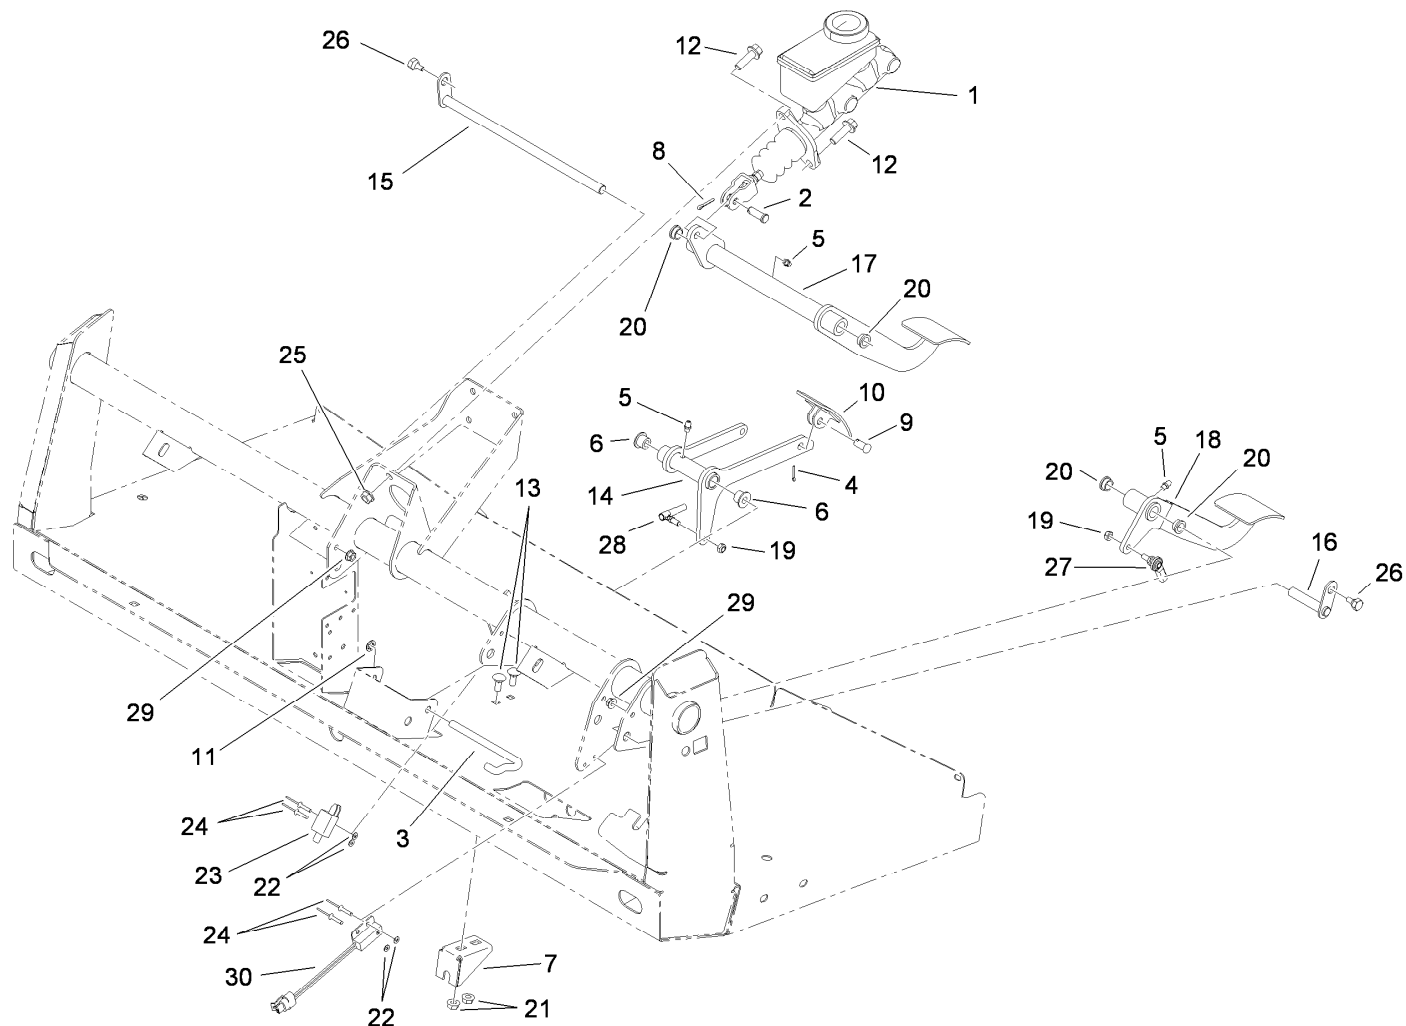

## Pedal Assembly


| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 1    | 104-6782    | 1    | Master Cylinder ASM      |
| 2    | 283-2       | 1    | Pin-Clevis               |
| 3    | 87-2880     | 1    | Shaft-Pedal, Accelerator |
| 4    | 3272-6      | 1    | Pin-Cotter               |
| 5    | 302-5       | 3    | Fitting-Grease           |
| 6    | 256-259     | 2    | Bushing-Flange           |
| 7    | 106-2421    | 1    | Bracket-Mount, Cable     |
| 8    | 3272-10     | 1    | Pin-Cotter               |
| 9    | 283-85      | 1    | Pin-Clevis               |
| 10   | 93-8969-03  | 1    | Pedal                    |
| 11   | 32151-56    | 1    | Ring-Retaining, External |
| 12   | 3234-11     | 2    | Screw-HHF                |
| 13   | 3230-1      | 2    | Bolt-CARR                |
| 14   | 106-2471-03 | 1    | Arm-Pedal, Accelerator   |
| 15   | 106-2475    | 1    | Shaft-Brake              |
 
| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 16   | 115-2269    | 1    | Pin-Pivot           |
| 17   | 115-2275-03 | 1    | Pedal-Brake         |
| 18   | 115-2271-03 | 1    | Pedal-Clutch        |
| 19   | 3296-13     | 2    | Nut-Lock, NI        |
| 20   | 256-156     | 4    | Bushing-Flange      |
| 21   | 32128-20    | 2    | Nut-HF              |
| 22   | 3256-21     | 4    | Washer-Flat         |
| 23   | 95-1653     | 1    | Switch-Pole, Single |
| 24   | 3269-25     | 4    | Rivet-Pop           |
| 25   | 3290-357    | 2    | Nut-HHF, Whiz       |
| 26   | 63-3410     | 2    | Screw-Shoulder      |
| 27   | 110-2554    | 1    | Rod End-Spherical   |
| 28   | 18-1720     | 1    | Ball Joint          |
| 29   | 32128-33    | 2    | Nut-HF              |
| 30   | 105-0023    | 1    | Switch-Proximity    |

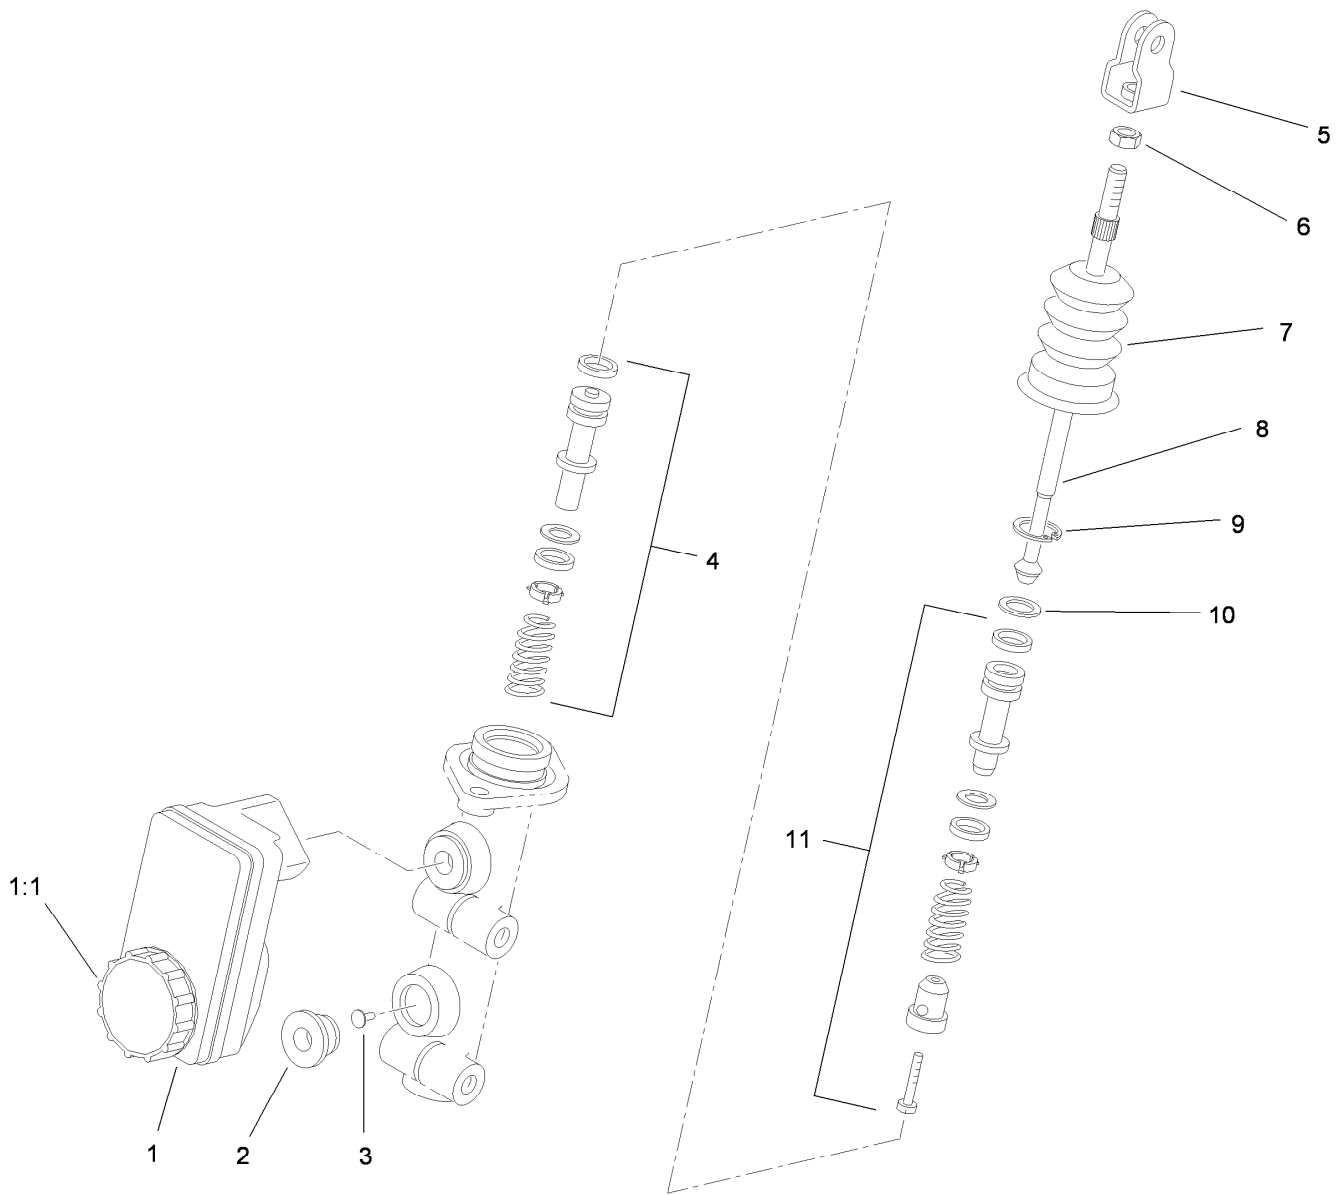


## Master Cylinder Assembly No. 104-6782
 
| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 1    | 104-6845    | 1    | Reservoir ASM        |
| 1:1  | 92-4112     | 1    | Cap ASM              |
| 2    | 93-8971     | 2    | Seal-Port, Flange    |
| 3    | 92-4103     | 1    | Pin-Stop             |
| 4    | 92-4102     | 1    | Secondary Piston ASM |
| 5    | 92-4110     | 1    | Clevis               |
| 6    | 21-0360     | 1    | Nut-Hex              |
| 7    | 94-5209     | 1    | Cover-Dust           |
| 8    | 94-5210     | 1    | Rod-Push             |
| 9    | 92-4109     | 1    | Ring-Snap            |
| 10   | 92-4108     | 1    | Retainer-Washer      |
| 11   | 92-4101     | 1    | Primary Piston ASM   |

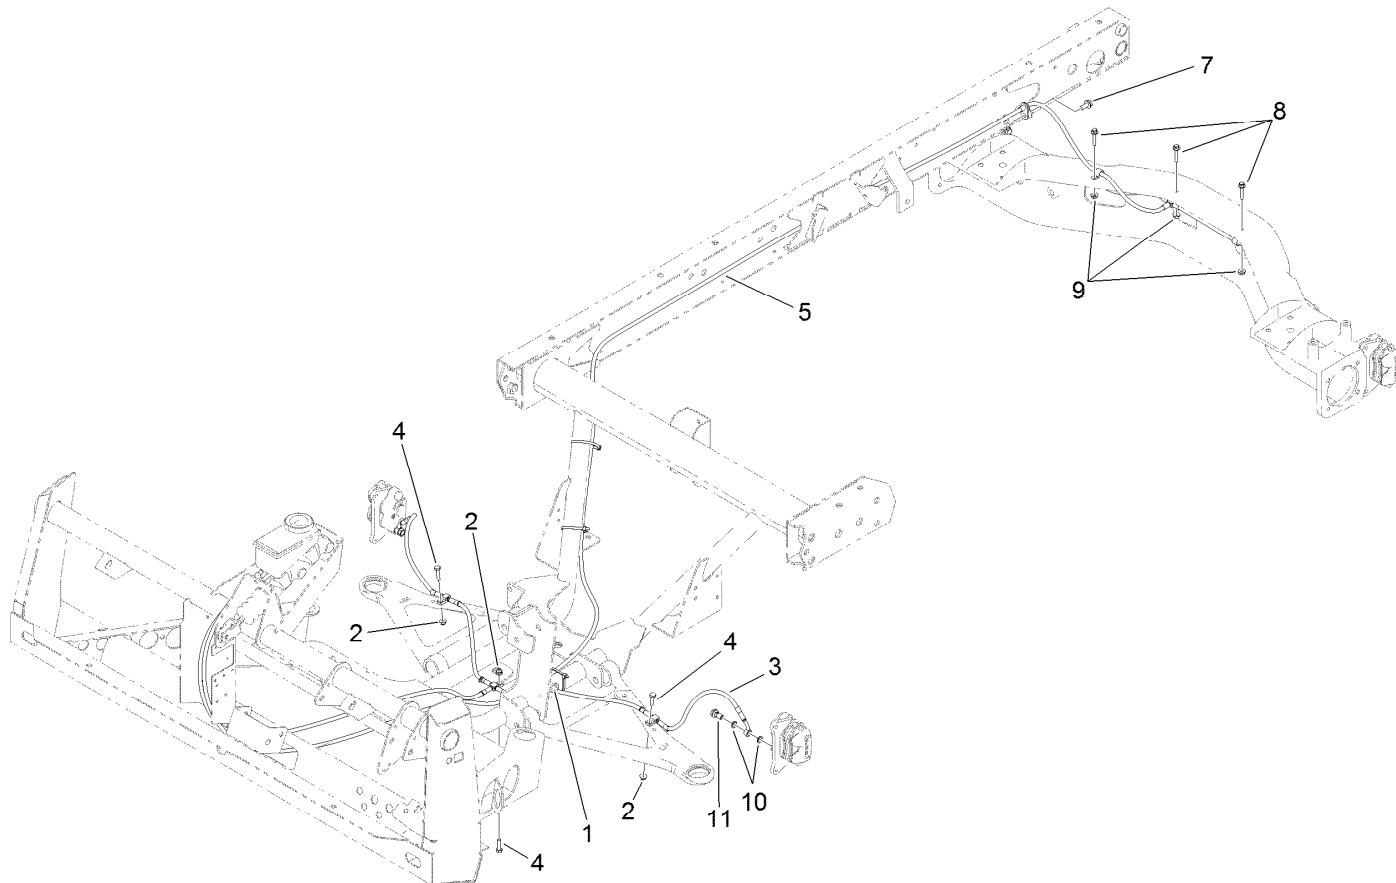

## Hydraulic Brake Line Assembly

 
| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 1    | 32180-030   | 2    | Clip-Tie             |
| 2    | 104-7201    | 3    | Nut-HF               |
| 3    | 119-9682    | 1    | Front Brake Line ASM |
| 4    | 321-6       | 3    | Screw-HH             |
| 5    | 119-9681    | 1    | Rear Brake Line ASM  |
| 7    | 32144-11    | 1    | Screw-HWHTF          |
| 8    | 3234-21     | 3    | Screw-HHF            |
| 9    | 32128-33    | 3    | Nut-HF               |
| 10   | 115-2341    | 8    | Washer-Banjo         |
| 11   | 120-4875    | 4    | Bolt-Flange, Banjo   |

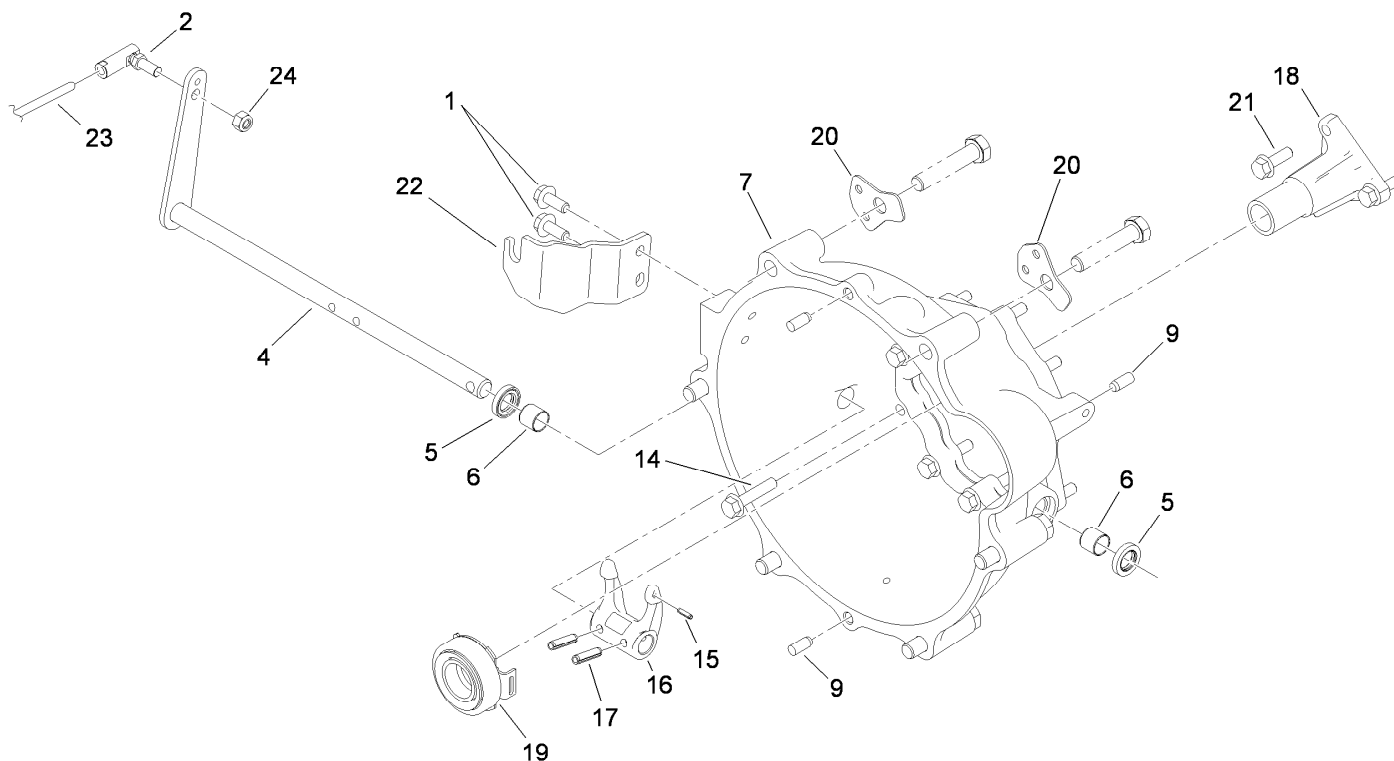

## Clutch Linkage Assembly

| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 1    | 98-7977     | 2    | Screw-HHF                |
| 2    | 2411-33     | 1    | Balljoint-RH (W/Grommet) |
| 4    | 115-2311    | 1    | Lever-Clutch             |
| 5    | 87-1920     | 2    | Seal-Oil                 |
| 6    | 87-3770     | 2    | Bushing-Housing, Bell    |
| 7    | 104-9249    | 1    | Housing-Bell             |
| 9    | 87-1910     | 4    | Pin-Dowel                |
| 14   | 33104-040   | 9    | Screw-HHF                |
| 15   | 32121-7     | 1    | Pin-Roll, Slotted        |
 
| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 16   | 87-5300     | 1    | Fork-Clutch             |
| 17   | 32121-24    | 2    | Pin-Spring              |
| 18   | 115-2259    | 1    | Guide-Release           |
| 19   | 110-2538    | 1    | Bearing-Release, Clutch |
| 20   | 115-2247    | 2    | Bracket-Harness         |
| 21   | 33104-025   | 3    | Screw-HHF               |
| 22   | 115-2313    | 1    | Bracket-Cable, Clutch   |
| 23   | 115-2284    | 1    | Cable-Clutch            |
| 24   | 3296-4      | 1    | Nut-Lock                |

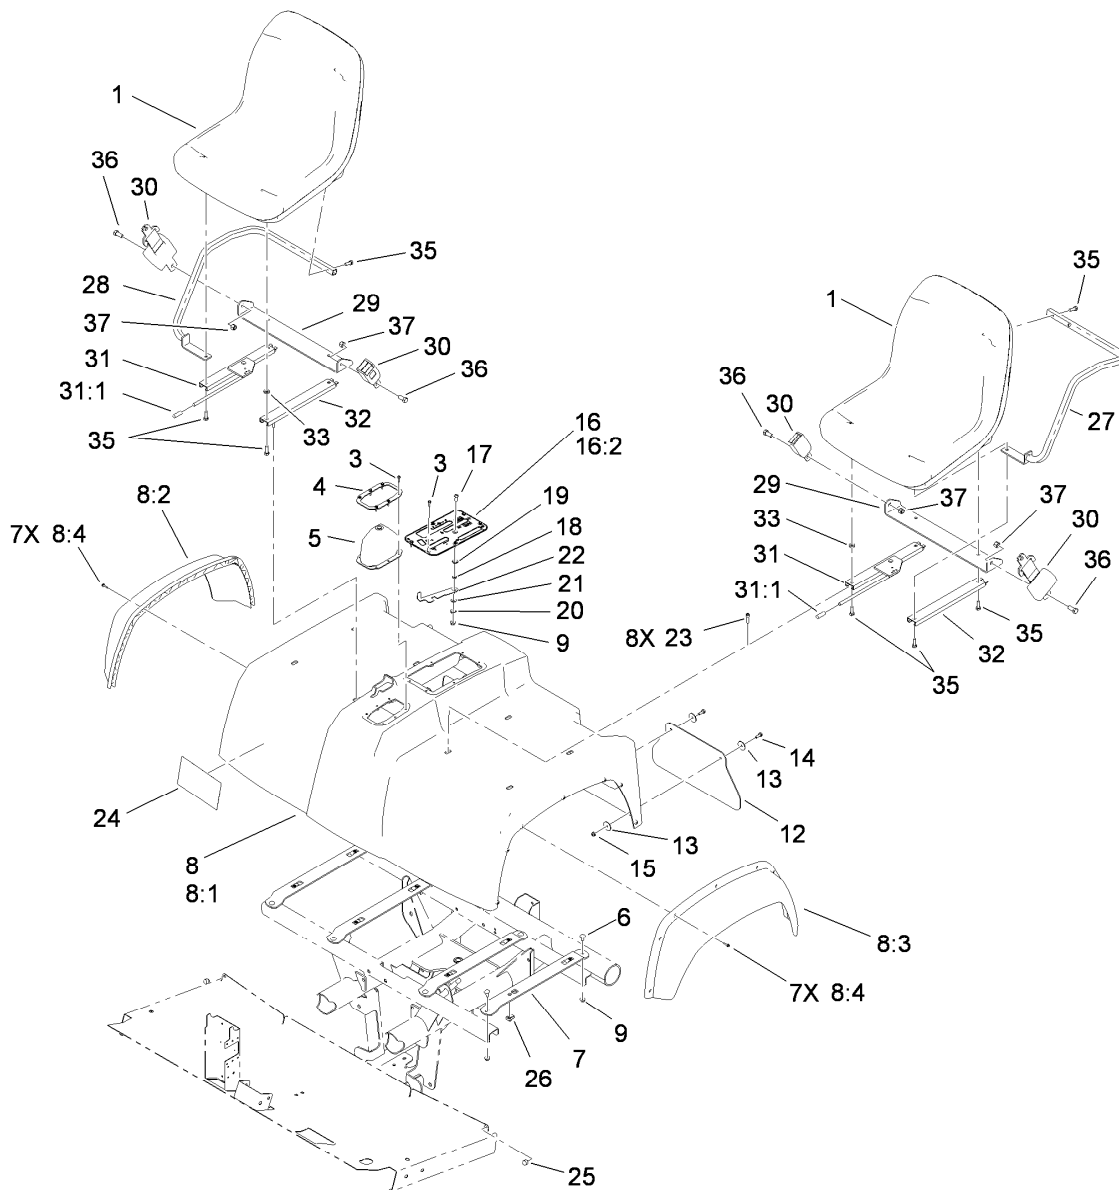

## Shroud and Seat Assembly

| Ref. | Part Number | Qty. | Description       |
|------|-------------|------|-------------------|
| 1    | 112-2923    | 2    | Seat ASM          |
| 3    | 98-1375     | 12   | Screw-HWH         |
| 4    | 87-3760-03  | 1    | Plate-Boot, Shift |
| 5    | 87-8620     | 1    | Boot-Shift        |
| 6    | 3230-1      | 8    | Bolt-CARR         |
| 7    | 115-2435-03 | 4    | Bracket-Seat      |
| 8    |             | 1    | Seat Base ASM ●   |
| 8:1  | 114-8406    | 1    | Base-Seat         |
| 8:2  | 114-8407    | 1    | Fender-Front, RH  |
| 8:3  | 114-8408    | 1    | Fender-Front, LH  |
| 8:4  | 117-5036    | 14   | Screw-HWH         |
| 9    | 104-8300    | 9    | Nut-HF, NI        |
| 12   | 106-2378    | 2    | Mudflap           |
| 13   | 3256-55     | 8    | Washer-Flat       |
| 14   | 3234-4      | 4    | Screw-HHF         |
| 15   | 104-7201    | 4    | Nut-HF            |
| 16   | 106-7886    | 1    | Control Plate ASM |
| 16:2 | 106-2377    | 1    | Decal-Console     |

| Ref. | Part Number | Qty. | Description                |
|------|-------------|------|----------------------------|
| 17   | 3274-55     | 1    | Screw-HSBH                 |
| 18   | 82-4240     | 1    | Spacer-Bearing             |
| 19   | 94-8196     | 1    | Washer-Nylon               |
| 20   | 3290-221    | 1    | Washer-Spring              |
| 21   | 3256-23     | 1    | Washer-Plain               |
| 22   | 106-7984    | 1    | Lever-Detent               |
| 23   | 3274-22     | 8    | Screw-HSH                  |
| 24   | 115-7814    | 1    | Decal-Reference, Quick     |
| 25   | 107-8042    | 2    | Bumper-Rubber              |
| 26   | 115-7721    | 8    | Nut-Clip, U                |
| 27   | 119-0731-03 | 1    | Armrest-LH                 |
| 28   | 119-0732-03 | 1    | Armrest-RH                 |
| 29   | 119-0727-03 | 2    | Bracket-Belt, Seat         |
| 30   | 110-0413    | 2    | Seatbelt-Retractable       |
| 31   | 119-0654    | 2    | Adjuster-Seat, Locking     |
| 31:1 | 2410-49     | 1    | Cap-Vinyl                  |
| 32   | 119-0655    | 2    | Adjuster-Seat, Non Locking |
| 33   | 104-7658    | 2    | Spacer                     |

 
● Not serviced separately



| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 36          | 3212-4             | 4           | Screw-HH           |
| 37          | 3296-7             | 4           | Nut-Lock           |

07




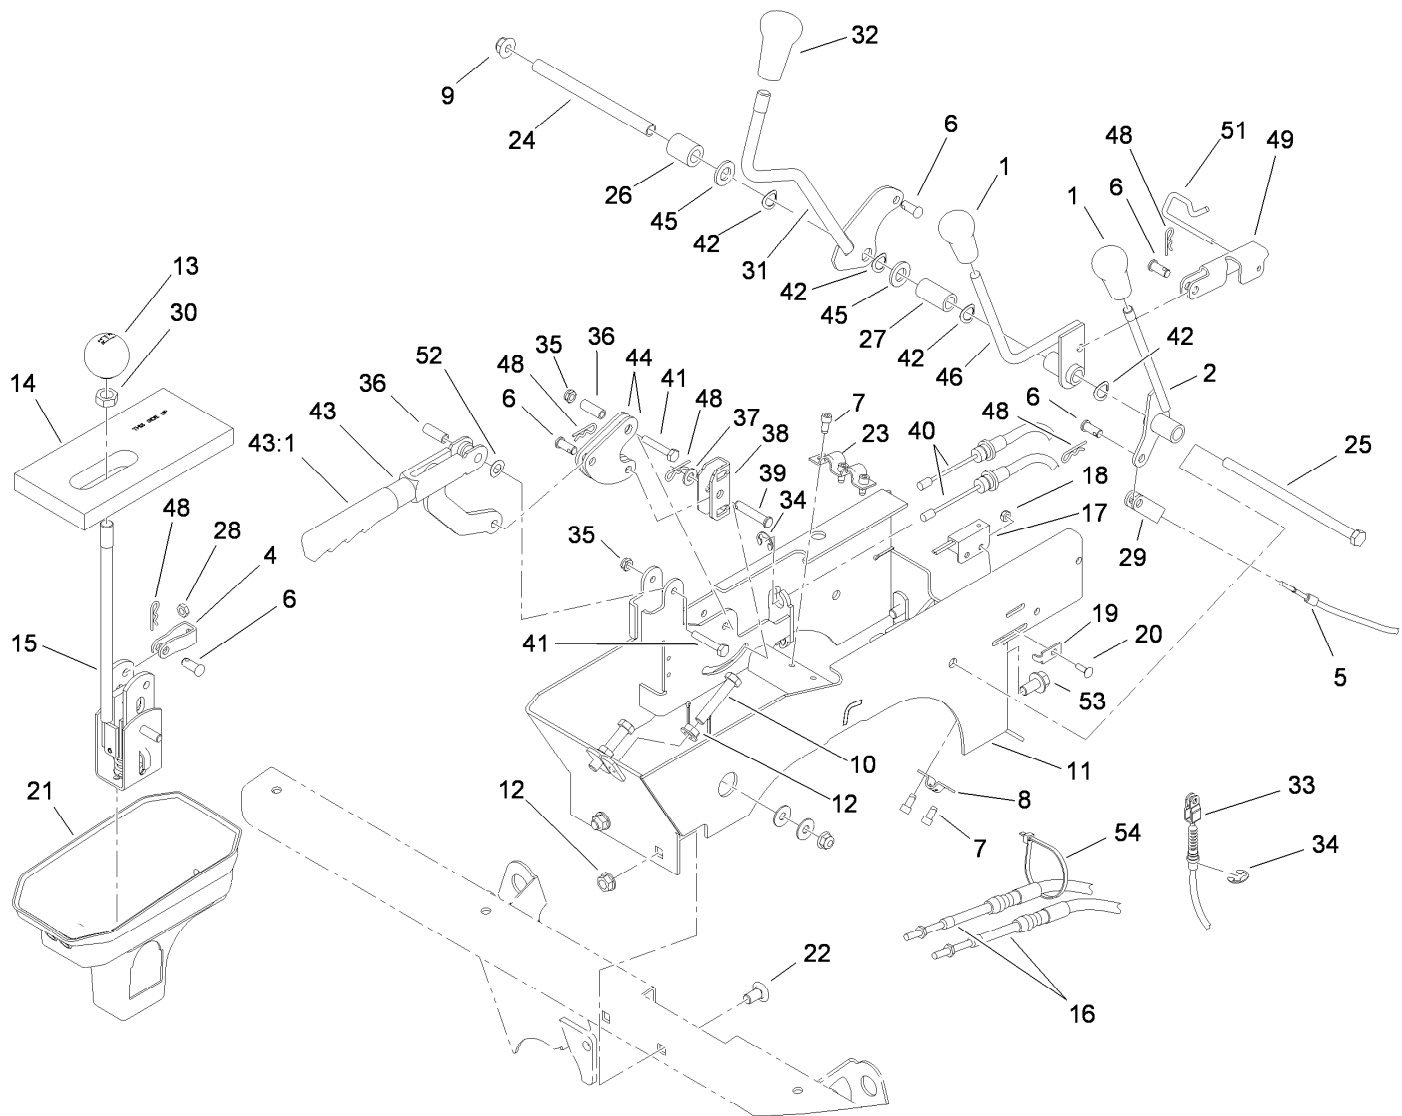

## Console Assembly (continued)


| Ref. | Part Number | Qty. | Description       |
|------|-------------|------|-------------------|
| 43   | 104-6842    | 1    | Lever-Brake, Park |
| 43:1 | 106-7972    | 1    | Grip-Handle       |
| 44   | 106-7814    | 2    | Bellcrank         |
| 45   | 33096-00    | 2    | Washer-Flat       |
| 46   | 106-7960    | 1    | Lever-HYD         |
| 48   | 3290-307    | 7    | Pin-Cotter        |
 
| Ref. | Part Number | Qty. | Description   |
|------|-------------|------|---------------|
| 49   | 115-2250    | 1    | Link          |
| 51   | 115-2350    | 1    | Pin-Retainer  |
| 52   | 3290-477    | 1    | Washer-Curved |
| 53   | 3234-12     | 2    | Screw-HHF     |
| 54   | 3290-379    | 3    | Tie-Cable     |

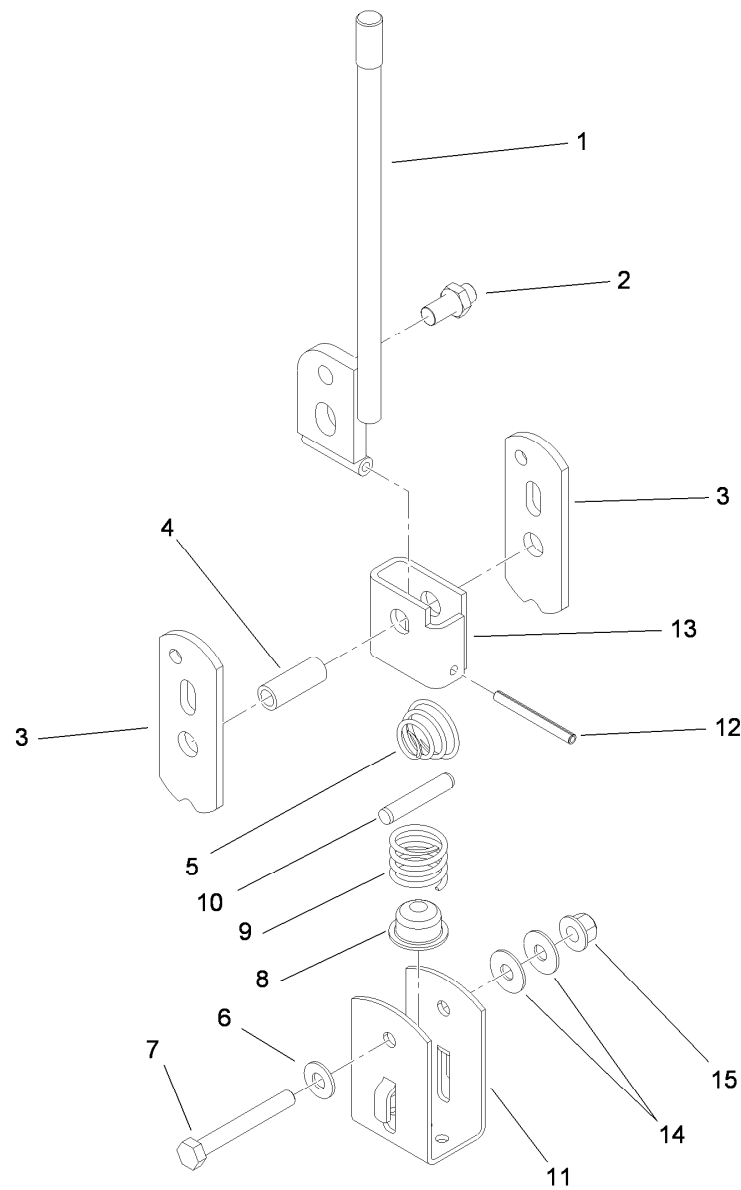


## Shift Assembly No. 106-7887
 
| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 1    | 87-2040     | 1    | Lever-Shift        |
| 2    | 87-3650     | 1    | Pin-Shift          |
| 3    | 87-3540     | 2    | Link-Shift         |
| 4    | 87-2520     | 1    | Tube-Pivot         |
| 5    | 87-2900     | 1    | Spring-Compression |
| 6    | 87-8640     | 1    | Washer-Flat        |
| 7    | 322-12      | 1    | Screw-HH           |
| 8    | 87-3530     | 1    | Button-Shifter     |
| 9    | 87-3660     | 1    | Spring-Compression |
| 10   | 3290-507    | 1    | Pin-Dowel          |
| 11   | 87-3520     | 1    | Clevis             |
| 12   | 32121-48    | 1    | Pin-Spring         |
| 13   | 87-6040     | 1    | Bracket-Shifter    |
| 14   | 3290-456    | 2    | Washer-Belleville  |
| 15   | 104-8300    | 1    | Nut-HF, NI         |

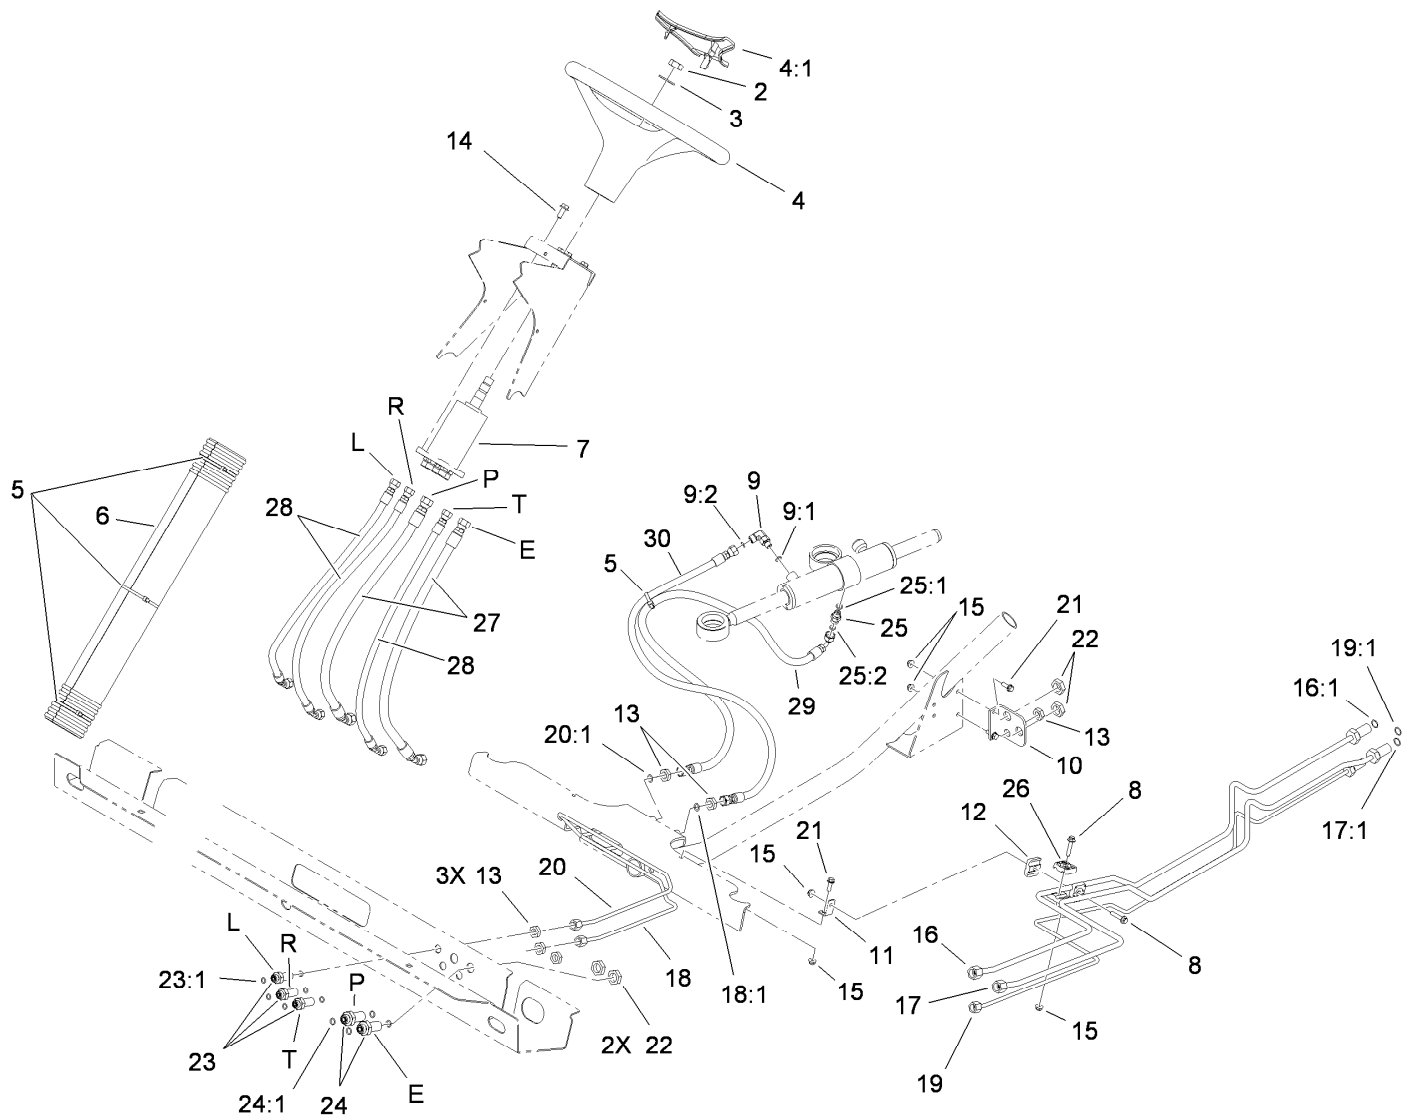

## Steering Hydraulic Assembly

 
| Ref. | Part Number | Qty. | Description            | Ref. | Part Number | Qty. | Description                |
|------|-------------|------|------------------------|------|-------------|------|----------------------------|
| 2    | 3296-33     | 1    | Nut-Lock, NI           | 18   | 106-7804    | 1    | Tube-HYD                   |
| 3    | 3256-27     | 1    | Washer-Flat            | 18:1 | 237-21      | 1    | O-Ring                     |
| 4    | 98-1471     | 1    | Wheel-Steering         | 19   | 115-7703    | 1    | Tube-HYD                   |
| 4:1  | 98-1468     | 1    | Cover-Wheel, Steering  | 19:1 | 237-21      | 1    | O-Ring                     |
| 5    | 3290-379    | 4    | Tie-Cable              | 20   | 106-7806    | 1    | Tube-HYD                   |
| 6    | 106-6713    | 1    | Cover-Lines, Steering  | 20:1 | 237-21      | 1    | O-Ring                     |
| 7    | 115-7926    | 1    | Pump-Steering          | 21   | 3234-4      | 3    | Screw-HHF                  |
| 8    | 3234-21     | 2    | Screw-HHF              | 22   | 340-70      | 4    | Nut-Lock                   |
| 9    | 340-132     | 1    | Fitting-90 DEG         | 23   | 94-1444     | 3    | Union-Bulkhead             |
| 9:1  | 237-78      | 1    | O-Ring                 | 23:1 | 237-21      | 2    | O-Ring                     |
| 9:2  | 237-21      | 1    | O-Ring                 | 24   | 340-71      | 2    | Fitting-Straight, Bulkhead |
| 10   | 106-7801-03 | 1    | Bracket-Line, Steering | 24:1 | 237-22      | 2    | O-Ring                     |
| 11   | 106-7807    | 1    | Bracket-Line, Steering | 25   | 340-92      | 1    | Fitting-Straight           |
| 12   | 106-7839    | 2    | Clamp-Tube             | 25:1 | 237-78      | 1    | O-Ring                     |
| 13   | 3219-10     | 6    | Nut-Hex                | 25:2 | 237-21      | 1    | O-Ring                     |
| 14   | 98-7977     | 4    | Screw-HHF              | 26   | 56-7973     | 2    | Clamp-Tube                 |
| 15   | 104-7201    | 5    | Nut-HF                 | 27   | 106-7975    | 2    | Hose-HYD                   |
| 16   | 115-7701    | 1    | Tube-HYD               | 28   | 106-7974    | 3    | Hose-HYD                   |
| 16:1 | 237-22      | 1    | O-Ring                 | 29   | 117-4861    | 1    | Hose-HYD                   |
| 17   | 115-7702    | 1    | Tube-HYD               | 30   | 108-6505    | 1    | Hose ASM                   |
| 17:1 | 237-22      | 1    | O-Ring                 |      |             |      |                            |

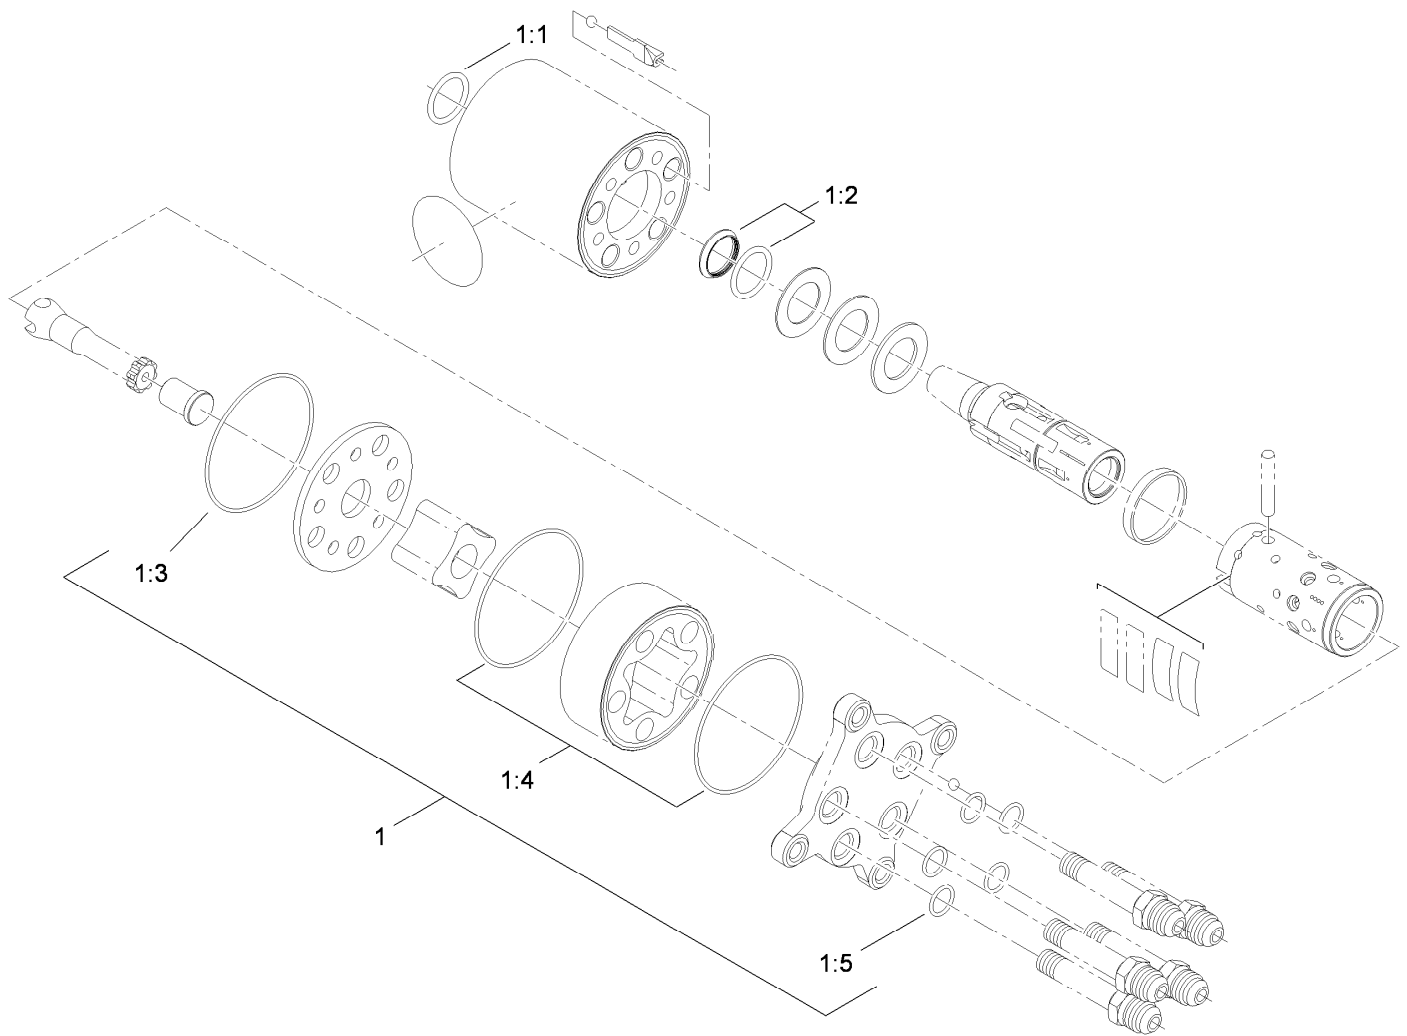

## Steering Valve Assembly No. 115-7926


| Ref. | Part Number | Qty. | Description       |
|------|-------------|------|-------------------|
| 1    | 106-6716    | 1    | Seal Kit          |
| 1:1  |             | 1    | Ring-Seal, Dust ● |
| 1:2  |             | 1    | Seal-Shaft ●      |
| 1:3  |             | 1    | Ring-Retaining ●  |
| 1:4  |             | 2    | Ring-Retaining ●  |
| 1:5  |             | 5    | Ring-Retaining ●  |

 ● Not serviced separately

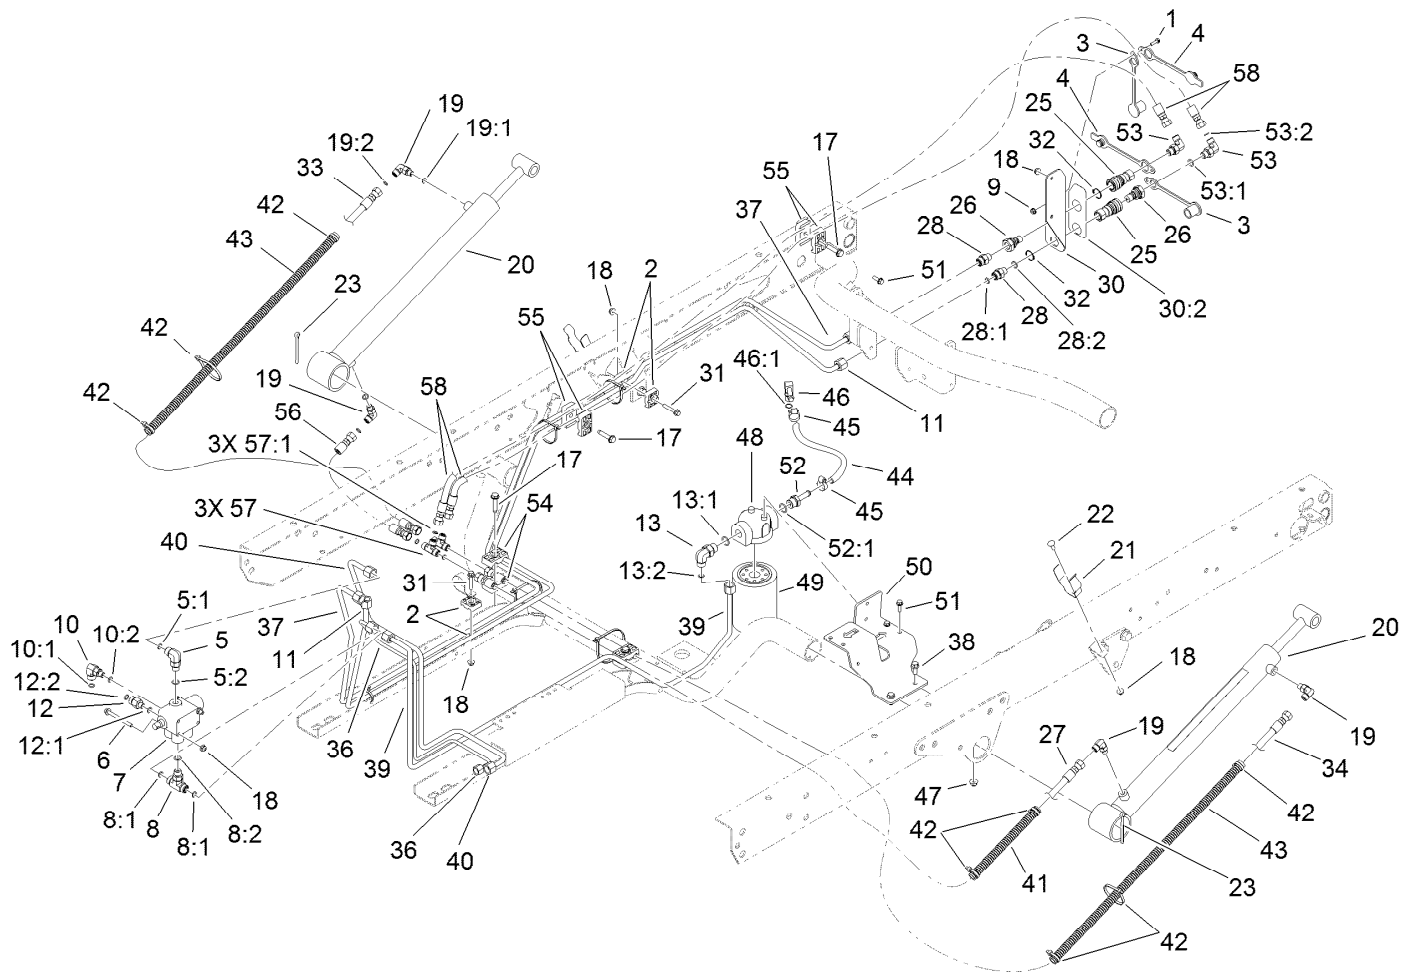


## Lift Valve and Hydraulics Assembly
 
| Ref. | Part Number | Qty. | Description           | Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-----------------------|------|-------------|------|-------------------------|
| 1    | 32105-13    | 1    | Screw-HWH             | 13:1 | 237-79      | 1    | O-Ring                  |
| 2    | 56-7973     | 4    | Clamp-Tube            | 13:2 | 237-22      | 1    | O-Ring                  |
| 3    | 106-7881    | 2    | Cap-Dust, HYD         | 17   | 32144-57    | 4    | Screw                   |
| 4    | 106-7882    | 2    | Plug-Dust, HYD        | 18   | 104-7201    | 8    | Nut-HF                  |
| 5    | 340-77      | 1    | Fitting-Elbow-90      | 19   | 340-132     | 4    | Fitting-90 DEG          |
| 5:1  | 237-22      | 1    | O-Ring                | 19:1 | 237-78      | 1    | O-Ring                  |
| 5:2  | 237-42      | 1    | O-Ring                | 19:2 | 237-21      | 1    | O-Ring                  |
| 6    | 114-8410    | 2    | Screw-HHF             | 20   | 106-7939    | 2    | HYD Cylinder ASM        |
| 7    | 43-1950     | 1    | HYD Control Valve ASM | 21   | 108-3109    | 2    | Retainer-Cylinder       |
| 8    | 340-94      | 1    | Adapter               | 22   | 3229-1      | 2    | Bolt-CARR               |
| 8:1  | 237-22      | 2    | O-Ring                | 23   | 3272-37     | 2    | Pin-Cotter              |
| 8:2  | 237-42      | 1    | O-Ring                | 25   | 106-7968    | 2    | Coupler-Quick, Female   |
| 9    | 3290-148    | 1    | Nut-HF                | 26   | 106-7969    | 2    | Coupler-Quick, Male     |
| 10   | 340-97      | 1    | Fitting-Elbow 90      | 27   | 115-7711    | 1    | HYD Hose ASM            |
| 10:1 | 237-22      | 1    | O-Ring                | 28   | 340-2       | 2    | Fitting-Straight        |
| 10:2 | 237-78      | 1    | O-Ring                | 28:1 | 237-22      | 1    | O-Ring                  |
| 11   | 115-2218    | 1    | Tube-HYD              | 28:2 | 237-42      | 1    | O-Ring                  |
| 12   | 340-88      | 1    | Fitting-Str           | 30   | 115-7715    | 1    | Coupler Bracket ASM     |
| 12:1 | 237-22      | 1    | O-Ring                | 30:2 | 115-7723    | 1    | Decal-Disconnect, Quick |
| 12:2 | 237-78      | 1    | O-Ring                | 31   | 94-5781     | 2    | Screw-HHF               |
| 13   | 340-18      | 1    | Fitting-HYD, 90 DEG   | 32   | 32151-83    | 2    | Ring-Snap               |

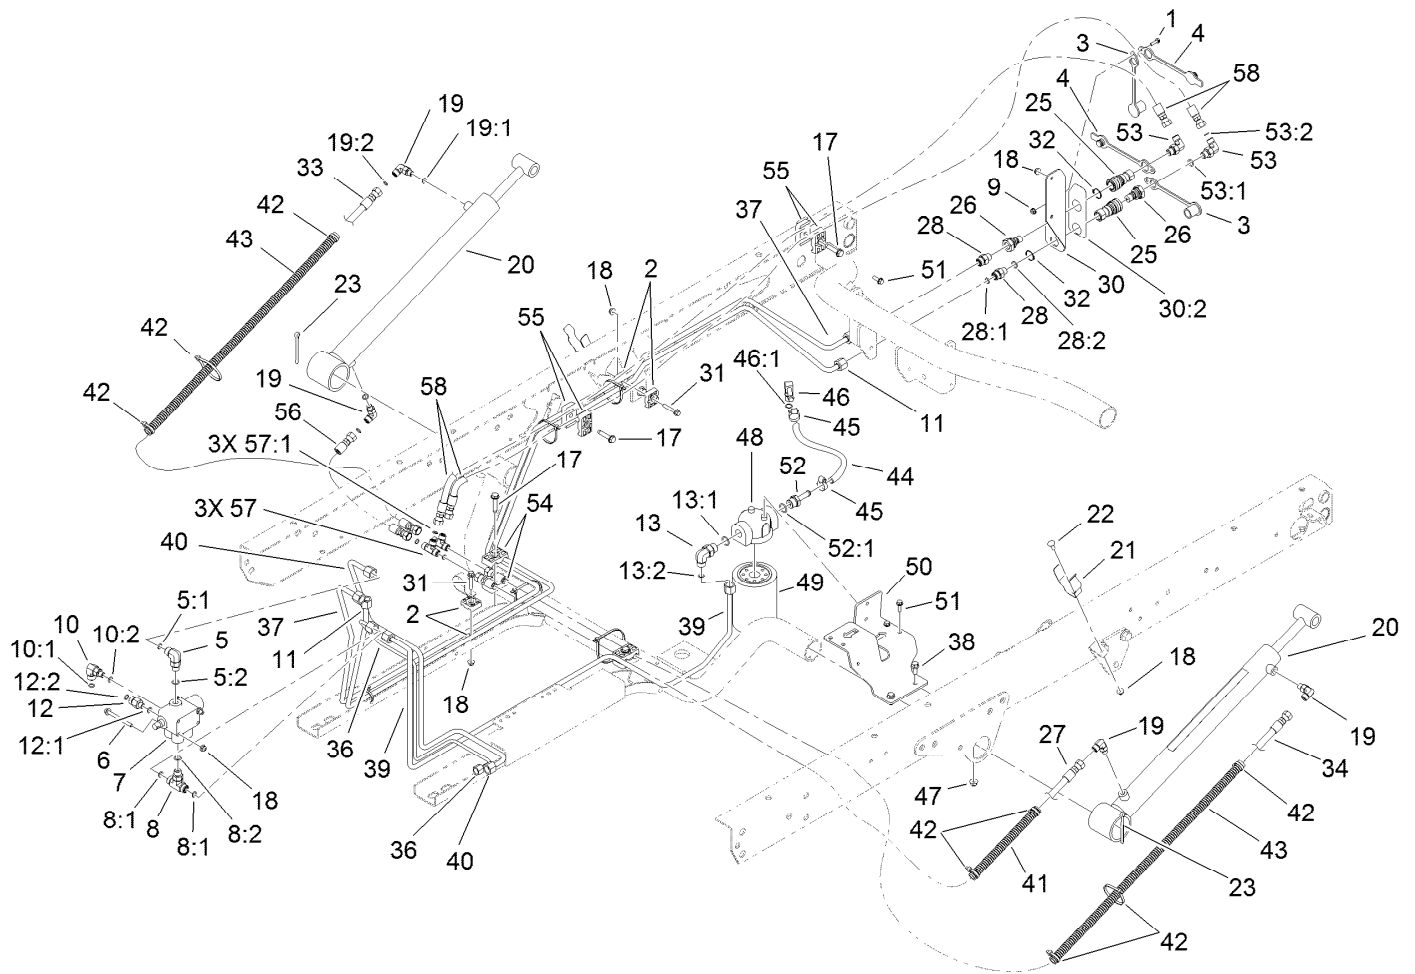

## Lift Valve and Hydraulics Assembly (continued)

 
| Ref. | Part Number | Qty. | Description              | Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|------|-------------|------|--------------------------|
| 33   | 108-6508    | 1    | Hose-HYD                 | 48   | 87-8780     | 1    | Head-Filter              |
| 34   | 104-3716    | 1    | HYD Hose ASM             | 49   | 54-0110     | 1    | Filter-Oil, Transmission |
| 36   | 115-2216    | 1    | Tube-HYD                 | 50   | 115-2168-03 | 1    | Bracket-Filter           |
| 37   | 115-2217    | 1    | Tube-HYD                 | 51   | 3234-4      | 4    | Screw-HHF                |
| 38   | 3234-5      | 2    | Screw-HHF                | 52   | 115-2231    | 1    | Fitting-Straight         |
| 39   | 115-2224    | 1    | Tube-HYD                 | 52:1 | 237-79      | 1    | O-Ring                   |
| 40   | 115-2223    | 1    | Tube-HYD                 | 53   | 340-82      | 2    | Fitting-Elbow 90         |
| 41   | 24-7922     | 1    | Conduit-Convolutd, Split | 53:1 | 237-42      | 1    | O-Ring                   |
| 42   | 3290-379    | 8    | Tie-Cable                | 53:2 | 237-21      | 1    | O-Ring                   |
| 43   | 24-7923     | 2    | Conduit-Convolutd, Split | 54   | 56-7971     | 2    | Clamp-Tube               |
| 44   | 115-2228    | 1    | HYD Hose ASM             | 55   | 56-7976     | 6    | Clamp-Tube               |
| 45   | 2412-36     | 2    | Clamp-Hose               | 56   | 110-0931    | 1    | Hose-HYD                 |
| 46   | 100-4887    | 1    | Fitting-Barbed           | 57   | 340-21      | 2    | Fitting                  |
| 46:1 | 237-42      | 1    | O-Ring                   | 57:1 | 237-21      | 3    | O-Ring                   |
| 47   | 104-8300    | 2    | Nut-HF, NI               | 58   | 106-3680    | 2    | Hose-HYD                 |

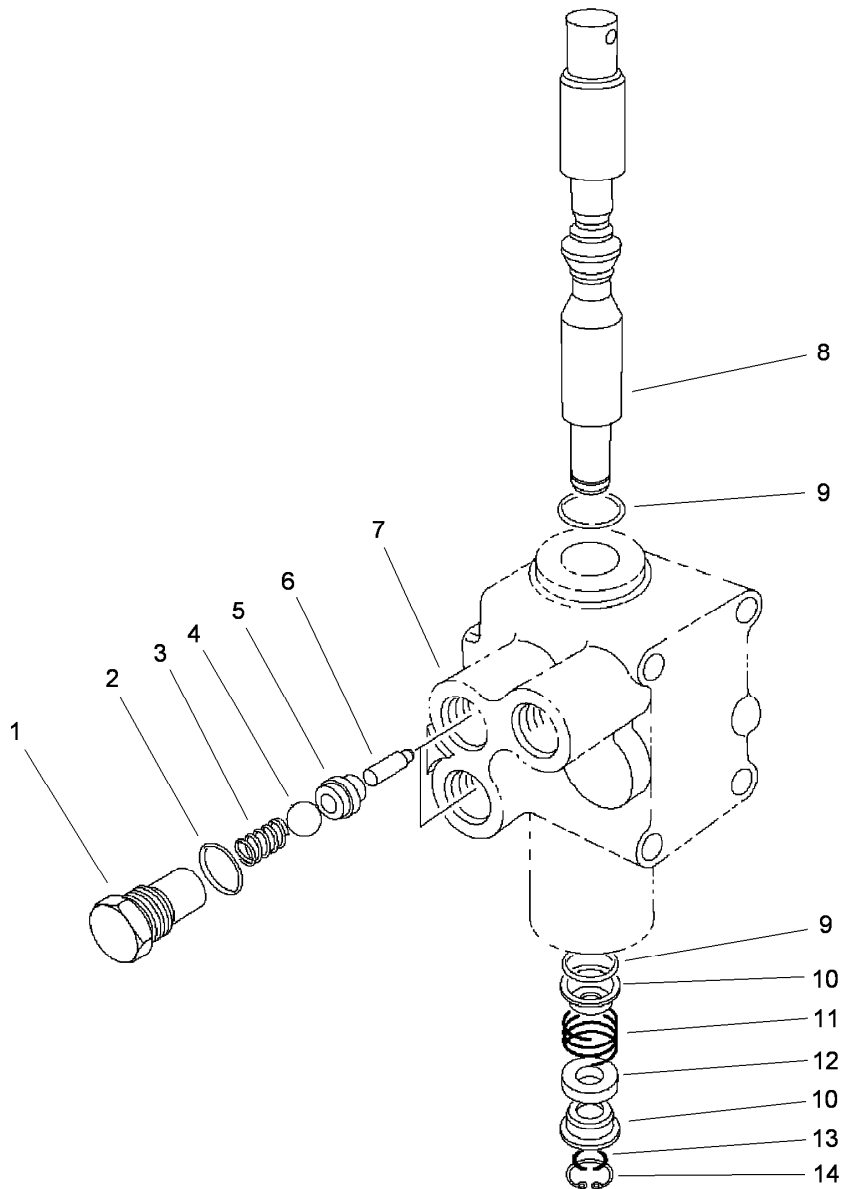

## Control Valve Assembly No. 43-1950

| Ref. | Part Number | Qty. | Description |
|------|-------------|------|-------------|
| 1    | 22-8330     | 2    | Plug        |
| 2    | 237-42      | 2    | O-Ring      |
| 3    | 22-8340     | 2    | Spring      |
| 4    | 22-8350     | 2    | Ball        |
| 5    | 22-8370     | 2    | Seat-Valve  |
| 6    | 22-8360     | 2    | Pin         |
| 7    |             | 1    | Body ●      |
| 8    | 22-8420     | 1    | Spool       |
| 9    | 22-8500     | 2    | O-Ring      |
| 10   | 22-8380     | 2    | Retainer    |
| 11   | 22-8410     | 1    | Spring      |
| 12   | 23-3030     | 1    | Spacer      |
| 13   | 22-8480     | 1    | Ring-Snap   |
| 14   | 22-8490     | 1    | Ring-Snap   |

 
● Not serviced separately

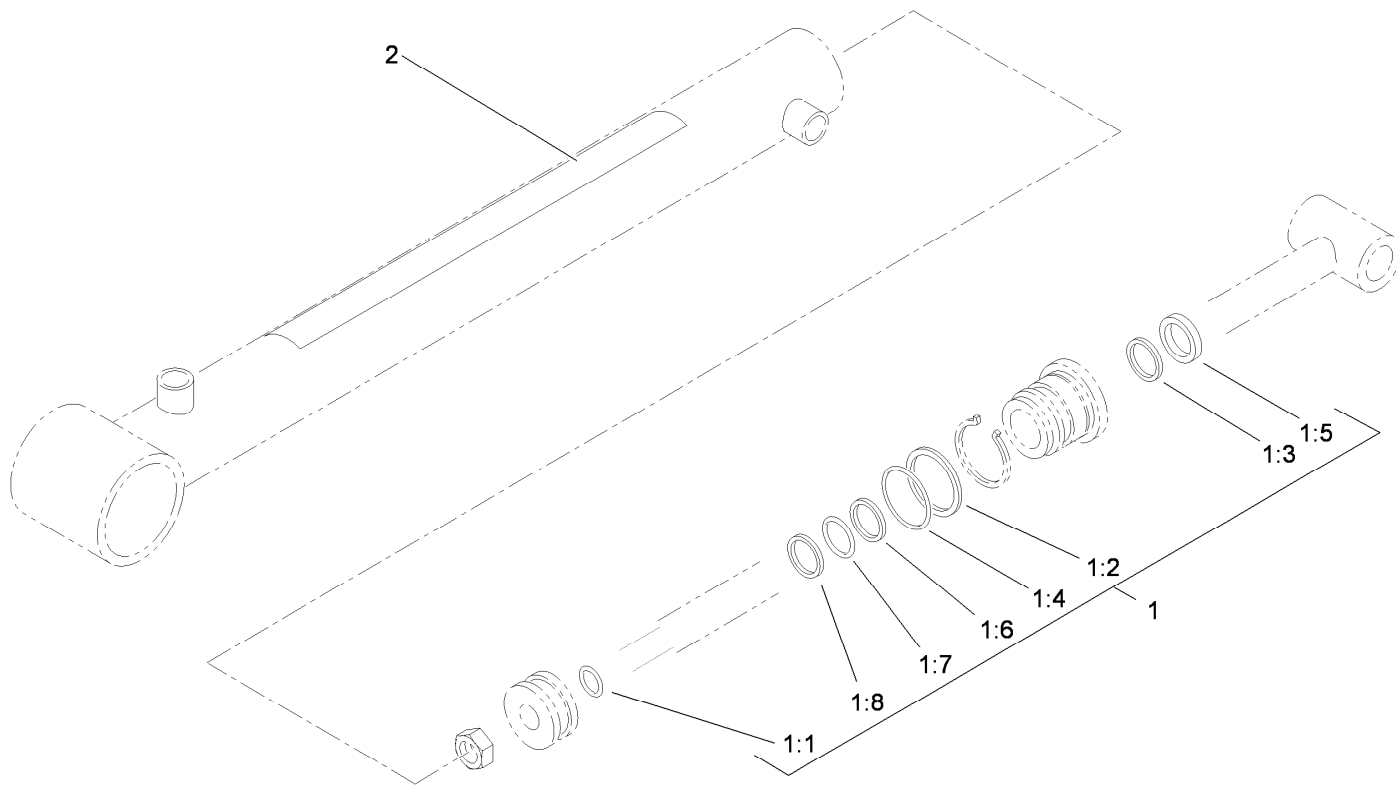

## Hydraulic Cylinder Assembly No. 106-7939

| Ref. | Part Number | Qty. | Description      |
|------|-------------|------|------------------|
| 1    | 106-7941    | 1    | Seal Kit         |
| 1:1  |             | 1    | Ring-Retaining ● |
| 1:2  |             | 1    | Ring-Retaining ● |
| 1:3  |             | 1    | Seal ●           |
| 1:4  |             | 1    | Back-Up ●        |
| 1:5  |             | 1    | Wiper ●          |
| 1:6  |             | 1    | Seal ●           |
| 1:7  |             | 1    | Ring-Retaining ● |
| 1:8  |             | 1    | Ring-Wear ●      |
| 2    | 93-9852     | 1    | Decal-Warning    |

 ● Not serviced separately

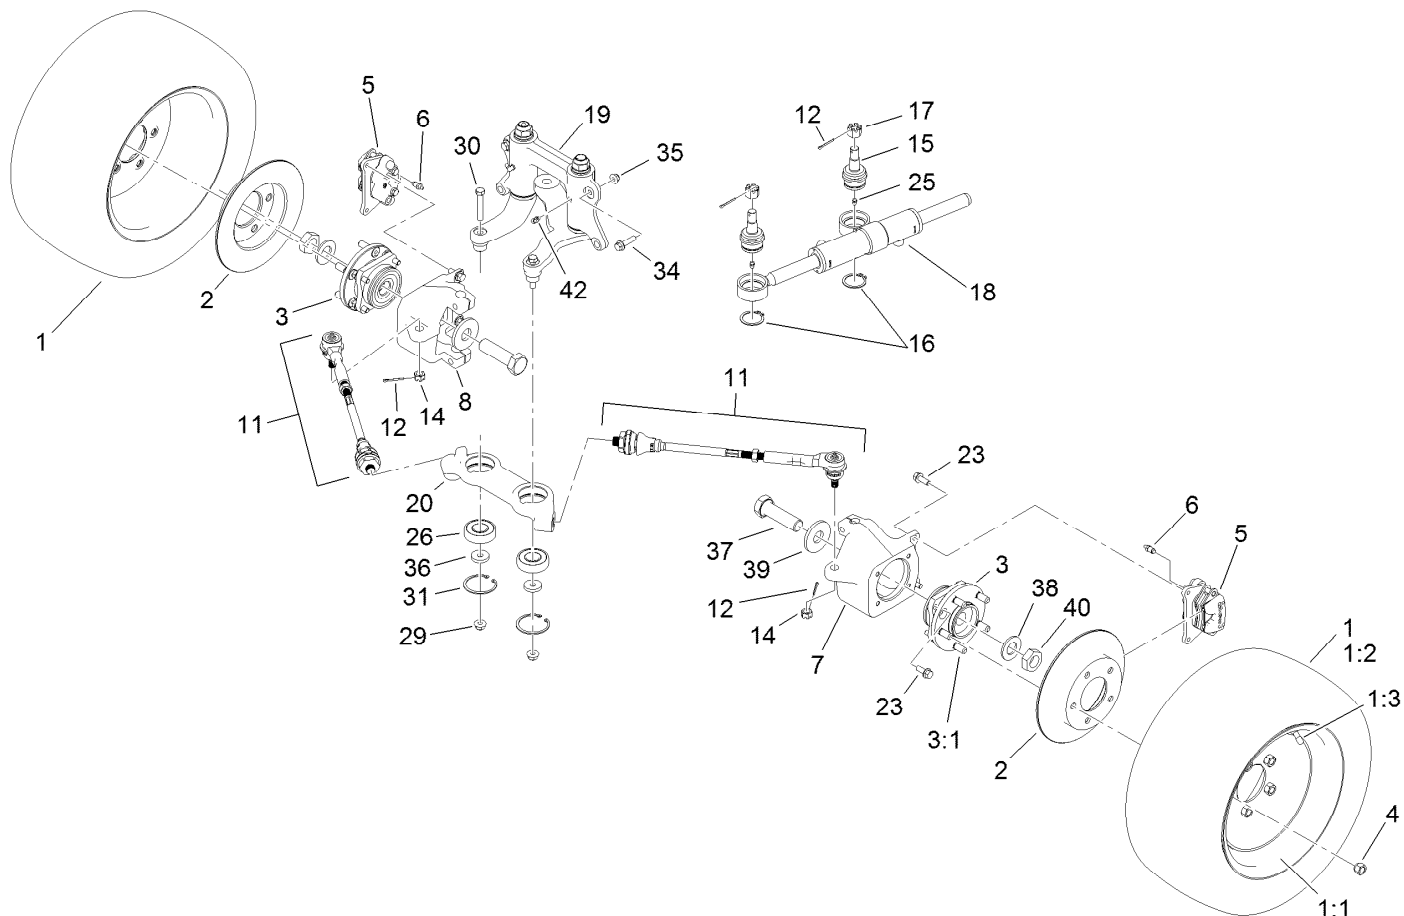


## Front Wheel Assembly

| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 1    |             | 2    | Tire And Wheel ASM ●     |
| 1:1  | 120-4901    | 1    | Wheel                    |
| 1:2  | 114-8273    | 1    | Tire                     |
| 1:3  | 232-27      | 1    | Stem-Valve               |
| 2    | 114-8351    | 2    | Rotor-Brake              |
| 3    | 112-3214    | 2    | Wheel Hub ASM            |
| 3:1  | 114-8299    | 5    | Stud-Wheel               |
| 4    | 242-50      | 10   | Nut-Lug                  |
| 5    | 119-9535    | 2    | Brake Caliper ASM        |
| 6    | 119-9509    | 2    | Screw-Bleed              |
| 7    | 119-9513    | 1    | Knuckle-LH               |
| 8    | 119-9514    | 1    | Knuckle-RH               |
| 11   | 114-8356    | 2    | Tie Rod ASM              |
| 12   | 3272-12     | 4    | Pin-Cotter               |
| 14   | 32136-3     | 2    | Nut-SHH                  |
| 15   | 106-6774    | 2    | Joint-Ball               |
| 16   | 32151-104   | 2    | Ring-Retaining, External |
| 17   | 32136-14    | 2    | Nut-Hst                  |


| Ref. | Part Number | Qty. | Description            |
|------|-------------|------|------------------------|
| 18   | 112-3217    | 1    | HYD Cylinder ASM       |
| 19   |             | 1    | Steering Linkage ASM ● |
| 20   | 114-8296    | 1    | Link-Center            |
| 23   | 3234-11     | 12   | Screw-HHF              |
| 25   | 302-5       | 2    | Fitting-Grease         |
| 26   | 119-9548    | 2    | Bearing-Ball           |
| 29   | 114-8417    | 2    | Nut-HF, NI             |
| 30   | 324-10      | 2    | Screw-HH               |
| 31   | 32120-22    | 2    | Ring-Snap, Internal    |
| 34   | 114-4681    | 2    | Screw-HHF              |
| 35   | 104-8301    | 2    | Nut-HF, NI             |
| 36   | 112843      | 2    | Washer                 |
| 37   | 115-2173    | 2    | Screw-HH               |
| 38   | 3256-62     | 2    | Washer-Flat            |
| 39   | 104-0719    | 2    | Washer-Hardened        |
| 40   | 3296-49     | 2    | Nut-Lock, NI           |
| 42   | 302-60      | 2    | Fitting-Grease         |

 ● Not serviced separately

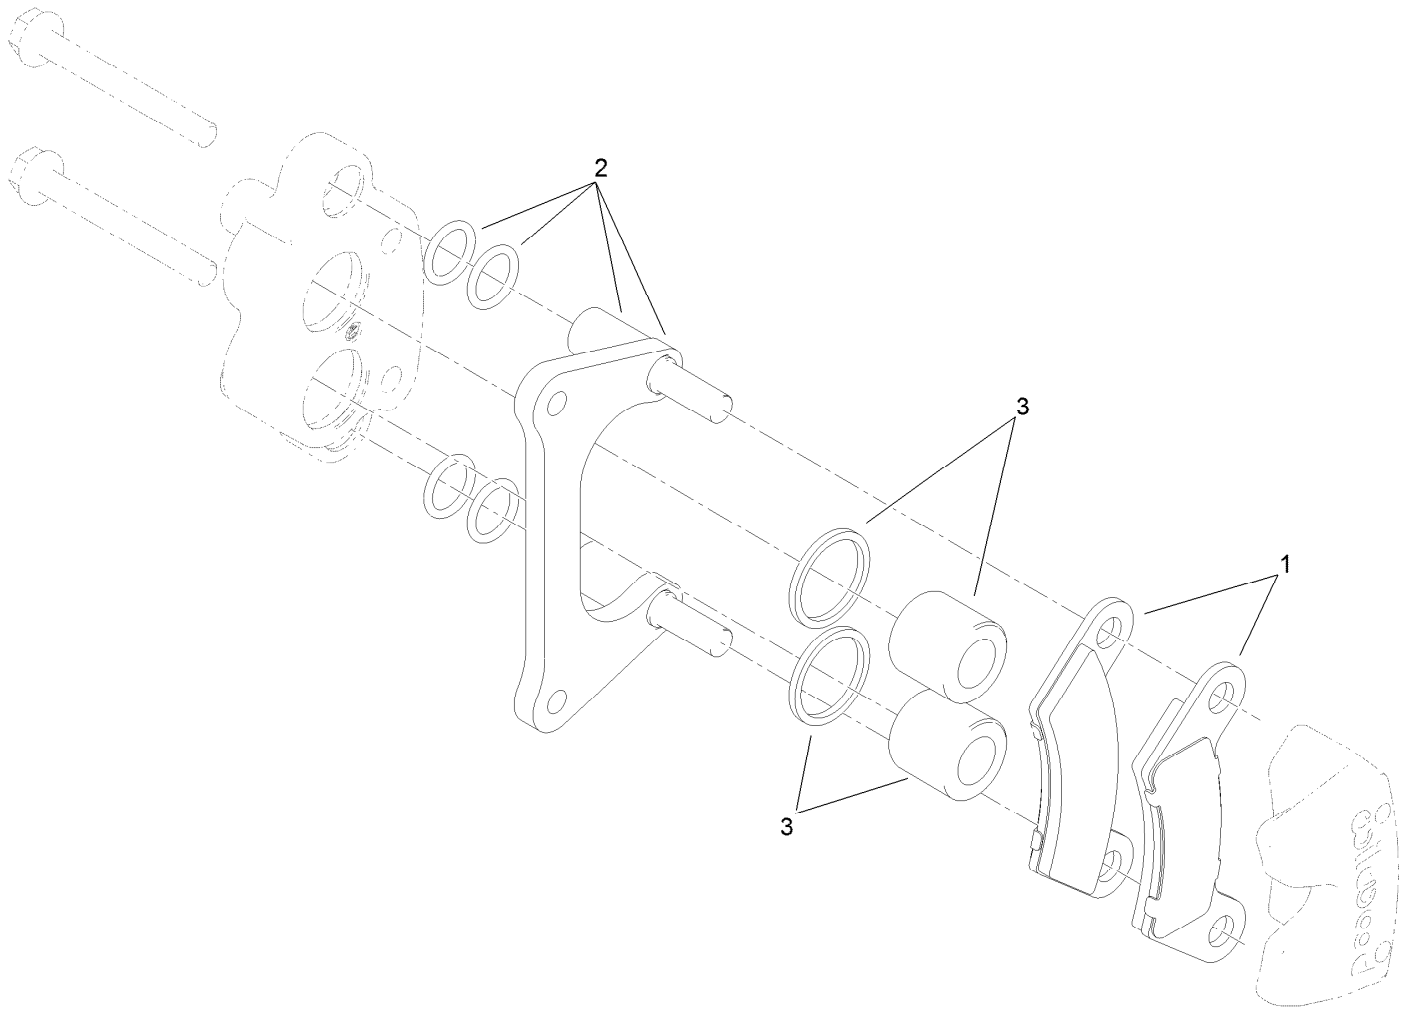

## Brake Caliper Assembly No. 119-9535

 
| Ref. | Part Number | Qty. | Description |
|------|-------------|------|-------------|
| 1    | 119-9510    | 1    | Pads-Brake  |
| 2    | 119-9511    | 1    | Bracket Kit |
| 3    | 119-9512    | 1    | Piston Kit  |

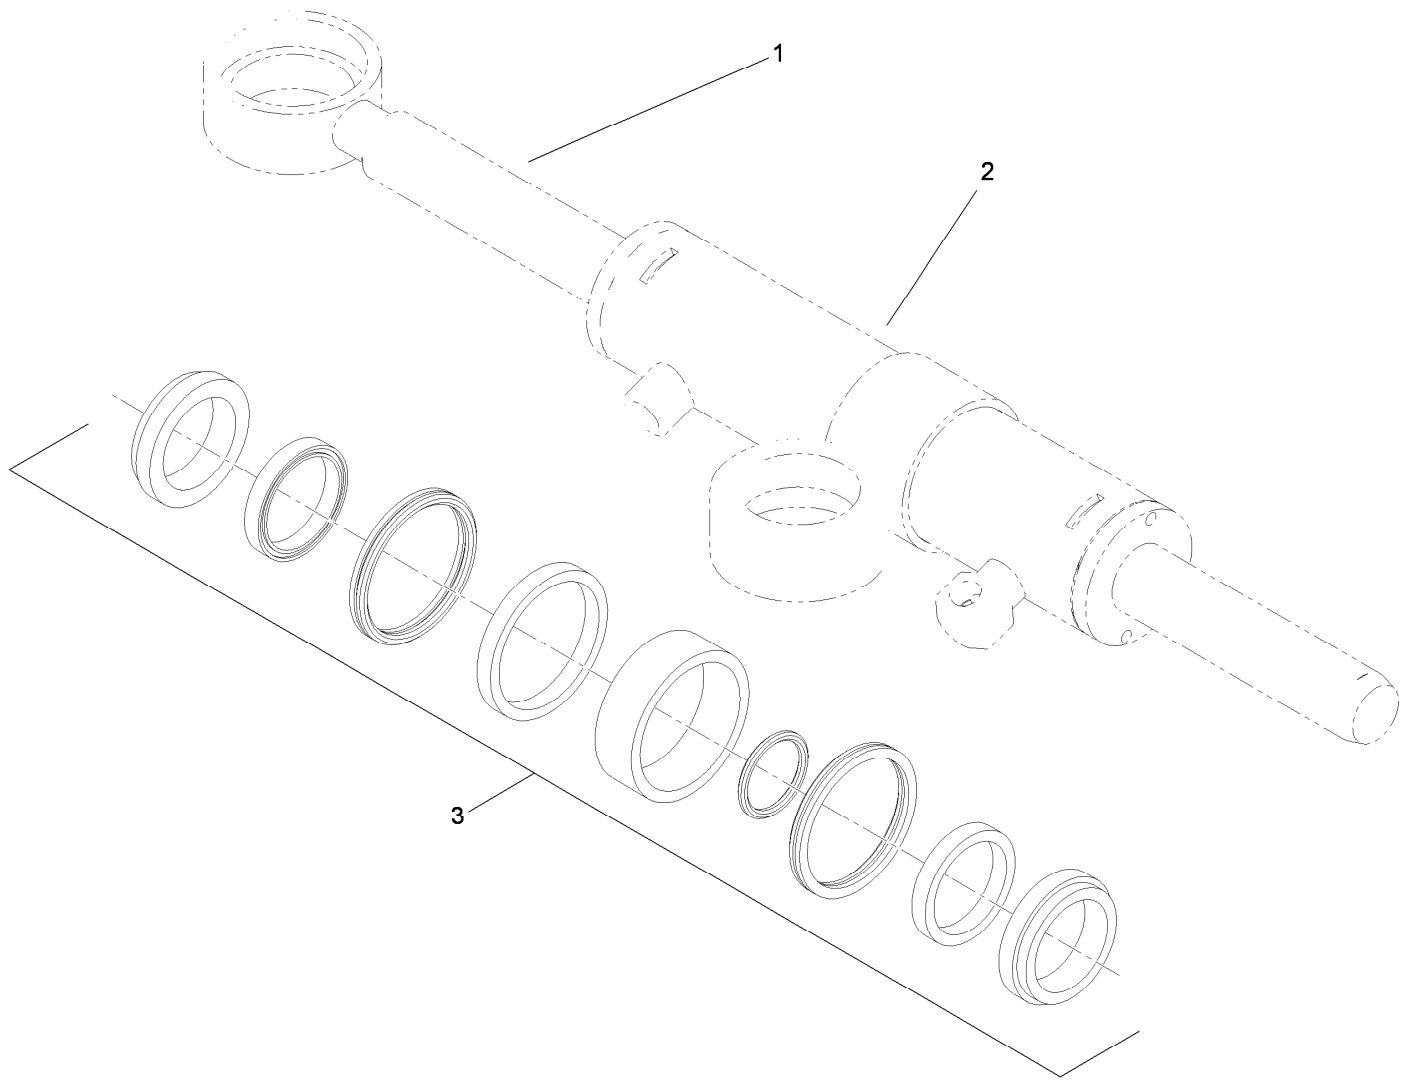

## Hydraulic Cylinder Assembly No. 112-3217


| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  |
|-------------|--------------------|-------------|---------------------|
| 1           |                    | 1           | Rod-Cylinder ●      |
| 2           |                    | 1           | Body-Cylinder ●     |
| 3           | 115-2160           | 1           | Cylinder Repair Kit |

 ● Not serviced separately

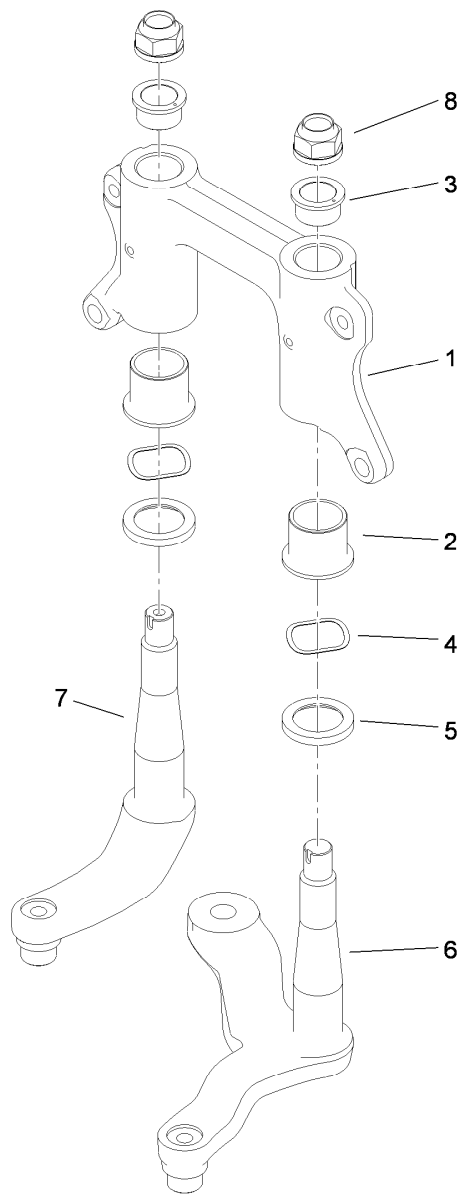

## Steering Linkage Assembly

 
| Ref. | Part Number | Qty. | Description    |
|------|-------------|------|----------------|
| 1    | 114-8389    | 1    | Mount-Pivot    |
| 2    | 69-6470     | 2    | Bushing-Castor |
| 3    | 112-1626    | 2    | Bushing-Flange |
| 4    | 93-4632     | 2    | Washer-Wavey   |
| 5    | 86-6560     | 2    | Washer-Thrust  |
| 6    | 114-8256    | 1    | Arm-Pitman     |
| 7    | 114-8298    | 1    | Arm-Idler      |
| 8    | 115-2164    | 2    | Nut-Spindle    |

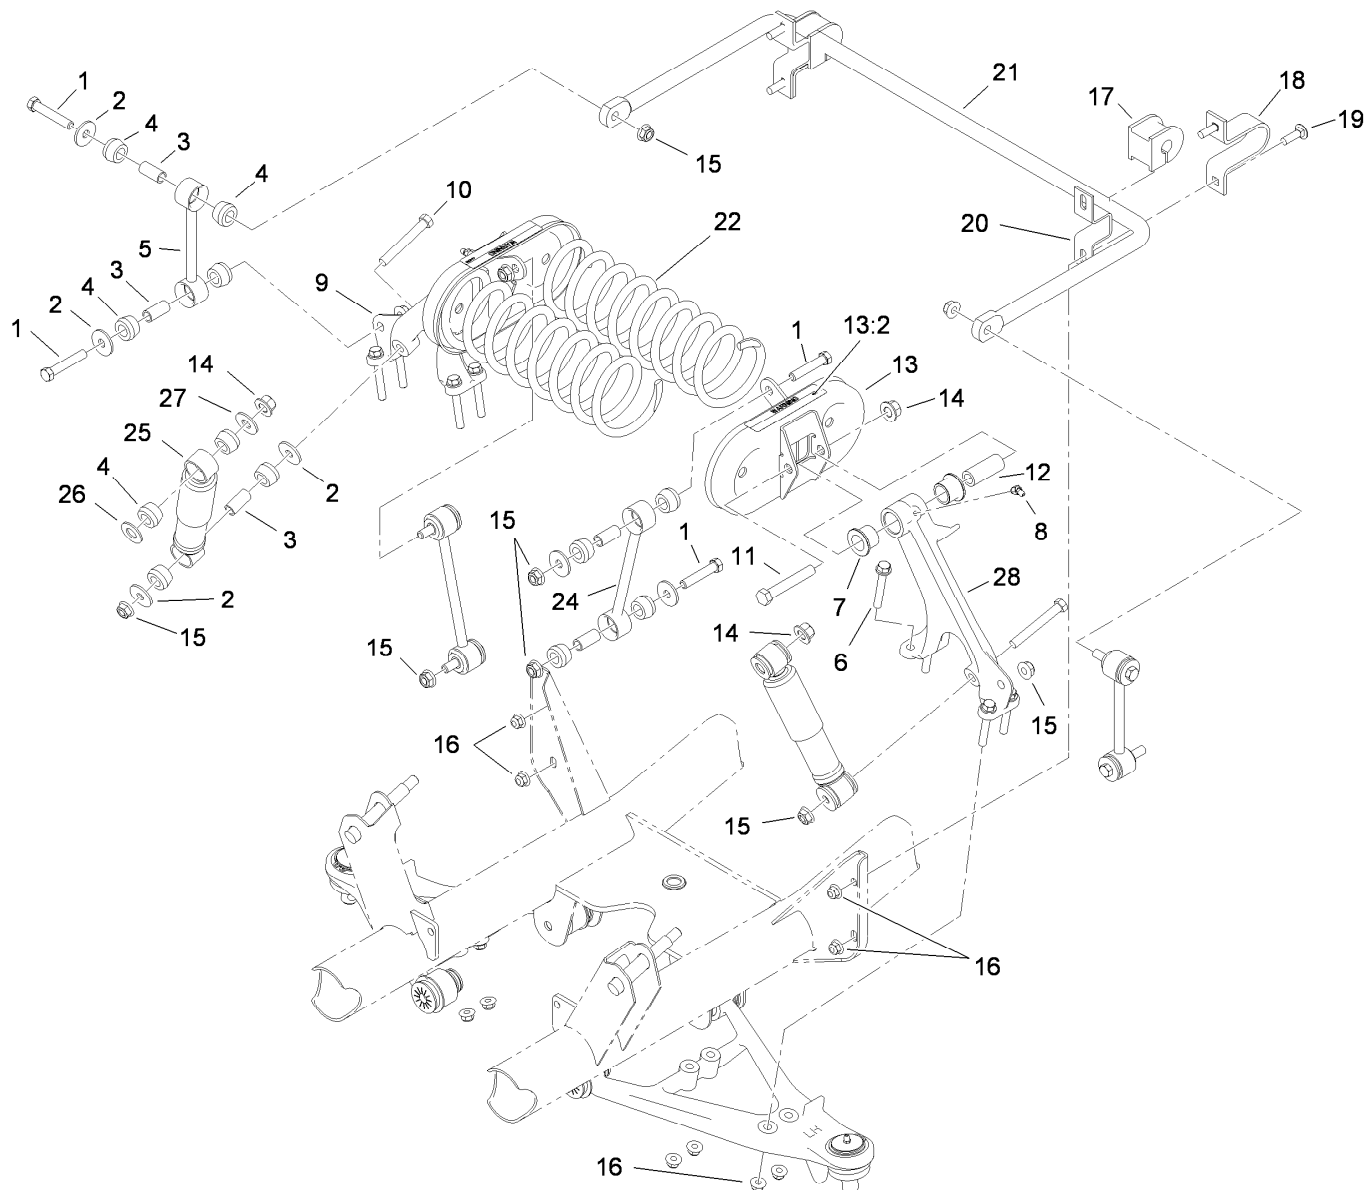

## Front Suspension Assembly


| Ref. | Part Number | Qty. | Description            |
|------|-------------|------|------------------------|
| 1    | 324-10      | 8    | Screw-HH               |
| 2    | 87-5330     | 12   | Washer                 |
| 3    | 87-3600     | 10   | Spacer-Absorber, Shock |
| 4    | 87-3920     | 24   | Bushing                |
| 5    | 87-3860-03  | 2    | Link-Sway Bar, Anti    |
| 6    | 3234-39     | 8    | Screw-HHF              |
| 7    | 33-3090     | 4    | Bushing                |
| 8    | 302-11      | 2    | Fitting-Lube, 45 DEG   |
| 9    | 87-0150     | 1    | Tower-Control Arm, RH  |
| 10   | 324-13      | 2    | Screw-HH               |
| 11   | 325-13      | 2    | Screw-HH               |
| 12   | 87-2500     | 2    | Sleeve-Spring, Pivot   |
| 13   | 105-7958    | 2    | Spring Cradle ASM      |
| 13:2 | 93-9879     | 1    | Decal-Warning          |
 
| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 14   | 99-5107     | 4    | Nut-Lock              |
| 15   | 114-8417    | 10   | Nut-HF, NI            |
| 16   | 104-8301    | 12   | Nut-HF, NI            |
| 17   | 87-3910     | 2    | Bushing-Rubber        |
| 18   | 87-4010-03  | 2    | Clamp-Bar, Sway       |
| 19   | 3231-25     | 4    | Bolt-CARR             |
| 20   | 87-3890-03  | 2    | Bracket-Bar, Sway     |
| 21   | 87-3850-03  | 1    | Bar-Sway, Anti        |
| 22   | 105-4183-01 | 2    | Spring-Compression    |
| 24   | 106-2302-03 | 2    | Link-Stabilizer       |
| 25   | 87-3110     | 2    | Absorber-Shock        |
| 26   | 3256-27     | 2    | Washer-Flat           |
| 27   | 3256-6      | 2    | Washer-Flat           |
| 28   | 87-0160     | 1    | Tower-Control Arm, LH |

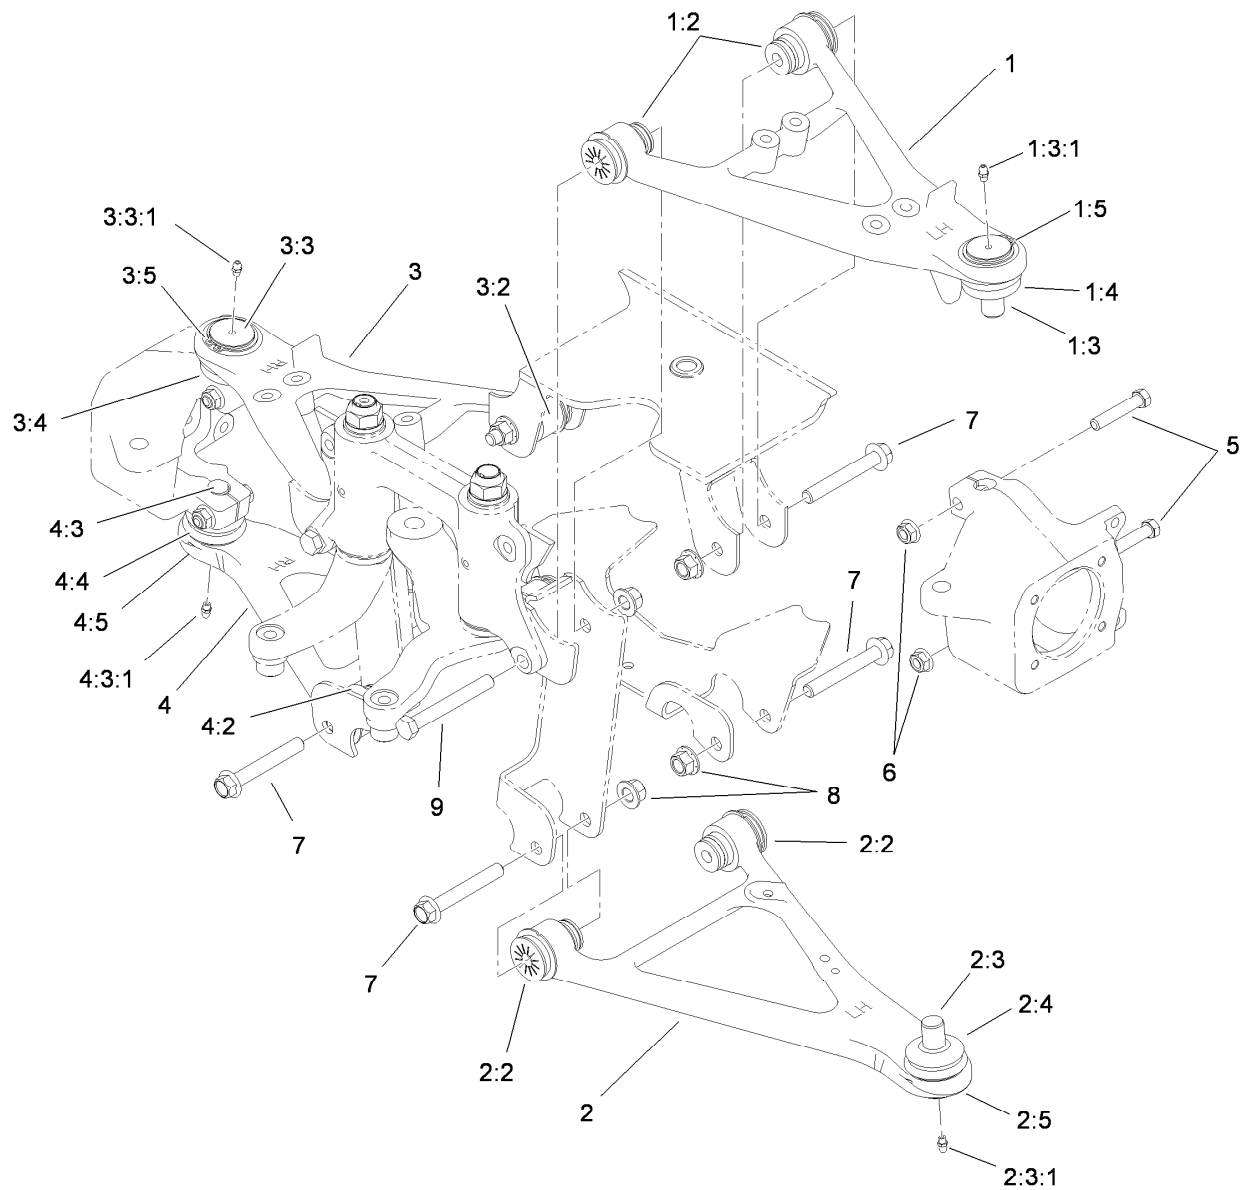

## Front Control Arm Assembly

 
| Ref.  | Part Number | Qty. | Description              | Ref.  | Part Number | Qty. | Description              |
|-------|-------------|------|--------------------------|-------|-------------|------|--------------------------|
| 1     | 115-2404    | 1    | Upper LH Control Arm ASM | 3:3:1 | 302-5       | 1    | Fitting-Grease           |
| 1:2   | 87-1450     | 2    | Bushing-Flange           | 3:4   | 87-2420     | 1    | Seal-Joint, Ball         |
| 1:3   | 115-2165    | 1    | Ball Joint               | 3:5   | 32151-104   | 1    | Ring-Retaining, External |
| 1:3:1 | 302-5       | 1    | Fitting-Grease           | 4     | 115-2407    | 1    | Lower RH Control Arm ASM |
| 1:4   | 87-2420     | 1    | Seal-Joint, Ball         | 4:2   | 87-1450     | 2    | Bushing-Flange           |
| 1:5   | 32151-104   | 1    | Ring-Retaining, External | 4:3   | 115-2165    | 1    | Ball Joint               |
| 2     | 115-2405    | 1    | Lower LH Control Arm ASM | 4:3:1 | 302-5       | 1    | Fitting-Grease           |
| 2:2   | 87-1450     | 2    | Bushing-Flange           | 4:4   | 87-2420     | 1    | Seal-Joint, Ball         |
| 2:3   | 115-2165    | 1    | Ball Joint               | 4:5   | 32151-104   | 1    | Ring-Retaining, External |
| 2:3:1 | 302-5       | 1    | Fitting-Grease           | 5     | 324-10      | 4    | Screw-HH                 |
| 2:4   | 87-2420     | 1    | Seal-Joint, Ball         | 6     | 114-8417    | 4    | Nut-HF, NI               |
| 2:5   | 32151-104   | 1    | Ring-Retaining, External | 7     | 114-8419    | 6    | Screw-HHF                |
| 3     | 115-2406    | 1    | Upper RH Control Arm ASM | 8     | 99-5107     | 8    | Nut-Lock                 |
| 3:2   | 87-1450     | 2    | Bushing-Flange           | 9     | 325-17      | 2    | Screw-HH                 |
| 3:3   | 115-2165    | 1    | Ball Joint               |       |             |      |                          |

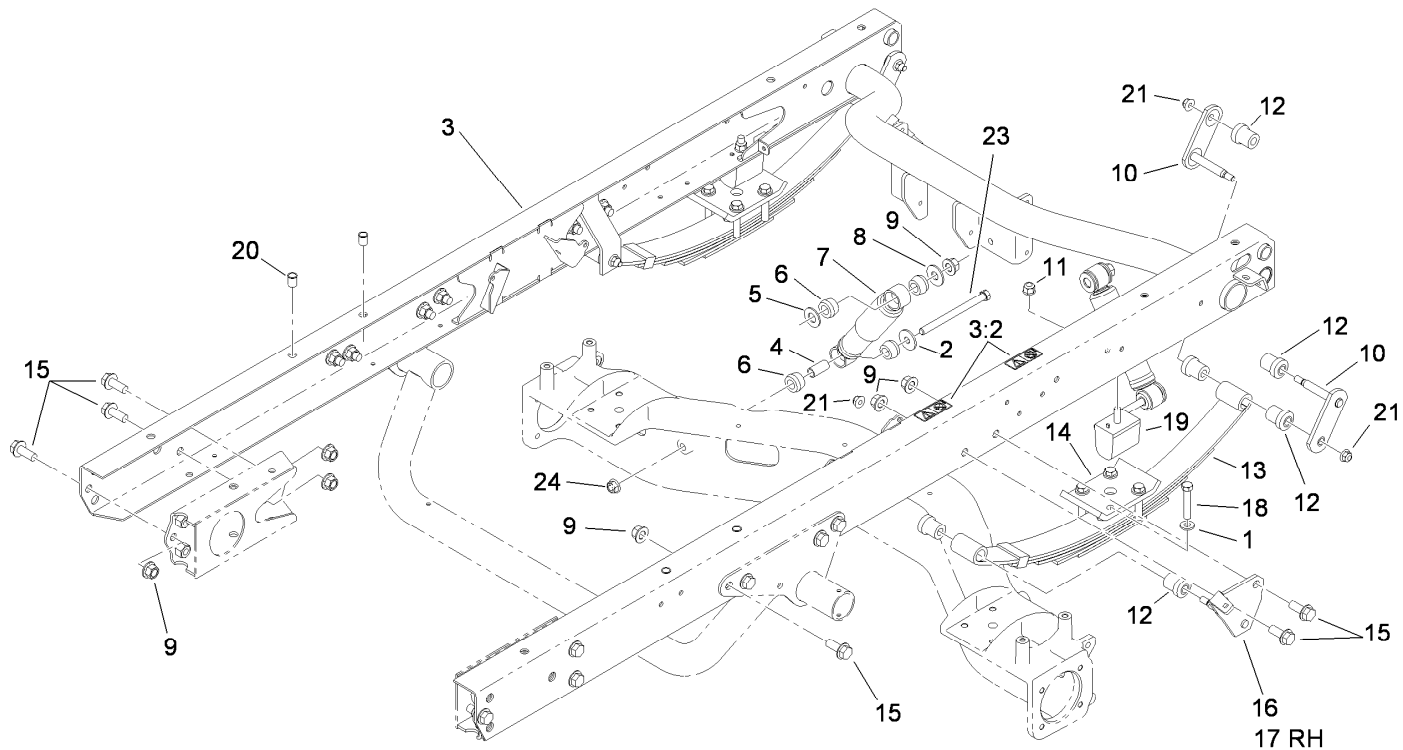

## Rear Frame Assembly

| Ref. | Part Number | Qty. | Description            |
|------|-------------|------|------------------------|
| 1    | 87-7480     | 8    | Washer                 |
| 2    | 87-5330     | 2    | Washer                 |
| 3    | 115-7911    | 1    | Rear Frame ASM         |
| 3:2  | 115-2047    | 2    | Decal-Surface, Hot     |
| 4    | 87-3600     | 2    | Spacer-Absorber, Shock |
| 5    | 3256-27     | 2    | Washer-Flat            |
| 6    | 87-3920     | 8    | Bushing                |
| 7    | 87-3110     | 2    | Absorber-Shock         |
| 8    | 3256-6      | 2    | Washer-Flat            |
| 9    | 99-5107     | 20   | Nut-Lock               |
| 10   | 87-3980     | 4    | Shackle ASM            |
| 11   | 103-9511    | 2    | Nut-Lock, NI           |
 
| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 12   | 87-4760     | 12   | Bushing-Rubber      |
| 13   | 87-1490     | 2    | Spring-Leaf, Rear   |
| 14   | 87-7470-03  | 2    | Plate-Spring, Clamp |
| 15   | 3234-38     | 18   | Screw-HHF           |
| 16   | 87-3960     | 1    | Mount-Spring, LH    |
| 17   | 87-3940     | 1    | Mount-Spring, RH    |
| 18   | 115-2398    | 8    | Bolt-HH             |
| 19   | 87-3470     | 2    | Bumper              |
| 20   | 32148-9     | 4    | Insert-Nut          |
| 21   | 104-8301    | 6    | Nut-HF, NI          |
| 23   | 114-8424    | 2    | Screw-HH            |
| 24   | 114-8417    | 2    | Nut-HF, NI          |

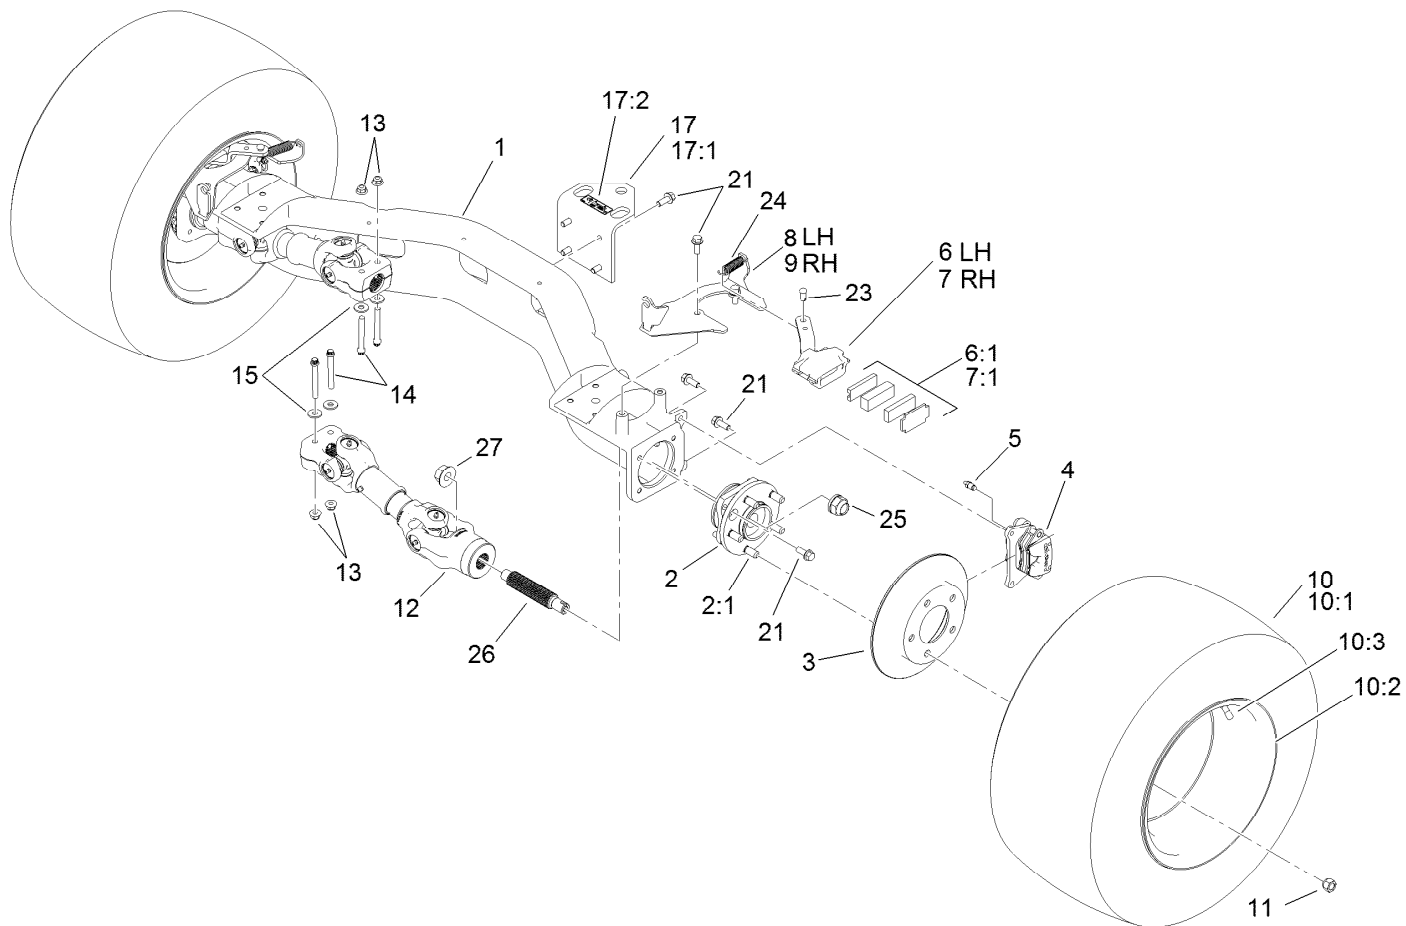


## Rear Axle Assembly

| Ref. | Part Number | Qty. | Description            |
|------|-------------|------|------------------------|
| 1    | 119-9515    | 1    | Axle-Rear              |
| 2    | 112-3214    | 2    | Wheel Hub ASM          |
| 2:1  | 114-8299    | 5    | Stud-Wheel             |
| 3    | 114-8351    | 2    | Rotor-Brake            |
| 4    | 119-9535    | 2    | Brake Caliper ASM      |
| 5    | 119-9509    | 2    | Screw-Bleed            |
| 6    | 114-8365    | 1    | Caliper-Mechanical, LH |
| 6:1  | 115-7847    | 1    | Parking Brake Pad Kit  |
| 7    | 114-8366    | 1    | Caliper-Mechanical, RH |
| 7:1  | 115-7847    | 1    | Parking Brake Pad Kit  |
| 8    | 115-2362-03 | 1    | Bracket-Caliper, LH    |
| 9    | 115-2359-03 | 1    | Bracket-Caliper, RH    |
| 10   |             | 2    | Tire And Wheel ASM ●   |
| 10:1 | 106-7868    | 1    | Tire                   |
| 10:2 | 114-8259    | 1    | Wheel                  |


| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 10:3 | 232-27      | 1    | Stem-Valve           |
| 11   | 242-50      | 10   | Nut-Lug              |
| 12   | 114-8367    | 2    | Driveshaft ASM       |
| 13   | 104-8301    | 4    | Nut-HF, NI           |
| 14   | 98-2939     | 4    | Screw-Cap            |
| 15   | 80-6990     | 4    | Washer-Hardened      |
| 17   | 115-7742    | 1    | Hitch ASM            |
| 17:1 | 92-5951-03  | 1    | Angle-Hitch          |
| 17:2 | 115-7740    | 1    | Decal-Load, Towing   |
| 21   | 3234-11     | 20   | Screw-HHF            |
| 23   | 283-85      | 2    | Pin-Clevis           |
| 24   | 104-6415    | 2    | Spring-Return, Pedal |
| 25   | 115-2164    | 2    | Nut-Spindle          |
| 26   | 115-7771    | 2    | Shaft, Splined       |
| 27   | 104-0753    | 2    | Nut-Flange           |

 ● Not serviced separately

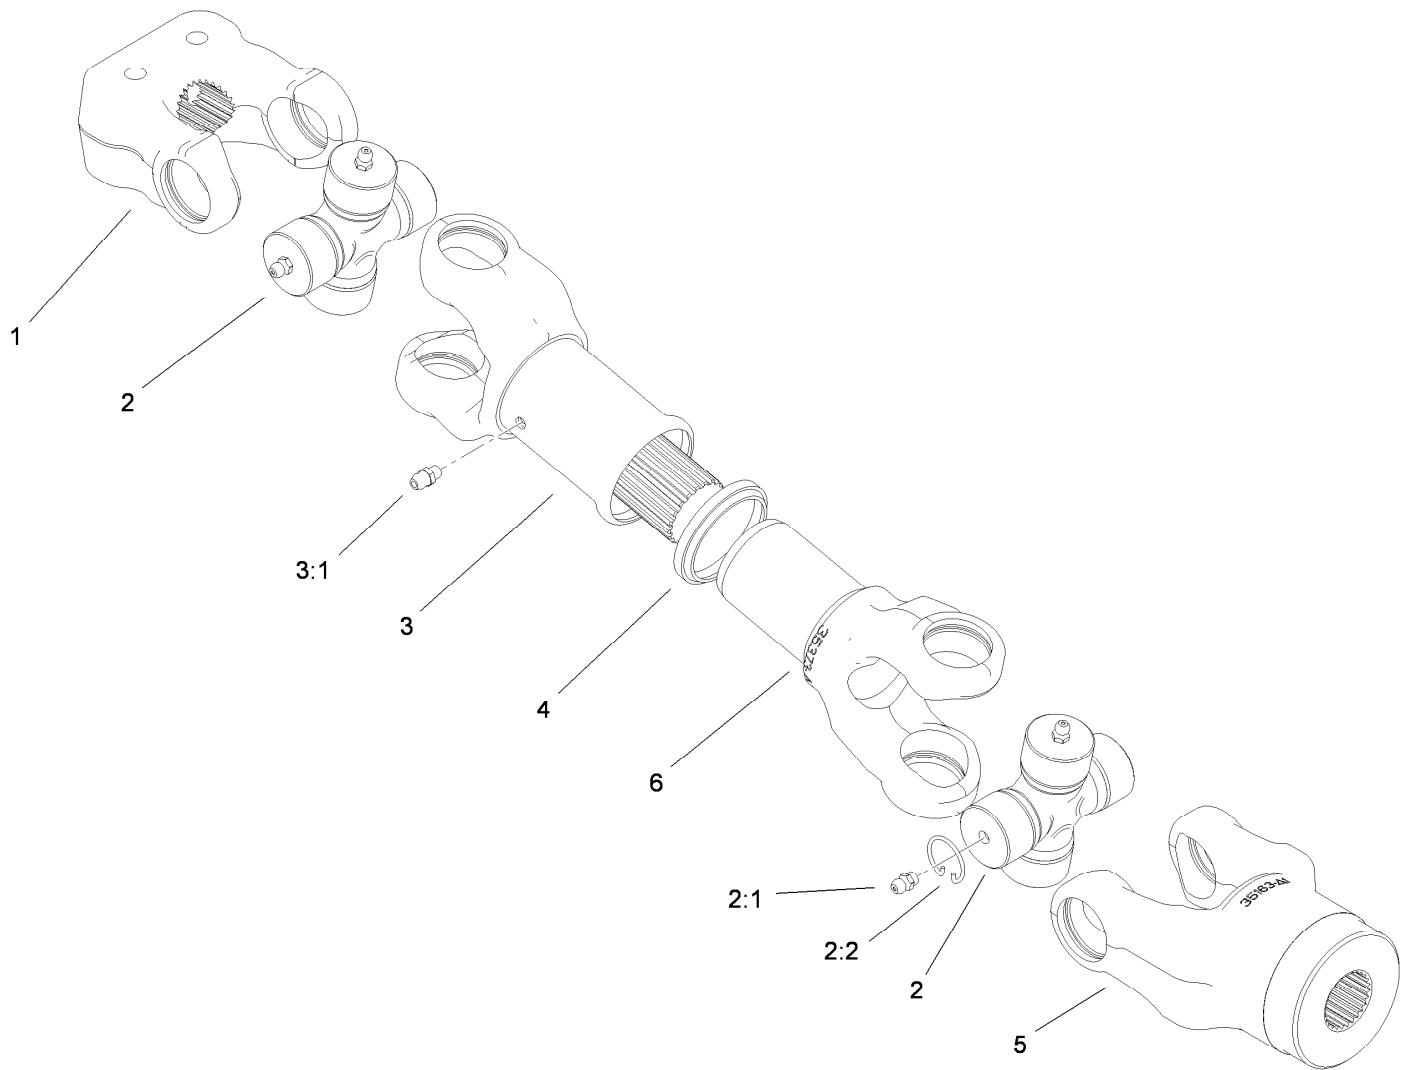

## Driveshaft Assembly No. 114-8367

 
| Ref. | Part Number | Qty. | Description               |
|------|-------------|------|---------------------------|
| 1    | 98-2940     | 1    | Yoke                      |
| 2    | 92-4187     | 2    | Cross And Bearing Kit     |
| 2:1  | 302-58      | 4    | Fitting-Straight          |
| 2:2  | 92-4188     | 4    | Ring-Snap                 |
| 3    | 92-4179     | 1    | Yoke-Tube, Shaft And Seal |
| 3:1  | 302-5       | 1    | Fitting-Grease            |
| 4    | 92-4180     | 1    | Seal                      |
| 5    | 115-2351    | 1    | Yoke                      |
| 6    | 92-4182     | 1    | Yoke-Telescoping          |

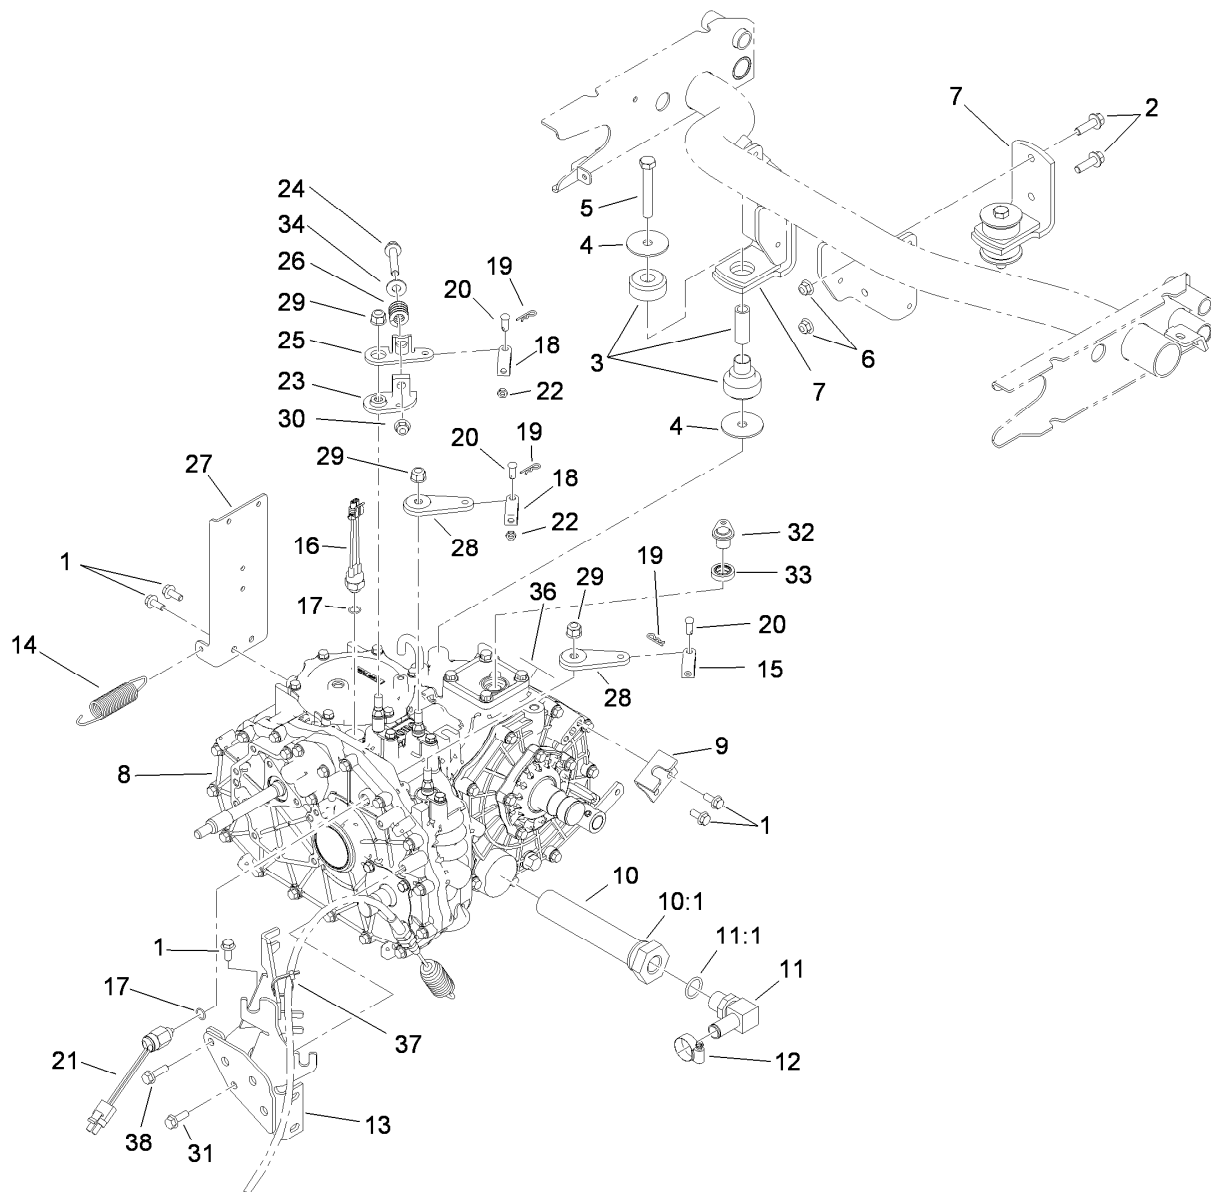

## Transaxle Assembly

| Ref. | Part Number | Qty. | Description                     |
|------|-------------|------|---------------------------------|
| 1    | 98-7977     | 5    | Screw-HHF                       |
| 2    | 3234-24     | 4    | Screw-HHF                       |
| 3    | 106-7865    | 2    | Mount-Engine                    |
| 4    | 87-5100     | 4    | Washer-Snubbing                 |
| 5    | 33116-080   | 2    | Screw-HH                        |
| 6    | 104-8301    | 4    | Nut-HF, NI                      |
| 7    | 87-5800-03  | 2    | Mount-Transaxle                 |
| 8    | 115-7783    | 1    | 2 Wheel Drive Transaxle<br>ASM  |
| 9    | 87-4470     | 1    | Bracket-Lock, Differential      |
| 10   | 87-3990     | 1    | Strainer-Transaxle              |
| 10:1 | 237-123     | 1    | O-Ring                          |
| 11   | 353-987     | 1    | Fitting-HYD, 90 DEG<br>(Barbed) |
| 11:1 | 237-81      | 1    | O-Ring                          |
| 12   | 2412-129    | 1    | Clamp-Hose                      |
| 13   | 105-4207-03 | 1    | Mount-Cable                     |
| 14   | 68-9950     | 1    | Spring-Traction                 |
| 15   | 87-7160     | 1    | Clevis-Cable                    |
| 16   | 72-4310     | 1    | Switch-Ball                     |
| 17   | 237-30      | 2    | O-Ring                          |

 
| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 18   | 87-2310     | 2    | Clevis-Cable            |
| 19   | 3290-307    | 3    | Pin-Cotter              |
| 20   | 283-62      | 3    | Pin-Clevis              |
| 21   | 87-6710     | 1    | Switch-Transmission     |
| 22   | 3220-1      | 2    | Nut-Jam                 |
| 23   | 87-7970     | 1    | Arm-Shift               |
| 24   | 66-9302     | 1    | Screw-HHF, Whiz         |
| 25   | 87-8250     | 1    | Plate-Arm, Shift        |
| 26   | 87-6910     | 1    | Spring-Compression      |
| 27   | 115-2240-03 | 1    | Bracket-Fuel            |
| 28   | 87-7960     | 2    | Lever-Shift             |
| 29   | 103-9511    | 3    | Nut-Lock, NI            |
| 30   | 3290-357    | 1    | Nut-HHF, Whiz           |
| 31   | 33104-025   | 1    | Screw-HHF               |
| 32   | 115-7774    | 1    | Plug ASM                |
| 33   | 92-3735     | 1    | Seal-Oil, Sensor        |
| 34   | 3256-4      | 1    | Washer-Flat             |
| 36   | 115-7741    | 1    | Decal-Oil, Transmission |
| 37   | 3290-379    | 1    | Tie-Cable               |
| 38   | 33104-030   | 1    | Screw-HHF               |

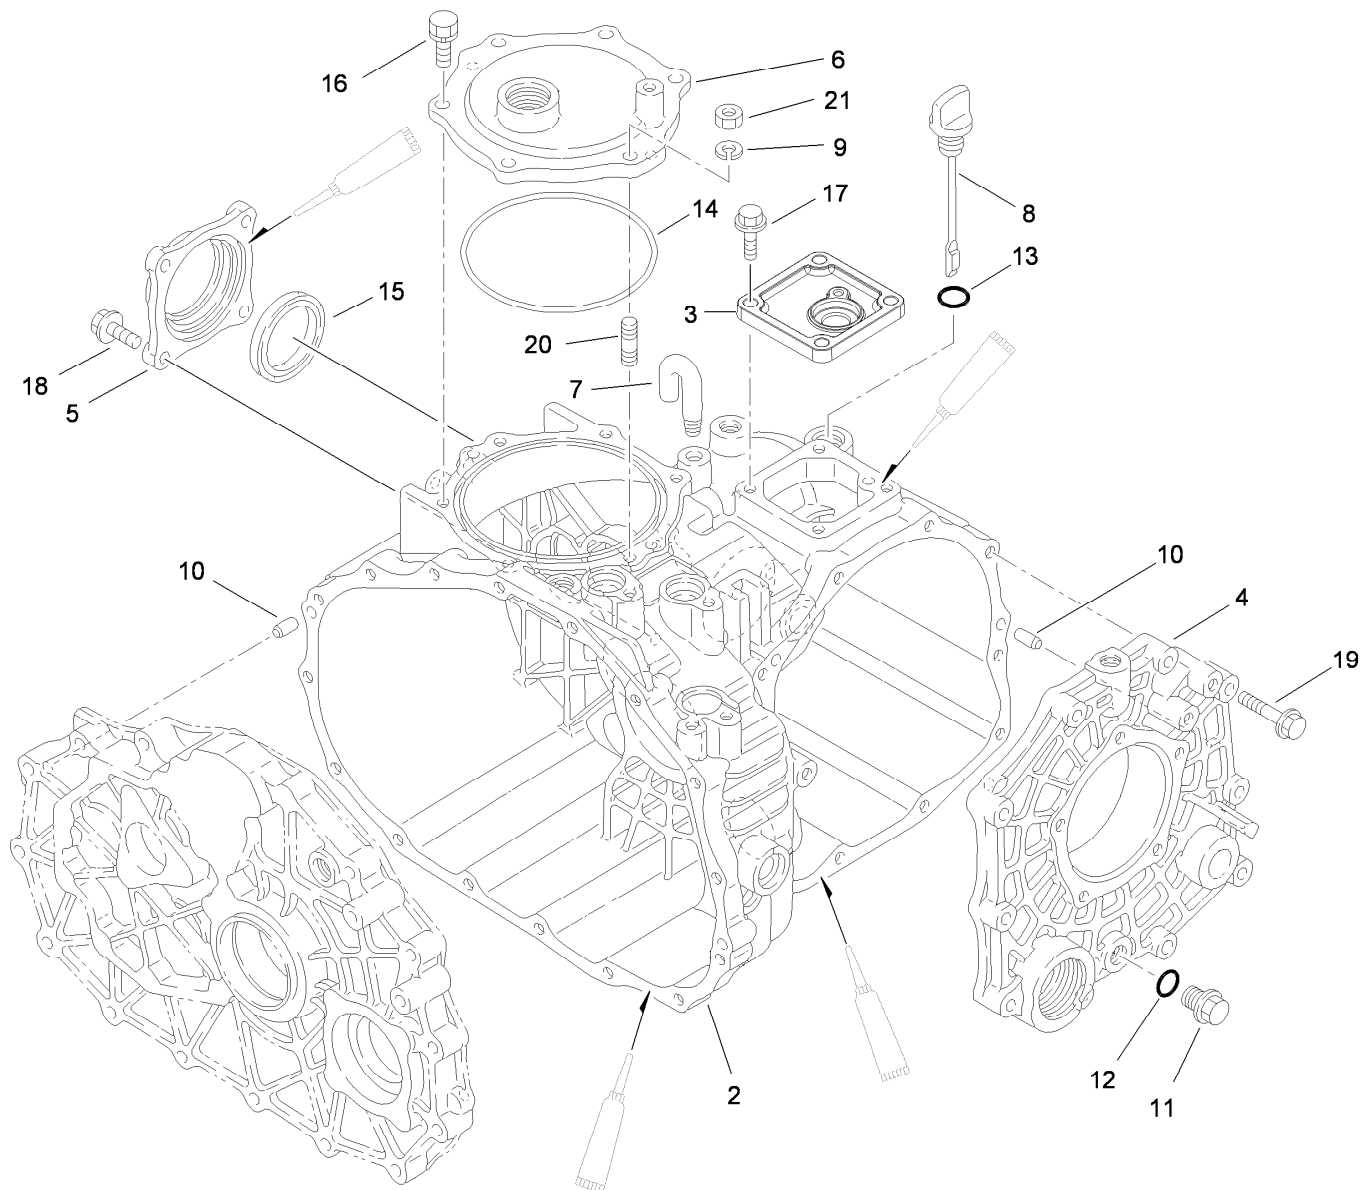

## Case Assembly Transaxle Assembly No. 115-7783


| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 2    | 92-0651     | 1    | Case-Transmission   |
| 3    | 92-0810     | 1    | Cover-Upper, Sensor |
| 4    | 92-0653     | 1    | Cover-Side          |
| 5    | 92-0655     | 1    | Cover-Seal, Axle    |
| 6    | 92-0656     | 1    | Cover-Upper, PTO    |
| 7    | 92-0743     | 1    | Breather-Air        |
| 8    | 92-0662     | 1    | Cap-Oil             |
| 9    | 92-0762     | 1    | Washer-Spring       |
| 10   | 92-0765     | 4    | Pin-Parallel        |
| 11   | 92-0773     | 1    | Plug-Drain          |
 
| Ref. | Part Number | Qty. | Description |
|------|-------------|------|-------------|
| 12   | 92-0787     | 1    | O-Ring      |
| 13   | 92-0788     | 1    | O-Ring      |
| 14   | 92-0790     | 1    | O-Ring      |
| 15   | 92-0793     | 1    | Seal-Oil    |
| 16   | 92-0796     | 5    | Bolt        |
| 17   | 33104-025   | 4    | Screw-HHF   |
| 18   | 33104-025   | 4    | Screw-HHF   |
| 19   | 33104-040   | 10   | Screw-HHF   |
| 20   | 92-0805     | 1    | Bolt 8X20   |
| 21   | 68-9400     | 1    | Nut-Flange  |

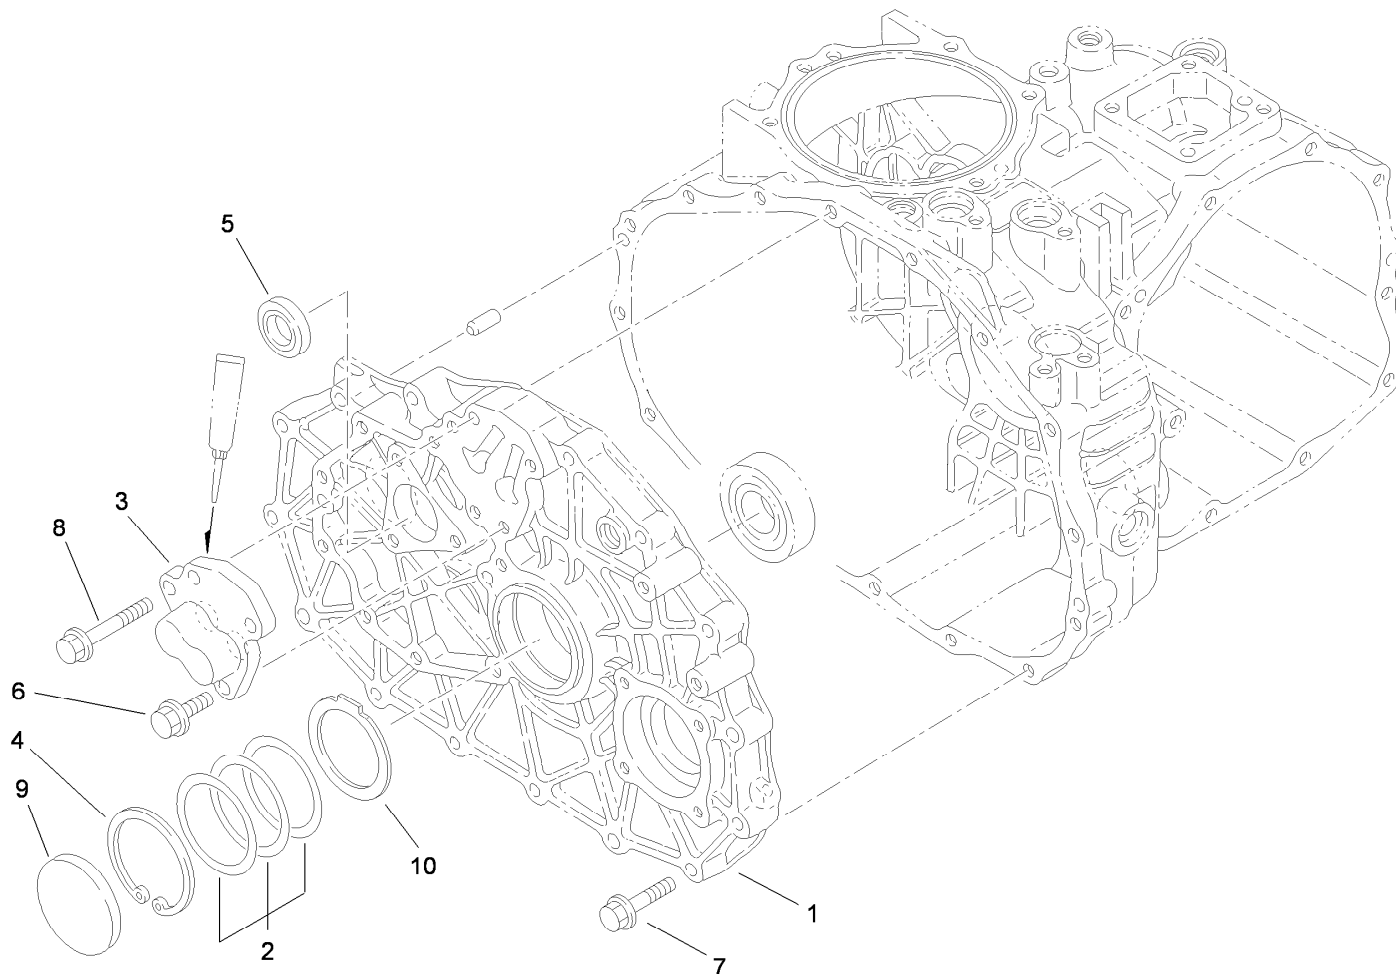

## Center Plate Assembly Transaxle Assembly No. 115-7783

 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 100-4461           | 1           | Plate-Center       |
| 2           | 100-4460           | 1           | Shim-Set           |
| 3           | 92-0706            | 1           | Shaft-Fork         |
| 4           | 92-0759            | 1           | Ring-Snap          |
| 5           | 92-0791            | 1           | Seal-Oil           |
| 6           | 33104-025          | 3           | Screw-HHF          |
| 7           | 33104-040          | 15          | Screw-HHF          |
| 8           | 33104-050          | 1           | Screw-HHF          |
| 9           | 92-0807            | 1           | Cap-Sealing        |
| 10          | 100-4465           | 1           | Shim (W/Tab)       |

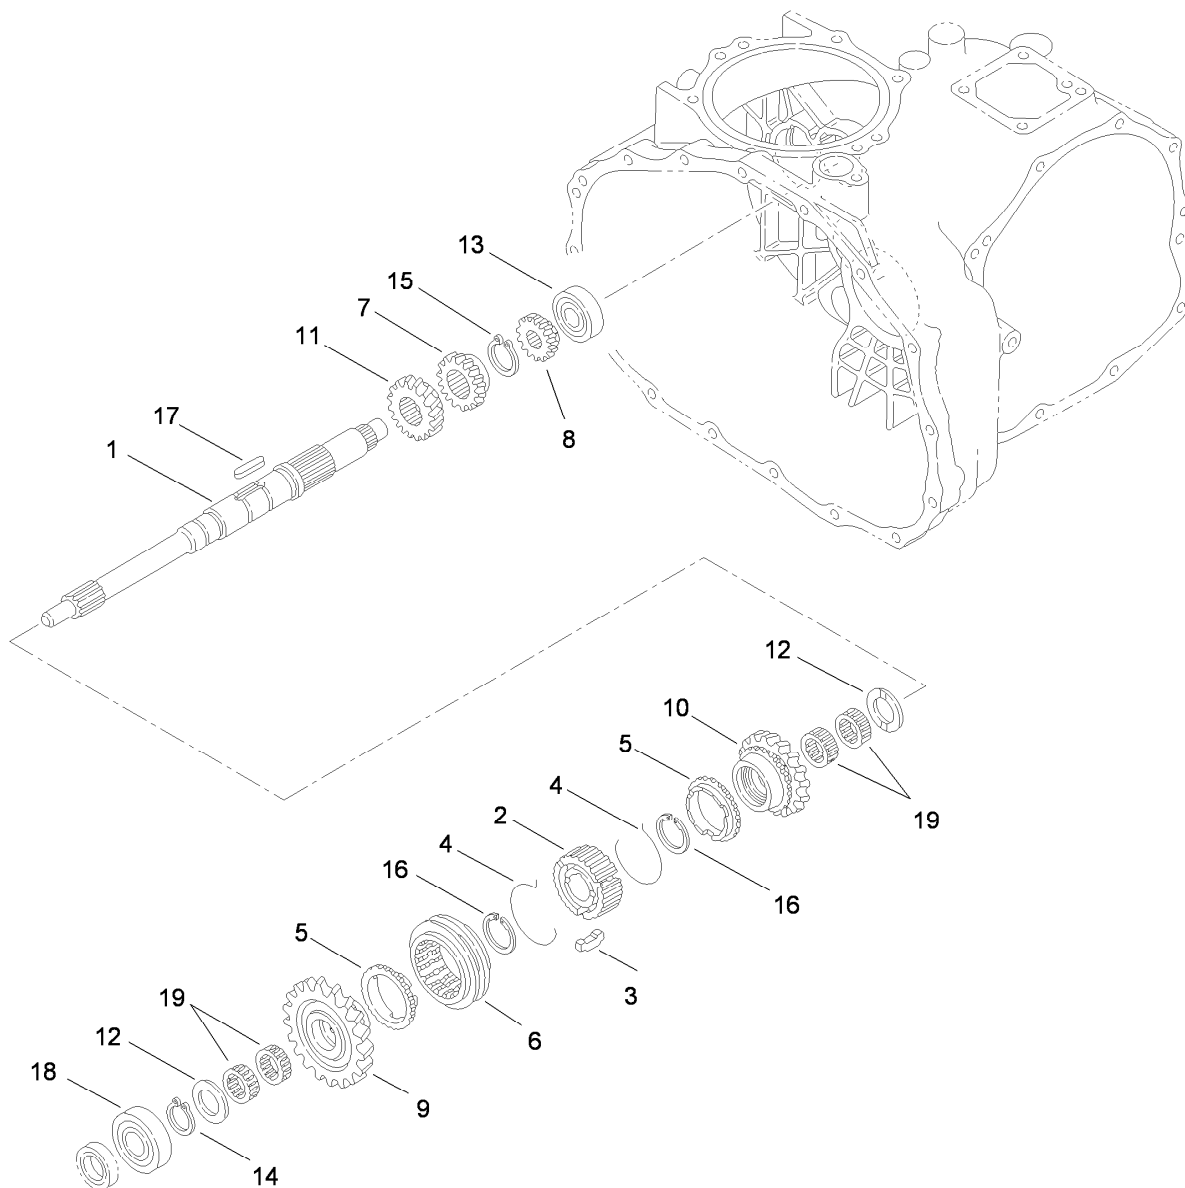

## Main Shaft Assembly Transaxle Assembly No. 115-7783

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   |
|-------------|--------------------|-------------|----------------------|
| 1           | 92-0663            | 1           | Shaft-Main           |
| 2           | 92-0664            | 1           | Hub-Synchro          |
| 3           | 92-0665            | 3           | Key-Synchro          |
| 4           | 92-0666            | 2           | Spring-Synchro       |
| 5           | 92-0667            | 2           | Ring-Synchro         |
| 6           | 92-0668            | 1           | Shifter-Synchro      |
| 7           | 92-0672            | 1           | Gear-Main, 18 Tooth  |
| 8           | 92-0673            | 1           | Gear-Main, 14 Tooth  |
| 9           | 110-2521           | 1           | Gear-Main, 27 Tooth  |
| 10          | 110-2522           | 1           | Gear- Main, 24 Tooth |

 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  |
|-------------|--------------------|-------------|---------------------|
| 11          | 92-0687            | 1           | Gear-Main, 16 Tooth |
| 12          | 92-0740            | 2           | Washer-Thrust       |
| 13          | 92-0650            | 1           | Bearing             |
| 14          | 92-0753            | 1           | Ring-Snap           |
| 15          | 92-0754            | 1           | Ring-Snap           |
| 16          | 92-0763            | 2           | Ring-Snap           |
| 17          | 92-0772            | 1           | Key                 |
| 18          | 251-8              | 1           | Bearing-Ball        |
| 19          | 92-0781            | 4           | Bearing-Needle      |

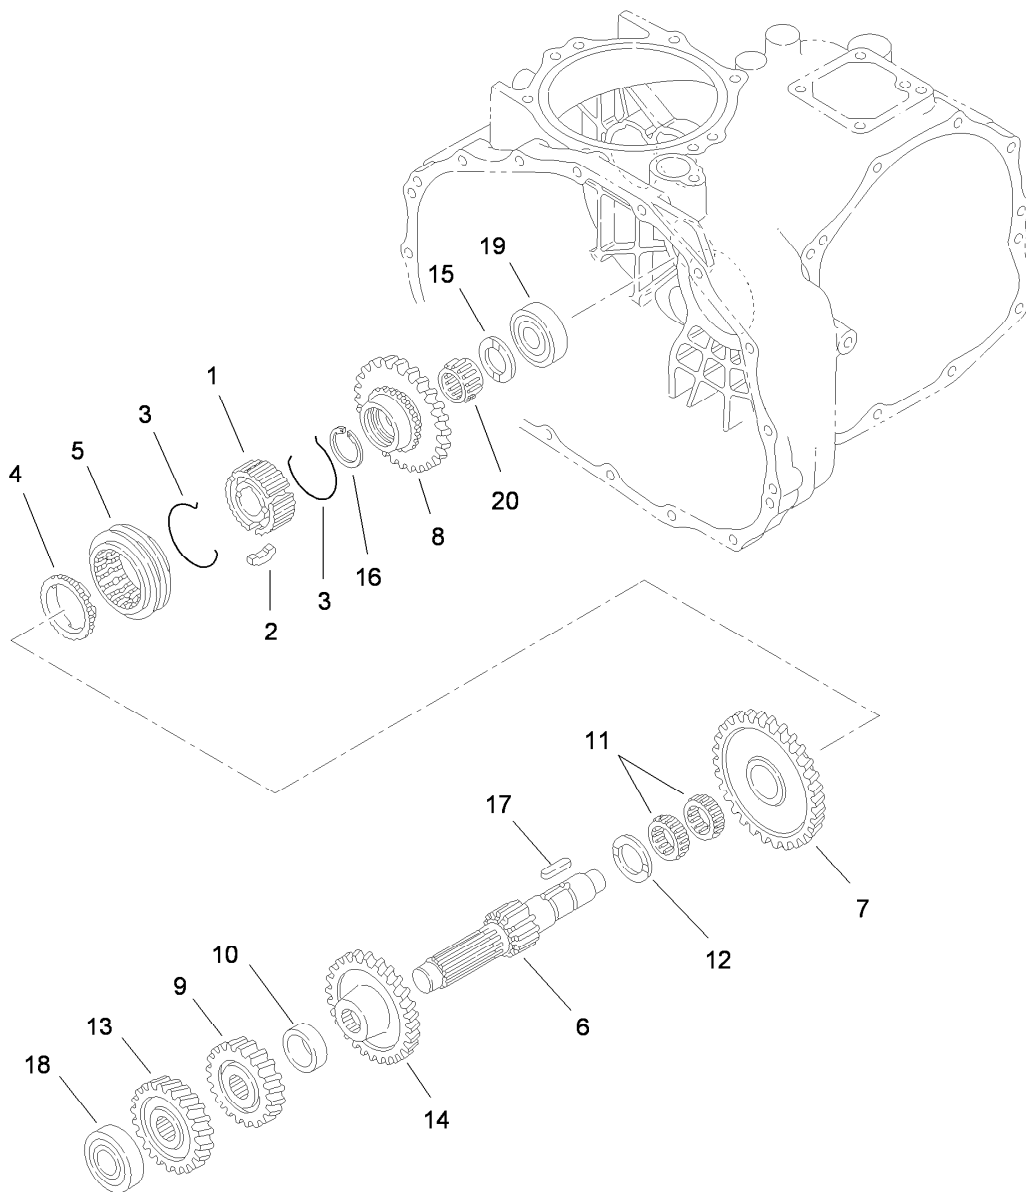

## Reduction Shaft Assembly Transaxle Assembly No. 115-7783


| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>        |
|-------------|--------------------|-------------|---------------------------|
| 1           | 92-0664            | 1           | Hub-Synchro               |
| 2           | 92-0665            | 3           | Key-Synchro               |
| 3           | 92-0666            | 2           | Spring-Synchro            |
| 4           | 92-0667            | 1           | Ring-Synchro              |
| 5           | 92-0668            | 1           | Shifter-Synchro           |
| 6           | 92-0674            | 1           | Shaft-Reduction           |
| 7           | 110-2524           | 1           | Gear- Reduction, 49 Tooth |
| 8           | 92-0819            | 1           | Gear-Reduction, 40 Tooth  |
| 9           | 92-0769            | 1           | Pin-Roll                  |
| 10          | 92-0680            | 1           | Collar                    |
 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       |
|-------------|--------------------|-------------|--------------------------|
| 11          | 92-0681            | 2           | Bearing-Needle           |
| 12          | 92-0682            | 1           | Washer-Thrust            |
| 13          | 92-0822            | 1           | Gear-Reduction, 28 Tooth |
| 14          | 92-0823            | 1           | Gear-Reduction, 43 Tooth |
| 15          | 92-0740            | 1           | Washer-Thrust            |
| 16          | 92-0673            | 1           | Gear-Main, 14 Tooth      |
| 17          | 92-0772            | 1           | Key                      |
| 18          | 105-7985           | 1           | Bearing                  |
| 19          | 92-0778            | 1           | Bearing                  |
| 20          | 92-0782            | 1           | Bearing-Needle           |

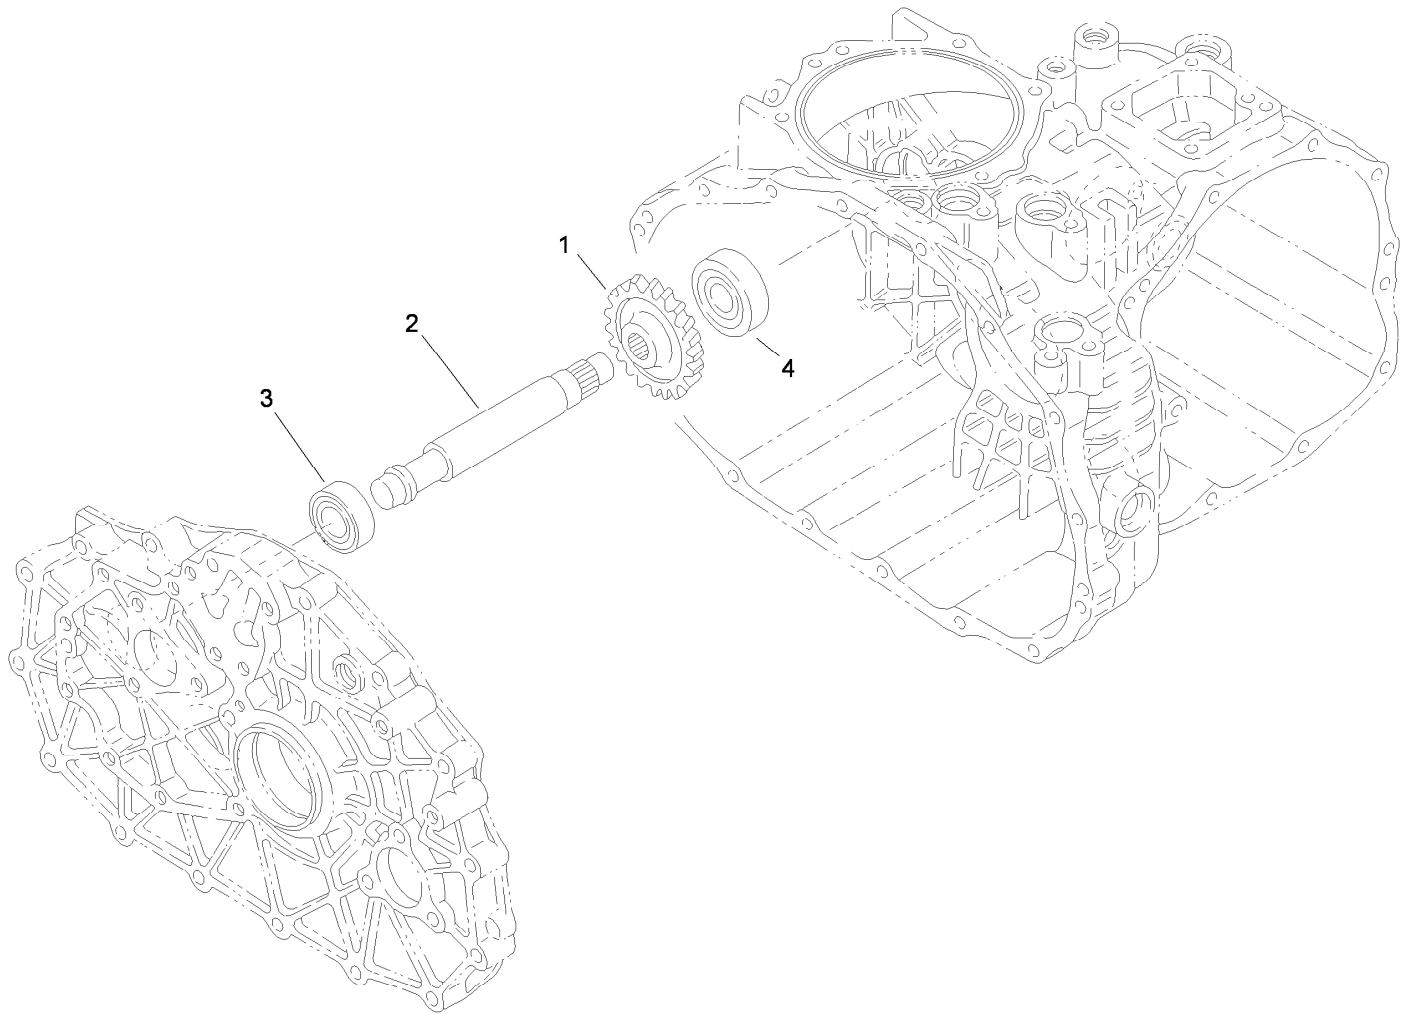


## Reverse Shaft Assembly Transaxle Assembly No. 115-7783
 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     |
|-------------|--------------------|-------------|------------------------|
| 1           | 92-0684            | 1           | Gear-Reverse, 33 Tooth |
| 2           | 92-0824            | 1           | Shaft-Idler, Reverse   |
| 3           | 251-346            | 1           | Bearing-Ball           |
| 4           | 92-0778            | 1           | Bearing                |

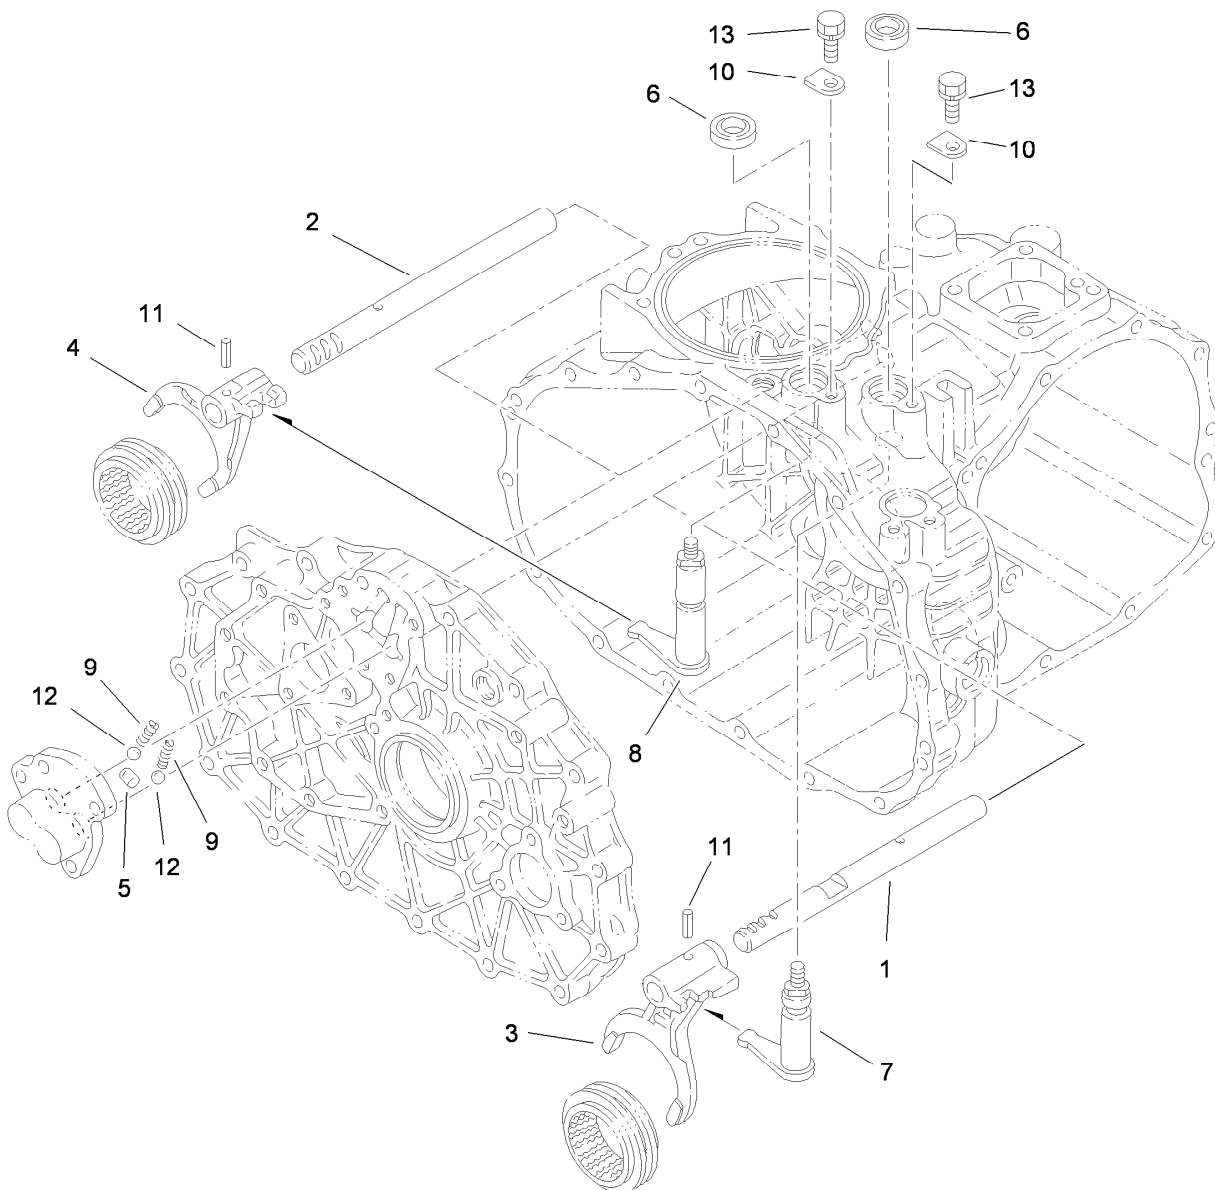


## Main Shift Assembly Transaxle Assembly No. 115-7783
 
| Ref. | Part Number | Qty. | Description  |
|------|-------------|------|--------------|
| 1    | 92-0698     | 1    | Shaft-Fork   |
| 2    | 92-0699     | 1    | Shaft-Fork   |
| 3    | 92-0700     | 1    | Fork-Shift   |
| 4    | 92-0701     | 1    | Fork-Shift   |
| 5    | 92-0705     | 1    | Lock-Spindle |
| 6    | 92-0729     | 2    | Seal-Oil     |
| 7    | 92-0816     | 1    | Arm-Shift    |
| 8    | 92-0817     | 1    | Arm-Shift    |
| 9    | 92-0731     | 2    | Spring       |
| 10   | 92-0732     | 2    | Plate-Keeper |
| 11   | 92-0769     | 2    | Pin-Roll     |
| 12   | 92-0785     | 2    | Ball-Steel   |
| 13   | 33104-016   | 2    | Screw-HHF    |

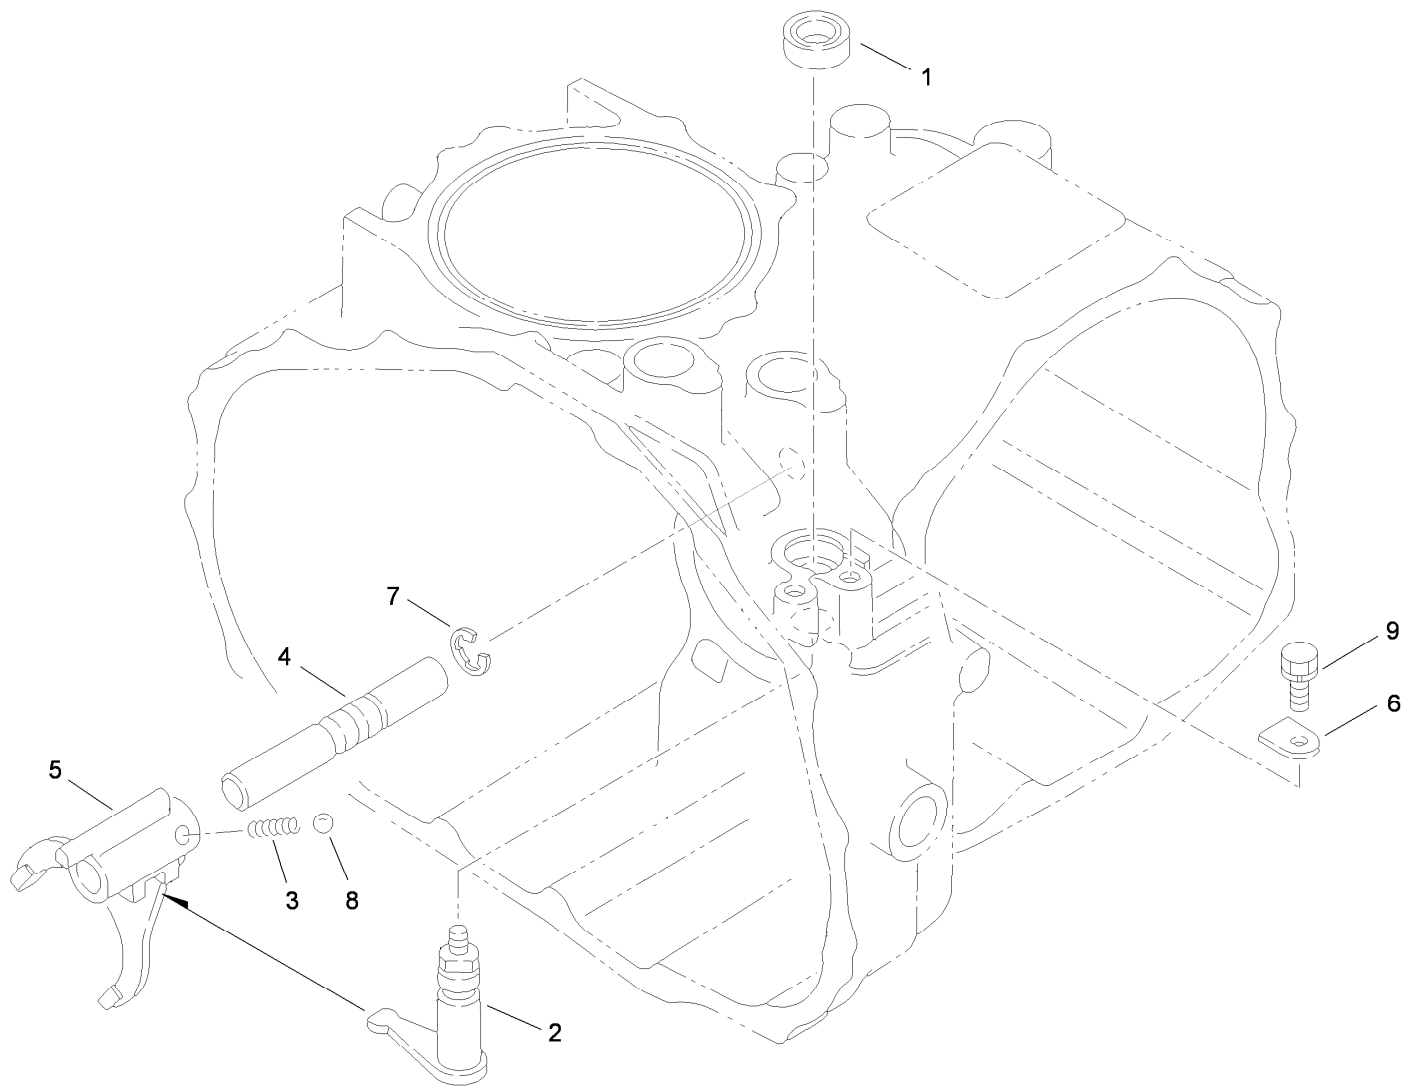


## Hi-Lo Shift Assembly Transaxle Assembly No. 115-7783
 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 92-0729            | 1           | Seal-Oil           |
| 2           | 92-0818            | 1           | Arm-Shift          |
| 3           | 92-0731            | 1           | Spring             |
| 4           | 92-0708            | 1           | Shaft-Fork         |
| 5           | 92-0709            | 1           | Fork-Shift         |
| 6           | 92-0732            | 1           | Plate-Keeper       |
| 7           | 92-0761            | 1           | Ring-E             |
| 8           | 92-0785            | 1           | Ball-Steel         |
| 9           | 33104-016          | 1           | Screw-HHF          |

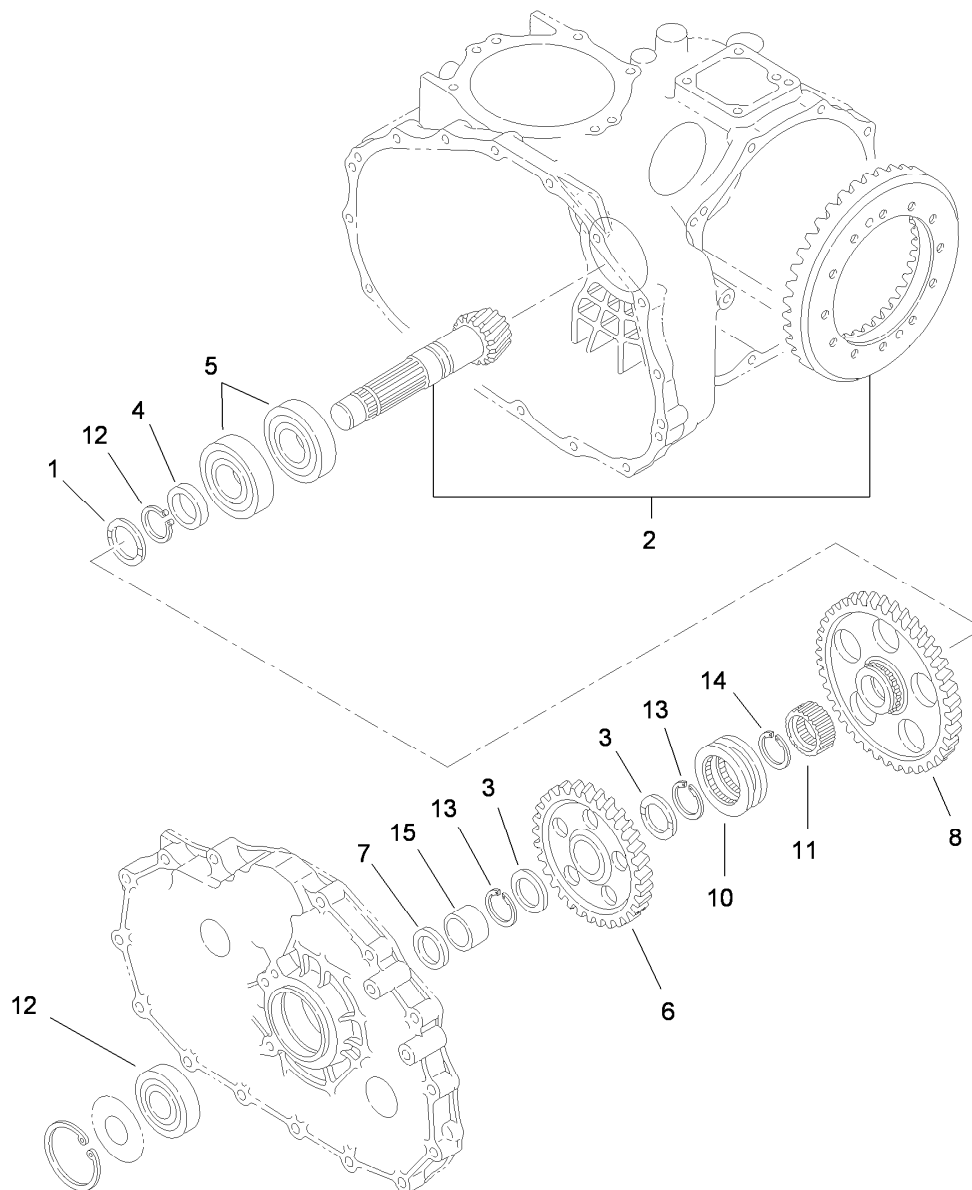


## Countershaft Assembly Transaxle Assembly No. 115-7783
 
| Ref. | Part Number | Qty. | Description                    |
|------|-------------|------|--------------------------------|
| 1    | 92-0741     | 1    | Washer-Thrust                  |
| 2    | 105-7983    | 1    | Countershaft And Ring Gear ASM |
| 3    | 92-0711     | 2    | Washer-Thrust                  |
| 4    | 92-0713     | 1    | Collar                         |
| 5    | 92-0714     | 2    | Bearing                        |
| 6    | 92-0715     | 1    | Gear-Countershaft              |
| 7    | 92-0716     | 1    | Collar                         |
| 8    | 92-0717     | 1    | Gear-Countershaft              |
| 10   | 92-0718     | 1    | Shifter                        |
| 11   | 105-7986    | 1    | Collar-Spline                  |
| 12   | 92-0712     | 1    | Bearing-Ball                   |
| 13   | 105-7987    | 2    | Ring-Snap                      |
| 14   | 92-0755     | 1    | Ring-Snap                      |
| 15   | 92-0783     | 1    | Race-Inner                     |

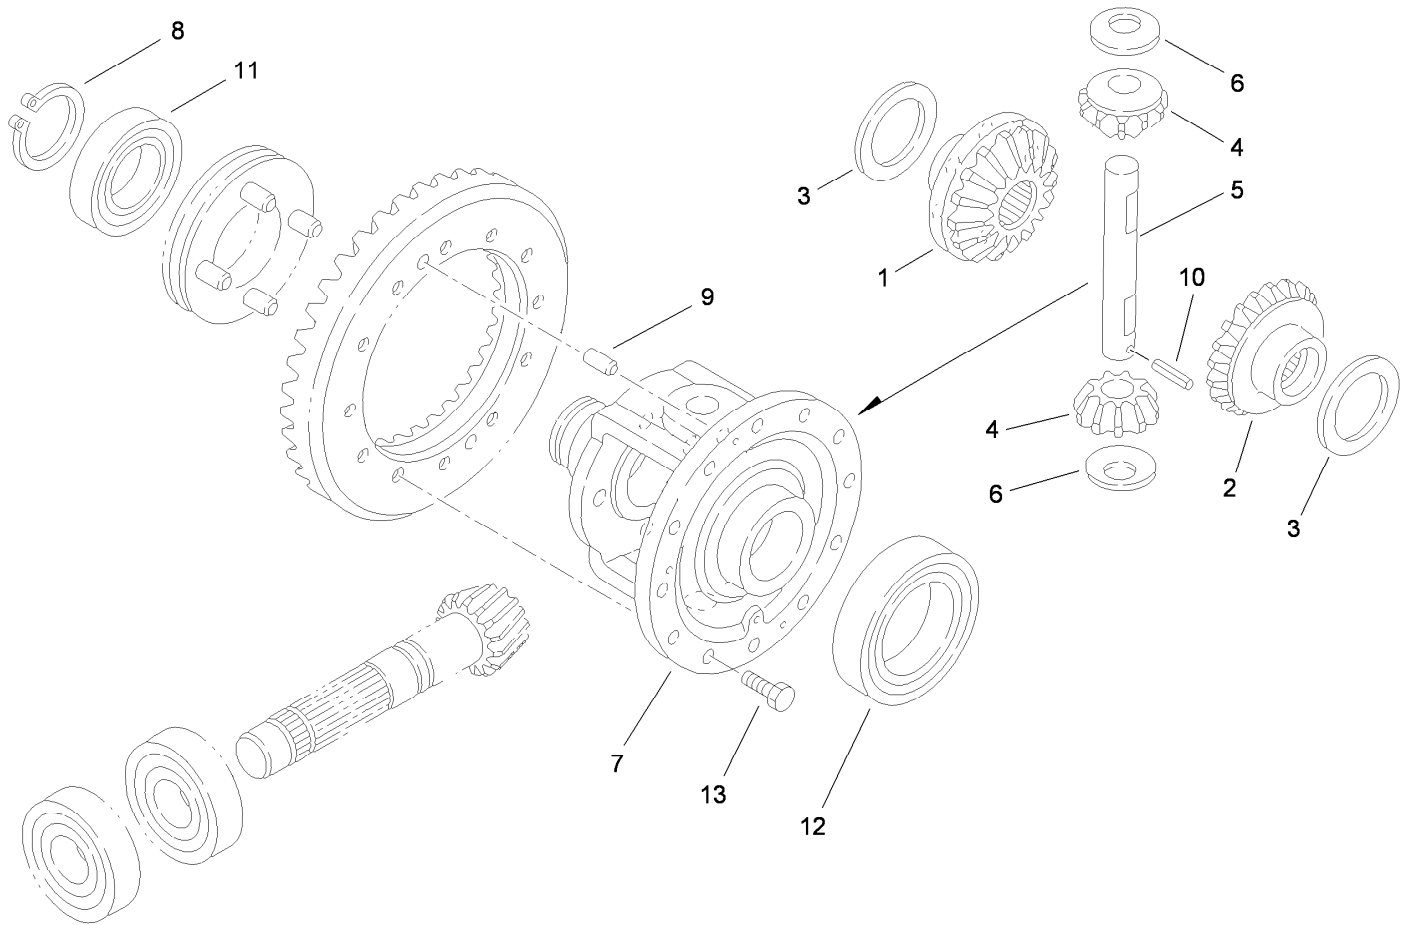

## Differential Gear Assembly Transaxle Assembly No. 115-7783

 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    |
|-------------|--------------------|-------------|-----------------------|
| 1           | 92-0745            | 1           | Gear-Side, LH         |
| 2           | 92-0746            | 1           | Gear-Side, RH         |
| 3           | 92-0747            | 2           | Side-Gear, Left Inner |
| 4           | 92-0748            | 2           | Pinion-Differential   |
| 5           | 92-0749            | 1           | Shaft-Pinion          |
| 6           | 92-0750            | 2           | Washer                |
| 7           | 92-0720            | 1           | Case-Differential     |
| 8           | 92-0756            | 1           | Ring-Snap             |
| 9           | 92-0765            | 2           | Pin-Parallel          |
| 10          | 92-0768            | 1           | Pin-Roll, Spring      |
| 11          | 92-0775            | 1           | Bearing               |
| 12          | 92-0776            | 1           | Bearing               |
| 13          | 92-0803            | 12          | Bolt                  |

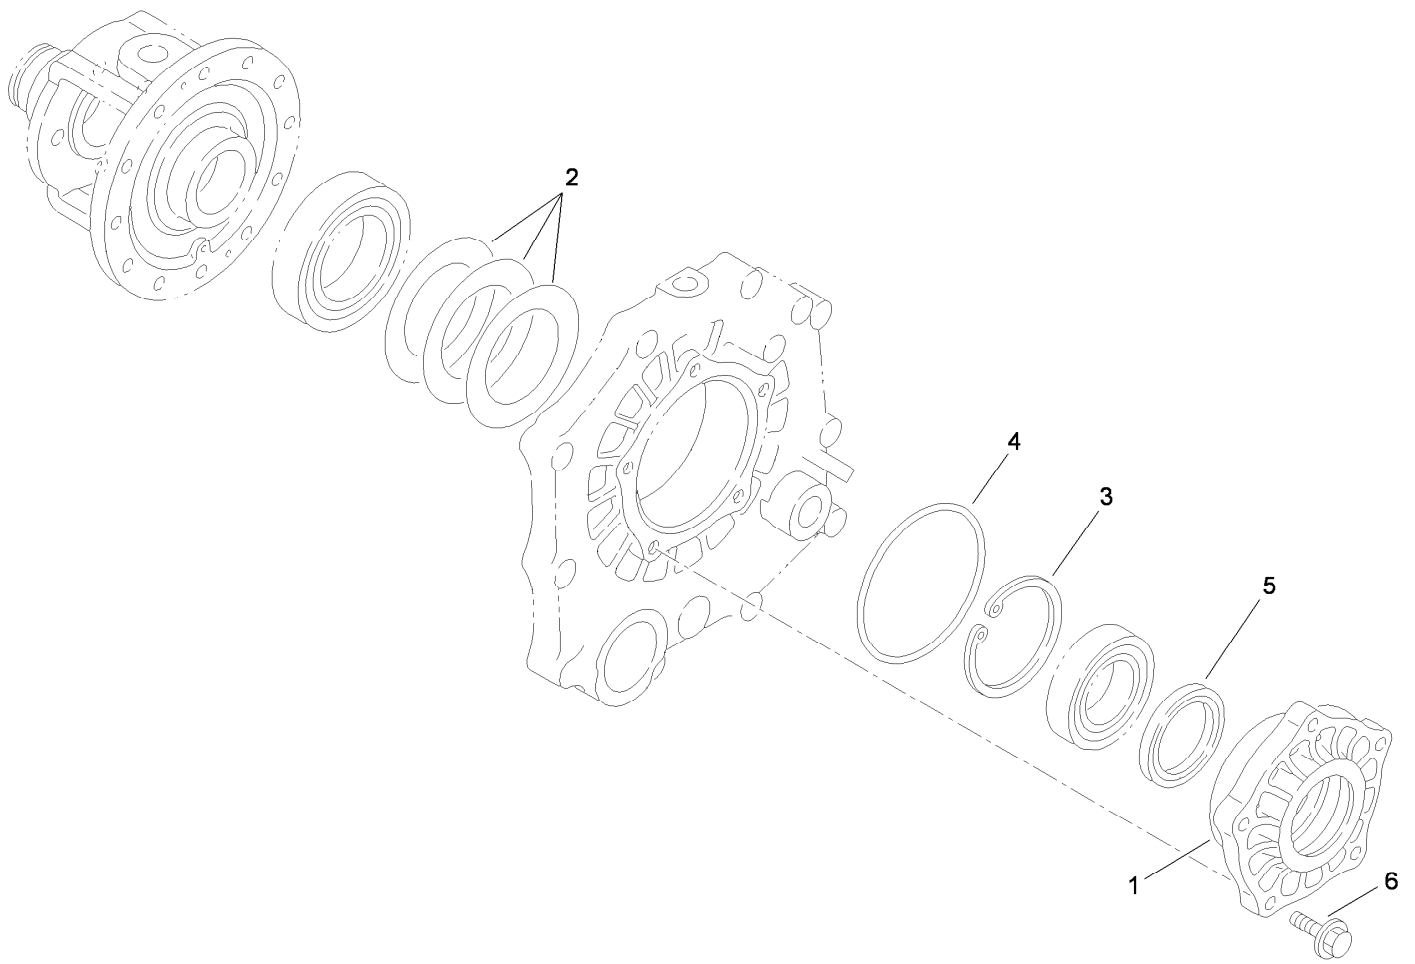

## Differential Carrier Assembly Transaxle Assembly No. 115-7783


| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   |
|-------------|--------------------|-------------|----------------------|
| 1           | 92-0654            | 1           | Carrier-Differential |
| 2           | 92-0809            | 1           | Set-Shim             |
| 3           | 92-0760            | 1           | Ring-Snap            |
| 4           | 92-0789            | 1           | O-Ring               |
| 5           | 92-0793            | 1           | Seal-Oil             |
| 6           | 33104-030          | 5           | Screw-HHF            |

 13

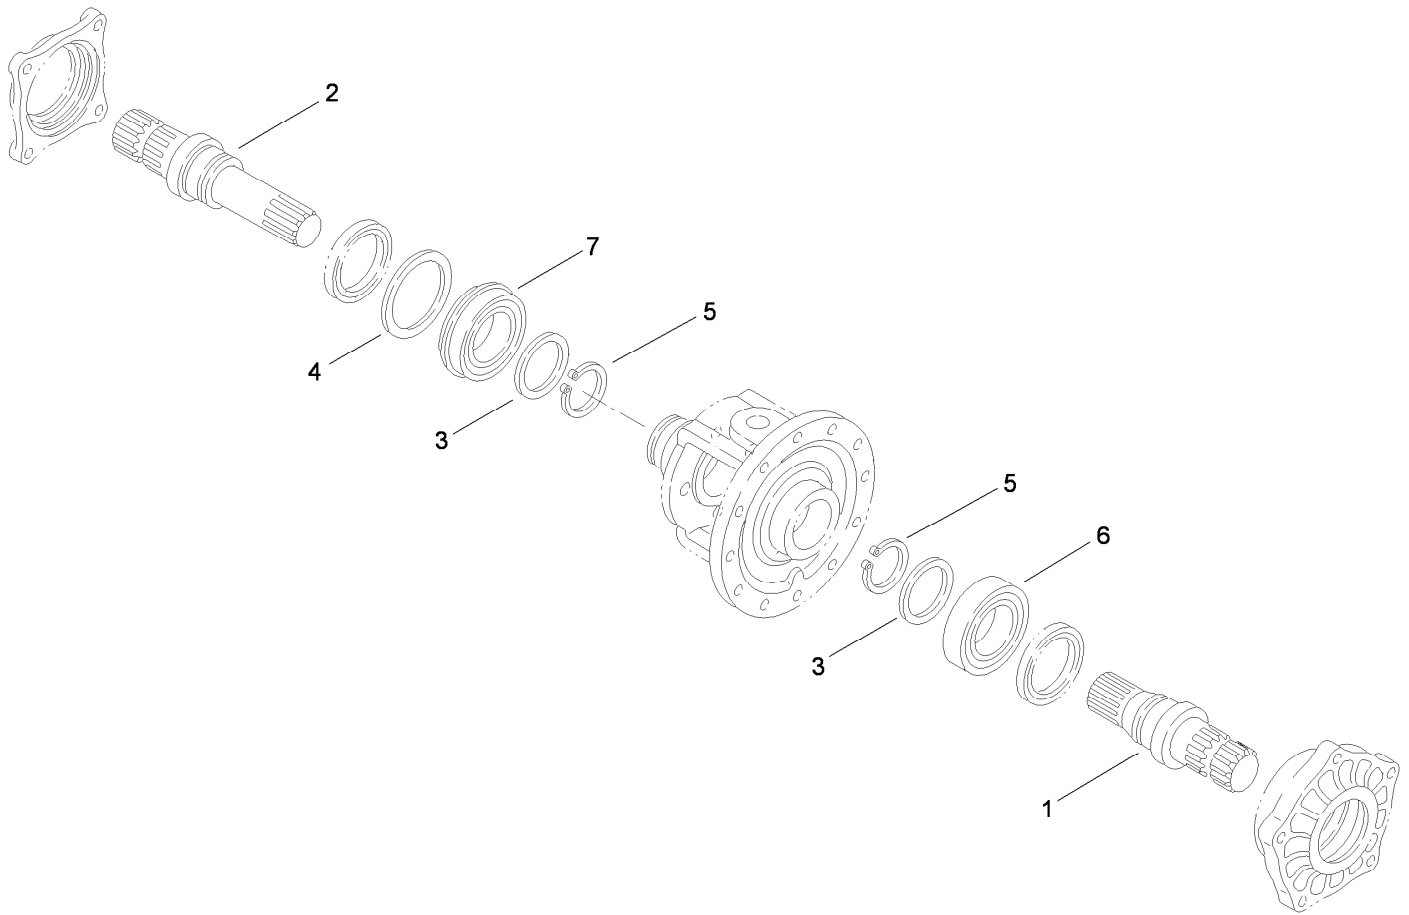


## Axle Shaft Assembly Transaxle Assembly No. 115-7783
 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 92-0725            | 1           | Shaft-Axle, Left   |
| 2           | 92-0726            | 1           | Shaft-Axle, Right  |
| 3           | 92-0727            | 2           | Washer             |
| 4           | 92-0728            | 1           | Washer             |
| 5           | 92-0756            | 2           | Ring-Snap          |
| 6           | 92-0775            | 1           | Bearing            |
| 7           | 92-0780            | 1           | Bearing            |

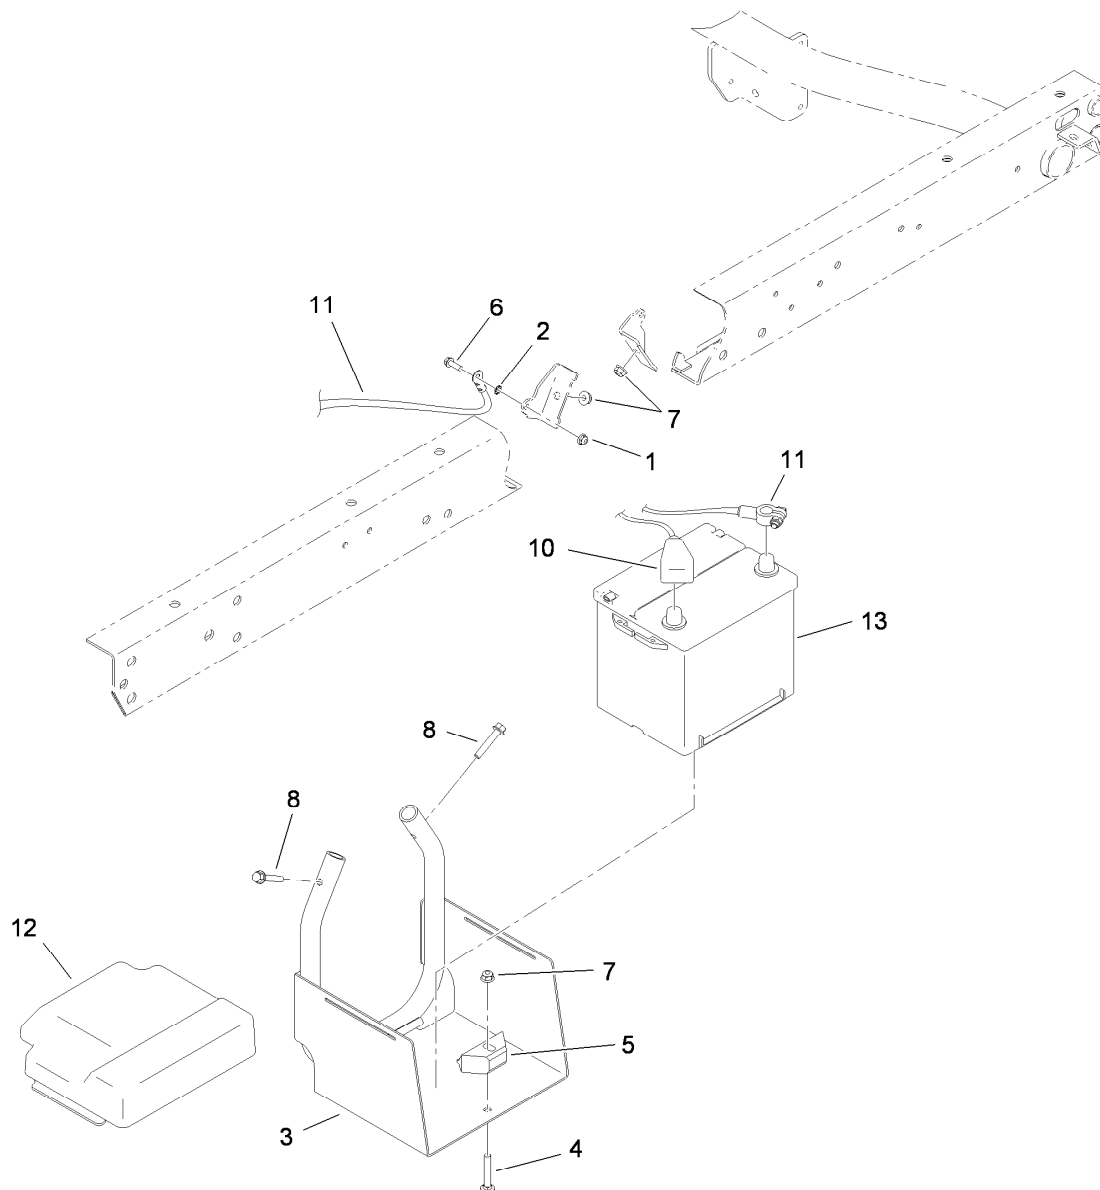

## Battery Assembly

 
| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 1    | 104-7201    | 1    | Nut-HF                  |
| 2    | 3255-8      | 1    | Washer-Lock             |
| 3    | 115-2237-03 | 1    | Tray-Battery            |
| 4    | 3230-6      | 1    | Screw-CARR              |
| 5    | 66-2490     | 1    | Retainer-Battery        |
| 6    | 32105-15    | 1    | Screw-HWH               |
| 7    | 104-8300    | 3    | Nut-HF, NI              |
| 8    | 94-5780     | 2    | Screw-HWH               |
| 10   | 87-8000     | 1    | Cable-Battery, Positive |
| 11   | 115-8122    | 1    | Cable-Battery, Negative |
| 12   | 115-2448    | 1    | Cover-Battery           |
| 13   | 106-5187    | 1    | Battery-Dry             |

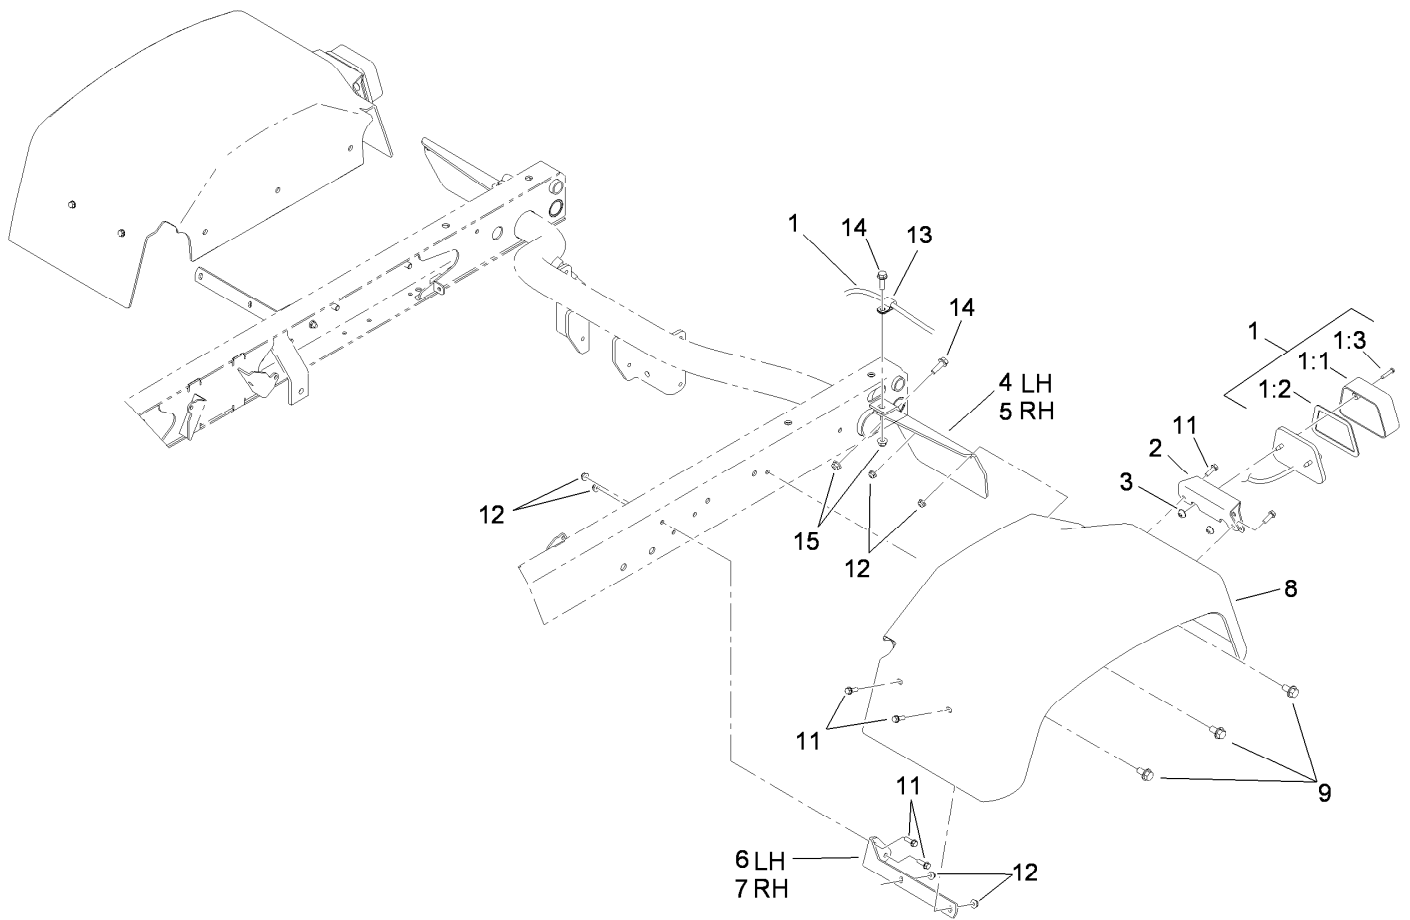

## Tail Light and Fender Assembly


| Ref. | Part Number | Qty. | Description                |
|------|-------------|------|----------------------------|
| 1    | 115-7745    | 2    | Light-Tail, Brake          |
| 1:1  | 87-6300     | 1    | Lens-Light, Tail           |
| 1:2  | 87-6310     | 1    | Gasket-Light, Tail         |
| 1:3  | 32144-93    | 2    | Screw-PPHTF                |
| 2    | 115-2289-03 | 2    | Bracket-Light, Tail        |
| 3    | 3290-506    | 4    | Palnut                     |
| 4    | 93-8943-03  | 1    | Bracket-Fender, Rear (LH)  |
| 5    | 93-8944-03  | 1    | Bracket-Fender, Rear (RH)  |
| 6    | 93-8941-03  | 1    | Bracket-Fender, Front (LH) |
 
| Ref. | Part Number | Qty. | Description                |
|------|-------------|------|----------------------------|
| 7    | 93-8942-03  | 1    | Bracket-Fender, Front (RH) |
| 8    | 87-6660     | 2    | Fender-Rear                |
| 9    | 110-9380    | 6    | Screw-HWH                  |
| 11   | 32105-15    | 12   | Screw-HWH                  |
| 12   | 104-7201    | 12   | Nut-HF                     |
| 13   | 2412-93     | 2    | Clamp-R                    |
| 14   | 3234-17     | 4    | Screw-HHF                  |
| 15   | 104-8300    | 4    | Nut-HF, NI                 |

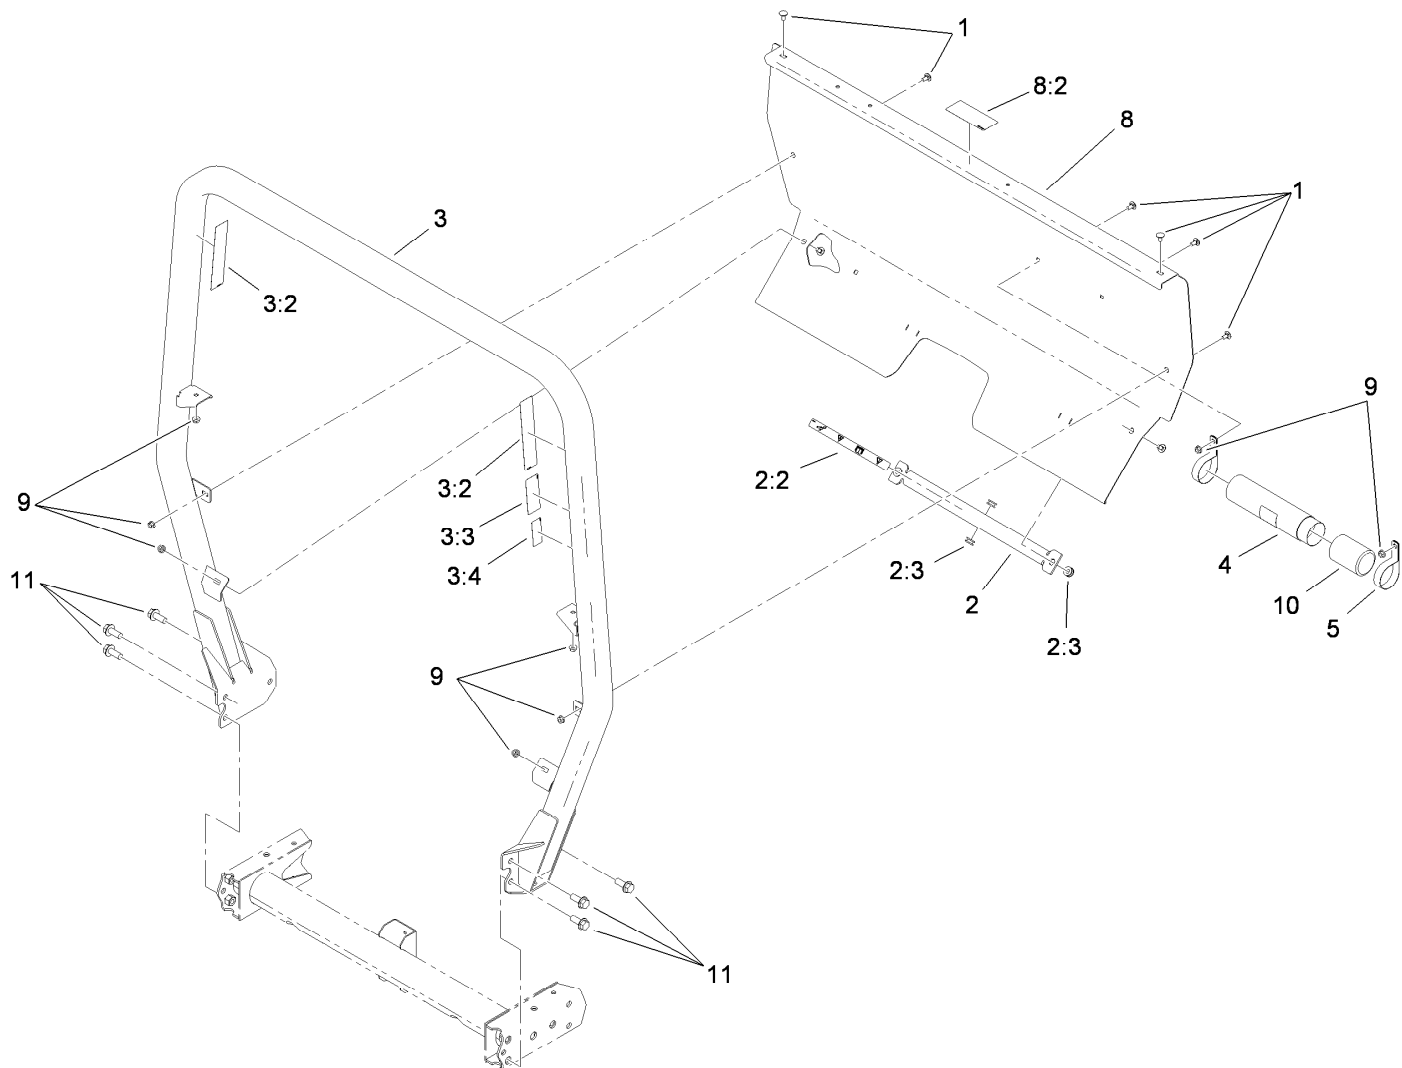


## Roll-Over Protection System Assembly
 
| Ref. | Part Number | Qty. | Description     |
|------|-------------|------|-----------------|
| 1    | 3230-18     | 8    | Screw-CARR      |
| 2    | 105-7960    | 1    | Bed Support ASM |
| 2:2  | 93-9852     | 1    | Decal-Warning   |
| 2:3  | 92-5972     | 4    | Grommet-Rubber  |
| 3    | 115-7910    | 1    | ROPS ASM        |
| 3:2  | 106-7767    | 2    | Decal-ROPS      |
| 3:3  | 93-9850     | 1    | Decal-ROPS, CE  |
| 3:4  | 117-4969    | 1    | Decal-ROPS, ISO |
| 4    | 104-7050    | 1    | Tube-Manual     |
| 5    | 2412-133    | 2    | Clamp-R         |
| 8    | 115-2213    | 1    | ROPS Cover ASM  |
| 8:2  | 105-4215    | 1    | Decal-Caution   |
| 9    | 32128-20    | 8    | Nut-HF          |
| 10   | 104-7048    | 1    | Cap-Housing     |
| 11   | 3234-38     | 6    | Screw-HHF       |

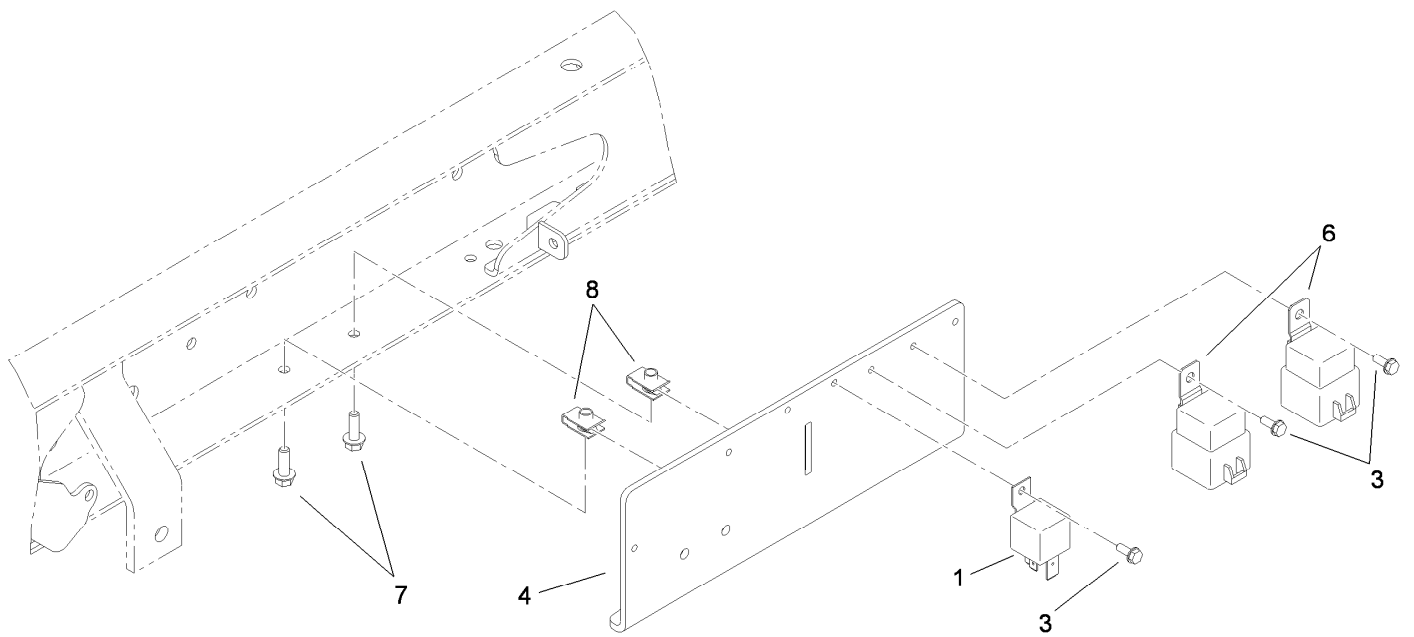

## Relay Assembly

 
| Ref. | Part Number | Qty. | Description   |
|------|-------------|------|---------------|
| 1    | 99-7435     | 1    | Relay-Power   |
| 3    | 32144-112   | 3    | Screw-HWH     |
| 4    | 115-2225    | 1    | Bracket-Relay |
| 6    | 99-7430     | 2    | Relay         |
| 7    | 3234-4      | 2    | Screw-HHF     |
| 8    | 107069      | 2    | Clip          |

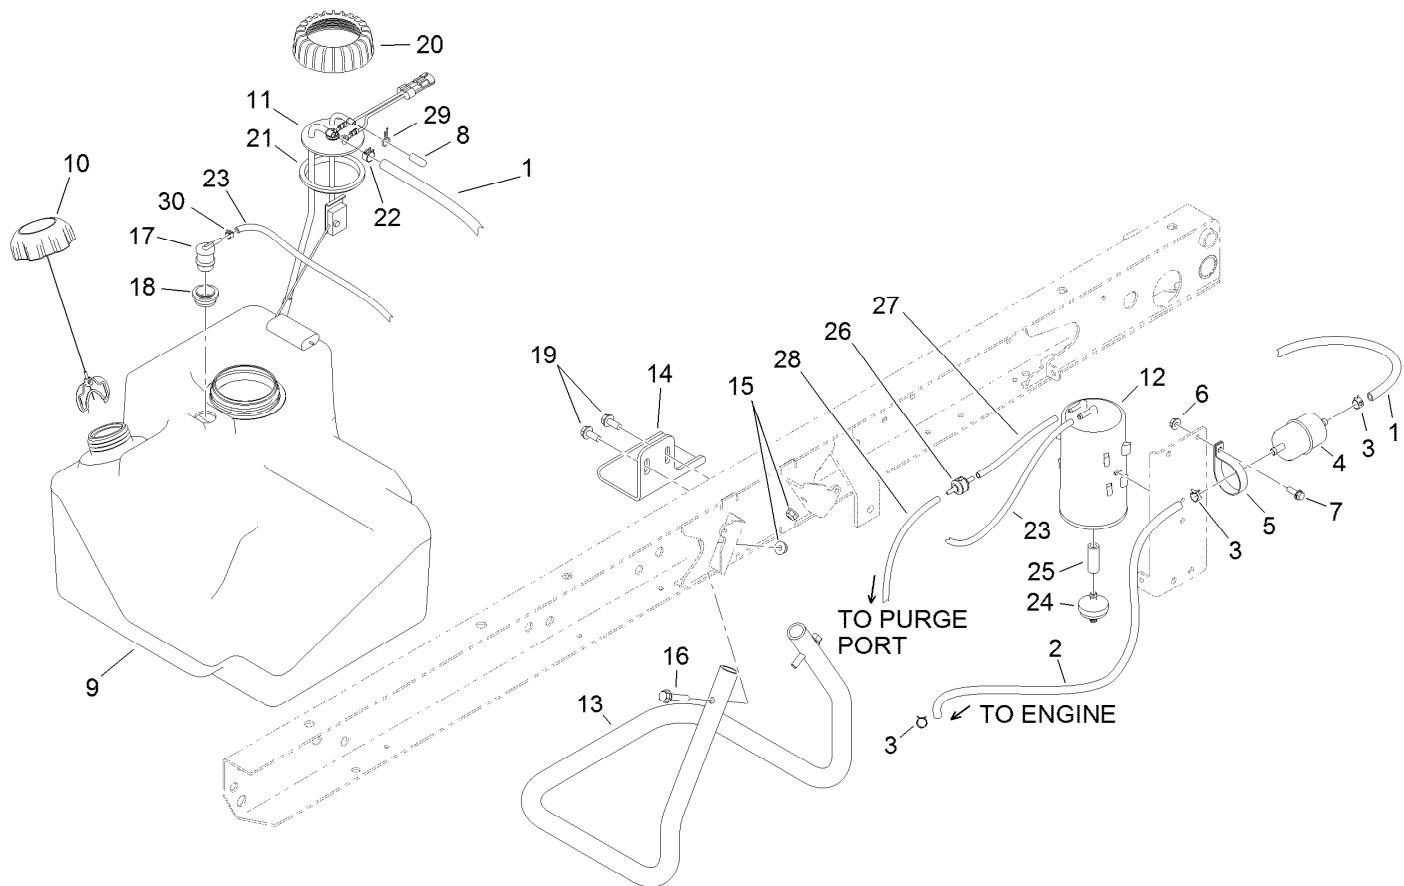

## Fuel System Assembly

| Ref. | Part Number | Qty. | Description     |
|------|-------------|------|-----------------|
| 1    | 110-3372    | 1    | Hose-Fuel       |
| 2    | 109-0281    | 1    | Hose-Fuel       |
| 3    | 2412-98     | 3    | Clamp-Hose      |
| 4    | 108-3854    | 1    | Filter-Fuel     |
| 5    | 2412-148    | 1    | Clamp-R         |
| 6    | 32128-33    | 1    | Nut-HF          |
| 7    | 3234-4      | 1    | Screw-HHF       |
| 8    | 115-2403    | 1    | Cap             |
| 9    | 115-7700    | 1    | Tank-Fuel       |
| 10   | 115-7788    | 1    | Cap-Fuel        |
| 11   | 114-8348    | 1    | Sender-Fuel     |
| 12   | 115-2251    | 1    | Canister-Carbon |
| 13   | 115-7767-03 | 1    | Tube-Support    |
| 14   | 114-8404    | 1    | Plate-Retainer  |
| 15   | 104-8300    | 2    | Nut-HF, NI      |
 
| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 16   | 94-5780     | 2    | Screw-HWH           |
| 17   | 114-0285    | 1    | Valve-Rollover      |
| 18   | 114-0284    | 1    | Grommet             |
| 19   | 32144-11    | 2    | Screw-HWHTF         |
| 20   | 115-2162    | 1    | Cap-Pump, Fuel      |
| 21   | 115-2163    | 1    | Gasket-Pump, Fuel   |
| 22   | 92-2379     | 1    | Clamp-Hose          |
| 23   | 110-3254    | 1    | Hose-Fuel           |
| 24   | 115-7854    | 1    | Filter-Fuel, Inline |
| 25   | 106-5317    | 1    | Hose-Fuel           |
| 26   | 115-7868    | 1    | Valve-Check, Vacuum |
| 27   | 115-7871    | 1    | Hose-Fuel           |
| 28   | 115-7872    | 1    | Hose-Fuel           |
| 29   | 2412-79     | 1    | Clamp-Hose          |
| 30   | 2412-146    | 1    | Clamp-Hose          |

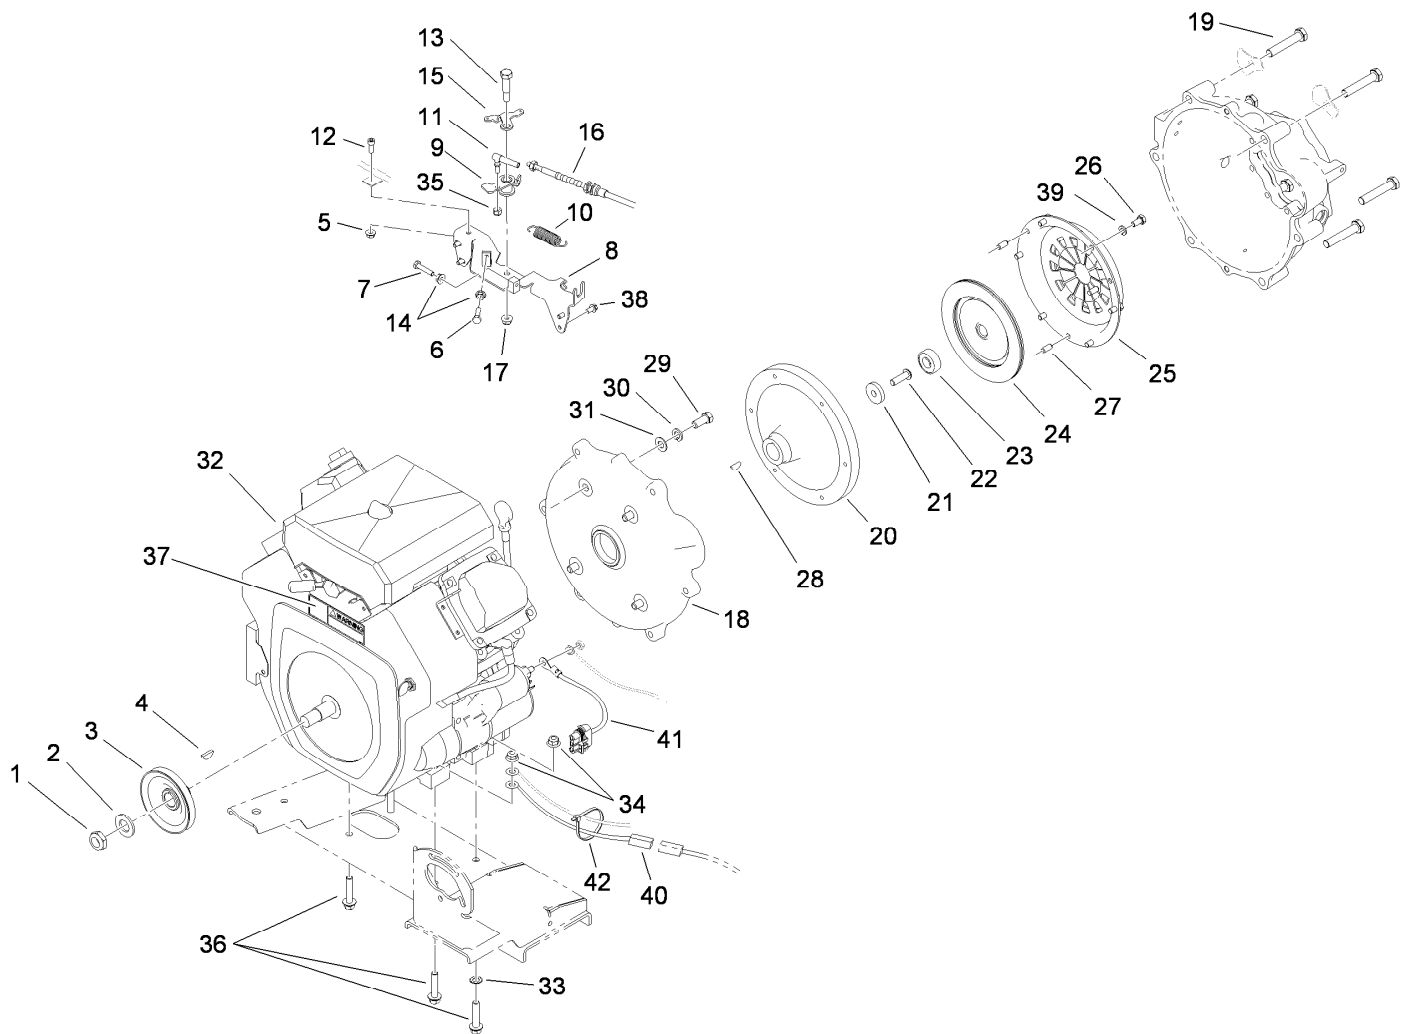


## Engine Assembly

| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 1    | 3296-15     | 1    | Nut-Lock, NI       |
| 2    | 3256-28     | 1    | Washer-Flat        |
| 3    | 87-7710     | 1    | Pulley ASM         |
| 4    | 3257-7      | 1    | Key-Woodruff       |
| 5    | 32128-33    | 1    | Nut-HF             |
| 6    | 329-6       | 1    | Screw-HH           |
| 7    | 329-7       | 1    | Screw-HH           |
| 8    | 87-7780-03  | 1    | Bracket-Throttle   |
| 9    | 87-7800     | 1    | Lever-Throttle     |
| 10   | 67-1450     | 1    | Spring-Idler       |
| 11   | 18-1720     | 1    | Ball Joint         |
| 12   | 3274-15     | 1    | Screw-HSH          |
| 13   | 7-0030      | 1    | Screw-Shoulder, HH |
| 14   | 3220-1      | 2    | Nut-Jam            |
| 15   | 87-7790     | 1    | Lever-Choke        |
| 16   | 115-2286    | 1    | Cable-Accelerator  |
| 17   | 104-8300    | 1    | Nut-HF, NI         |
| 18   | 107-7991    | 1    | Adapter-Clutch     |

| Ref. | Part Number | Qty. | Description               |
|------|-------------|------|---------------------------|
| 19   | 107-7983    | 6    | Screw-HH                  |
| 20   | 87-6480     | 1    | Flywheel                  |
| 21   | 87-6080     | 1    | Washer                    |
| 22   | 3274-63     | 1    | Screw-HSBH                |
| 23   | 87-6460     | 1    | Bearing-Ball (W/Seal)     |
| 24   | 104-9219    | 1    | Disc-Clutch               |
| 25   | 104-9231    | 1    | Plate-Pressure, Clutch    |
| 26   | 33114-016   | 6    | Screw-HH                  |
| 27   | 42-7160     | 3    | Pin                       |
| 28   | 3257-5      | 1    | Key-Woodruff              |
| 29   | 324-4       | 4    | Screw-HH                  |
| 30   | 3253-6      | 4    | Washer-Lock               |
| 31   | 3256-25     | 4    | Washer-Flat               |
| 32   | 115-7819    | 1    | Engine-Kohler, Ch680-3025 |
| 32:1 | 108-3847    | 1    | Filter-Oil ●              |
| 33   | 3255-9      | 1    | Washer-Lock               |
| 34   | 104-8301    | 4    | Nut-HF, NI                |
| 35   | 3296-3      | 1    | Nut-Lock                  |

 ● Not illustrated

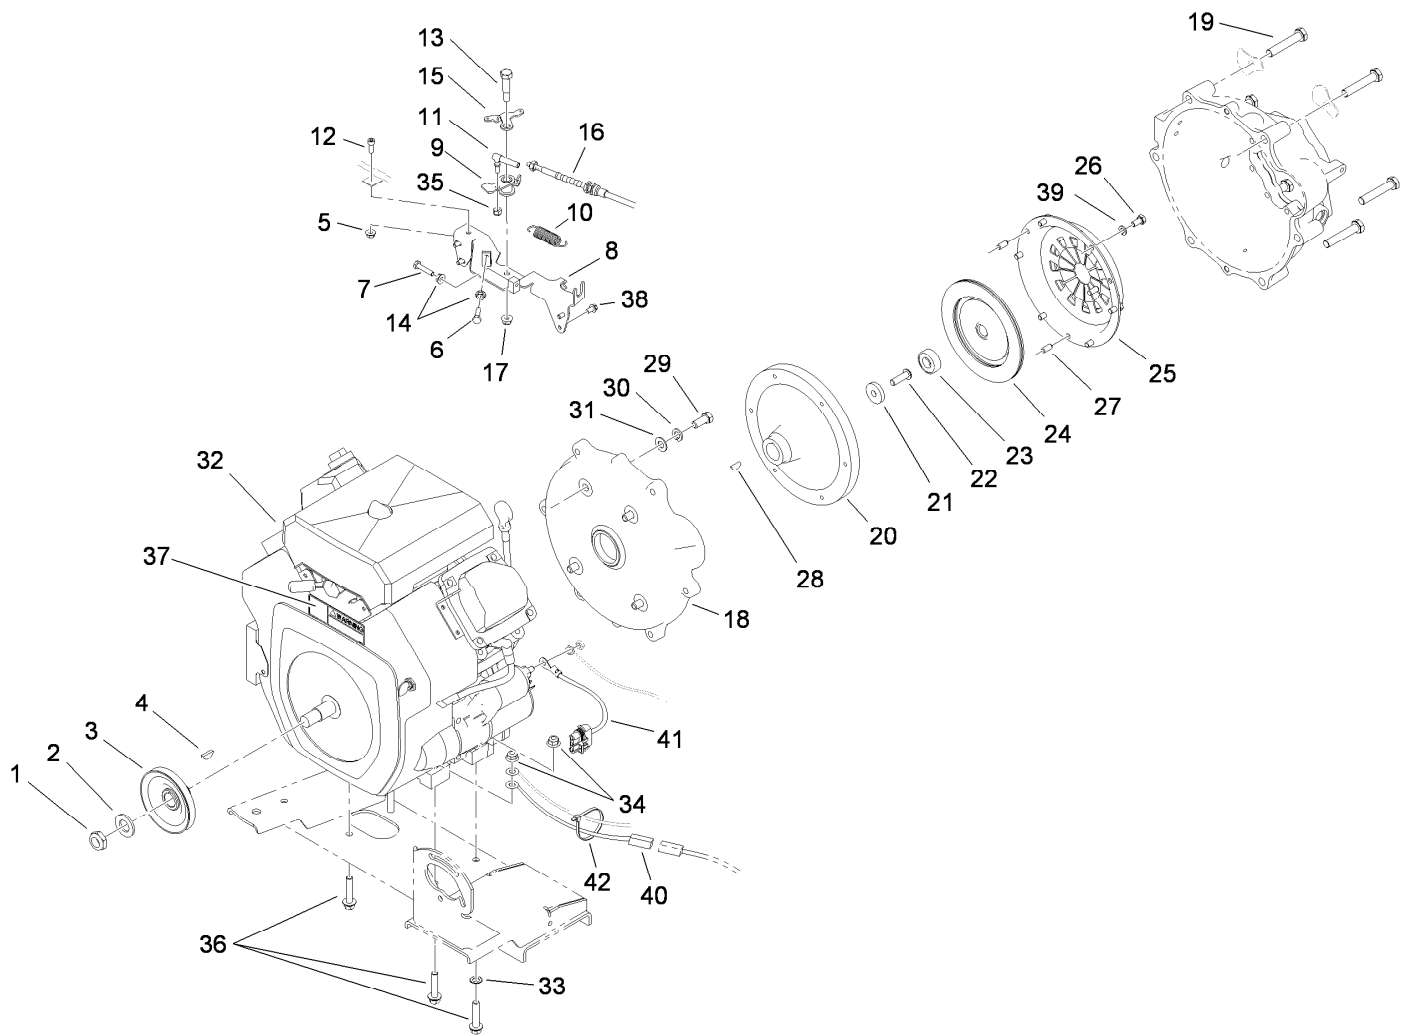


## Engine Assembly (continued)

| Ref. | Part Number | Qty. | Description   |
|------|-------------|------|---------------|
| 36   | 3234-19     | 4    | Screw-HHF     |
| 37   | 80-8040     | 1    | Decal-Warning |
| 38   | 32144-4     | 4    | Screw-HWH     |
| 39   | 3253-4      | 6    | Washer-Lock   |


| Ref. | Part Number | Qty. | Description                |
|------|-------------|------|----------------------------|
| 40   | 117-5612    | 1    | Harness-Wire, Ground       |
| 41   | 99-3441     | 1    | Harness-Wire, Fusible Link |
| 42   | 3290-379    | 1    | Tie-Cable                  |

 ● Not illustrated

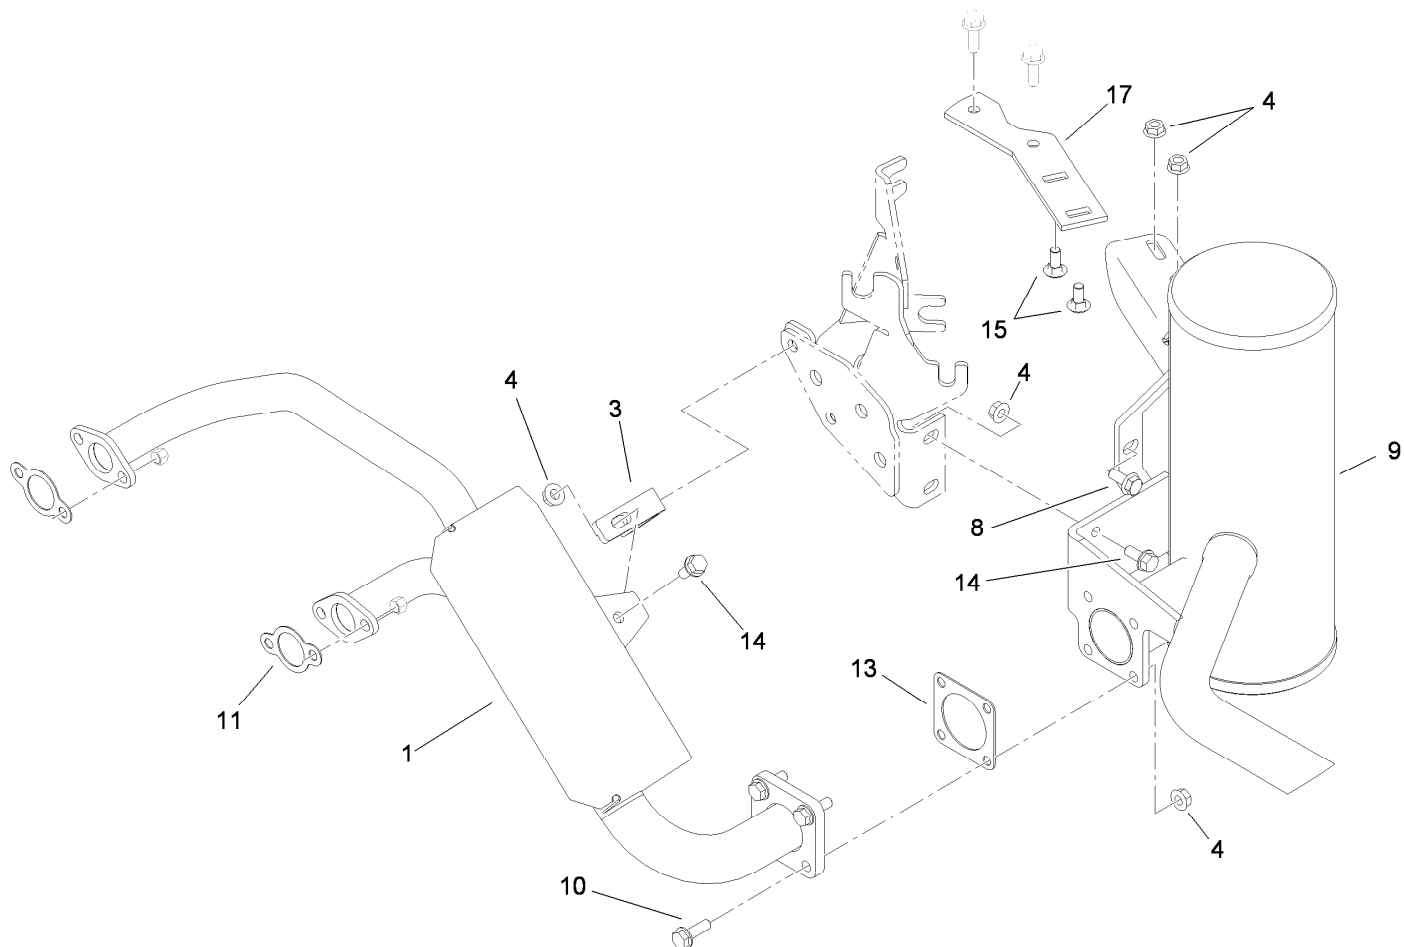

## Muffler Assembly

 
| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 1    | 106-7855    | 1    | Manifold-Cooled, Air |
| 3    | 106-7880-03 | 1    | Mount-Angle          |
| 4    | 32128-20    | 9    | Nut-HF               |
| 8    | 98-7977     | 1    | Screw-HHF            |
| 9    | 115-7725    | 1    | Muffler              |
| 10   | 3234-17     | 4    | Screw-HHF            |
| 11   | 93-0350     | 2    | Gasket-Exhaust       |
| 13   | 105-4209    | 1    | Gasket-Muffler       |
| 14   | 3234-5      | 3    | Screw-HHF            |
| 15   | 3230-1      | 2    | Bolt-CARR            |
| 17   | 105-9472    | 1    | Plate-Mount, Muffler |

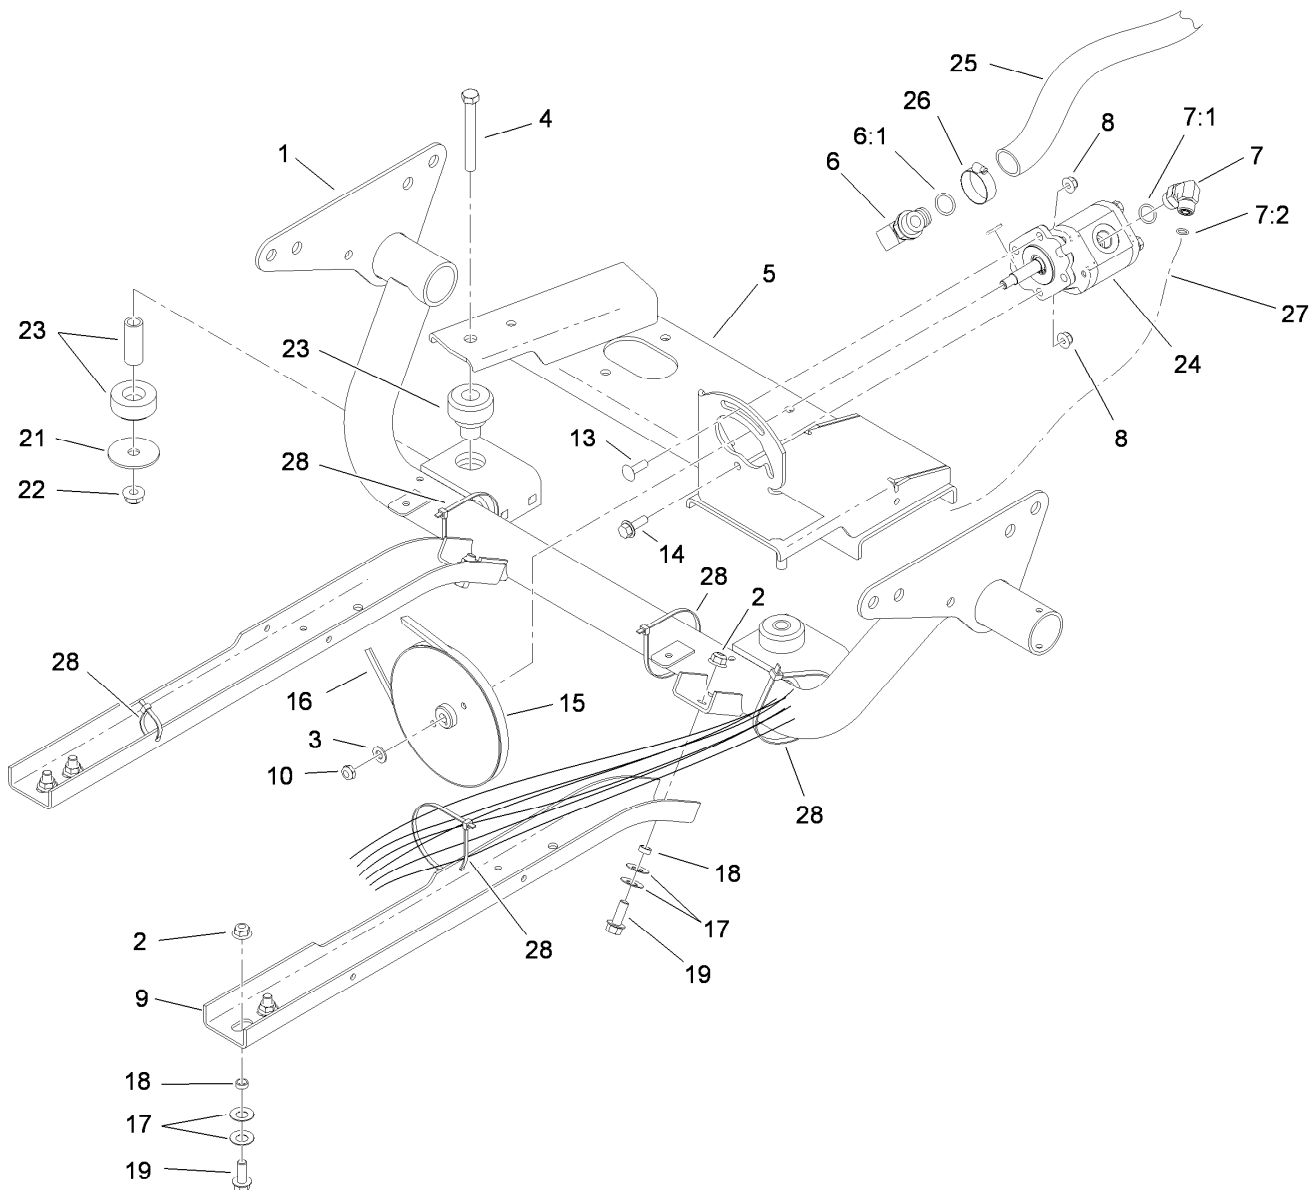

## Engine Support Assembly

| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 1    | 115-2257-03 | 1    | Engine Support ASM  |
| 2    | 104-8301    | 6    | Nut-HF, NI          |
| 3    | 3256-45     | 1    | Washer-Flat         |
| 4    | 324-13      | 2    | Screw-HH            |
| 5    | 115-2352-03 | 1    | Engine Mount ASM    |
| 6    | 87-8170     | 1    | Fitting             |
| 6:1  | 237-80      | 1    | O-Ring              |
| 7    | 340-18      | 1    | Fitting-HYD, 90 DEG |
| 7:1  | 237-79      | 1    | O-Ring              |
| 7:2  | 237-22      | 1    | O-Ring              |
| 8    | 104-8300    | 2    | Nut-HF, NI          |
| 9    | 87-4730-03  | 2    | Guard-Belly         |
| 10   | 3296-5      | 1    | Nut-Hex             |
| 13   | 3230-22     | 1    | Screw-CARR          |
 
| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 14   | 3234-29     | 1    | Screw-HHF            |
| 15   | 87-7740     | 1    | Pulley               |
| 16   | 87-8370     | 1    | V-Belt               |
| 17   | 3290-413    | 12   | Washer-Belleville    |
| 18   | 76-9100     | 6    | Spacer               |
| 19   | 3234-11     | 6    | Screw-HHF            |
| 21   | 87-5100     | 2    | Washer-Snubbing      |
| 22   | 114-8417    | 2    | Nut-HF, NI           |
| 23   | 106-7865    | 2    | Mount-Engine         |
| 24   | 112-2983    | 1    | Pump-Gear, Hydraulic |
| 25   | 87-8030     | 1    | Hose-Suction         |
| 26   | 2412-129    | 1    | Clamp-Hose           |
| 27   | 95-0965     | 1    | Hose ASM             |
| 28   | 3290-379    | 5    | Tie-Cable            |

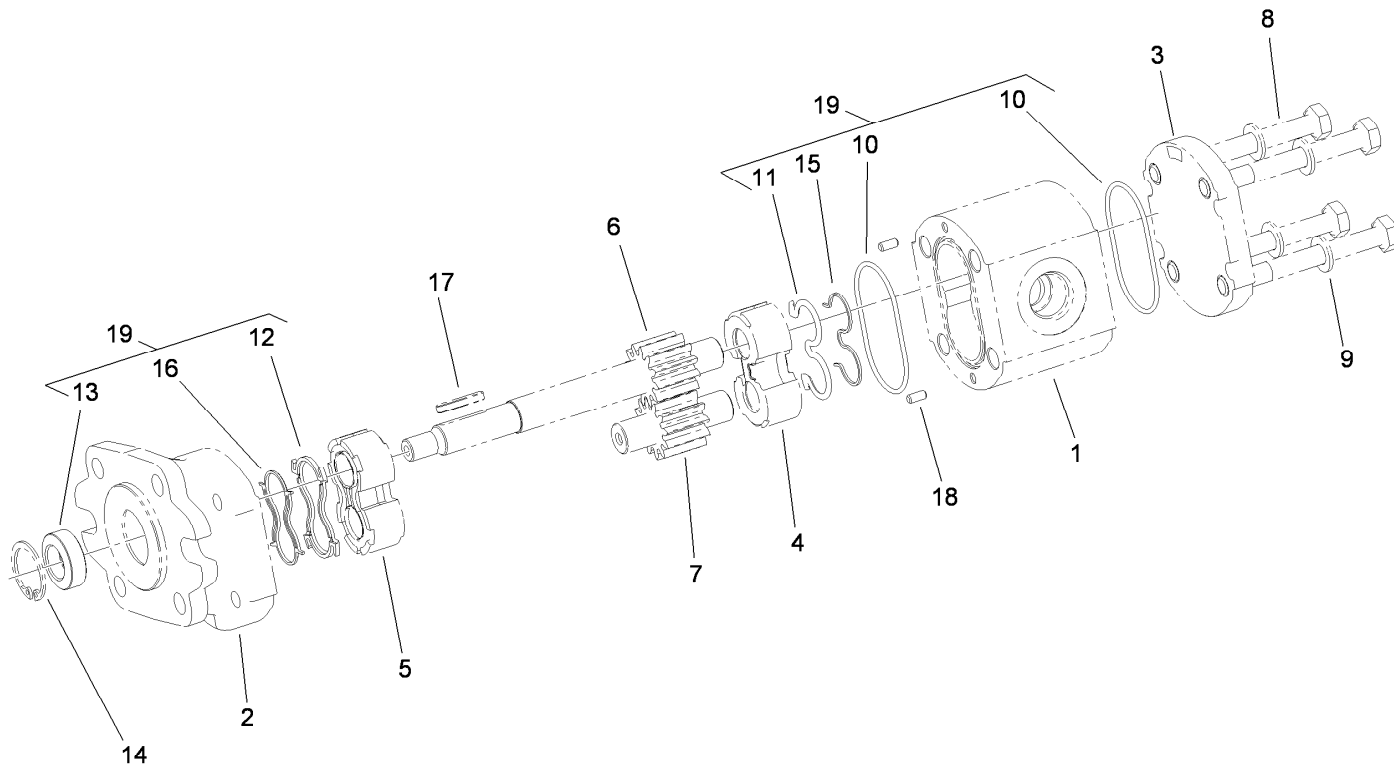


## Hydraulic Gear Pump Assembly No. 112-2983

| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 1    |             | 1    | Body ●                |
| 2    |             | 1    | Cover-Front ●         |
| 3    |             | 1    | Cover-Rear ●          |
| 4    |             | 1    | Plate-Thrust ●        |
| 5    |             | 1    | Plate-Thrust, Upper ● |
| 6    |             | 1    | Shaft-Drive ●         |
| 7    |             | 1    | Gear-Driven ●         |
| 8    |             | 4    | Screw-HH ●            |
| 9    |             | 4    | Washer ●              |
| 10   |             | 2    | O-Ring Seal ●         |

| Ref. | Part Number | Qty. | Description            |
|------|-------------|------|------------------------|
| 11   |             | 1    | Seal ●                 |
| 12   |             | 1    | Seal-Upper ●           |
| 13   |             | 1    | Seal-Shaft ●           |
| 14   |             | 1    | Ring-Clip ●            |
| 15   |             | 1    | Seal-Extrusion, Anti ● |
| 16   |             | 1    | Seal-Extrusion, Anti ● |
| 17   | 115-7856    | 1    | Key-Square             |
| 18   |             | 1    | Pin-Dowel ●            |
| 19   | 112-0199    | 1    | Seal Kit               |

 ● Not serviced separately

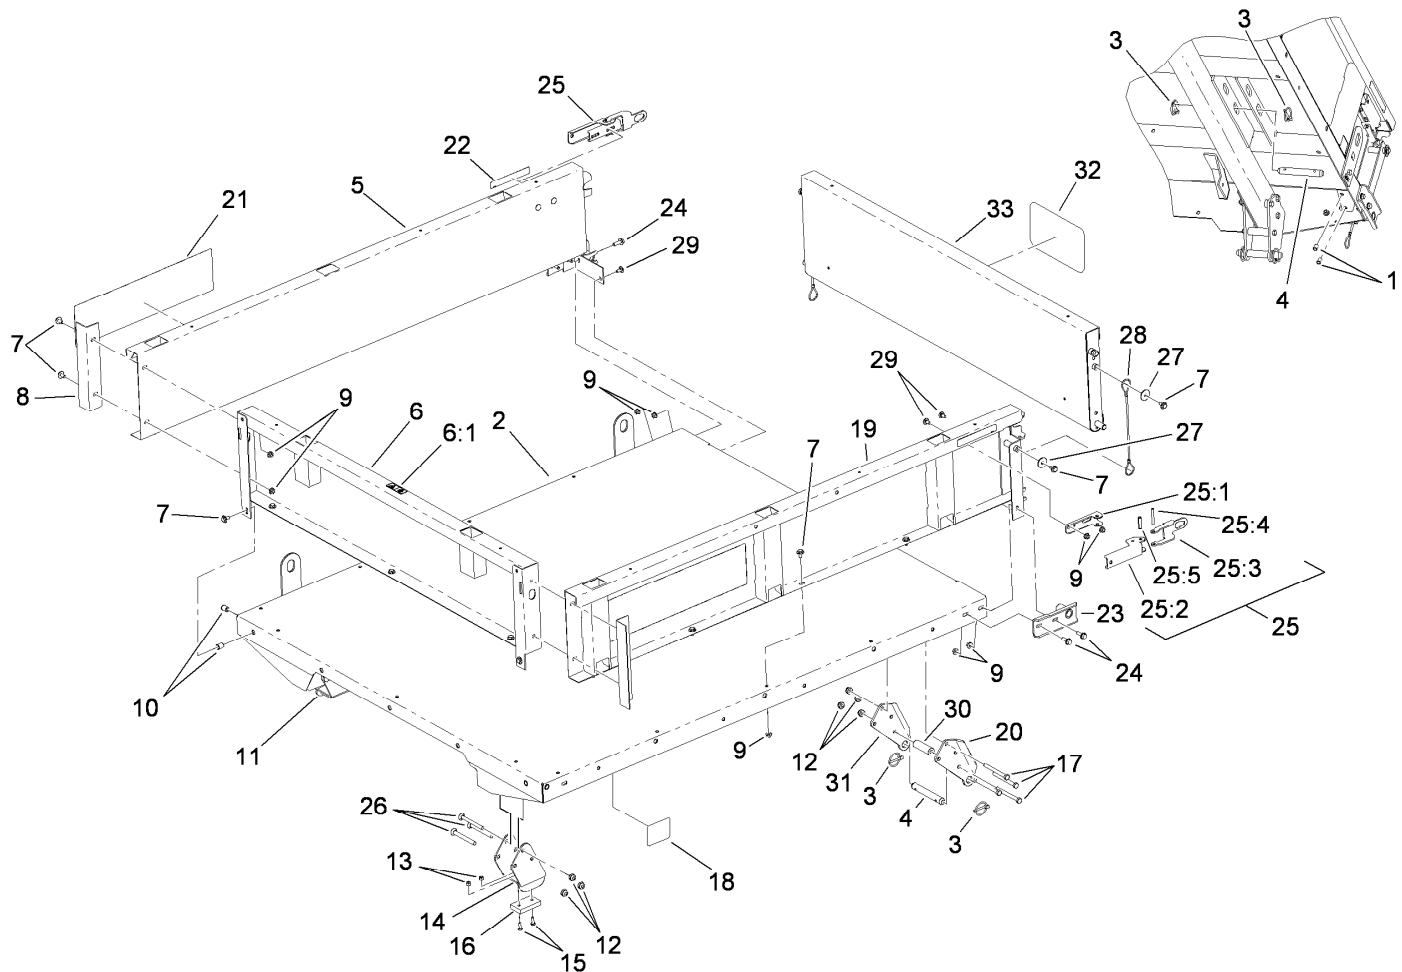

## Full Bed and Side Panel Assembly

| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 1    | 32148-6     | 4    | Insert-Nut         |
| 2    | 93-9724-03  | 1    | Flatbed-Full       |
| 3    | 92-1298     | 8    | Pin-Lynch          |
| 4    | 92-1233     | 4    | Pin-Clevis         |
| 5    | 92-1255-03  | 1    | Panel-Side, RH     |
| 6    | 92-5982     | 1    | Front Panel ASM    |
| 6:1  | 115-7739    | 1    | Decal-No Riders    |
| 7    | 3234-7      | 21   | Screw-HHF          |
| 8    | 92-1320-03  | 2    | Angle-Side         |
| 9    | 32128-20    | 27   | Nut-HF             |
| 10   | 32148-7     | 4    | Nut-Insert         |
| 11   | 106-2423-03 | 1    | Bracket-Spacer, RH |
| 12   | 3296-44     | 14   | Nut-Lock, NI       |
| 13   | 3296-42     | 4    | Nut-Lock, NI       |
| 14   | 106-2422-03 | 1    | Bracket-Spacer, LH |
| 15   | 3250-45     | 4    | Screw-SPH          |
| 16   | 93-9719     | 2    | Block-Wear         |
| 17   | 323-42      | 8    | Screw-HH           |
| 18   | 93-9899     | 2    | Decal-Warning      |
| 19   | 92-1248-03  | 1    | Panel-Side, LH     |

| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 20   | 93-9720-03  | 2    | Bracket-Pivot, Long (LH) |
| 21   | 115-7913    | 2    | Decal                    |
| 22   | 93-9868     | 2    | Decal-Caution            |
| 23   | 92-1265-03  | 2    | Bracket-Pivot            |
| 24   | 3234-29     | 6    | Screw-HHF                |
| 25   | 99-1123     | 2    | Latch ASM                |
| 25:1 | 92-1271     | 1    | Pivot-Latch              |
| 25:2 | 99-1113     | 1    | Handle-Latch             |
| 25:3 | 99-1112     | 1    | Plate-Retainer           |
| 25:4 | 32121-78    | 1    | Pin-Roll                 |
| 25:5 | 32121-25    | 1    | Pin-Roll                 |
| 26   | 3231-24     | 6    | Screw-CARR               |
| 27   | 3256-57     | 4    | Washer-Flat              |
| 28   | 93-9595     | 2    | Lanyard                  |
| 29   | 3230-18     | 6    | Screw-CARR               |
| 30   | 93-9575     | 2    | Tube-Pivot, Flatbed      |
| 31   | 93-9721-03  | 2    | Bracket-Pivot, Long (RH) |
| 32   | 105-4222    | 1    | Decal                    |
| 33   | 92-1259-03  | 1    | Tailgate-Rear            |

# Attachments and Accessories

## For 07369 Workman HD Utility Vehicle with Bed

| Product Name                                              | Model/Part |
|-----------------------------------------------------------|------------|
| Full Area Flatbed .....                                   | 07301      |
| Full Area Flatbed Side Kit .....                          | 07302      |
| Fold Down Side Kit .....                                  | 07303      |
| Left-Hand Light Kit .....                                 | 07315      |
| High-Flow Hydraulic Kit .....                             | 07316      |
| Right-Hand Light Kit .....                                | 07317      |
| 2/3 Area Flatbed .....                                    | 07321      |
| 2/3 Area Flatbed Side Kit .....                           | 07322      |
| Bed Liner .....                                           | 07331      |
| Cab .....                                                 | 07339      |
| 1/3 Area Flatbed .....                                    | 07341      |
| 1/3 Area Stake Side Kit .....                             | 07342      |
| 1/3 Area Platform Lift .....                              | 07344      |
| Canopy .....                                              | 07372      |
| Windshield .....                                          | 07373      |
| Heater Cab .....                                          | 07374      |
| Cab Door Kit .....                                        | 07375      |
| Solid Window Cab Door Kit .....                           | 07376      |
| Hitch Frame Kit .....                                     | 07377      |
| 4 Post Roll-Over Protection System .....                  | 07378      |
| Rear PTO Kit .....                                        | 07419      |
| Hand Throttle Kit .....                                   | 07420      |
| Spiker .....                                              | 08856      |
| Finish Grader .....                                       | 08867      |
| Backup Alarm Kit .....                                    | 107-8037   |
| Premium Engine Oil, 10w30 (55 Gallon Drum) .....          | 108-1179   |
| Premium Engine Oil, 10w30 (5 Gallon Pail) .....           | 108-1180   |
| Premium ATF (Drum) .....                                  | 108-1185   |
| Premium ATF (Pail) .....                                  | 108-1186   |
| Premium All Purpose Grease (Tube) .....                   | 108-1190   |
| Remote Hydraulics Manifold Kit .....                      | 110-2626   |
| Tire-Rear, 24x13-12 .....                                 | 110-5132   |
| Spark Arrestor Kit .....                                  | 112-1688   |
| Wheel-12in x 8.0in .....                                  | 114-8260   |
| Horn Kit .....                                            | 115-7825   |
| High Air Intake Kit .....                                 | 115-7848   |
| Side Mirror Kit .....                                     | 115-7849   |
| Roll-Over Protection System Signal Kit .....              | 117-4825   |
| Worklight Kit .....                                       | 117-4827   |
| Remote Hydraulic Float Kit .....                          | 117-4828   |
| Cab Mirror Kit .....                                      | 117-4830   |
| Receiver Hitch Kit .....                                  | 117-4831   |
| Trailer Signal Kit .....                                  | 117-4836   |
| Trailer Brake Kit .....                                   | 117-4837   |
| 24x13-12 Tire and Wheel ASM .....                         | 117-4838   |
| Sprayer Cylinder Lift Kit, Workman 200 Spray System ..... | 117-4846   |

## Attachments and Accessories (continued)

|                                                           |          |
|-----------------------------------------------------------|----------|
| Engine Cover Kit.....                                     | 117-4867 |
| Manual 4-Wheel Drive Control Kit.....                     | 119-0817 |
| Harness-Wire, Speedometer Adapter.....                    | 119-1762 |
| Canopy for Four-Post Roll-Over Protection System Kit..... | 119-9457 |
| Single Nozzle Kit.....                                    | 41024    |
| Hose Reel Kit.....                                        | 41097    |
| Spray Gun Kit 9 (inc. 25ft Of 1/2in Hose).....            | 41133    |
| Pro Foam Concentrate (4 x 1 Gallon) .....                 | 41157    |
| Sonic Boom Kit .....                                      | 41217    |
| Workman 200 Spray System .....                            | 41235    |
| Foam Marker Kit .....                                     | 41236    |
| Spreader Base Unit .....                                  | 41253    |
| Vicon Spreader.....                                       | 41256    |
| Power Holster Hitch Kit .....                             | 44209    |
| Topdresser 1800.....                                      | 44225    |
| Fifth Wheel Hitch Kit .....                               | 44230    |
| Cushman GA 60 Aerator Adapter Kit .....                   | 44232    |
| Core Harvester Adapter Kit.....                           | 44242    |
| Automatic Tailgate Release Kit .....                      | 92-1220  |
| Fuse Block.....                                           | 92-2641  |
| PTO Over Running Clutch Kit .....                         | 92-2655  |
| Topdresser 1800 Lift Kit .....                            | 92-4452  |
| Mid-Mount Kit for Platform Lift.....                      | 93-3741  |
| 1/3 Area Cover Kit .....                                  | 93-9225  |
| Rear 1/3 Area Mounting Kit.....                           | 93-9249  |
| Tire-Rear, 23x8.50-12.....                                | 98-2993  |
| Tire-Rear, Industrial .....                               | 99-1091  |

**Notes:**

**Notes:**

**Notes:**



**Count on it.**