

Rotaries #04-04

Hover Pro® Operating Angles

Product: Hover Pro		7/27/2017
	Models:	Serial Number:
	02600	31200001 - 314999999
	02601	31200001 - 312999999
	02602	31200001 - 315999999
	02603	31200001 - 314999999
	02604	31200001 - 499999999
	02605	31200001 - 312999999
	02606	31200001 - 499999999
	02609	31300001 - 314999999
	02610	31400001 - 499999999
	02611	31300001 - 499999999
	02612	31500001 - 499999999
	02615	31400001 - 499999999

Situation:

Hover Pro units used beyond operating angles greater than 25° for the models 02600 / 02615 and greater than 45° for models 02601, 02602, 02603, 02604, 02605, 02606, 02609, 02610, 02611, and 02612 will cause severe engine damage due to a lack of oil lubrication. Potential non-warrantable damage could include seized valves, scored pistons and burned crank bearings.

Instructions:

Do not use these units beyond the recommended operating angles mentioned in the above paragraph. Before operating on any slope, a site survey must be completed to determine appropriate areas of operation.

Read, understand and follow the instructions listed below. Always check Engine-Oil level before each use or daily.


Please contact your local Toro Commercial Products Distributor for more information on this issue and if you need assistance in performing a site survey for slope angles. Reference Service Bulletin Rotaries 04-04, "Hover Pro Operating Angles" when making your inquiry.

Instructions Rotaries #04-04

Proper oil level checking and adding of oil

Service Interval: Before each use or daily

- Move the machine to a level surface.
- Remove the dipstick and wipe it with a clean cloth.
- Insert, but do not screw in, the dipstick into the oil fill hole.
- 4. Remove the dipstick and check it.

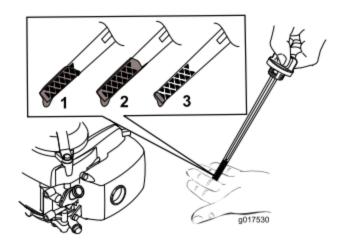


- The oil level is at its maximum.
- The oil level is too high—remove oil from the crankcase.
- The oil level is too low—add oil to the crankcase.

If the oil level is low, **slowly** pour oil into the oil fill hole, wait 3 minutes, and check the oil level on the dipstick by wiping the dipstick clean and then inserting, **but not screwing in,** the oil fill cap into the hole.

Maximum Operating Angles

Models 02600 / 02615

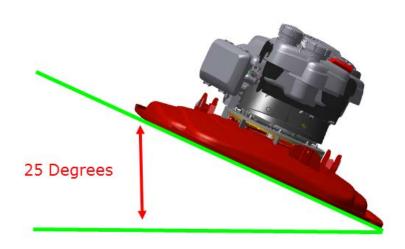

Models
02601 / 02602 / 02603 / 02604 / 02605 / 02606 / 02609 / 02610 / 02611 / 02612

