



Side Light Kit	
PART NO. 95-7858	INSTALLATION INSTRUCTIONS

Loose Parts

DESCRIPTION	QTY.	USE
Side Light Bulb	2	Kit installation
Side Light Socket and Wire Assembly	2	

Installing Side Lights

1. Disengage the power take off (PTO), set the parking brake, and turn the ignition key to "STOP" to stop the engine. Remove the key.
2. Push the hood latch (Fig. 1), located just above the indicator light panel, to the left.
3. Raise the hood to full height.


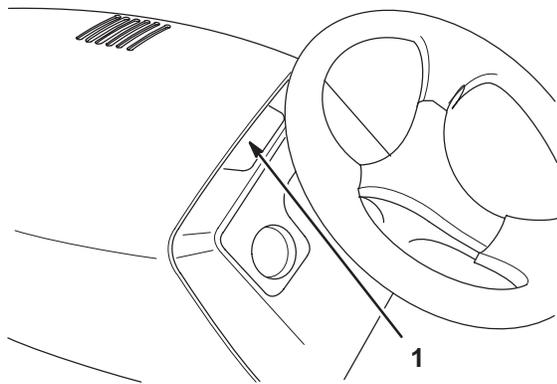


Figure 1

m-3314

1. Hood latch

4. Pull the head light wires off the head light terminals.
5. Remove the reflective tape covering the side light opening on the reflector (Fig. 2).

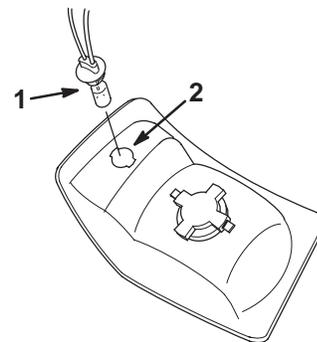

m-3366

Figure 2

1. Side Light
2. Side Light Opening

6. Push the side light into the openings so that the tabs on the lights go into the notches in the opening (Fig. 2). Turn each light a quarter turn clockwise to lock it in place.

7. Connect the orange side light wire to the head light terminal where the orange head light wire was connected (Fig. 3).

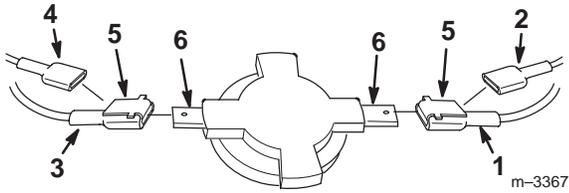


Figure 3

- | | |
|---------------------------|--------------------------|
| 1. Orange Side Light Wire | 4. Black Head Light Wire |
| 2. Orange Head Light Wire | 5. Tab |
| 3. Black Side Light Wire | 6. Head Light Terminal |
-

8. Connect the black side light wire to the head light terminal where the black head light wire was connected (Fig. 3).
9. Connect the orange head light wire to the tabs on the orange side light wire (Fig. 3).
10. Connect the black head light wire to the tabs on the black side light wire (Fig. 3).
11. Repeat steps 4 through 10 to install the other side light.
12. Close the hood.