



Count on it.

Parts Catalog

Z Master® Riding Mower with 48in TURBO FORCE® Side Discharge Mower

Model No. 74141TE—Serial No. 312000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

 
Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Frame and Caster Wheel Assembly	4
Roll-Over Protection System Assembly No. 116-0232	6
Caster Fork and Wheel Assembly	7
Z Stand and Weight Assembly	8
Z Stand Assembly No. 121-4811	9
Hydro Drive System Assembly	10
Hydro Idler Arm Assembly	11
RH Transaxle Assembly No. 120-7861	12
LH Transaxle Assembly No. 120-7860	14
Fuel Tank and Hose Assembly	16
Seat Mounting Assembly	17
Seat Assembly No. 120-7886	18
Motion Control Assembly	19
Parking Brake Assembly	20
Engine, Muffler and Control Panel Assembly	21
Deck Lift Assembly	23
Height-of-Cut Assembly No. 121-4779	24
Deck Assembly	25
Deck Decal Assembly No. 121-3241	27
Deflector Assembly No. 120-2451	28
Idler Assembly	29
Electrical Assembly	30
Attachments and Accessories	31

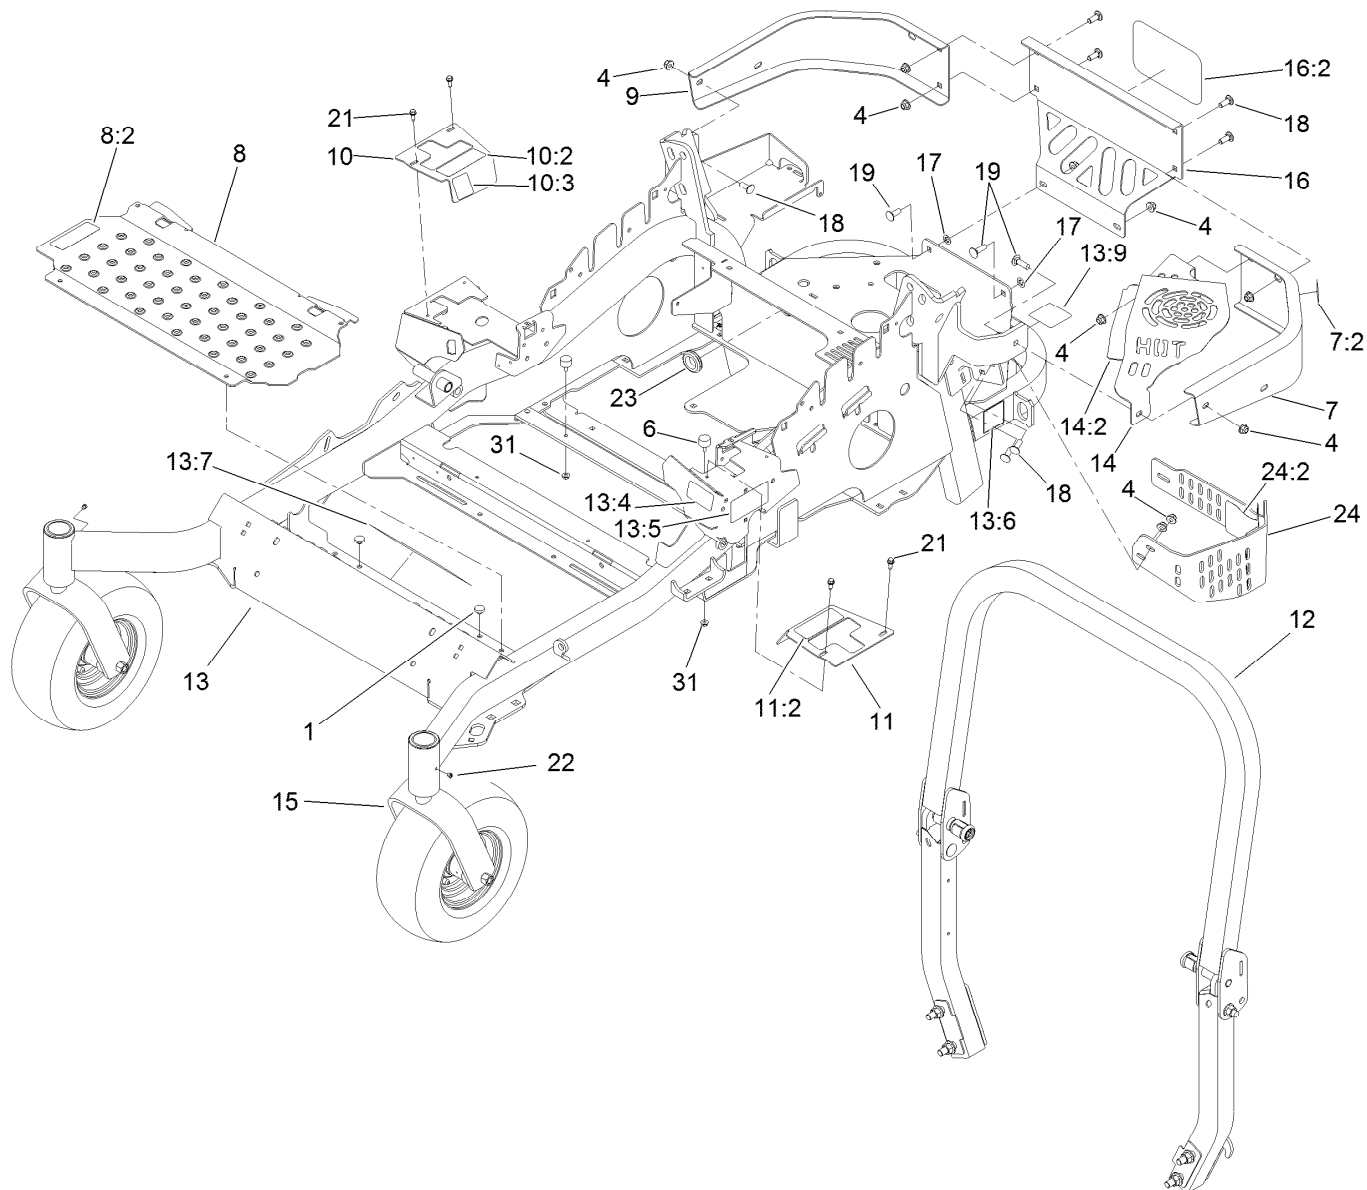


Frame and Caster Wheel Assembly

Ref.	Part Number	Qty.	Description
1	1-513658	2	Bumper
4	104-8301	10	Nut-HF, NI
6	116-6380	2	Bumper-Rubber (W/ Stud)
7	117-3829	1	LH Rear Bumper ASM
7:2	106-5517	1	Decal-Warning
8	117-0915	1	Floorpan ASM
8:2	112-9028	1	Decal-Missing, Cover
9	116-0508-03	1	Bumper-Rear, RH
10	121-4780	1	RH Motion Control Cover ASM
10:2	99-8936	1	Decal-Control, Motion
10:3	116-5988	1	Decal-Park Brake, CE
11	121-4789	1	Motion Control Cover ASM
11:2	99-8936	1	Decal-Control, Motion
12	116-0232	1	ROPS ASM
13	121-4775	1	Main Frame ASM
13:4	117-3864	1	Decal-Fuel Fill, CE
13:5	120-5891	2	Decal

Ref.	Part Number	Qty.	Description
13:6	106-2655	2	Decal-Hazard, Pinched Finger
13:7	117-3888	1	Decal-Danger Slope W/ROPS
13:9	117-1158	2	Decal-Bypass
14	121-4800	1	Muffler Guard ASM W/Foil
14:2	121-4792	1	Foil-Tape
15		2	Front Caster ASM ●
16	119-2691	1	Rear Guard ASM
16:2	67-7320	1	Decal
17	107-3154	2	Nut-Push
18	3231-22	7	Screw-CARR
19	3231-25	3	Bolt-CARR
21	32144-10	4	Screw-HWH
22	1-811010	2	Plug
23	120-3265	1	Grommet
24	121-4781	1	LH Lower Muffler Guard ASM

 
● Not serviced separately

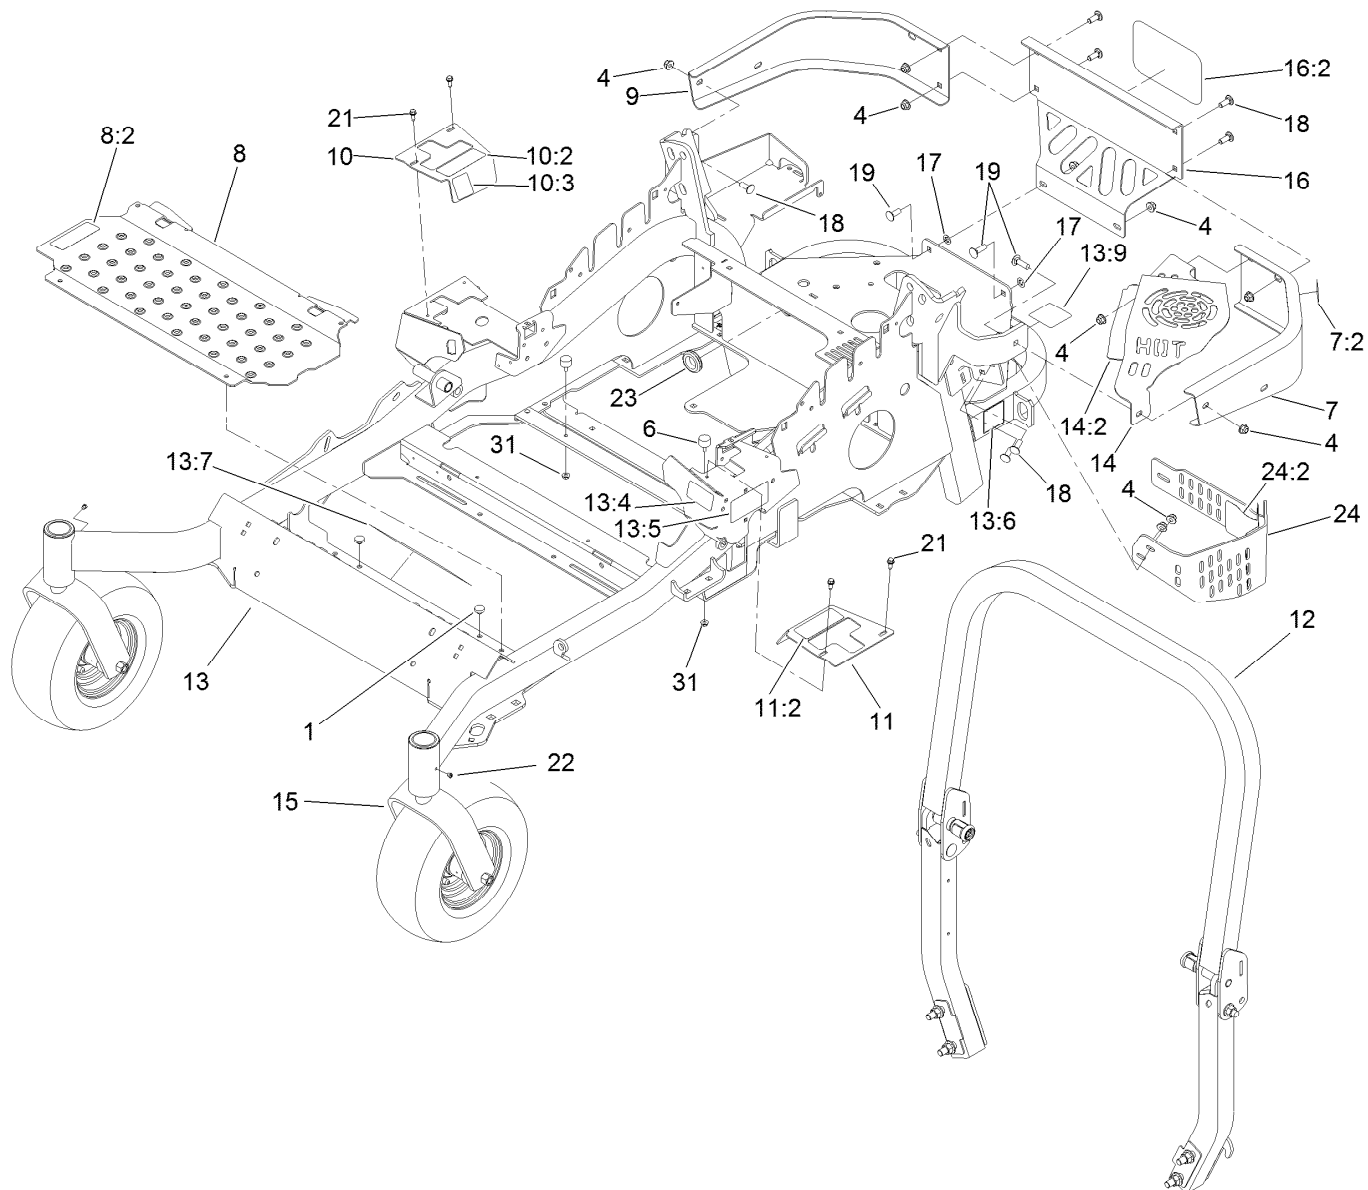

Frame and Caster Wheel Assembly (continued)

Ref.	Part Number	Qty.	Description
24:2	106-5517	1	Decal-Warning
31	104-7201	2	Nut-HF

 
● Not serviced separately

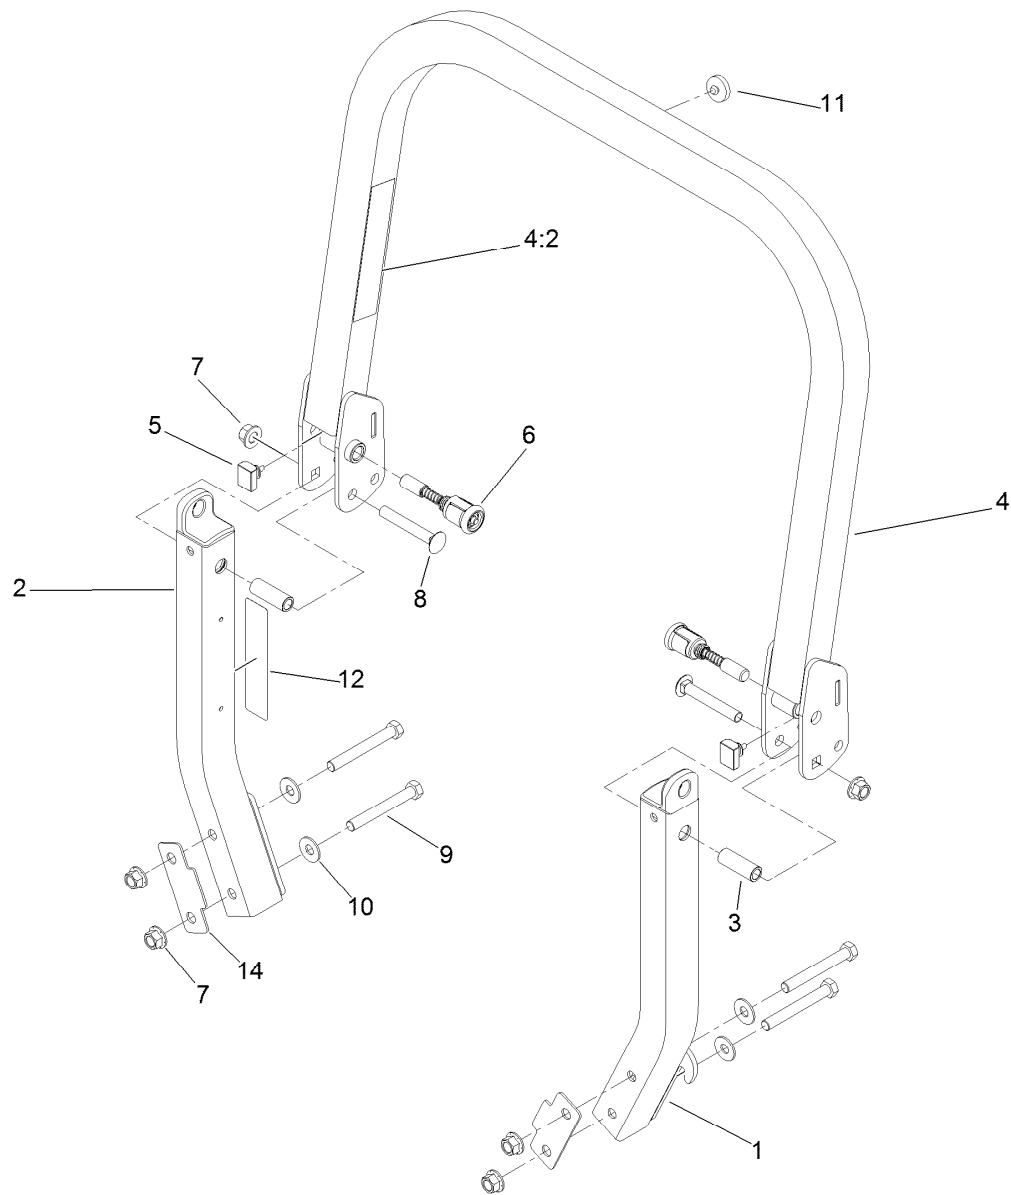

Roll-Over Protection System Assembly No. 116-0232

Ref.	Part Number	Qty.	Description
1		1	Leg-ROPS, LH ●
2		1	Leg-ROPS, RH ●
3	109-6653	2	Spacer
4		1	Upper ROPS ASM ●
4:2	107-3069	1	Decal-Warning
5	109-5337	2	Bumper-ROPS
6	116-0104	2	Pin-Spring
7	99-5107	6	Nut-Lock
8	3233-10	2	Screw-CARR
9	325-17	4	Screw-HH
10	109-9505	4	Washer-Spring
11	109-9233	1	Bumper-Push-In, Rubber
12	117-0346	1	Decal-Caution, Fuel Vent
14	116-0960	2	Spacer

 ● Not serviced separately

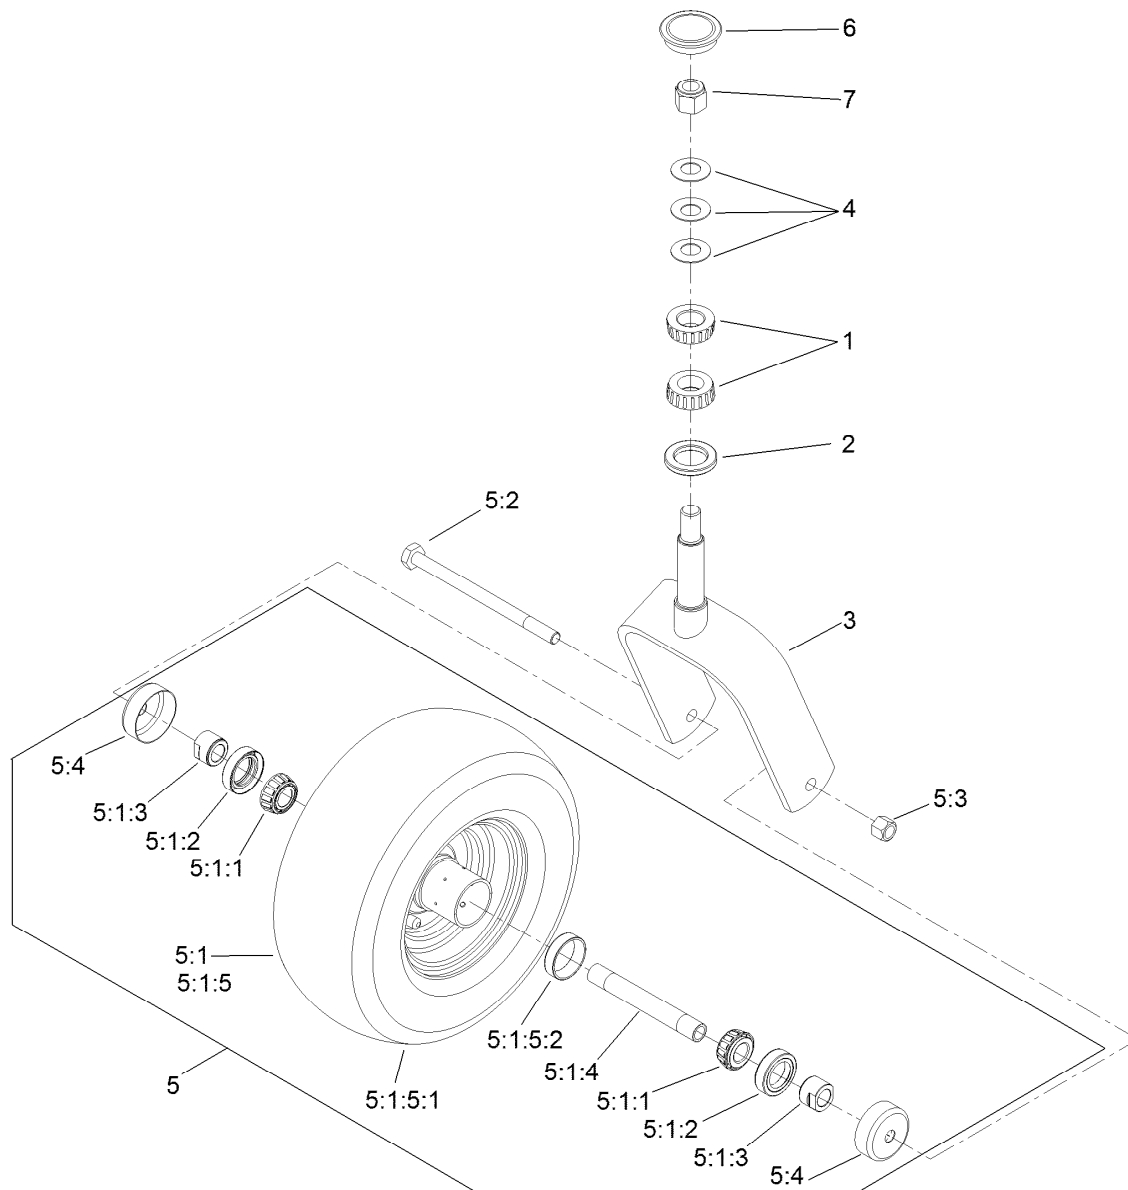


Caster Fork and Wheel Assembly

Ref.	Part Number	Qty.	Description
1	1-543509	2	Bearing-Roller, Tapered
2	1-543511	1	Seal-Grease
3	1-632511-01	1	Caster
4	1-633508	3	Washer-Bellville
5	116-1949	1	Wheel And Tire ASM
5:1		1	Tire And Wheel ASM ●
5:1:1	1-633585	2	Bearing-Cone, Taper
5:1:2	103-0063	2	Seal-Caster
5:1:3	103-3051	2	Spacer-Nut

Ref.	Part Number	Qty.	Description
5:1:4	103-3155	1	Axle-Caster
5:1:5		1	Wheel And Tire ASM ●
5:1:5:1	116-1952	1	Tire
5:1:5:2	1-633584	2	Bearing-Cup
5:2	325-42	1	Screw-HH
5:3	3296-23	1	Nut-Lock, NI
5:4	103-2768	2	Guard-Seal
6	103-4882	1	Cap-Grease
7	3296-51	1	Nut-Lock, NI

 
● Not serviced separately

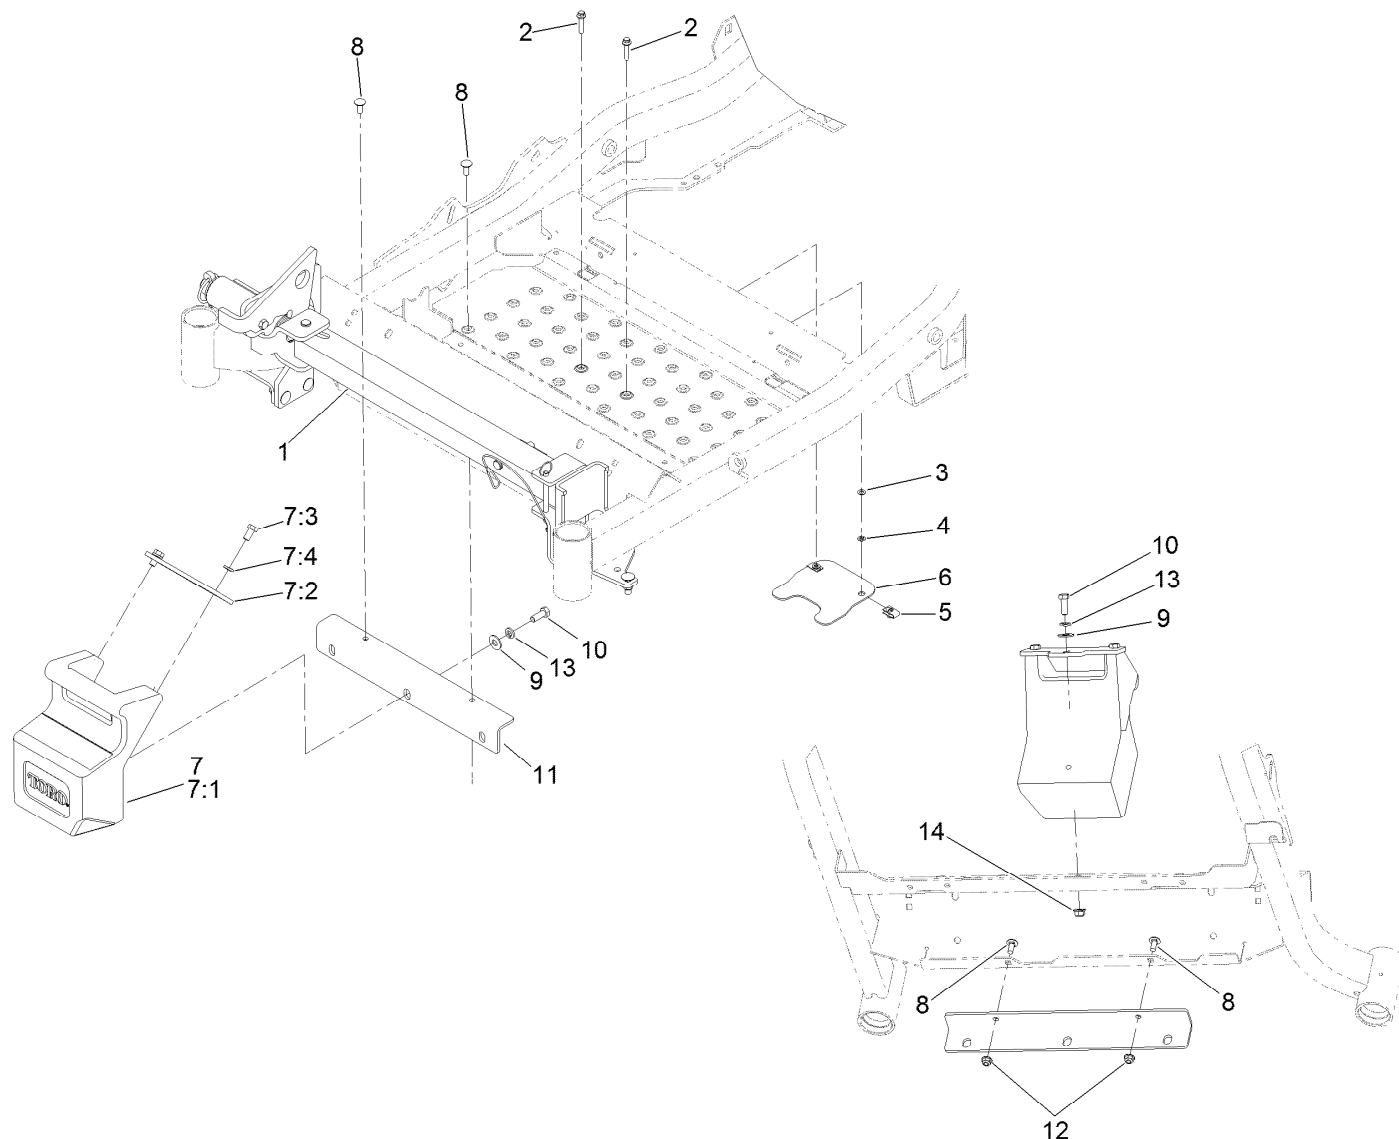

Z Stand and Weight Assembly

Ref.	Part Number	Qty.	Description
1	121-4811	1	Z Stand ASM
2	3234-21	2	Screw-HHF
3	3256-60	2	Washer-Flat
4	106-8737	2	Nut-Retainer
5	107069	2	Clip
6	119-0395-03	1	Adapter-Captive
7	120-7885	1	Weight ASM
7:1	120-7881	1	Weight-43 Lb
7:2	115-3616-01	1	Tab-Support, Weight


Ref.	Part Number	Qty.	Description
7:3	323-4	2	Screw-HH
7:4	3253-5	2	Washer-Lock
8	3230-23	2	Screw-CARR
9	3256-4	2	Washer-Flat
10	323-6	2	Screw-HH
11	115-3615-01	1	Bracket-Mount, Weight
12	104-8300	2	Nut-HF, NI
13	3253-5	2	Washer-Lock
14	104-8301	1	Nut-HF, NI

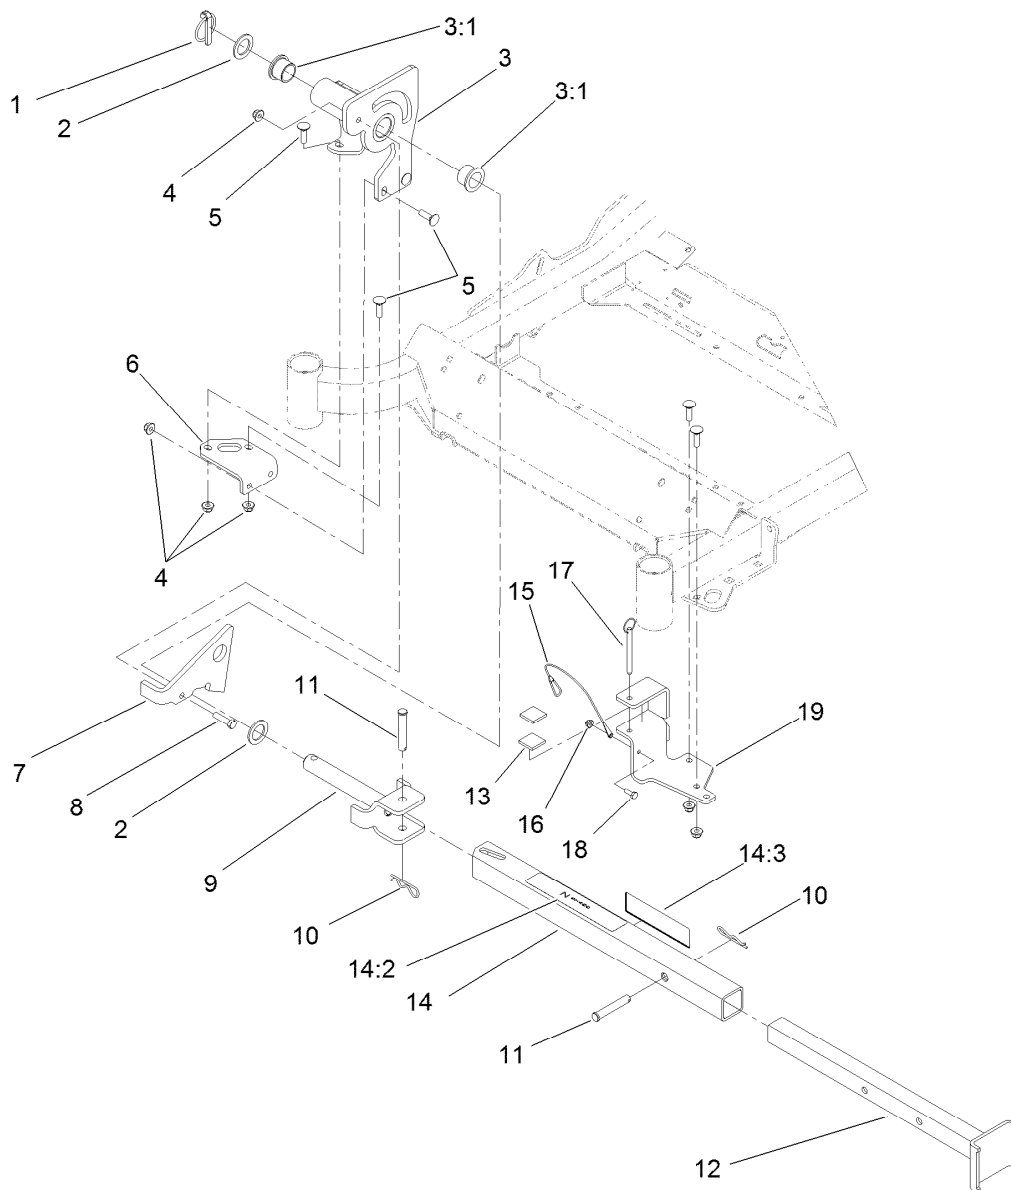 

Z Stand Assembly No. 121-4811

Ref.	Part Number	Qty.	Description
1	283-71	1	Pin-Lynch
2	3-6781	2	Washer-Thrust
3	115-3635	1	Z Stand Pivot ASM
3:1	94-1291	2	Bushing
4	104-8301	8	Nut-HF, NI
5	3231-25	7	Bolt-CARR
6	115-3619-01	1	Bracket-Mount, Pivot
7	100-9686-01	1	Bracket-Latch
8	323-8	1	Screw-HH
9	100-9692-01	1	Pin-Pivot
10	3290-355	2	Pin-Hair

Ref.	Part Number	Qty.	Description
11	283-55	2	Pin-Clevis
12	115-3631-01	1	Tube-Inner
13	115-3613	2	Cushion-Rubber
14	115-3634	1	Outer Tube ASM
14:2	106-7464	1	Decal-Z Stand
14:3	107-3969	1	Decal-Warning
15	100-9385	1	Lanyard-Nylon
16	104-7201	1	Nut-HF
17	105-1647	1	Pin-Hitch, Cotterless
18	321-4	1	Screw-HH
19	115-3625-01	1	Cradle-Z Stand

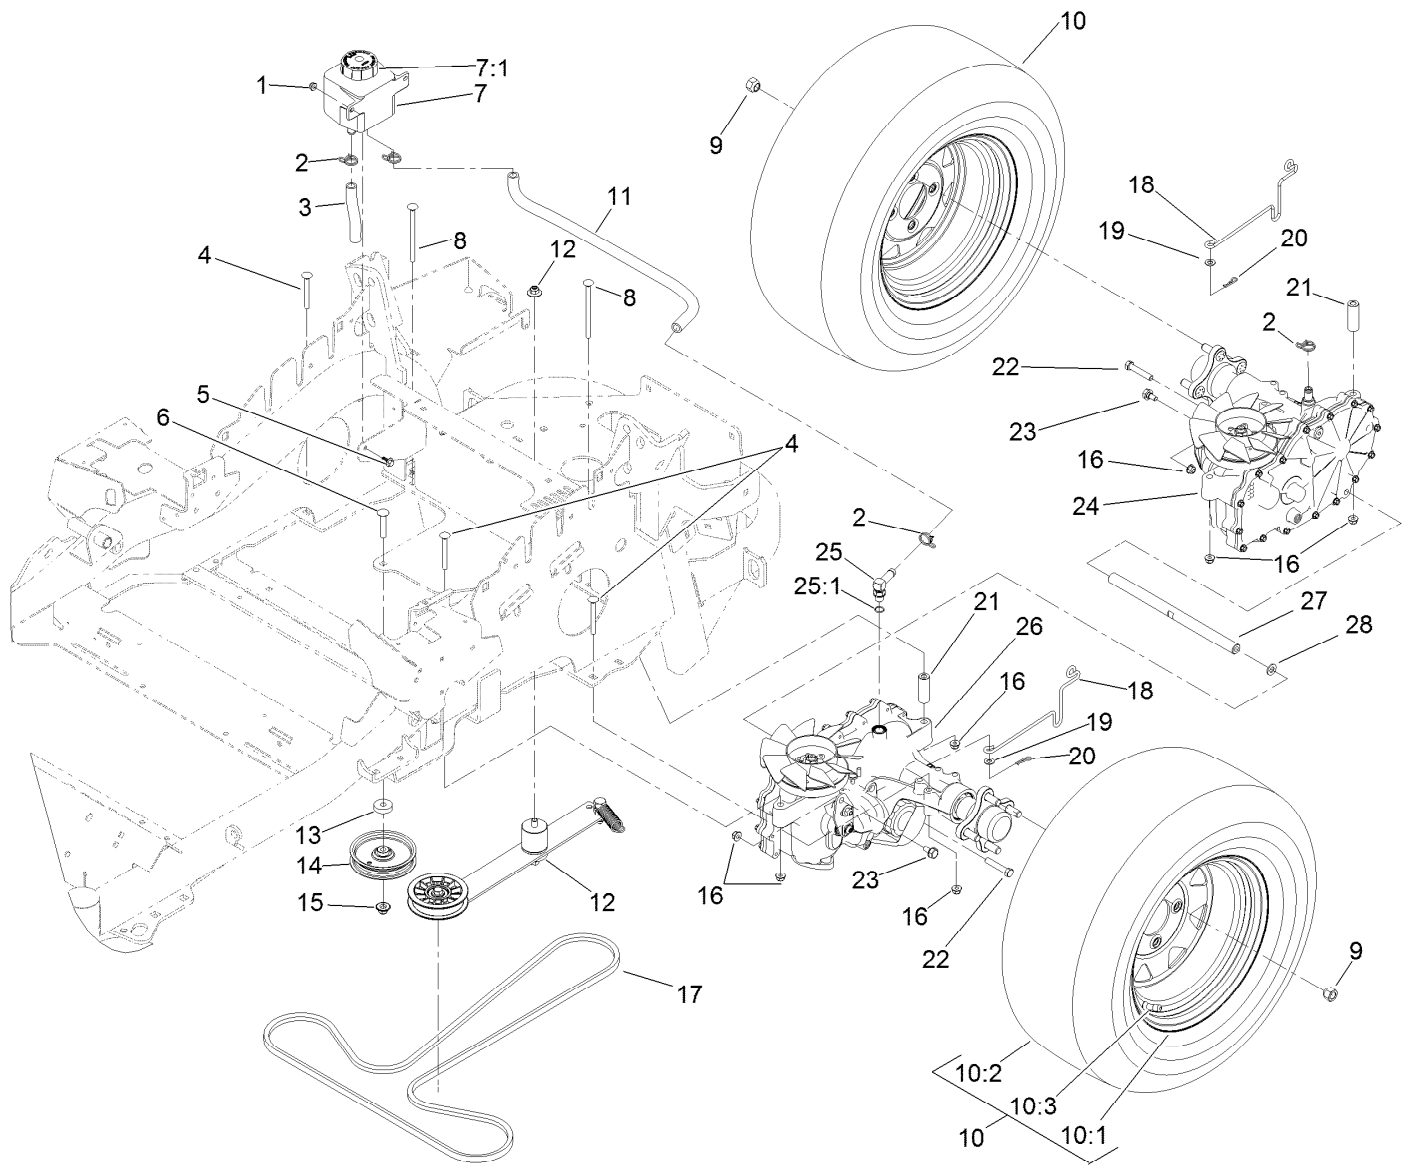 


Hydro Drive System Assembly

Ref.	Part Number	Qty.	Description
1	104-7201	2	Nut-HF
2	117-1193	4	Clamp-Hose
3	119-2642	1	Hose-HYD
4	3230-9	6	Screw-CARR
5	99-6810	2	Screw-HHF
6	117-9971	1	Bolt-Carriage
7	109-2250	1	Vent-Tank, HYD
7:1	109-3320	1	Cap-Reservoir, HYD
8	3230-30	2	Screw-CARR
9	242-50	8	Nut-Lug
10	119-2692	2	Wheel And Tire ASM
10:1	120-3274	1	Wheel
10:2	120-3271	1	Tire
10:3	232-27	1	Stem-Valve
11	119-2689	1	Hose-HYD
12		1	Hydro Idler Arm ASM ●
13	105-7788	1	Spacer

Ref.	Part Number	Qty.	Description
14	93-1622	1	Pulley-Idler
15	109-6658	1	Nut-Flange, NI
16	104-8300	10	Nut-HF, NI
17	114860	1	Belt-V
18	115-4990	2	Rod-Bypass
19	3256-23	2	Washer-Plain
20	1-806003	2	Pin-Cotter
21	109-3652	2	Spacer-Hydro
22	94-7972	2	Screw-HH W/Loctite
23	37-8771	2	Bolt-Shoulder
24	120-7861	1	RH Transaxle ASM
25	109-6449	1	Fitting-Elbow, 90
25:1	237-42	1	O-Ring
26	120-7860	1	LH Transaxle ASM
27	117-8585	1	Shaft-Cross, Hydro
28	3256-24	1	Washer-Flat

 
● Not serviced separately

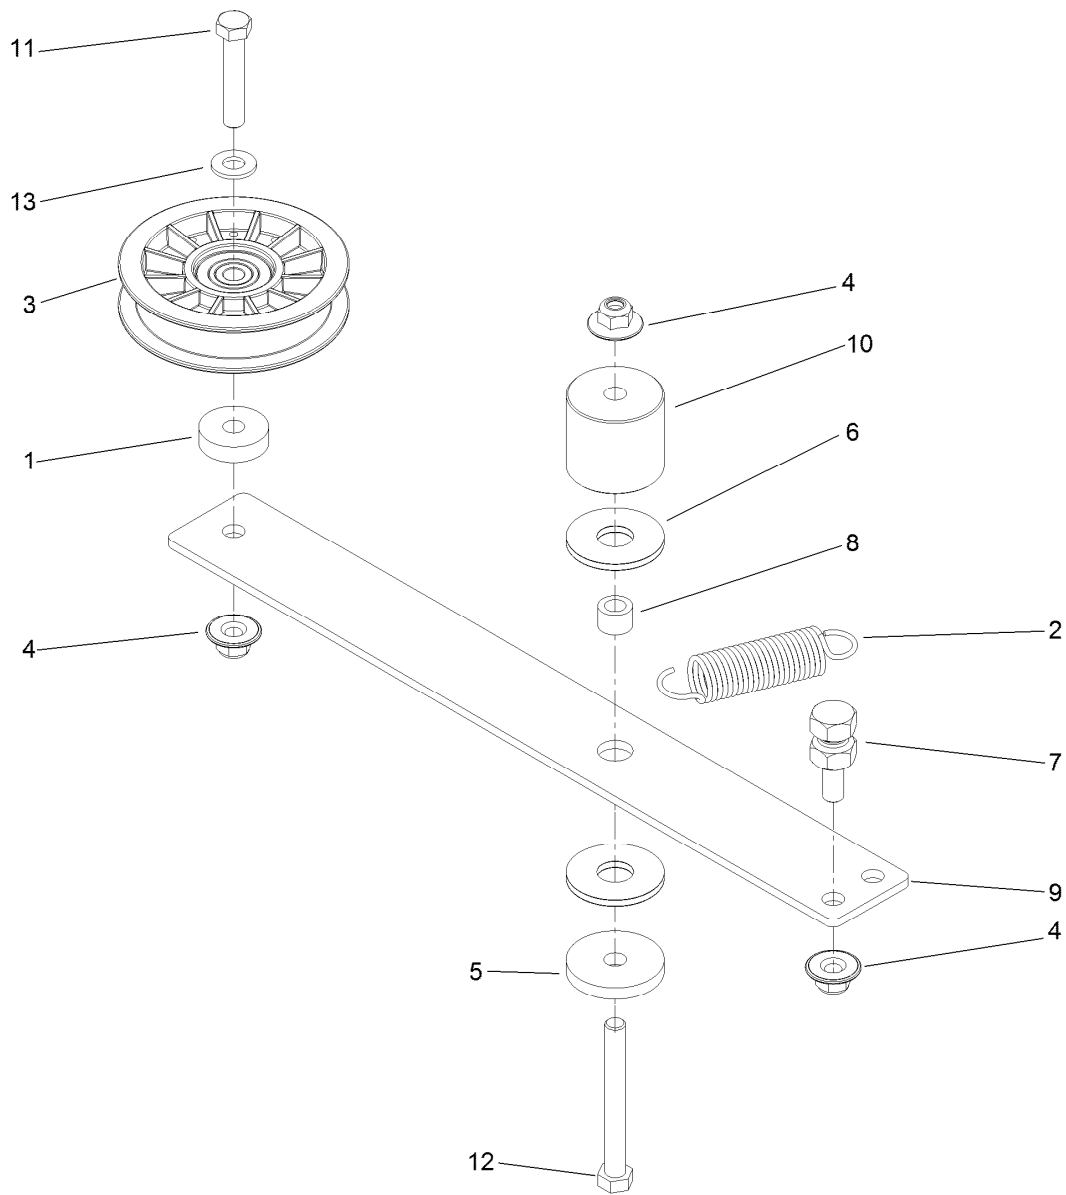

Hydro Idler Arm Assembly

Ref.	Part Number	Qty.	Description
1	105-7788	1	Spacer
2	108-4056	1	Spring-Extension
3	109-3397	1	Pulley-Idler, Flat
4	109-6658	3	Nut-Flange, NI
5	110-9981	1	Washer-Plain
6	114-0463	2	Washer-Friction, Composite
7	114-5866	1	Anchor-Spring, Short
8	115-4986	1	Spacer
9	119-9914	1	Arm-Idler, Hydro
10	119-2657	1	Spacer-Plain
11	323-10	1	Screw-HH
12	323-20	1	Screw-HH
13	3256-24	1	Washer-Flat

 RH Transaxle Assembly No. 120-7861

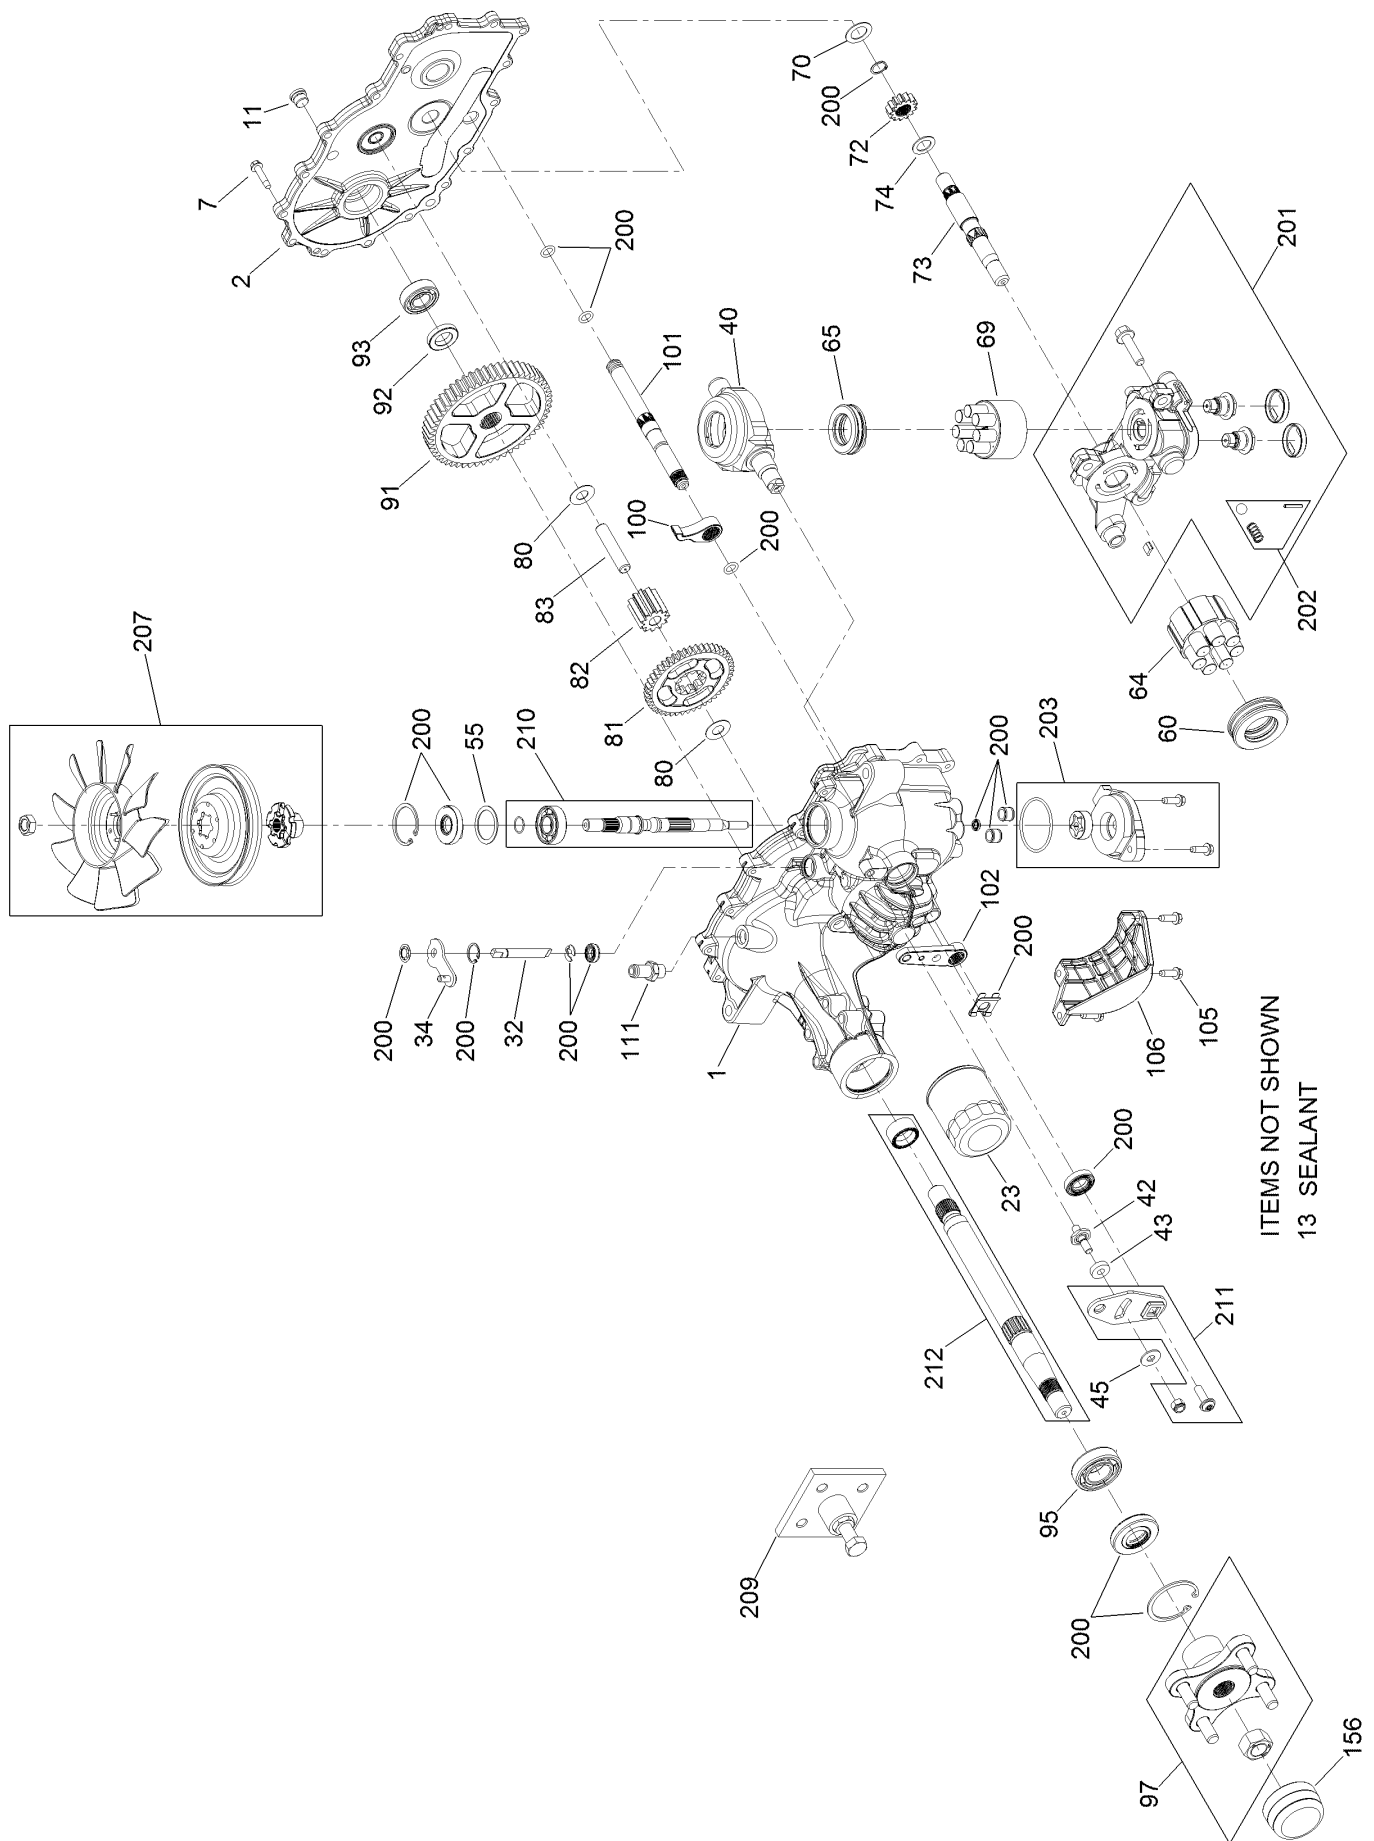


RH Transaxle Assembly No. 120-7861 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	114-1676	1	Main Housing Kit	83	104-5329	1	Pin-Jackshaft
2	117-5358	1	RH Housing Side Kit	91	114-1694	1	Gear-54T
7	117-5359	16	Screw-HHF	92	120-7975	1	Spacer
11	104-2189	1	Plug-Thread, Straight	93	114-1696	1	Bearing-Ball
13	104-2147	1	Sealant ●	95	120-7976	1	Bearing-Ball
23	109-3321	1	Element-Oil Filter, HYD	97	109-5939	1	Hub Kit
32	114-1685	1	Rod-Bypass	100	114-1697	1	Pawl-Brake
34	107-2490	1	Arm-Bypass	101	120-7977	1	Brake Shaft Kit
40	104-5304	1	Swashplate-Trunnion	102	125-0021	1	Handle-Brake
42	104-2116	1	Stud	105	104-2120	3	Screw
43	112-9853	1	Puck-Friction	106	120-7981	1	Guard-Filter, RH
45	114-8491	1	Washer	111	109-3278	1	Adapter-Straight
55	104-5308	1	Spacer	156	115-5057	1	Cover-Nut, Axle
60	109-2865	1	Bearing-Thrust	200	109-3537	1	Seal Kit
64	114-1689	1	Motor Cylinder Block Kit	201	120-7982	1	RH Center Section Charge Kit
65	94-6922	1	Bearing-Thrust	202	114-8464	1	Charge Relief Kit
69	110-8561	1	Pump Block ASM	203	114-8465	1	Charge Kit
70	104-5339	1	Washer-Flat	207	121-2988	1	Fan And Pulley Kit
72	120-7972	1	Gear-13T	209	114-8467	1	Puller-Hub, 4 Bolt
73	114-1691	1	Shaft-Motor	210	117-5361	1	Input Shaft Kit
74	104-5360	1	Washer	211	117-5362	1	Control Arm Kit
80	94-1933	2	Washer	212	114-8470	1	Axle Shaft Kit
81	120-7973	1	Gear-46T				
82	120-7974	1	Gear-11T				


● Not illustrated

 LH Transaxle Assembly No. 120-7860

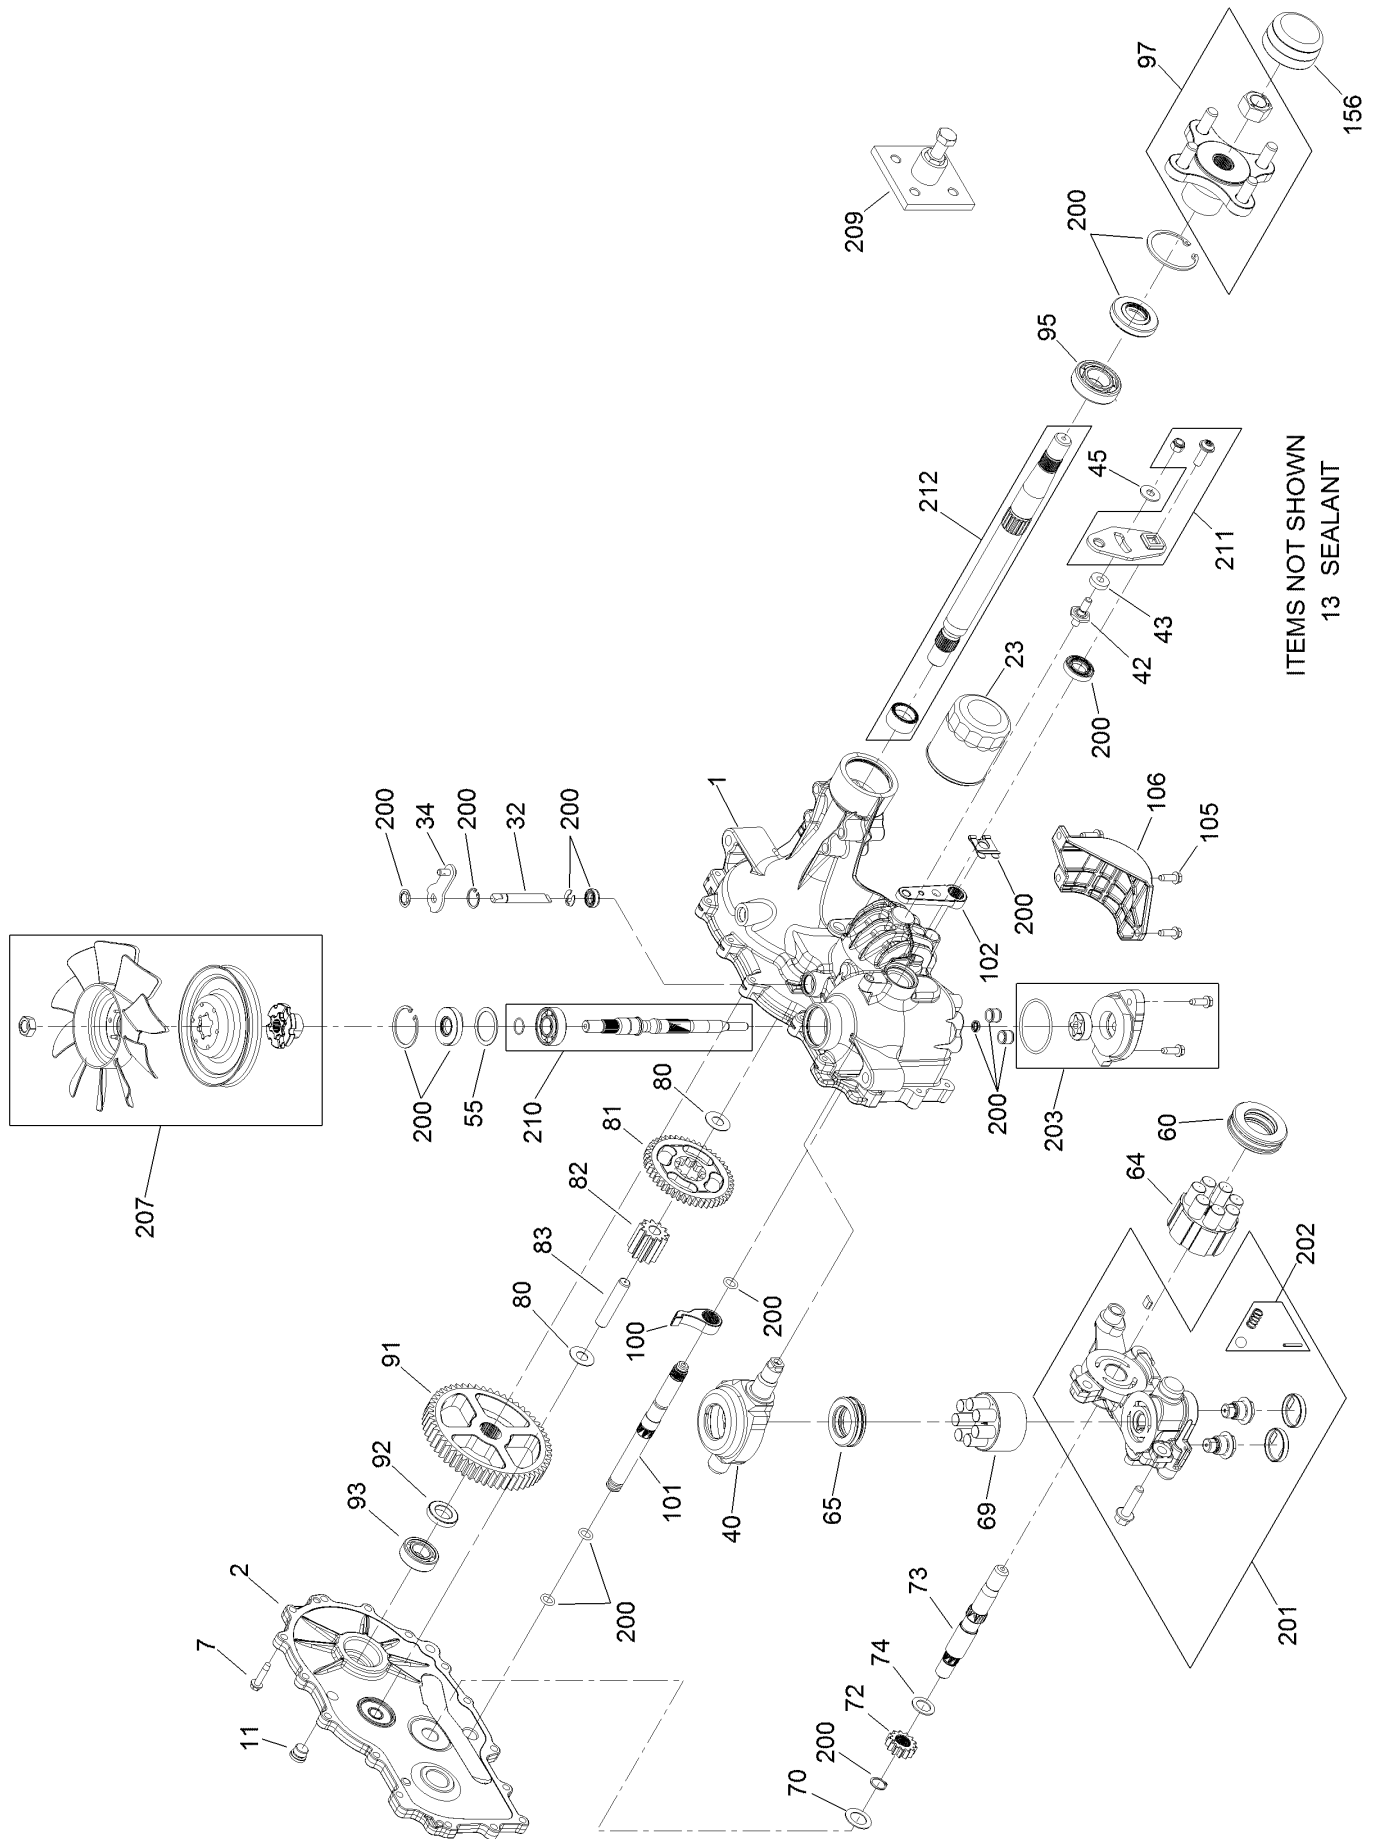

LH Transaxle Assembly No. 120-7860 (continued)


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	114-8471	1	LH Main Housing Kit	82	120-7974	1	Gear-11T
2	114-8472	1	LH Side Cover Kit	83	104-5329	1	Pin-Jackshaft
7	117-5359	16	Screw-HHF	91	114-1694	1	Gear-54T
11	104-2189	1	Plug-Thread, Straight	92	120-7975	1	Spacer
13	104-2147	1	Sealant	93	114-1696	1	Bearing-Ball
23	109-3321	1	Element-Oil Filter, HYD	95	120-7976	1	Bearing-Ball
32	114-1685	1	Rod-Bypass	97	109-5939	1	Hub Kit
34	107-2490	1	Arm-Bypass	100	114-1697	1	Pawl-Brake
40	104-5304	1	Swashplate-Trunnion	101	114-1698	1	Shaft-Brake, Inboard
42	104-2116	1	Stud	102	125-0021	1	Handle-Brake
43	112-9853	1	Puck-Friction	105	104-2120	3	Screw
45	114-8491	1	Washer	106	120-7979	1	Guard-Filter, LH
55	104-5308	1	Spacer	156	115-5057	1	Cover-Nut, Axle
60	109-2865	1	Bearing-Thrust	200	109-3537	1	Seal Kit
64	114-1689	1	Motor Cylinder Block Kit	201	120-7980	1	LH Center Section Charge Kit
65	94-6922	1	Bearing-Thrust	202	114-8464	1	Charge Relief Kit
69	110-8561	1	Pump Block ASM	203	114-8465	1	Charge Kit
70	104-5339	1	Washer-Flat	207	121-2988	1	Fan And Pulley Kit
72	120-7972	1	Gear-13T	209	114-8467	1	Puller-Hub, 4 Bolt
73	114-1691	1	Shaft-Motor	210	117-5361	1	Input Shaft Kit
74	104-5360	1	Washer	211	117-5362	1	Control Arm Kit
80	94-1933	2	Washer	212	114-8470	1	Axle Shaft Kit
81	120-7973	1	Gear-46T				

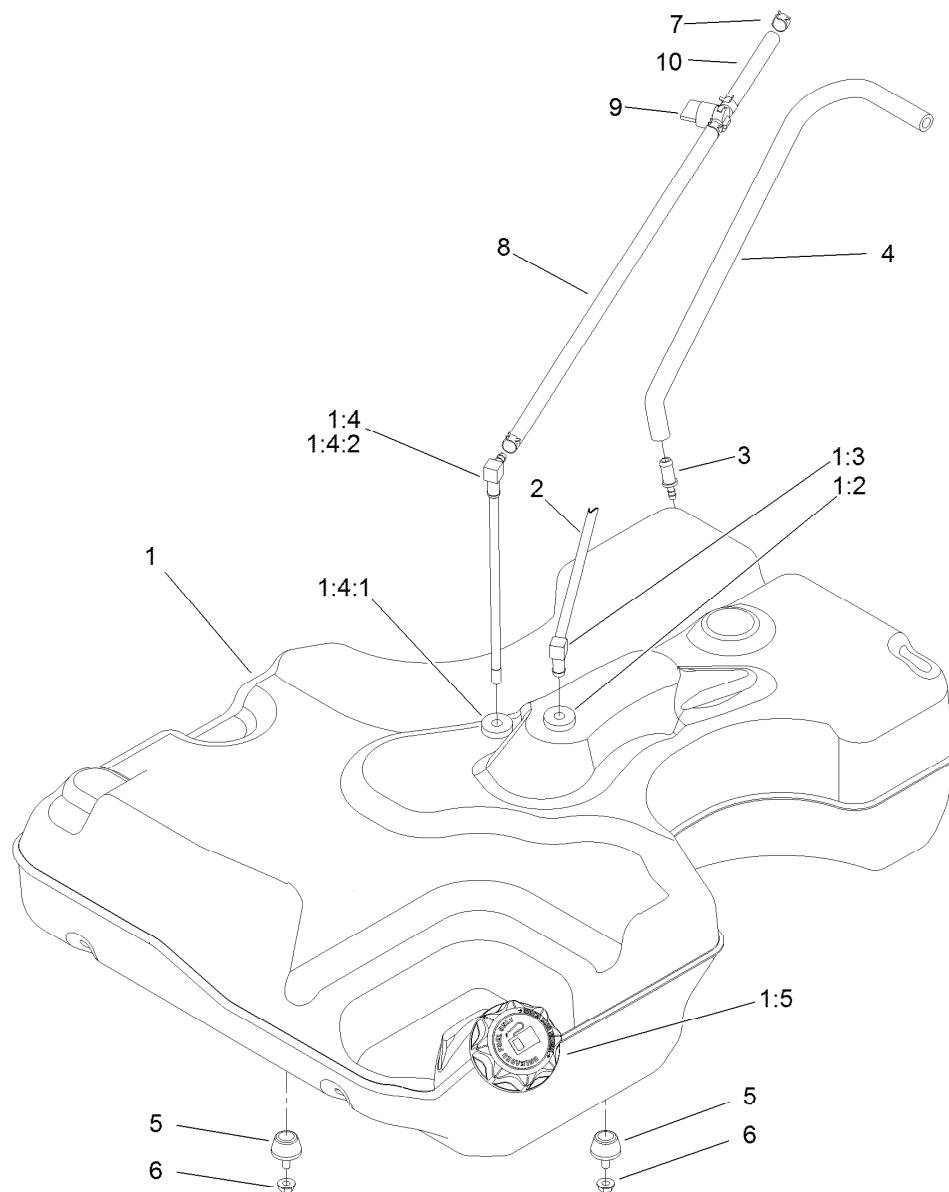 

Fuel Tank and Hose Assembly


Ref.	Part Number	Qty.	Description
1	120-7879	1	Fuel Tank ASM
1:2	46-6560	2	Bushing
1:3	116-2288	1	Fitting-90 Elbow
1:4	120-7871	1	Fuel Line Kit
1:4:1	46-6560	1	Bushing
1:4:2	119-8584	1	Fitting-Fuel (W/Line And Screen)
1:5	116-1704	1	Cap-Fuel, Ratcheting
2	119-6074	1	Hose-Fuel

Ref.	Part Number	Qty.	Description
3	98-2952	1	Fitting-Straight
4	119-8562	1	Hose-Fuel
5	109-2365	2	Bumper-Rubber
6	32128-33	2	Nut-HF
7	2412-98	4	Clamp-Hose
8	110-5701	1	Hose-Fuel
9	1-603770	1	Valve-Fuel
10	109-0650	1	Hose-Fuel

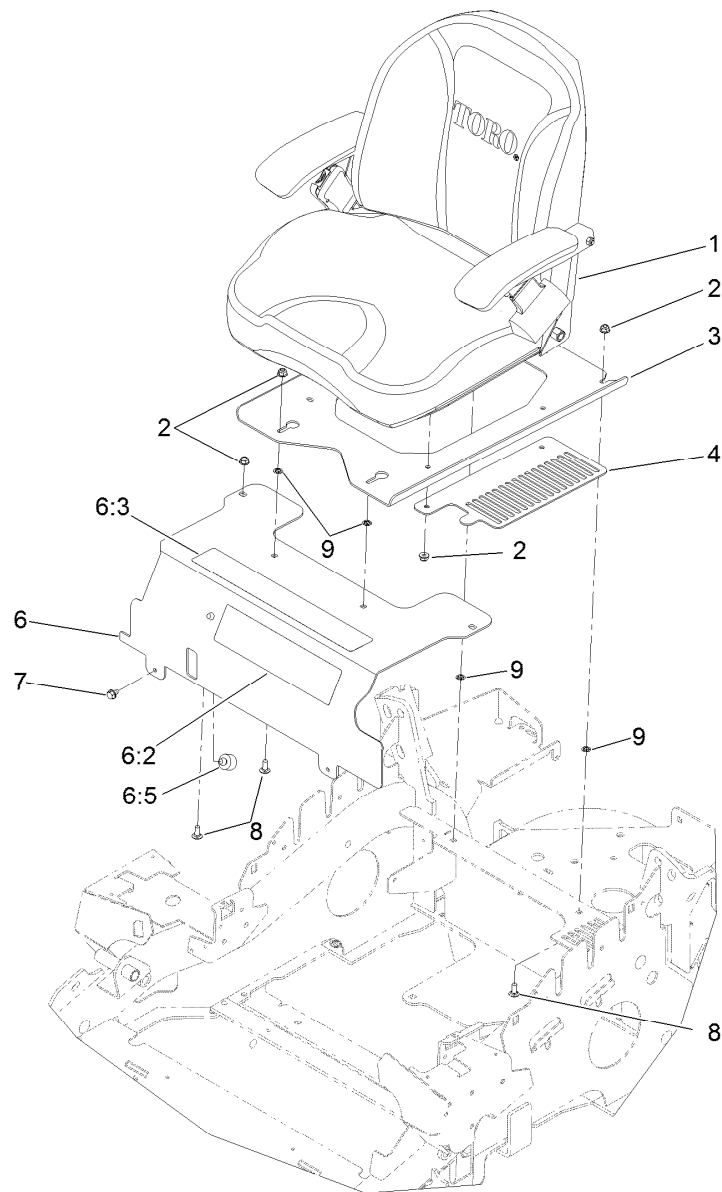 

Seat Mounting Assembly


Ref.	Part Number	Qty.	Description
1	120-7886	1	Seat
2	104-8300	10	Nut-HF, NI
3	117-8615-03	1	Plate-Mount, Seat
4	117-8618-03	2	Plate-Cover, Fan
6	121-4776	1	Seat Mount Panel ASM
6:2	114-5878	1	Decal
6:3	114-4468	1	Decal-Console
6:5	120-7893	1	Bumper-Grommet
7	9266934	2	Screw
8	3230-23	6	Screw-CARR
9	117-2749	4	Nut-Push

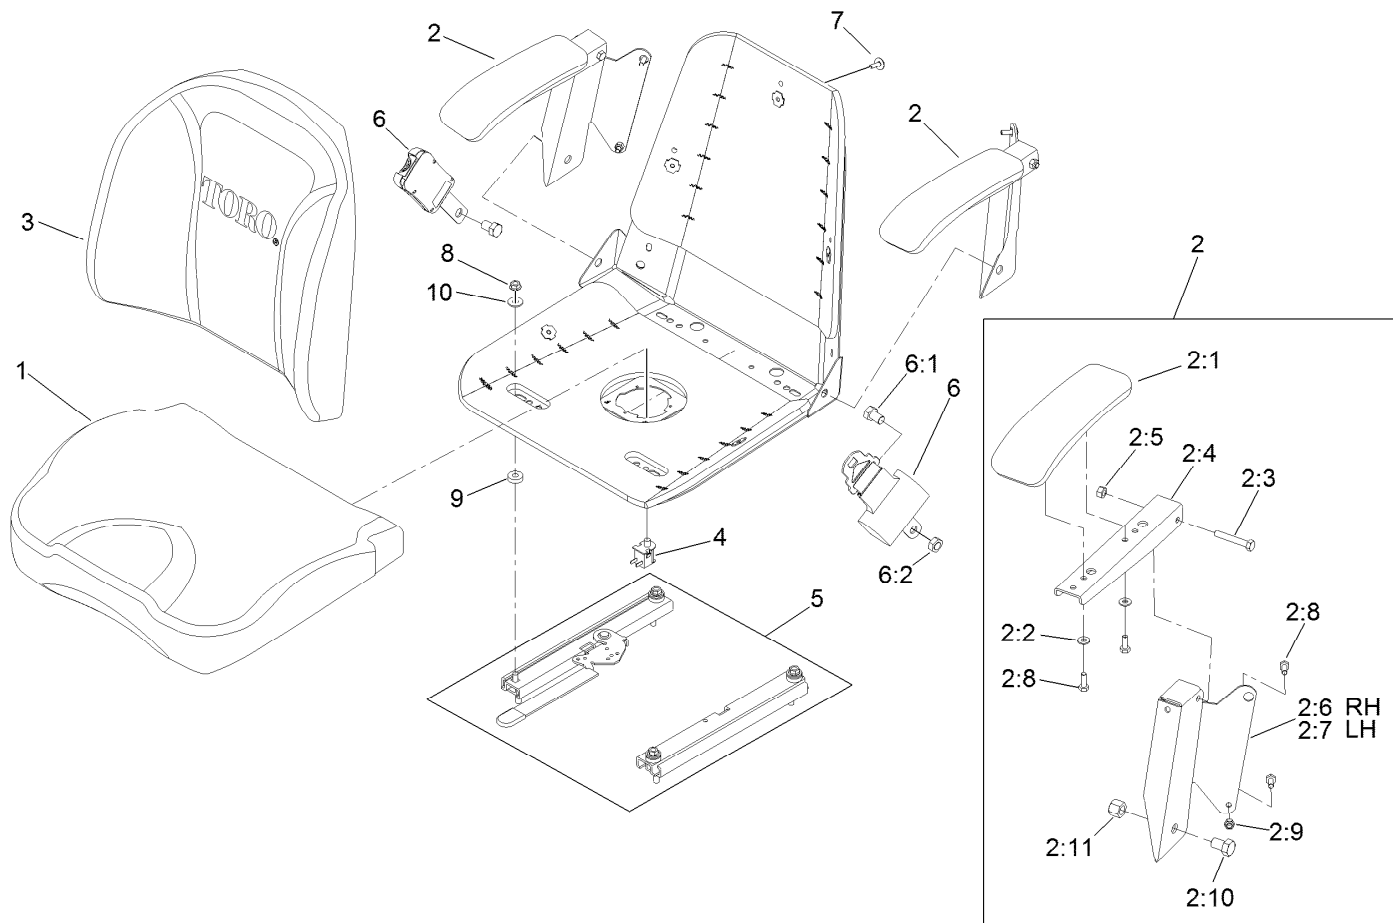 

Seat Assembly No. 120-7886

Ref.	Part Number	Qty.	Description
1	121-4751	1	Cushion-Seat, Bottom
2	110-5719	1	Armrest Kit
2:1	110-4163	2	Cushion-Rest, Arm
2:2	3256-22	4	Washer-Flat
2:3	322-10	2	Screw-HH
2:4	105-3623	2	Channel-Armrest
2:5	32153-3	2	Nut-Hex, Side Deform
2:6	105-3621	1	Bracket-Armrest, RH
2:7	105-3622	1	Bracket-Armrest, LH
2:8	321-30	8	Screw-HH
2:9	3296-42	4	Nut-Lock, NI
2:10	325-2	2	Screw-HH


Ref.	Part Number	Qty.	Description
2:11	3296-23	2	Nut-Lock, NI
3	121-4752	1	Cushion-Seat, Back
4	82-2190	1	Switch-Bail
5	121-4754	1	Track-Seat
6	116-2981	1	Seat Belt Kit
6:1	325-2	2	Screw-HH
6:2	3296-23	2	Nut-Lock, NI
7	103-8383	7	Bolt-Seat
8	32128-20	4	Nut-HF
9	26-4840	8	Spacer-Pin, Mounting
10	3256-3	6	Washer-Flat

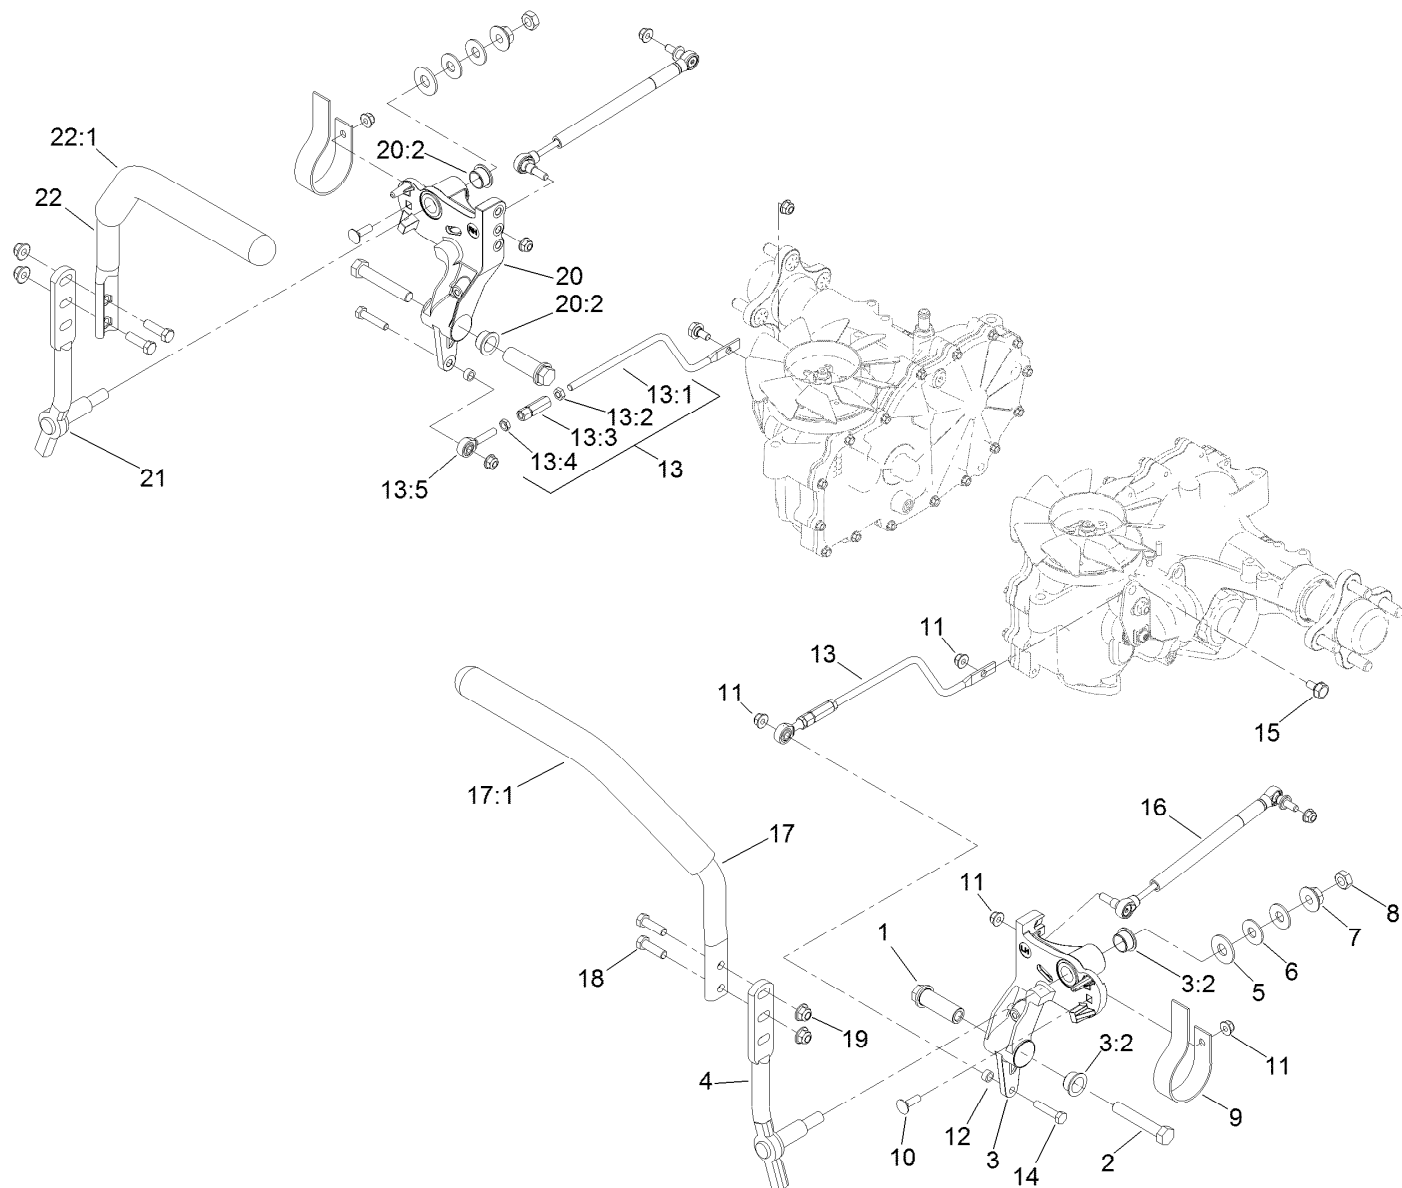 

Motion Control Assembly


Ref.	Part Number	Qty.	Description
1	109-5891	2	Hub-Threaded
2	325-12	2	Screw-HH
3	116-0881	1	LH Motion Control And Bushing ASM
3:2	109-8054	4	Bushing-Flange
4	116-0040	1	Lever-Control Motion, LH
5	3256-6	2	Washer-Flat
6	109-9505	4	Washer-Spring
7	32128-56	2	Nut-HF
8	3218-5	2	Nut-Jam
9	109-5575	2	Spring-Leaf
10	3230-2	2	Bolt-CARR
11	104-8300	10	Nut-HF, NI
12	92-6998	2	Spacer-Yoke, Right
13	119-2605	2	Hydro Control Rod ASM
13:1	119-2606	1	Rod-Control, Hydro
13:2	3220-2	1	Nut-Jam

Ref.	Part Number	Qty.	Description
13:3	109-3728	1	Nut-Rod Adjustment
13:4	3220-20	1	Nut-Jam
13:5	2411-53	1	Bearing-Rod End, LH
14	322-7	2	Screw-HH
15	37-8771	2	Bolt-Shoulder
16	116-0027	2	Damper-Control, Motion
17	109-6590	1	LH Steering Handle ASM
17:1	109-5668	1	Grip-Control, Lever
18	323-7	4	Screw-HH
19	104-8301	4	Nut-HF, NI
20	116-0880	1	RH Motion Control And Bushing ASM
20:2	109-8054	4	Bushing-Flange
21	116-0039	1	Lever-Control Motion, RH
22	109-6589	1	RH Steering Handle ASM
22:1	109-5668	1	Grip-Control, Lever

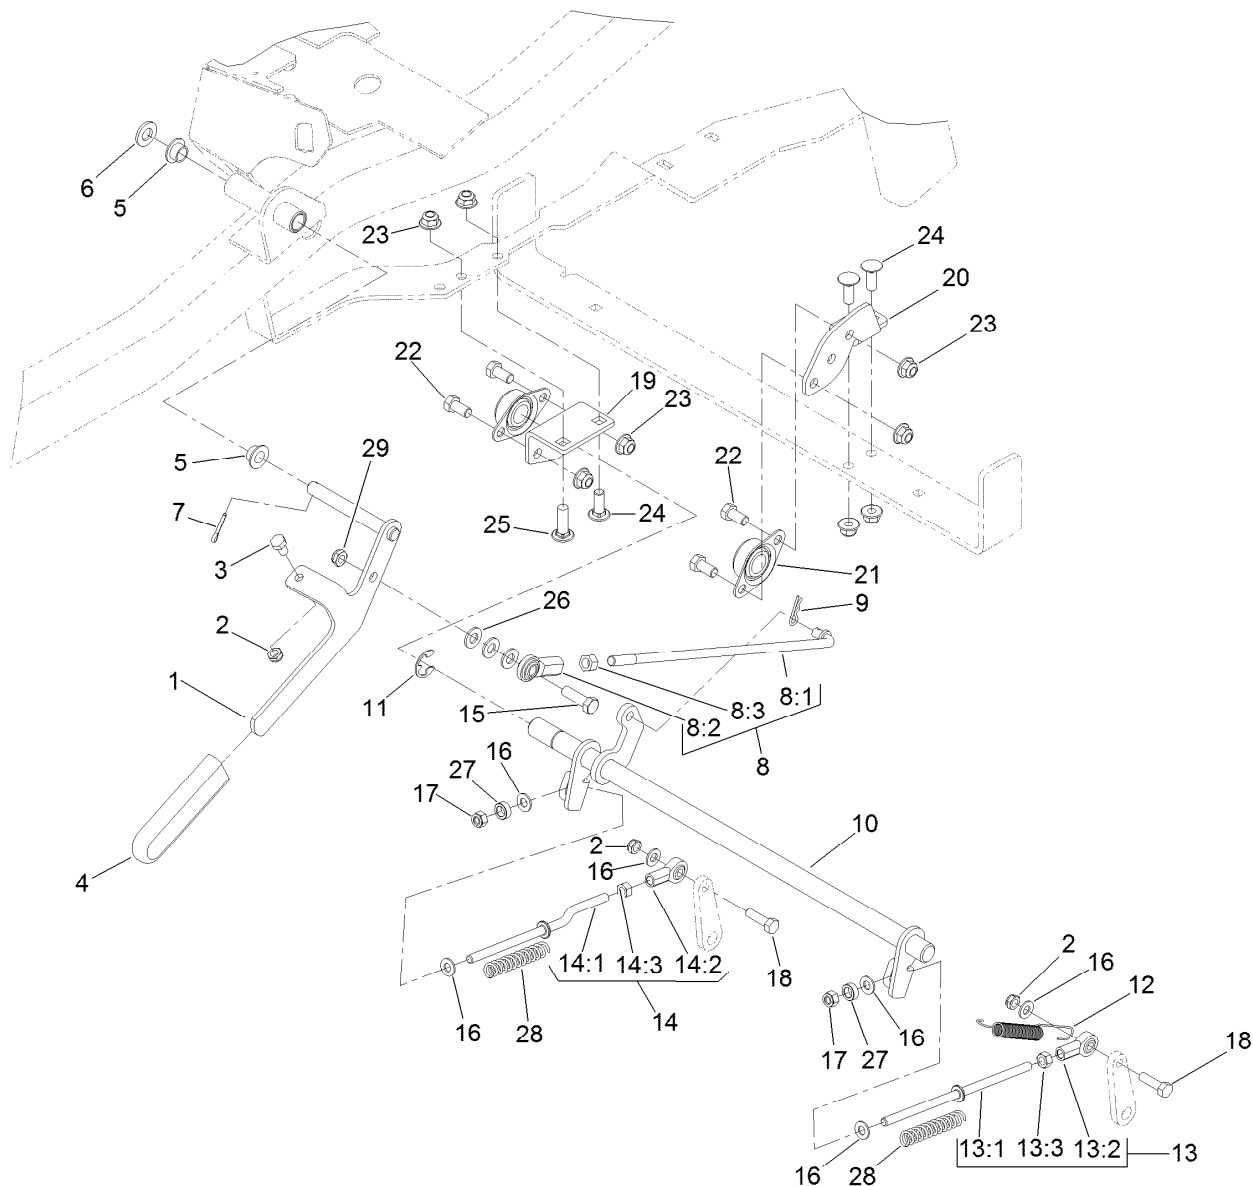 

Parking Brake Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	121-4766-03	1	Handle-Brake	14	121-4806	1	RH Brake Rod ASM
2	3296-47	3	Nut-Lock, NI	14:1	121-4770	1	Rod-Brake
3	322-1	1	Screw-HH	14:2	1-543017	1	Balljoint-RH
4	1-633268	1	Grip-Lever	14:3	3219-2	1	Nut-Hex
5	1-513140	2	Bearing-Control	15	323-7	1	Screw-HH
6	106-9888	1	Washer-Flat	16	3256-23	6	Washer-Plain
7	3272-10	1	Pin-Cotter	17	3296-4	2	Nut-Lock
8	121-4807	1	Brake Link ASM	18	322-16	2	Screw-HH
8:1	121-4795	1	Rod-Link, Brake	19	121-4761-01	1	Bracket-Shaft Mount, RH
8:2	103-0608	1	Joint-Ball, End	20	121-4793-01	1	Bracket-Shaft Mount, LH
8:3	3219-3	1	Nut-Hex	21	1-633102	2	Bearing-Flange, Side
9	3290-307	3	Pin-Cotter	22	323-4	4	Screw-HH
10	121-4804-03	1	Shaft-Brake	23	104-8301	8	Nut-HF, NI
11	32151-48	1	E-Ring	24	3231-22	3	Screw-CARR
12	110769	1	Spring-Extension	25	3231-28	1	Screw-CARR
13	121-4805	1	LH Brake Rod ASM	26	3256-24	3	Washer-Flat
13:1	121-4755	1	Rod-Brake	27	103-5677	2	Spacer
13:2	1-543017	1	Balljoint-RH	28	1-603807	2	Spring-Return, Neutral
13:3	3219-2	1	Nut-Hex	29	3296-59	1	Nut-Lock, NI

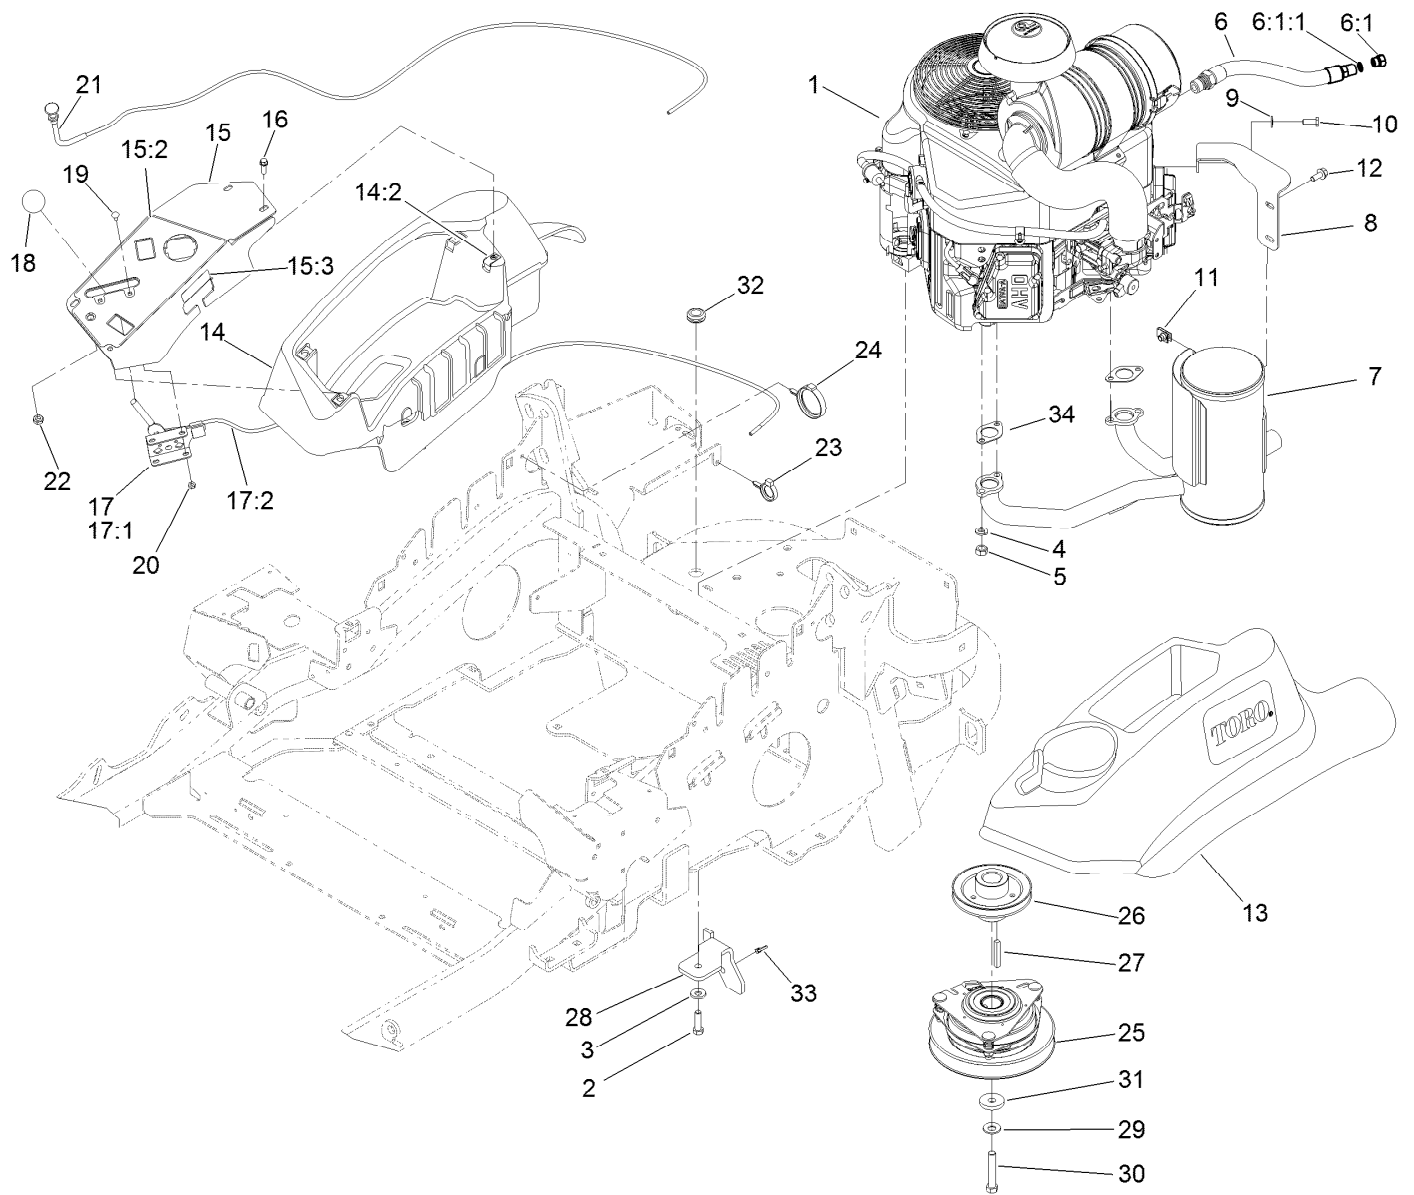 


Engine, Muffler and Control Panel Assembly

Ref.	Part Number	Qty.	Description
1		1	Engine-Kawasaki, Fx651V-S10-R ●■
2	323-7	4	Screw-HH
3	98-5975	4	Washer-Belleville
4	114-3550	4	Washer-Lock
5	114-3549	4	Nut
6	116-4924	1	Engine Oil Drain Hose ASM
6:1	353-508	1	Plug-HH
6:1:1	237-42	1	O-Ring
7	119-2645	1	Muffler
8	119-2659	1	Bracket-Muffler
9	1-303334	1	Washer-Spring
10	33114-020	1	Screw-HH
11	94-2413	2	Nut-U
12	3234-5	2	Screw-HHF
13	119-2602	1	Console-LH
14	119-2603	1	RH Console ASM
14:2	107069	4	Clip

Ref.	Part Number	Qty.	Description
15	119-2694	1	Control Panel ASM
15:2	119-2501	1	Decal-Panel, Control
15:3	114-4466	1	Decal-Fuses
16	32105-15	4	Screw-HWH
17	110-5727	1	Throttle Control ASM
17:1	112-2334	1	Lever-Throttle
17:2	110-5728	1	Cable-Throttle
18	1-603175	1	Knob-Ball
19	1-807513	2	Bolt-CARR
20	3296-2	2	Nut-Lock, NI
21	115-2753	1	Control-Choke
22	3220-3	1	Nut-HJ
23	105-1853	1	Clamp-Hose
24	117-7817	1	Clamp-Harness
25	119-2595	1	Clutch
26	119-9915	1	Pulley-Engine
27	608006	1	Key-Square
28	119-2658-01	1	Bracket-Stop, Clutch

● Not serviced separately

 ■ Obtain parts from www.kawpowerepc.com

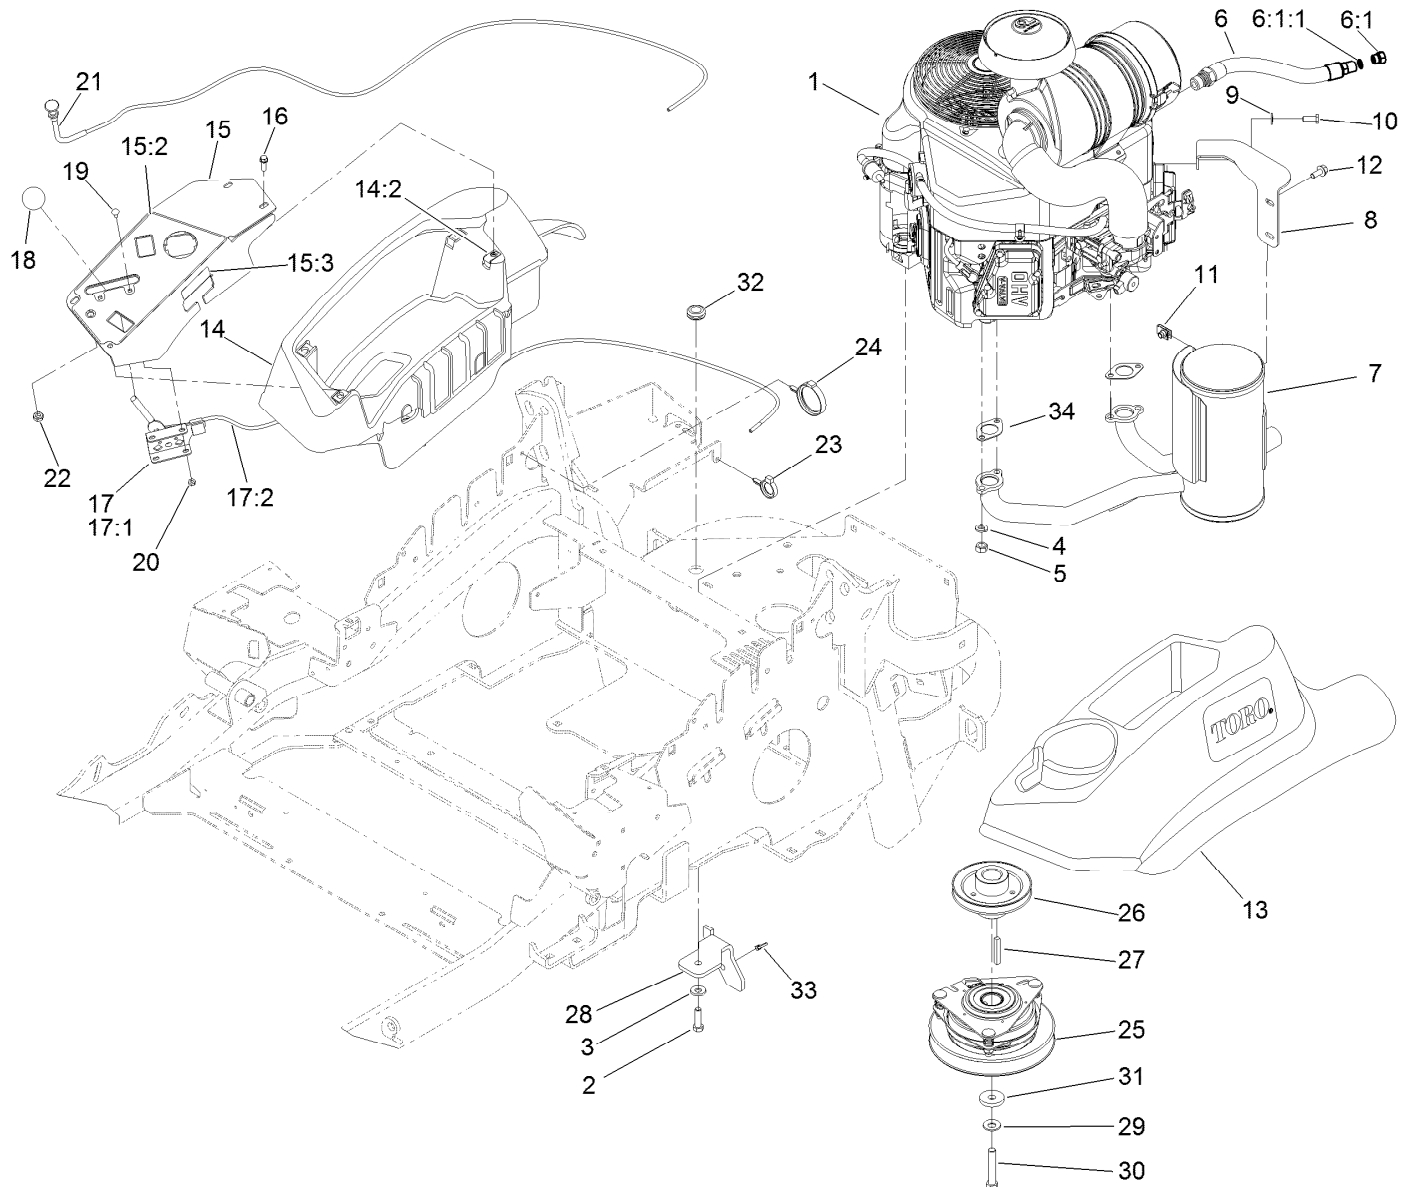


Engine, Muffler and Control Panel Assembly (continued)

Ref.	Part Number	Qty.	Description
29	1-603610	1	Washer-Spring
30	3212-10	1	Screw-HH
31	107-4136	1	Washer

Ref.	Part Number	Qty.	Description
32	112-7069	1	Grommet
33	1-303287	1	Tie-Cable
34	1-653313	2	Gasket-Exhaust

● Not serviced separately

 
■ Obtain parts from www.kawpowerepc.com

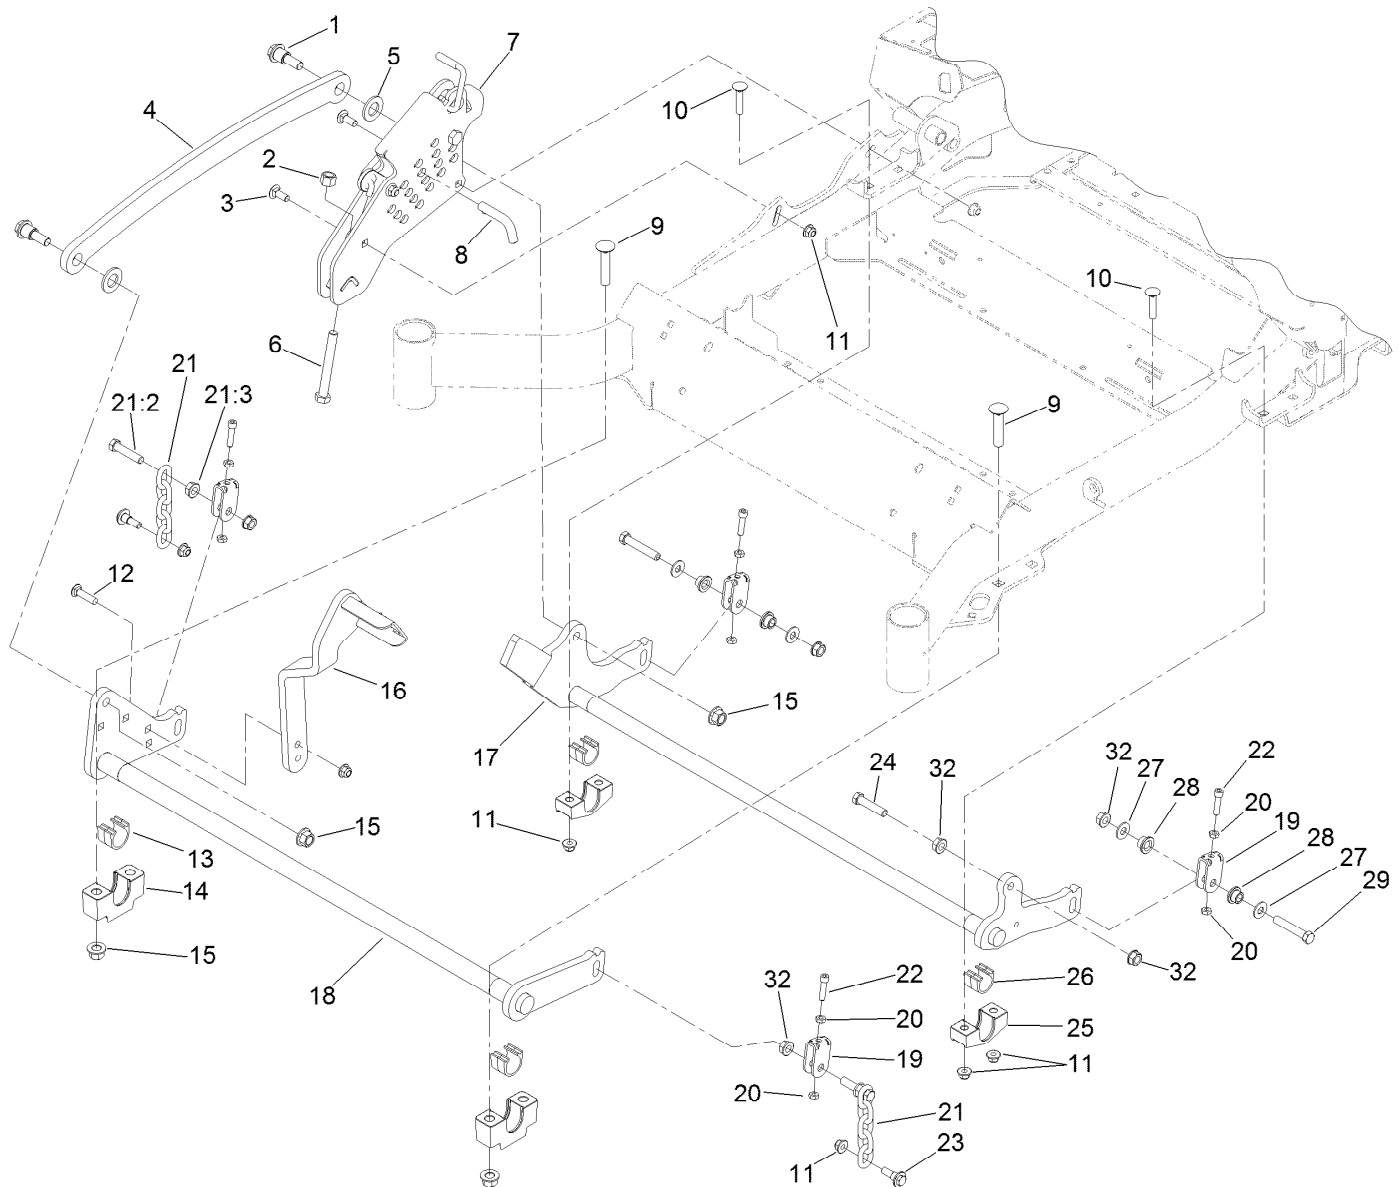

Deck Lift Assembly


Ref.	Part Number	Qty.	Description
1	116-0780	2	Screw-Shoulder, HHF
2	3296-23	1	Nut-Lock, NI
3	3231-2	2	Bolt-CARR
4	116-0797-03	1	Link-Lift, Deck
5	3256-28	2	Washer-Flat
6	116-0559	1	Bolt-TAP
7	121-4779	1	Height Of Cut ASM
8	116-5584	1	Pin-HOC
9	116-1700	4	Bolt-CARR
10	3231-5	4	Screw-CARR
11	104-8301	10	Nut-HF, NI
12	3231-4	2	Screw-CARR
13	109-9410	2	Bearing-Cross Shaft, Front
14	109-9409	2	Support-Cross Shaft, Bearing
15	99-5107	6	Nut-Lock
16	120-7877-01	1	Lever-Foot

Ref.	Part Number	Qty.	Description
17	116-0459-03	1	Lift-Deck, Rear
18	116-2217-03	1	Cross Shaft-Front
19	109-9066	4	Yoke-Adjust, Deck
20	3218-2	8	Nut-Jam
21	116-0756	2	Deck Lift Chain ASM
21:2	109-9065	1	Screw-HH
21:3	32128-37	1	Nut-HF
22	3274-18	4	Screw-HSH
23	109-9840	2	Screw-Shoulder, HHF
24	109-9065	1	Screw-HH
25	116-0818-03	2	Support-Cross Shaft, Rear Bearing
26	109-7173	2	Bearing-Cross Shaft, Rear
27	3256-4	4	Washer-Flat
28	116-2428	4	Bushing-Flanged
29	324-10	2	Screw-HH
32	32128-37	6	Nut-HF

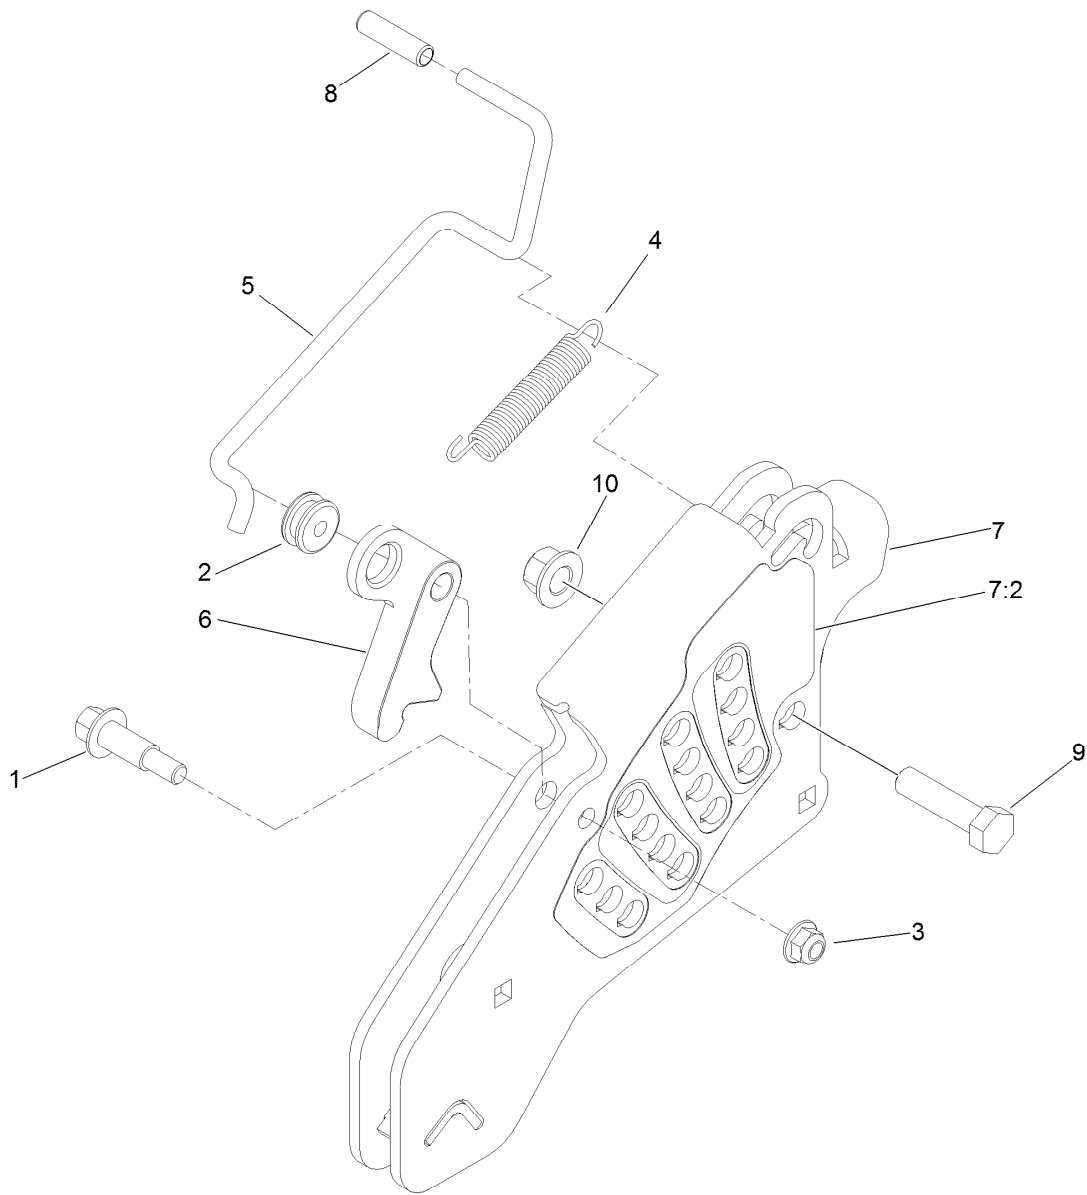 

Height-of-Cut Assembly No. 121-4779

Ref.	Part Number	Qty.	Description
1	62-1330	1	Bolt-Shoulder
2	109-7130	1	Grommet
3	104-8301	1	Nut-HF, NI
4	109-7124	1	Spring-Extension
5	109-7128	1	Rod-Lock, Transport
6	116-0118	1	Pawl-Transport, HOC
7	121-4778	1	HOC Plate ASM
7:2	121-4777	1	Decal-HOC CE
8	109-8250	1	Grip-Lever
9	325-8	1	Screw-HH
10	99-5107	1	Nut-Lock

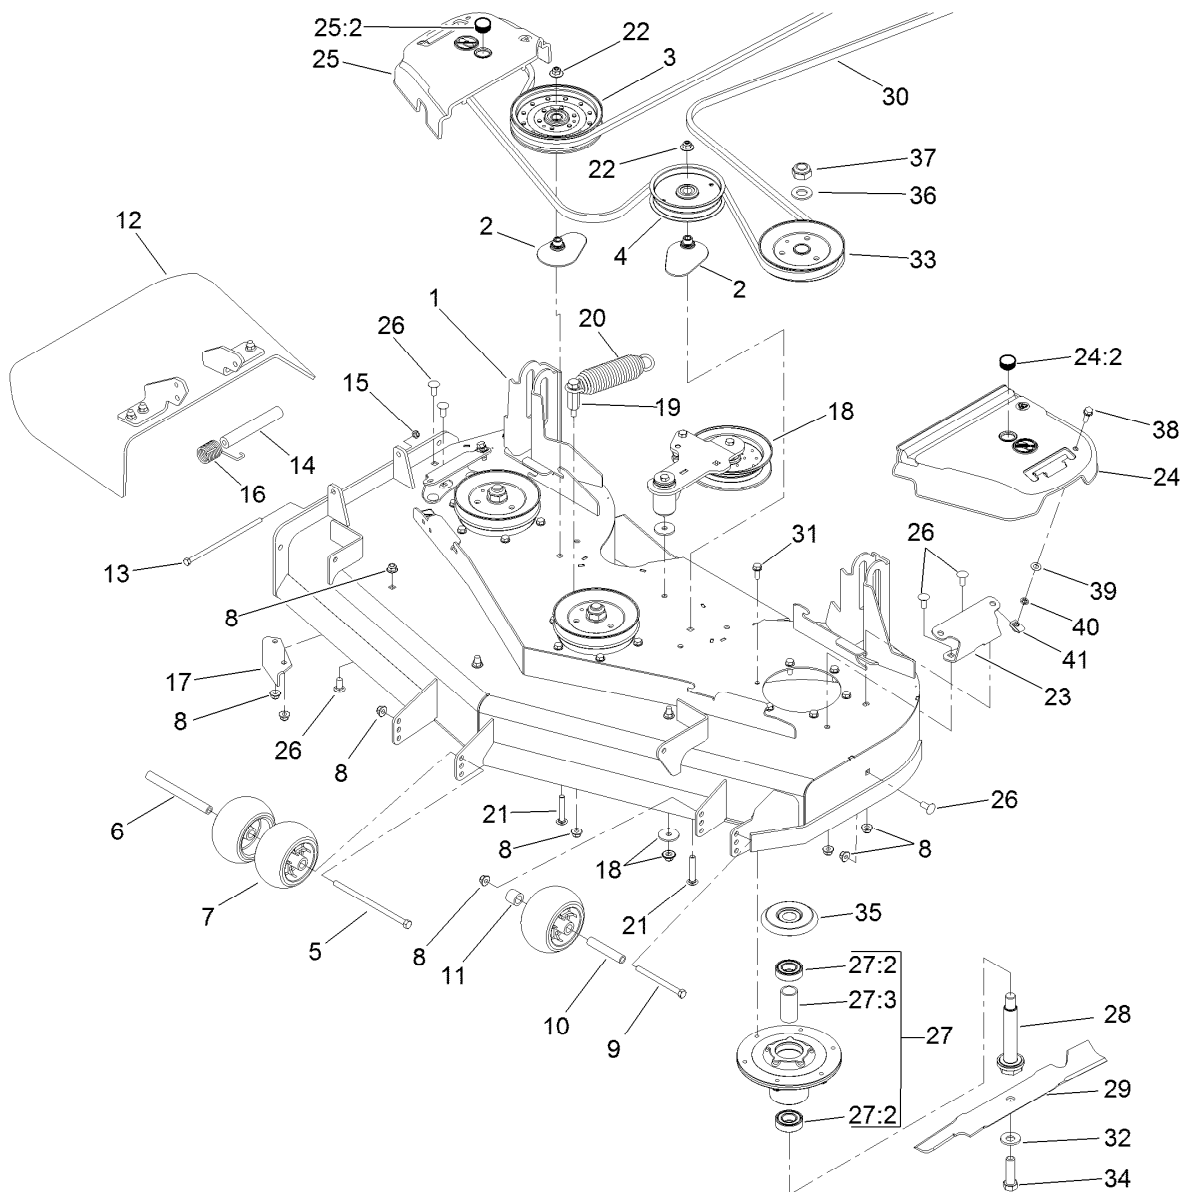 


Deck Assembly

Ref.	Part Number	Qty.	Description
1	121-3241	1	Deck Decal ASM
2	109-2872	2	Spacer-Pulley
3	116-4670	1	Pulley-Idler, Flat
4	1-613098	1	Pulley-Idler
5	108-5388	1	Screw-HH
6	98-5967	1	Spacer-Wheel
7	1-603299	3	Roller-Scalp, Anti
8	104-8301	13	Nut-HF, NI
9	323-23	1	Screw-HH
10	98-7912	1	Tube-Spanner
11	98-7913	1	Tube-Spacer
12	120-2451	1	Deflector ASM
13	322-50	1	Screw-HH
14	105-4622	1	Spacer
15	3296-47	1	Nut-Lock, NI
16	108-4052	1	Spring-Torsion
17	107-8541-01	1	Baffle-Discharge
18		1	Idler Arm ASM ●

Ref.	Part Number	Qty.	Description
19	114-5867	1	Anchor-Spring, Tall
20	116-0133	1	Extension-Spring
21	3231-40	2	Bolt-CARR, Short Neck
22	109-6658	2	Nut-Flange, NI
23	114-5881-01	2	Bracket-Cover, Belt
24	117-7814	1	LH Belt Cover ASM
24:2	117-3824	1	Plug-Plastic
25	117-7813	1	RH Belt Cover ASM
25:2	117-3824	1	Plug-Plastic
26	3231-27	10	Screw-CARR
27	120-5477	3	Spindle ASM
27:2	116-0720	2	Bearing-Ball
27:3	115-2641	1	Spacer-Bearing
28	120-2505	3	Spindle-Shaft
29	117-7277-03	3	Blade-Hi Flo, 16.50 Inch
30	120-2409	1	Belt-V
31	32144-41	18	Screw-Taptite
32	22-8520	3	Washer-Belleville

 ● Not serviced separately

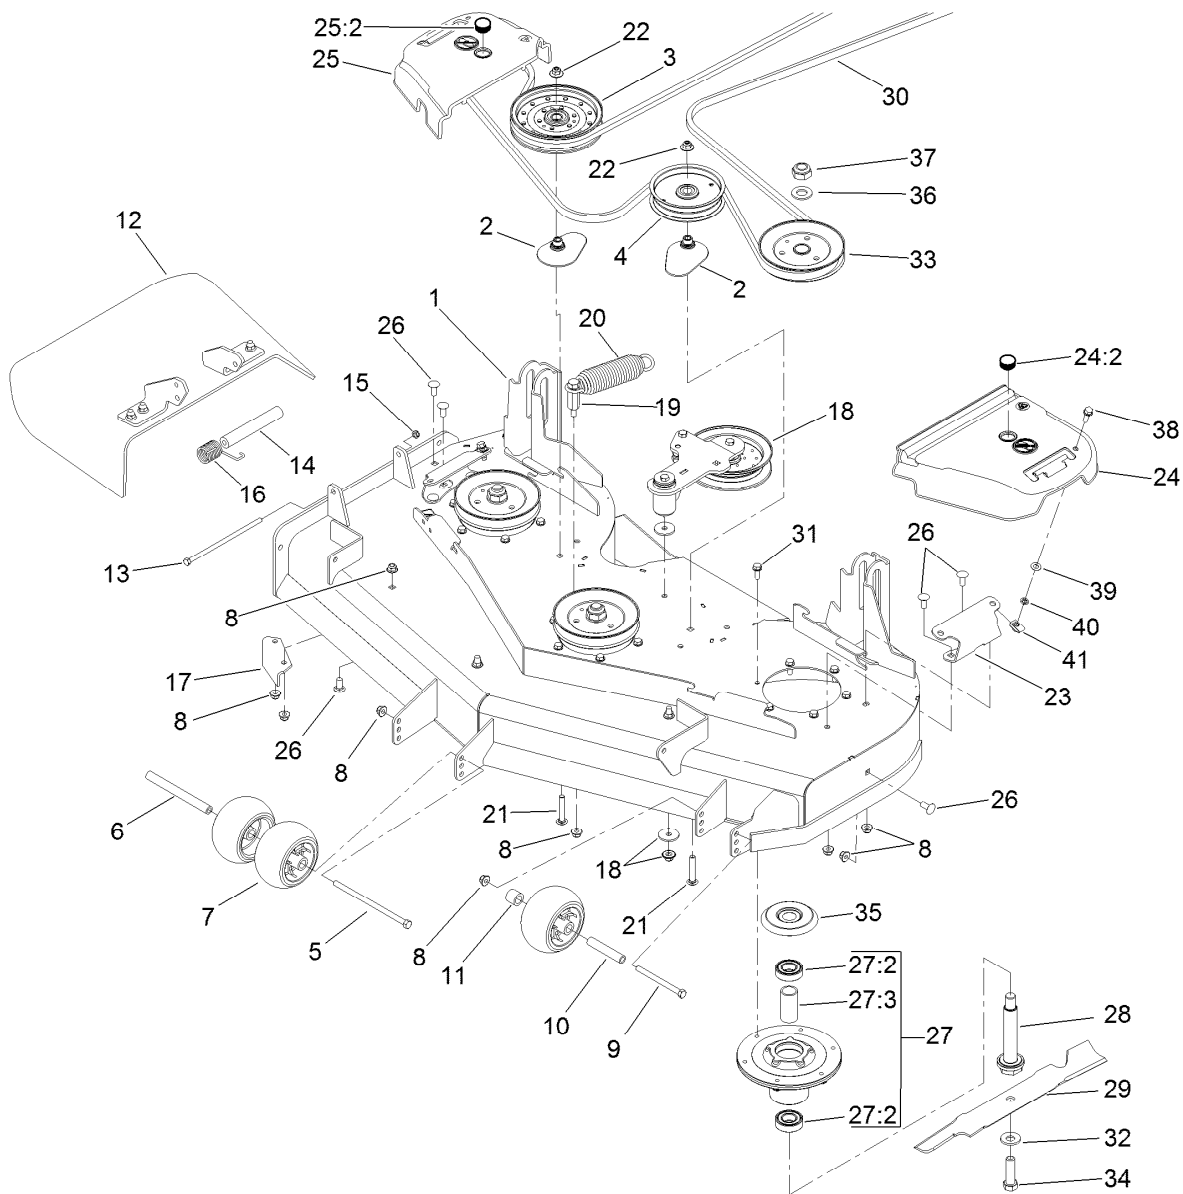


Deck Assembly (continued)

Ref.	Part Number	Qty.	Description
33	120-7854	3	Pulley-B Section
34	51-4060	3	Screw-Blade
35	117-7210	3	Shield-Bearing
36	92-5836	3	Washer
37	3296-67	3	Nut-Lock, NI


Ref.	Part Number	Qty.	Description
38	3234-29	2	Screw-HHF
39	73-0041	2	Washer-Thrust
40	117-2749	2	Nut-Push
41	94-2413	2	Nut-U

 ● Not serviced separately

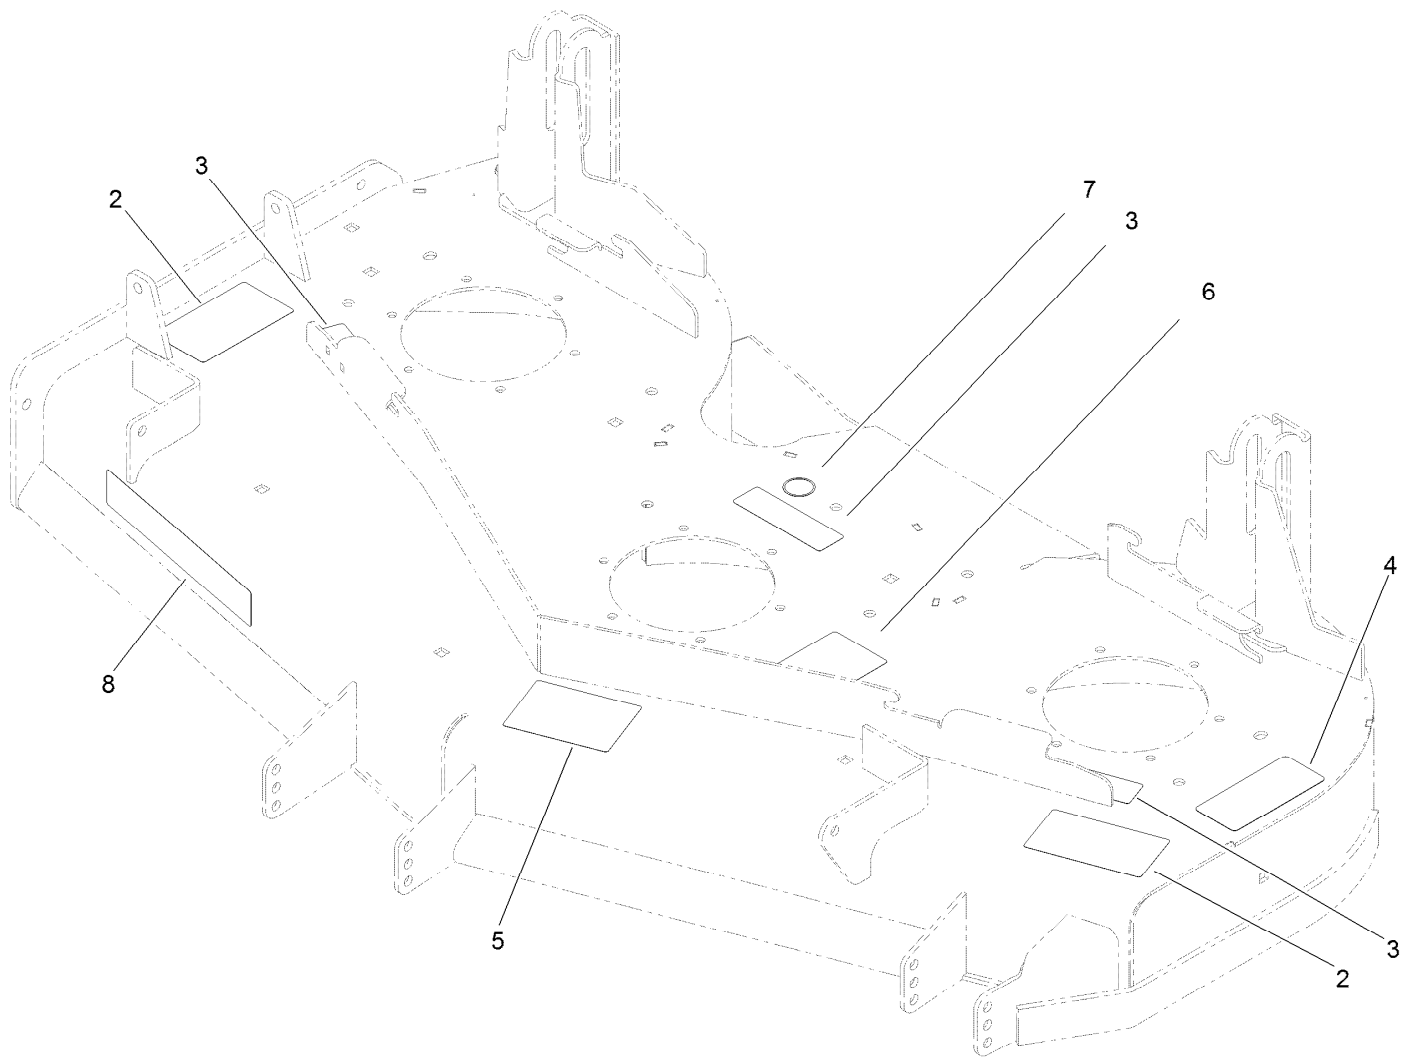


Deck Decal Assembly No. 121-3241

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	117-3848	2	Decal-Danger
3	112-9028	3	Decal-Missing, Cover
4	93-7818	1	Decal-Torque, Blade Bolt
5	112-3858	1	Decal-Scalp, Anti
6	117-8639	1	Decal-Routing, Deck Belt
7	58-6520	1	Decal-Grease
8	121-3204	1	Decal

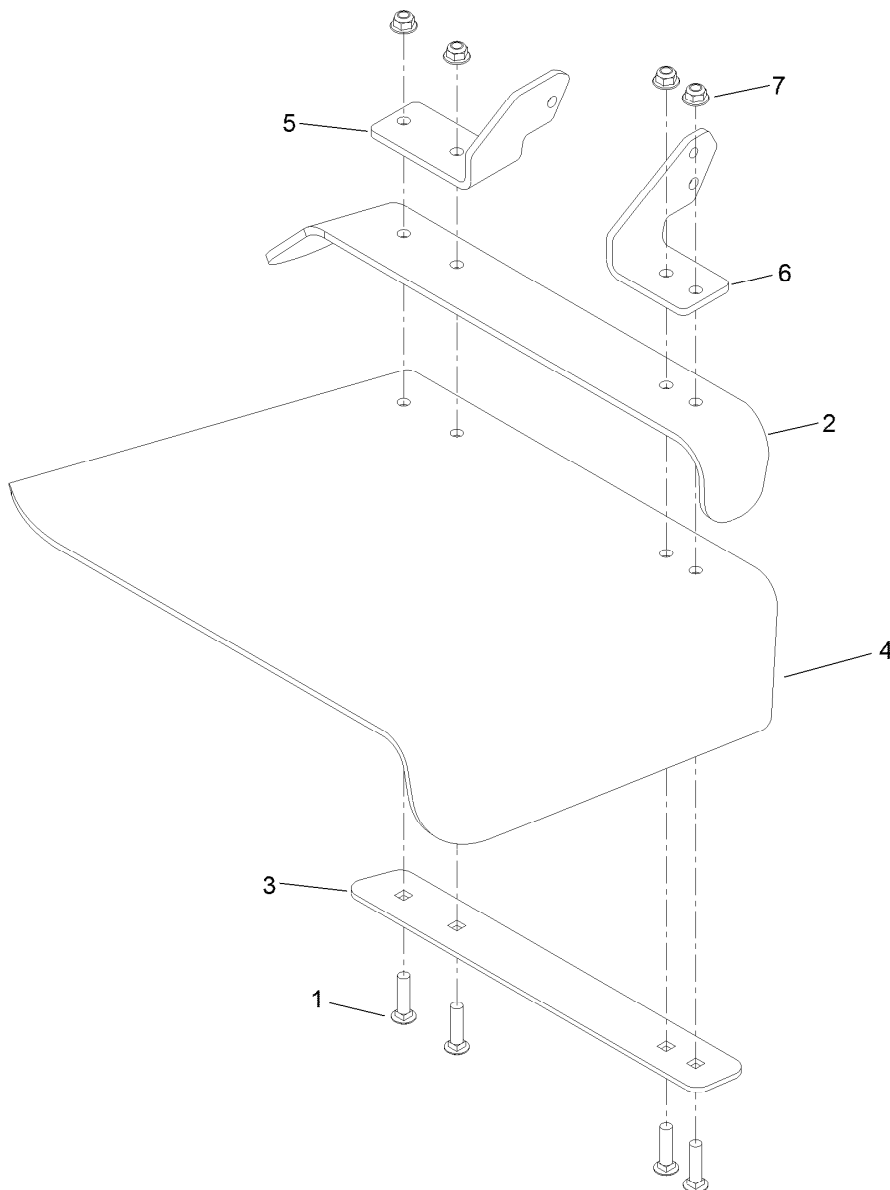 


Deflector Assembly No. 120-2451

Ref.	Part Number	Qty.	Description
1	3231-4	4	Screw-CARR
2	106-3246-01	1	Deflector
3	106-3248-03	1	Strap-Discharge
4	110-0759	1	Deflector-Rubber
5	108-4059-01	1	Plate-Hinge, Rear
6	106-3253-01	1	Plate-Hinge, Front
7	104-8301	4	Nut-HF, NI

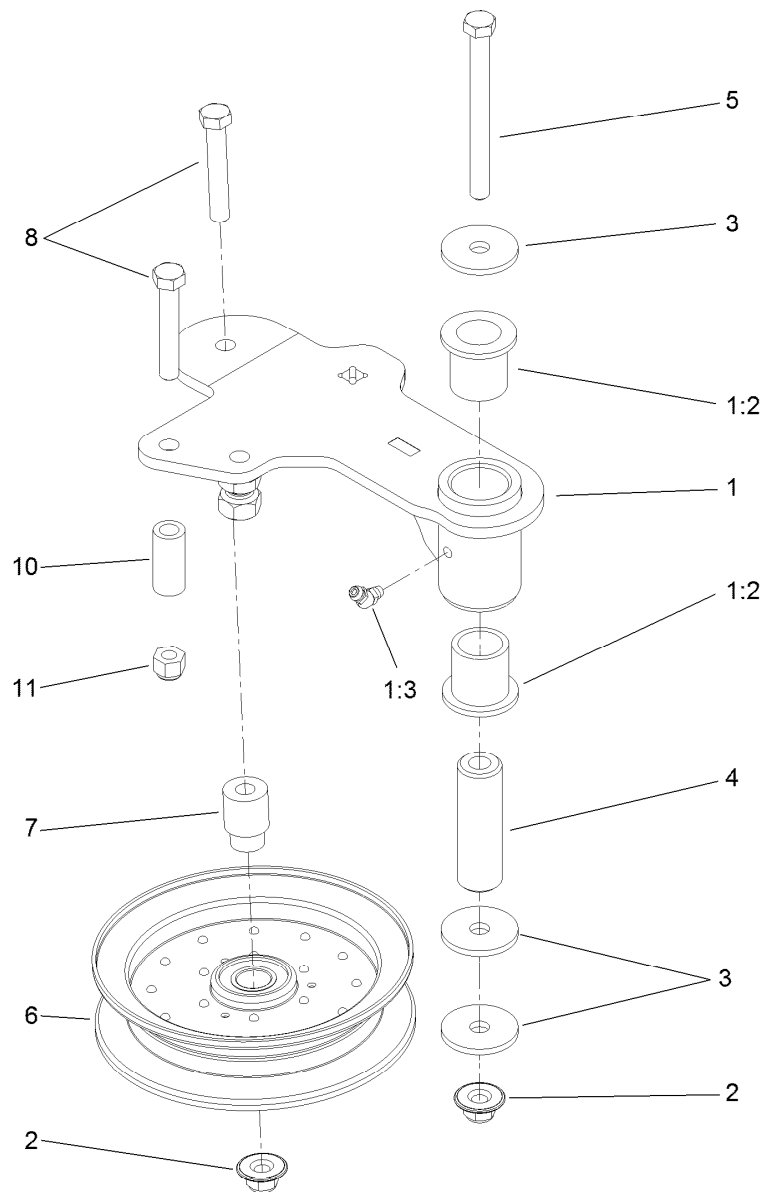 

Idler Assembly

Ref.	Part Number	Qty.	Description
1	120-2501	1	Idler Arm ASM
1:2	1-303514	2	Bearing-Flanged
1:3	1481	1	Fitting-Grease
2	109-6658	2	Nut-Flange, NI
3	1-213069	3	Washer
4	114-5848	1	Spacer-Plain
5	98-5961	1	Screw-HH
6	116-4668	1	Idler-Pulley, Flanged
7	112-4212	1	Mount-Pulley
8	323-11	2	Screw-HH
10	104-0151	1	Spacer
11	3296-39	1	Nut-Lock, NI

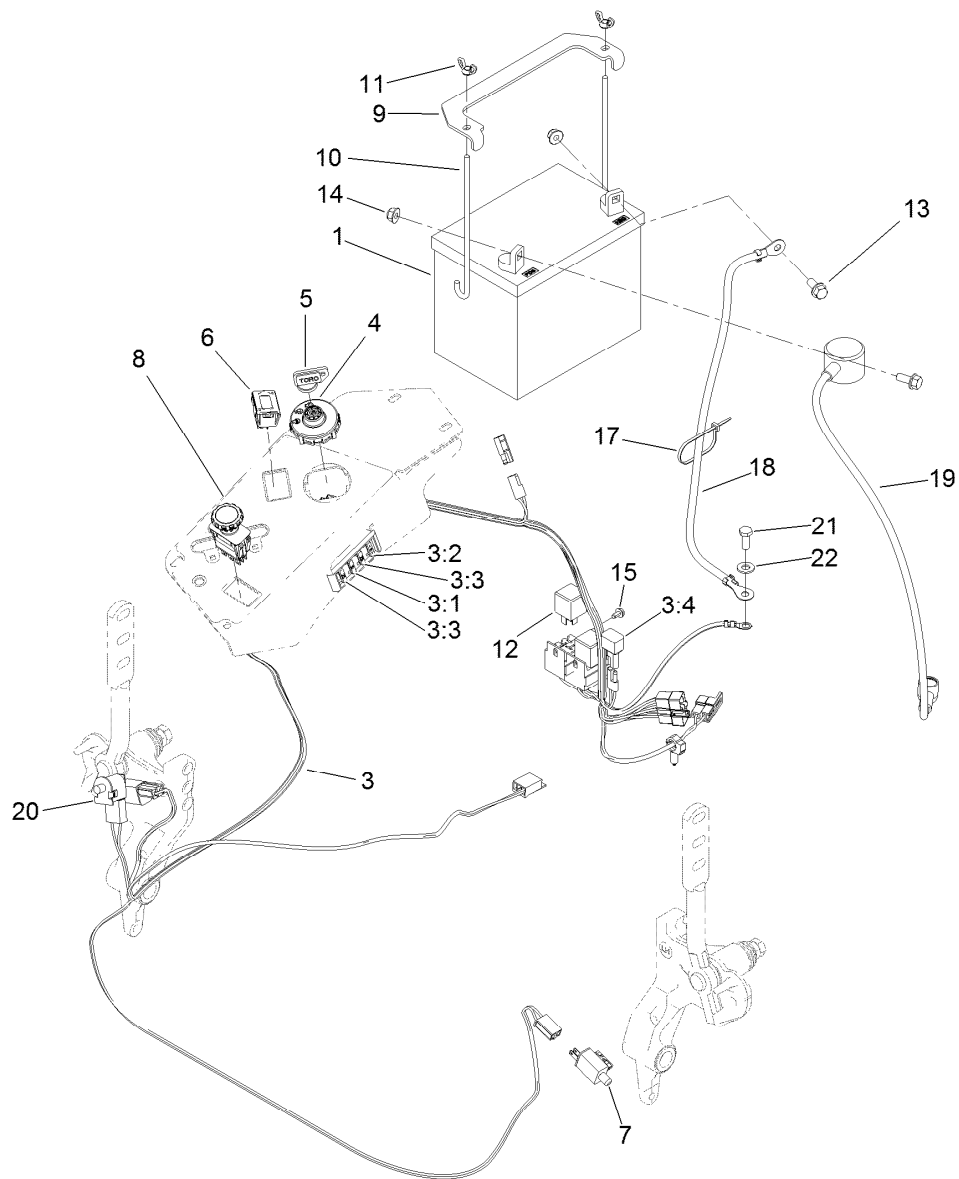 

Electrical Assembly

Ref.	Part Number	Qty.	Description
1	104-8162	1	Battery-Dry
3	117-2582	1	Harness-Wire
3:1	218-578	1	Fuse-Blade, 10 Amp
3:2	109355	1	Fuse-Blade, 15 Amp
3:3	109102	2	Fuse-Blade, 25 Amp
3:4	116-0053	1	Cap-Plug
4	117-2221	1	Switch-Ignition
5	63-8360	1	Key-Ignition
6	120-2244	1	Hourmeter
7	110-6765	2	Switch
8	116-0124	1	Switch-PTO, 10 Amp
9	116-0042-03	1	Strap-Tie Down, Battery

Ref.	Part Number	Qty.	Description
10	1-633651	2	Bolt-Holddown
11	1-543792	2	Wingnut
12	1-643275	2	Relay
13	3234-5	2	Screw-HHF
14	104-8300	2	Nut-HF, NI
15	104-2065	1	Screw-HWH
17	1-303287	3	Tie-Cable
18	114-1218	1	Cable-Battery, Negative
19	115-3864	1	Cable-Battery, Positive
20	82-2190	1	Switch-Bail
21	33114-020	1	Screw-HH
22	33094-00	1	Washer-Plain

Attachments and Accessories

For 74141TE Z Master Riding Mower with 48in TURBO FORCE Side Discharge Mower

Product Name	Model/Part
Hypr-Oil 500 (quart)	114-4713
Hypr-Oil 500 (gallon)	114-4714
Hypr-Oil 500-5 (5 gallon)	114-4715
Bimini Folding Shade Assembly	115-4510
Light Kit	116-1154
Operator Controlled Discharge Chute Kit	117-3600
Blade-Hi Flo, 16.50in	117-7277-03
Blade-Mulch, 16.50in	117-7278-03
TE Bagger Compliance Kit	119-9920
Recycler Kit	120-2401
Z Stand Kit	121-4811
Deluxe Seat Kit	121-4812
Toro Deluxe Rider Cover	490-7319
Spark Arrestor Screen	75-6880
E-Z VAC Twin Soft Bagger	78569
E-Z Vac Blower and Drive Kit	78571
Filter Minder Gauge	99-4664
Trash Holder Kit	TC26



Count on it.