



Count on it.

Parts Catalog

Z Master® Commercial 2000 Series Riding Mower

**with 48 TURBO FORCE® Side Discharge
Mower**

Model No. 74142TE—Serial No. 314000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity


In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Frame and Caster Wheel Assembly	4
Roll-Over Protection System Assembly No. 116-0232.....	6
Caster Fork and Wheel Assembly	8
Z Stand and Weight Assembly	10
Z Stand Assembly No. 121-4811.....	12
Hydro Drive System Assembly.....	14
Hydro Idler Arm Assembly	16
Fuel Tank and Hose Assembly.....	18
Seat Mounting Assembly	20
Seat Assembly No. 127-9538	22
Motion Control Assembly	24
Parking Brake Assembly.....	26
Engine, Muffler and Control Panel Assembly.....	28
Deck Lift Assembly.....	30
Height-of-Cut Assembly No. 121-4779.....	32
Deck Assembly.....	34
Deck Decal Assembly No. 121-3241	36
Deflector Assembly No. 120-2451.....	38
Idler Assembly	40
Electrical Assembly	42
Attachments and Accessories	44

Frame and Caster Wheel Assembly

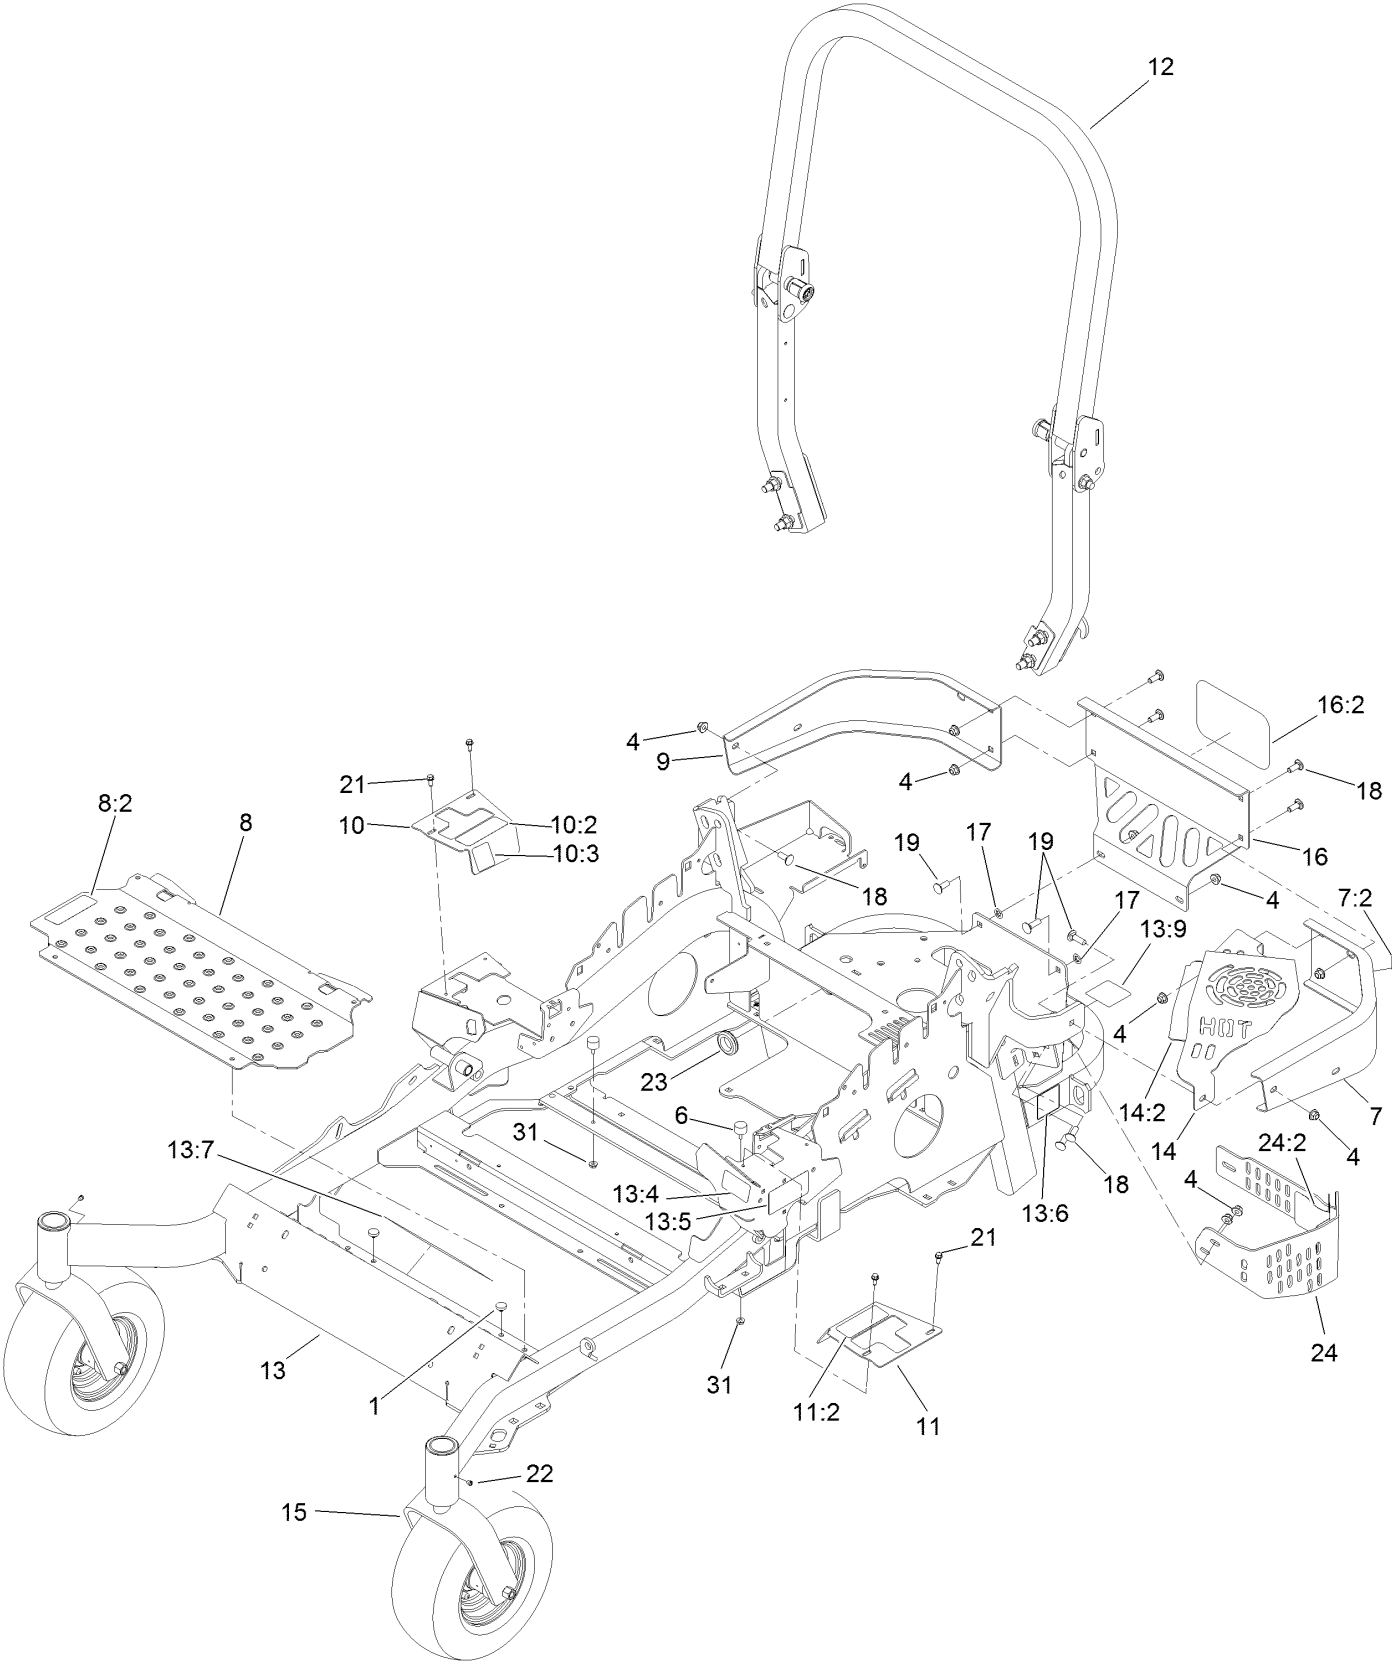


Frame and Caster Wheel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	1-513658	2	Bumper	13:7	117-3888	1	Decal-Danger Slope W/ROPS
4	104-8301	10	Nut-HF, NI	13:9	117-1158	2	Decal-Bypass
6	116-6380	2	Bumper-Rubber (W/ Stud)	14	121-4800	1	Muffler Guard ASM W/Foil
7	117-3829	1	LH Rear Bumper ASM	14:2	121-4792	1	Foil-Tape
7:2	106-5517	1	Decal-Warning	15		2	Front Caster ASM ●
8	117-0915	1	Floorpan ASM	16	119-2691	1	Rear Guard ASM
8:2	112-9028	1	Decal-Missing, Cover	16:2	67-7320	1	Decal
9	116-0508-03	1	Bumper-Rear, RH	17	107-3154	2	Nut-Push
10	121-4780	1	RH Motion Control Cover ASM	18	3231-22	7	Screw-CARR
10:2	99-8936	1	Decal-Control, Motion	19	3231-25	3	Bolt-CARR
10:3	116-5988	1	Decal-Park Brake, CE	21	32144-10	4	Screw-HWH
11	121-4789	1	Motion Control Cover ASM	22	1-811010	2	Plug
11:2	99-8936	1	Decal-Control, Motion	23	120-3265	1	Grommet
12	116-0232	1	ROPS ASM	24	121-4781	1	LH Lower Muffler Guard ASM
13	121-4775	1	Main Frame ASM	24:2	106-5517	1	Decal-Warning
13:4	117-3864	1	Decal-Fuel Fill, CE	31	104-7201	2	Nut-HF
13:5	120-5891	2	Decal				
13:6	106-2655	2	Decal-Hazard, Pinched Finger				

● Not serviced separately

Roll-Over Protection System Assembly No. 116-0232

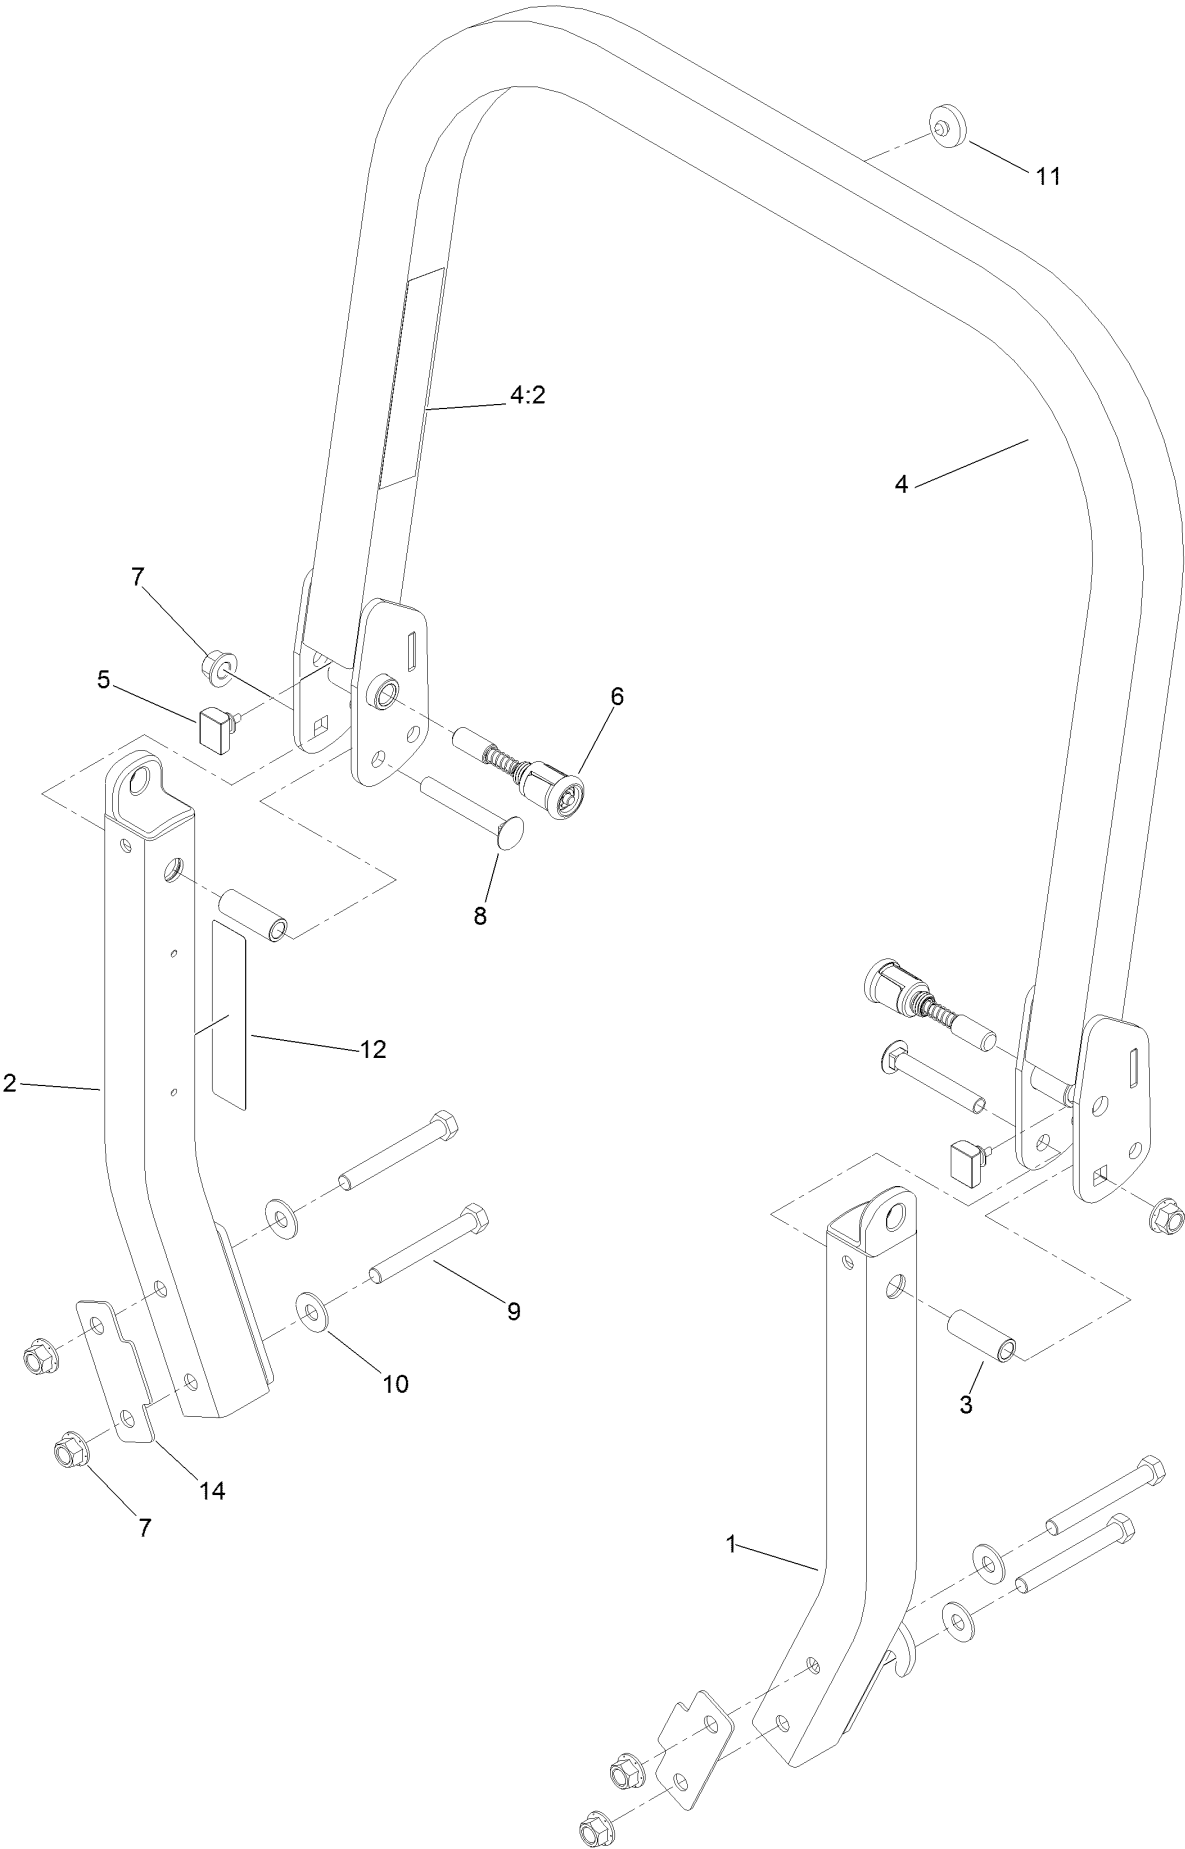


Roll-Over Protection System Assembly No. 116-0232 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Leg-ROPS, LH ●
2		1	Leg-ROPS, RH ●
3	109-6653	2	Spacer
4		1	Upper ROPS ASM ●
4:2	107-3069	1	Decal-Warning
5	109-5337	2	Bumper-ROPS
6	116-0104	2	Pin-Spring

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
7	99-5107	6	Nut-Lock
8	3233-10	2	Screw-CARR
9	325-17	4	Screw-HH
10	109-9505	4	Washer-Spring
11	109-9233	1	Bumper-Push-In, Rubber
12	117-0346	1	Decal-Caution, Fuel Vent
14	116-0960	2	Spacer

● Not serviced separately

Caster Fork and Wheel Assembly

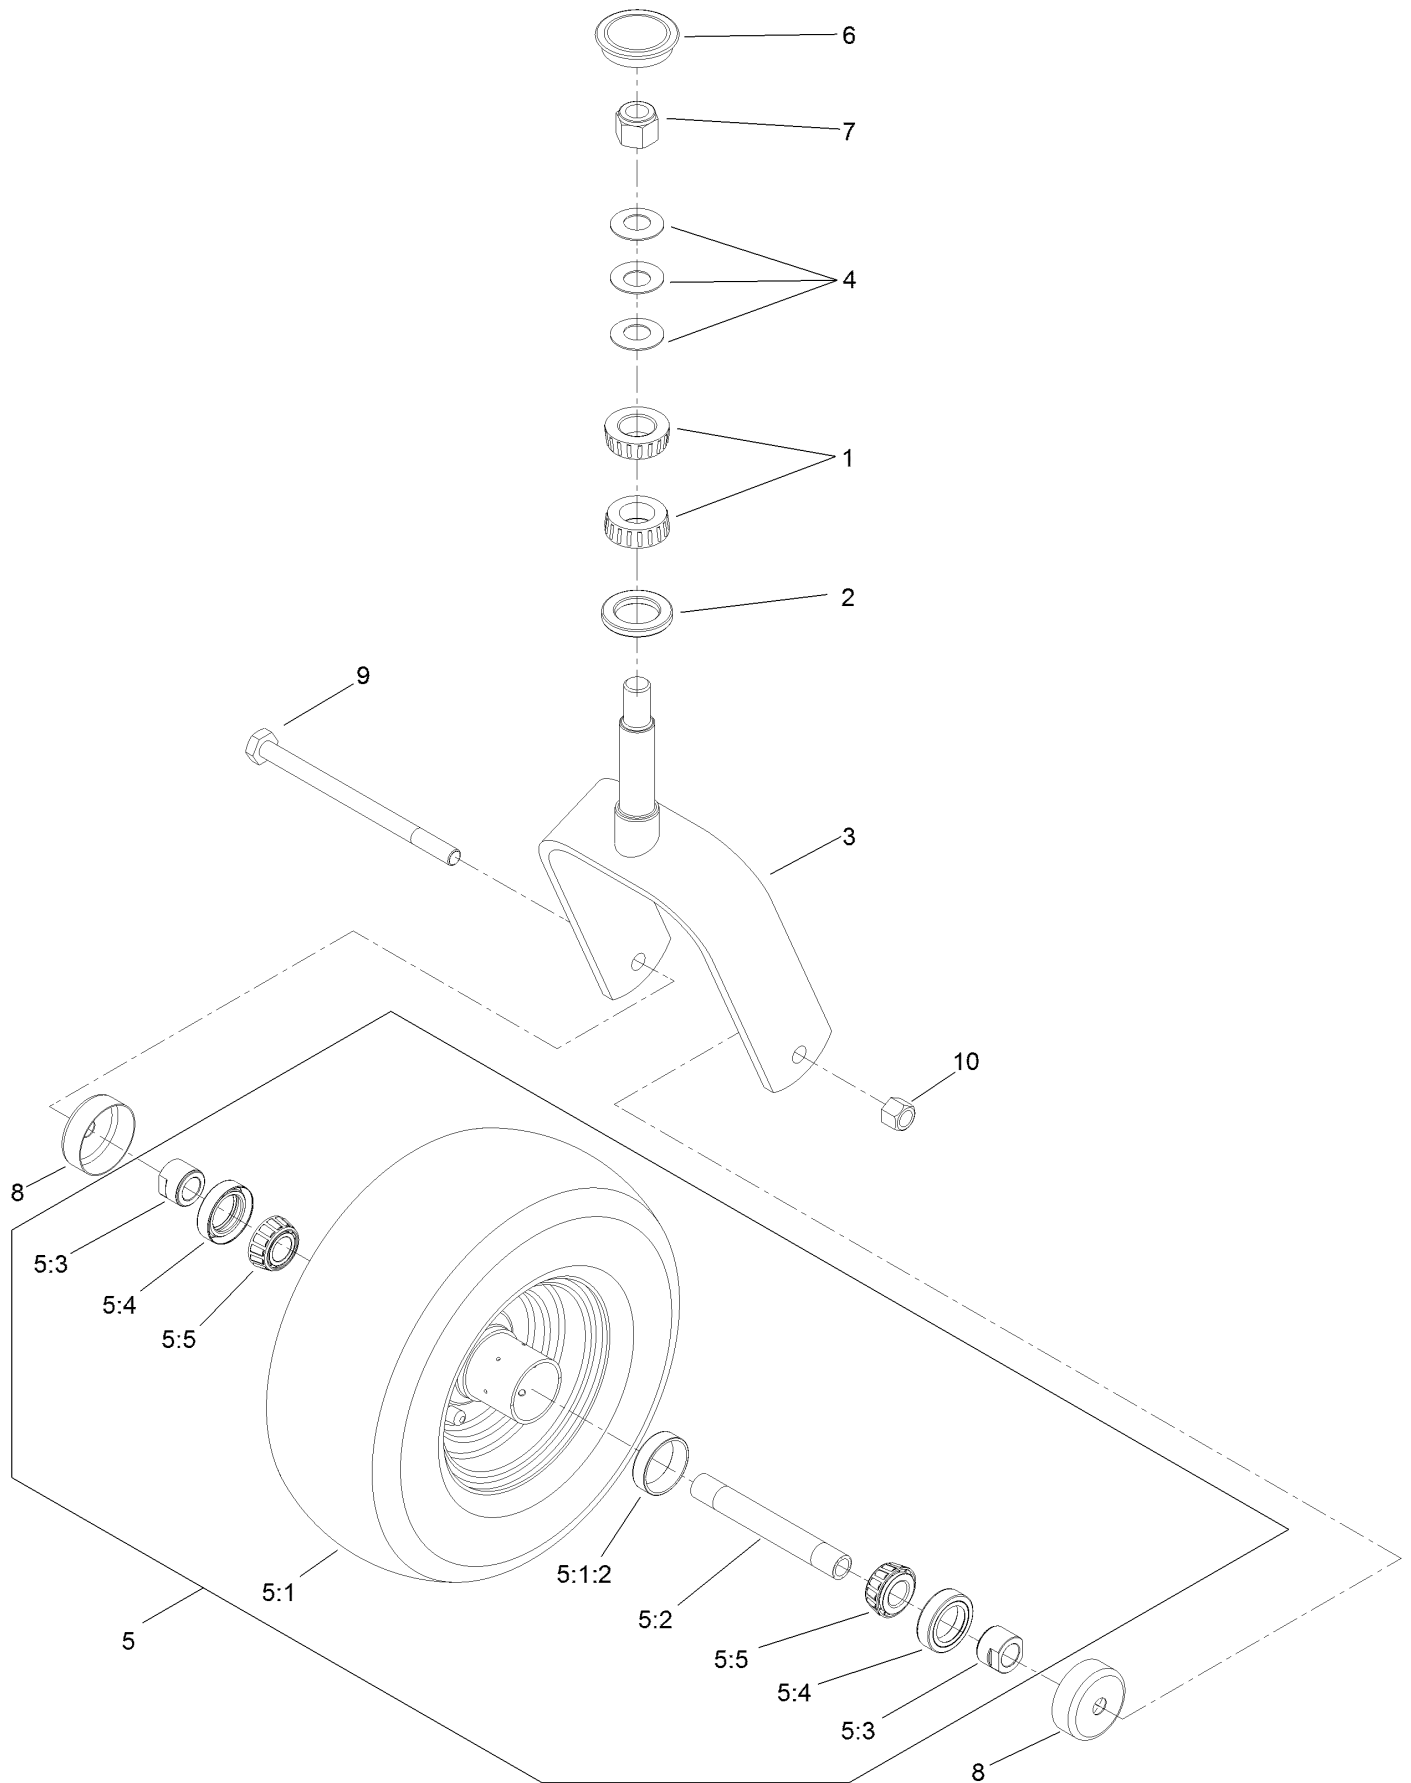


Caster Fork and Wheel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	1-543509	2	Bearing-Roller, Tapered	5:3	103-3051	2	Spacer-Nut
2	116-5647	1	Seal-Grease	5:4	103-0063	2	Seal-Caster
3	116-6701-01	1	Fork-Caster	5:5	1-633585	2	Bearing-Cone, Taper
4	1-633508	3	Washer-Bellville	6	103-4882	1	Cap-Grease
5	103-5362	1	Wheel And Bearing ASM	7	3296-51	1	Nut-Lock, NI
5:1		1	Wheel And Tire ASM ●	8	103-2768	2	Guard-Seal
5:1:2	1-633584	2	Bearing-Cup	9	325-36	1	Screw-HH
5:2	103-3155	1	Axle-Caster	10	3296-23	1	Nut-Lock, NI

● Not serviced separately


Z Stand and Weight Assembly

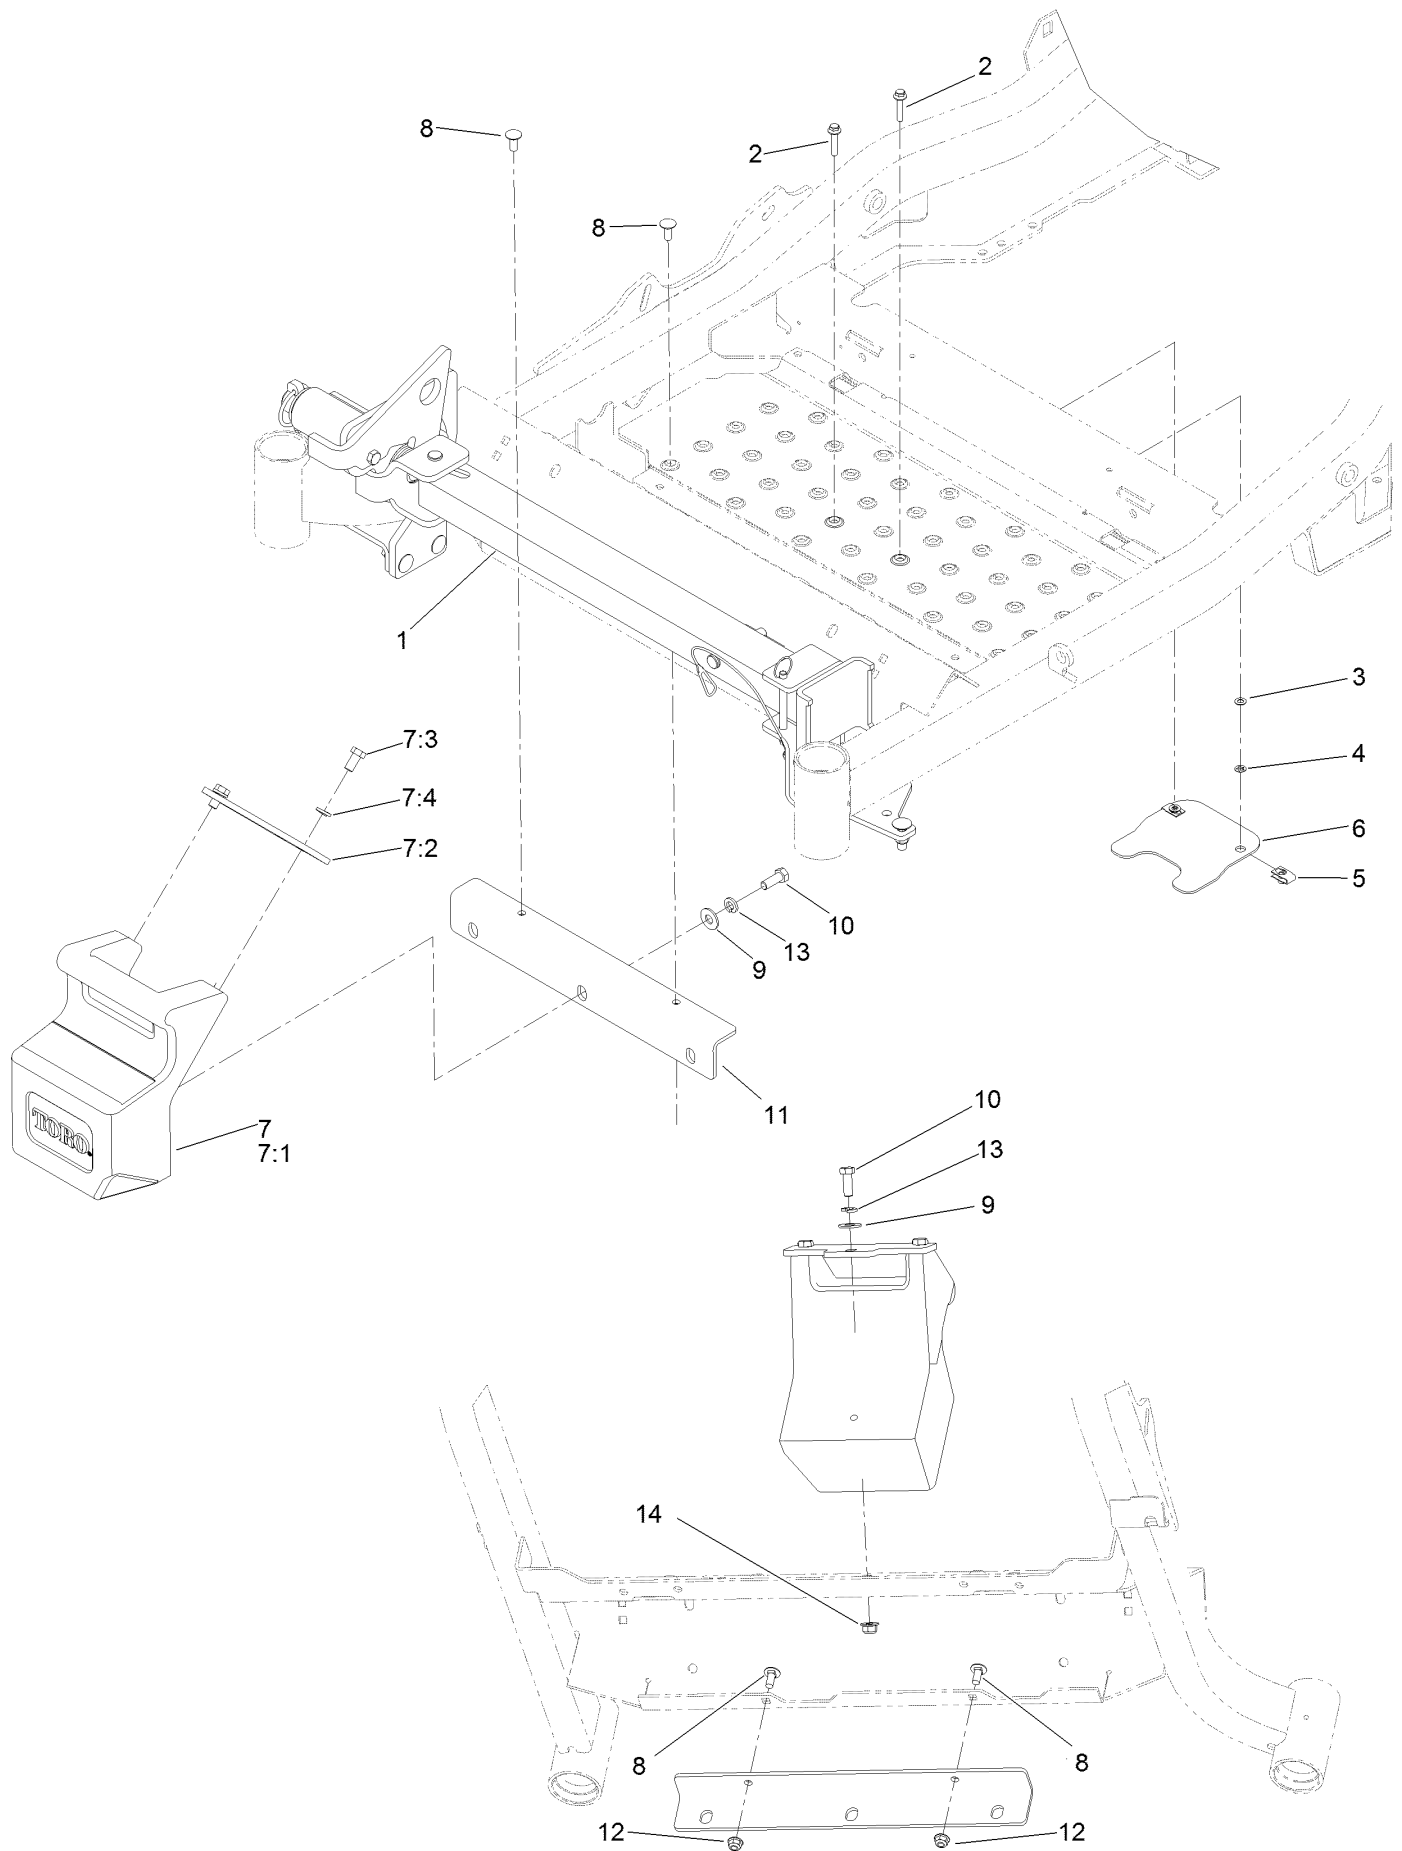

Z Stand and Weight Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	121-4811	1	Z Stand ASM	7:3	323-4	2	Screw-HH
2	3234-21	2	Screw-HHF	7:4	3253-5	2	Washer-Lock
3	3256-60	2	Washer-Flat	8	3230-23	2	Screw-CARR
4	106-8737	2	Nut-Retainer	9	3256-4	2	Washer-Flat
5	107069	2	Clip	10	323-6	2	Screw-HH
6	119-0395-03	1	Adapter-Captive	11	115-3615-01	1	Bracket-Mount, Weight
7	120-7885	1	Weight ASM	12	104-8300	2	Nut-HF, NI
7:1	120-7881	1	Weight-43 Lb	13	3253-5	2	Washer-Lock
7:2	115-3616-01	1	Tab-Support, Weight	14	104-8301	1	Nut-HF, NI

Z Stand Assembly No. 121-4811

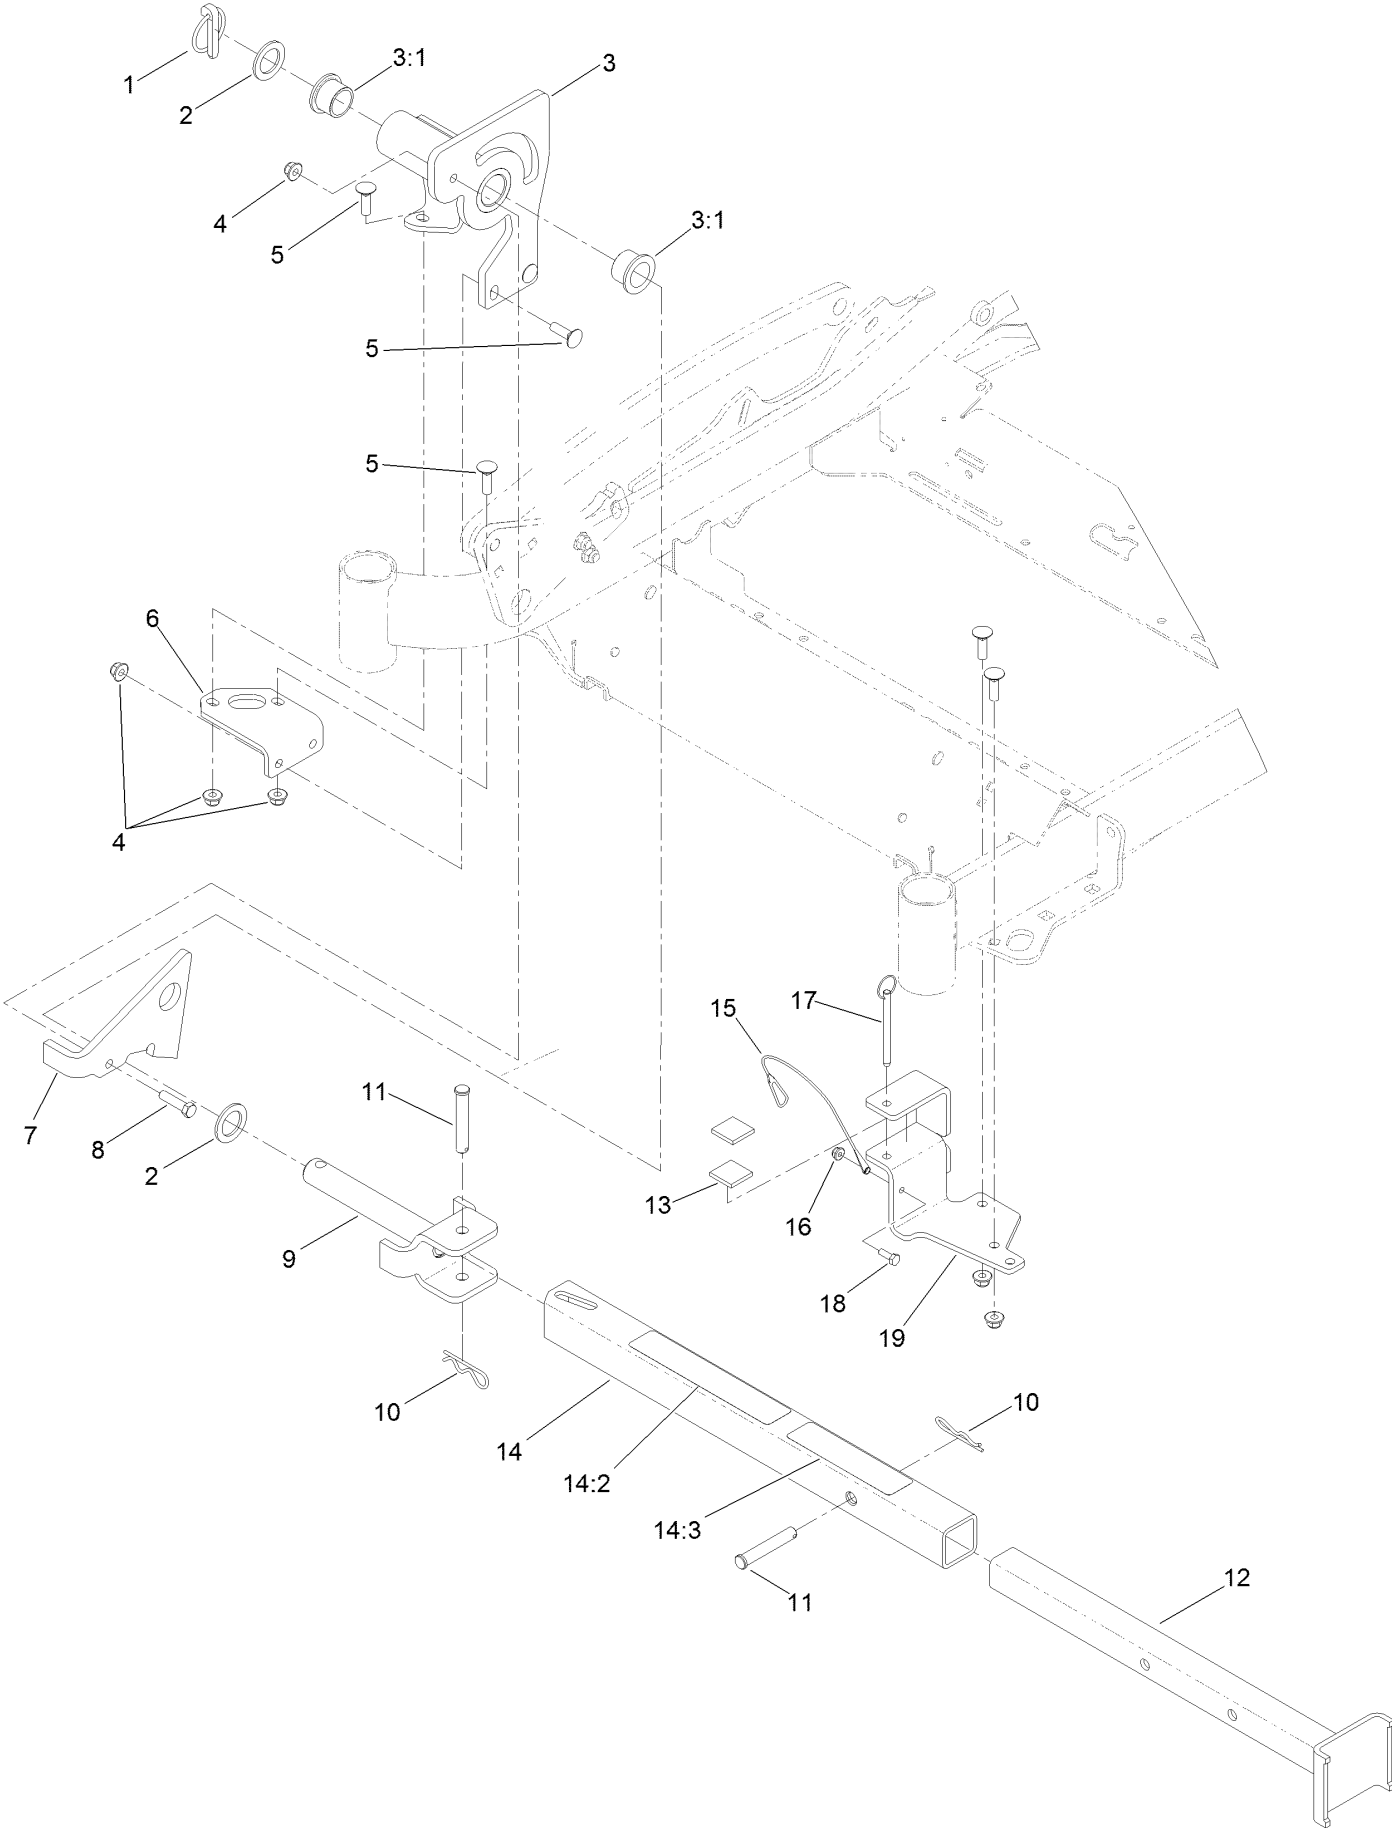


Z Stand Assembly No. 121-4811 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	283-71	1	Pin-Lynch
2	3-6781	2	Washer-Thrust
3	115-3635	1	Z Stand Pivot ASM
3:1	94-1291	2	Bushing
4	104-8301	8	Nut-HF, NI
5	3231-25	7	Bolt-CARR
6	115-3619-01	1	Bracket-Mount, Pivot
7	100-9686-01	1	Bracket-Latch
8	323-8	1	Screw-HH
9	100-9692-01	1	Pin-Pivot
10	3290-355	2	Pin-Hair

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
11	283-55	2	Pin-Clevis
12	115-3631-01	1	Tube-Inner
13	115-3613	2	Cushion-Rubber
14	115-3634	1	Outer Tube ASM
14:2	106-7464	1	Decal-Z Stand
14:3	107-3969	1	Decal-Warning
15	100-9385	1	Lanyard-Nylon
16	104-7201	1	Nut-HF
17	105-1647	1	Pin-Hitch, Cotterless
18	321-4	1	Screw-HH
19	115-3625-01	1	Cradle-Z Stand

Hydro Drive System Assembly

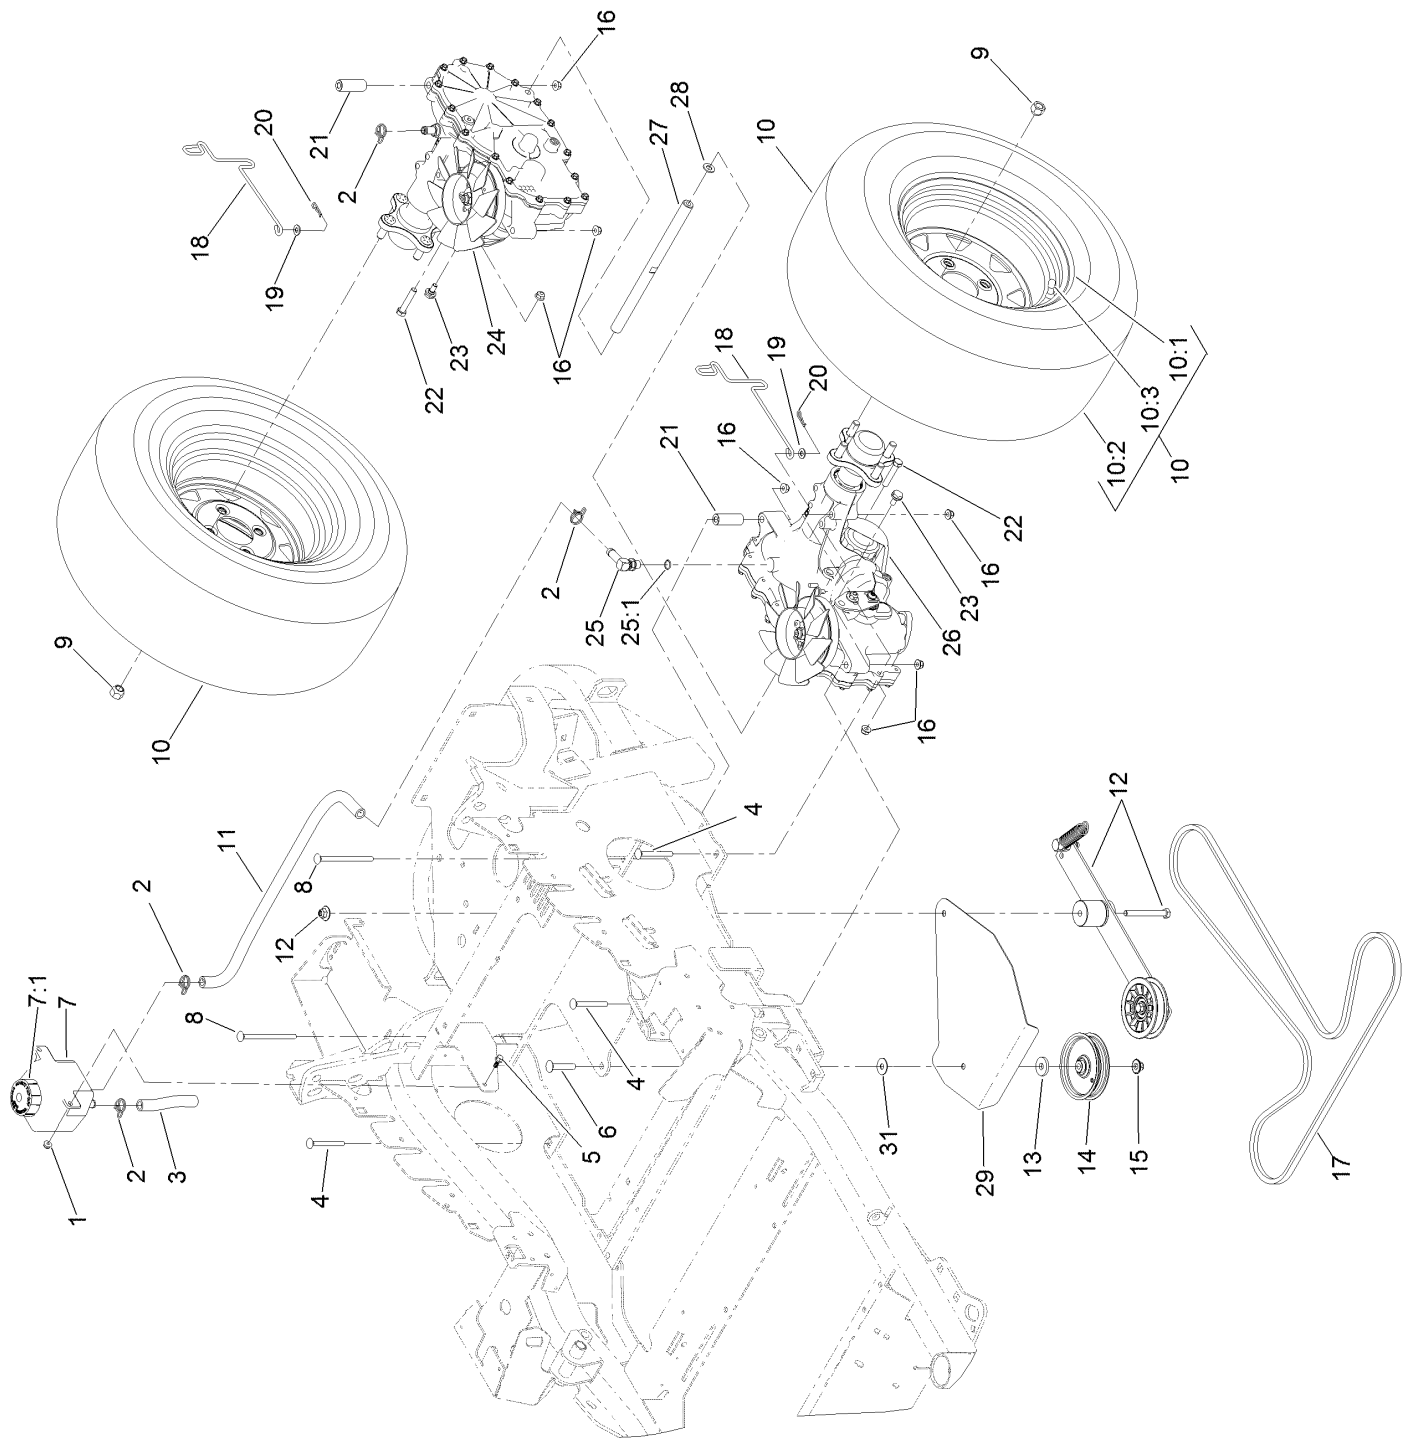


Hydro Drive System Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	104-7201	2	Nut-HF	15	109-6658	1	Nut-Flange, NI
2	117-1193	4	Clamp-Hose	16	104-8300	10	Nut-HF, NI
3	119-2642	1	Hose-HYD	17	114860	1	Belt-V
4	3230-9	6	Screw-CARR	18	125-8950	2	Rod-Bypass
5	99-6810	2	Screw-HHF	19	3256-23	2	Washer-Plain
6	117-9971	1	Bolt-Carriage	20	1-806003	2	Pin-Cotter
7	109-2250	1	Vent-Tank, HYD	21	109-3652	2	Spacer-Hydro
7:1	109-3320	1	Cap-Reservoir, HYD	22	94-7972	2	Screw-HH W/Loctite
8	3230-30	2	Screw-CARR	23	37-8771	2	Bolt-Shoulder
9	242-50	8	Nut-Lug	24	130-2850	1	RH Transaxle ASM
10	119-2692	2	Wheel And Tire ASM	25	109-6449	1	Fitting-Elbow, 90
10:1	120-3274	1	Wheel	25:1	237-42	1	O-Ring
10:2	120-3271	1	Tire	26	130-2851	1	LH Transaxle ASM
10:3	232-27	1	Stem-Valve	27	117-8585	1	Shaft-Cross, Hydro
11	119-2689	1	Hose-HYD	28	3256-24	1	Washer-Flat
12		1	Hydro Idler Arm ASM ●	29	125-4777-01	1	Plate-Guard
13	1-373034	1	Washer	31	52-2860	1	Washer
14	93-1622	1	Pulley-Idler				

● Not serviced separately


Hydro Idler Arm Assembly

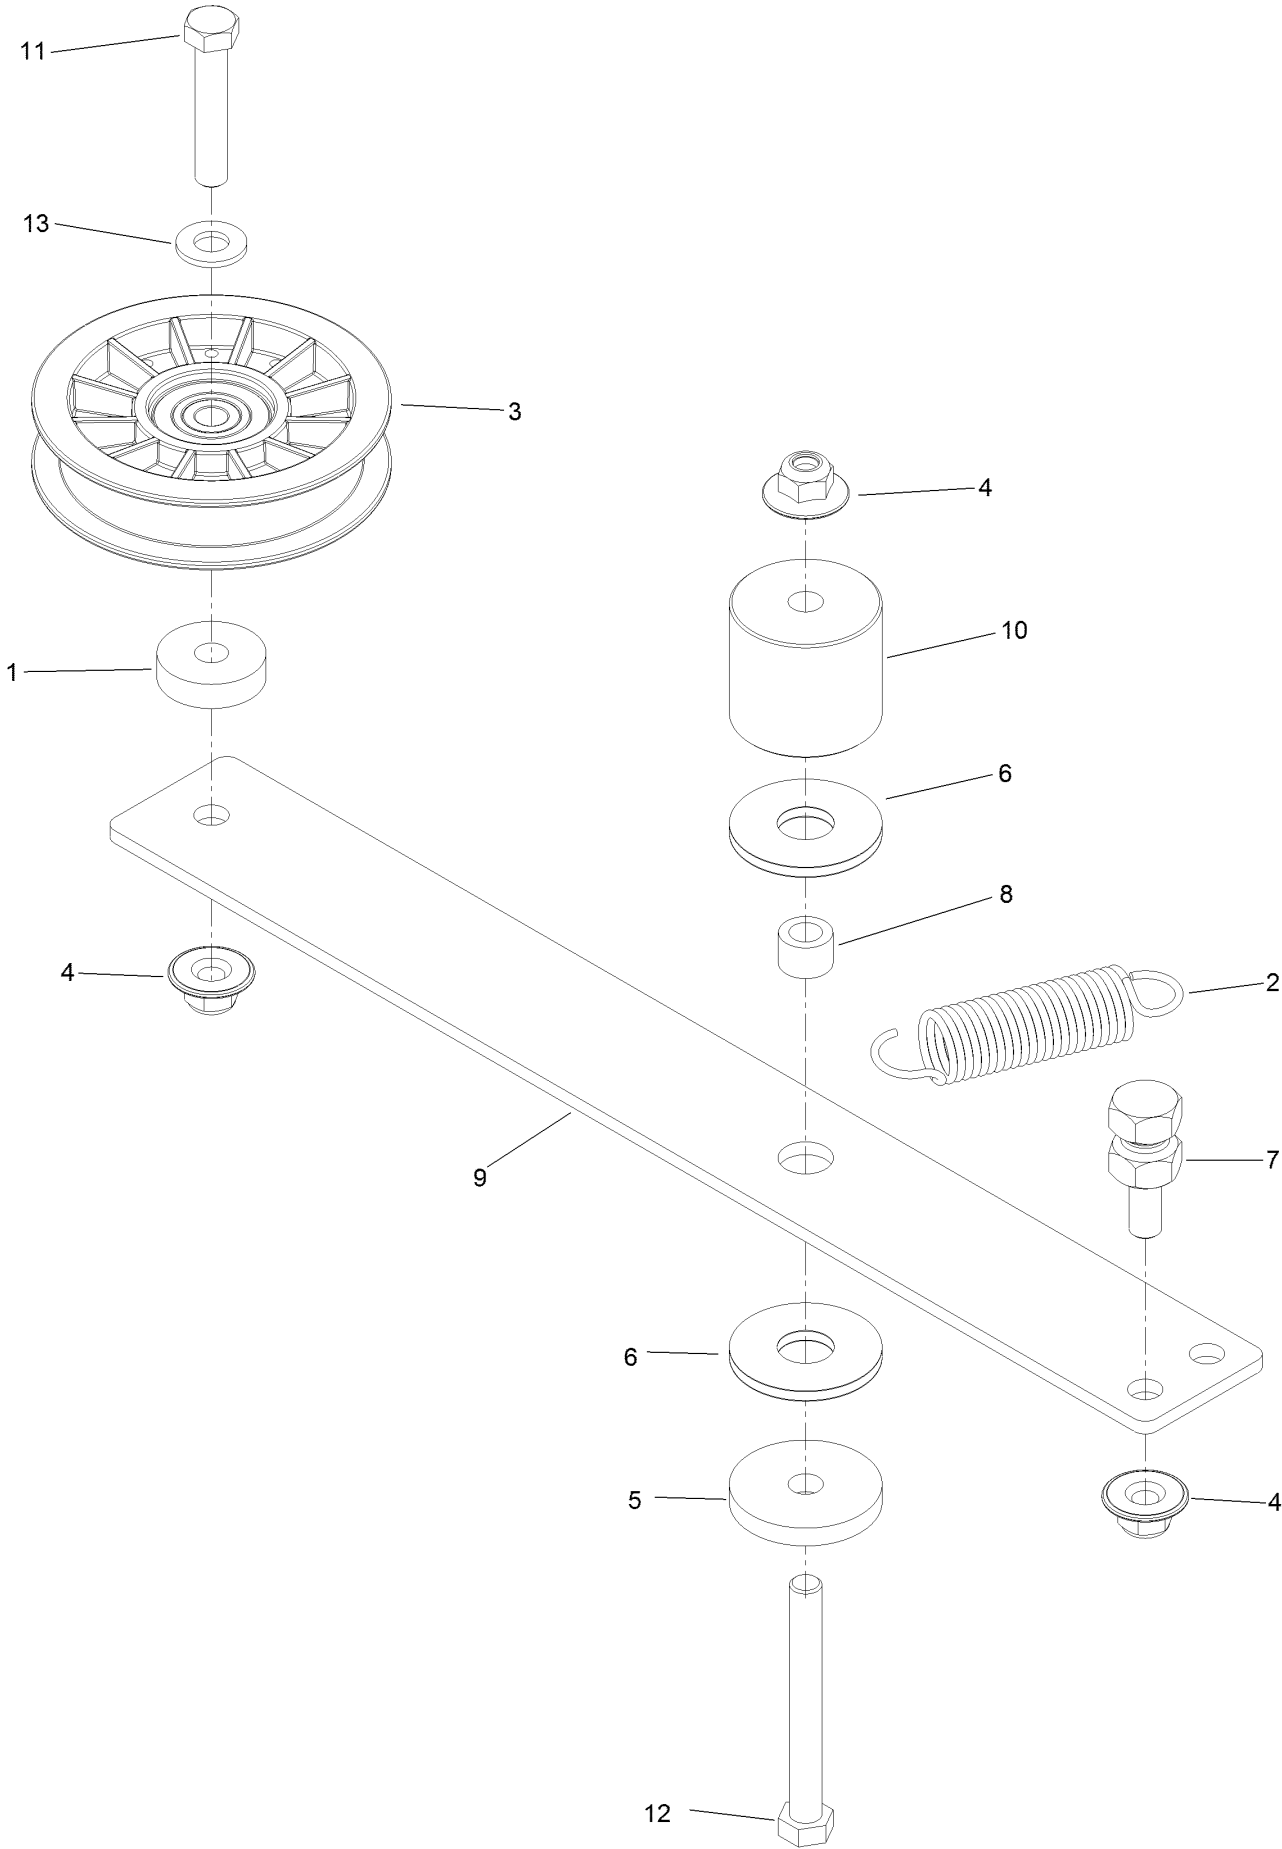

Hydro Idler Arm Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	105-7788	1	Spacer	8	115-4986	1	Spacer
2	108-4056	1	Spring-Extension	9	119-9914	1	Arm-Idler, Hydro
3	109-3397	1	Pulley-Idler, Flat	10	119-2657	1	Spacer-Plain
4	109-6658	3	Nut-Flange, NI	11	323-10	1	Screw-HH
5	110-9981	1	Washer-Plain	12	323-20	1	Screw-HH
6	114-0463	2	Washer-Friction, Composite	13	3256-24	1	Washer-Flat
7	114-5866	1	Anchor-Spring, Short				


Fuel Tank and Hose Assembly

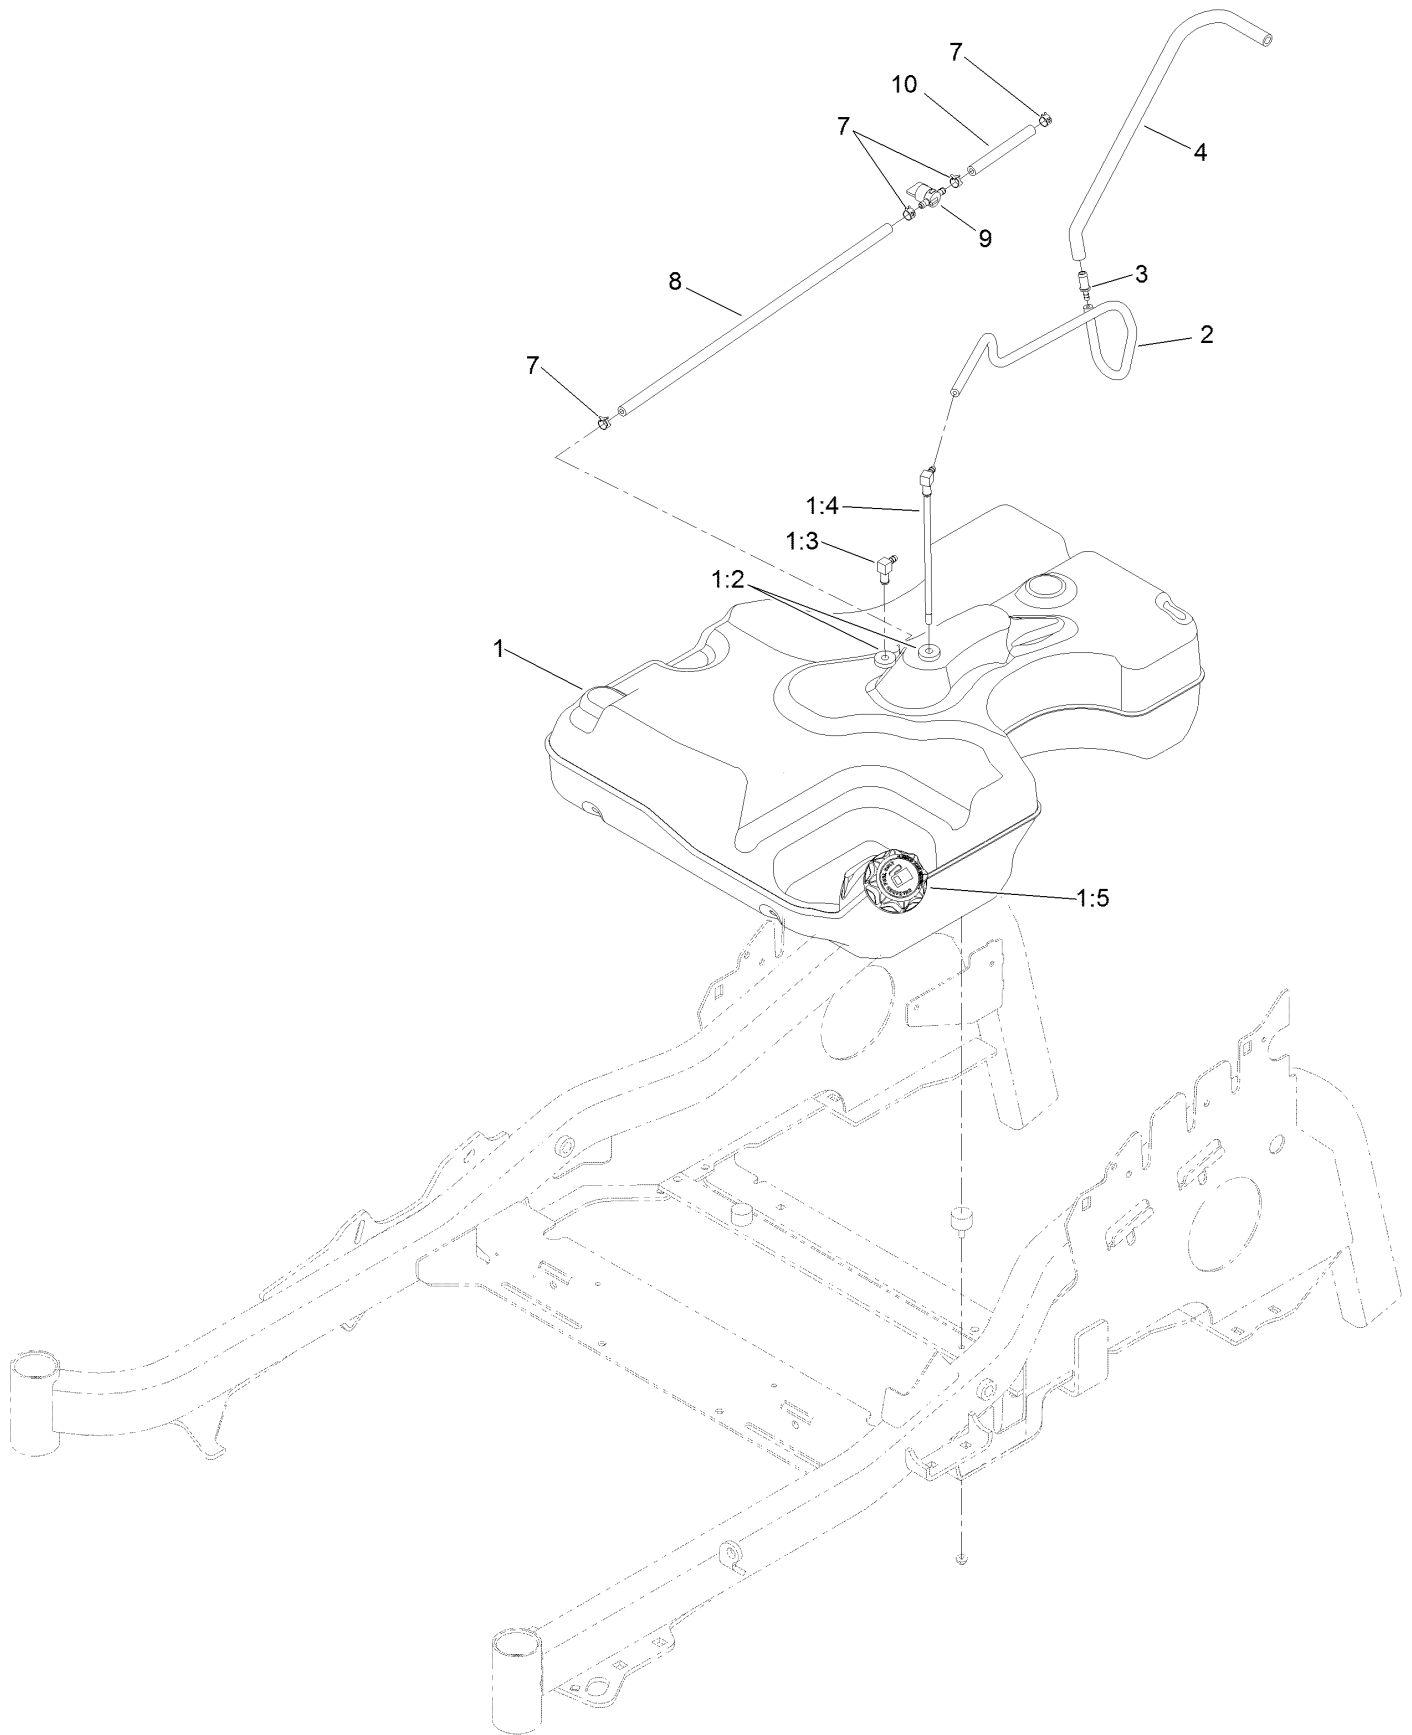

Fuel Tank and Hose Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-4765	1	Fuel Tank ASM	3	98-2952	1	Fitting-Straight
1:2	46-6560	2	Bushing	4	119-8562	1	Hose-Fuel
1:3	116-2288	1	Fitting-90 Elbow	7	2412-98	4	Clamp-Hose
1:4	125-4767	1	Fuel Line ASM	8	110-5701	1	Hose-Fuel
1:5	126-1789	1	Cap-Fuel, Ratcheting	9	1-603770	1	Valve-Fuel
2	119-6074	1	Hose-Fuel	10	109-0650	1	Hose-Fuel


Seat Mounting Assembly

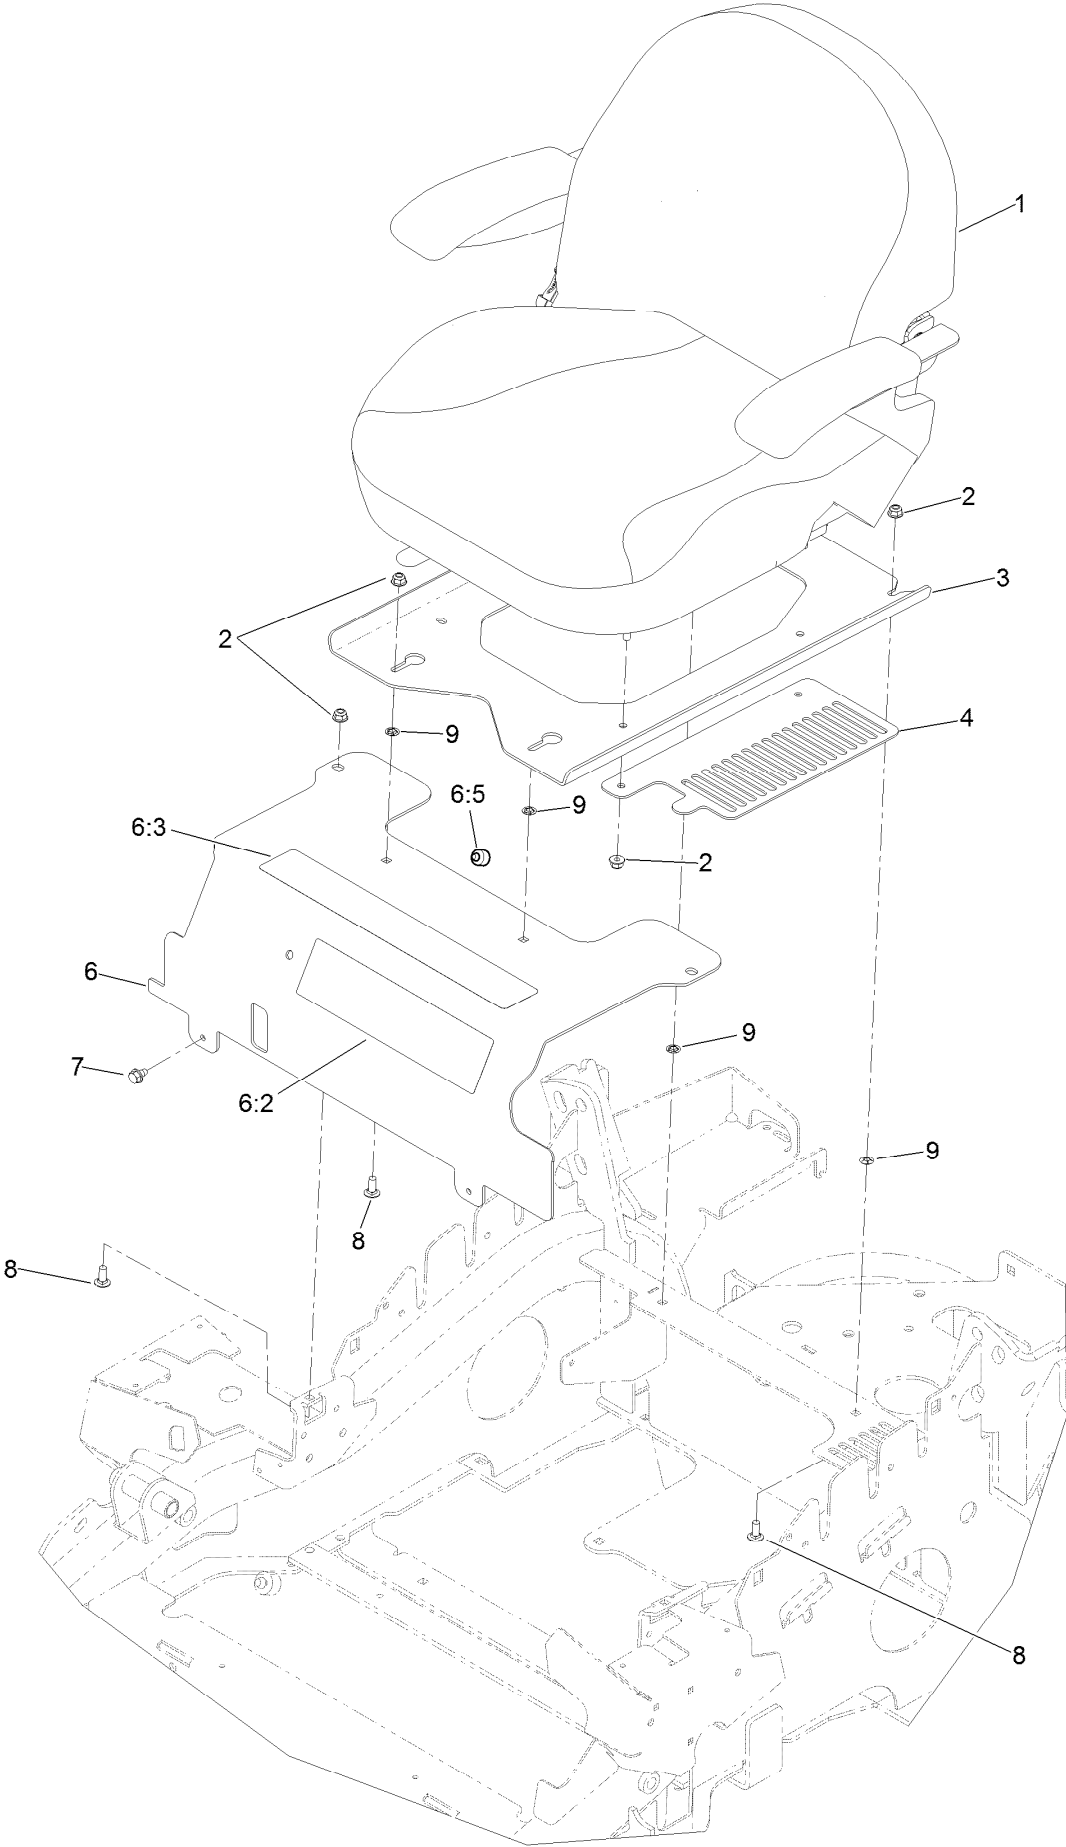

Seat Mounting Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-9538	1	Seat ASM	6:3	114-4468	1	Decal-Console
2	104-8300	10	Nut-HF, NI	6:5	120-7893	1	Bumper-Grommet
3	117-8615-03	1	Plate-Mount, Seat	7	9266934	2	Screw
4	117-8618-03	2	Plate-Cover, Fan	8	3230-23	6	Screw-CARR
6	121-4776	1	Seat Mount Panel ASM	9	117-2749	4	Nut-Push
6:2	114-5878	1	Decal				

Seat Assembly No. 127-9538

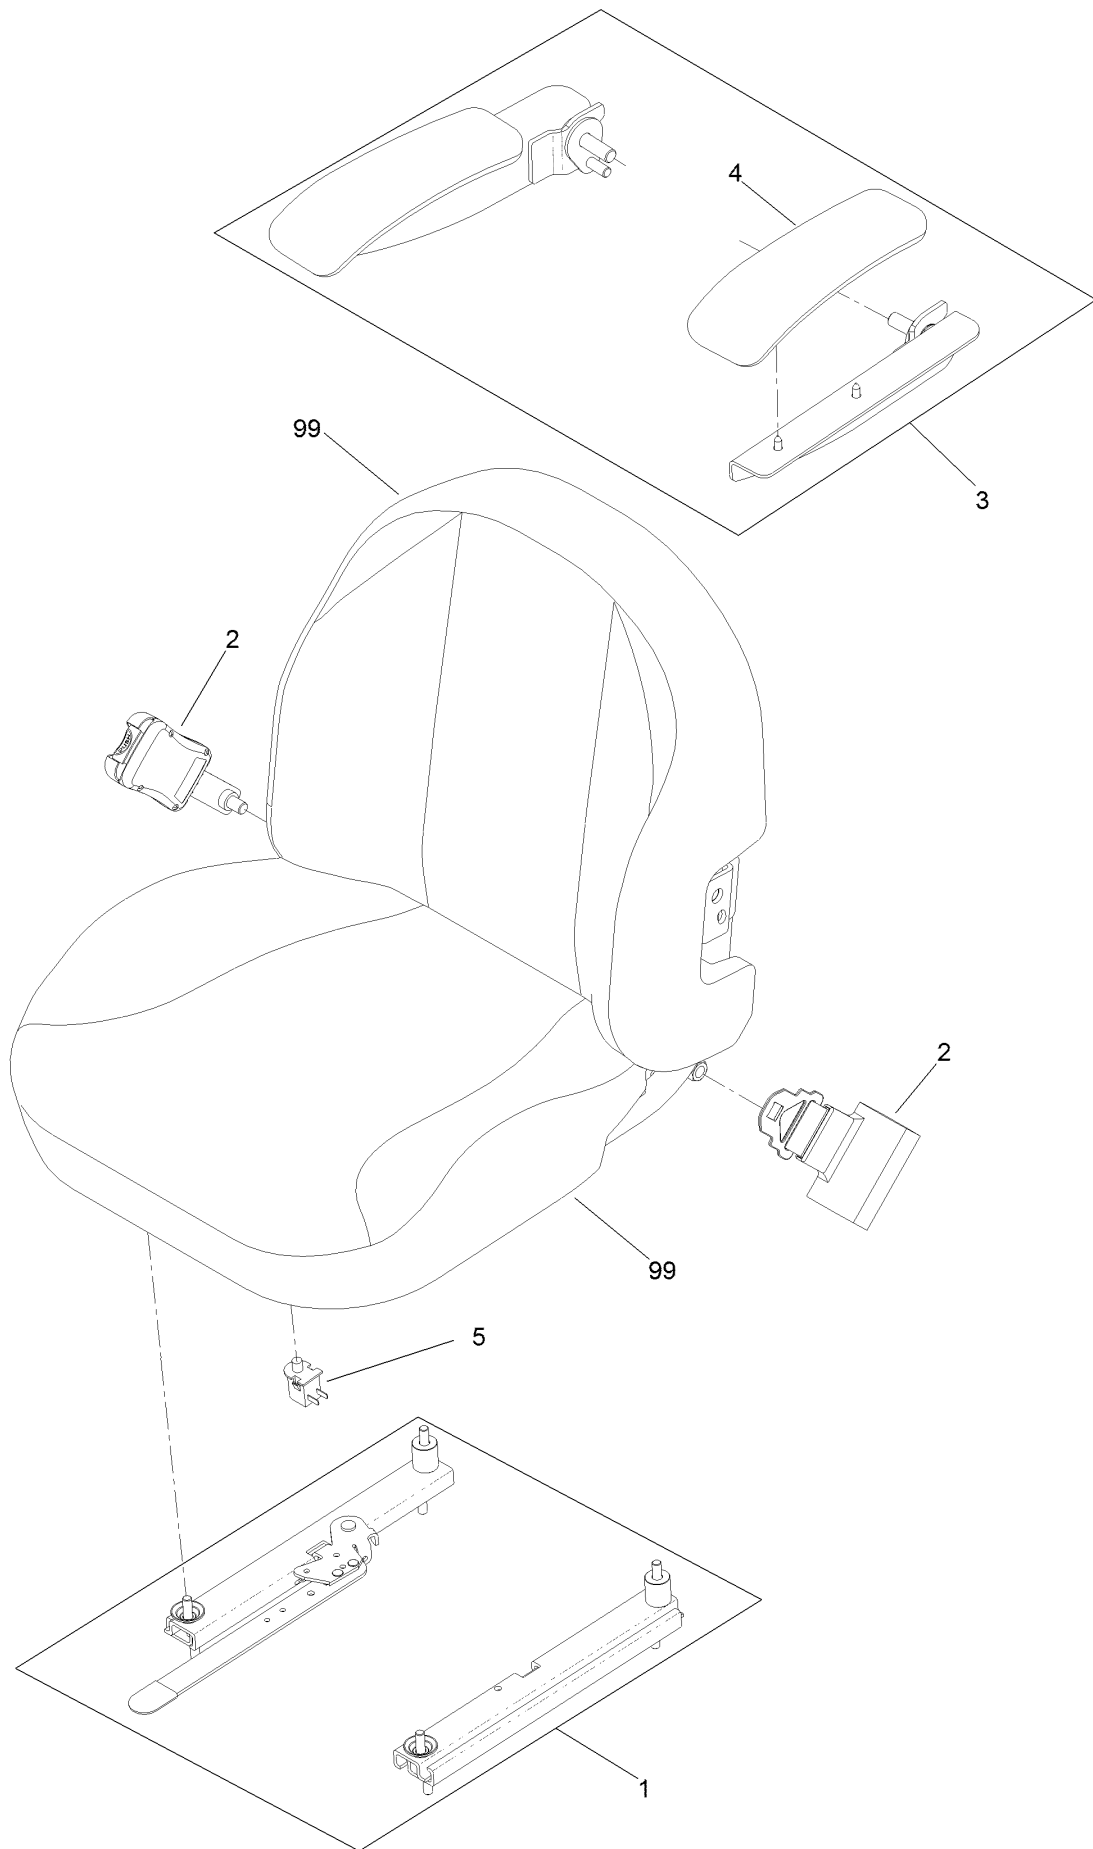


Seat Assembly No. 127-9538 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	130-2853	1	Seat Track Kit
2	130-2854	1	Seat Belt Kit
3	126-2058	1	Armrest Kit
4	110-4163	2	Cushion-Rest, Arm

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	82-2190	1	Switch-Bail
99	130-2855	1	Cover-Seat, Back
99	130-2856	1	Cover-Seat, Bottom


Motion Control Assembly

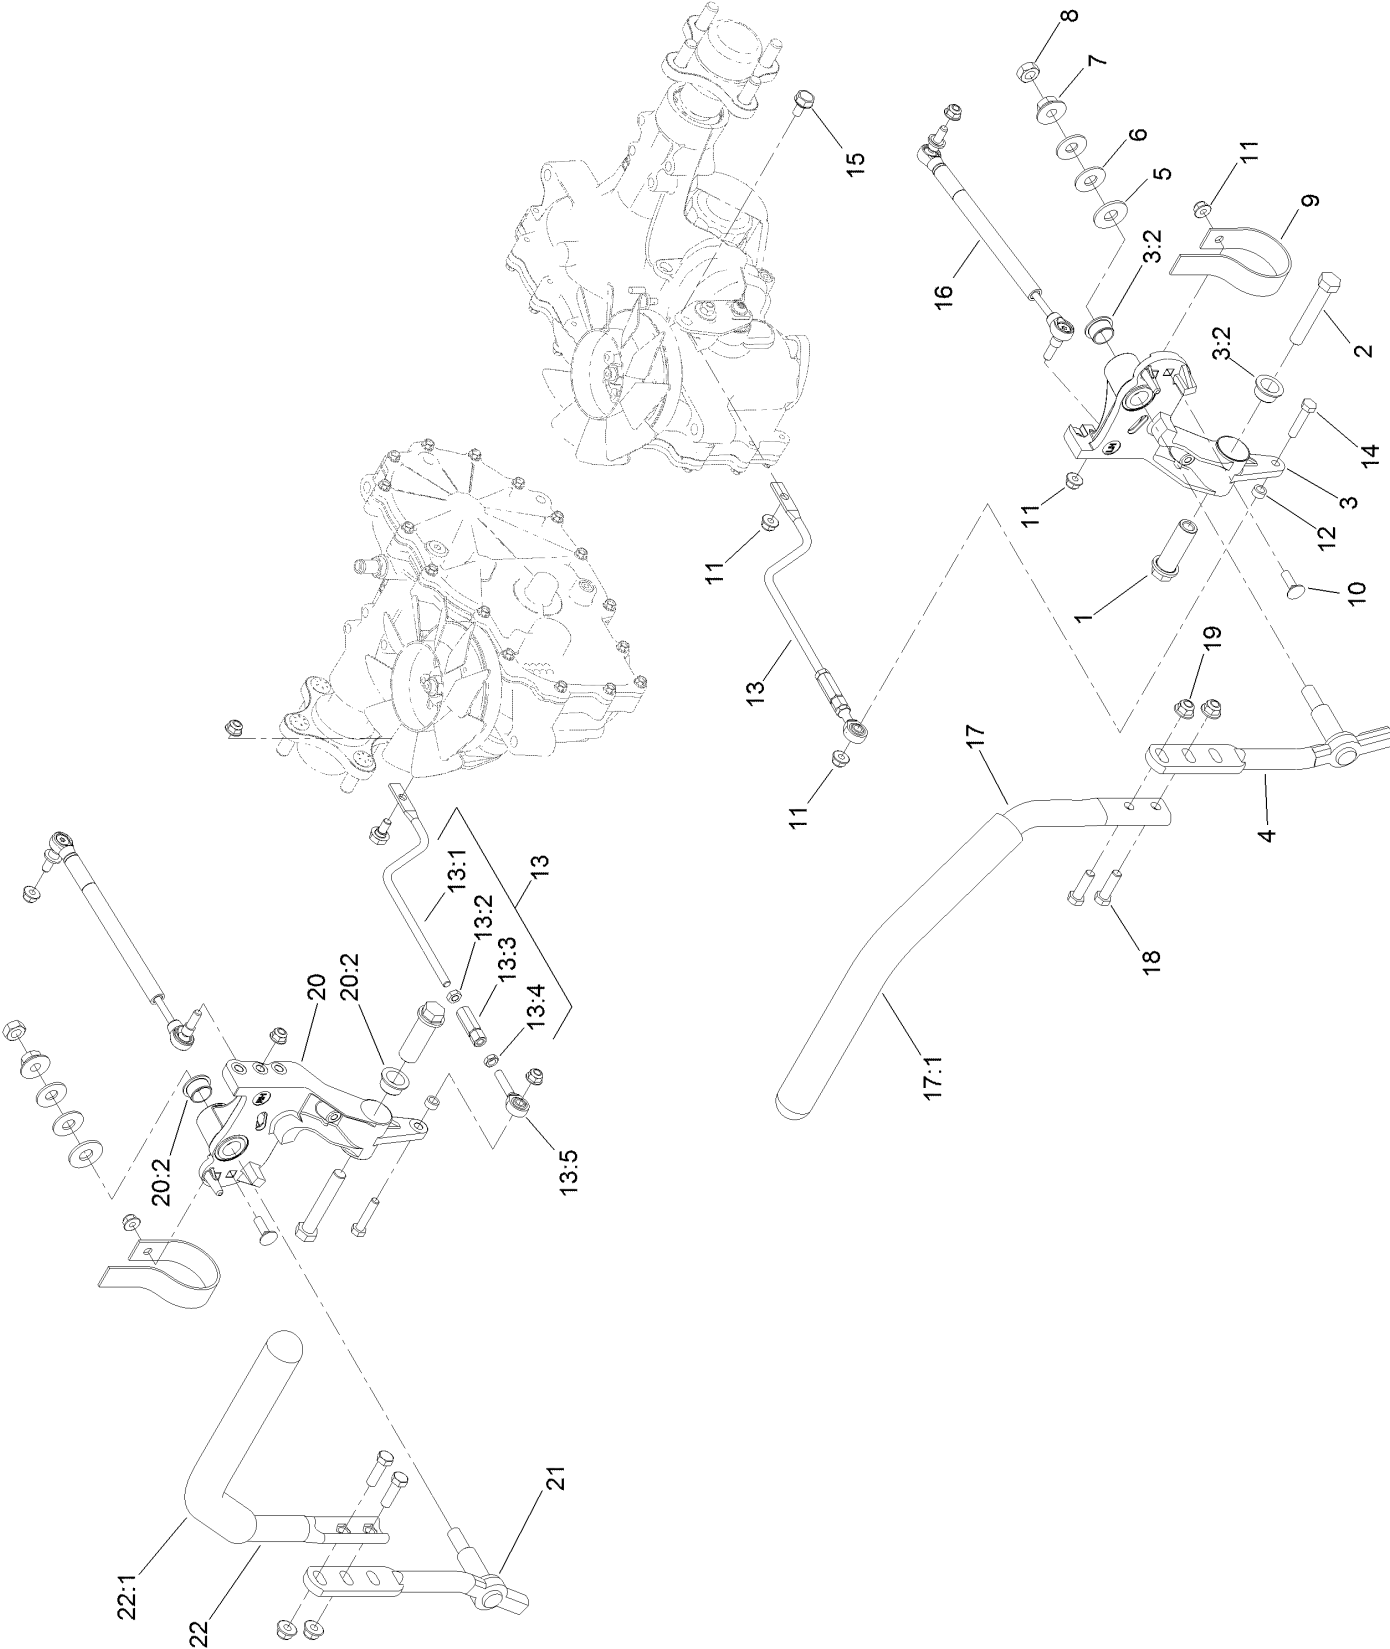

Motion Control Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	109-5891	2	Hub-Threaded	13:3	109-3728	1	Nut-Rod Adjustment
2	325-12	2	Screw-HH	13:4	3220-20	1	Nut-Jam
3	116-0881	1	LH Motion Control And Bushing ASM	13:5	2411-53	1	Bearing-Rod End, LH
3:2	109-8054	4	Bushing-Flange	14	322-7	2	Screw-HH
4	116-0040	1	Lever-Control Motion, LH	15	37-8771	2	Bolt-Shoulder
5	3256-6	2	Washer-Flat	16	116-0027	2	Damper-Control, Motion
6	109-9505	4	Washer-Spring	17	109-6590	1	LH Steering Handle ASM
7	32128-56	2	Nut-HF	17:1	109-5668	1	Grip-Control, Lever
8	3218-5	2	Nut-Jam	18	323-7	4	Screw-HH
9	109-5575	2	Spring-Leaf	19	104-8301	4	Nut-HF, NI
10	3230-2	2	Bolt-CARR	20	116-0880	1	RH Motion Control And Bushing ASM
11	104-8300	10	Nut-HF, NI	20:2	109-8054	4	Bushing-Flange
12	92-6998	2	Spacer-Yoke, Right	21	116-0039	1	Lever-Control Motion, RH
13	119-2605	2	Hydro Control Rod ASM	22	109-6589	1	RH Steering Handle ASM
13:1	119-2606	1	Rod-Control, Hydro	22:1	109-5668	1	Grip-Control, Lever
13:2	3220-2	1	Nut-Jam				


Parking Brake Assembly

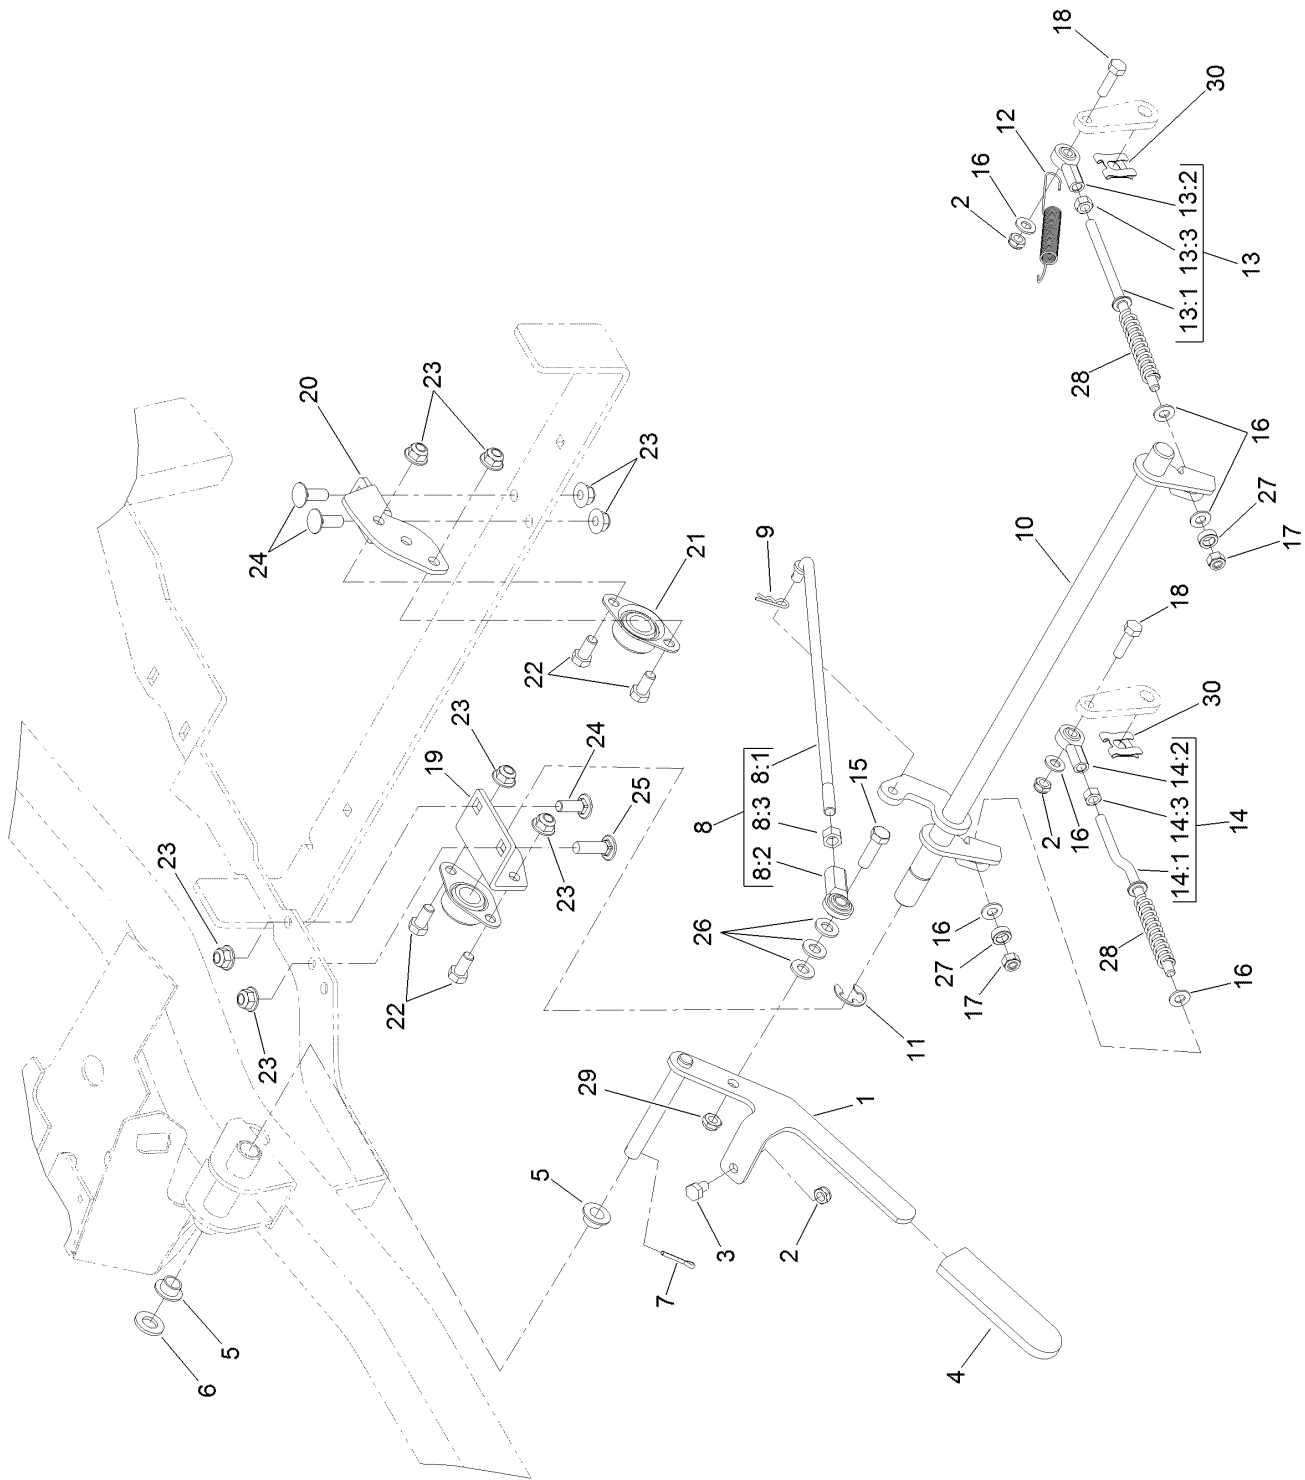

Parking Brake Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	121-4766-03	1	Handle-Brake	14:1	121-4770	1	Rod-Brake
2	3296-47	3	Nut-Lock, NI	14:2	1-543017	1	Balljoint-RH
3	322-1	1	Screw-HH	14:3	3219-2	1	Nut-Hex
4	1-633268	1	Grip-Lever	15	323-7	1	Screw-HH
5	1-513140	2	Bearing-Control	16	3256-23	6	Washer-Plain
6	106-9888	1	Washer-Flat	17	3296-4	2	Nut-Lock
7	3272-10	1	Pin-Cotter	18	322-16	2	Screw-HH
8	121-4807	1	Brake Link ASM	19	121-4761-01	1	Bracket-Shaft Mount, RH
8:1	121-4795	1	Rod-Link, Brake	20	121-4793-01	1	Bracket-Shaft Mount, LH
8:2	103-0608	1	Joint-Ball, End	21	1-633102	2	Bearing-Flange, Side
8:3	3219-3	1	Nut-Hex	22	323-4	4	Screw-HH
9	3290-307	1	Pin-Cotter	23	104-8301	8	Nut-HF, NI
10	121-4804-03	1	Shaft-Brake	24	3231-22	3	Screw-CARR
11	32151-48	1	E-Ring	25	3231-28	1	Screw-CARR
12	110769	1	Spring-Extension	26	3256-24	3	Washer-Flat
13	121-4805	1	LH Brake Rod ASM	27	103-5677	2	Spacer
13:1	121-4755	1	Rod-Brake	28	1-603807	2	Spring-Return, Neutral
13:2	1-543017	1	Balljoint-RH	29	3296-59	1	Nut-Lock, NI
13:3	3219-2	1	Nut-Hex	30	114-8450	2	Clip-Retaining
14	121-4806	1	RH Brake Rod ASM				

Engine, Muffler and Control Panel Assembly

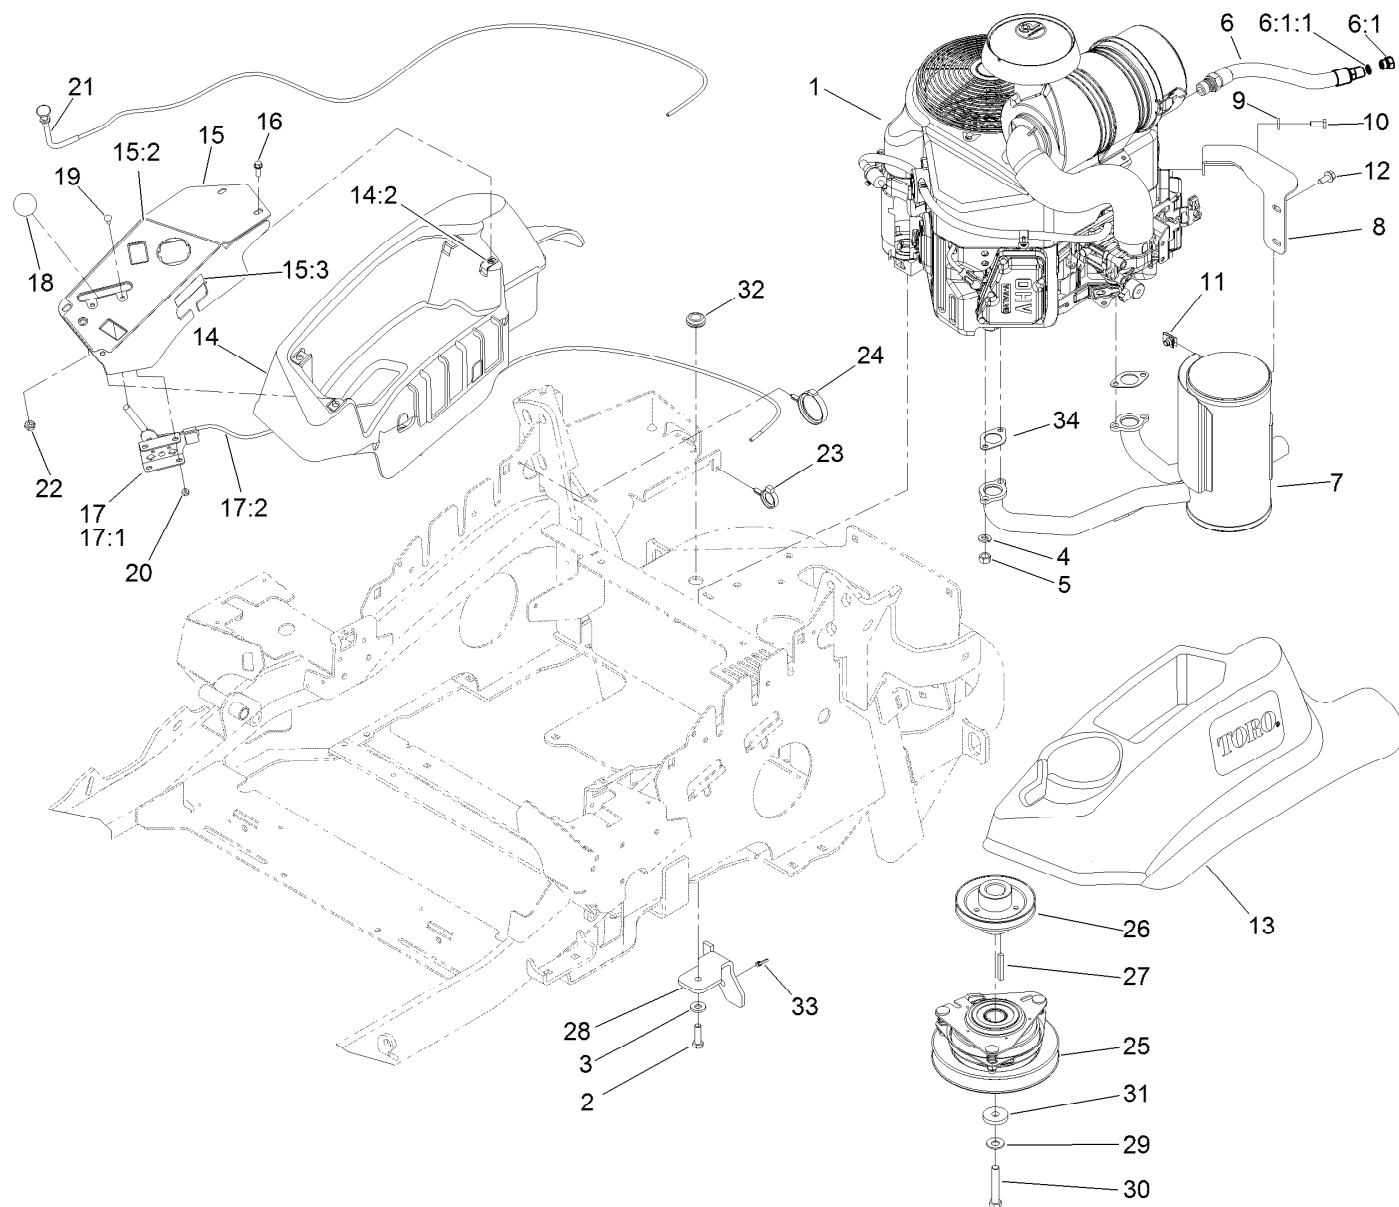


Engine, Muffler and Control Panel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Engine-Kawasaki, Fx651V-S10-R ●■	16	32105-15	4	Screw-HWH
2	323-7	4	Screw-HH	17	110-5727	1	Throttle Control ASM
3	98-5975	4	Washer-Belleville	17:1	112-2334	1	Lever-Throttle
4	114-3550	4	Washer-Lock	17:2	110-5728	1	Cable-Throttle
5	114-3549	4	Nut	18	1-603175	1	Knob-Ball
6	116-4924	1	Engine Oil Drain Hose ASM	19	1-807513	2	Bolt-CARR
6:1	353-508	1	Plug-HH	20	3296-2	2	Nut-Lock, NI
6:1:1	237-42	1	O-Ring	21	115-2753	1	Control-Choke
7	119-2645	1	Muffler	22	3220-3	1	Nut-HJ
8	119-2659	1	Bracket-Muffler	23	105-1853	1	Clamp-Hose
9	1-303334	1	Washer-Spring	24	117-7817	1	Clamp-Harness
10	33114-020	1	Screw-HH	25	119-2595	1	Clutch
11	94-2413	2	Nut-U	26	119-9915	1	Pulley-Engine
12	3234-5	2	Screw-HHF	27	608006	1	Key-Square
13	119-2602	1	Console-LH	28	119-2658-01	1	Bracket-Stop, Clutch
14	119-2603	1	RH Console ASM	29	1-603610	1	Washer-Spring
14:2	107069	4	Clip	30	3212-10	1	Screw-HH
15	119-2694	1	Control Panel ASM	31	107-4136	1	Washer
15:2	119-2501	1	Decal-Panel, Control	32	112-7069	1	Grommet
15:3	114-4466	1	Decal-Fuses	33	1-303287	1	Tie-Cable
				34	1-653313	2	Gasket-Exhaust

● Not serviced separately

■ Obtain parts from www.kawpowerepc.com


Deck Lift Assembly

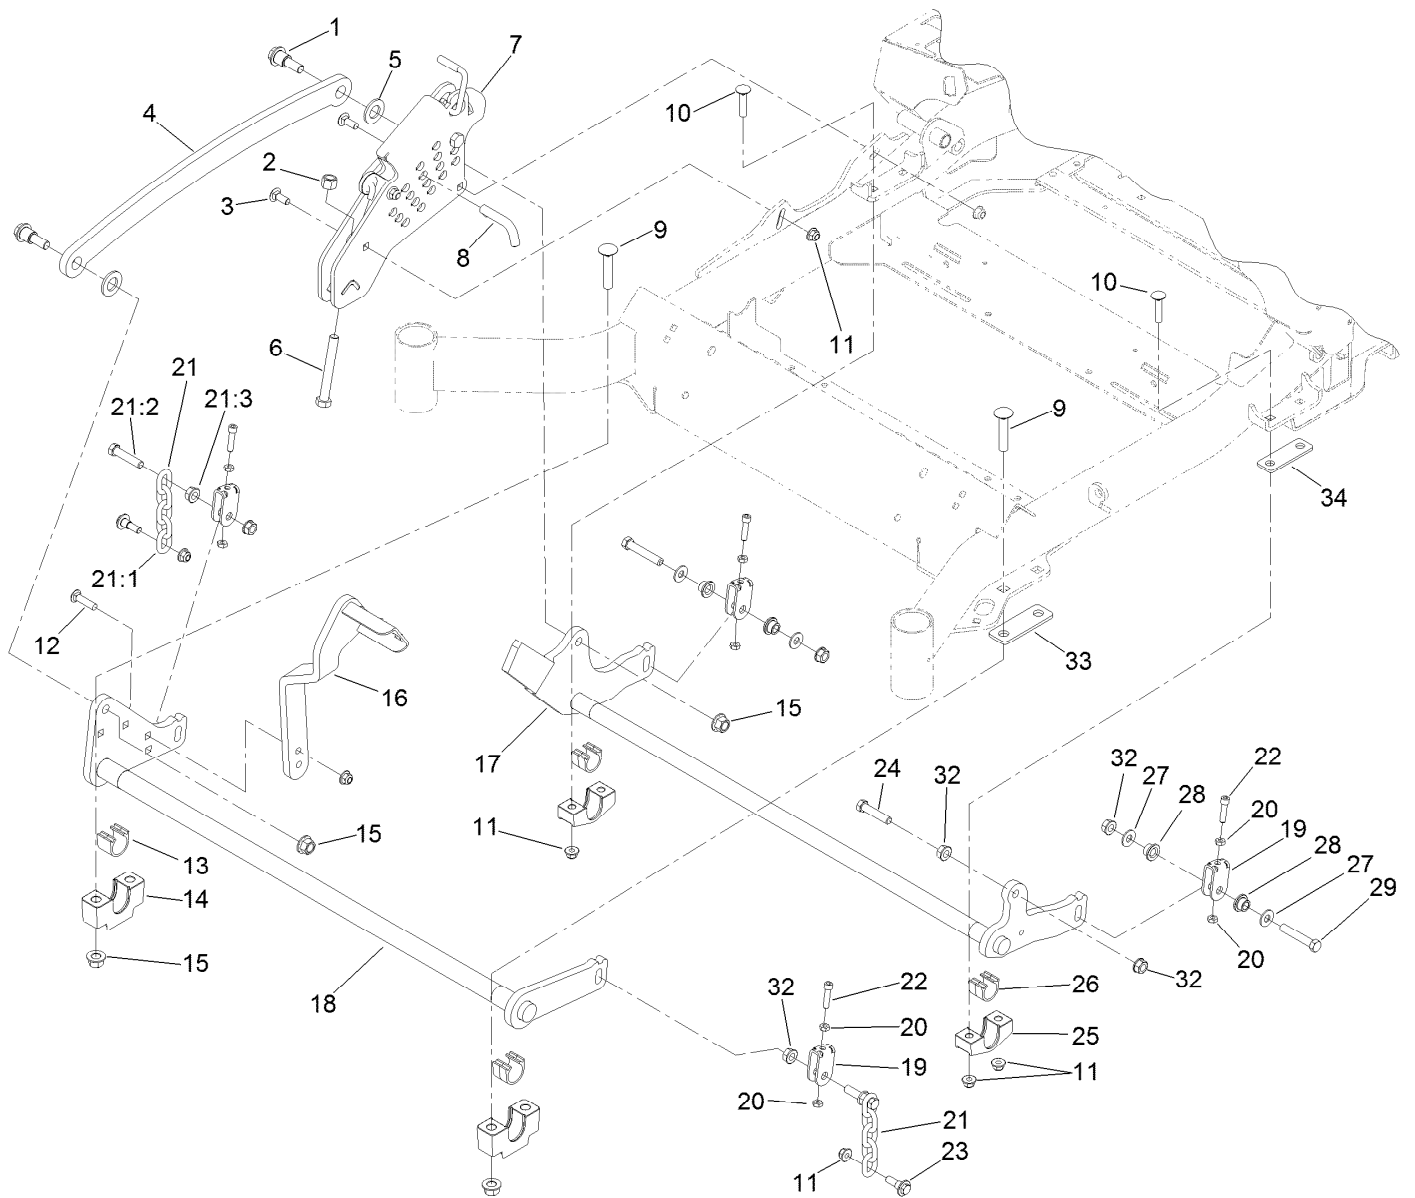

Deck Lift Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	116-0780	2	Screw-Shoulder, HHF	19	109-9066	4	Yoke-Adjust, Deck
2	3296-23	1	Nut-Lock, NI	20	3218-2	8	Nut-Jam
3	3231-2	2	Bolt-CARR	21	116-0756	2	Deck Lift Chain ASM
4	116-0797-03	1	Link-Lift, Deck	21:1	1-633447	1	Chain-Lift, Deck
5	3256-28	2	Washer-Flat	21:2	109-9065	1	Screw-HH
6	116-0559	1	Bolt-TAP	21:3	32128-37	1	Nut-HF
7	121-4779	1	Height Of Cut ASM	22	322-47	4	Screw-HH
8	116-5584	1	Pin-HOC	23	109-9840	2	Screw-Shoulder, HHF
9	116-1700	4	Bolt-CARR	24	109-9065	1	Screw-HH
10	3231-5	4	Screw-CARR	25	116-0818-03	2	Support-Cross Shaft, Rear Bearing
11	104-8301	10	Nut-HF, NI	26	109-7173	2	Bearing-Cross Shaft, Rear
12	3231-4	2	Screw-CARR	27	3256-4	4	Washer-Flat
13	109-9410	2	Bearing-Cross Shaft, Front	28	116-2428	4	Bushing-Flanged
14	109-9409	2	Support-Cross Shaft, Bearing	29	324-10	2	Screw-HH
15	99-5107	6	Nut-Lock	32	32128-37	6	Nut-HF
16	120-7877-01	1	Lever-Foot	33	121-7593-01	2	Spacer-Decklift, Front
17	116-0459-03	1	Lift-Deck, Rear	34	121-7594-01	2	Spacer-Decklift, Back
18	116-2217-03	1	Cross Shaft-Front				

Height-of-Cut Assembly No. 121-4779

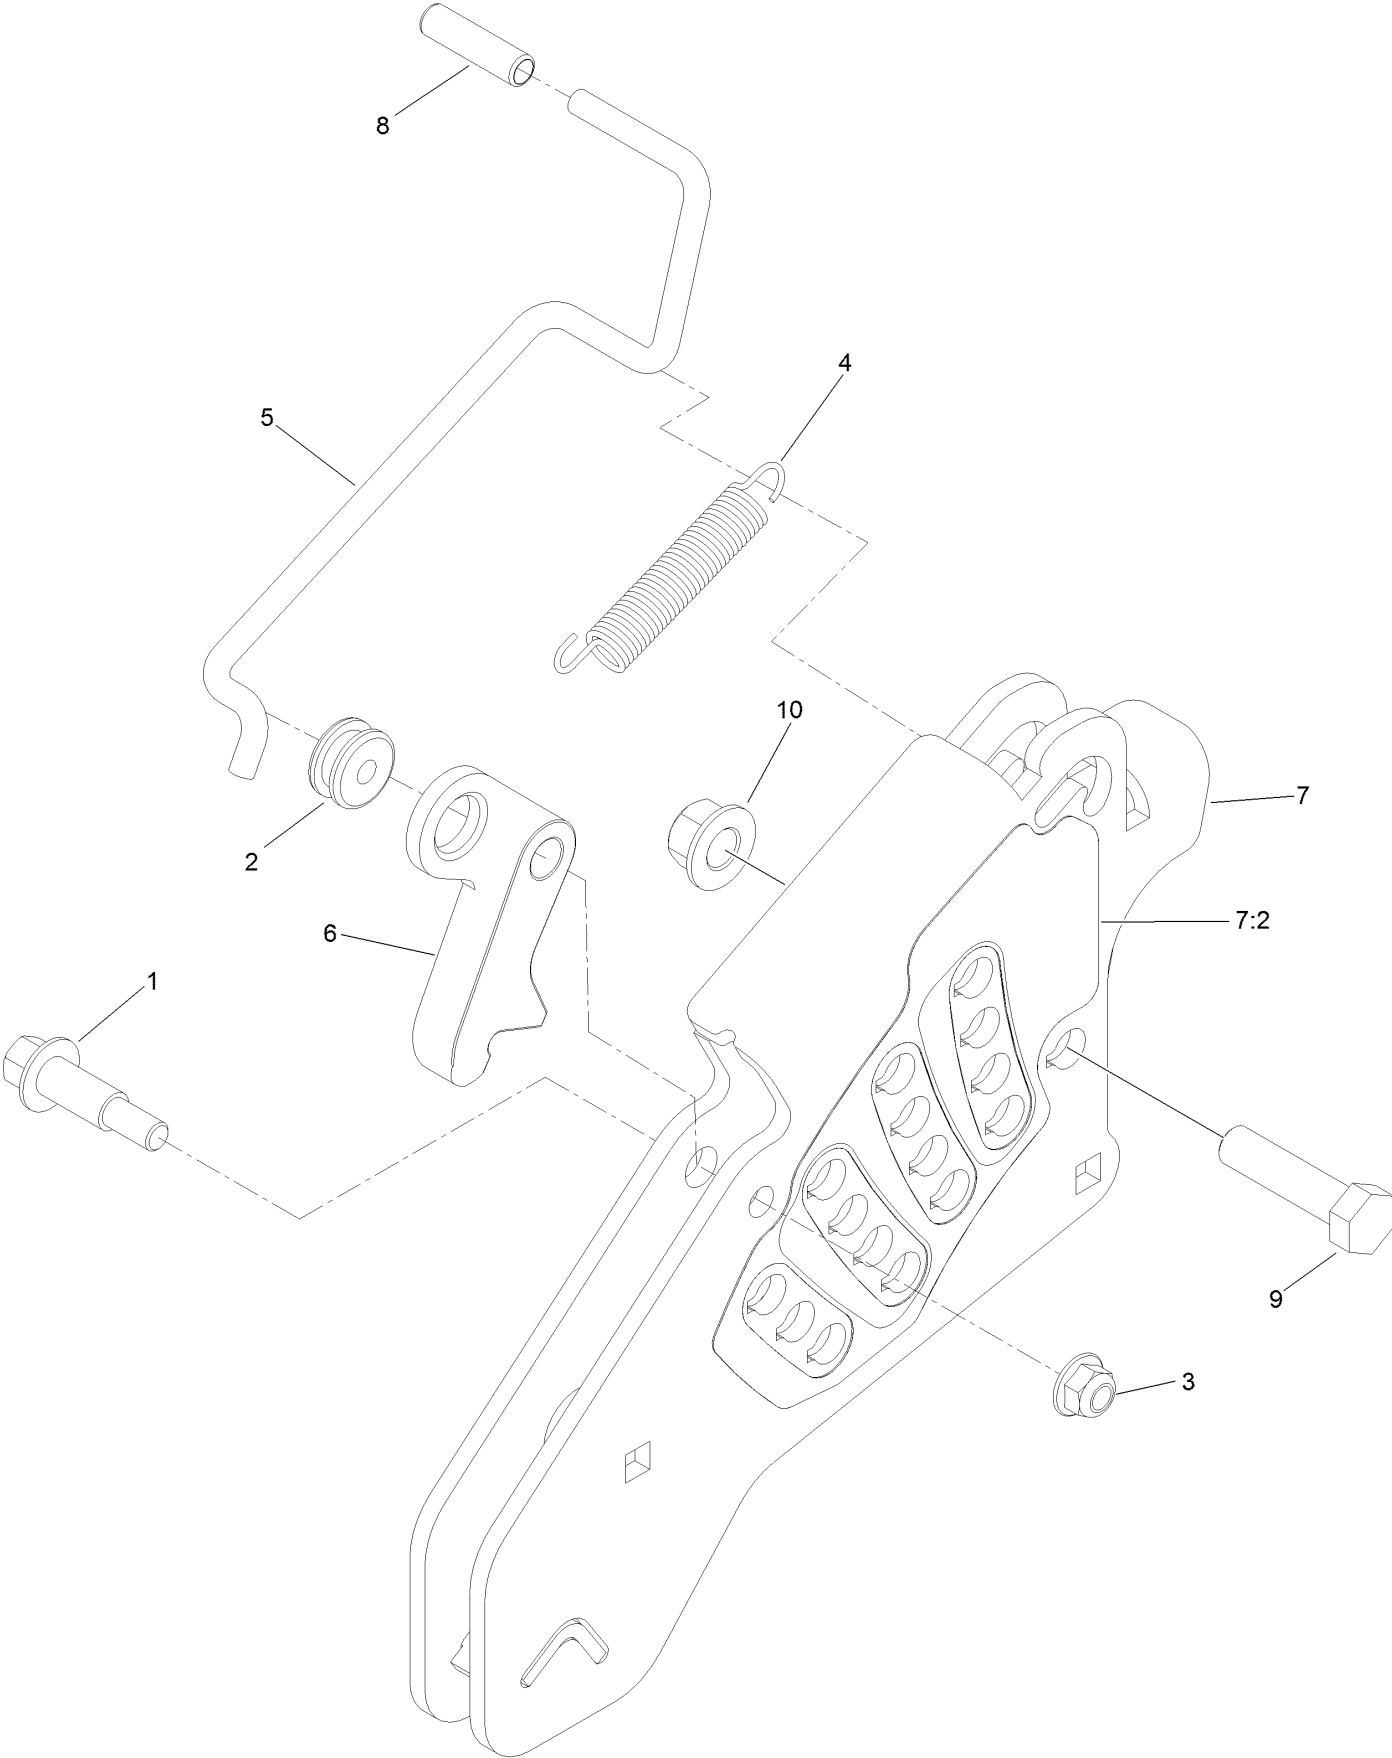


Height-of-Cut Assembly No. 121-4779 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	62-1330	1	Bolt-Shoulder
2	109-7130	1	Grommet
3	104-8301	1	Nut-HF, NI
4	109-7124	1	Spring-Extension
5	109-7128	1	Rod-Lock, Transport
6	116-0118	1	Pawl-Transport, HOC

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
7	121-4778	1	HOC Plate ASM
7:2	121-4777	1	Decal-HOC CE
8	109-8250	1	Grip-Lever
9	325-8	1	Screw-HH
10	99-5107	1	Nut-Lock

Deck Assembly

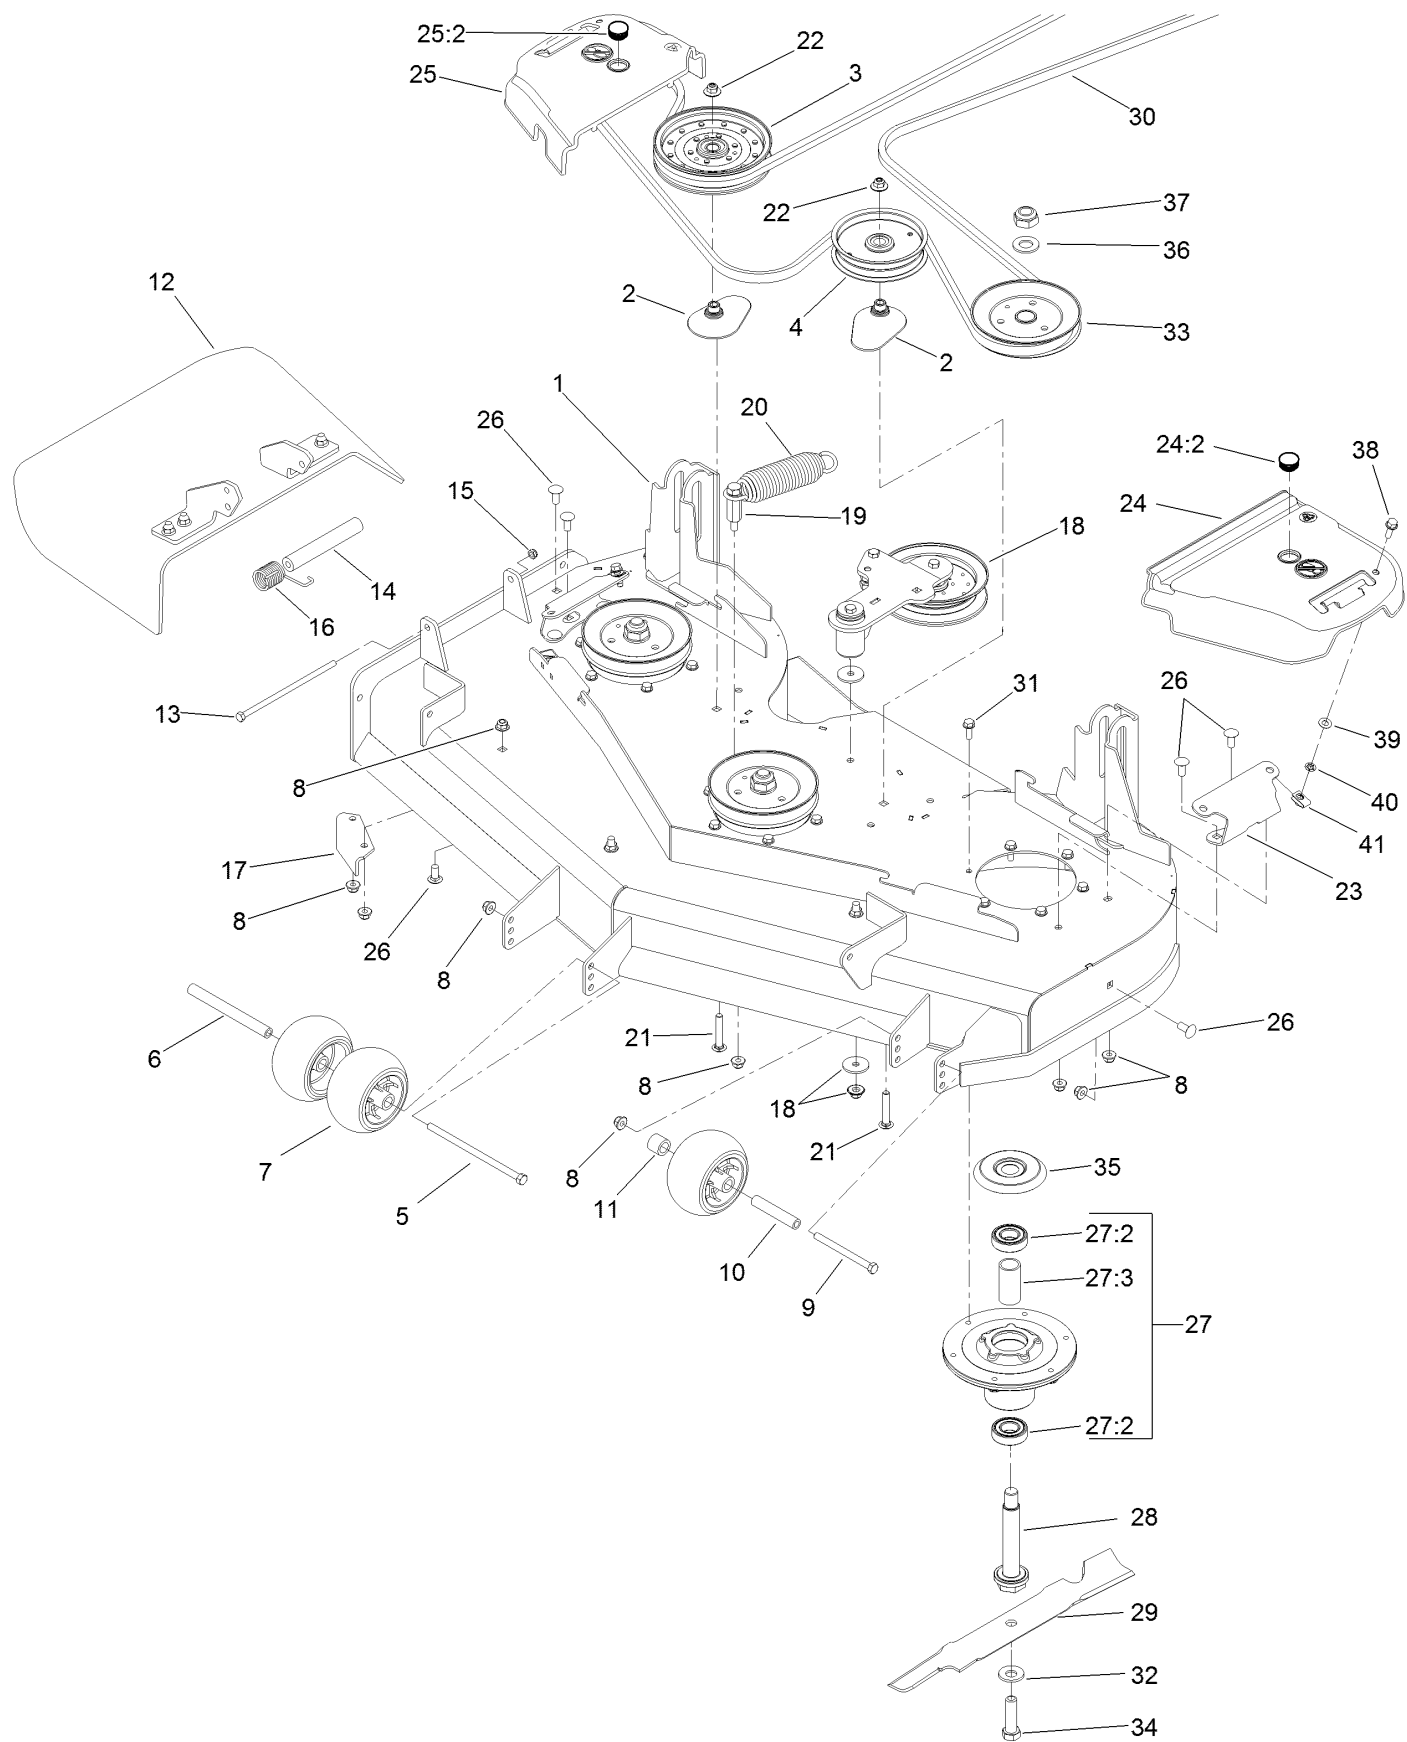


Deck Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	121-3241	1	Deck Decal ASM	24	117-7814	1	LH Belt Cover ASM
2	109-2872	2	Spacer-Pulley	24:2	117-3824	1	Plug-Plastic
3	116-4670	1	Pulley-Idler, Flat	25	117-7813	1	RH Belt Cover ASM
4	116-4665	1	Pulley-Idler, Flat	25:2	117-3824	1	Plug-Plastic
5	108-5388	1	Screw-HH	26	3231-27	10	Screw-CARR
6	98-5967	1	Spacer-Wheel	27	120-5477	3	Spindle ASM
7	1-603299	3	Roller-Scalp, Anti	27:2	116-0720	2	Bearing-Ball
8	104-8301	13	Nut-HF, NI	27:3	115-2641	1	Spacer-Bearing
9	323-23	1	Screw-HH	28	120-2505	3	Spindle-Shaft
10	98-7912	1	Tube-Spanner	29	117-7277-03	3	Blade-Hi Flo, 16.50 Inch
11	98-7913	1	Tube-Spacer	30	119-9926	1	Belt-V
12	120-2451	1	Deflector ASM	31	32144-41	18	Screw-Taptite
13	322-50	1	Screw-HH	32	125-1736	3	Washer-Belleville
14	105-4622	1	Spacer	33	120-7854	3	Pulley-B Section
15	3296-47	1	Nut-Lock, NI	34	51-4060	3	Screw-Blade
16	108-4052	1	Spring-Torsion	35	117-7210	3	Shield-Bearing
17	107-8541-01	1	Baffle-Discharge	36	92-5836	3	Washer
18		1	Idler Arm ASM ●	37	3296-67	3	Nut-Lock, NI
19	114-5867	1	Anchor-Spring, Tall	38	3234-29	2	Screw-HHF
20	116-6317	1	Spring-Extension	39	73-0041	2	Washer-Thrust
21	3231-40	2	Bolt-CARR, Short Neck	40	117-2749	2	Nut-Push
22	109-6658	2	Nut-Flange, NI	41	94-2413	2	Nut-U
23	114-5881-01	2	Bracket-Cover, Belt				

● Not serviced separately


Deck Decal Assembly No. 121-3241

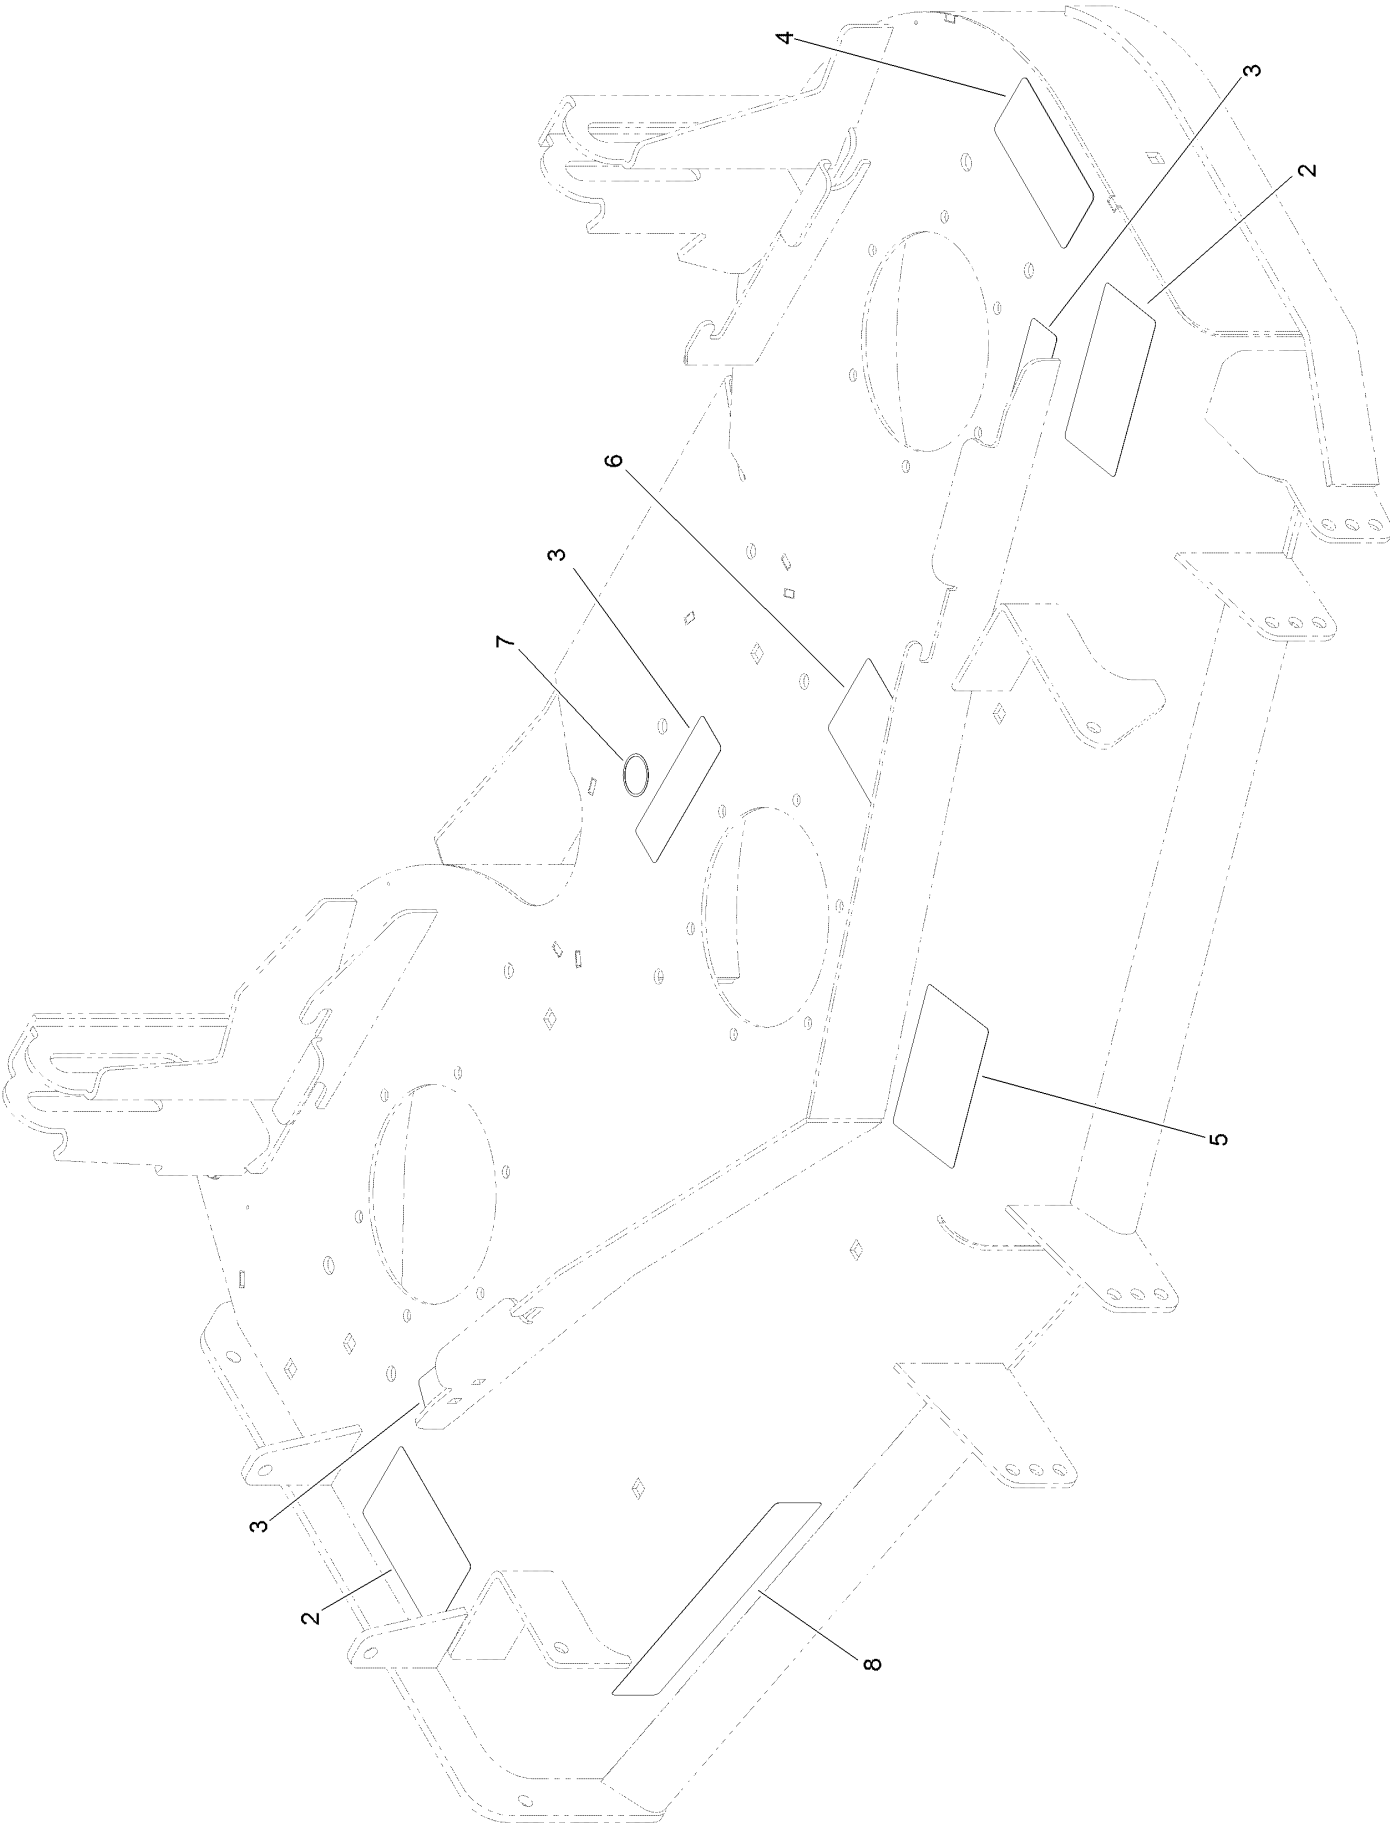

Deck Decal Assembly No. 121-3241 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	117-3848	2	Decal-Danger	6	117-8639	1	Decal-Routing, Deck Belt
3	112-9028	3	Decal-Missing, Cover	7	58-6520	1	Decal-Grease
4	93-7818	1	Decal-Torque, Blade Bolt	8	121-3204	1	Decal
5	112-3858	1	Decal-Scalp, Anti				

Deflector Assembly No. 120-2451

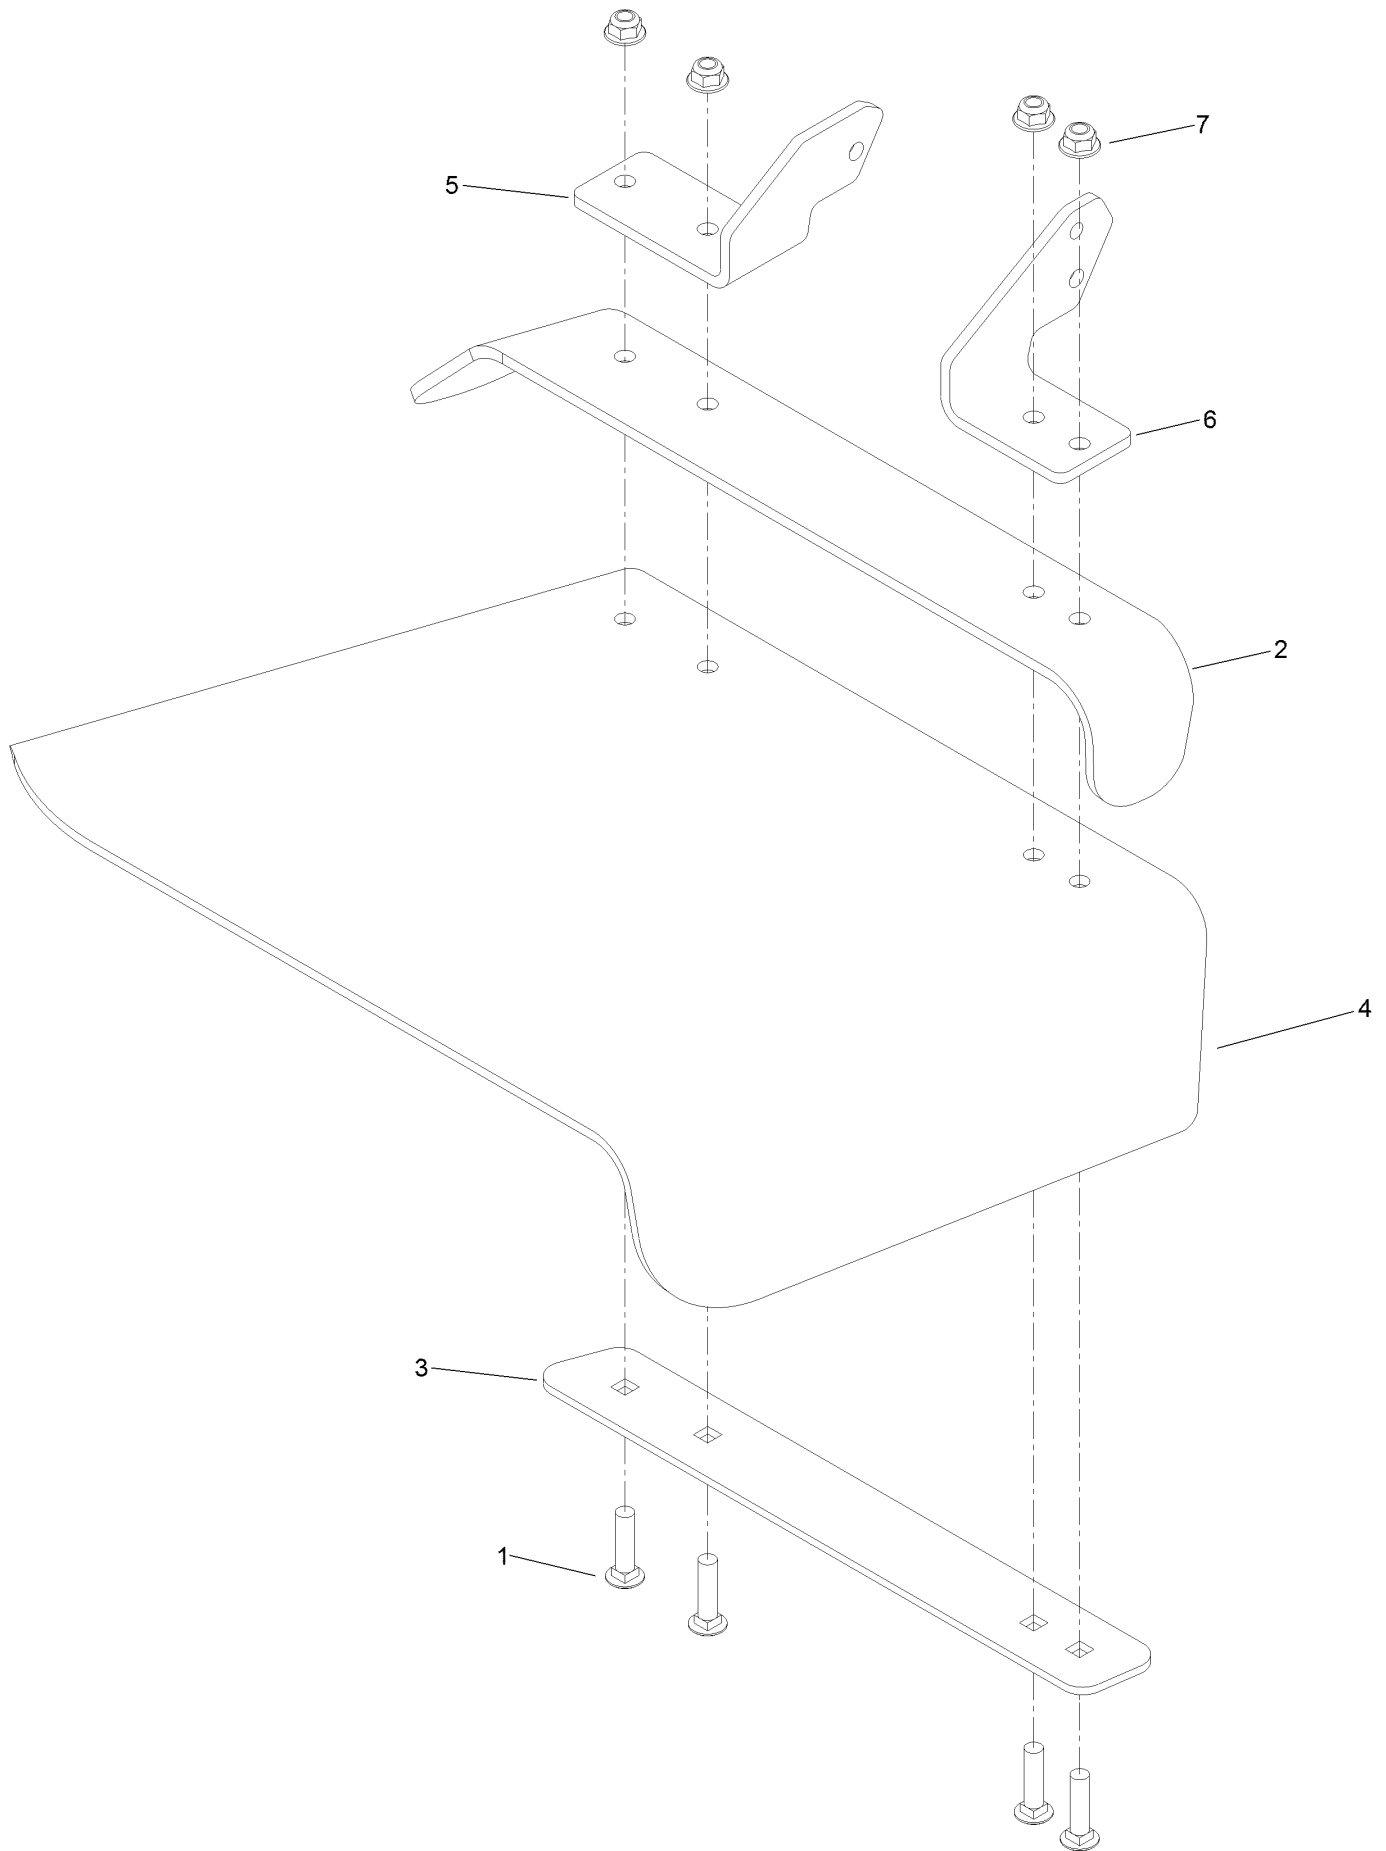


Deflector Assembly No. 120-2451 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	3231-4	4	Screw-CARR
2	106-3246-01	1	Deflector
3	106-3248-03	1	Strap-Discharge
4	110-0759	1	Deflector-Rubber

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	108-4059-01	1	Plate-Hinge, Rear
6	106-3253-01	1	Plate-Hinge, Front
7	104-8301	4	Nut-HF, NI


Idler Assembly

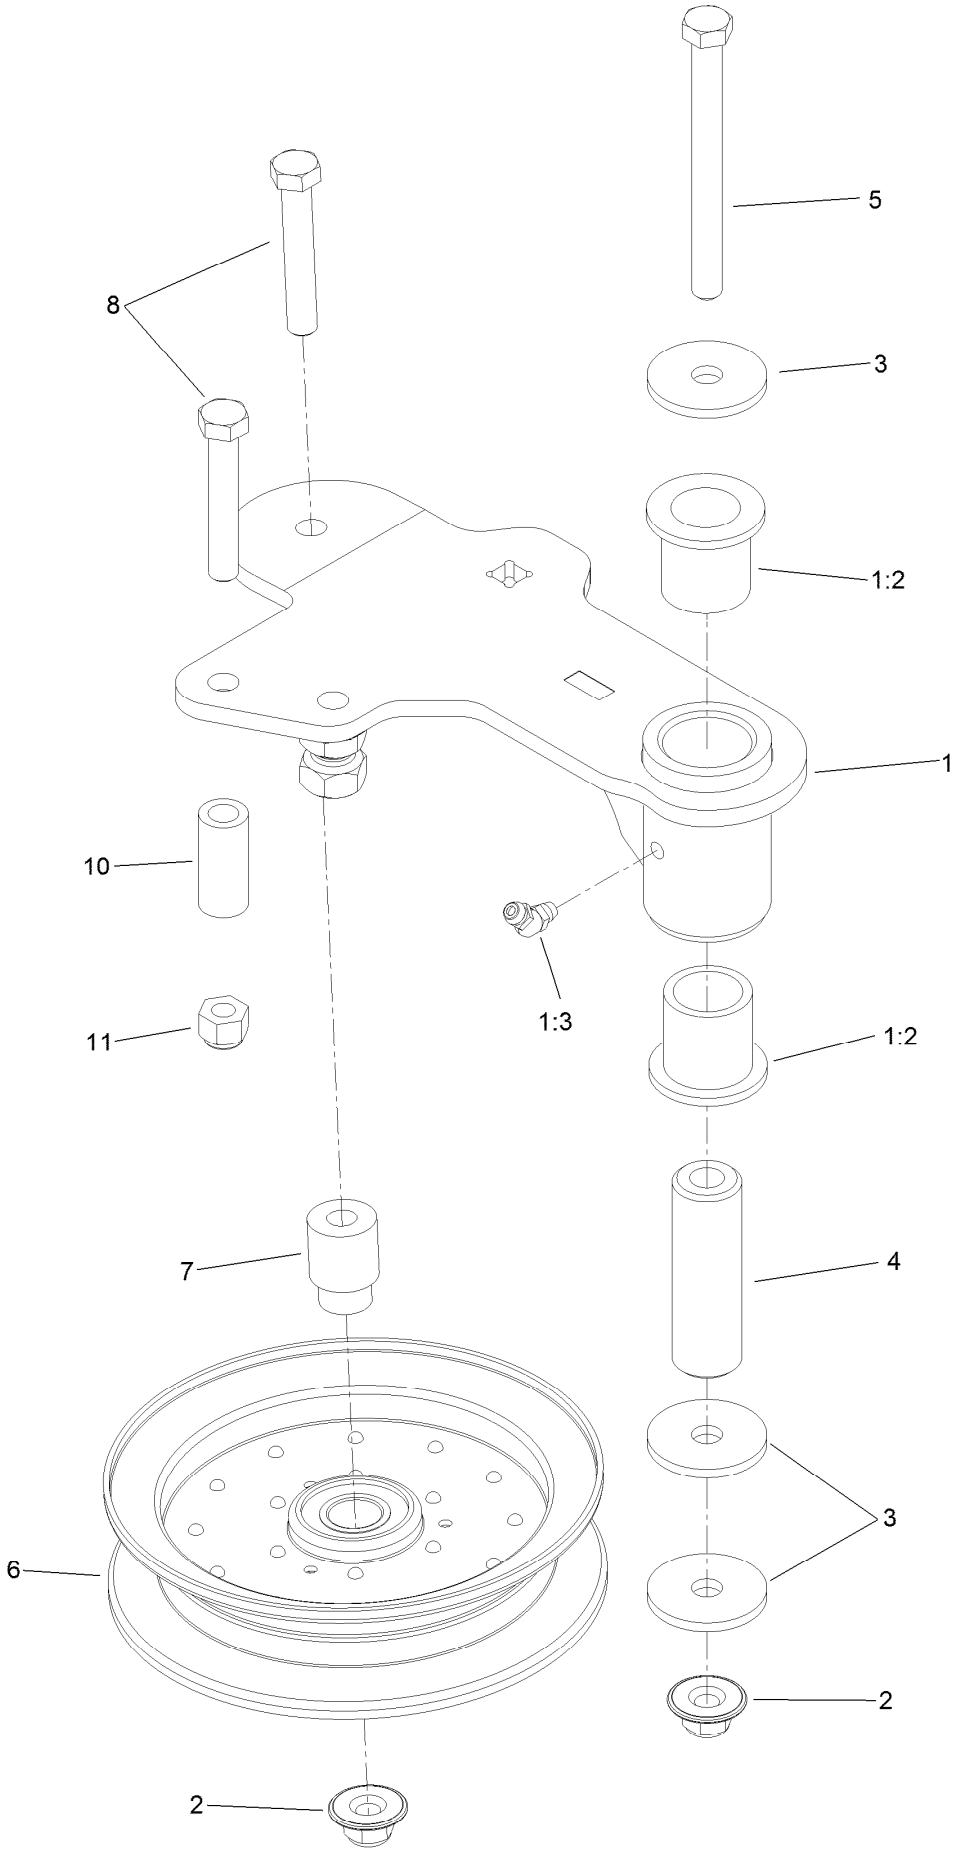

Idler Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	120-2501	1	Idler Arm ASM	5	98-5961	1	Screw-HH
1:2	1-303514	2	Bearing-Flanged	6	116-4668	1	Idler-Pulley, Flanged
1:3	1481	1	Fitting-Grease	7	112-4212	1	Mount-Pulley
2	109-6658	2	Nut-Flange, NI	8	323-11	2	Screw-HH
3	1-213069	3	Washer	10	104-0151	1	Spacer
4	114-5848	1	Spacer-Plain	11	3296-39	1	Nut-Lock, NI

Electrical Assembly

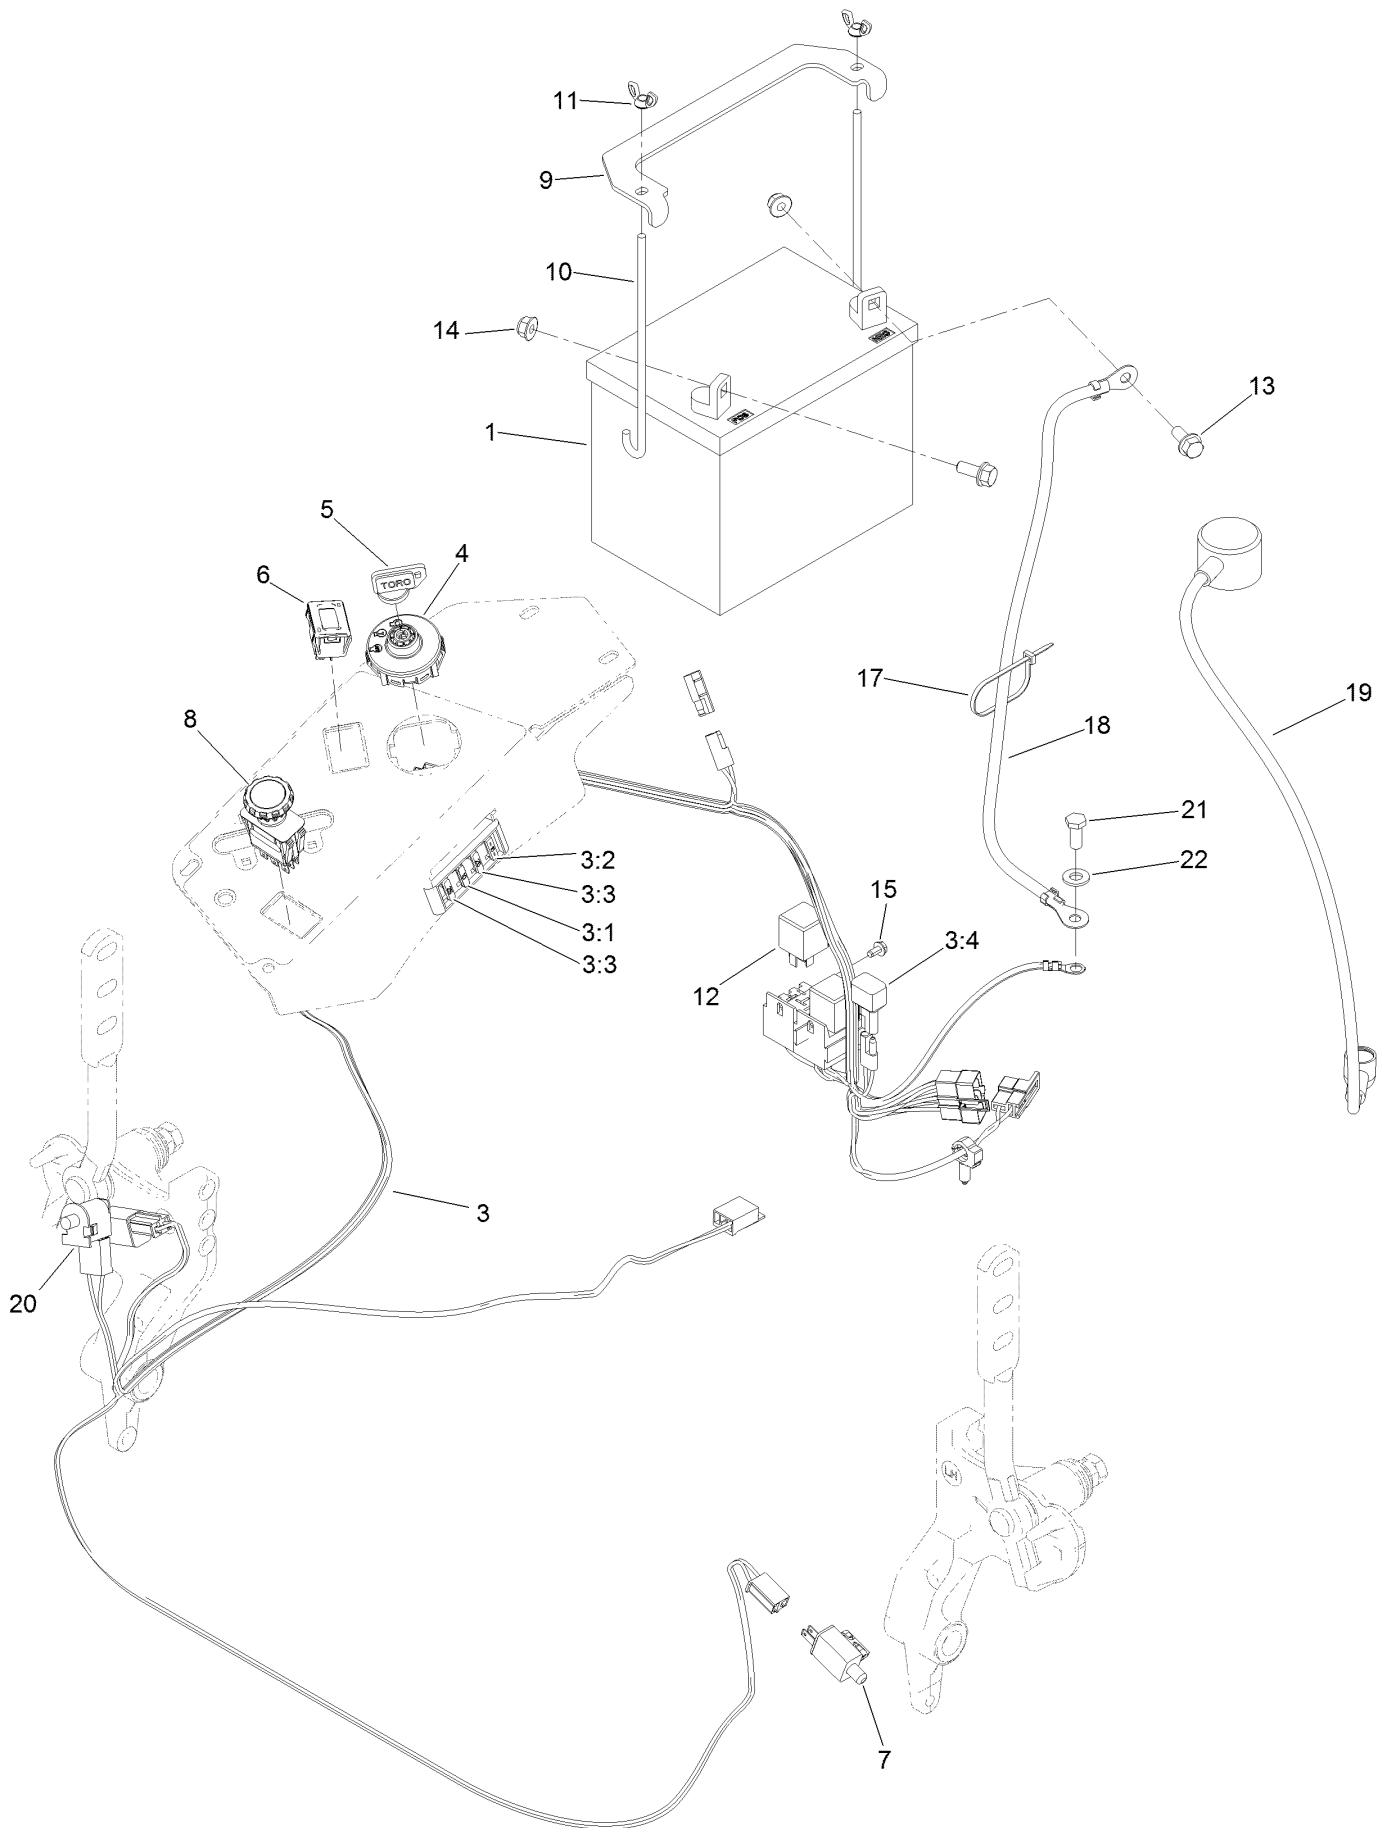

Electrical Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	104-8162	1	Battery-Dry	10	1-633651	2	Bolt-Holddown
3	117-2582	1	Harness-Wire	11	1-543792	2	Wingnut
3:1	218-578	1	Fuse-Blade, 10 Amp	12	1-643275	2	Relay
3:2	109355	1	Fuse-Blade, 15 Amp	13	3234-5	2	Screw-HHF
3:3	109102	2	Fuse-Blade, 25 Amp	14	104-8300	2	Nut-HF, NI
3:4	116-0053	1	Cap-Plug	15	104-2065	1	Screw-HWH
4	117-2221	1	Switch-Ignition	17	1-303287	3	Tie-Cable
5	63-8360	1	Key-Ignition	18	114-1218	1	Cable-Battery, Negative
6	120-2244	1	Hourmeter	19	115-3864	1	Cable-Battery, Positive
7	110-6765	2	Switch	20	82-2190	1	Switch-Bail
8	116-0124	1	Switch-PTO, 10 Amp	21	33114-020	1	Screw-HH
9	116-0042-03	1	Strap-Tie Down, Battery	22	33094-00	1	Washer-Plain

Attachments and Accessories

For 74142TE Z Master Commercial 2000 Series Riding Mower with 48 TURBO FORCE Side Discharge Mower

Product Name	Model/Part
Hypr-Oil 500 (quart)	114-4713
Hypr-Oil 500 (gallon).....	114-4714
Hypr-Oil 500-5 (5 gallon).....	114-4715
Bimini Folding Shade Assembly	115-4510
Light Kit.....	116-1154
Operator Controlled Discharge Chute Kit.....	117-3600
Blade-Hi Flo, 16.50in	117-7277-03
Blade-Mulch, 16.50in.....	117-7278-03
Recycler Kit	120-2401
Z Stand Kit.....	121-4811
Deluxe Seat Kit.....	121-7595
MVP Filter, Belt and Blade Kit.....	127-1631
Toro Deluxe Rider Cover.....	490-7319
Spark Arrestor Screen	75-6880
E-Z VAC Twin Soft Bagger.....	78569
E-Z Vac Blower and Drive Kit.....	78571
Filter Minder Gauge	99-4664
Trash Holder Kit.....	TC26

Notes:

Notes:

Notes:



Count on it.