

LAWN-BOY®

48cm REAR BAGGING MOWER

MODEL NO. 10910–8900001 & UP

PARTS CATALOG

PRODUCT CHANGES

In an effort to make improvements available to LAWN–BOY owners as quickly as possible, minor changes are incorporated into LAWN–BOY products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your Parts Catalog, see your LAWN–BOY Distributor or his Authorized LAWN–BOY Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Product two identification numbers; a model number and a serial number. The two numbers are stamped on a plate mounted on the deck. In any correspondence concerning the Product, supply model and serial numbers to assure that correct information and replacement parts are obtained.


To order replacement parts from an Authorized Service Dealer, supply the following information:

1. Model and serial number.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

 
Description	Page	Description	Page
Housing Assembly	3	Handle Assembly	8
Engine Assembly	4	Bag Assembly	9
Blade Assembly	5	Engine Breakdown	10–18
Rear Axle Assembly	6	Numeric Parts Index	19
Gear Case Assembly	7		

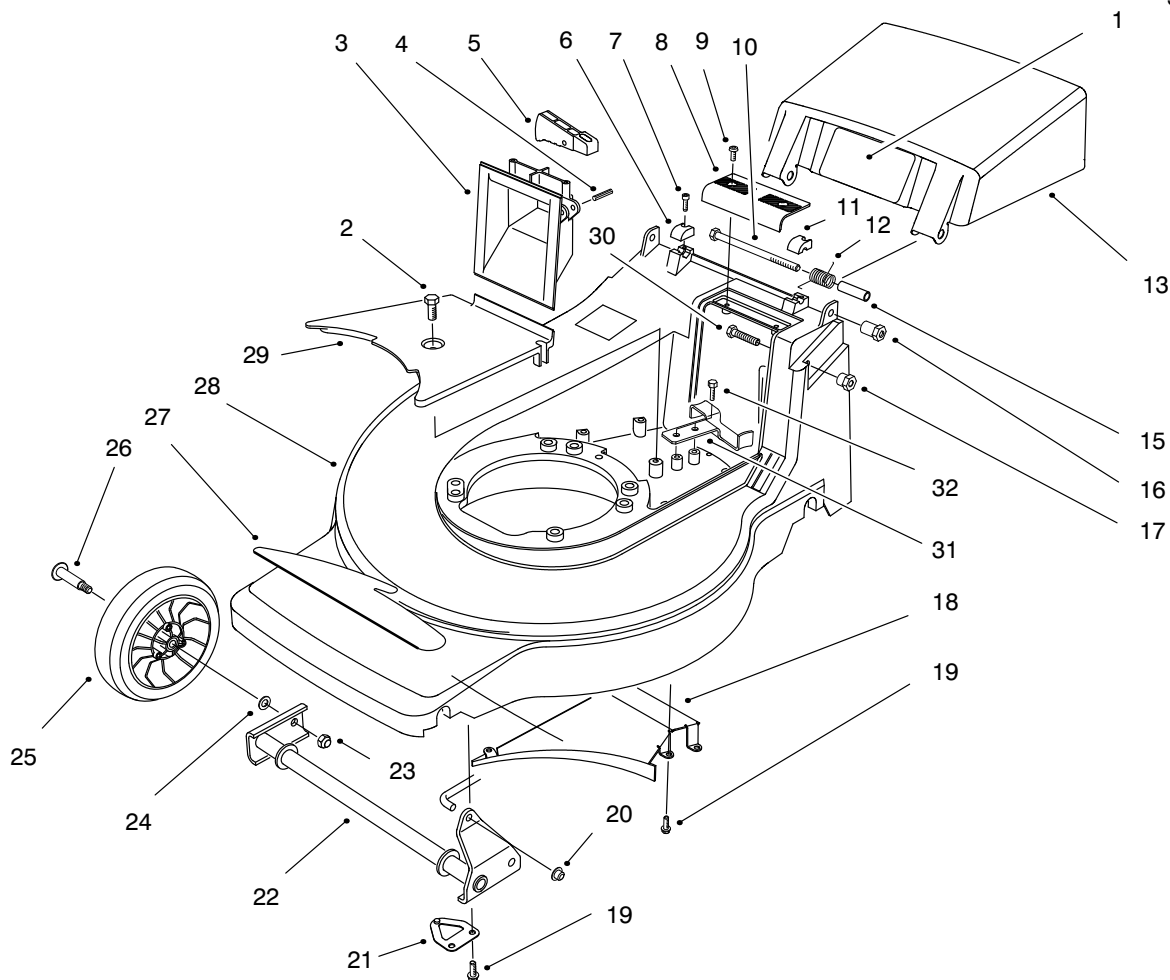

C-2667

HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	93-4105	Decal - Danger	1	17	93-7162	Spacer - Handle	2
2	32144-70	Screw - Tapping	1	18	71-7990	Ramp - Discharge	1
3	71-7870	Grip - Lower	1	19	32144-4	Screw - Tapping	8
4	3284-5	Pin - Groove	1	20	32112-1	Nut - Push	1
5	71-7930	Trigger - HOC	1	21	71-8830	Retainer - Shaft	2
6	71-7910	Cap - R.H. Hinge Bolt	1	22	92-9304	Pivot - Front	1
7	65-5210	Screw - Thread Forming	2	23	92-8819	Nut - Lock	2
8	71-7860	Grip - Upper	1	24	40-1940	Washer	2
9	32144-97	Screw - Pan Hd. Phillips	2	25	92-8810	Wheel & Tire Assembly	2
10	92-8806	Screw - Hex Hd. Cap	2	26	92-8811	Bolt - Wheel	2
11	71-7900	Cap - L.H. Hinge Bolt	1	27	92-8835	Decal - Deck 400XP	1
12	71-9840	Spring - Door	2	28	16-8889	Housing	1
13	17-1569	Door - Discharge (Incl. Ref. # 1)	1	29	71-7920	Cover - Belt	1
15	92-9313	Spacer - Door	2	30	92-8818	Screw - Hex Hd. Cap	2
16	93-7161	Spacer - Handle	2	31	71-7890	Guide - Belt Rear	1
				32	32144-4	Screw - HH	2

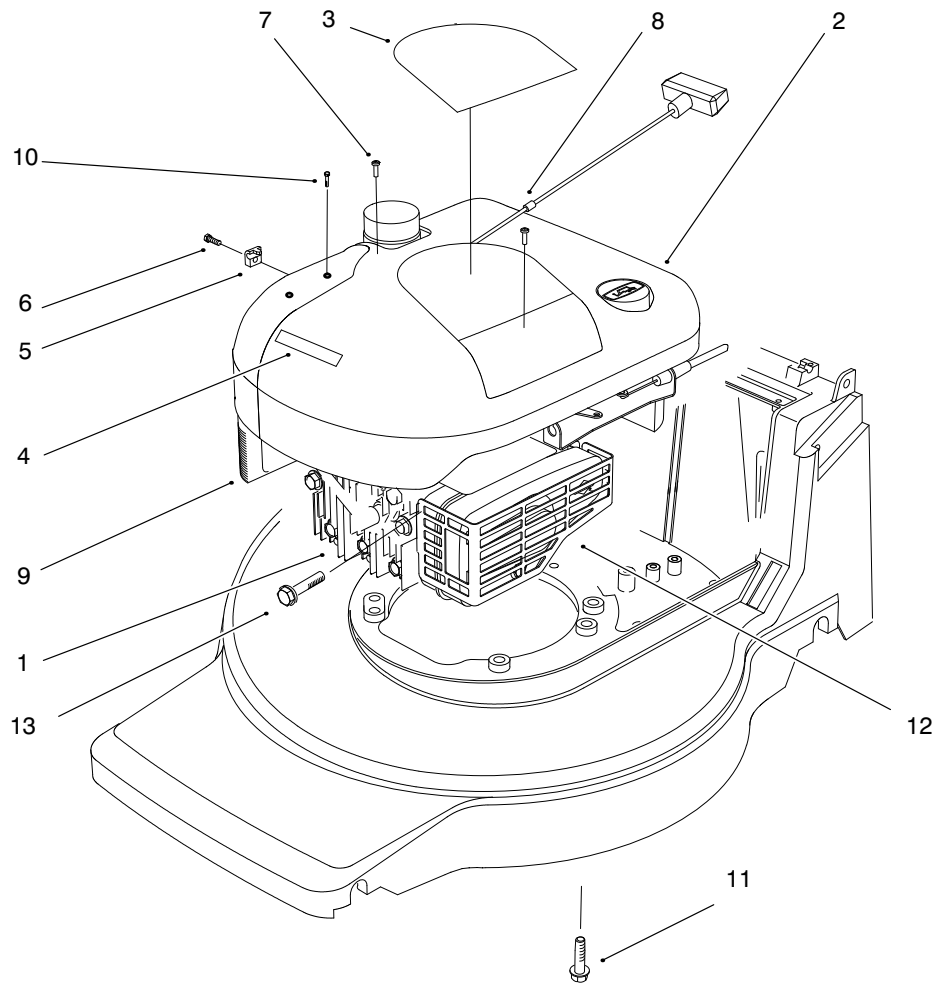 


C-2668

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1		Engine	1
2	95-1704	Shroud - Engine	1
3	95-5910	Decal - Recoil	1
4	95-0656	Applique - Shroud	1
5	2210-249	Clamp - Casing	1
6	93-8470	Screw - Clamp	1
7	95-1706	Screw - Mtg	2


Ref. No.	Part No.	Description	No. Used
8	2210-316	Rope - Stop	1
9	95-1709	Cover	1
10	95-1707	Screw - Air Cleaner	2
11	32144-102	Screw	3
12	82-8550	Shield-Muffler	1
13	32144-73	Screw-HWHTF	3

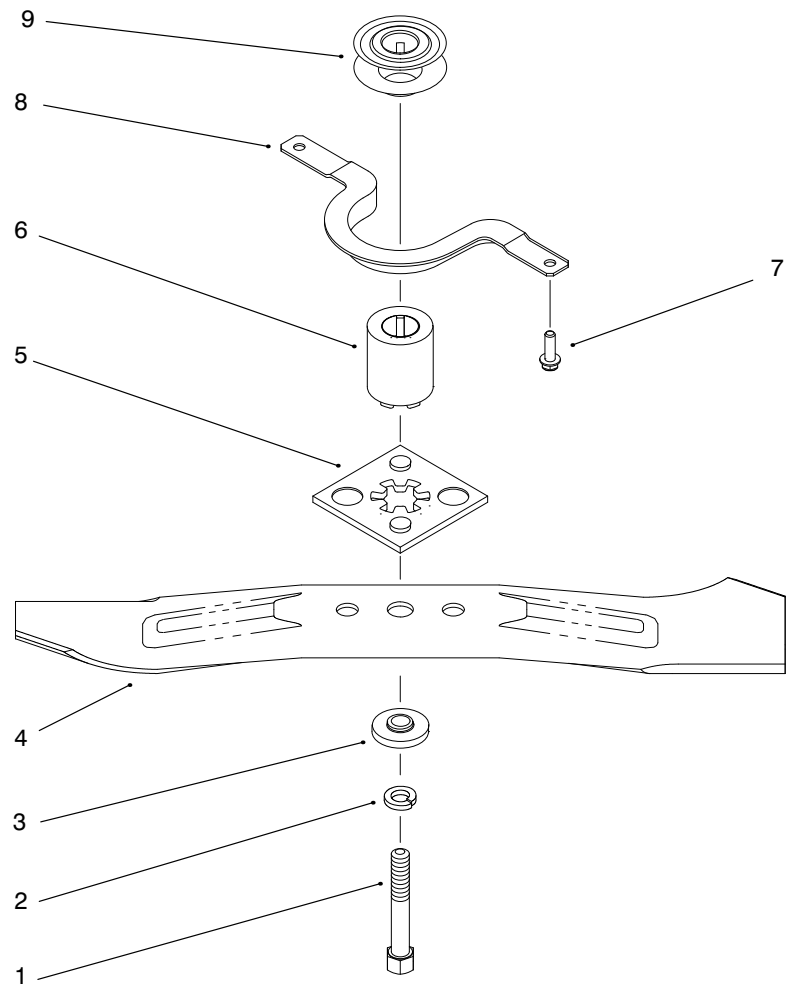 

C-2685

BLADE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	26-0670	Bolt - Blade	1	6	92-8807	Hub - Blade Driver	1
2	3253-22	Washer - Lock	1	7	32144-4	Screw - HH Tap	2
3	92-8626	Spacer - Blade	1	8	71-7960	Guide - Belt Engine	1
4	612079	Blade 19"	1	9	93-0278	Pulley - Driver	1
5	146046	Plate - Blade Driver	1				

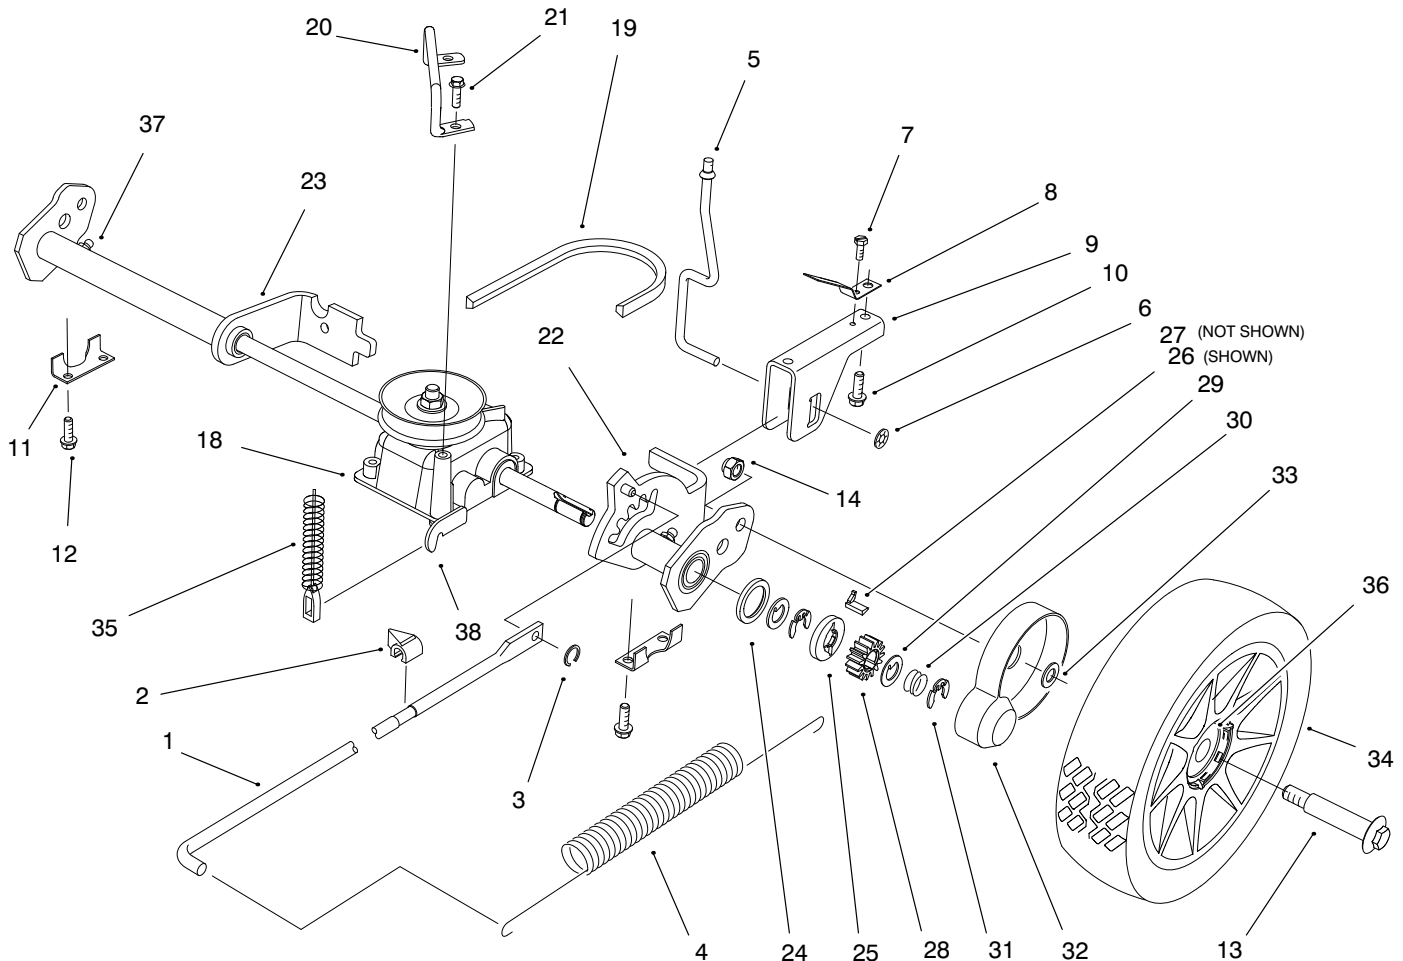 


C-2669

REAR AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92-9301	Rod - Link	1
2	71-7980	Indicator - HOC	1
3	32151-93	Ring - Grip	1
4	92-9300	Spring - Counterbalance	1
5	71-7840	Rod - Trigger	1
6	32112-13	Nut - Push	1
7	32144-31	Screw	1
8	71-8060	Spring - Trigger Retainer	2
9	71-8080	Saddle - HOC	1
10	63-8590	Screw	2
11	71-7770	Plate - Securing	2
12	32144-4	Screw - HH Tap	4
13	92-1057	Bolt - Shoulder	2
14	3296-59	Nut - Lock	2
18	71-9600	Gear Case Assembly	1
19	71-9450	V - Belt	1
20	95-2740	Retainer - Belt	1
21	32144-4	Screw - HH Tap	2
22	92-9311	Pivot Arm Assembly LH (Incl. Ref. #39-41)	1
23	92-9310	Pivot Arm Assembly RH (Incl. Ref. #39-41)	1

Ref. No.	Part No.	Description	No. Used
24	65-4710	Ring - Friction	2
25	65-4760	Washer	2
26	66-6050	Key - Rocking LH	1
27	66-6040	Key - Rocking RH	1
28	65-4750	Gear - Pinion	2
29	65-4740	Washer - Thrust	4
30	65-4720	Spring - Compression	2
31	65-2720	Ring - Retaining	4
32	74-1660	Cover - Wheel	2
33	74-1670	Spacer - Wheel	2
34	92-9318	Wheel & Tire Assembly (Incl. Ref. #36)	2
35	71-8310	Spring - Compression	1
36	27-6250	Bushing	2
37	302-26	Fitting - Grease	1
38	98-2039	Bracket - Traction	1
*39	47-2890	Bushing	1
*40	47-6730	Seal - Oil	1
*41	48-2060	Bearing - Needle	1

 * Not Illustrated

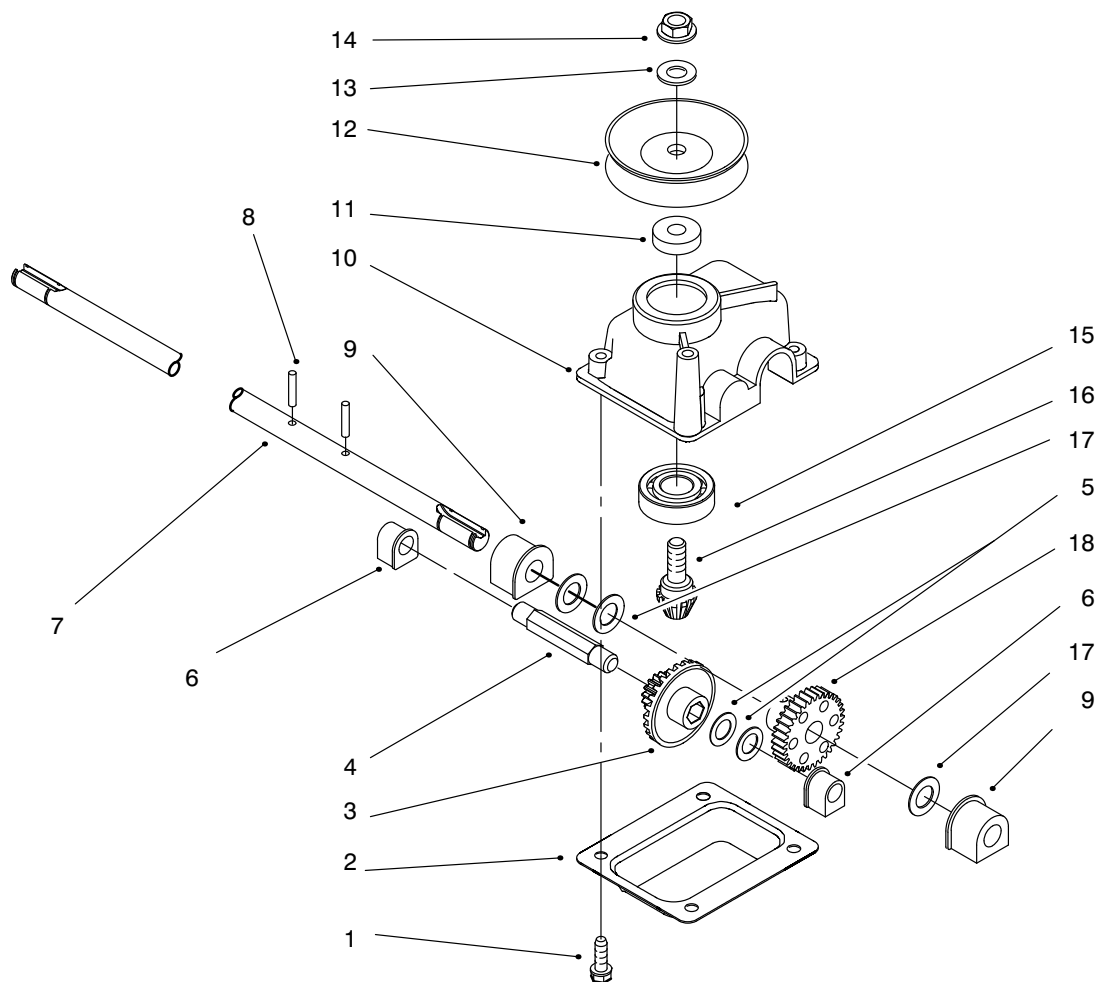


C-1292

GEAR CASE ASSEMBLY #71-9600

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	49-2040	Screw - Tapite	4	11	62-6660	Spacer	1
2	614668	Cover - Gear Case	1	12	71-9610	Pulley - Half	2
3	55-3760	Pinion - 15 Tooth	1	13	3256-24	Washer	1
4	614696	Shaft - Intermediate	1	14	3296-5	Nut	1
5	36-4791	Washer	2	15	38-7820	Bearing - Ball	1
6	60-8750	Bushing	2	16	60-8890	Gear - Bevel Pinion	1
7	71-9620	Shaft - Output	1	17	36-4780	Washer - Thrust	3
8	32121-114	Pin - Groove	2	18	614596	Gear 34 Tooth	1
9	60-8850	Bushing - Output	2	*	71-9600	Gear Case Ass'y Complete	1
10	614578	Cover - Gear Case	1				

 * Not Illustrated

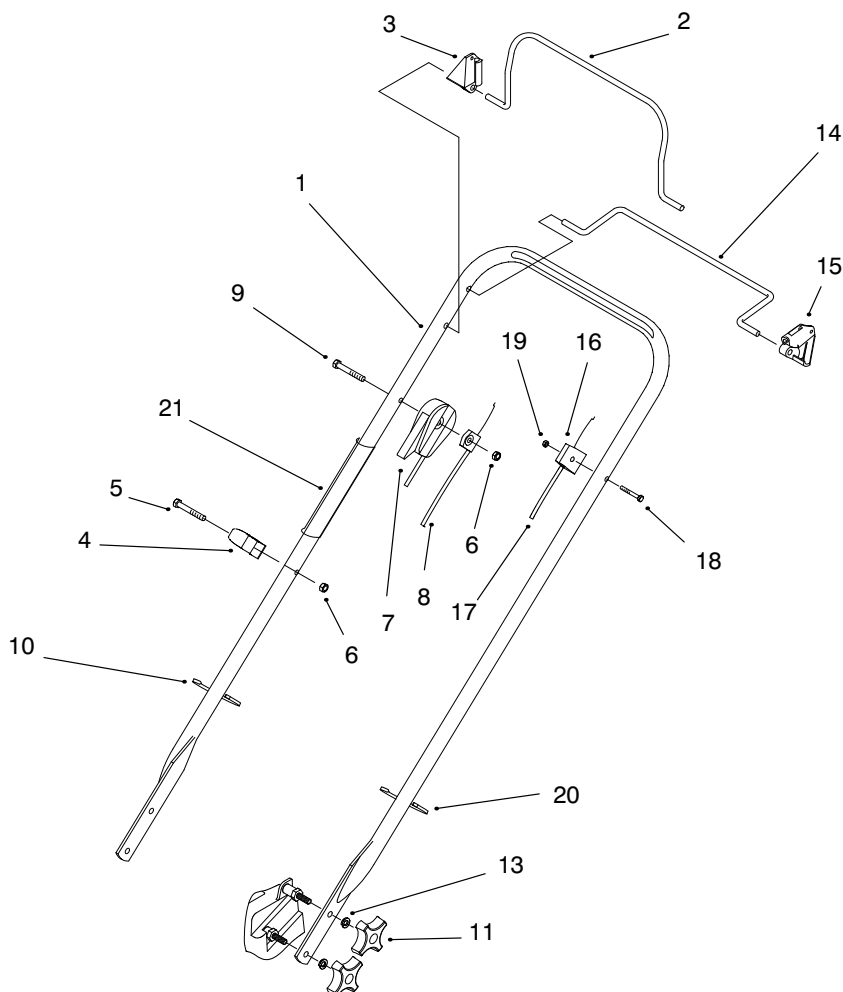


C-2670

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92-8800	Handle	1
2	92-1002	Bail - Flywheel Brake	1
3	92-5412	Stop - Pivot	1
4	93-7383	Guide - Rope	1
5	321-53	Screw - HH	1
6	3296-73	Nut - Lock Insert	2
7	93-4379	Cable Throttle	1
8	92-9315	Cable - Flywheel Brake	1
9	321-49	Screw - HH	1
10	3290-378	Tie - Cable	1

Ref. No.	Part No.	Description	No. Used
11	93-7159	Knob	4
13	3253-33	Washer - Lock	4
14	92-1001	Bail - Control	1
15	92-5412	Stop - Pivot	1
16	92-7729	Anchor - Cable	1
17	92-9316	Cable Traction	1
18	321-48	Screw - HH	1
19	3296-73	Nut - Lock (Insert)	1
20	3290-378	Tie - Cable	1
21	93-7266	Decal - Operation	1

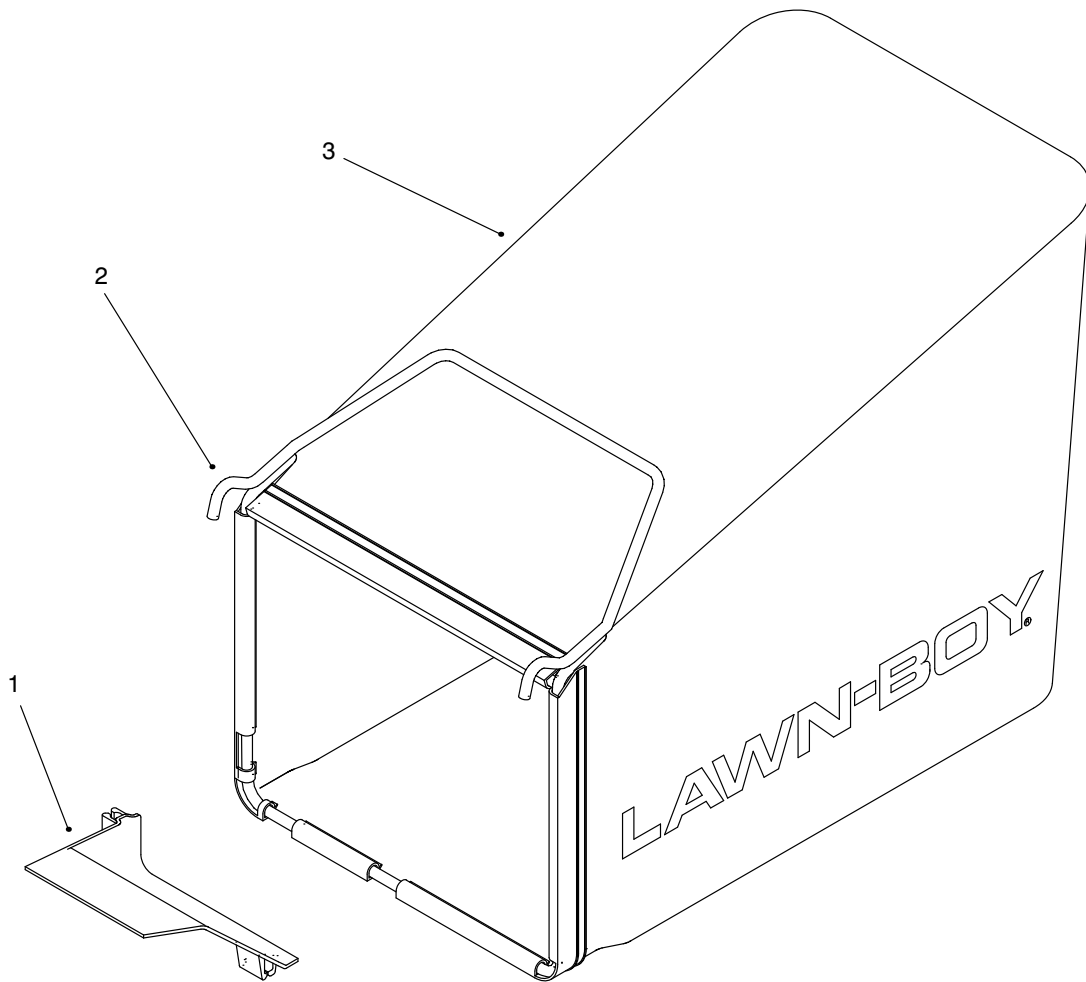 


C-1890

BAG ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	71-3750	Ramp - Grass Bag	1
2	71-8180	Frame	1

Ref. No.	Part No.	Description	No. Used
3	92-8890	Bag - Grass	1

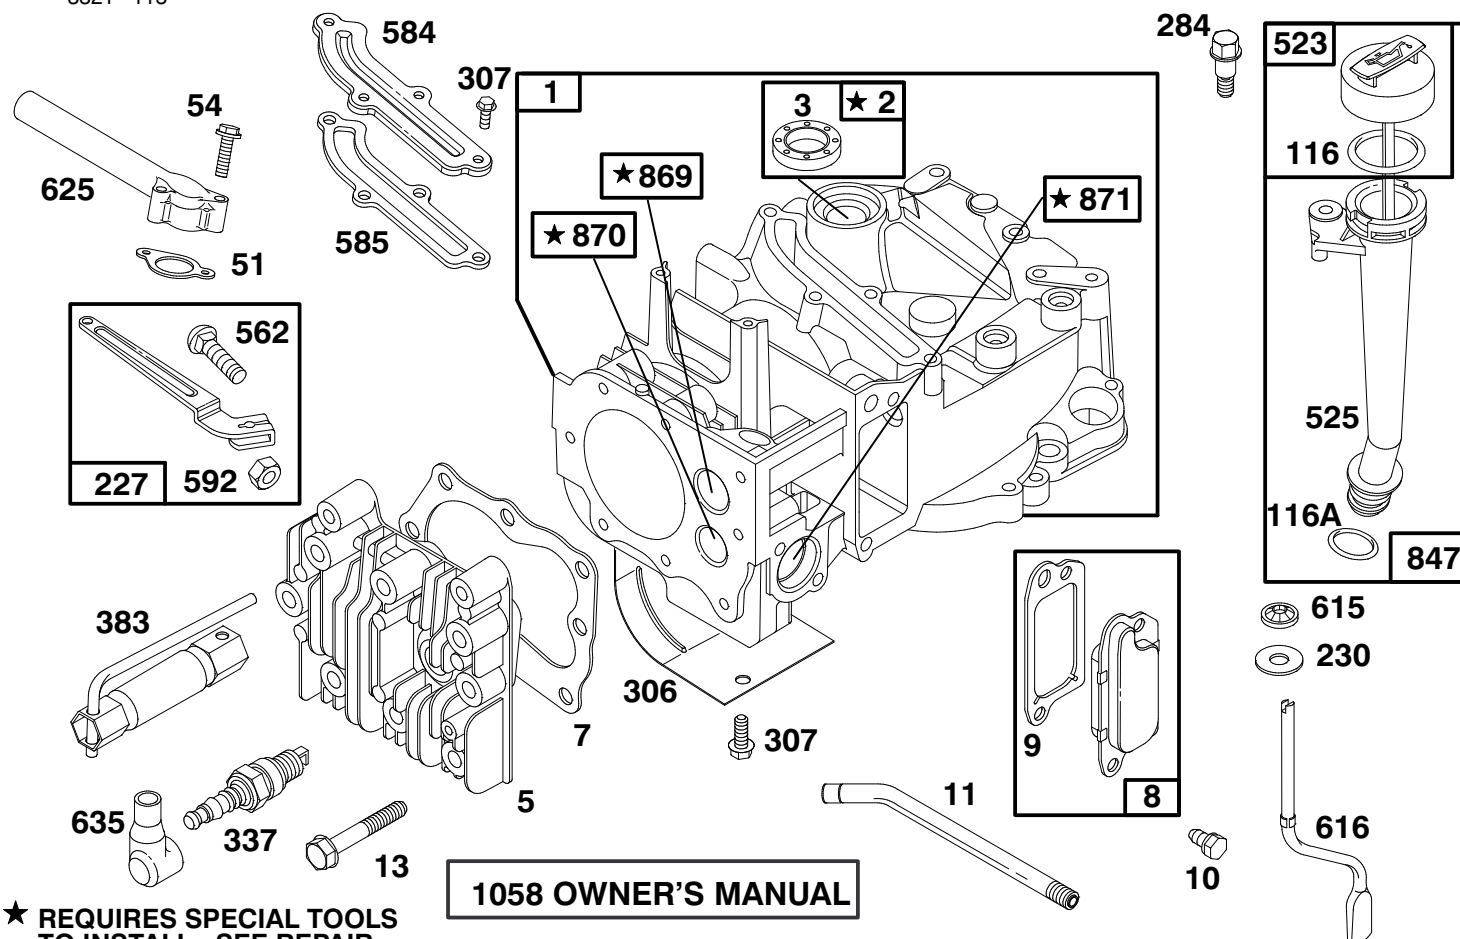 

ENGINE BRIGGS & STRATTON MODEL 12U802-1733-E1


Ref. No.	Part No.	Description	No. Used
1	493260	Cylinder Assembly	1
2	399269	Bushing – Cylinder	1
★3	299819	Seal – Oil	1
5	214626	Head – Cylinder	1
★Ø7	272916	Gasket – Cylinder Head	1
8	495786	Breather – Valve Chamber	1
★Ø9	272481	Gasket – Breather	1
10	94650	Screw – Breather Mtg.	1
11	231933	Tube – Breather	1
13	94547	Screw – Cylinder Head	1
★51	272199	Gasket – Intake Elbow	1
54	94526	Screw – Intake Elbow Mtg.	1
★116	280393	Seal – O-Ring	1
★116A	280966	Seal – O-Ring	1
227	492349	Lever Assembly – Gov.	1
230	67072	Washer – Gov. Crank	1
284	94511	Screw – Hex. Head	1
306	224324	Shield – Cylinder	1
307	94515	Screw – Hex.	1

Ref. No.	Part No.	Description	No. Used
337	802592	Plug – Spark	1
383	89838	Wrench – Spark Plug	1
523	495264	Cap With Dipstick – Oil Filler	1
525	495265	Tube – Oil Filler	1
562	94852	Bolt – Governor Lever	1
584	224328	Baffle – Cylinder	1
★585	272238	Gasket – Baffle Plate	1
592	231082	Nut – Hex.	1
615	94474	Fastener	1
616	263175	Crank – Governor	1
625	497465	Tube – Fuel Intake	1
635	66538	Elbow – Spark Plug	1
847	495263	Oil Fill Tube Assy.	1
869	213512	Seat – Intake Valve	1
870	213513	Seat – Exhaust Valve	1
871	262001	Guide – Exhaust Valve	1
1058	273693	Note: 63709 Guide – Intake Valve Owner's Manual	

★ Included in Gasket Set—Part No. 497316.

Ø Included in Valve Overhaul Gasket Set—Part No. 498528.

 Obtain Parts from Briggs & Stratton

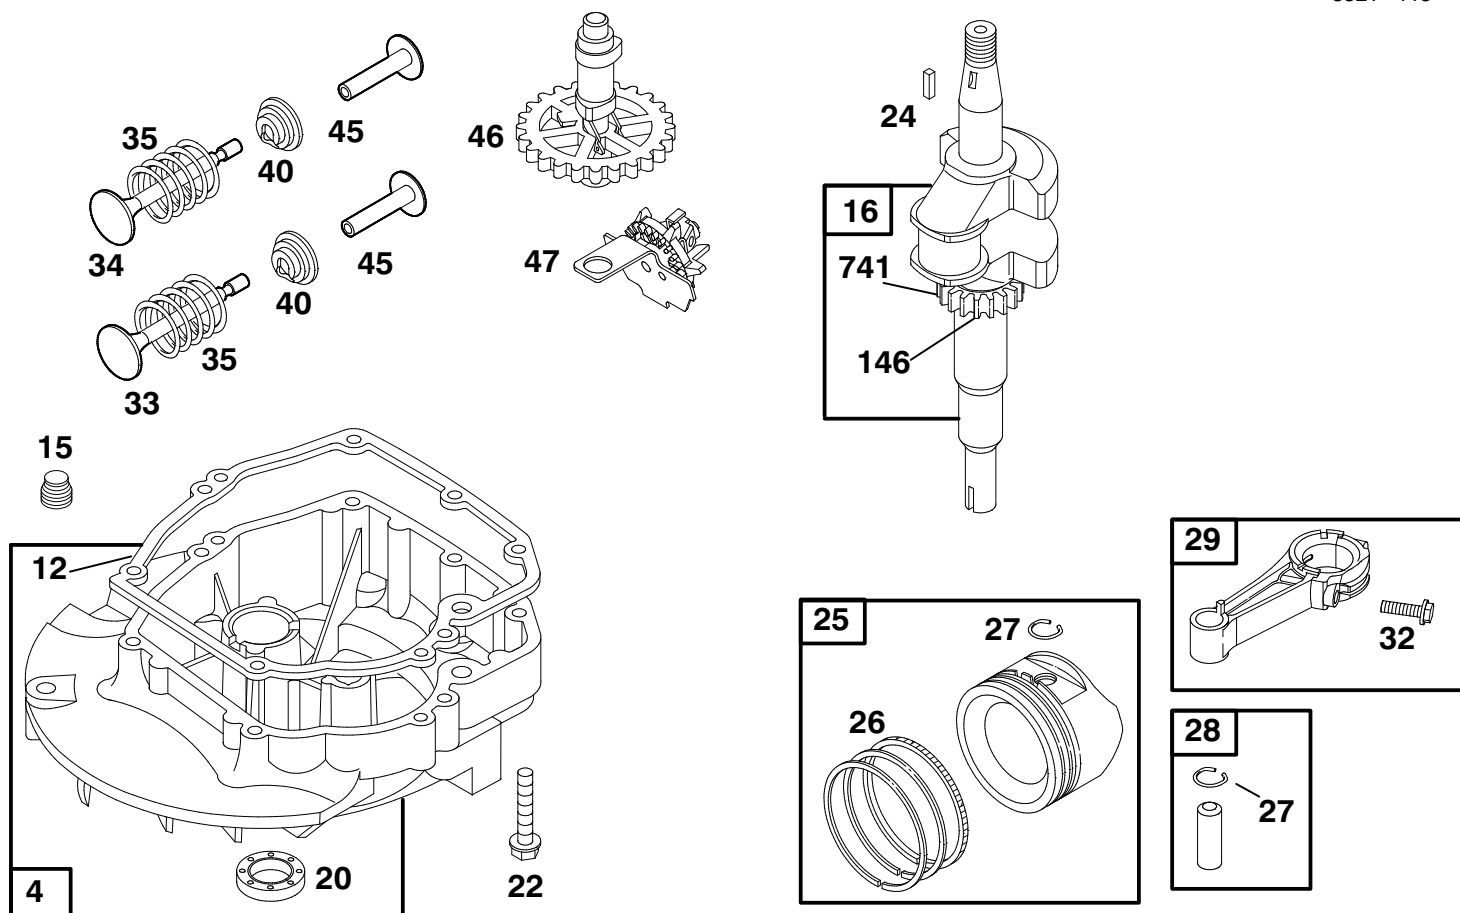

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 12U802-1733-E1

Ref. No.	Part No.	Description	No. Used
4	493279	Sump – Engine	1
★12	272198	Gasket – Crankcase	1
15	94880	Plug – Oil Drain	1
16	498576	Crankshaft	1
★20	399781	Seal – Oil	1
22	94220	Screw – Hex.	1
		Note: 94612 Screw – Hex. (One Used in Hole Nearest Breather)	
24	222698	Key – Flywheel	1
25	499429	Piston Assembly (Standard)	1
	499430	Piston Assembly (0.010" O.S.)	1
	499431	Piston Assembly (0.020" O.S.)	1
	499432	Piston Assembly (0.030" O.S.)	1
26	499425	Ring Set (Standard)	1

Ref. No.	Part No.	Description	No. Used
	499426	Ring Set (0.010" O.S.)	1
	499427	Ring Set (0.020" O.S.)	1
	499428	Ring Set (0.030" O.S.)	1
27	263190	Lock – Piston Pin	1
28	499423	Pin – Piston (Standard)	1
29	499424	Rod Assembly – Connecting	1
32	94699	Screw – Connecting Rod	1
33	262651	Valve – Exhaust	1
34	262652	Valve – Intake	1
35	262224	Spring – Valve	1
40	93312	Retainer – Valve Spring	1
45	262204	Tappet – Valve	1
46	498275	Gear – Cam	1
47	493737	Slinger – Oil	1
146	94388	Key – Timing	1
741	262598	Gear – Timing	1

★ Included in Gasket Set—Part No. 497316.

 Obtain Parts from Briggs & Stratton

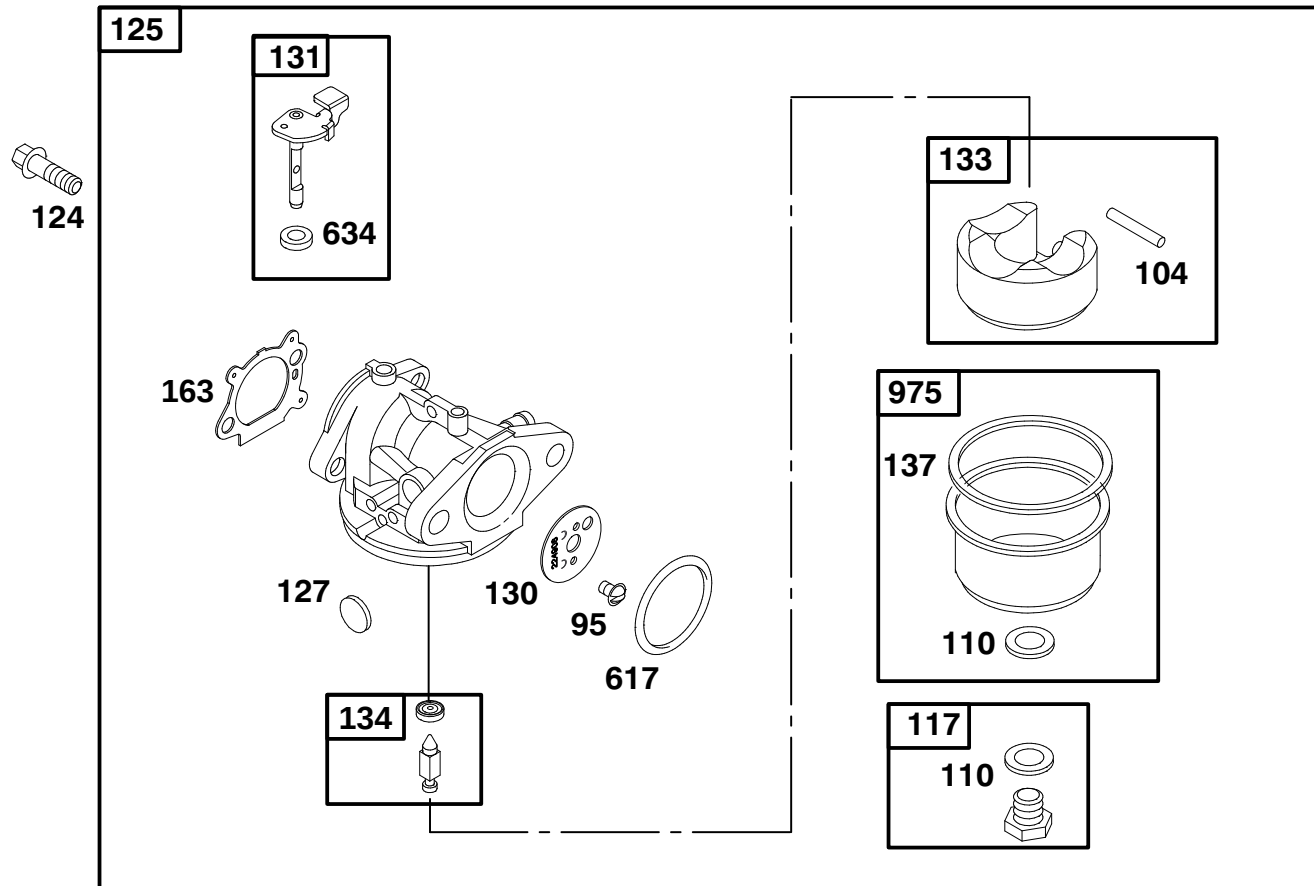

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12U802-1733-E1

Ref. No.	Part No.	Description	No. Used
95	T94098	Screw – Throttle Valve Mtg.	1
●104	T231371	Pin – Float Hinge	1
●◆110		Gasket–Sealing (Sold in Kit Only)	1
117	498975	Jet – Main (Standard) Note: 496495 Jet – Main (High Altitude)	1
124	94525	Screw – Carburetor Mtg.	1
125	498966	Carburetor	1
●127		Plug – Welch (Sold in Kit Only)	1
130	224908	Valve – Throttle	1

Ref. No.	Part No.	Description	No. Used
131	T493267	Shaft – Throttle	1
133	398187	Float – Carburetor	1
●134	398188	Kit – Needle/Seat	1
●◆137		Gasket – Bowl	1
		(Sold in Kit Only)	1
★●◆163	272653	Gasket – Air Cleaner	1
●◆617	270344	Seal – Fuel Intake Tube	1
●◆634		Washer – Shaft	1
		(Sold in Kit Only)	
975	493640	Bowl – Carburetor	1

 
★ Included in Gasket Set—Part No. 497316.

Obtain Parts from Briggs & Stratton

12

- Included in Carburetor Kit—Part No. 498260.

◆ Included in Carburetor Gasket Set—Part No. 498261.

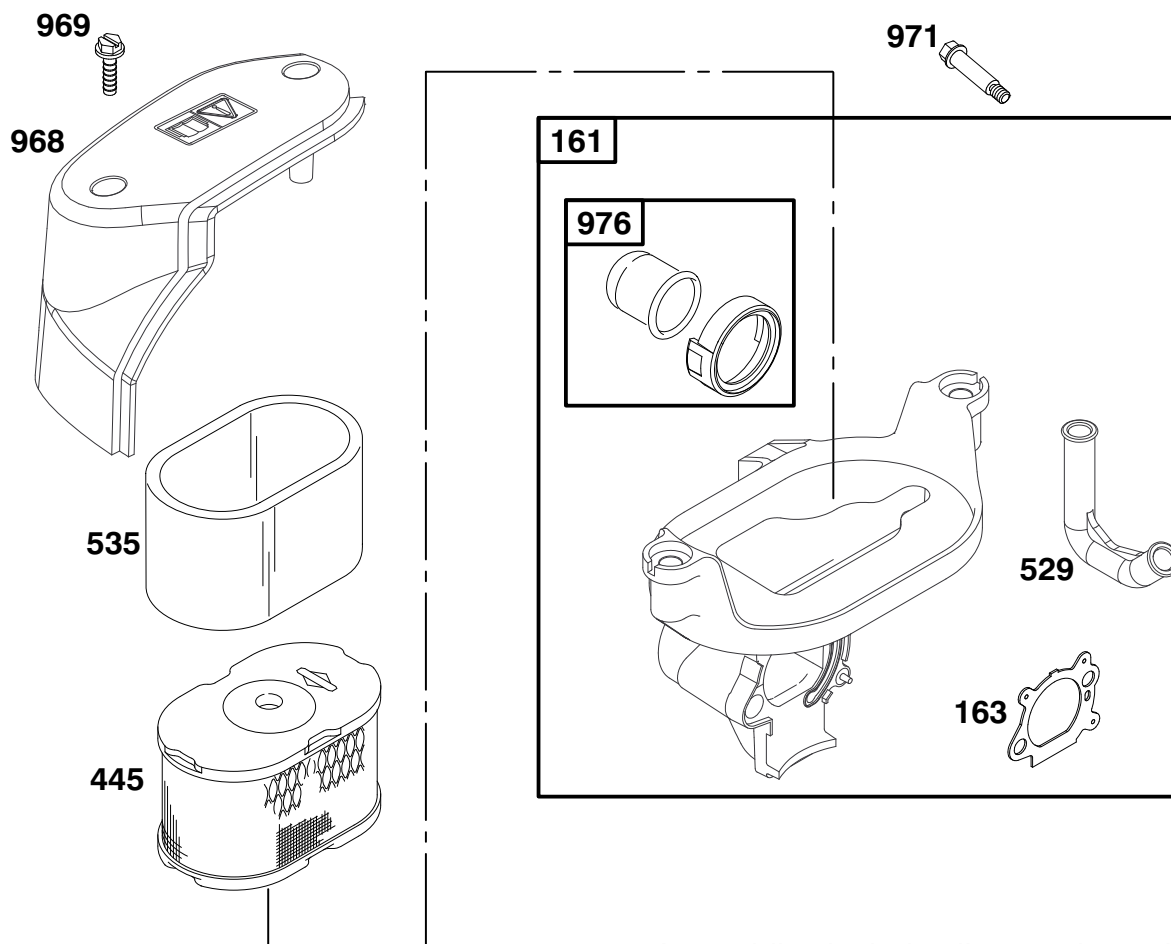

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12U802-1733-E1

Ref. No.	Part No.	Description	No. Used
161	497915	Base – Air Cleaner	1
★◆◆163	272653	Gasket – Air Cleaner	1
445	497725	Filter – Air	1
529	281556	Grommet – Breather	1
535	273185	Filter – Air	1




Ref. No.	Part No.	Description	No. Used
968	281535	Cover – Air Cleaner	1
969	94777	Screw – Slotted Hex.	1
971	94655	Screw – Shoulder	1
976	496115	Primer – Carburetor	1

★ Included in Gasket Set—Part No. 497316.

Obtain Parts from Briggs & Stratton

- Included in Carburetor Kit—Part No. 498260.

   ◆ Included in Carburetor Gasket Set—Part No. 498261.

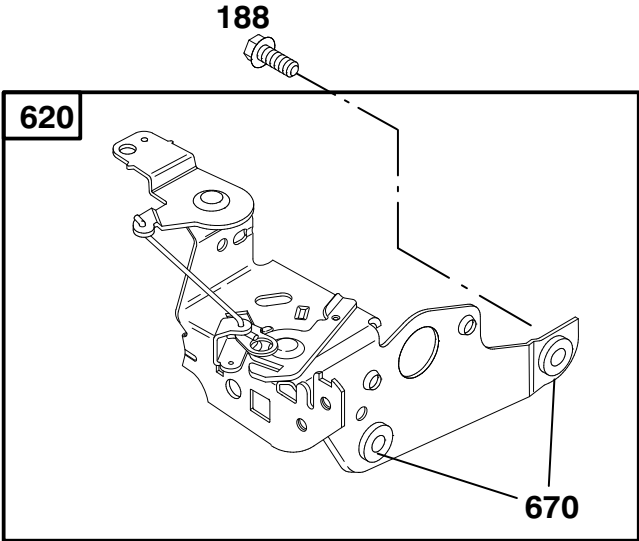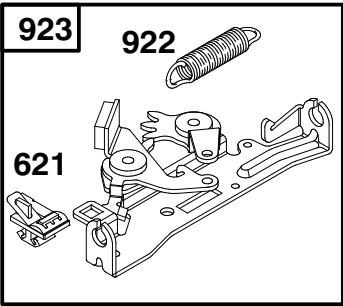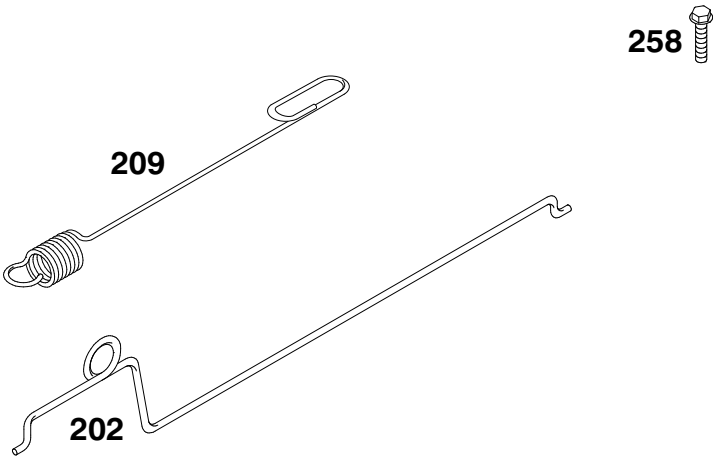

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 12U802-1733-E1

Ref. No.	Part No.	Description	No. Used
188	94644	Screw – Hex.	1
202	262579	Link – Governor	1
209	263046	Spring – Governor	1
258	94512	Screw–Hex. Head	1
620	497837	Bracket – Carburetor	1

Ref. No.	Part No.	Description	No. Used
621	396847	Switch – Stop	1
★670	493823	Spacer – Bracket (Includes 2)	2
922	262640	Spring–Brake	1
923	493442	Brake Assembly	1

★ Included in Gasket Set–Part No. 497316.



 
Obtain Parts from Briggs & Stratton

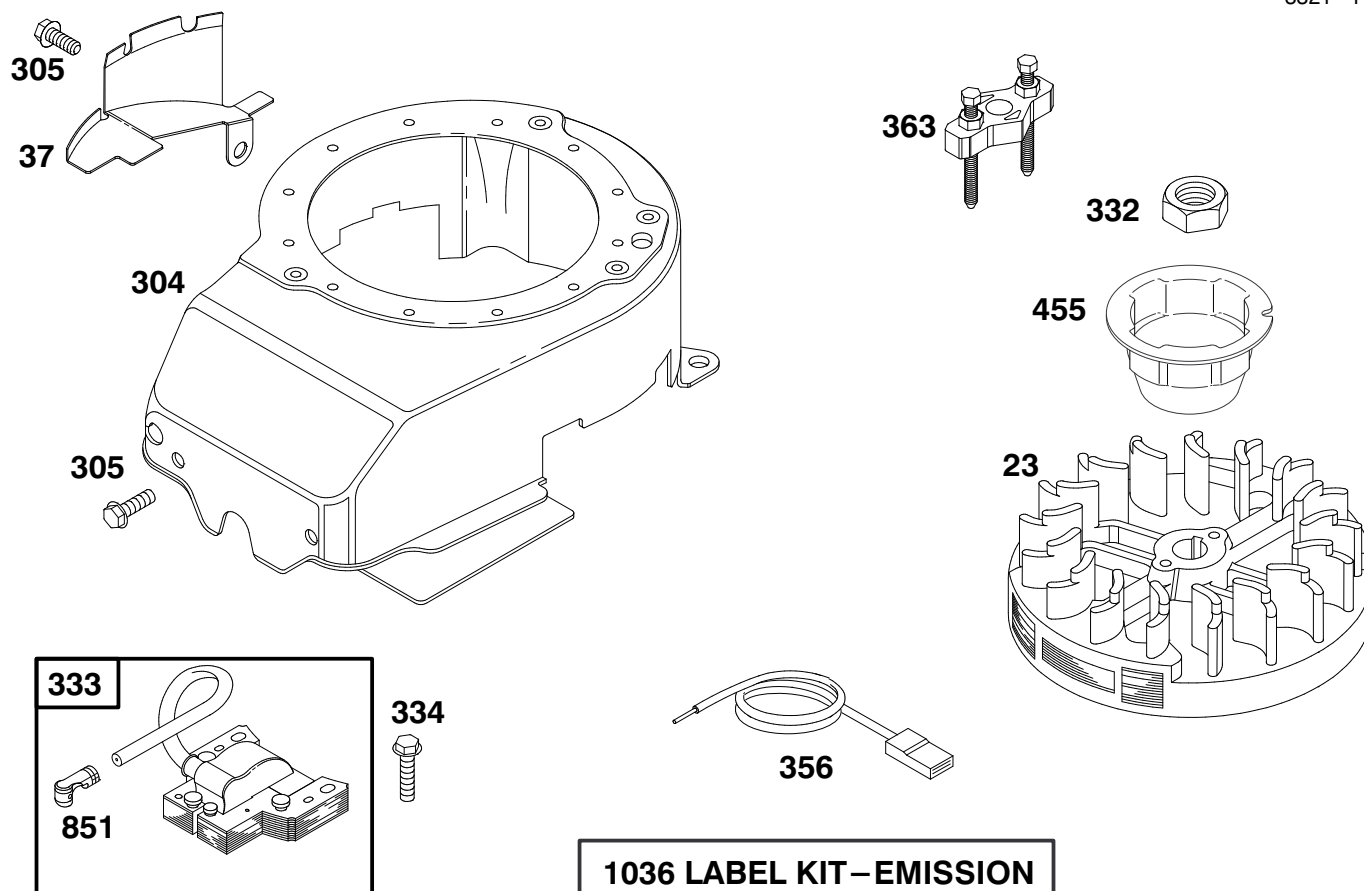

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12U802-1733 – E1

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
23	492177	Flywheel	1	334	94731	Screw – Hex.	1
37	224511	Guard – Flywheel	1	356	497833	Wire – Ground	1
304	493293	Housing – Blower	1	363	19069	Flywheel Puller	1
305	94744	Screw – Hex.	1	455	225121	Cup – Starter	1
332	94877	Nut – Flywheel	1	851	493880	Terminal – Ignition Cable	1
333	802574	Armature – Magneto	1	1036	499341	Label Kit – Emission	1

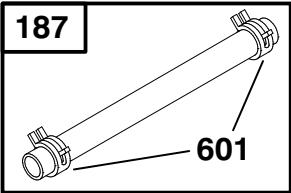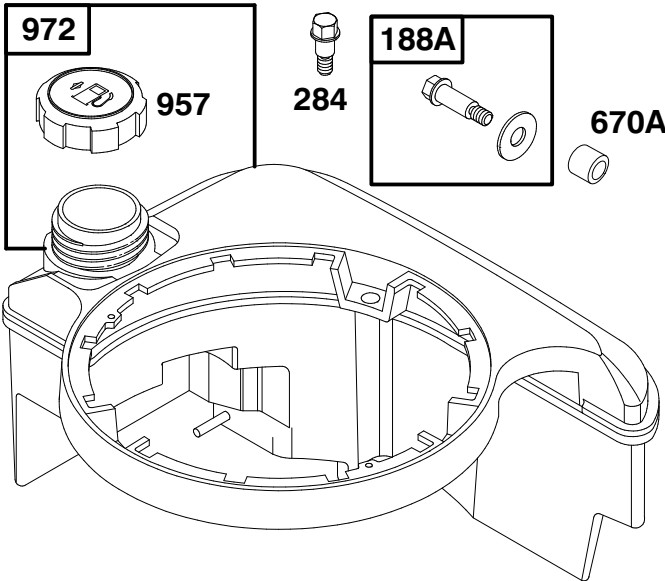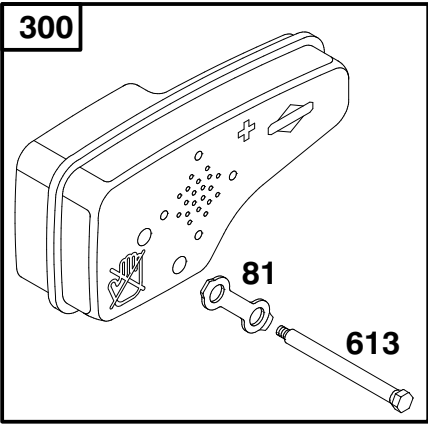   


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12U802-1733-E1

Ref. No.	Part No.	Description	No. Used
81	223664	Lock – Muffler Screw	1
187	298049	Hose – Fuel (Cut to Required Length).	1
188A	398540	Screw – Shoulder	1
284	94511	Screw – Shoulder	1
300	496106	Muffler – Exhaust	1

Ref. No.	Part No.	Description	No. Used
601	95162	Clamp – Hose	1
613	94231	Screw – Shoulder	1
670A	280512	Spacer – Fuel Tank	1
957	397974	Cap – Fuel Tank	1
972	495224	Tank Assembly – Fuel	1




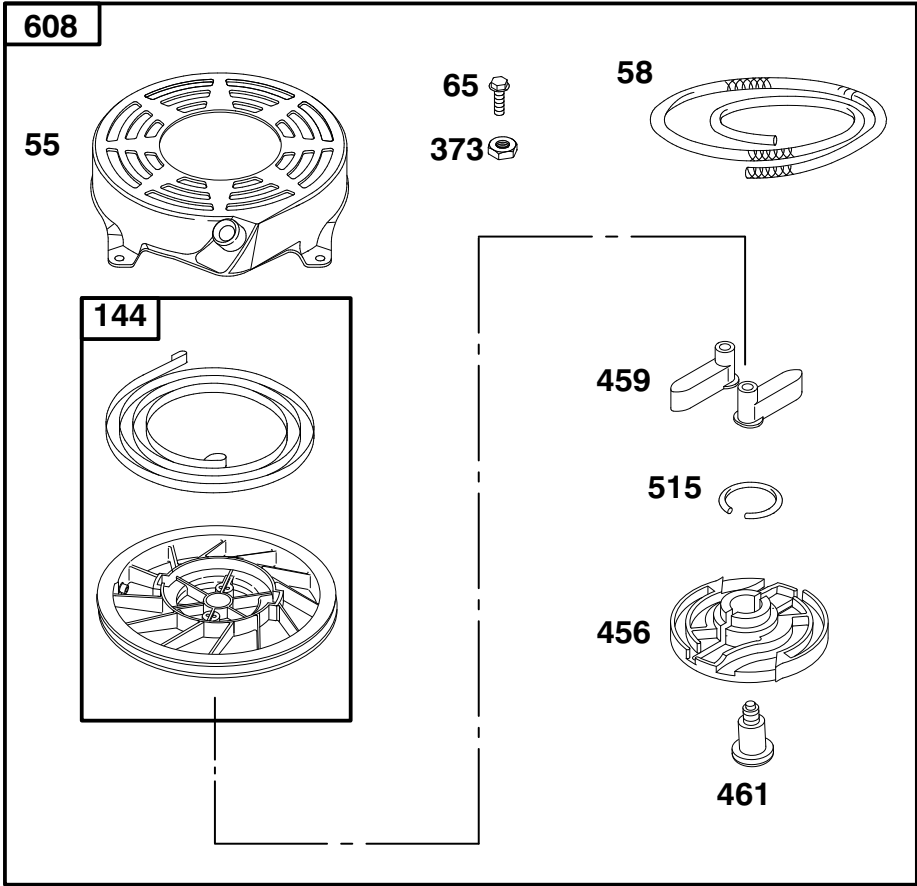 


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12U802-1733-E1

Ref. No.	Part No.	Description	No. Used
55	497440	Housing – Rewind Starter	
58	280399	Rope – Rewind Starter (Cut to Required Length).	1
59	T224467	Insert – Starter Grip	1
60	T494212	Handle – Rewind Starter	1
65	94904	Screw – Hex.	1
144	498144	Pulley – Rope Start	1

Ref. No.	Part No.	Description	No. Used
373	94908	Nut – Hex.	1
456	281503	Retainer – Rewind Starter	1
459	281505	Pawl – Starter	1
461	94943	Pin – Starter	1
515	263073	Spring – Torsion	1
608	497680	Starter – Rewind	1

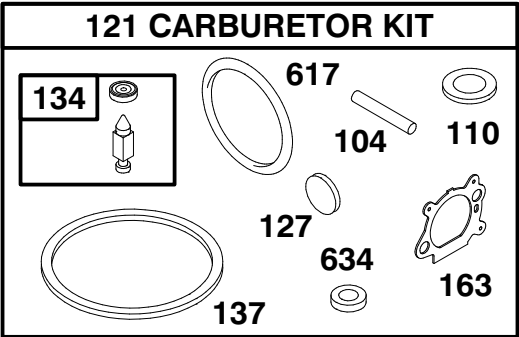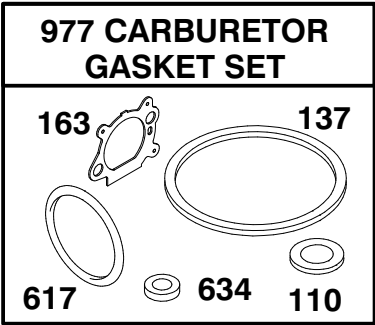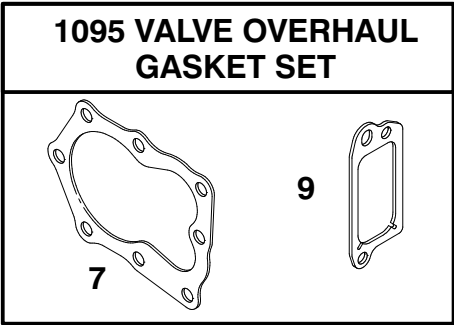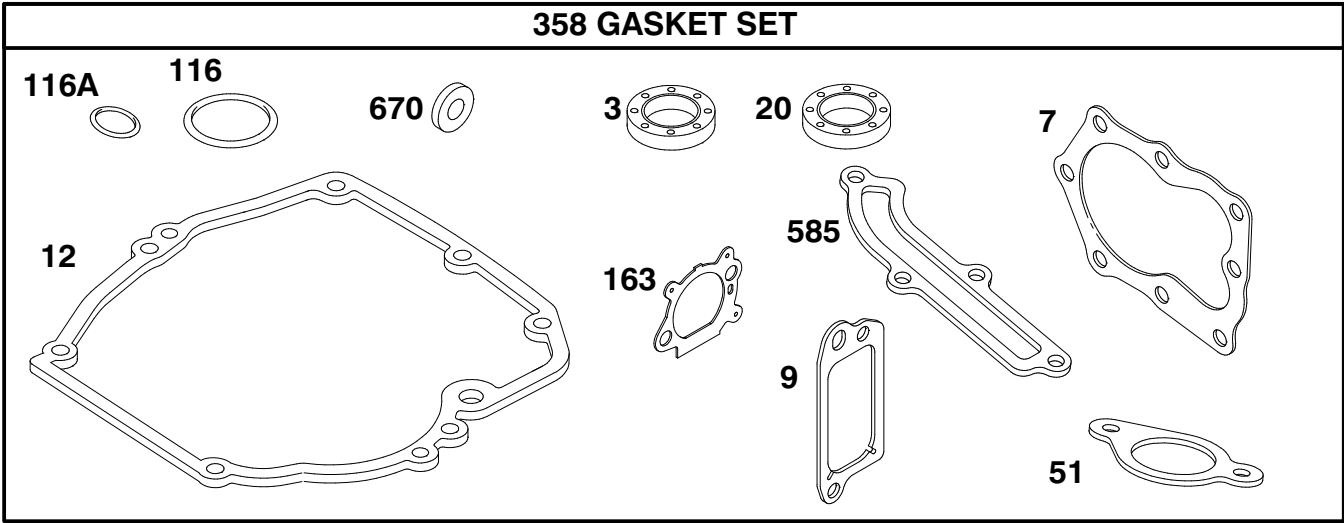    

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12U802-1733-E1

Ref. No.	Part No.	Description	No. Used
★3	299819	Seal – Oil	1
★Ø7	272916	Gasket – Cylinder Head	1
★Ø9	272481	Gasket – Breather	1
★12	272198	Gasket – Crankcase	1
★20	399781	Seal – Oil	1
★51	272199	Gasket – Intake Elbow	1
●104	T231371	Pin – Float Hinge	1
●◆110		Gasket – Sealing (Sold in Kit Only)	1
★116	280393	Seal – O-Ring	1
★116A	280966	Seal – O-Ring	1
121	498260	Carburetor Kit	1
●127		Plug – Welch (Sold in Kit Only)	1

Ref. No.	Part No.	Description	No. Used
●134	398188	Kit – Needle/Seat	1
●◆137		Gasket – Bowl (Sold in Kit Only)	1
★◆163	272653	Gasket – Air Cleaner	1
358	497316	Gasket Set	1
★585	272238	Gasket – Baffle Plate	1
●◆617	270344	Seal – Fuel Intake Tube	1
●◆634		Washer – Shaft (Sold in Kit Only)	1
★670	493823	Spacer – Bracket (Includes 2)	2
977	498261	Gasket Set – Carburetor	1
1095	498528	Gasket Set – Valve Overhaul	1

- Included in Carburetor Kit—Part No. 498260.
 - ◆ Included in Carburetor Gasket Set—Part No. 498261.
- Obtain Parts from Briggs & Stratton**

- ★ Included in Gasket Set—Part No. 497316.
- Ø Included in Valve Overhaul Gasket Set—Part No. 498528.

TORO PART NUMBER INDEX

3321-115

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
146046	Plate – Blade Driver	5 5 1	92-8800	Handle	8 1 1
612079	Blade 19"	5 4 1	92-8806	Screw – Hex Hd. Cap	3 10 2
614578	Cover – Gear Case	7 10 1	92-8807	Hub – Blade Driver	5 6 1
614596	Gear 34 Tooth	7 18 1	92-8810	Wheel & Tire Assembly	3 25 2
614668	Cover – Gear Case	7 2 1	92-8811	Bolt – Wheel	3 26 2
614696	Shaft – Intermediate	7 4 1	92-8818	Screw – Hex Hd. Cap	3 30 2
16-8889	Housing	3 28 1	92-8819	Nut – Lock	3 23 2
17-1569	Door – Discharge	3 13 1	92-8835	Decal – Deck 400XP	3 27 1
26-0670	Bolt – Blade	5 1 1	92-8890	Bag – Grass	9 3 1
27-6250	Bushing	6 36 2	92-9300	Spring – Counterbalance	6 4 1
36-4780	Washer – Thrust	7 17 3	92-9301	Rod –Link	6 1 1
36-4791	Washer	7 5 2	92-9304	Pivot – Front	3 22 1
38-7820	Bearing – Ball	7 15 1	92-9310	Pivot Arm Assembly RH	6 23 1
40-1940	Washer	3 24 2	92-9311	Pivot Arm Assembly LH	6 22 1
47-2890	Bushing	6 *39 1	92-9313	Spacer – Door	3 15 2
47-6730	Seal – Oil	6 *40 1	92-9315	Cable – Flywheel Brake	8 8 1
48-2060	Bearing – Needle	6 *41 1	92-9316	Cable Traction	8 17 1
49-2040	Screw – Taptite	7 1 4	92-9318	Wheel & Tire Assembly	6 34 2
55-3760	Pinion – 15 Tooth	7 3 1	93-0278	Pulley – Driver	5 9 1
60-8750	Bushing	7 6 2	93-4105	Decal – Danger	3 1 1
60-8850	Bushing – Output	7 9 2	93-4379	Cable Throttle	8 7 1
60-8890	Gear – Bevel Pinion	7 16 1	93-7159	Knob	8 11 4
62-6660	Spacer	7 11 1	93-7161	Spacer – Handle	3 16 2
63-8590	Screw	6 10 2	93-7162	Spacer – Handle	3 17 2
65-2720	Ring – Retaining	6 31 4	93-7266	Decal – Operation	8 21 1
65-4710	Ring – Friction	6 24 2	93-7383	Guide – Rope	8 4 1
65-4720	Spring – Compression	6 30 2	93-8470	Screw – Clamp	4 6 1
65-4740	Washer – Thrust	6 29 4	95-0656	Applique – Shroud	4 4 1
65-4750	Gear – Pinion	6 28 2	95-1704	Shroud – Engine	4 2 1
65-4760	Washer	6 25 2	95-1706	Screw – Mtg	4 7 2
65-5210	Screw – Thread Forming	3 7 2	95-1707	Screw – Air Cleaner	4 10 3
66-6040	Key – Rocking RH	6 27 1	95-1709	Cover	4 9 1
66-6050	Key – Rocking LH	6 26 1	95-2740	Retainer – Belt	6 20 1
71-3750	Ramp – Grass Bag	9 1 1	95-5910	Decal – Recoil	4 3 1
71-7770	Plate – Securing	6 11 2	98-2039	Bracket – Traction	6 38 1
71-7840	Rod –Trigger	6 5 1	2210-249	Clamp – Casing	4 5 1
71-7860	Grip – Upper	3 8 1	2210-316	Rope – Stop	4 8 1
71-7870	Grip – Lower	3 3 1	302-26	Fitting – Grease	6 37 1
71-7890	Guide – Belt Rear	3 31 1	321-48	Screw – HH	8 18 1
71-7900	Cap – L.H. Hinge Bolt	3 11 1	321-49	Screw – HH	8 9 1
71-7910	Cap – R.H. Hinge Bolt	3 6 1	321-53	Screw – HH	8 5 1
71-7920	Cover – Belt	3 29 1	3253-22	Washer – Lock	5 2 1
71-7930	Trigger – HOC	3 5 1	3253-33	Washer – Lock	8 13 4
71-7960	Guide – Belt Engine	5 8 1	3256-24	Washer	7 13 1
71-7980	Indicator – HOC	6 2 1	3284-5	Pin – Groove	3 4 1
71-7990	Ramp – Discharge	3 18 1	3290-378	Tie – Cable	8 10 1
71-8060	Spring – Trigger Retainer	6 8 2	3290-378	Tie – Cable	8 20 1
71-8080	Saddle – HOC	6 9 1	3296-5	Nut	7 14 1
71-8180	Frame	9 2 1	3296-59	Nut-Lock	6 14 2
71-8310	Spring – Compression	6 35 1	3296-73	Nut – Lock (Insert)	8 19 1
71-8830	Retainer – Shaft	3 21 2	3296-73	Nut – Lock Insert	8 6 2
71-9450	V-Belt	6 19 1	32112-1	Nut – Push	3 20 1
71-9600	Gear Case Ass'y Complete	7 1* 1	32112-13	Nut – Push	6 6 1
71-9600	Gear Case Assembly	6 18 1	32121-114	Pin – Groove	7 8 2
71-9610	Pulley – Half	7 12 2	32144-4	Screw – HH	3 32 2
71-9620	Shaft – Output	7 7 1	32144-4	Screw – HH Tap	5 7 2
71-9840	Spring – Door	3 12 2	32144-4	Screw – HH Tap	6 21 2
74-1660	Cover – Wheel	6 32 2	32144-4	Screw – Tapping	3 19 8
74-1670	Spacer – Wheel	6 33 2	32144-4	Screw-HH Tap	6 12 4
82-8550	Shield-Muffler	4 12 1	32144-31	Screw	6 7 1
92-1001	Bail – Control	8 14 1	32144-70	Screw – Tapping	3 2 1
92-1002	Bail – Flywheel Brake	8 2 1	32144-73	Screw-HWHTF	4 13 3
92-1057	Bolt – Shoulder	6 13 2	32144-97	Screw – Pan Hd. Phillips	3 9 2
92-5412	Stop – Pivot	8 3 1	32144-102	Screw	4 11 3
92-5412	Stop – Pivot	8 15 1	32151-93	Ring – Grip	6 3 1
92-7729	Anchor – Cable	8 16 1			
92-8626	Spacer – Blade	5 3 1			

*Not Illustrated

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

[illegible]