 




MODEL NO. 07222-80001 & UP

PARTS CATALOG

WORKMAN® 1300D HEAVY INDUSTRIAL

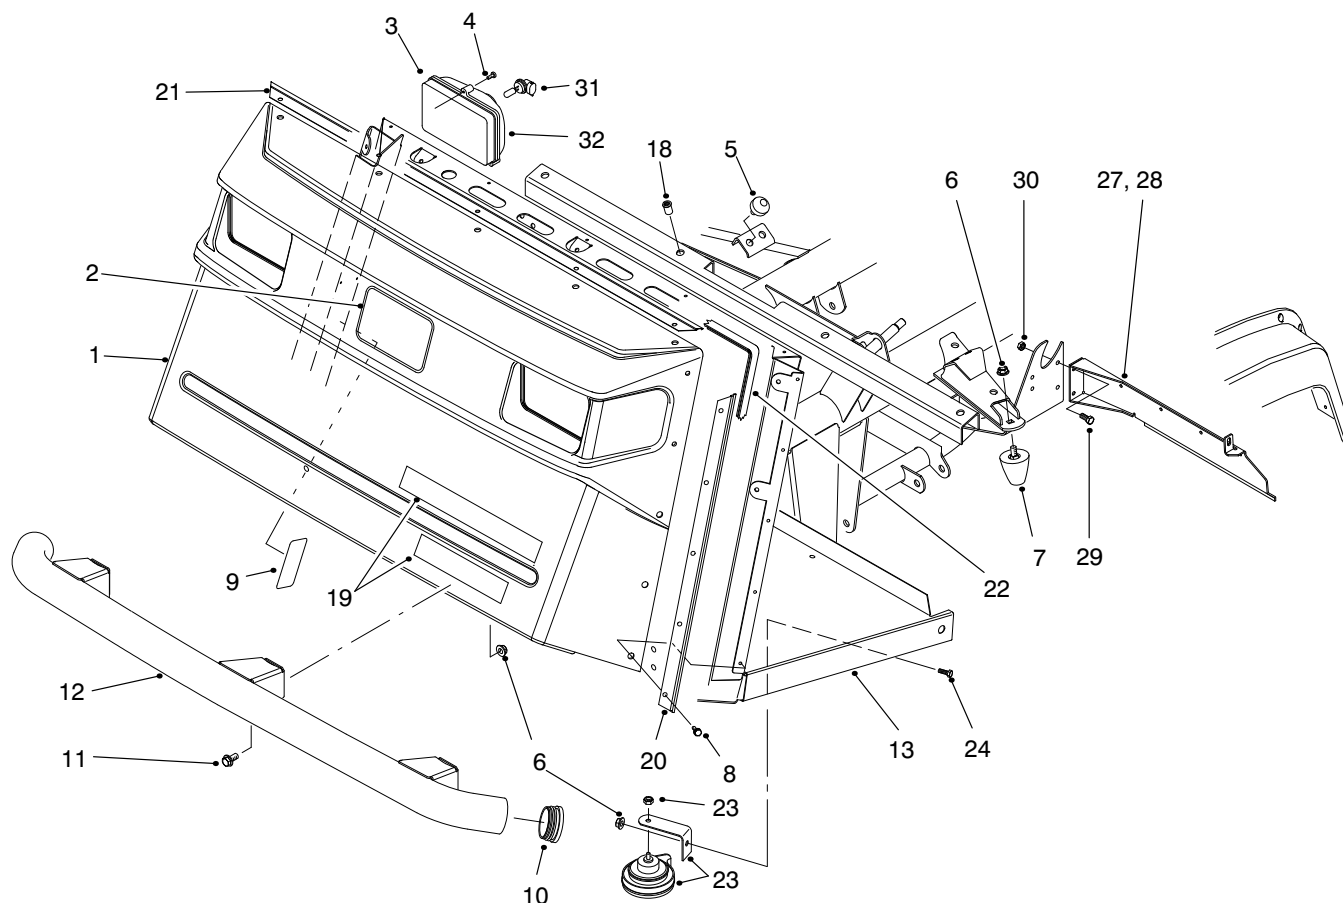


T-2995

FRONT BUMPER & HOOD ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	98-2979	Hood	1	18	32148-7	Nut-Clinch	8
2	62-5550	Decal-TORO	1	19	98-2964	Decal-Workman 1300D	1
3	87-2120	Asm-Headlight (Incl. Ref. #31-32)	2	20	87-8120	Bracket-Trim Side	2
4	32104-88	Screw	6	21	87-8130	Bracket-Trim Top	1
5	87-2440	Bumper	2	22	87-8160	Trim	1
6	3290-357	Nut-Flange Lock	9	23	116749	Asm-Horn	1
7	26-0071	Bumper	2	24	323-4	Screw-HH	1
8	87-6620	Screw	15	27	94-3838	Bracket-Mudflap LH	1
9	87-9500	Decal-Load	1	*28	94-3839	Bracket-Mudflap RH	1
10	2410-42	Cap-Front Bumper	2	29	321-4	Screw-HH	4
11	3234-1	Screw-HFH	6	30	32128-33	Nut-Lock	4
12	87-4070	Bumper-Front	1	31	87-6320	Bulb-Headlight	2
13	94-5240	Asm-Operators Platform (Incl. Ref. #18, #42 Page 8, #40-42 Page 12, #36 Page 25 & #1 Page 27)	1	32	87-6330	Lens-Headlight	2

 *Not Illustrated

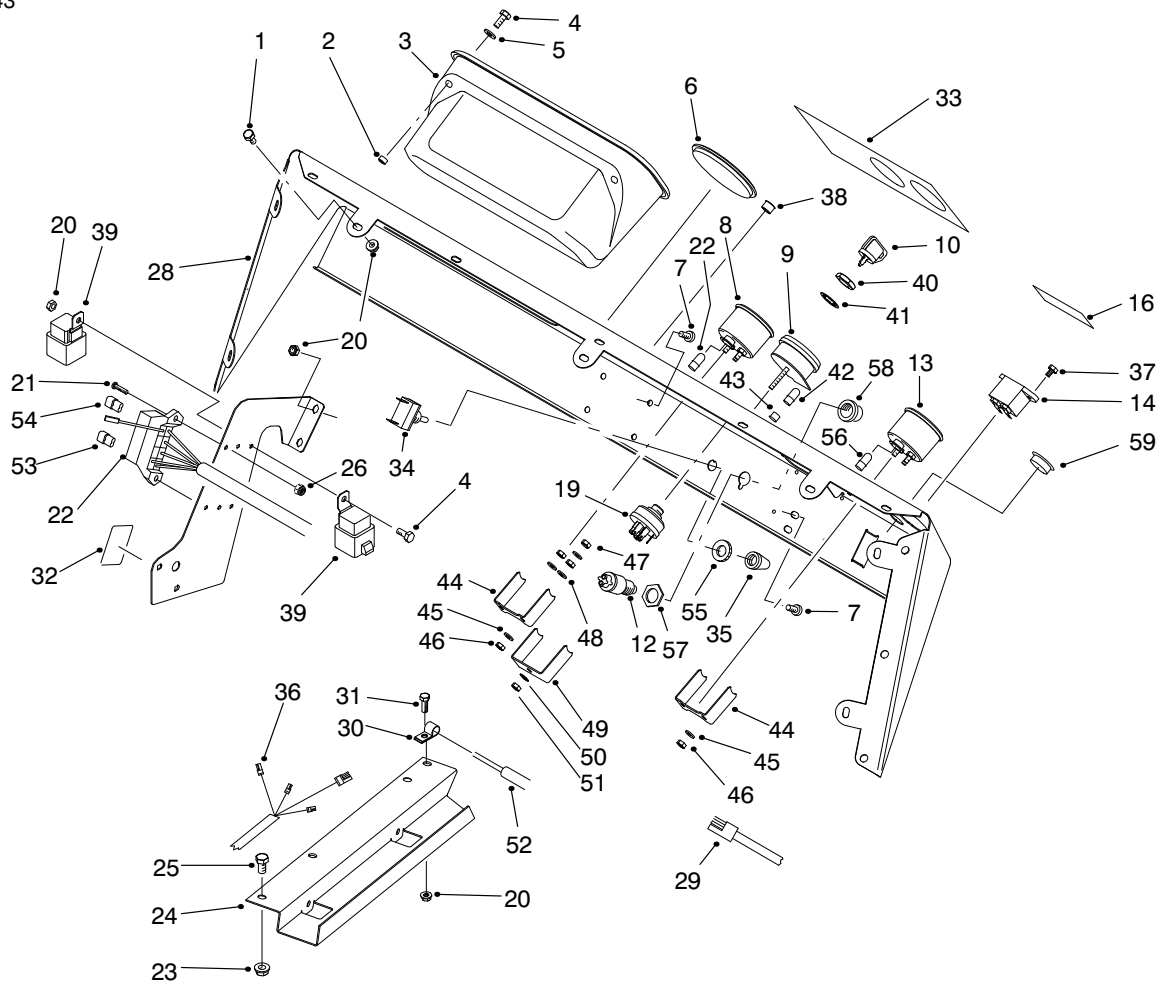


T-2996-2

CONTROL PANEL ASM

Ref. No.	Part No.	Description	No. Used
1	321-2	Screw-HH	7
2	32148-6	Insert-Threaded	2
3	87-3780	Box-Glove	1
4	321-3	Screw-HH	3
5	3256-22	Washer-Flat	2
6	2410-35	Plug	1
7	3274-31	Screw-Button Hd.	4
8	87-5590	Asm-Temperature Gauge (Incl. Ref. #44-48)	1
9	93-7053	Asm-Warning Light (Incl. Ref. #42-43 & 49-51)	1
10	63-8360	Key-Ignition	1
12	18-2830	Asm-Horn Switch (Incl. Ref. #12 & 57)	1
13	87-5580	Asm-Fuel Gauge (Incl. Ref. #44-48)	1
14	75-6820	Hourmeter	1
16	94-5272	Decal-Warning	1
19	27-2360	Asm-Ignition Switch (Incl. Ref. #40-41)	1
20	32128-33	Nut-Flange	13
21	3250-13	Screw	2
22	99-1084	Asm-Front Wire Harness (Incl. Ref. #56)	1
23	32128-20	Nut-Flange	3
24	93-7094	Cover-Wire Harness	1

Ref. No.	Part No.	Description	No. Used
25	322-2	Screw-HH	3
26	3296-2	Nut-Lock	2
28	87-8550	Asm-Control Panel (Incl. Ref. #16 & 33)	1
29	99-1083	Harness-Wire Front LH	1
30	2412-89	Clamp-R	1
31	321-4	Screw-HH	1
32	87-6670	Decal-Fuse	1
33	87-8530	Decal-Dash	1
34	20-7150	Asm-Toggle Switch (Incl. Ref. #55)	1
35	218-473	Boot-Switch	1
36	99-1082	Harness-Wire Rear	1
37	32144-18	Screw-HH	2
38	2410-64	Plug-Hole	1
39	70-1480	Relay-Sealed	2
40	218-446	Nut-Hex.	1
41	218-447	Washer-Lock	1
42	219-17	Bulb-Warning Light	4
43	87-6270	Asm-Socket & Bulb (Incl. Ref. #42)	4
44		Clamp-Gauge	2
45	3253-15	Washer-Lock	6
46	3217-25	Nut-Hex.	6
47	3217-29	Nut-Jam	6
48	3253-19	Washer-Lock	6

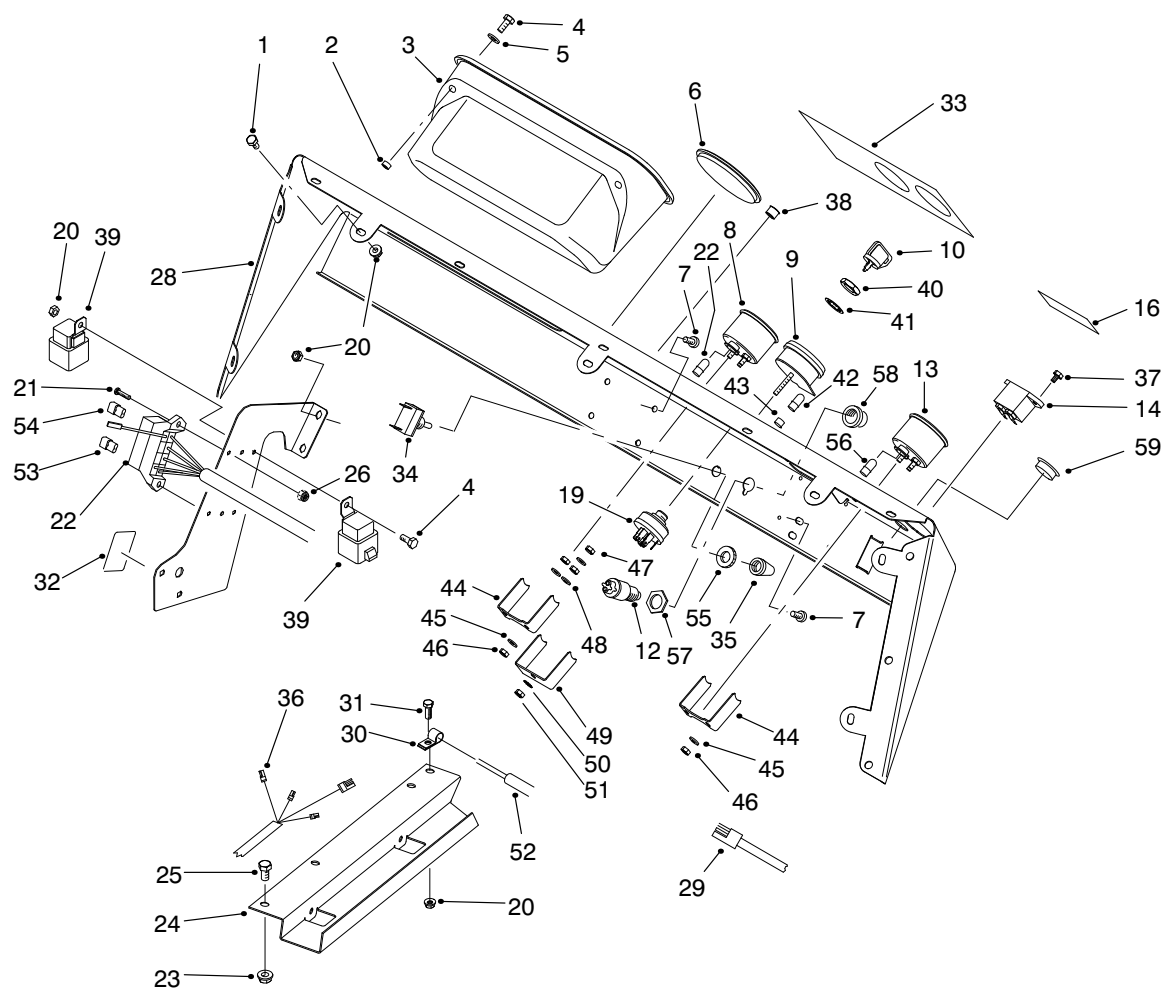 



T-2996-2

CONTROL PANEL ASM (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
49		Clamp—Light	1	55		Nut—Lock	1
50	3254-1	Washer—Lock	1	56	218-600	Bulb	2
51	3217-26	Nut—Hex.	1	57		Nut—Hex.	1
52	94-3837	Cable—Clutch	1	58	18-2830	Button—Horn	1
53	218-574	Fuse—7.5 Amp	2	59	99-1087	Plug—Hole, Dash	1
54	218-578	Fuse—10 Amp	1				

  ELECTRICAL SCHEMATIC

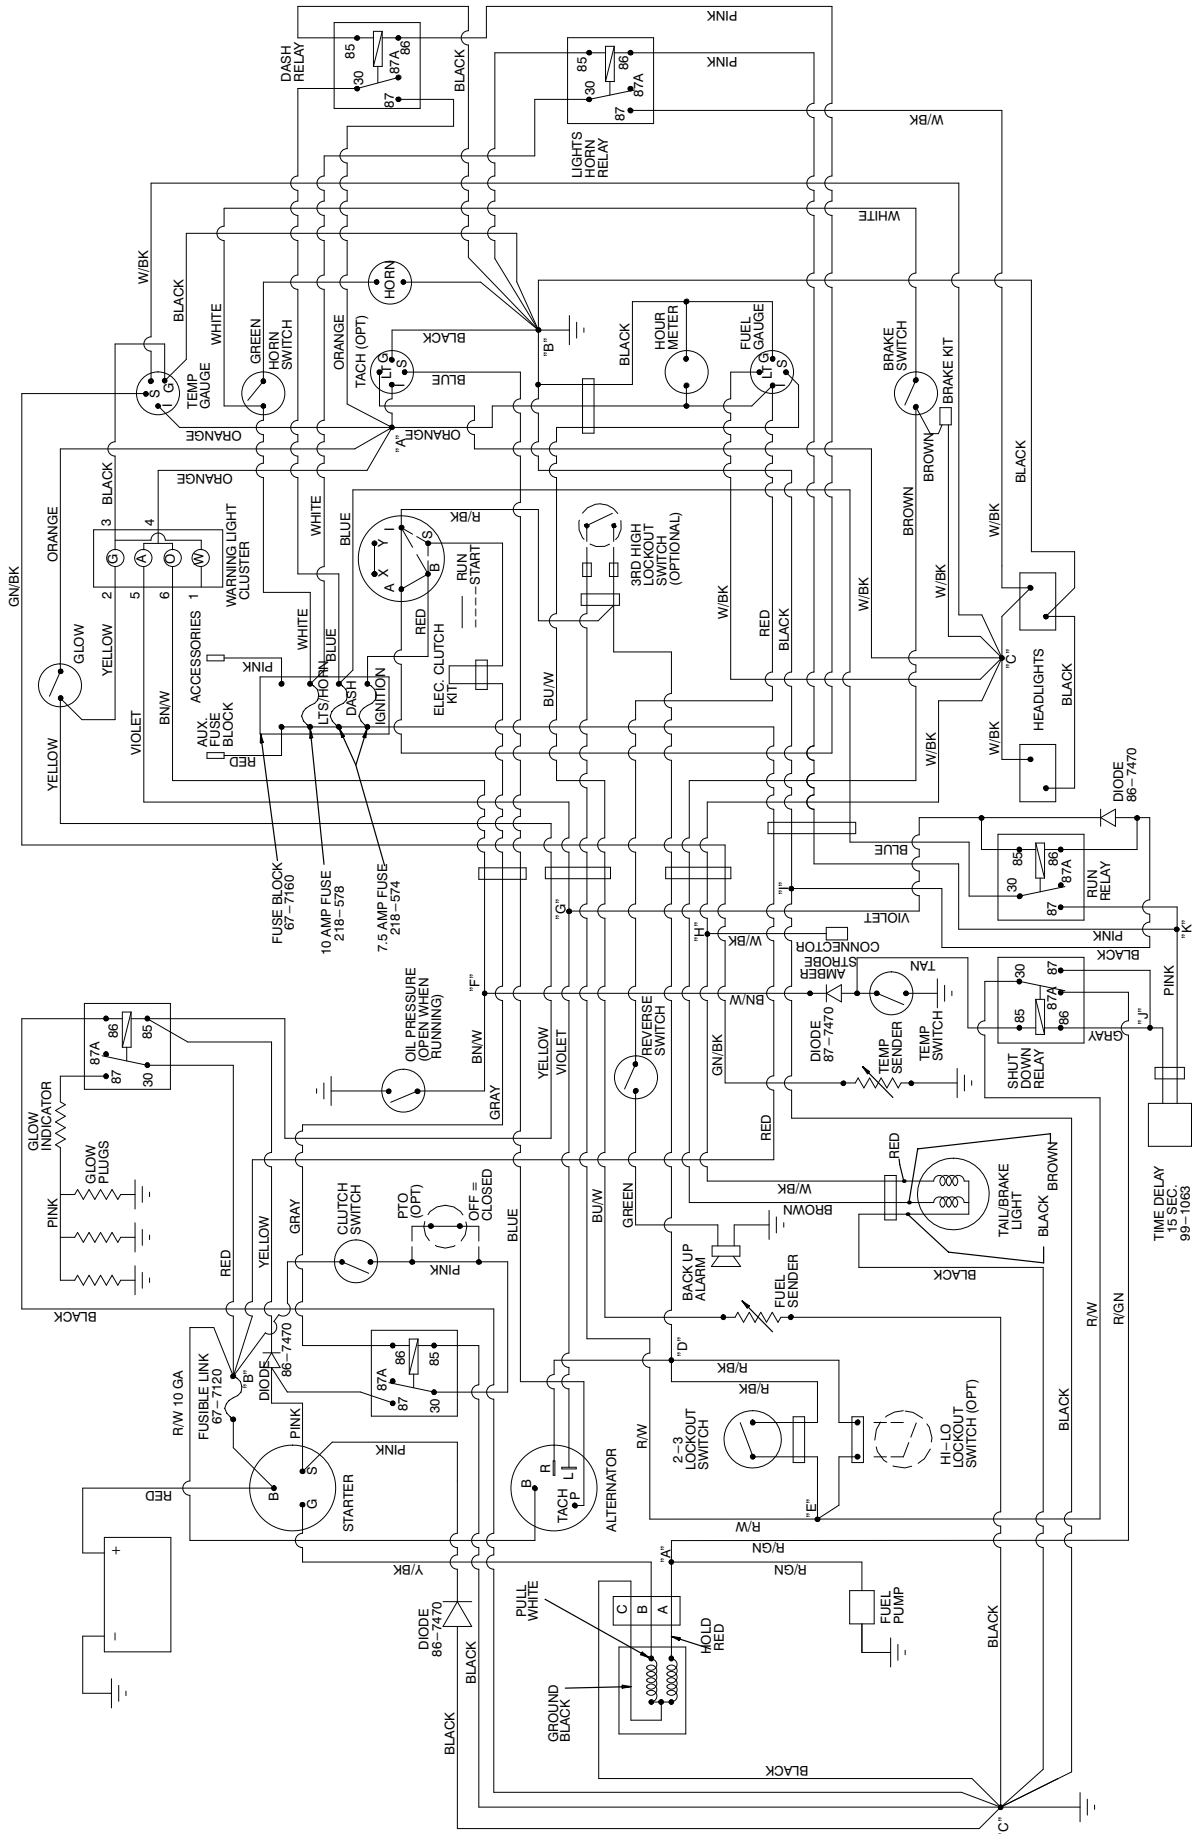

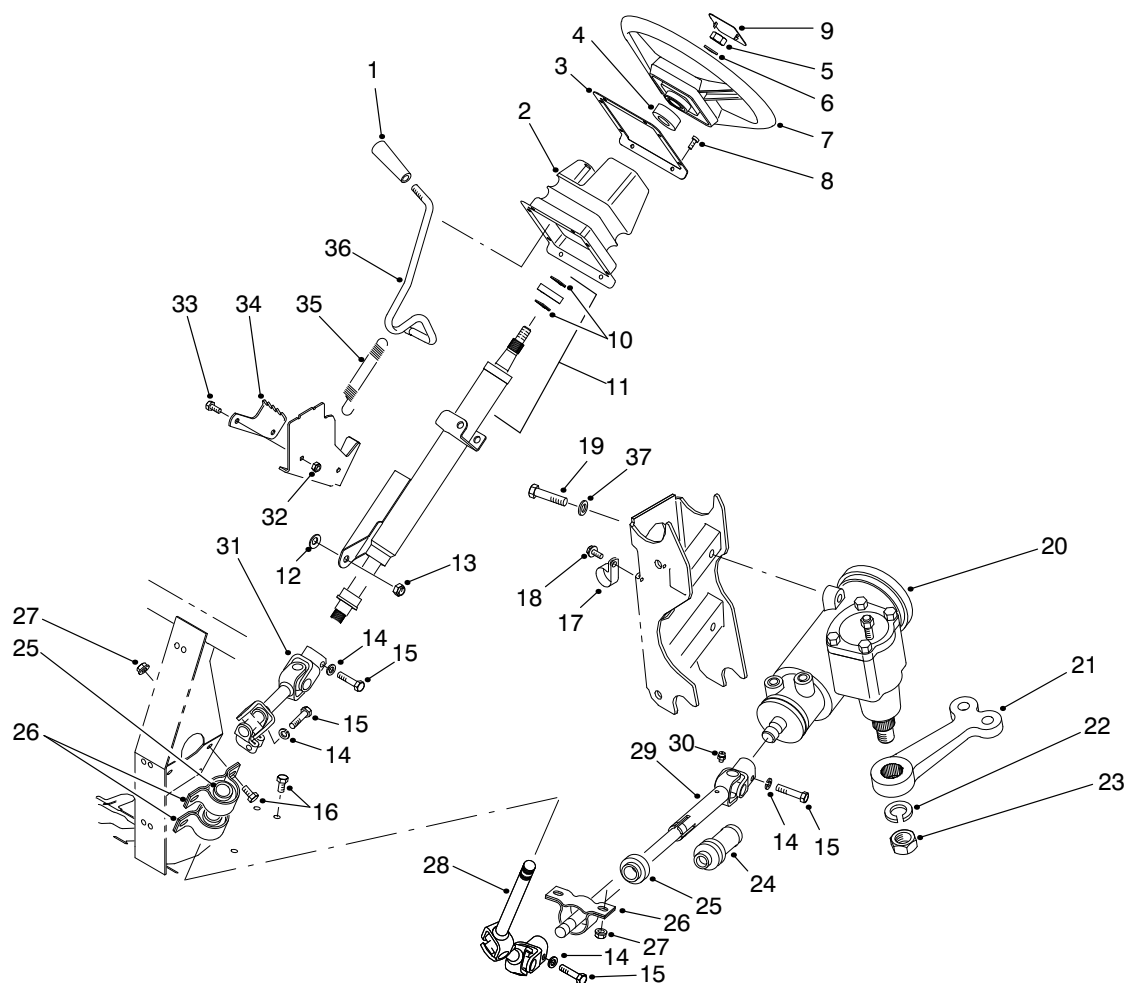


T-1584-1

STEERING LINKAGE ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	233-39	Knob	1	21	87-0370	Arm-Pitman	1
2	87-3460	Boot-Tilt Steering	1	22	39-7420	Washer-Lock	1
3	87-4720	Plate-Steering Boot	1	23	39-7440	Nut-Lock	1
4	21-9260	Spacer	1	24	92-4157	Boot-Steering Shaft	1
5	3277-1	Nut-Hex.	1	25	87-2280	Bearing	3
6	48-8070	Washer-Flat	1	26	87-3250	Mount-Bearing	3
7	87-3820	Wheel-Steering	1	27	32128-20	Nut-Flange	6
8	32144-116	Screw-PH	8	28	92-4155	Asm-Slip Joint, Upper	1
9	87-3750	Cover-Steering Wheel	1	29	92-4156	Asm-Slip Joint, Lower (Incl. Ref. #24 & 30)	1
10	43-6550	Ring-Retaining	2	30	302-5	Fitting-Grease	1
11	92-4153	Asm-Steering Column (Incl. Ref. #10)	1	31	92-4154	Asm-Universal Joint	1
12	3290-455	Washer	1	32	3296-42	Nut-Lock	2
13	3296-59	Nut-Lock	1	33	321-3	Screw-HH	2
14	3253-4	Washer-Lock	4	34	87-3610	Bracket-Detent	1
15	48-7740	Screw-HH	4	35	65-5360	Spring-Extension	1
16	322-2	Screw-HH	6	36	87-3130	Lever-Tilt Steering	1
17	2412-105	Clamp-R	2	37	87-7480	Washer-Flat	3
18	32144-10	Screw-Self Tapping	2	*	87-3100	Asm-Lower Shaft (Incl. Ref. #24 & 28-30)	1
19	93-7145	Screw-HH	3	*	87-3120	Steering Column & Shaft (Incl. Ref. #10, 11 & 31)	1
20	87-1500	Asm-Steering Gear (Incl. Ref. #22 & 23)	1				

 *Not Illustrated

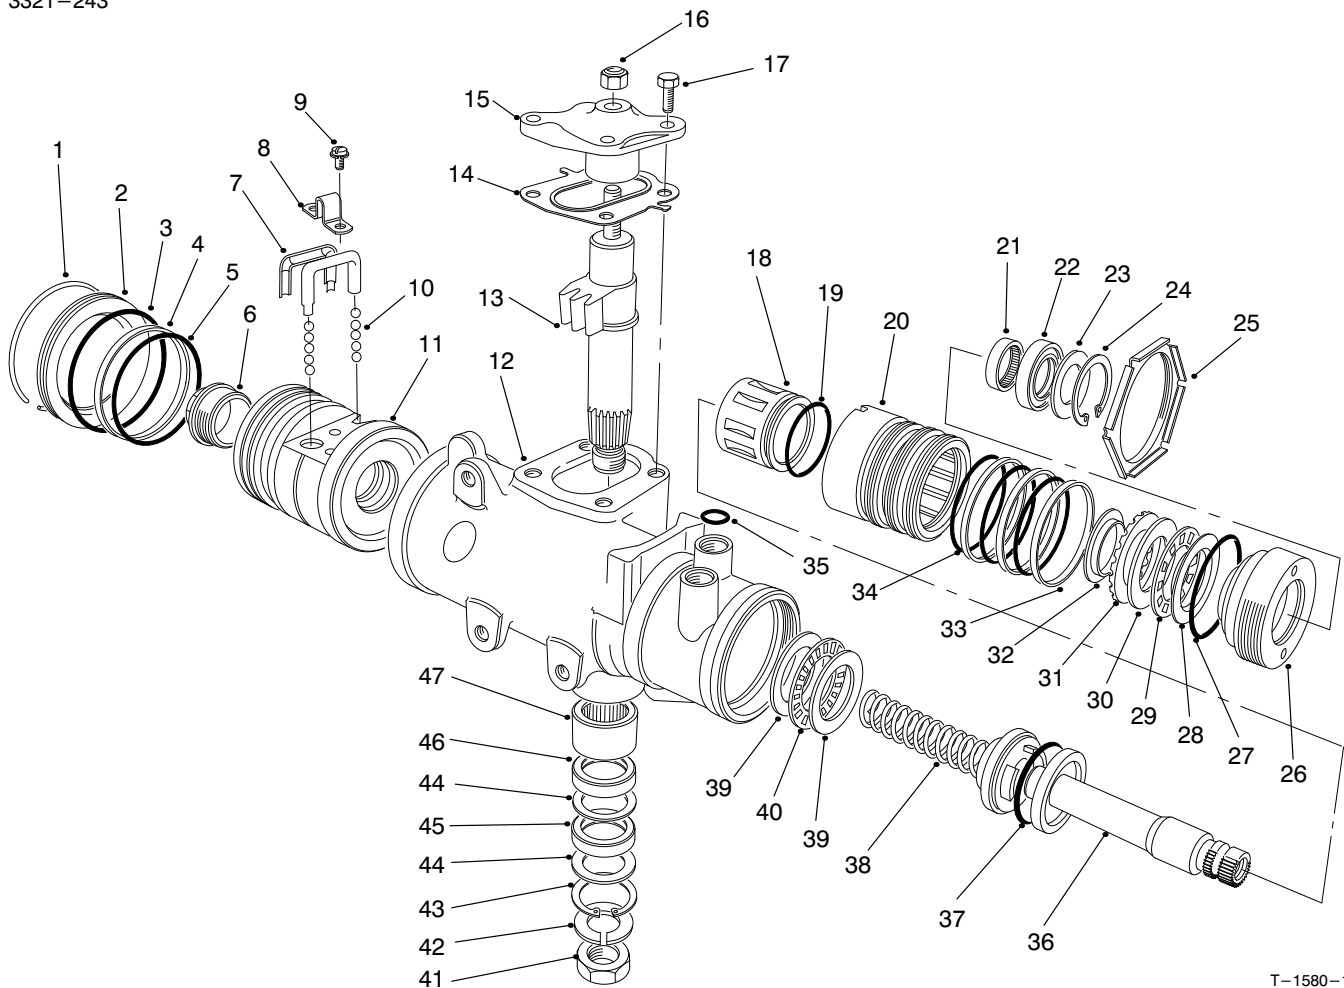


T-1580-1

STEERING GEAR ASM NO. 87-1500

Ref. No.	Part No.	Description	No. Used
1		Ring-Retaining	1
2	92-4165	Plug-Housing End	1
3		Seal-Housing End Plug	1
4		Ring-Rack Piston	1
5		O-Ring, Rack Piston	1
6	18-4340	Plug-Rack Piston End	1
7	92-4168	Return-Guide Ball	2
8	18-4270	Clamp-Ball Return Guide	1
9	18-4260	Asm-Screw/Lockwasher	2
10	18-5190	Ball-Chrome Alloy	11
11		Nut-Rack Piston	1
12		Housing-Steering Gear	1
13		Gear-Pitman Shaft	1
14	28-8280	Kit-Seal, Side Cover (Incl. Ref. #17)	1
15		Cover-Housing Side	1
16	28-8220	Nut-Lash Adjuster	1
17	28-8210	Bolt-FHH	4
18		Spool Valve	1
19		O-Ring, Spool Valve	1
20		Valve Body	1
21	92-4169	Bearing-Needle	1
22		Seal-Stub Shaft	1
23		Seal-Stub Shaft Dust	1
24		Ring-Retaining	1
25	92-4159	Nut-Adjuster Plug Lock	1

Ref. No.	Part No.	Description	No. Used
26		Plug-Adjuster	1
27	28-8200	O-Ring	1
28		Race-Upper Bearing	1
29		Bearing-Roller, Thrust	1
30		Race-Thrust Bearing	1
31		Spacer-Thrust Bearing	1
32		Retainer-Bearing	1
33		Ring-Valve Body	3
34		O-Ring	3
35	39-7310	O-Ring	3
36		Shaft-Stub	1
37		O-Ring	1
38		Worm-Steering	1
39		Race-Thrust Bearing	2
40		Bearing-Roller, Thrust	1
41	39-7440	Nut-Pitman Arm	1
42	39-7420	Washer-Lock	1
43		Ring-Retaining	1
44		Washer-Seal, Backup	2
45		Seal-Pitman Shaft	1
46		Seal-Pitman Shaft	1
47	92-4170	Bearing-Pitman Shaft	1
*	92-4161	Asm-Cover Service Housing Side (Incl. Ref. #14-17)	1

 *Not Illustrated

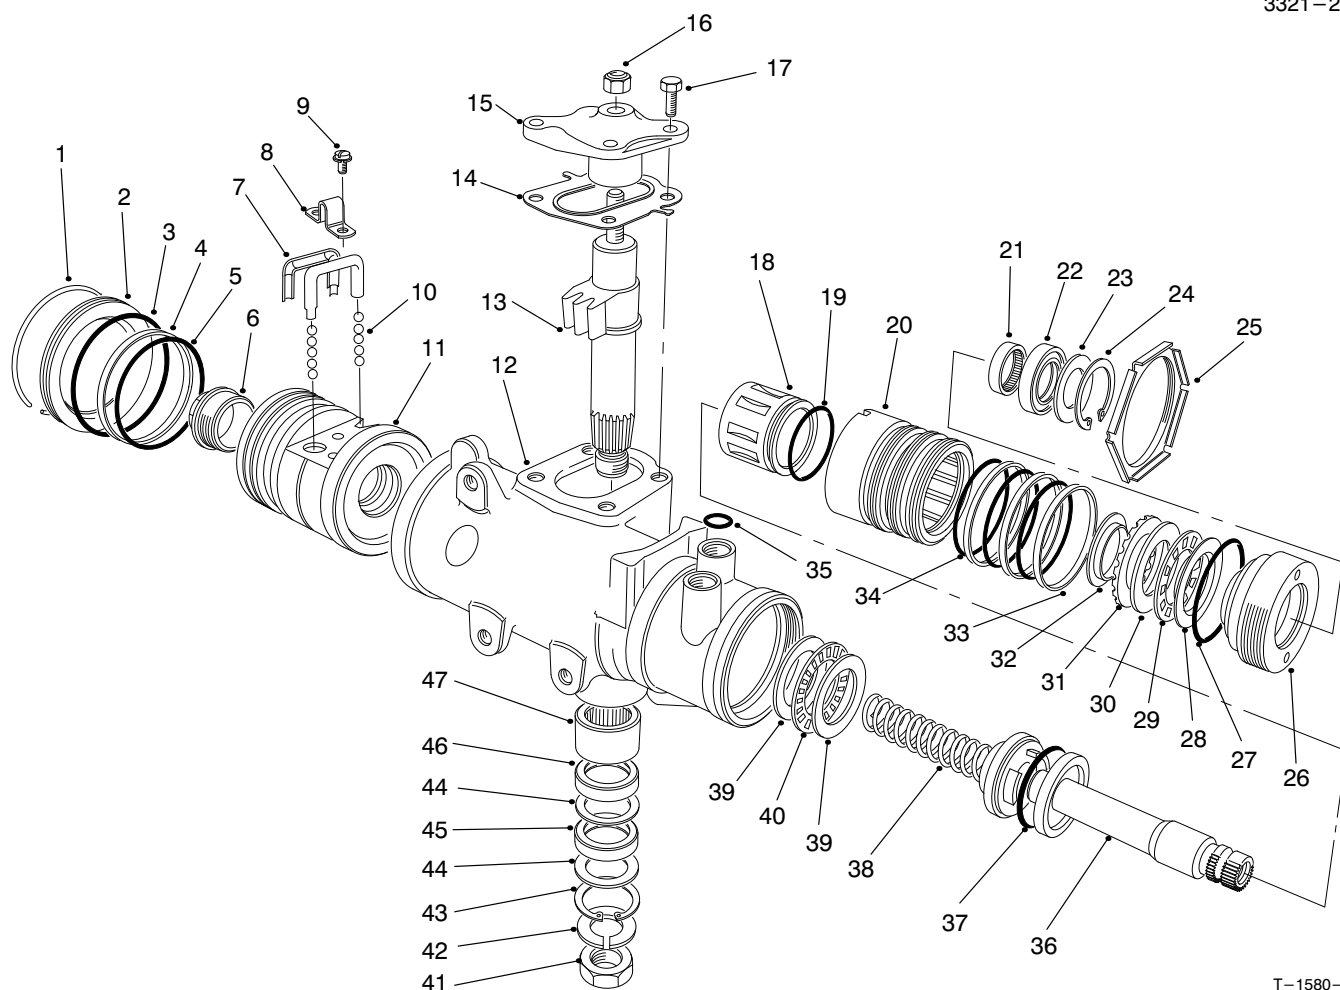


T-1580-1

STEERING GEAR ASM NO. 87-1500 (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
*	28-8270	Kit-Seal Service, End Plug (Incl. Ref. #1 & 3)	1	*	92-4162	Pitman Shaft-Gear Service (Incl. Ref. #13-15 & 17)	1
*	28-8290	Kit-Seal, Service Rack/Piston (Incl. Ref. #4 & 5)	1	*	92-4158	Asm-Valve, Hyd. Gear (Incl. Ref. #18-20, 33, 34, 36 & 37)	1
*	18-5180	Kit-Bearing, Lower Thrust (Incl. Ref. #39-40)	1	*	92-4160	Kit-Bearing Service, Upper (Incl. Ref. #28-32)	1
*	98-2962	Kit-Seal, Pitman Shaft (Incl. Ref. #43-46)	1	*	92-4166	Asm-Rack/Piston/Nut (Incl. Ref. #1-11 & 38)	1
*	18-5170	Kit-Seal, Valve Ring (Incl. Ref. #19, 33, 34 & 37)	1	*	92-4164	Asm-Plug, Service Adjust. (Incl. Ref. #21-24 & 26-32)	1
*	92-4163	Asm-Steering Housing (Incl. Ref. #12 & 43-47)	1	*	87-1500	Steering Gear (Complete)	1
*	92-4167	Asm-Plug Service (Incl. Ref. #22-24 & 27)	1				

 *Not Illustrated

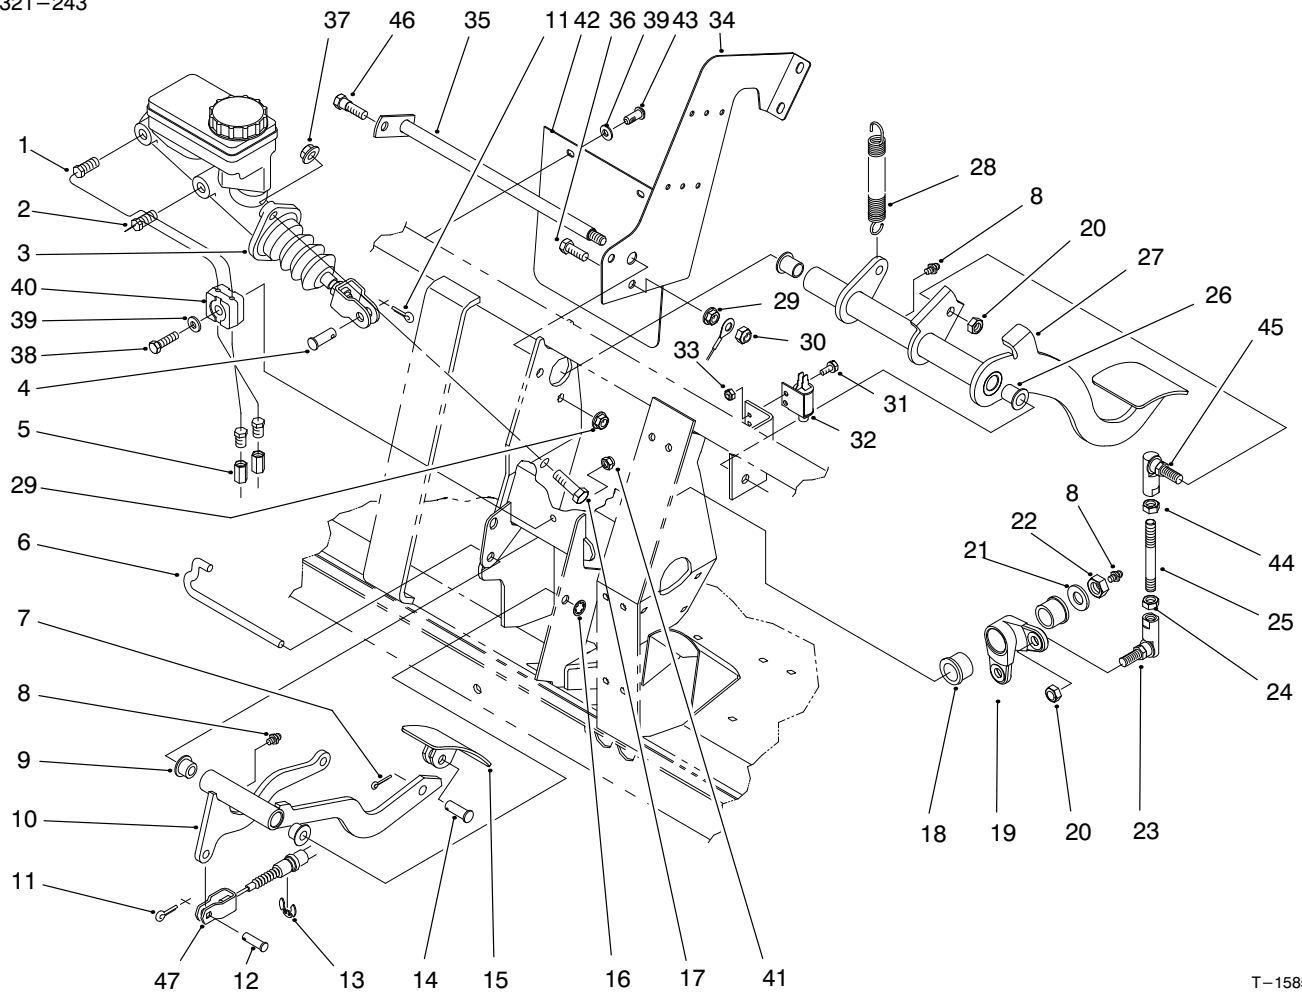


T-1585-2

BRAKE & ACCELERATOR PEDAL ASM

Ref. No.	Part No.	Description	No. Used
1	94-3814	Tube-Hydraulic	1
2	94-3815	Tube-Hydraulic	1
3	94-3800	Asm-Master Cylinder	1
4	283-2	Pin-Clevis	1
5	87-3570	Union-Brake Line	2
6	87-2880	Shaft-Accelerator Pedal	1
7	3272-6	Pin-Cotter	1
8	302-5	Fitting-Grease	3
9	256-259	Bushing-Flange	2
10	93-8961	Arm-Accelerator Pedal	1
11	3272-10	Pin-Cotter	2
12	283-30	Pin-Clevis	1
13	32120-47	Ring-E	1
14	283-85	Pin-Clevis	1
15	93-8969	Pedal-Accelerator	1
16	32151-56	Ring-Retaining	1
17	323-7	Screw-HH	2
18	256-247	Bushing-Flange	2
19	94-5223	Bell Crank	1
20	3296-6	Nut-Lock	2
21	3256-26	Washer-Flat	1
22	3296-23	Nut-Lock	1
23	68-3840	Ball Joint	1
24	3220-3	Nut-Jam	1


Ref. No.	Part No.	Description	No. Used
25	94-5299	Rod-Link	1
26	256-155	Bushing-Flange	2
27	93-8965	Pedal-Brake	1
28	76-9430	Spring-Extension	1
29	32128-20	Nut-HHF	2
30	3296-29	Nut-Lock	1
31	3290-321	Screw-HFH	2
32	55-7120	Switch-Brake Light	1
33	3296-2	Nut-Lock	2
34	94-3821	Plate-Center, Frame	1
35	95-7394	Shaft-Brake	1
36	322-5	Screw-HH	1
37	3290-357	Nut-HFH	2
38	321-9	Screw-HH	1
39	3256-22	Washer-Flat	3
40	87-7660	Clamp-Tube	2
41	3296-42	Nut-Lock	1
42	94-5221	Flap-Master Cylinder	1
43	87-6620	Screw-Torx PH	2
44	3220-16	Nut-Hex. Jam	1
45	68-3841	Asm-Ball Joint	1
46	28-0540	Bolt-Shoulder	1
47	94-3836	Cable-Accelerator	1

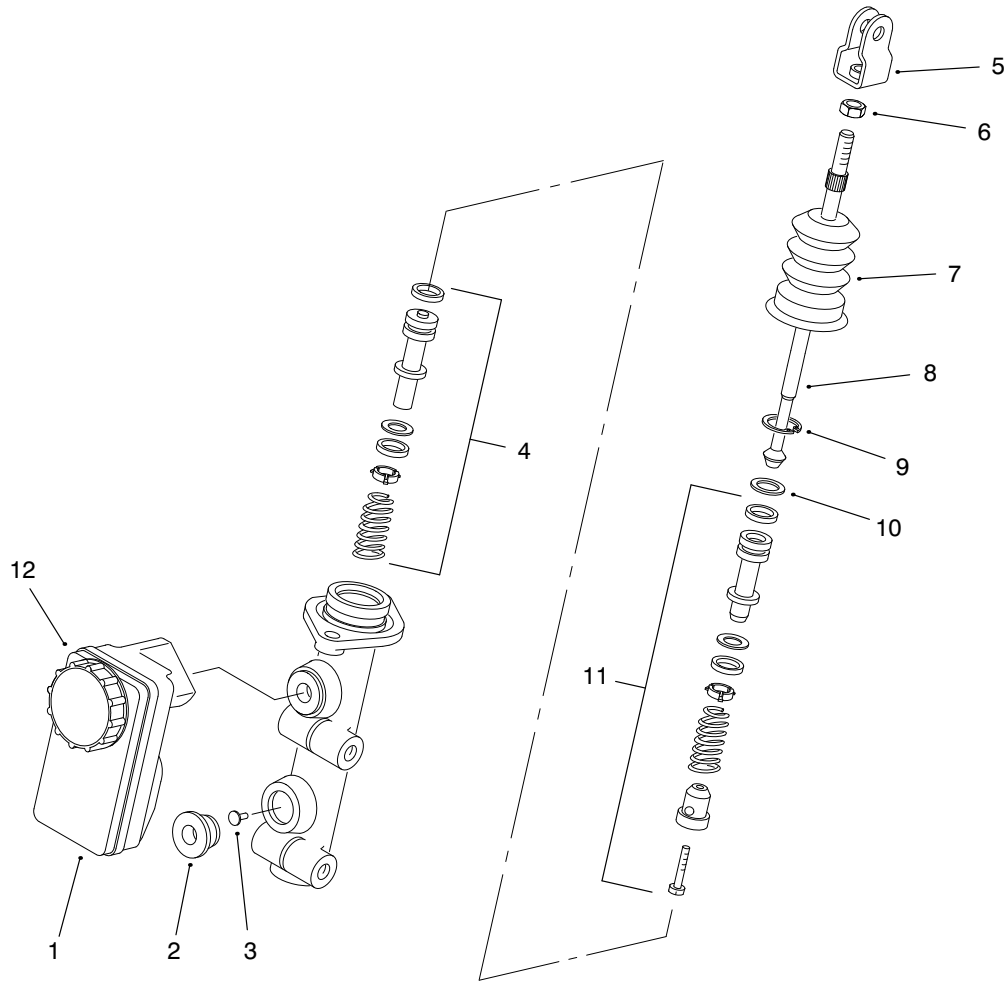 

T-2339-1

MASTER BRAKE CYLINDER NO. 94-3800

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	87-3040	Reservoir-Master Cylinder (Incl. Ref. #12)	1	7	94-5209	Cover-Dust	1
2	93-8971	Seal-Port, Flange	2	8	94-5210	Rod-Push	1
3	92-4103	Pin-Stop	1	9	92-4109	Circlip	1
4	92-4102	Asm-Secondary Piston	1	10	92-4108	Washer-Retainer	1
5	92-4110	Clevis	1	11	92-4101	Asm-Primary Piston	1
6	21-0360	Nut-Hex.	1	12	92-4112	Asm-Cap	1

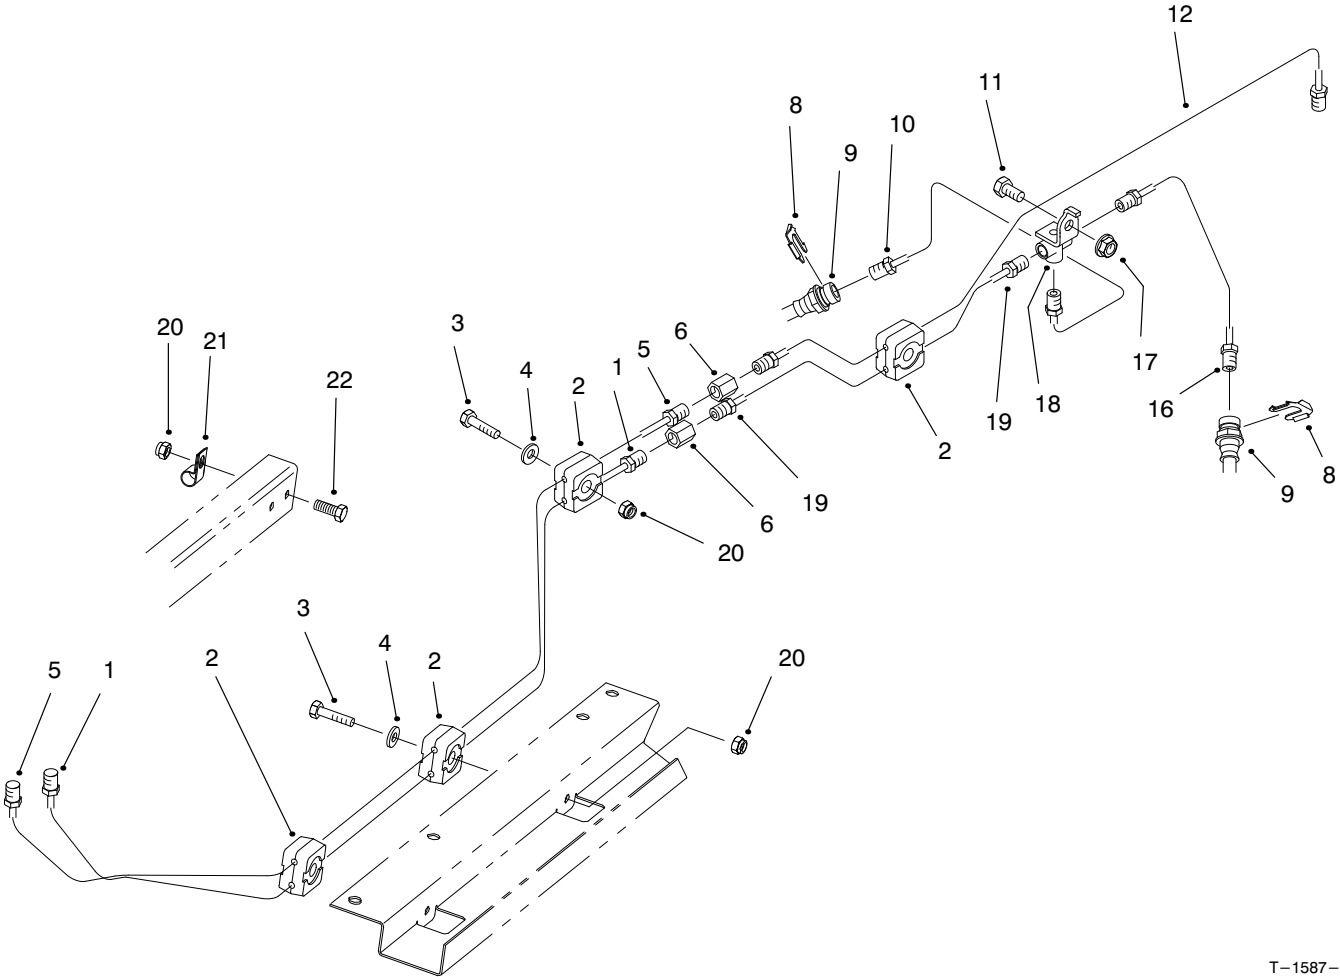 


T-1587-1


HYDRAULIC BRAKE LINE ROUTING ASM

Ref. No.	Part No.	Description	No. Used
1	94-3820	Tube-Brake Front	1
2	87-7660	Clamp-Brake Line	8
3	321-9	Screw-HH	4
4	3256-22	Washer-Flat	4
5	94-3819	Tube-Brake Rear	1
6	87-3570	Fitting-Union	2
8	87-3580	Retainer-Brake Hose	2
9	93-7123	Hose-Brake Front	2
10	93-7081	Tube-Brake Front RH	1

Ref. No.	Part No.	Description	No. Used
11	322-2	Screw-HH	1
12	94-3842	Tube-Brake Rear	1
16	93-7082	Tube-Brake Front LH	1
17	32128-20	Nut-Flange	1
18	87-3560	Tee-Brake Line	1
19	93-7085	Tube-Brake Front	1
20	3296-42	Nut-Lock	5
21	2412-89	Clamp-R	1
22	321-4	Screw-HH	1

  HYDRAULIC SCHEMATIC

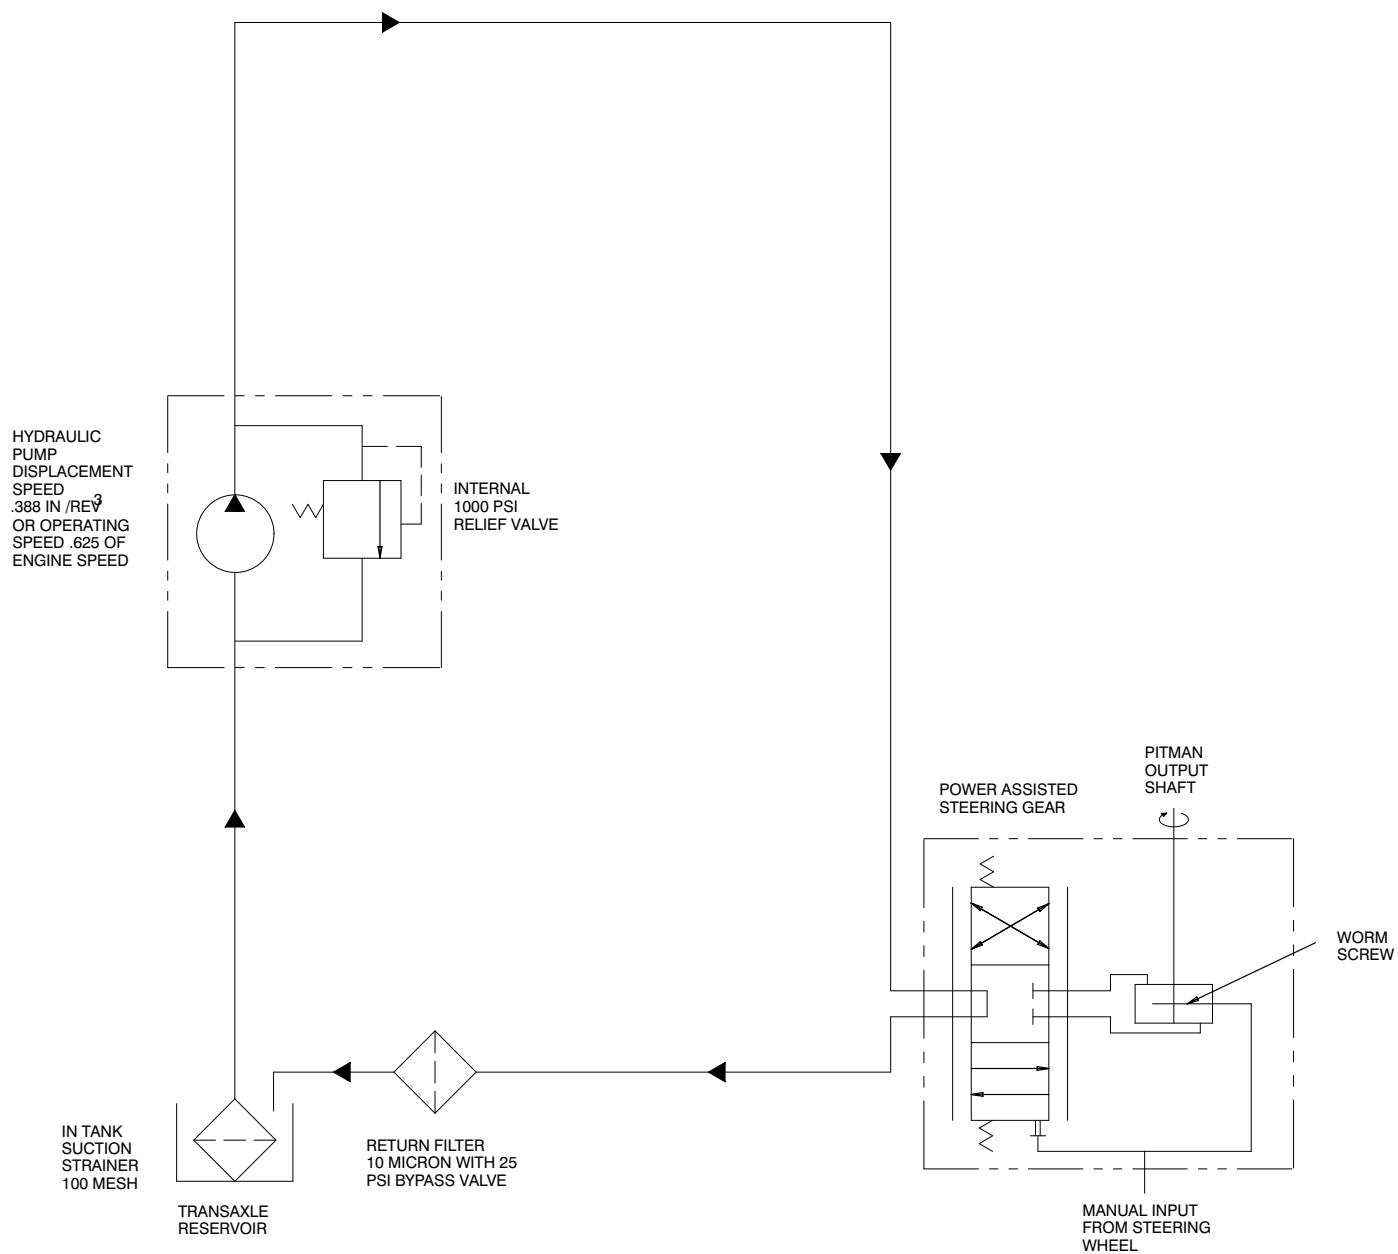

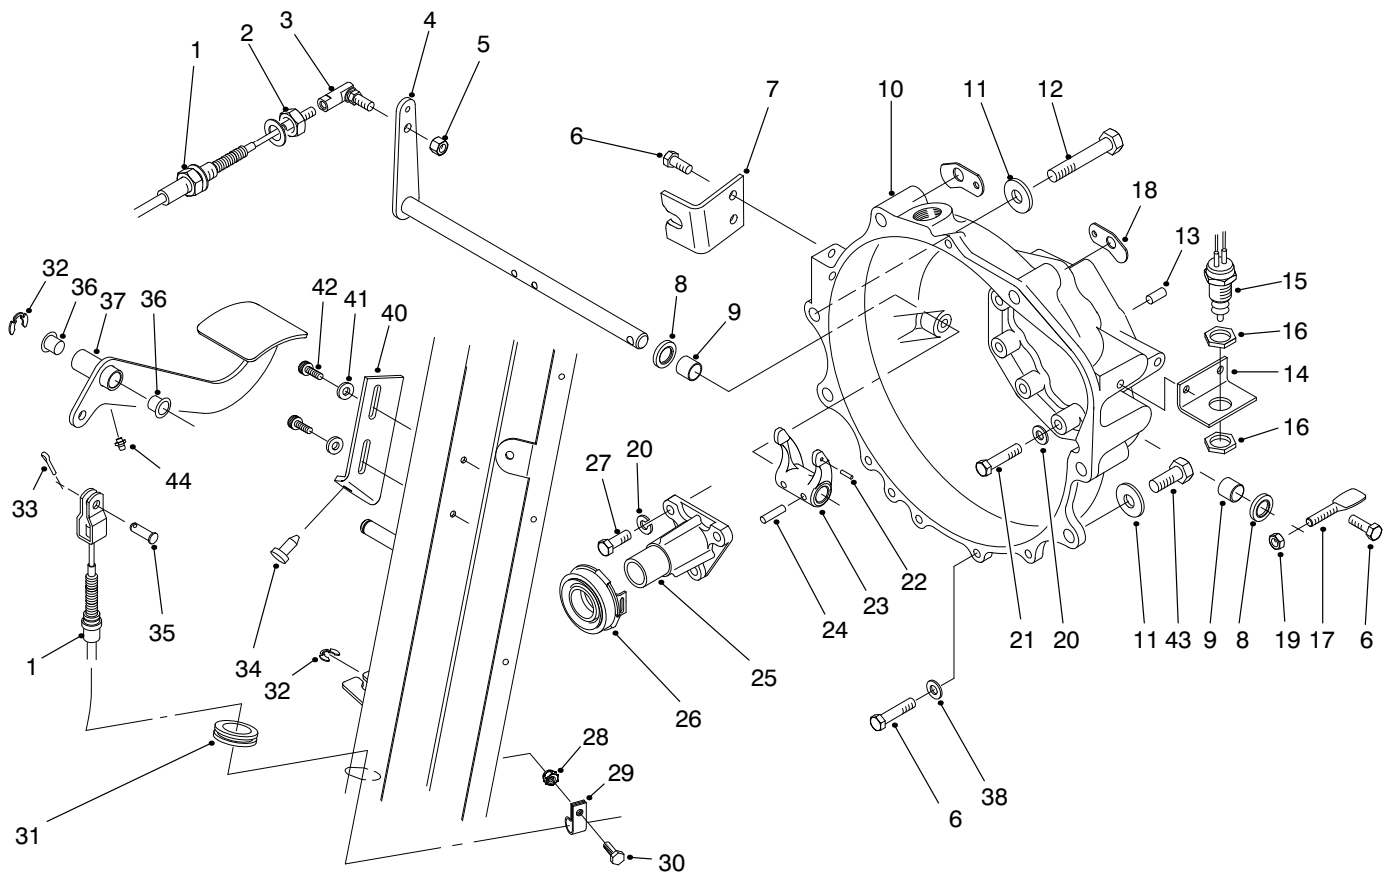


T-1658-2

CLUTCH LINKAGE ASM

Ref. No.	Part No.	Description	No. Used
1	94-3837	Asm-Clutch Cable (Incl. Ref. #2)	1
2	3220-2	Nut-Jam	1
3	2411-33	Joint-Ball	1
4	87-5280	Shaft-Release	1
5	3296-4	Nut-Lock	1
6	33114-020	Screw-HH	8
7	87-8471	Bracket-Clutch	1
8	87-1920	Seal-Shaft	2
9	87-3770	Bushing-Sleeve	2
10	93-7120	Housing-Bell	1
11	3256-26	Washer-Flat	4
12	3215-2	Screw-HH	5
13	87-1910	Pin-Alignment	2
14	87-5350	Bracket-Switch	1
15	87-5490	Switch-Neutral	1
16	3218-20	Nut-Jam	2
17	87-5360	Lever	1
18	87-6410	Bracket-Harness	2
19	3296-29	Nut-Lock	1
20	42-9850	Washer-Lock	12
21	33114-040	Screw-HH	9


Ref. No.	Part No.	Description	No. Used
22	32121-7	Pin-Roll	1
23	87-5300	Fork-Clutch	1
24	32121-24	Pin-Roll	2
25	87-5320	Guide-Release	1
26	87-2100	Bearing-Release	1
27	33114-025	Screw-HH	3
28	32128-33	Nut-HHF	1
29	2412-89	Clamp-R	1
30	321-4	Screw-HH	1
31	240-5	Grommet	1
32	32120-47	Ring-E	2
33	3272-10	Pin-Cotter	1
34	87-8460	Bumper	1
35	283-30	Pin-Clevis	1
36	256-156	Bushing-Flange	2
37	93-8958	Pedal-Clutch	1
38	3256-23	Washer-Lock	4
40	87-8710	Tab-Clutch	1
41	3256-22	Washer-Flat	2
42	87-6620	Screw-Torx Hd.	2
43	42-9250	Screw-HH	1
44	302-5	Fitting-Grease	1

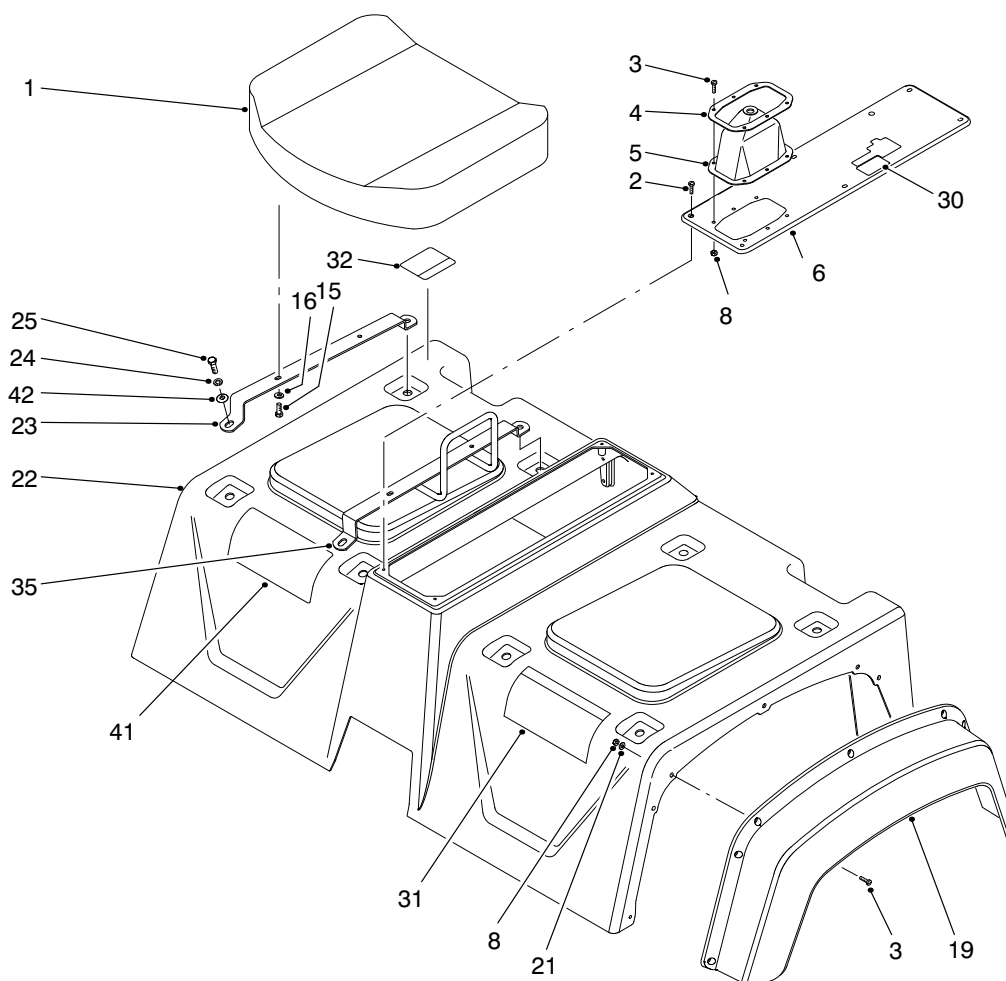 

T-2997

SEAT BASE ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	87-5060	Pad-Seat	2	23	87-3800	Bracket-Seat Bottom	3
2	32144-52	Screw-HH	6	24	3253-4	Washer-Lock	8
3	3250-13	Screw-HH	20	25	322-5	Screw-HH	8
4	87-3760	Plate-Shift Boot	1	30	87-6020	Decal-Brake	1
5	87-8620	Boot-Shift	1	31	87-5920	Decal-Danger	1
6	98-2972	Cover-Console	1	32	87-5930	Decal-Caution	1
8	3296-2	Nut-Lock	20	35	87-6890	Hold-Hand	1
19	87-9480	Fender-Front	2	41	99-1085	Decal-Quick Ref.	1
21	3256-61	Washer-Flat	14	42	3256-23	Washer-Flat	8
22	99-1086	Asm-Skirt (Incl. Ref. #31 & 32)	1				

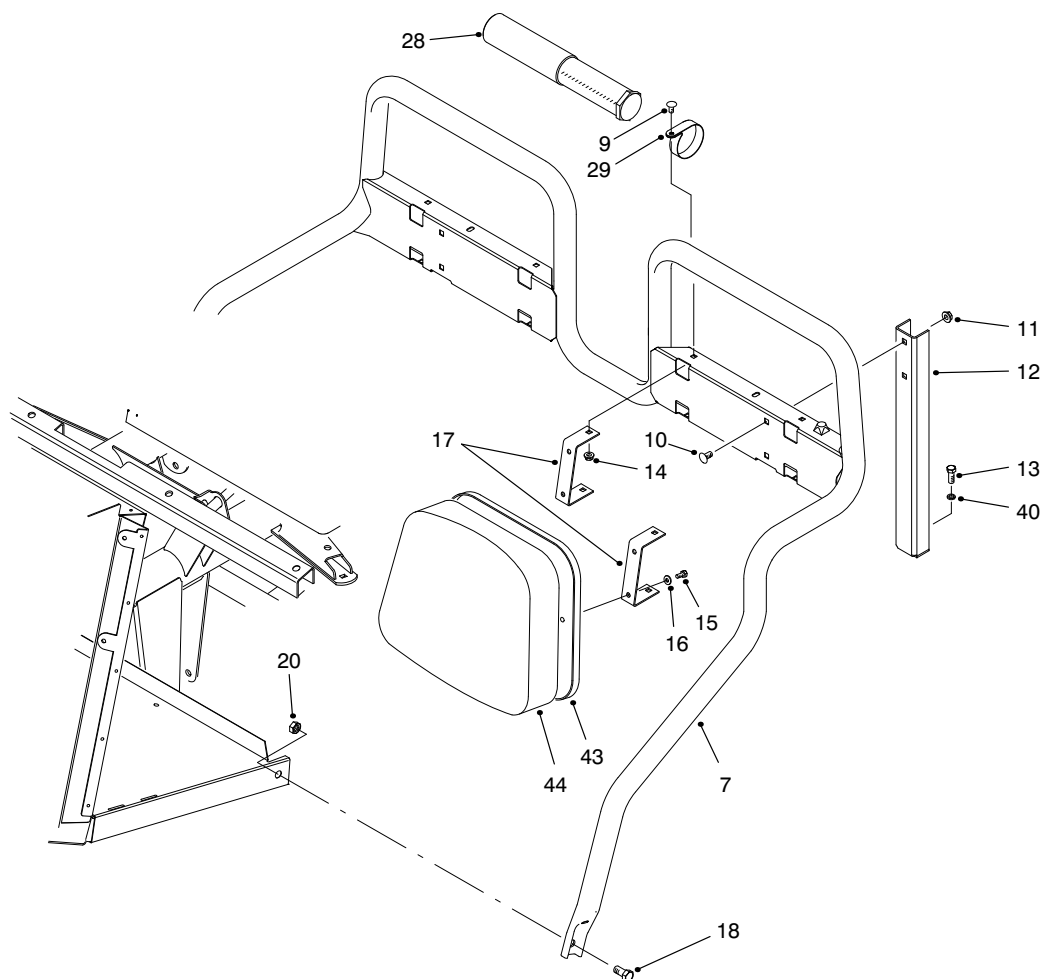 


T-2998

SEAT BACK ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
7	87-6170	Frame-Seat	1	18	325-4	Screw-HH	2
9	3230-18	Bolt-CARR	8	20	3296-23	Nut-Lock	2
10	3231-21	Bolt-CARR	4	28	74-0720	Tube-Manual	1
11	3290-357	Nut-HFH	4	29	2412-133	Clamp-R	2
12	87-2510	Bracket-Seat Frame	2	40	3253-21	Washer-Lock	2
13	323-6	Screw-HH	2	43	87-6280	Plate-Seat Back	2
14	32128-20	Nut-HHF	8	44	87-6290	Cushion-Seat Back	2
15	321-4	Screw-HH	8	*	87-3340	Asm-Backrest (Incl. Ref. #43-44)	2
16	3256-22	Washer-Flat	8				
17	87-6240	Bracket-Seat Back	4				

 
*Not Illustrated

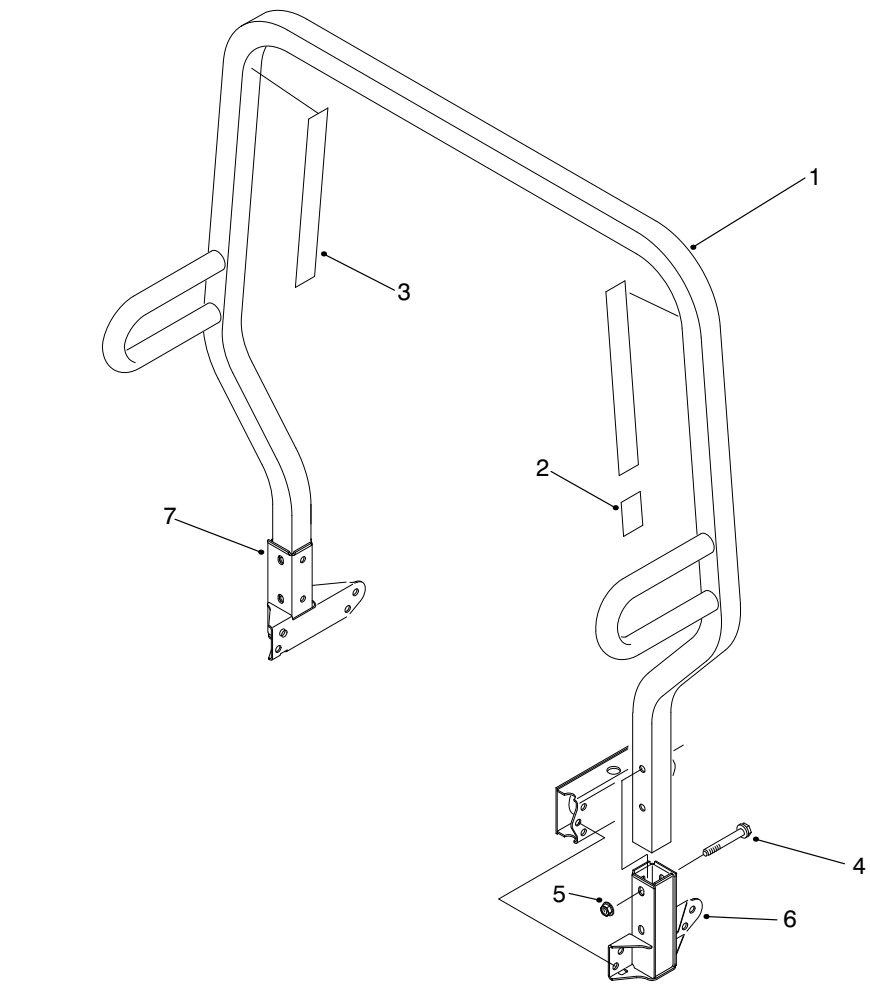

T-1592-1

ROLL OVER PROTECTION SYSTEM (R.O.P.S.) ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	87-7090	Asm-Frame, R.O.P.S. (Incl. Ref. #2 & 3)	1	4	3234-40	Screw-HFH	4
2	87-5940	Decal-Rollover	1	5	32128-23	Nut-HHF	4
3	87-5980	Decal-ROPS	2	6	87-6950	Receiver-LH	1
				7	87-6960	Receiver-RH	1

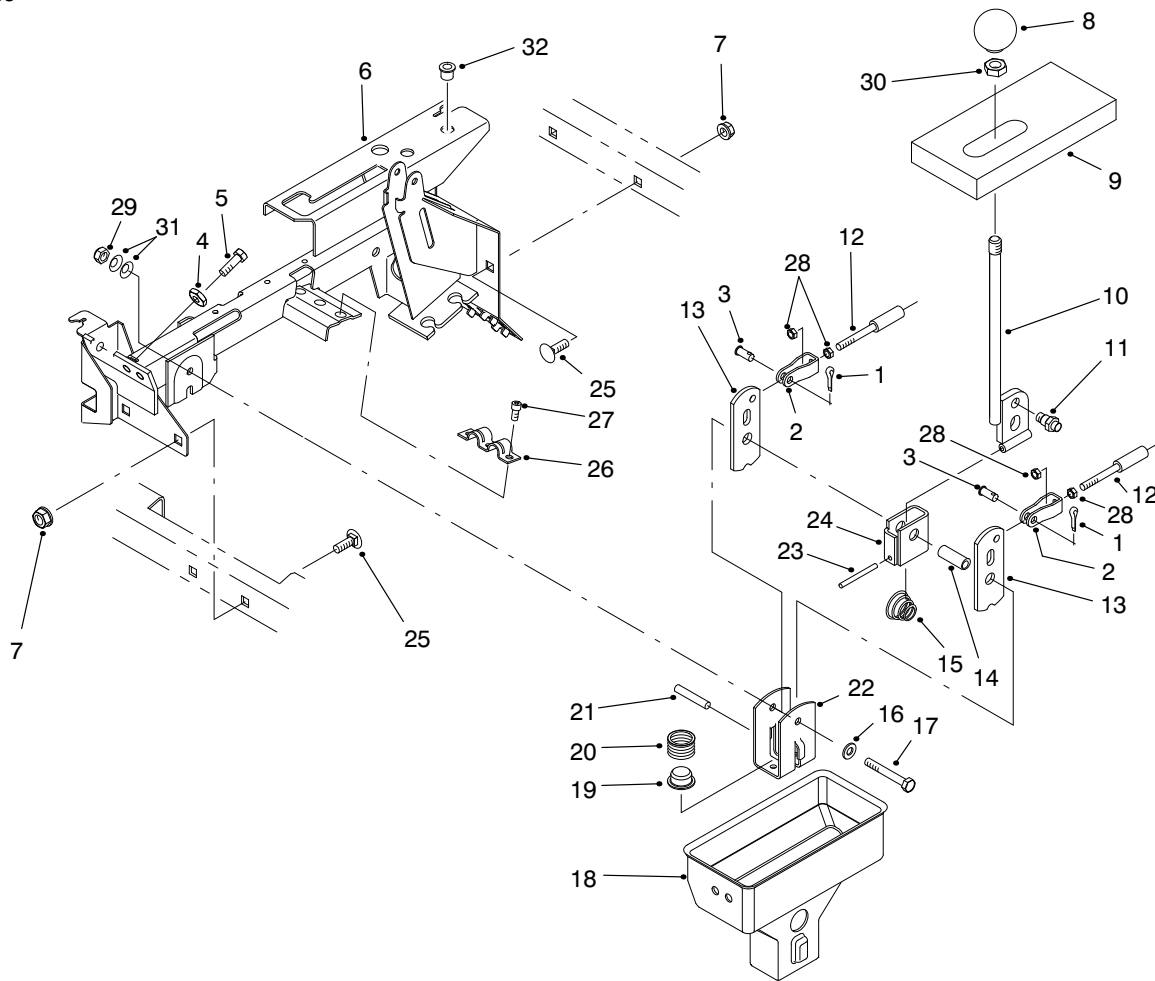 


T-2999

CONSOLE ASM

Ref. No.	Part No.	Description	No. Used
1	3272-6	Pin-Cotter	2
2	87-2310	Clevis-Cable	2
3	283-62	Pin-Clevis	2
4	3220-3	Nut-Jam	2
5	3211-8	Screw-HH	2
6	94-5202	Asm-Lever Support (Incl. Ref. #32)	1
7	3290-357	Nut-HFH	4
8	87-6720	Knob	1
9	87-6570	Foam-Seal	1
10	87-2040	Lever-Shift	1
11	87-3650	Pin-Shift	1
12	87-4260	Asm-Cable (Incl. Ref. #28)	2
13	87-3540	Link-Shift	2
14	87-2520	Tube-Pivot	1
15	87-2900	Spring-Compression	1


Ref. No.	Part No.	Description	No. Used
16	87-8640	Washer-Flat	1
17	322-12	Screw-HH	1
18	87-2260	Boot-Shift Lower	1
19	87-3530	Button-Shifter	1
20	87-3660	Spring-Compression	1
21	3290-507	Pin-Dowel	1
22	87-3520	Clevis	1
23	32121-48	Pin-Roll	1
24	87-6040	Bracket-Shifter	1
25	3231-21	Bolt-CARR	4
26	87-4960	Clamp-Cable	1
27	65-5220	Screw-HSH	3
28	3220-1	Nut-Jam	4
29	3296-58	Nut-Lock	1
30	3218-18	Nut-Jam	1
31	3290-456	Washer-Belleville	2
32	32148-7	Nut-Clinch	2

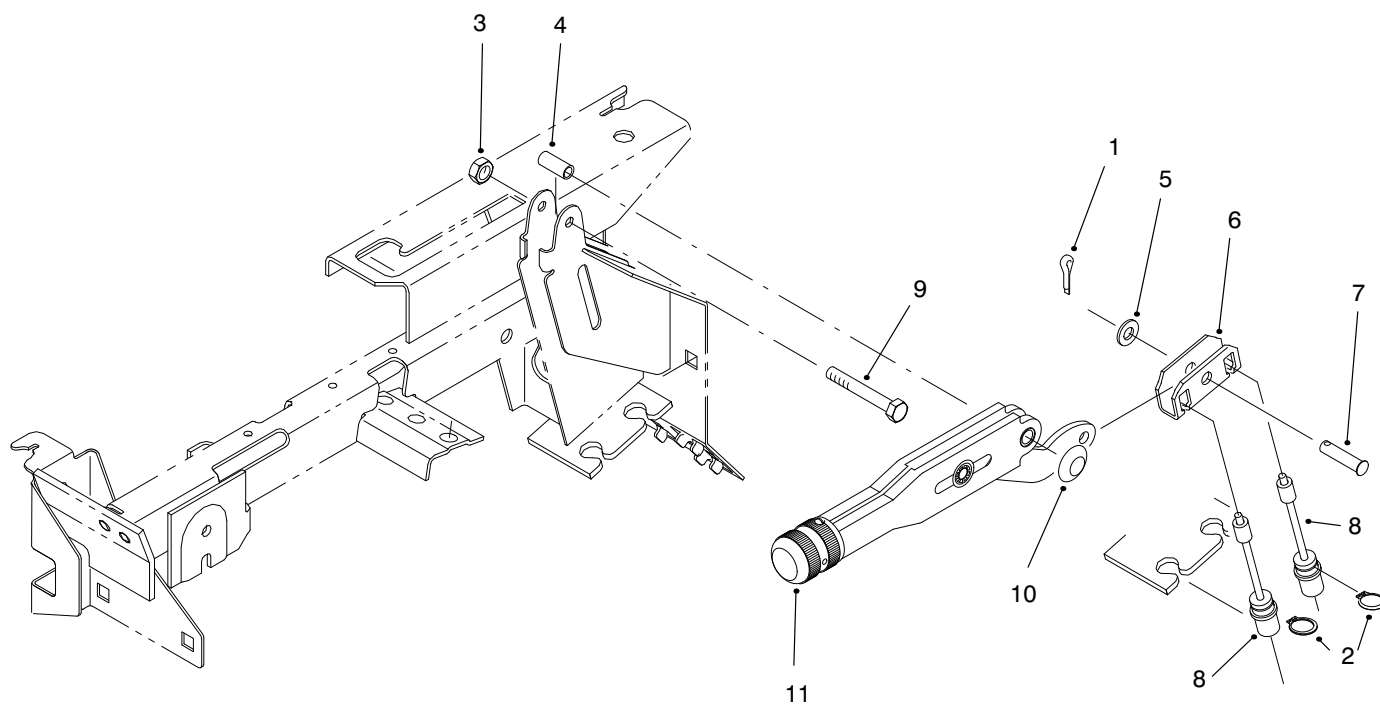 

T-3000

PARKING BRAKE ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3272-6	Pin-Cotter	1	7	94-3829	Pin-Clevis	1
2	32120-47	Ring-Retaining	2	8	87-8240	Cable-Parking Brake	2
3	3296-42	Nut-Lock	1	9	321-9	Screw-HH	1
4	87-4710	Spacer-Barking Brake	1	10	3290-477	Washer-Curved	1
5	3256-23	Washer-Flat	1	11	87-2710	Lever-Parking Brake	1
6	87-3480	Plate-Brake Equalizer	1				

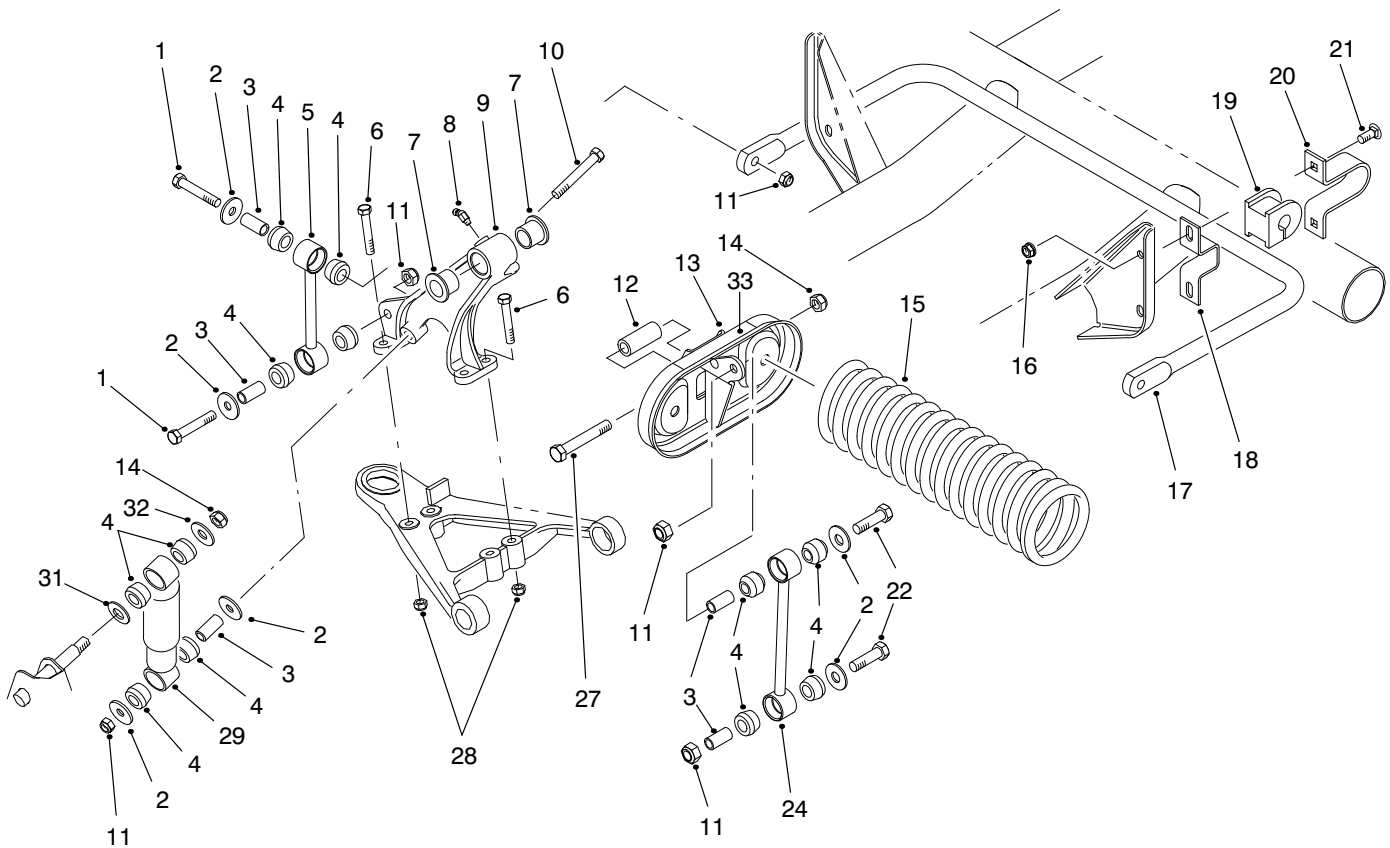 


T-1593-1

FRONT SUSPENSION ASM

Ref. No.	Part No.	Description	No. Used
1	324-10	Screw-HH	4
2	87-5330	Washer	12
3	87-3600	Spacer	10
4	87-3920	Bushing-Rubber	24
5	87-3860	Link-Anti-Sway Bar	2
6	323-12	Screw-HH	8
7	33-3090	Bushing-Flange	4
8	302-11	Fitting-Grease	1
9	87-0150	Tower-Control Arm RH	1
*	87-0160	Tower-Control Arm LH	1
10	324-13	Screw-HH	2
11	3296-48	Nut-Lock	10
12	87-2500	Sleeve-Spring Pivot	2
13	87-7150	Asm-Cradle, Spring (Incl. Ref. #33)	2
14	3296-23	Nut-Lock	4
15	87-0690	Spring-Compression	2

Ref. No.	Part No.	Description	No. Used
16	3290-357	Nut-HFH	4
17	87-3850	Bar-Anti-Sway	1
18	87-3890	Bracket-Anti-Sway Bar	2
19	87-3910	Bushing-Anti-Sway Bar	2
20	87-4010	Clamp-Anti-Sway Bar	2
21	3231-25	Bolt-CARR	4
22	324-9	Screw-HH	4
24	87-2480	Link-Stabilizer	2
27	325-13	Screw-HH	4
28	3296-39	Nut-Lock	8
29	87-3110	Absorber-Shock	2
31	3256-27	Washer-Flat	2
32	3256-6	Washer-Flat	2
33	44-0760	Decal-Warning	2
33	93-9879	Decal-Warning (Europe)	2
33	92-6493	Decal-Warning (Japan)	2

 *Not Illustrated

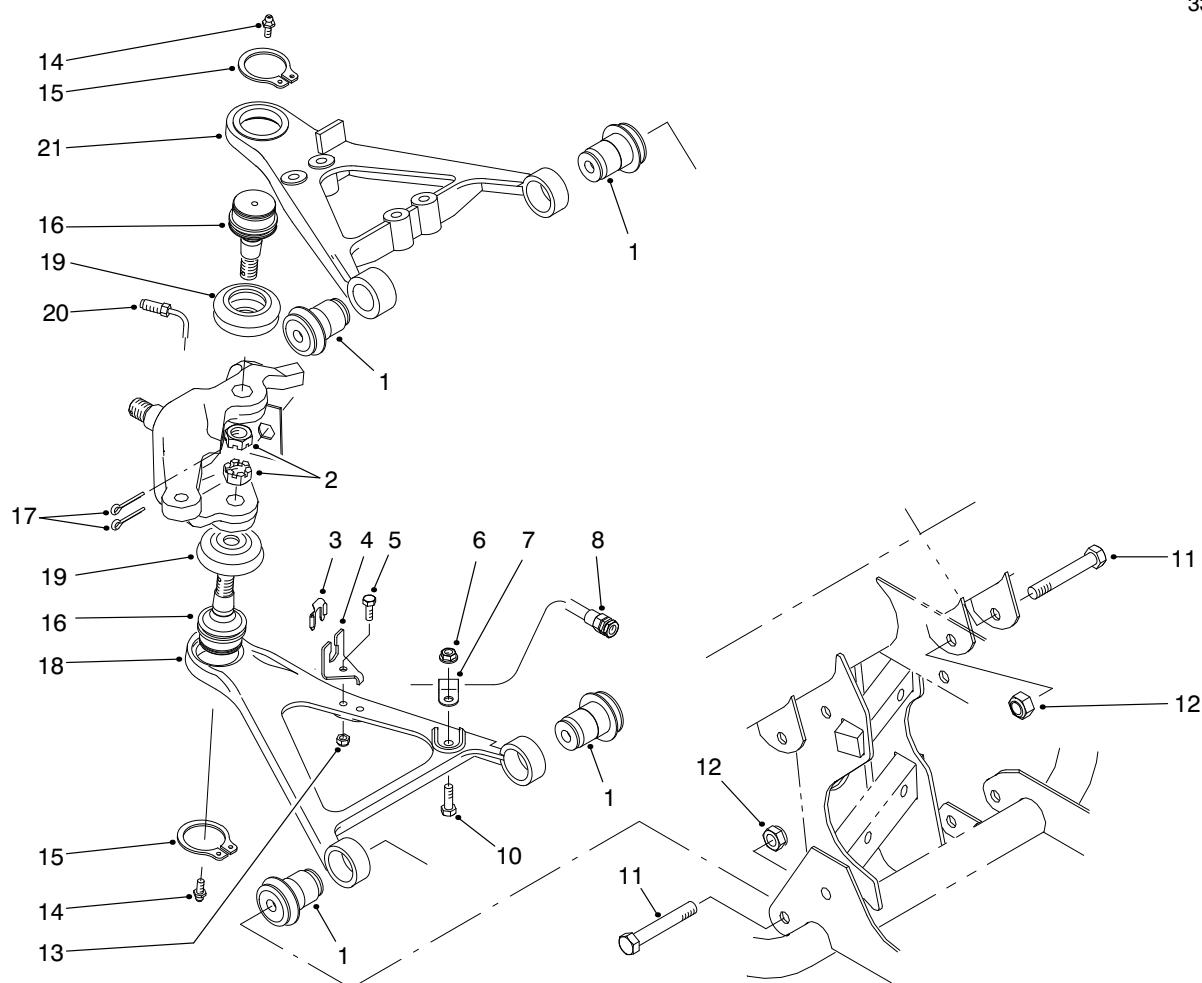


T-1594-1

FRONT SUSPENSION CONTROL ARM ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	87-1450	Bushing-Rubber	8	14	302-5	Fitting-Grease	4
2	32136-2	Nut-Slotted	2	15	32151-104	Ring-Snap	4
3	87-3580	Retainer-Brake Hose	2	16	87-1430	Joint-Ball	4
4	87-2870	Bracket-Brake Hose	2	17	3272-12	Pin-Cotter	4
5	321-6	Screw-HH	2	18	87-0210	Arm-Control Lower RH	1
6	32128-20	Nut-HHF	2	*	87-0220	Arm-Control Lower LH	1
7	2412-10	Clamp-R	2	19	87-2420	Boot	4
8	93-7123	Hose-Brake Front	2	20	87-2800	Tube-Brake RH	1
10	322-5	Screw-HH	2	*	87-2790	Tube-Brake LH	1
11	325-13	Screw-HH	8	21	93-7135	Arm-Control Upper RH	1
12	3296-23	Nut-Lock	8	*	93-7133	Arm-Control Upper LH	1
13	3296-42	Nut-Lock	2				

 *Not Illustrated

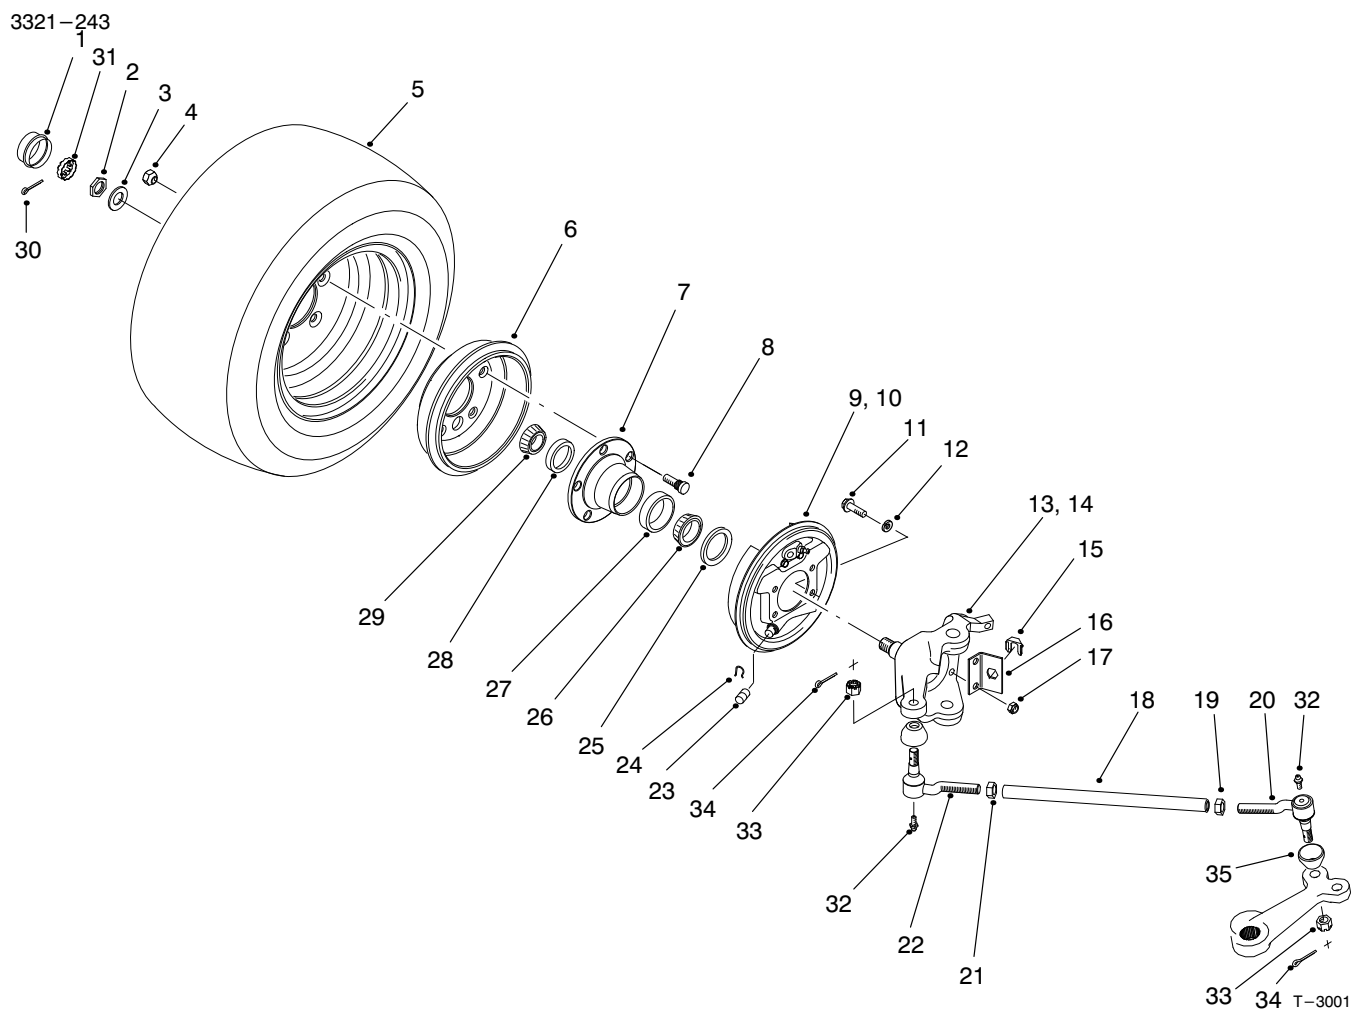


FRONT WHEEL ASM

Ref. No.	Part No.	Description	No. Used
1	241-119	Cap-Dust	2
2	3220-7	Nut-Jam	2
3	93-0309	Washer-Tab	2
4	23-7270	Nut-Lug	10
5	98-2977	Asm-Tire & Wheel	2
6	87-0270	Drum-Brake	2
7	87-5560	Hub-Wheel	2
8	87-8730	Stud-Drive	10
9	87-3010	Asm-Brake RH	1
10	87-3020	Asm-Brake LH	1
11	323-8	Screw-HH	8
12	3253-21	Washer-Lock	8
13	87-9430	Spindle-RH	1
14	87-9440	Spindle-LH	1
15	87-3580	Retainer	2
16	87-2820	Bracket-Hose	2
17	3296-39	Nut-Lock	8
18	87-2410	Rod-Tie	2
19	3218-21	Nut-Jam	2
20	87-1470	Asm-Rod End LH Thread (Incl. Ref. #32-35)	2

Ref. No.	Part No.	Description	No. Used
21	3220-11	Nut-Jam	2
22	87-1480	Asm-Rod End RH Thread (Incl. Ref. #32-35)	2
23	87-3450	Plug	2
24	87-3310	Clip-Brake Cable	2
25	87-3590	Seal-Bearing	2
26	254-106	Cone-Bearing	2
27	254-107	Cup-Bearing	2
28	254-72	Cup-Bearing	2
29	254-94	Cone-Bearing	2
30	3272-12	Pin-Cotter	2
31	93-0307	Nut-Retainer	2
32	302-5	Fitting-Grease	4
34	3272-12	Pin-Cotter	4
33	32136-3	Nut-Slotted	4
34		Seal-Rod End	4
*	87-5340	Kit-Seal, Tie Rod End (Incl. Ref. #32-35)	4

 *Not Illustrated

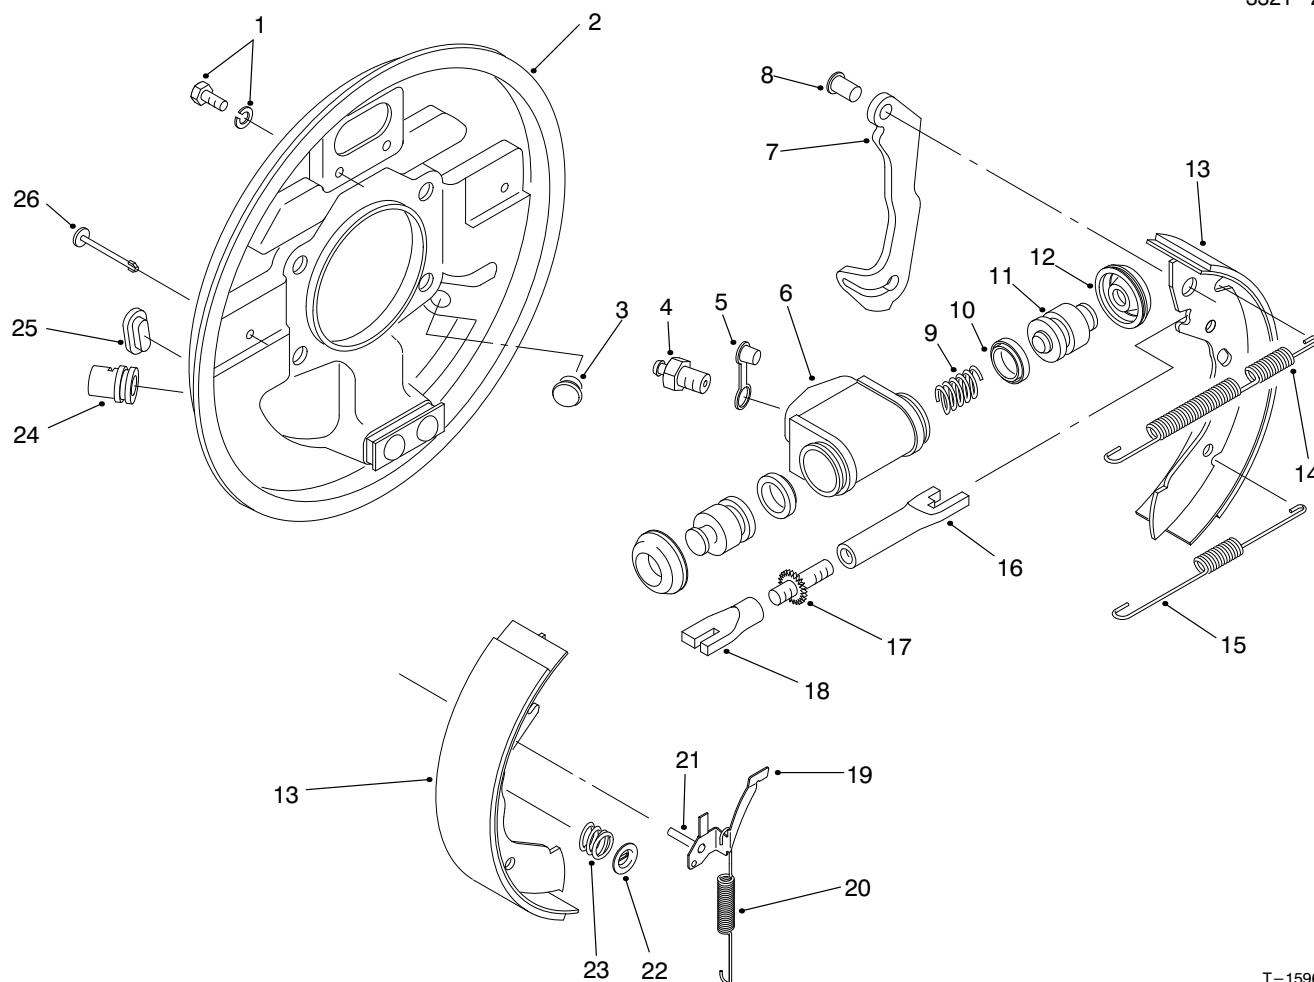


T-1596-1

FRONT BRAKE ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	92-4135	Set Bolt	2	19	92-4123	Asm-Pawl LH (Incl. Ref. #21)	1
2	92-4115	Asm-Backplate LH (Incl. Ref. #24)	1	*	92-4124	Asm-Pawl RH (Incl. Ref. #21)	1
*	92-4116	Asm-Backplate RH (Incl. Ref. #24)	1	20	92-4129	Spring-Adjuster, LH	1
3	92-4125	Plug	1	*	92-4130	Spring-Adjuster, RH	1
4	92-4113	Screw-Bleed	1	21	92-4131	Pin-Pawl	1
5	92-4114	Cap-Bleed Screw	1	22	92-4132	Washer-Hold Down	2
6		Body	1	23	92-4132	Spring-Hold Down	2
7		Lever-Operating LH/RH	1	24		Guide-Pipe	1
8		Pin	1	25	92-4134	Plug-Inspection	1
9		Spring	1	26	92-4133	Pin-Hold Down	2
10		Seal-'L' Type	2	*	92-4121	Asm-Adjuster LH (Incl. Ref. #16-18)	1
11		Piston	2	*	92-4122	Asm-Adjuster RH (Incl. Ref. #16-18)	1
12		Cover-Dust	2	*	92-4117	Asm-Wheel Cylinder LH (Incl. Ref. #4-6 & 9-12)	1
13	92-4120	Shoe & Lining Set (Incl. Ref. #7 & 8)	1	*	92-4118	Asm-Wheel Cylinder RH (Incl. Ref. #4-6 & 9-12)	1
14	92-4126	Spring-Shoe, Upper LH	1	*	92-4119	Kit-Seal (Incl. Ref. #10 & 12)	1
*	92-4127	Spring-Shoe, Upper RH	1	*	87-3010	Asm-Front Brake RH (Complete)	1
15	92-4128	Spring-Shoe, Lower	1	*	87-3020	Asm-Front Brake LH (Complete)	1
16		Pushrod-Female LH	1				
*		Pushrod-Female RH	1				
17		Bolt-Adjuster	1				
18		Sleeve-Adjuster	1				

 *Not Illustrated

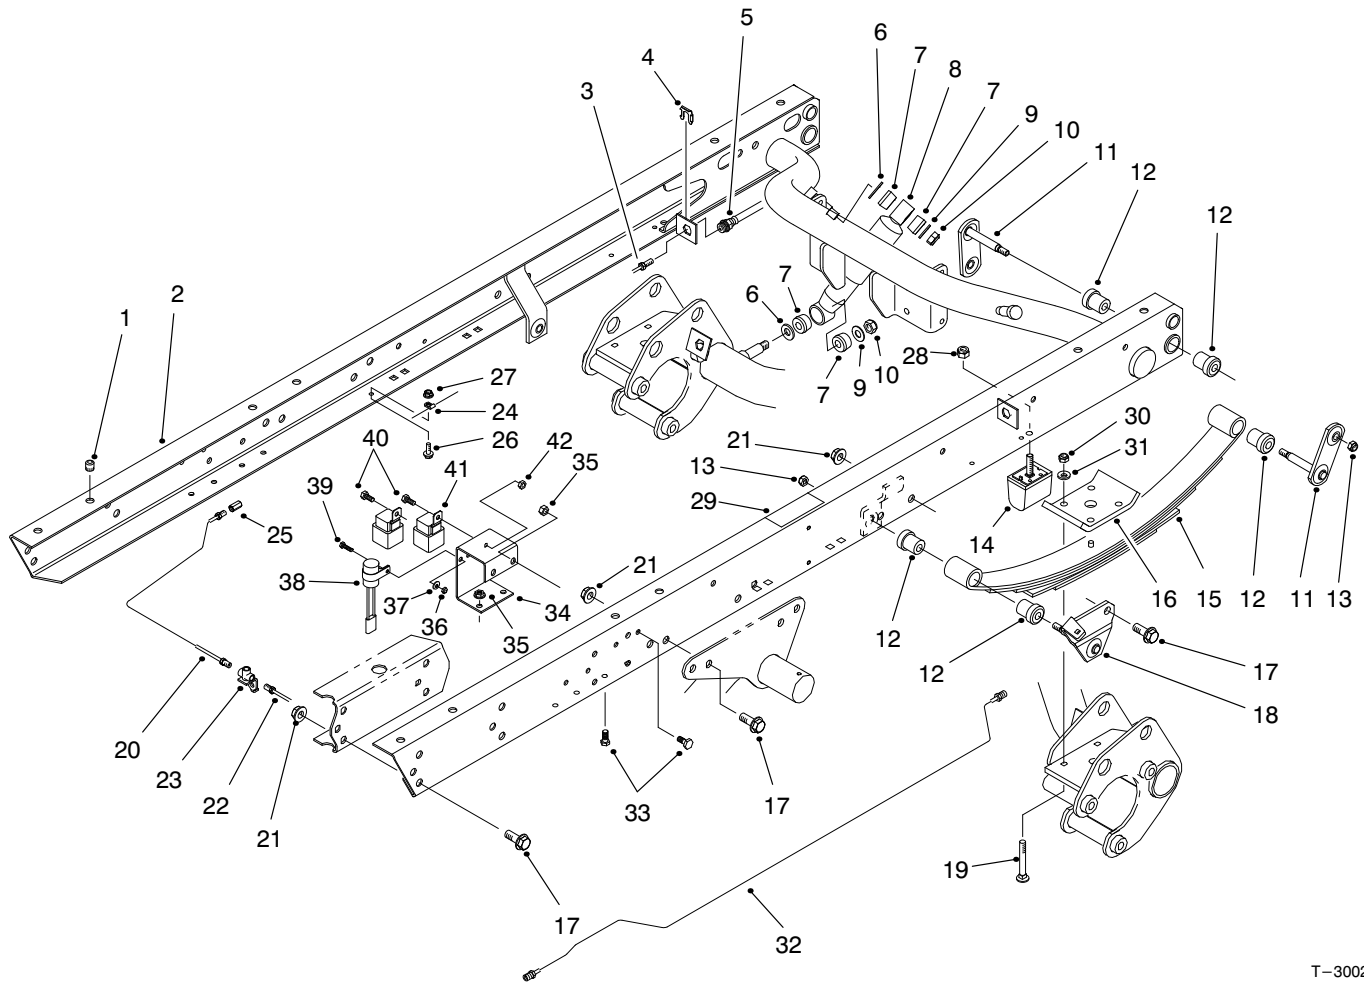


T-3002

REAR FRAME & RELAY ASM

Ref. No.	Part No.	Description	No. Used
1	32148-9	Insert-Threaded	8
2	87-8440	Asm-Rear Frame (Incl. Ref. #29)	1
3	94-3846	Tube-Brake RH	1
*	94-3844	Tube-Brake LH	1
4	87-3580	Retainer	2
5	87-4100	Hose-Brake	2
6	3256-27	Washer-Flat	4
7	87-3920	Bushing-Rubber	8
8	87-3110	Shock Absorber	2
9	3256-6	Washer-Flat	4
10	3296-23	Nut-Lock	4
11	87-3980	Shackle-Spring	4
12	87-4760	Bushing	12
13	3296-39	Nut-Lock	6
14	87-3470	Bumper-Spring	2
15	87-1490	Spring-Leaf	2
16	87-7470	Plate-Clamp	2
17	3234-38	Screw-HFH	24
18	87-3960	Mount-Spring LH	1
*	87-3940	Mount-Spring RH	1
19	3232-17	Bolt-CARR	8
20	94-3845	Tube-Brake RH	1

Ref. No.	Part No.	Description	No. Used
21	32128-23	Nut-HHF	24
22	94-3843	Tube-Brake LH	1
23	87-3560	Tee-Brake Tube	1
24	2412-149	Clamp-Tube	4
25	87-3570	Union-Brake Line	2
26	321-4	Screw-HH	4
27	32128-33	Nut-HHF	4
28	48-9520	Nut-Lock	2
29	66-6840	Decal-Caution	2
30	3296-76	Nut-Lock	8
31	87-7480	Washer-Flat	8
32	94-3844	Asm-Tube, Brake Rear LH	1
33	322-3	Screw-HH	4
34	99-1075	Bracket-Mount, Relay	1
35	32128-20	Nut-HFH	4
36	3296-12	Nut-Lock	1
37	3256-14	Washer-Flat	1
38	99-1063	Timer-Delay	1
39	32105-13	Screw-Machine	1
40	321-3	Screw-HH	2
41	70-1480	Relay-Sealed	2
42	3296-42	Nut-Lock	2

 *Not Illustrated

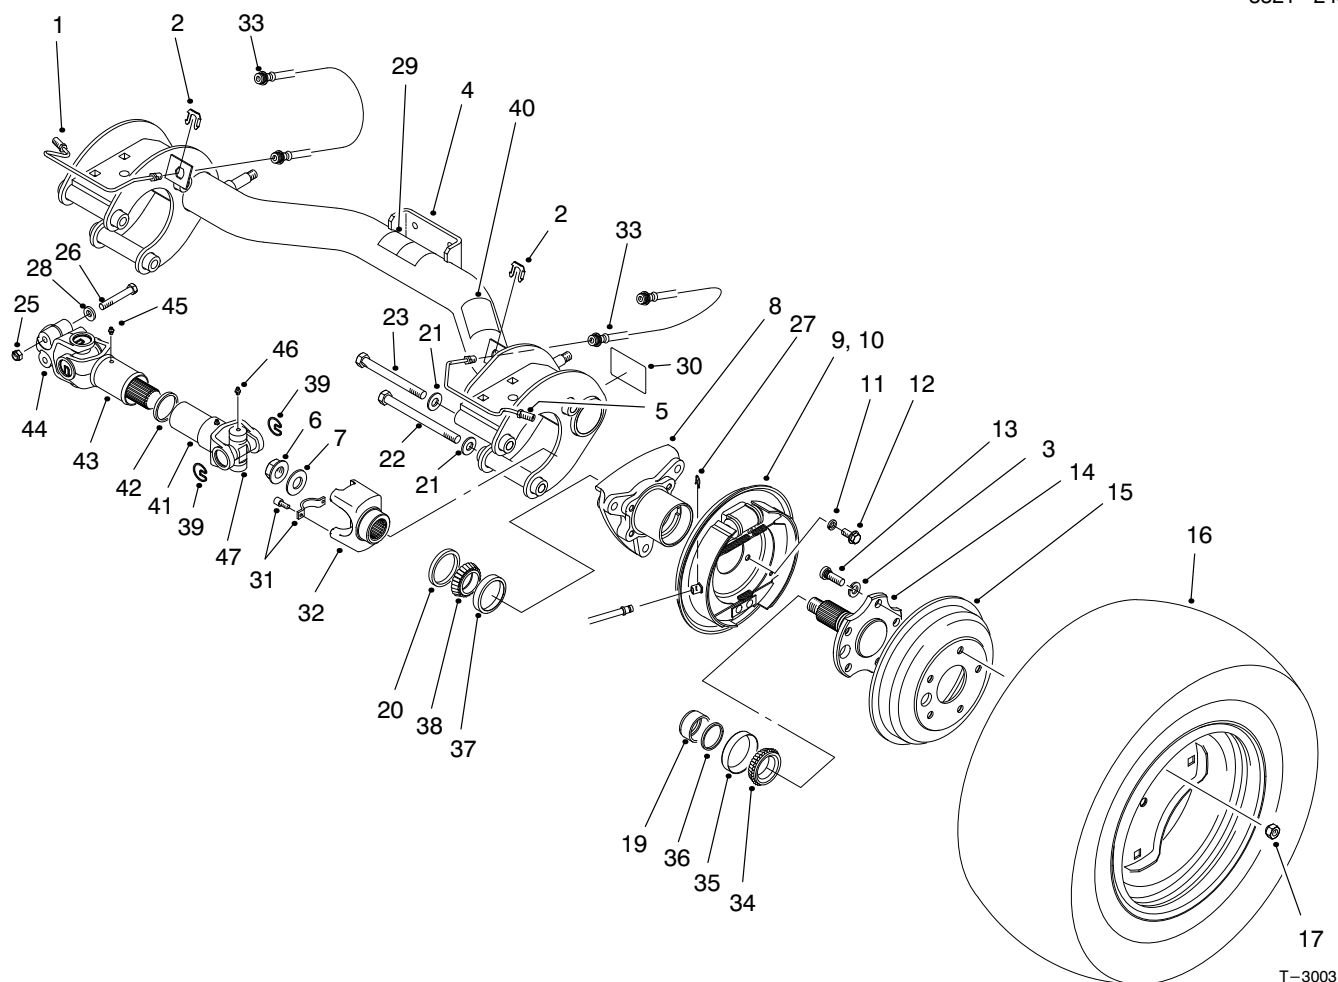


T-3003

REAR AXLE ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	87-4090	Tube-Brake RH	1	*24	98-2918	Asm-Driveshaft (Incl. Ref. #39, 41-47)	2
2	87-3580	Retainer-Brake Hose	2	25	32128-36	Nut-Lock	4
3	3253-6	Washer-Lock	10	26	98-2939	Screw-HH	4
4	87-7110	Asm-Axle, Rear (Incl. Ref. #29, 30 & 40)	1	27	87-3310	Clip-Brake Cable	2
5	87-4080	Tube-Brake LH	1	28	80-6990	Washer	4
6	32128-53	Nut-HHF	2	29	87-6060	Decal-ATF	1
7	87-3060	Washer-Flat	2	30	87-9080	Decal-Grease	2
8	87-2240	Housing-Axle	2	31	92-4189	Kit-Strap & Bolt	2
9	93-7126	Asm-Brake LH	1	32	92-4190	Yoke-End	2
10	93-7125	Asm-Brake RH	1	33	87-4100	Hose-Brake	2
11	3253-21	Washer-Lock	8	†34		Cone-Bearing	2
12	323-6	Screw-HH	8	†35		Cup-Bearing	2
13	87-2080	Stud-Drive	10	†36		Spacer	2
14	93-7090	Stub-Axle	2	†37		Cup-Bearing	2
15	93-7128	Drum-Brake	2	†38		Cone-Bearing	2
16	98-2978	Asm-Tire & Wheel	2	39	92-4188	Ring-Snap	12
17	23-7270	Nut-Lug	10	40	87-5990	Decal-PTO	1
*18	87-1970	Bearing-Matched Set (Use 1 set per wheel) (Incl. Ref. #34-38)	2	41	92-4182	Yoke & Hub	2
19	87-4060	Spacer-Bearing	2	42	92-4180	Seal	2
20	87-3590	Seal-Bearing	2	43	92-4179	Yoke, Shaft & Seal Tube	2
21	87-7270	Washer-Flat	6	44	98-2940	Yoke-Double Clamp	2
22	325-20	Screw-HH	5	45	302-5	Fitting-Grease	2
23	325-19	Screw-HH	1	46	302-58	Fitting-Grease	16
				47	92-4187	Kit-Cross & Bearing	4

*Not Illustrated

 †Not Serviced Separately.

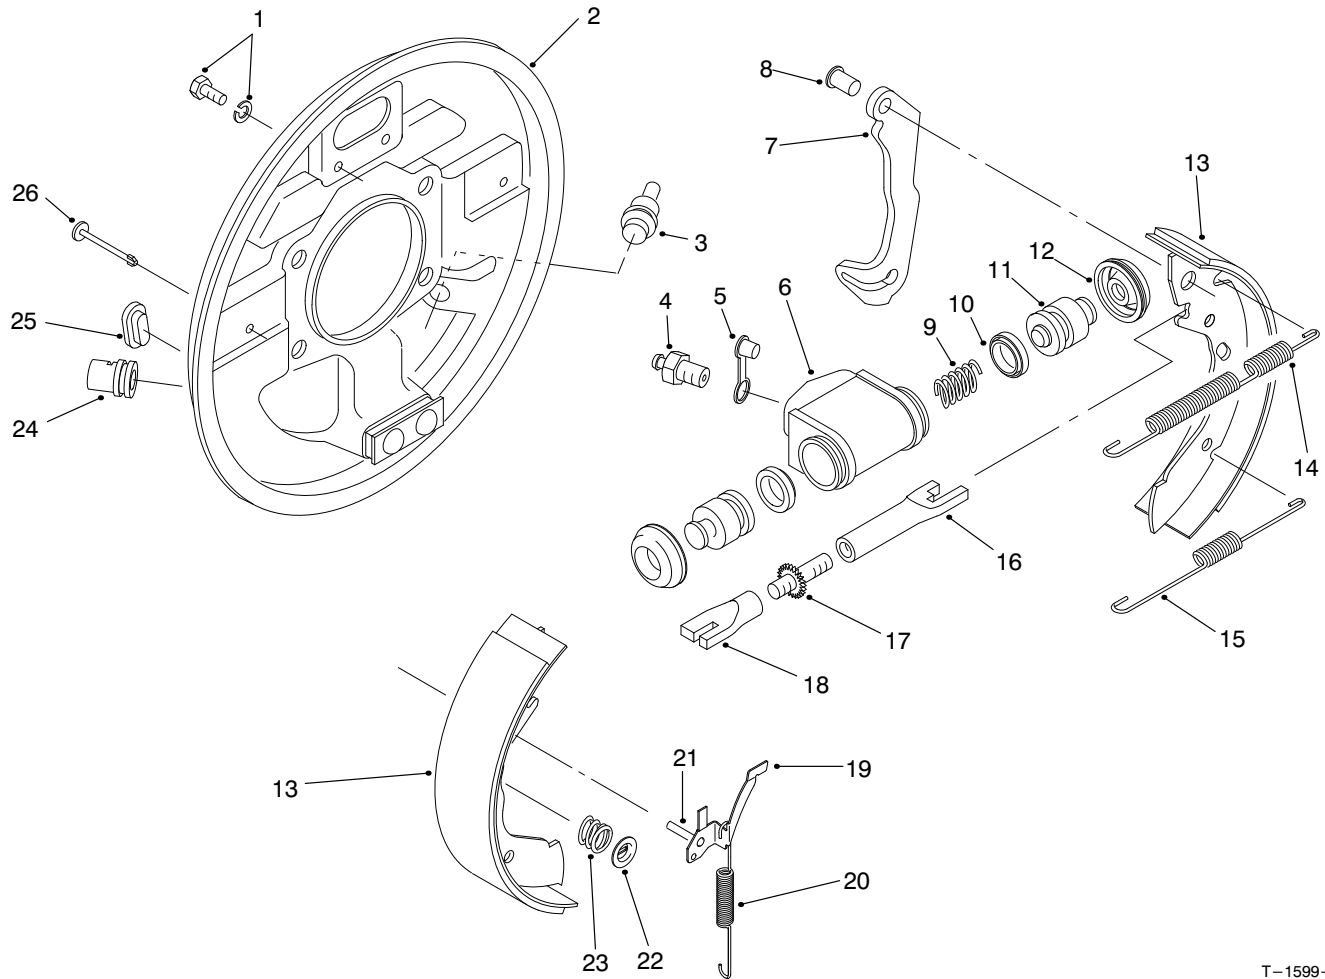


T-1599-1

REAR BRAKE ASM

Ref. No.	Part No.	Description	No. Used
1	92-4135	Set Bolt	2
2	92-4136	Asm-Backplate LH (Incl. Ref. #24)	1
*	92-4100	Asm-Backplate RH (Incl. Ref. #24)	1
3	92-4146	Plug	1
4	92-4137	Screw-Bleed	1
5	92-4114	Cap-Bleed Screw	1
6		Body	1
7		Lever-Operating LH/RH	1
8		Pin	1
9		Spring	1
10		Seal-'L' Type	2
11		Piston	2
12		Cover-Dust	2
13	92-4143	Shoe & Lining Set (Incl. Ref. #7 & 8)	1
14	92-4147	Spring-Shoe, Upper LH	1
*	92-4148	Spring-Shoe, Upper RH	1
15	92-4149	Spring-Shoe, Lower	1
16		Pushrod-Female LH	1
*		Pushrod-Female RH	1
17		Bolt-Adjuster	1
18		Sleeve-Adjuster	1

Ref. No.	Part No.	Description	No. Used
19	92-4123	Asm-Pawl LH (Incl. Ref. #21)	1
*	92-4124	Asm-Pawl RH (Incl. Ref. #21)	1
20	92-4150	Spring-Adjuster, LH	1
*	92-4151	Spring-Adjuster, RH	1
21		Pin-Pawl	1
22	92-4131	Washer-Hold Down	2
23	92-4152	Spring-Hold Down	2
24		Guide-Pipe	1
25	92-4134	Plug-Inspection	1
26	92-4133	Pin-Hold Down	2
*	92-4144	Asm-Adjuster LH (Incl. Ref. #16-18)	1
*	92-4145	Asm-Adjuster RH (Incl. Ref. #16-18)	1
*	92-4140	Asm-Wheel Cylinder LH (Incl. Ref. #4-6 & 9-12)	1
*	92-4141	Asm-Wheel Cylinder RH (Incl. Ref. #4-6 & 9-12)	1
*	92-4142	Kit-Seal (Incl. Ref. #10 & 12)	1
*	93-7125	Asm-Rear Brake RH (Complete)	1
*	93-7126	Asm-Rear Brake LH (Complete)	1

 
*Not Illustrated

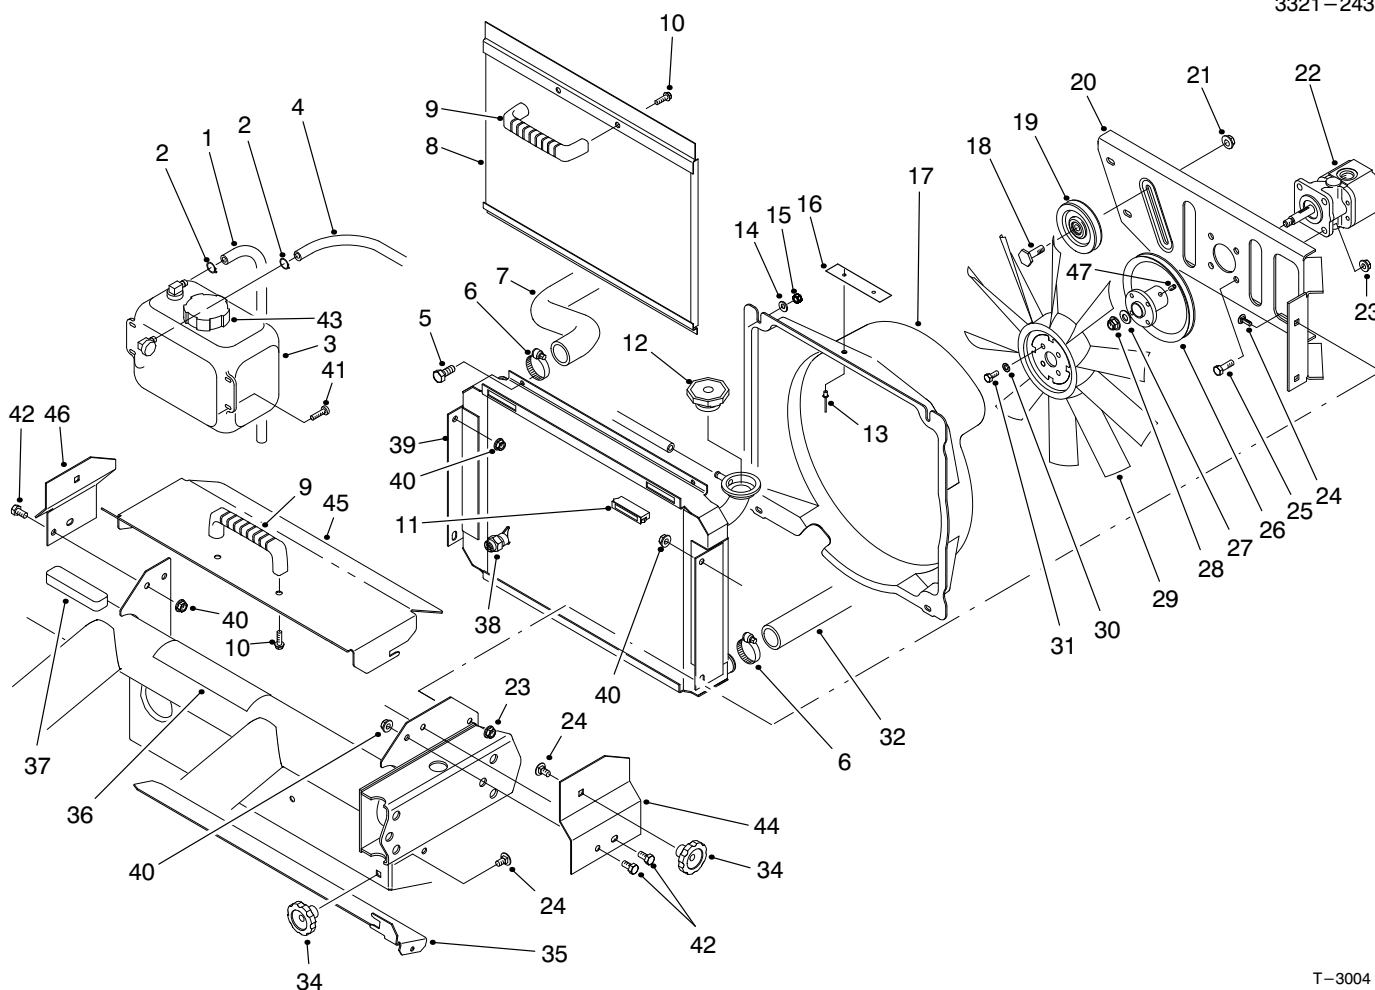

T-3004

RADIATOR & HYDRAULIC PUMP ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	71-3381	Tube-Overflow	2	24	3230-23	Bolt-CARR	7
2	92-2379	Clamp-Hose	2	25	322-5	Screw-HH	4
3	87-3710	Asm-Overflow Reservoir (Incl. Ref. #43)	1	26	94-5237	Pulley	1
4	71-3383	Hose-Overflow	1	27	3256-45	Washer-Flat	1
5	321-4	Screw-HH	4	28	3296-5	Nut-Lock	1
6	2412-34	Clamp-Hose	2	29	84-1880	Fan	1
7	87-7330	Hose-Radiator Upper	1	30	3253-3	Washer-Lock	4
8	93-7103	Screen-Radiator	1	31	321-3	Screw-HH	4
9	65-5100	Handle	2	32	87-4150	Hose-Radiator Lower	1
10	46-8091	Screw-HFH	4	34	19-4050	Knob	3
11	58-4250	Magnet	2	35	87-9300	Door-Clean Out	1
12	66-3240	Cap-Radiator	1	36	87-9420	Decal-Caution	1
13	3290-271	Rivet-Pop	2	37	87-9810	Foam-Overflow Tank	1
14	3256-22	Washer-Flat	4	38	92-4111	Petcock-Radiator	1
15	3296-42	Nut-Lock	4	39	93-7051	Asm-Radiator (Incl. Ref. #38)	1
16	76-8750	Plate-Warning	1	40	32128-20	Nut-Lock	6
17	92-4198	Asm-Fan Shroud (Incl. Ref. #13 & 16)	1	41	3250-20	Screw-RH	4
18	32141-86	Screw-Leveler	1	42	322-2	Screw-HH	6
19	63-8140	Pulley	1	43	87-7050	Cap-Reservoir	1
20	93-7088	Support-Fan	1	44	93-8938	Bracket-Cover Mount LH	1
21	3290-357	Nut-HFH	1	45	93-8940	Cover-Radiator	1
22	99-1054	Asm-Hydraulic Pump	1	46	93-8939	Bracket-Cover Mount RH	1
23	3296-29	Nut-Lock	8	47	3245-31	Screw-Set	1

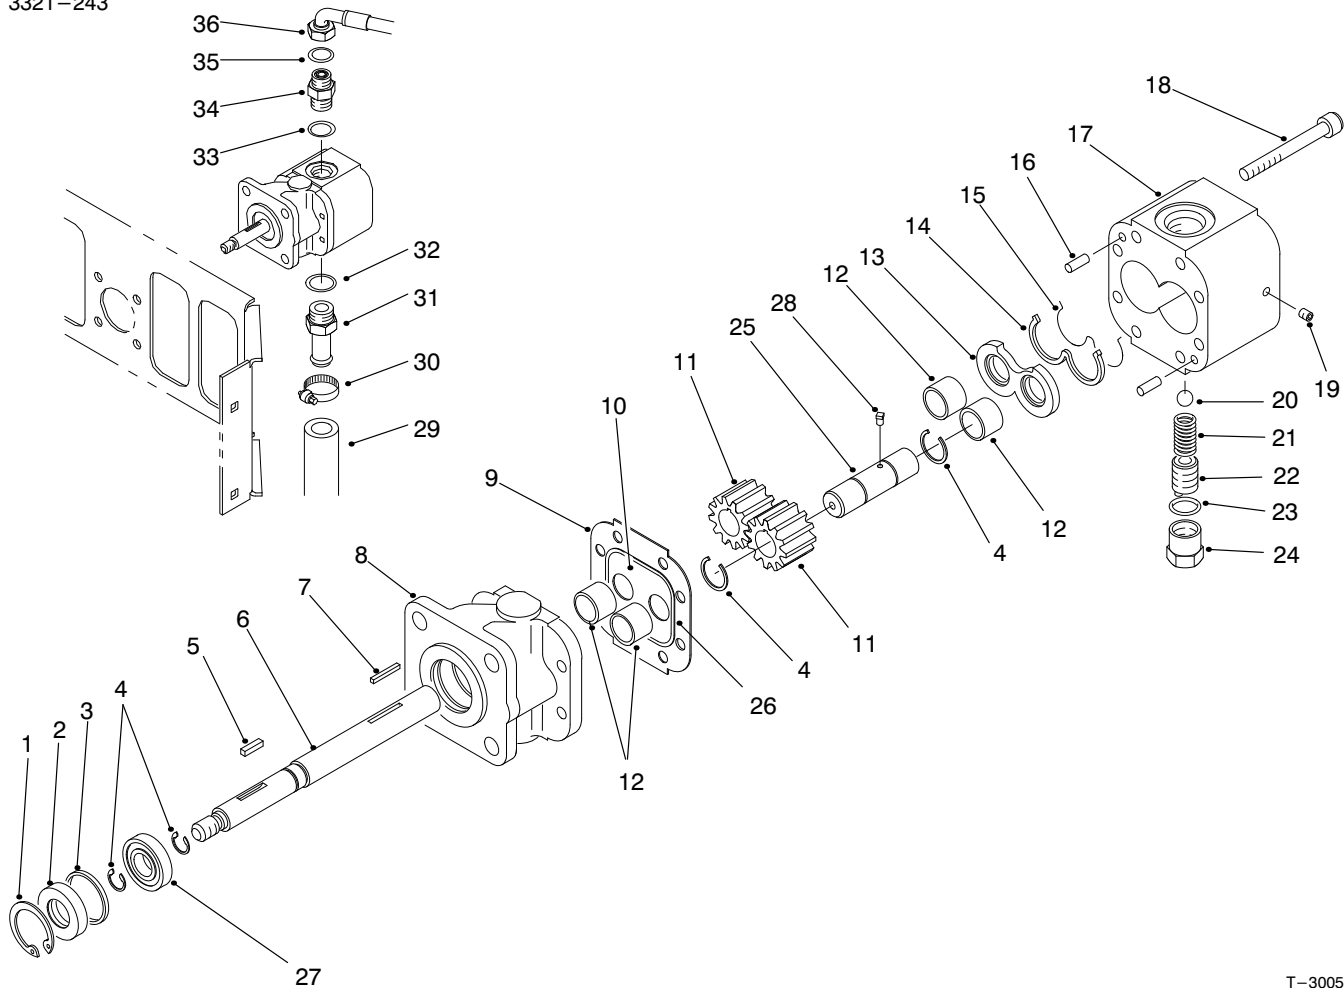 


T-3005

HYDRAULIC PUMP ASSEMBLY NO. 99-1054

Ref. No.	Part No.	Description	No. Used
1	32151-41	Ring-Retaining	1
2	92-2195	Seal-Oil	1
3	92-2186	Spacer	1
4	92-2178	Ring-Crescent	4
5	92-2179	Key-Square	1
6	92-2189	Shaft-Drive	1
7	92-2177	Pin-Shear	1
†8		Stator	1
9	92-2182	Plate-Seal	1
10	92-2183	Plate-Wear	1
11	92-2175	Gear	2
12	92-2192	Bearing	4
13	92-2181	Plate-Pressure	1
14	92-2197	Seal-Back Up	1
15	92-2196	Seal-Pressure Plate	1
16	92-2176	Pin-Dowel	2
17	92-2187	Housing-Gear, End	1
18	92-2173	Screw-CSH	8

Ref. No.	Part No.	Description	No. Used
19	92-2185	Plug	1
20	92-2193	Ball	1
21	99-1060	Spring	1
22	92-2174	Screw-Adjusting	1
23	92-2180	Gasket-Copper	1
24	92-2184	Cap-Relief Valve	1
25	92-2190	Shaft-Idler	1
26	92-2198	Seal	1
27	92-2191	Bearing	1
28	92-2199	Key-Ball	1
29	87-7350	Hose-Suction	1
30	2412-34	Clamp	1
31	354-136	Fitting-Straight	1
32	340-7	O-Ring	1
33	237-79	O-Ring	1
34	340-3	Fitting-Adapter	1
35	237-22	O-Ring	1
36	99-1053	Asm-Hose	1

 
† Not Serviced Separately.

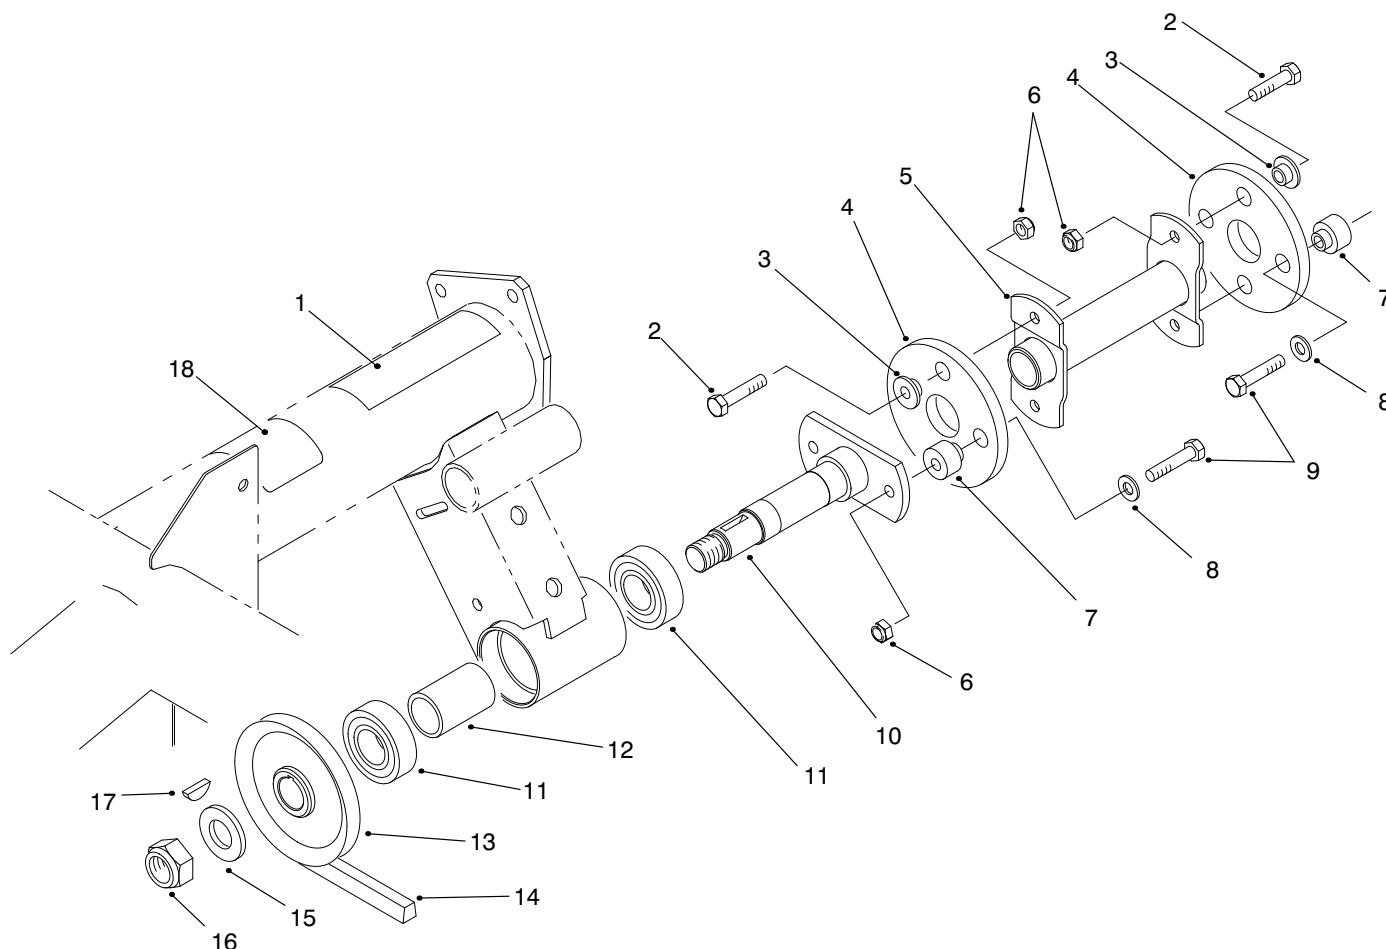

T-1660-1

HYDRAULIC PUMP DRIVE ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	80-8040	Decal-Caution	1	10	87-2720	Driveshaft	1
2	322-5	Screw-HH	4	11	251-82	Bearing-Ball	2
3	27-6600	Spacer-Thin	4	12	87-2750	Spacer-Bearing	1
4	44-2230	Disc-Rubber	2	13	87-3370	Pulley	1
5	87-4120	Driveshaft	1	14	93-7140	Belt-V	1
6	3296-29	Nut-Lock	6	15	3256-28	Washer-Flat	1
7	27-6590	Spacer-Thick	4	16	3296-15	Nut-Lock	1
8	3256-3	Washer-Flat	4	17	3257-7	Key-Woodruff	1
9	322-7	Screw-HH	4	18	83-9150	Decal-Fluid	1

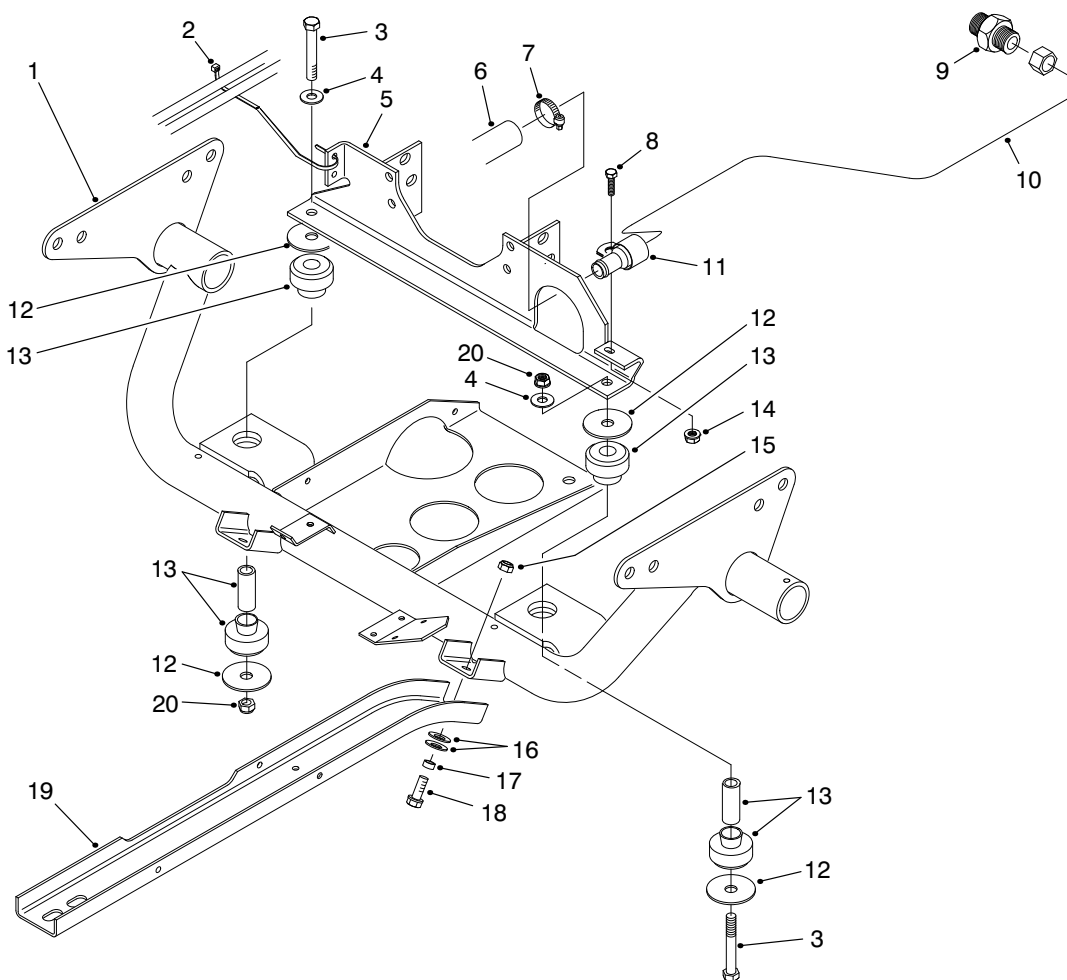 


T-1661-1

ENGINE FRAME ASM

Ref. No.	Part No.	Description	No. Used
1	93-7099	Frame-Engine	1
2	3290-378	Tie-Cable	1
3	324-12	Screw-HH	2
4	3256-25	Washer-Flat	2
5	93-7100	Mount-Engine	1
6	87-7350	Hose-Suction	1
7	2412-34	Clamp-Hose	1
8	321-4	Screw-HH	1
9	87-7290	Fitting-Hydraulic	1
10	87-6900	Tube-Hydraulic	1


Ref. No.	Part No.	Description	No. Used
11	2412-106	Clamp-R	1
12	87-5100	Washer-Flat	4
13	87-4970	Asm-Engine Mount	2
14	32128-33	Nut-HHF	1
15	3296-39	Nut-Lock	6
16	3290-413	Washer-Belleville	12
17	76-9100	Spacer	6
18	3234-11	Screw-HH	6
19	87-4730	Guard-Belly	2
20	3296-48	Nut-Lock	2

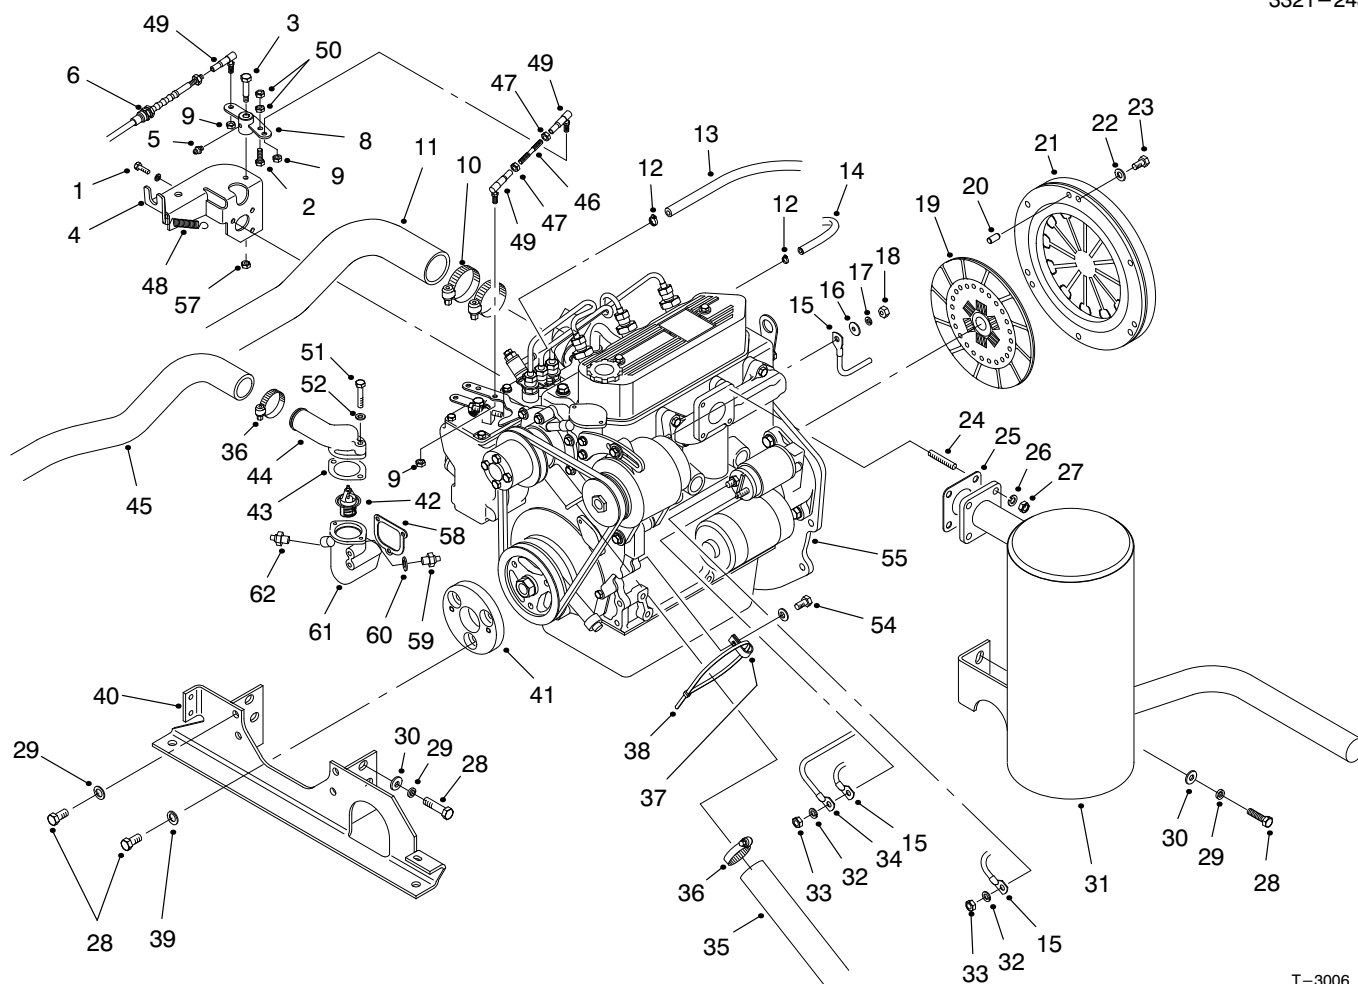 

T-3006

ENGINE INSTALLATION ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	42-9440	Screw-HH	3	31	94-5213	Muffler	1
2	321-5	Screw-HH	1	32	3254-2	Washer-Lock	2
3	7-0030	Bolt-Shoulder	1	34	87-3070	Cable-Battery Pos.	1
4	94-5259	Bracket-Accelerator	1	35	87-4150	Hose-Radiator Lower	1
5	302-5	Fitting-Grease	1	36	2412-34	Clamp	2
6	94-3836	Cable-Accelerator	1	37	2412-149	Clamp-R	1
8	94-5256	Bell Crank	1	38	3290-379	Tie-Cable	1
9	3296-3	Nut-Lock	3	39	36-4790	Washer-Thrust	3
10	2412-92	Clamp-Hose	2	40	93-7100	Mount-Engine	1
11	94-5238	Hose-Air Intake	1	41	87-4110	Puck-Engine Adapter	1
12	2412-108	Clamp-Hose	2	42	93-8974	Thermostat	1
13	27-5360	Hose-Fuel	1	43	67-4430	Gasket-Thermostat	1
14	98-2945	Hose	1	44	87-3410	Housing-Thermostat	1
15	93-7130	Harness-Wire	1	45	87-7330	Hose-Radiator Upper	1
16	5-3637	Washer-Flat	1	46	93-8995	Rod-Threaded	1
17	43-5920	Washer-Lock	1	47	3220-1	Nut-Jam	2
18	48-7880	Nut-Lock	1	48	86-4760	Spring	3
19	87-4700	Disc-Clutch	1	49	18-1720	Joint-Ball	3
20	51-5610	Pin-Alignment	3	50	3296-56	Nut-Lock	2
21	87-4690	Cover-Clutch	1	51	33113-045	Screw-HH	2
22	3253-4	Washer-Lock	6	52	33093-00	Washer-Flat	2
23	33114-016	Screw-HH	6	54	42-9440	Bolt & Washer	1
24	42-9570	Stud-Muffler	4	55	98-2920	Engine	1
25	42-9110	Gasket-Muffler	1	57	3296-29	Nut-Lock	1
26	42-9850	Washer-Lock	4	58	67-4460	Gasket-Fitting	1
27	33014-00	Nut	6	59	93-3526	Asm-Switch, Thermo	1
28	63-7790	Screw-HH	12	60	67-4490	Gasket	1
29	48-9590	Washer-Lock	10	61	67-4450	Fitting-Thermostat	1
30	3256-25	Washer	6	62	93-3525	Gauge-Water Temp.	1

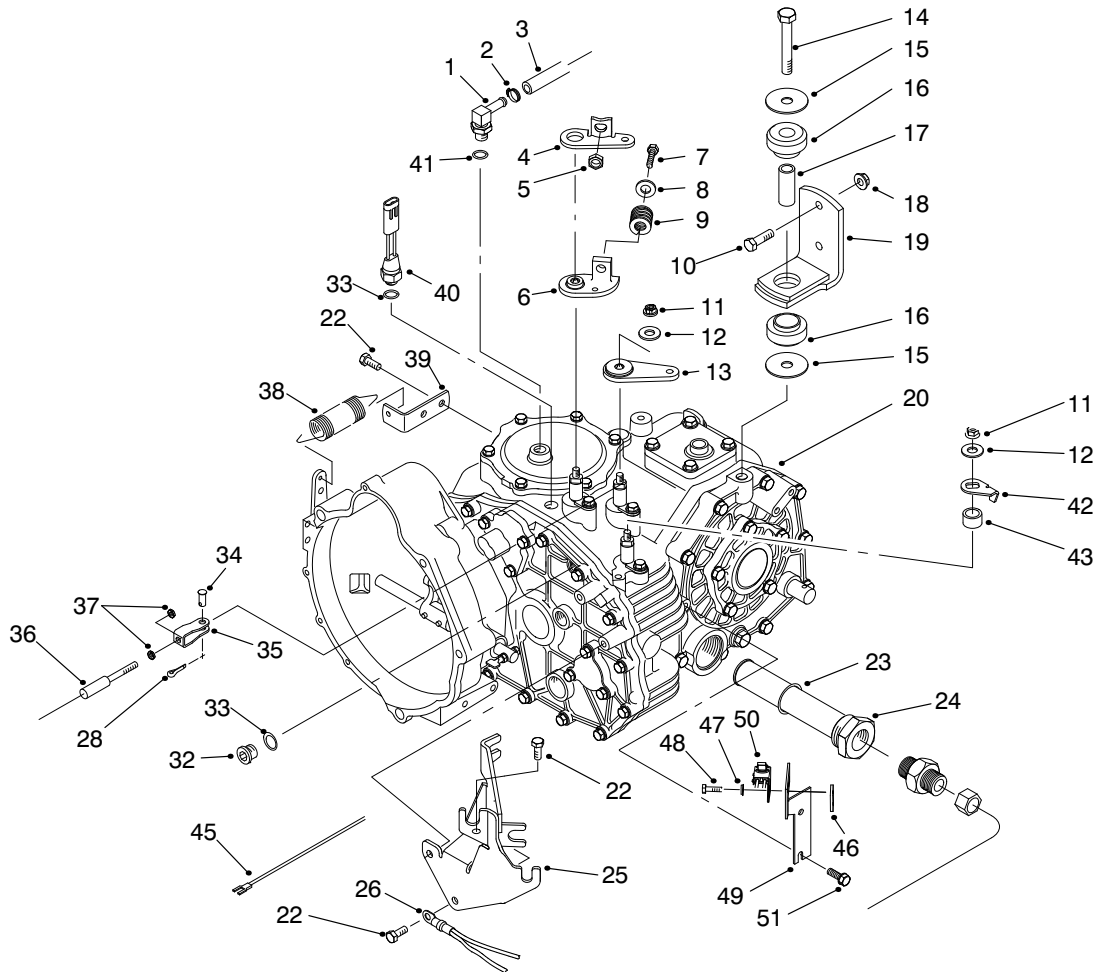 


T-3007-2

TRANSAXLE INSTALLATION ASM

Ref. No.	Part No.	Description	No. Used
1	354-135	Fitting-Hydraulic 90° (Incl. Ref. #41)	1
2	2412-36	Clamp-Hose	1
3	87-5730	Hose-Hydraulic	1
4	87-8250	Plate-Shift Arm	1
5	32128-21	Nut-HHF	1
6	87-7970	Arm-Shift	1
7	323-10	Screw-HH	1
8	3256-4	Washer-Flat	1
9	87-6910	Spring-Compression	1
10	323-7	Screw-HH	4
11	48-9520	Nut-Lock	3
12	80-6990	Washer-Flat	3
13	87-7960	Lever-Shift Arm	1
14	3215-1	Screw-HH	2
15	87-5100	Washer	4
16	87-4970	Asm-Transaxle Mount (Incl. Ref. #17)	2
17		Spacer-Mount	2
18	3296-39	Nut-Lock	4
19	87-5800	Bracket-Mount	2
20	87-9250	Asm-Transaxle	1
22	3314-020	Screw-HH	5
23	237-123	O-Ring	1


Ref. No.	Part No.	Description	No. Used
24	87-3990	Asm-Oil Strainer (Incl. Ref. #23)	1
25	87-4820	Bracket-Cable	1
26	87-3080	Cable-Battery Neg.	1
28	3272-6	Pin-Cotter	2
32	353-989	Plug-Hollow	1
33	237-30	O-Ring	2
34	283-62	Pin-Clevis	2
35	87-2310	Clevis-Cable	2
36	87-4260	Asm-Shift Cable (Incl. Ref. #37)	2
37	3220-1	Nut-Jam	2
38	68-9950	Spring-Extension	1
39	87-7170	Bracket-Clutch Spring	1
40	72-4310	Switch-Ball N.C.	1
41	237-42	O-Ring	1
42	99-1052	Plate-Hi-Lo	1
43	92-6982	Spacer-Plate	1
45	93-3928	Harness-Wire, Reverse	1
46	93-9539	Strip-Tapped	1
47	3256-14	Washer-Flat	2
48	32105-13	Screw-HH	2
49	93-3919	Bracket-Switch, Reverse	1
50	92-7905	Switch-Reverse	1
51		Screw-HH	2

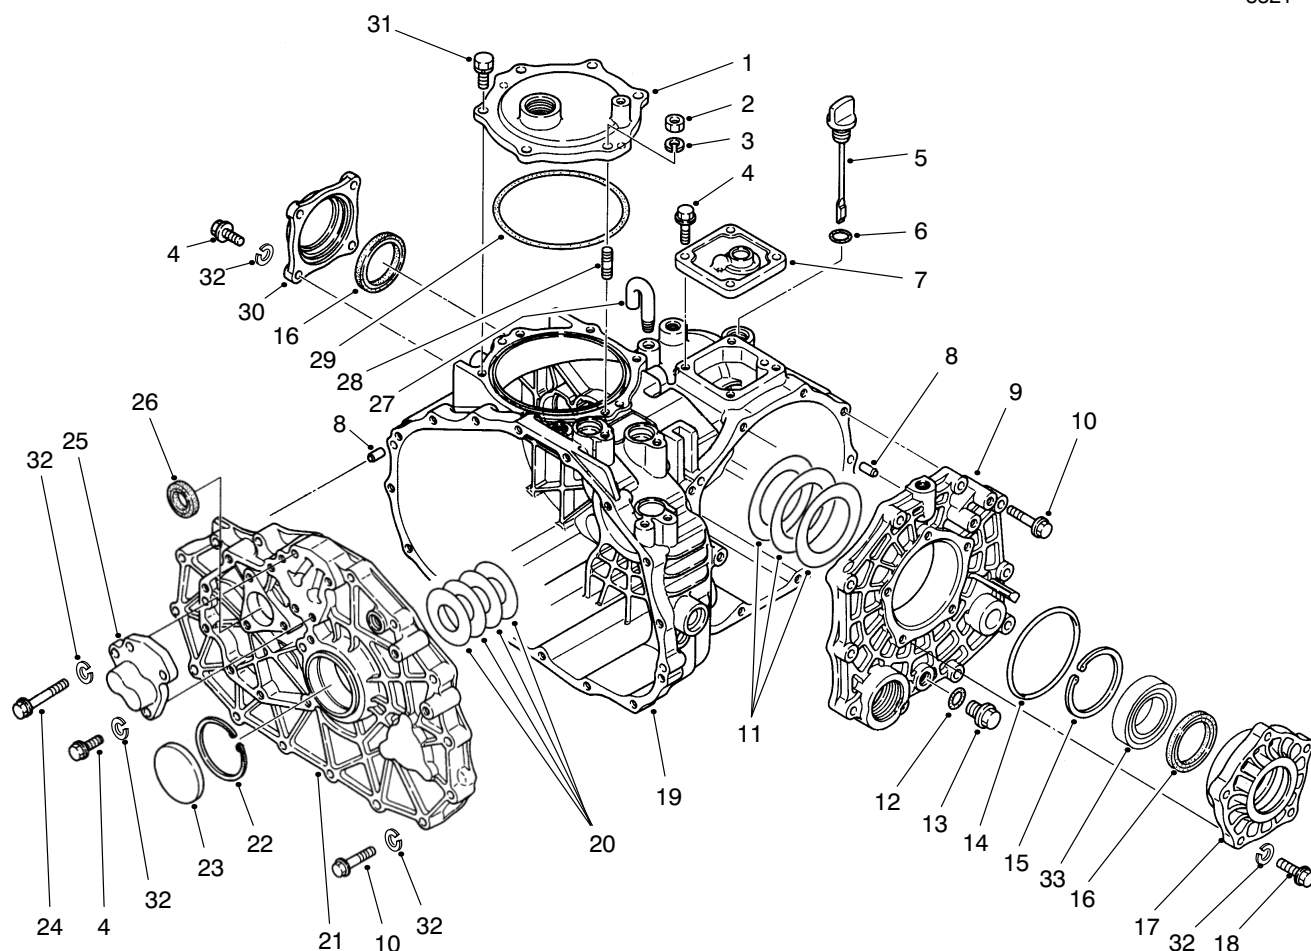 

T-1535

TRANSAXLE CASE ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	92-0656	Cover-P.T.O.	1	17	92-0654	Carrier-Differential	1
2	48-7930	Nut-Hex.	1	18	48-7730	Screw-HH	5
3	92-0762	Washer-Lock	1	19	92-0651	Case-Transaxle	1
4	60-6750	Screw-HH	11	20	92-0808	Shim Set	1
5	92-0662	Cap-Oil	1	21	92-0657	Plate-Center	1
6	92-0788	O-Ring	1	22	92-0759	Ring-Retaining	1
7	92-0652	Cover-Upper	1	23	92-0807	Cap-Sealing	1
8	92-0765	Pin-Alignment	4	24	48-7560	Screw-HH	1
9	92-0653	Cover-Side	1	25	92-0706	Cap-Fork Shaft	1
10	42-9530	Screw-HH	25	26	92-0791	Seal-Oil	1
11	92-0809	Shim Set	1	27	92-0743	Breather-Air	1
12	92-0787	O-Ring	1	28	92-0804	Stud	1
13	92-0773	Asm-Drain Plug (Incl. Ref. #12)	1	29	92-0790	O-Ring	1
14	92-0789	O-Ring	1	30	92-0655	Cover-Seal	1
15	92-0760	Ring-Retaining	1	31	92-0796	Screw-HH	5
16	92-0793	Seal-Oil	2	32	42-9850	Washer-Lock	42
				33	92-0775	Bearing-Ball	2

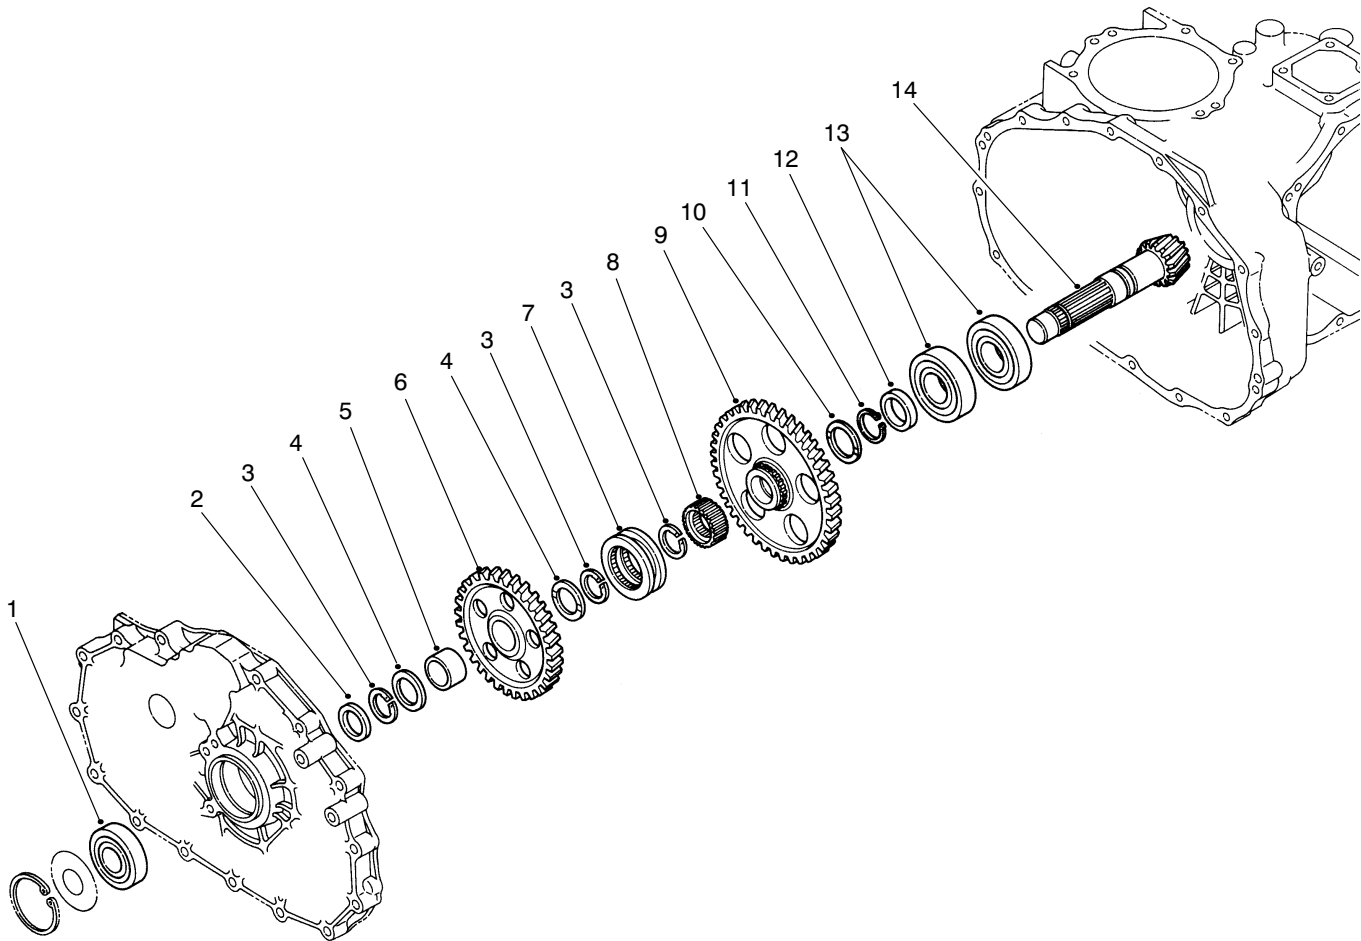 


T-1536

COUNTERSHAFT ASM

Ref. No.	Part No.	Description	No. Used
1	92-0712	Bearing-Ball	1
2	92-0716	Collar	1
3	92-0764	Ring-Retaining	3
4	92-0711	Washer-Thrust	2
5	92-0783	Sleeve-Inner	1
6	92-0715	Gear-49T	1
7	92-0718	Shifter-Hi-Lo	1
8	92-0719	Collar-Spline	1


Ref. No.	Part No.	Description	No. Used
9	92-0717	Gear-71T	1
10	92-0741	Washer-Thrust	1
11	92-0755	Ring-Retaining	1
12	92-0713	Collar	1
13	92-0714	Bearing-Ball	2
14	92-0710	Asm-Counter Shaft (Incl. Ring Gear)	1

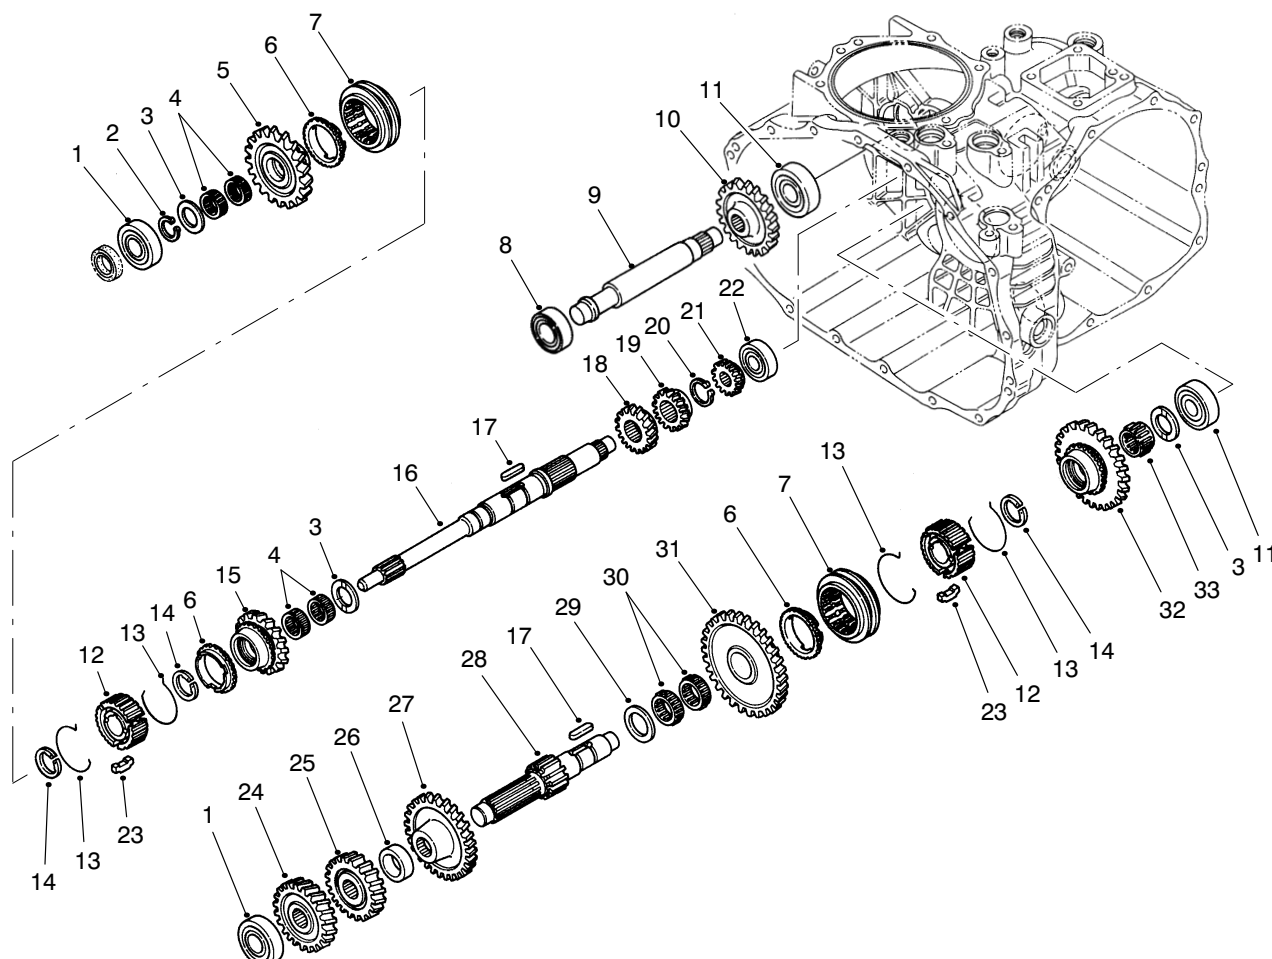 

T-1533

TRANSAXLE GEAR SHAFTS ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	251-8	Bearing-Ball	2	18	92-0687	Gear-16T	1
2	92-0753	Ring-Retaining	1	19	92-0672	Gear-18T	1
3	92-0740	Washer-Thrust	3	20	92-0754	Ring-Retaining	1
4	92-0781	Bearing-Needle	4	21	92-0673	Gear-14T	1
5	92-0820	Gear-27T	1	22	92-0650	Bearing-Ball	1
6	92-0667	Ring-Synchro	3	23	92-0665	Key-Synchro	6
7	92-0668	Shifter-Synchro	2	24	92-0822	Gear-28T	1
8	251-346	Bearing-Ball	1	25	92-0679	Gear-23T	1
9	92-0824	Shaft-Reverse Idler	1	26	92-0680	Collar	1
10	92-0684	Gear-33T	1	27	92-0823	Gear-43T	1
11	92-0778	Bearing-Ball	2	28	92-0674	Shaft-Reduction	1
12	92-0664	Hub-Synchro	2	29	92-0682	Washer-Thrust	1
13	92-0666	Spring-Synchro	4	30	92-0681	Bearing-Needle	2
14	92-0763	Ring-Retaining	3	31	92-0677	Gear-49T	1
15	92-0821	Gear-24T	1	32	92-0819	Gear-40T	1
16	92-0663	Shaft-Main	1	33	92-0782	Bearing-Needle	1
17	92-0772	Key	2				

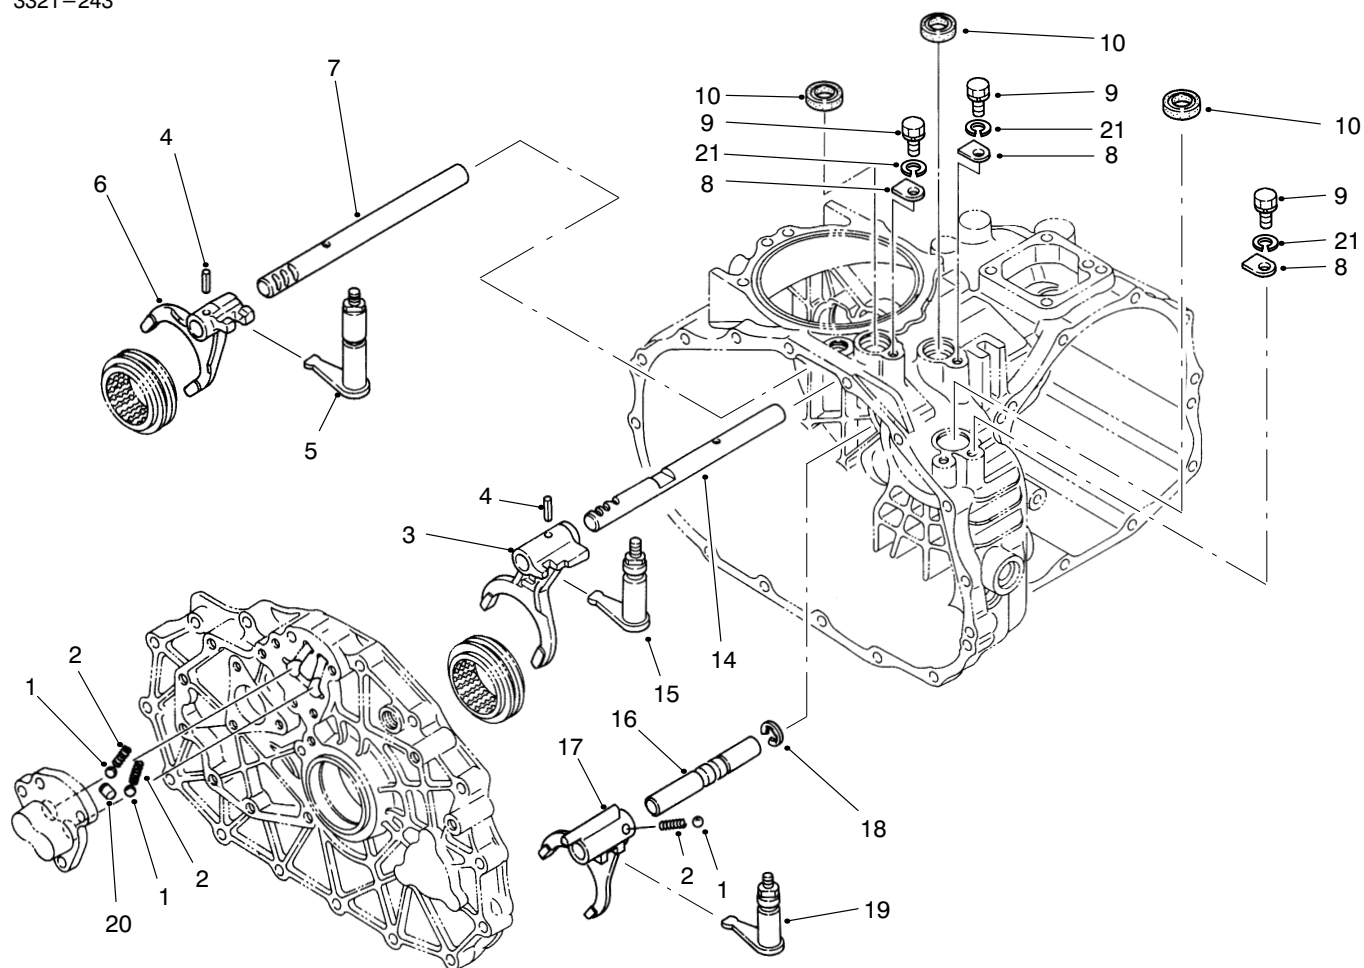 


T-1530

SHIFT FORK ASM


Ref. No.	Part No.	Description	No. Used
1	92-0785	Ball	3
2	92-0731	Spring-Compression	3
3	92-0700	Fork-Shift R-1	1
4	92-0769	Pin-Spring	2
5	92-0817	Arm-Shift Fork 2-3	1
6	92-0701	Fork-Shift 2-3	1
7	92-0699	Shaft-Fork 2-3	1
8	92-0732	Plate-Keeper	3
9	48-7700	Screw-HH	3

Ref. No.	Part No.	Description	No. Used
10	92-0729	Seal-Oil	3
14	92-0698	Shaft-Fork R-1	1
15	92-0816	Arm-Shift Fork R-1	1
16	92-0708	Shaft-Fork Hi-Lo	1
17	92-0709	Fork-Shift Hi-Lo	1
18	92-0761	Ring-Retaining	1
19	92-0818	Arm-Shift Fork Hi-Lo	1
20	92-0705	Lock-Spindle	1
21	42-9850	Washer-Lock	3

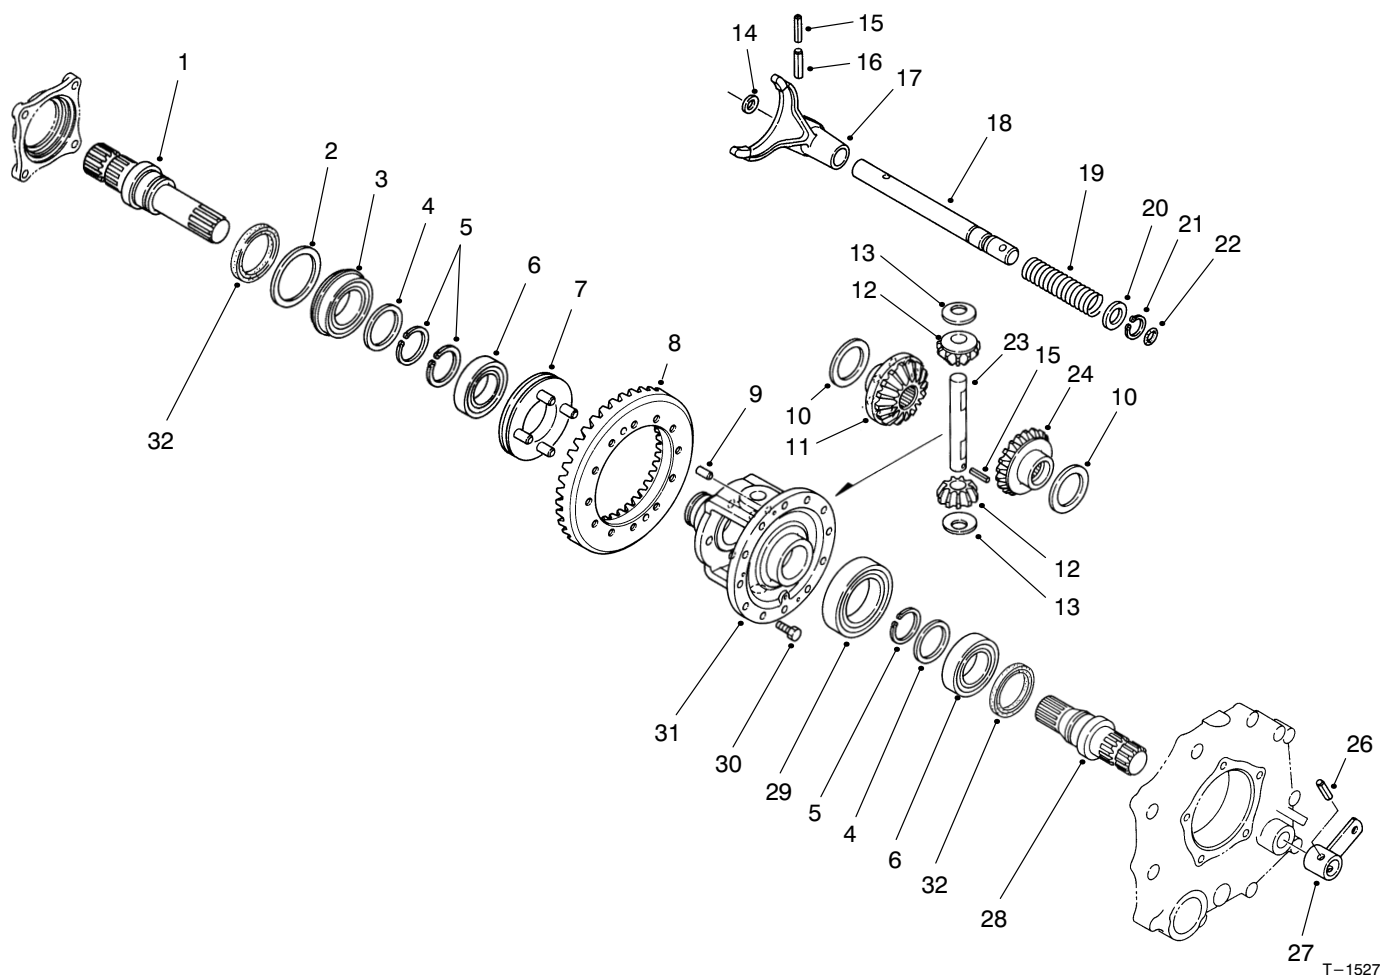 

DIFFERENTIAL GEAR ASM

Ref. No.	Part No.	Description	No. Used
1	92-0726	Shaft-Axle RH	1
2	92-0728	Washer	1
3	92-0780	Bearing-Ball	1
4	92-0727	Washer	2
5	92-0756	Ring-Retaining	3
6	92-0775	Bearing-Ball	2
7	92-0730	Slider-Differential Lock	1
8	92-0710	Asm-Ring Gear (Incl. Counter Shaft)	1
9	92-0765	Pin-Alignment	2
10	92-0747	Washer-Thrust	2
11	92-0746	Gear-Side RH	1
12	92-0748	Gear-Pinion	2
13	92-0750	Washer	2
14	92-0744	Washer	1
15	92-0768	Pin-Spring	2
16	92-0771	Pin-Spring	1
17	92-0721	Fork-Differential Lock	1
18	92-0722	Shaft-Lock Fork	1
19	92-0723	Spring-Compression	1
20	92-0733	Washer	1
21	92-0753	Ring-Retaining	1
22	92-0787	O-Ring	1
23	92-0749	Shaft-Pinion	1
24	92-0745	Gear-Side LH	1
26	92-0770	Pin-Spring	1
27	92-0724	Arm-Differential Lock	1
28	92-0725	Shaft-Axle LH	1
29	92-0776	Bearing-Ball	1
30	92-0803	Screw-HFH	12
31	92-0720	Case-Differential	1
32	92-0793	Seal-Oil	2

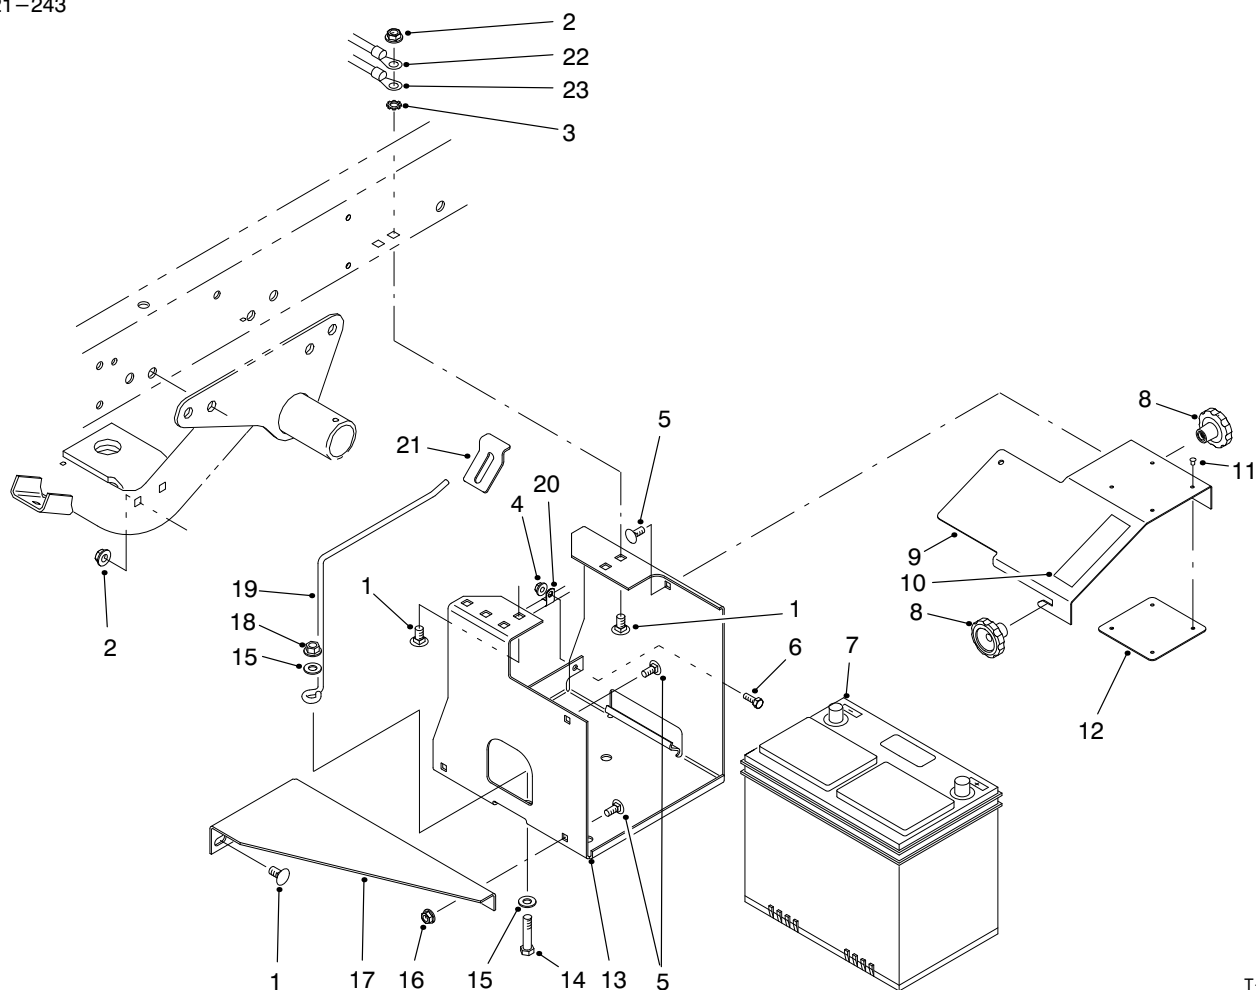 


T-3008

BATTERY MOUNT ASM

Ref. No.	Part No.	Description	No. Used
1	3231-21	Bolt-CARR	6
2	3290-357	Nut-HFH	6
3	3255-9	Washer-Lock ETLW	1
4	32128-33	Nut-HHF	1
5	3230-23	Bolt-CARR	4
6	321-4	Screw-HH	1
7	87-7390	Battery	1
8	19-4050	Knob	2
9	87-5130	Cover-Battery Base	1
10	36-3400	Decal-No Step	1
10	93-6687	Decal-No Step (Europe)	1
10	84-2780	Decal-No Step (Japan)	1
11	3296-27	Rivet-Plastic	4


Ref. No.	Part No.	Description	No. Used
12	87-7620	Shield-Plastic	1
13	87-5120	Bracket-Battery Base	1
14	323-9	Screw-HH	1
15	3256-24	Washer-Flat	2
16	32128-20	Nut-HHF	2
17	87-5110	Support-Lower	1
18	3296-39	Nut-Lock	1
19	87-7600	Rod-Battery Support	1
20	2412-89	Clamp-R	1
21	87-7610	Tab-Battery Support	1
22	93-7130	Harness-Wire Rear	1
23	87-3080	Cable-Battery Neg.	1

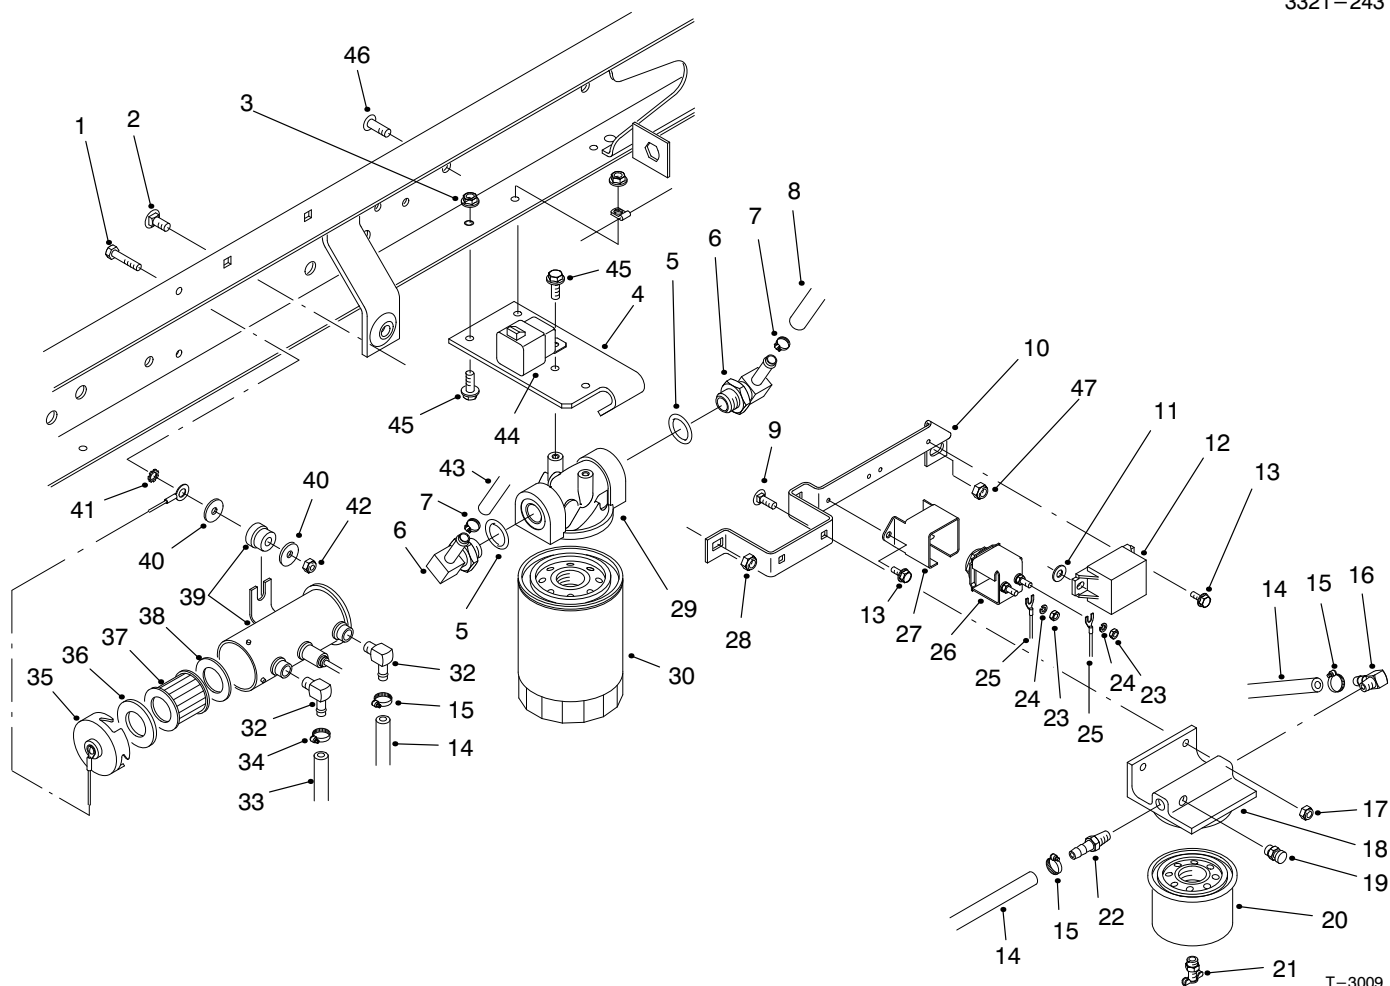 

T-3009

FUEL FILTER, FUEL PUMP & RELAY MOUNTING

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	48-7650	Screw-HH	2	25	93-7130	Harness-Wire	1
2	3230-23	Bolt-CARR	2	26	66-8700	Asm-Glow Plug Indicator (Incl. Ref. #23, 24 & 27)	1
3	32128-33	Nut-HHF	1	27	70-8560	Retainer-Indicator	1
4	87-7040	Bracket-Oil Filter	1	28	3296-29	Nut-Lock	2
5	237-79	O-Ring	2	29	87-8780	Head-Oil Filter	1
6	354-134	Fitting-Hydraulic 90° (Incl. Ref. #5)	2	30	54-0110	Element-Oil Filter	1
7	2412-36	Clamp-Hose	2	32	46-3710	Fitting-90°	2
8	87-5730	Hose-Hydraulic	1	33	63-9640	Hose-Fuel Tank to Pump	1
9	3229-25	Nut-Lock	2	34	92-2379	Clamp-Hose	1
10	87-7380	Bracket-Relay/Indicator	1	35	43-2580	Magnet	1
11	3256-22	Washer-Flat	1	36	43-2560	Gasket	1
12	66-8800	Relay	1	37	43-2550	Filter	1
13	12-5450	Screw-HH	4	38	43-2570	Gasket	1
14	27-5360	Hose-Fuel	2	39	53-8150	Asm-Fuel Pump (Incl. Ref. #35-38)	1
15	2412-108	Clamp-Hose	3	40	3256-67	Washer-Flat	3
16	353-707	Fitting-90° Barb	1	41	3255-7	Washer-ETLW	1
17	3296-42	Nut-Lock	2	42	49-7810	Nut-Lock	2
18	63-8280	Head-Filter	1	43	99-1058	Hose-Hydraulic	1
19	63-8290	Vent-Air	1	44	70-1480	Relay-S.P.D.T.	1
20	63-8300	Element-Filter	1	45	3234-4	Screw-HFH	4
21	63-8310	Drain-Filter	1	46	3274-94	Screw-HSBH	1
22	353-783	Fitting-Straight	1	47	3296-39	Nut-Lock	1
23	43-5970	Nut	2				
24	48-8000	Washer-Lock	2				

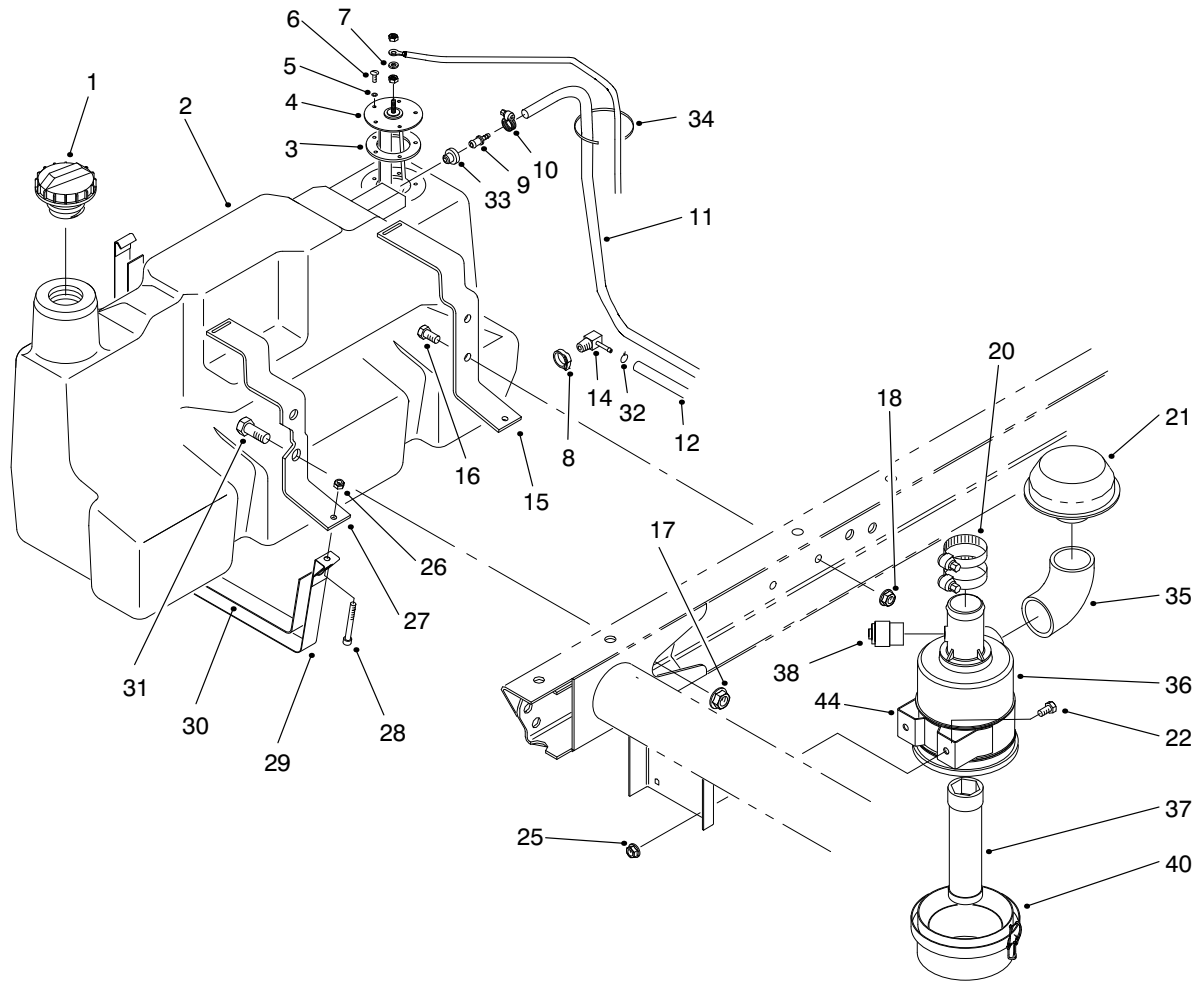 


T-3010-2

FUEL TANK & AIR CLEANER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93-3102	Cap-Fuel	1
2	98-2915	Asm-Fuel Tank (Incl. Ref. #8, 9, 14 & 33)	1
3	62-7650	Gasket-Sending Unit	1
4	63-7640	Unit-Sending	1
5	3253-15	Washer-Lock	5
6	32122-24	Screw-RH	5
7	5-3637	Washer-Flat	1
8	2412-36	Clamp	1
9	98-2952	Fitting-Straight	1
10	2412-108	Clamp-Hose	1
11	98-2945	Hose-Fuel	1
12	63-9640	Hose-Fuel	1
14	353-781	Fitting-Fuel 90°	1
15	87-3140	Support-Rear	1
16	323-4	Screw-HH	2
17	32128-23	Nut-HHF	2
18	3290-357	Nut-HFH	2
19	94-5238	Hose-Air Cleaner	1
20	2412-92	Clamp-Hose	2
21	46-7510	Hood-Inlet, Air	1

Ref. No.	Part No.	Description	No. Used
22	322-2	Screw-HH	2
25	32128-20	Nut-HHF	4
26	3296-42	Nut-Lock	2
27	87-3150	Support-Front	1
28	3274-54	Screw-HSH	2
29	87-3160	Strap-Tank Support	2
30	87-3170	Pad-Tank Support Strap	2
31	3234-38	Screw-HH	2
32	92-2379	Clamp-Hose	1
33	46-6560	Bushing	1
34	3290-378	Cable-Tie	1
35	94-5428	Elbow	1
36	95-5805	Asm-Air Cleaner (Incl. Ref. #40)	1
37	98-2982	Filter-Element, Safety	1
38	93-9164	Indicator-Mini	1
40	94-3652	Asm-Cover	1
41	285-17	Plug	1
43	94-1414	Valve	1
44	93-2191	Asm-Band, Mounting	1

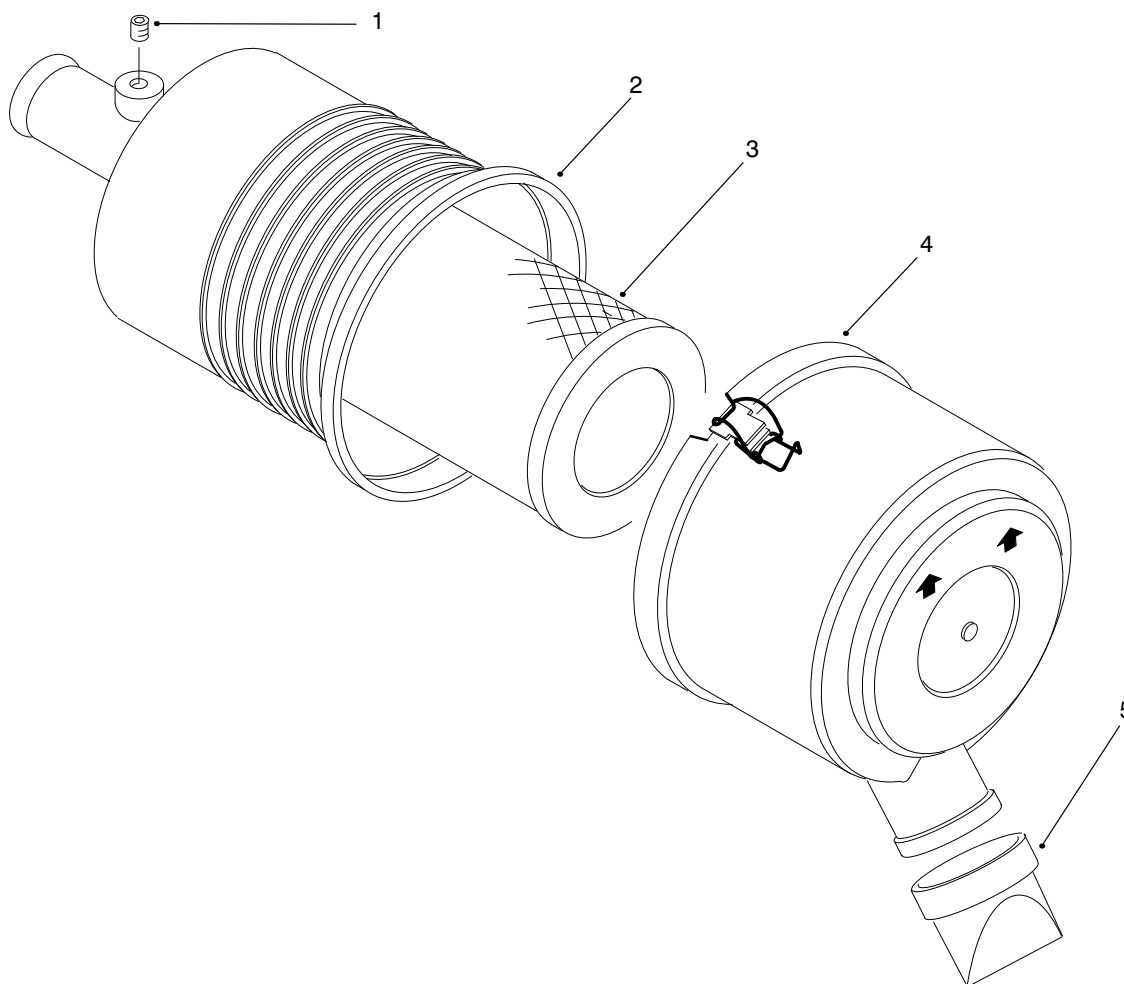 


T-2607

AIR CLEANER ASM NO. 95-5805

Ref. No.	Part No.	Description	No. Used
1	285-17	Plug	1
†2		Asm-Body	1
3	93-2195	Element-Air Cleaner	1

Ref. No.	Part No.	Description	No. Used
4	94-3652	Asm-Cover	1
5	94-1414	Valve-Vacuator	1

 *Not Illustrated
†Not Serviced Separately

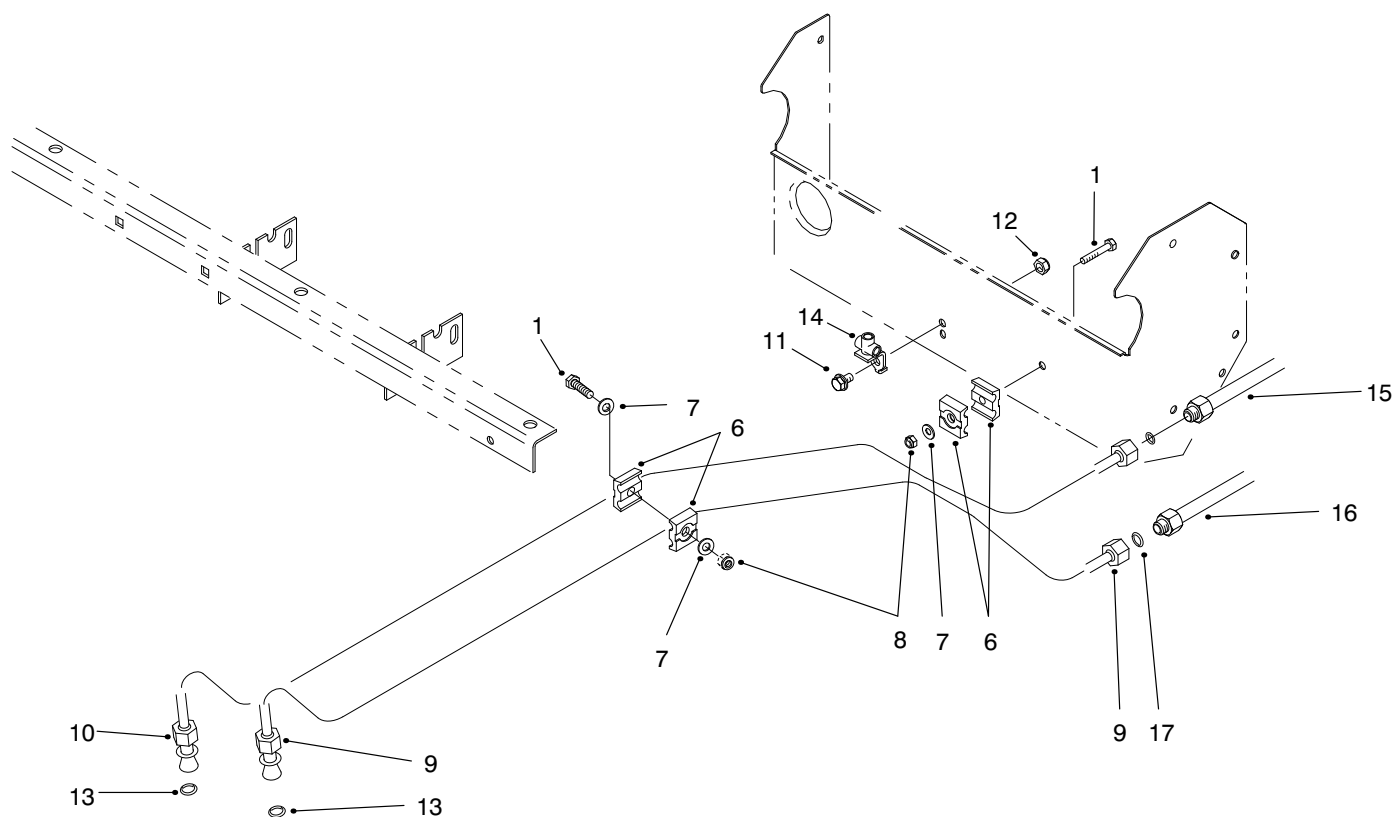


T-3011

STEERING LINE ASM

Ref. No.	Part No.	Description	No. Used
1	321-9	Screw-HH	2
6	56-7973	Clamp-Hydraulic Tube	4
7	3256-22	Washer-Flat	3
8	3296-42	Nut-Lock	2
9	87-9350	Asm-Hydraulic Tube (Incl. Ref. #13)	1
10	87-4540	Asm-Hydraulic Tube (Incl. Ref. #13)	1
11	322-5	Screw-HH	1

Ref. No.	Part No.	Description	No. Used
12	32128-20	Nut-Lock	1
13	39-7310	O-Ring	2
14	87-3560	Tee-Brake Line	1
15	99-1053	Asm-Hose (Incl. Ref. #17)	1
16	99-1058	Asm-Hose (Incl. Ref. #17)	1
17	237-22	O-Ring	2

 *Not Illustrated

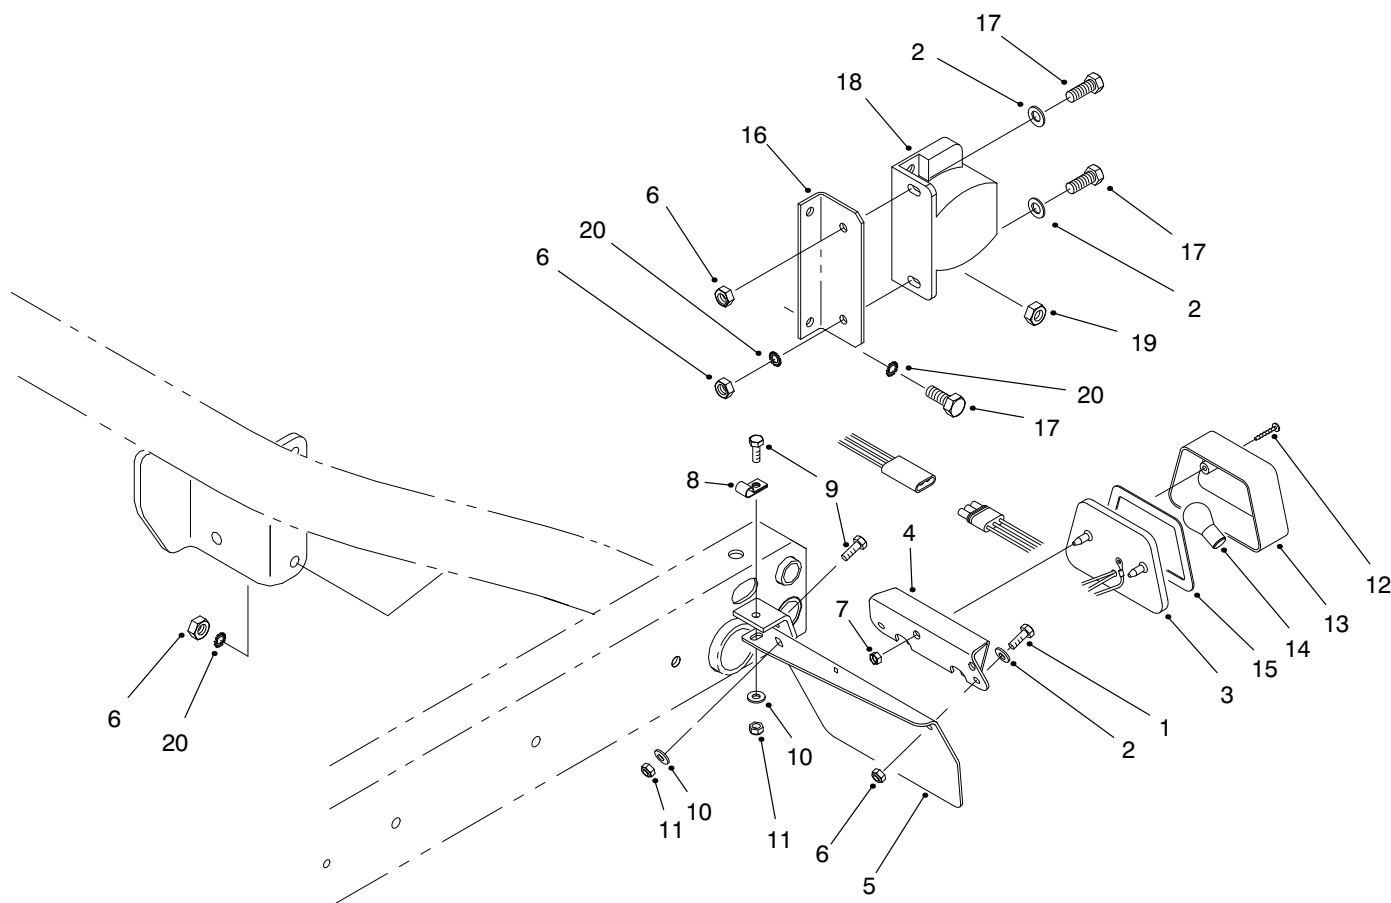


T-3012-2

BACKUP ALARM & TAIL LIGHT ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	321-6	Screw-HH	2	12	32144-93	Screw-Self Tapping	2
2	3256-22	Washer-Flat	4	13	87-6300	Lens	1
3	87-2110	Asm-Tail Light (Incl. Ref. #12-15)	1	14		Bulb (#1157 Std. 12 Volt)	1
4	87-5770	U-Bracket-Tail Light	1	15	87-6310	Gasket	1
5	93-8943	Bracket-Fender, Rear LH	1	16	93-3921	Bracket-Alarm, Reverse	1
6	3296-42	Nut-Lock	6	17	321-5	Screw-HH	4
7	3290-506	Palnut	2	18	93-3920	Alarm-Backup (Incl. Ref. #19)	1
8	2412-93	Clamp-R	1	19		Nut-Lock	1
9	322-5	Screw-HH	2	20	3255-7	Washer-Lock	3
10	3256-23	Washer-Flat	2				
11	3296-29	Nut-Lock	2				

 *Not Illustrated

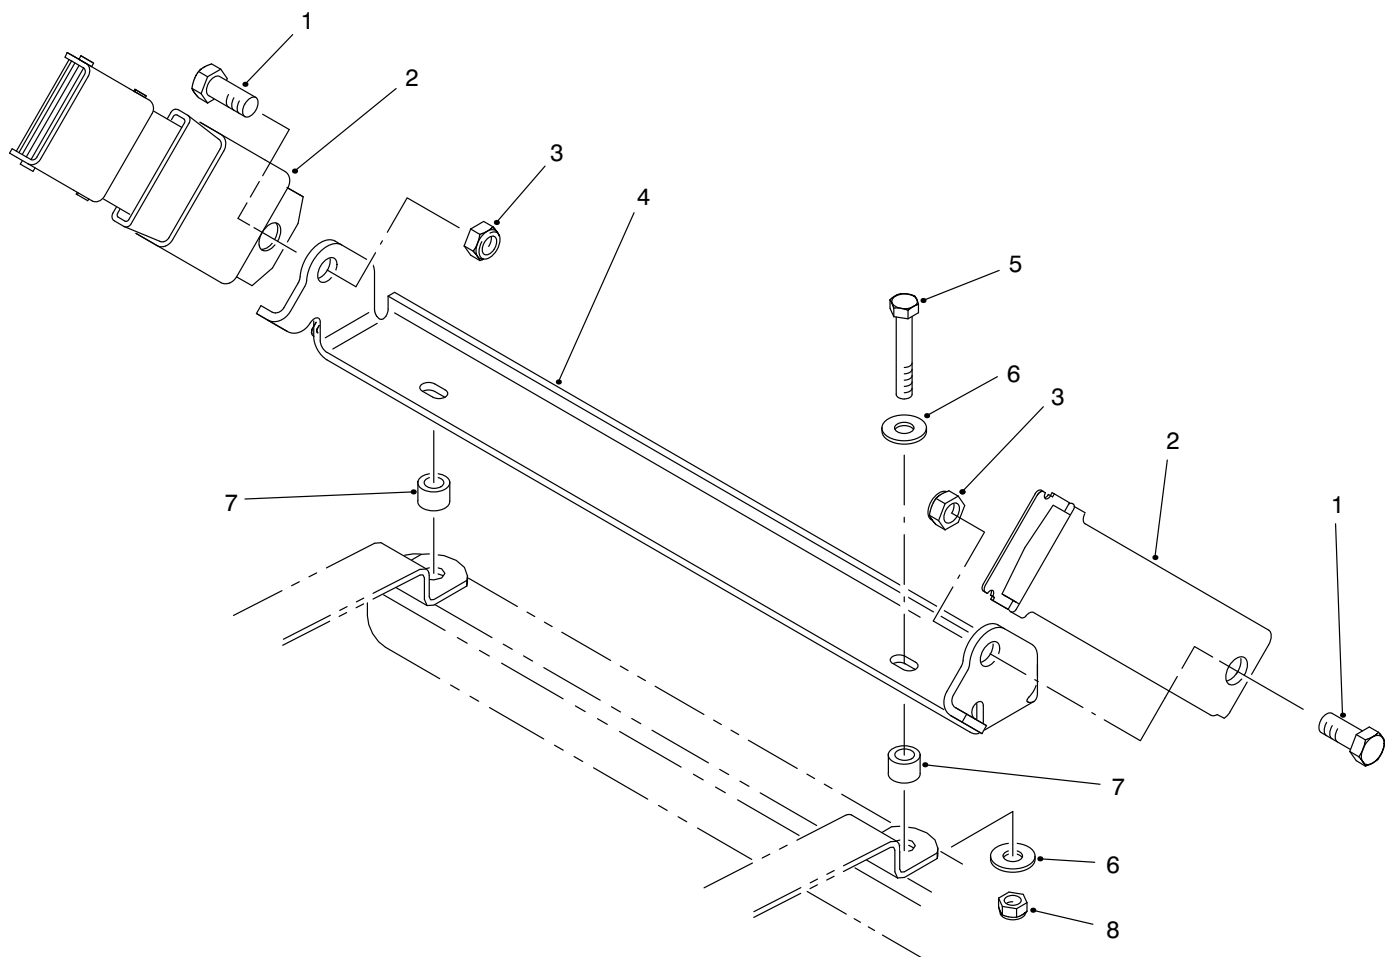


T-1675

SEAT BELT ASM

Ref. No.	Part No.	Description	No. Used
1	3212-4	Screw-HH	4
2	21-4191	Asm-Belt, Seat	2
3	3296-38	Nut-Lock	4
4	87-7280	Bracket-Belt, Seat	2
5	322-10	Screw-HH	4

Ref. No.	Part No.	Description	No. Used
6	3256-3	Washer-Flat	8
7	52-2480	Spacer	4
8	3296-29	Nut-Lock	4
*	92-1295	Kit-Belt, Seat (Incl. Ref. 1-8)	2

 NOTE: Passenger seat asm shown.

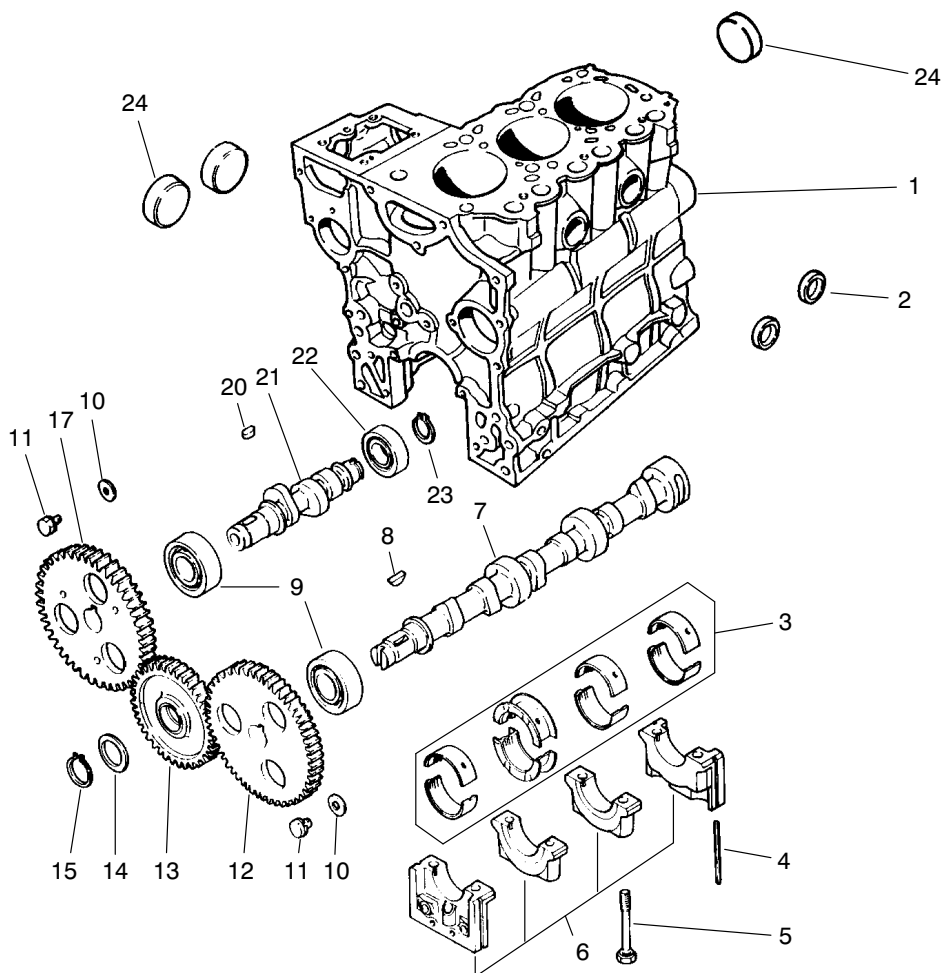


T-0564-1

CAMSHAFT ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	94-1257	Asm-Block Sub (Incl. Ref. #2, 5, 6 & 24)	1	10	67-3000	Washer	2
2	42-7080	Cap	2	11	42-9490	Bolt w/Washer	2
3	75-4900	Bearing Set STD	1	12	92-0827	Gear	1
*	67-2410	Bearing Set 0.25	1	13	92-0842	Asm-Gear	1
*	67-2420	Bearing Set 0.50	1	14	92-0839	Plate	1
4	67-2200	Seal	4	15	92-0841	Ring-Retaining	1
5	67-2250	Bolt	8	17	92-0840	Gear	1
6		Asm-Cap	1	20	42-7840	Key	1
7	67-3010	Cam Shaft	1	21	67-3060	Shaft	1
8	56-0480	Key-Woodruff	1	22	67-3050	Bearing	1
9	67-3030	Bearing	2	23	67-3080	Ring-Retaining	1
				24	56-0020	Plug	3

 *Not Illustrated

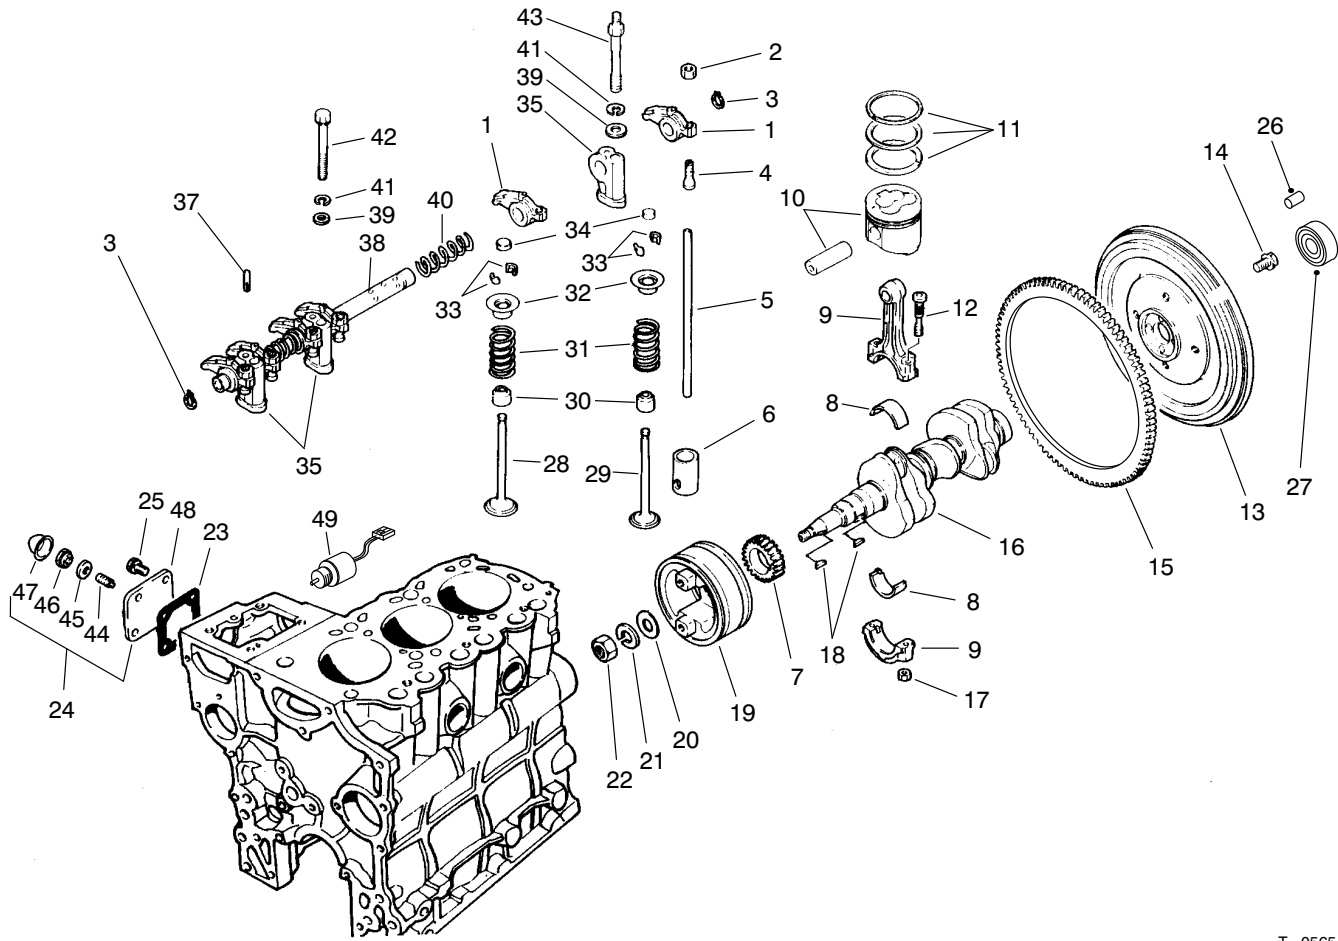


T-0565-1

VALVES AND CRANKSHAFT ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	67-3160	Arm-Rocker	6	19	70-8680	Pulley-Crankshaft	1
2	67-3230	Nut-Jam	6	20	67-2950	Washer	1
3	67-3240	Ring-Retaining	2	21	67-2960	Washer-Lock	1
4	67-3210	Screw-Adjusting	6	22	67-2940	Nut-Jam	1
5	67-3150	Rod-Push	6	23	67-4310	Gasket	1
6	67-3120	Tappet	6	24	75-5110	Asm-Cover (Incl. Ref. #44-48)	1
7	92-0835	Gear	1	25	42-9440	Bolt W/Washer	4
8	75-5010	Bearing Set STD	3	26	51-5610	Pin-Dowel	3
*	67-2890	Bearing Set 0.25 US	3	27	92-1914	Bearing-Ball	1
*	67-2900	Bearing Set 0.50 US	3	28	67-3130	Valve-Intake	3
9	67-2850	Asm-Connecting Rod (Incl. Ref. #12 & 17)	3	29	67-3140	Valve-Exhaust	3
10	93-8973	Piston & Pin Set STD	3	30	42-7870	Seal	6
*	93-8975	Piston & Pin Set 0.25 OS	3	31	67-3110	Spring	6
*	93-8976	Piston & Pin Set 0.50 OS	3	32	67-3100	Retainer	6
11	75-5050	Ring Set STD	3	33	42-7860	Lock	12
*	75-5060	Ring Set 0.25 OS	3	34	67-3180	Cap	6
*	75-5070	Ring Set 0.50 OS	3	35	67-3200	Stay-Rocker	3
12	67-2860	Bolt	6	37	67-3220	Pin	1
13	92-0836	Asm-Flywheel (Incl. Ref. #15)	1	38	67-3190	Asm-Rocker Shaft	1
14	67-2990	Bolt	4	39	42-9660	Washer	4
15	67-2980	Gear-Ring	1	40	67-3170	Spring	2
16	92-0845	Crankshaft	1	41	67-3260	Washer	6
17	42-9590	Nut	6	42	42-9510	Bolt	1
18	56-0480	Key-Woodruff	2	43	67-3250	Bolt-Rockers, Stay	2
				44	43-3160	Screw-Adjusting	1

 *Not Illustrated

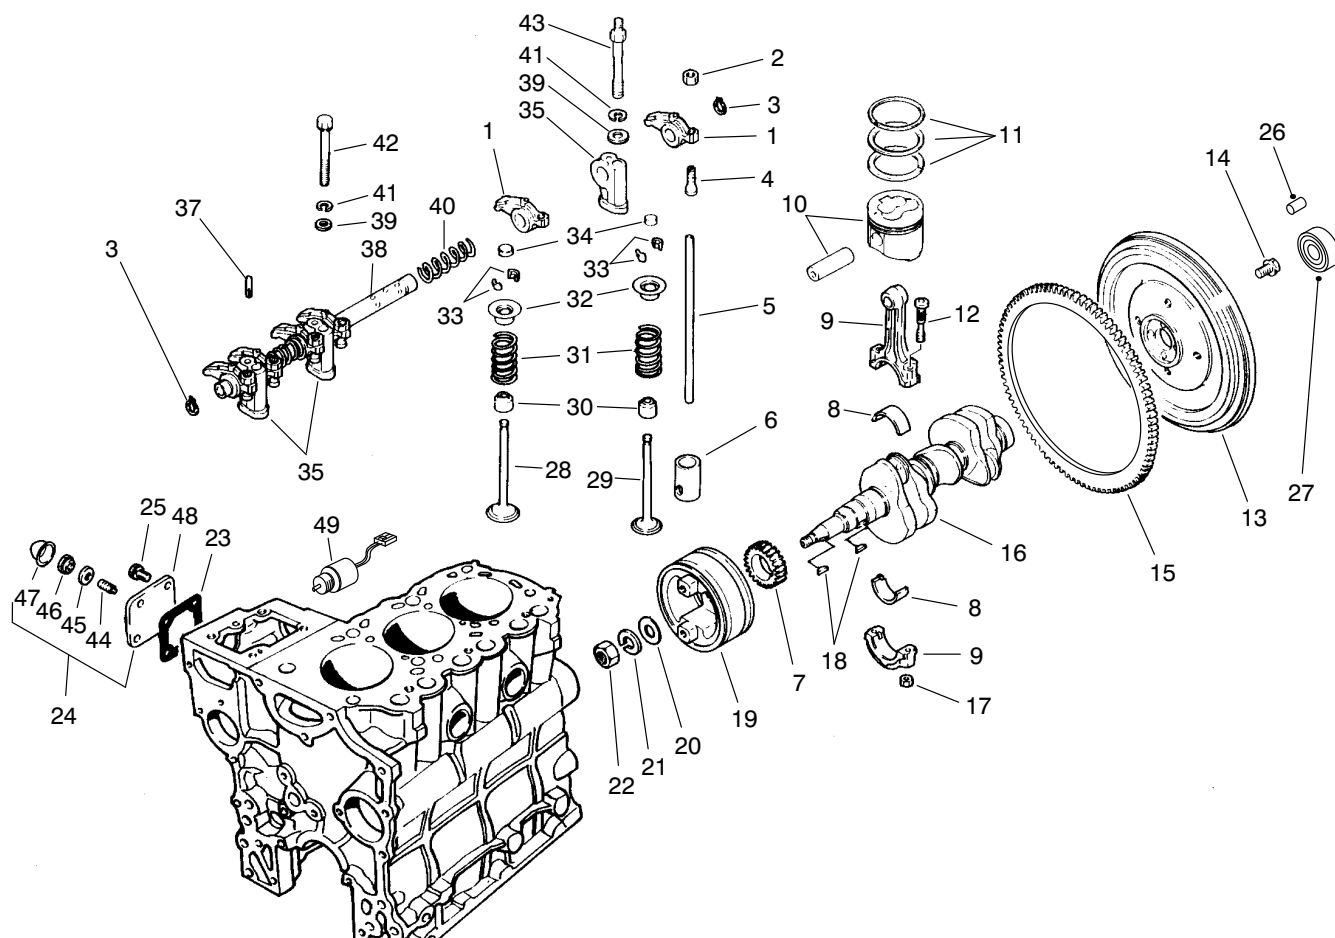


T-0565-1

VALVES AND CRANKSHAFT ASM (Continued)

Ref. No.	Part No.	Description	No. Used
45	75-5120	Gasket	1
46	43-5960	Nut-Special	1
47	43-2820	Cap-Sealing	1

Ref. No.	Part No.	Description	No. Used
48	67-4250	Cover	1
49	63-7440	Solenoid-Shutoff	1

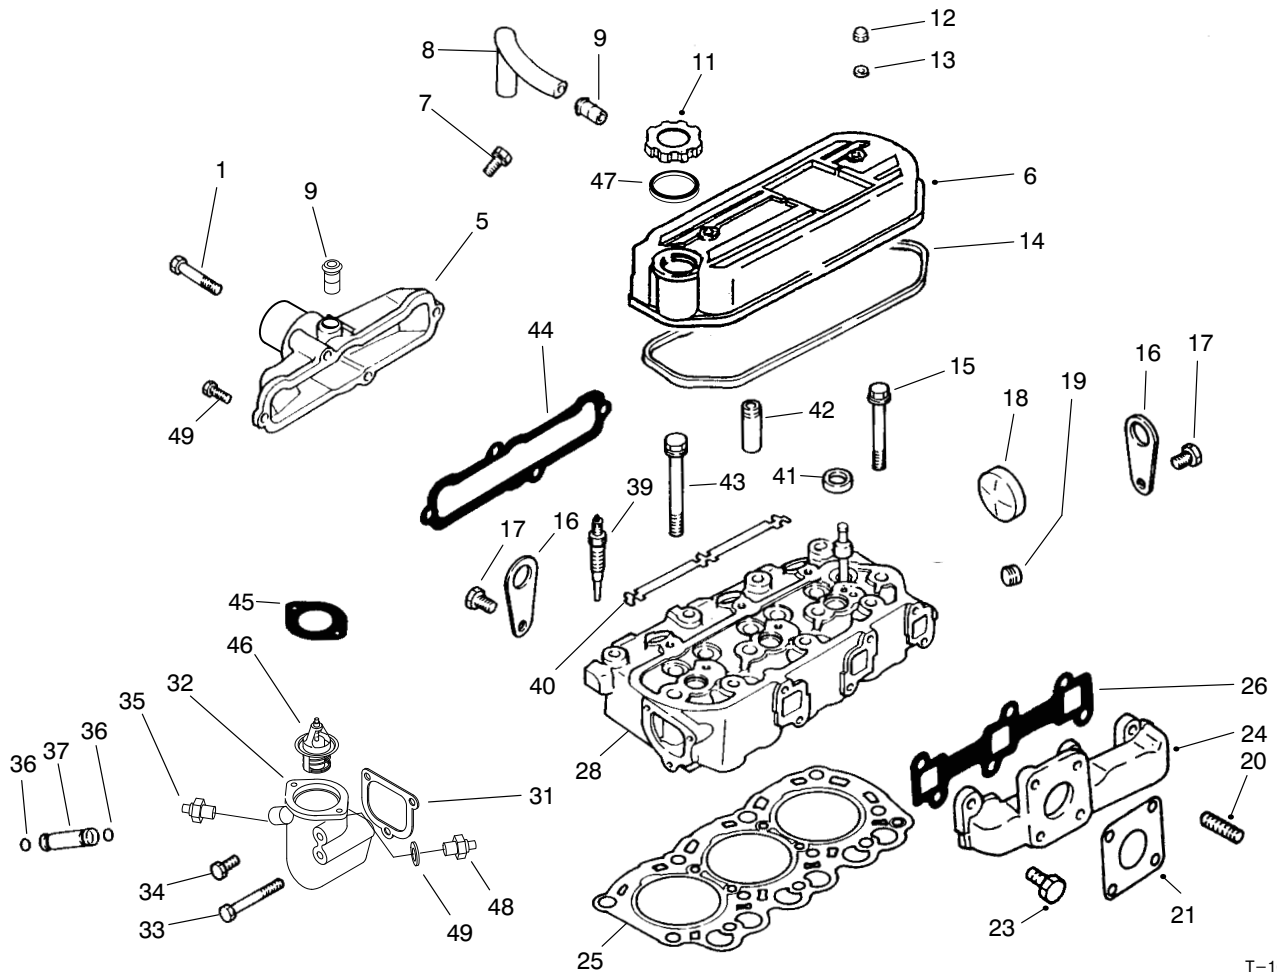 


T-1666-1

CYLINDER HEAD ASM

Ref. No.	Part No.	Description	No. Used
1	67-4400	Bolt	2
5	94-3533	Cover (Intake)	1
6	67-2750	Asm-Cover (Incl. Ref. #9)	1
7	42-9430	Bolt w/Washer	1
8	67-2670	Hose-Breather	1
9	42-7510	Pipe	2
11	67-2650	Cap-Oil Filler	1
12	67-2770	Nut-Cap	2
13	67-2780	Washer	2
14	67-2760	Gasket	1
15	67-2740	Bolt-Flange	3
16	67-2680	Hanger-Engine	2
17	67-2340	Bolt w/Washer	2
18	56-0020	Plug-Expansion	1
19	67-2570	Plug-Taper	1
20	42-9570	Stud	4
21	42-9110	Gasket	1
23	67-4590	Bolt	6
24	70-8750	Manifold-Exhaust	1
25	94-1258	Gasket-Cylinder Head	1

Ref. No.	Part No.	Description	No. Used
26	67-4570	Gasket-Exhaust Manifold	1
28	93-8970	Asm-Cylinder Head (Incl. Ref. #18, 41 & 42)	1
31	67-4460	Gasket (Thermostat Fitting)	1
32	67-4450	Fitting-Thermostat	1
33	67-4470	Bolt	1
34	67-2330	Bolt	4
35	93-3525	Gauge-Water Temp.	1
36	43-2710	O-Ring	2
37	67-4480	Pipe-By-Pass	1
39	92-0844	Plug-Glow	3
40	67-4690	Plate-Glow Plug	1
41	67-2710	Cap-Sealing	3
42	67-2700	Guide-Valve	6
43	67-2730	Bolt	8
44	67-4550	Gasket-Intake Manifold	1
45	93-8974	Thermostat	1
46	67-4430	Gasket-Thermostat	1
47	67-2660	O-Ring	1
48	93-3526	Asm-Switch, Thermo	1
49	67-4490	Gasket	1

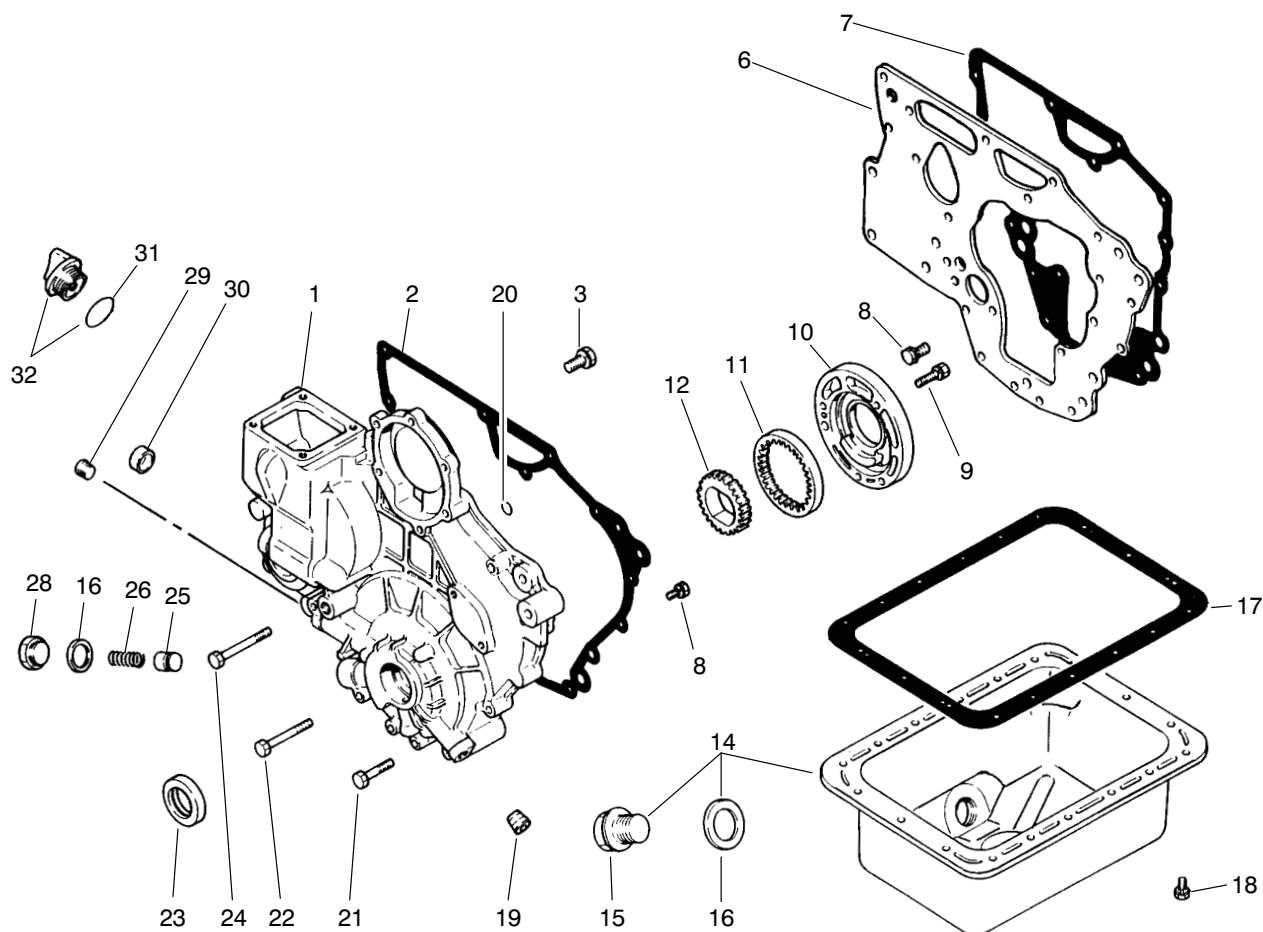 


T-0567-1

CRANKCASE ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	94-1259	Sub-Asm, Case	1	19	42-7210	Plug	1
2	67-2580	Gasket-Case	1	20	67-2630	O-Ring	2
3	67-2340	Bolt w/Washer	3	21	67-2600	Bolt	3
6	67-2310	Plate	1	22	67-2610	Bolt	4
7	67-2320	Gasket-Plate	1	23	67-2590	Oil Seal	1
8	42-9440	Bolt w/Washer	11	24	67-2620	Bolt	1
9	67-2560	Bolt w/Washer	3	25	67-2500	Plunger	1
10	67-2550	Housing-Oil Pump	1	26	67-2510	Spring	1
11	67-2540	Gear-Outer	1	28	67-2520	Plug	1
12	67-2530	Gear-Inner	1	29	67-2570	Plug	1
14	75-4910	Asm-Oil Pan (Incl. Ref. #15-16)	1	30	67-2640	Cap	1
15	42-9260	Plug	1	31	67-2660	O-Ring	1
16	42-7290	Gasket-Oil Drain	2	32	67-2650	Asm-Oil Fill Cap (Incl. Ref. #31)	1
17	67-2480	Gasket-Oil Pan	1	*	75-5040	Kit-Gasket (Incl. Ref. #2, 7, 16 & 17)	1
18	42-9490	Bolt w/Washer	18				

 *Not Illustrated

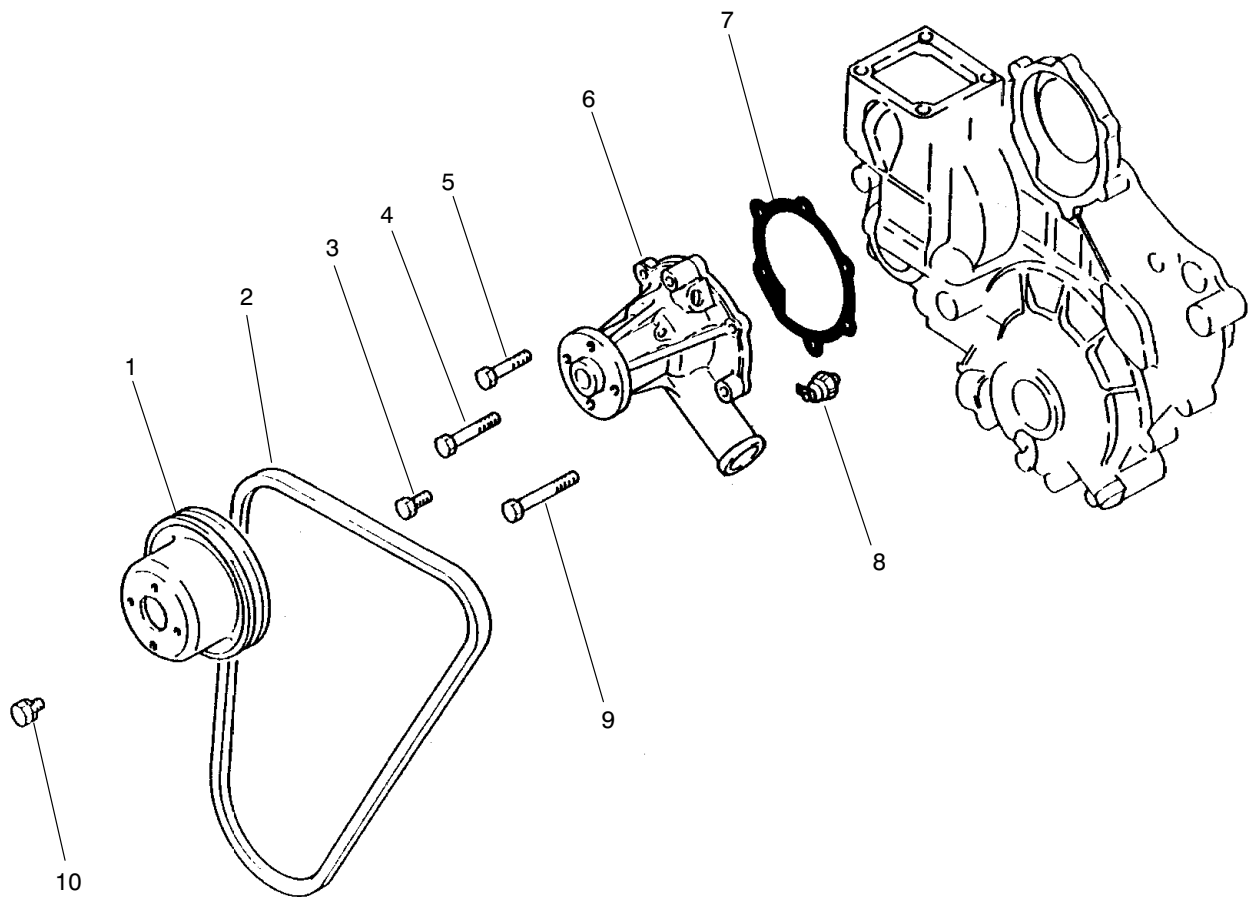


T-0568-1

WATER PUMP ASM

Ref. No.	Part No.	Description	No. Used
1	67-4360	Pulley	1
2	98-2947	V-Belt	1
3	67-2330	Bolt	2
4	67-4400	Bolt	1
5	67-2600	Bolt	1

Ref. No.	Part No.	Description	No. Used
6	67-4380	Asm-Pump	1
7	67-4390	Gasket	1
8	67-4350	Oil Pressure Switch	1
9	67-2610	Bolt	2
10	42-9490	Bolt w/Washer	4

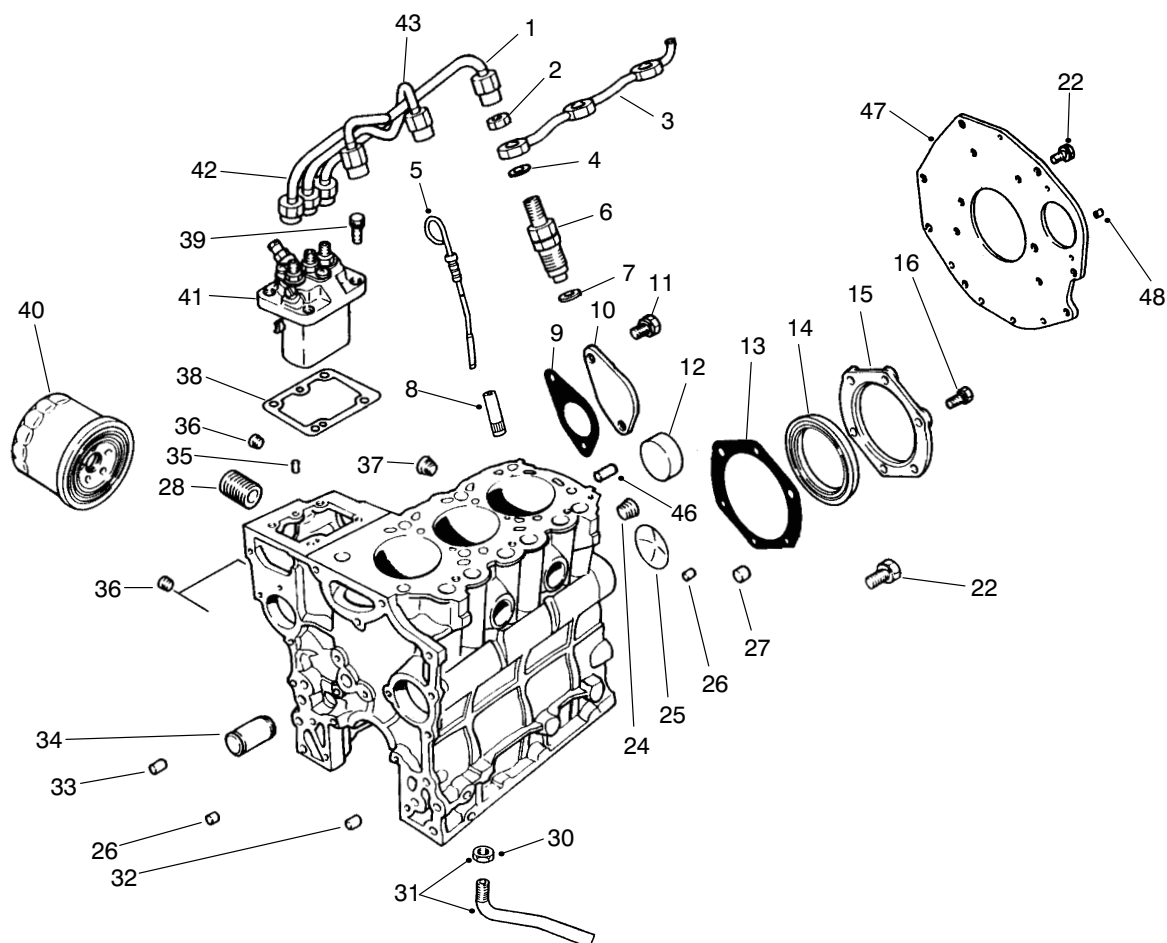 


T-1667-1

FUEL SUPPLY & ENGINE BLOCK ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	67-3420	Asm-Pipe No. 3	1	32	67-2370	Bushing	1
2	67-3430	Nut	3	33	42-7190	Bushing	2
3	70-8700	Pipe-Fuel Return	1	34	93-8972	Shaft-Idler	1
4	67-3440	Gasket	3	35	56-0220	Pin	2
5	67-2450	Dipstick	1	36	67-2210	Plug	3
6	67-3380	Asm-Nozzle & Holder	1	37	56-0100	Plug	1
7	67-3390	Gasket	3	38	67-3280	Shim 0.2	1
8	67-2220	Guide	1	*	67-3290	Shim 0.3	1
9	67-2300	Gasket	1	*	67-3300	Shim 0.5	1
10	67-2290	Cover	1	*	67-3310	Shim 0.4	1
11	67-2340	Bolt w/Washer	2	*	67-3320	Shim 0.6	1
12	56-0020	Plug	3	*	67-3330	Shim 0.7	1
13	67-2280	Gasket	1	*	67-3340	Shim 0.8	1
14	67-2230	Oil Seal	1	*	67-3350	Shim 0.9	1
15	67-2270	Case	1	*	67-3360	Shim 1.0	1
16	67-2330	Bolt	6	39	67-3370	Bolt w/Washer	4
22	67-2440	Bolt w/Washer	6	40	67-4330	Asm-Oil Filter	1
24	67-2390	Plug	1	41	75-5020	Asm-Pump	1
25	67-2350	Plug	1	42	67-3400	Asm-Pipe No. 1	1
26	67-2360	Bushing	2	43	67-3410	Asm-Pipe No. 2	1
27	67-2380	Bushing	3	46	42-7160	Pin-Dowel	1
28	56-1230	Shaft-Oil Filter	1	47	92-0830	Plate-Rear	1
30	42-9650	Nut-Jam	1	48	92-0831	Pin-Knock	1
31	67-4340	Asm-Screen (Incl. Ref. #30)	1				

 *Not Illustrated

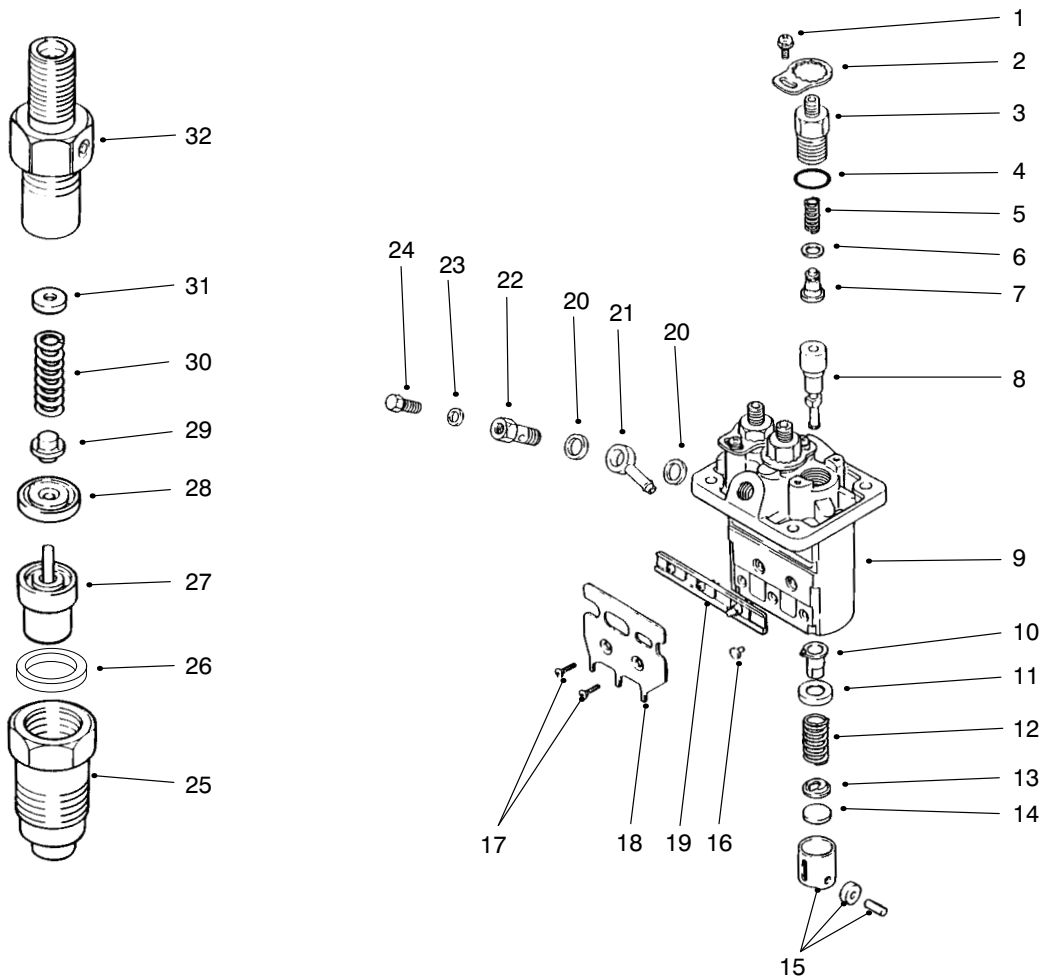


T-0570-3

FUEL INJECTION PUMP ASM

Ref. No.	Part No.	Description	No. Used
1	67-3770	Screw w/Washer	3
2	67-3760	Plate-Lock	3
3	67-3470	Holder-Delivery Valve	3
4	67-3480	O-Ring	3
5	67-3490	Spring	3
6	42-8240	Gasket	3
7	67-3500	Sub-Asm-Valve	3
8	75-4970	Sub-Asm-Element	3
9	67-3460	Sub-Asm-Housing	1
10	67-3520	Sub-Asm-Sleeve	3
11	67-3530	Seat	3
12	67-3540	Spring	3
13	67-3550	Seat	3
14	67-3560	Plate-Shim 1.85	1
*	67-3570	Plate-Shim 1.9	1
*	67-3580	Plate-Shim 1.95	1
*	67-3590	Plate-Shim 2.0	1
*	67-3600	Plate-Shim 2.05	1
*	67-3610	Plate-Shim 2.1	1
*	67-3620	Plate-Shim 2.15	1
*	67-3630	Plate-Shim 2.2	1

Ref. No.	Part No.	Description	No. Used
*14	67-3640	Plate-Shim 2.25	1
*	67-3650	Plate-Shim 2.3	1
*	67-3660	Plate-Shim 2.35	1
*	67-3670	Plate-Shim 2.4	1
*	67-3680	Plate-Shim 2.45	1
*	67-3690	Plate-Shim 2.5	1
15	67-3700	Asm-Tappet	3
16	67-3810	Pin	3
17	67-3790	Screw	2
18	67-3800	Bracket	1
19	67-3780	Asm-Rack	1
20	67-3750	Washer	2
21	67-3740	Nipple	1
22	67-3730	Screw	1
23	67-3720	Washer	1
24	67-3710	Screw-Air Bleed	1
25	67-3970	Nut	3
26	67-3980	Gasket	3
27	67-3960	Asm-Nozzle	3
28	67-3950	Piece	3
29	67-3940	Pin	3
30	67-3930	Spring	3

 *Not Illustrated

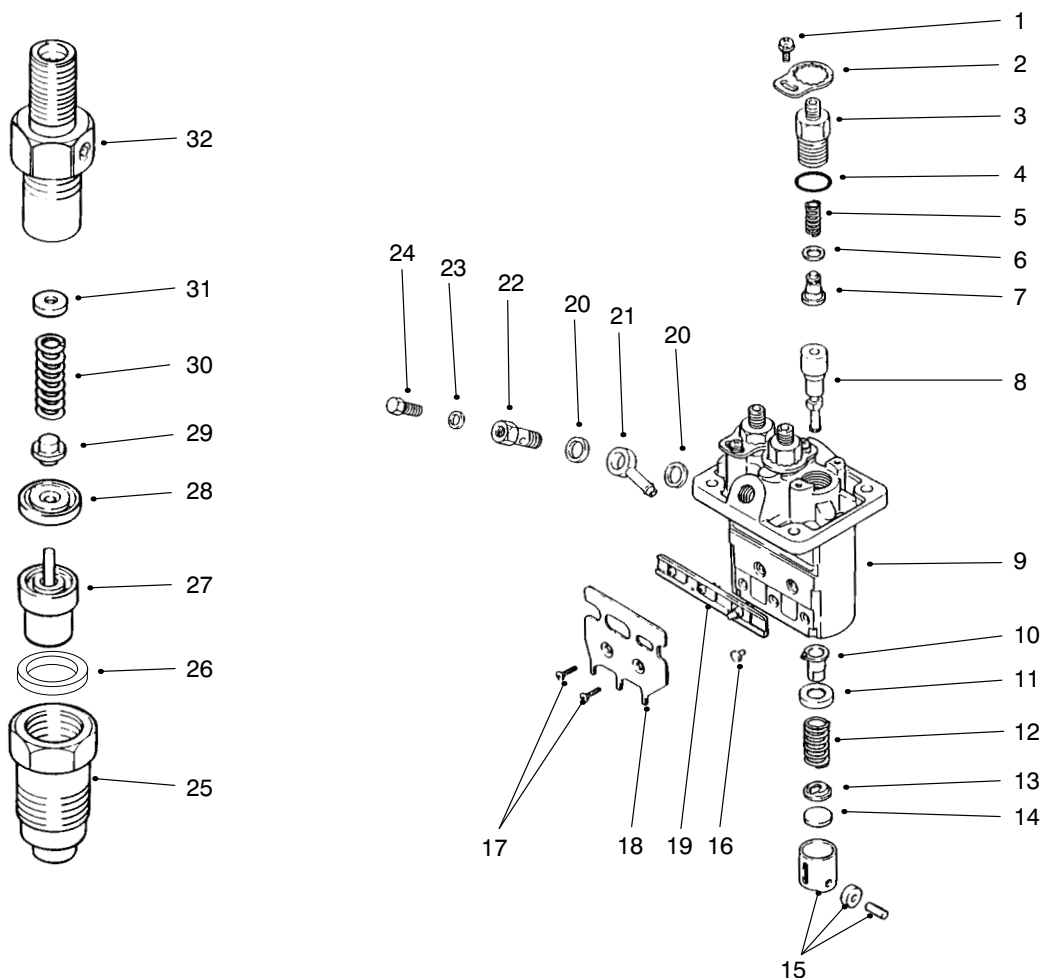


T-0570-3

FUEL INJECTION PUMP ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
31	67-3830	Washer 1.25	1	32	75-5000	Sub-Asm-Body	3
*	67-3840	Washer 1.3	1	*	53-8150	Asm-Pump	1
*	67-3850	Washer 1.35	1			(Incl. Ref. #1-24)	
*	67-3860	Washer 1.4	1	*	67-3380	Asm-Nozzle & Holder	3
*	67-3870	Washer 1.45	1			(Incl. Ref. #25-32)	
*	67-3880	Washer 1.5	1				
*	67-3890	Washer 1.55	1				
*	67-3900	Washer 1.6	1				
*	67-3910	Washer 1.65	1				
*	67-3920	Washer 1.7	1				

 *Not Illustrated

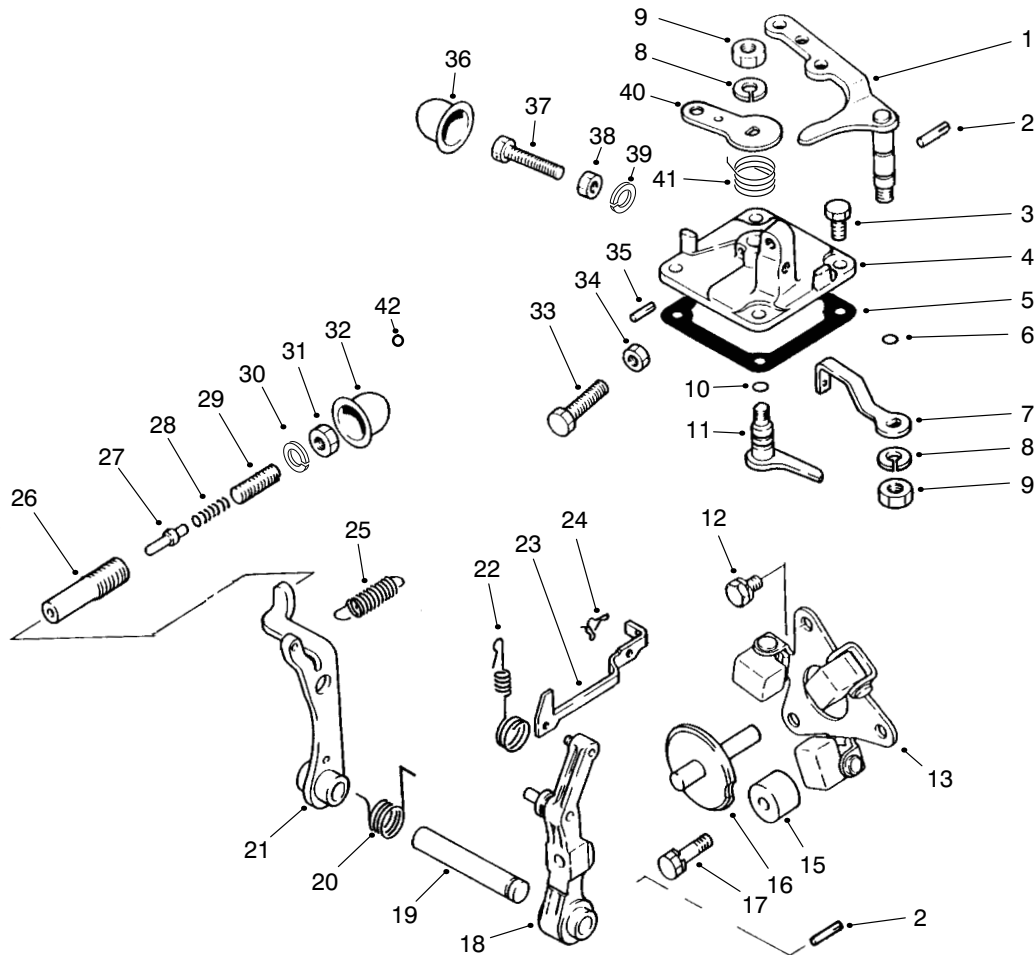

T-0571-2


GOVERNOR ASM

Ref. No.	Part No.	Description	No. Used
1	67-3990	Lever—Speed Control	1
2	67-4000	Pin	2
3	67-4270	Bolt	4
†4		Cover—Governor	1
5	67-4160	Gasket	1
6	42-8830	O—Ring	1
7	75-4980	Lever—Governor Spring	1
8	67-3260	Washer	2
9	42-9640	Nut—Jam	2
10	42-8830	O—Ring	1
11	67-4140	Lever—Stop	1
12	42-9430	Bolt W/Washer	2
13	67-4040	Asm—Weight	1
15	67-4010	Stopper	1
16	67-4070	Shaft—Sliding	1
17	67-4280	Bolt W/Washer	1
18	67-4060	Lever—Governor	1
19	67-4050	Shaft—Governor	1
20	67-5040	Spring	1
21	67-4090	Lever—Tension	1
22	70-8720	Spring—Tie Rod	1

Ref. No.	Part No.	Description	No. Used
23	67-4030	Rod—Tie	1
24	67-4080	Clip	1
25	75-4990	Spring—Governor	1
†26		Case—Torque Set	1
†27		Stopper—Torque Set	1
†28		Spring—Torque Set	1
†29		Screw—Adjusting	1
†30		C—Ring—Torque Set	1
†31		Nut—Torque Set	1
†32		Cover—Torque Set	1
33	42-9420	Bolt—Speed Set	1
34	67-4290	Nut	1
35	67-4120	Pin—Grooved	1
†36		Cover—High Speed Set	1
†37		Bolt—High Speed Set	1
†38		Nut—High Speed Set	1
†39		C—Ring—High Speed Set	1
40	67-4150	Lever—Stop	1
41	94-3827	Spring—Return	1
*†		Torque Spring Set (Incl. Ref. #26-31)	1

*Not Illustrated

 
†Item must be serviced by a Mitsubishi Authorized Toro Dealer/Distributor.

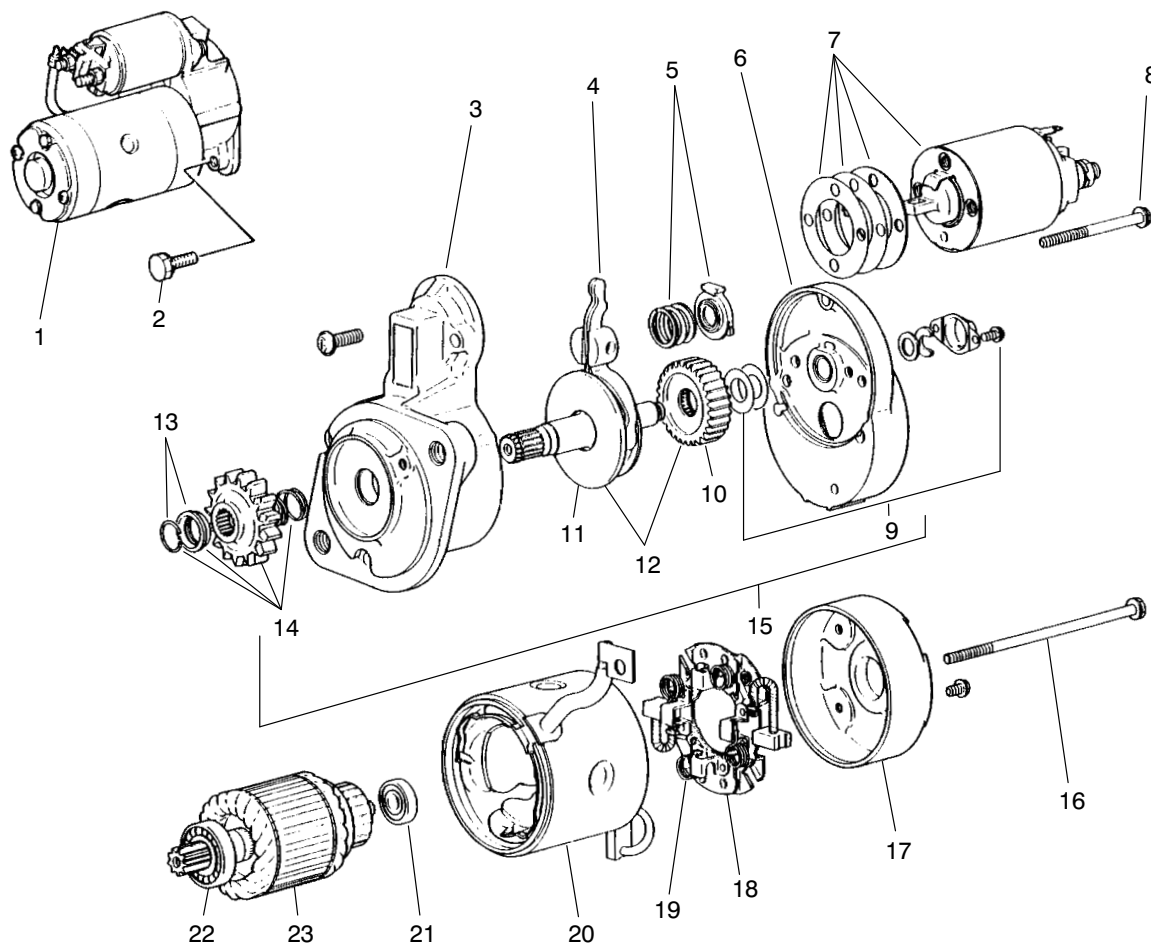

T-0572-1

STARTER ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	70-8760	Asm-Starter (Incl. Ref. #3-23)	1	14	67-4770	Pinion Set (Incl. Ref. #13)	1
2	92-0843	Bolt w/Washer	2	15	67-4760	Asm-Shaft (Incl. Ref. #9-12 & 14)	1
3	70-8770	Asm-Front Bracket	1	16	56-1610	Bolt	1
4	67-4720	Asm-Lever	1	17	56-1720	Asm-Bracket (Rear)	1
5	67-4730	Spring Set	1	18	56-1700	Asm-Brush Holder (Incl. Ref. #19)	1
6	70-8780	Asm-Center Bracket	1	19	56-1710	Spring-Brush	4
7	67-4750	Asm-Switch	1	20	67-4800	Yoke Asm-	1
8	52-1570	Bolt Set	1	21	56-1600	Bearing-Rear	1
9	56-1680	Cover Set	1	22	56-1590	Bearing-Front	1
10	56-1670	Gear	1	23	56-1580	Armature Set (Incl. Ref. #21 & 22)	1
11	67-4790	Asm-Shaft	1				
12	67-4780	Gear Set (Incl. Ref. #10 & 11)	1				
13	56-1640	Stopper Set	1				

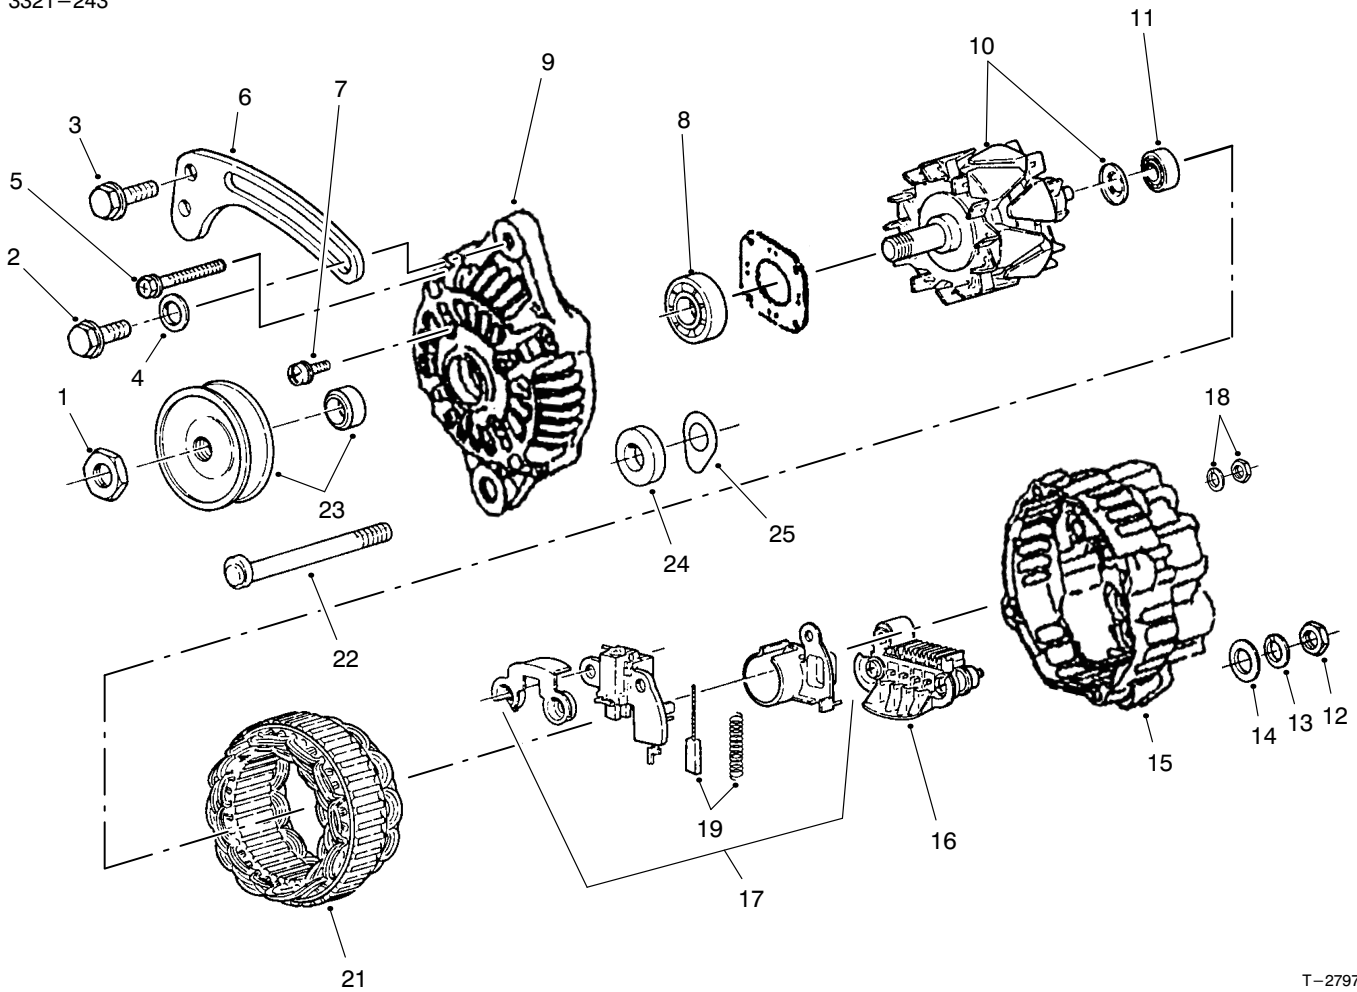 

T-2797

ALTERNATOR ASM

Ref. No.	Part No.	Description	No. Used
1	98-2929	Nut-Set	1
2	67-4660	Bolt-Flange	1
3	42-9440	Bolt w/Washer	1
4	54-8660	Washer-Flat	1
5	98-2931	Bolt Set (4 Bolts)	1
6	98-2948	Brace-Generator	1
7	98-2926	Screw Set (3 Screws)	1
8	98-2927	Bearing-Front	1
9	98-2925	Asm-Front Housing (Incl. Ref. #7 & 8)	1
10	98-2928	Asm-Rotor (Incl. Ref. #11)	1
11	98-2932	Bearing-Rear	1
12	67-4670	Nut	1
13	67-3260	Washer-Lock	1

Ref. No.	Part No.	Description	No. Used
14	42-9660	Washer-Flat	1
15	98-2934	Asm-Rear Housing (Incl. Ref. #12-19)	1
16	98-2937	Asm-Rectifier	1
17	98-2935	Asm-Regulator (Incl. Ref. #18 & 19)	1
18	98-2938	Nut Set-Terminal	1
19	98-2936	Asm-Brush	2
21	98-2933	Asm-Stator	1
22	67-4640	Bolt	1
23	98-2930	Pulley Set	1
24	67-4620	Spacer	1
25	43-0370	Shim	5
*	98-2938	Asm-Alternator (Incl. Ref. #1-25)	1

*Not Illustrated

TORO PART NUMBER INDEX

3321-243

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
116749	Asm-Horn	1 23 1	42-9530	Screw-HH	31 10 25
5-3637	Washer-Flat	38 7 1	42-9570	Stud	46 20 4
5-3637	Washer-Flat	29 16 1	42-9570	Stud-Muffler	29 24 4
7-0030	Bolt-Shoulder	29 3 1	42-9590	Nut	44 17 6
12-5450	Screw-HH	37 13 4	42-9640	Nut-Jam	52 9 2
18-1720	Joint-Ball	29 49 3	42-9650	Nut-Jam	49 30 1
18-2830	Asm-Horn Switch	2 12 1	42-9660	Washer	44 39 4
18-2830	Button-Horn	3 58 1	42-9660	Washer-Flat	54 14 1
18-4260	Asm-Screw/Lockwasher	6 9 2	42-9850	Washer-Lock	12 20 12
18-4270	Clamp-Ball Return Guide	6 8 1	42-9850	Washer-Lock	34 21 3
18-4340	Plug-Rack Piston End	6 6 1	42-9850	Washer-Lock	29 26 4
18-5170	Kit-Seal, Valve Ring	7 * 1	42-9850	Washer-Lock	31 32 42
18-5180	Kit-Bearing, Lower Thrust	7 * 1	43-0370	Shim	54 25 5
18-5190	Ball-Chrome Alloy	6 10 11	43-2550	Filter	37 37 1
19-4050	Knob	36 8 2	43-2560	Gasket	37 36 1
19-4050	Knob	25 34 3	43-2570	Gasket	37 38 1
20-7150	Asm-Toggle Switch	2 34 1	43-2580	Magnet	37 35 1
21-0360	Nut-Hex.	9 6 1	43-2710	O-Ring	46 36 2
21-4191	Asm-Belt, Seat	42 2 2	43-2820	Cap-Sealing	45 47 1
21-9260	Spacer	5 4 1	43-3160	Screw-Adjusting	44 44 1
23-7270	Nut-Lug	20 4 10	43-5920	Washer-Lock	29 17 1
23-7270	Nut-Lug	23 17 10	43-5960	Nut-Special	45 46 1
26-0071	Bumper	1 7 2	43-5970	Nut	37 23 2
27-2360	Asm-Ignition Switch	2 19 1	43-6550	Ring-Retaining	5 10 2
27-5360	Hose-Fuel	29 13 1	44-0760	Decal-Warning	18 33 2
27-5360	Hose-Fuel	37 14 2	44-2230	Disc-Rubber	27 4 2
27-6590	Spacer-Thick	27 7 4	46-3710	Fitting-90°	37 32 2
27-6600	Spacer-Thin	27 3 4	46-6560	Bushing	38 33 1
28-0540	Bolt-Shoulder	8 46 1	46-7510	Hood-Inlet, Air	38 21 1
28-8200	O-Ring	6 27 1	46-8091	Screw-HFH	25 10 4
28-8210	Bolt-FHH	6 17 4	48-7560	Screw-HH	31 24 1
28-8220	Nut-Lash Adjuster	6 16 1	48-7650	Screw-HH	37 1 2
28-8270	Kit-Seal Service, End Plug	7 * 1	48-7700	Screw-HH	34 9 3
28-8280	Kit-Seal, Side Cover	6 14 1	48-7730	Screw-HH	31 18 5
28-8290	Kit-Seal, Service	7 * 1	48-7740	Screw-HH	5 15 4
33-3090	Bushing-Flange	18 7 4	48-7880	Nut-Lock	29 18 1
36-3400	Decal-No Step	36 10 1	48-7930	Nut-Hex.	31 2 1
36-4790	Washer-Thrust	29 39 3	48-8000	Washer-Lock	37 24 2
39-7310	O-Ring	40 13 2	48-8070	Washer-Flat	5 6 1
39-7310	O-Ring	6 35 3	48-9520	Nut-Lock	30 11 3
39-7420	Washer-Lock	5 22 1	48-9520	Nut-Lock	22 28 2
39-7420	Washer-Lock	6 42 1	48-9590	Washer-Lock	29 29 10
39-7440	Nut-Lock	5 23 1	49-7810	Nut-Lock	37 42 2
39-7440	Nut-Pitman Arm	6 41 1	51-5610	Pin-Alignment	29 20 3
42-7080	Cap	43 2 2	51-5610	Pin-Dowel	44 26 3
42-7160	Pin-Dowel	49 46 1	52-1570	Bolt Set	53 8 1
42-7190	Bushing	49 33 2	52-2480	Spacer	42 7 4
42-7210	Plug	47 19 1	53-8150	Asm-Fuel Pump	37 39 1
42-7290	Gasket-Oil Drain	47 16 2	53-8150	Asm-Pump	51 * 1
42-7510	Pipe	46 9 2	54-0110	Element-Oil Filter	37 30 1
42-7840	Key	43 20 1	54-8660	Washer-Flat	54 4 1
42-7860	Lock	44 33 12	55-7120	Switch-Brake Light	8 32 1
42-7870	Seal	44 30 6	56-0020	Plug	49 12 3
42-8240	Gasket	50 6 3	56-0020	Plug	43 24 3
42-8830	O-Ring	52 6 1	56-0020	Plug-Expansion	46 18 1
42-8830	O-Ring	52 10 1	56-0100	Plug	49 37 1
42-9110	Gasket	46 21 1	56-0220	Pin	49 35 2
42-9110	Gasket-Muffler	29 25 1	56-0480	Key-Woodruff	43 8 1
42-9250	Screw-HH	12 43 1	56-0480	Key-Woodruff	44 18 2
42-9260	Plug	47 15 1	56-1230	Shaft-Oil Filter	49 28 1
42-9420	Bolt-Speed Set	52 33 1	56-1580	Armature Set	53 23 1
42-9430	Bolt W/Washer	52 12 2	56-1590	Bearing-Front	53 22 1
42-9430	Bolt w/Washer	46 7 1	56-1600	Bearing-Rear	53 21 1
42-9440	Bolt & Washer	29 54 1	56-1610	Bolt	53 16 1
42-9440	Bolt W/Washer	44 25 4	56-1640	Stopper Set	53 13 1
42-9440	Bolt w/Washer	54 3 1	56-1670	Gear	53 10 1
42-9440	Bolt w/Washer	47 8 11	56-1680	Cover Set	53 9 1
42-9440	Screw-HH	29 1 3	56-1700	Asm-Brush Holder	53 18 1
42-9490	Bolt w/Washer	48 10 4	56-1710	Spring-Brush	53 19 4
42-9490	Bolt w/Washer	43 11 2	56-1720	Asm-Bracket (Rear)	53 17 1
42-9490	Bolt w/Washer	47 18 18	56-7973	Clamp-Hydraulic Tube	40 6 4
42-9510	Bolt	44 42 1	58-4250	Magnet	25 11 2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
60-6750	Screw-HH	31 4 11	67-2700	Guide-Valve	46 42 6
62-5550	Decal-TORO	1 2 1	67-2710	Cap-Sealing	46 41 3
62-7650	Gasket-Sending Unit	38 3 1	67-2730	Bolt	46 43 8
63-7440	Solenoid-Shutoff	45 49 1	67-2740	Bolt-Flange	46 15 3
63-7640	Unit-Sending	38 4 1	67-2750	Asm-Cover	46 6 1
63-7790	Screw-HH	29 28 12	67-2760	Gasket	46 14 1
63-8140	Pulley	25 19 1	67-2770	Nut-Cap	46 12 2
63-8280	Head-Filter	37 18 1	67-2780	Washer	46 13 2
63-8290	Vent-Air	37 19 1	67-2850	Asm-Connecting Rod	44 9 3
63-8300	Element-Filter	37 20 1	67-2860	Bolt	44 12 6
63-8310	Drain-Filter	37 21 1	67-2890	Bearing Set 0.25 US	44 * 3
63-8360	Key-Ignition	2 10 1	67-2900	Bearing Set 0.50 US	44 * 3
63-9640	Hose-Fuel	38 12 1	67-2940	Nut-Jam	44 22 1
63-9640	Hose-Fuel Tank to Pump	37 33 1	67-2950	Washer	44 20 1
65-5100	Handle	25 9 2	67-2960	Washer-Lock	44 21 1
65-5220	Screw-HSH	16 27 3	67-2980	Gear-Ring	44 15 1
65-5360	Spring-Extension	5 35 1	67-2990	Bolt	44 14 4
66-3240	Cap-Radiator	25 12 1	67-3000	Washer	43 10 2
66-6840	Decal-Caution	22 29 2	67-3010	Cam Shaft	43 7 1
66-8700	Asm-Glow Plug Indicator	37 26 1	67-3030	Bearing	43 9 2
66-8800	Relay	37 12 1	67-3050	Bearing	43 22 1
67-2200	Seal	43 4 4	67-3060	Shaft	43 21 1
67-2210	Plug	49 36 3	67-3080	Ring-Retaining	43 23 1
67-2220	Guide	49 8 1	67-3100	Retainer	44 32 6
67-2230	Oil Seal	49 14 1	67-3110	Spring	44 31 6
67-2250	Bolt	43 5 8	67-3120	Tappet	44 6 6
67-2270	Case	49 15 1	67-3130	Valve-Intake	44 28 3
67-2280	Gasket	49 13 1	67-3140	Valve-Exhaust	44 29 3
67-2290	Cover	49 10 1	67-3150	Rod-Push	44 5 6
67-2300	Gasket	49 9 1	67-3160	Arm-Rocker	44 1 6
67-2310	Plate	47 6 1	67-3170	Spring	44 40 2
67-2320	Gasket-Plate	47 7 1	67-3180	Cap	44 34 6
67-2330	Bolt	48 3 2	67-3190	Asm-Rocker Shaft	44 38 1
67-2330	Bolt	49 16 6	67-3200	Stay-Rocker	44 35 3
67-2330	Bolt	46 34 4	67-3210	Screw-Adjusting	44 4 6
67-2340	Bolt w/Washer	47 3 3	67-3220	Pin	44 37 1
67-2340	Bolt w/Washer	49 11 2	67-3230	Nut-Jam	44 2 6
67-2340	Bolt w/Washer	46 17 2	67-3240	Ring-Retaining	44 3 2
67-2350	Plug	49 25 1	67-3250	Bolt-Rockers, Stay	44 43 2
67-2360	Bushing	49 26 2	67-3260	Washer	52 8 2
67-2370	Bushing	49 32 1	67-3260	Washer	44 41 6
67-2380	Bushing	49 27 3	67-3260	Washer-Lock	54 13 1
67-2390	Plug	49 24 1	67-3280	Shim 0.2	49 38 1
67-2410	Bearing Set 0.25	43 * 1	67-3290	Shim 0.3	49 * 1
67-2420	Bearing Set 0.50	43 * 1	67-3300	Shim 0.5	49 * 1
67-2440	Bolt w/Washer	49 22 6	67-3310	Shim 0.4	49 * 1
67-2450	Dipstick	49 5 1	67-3320	Shim 0.6	49 * 1
67-2480	Gasket-Oil Pan	47 17 1	67-3330	Shim 0.7	49 * 1
67-2500	Plunger	47 25 1	67-3340	Shim 0.8	49 * 1
67-2510	Spring	47 26 1	67-3350	Shim 0.9	49 * 1
67-2520	Plug	47 28 1	67-3360	Shim 1.0	49 * 1
67-2530	Gear-Inner	47 12 1	67-3370	Bolt w/Washer	49 39 4
67-2540	Gear-Outer	47 11 1	67-3380	Asm-Nozzle & Holder	51 * 3
67-2550	Housing-Oil Pump	47 10 1	67-3380	Asm-Nozzle & Holder	49 6 1
67-2560	Bolt w/Washer	47 9 3	67-3390	Gasket	49 7 3
67-2570	Plug	47 29 1	67-3400	Asm-Pipe No. 1	49 42 1
67-2570	Plug-Taper	46 19 1	67-3410	Asm-Pipe No. 2	49 43 1
67-2580	Gasket-Case	47 2 1	67-3420	Asm-Pipe No. 3	49 1 1
67-2590	Oil Seal	47 23 1	67-3430	Nut	49 2 3
67-2600	Bolt	48 5 1	67-3440	Gasket	49 4 3
67-2600	Bolt	47 21 3	67-3460	Sub-Asm-Housing	50 9 1
67-2610	Bolt	48 9 2	67-3470	Holder-Delivery Valve	50 3 3
67-2610	Bolt	47 22 4	67-3480	O-Ring	50 4 3
67-2620	Bolt	47 24 1	67-3490	Spring	50 5 3
67-2630	O-Ring	47 20 2	67-3500	Sub-Asm-Valve	50 7 3
67-2640	Cap	47 30 1	67-3520	Sub-Asm-Sleeve	50 10 3
67-2650	Asm-Oil Fill Cap	47 32 1	67-3530	Seat	50 11 3
67-2650	Cap-Oil Filler	46 11 1	67-3540	Spring	50 12 3
67-2660	O-Ring	47 31 1	67-3550	Seat	50 13 3
67-2660	O-Ring	46 47 1	67-3560	Plate-Shim 1.85	50 14 1
67-2670	Hose-Breather	46 8 1	67-3570	Plate-Shim 1.9	50 * 1
67-2680	Hanger-Engine	46 16 2	67-3580	Plate-Shim 1.95	50 * 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
67-3590	Plate-Shim 2.0	50 * 1	67-4470	Bolt	46 33 1
67-3600	Plate-Shim 2.05	50 * 1	67-4480	Pipe-By-Pass	46 37 1
67-3610	Plate-Shim 2.1	50 * 1	67-4490	Gasket	29 60 1
67-3620	Plate-Shim 2.15	50 * 1	67-4490	Gasket	46 49 1
67-3630	Plate-Shim 2.2	50 * 1	67-4550	Gasket-Intake Manifold	46 44 1
67-3640	Plate-Shim 2.25	50 *14 1	67-4570	Gasket-Exhaust Manifold	46 26 1
67-3650	Plate-Shim 2.3	50 * 1	67-4590	Bolt	46 23 6
67-3660	Plate-Shim 2.35	50 * 1	67-4620	Spacer	54 24 1
67-3670	Plate-Shim 2.4	50 * 1	67-4640	Bolt	54 22 1
67-3680	Plate-Shim 2.45	50 * 1	67-4660	Bolt-Flange	54 2 1
67-3690	Plate-Shim 2.5	50 * 1	67-4670	Nut	54 12 1
67-3700	Asm-Tappet	50 15 3	67-4690	Plate-Glow Plug	46 40 1
67-3710	Screw-Air Bleed	50 24 1	67-4720	Asm-Lever	53 4 1
67-3720	Washer	50 23 1	67-4730	Spring Set	53 5 1
67-3730	Screw	50 22 1	67-4750	Asm-Switch	53 7 1
67-3740	Nipple	50 21 1	67-4760	Asm-Shaft	53 15 1
67-3750	Washer	50 20 2	67-4770	Pinion Set	53 14 1
67-3760	Plate-Lock	50 2 3	67-4780	Gear Set	53 12 1
67-3770	Screw w/Washer	50 1 3	67-4790	Asm-Shaft	53 11 1
67-3780	Asm-Rack	50 19 1	67-4800	Yoke Asm-	53 20 1
67-3790	Screw	50 17 2	67-5040	Spring	52 20 1
67-3800	Bracket	50 18 1	68-3840	Ball Joint	8 23 1
67-3810	Pin	50 16 3	68-3841	Asm-Ball Joint	8 45 1
67-3830	Washer 1.25	51 31 1	68-9950	Spring-Extension	30 38 1
67-3840	Washer 1.3	51 * 1	70-1480	Relay-S.P.D.T.	37 44 1
67-3850	Washer 1.35	51 * 1	70-1480	Relay-Sealed	2 39 2
67-3860	Washer 1.4	51 * 1	70-1480	Relay-Sealed	22 41 2
67-3870	Washer 1.45	51 * 1	70-8560	Retainer-Indicator	37 27 1
67-3880	Washer 1.5	51 * 1	70-8680	Pulley-Crankshaft	44 19 1
67-3890	Washer 1.55	51 * 1	70-8700	Pipe-Fuel Return	49 3 1
67-3900	Washer 1.6	51 * 1	70-8720	Spring-Tie Rod	52 22 1
67-3910	Washer 1.65	51 * 1	70-8750	Manifold-Exhaust	46 24 1
67-3920	Washer 1.7	51 * 1	70-8760	Asm-Starter	53 1 1
67-3930	Spring	50 30 3	70-8770	Asm-Front Bracket	53 3 1
67-3940	Pin	50 29 3	70-8780	Asm-Center Bracket	53 6 1
67-3950	Piece	50 28 3	71-3381	Tube-Overflow	25 1 2
67-3960	Asm-Nozzle	50 27 3	71-3383	Hose-Overflow	25 4 1
67-3970	Nut	50 25 3	72-4310	Switch-Ball N.C.	30 40 1
67-3980	Gasket	50 26 3	74-0720	Tube-Manual	14 28 1
67-3990	Lever-Speed Control	52 1 1	75-4900	Bearing Set STD	43 3 1
67-4000	Pin	52 2 2	75-4910	Asm-Oil Pan	47 14 1
67-4010	Stopper	52 15 1	75-4970	Sub-Asm-Element	50 8 3
67-4030	Rod-Tie	52 23 1	75-4980	Lever-Governor Spring	52 7 1
67-4040	Asm-Weight	52 13 1	75-4990	Spring-Governor	52 25 1
67-4050	Shaft-Governor	52 19 1	75-5000	Sub-Asm-Body	51 32 3
67-4060	Lever-Governor	52 18 1	75-5010	Bearing Set STD	44 8 3
67-4070	Shaft-Sliding	52 16 1	75-5020	Asm-Pump	49 41 1
67-4080	Clip	52 24 1	75-5040	Kit-Gasket	47 * 1
67-4090	Lever-Tension	52 21 1	75-5050	Ring Set STD	44 11 3
67-4120	Pin-Grooved	52 35 1	75-5060	Ring Set 0.25 OS	44 * 3
67-4140	Lever-Stop	52 11 1	75-5070	Ring Set 0.50 OS	44 * 3
67-4150	Lever-Stop	52 40 1	75-5110	Asm-Cover	44 24 1
67-4160	Gasket	52 5 1	75-5120	Gasket	45 45 1
67-4250	Cover	45 48 1	75-6820	Hourmeter	2 14 1
67-4270	Bolt	52 3 4	76-8750	Plate-Warning	25 16 1
67-4280	Bolt W/Washer	52 17 1	76-9100	Spacer	28 17 6
67-4290	Nut	52 34 1	76-9430	Spring-Extension	8 28 1
67-4310	Gasket	44 23 1	80-6990	Washer	23 28 4
67-4330	Asm-Oil Filter	49 40 1	80-6990	Washer-Flat	30 12 3
67-4340	Asm-Screen	49 31 1	80-8040	Decal-Caution	27 1 1
67-4350	Oil Pressure Switch	48 8 1	83-9150	Decal-Fluid	27 18 1
67-4360	Pulley	48 1 1	84-1880	Fan	25 29 1
67-4380	Asm-Pump	48 6 1	84-2780	Decal-No Step (Japan)	36 10 1
67-4390	Gasket	48 7 1	86-4760	Spring	29 48 3
67-4400	Bolt	46 1 2	87-0150	Tower-Control Arm RH	18 9 1
67-4400	Bolt	48 4 1	87-0160	Tower-Control Arm LH	18 * 1
67-4430	Gasket-Thermostat	29 43 1	87-0210	Arm-Control Lower RH	19 18 1
67-4430	Gasket-Thermostat	46 46 1	87-0220	Arm-Control Lower LH	19 * 1
67-4450	Fitting-Thermostat	29 61 1	87-0270	Drum-Brake	20 6 2
67-4450	Fitting-Thermostat	46 32 1	87-0370	Arm-Pitman	5 21 1
67-4460	Gasket (Thermostat Fitting)	46 31 1	87-0690	Spring-Compression	18 15 2
67-4460	Gasket-Fitting	29 58 1	87-1430	Joint-Ball	19 16 4

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
87-1450	Bushing-Rubber	19 1 8	87-3580	Retainer	22 4 2
87-1470	Asm-Rod End LH Thread	20 20 2	87-3580	Retainer	20 15 2
87-1480	Asm-Rod End RH Thread	20 22 2	87-3580	Retainer-Brake Hose	23 2 2
87-1490	Spring-Leaf	22 15 2	87-3580	Retainer-Brake Hose	19 3 2
87-1500	Asm-Steering Gear	5 20 1	87-3580	Retainer-Brake Hose	10 8 2
87-1500	Steering Gear (Complete)	7 * 1	87-3590	Seal-Bearing	23 20 2
87-1910	Pin-Alignment	12 13 2	87-3590	Seal-Bearing	20 25 2
87-1920	Seal-Shaft	12 8 2	87-3600	Spacer	18 3 10
87-1970	Bearing-Matched Set	23 *18 2	87-3610	Bracket-Detent	5 34 1
87-2040	Lever-Shift	16 10 1	87-3650	Pin-Shift	16 11 1
87-2080	Stud-Drive	23 13 10	87-3660	Spring-Compression	16 20 1
87-2100	Bearing-Release	12 26 1	87-3710	Asm-Overflow Reservoir	25 3 1
87-2110	Asm-Tail Light	41 3 1	87-3750	Cover-Steering Wheel	5 9 1
87-2120	Asm-Headlight	1 3 2	87-3760	Plate-Shift Boot	13 4 1
87-2240	Housing-Axle	23 8 2	87-3770	Bushing-Sleeve	12 9 2
87-2260	Boot-Shift Lower	16 18 1	87-3780	Box-Glove	2 3 1
87-2280	Bearing	5 25 3	87-3800	Bracket-Seat Bottom	13 23 3
87-2310	Clevis-Cable	16 2 2	87-3820	Wheel-Steering	5 7 1
87-2310	Clevis-Cable	30 35 2	87-3850	Bar-Anti-Sway	18 17 1
87-2410	Rod-Tie	20 18 2	87-3860	Link-Anti-Sway Bar	18 5 2
87-2420	Boot	19 19 4	87-3890	Bracket-Anti-Sway Bar	18 18 2
87-2440	Bumper	1 5 2	87-3910	Bushing-Anti-Sway Bar	18 19 2
87-2480	Link-Stabilizer	18 24 2	87-3920	Bushing-Rubber	18 4 24
87-2500	Sleeve-Spring Pivot	18 12 2	87-3920	Bushing-Rubber	22 7 8
87-2510	Bracket-Seat Frame	14 12 2	87-3940	Mount-Spring RH	22 * 1
87-2520	Tube-Pivot	16 14 1	87-3960	Mount-Spring LH	22 18 1
87-2710	Lever-Parking Brake	17 11 1	87-3980	Shackle-Spring	22 11 4
87-2720	Driveshaft	27 10 1	87-3990	Asm-Oil Strainer	30 24 1
87-2750	Spacer-Bearing	27 12 1	87-4010	Clamp-Anti-Sway Bar	18 20 2
87-2790	Tube-Brake LH	19 * 1	87-4060	Spacer-Bearing	23 19 2
87-2800	Tube-Brake RH	19 20 1	87-4070	Bumper-Front	1 12 1
87-2820	Bracket-Hose	20 16 2	87-4080	Tube-Brake LH	23 5 1
87-2870	Bracket-Brake Hose	19 4 2	87-4090	Tube-Brake RH	23 1 1
87-2880	Shaft-Accelerator Pedal	8 6 1	87-4100	Hose-Brake	22 5 2
87-2900	Spring-Compression	16 15 1	87-4100	Hose-Brake	23 33 2
87-3010	Asm-Brake RH	20 9 1	87-4110	Puck-Engine Adapter	29 41 1
87-3010	Asm-Front Brake RH	21 * 1	87-4120	Driveshaft	27 5 1
87-3020	Asm-Brake LH	20 10 1	87-4150	Hose-Radiator Lower	25 32 1
87-3020	Asm-Front Brake LH	21 * 1	87-4150	Hose-Radiator Lower	29 35 1
87-3040	Reservoir-Master Cylinder	9 1 1	87-4260	Asm-Cable	16 12 2
87-3060	Washer-Flat	23 7 2	87-4260	Asm-Shift Cable	30 36 2
87-3070	Cable-Battery Pos.	29 34 1	87-4540	Asm-Hydraulic Tube	40 10 1
87-3080	Cable-Battery Neg.	36 23 1	87-4690	Cover-Clutch	29 21 1
87-3080	Cable-Battery Neg.	30 26 1	87-4700	Disc-Clutch	29 19 1
87-3100	Asm-Lower Shaft	5 * 1	87-4710	Spacer-Barking Brake	17 4 1
87-3110	Absorber-Shock	18 29 2	87-4720	Plate-Steering Boot	5 3 1
87-3110	Shock Absorber	22 8 2	87-4730	Guard-Belly	28 19 2
87-3120	Steering Column & Shaft	5 * 1	87-4760	Bushing	22 12 12
87-3130	Lever-Tilt Steering	5 36 1	87-4820	Bracket-Cable	30 25 1
87-3140	Support-Rear	38 15 1	87-4960	Clamp-Cable	16 26 1
87-3150	Support-Front	38 27 1	87-4970	Asm-Engine Mount	28 13 2
87-3160	Strap-Tank Support	38 29 2	87-4970	Asm-Transaxle Mount	30 16 2
87-3170	Pad-Tank Support Strap	38 30 2	87-5060	Pad-Seat	13 1 2
87-3250	Mount-Bearing	5 26 3	87-5100	Washer	30 15 4
87-3310	Clip-Brake Cable	20 24 2	87-5100	Washer-Flat	28 12 4
87-3310	Clip-Brake Cable	23 27 2	87-5110	Support-Lower	36 17 1
87-3340	Asm-Backrest	14 * 2	87-5120	Bracket-Battery Base	36 13 1
87-3370	Pulley	27 13 1	87-5130	Cover-Battery Base	36 9 1
87-3410	Housing-Thermostat	29 44 1	87-5280	Shaft-Release	12 4 1
87-3450	Plug	20 23 2	87-5300	Fork-Clutch	12 23 1
87-3460	Boot-Tilt Steering	5 2 1	87-5320	Guide-Release	12 25 1
87-3470	Bumper-Spring	22 14 2	87-5330	Washer	18 2 12
87-3480	Plate-Brake Equalizer	17 6 1	87-5340	Kit-Seal, Tie Rod End	20 * 4
87-3520	Clevis	16 22 1	87-5350	Bracket-Switch	12 14 1
87-3530	Button-Shifter	16 19 1	87-5360	Lever	12 17 1
87-3540	Link-Shift	16 13 2	87-5490	Switch-Neutral	12 15 1
87-3560	Tee-Brake Line	40 14 1	87-5560	Hub-Wheel	20 7 2
87-3560	Tee-Brake Line	10 18 1	87-5580	Asm-Fuel Gauge	2 13 1
87-3560	Tee-Brake Tube	22 23 1	87-5590	Asm-Temperature Gauge	2 8 1
87-3570	Fitting-Union	10 6 2	87-5730	Hose-Hydraulic	30 3 1
87-3570	Union-Brake Line	8 5 2	87-5730	Hose-Hydraulic	37 8 1
87-3570	Union-Brake Line	22 25 2	87-5770	U-Bracket-Tail Light	41 4 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
87-5800	Bracket-Mount	30 19 2	87-9300	Door-Clean Out	25 35 1
87-5920	Decal-Danger	13 31 1	87-9350	Asm-Hydraulic Tube	40 9 1
87-5930	Decal-Caution	13 32 1	87-9420	Decal-Caution	25 36 1
87-5940	Decal-Rollover	15 2 1	87-9430	Spindle-RH	20 13 1
87-5980	Decal-ROPS	15 3 2	87-9440	Spindle-LH	20 14 1
87-5990	Decal-PTO	23 40 1	87-9480	Fender-Front	13 19 2
87-6020	Decal-Brake	13 30 1	87-9500	Decal-Load	1 9 1
87-6040	Bracket-Shifter	16 24 1	87-9810	Foam-Overflow Tank	25 37 1
87-6060	Decal-ATF	23 29 1	92-0650	Bearing-Ball	33 22 1
87-6170	Frame-Seat	14 7 1	92-0651	Case-Transaxle	31 19 1
87-6240	Bracket-Seat Back	14 17 4	92-0652	Cover-Upper	31 7 1
87-6270	Asm-Socket & Bulb	2 43 4	92-0653	Cover-Side	31 9 1
87-6280	Plate-Seat Back	14 43 2	92-0654	Carrier-Differential	31 17 1
87-6290	Cushion-Seat Back	14 44 2	92-0655	Cover-Seal	31 30 1
87-6300	Lens	41 13 1	92-0656	Cover-P.T.O.	31 1 1
87-6310	Gasket	41 15 1	92-0657	Plate-Center	31 21 1
87-6320	Bulb-Headlight	1 31 2	92-0662	Cap-Oil	31 5 1
87-6330	Lens-Headlight	1 32 2	92-0663	Shaft-Main	33 16 1
87-6410	Bracket-Harness	12 18 2	92-0664	Hub-Synchro	33 12 2
87-6570	Foam-Seal	16 9 1	92-0665	Key-Synchro	33 23 6
87-6620	Screw	1 8 15	92-0666	Spring-Synchro	33 13 4
87-6620	Screw-Torx Hd.	12 42 2	92-0667	Ring-Synchro	33 6 3
87-6620	Screw-Torx PH	8 43 2	92-0668	Shifter-Synchro	33 7 2
87-6670	Decal-Fuse	2 32 1	92-0672	Gear-18T	33 19 1
87-6720	Knob	16 8 1	92-0673	Gear-14T	33 21 1
87-6890	Hold-Hand	13 35 1	92-0674	Shaft-Reduction	33 28 1
87-6900	Tube-Hydraulic	28 10 1	92-0677	Gear-49T	33 31 1
87-6910	Spring-Compression	30 9 1	92-0679	Gear-23T	33 25 1
87-6950	Receiver-LH	15 6 1	92-0680	Collar	33 26 1
87-6960	Receiver-RH	15 7 1	92-0681	Bearing-Needle	33 30 2
87-7040	Bracket-Oil Filter	37 4 1	92-0682	Washer-Thrust	33 29 1
87-7050	Cap-Reservoir	25 43 1	92-0684	Gear-33T	33 10 1
87-7090	Asm-Frame, R.O.P.S.	15 1 1	92-0687	Gear-16T	33 18 1
87-7110	Asm-Axle, Rear	23 4 1	92-0698	Shaft-Fork R-1	34 14 1
87-7150	Asm-Cradle, Spring	18 13 2	92-0699	Shaft-Fork 2-3	34 7 1
87-7170	Bracket-Clutch Spring	30 39 1	92-0700	Fork-Shift R-1	34 3 1
87-7270	Washer-Flat	23 21 6	92-0701	Fork-Shift 2-3	34 6 1
87-7280	Bracket-Belt, Seat	42 4 2	92-0705	Lock-Spindle	34 20 1
87-7290	Fitting-Hydraulic	28 9 1	92-0706	Cap-Fork Shaft	31 25 1
87-7330	Hose-Radiator Upper	25 7 1	92-0708	Shaft-Fork Hi-Lo	34 16 1
87-7330	Hose-Radiator Upper	29 45 1	92-0709	Fork-Shift Hi-Lo	34 17 1
87-7350	Hose-Suction	28 6 1	92-0710	Asm-Counter Shaft	32 14 1
87-7350	Hose-Suction	26 29 1	92-0710	Asm-Ring Gear	35 8 1
87-7380	Bracket-Relay/Indicator	37 10 1	92-0711	Washer-Thrust	32 4 2
87-7390	Battery	36 7 1	92-0712	Bearing-Ball	32 1 1
87-7470	Plate-Clamp	22 16 2	92-0713	Collar	32 12 1
87-7480	Washer-Flat	22 31 8	92-0714	Bearing-Ball	32 13 2
87-7480	Washer-Flat	5 37 3	92-0715	Gear-49T	32 6 1
87-7600	Rod-Battery Support	36 19 1	92-0716	Collar	32 2 1
87-7610	Tab-Battery Support	36 21 1	92-0717	Gear-71T	32 9 1
87-7620	Shield-Plastic	36 12 1	92-0718	Shifter-Hi-Lo	32 7 1
87-7660	Clamp-Brake Line	10 2 8	92-0719	Collar-Spline	32 8 1
87-7660	Clamp-Tube	8 40 2	92-0720	Case-Differential	35 31 1
87-7960	Lever-Shift Arm	30 13 1	92-0721	Fork-Differential Lock	35 17 1
87-7970	Arm-Shift	30 6 1	92-0722	Shaft-Lock Fork	35 18 1
87-8120	Bracket-Trim Side	1 20 2	92-0723	Spring-Compression	35 19 1
87-8130	Bracket-Trim Top	1 21 1	92-0724	Arm-Differential Lock	35 27 1
87-8160	Trim	1 22 1	92-0725	Shaft-Axle LH	35 28 1
87-8240	Cable-Parking Brake	17 8 2	92-0726	Shaft-Axle RH	35 1 1
87-8250	Plate-Shift Arm	30 4 1	92-0727	Washer	35 4 2
87-8440	Asm-Rear Frame	22 2 1	92-0728	Washer	35 2 1
87-8460	Bumper	12 34 1	92-0729	Seal-Oil	34 10 3
87-8471	Bracket-Clutch	12 7 1	92-0730	Slider-Differential Lock	35 7 1
87-8530	Decal-Dash	2 33 1	92-0731	Spring-Compression	34 2 3
87-8550	Asm-Control Panel	2 28 1	92-0732	Plate-Keeper	34 8 3
87-8620	Boot-Shift	13 5 1	92-0733	Washer	35 20 1
87-8640	Washer-Flat	16 16 1	92-0740	Washer-Thrust	33 3 3
87-8710	Tab-Clutch	12 40 1	92-0741	Washer-Thrust	32 10 1
87-8730	Stud-Drive	20 8 10	92-0743	Breather-Air	31 27 1
87-8780	Head-Oil Filter	37 29 1	92-0744	Washer	35 14 1
87-9080	Decal-Grease	23 30 2	92-0745	Gear-Side LH	35 24 1
87-9250	Asm-Transaxle	30 20 1	92-0746	Gear-Side RH	35 11 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
92-0747	Washer—Thrust	35	10	2	92-2176	Pin—Dowel	26	16	2
92-0748	Gear—Pinion	35	12	2	92-2177	Pin—Shear	26	7	1
92-0749	Shaft—Pinion	35	23	1	92-2178	Ring—Crescent	26	4	4
92-0750	Washer	35	13	2	92-2179	Key—Square	26	5	1
92-0753	Ring—Retaining	33	2	1	92-2180	Gasket—Copper	26	23	1
92-0753	Ring—Retaining	35	21	1	92-2181	Plate—Pressure	26	13	1
92-0754	Ring—Retaining	33	20	1	92-2182	Plate—Seal	26	9	1
92-0755	Ring—Retaining	32	11	1	92-2183	Plate—Wear	26	10	1
92-0756	Ring—Retaining	35	5	3	92-2184	Cap—Relief Valve	26	24	1
92-0759	Ring—Retaining	31	22	1	92-2185	Plug	26	19	1
92-0760	Ring—Retaining	31	15	1	92-2186	Spacer	26	3	1
92-0761	Ring—Retaining	34	18	1	92-2187	Housing—Gear, End	26	17	1
92-0762	Washer—Lock	31	3	1	92-2189	Shaft—Drive	26	6	1
92-0763	Ring—Retaining	33	14	3	92-2190	Shaft—Idler	26	25	1
92-0764	Ring—Retaining	32	3	3	92-2191	Bearing	26	27	1
92-0765	Pin—Alignment	31	8	4	92-2192	Bearing	26	12	4
92-0765	Pin—Alignment	35	9	2	92-2193	Ball	26	20	1
92-0768	Pin—Spring	35	15	2	92-2195	Seal—Oil	26	2	1
92-0769	Pin—Spring	34	4	2	92-2196	Seal—Pressure Plate	26	15	1
92-0770	Pin—Spring	35	26	1	92-2197	Seal—Back Up	26	14	1
92-0771	Pin—Spring	35	16	1	92-2198	Seal	26	26	1
92-0772	Key	33	17	2	92-2199	Key—Ball	26	28	1
92-0773	Asm—Drain Plug	31	13	1	92-2379	Clamp—Hose	25	2	2
92-0775	Bearing—Ball	35	6	2	92-2379	Clamp—Hose	38	32	1
92-0775	Bearing—Ball	31	33	2	92-2379	Clamp—Hose	37	34	1
92-0776	Bearing—Ball	35	29	1	92-4100	Asm—Backplate RH	24	*	1
92-0778	Bearing—Ball	33	11	2	92-4101	Asm—Primary Piston	9	11	1
92-0780	Bearing—Ball	35	3	1	92-4102	Asm—Secondary Piston	9	4	1
92-0781	Bearing—Needle	33	4	4	92-4103	Pin—Stop	9	3	1
92-0782	Bearing—Needle	33	33	1	92-4108	Washer—Retainer	9	10	1
92-0783	Sleeve—Inner	32	5	1	92-4109	Circlip	9	9	1
92-0785	Ball	34	1	3	92-4110	Clevis	9	5	1
92-0787	O—Ring	31	12	1	92-4111	Petcock—Radiator	25	38	1
92-0787	O—Ring	35	22	1	92-4112	Asm—Cap	9	12	1
92-0788	O—Ring	31	6	1	92-4113	Screw—Bleed	21	4	1
92-0789	O—Ring	31	14	1	92-4114	Cap—Bleed Screw	21	5	1
92-0790	O—Ring	31	29	1	92-4114	Cap—Bleed Screw	24	5	1
92-0791	Seal—Oil	31	26	1	92-4115	Asm—Backplate LH	21	2	1
92-0793	Seal—Oil	31	16	2	92-4116	Asm—Backplate RH	21	*	1
92-0793	Seal—Oil	35	32	2	92-4117	Asm—Wheel Cylinder LH	21	*	1
92-0796	Screw—HH	31	31	5	92-4118	Asm—Wheel Cylinder RH	21	*	1
92-0803	Screw—HFH	35	30	12	92-4119	Kit—Seal	21	*	1
92-0804	Stud	31	28	1	92-4120	Shoe & Lining Set	21	13	1
92-0807	Cap—Sealing	31	23	1	92-4121	Asm—Adjuster LH	21	*	1
92-0808	Shim Set	31	20	1	92-4122	Asm—Adjuster RH	21	*	1
92-0809	Shim Set	31	11	1	92-4123	Asm—Pawl LH	21	19	1
92-0816	Arm—Shift Fork R—1	34	15	1	92-4123	Asm—Pawl LH	24	19	1
92-0817	Arm—Shift Fork 2—3	34	5	1	92-4124	Asm—Pawl RH	21	*	1
92-0818	Arm—Shift Fork Hi—Lo	34	19	1	92-4124	Asm—Pawl RH	24	*	1
92-0819	Gear—40T	33	32	1	92-4125	Plug	21	3	1
92-0820	Gear—27T	33	5	1	92-4126	Spring—Shoe, Upper LH	21	14	1
92-0821	Gear—24T	33	15	1	92-4127	Spring—Shoe, Upper RH	21	*	1
92-0822	Gear—28T	33	24	1	92-4128	Spring—Shoe, Lower	21	15	1
92-0823	Gear—43T	33	27	1	92-4129	Spring—Adjuster, LH	21	20	1
92-0824	Shaft—Reverse Idler	33	9	1	92-4130	Spring—Adjuster, RH	21	*	1
92-0827	Gear	43	12	1	92-4131	Washer—Hold Down	21	22	2
92-0830	Plate—Rear	49	47	1	92-4131	Washer—Hold Down	24	22	2
92-0831	Pin—Knock	49	48	1	92-4132	Spring—Hold Down	21	23	2
92-0835	Gear	44	7	1	92-4133	Pin—Hold Down	21	26	2
92-0836	Asm—Flywheel	44	13	1	92-4133	Pin—Hold Down	24	26	2
92-0839	Plate	43	14	1	92-4134	Plug—Inspection	21	25	1
92-0840	Gear	43	17	1	92-4134	Plug—Inspection	24	25	1
92-0841	Ring—Retaining	43	15	1	92-4135	Set Bolt	21	1	2
92-0842	Asm—Gear	43	13	1	92-4135	Set Bolt	24	1	2
92-0843	Bolt w/Washer	53	2	2	92-4136	Asm—Backplate LH	24	2	1
92-0844	Plug—Glow	46	39	3	92-4137	Screw—Bleed	24	4	1
92-0845	Crankshaft	44	16	1	92-4140	Asm—Wheel Cylinder LH	24	*	1
92-1295	Kit—Belt, Seat	42	*	2	92-4141	Asm—Wheel Cylinder RH	24	*	1
92-1914	Bearing—Ball	44	27	1	92-4142	Kit—Seal	24	*	1
92-2173	Screw—CSH	26	18	8	92-4143	Shoe & Lining Set	24	13	1
92-2174	Screw—Adjusting	26	22	1	92-4144	Asm—Adjuster LH	24	*	1
92-2175	Gear	26	11	2	92-4145	Asm—Adjuster RH	24	*	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
92-4146	Plug	24 3 1	93-7130	Harness-Wire Rear	36 22 1
92-4147	Spring-Shoe, Upper LH	24 14 1	93-7133	Arm-Control Upper LH	19 * 1
92-4148	Spring-Shoe, Upper RH	24 * 1	93-7135	Arm-Control Upper RH	19 21 1
92-4149	Spring-Shoe, Lower	24 15 1	93-7140	Belt-V	27 14 1
92-4150	Spring-Adjuster, LH	24 20 1	93-7145	Screw-HH	5 19 3
92-4151	Spring-Adjuster, RH	24 * 1	93-8938	Bracket-Cover Mount LH	25 44 1
92-4152	Spring-Hold Down	24 23 2	93-8939	Bracket-Cover Mount RH	25 46 1
92-4153	Asm-Steering Column	5 11 1	93-8940	Cover-Radiator	25 45 1
92-4154	Asm-Universal Joint	5 31 1	93-8943	Bracket-Fender, Rear LH	41 5 1
92-4155	Asm-Slip Joint, Upper	5 28 1	93-8958	Pedal-Clutch	12 37 1
92-4156	Asm-Slip Joint, Lower	5 29 1	93-8961	Arm-Accelerator Pedal	8 10 1
92-4157	Boot-Steering Shaft	5 24 1	93-8965	Pedal-Brake	8 27 1
92-4158	Asm-Valve, Hyd. Gear	7 * 1	93-8969	Pedal-Accelerator	8 15 1
92-4159	Nut-Adjuster Plug Lock	6 25 1	93-8970	Asm-Cylinder Head	46 28 1
92-4160	Kit-Bearing Service, Upper	7 * 1	93-8971	Seal-Port, Flange	9 2 2
92-4161	Asm-Cover Service	6 * 1	93-8972	Shaft-Idler	49 34 1
92-4162	Pitman Shaft-Gear Service	7 * 1	93-8973	Piston & Pin Set STD	44 10 3
92-4163	Asm-Steering Housing	7 * 1	93-8974	Thermostat	29 42 1
92-4164	Asm-Plug, Service Adjust.	7 * 1	93-8974	Thermostat	46 45 1
92-4165	Plug-Housing End	6 2 1	93-8975	Piston & Pin Set 0.25 OS	44 * 3
92-4166	Asm-Rack/Piston/Nut	7 * 1	93-8976	Piston & Pin Set 0.50 OS	44 * 3
92-4167	Asm-Plug Service	7 * 1	93-8995	Rod-Threaded	29 46 1
92-4168	Return-Guide Ball	6 7 2	93-9164	Indicator-Mini	38 38 1
92-4169	Bearing-Needle	6 21 1	93-9539	Strip-Tapped	30 46 1
92-4170	Bearing-Pitman Shaft	6 47 1	93-9879	Decal-Warning (Europe)	18 33 2
92-4179	Yoke, Shaft & Seal Tube	23 43 2	94-1257	Asm-Block Sub	43 1 1
92-4180	Seal	23 42 2	94-1258	Gasket-Cylinder Head	46 25 1
92-4182	Yoke & Hub	23 41 2	94-1259	Sub-Asm, Case	47 1 1
92-4187	Kit-Cross & Bearing	23 47 4	94-1414	Valve	38 43 1
92-4188	Ring-Snap	23 39 12	94-1414	Valve-Vacuator	39 5 1
92-4189	Kit-Strap & Bolt	23 31 2	94-3533	Cover (Intake)	46 5 1
92-4190	Yoke-End	23 32 2	94-3652	Asm-Cover	39 4 1
92-4198	Asm-Fan Shroud	25 17 1	94-3652	Asm-Cover	38 40 1
92-6493	Decal-Warning (Japan)	18 33 2	94-3800	Asm-Master Cylinder	8 3 1
92-6982	Spacer-Plate	30 43 1	94-3814	Tube-Hydraulic	8 1 1
92-7905	Switch-Reverse	30 50 1	94-3815	Tube-Hydraulic	8 2 1
93-0307	Nut-Retainer	20 31 2	94-3819	Tube-Brake Rear	10 5 1
93-0309	Washer-Tab	20 3 2	94-3820	Tube-Brake Front	10 1 1
93-2191	Asm-Band, Mounting	38 44 1	94-3821	Plate-Center, Frame	8 34 1
93-2195	Element-Air Cleaner	39 3 1	94-3827	Spring-Return	52 41 1
93-3102	Cap-Fuel	38 1 1	94-3829	Pin-Clevis	17 7 1
93-3525	Gauge-Water Temp.	29 62 1	94-3836	Cable-Accelerator	29 6 1
93-3525	Gauge-Water Temp.	46 35 1	94-3836	Cable-Accelerator	8 47 1
93-3526	Asm-Switch, Thermo	29 59 1	94-3837	Asm-Clutch Cable	12 1 1
93-3526	Asm-Switch, Thermo	46 48 1	94-3837	Cable-Clutch	3 52 1
93-3919	Bracket-Switch, Reverse	30 49 1	94-3838	Bracket-Mudflap LH	1 27 1
93-3920	Alarm-Backup	41 18 1	94-3839	Bracket-Mudflap RH	1* 28 1
93-3921	Bracket-Alarm, Reverse	41 16 1	94-3842	Tube-Brake Rear	10 12 1
93-3928	Harness-Wire, Reverse	30 45 1	94-3843	Tube-Brake LH	22 22 1
93-6687	Decal-No Step (Europe)	36 10 1	94-3844	Asm-Tube, Brake Rear LH	22 32 1
93-7051	Asm-Radiator	25 39 1	94-3844	Tube-Brake LH	22 * 1
93-7053	Asm-Warning Light	2 9 1	94-3845	Tube-Brake RH	22 20 1
93-7081	Tube-Brake Front RH	10 10 1	94-3846	Tube-Brake RH	22 3 1
93-7082	Tube-Brake Front LH	10 16 1	94-5202	Asm-Lever Support	16 6 1
93-7085	Tube-Brake Front	10 19 1	94-5209	Cover-Dust	9 7 1
93-7088	Support-Fan	25 20 1	94-5210	Rod-Push	9 8 1
93-7090	Stub-Axle	23 14 2	94-5213	Muffler	29 31 1
93-7094	Cover-Wire Harness	2 24 1	94-5221	Flap-Master Cylinder	8 42 1
93-7099	Frame-Engine	28 1 1	94-5223	Bell Crank	8 19 1
93-7100	Mount-Engine	28 5 1	94-5237	Pulley	25 26 1
93-7100	Mount-Engine	29 40 1	94-5238	Hose-Air Cleaner	38 19 1
93-7103	Screen-Radiator	25 8 1	94-5238	Hose-Air Intake	29 11 1
93-7120	Housing-Bell	12 10 1	94-5240	Asm-Operators Platform	1 13 1
93-7123	Hose-Brake Front	19 8 2	94-5256	Bell Crank	29 8 1
93-7123	Hose-Brake Front	10 9 2	94-5259	Bracket-Accelerator	29 4 1
93-7125	Asm-Brake RH	23 10 1	94-5272	Decal-Warning	2 16 1
93-7125	Asm-Rear Brake RH	24 * 1	94-5299	Rod-Link	8 25 1
93-7126	Asm-Brake LH	23 9 1	94-5428	Elbow	38 35 1
93-7126	Asm-Rear Brake LH	24 * 1	95-5805	Asm-Air Cleaner	38 36 1
93-7128	Drum-Brake	23 15 2	95-7394	Shaft-Brake	8 35 1
93-7130	Harness-Wire	29 15 1	98-2915	Asm-Fuel Tank	38 2 1
93-7130	Harness-Wire	37 25 1	98-2918	Asm-Driveshaft	23 *24 2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
98-2920	Engine	29 55 1	2412-36	Clamp-Hose	30 2 1
98-2925	Asm-Front Housing	54 9 1	2412-36	Clamp-Hose	37 7 2
98-2926	Screw Set (3 Screws)	54 7 1	2412-89	Clamp-R	36 20 1
98-2927	Bearing-Front	54 8 1	2412-89	Clamp-R	10 21 1
98-2928	Asm-Rotor	54 10 1	2412-89	Clamp-R	12 29 1
98-2929	Nut-Set	54 1 1	2412-89	Clamp-R	2 30 1
98-2930	Pulley Set	54 23 1	2412-92	Clamp-Hose	29 10 2
98-2931	Bolt Set (4 Bolts)	54 5 1	2412-92	Clamp-Hose	38 20 2
98-2932	Bearing-Rear	54 11 1	2412-93	Clamp-R	41 8 1
98-2933	Asm-Stator	54 21 1	2412-105	Clamp-R	5 17 2
98-2934	Asm-Rear Housing	54 15 1	2412-106	Clamp-R	28 11 1
98-2935	Asm-Regulator	54 17 1	2412-108	Clamp-Hose	38 10 1
98-2936	Asm-Brush	54 19 2	2412-108	Clamp-Hose	29 12 2
98-2937	Asm-Rectifier	54 16 1	2412-108	Clamp-Hose	37 15 3
98-2938	Asm-Alternator	54 * 1	2412-133	Clamp-R	14 29 2
98-2938	Nut Set-Terminal	54 18 1	2412-149	Clamp-R	29 37 1
98-2939	Screw-HH	23 26 4	2412-149	Clamp-Tube	22 24 4
98-2940	Yoke-Double Clamp	23 44 2	251-8	Bearing-Ball	33 1 2
98-2945	Hose	29 14 1	251-82	Bearing-Ball	27 11 2
98-2945	Hose-Fuel	38 11 1	251-346	Bearing-Ball	33 8 1
98-2947	V-Belt	48 2 1	254-72	Cup-Bearing	20 28 2
98-2948	Brace-Generator	54 6 1	254-94	Cone-Bearing	20 29 2
98-2952	Fitting-Straight	38 9 1	254-106	Cone-Bearing	20 26 2
98-2962	Kit-Seal, Pitman Shaft	7 * 1	254-107	Cup-Bearing	20 27 2
98-2964	Decal-Workman 1300D	1 19 1	256-155	Bushing-Flange	8 26 2
98-2972	Cover-Console	13 6 1	256-156	Bushing-Flange	12 36 2
98-2977	Asm-Tire & Wheel	20 5 2	256-247	Bushing-Flange	8 18 2
98-2978	Asm-Tire & Wheel	23 16 2	256-259	Bushing-Flange	8 9 2
98-2979	Hood	1 1 1	283-2	Pin-Clevis	8 4 1
98-2982	Filter-Element, Safety	38 37 1	283-30	Pin-Clevis	8 12 1
99-1052	Plate-Hi-Lo	30 42 1	283-30	Pin-Clevis	12 35 1
99-1053	Asm-Hose	40 15 1	283-62	Pin-Clevis	16 3 2
99-1053	Asm-Hose	26 36 1	283-62	Pin-Clevis	30 34 2
99-1054	Asm-Hydraulic Pump	25 22 1	283-85	Pin-Clevis	8 14 1
99-1058	Asm-Hose	40 16 1	285-17	Plug	39 1 1
99-1058	Hose-Hydraulic	37 43 1	285-17	Plug	38 41 1
99-1060	Spring	26 21 1	302-5	Fitting-Grease	29 5 1
99-1063	Timer-Delay	22 38 1	302-5	Fitting-Grease	8 8 3
99-1070	Plug-Hole, Dash	3 59 1	302-5	Fitting-Grease	19 14 4
99-1075	Bracket-Mount, Relay	22 34 1	302-5	Fitting-Grease	5 30 1
99-1082	Harness-Wire Rear	2 36 1	302-5	Fitting-Grease	20 32 4
99-1083	Harness-Wire Front LH	2 29 1	302-5	Fitting-Grease	12 44 1
99-1084	Asm-Front Wire Harness	2 22 1	302-5	Fitting-Grease	23 45 2
99-1085	Decal-Quick Ref.	13 41 1	302-11	Fitting-Grease	18 8 1
99-1086	Asm-Skirt	13 22 1	302-58	Fitting-Grease	23 46 16
218-446	Nut-Hex.	2 40 1	321-2	Screw-HH	2 1 7
218-447	Washer-Lock	2 41 1	321-3	Screw-HH	2 4 3
218-473	Boot-Switch	2 35 1	321-3	Screw-HH	25 31 4
218-574	Fuse-7.5 Amp	3 53 2	321-3	Screw-HH	5 33 2
218-578	Fuse-10 Amp	3 54 1	321-3	Screw-HH	22 40 2
218-600	Bulb	3 56 2	321-4	Screw-HH	25 5 4
219-17	Bulb-Warning Light	2 42 4	321-4	Screw-HH	36 6 1
233-39	Knob	5 1 1	321-4	Screw-HH	28 8 1
237-22	O-Ring	40 17 2	321-4	Screw-HH	14 15 8
237-22	O-Ring	26 35 1	321-4	Screw-HH	10 22 1
237-30	O-Ring	30 33 2	321-4	Screw-HH	22 26 4
237-42	O-Ring	30 41 1	321-4	Screw-HH	1 29 4
237-79	O-Ring	37 5 2	321-4	Screw-HH	12 30 1
237-79	O-Ring	26 33 1	321-4	Screw-HH	2 31 1
237-123	O-Ring	30 23 1	321-5	Screw-HH	29 2 1
240-5	Grommet	12 31 1	321-5	Screw-HH	41 17 4
241-119	Cap-Dust	20 1 2	321-6	Screw-HH	41 1 2
2410-35	Plug	2 6 1	321-6	Screw-HH	19 5 2
2410-42	Cap-Front Bumper	1 10 2	321-9	Screw-HH	40 1 2
2410-64	Plug-Hole	2 38 1	321-9	Screw-HH	10 3 4
2411-33	Joint-Ball	12 3 1	321-9	Screw-HH	17 9 1
2412-10	Clamp-R	19 7 2	321-9	Screw-HH	8 38 1
2412-34	Clamp	26 30 1	322-2	Screw-HH	10 11 1
2412-34	Clamp	29 36 2	322-2	Screw-HH	5 16 6
2412-34	Clamp-Hose	25 6 2	322-2	Screw-HH	38 22 2
2412-34	Clamp-Hose	28 7 1	322-2	Screw-HH	2 25 3
2412-36	Clamp	38 8 1	322-2	Screw-HH	25 42 6

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
322-3	Screw-HH	22 33 4	3253-4	Washer-Lock	13 24 8
322-5	Screw-HH	27 2 4	3253-6	Washer-Lock	23 3 10
322-5	Screw-HH	41 9 2	3253-15	Washer-Lock	38 5 5
322-5	Screw-HH	19 10 2	3253-15	Washer-Lock	2 45 6
322-5	Screw-HH	40 11 1	3253-19	Washer-Lock	2 48 6
322-5	Screw-HH	13 25 8	3253-21	Washer-Lock	23 11 8
322-5	Screw-HH	25 25 4	3253-21	Washer-Lock	20 12 8
322-5	Screw-HH	8 36 1	3253-21	Washer-Lock	14 40 2
322-7	Screw-HH	27 9 4	3254-1	Washer-Lock	3 50 1
322-10	Screw-HH	42 5 4	3254-2	Washer-Lock	29 32 2
322-12	Screw-HH	16 17 1	3255-7	Washer-ETLW	37 41 1
323-4	Screw-HH	38 16 2	3255-7	Washer-Lock	41 20 3
323-4	Screw-HH	1 24 1	3255-9	Washer-Lock ETLW	36 3 1
323-6	Screw-HH	23 12 8	3256-3	Washer-Flat	42 6 8
323-6	Screw-HH	14 13 2	3256-3	Washer-Flat	27 8 4
323-7	Screw-HH	30 10 4	3256-4	Washer-Flat	30 8 1
323-7	Screw-HH	8 17 2	3256-6	Washer-Flat	22 9 4
323-8	Screw-HH	20 11 8	3256-6	Washer-Flat	18 32 2
323-9	Screw-HH	36 14 1	3256-14	Washer-Flat	22 37 1
323-10	Screw-HH	30 7 1	3256-14	Washer-Flat	30 47 2
323-12	Screw-HH	18 6 8	3256-22	Washer-Flat	41 2 4
324-9	Screw-HH	18 22 4	3256-22	Washer-Flat	10 4 4
324-10	Screw-HH	18 1 4	3256-22	Washer-Flat	2 5 2
324-12	Screw-HH	28 3 2	3256-22	Washer-Flat	40 7 3
324-13	Screw-HH	18 10 2	3256-22	Washer-Flat	37 11 1
325-4	Screw-HH	14 18 2	3256-22	Washer-Flat	25 14 4
325-13	Screw-HH	19 11 8	3256-22	Washer-Flat	14 16 8
325-13	Screw-HH	18 27 4	3256-22	Washer-Flat	8 39 3
325-19	Screw-HH	23 23 1	3256-22	Washer-Flat	12 41 2
325-20	Screw-HH	23 22 5	3256-23	Washer-Flat	17 5 1
3211-8	Screw-HH	16 5 2	3256-23	Washer-Flat	41 10 2
3212-4	Screw-HH	42 1 4	3256-23	Washer-Flat	13 42 8
3215-1	Screw-HH	30 14 2	3256-23	Washer-Lock	12 38 4
3215-2	Screw-HH	12 12 5	3256-24	Washer-Flat	36 15 2
3217-25	Nut-Hex.	2 46 6	3256-25	Washer	29 30 6
3217-26	Nut-Hex.	3 51 1	3256-25	Washer-Flat	28 4 2
3217-29	Nut-Jam	2 47 6	3256-26	Washer-Flat	12 11 4
3218-18	Nut-Jam	16 30 1	3256-26	Washer-Flat	8 21 1
3218-20	Nut-Jam	12 16 2	3256-27	Washer-Flat	22 6 4
3218-21	Nut-Jam	20 19 2	3256-27	Washer-Flat	18 31 2
3220-1	Nut-Jam	16 28 4	3256-28	Washer-Flat	27 15 1
3220-1	Nut-Jam	30 37 2	3256-45	Washer-Flat	25 27 1
3220-1	Nut-Jam	29 47 2	3256-61	Washer-Flat	13 21 14
3220-2	Nut-Jam	12 2 1	3256-67	Washer-Flat	37 40 3
3220-3	Nut-Jam	16 4 2	3257-7	Key-Woodruff	27 17 1
3220-3	Nut-Jam	8 24 1	3272-6	Pin-Cotter	16 1 2
3220-7	Nut-Jam	20 2 2	3272-6	Pin-Cotter	17 1 1
3220-11	Nut-Jam	20 21 2	3272-6	Pin-Cotter	8 7 1
3220-16	Nut-Hex. Jam	8 44 1	3272-6	Pin-Cotter	30 28 2
3229-25	Nut-Lock	37 9 2	3272-10	Pin-Cotter	8 11 2
3230-18	Bolt-CARR	14 9 8	3272-10	Pin-Cotter	12 33 1
3230-23	Bolt-CARR	37 2 2	3272-12	Pin-Cotter	19 17 4
3230-23	Bolt-CARR	36 5 4	3272-12	Pin-Cotter	20 30 2
3230-23	Bolt-CARR	25 24 7	3272-12	Pin-Cotter	20 34 4
3231-21	Bolt-CARR	36 1 6	3274-31	Screw-Button Hd.	2 7 4
3231-21	Bolt-CARR	14 10 4	3274-54	Screw-HSH	38 28 2
3231-21	Bolt-CARR	16 25 4	3274-94	Screw-HSBH	37 46 1
3231-25	Bolt-CARR	18 21 4	3277-1	Nut-Hex.	5 5 1
3232-17	Bolt-CARR	22 19 8	3290-271	Rivet-Pop	25 13 2
3234-1	Screw-HFH	1 11 6	3290-321	Screw-HFH	8 31 2
3234-4	Screw-HFH	37 45 4	3290-357	Nut-Flange Lock	1 6 9
3234-11	Screw-HH	28 18 6	3290-357	Nut-HFH	36 2 6
3234-38	Screw-HFH	22 17 24	3290-357	Nut-HFH	16 7 4
3234-38	Screw-HH	38 31 2	3290-357	Nut-HFH	14 11 4
3234-40	Screw-HFH	15 4 4	3290-357	Nut-HFH	18 16 4
3245-31	Screw-Set	25 47 1	3290-357	Nut-HFH	38 18 2
3250-13	Screw	2 21 2	3290-357	Nut-HFH	25 21 1
3250-13	Screw-HH	13 3 20	3290-357	Nut-HFH	8 37 2
3250-20	Screw-RH	25 41 4	3290-378	Cable-Tie	38 34 1
3253-3	Washer-Lock	25 30 4	3290-378	Tie-Cable	28 2 1
3253-4	Washer-Lock	5 14 4	3290-379	Tie-Cable	29 38 1
3253-4	Washer-Lock	29 22 6	3290-413	Washer-Belleville	28 16 12

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
3290-455	Washer	5	12	1	32121-24	Pin-Roll	12	24	2
3290-456	Washer-Belleville	16	31	2	32121-48	Pin-Roll	16	23	1
3290-477	Washer-Curved	17	10	1	32122-24	Screw-RH	38	6	5
3290-506	Pinnut	41	7	2	32128-20	Nut-Flange	10	17	1
3290-507	Pin-Dowel	16	21	1	32128-20	Nut-Flange	2	23	3
3296-2	Nut-Lock	13	8	20	32128-20	Nut-Flange	5	27	6
3296-2	Nut-Lock	2	26	2	32128-20	Nut-HFH	22	35	4
3296-2	Nut-Lock	8	33	2	32128-20	Nut-HHF	19	6	2
3296-3	Nut-Lock	29	9	3	32128-20	Nut-HHF	14	14	8
3296-4	Nut-Lock	12	5	1	32128-20	Nut-HHF	36	16	2
3296-5	Nut-Lock	25	28	1	32128-20	Nut-HHF	38	25	4
3296-6	Nut-Lock	8	20	2	32128-20	Nut-HHF	8	29	2
3296-12	Nut-Lock	22	36	1	32128-20	Nut-Lock	40	12	1
3296-15	Nut-Lock	27	16	1	32128-20	Nut-Lock	25	40	6
3296-23	Nut-Lock	22	10	4	32128-21	Nut-HHF	30	5	1
3296-23	Nut-Lock	19	12	8	32128-23	Nut-HHF	15	5	4
3296-23	Nut-Lock	18	14	4	32128-23	Nut-HHF	38	17	2
3296-23	Nut-Lock	14	20	2	32128-23	Nut-HHF	22	21	24
3296-23	Nut-Lock	8	22	1	32128-33	Nut-Flange	2	20	13
3296-27	Rivet-Plastic	36	11	4	32128-33	Nut-HHF	37	3	1
3296-29	Nut-Lock	27	6	6	32128-33	Nut-HHF	36	4	1
3296-29	Nut-Lock	42	8	4	32128-33	Nut-HHF	28	14	1
3296-29	Nut-Lock	41	11	2	32128-33	Nut-HHF	22	27	4
3296-29	Nut-Lock	12	19	1	32128-33	Nut-HHF	12	28	1
3296-29	Nut-Lock	25	23	8	32128-33	Nut-Lock	1	30	4
3296-29	Nut-Lock	37	28	2	32128-36	Nut-Lock	23	25	4
3296-29	Nut-Lock	8	30	1	32128-53	Nut-HHF	23	6	2
3296-29	Nut-Lock	29	57	1	32136-2	Nut-Slotted	19	2	2
3296-38	Nut-Lock	42	3	4	32136-3	Nut-Slotted	20	33	4
3296-39	Nut-Lock	22	13	6	32141-86	Screw-Leveler	25	18	1
3296-39	Nut-Lock	28	15	6	32144-10	Screw-Self Tapping	5	18	2
3296-39	Nut-Lock	20	17	8	32144-18	Screw-HH	2	37	2
3296-39	Nut-Lock	30	18	4	32144-52	Screw-HH	13	2	6
3296-39	Nut-Lock	36	18	1	32144-93	Screw-Self Tapping	41	12	2
3296-39	Nut-Lock	18	28	8	32144-116	Screw-PH	5	8	8
3296-39	Nut-Lock	37	47	1	32148-6	Insert-Threaded	2	2	2
3296-42	Nut-Lock	17	3	1	32148-7	Nut-Clinch	1	18	8
3296-42	Nut-Lock	41	6	6	32148-7	Nut-Clinch	16	32	2
3296-42	Nut-Lock	40	8	2	32148-9	Insert-Threaded	22	1	8
3296-42	Nut-Lock	19	13	2	32151-41	Ring-Retaining	26	1	1
3296-42	Nut-Lock	25	15	4	32151-56	Ring-Retaining	8	16	1
3296-42	Nut-Lock	37	17	2	32151-104	Ring-Snap	19	15	4
3296-42	Nut-Lock	10	20	5	33014-00	Nut	29	27	6
3296-42	Nut-Lock	38	26	2	3314-020	Screw-HH	30	22	5
3296-42	Nut-Lock	5	32	2	33093-00	Washer-Flat	29	52	2
3296-42	Nut-Lock	8	41	1	33113-045	Screw-HH	29	51	2
3296-42	Nut-Lock	22	42	2	33114-016	Screw-HH	29	23	6
3296-48	Nut-Lock	18	11	10	33114-020	Screw-HH	12	6	8
3296-48	Nut-Lock	28	20	2	33114-025	Screw-HH	12	27	3
3296-56	Nut-Lock	29	50	2	33114-040	Screw-HH	12	21	9
3296-58	Nut-Lock	16	29	1	340-3	Fitting-Adapter	26	34	1
3296-59	Nut-Lock	5	13	1	340-7	O-Ring	26	32	1
3296-76	Nut-Lock	22	30	8	353-707	Fitting-90° Barb	37	16	1
32104-88	Screw	1	4	6	353-781	Fitting-Fuel 90°	38	14	1
32105-13	Screw-HH	30	48	2	353-783	Fitting-Straight	37	22	1
32105-13	Screw-Machine	22	39	1	353-989	Plug-Hollow	30	32	1
32120-47	Ring-E	8	13	1	354-134	Fitting-Hydraulic 90°	37	6	2
32120-47	Ring-E	12	32	2	354-135	Fitting-Hydraulic 90°	30	1	1
32120-47	Ring-Retaining	17	2	2	354-136	Fitting-Straight	26	31	1
32121-7	Pin-Roll	12	22	1					

*Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Workman 1300D has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the main frame. In any correspondence concerning the Workman 1300D, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial number of the Workman 1300D.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

Description	Page	Description	Page
Front Bumper & Hood Asm	1	Engine Installation Asm	29
Control Panel Asm	2-3	Transaxle Installation Asm	30
Electrical Schematic	4	Transaxle Case Asm	31
Steering Linkage Asm	5	Countershaft Asm	32
Steering Gear Asm No. 87-1500	6-7	Transaxle Gear Shafts Asm	33
Brake & Accelerator Pedal Asm	8	Shift Fork Asm	34
Master Brake Cylinder No. 94-3800	9	Differential Gear Asm	35
Hydraulic Brake Line Routing Asm	10	Battery Mount Asm	36
Hydraulic Schematic	11	Fuel Filter, Pump & Relay Mounting	37
Clutch Linkage Asm	12	Fuel Tank & Air Cleaner Asm	38
Seat Base Asm	13	Air Cleaner Asm No. 95-5805	39
Seat Back Asm	14	Steering Line Asm	40
Roll Over Protection System (R.O.P.S.) Asm	15	Backup Alarm & Tail Light Assembly	41
Console Asm	16	Seat Belt Asm	42
Parking Brake Asm	17	Camshaft Asm	43
Front Suspension Asm	18	Valves & Crankshaft Asm	44-45
Front Suspension Control Arm Asm	19	Cylinder Head Asm	46
Front Wheel Asm	20	Crankcase Asm	47
Front Brake Asm	21	Water Pump Asm	48
Rear Frame & Relay Asm	22	Fuel Supply & Engine Block Asm	49
Rear Axle Asm	23	Fuel Injection Pump Asm	50-51
Rear Brake Asm	24	Governor Asm	52
Radiator & Hydraulic Pump Asm	25	Starter Asm	53
Hydraulic Pump Asm No. 99-1054	26	Alternator Asm	54
Hydraulic Pump Drive Asm	27	TORO Part Number Index	55-64
Engine Frame Asm	28		

MAINTENANCE RECORD

[illegible]

[illegible]

MAINTENANCE RECORD

[illegible]