



R-21S RECYCLER[®] MOWER

Model No. 20452 – 8900001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Housing Assembly	1	Engine Briggs & Stratton	
Engine Assembly	2	Model 12H802–1758–E1	6–14
Rear Axle Assembly	3	Toro Part Number Index	15–17
Handle Assembly	4		
Gear Case Assembly	5	Note:	

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
Recycler Side Discharge Kit	Model No. 59291		
Recycler Bagging Kit	Model No. 59290		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HWHTF	hex washer head
ASM	assembly		thread forming
CARR	carriage	INC	incorporated
DEG	degrees	LH	left hand
FH	flat head	PH	pan head
GA	gauge	PPH	Phillips pan head
HF	hex flange	PTO	power take off
HFV	hex flange washer	RH	right hand
HH	hex head	SFH	slotted fillister head
HHF	hex head flange	SH	square head
HHST	hex head self tapping	SHWH	slotted hex washer head
HJ	hex jam	SPH	slotted pan head
HOC	height-of-cut	STD	standard
HS	hex socket	TAP	self tapping
HSBH	hex socket button head	TH	truss head
HSFH	hex socket flat head	TTH	Torx truss head
HSR	hex socket head	WH	wing head
HWH	hex washer head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form $X:Y$. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.

 
For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form $X (Y)$. X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

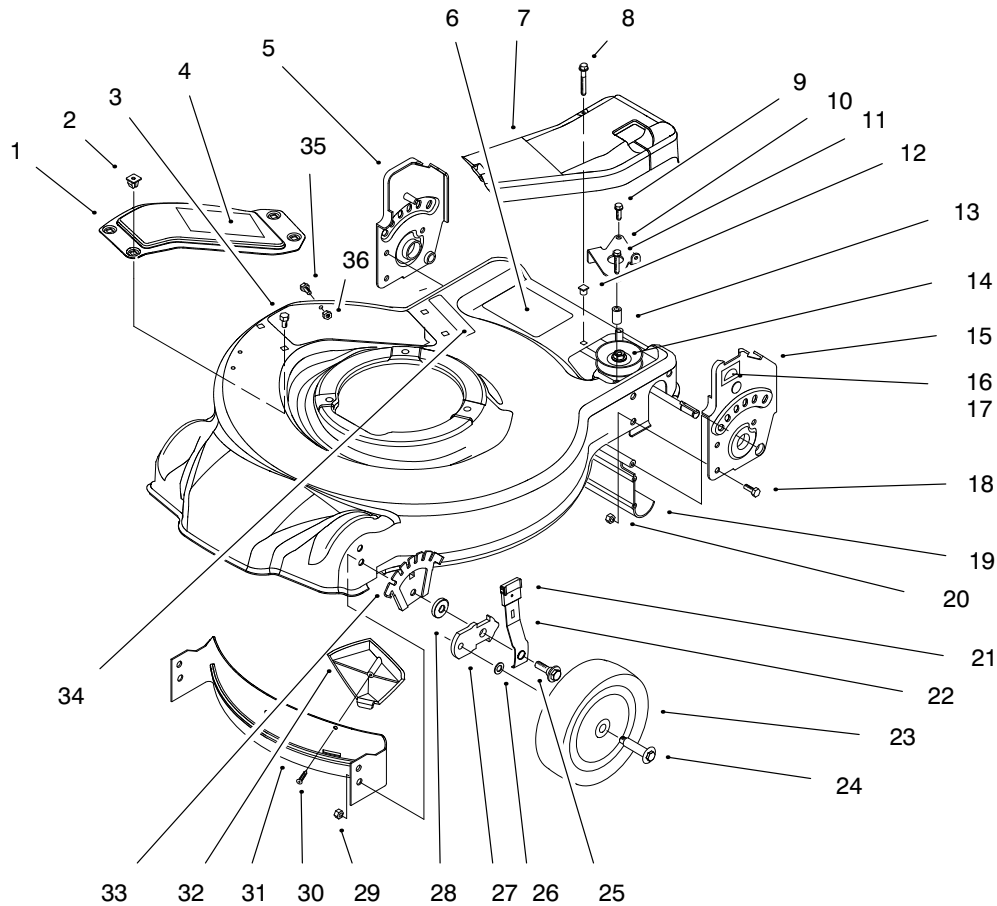


Sheet No.:2

Housing Assembly

Ref. No.	Part No.	Qty.	Description
1	16-9269	1	Cover-Recycling
2	93-0242	4	Grommet
3	32144-4	4	Screw-TAP
4	85-7060	1	Decal-Danger
5	93-0234	1	ASM
6	93-0248	1	Decal-Warning
7	93-0209	1	Cover-Belt
8	32144-119	1	Screw-Thrd Frm
9	49-2040	1	Screw-HH
10	93-0228	1	Brkt-Belt Guide
11	92-1616	1	Screw
12	605120	1	Grommet
13	614673	1	Spacer
14	93-0240	1	ASM-Transmission
15	93-0233	1	ASM
16	92-2915	1	Decal-HOC
17	92-2914	1	Decal-HOC
18	322-3	6	Screw-HH
19	92-8647	1	Shield-Trailing
20	3296-29	6	Nut-Lock
21	92-1008	4	Knob-Height Adjust
22	614687	2	Spring Arm-Front
23	98-7145	2	ASM-Wheel
24	614650	2	Bolt-Shoulder
25	614672	2	Bolt-Shoulder
26	40-1940	2	Washer


Ref. No.	Part No.	Qty.	Description
27	95-7403	1	Bracket-Wheel Height Adj
28	92-4890	2	Washer
29	3296-39	2	Nut-Lock
30	93-0231	2	Screw-Plastite
31	93-0222	1	Baffle-Front
32	93-0216	1	Kicker-Front
33	92-4881	2	Plate-Height Adjust
34	93-0262	1	Decal-Warning
35	32105-27	1	Screw-HWH
36	3296-2	1	Nut-Lock

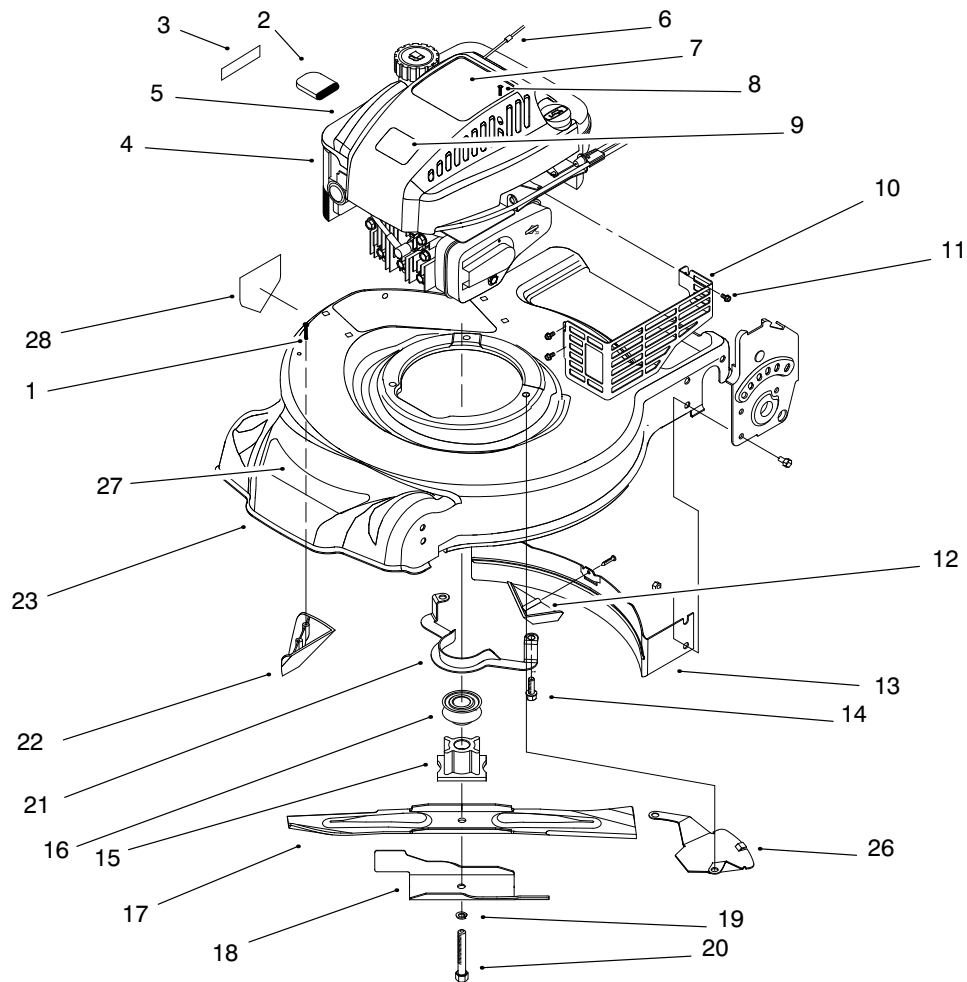 

Sheet No.:3

Engine Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	32144-111	2	Screw – PPH	27	93-0245	1	Decal-Deck
2	98-7136	1	Sleeve-Friction	28	39-5770	1	Decal-Danger
3	98-7131	1	Label-Speed Control				
4		1	Engine-Quantum 6.0 Hp				
5	93-0243	1	Shroud				
6	2210-316	1	Rope-Stop				
7	95-1657	1	Decal-Recoil				
8	32144-121	2	Screw				
9	98-3206	1	Plate-Logo				
10	82-8550	1	Shield-Muffler				
11	32144-73	3	Screw-HWHTF				
12	93-0217	1	Kicker-Rear				
13	93-0223	1	Baffle-Rear				
14	95-1726	3	Screw-Engine Mount				
15	62-7540	1	Retainer-Blade				
16	62-7550	1	Pulley-Driver				
17	93-0241	1	Blade-Steel Deck				
18	93-0219	1	Accelerator				
19	3253-22	1	Washer-Lock				
20	26-0670	1	Bolt-Blade				
21	93-0208	1	Guide-Belt				
22	93-0218	1	Kicker-Side				
23	16-9279	1	Deck-21in Steel Sp				
26	93-4196	1	Shield-Grass				

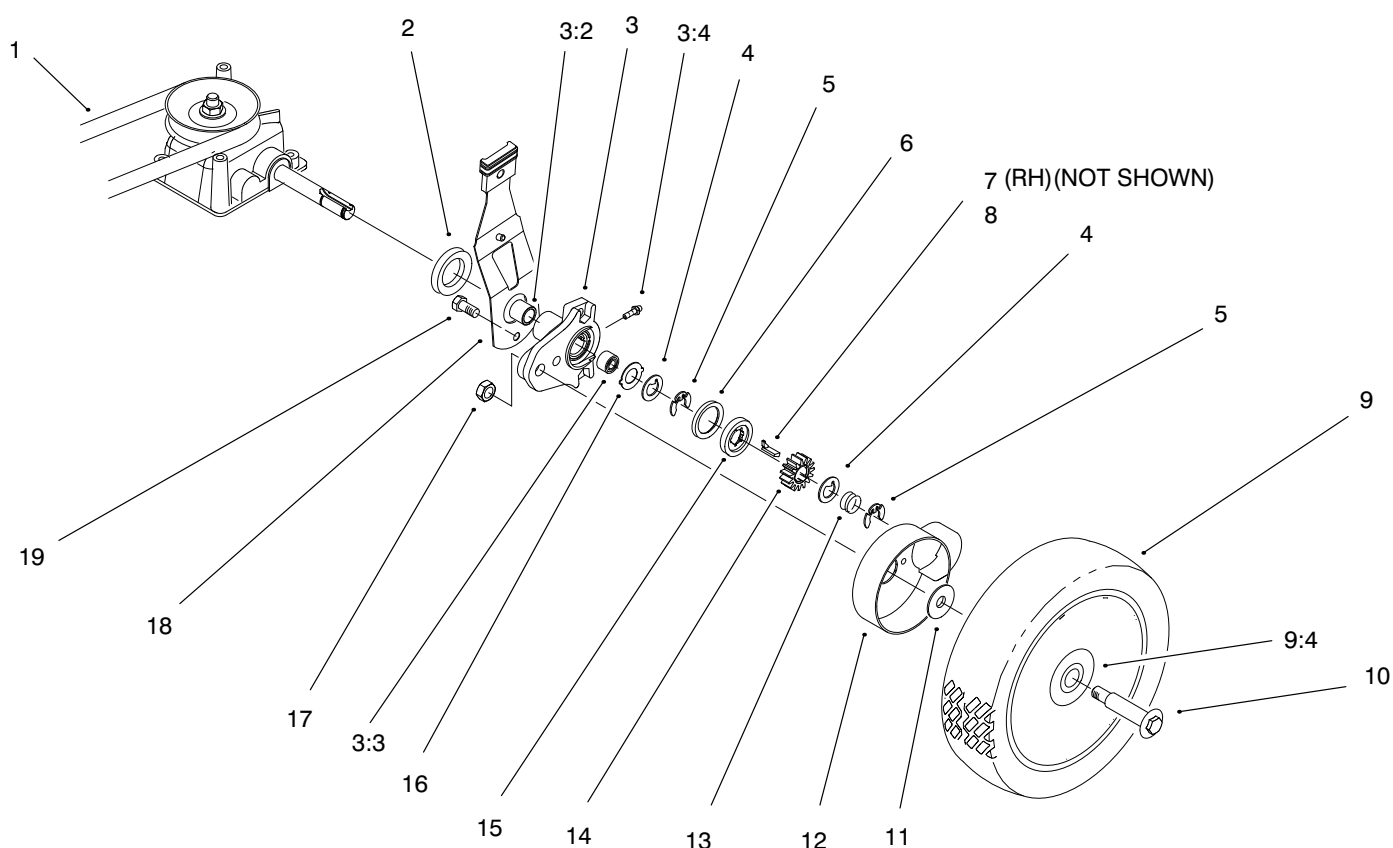 


Sheet No.:4

Rear Axle Assembly

Ref. No.	Part No.	Qty.	Description
1	93-0232	1	V-Belt
2	614447	2	Spacer-Axle Shaft
3	92-7746	2	ASM-Hgt Adj Arm
3:2	70-9760	2	Bushing
3:3	47-2900	2	Bushing
3:4	302-56	2	Fitting-Grease
4	65-4740	4	Washer-Thrust
5	65-2720	4	Ring-Retaining
6	65-4710	2	Ring-Friction
7	66-6040	1	Key-Locking RH
8	66-6050	1	Key-Rocking LH
9	98-7140	2	ASM-Wheel
9:4	27-6250	4	Bushing
10	92-1057	2	Bolt-Shoulder
11	614426	2	Washer-Stepped
12	94-1609	2	Cover-Wheel
13	65-4720	2	Spring-Compression
14	65-4750	2	Gear-Pinion
15	65-4760	2	Washer
16	65-4730	2	Washer-Thrust
17	610358	2	Nut-Lock
18	92-1004	2	ASM-Spring Arm
19	32144-85	2	Screw-HH


Ref. No.	Part No.	Qty.	Description

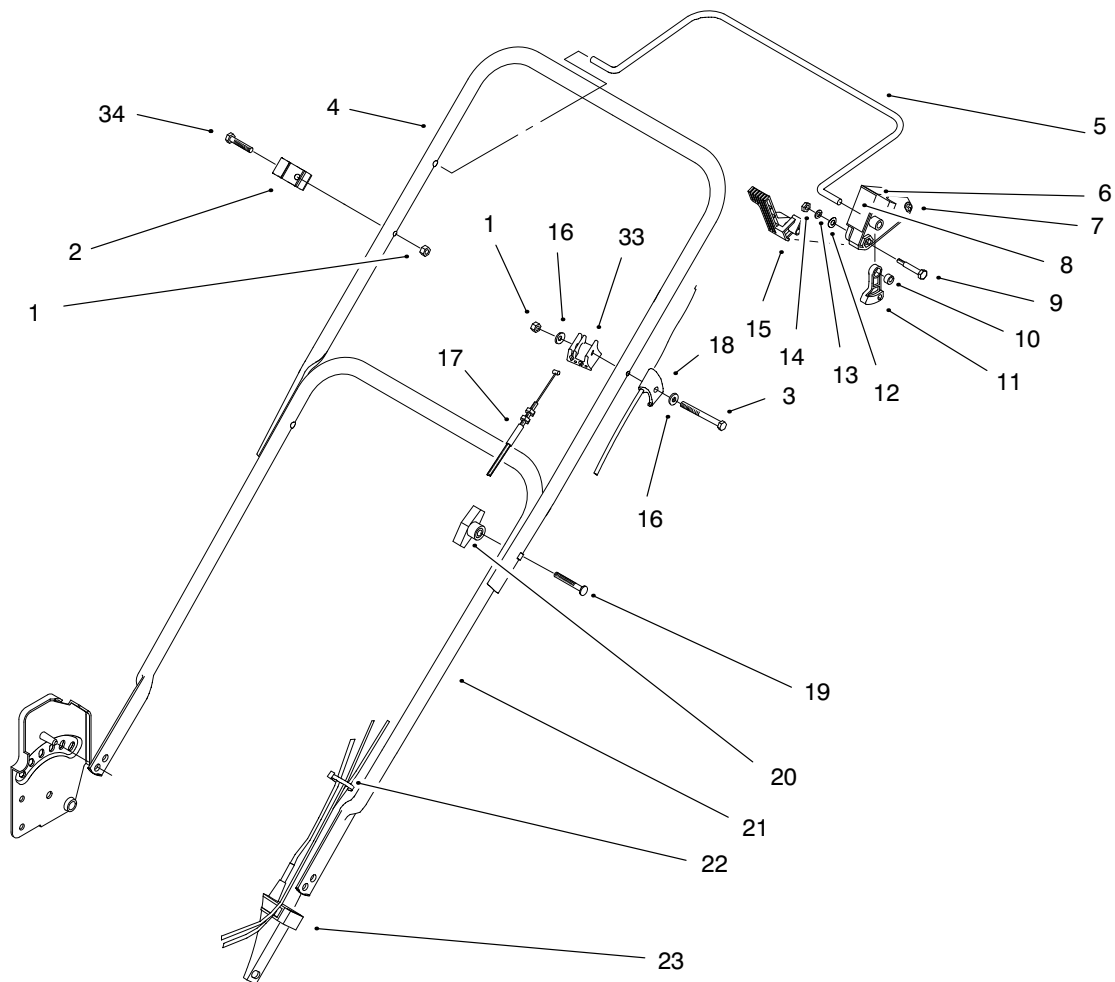 

Sheet No.:5

Handle Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	3296-73	2	Nut-Lock				
2	93-7383	1	Guide-Rope				
3	321-57	1	Screw-HH				
4	93-0237	1	Handle-Upper				
5	92-3135	1	Bar-Control				
6	92-2292	1	Decal-Instruction				
7	93-0340	1	Stop-Pivot				
8	92-2280	1	Decal-Instruction				
9	92-3132	1	Bolt-Shoulder				
10	92-3133	1	Spacer-Lever				
11	46-5520	1	Lever-Traction				
12	92-2298	1	Washer-Spring				
13	3256-49	1	Washer-Flat				
14	3296-2	1	Nut-Lock				
15	92-2299	1	Lever-Shift				
16	3256-1	2	Washer-Flat				
17	98-7133	1	Cable-Traction				
18	98-7147	1	Cable-Brake				
19	92-2260	2	Screw-Handle				
20	98-7134	2	Knob				
21	93-0238	1	Handle-Lower				
22	3290-378	1	Tie-Cable				
23	93-7380	1	Anchor-Cable				
33	71-0960	1	Support-Cable				
34	321-51	1	Bolt-Hex				

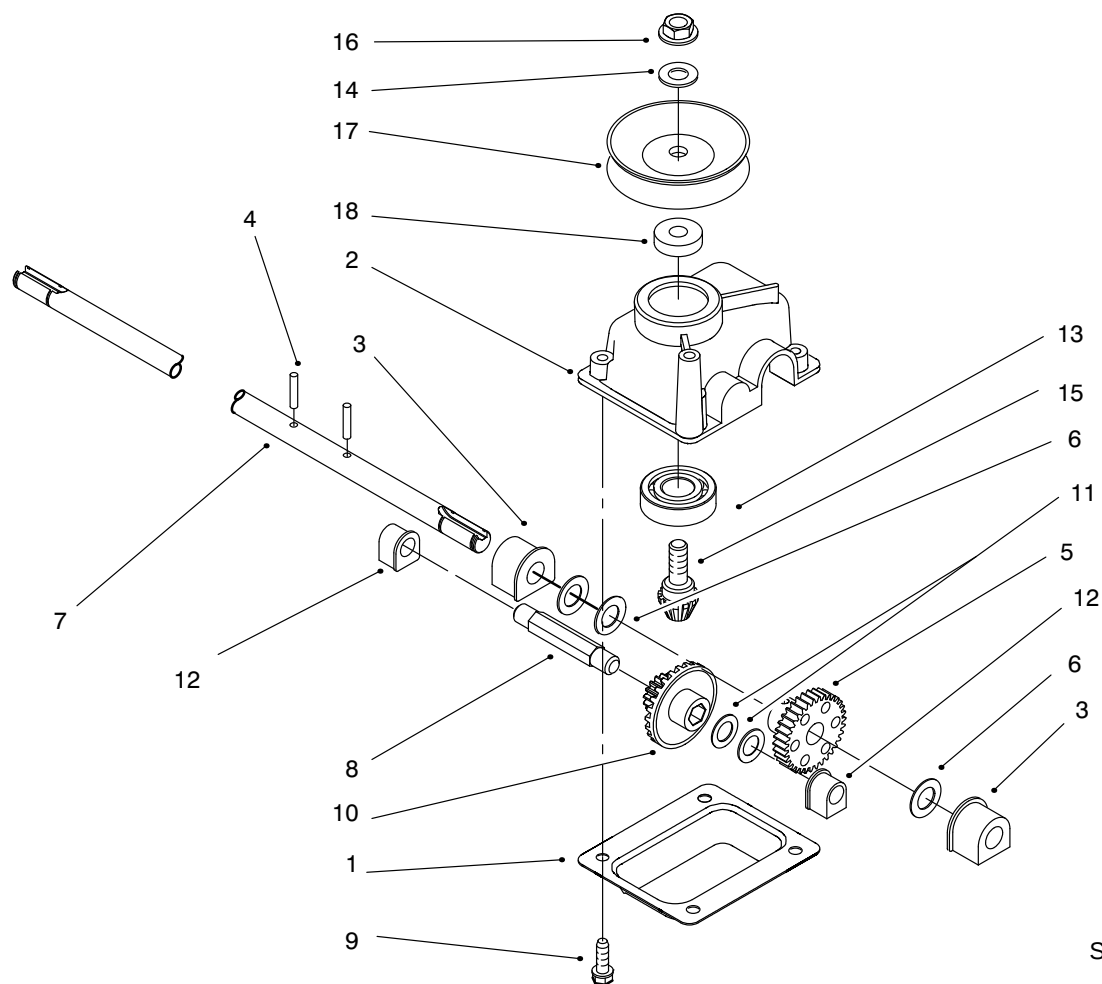 


Sheet No.:100

Gear Case Assembly

Ref. No.	Part No.	Qty.	Description
1	614668	1	Cover—Gear Case
2	92-7727	1	Gearcase—Upper Ss
3	60-8850	2	Bushing—Output
4	3285-19	2	Pin—Spirol
5	614596	1	Gear—34t
6	36-4780	2	Washer—Thrust
7	93-0239	1	Shaft—Output
8	614696	1	Shaft—Intermediate
9	49-2040	4	Screw—HH
10	55-3760	1	15 T Pinion
11	36-4791	2	Washer—Thrust
12	60-8750	2	Bushing
13	38-7820	1	Bearing—Ball
14	3256-24	1	Washer—Flat
15	60-8890	1	Gear—Pinnion
16	3296-5	1	Nut—Lock
17	60-8840	2	Pulley—Half
18	62-6660	1	Spacer—Pulley

Ref. No.	Part No.	Qty.	Description

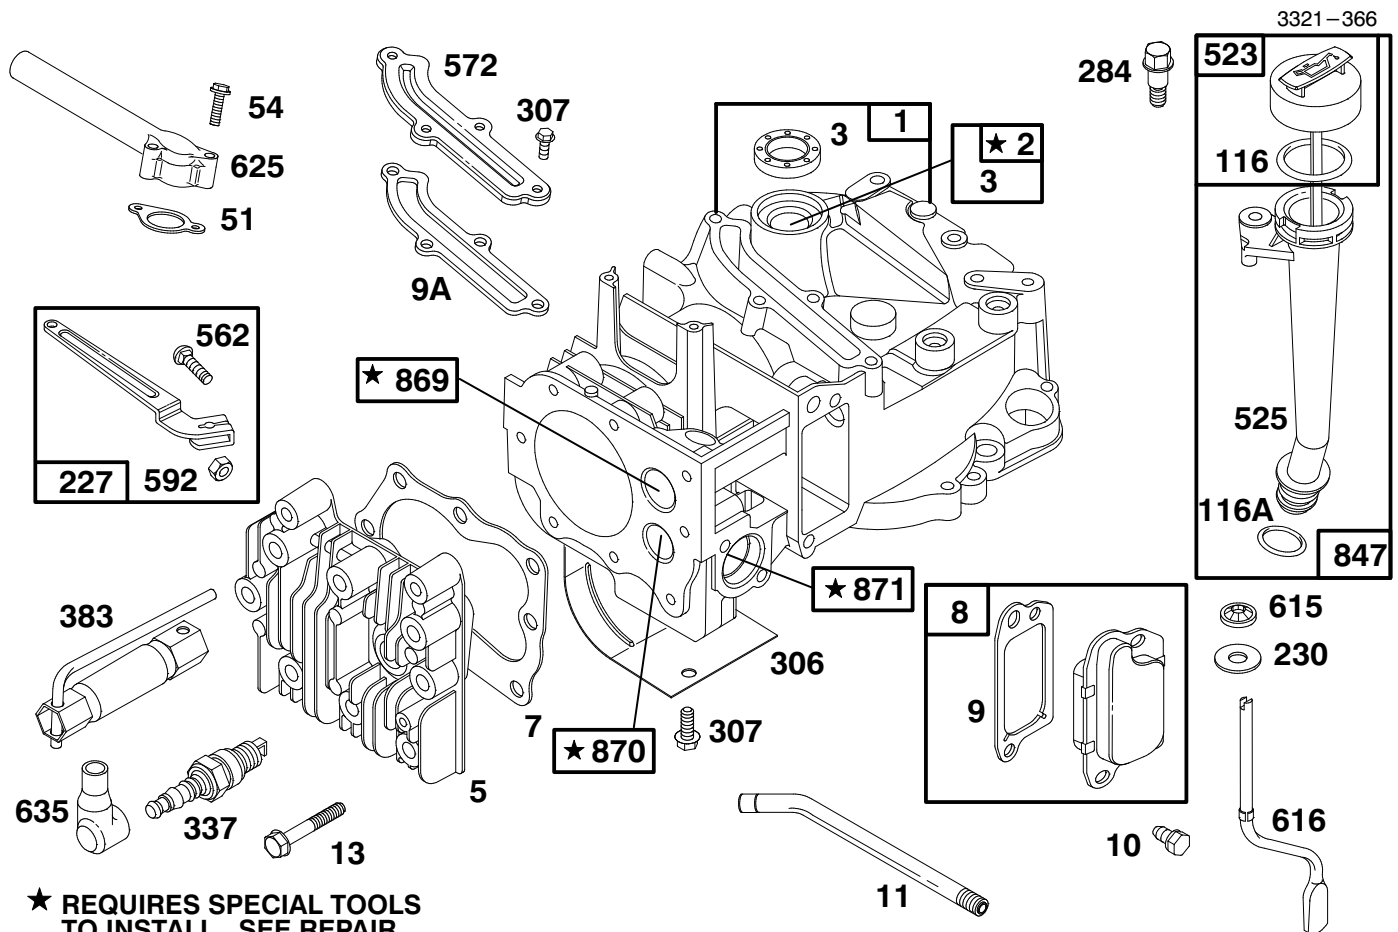 


ENGINE BRIGGS & STRATTON MODEL 12H802-1758-E1

Ref. No.	Part No.	Description	No. Used
1	493260	Cylinder Assembly	1
2	293708	Bushing	1
★3	299819	Seal – Oil	1
5	214368	Head – Cylinder	1
†★7	272916	Gasket – Cylinder Head	1
8	495786	Breather Assy.	1
†★9	272481	Gasket – Breather	1
★9A	272238	Gasket – Breather	1
10	94650	Screw – Hex.	1
11	231933	Tube – Breather	1
13	94876	Screw – Hex.	1
★51	272199	Gasket – Intake Elbow	1
54	94526	Screw – Hex	1
★116	280393	Seal – O Ring	1
★116A	280966	Seal – O Ring	1
227	492349	Lever Assembly – Gov.	1
230	67072	Washer – Gov. Crank	1
284	94511	Screw – Hex.	1
306	224324	Shield – Cylinder	1

★Included in Gasket Set – Part No. 497316.

Ref. No.	Part No.	Description	No. Used
307	94515	Screw – Hex.	1
337	802592	Plug – Spark	1
383	89838	Wrench – Spark Plug	1
523	495264	Dipstick	1
525	495265	Tube – Oil Filler	1
562	94582	Screw – Hex.	1
572	224328	Baffle – Cylinder	1
592	231082	Nut – Hex.	1
615	94474	Fastener	1
616	263175	Crank – Governor	1
625	497465	Tube – Fuel Intake	1
635	66538	Elbow – Spark Plug	1
847	495263	Dipstick/Tube Assy.	1
869	213512	Seat – Valve (Intake)	1
870	213513	Seat – Valve (Exhaust)	1
871	262001	Bushing – Guide (Exhaust)	1
		Note: 63709 Bushing – Guide (Intake)	1

 †Included in Valve Overhaul Gasket Set – Part No. 498528.

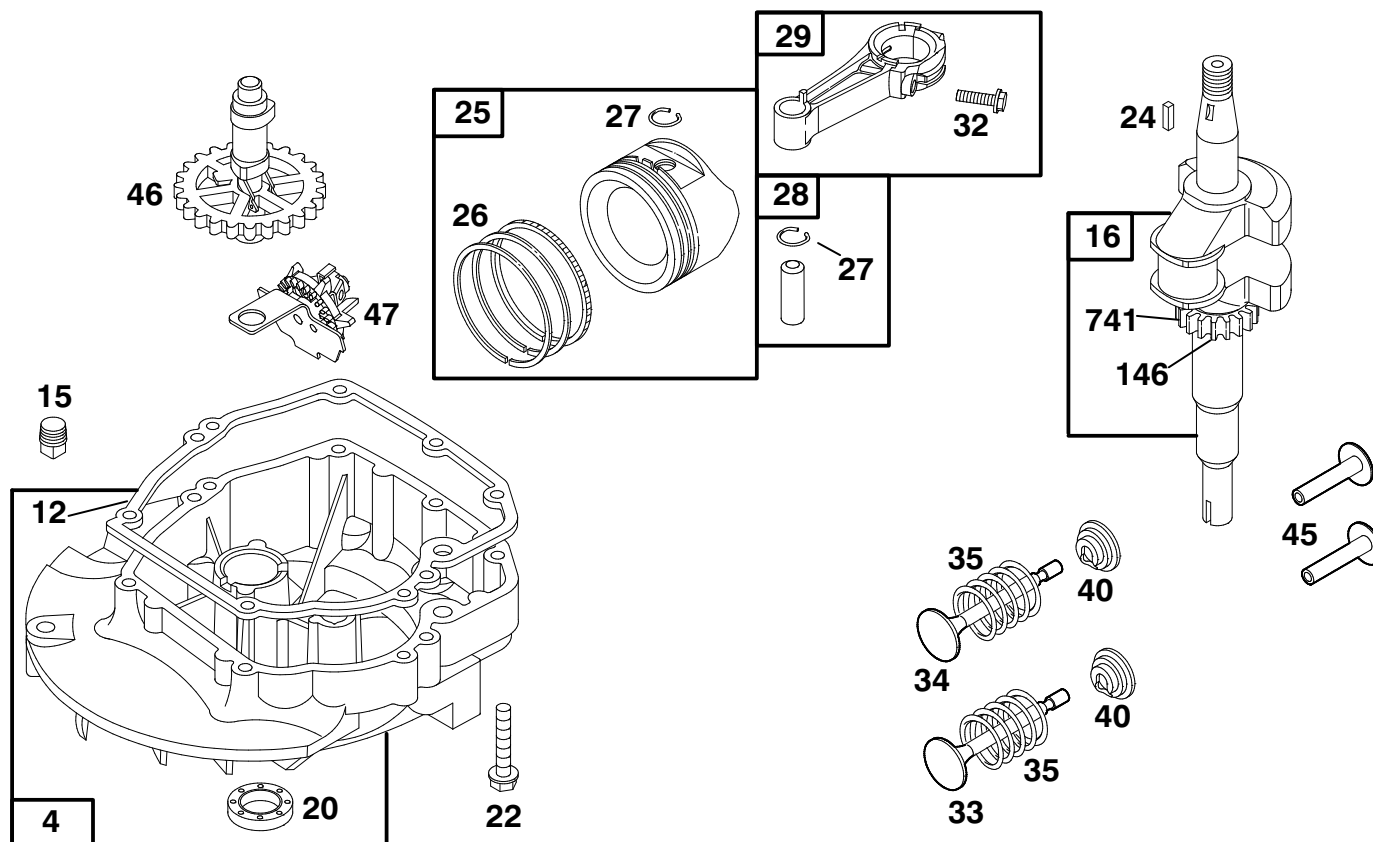


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H802-1758-E1

Ref. No.	Part No.	Description	No. Used
4	493279	Sump – Engine	1
★12	272198	Gasket – Crankcase	1
15	94880	Plug – Oil Drain	1
16	498573	Crankshaft	1
★20	399781	Seal – Oil	1
22	94220	Screw – Hex.	1
		Note: 94612	
		Screw – Hex.	
		(One (1) Used in Hole Nearest Breather.)	1
24	222698	Key – Flywheel	1
25	499429	Piston Assy. (Standard)	1
	499430	Piston Assy. (0.010" O.S.)	1
	499431	Piston Assy. (0.020" O.S.)	1
	499432	Piston Assy. (0.030" O.S.)	1

Ref. No.	Part No.	Description	No. Used
26	499425	Ring Set (Standard)	1
	499426	Ring Set (0.010" O.S.)	1
	499427	Ring Set (0.020" O.S.)	1
	499428	Ring Set (0.030" O.S.)	1
27	263190	Lock – Piston Pin	1
28	499423	Pin – Piston (Standard)	1
29	499424	Rod Assembly – Connecting	1
32	94699	Screw – Connecting Rod	1
33	262651	Valve – Exhaust	1
34	262652	Valve – Intake	1
35	262224	Spring – Valve	1
40	93312	Retainer – Valve Spring	1
45	262204	Tappet – Valve	1
46	498275	Gear – Cam	1
47	493737	Slinger – Oil	1
146	94388	Key – Timing	1
741	262598	Gear – Timing	1

 ★Included in Gasket Set – Part No. 497316.

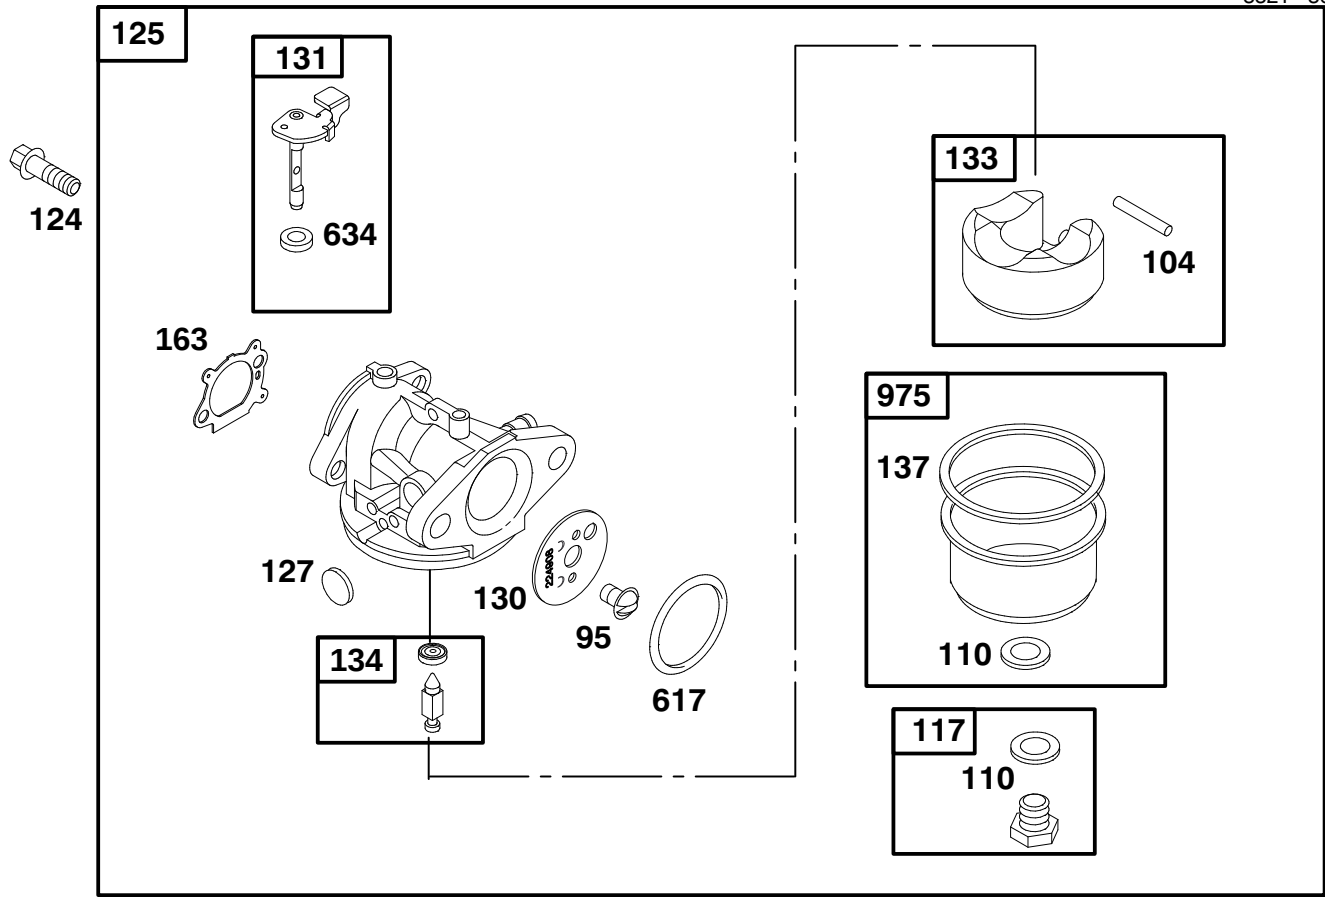

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H802-1758-E1



Ref. No.	Part No.	Description	No. Used
95	94098	Screw - Slotted	1
●104	231371	Pin - Float Hinge	1
◆◆110		Washer - Bowl	
		(Sold in Kit Only).	1
117	494870	Jet - Main (Std.)	1
		Note: 497315	
		Jet - Main	
		(High Altitude)	1
124	94840	Screw - Hex	1
125	498170	Carburetor	1
●127		Plug - Welch	
		(Sold in Kit Only).	1

★Included in Gasket Set - Part No. 497316.

Ref. No.	Part No.	Description	No. Used
130	224908	Valve - Throttle	1
131	493267	Shaft - Throttle	1
133	398187	Float - Carburetor	1
●134	398188	Kit - Needle/Seat	1
◆◆137		Gasket - Bowl	
		(Sold in Kit Only).	1
◆◆★163	272653	Gasket - Air Cleaner	1
◆◆617	270344	Seal - Intake Manifold	1
◆◆634		Washer - Foam	
		(Sold in Kit Only).	1
975	493640	Bowl - Float	1

●Included in Carburetor Kit - Part No. 498260.

  ◆Included in Carburetor Gasket Set - Part No. 498261.

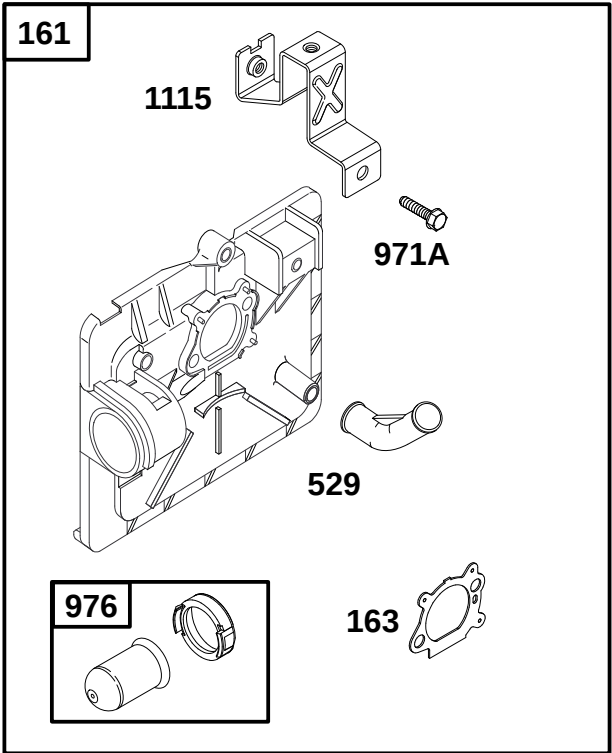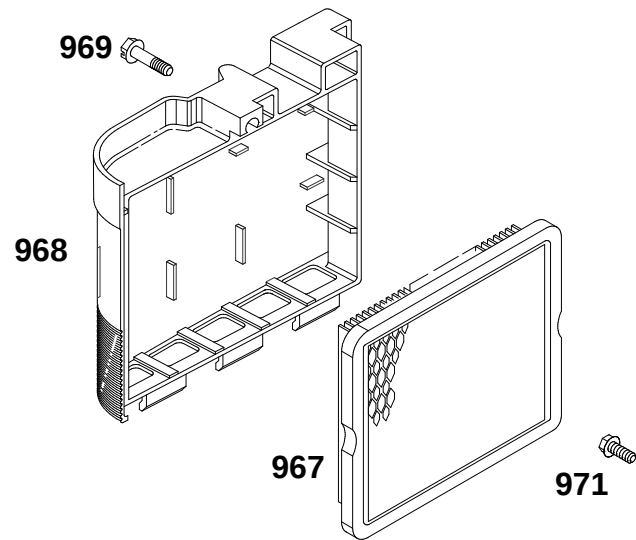

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H802-1758-E1


Ref. No.	Part No.	Description	No. Used
161	496116	Base – Air Cleaner	1
◆◆★163	272653	Gasket – Air Cleaner	1
529	281299	Grommet	1
967	491588	Filter – Air	1
968	281340	Cover – Air Cleaner	1

Ref. No.	Part No.	Description	No. Used
969	94872	Screw – Slotted Hex.	1
971	94873	Screw – Hex.	1
971A	94749	Screw – Hex.	1
976	496115	Primer – Carburetor	1
1115	224815	Bracket – Support	1

★Included in Gasket Set–Part No. 497316.

●Included in Carburetor Kit–Part No. 498260.

 ◆Included in Carburetor Gasket Set–Part No. 498261.

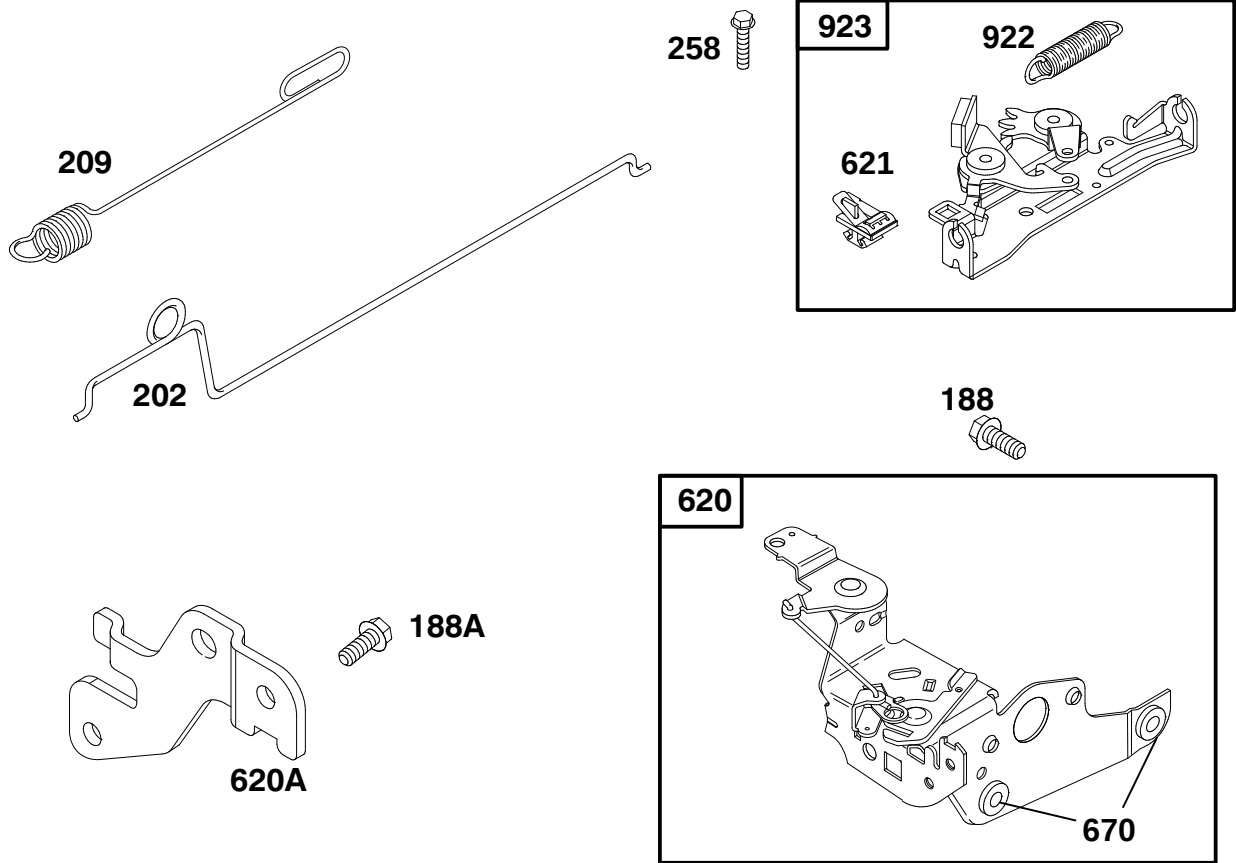





Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H802-1758-E1

Ref. No.	Part No.	Description	No. Used
188	94644	Screw – Hex.	1
188A	94874	Screw – Hex.	1
202	262579	Link – Governor	1
209	263046	Spring – Governor	1
258	94512	Screw – Hex.	1
620	497203	Bracket – Carburetor	1

Ref. No.	Part No.	Description	No. Used
620A	225152	Bracket – Control	1
621	396847	Switch – Stop	1
★670	493823	Spacer – Bracket	1
		Note: Includes Two.	1
922	262640	Spring – Brake	1
923	493442	Brake Assembly	1

    ★Included in Gasket Set–Part No. 497316.

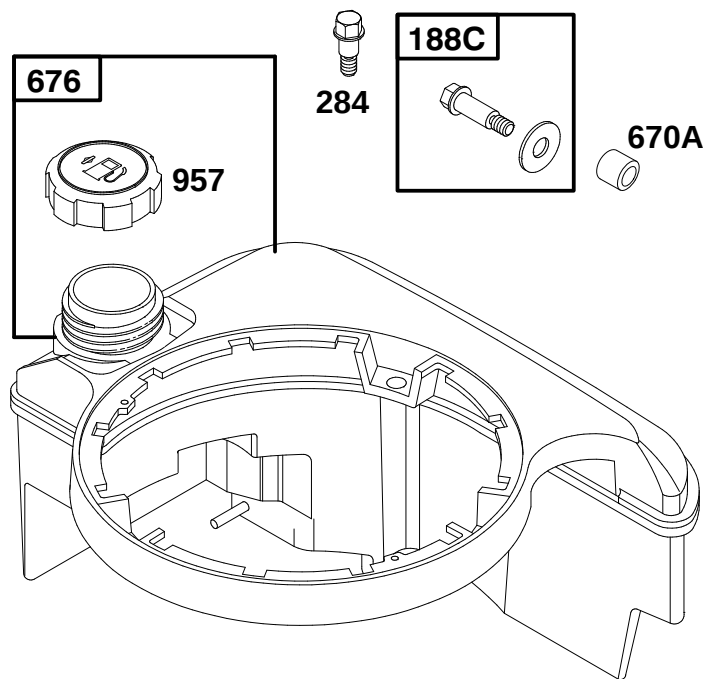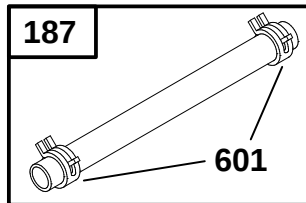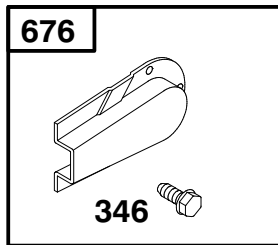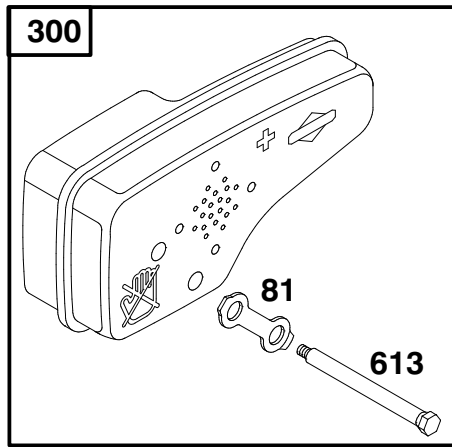


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H802-1758-E1

Ref. No.	Part No.	Description	No. Used
81	223664	Lock – Muffler Screw	1
187	298049	Line – Fuel (Cut to Required Length)	1
188C	398540	Screw – Shoulder	1
284	94511	Screw – Shoulder	1
300	497838	Muffler – Exhaust	1
346	94896	Screw – Hex.	1


Ref. No.	Part No.	Description	No. Used
601	93053	Clamp – Hose	1
613	94231	Screw – Shoulder	1
670A	280512	Spacer – Fuel Tank	1
676	493871	Deflector – Muffler	1
957	397974	Cap – Fuel Tank	1
972	495224	Tank – Fuel	1

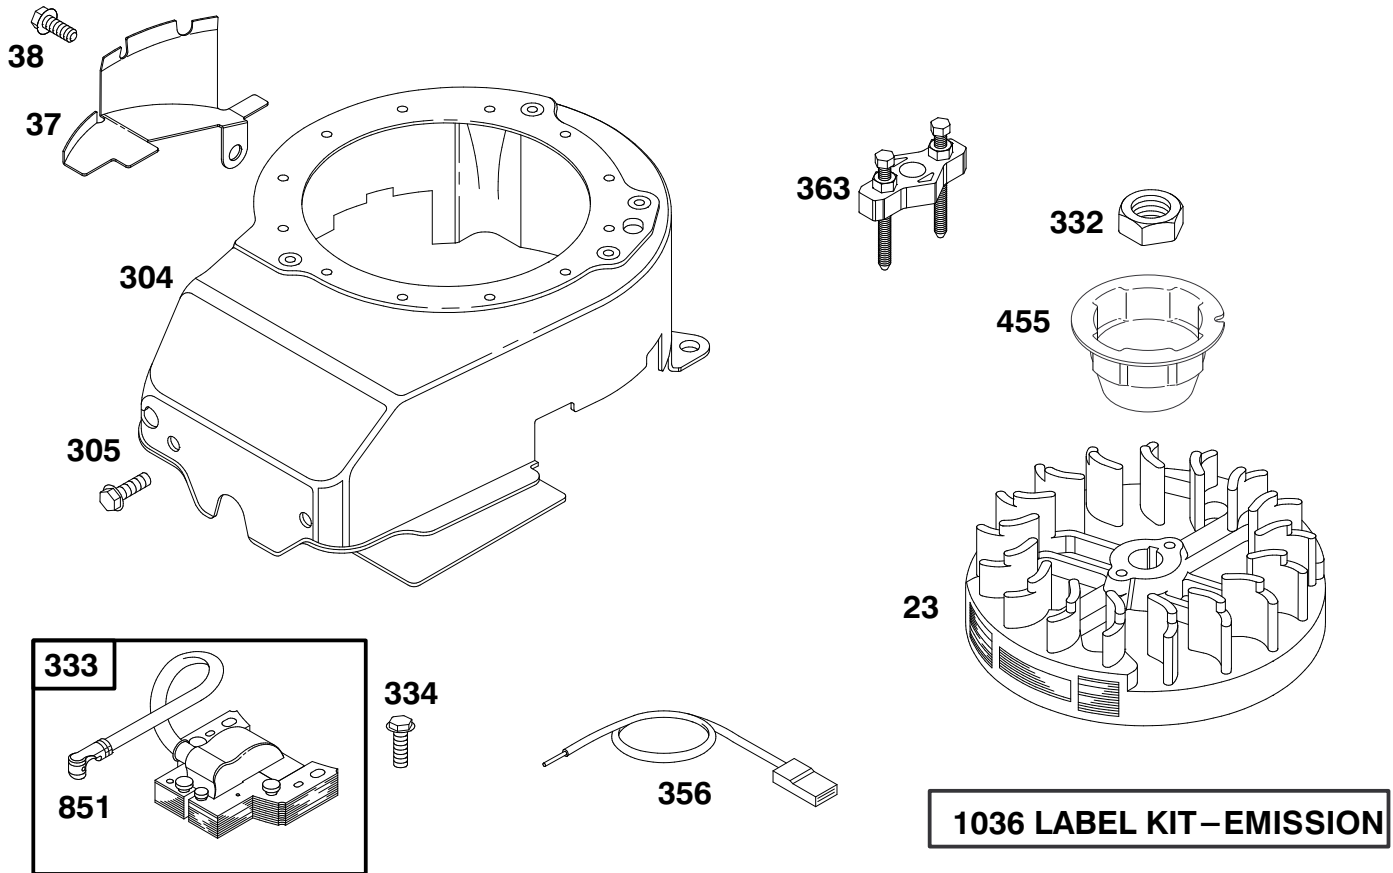 

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H802-1758–E1

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
23	492177	Flywheel	1	334	94731	Screw – Hex.	1
37	224511	Guard – Flywheel	1	356	497833	Wire – Stop	1
38	94786	Screw – Hex.	1	363	19069	Puller – Flywheel	1
304	493293	Housing – Blower	1	455	225121	Cup – Flywheel	1
305	94744	Screw – Hex.	1	851	493880	Terminal – Cable	1
332	94877	Nut – Flywheel	1	1036	499341	Label Kit – Emission	1
333	802574	Armature – Magneto	1				

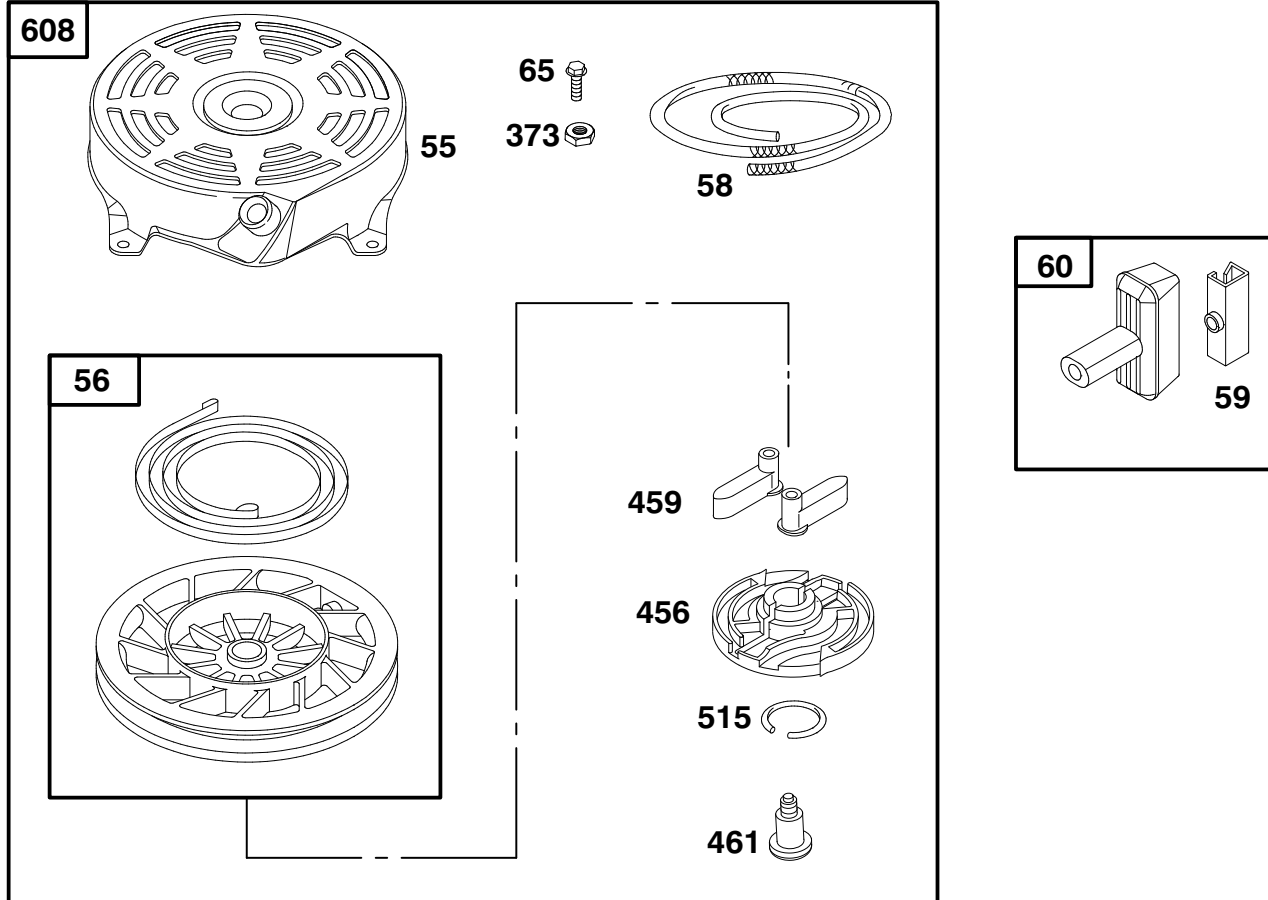 


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H802-1758-E1

Ref. No.	Part No.	Description	No. Used
55	497440	Housing – Rewind Starter	1
56	498144	Pulley – Starter	1
58	280399	Rope – Starter	1
59	224467	Insert – Starter Grip	1
60	493926	Grip – Starter Rope	1
65	94904	Screw – Hex.	1

Ref. No.	Part No.	Description	No. Used
373	94908	Nut – Hex.	1
456	281503	Retainer – Spring	1
459	281505	Pawl – Ratchet	1
461	94943	Screw – Shoulder	1
515	263073	Spring – Friction	1
608	497680	Starter – Rewind	1

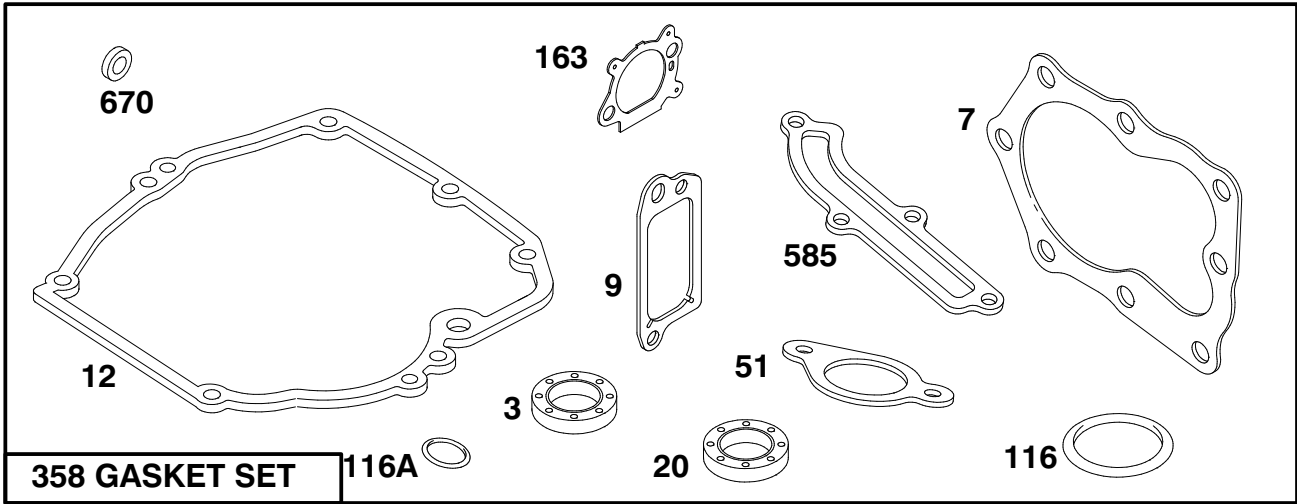 


358 GASKET SET


116A

20

 
116

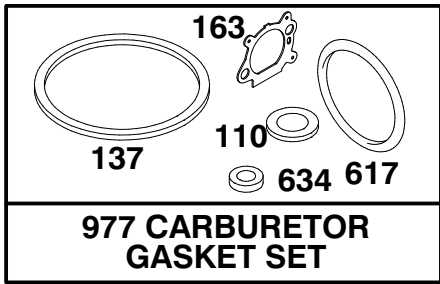

977 CARBURETOR GASKET SET

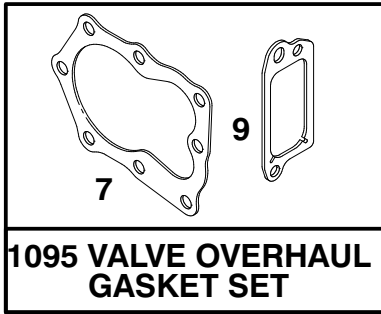 

1095 VALVE OVERHAUL GASKET SET

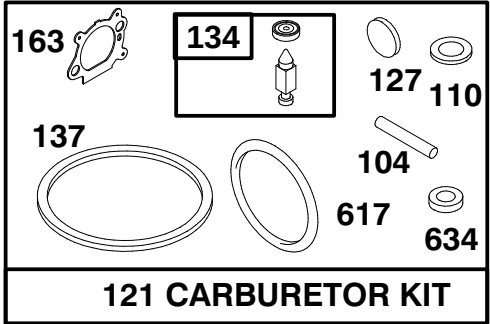 

121 CARBURETOR KIT

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H802-1758-E1

Ref. No.	Part No.	Description	No. Used
★3	299819	Seal – Oil	1
†★7	272916	Gasket – Cylinder Head	1
†★9	272481	Gasket – Breather	1
★9A	272238	Gasket – Breather	1
★12	272198	Gasket – Crankcase	1
★20	399781	Seal – Oil	1
★51	272199	Gasket – Intake	1
●104	231371	Pin – Float Hinge	1
●◆110		Washer – Bowl (Sold in Kit Only).	1
★116	280393	Seal – O Ring	1
★116A	280966	Seal – O Ring	1
121	498260	Carburetor Kit	1
●127		Plug – Welch (Sold in Kit Only).	1

Ref. No.	Part No.	Description	No. Used
●134	398188	Kit – Needle/Seat	1
●◆137		Gasket – Bowl (Sold in Kit Only).	1
●◆163	272653	Gasket – Air Cleaner	1
358	496117	Gasket Set	1
●◆617	270344	Seal – Intake Manifold	1
●◆634		Washer – Foam (Sold in Kit Only).	1
★670	493823	Spacer – Bracket Note: Includes Two.	1
977	498261	Gasket Set – Carburetor	1
1095	498528	Gasket Set – Valve Overhaul	1

★Included in Gasket Set – Part No. 497316.

†Included in Valve Overhaul Gasket Set – Part No. 498528.

●Included in Carburetor Kit – Part No. 498260.

◆Included in Carburetor Gasket Set – Part No. 498261.

Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
605120	1	12	1	Grommet
610358	3	17	2	Nut–Lock
614426	3	11	2	Washer–Stepped
614447	3	2	2	Spacer–Axle Shaft
614596	5	5	1	Gear–34t
614650	1	24	2	Bolt–Shoulder
614668	5	1	1	Cover–Gear Case
614672	1	25	2	Bolt–Shoulder
614673	1	13	1	Spacer
614687	1	22	2	Spring Arm–Front
614696	5	8	1	Shaft–Intermediate
16–9269	1	1	1	Cover–Recycling
16–9279	2	23	1	Deck–21in Steel Sp
26–0670	2	20	1	Bolt–Blade
27–6250	3	9:4	4	Bushing
36–4780	5	6	2	Washer–Thrust
36–4791	5	11	2	Washer–Thrust
38–7820	5	13	1	Bearing–Ball
39–5770	2	28	1	Decal–Danger
40–1940	1	26	2	Washer
46–5520	4	11	1	Lever–Traction
47–2900	3	3:3	2	Bushing
49–2040	1	9	1	Screw–HH
49–2040	5	9	4	Screw–HH
55–3760	5	10	1	15 T Pinion
60–8750	5	12	2	Bushing
60–8840	5	17	2	Pulley–Half
60–8850	5	3	2	Bushing–Output
60–8890	5	15	1	Gear–Pinnion
62–6660	5	18	1	Spacer–Pulley
62–7540	2	15	1	Retainer–Blade
62–7550	2	16	1	Pulley–Driver
65–2720	3	5	4	Ring–Retaining
65–4710	3	6	2	Ring–Friction
65–4720	3	13	2	Spring–Compression
65–4730	3	16	2	Washer–Thrust
65–4740	3	4	4	Washer–Thrust
65–4750	3	14	2	Gear–Pinion
65–4760	3	15	2	Washer
66–6040	3	7	1	Key–Locking RH
66–6050	3	8	1	Key–Rocking LH
70–9760	3	3:2	2	Bushing
71–0960	4	33	1	Support–Cable
82–8550	2	10	1	Shield–Muffler
85–7060	1	4	1	Decal–Danger
92–1004	3	18	2	ASM–Spring Arm
92–1008	1	21	4	Knob–Height Adjust
92–1057	3	10	2	Bolt–Shoulder
92–1616	1	11	1	Screw
92–2260	4	19	2	Screw–Handle
92–2280	4	8	1	Decal–Instruction
92–2292	4	6	1	Decal–Instruction
92–2298	4	12	1	Washer–Spring
92–2299	4	15	1	Lever–Shift
92–2914	1	17	1	Decal–HOC
92–2915	1	16	1	Decal–HOC
92–3132	4	9	1	Bolt–Shoulder
92–3133	4	10	1	Spacer–Lever
92–3135	4	5	1	Bar–Control
92–4881	1	33	2	Plate–Height Adjust
92–4890	1	28	2	Washer
92–7727	5	2	1	Gearcase–Upper Ss

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
92-7746	3	3	2	ASM-Hgt Adj Arm
92-8647	1	19	1	Shield-Trailing
93-0208	2	21	1	Guide-Belt
93-0209	1	7	1	Cover-Belt
93-0216	1	32	1	Kicker-Front
93-0217	2	12	1	Kicker-Rear
93-0218	2	22	1	Kicker-Side
93-0219	2	18	1	Accelerator
93-0222	1	31	1	Baffle-Front
93-0223	2	13	1	Baffle-Rear
93-0228	1	10	1	Brkt-Belt Guide
93-0231	1	30	2	Screw-Plastite
93-0232	3	1	1	V-Belt
93-0233	1	15	1	ASM
93-0234	1	5	1	ASM
93-0237	4	4	1	Handle-Upper
93-0238	4	21	1	Handle-Lower
93-0239	5	7	1	Shaft-Output
93-0240	1	14	1	ASM-Transmission
93-0241	2	17	1	Blade-Steel Deck
93-0242	1	2	4	Grommet
93-0243	2	5	1	Shroud
93-0245	2	27	1	Decal-Deck
93-0248	1	6	1	Decal-Warning
93-0262	1	34	1	Decal-Warning
93-0340	4	7	1	Stop-Pivot
93-4196	2	26	1	Shield-Grass
93-7380	4	23	1	Anchor-Cable
93-7383	4	2	1	Guide-Rope
94-1609	3	12	2	Cover-Wheel
95-1657	2	7	1	Decal-Recoil
95-1726	2	14	3	Screw-Engine Mount
95-7403	1	27	1	Bracket-Wheel Height Adj
98-3206	2	9	1	Plate-Logo
98-7131	2	3	1	Label-Speed Control
98-7133	4	17	1	Cable-Traction
98-7134	4	20	2	Knob
98-7136	2	2	1	Sleeve-Friction
98-7140	3	9	2	ASM-Wheel
98-7145	1	23	2	ASM-Wheel
98-7147	4	18	1	Cable-Brake
2210-316	2	6	1	Rope-Stop
302-56	3	3:4	2	Fitting-Grease
321-51	4	34	1	Bolt-Hex
321-57	4	3	1	Screw-HH
322-3	1	18	6	Screw-HH
3253-22	2	19	1	Washer-Lock
3256-1	4	16	2	Washer-Flat
3256-24	5	14	1	Washer-Flat
3256-49	4	13	1	Washer-Flat
3285-19	5	4	2	Pin-Spirol
3290-378	4	22	1	Tie-Cable
3296-2	1	36	1	Nut-Lock
3296-2	4	14	1	Nut-Lock
3296-5	5	16	1	Nut-Lock
3296-29	1	20	6	Nut-Lock
3296-39	1	29	2	Nut-Lock
3296-73	4	1	2	Nut-Lock
32105-27	1	35	1	Screw-HWH
32144-4	1	3	4	Screw-TAP
32144-73	2	11	3	Screw-HWHTF
32144-85	3	19	2	Screw-HH

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
32144-111	2	1	2	Screw - PPH
32144-119	1	8	1	Screw-Thrd Frm
32144-121	2	8	2	Screw

*Not Illustrated