



SR-21P RECYCLER[®] MOWER

Model No. 20493 – 8900001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Housing Assembly	1	Toro Part Number Index	13–14
Engine & Blade Assembly	2	Maintenance	15–17
Handle Assembly	3		
Engine Briggs & Stratton Model 12H802–1758	4–12		

Note:

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
Recycler Side discharge Kit	Model No. 59197		
Recycler Bagging Kit	Model No. 59192		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HWHTF	hex washer head thread forming
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	PH	pan head
FH	flat head	PPH	Phillips pan head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HFW	hex flange washer	SFH	slotted fillister head
HH	hex head	SH	square head
HHF	hex head flange	SHWH	slotted hex washer head
HHST	hex head self tapping	SPH	slotted pan head
HJ	hex jam	STD	standard
HOC	height-of-cut	TAP	self tapping
HS	hex socket	TH	truss head
HSBH	hex socket button head	TTH	Torx truss head
HSFH	hex socket flat head	WH	wing head
HSH	hex socket head		
HWH	hex washer head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form $X:Y$. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form $X (Y)$. X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

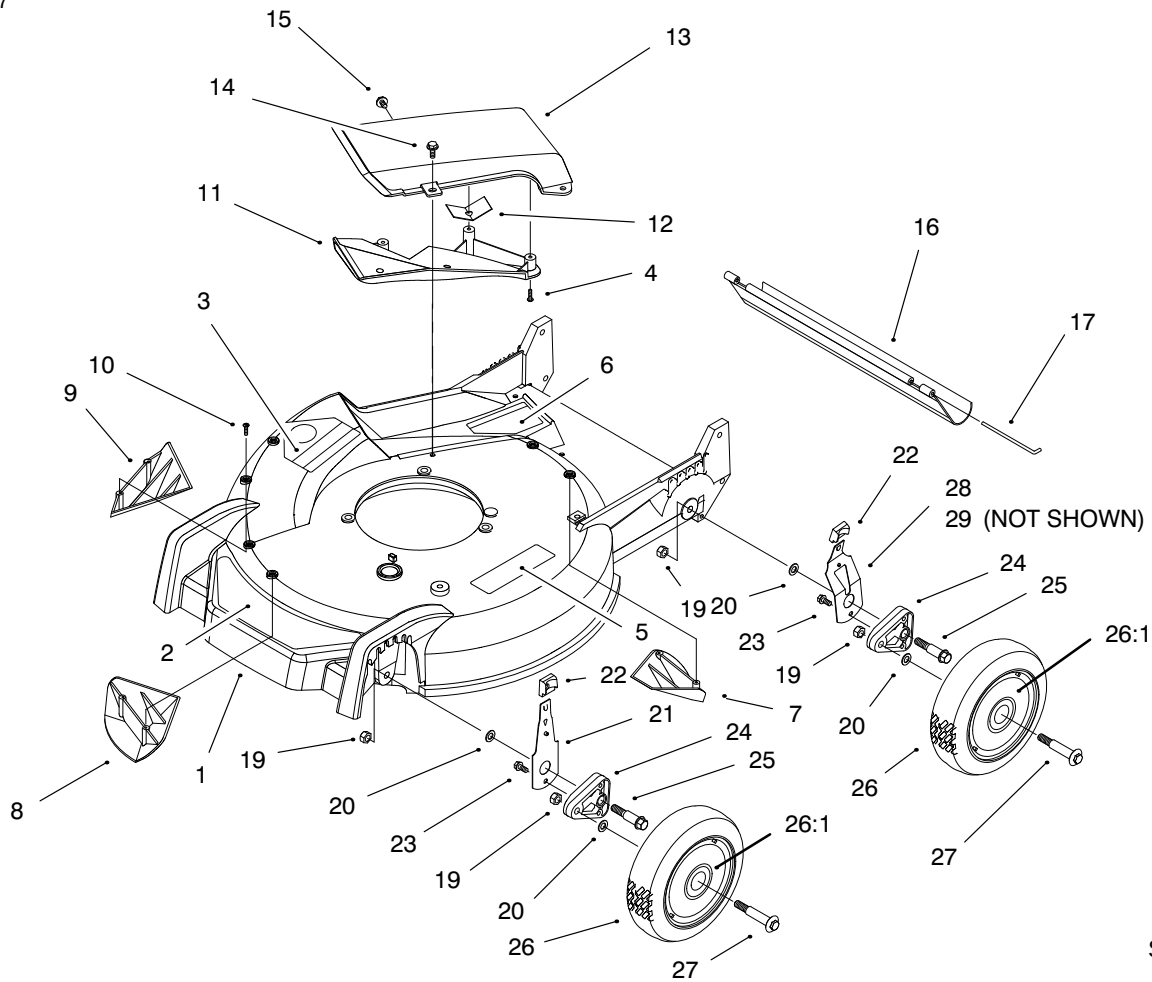


Sheet No.:2

Housing Assembly

Ref. No.	Part No.	Qty.	Description
1	98-1704	1	Housing-Recy 21" Hp Mach
2	93-3696	1	Decal-Deck
3	39-5770	1	Decal-Danger
4		5	Screw-PPH
5	93-0248	1	Decal-Warning
6	82-8450	1	Decal-Danger
7	92-1750	1	Kicker-LH
8	92-1720	1	Kicker-RH
9	92-1730	1	Kicker-LH
10	32144-111	6	Screw - PPH
11		1	Deflector-Recycler
12		1	Guard-Cover
13	17-5179	1	Cover-Recycler
14	46-6811	3	Screw-HWH
15	46-6810	1	Screw HWH
16	44-0580	1	Shield-Trailing
17	33-3208	1	Rod-Shield
19	3296-6	8	Nut-Lock
20	40-1940	8	Washer
21	66-0541	2	ASM-Spring Arm
22	25-7740	4	Knob-Arm
23	32144-85	4	Screw-HH
24	66-0580	4	Arm-Pivot
25	66-0560	4	Screw-Shoulder
26	14-9989	4	ASM-Wheel & Tire


Ref. No.	Part No.	Qty.	Description
26:1	27-6250	8	Bushing
27	27-6232	4	Bolt-Wheel HH
28	71-0561	1	ASM-Arm
29	71-0571	1	ASM-Arm

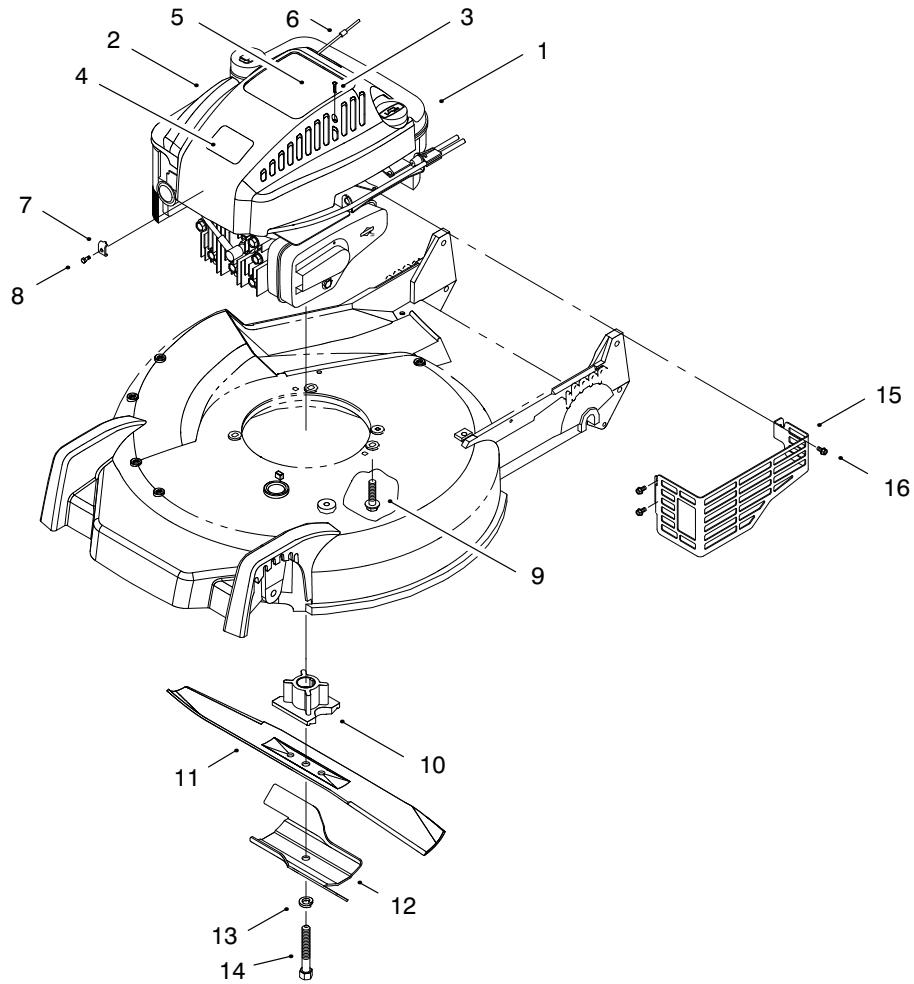

Sheet No.:3

Engine & Blade Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1		1	Engine-Quantum 6.0 Hp				
2	93-0243	1	Shroud				
3	32144-121	2	Screw				
4	98-3206	1	Plate-Logo				
5	95-1671	1	Decal-Engine				
6	2210-316	1	Rope-Stop				
7	2210-249	1	Clamp-Casing				
8	93-8470	1	Screw-Clamp				
9	32144-102	3	Screw				
10	93-4107	1	Retainer-Blade				
11	93-4106	1	Blade-Generation Iii				
12	94-1608	1	Stiffener-Blade				
13	3253-22	1	Washer-Lock				
14	26-0670	1	Bolt-Blade				
15	82-8550	1	Shield-Muffler				
16	32144-73	3	Screw-HWHTF				

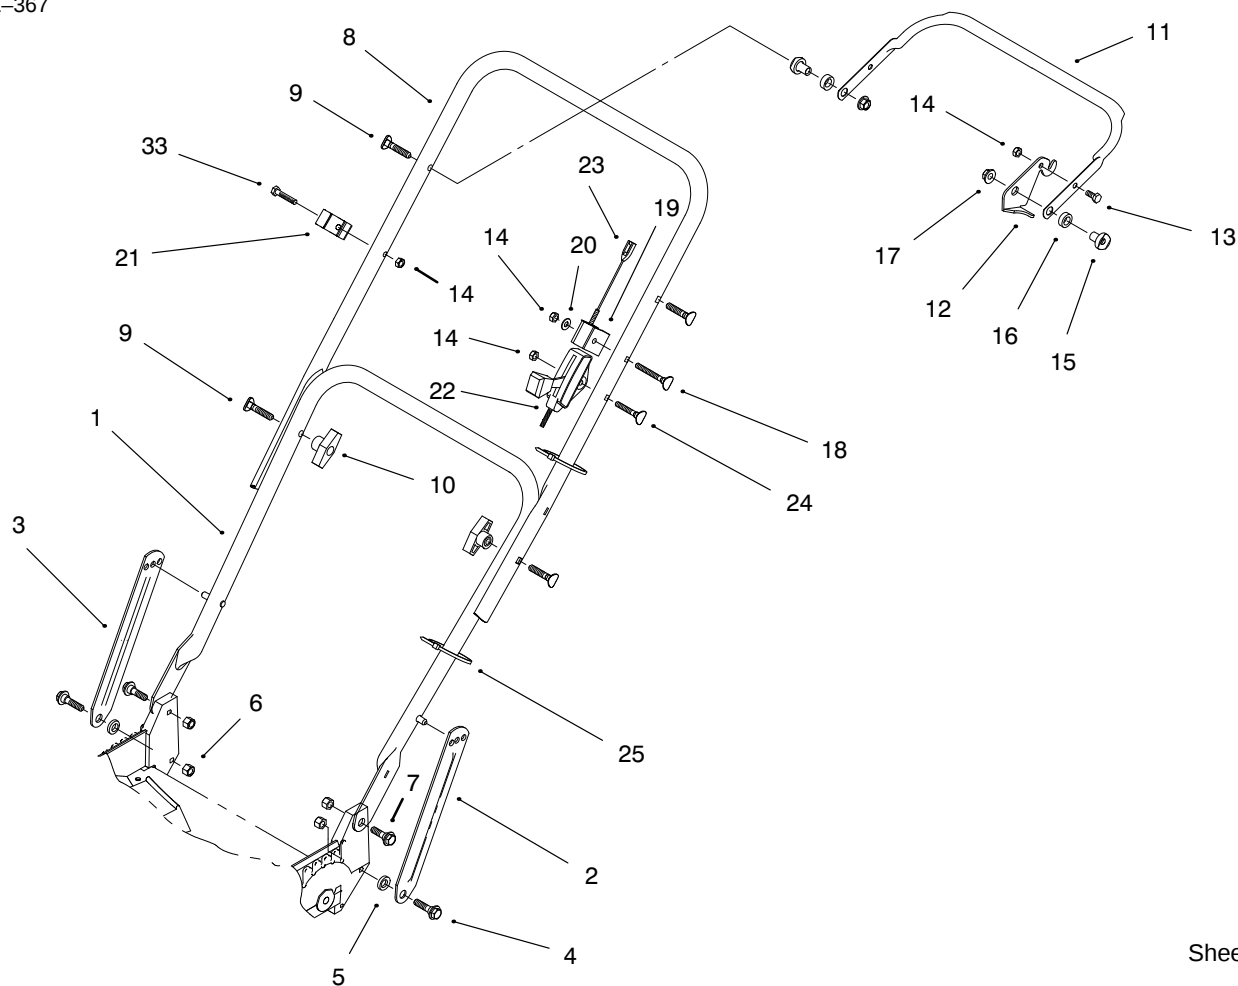


Sheet No.:4

Handle Assembly

Ref. No.	Part No.	Qty.	Description
1	82-5531	1	ASM-Handle
2	84-8361	1	Latch-Handle
3	84-8401	1	Latch-Handle
4	27-7210	2	Screw-Shoulder
5	3-3287	2	Spacer
6	3296-72	4	Nut-Lock
7	27-7211	2	Screw-Shoulder
8	92-2278	1	Handle-Upper
9	92-2260	4	Screw-Handle
10	98-7134	2	Knob
11	71-3080	1	Bar-Control
12	66-5351	1	Lever-Control
13	321-39	1	Screw-HH
14	3296-73	4	Nut-Lock
15	49-1630	2	Spacer-Support
16	256-276	2	Spacer-Nylon
17	3296-74	2	Nut-Flange
18	92-2269	1	Screw-Handle
19	46-6980	1	Support-Cable
20	3256-1	1	Washer-Flat
21	93-7383	1	Guide-Rope
22	98-7137	1	Control-Throttle
23	93-4194	1	Cable-Brake
24	92-2266	1	Screw-Handle
25	3290-378	2	Tie-Cable
33	321-51	1	Bolt-Hex

Ref. No.	Part No.	Qty.	Description

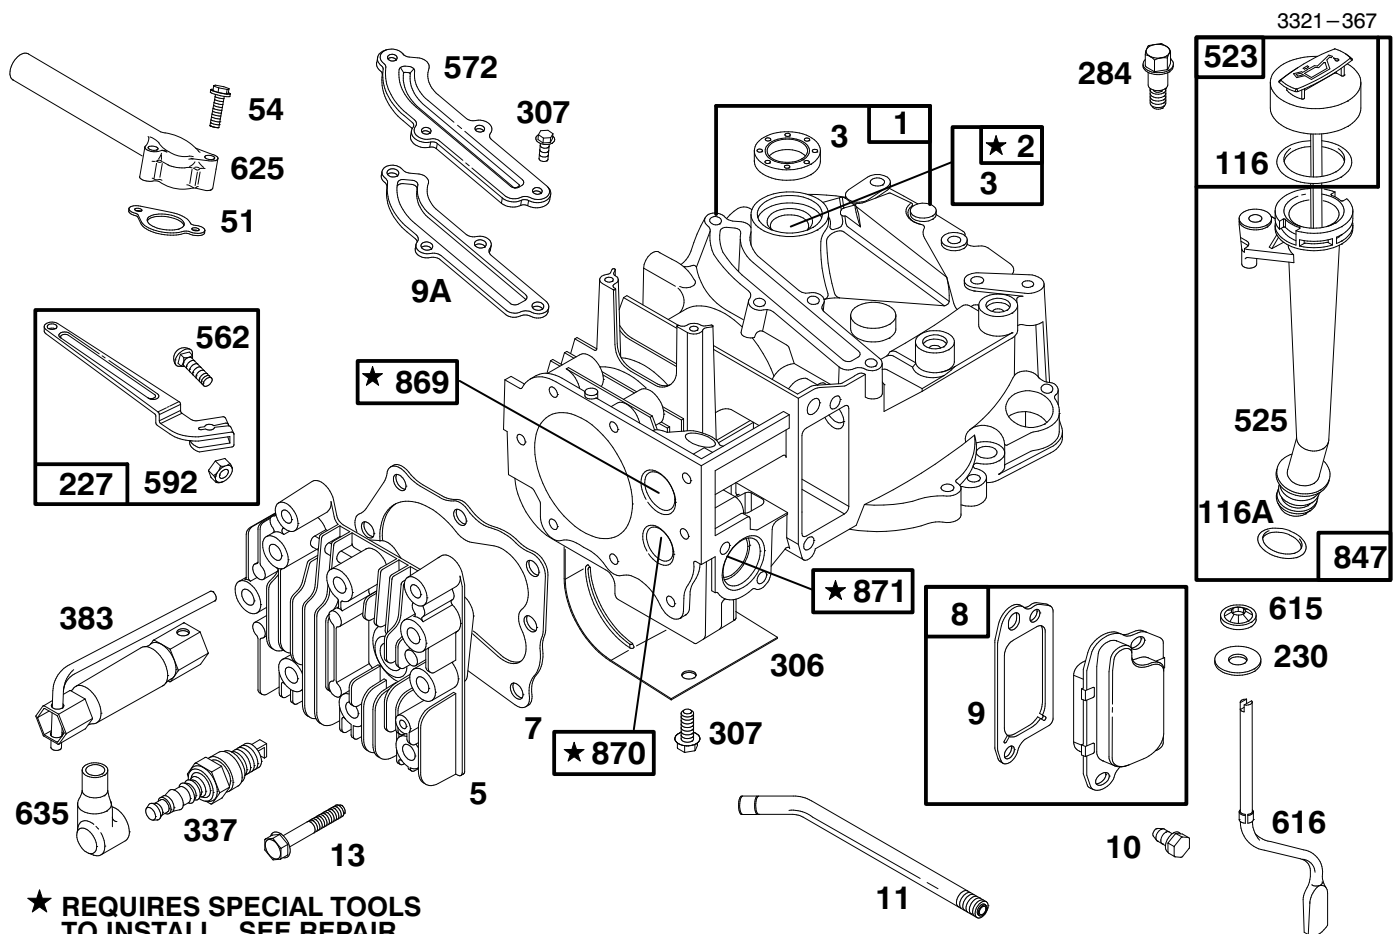


ENGINE BRIGGS & STRATTON MODEL 12H802-1758-E1

Ref. No.	Part No.	Description	No. Used
1	493260	Cylinder Assembly	1
2	293708	Bushing	1
★3	299819	Seal – Oil	1
5	214368	Head – Cylinder	1
†★7	272916	Gasket – Cylinder Head	1
8	495786	Breather Assy.	1
†★9	272481	Gasket – Breather	1
★9A	272238	Gasket – Breather	1
10	94650	Screw – Hex.	1
11	231933	Tube – Breather	1
13	94876	Screw – Hex.	1
★51	272199	Gasket – Intake Elbow	1
54	94526	Screw – Hex	1
★116	280393	Seal – O Ring	1
★116A	280966	Seal – O Ring	1
227	492349	Lever Assembly – Gov.	1
230	67072	Washer – Gov. Crank	1
284	94511	Screw – Hex.	1
306	224324	Shield – Cylinder	1

★Included in Gasket Set – Part No. 497316.

Ref. No.	Part No.	Description	No. Used
307	94515	Screw – Hex.	1
337	802592	Plug – Spark	1
383	89838	Wrench – Spark Plug	1
523	495264	Dipstick	1
525	495265	Tube – Oil Filler	1
562	94582	Screw – Hex.	1
572	224328	Baffle – Cylinder	1
592	231082	Nut – Hex.	1
615	94474	Fastener	1
616	263175	Crank – Governor	1
625	497465	Tube – Fuel Intake	1
635	66538	Elbow – Spark Plug	1
847	495263	Dipstick/Tube Assy.	1
869	213512	Seat – Valve (Intake)	1
870	213513	Seat – Valve (Exhaust)	1
871	262001	Bushing – Guide (Exhaust)	1
		Note: 63709 Bushing – Guide (Intake)	1

†Included in Valve Overhaul Gasket Set – Part No. 498528.

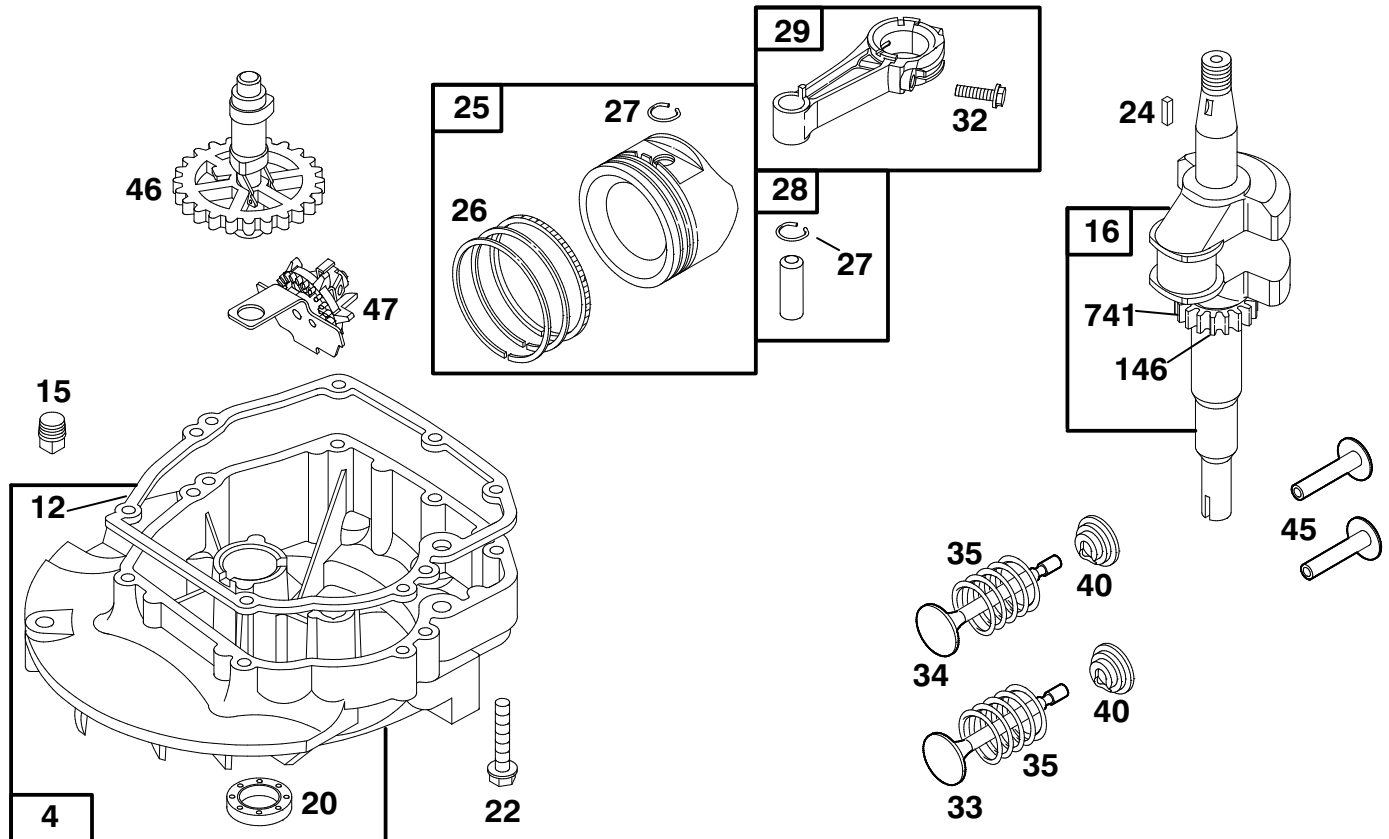


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H802-1758-E1

Ref. No.	Part No.	Description	No. Used
4	493279	Sump – Engine	1
★12	272198	Gasket – Crankcase	1
15	94880	Plug – Oil Drain	1
16	498573	Crankshaft	1
★20	399781	Seal – Oil	1
22	94220	Screw – Hex.	1
		Note: 94612	
		Screw – Hex.	
		(One (1) Used in Hole Nearest Breather.)	1
24	222698	Key – Flywheel	1
25	499429	Piston Assy. (Standard)	1
	499430	Piston Assy. (0.010" O.S.)	1
	499431	Piston Assy. (0.020" O.S.)	1
	499432	Piston Assy. (0.030" O.S.)	1

Ref. No.	Part No.	Description	No. Used
26	499425	Ring Set (Standard)	1
	499426	Ring Set (0.010" O.S.)	1
	499427	Ring Set (0.020" O.S.)	1
	499428	Ring Set (0.030" O.S.)	1
27	263190	Lock – Piston Pin	1
28	499423	Pin – Piston (Standard)	1
29	499424	Rod Assembly – Connecting	1
32	94699	Screw – Connecting Rod	1
33	262651	Valve – Exhaust	1
34	262652	Valve – Intake	1
35	262224	Spring – Valve	1
40	93312	Retainer – Valve Spring	1
45	262204	Tappet – Valve	1
46	498275	Gear – Cam	1
47	493737	Slinger – Oil	1
146	94388	Key – Timing	1
741	262598	Gear – Timing	1

★Included in Gasket Set – Part No. 497316.

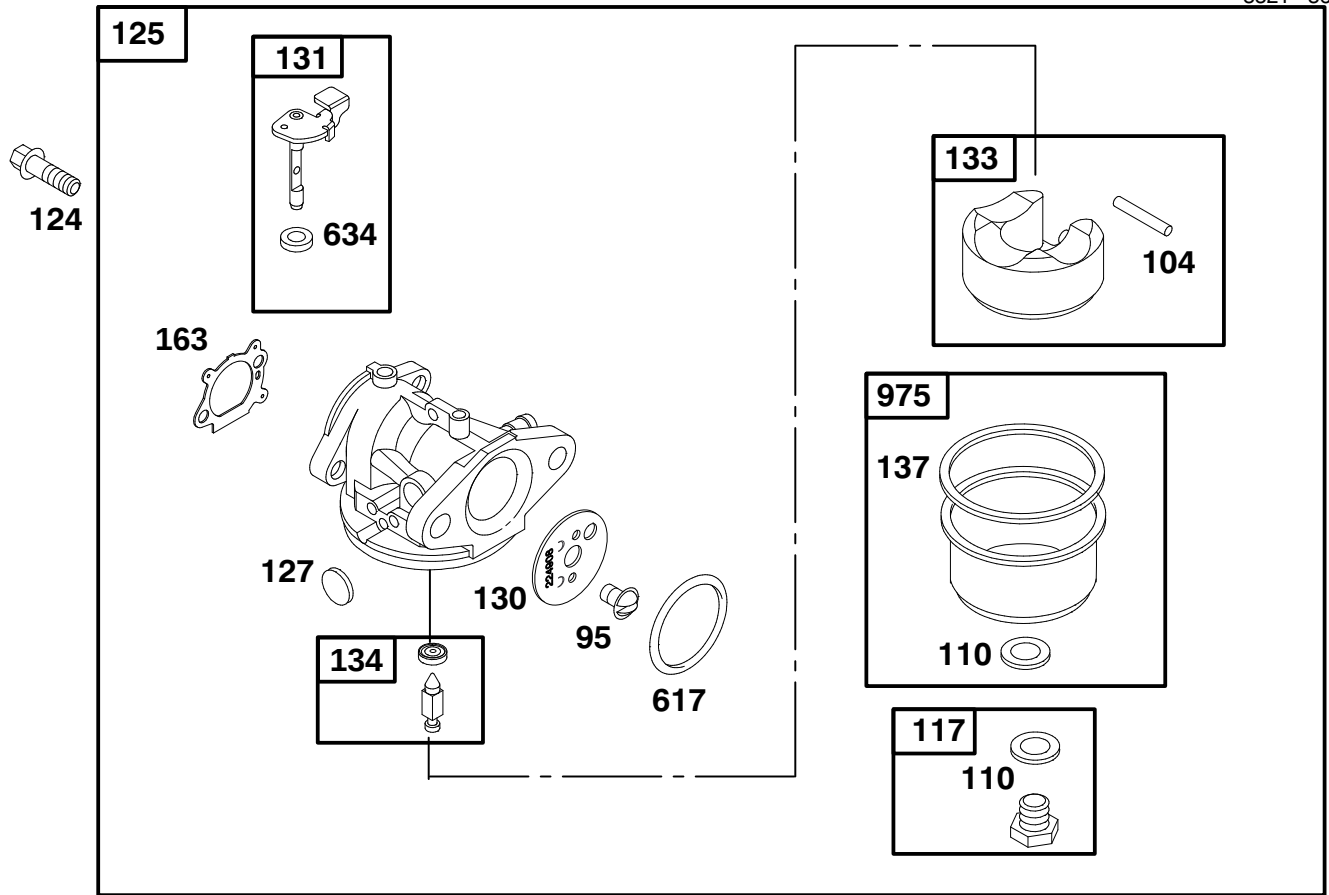

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H802-1758-E1



Ref. No.	Part No.	Description	No. Used
95	94098	Screw – Slotted	1
●104	231371	Pin – Float Hinge	1
◆◆110		Washer – Bowl	
		(Sold in Kit Only).	1
117	494870	Jet – Main (Std.)	1
		Note: 497315	
		Jet – Main	
		(High Altitude)	1
124	94840	Screw – Hex	1
125	498170	Carburetor	1
●127		Plug – Welch	
		(Sold in Kit Only).	1

★Included in Gasket Set–Part No. 497316.

Ref. No.	Part No.	Description	No. Used
130	224908	Valve – Throttle	1
131	493267	Shaft – Throttle	1
133	398187	Float – Carburetor	1
●134	398188	Kit – Needle/Seat	1
◆◆137		Gasket – Bowl	
		(Sold in Kit Only).	1
◆◆★163	272653	Gasket – Air Cleaner	1
◆◆617	270344	Seal – Intake Manifold	1
◆◆634		Washer – Foam	
		(Sold in Kit Only).	1
975	493640	Bowl – Float	1

●Included in Carburetor Kit–Part No. 498260.

◆Included in Carburetor Gasket Set–Part No. 498261.

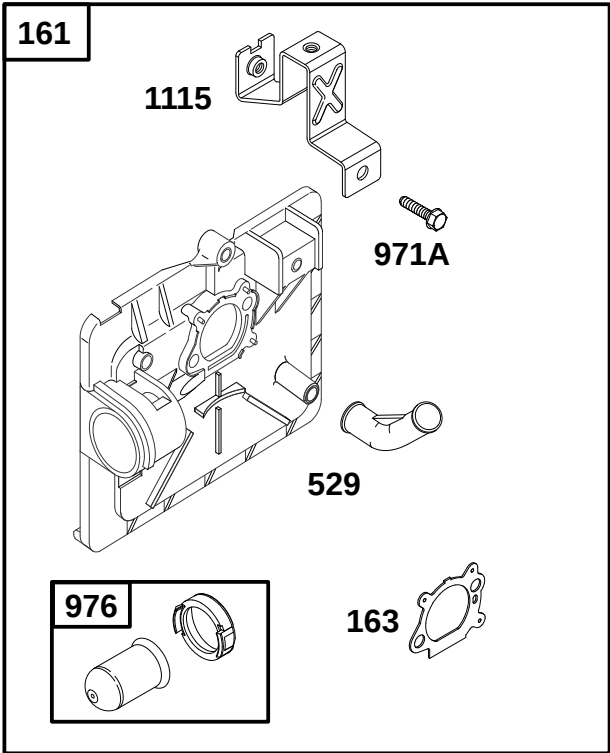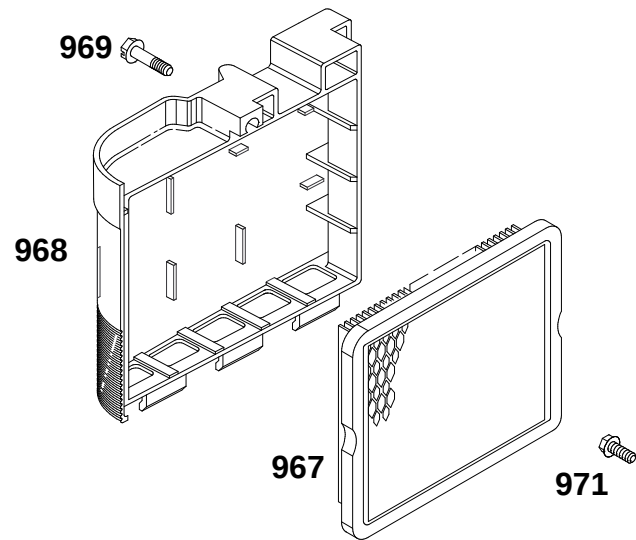

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H802-1758-E1


Ref. No.	Part No.	Description	No. Used
161	496116	Base – Air Cleaner	1
◆◆★163	272653	Gasket – Air Cleaner	1
529	281299	Grommet	1
967	491588	Filter – Air	1
968	281340	Cover – Air Cleaner	1

Ref. No.	Part No.	Description	No. Used
969	94872	Screw – Slotted Hex.	1
971	94873	Screw – Hex.	1
971A	94749	Screw – Hex.	1
976	496115	Primer – Carburetor	1
1115	224815	Bracket – Support	1

★Included in Gasket Set–Part No. 497316.

●Included in Carburetor Kit–Part No. 498260.

◆Included in Carburetor Gasket Set–Part No. 498261.

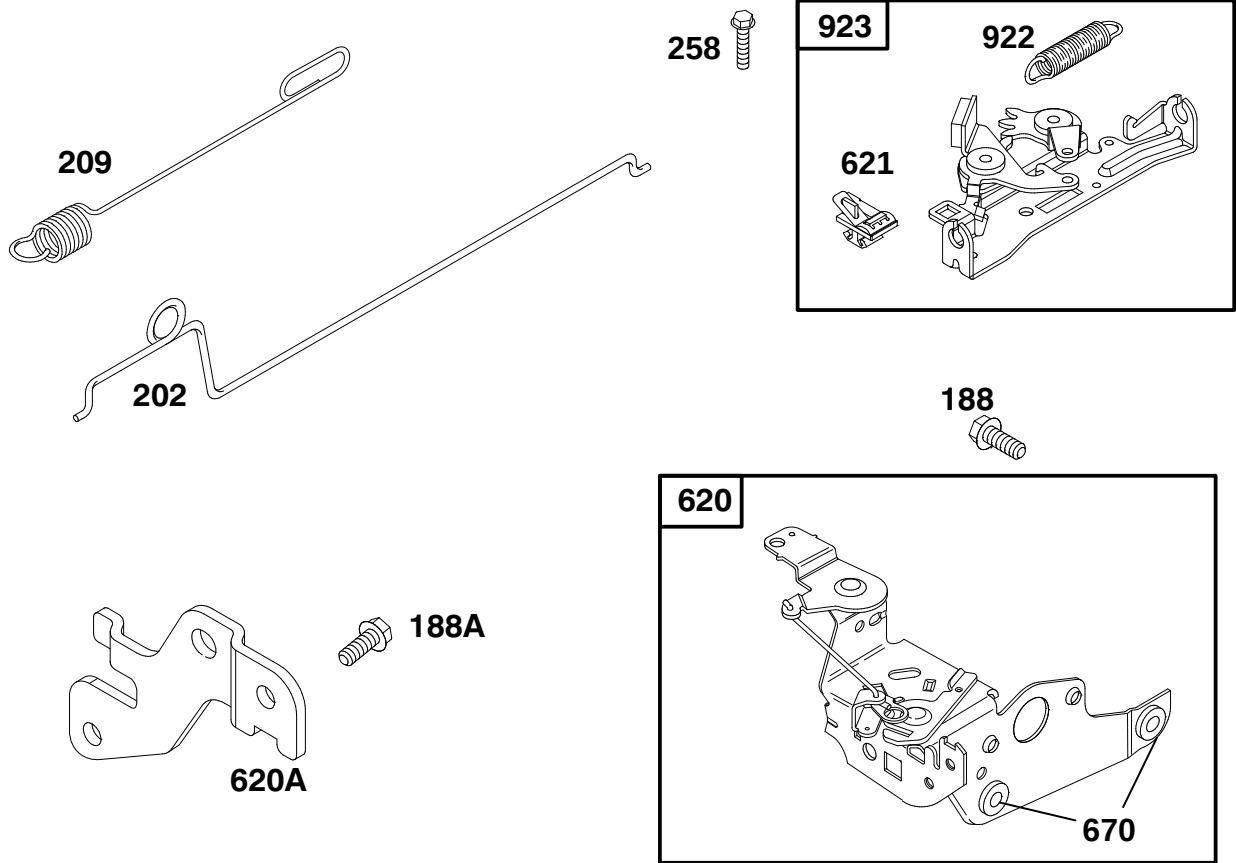





Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H802-1758-E1

Ref. No.	Part No.	Description	No. Used
188	94644	Screw – Hex.	1
188A	94874	Screw – Hex.	1
202	262579	Link – Governor	1
209	263046	Spring – Governor	1
258	94512	Screw – Hex.	1
620	497203	Bracket – Carburetor	1

Ref. No.	Part No.	Description	No. Used
620A	225152	Bracket – Control	1
621	396847	Switch – Stop	1
★670	493823	Spacer – Bracket	1
		Note: Includes Two.	1
922	262640	Spring – Brake	1
923	493442	Brake Assembly	1

★Included in Gasket Set–Part No. 497316.

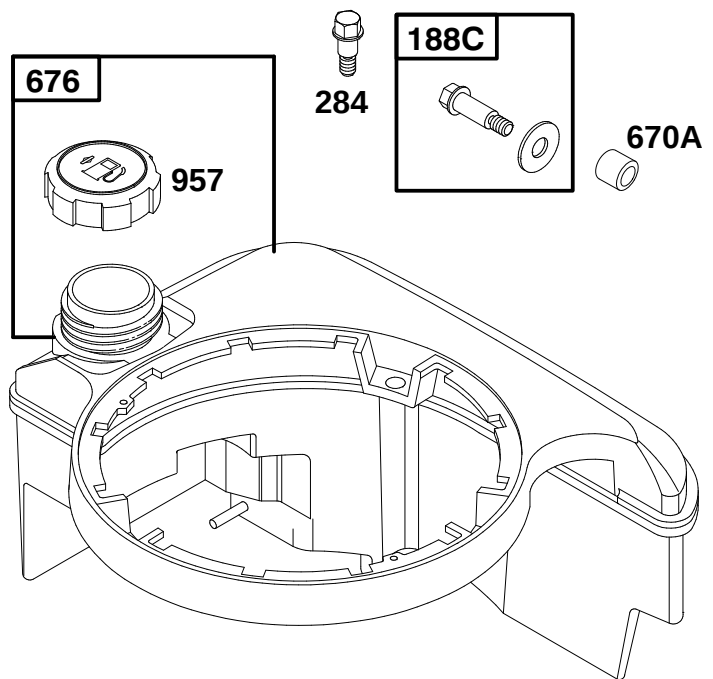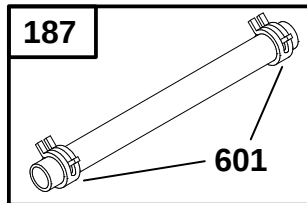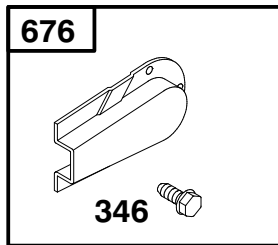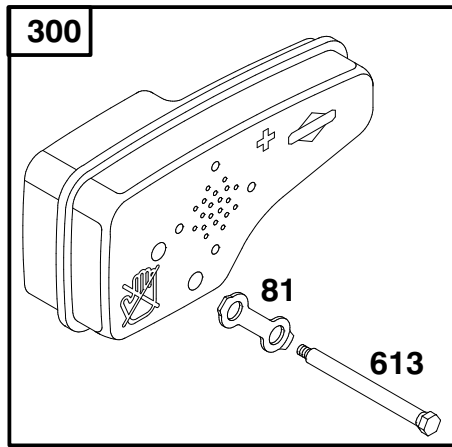


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H802-1758-E1

Ref. No.	Part No.	Description	No. Used
81	223664	Lock – Muffler Screw	1
187	298049	Line – Fuel (Cut to Required Length)	1
188C	398540	Screw – Shoulder	1
284	94511	Screw – Shoulder	1
300	497838	Muffler – Exhaust	1
346	94896	Screw – Hex.	1


Ref. No.	Part No.	Description	No. Used
601	93053	Clamp – Hose	1
613	94231	Screw – Shoulder	1
670A	280512	Spacer – Fuel Tank	1
676	493871	Deflector – Muffler	1
957	397974	Cap – Fuel Tank	1
972	495224	Tank – Fuel	1

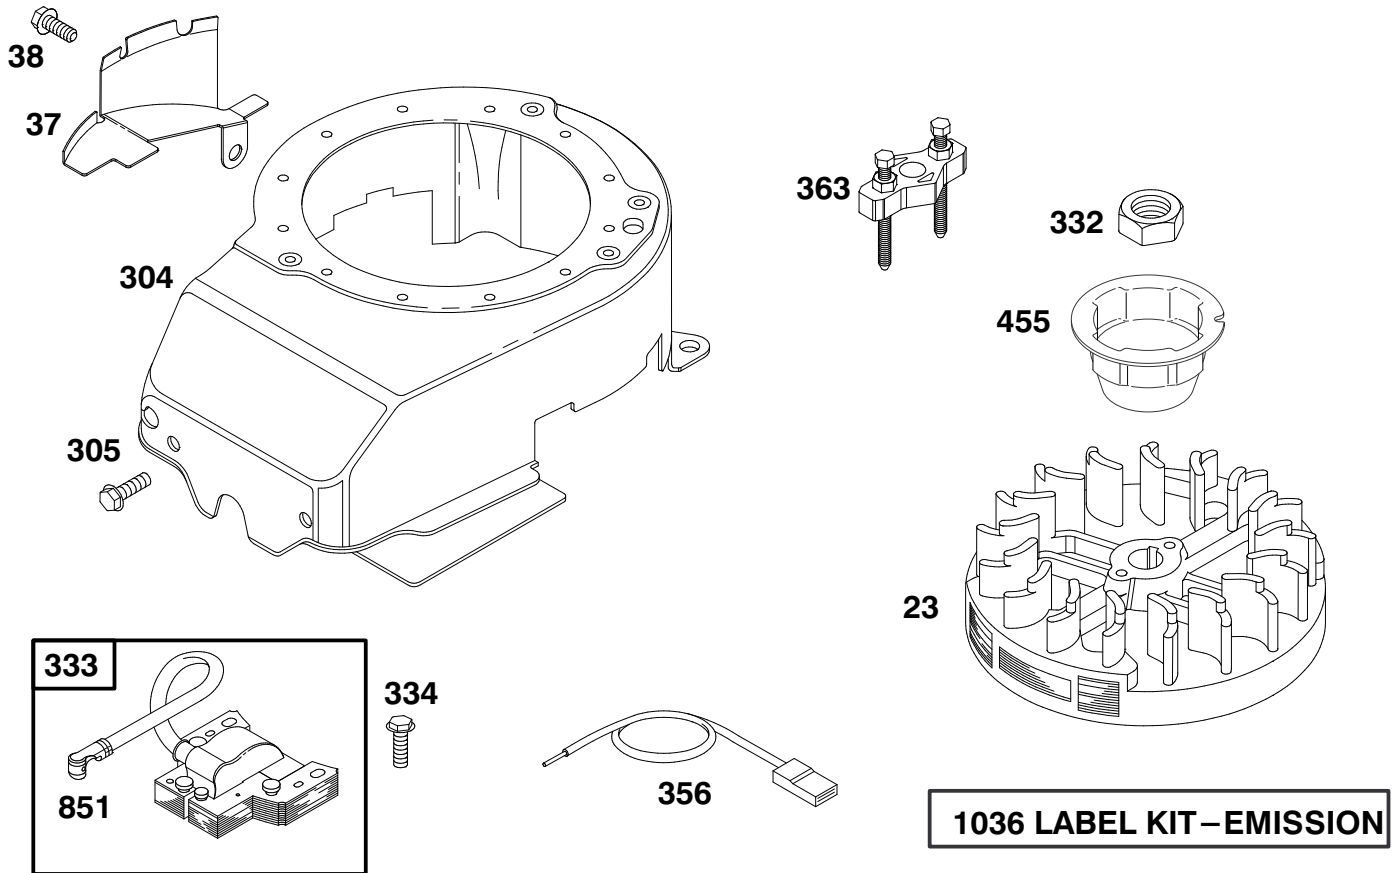

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H802-1758–E1

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
23	492177	Flywheel	1	334	94731	Screw – Hex.	1
37	224511	Guard – Flywheel	1	356	497833	Wire – Stop	1
38	94786	Screw – Hex.	1	363	19069	Puller – Flywheel	1
304	493293	Housing – Blower	1	455	225121	Cup – Flywheel	1
305	94744	Screw – Hex.	1	851	493880	Terminal – Cable	1
332	94877	Nut – Flywheel	1	1036	499341	Label Kit – Emission	1
333	802574	Armature – Magneto	1				




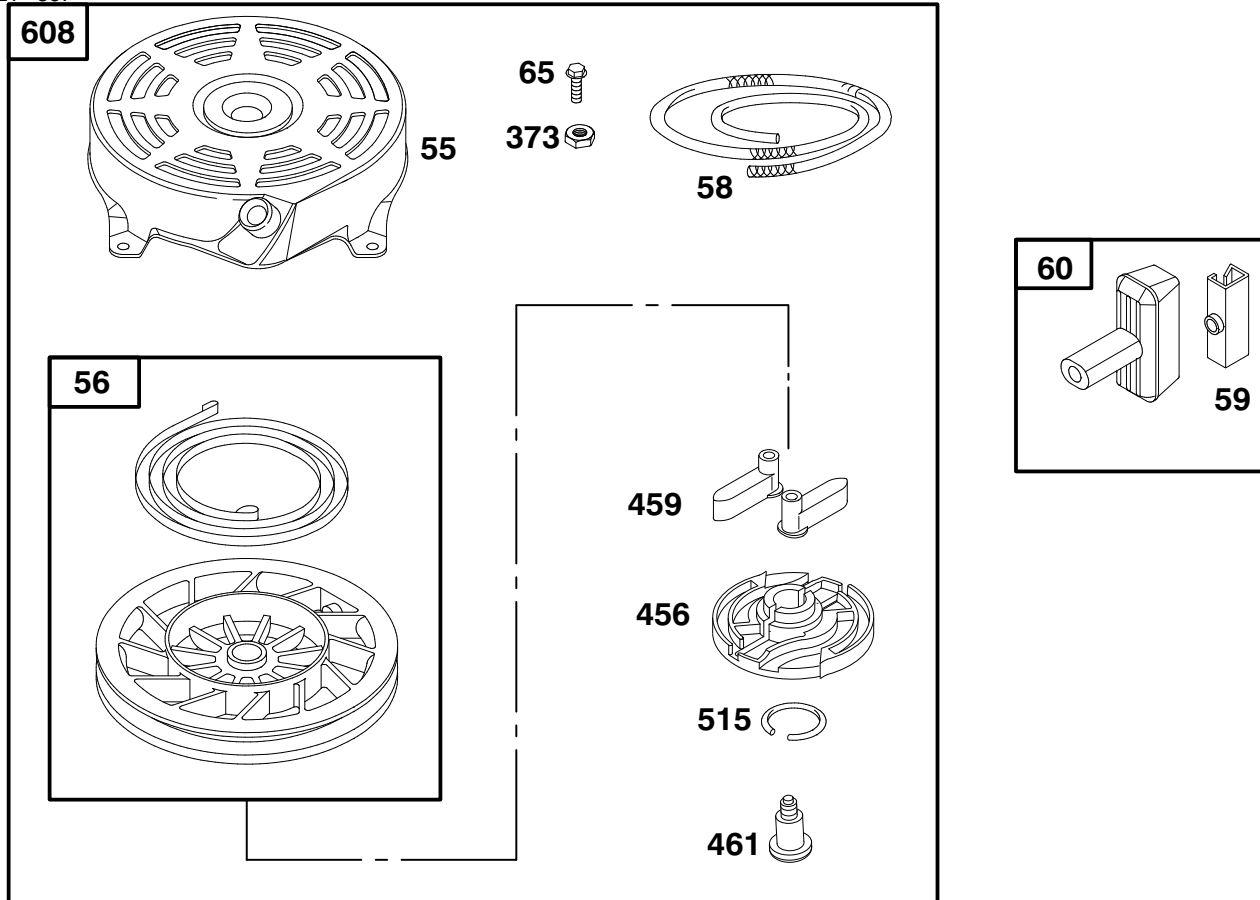


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H802-1758-E1

Ref. No.	Part No.	Description	No. Used
55	497440	Housing – Rewind Starter	1
56	498144	Pulley – Starter	1
58	280399	Rope – Starter	1
59	224467	Insert – Starter Grip	1
60	493926	Grip – Starter Rope	1
65	94904	Screw – Hex.	1

Ref. No.	Part No.	Description	No. Used
373	94908	Nut – Hex.	1
456	281503	Retainer – Spring	1
459	281505	Pawl – Ratchet	1
461	94943	Screw – Shoulder	1
515	263073	Spring – Friction	1
608	497680	Starter – Rewind	1

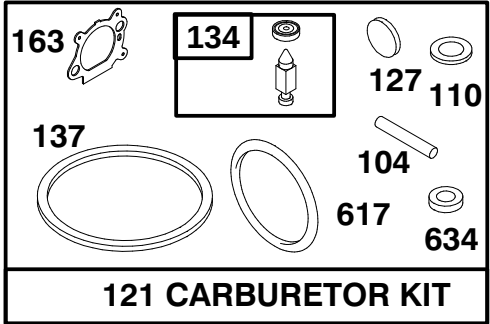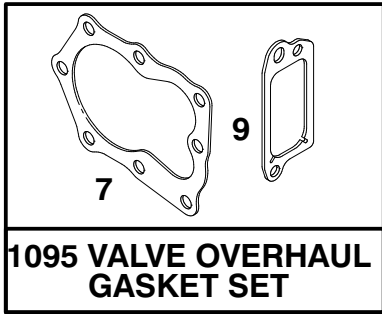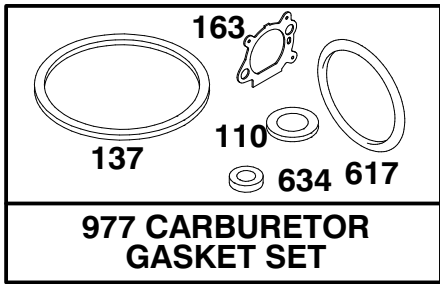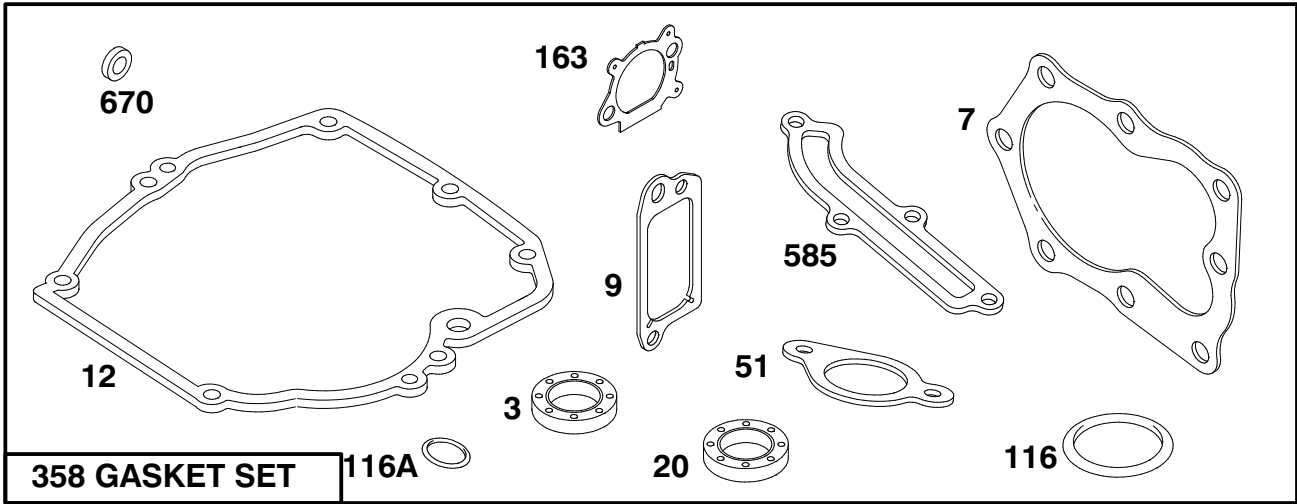

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H802-1758-E1

Ref. No.	Part No.	Description	No. Used
★3	299819	Seal – Oil	1
†★7	272916	Gasket – Cylinder Head	1
†★9	272481	Gasket – Breather	1
★9A	272238	Gasket – Breather	1
★12	272198	Gasket – Crankcase	1
★20	399781	Seal – Oil	1
★51	272199	Gasket – Intake	1
●104	231371	Pin – Float Hinge	1
●◆110		Washer – Bowl (Sold in Kit Only).	1
★116	280393	Seal – O Ring	1
★116A	280966	Seal – O Ring	1
121	498260	Carburetor Kit	1
●127		Plug – Welch (Sold in Kit Only).	1

Ref. No.	Part No.	Description	No. Used
●134	398188	Kit – Needle/Seat	1
●◆137		Gasket – Bowl (Sold in Kit Only).	1
●◆★163	272653	Gasket – Air Cleaner	1
358	496117	Gasket Set	1
●◆617	270344	Seal – Intake Manifold	1
●◆634		Washer – Foam (Sold in Kit Only).	1
★670	493823	Spacer – Bracket Note: Includes Two.	1
977	498261	Gasket Set – Carburetor	1
1095	498528	Gasket Set – Valve Overhaul	1

★Included in Gasket Set–Part No. 497316.

†Included in Valve Overhaul Gasket Set–Part No. 498528.

●Included in Carburetor Kit–Part No. 498260.

◆Included in Carburetor Gasket Set–Part No. 498261.

Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
3-3287	3	5	2	Spacer
14-9989	1	26	4	ASM-Wheel & Tire
17-5179	1	13	1	Cover-Recycler
25-7740	1	22	4	Knob-Arm
26-0670	2	14	1	Bolt-Blade
27-6232	1	27	4	Bolt-Wheel HH
27-6250	1	26:1	8	Bushing
27-7210	3	4	2	Screw-Shoulder
27-7211	3	7	2	Screw-Shoulder
33-3208	1	17	1	Rod-Shield
39-5770	1	3	1	Decal-Danger
40-1940	1	20	8	Washer
44-0580	1	16	1	Shield-Trailing
46-6810	1	15	1	Screw HWH
46-6811	1	14	3	Screw-HWH
46-6980	3	19	1	Support-Cable
49-1630	3	15	2	Spacer-Support
66-0541	1	21	2	ASM-Spring Arm
66-0560	1	25	4	Screw-Shoulder
66-0580	1	24	4	Arm-Pivot
66-5351	3	12	1	Lever-Control
71-0561	1	28	1	ASM-Arm
71-0571	1	29	1	ASM-Arm
71-3080	3	11	1	Bar-Control
82-5531	3	1	1	ASM-Handle
82-8450	1	6	1	Decal-Danger
82-8550	2	15	1	Shield-Muffler
84-8361	3	2	1	Latch-Handle
84-8401	3	3	1	Latch-Handle
92-1720	1	8	1	Kicker-RH
92-1730	1	9	1	Kicker-LH
92-1750	1	7	1	Kicker-LH
92-2260	3	9	4	Screw-Handle
92-2266	3	24	1	Screw-Handle
92-2269	3	18	1	Screw-Handle
92-2278	3	8	1	Handle-Upper
93-0243	2	2	1	Shroud
93-0248	1	5	1	Decal-Warning
93-3696	1	2	1	Decal-Deck
93-4106	2	11	1	Blade-Generation Iii
93-4107	2	10	1	Retainer-Blade
93-4194	3	23	1	Cable-Brake
93-7383	3	21	1	Guide-Rope
93-8470	2	8	1	Screw-Clamp
94-1608	2	12	1	Stiffener-Blade
95-1671	2	5	1	Decal-Engine
98-1704	1	1	1	Housing-Recy 21" Hp Mach
98-3206	2	4	1	Plate-Logo
98-7134	3	10	2	Knob
98-7137	3	22	1	Control-Throttle
2210-249	2	7	1	Clamp-Casing
2210-316	2	6	1	Rope-Stop
256-276	3	16	2	Spacer-Nylon
321-39	3	13	1	Screw-HH
321-51	3	33	1	Bolt-Hex
3253-22	2	13	1	Washer-Lock
3256-1	3	20	1	Washer-Flat
3290-378	3	25	2	Tie-Cable
3296-6	1	19	8	Nut-Lock
3296-72	3	6	4	Nut-Lock
3296-73	3	14	4	Nut-Lock
3296-74	3	17	2	Nut-Flange

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
32144-73	2	16	3	Screw-HWHTF
32144-85	1	23	4	Screw-HH
32144-102	2	9	3	Screw
32144-111	1	10	6	Screw - PPH
32144-121	2	3	2	Screw

[illegible]

[illegible]

17