



V-21S REAR BAGGING MOWER

Model No. 20489 – 8900001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Housing Assembly	1	Gear Case Assembly	8
Engine Assembly	2	Engine Briggs & Stratton	
Blade & Shield Assembly	3	Model 12H802–1758–E1	9–17
Handle Assembly	4	Toro Part Number Index	18–20
Bag Assembly	5	Maintenance	21
Rear Axle Assembly	6		
Handle Control Assembly	7		

Note:

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
Dethatcher Kit	Model No. 59131		
Leaf Shredder Kit	Model No. 59180		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HWHTF	hex washer head thread forming
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	PH	pan head
FH	flat head	PPH	Phillips pan head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HFV	hex flange washer	SFH	slotted fillister head
HH	hex head	SH	square head
HHF	hex head flange	SHWH	slotted hex washer head
HHST	hex head self tapping	SPH	slotted pan head
HJ	hex jam	STD	standard
HOC	height-of-cut	TAP	self tapping
HS	hex socket	TH	truss head
HSBH	hex socket button head	TTH	Torx truss head
HSFH	hex socket flat head	WH	wing head
HSV	hex socket head		
HWH	hex washer head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form $X:Y$. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form $X (Y)$. X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

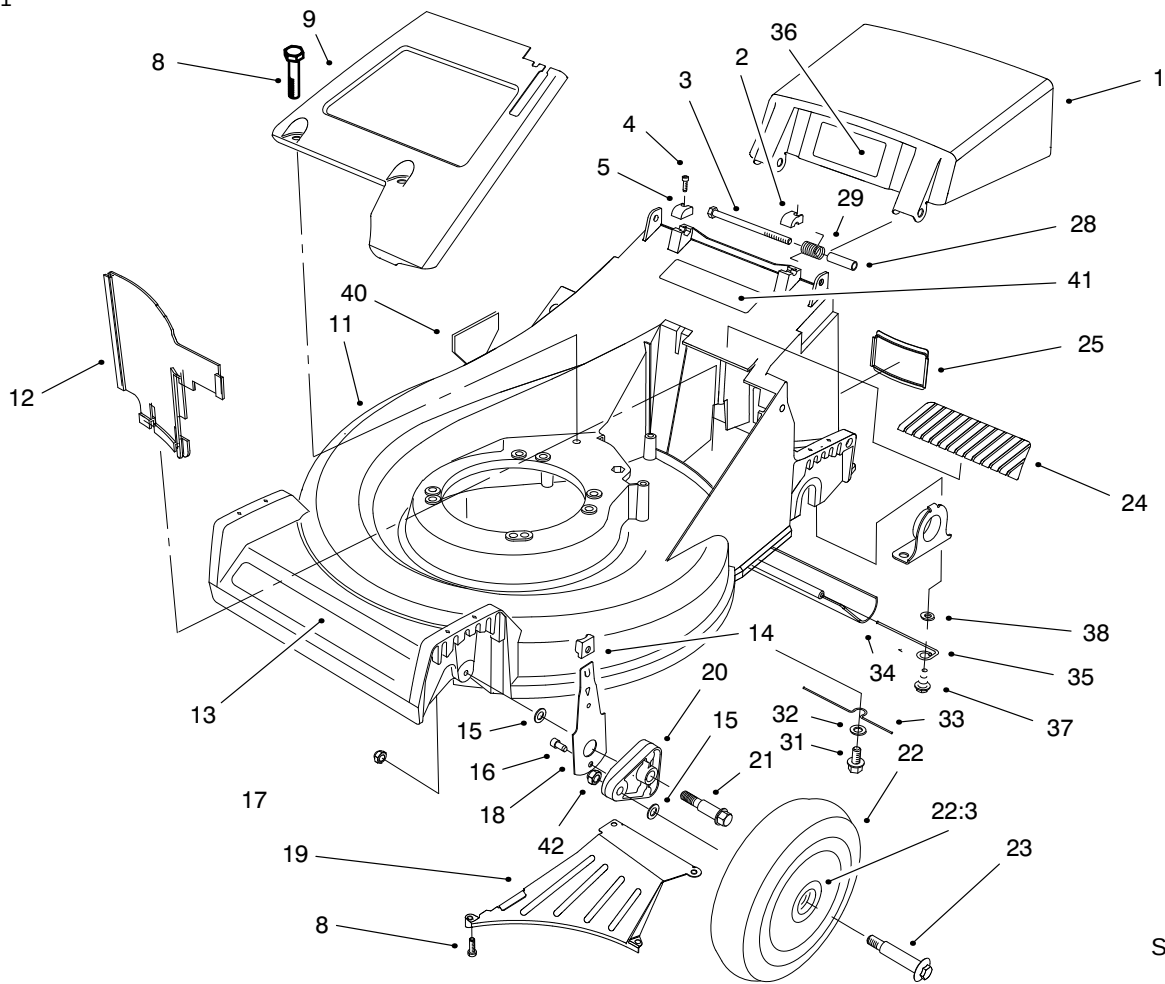


Sheet No.:2

Housing Assembly

Ref. No.	Part No.	Qty.	Description
1	99-1725	1	Door-Discharge
2	71-7900	1	Cap-Bolt LH
3	322-29	2	Screw-HH
4	65-5210	2	Screw-Tf
5	71-7910	1	Cap-Bolt RH
8	32144-70	6	Screw-TAP
9	65-5660	1	Panel-Screen
11	98-9221	1	Housing-53cm
12	66-0020	1	Panel-Vertical
13	98-3223	1	Decal-Deck
14	25-7740	2	Knob-Arm
15	40-1940	4	Washer
16	65-5220	2	Screw-Thrd Frmg
17	3296-6	2	Nut-Lock
18	66-0541	2	ASM-Spring Arm
19	71-9640	1	Ramp-Discharge
20	66-0580	2	Arm-Pivot
21	66-0560	2	Screw-Shoulder
22	98-7130	2	ASM-Wheel
22:3	27-6250	4	Bushing
23	92-1057	2	Bolt-Shoulder
24	71-9920	1	Cover-Top
25	71-9650	1	Access-Cover
28	71-8580	2	Spacer-Door
29	71-9840	2	Spring-Door
31	32144-15	1	Tapping-Scr


Ref. No.	Part No.	Qty.	Description
32	3256-24	1	Washer-Flat
33	66-0620	1	Retainer-Belt
34	65-5350	1	Shield-Trailing
35	76-1980	2	Hanger-Shield
36	98-3218	1	Decal-Danger
37	5-2490	2	Bolt-Shoulder
38	3256-23	2	Washer-Flat
40	39-5770	1	Decal-Danger
41	93-0248	1	Decal-Warning
42	603773	2	Nut-Lock

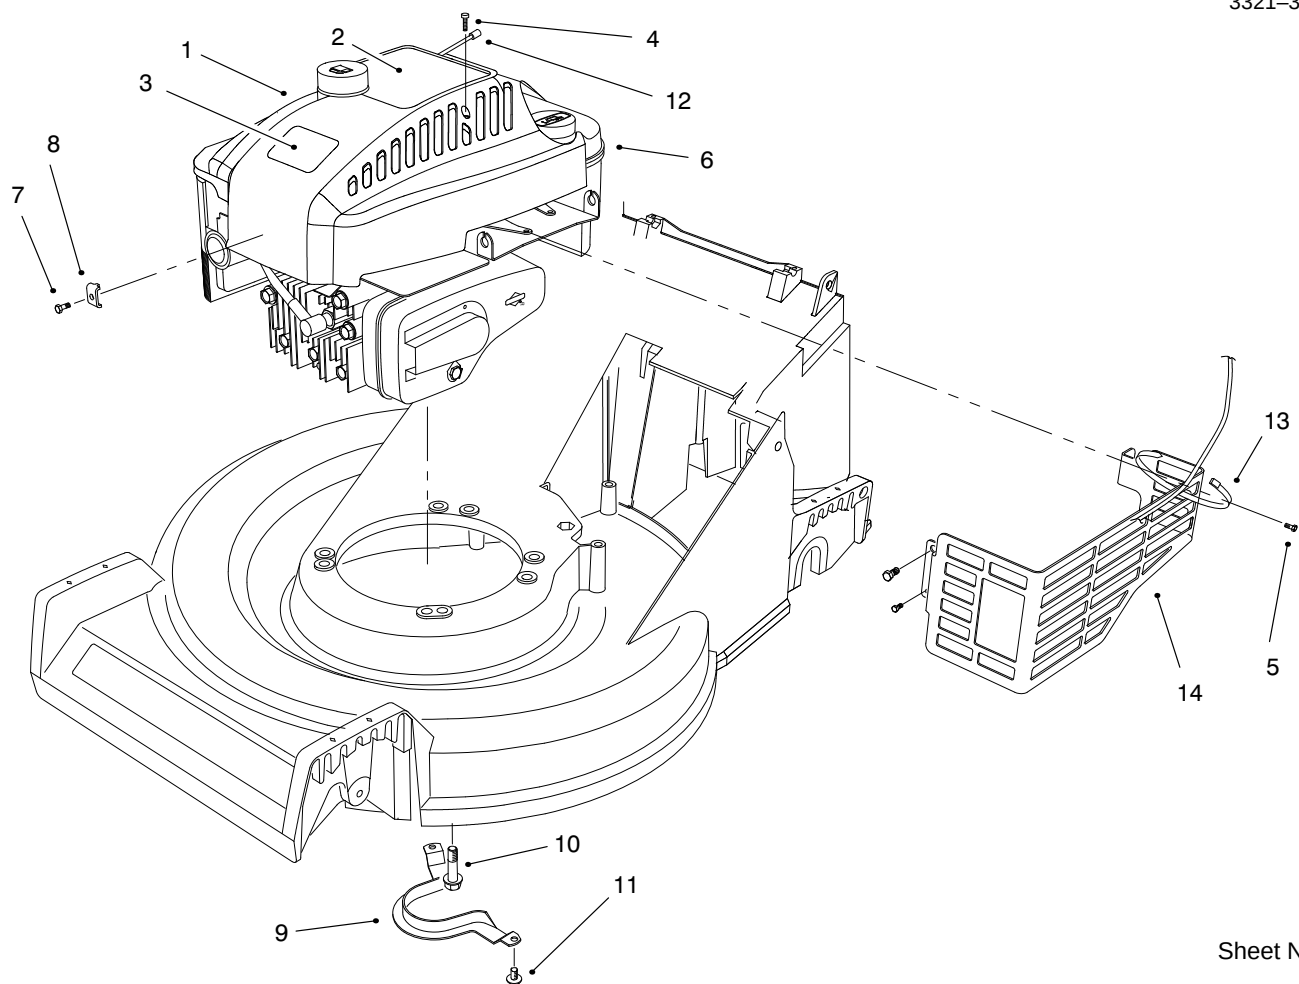

Sheet No.:3

Engine Assembly

Ref. No.	Part No.	Qty.	Description
1	93-0243	1	Shroud
2	95-1671	1	Decal-Engine
3	98-3206	1	Plate-Logo
4	32144-121	2	Screw
5	32144-73	3	Screw-HWHTF
6		1	Engine-Quantum 6.0 Hp
7	93-8470	1	Screw-Clamp
8	2210-249	1	Clamp-Casing
9	66-0570	1	Guide-Belt
10	32144-102	3	Screw
11	32144-70	2	Screw-TAP
12	2210-316	1	Rope-Stop
13	3290-378	1	Tie-Cable
14	82-8550	1	Shield-Muffler

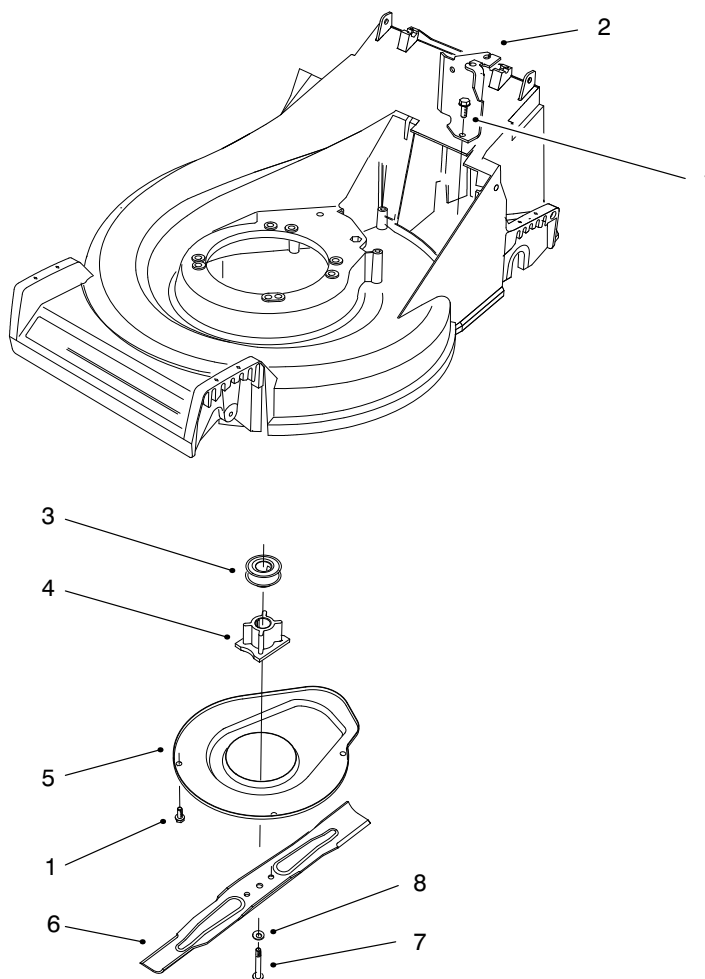


Sheet No.:4

Blade & Shield Assembly

Ref. No.	Part No.	Qty.	Description
1	32144-70	5	Screw-TAP
2	66-0030	1	Bracket-Cable Support
3	62-7550	1	Pulley-Driver
4	62-7540	1	Retainer-Blade
5	65-5200	1	Shield-Bbc
6	62-7700	1	Blade-21"
7	26-0670	1	Bolt-Blade
8	3253-22	1	Washer-Lock

Ref. No.	Part No.	Qty.	Description

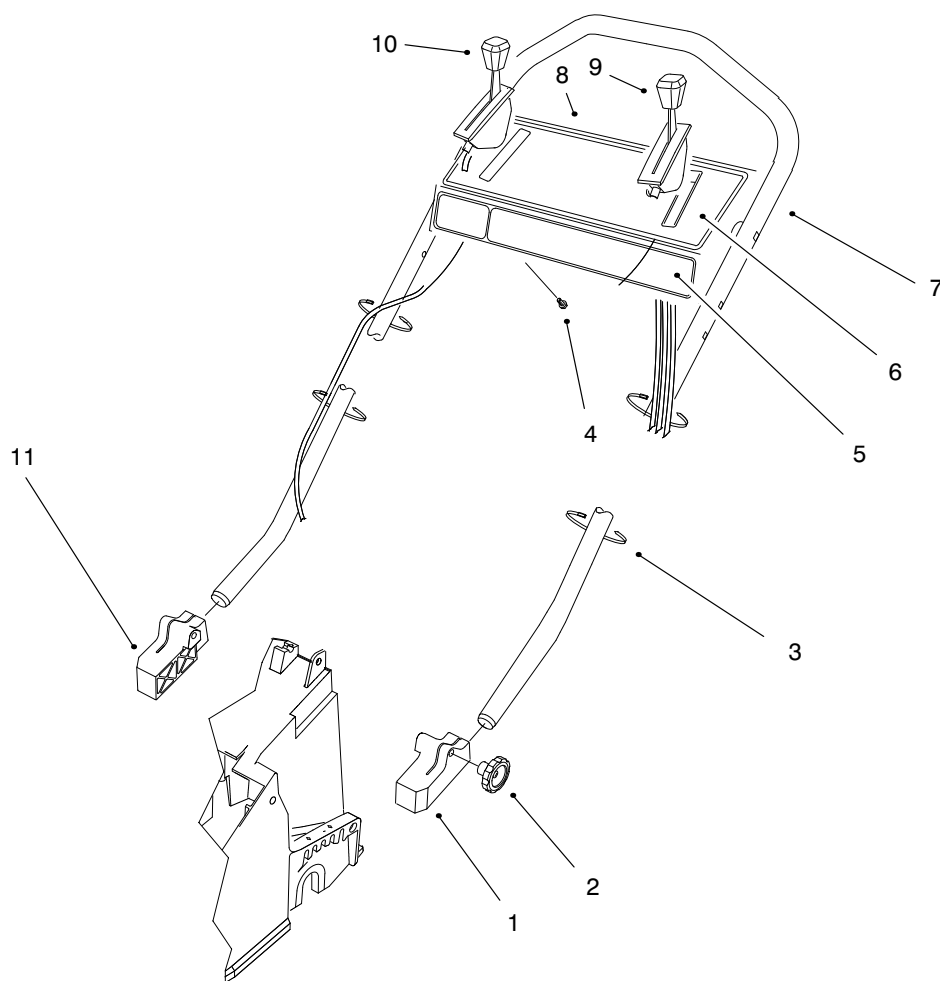

Sheet No.:5

Handle Assembly


Ref. No.	Part No.	Qty.	Description
1	71-8090	1	Mount-Handle LH
2	19-4050	2	Knob
3	3290-378	5	Tie-Cable
4	92-9665	5	Screw-Phil
5	98-3227	1	Decal-Panel
6	98-1503	1	Decal-Instruction
7	98-3229	1	Handle
8	98-9238	1	Panel-Control
9	98-3239	1	Control-Throttle
10	93-6632	1	Control-Speed
11	71-8100	1	Mount-Handle RH



Bag Assembly

Ref. No.	Part No.	Qty.	Description
1	32144-111	5	Screw – PPH
2	71-9480	1	Handle-Door
3	71-9470	1	Door-Bag
4	71-9930	1	Wa-Frame
5	98-3234	1	Bag-Grass


Ref. No.	Part No.	Qty.	Description

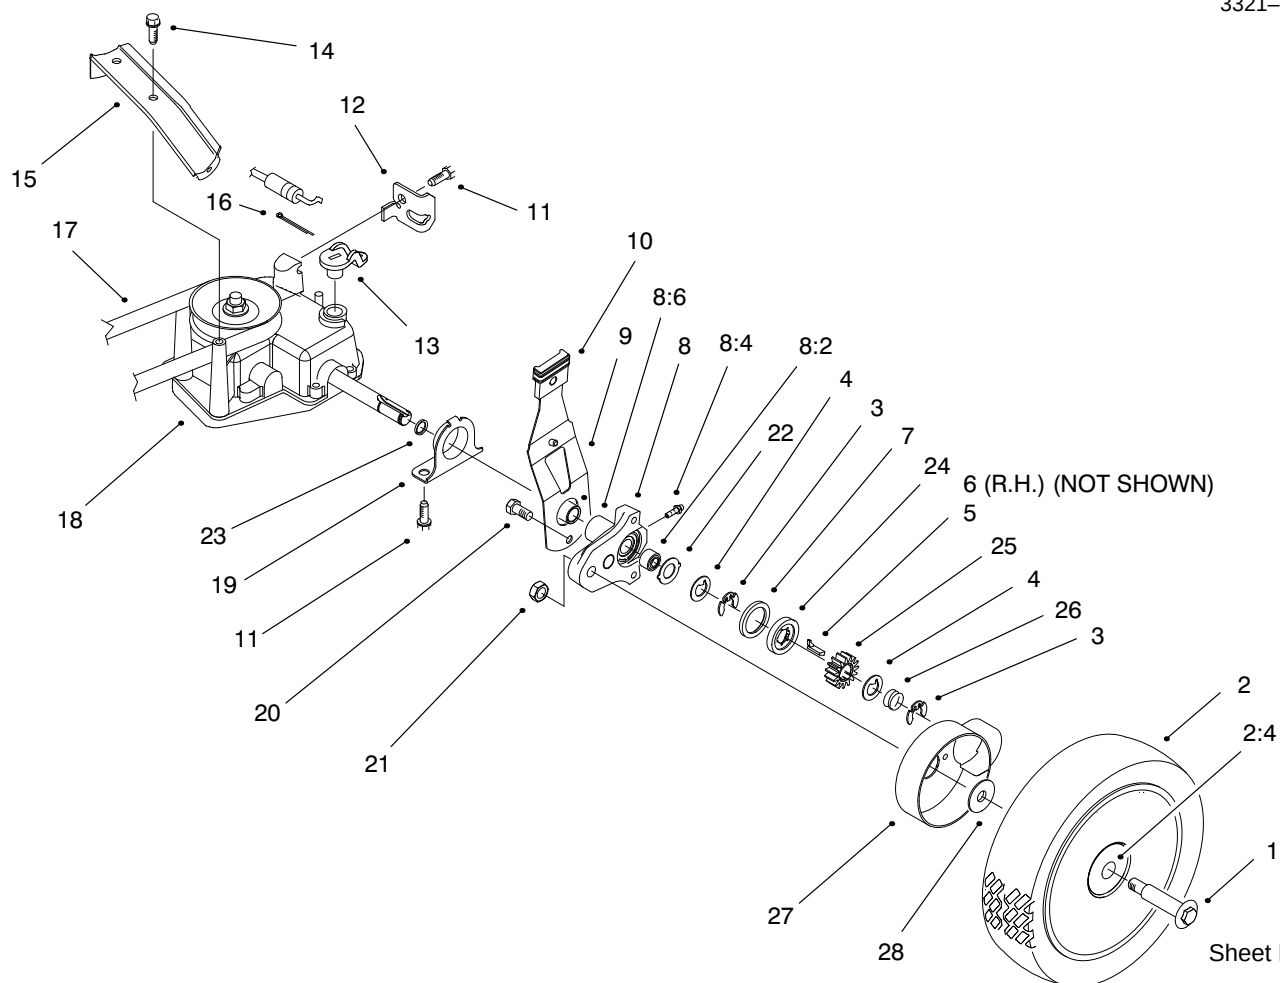

Rear Axle Assembly

Ref. No.	Part No.	Qty.	Description
1	92-1057	2	Bolt-Shoulder
2	98-7135	2	ASM-Wheel Sp
2:4	27-6250	4	Bushing
3	65-2720	4	Ring-Retaining
4	65-4740	4	Washer-Thrust
5	66-6050	1	Key-Rocking LH
6	66-6040	1	Key-Locking RH
7	65-4710	2	Ring-Friction
8	65-5042	2	ASM-Pivot Arm
8:2	48-2060	2	Bearing-Needle
8:4	302-56	2	Fitting-Grease
8:6	70-9760	2	Bushing
9	65-5441	2	ASM-Spring Arm-Rear
10	25-7740	2	Knob-Arm
11	32144-70	5	Screw-TAP
12	76-2930	1	Retainer-Cable
13	76-0920	1	Lever-Shift
14	49-2040	2	Screw-HH
15	65-5190	1	Bracket-Belt Guide
16	3272-5	1	Pin-Cotter
17	36-8070	1	"v" Belt
18	62-6673	1	ASM-Gearcase
19	66-0360	2	Cap-End
20	65-5220	2	Screw-Thrd Frmg
21	603773	2	Nut-Lock

Ref. No.	Part No.	Qty.	Description
22	65-4730	2	Washer-Thrust
23	237-153	2	O-Ring
24	65-4760	2	Washer
25	65-4750	2	Gear-Pinion
26	65-4720	2	Spring-Compression
27	74-1660	2	Cover-Wheel
28	74-1670	2	Spacer-Cover

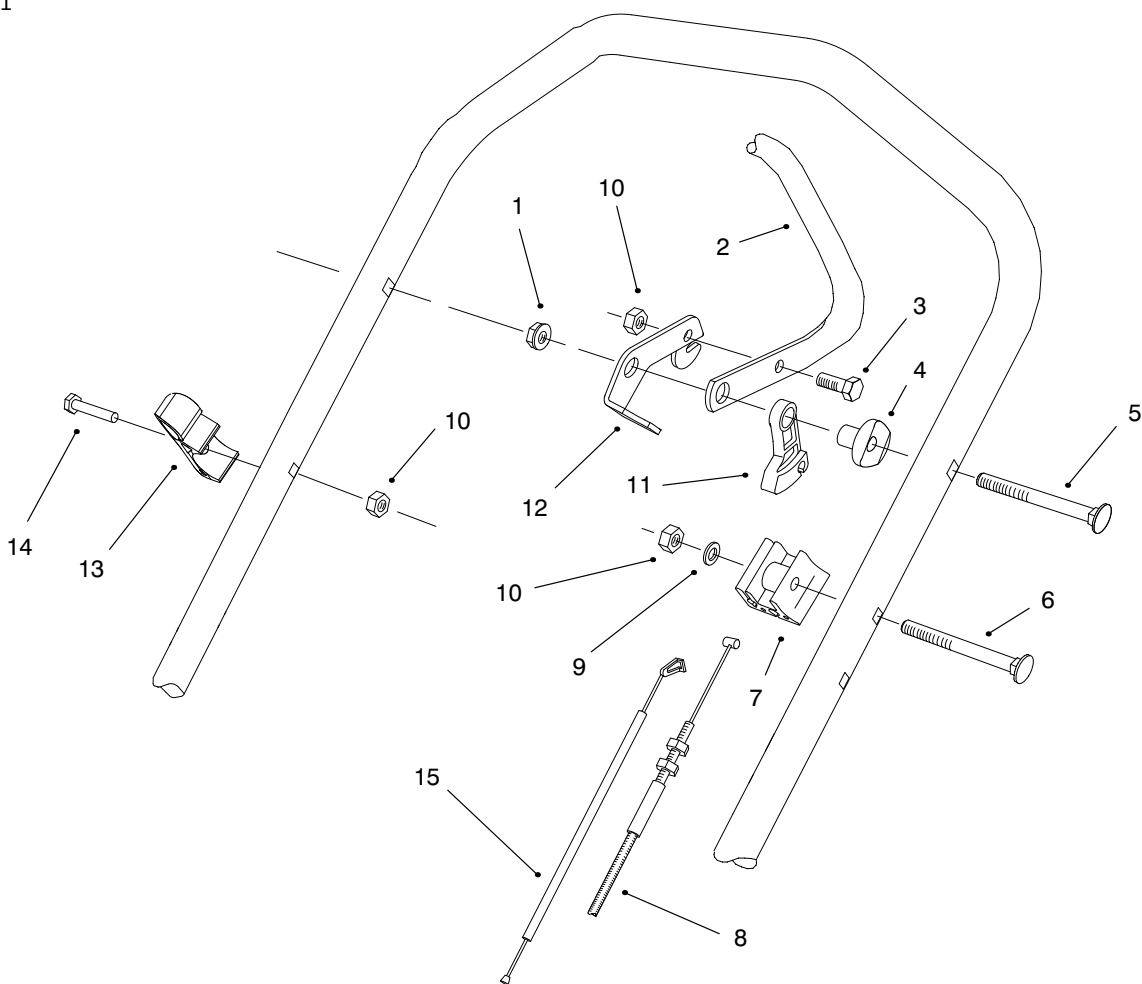


Sheet No.:8

Handle Control Assembly

Ref. No.	Part No.	Qty.	Description
1	3296-74	2	Nut-Flange
2	52-7430	1	Bar-Control
3	321-39	1	Screw-HH
4	66-0330	2	Spacer-Support
5	17-9428	2	Screw
6	92-2270	1	Screw-Handle
7	71-0960	1	Support-Cable
8	93-6634	1	Cable - Traction
9	3256-1	1	Washer-Flat
10	3296-73	3	Nut-Lock
11	46-5520	1	Lever-Traction
12	66-5351	1	Lever-Control
13	93-3772	1	Rope-Guide
14	321-51	1	Bolt-Hex
15	93-6628	1	Cable-Brake


Ref. No.	Part No.	Qty.	Description

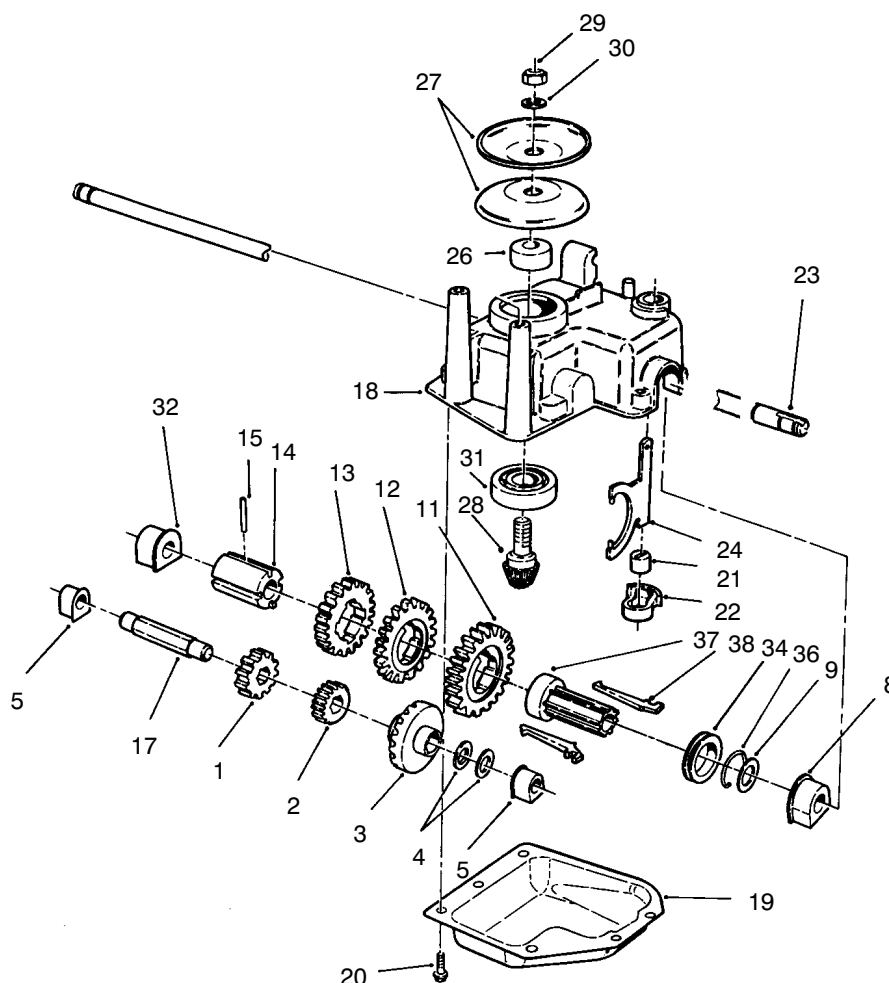

Sheet No.:101

Gear Case Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	55-3800	1	Pinion 25t 3rd Gear	32	60-8850	1	Bushing-Output
2	55-3780	1	Pinion 20t 2nd Gear	34	76-0770	1	Collar-Shift
3	55-3760	1	15 T Pinion	36	65-5250	1	Clip-Spring
4	36-4791	2	Washer-Thrust	37	76-0780	1	Sleeve-Shift Key
5	60-8750	2	Bushing	38	76-0760	2	Key-Shift
8	60-8770	1	Bushing-Output Shaft				
9	36-4780	1	Washer-Thrust				
11	55-3770	1	Gear 49t 1st Gear				
12	55-3790	1	Gear 44t 2nd Gear				
13	55-3810	1	Gear 39t 3rd Gear				
14	60-8790	1	Sleeve-Gear				
15	32121-120	1	Pin-Coil				
17	60-8800	1	Shaft-Intermediate				
18	60-8710	1	Gearcase-Upper 3 Sp				
19	60-8730	1	Cover-Gearcase				
20	49-2040	6	Screw-HH				
21	29-9570	1	Bushing-Yoke				
22	60-8810	1	Retainer-Shift-Fork				
23	65-4770	1	Shaft-Output				
24	60-8870	1	Yoke-Shift				
26	62-6660	1	Spacer-Pulley				
27	60-8840	2	Pulley-Half				
28	60-8890	1	Gear-Pinion				
29	3296-5	1	Nut-Lock				
30	3256-24	1	Washer-Flat				
31	38-7820	1	Bearing-Ball				

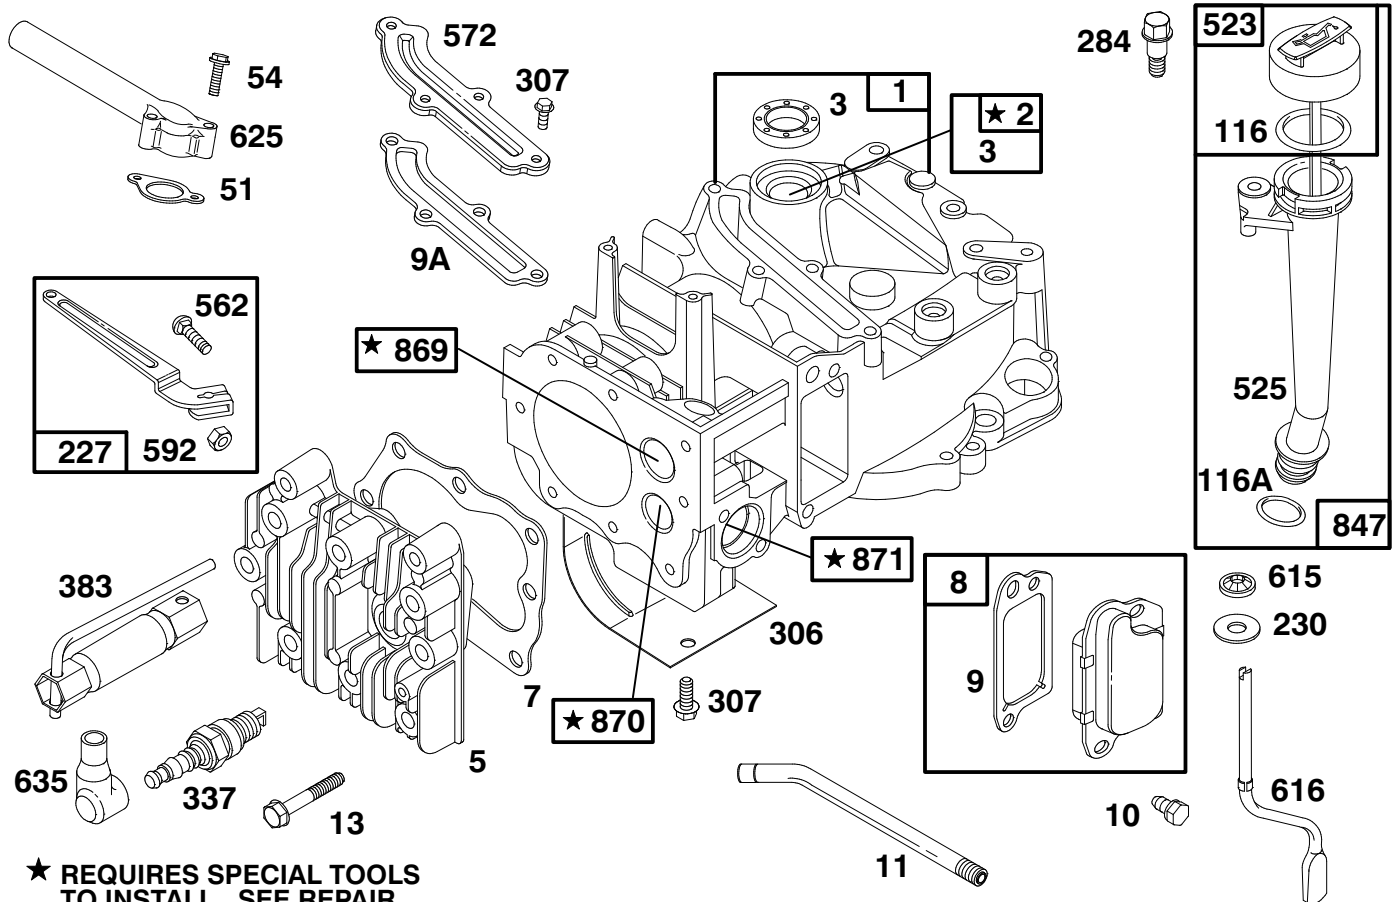

★ REQUIRES SPECIAL TOOLS
TO INSTALL. SEE REPAIR
INSTRUCTION MANUAL.

Assemblies include all parts shown in
frames.


ENGINE BRIGGS & STRATTON MODEL 12H802-1758-E1

Ref. No.	Part No.	Description	No. Used
1	493260	Cylinder Assembly	1
2	293708	Bushing	1
★3	299819	Seal – Oil	1
5	214368	Head – Cylinder	1
†★7	272916	Gasket – Cylinder Head	1
8	495786	Breather Assy.	1
†★9	272481	Gasket – Breather	1
★9A	272238	Gasket – Breather	1
10	94650	Screw – Hex.	1
11	231933	Tube – Breather	1
13	94876	Screw – Hex.	1
★51	272199	Gasket – Intake Elbow	1
54	94526	Screw – Hex	1
★116	280393	Seal – O Ring	1
★116A	280966	Seal – O Ring	1
227	492349	Lever Assembly – Gov.	1
230	67072	Washer – Gov. Crank	1
284	94511	Screw – Hex.	1
306	224324	Shield – Cylinder	1

★Included in Gasket Set—Part No. 497316.

Ref. No.	Part No.	Description	No. Used
307	94515	Screw – Hex.	1
337	802592	Plug – Spark	1
383	89838	Wrench – Spark Plug	1
523	495264	Dipstick	1
525	495265	Tube – Oil Filler	1
562	94582	Screw – Hex.	1
572	224328	Baffle – Cylinder	1
592	231082	Nut – Hex.	1
615	94474	Fastener	1
616	263175	Crank – Governor	1
625	497465	Tube – Fuel Intake	1
635	66538	Elbow – Spark Plug	1
847	495263	Dipstick/Tube Assy.	1
869	213512	Seat – Valve (Intake)	1
870	213513	Seat – Valve (Exhaust)	1
871	262001	Bushing – Guide (Exhaust)	1
		Note: 63709 Bushing – Guide (Intake)	1

†Included in Valve Overhaul Gasket Set—Part No. 498528.

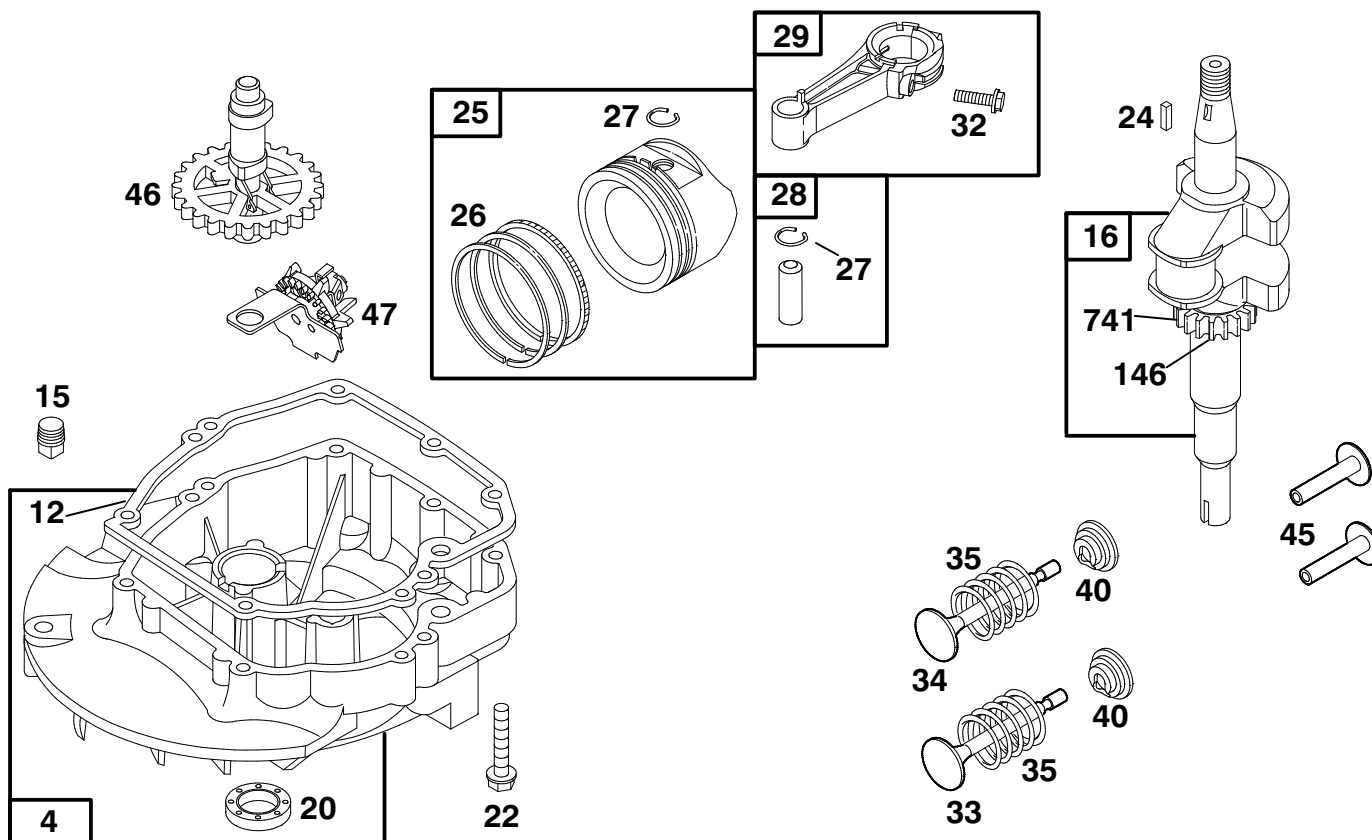


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H802-1758–E1

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
4	493279	Sump – Engine	1	26	499425	Ring Set (Standard)	1
★12	272198	Gasket – Crankcase	1		499426	Ring Set (0.010" O.S.)	1
15	94880	Plug – Oil Drain	1		499427	Ring Set (0.020" O.S.)	1
16	498573	Crankshaft	1		499428	Ring Set (0.030" O.S.)	1
★20	399781	Seal – Oil	1	27	263190	Lock – Piston Pin	1
22	94220	Screw – Hex.	1	28	499423	Pin – Piston (Standard)	1
		Note: 94612		29	499424	Rod Assembly – Connecting	1
		Screw – Hex.		32	94699	Screw – Connecting Rod	1
		(One (1) Used in Hole Nearest Breather.)	1	33	262651	Valve – Exhaust	1
24	222698	Key – Flywheel	1	34	262652	Valve – Intake	1
25	499429	Piston Assy. (Standard)	1	35	262224	Spring – Valve	1
	499430	Piston Assy. (0.010" O.S.)	1	40	93312	Retainer – Valve Spring	1
	499431	Piston Assy. (0.020" O.S.)	1	45	262204	Tappet – Valve	1
	499432	Piston Assy. (0.030" O.S.)	1	46	498275	Gear – Cam	1
				47	493737	Slinger – Oil	1
				146	94388	Key – Timing	1
				741	262598	Gear – Timing	1

★Included in Gasket Set–Part No. 497316.

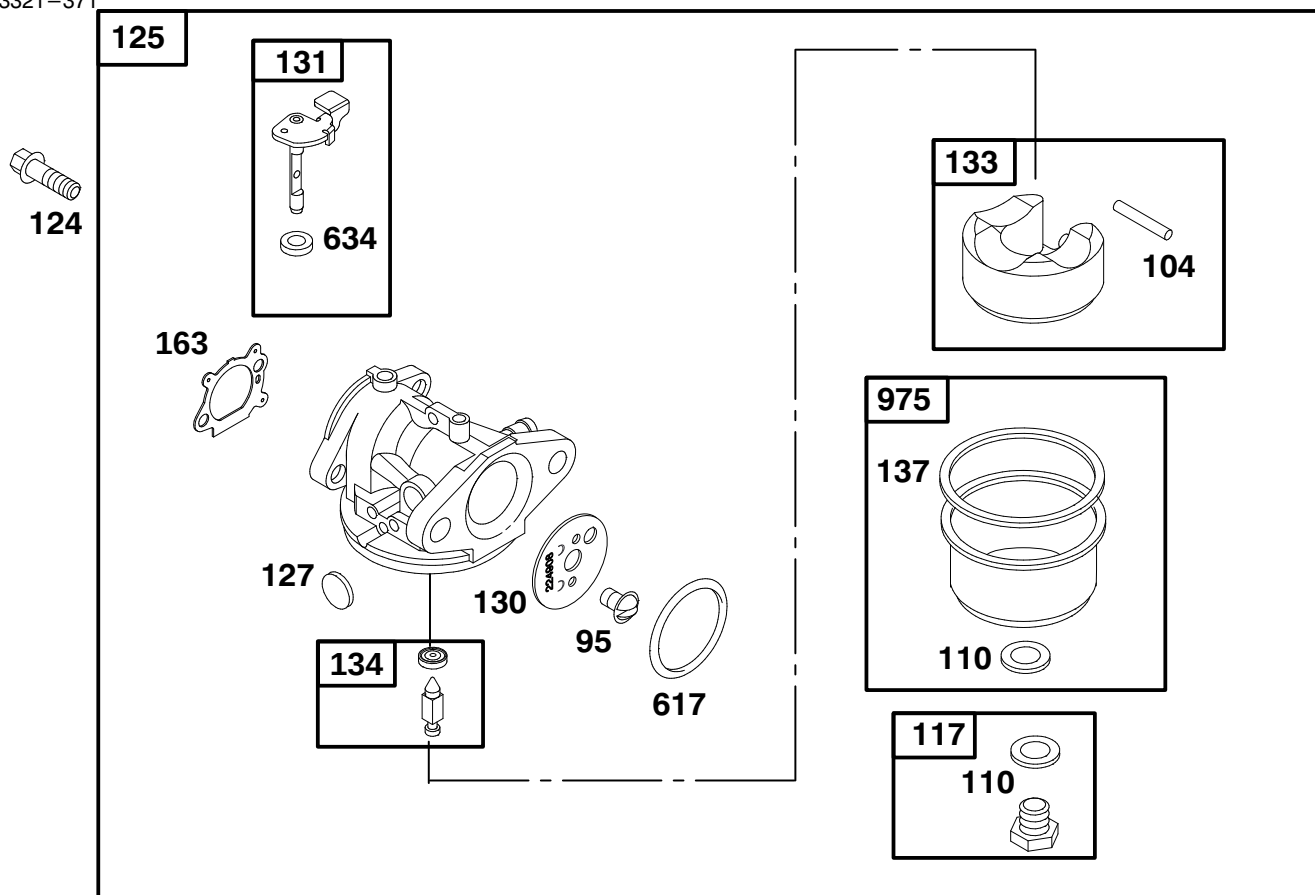

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H802-1758-E1



Ref. No.	Part No.	Description	No. Used
95	94098	Screw – Slotted	1
●104	231371	Pin – Float Hinge	1
◆110		Washer – Bowl	
		(Sold in Kit Only).	1
117	494870	Jet – Main (Std.)	1
		Note: 497315	
		Jet – Main	
		(High Altitude)	1
124	94840	Screw – Hex	1
125	498170	Carburetor	1
●127		Plug – Welch	
		(Sold in Kit Only).	1

★Included in Gasket Set–Part No. 497316.

Ref. No.	Part No.	Description	No. Used
130	224908	Valve – Throttle	1
131	493267	Shaft – Throttle	1
133	398187	Float – Carburetor	1
●134	398188	Kit – Needle/Seat	1
◆137		Gasket – Bowl	
		(Sold in Kit Only).	1
◆★163	272653	Gasket – Air Cleaner	1
◆617	270344	Seal – Intake Manifold	1
◆634		Washer – Foam	
		(Sold in Kit Only).	1
975	493640	Bowl – Float	1

●Included in Carburetor Kit–Part No. 498260.

◆Included in Carburetor Gasket Set–Part No. 498261.

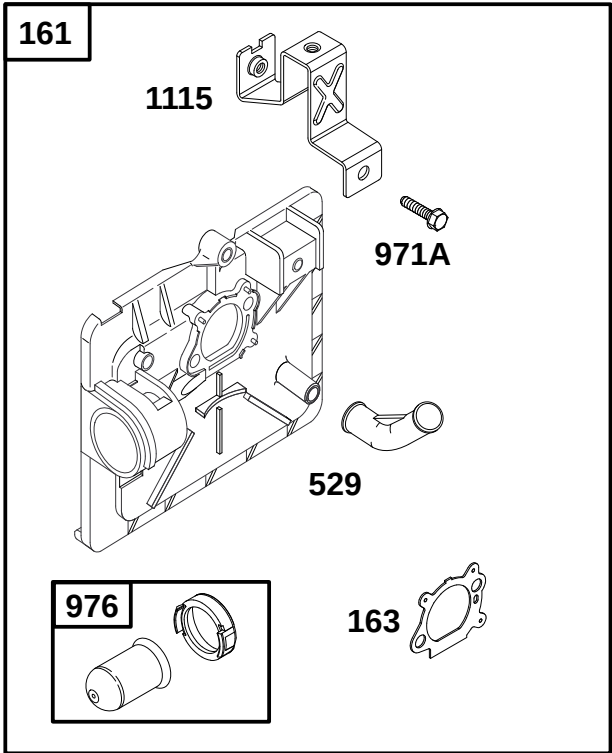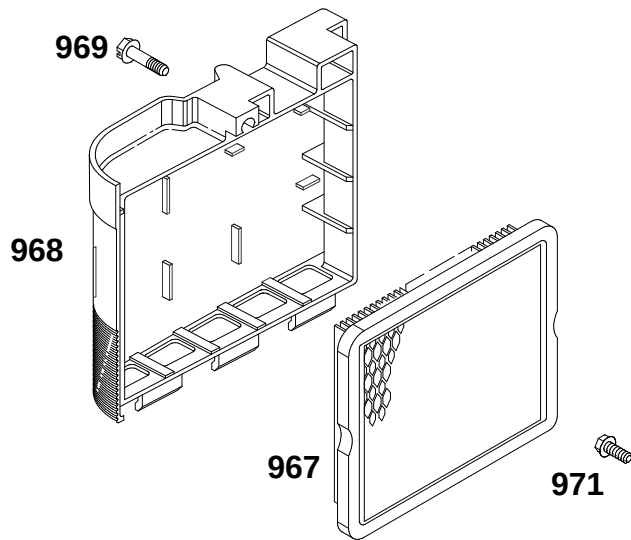

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H802-1758–E1


Ref. No.	Part No.	Description	No. Used
161	496116	Base – Air Cleaner	1
◆◆★163	272653	Gasket – Air Cleaner	1
529	281299	Grommet	1
967	491588	Filter – Air	1
968	281340	Cover – Air Cleaner	1

★Included in Gasket Set–Part No. 497316.

Ref. No.	Part No.	Description	No. Used
969	94872	Screw – Slotted Hex.	1
971	94873	Screw – Hex.	1
971A	94749	Screw – Hex.	1
976	496115	Primer – Carburetor	1
1115	224815	Bracket – Support	1

◆Included in Carburetor Kit–Part No. 498260.

◆Included in Carburetor Gasket Set–Part No. 498261.

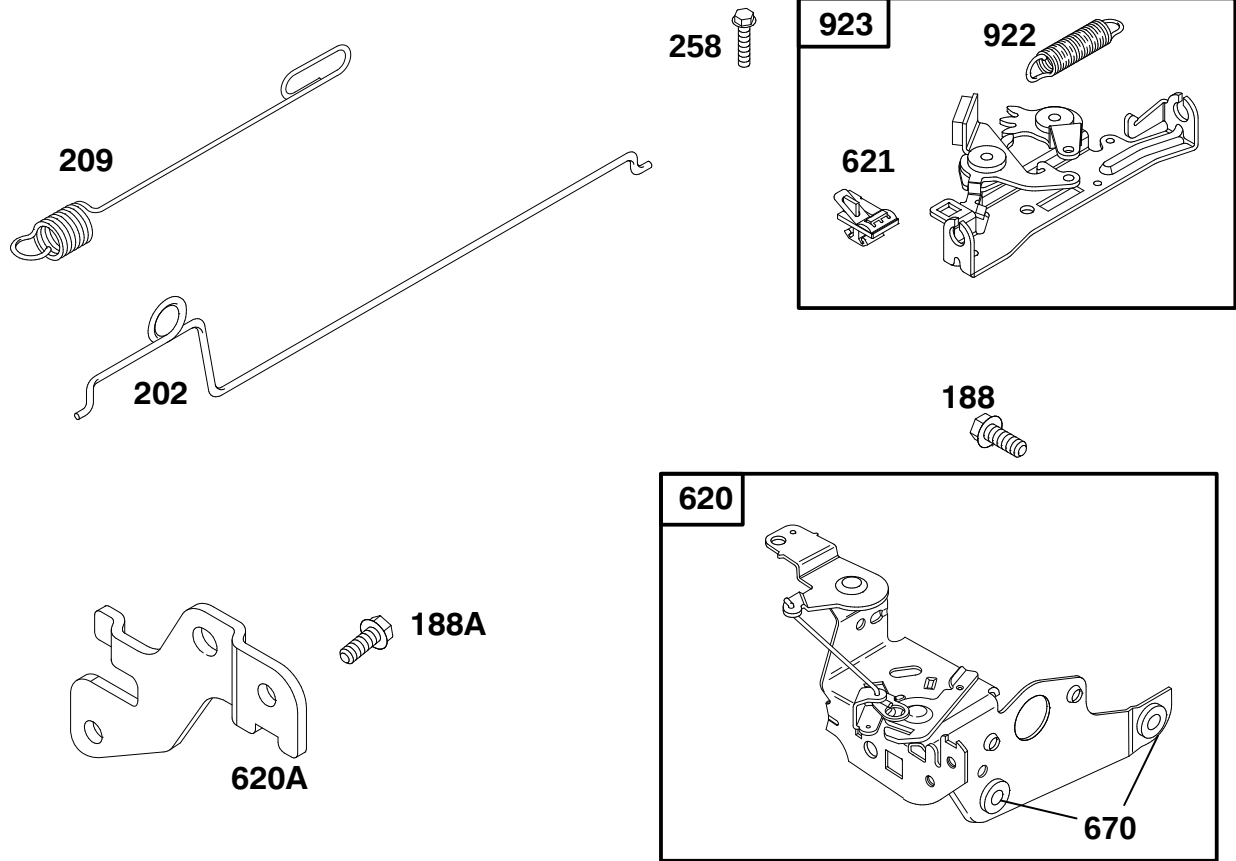





Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H802-1758-E1

Ref. No.	Part No.	Description	No. Used
188	94644	Screw – Hex.	1
188A	94874	Screw – Hex.	1
202	262579	Link – Governor	1
209	263046	Spring – Governor	1
258	94512	Screw – Hex.	1
620	497203	Bracket – Carburetor	1

Ref. No.	Part No.	Description	No. Used
620A	225152	Bracket – Control	1
621	396847	Switch – Stop	1
★670	493823	Spacer – Bracket	1
		Note: Includes Two.	1
922	262640	Spring – Brake	1
923	493442	Brake Assembly	1

★Included in Gasket Set–Part No. 497316.

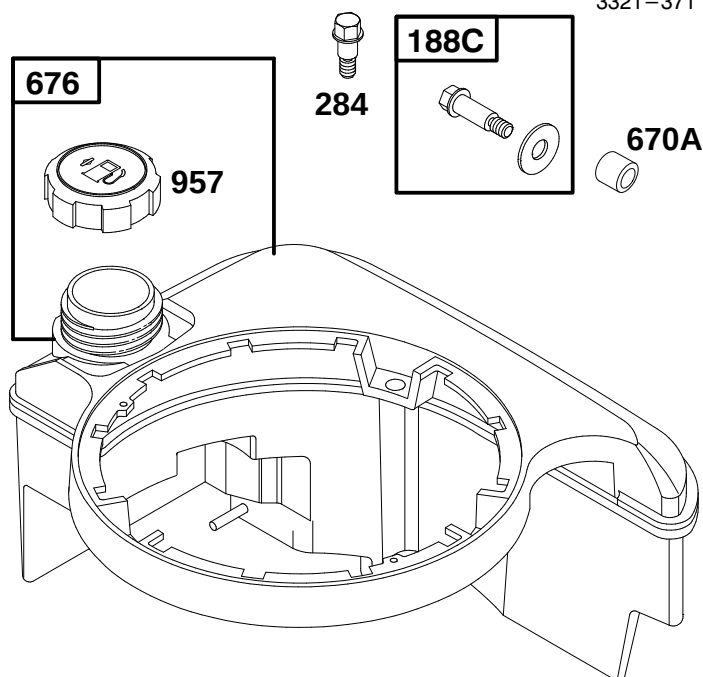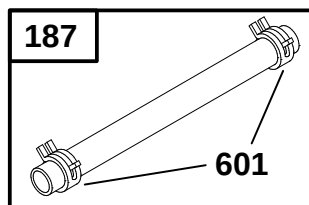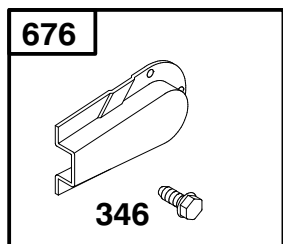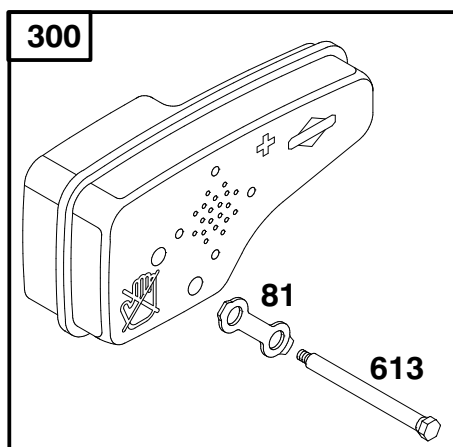


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H802-1758-E1

Ref. No.	Part No.	Description	No. Used
81	223664	Lock – Muffler Screw	1
187	298049	Line – Fuel (Cut to Required Length)	1
188C	398540	Screw – Shoulder	1
284	94511	Screw – Shoulder	1
300	497838	Muffler – Exhaust	1
346	94896	Screw – Hex.	1

Ref. No.	Part No.	Description	No. Used
601	93053	Clamp – Hose	1
613	94231	Screw – Shoulder	1
670A	280512	Spacer – Fuel Tank	1
676	493871	Deflector – Muffler	1
957	397974	Cap – Fuel Tank	1
972	495224	Tank – Fuel	1

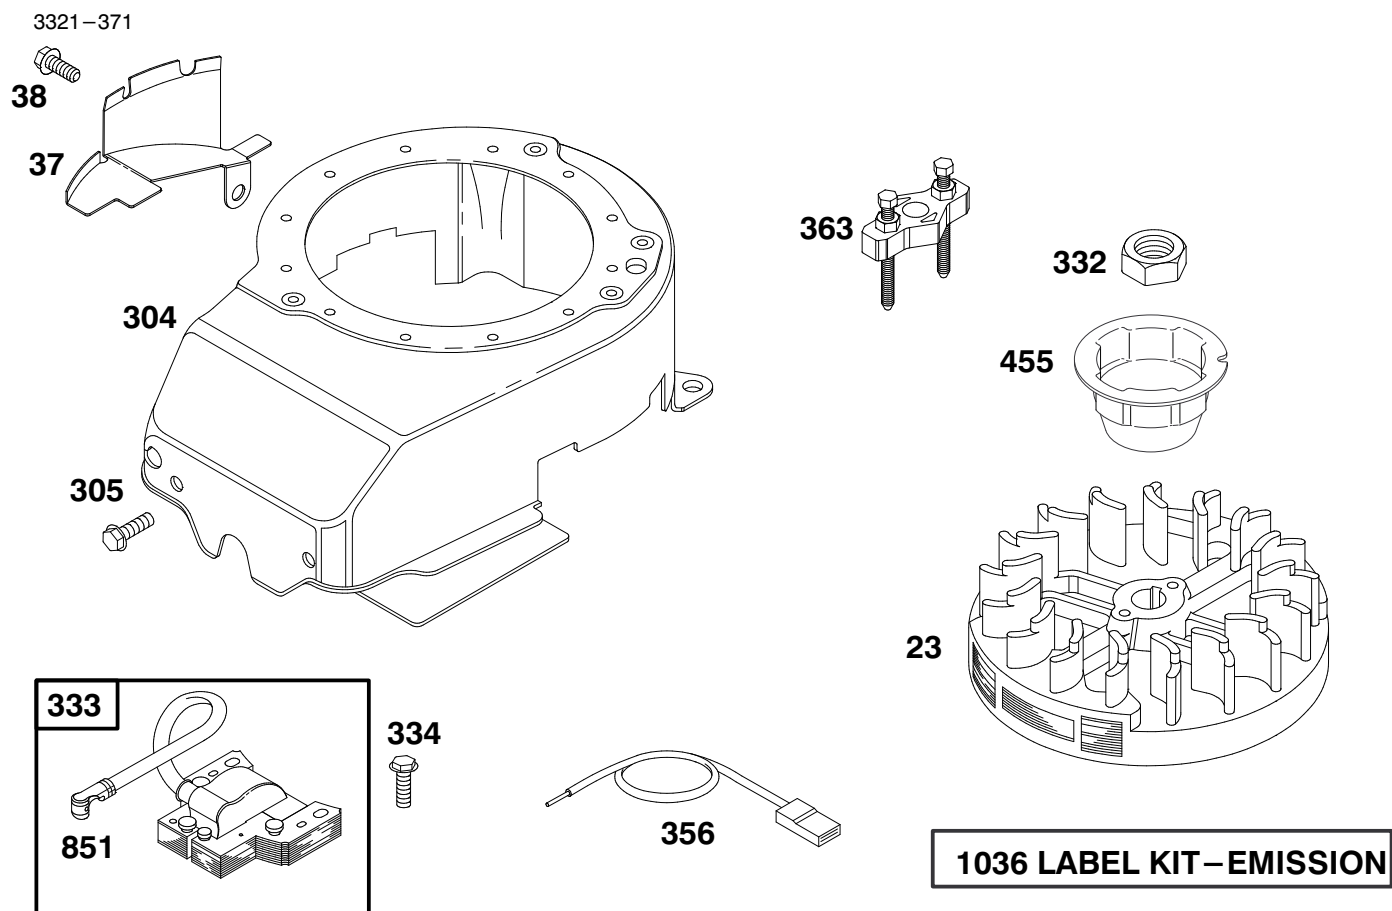


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H802-1758 – E1

Ref. No.	Part No.	Description	No. Used
23	492177	Flywheel	1
37	224511	Guard – Flywheel	1
38	94786	Screw – Hex.	1
304	493293	Housing – Blower	1
305	94744	Screw – Hex.	1
332	94877	Nut – Flywheel	1
333	802574	Armature – Magneto	1





Ref. No.	Part No.	Description	No. Used
334	94731	Screw – Hex.	1
356	497833	Wire – Stop	1
363	19069	Puller – Flywheel	1
455	225121	Cup – Flywheel	1
851	493880	Terminal – Cable	1
1036	499341	Label Kit – Emission	1

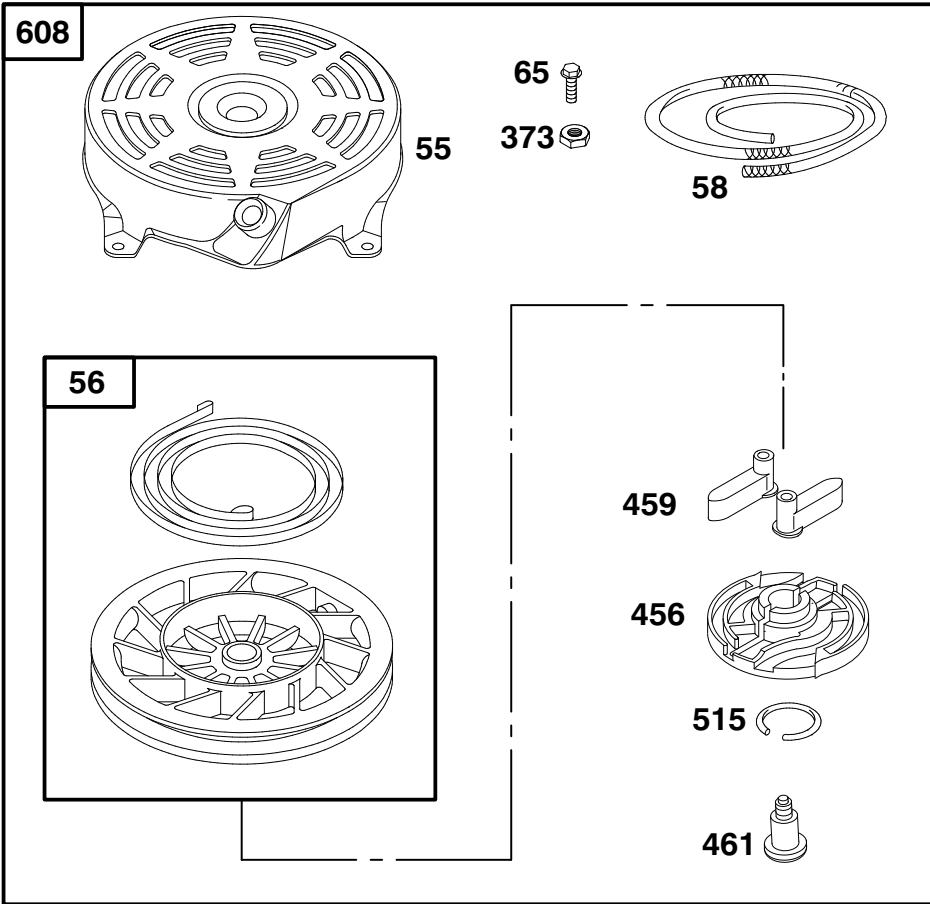

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H802-1758-E1

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
55	497440	Housing – Rewind Starter	1	373	94908	Nut – Hex.	1
56	498144	Pulley – Starter	1	456	281503	Retainer – Spring	1
58	280399	Rope – Starter	1	459	281505	Pawl – Ratchet	1
59	224467	Insert – Starter Grip	1	461	94943	Screw – Shoulder	1
60	493926	Grip – Starter Rope	1	515	263073	Spring – Friction	1
65	94904	Screw – Hex.	1	608	497680	Starter – Rewind	1

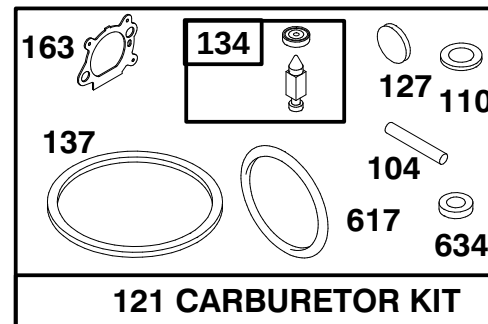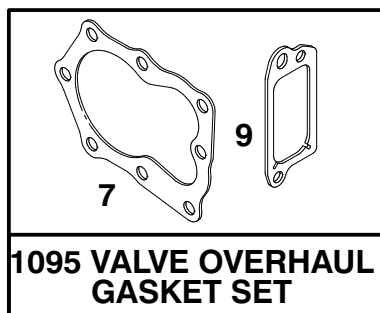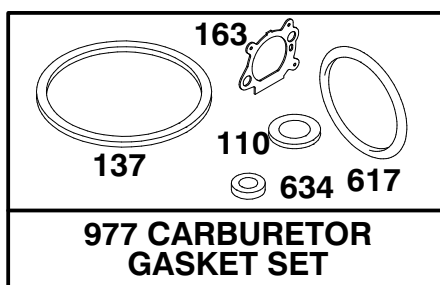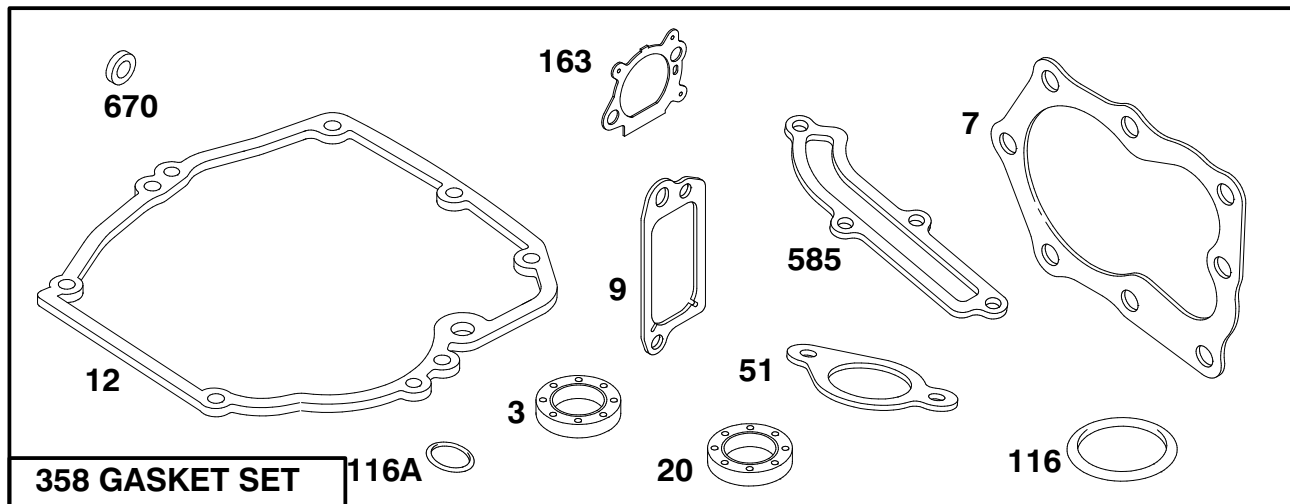

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H802-1758-E1

Ref. No.	Part No.	Description	No. Used
★3	299819	Seal – Oil	1
†★7	272916	Gasket – Cylinder Head	1
†★9	272481	Gasket – Breather	1
★9A	272238	Gasket – Breather	1
★12	272198	Gasket – Crankcase	1
★20	399781	Seal – Oil	1
★51	272199	Gasket – Intake	1
●104	231371	Pin – Float Hinge	1
●◆110		Washer – Bowl (Sold in Kit Only).	1
★116	280393	Seal – O Ring	1
★116A	280966	Seal – O Ring	1
121	498260	Carburetor Kit	1
●127		Plug – Welch (Sold in Kit Only).	1

Ref. No.	Part No.	Description	No. Used
●134	398188	Kit – Needle/Seat	1
●◆137		Gasket – Bowl (Sold in Kit Only).	1
●◆★163	272653	Gasket – Air Cleaner	1
358	496117	Gasket Set	1
●◆617	270344	Seal – Intake Manifold	1
●◆634		Washer – Foam (Sold in Kit Only).	1
★670	493823	Spacer – Bracket Note: Includes Two.	1
977	498261	Gasket Set – Carburetor	1
1095	498528	Gasket Set – Valve Overhaul	1

★Included in Gasket Set–Part No. 497316.

†Included in Valve Overhaul Gasket Set–Part No. 498528.

●Included in Carburetor Kit–Part No. 498260.

◆Included in Carburetor Gasket Set–Part No. 498261.

Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
603773	1	42	2	Nut—Lock
603773	6	21	2	Nut—Lock
5-2490	1	37	2	Bolt—Shoulder
17-9428	7	5	2	Screw
19-4050	4	2	2	Knob
25-7740	1	14	2	Knob—Arm
25-7740	6	10	2	Knob—Arm
26-0670	3	7	1	Bolt—Blade
27-6250	1	22:3	4	Bushing
27-6250	6	2:4	4	Bushing
29-9570	8	21	1	Bushing—Yoke
36-4780	8	9	1	Washer—Thrust
36-4791	8	4	2	Washer—Thrust
36-8070	6	17	1	"v" Belt
38-7820	8	31	1	Bearing—Ball
39-5770	1	40	1	Decal—Danger
40-1940	1	15	4	Washer
46-5520	7	11	1	Lever—Traction
48-2060	6	8:2	2	Bearing—Needle
49-2040	6	14	2	Screw—HH
49-2040	8	20	6	Screw—HH
52-7430	7	2	1	Bar—Control
55-3760	8	3	1	15 T Pinion
55-3770	8	11	1	Gear 49t 1st Gear
55-3780	8	2	1	Pinion 20t 2nd Gear
55-3790	8	12	1	Gear 44t 2nd Gear
55-3800	8	1	1	Pinion 25t 3rd Gear
55-3810	8	13	1	Gear 39t 3rd Gear
60-8710	8	18	1	Gearcase—Upper 3 Sp
60-8730	8	19	1	Cover—Gearcase
60-8750	8	5	2	Bushing
60-8770	8	8	1	Bushing—Output Shaft
60-8790	8	14	1	Sleeve—Gear
60-8800	8	17	1	Shaft—Intermediate
60-8810	8	22	1	Retainer—Shift—Fork
60-8840	8	27	2	Pulley—Half
60-8850	8	32	1	Bushing—Output
60-8870	8	24	1	Yoke—Shift
60-8890	8	28	1	Gear—Pinnion
62-6660	8	26	1	Spacer—Pulley
62-6673	6	18	1	ASM—Gearcase
62-7540	3	4	1	Retainer—Blade
62-7550	3	3	1	Pulley—Driver
62-7700	3	6	1	Blade—21"
65-2720	6	3	4	Ring—Retaining
65-4710	6	7	2	Ring—Friction
65-4720	6	26	2	Spring—Compression
65-4730	6	22	2	Washer—Thrust
65-4740	6	4	4	Washer—Thrust
65-4750	6	25	2	Gear—Pinion
65-4760	6	24	2	Washer
65-4770	8	23	1	Shaft—Output
65-5042	6	8	2	ASM—Pivot Arm
65-5190	6	15	1	Bracket—Belt Guide
65-5200	3	5	1	Shield—Bbc
65-5210	1	4	2	Screw—Tf
65-5220	1	16	2	Screw—Thrd Frmg
65-5220	6	20	2	Screw—Thrd Frmg
65-5250	8	36	1	Clip—Spring
65-5350	1	34	1	Shield—Trailing
65-5441	6	9	2	ASM—Spring Arm—Rear
65-5660	1	9	1	Panel—Screen

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
66-0020	1	12	1	Panel-Vertical
66-0030	3	2	1	Bracket-Cable Support
66-0330	7	4	2	Spacer-Support
66-0360	6	19	2	Cap-End
66-0541	1	18	2	ASM-Spring Arm
66-0560	1	21	2	Screw-Shoulder
66-0570	2	9	1	Guide-Belt
66-0580	1	20	2	Arm-Pivot
66-0620	1	33	1	Retainer-Belt
66-5351	7	12	1	Lever-Control
66-6040	6	6	1	Key-Locking RH
66-6050	6	5	1	Key-Rocking LH
70-9760	6	8:6	2	Bushing
71-0960	7	7	1	Support-Cable
71-7900	1	2	1	Cap-Bolt LH
71-7910	1	5	1	Cap-Bolt RH
71-8090	4	1	1	Mount-Handle LH
71-8100	4	11	1	Mount-Handle RH
71-8580	1	28	2	Spacer-Door
71-9470	5	3	1	Door-Bag
71-9480	5	2	1	Handle-Door
71-9640	1	19	1	Ramp-Discharge
71-9650	1	25	1	Access-Cover
71-9840	1	29	2	Spring-Door
71-9920	1	24	1	Cover-Top
71-9930	5	4	1	Wa-Frame
74-1660	6	27	2	Cover-Wheel
74-1670	6	28	2	Spacer-Cover
76-0760	8	38	2	Key-Shift
76-0770	8	34	1	Collar-Shift
76-0780	8	37	1	Sleeve-Shift Key
76-0920	6	13	1	Lever-Shift
76-1980	1	35	2	Hanger-Shield
76-2930	6	12	1	Retainer-Cable
82-8550	2	14	1	Shield-Muffler
92-1057	1	23	2	Bolt-Shoulder
92-1057	6	1	2	Bolt-Shoulder
92-2270	7	6	1	Screw-Handle
92-9665	4	4	5	Screw-Phil
93-0243	2	1	1	Shroud
93-0248	1	41	1	Decal-Warning
93-3772	7	13	1	Rope-Guide
93-6628	7	15	1	Cable-Brake
93-6632	4	10	1	Control-Speed
93-6634	7	8	1	Cable - Traction
93-8470	2	7	1	Screw-Clamp
95-1671	2	2	1	Decal-Engine
98-1503	4	6	1	Decal-Instruction
98-3206	2	3	1	Plate-Logo
98-3218	1	36	1	Decal-Danger
98-3223	1	13	1	Decal-Deck
98-3227	4	5	1	Decal-Panel
98-3229	4	7	1	Handle
98-3234	5	5	1	Bag-Grass
98-3239	4	9	1	Control-Throttle
98-7130	1	22	2	ASM-Wheel
98-7135	6	2	2	ASM-Wheel Sp
98-9221	1	11	1	Housing-53cm
98-9238	4	8	1	Panel-Control
99-1725	1	1	1	Door-Discharge
2210-249	2	8	1	Clamp-Casing
2210-316	2	12	1	Rope-Stop

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
237-153	6	23	2	O-Ring
302-56	6	8:4	2	Fitting-Grease
321-39	7	3	1	Screw-HH
321-51	7	14	1	Bolt-Hex
322-29	1	3	2	Screw-HH
3253-22	3	8	1	Washer-Lock
3256-1	7	9	1	Washer-Flat
3256-23	1	38	2	Washer-Flat
3256-24	1	32	1	Washer-Flat
3256-24	8	30	1	Washer-Flat
3272-5	6	16	1	Pin-Cotter
3290-378	2	13	1	Tie-Cable
3290-378	4	3	5	Tie-Cable
3296-5	8	29	1	Nut-Lock
3296-6	1	17	2	Nut-Lock
3296-73	7	10	3	Nut-Lock
3296-74	7	1	2	Nut-Flange
32121-120	8	15	1	Pin-Coil
32144-15	1	31	1	Tapping-Scr
32144-70	1	8	6	Screw-TAP
32144-70	2	11	2	Screw-TAP
32144-70	3	1	5	Screw-TAP
32144-70	6	11	5	Screw-TAP
32144-73	2	5	3	Screw-HWHTF
32144-102	2	10	3	Screw
32144-111	5	1	5	Screw - PPH
32144-121	2	4	2	Screw

21