




MODEL NO. 30386-80001 & UP

PARTS CATALOG


ROTARY BRUSH FOR GROUNDMASTER® 3000

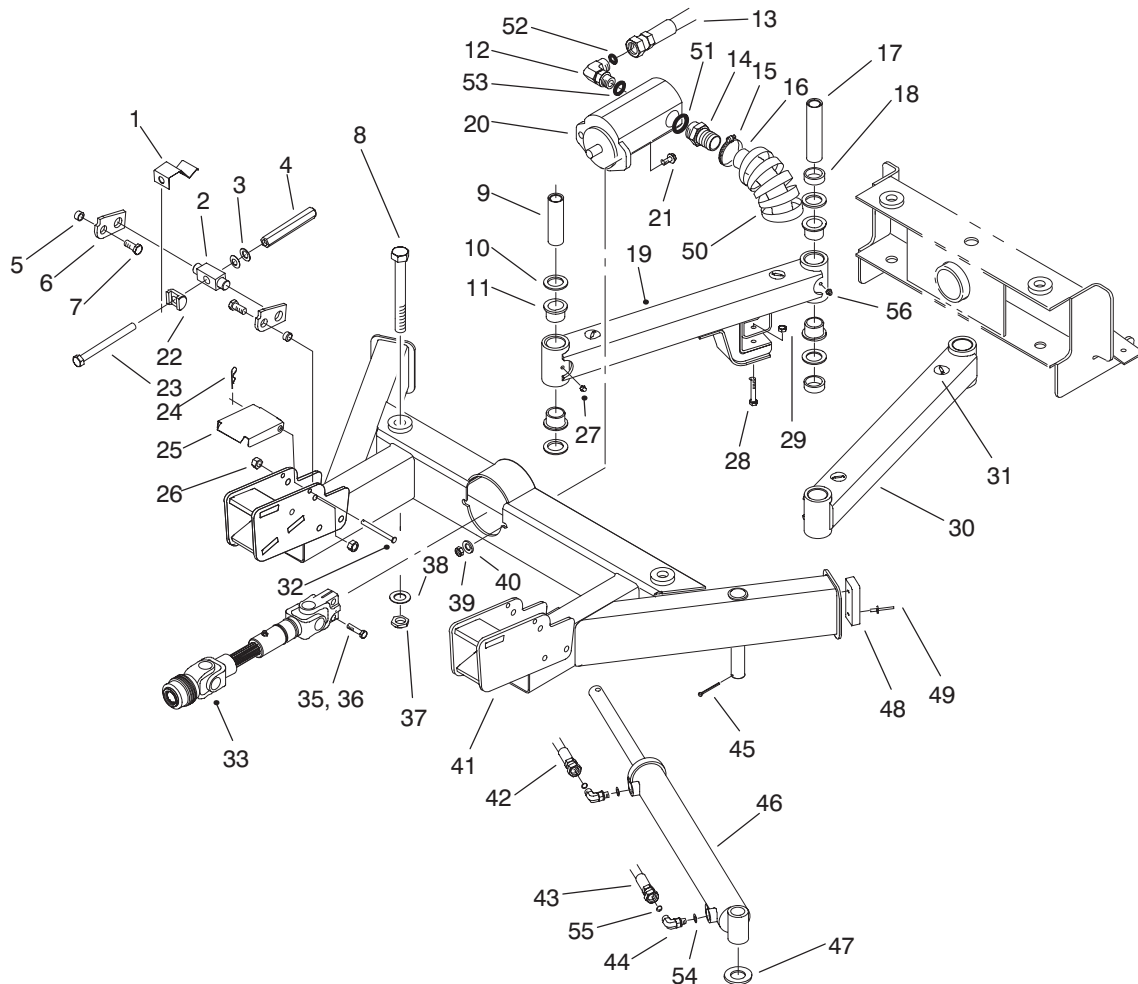

T-3023

ARM & MOUNT ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	93-4818	Spring-Lever	2	17	94-7377	Spacer-Bushing	2
2	93-4677	Hub-Release	2	18	63-0070	Spacer	4
3	3290-413	Washer-Belleville	4	19	95-6102	Asm-Arm, LH (Incl. Ref. #11, 27, 31 & 56)	1
4	93-4678	Lever-Release	2	20	94-7376	Pump-Hydraulic	1
5	93-4618	Spacer-Pivot	4	21	33105-030	Screw-HHF	2
6	93-4675	Plate-Release	4	22	93-4676	Shaft-Latch	2
7	33115-025	Screw-HH	2	23	3213-24	Screw-HH	2
8	3216-14	Screw-HH	2	24	3290-467	Pin-Cotter, Hair	2
9	94-7394	Spacer-Bushing	2	25	93-4819	Cover-Latch	2
10	3-6781	Washer-Thrust	8	26	33025-00	Nut-Lock	4
11	28-9290	Bushing	8	27	302-11	Fitting-Grease 45°	2
12	340-117	Elbow	1	28	33113-060	Screw-HH	1
13	95-5115	Asm-Hose	1	29	33023-00	Nut-Lock	1
14	95-5620	Fitting (Incl. Ref. #51)	1	30	94-7383	Asm-Arm, RH (Incl. Ref. #11, 27, 31 & 56)	1
15	2412-3	Clamp-Hose	1	31	58-6520	Decal-Grease	4
16	95-5118	Hose	1				

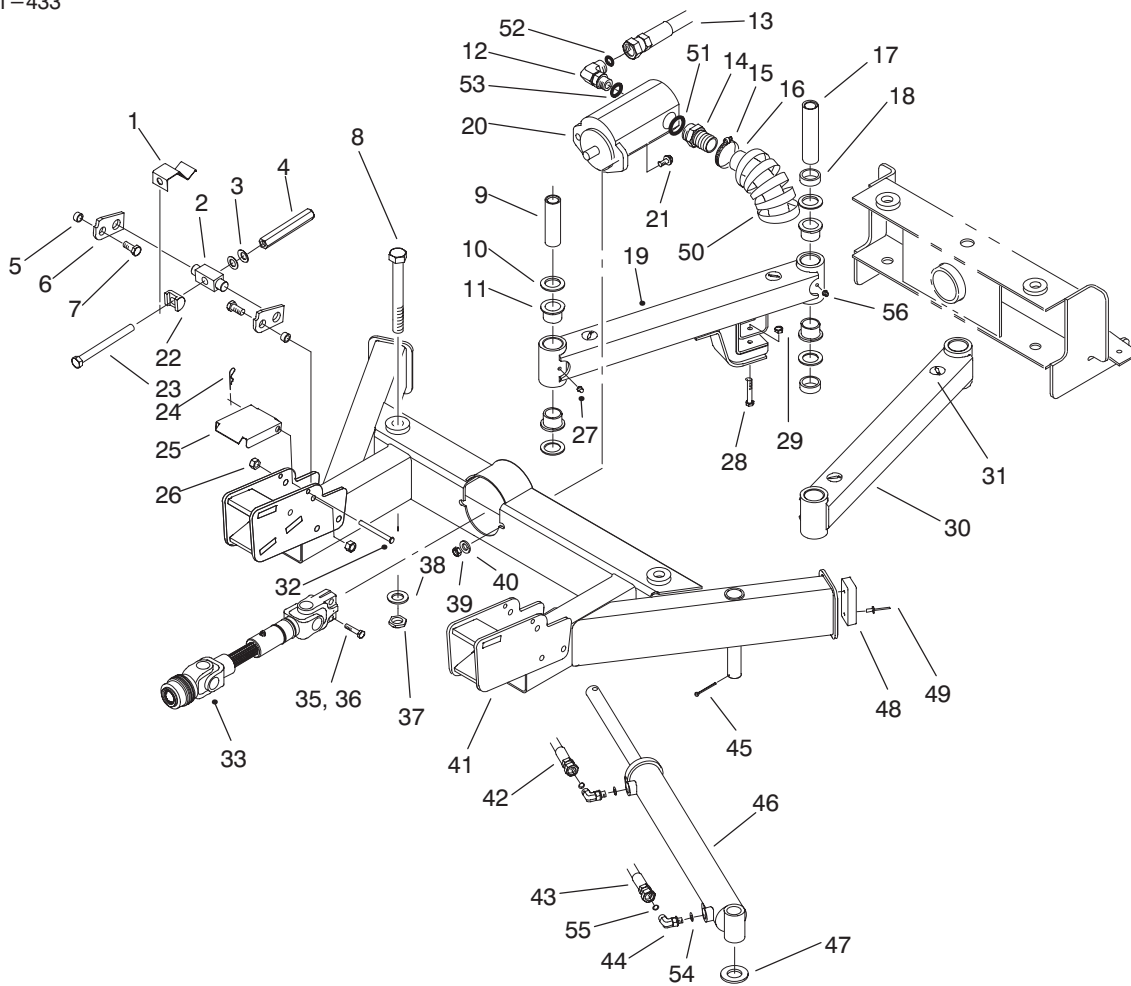


T-3023

ARM & MOUNT ASM (Continued)

Ref. No.	Part No.	Description	No. Used
32	283-88	Pin-Clevis	2
33	94-7375	Shaft-Drive	1
34	322-7	Screw-HH	2
36	32153-3	Nut-Lock	2
37	32146-20	Nut-Jam	2
38	3256-28	Washer-Flat	2
39	33025-00	Nut-Lock	2
40	33095-00	Washer-Flat	2
41	94-7390	Asm-Mount	1
42	95-7777	Asm-Hose	1
43	95-7778	Asm-Hose	1
44	95-7889	Fitting (Incl. Ref. #54 & 55)	2

Ref. No.	Part No.	Description	No. Used
45	3272-20	Pin-Cotter	1
46	95-7775	Cylinder-Hydraulic	1
47	3256-62	Washer-Flat	1
48	86-5350	Bumper-Rubber	2
49	3269-11	Rivet	4
50	95-7001	Hose-Wrap	1
51	237-146	O-Ring	1
52	237-65	O-Ring	2
53	237-80	O-Ring	2
54	237-78	O-Ring	2
55	237-21	O-Ring	2
56	302-5	Fitting-Grease	2

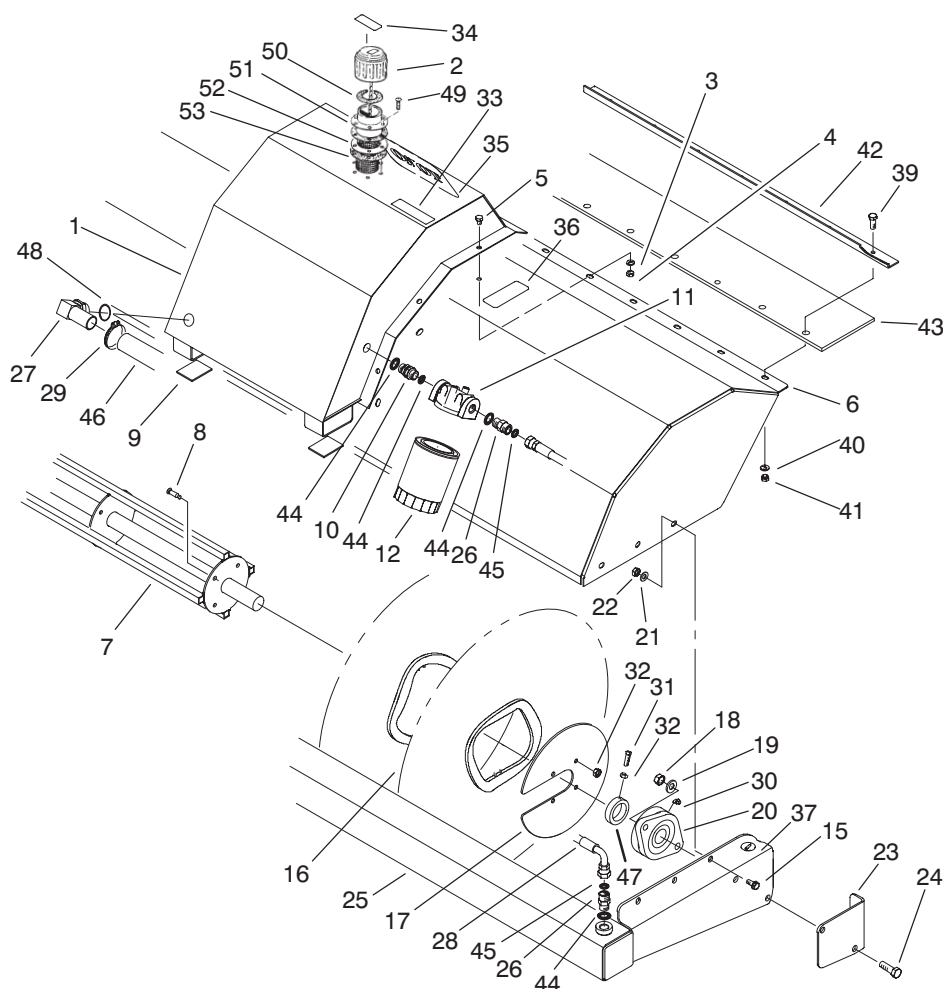


T-3024

FRAME & AXLE ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	95-6105	Asm-Tank, Hydraulic (Incl. Ref. #33-35)	1	27	56-9530	Fitting-90° Elbow	1
2	353-962	Asm-Cap & Chain	1	28	95-5119	Asm-Hose	1
3	33024-00	Nut-Lock	8	29	2412-3	Clamp-Hose	1
4	33094-00	Washer-Flat	8	30	302-40	Fitting-Grease	2
5	33104-016	Screw-HHF	8	31	3242-14	Screw-Set, Square Head	2
6	94-7481	Asm-Cover (Incl. Ref. #33 & 36)	1	32	3219-2	Nut-Hex.	6
7	94-7364	Asm-Axle	1	33	68-7390	Decal-Warning	1
8	95-3210	Stud-Wheel	4	34	85-4730	Decal-Hydraulic Oil Only	1
9	95-2899	Pad-Rubber	2	35	67-7320	Decal-Toro	1
10	95-3209	Fitting-Straight (Incl. Ref. # 44 & 45)	1	36	54-0910	Decal-Warning	2
11	86-9080	Head-Filter	1	37	58-6520	Decal-Grease	2
12	54-0110	Element-Filter, Oil	1	39	32104-23	Screw-HH	14
15	33105-020	Screw-HHF	6	40	3256-23	Washer-Flat	14
16	94-7372	Element-Brush, Plastic	32	41	3296-29	Nut-Lock	14
17	94-7370	Plate-Axle	1	42	95-7787	Strap	2
18	33026-00	Nut-Lock	2	43	95-7788	Deflector	1
19	33096-00	Washer-Flat	2	44	237-79	O-Ring	3
20	94-7484	Bearing-Axle (Incl. Ref. #31, 32 & 47)	2	45	237-30	O-Ring	3
21	33095-00	Washer-Flat	6	46	95-5118	Hose	1
22	33025-00	Nut-Lock	6	47		Collar-Bearing (Incl. Ref. #31 & 32)	2
23	95-3206	Guard-Right	1	48	237-117	O-Ring	1
24	33106-040	Screw-HHF	2	49	32144-39	Screw	6
25	95-6100	Asm-Frame	1	50	76-1720	Gasket-Cap, Filler	1
26	340-4	Fitting (Incl. Ref. #44 & 45)	2	51	353-961	Bayonet Flange	1
				52	62-2610	Strainer	1
				53	353-963	Gasket	1
				*	95-7004	Asm-Cap, Filler (Incl. Ref. #2 & 50-53)	1

* Not Illustrated

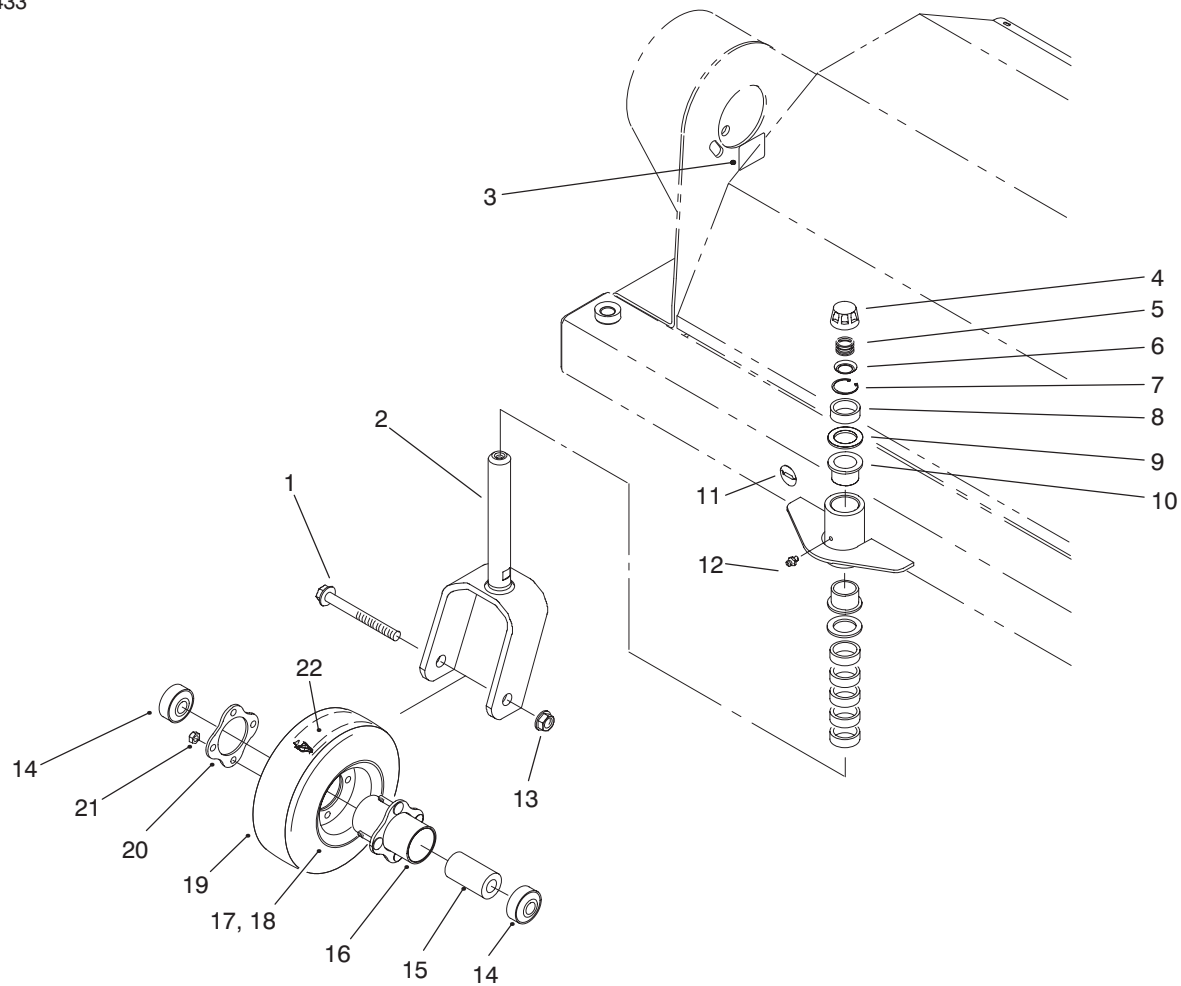


T-3027

CASTOR WHEEL ASM

Ref. No.	Part No.	Description	No. Used
1	327-24	Screw-HH	2
2	98-7069	Fork-Castor	2
3	88-8950	Decal-Warning, Belt	1
4	92-8861	Cap-Height-of-Cut	2
5	92-5584	Spring-Compression	2
6	92-5583	Washer-Cap	2
7	92-5581	Ring-Retaining	2
8	63-0070	Spacer	12
9	3-6781	Washer-Thrust	4
10	28-9290	Bushing	4
11	58-6520	Decal-Grease	2
12	302-5	Fitting-Grease	2
13	3296-53	Nut-Lock	2

Ref. No.	Part No.	Description	No. Used
14	93-4237	Bearing	4
15	93-4241	Spacer-Bearing	2
16	93-5980	Hub	2
17	93-4239	Rim-Wheel	2
18	95-2741	Rim-Wheel	2
19	93-9939	Tire	2
20	93-4242	Plate	2
21	32128-16	Nut-HHF	8
22	68-8950	Tube-w/Valve	2
*	93-9938	Asm-Wheel, Pneumatic (Incl. Ref. #14-22)	2
*	95-6100	Asm-Frame (Incl. Ref. #3 & 10-12)	1


* Not Illustrated

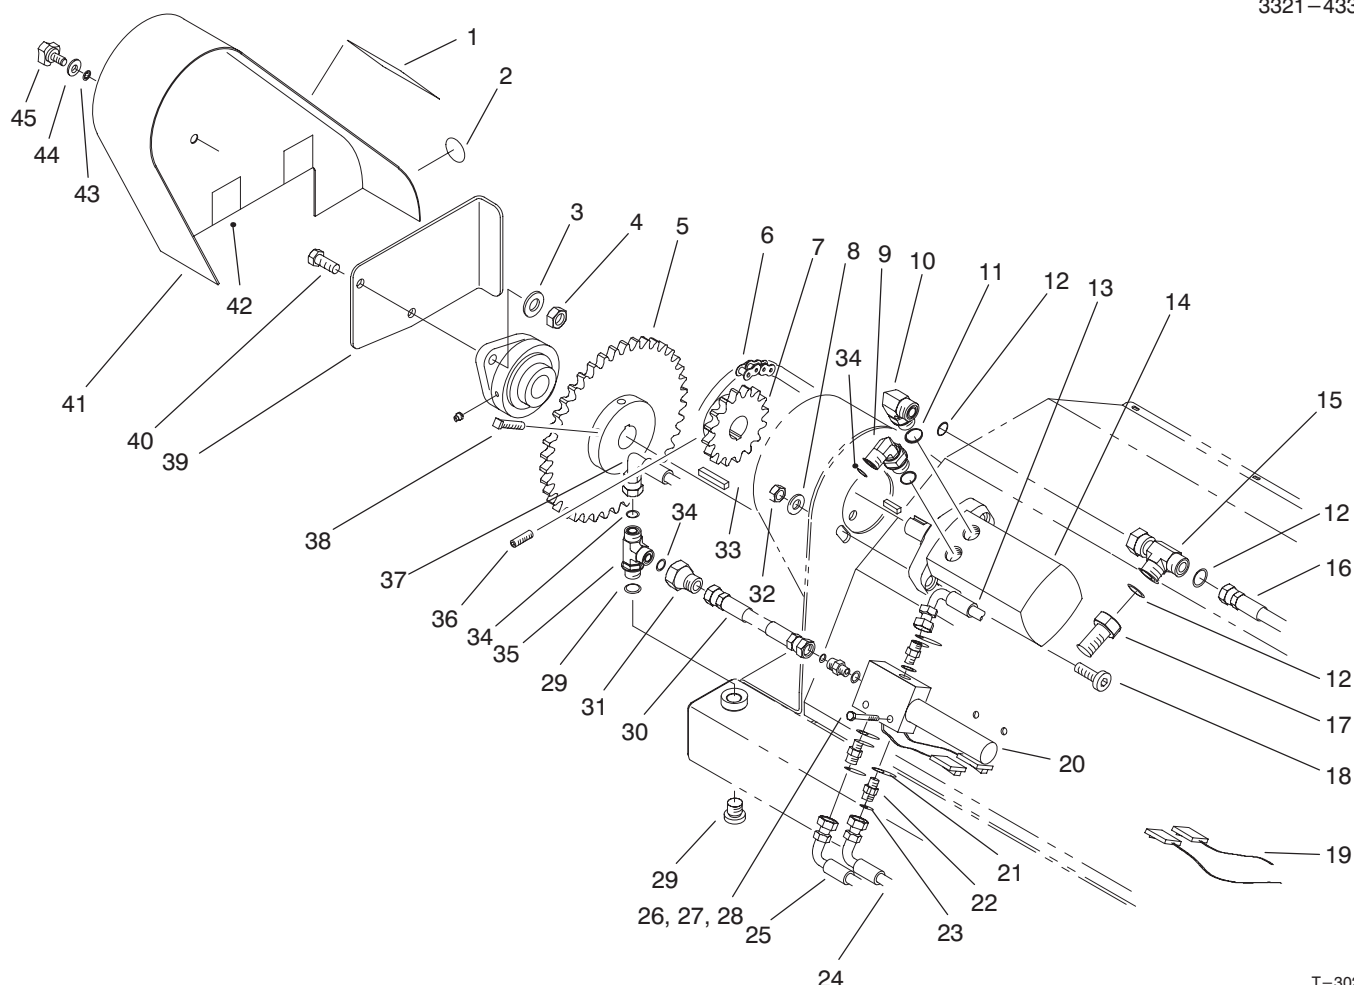

T-3025

SPROCKET & MOTOR ASM


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	95-5919	Decal-Danger	1	23	237-21	O-Ring	4
2	58-6520	Decal-Grease	1	24	95-7778	Asm-Hose	1
3	33096-00	Washer-Flat	2	25	95-7777	Asm-Hose	1
4	33026-00	Nut-Lock	2	26	33114-045	Screw-HH	2
5	94-7352	Sprocket-40 Teeth (Incl. Ref. #38)	1	27	33094-00	Washer-Flat	2
6	95-7771	Chain-Roller	1	28	33024-00	Nut-Lock	2
7	94-7353	Sprocket-16 Teeth (Incl. Ref. #36)	1	29	353-988	Plug-w/O-Ring Seal	1
8	3256-26	Washer-Flat	2	30	95-7779	Asm-Hose	1
9	340-105	Fitting-Elbow (Incl. Ref. #11 & 34)	1	31	95-7776	Fitting-Hydraulic	1
10	340-17	Fitting-Elbow (Incl. Ref. #11 & 12)	1	32	32146-13	Nut-Lock	2
11	237-80	O-Ring	2	33	95-7023	Key-Square	1
12	237-65	O-Ring	3	34	237-30	O-Ring	3
13	95-7780	Asm-Hose	1	35	98-7067	Fitting-Hydraulic	1
14	94-7374	Motor-Hydraulic	1	36		Screw-Set	2
15	340-147	Fitting-Hydraulic	1	37	95-5112	Asm-Hose	1
16	95-5115	Asm-Hose	1	38	3243-9	Screw-Set, Square Head	2
17	98-7067	Fitting-Hydraulic	1	39	95-3205	Guard-Left	1
18	3274-4	Screw-HSH	2	40	33106-040	Screw-HH	2
19	95-3290	Harness-Wire	1	41	95-6106	Asm-Cover (Incl. Ref. #1)	1
20	95-7774	Block-Valve	1	42	95-7769	Foam	2
21	237-78	O-Ring	4	43	32151-72	Ring-Retaining	1
22	340-2	Adapter (Incl. Ref. #21 & 23)	2	44	3256-3	Washer-Flat	1
				45	77-3620	Retainer-Cover	1

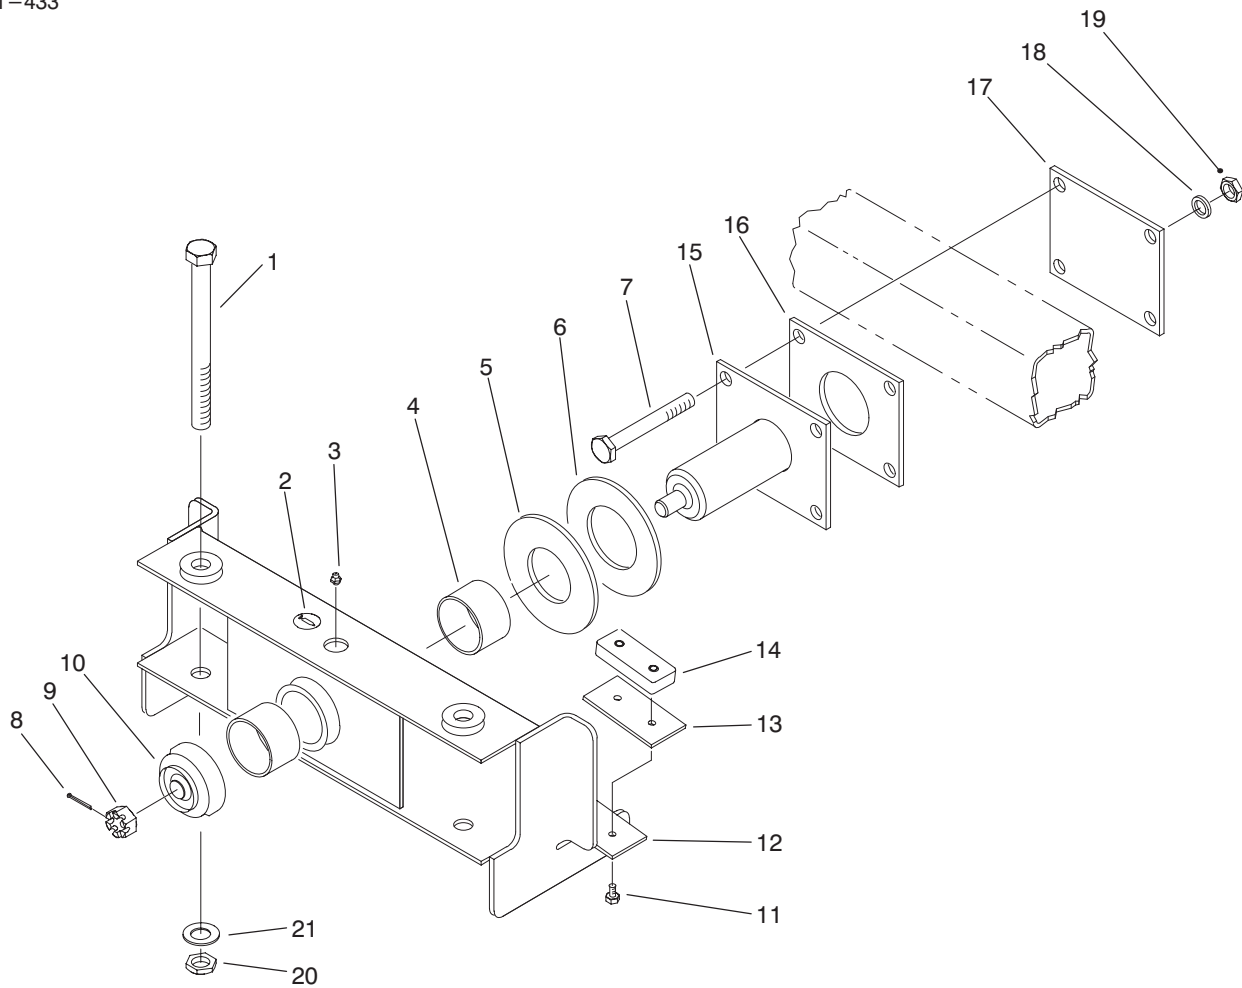

T-3026

PIVOT PIN & MOUNT ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3216-19	Screw-HH	2	13	95-2897	Mount-Bumper	2
2	58-6520	Decal-Grease	1	14	86-5350	Bumper-Rubber	2
4	95-5127	Bushing	2	15	95-2888	Pin-Pivot	1
5	95-3204	Washer-Pivot	1	16	95-2896	Plate-Spacer	1
6	95-3200	Washer-Pivot	1	17	95-2884	Plate-Back	1
7	32118-140	Screw-HH	4	18	33098-00	Washer-Flat	4
8	3272-42	Pin-Cotter	1	19	33028-00	Nut-Lock	4
9	32136-5	Nut-Hex. Slotted	1	20	32146-20	Nut-Jam	2
10	95-3202	Cap-Pivot	1	21	3256-28	Washer-Flat	2
11	321-4	Screw-HH	4				
12	95-6104	Asm-Mount-Top (Incl. Ref. #2-4)	1				

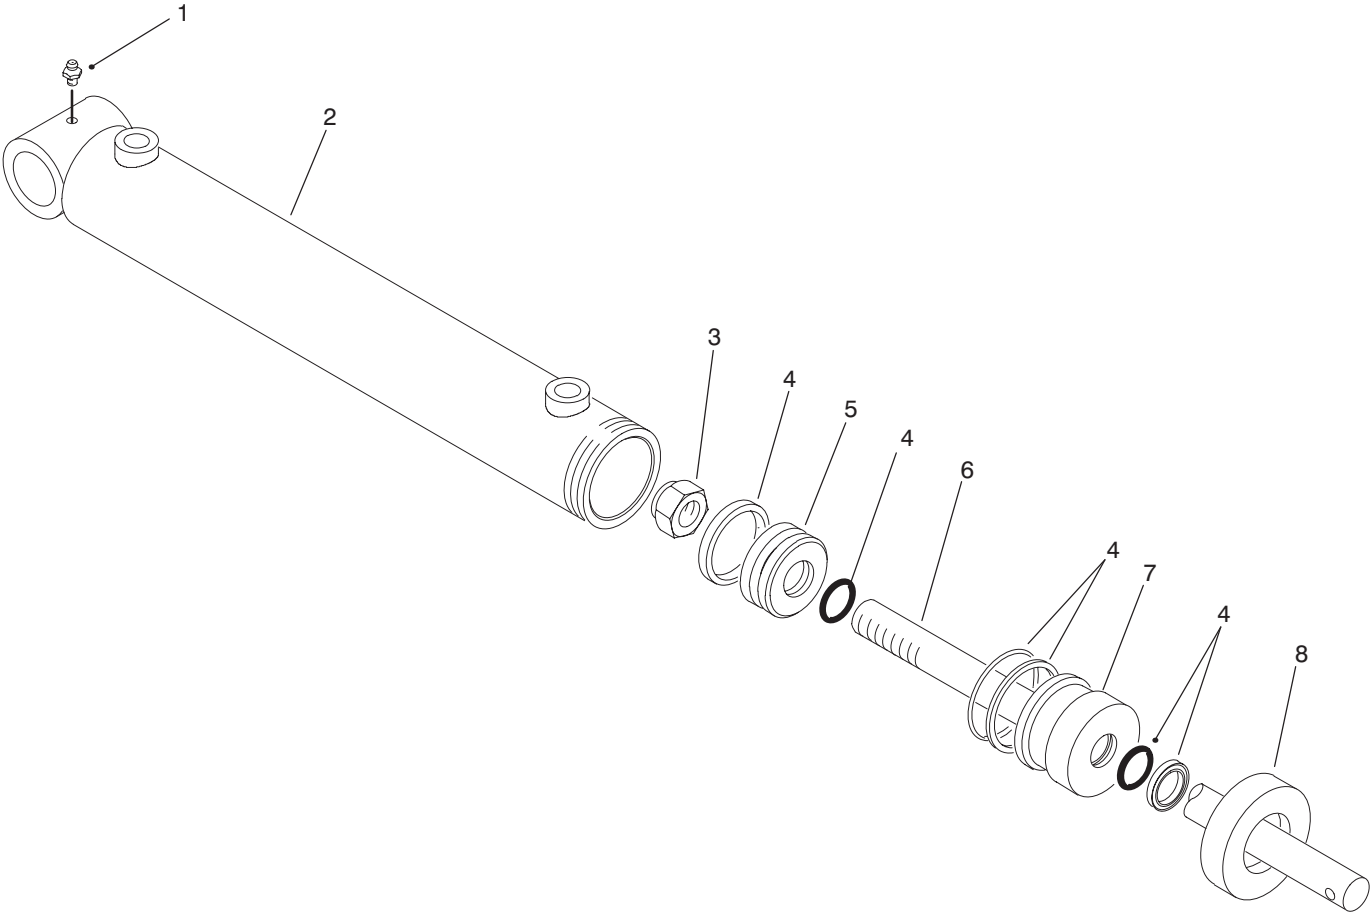


T-3028

HYDRAULIC CYLINDER NO. 95–7775 ASM

Ref. No.	Part No.	Description	No. Used
1	302–5	Fitting–Grease	1
2	95–6145	Barrel	1
3	60–9760	Nut–Lock	1
4	95–6149	Kit–Seal Repair	1

Ref. No.	Part No.	Description	No. Used
5	95–6146	Piston	1
6	95–6148	Shaft	1
7	95–6147	Head	1
8		Collar	1

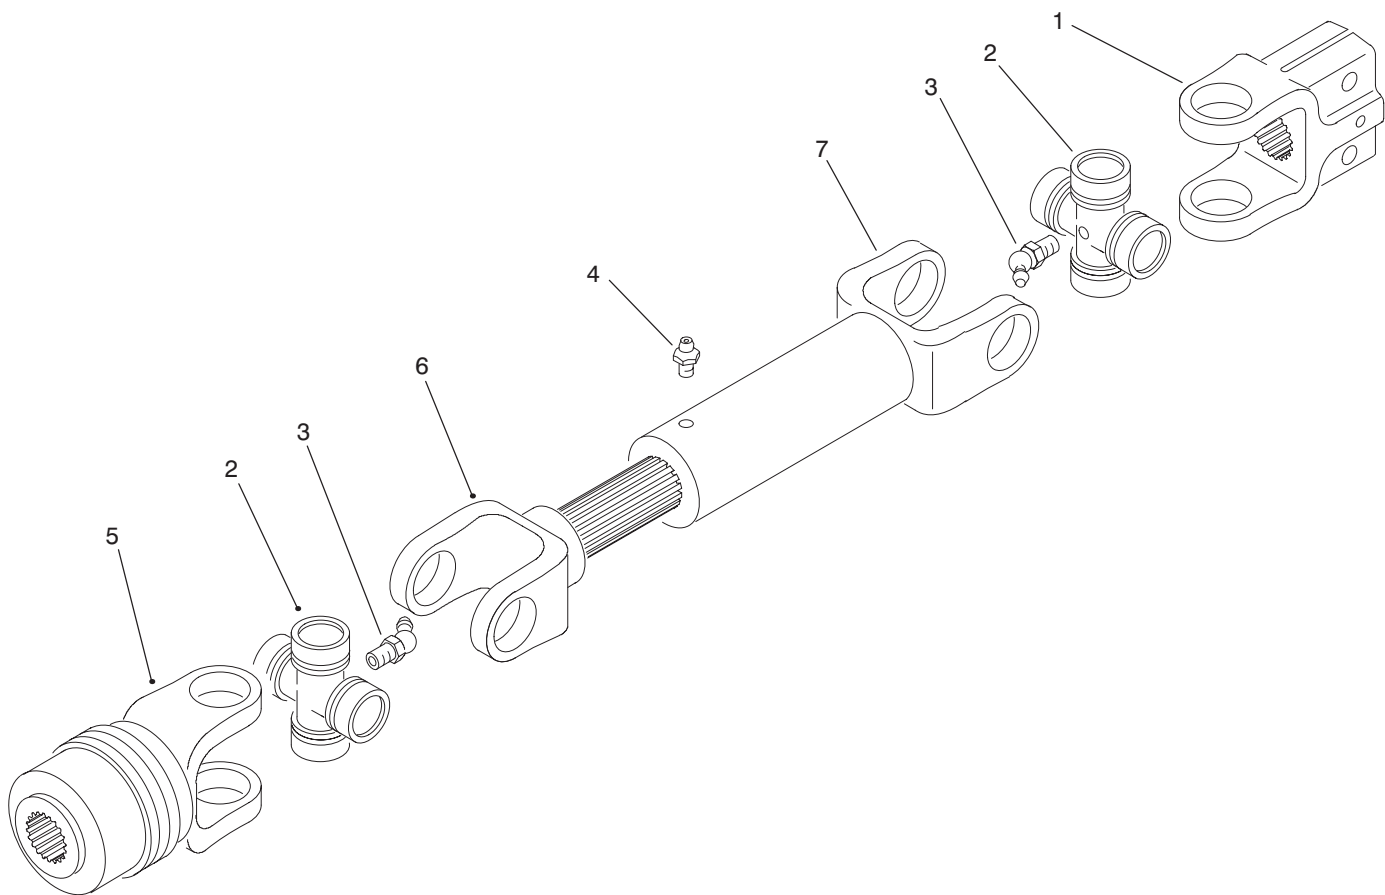


T-2615

DRIVE SHAFT NO. 94-7375 ASM

Ref. No.	Part No.	Description	No. Used
1	94-7450	Yoke-End	1
2	54-9180	Kit-U Joint	2
3	62-3820	Fitting-Grease	2
4	302-58	Fitting-Grease	1

Ref. No.	Part No.	Description	No. Used
5	93-4633	Yoke-Auto-Lok	1
6	94-7378	Shaft-Slip Yoke	1
7	94-7379	Tube-Slip Yoke	1

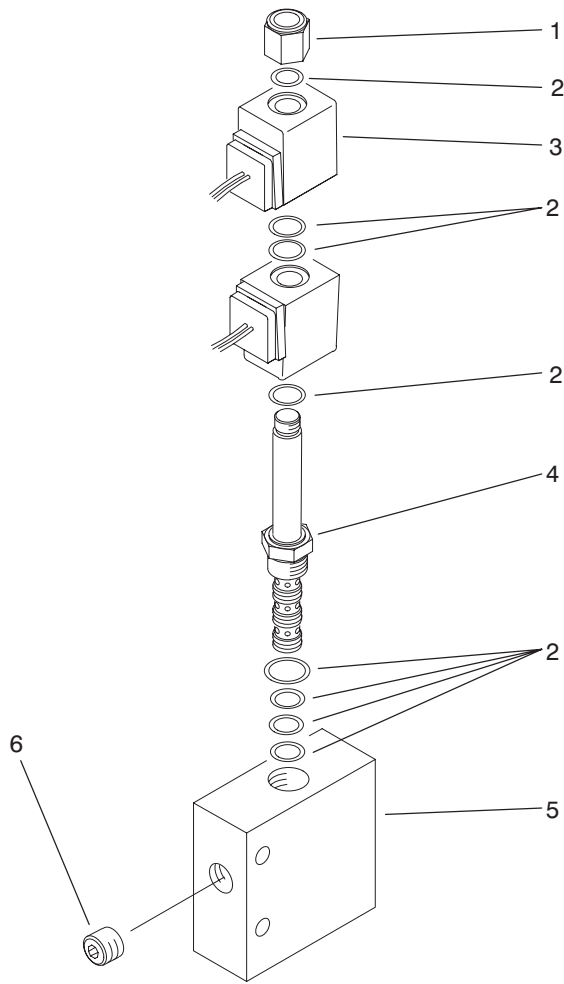


T-3029

VALVE BLOCK ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3219-10	Nut-Hex.	1	5		Block	1
2	95-6144	Kit-Seal	1	6	95-7888	Plug-Orifice	1
3	95-6142	Coil	2	*	95-7774	Asm-Block, Valve	1
4	95-6143	Valve	1			(Incl. Ref. #1-60	

* Not Illustrated

3321-433

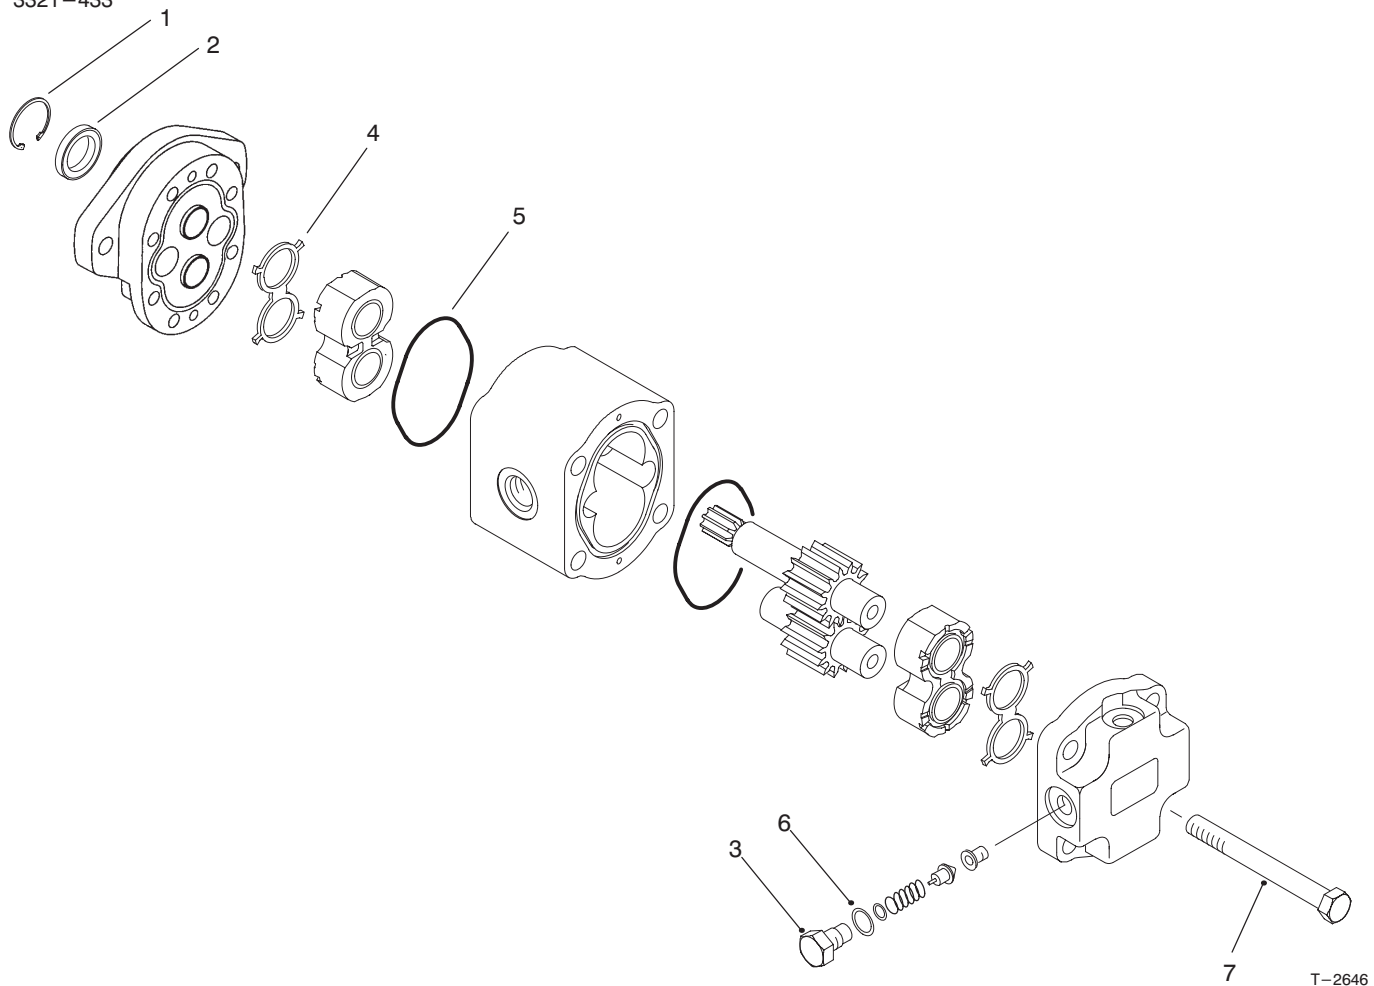


T-2646

HYDRAULIC PUMP NO. 94-7376 ASM

Ref. No.	Part No.	Description	No. Used
1		Ring—Retaining	1
2	95-5938	Seal—Shaft	1
3	95-5937	Valve—Relief	1
4		E—Ring	2
5		O—Ring	2

Ref. No.	Part No.	Description	No. Used
6	96-1289	Kit—Seal, Relief Valve	1
7	95-5940	Bolt	4
*	95-5939	Kit—Seal, Pump (Incl. Ref. #1, 2 & 4-6)	1

* Not Illustrated

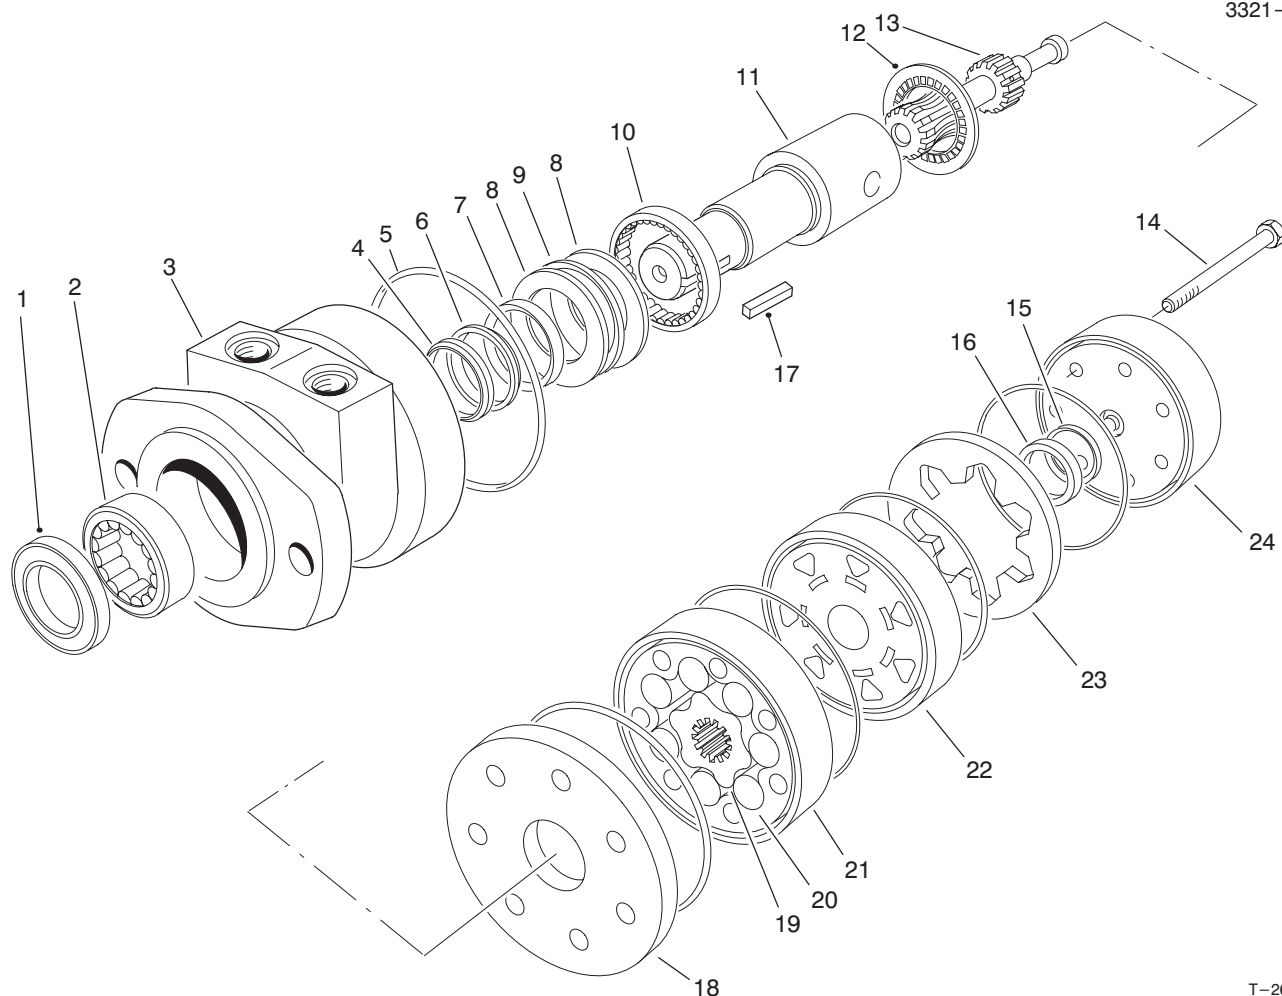


T-2645-2

HYDRAULIC MOTOR NO. 94-7374 ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1		Seal – Dirt & Water	1	17	11-5790	Key – Square	1
2		Bearing	1	18	76-0870	Plate – Wear	1
3		Housing	1	19		Rotor	1
4		Washer – Backup	1	20		Vane	7
5		Seal – Rings	5	21		Stator	1
6		Washer – Backup	1	22	95-6139	Manifold	1
7		Seal – Inner	1	23		Ring – Commutator	1
8		Washer – Thrust	2	24	76-0940	Assembly – Cover, End	1
9		Bearing – Thrust	1	*	76-0950	Rotor Set (Incl. Ref. #19-21)	1
10		Bearing	1	*	95-6138	Assembly – Commutator (Incl. Ref. #15, 16 & 23)	1
11	95-6137	Shaft – Coupling	1	*	76-0800	Kit – Seal (Incl. Ref. #1, 4-7 & 15)	1
12	76-0850	Bearing – Thrust	1	*	95-6136	Assembly – Housing (Incl. Ref. #2, 3 & 8-10)	1
13	76-0930	Link – Drive	7				
14	76-1030	Screw – Cap, Hex. Hd.	1				
15		Seal – Commutator	1				
16		Commutator	1				

* Not Illustrated

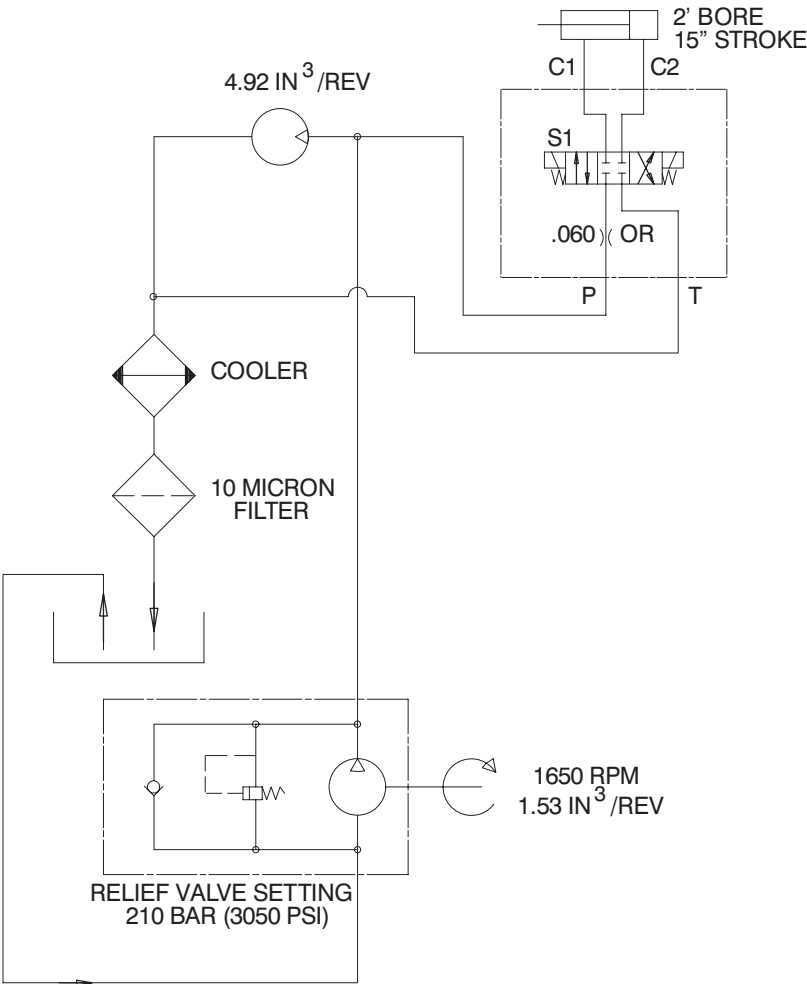

T-2616

HYDRAULIC SCHEMATIC

Ref. No.	Part No.	Description	No. Used

Ref. No.	Part No.	Description	No. Used

TORO PART NUMBER INDEX

3321-433

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3-6781	Washer-Thrust	4 9 4	94-7481	Asm-Cover	3 6 1
3-6781	Washer-Thrust	1 10 8	94-7484	Bearing-Axle	3 20 2
11-5790	Key-Square	11 17 1	95-2741	Rim-Wheel	4 18 2
28-9290	Bushing	4 10 4	95-2884	Plate-Back	6 17 1
28-9290	Bushing	1 11 8	95-2888	Pin-Pivot	6 15 1
54-0110	Element-Filter, Oil	3 12 1	95-2896	Plate-Spacer	6 16 1
54-0910	Decal-Warning	3 36 2	95-2897	Mount-Bumper	6 13 2
54-9180	Kit-U-Joint	8 2 2	95-2899	Pad-Rubber	3 9 2
56-9530	Fitting-90° Elbow	3 27 1	95-3200	Washer-Pivot	6 6 1
58-6520	Decal-Grease	5 2 1	95-3202	Cap-Pivot	6 10 1
58-6520	Decal-Grease	6 2 1	95-3204	Washer-Pivot	6 5 1
58-6520	Decal-Grease	4 11 2	95-3205	Guard-Left	5 39 1
58-6520	Decal-Grease	1 31 4	95-3206	Guard-Right	3 23 1
58-6520	Decal-Grease	3 37 2	95-3209	Fitting-Straight	3 10 1
60-9760	Nut-Lock	7 3 1	95-3210	Stud-Wheel	3 8 4
62-2610	Strainer	3 52 1	95-3290	Harness-Wire	5 19 1
62-3820	Fitting-Grease	8 3 2	95-5112	Asm-Hose	5 37 1
63-0070	Spacer	4 8 12	95-5115	Asm-Hose	1 13 1
63-0070	Spacer	1 18 4	95-5115	Asm-Hose	5 16 1
67-7320	Decal-Toro	3 35 1	95-5118	Hose	1 16 1
68-7390	Decal-Warning	3 33 1	95-5118	Hose	3 46 1
68-8950	Tube-w/Valve	4 22 2	95-5119	Asm-Hose	3 28 1
76-0800	Kit-Seal	11 * 1	95-5127	Bushing	6 4 2
76-0850	Bearing-Thrust	11 12 1	95-5620	Fitting	1 14 1
76-0870	Plate-Wear	11 18 1	95-5919	Decal-Danger	5 1 1
76-0930	Link-Drive	11 13 7	95-5937	Valve-Relief	10 3 1
76-0940	Assembly-Cover, End	11 24 1	95-5938	Seal-Shaft	10 2 1
76-0950	Rotor Set	11 * 1	95-5939	Kit-Seal, Pump	10 * 1
76-1030	Screw-Cap, Hex. Hd.	11 14 1	95-5940	Bolt	10 7 4
76-1720	Gasket-Cap, Filler	3 50 1	95-6100	Asm-Frame	4 * 1
77-3620	Retainer-Cover	5 45 1	95-6100	Asm-Frame	3 25 1
85-4730	Decal-Hydraulic Oil Only	3 34 1	95-6102	Asm-Arm, LH	1 19 1
86-5350	Bumper-Rubber	6 14 2	95-6104	Asm-Mount-Top	6 12 1
86-5350	Bumper-Rubber	2 48 2	95-6105	Asm-Tank, Hydraulic	3 1 1
86-9080	Head-Filter	3 11 1	95-6106	Asm-Cover	5 41 1
88-8950	Decal-Warning, Belt	4 3 1	95-6136	Assembly-Housing	11 * 1
92-5581	Ring-Retaining	4 7 2	95-6137	Shaft-Coupling	11 11 1
92-5583	Washer-Cap	4 6 2	95-6138	Assembly-Commutator	11 * 1
92-5584	Spring-Compression	4 5 2	95-6139	Manifold	11 22 1
92-8861	Cap-Height-of-Cut	4 4 2	95-6142	Coil	9 3 2
93-4237	Bearing	4 14 4	95-6143	Valve	9 4 1
93-4239	Rim-Wheel	4 17 2	95-6144	Kit-Seal	9 2 1
93-4241	Spacer-Bearing	4 15 2	95-6145	Barrel	7 2 1
93-4242	Plate	4 20 2	95-6146	Piston	7 5 1
93-4618	Spacer-Pivot	1 5 4	95-6147	Head	7 7 1
93-4633	Yoke-Auto-Lok	8 5 1	95-6148	Shaft	7 6 1
93-4675	Plate-Release	1 6 4	95-6149	Kit-Seal Repair	7 4 1
93-4676	Shaft-Latch	1 22 2	95-7001	Hose-Wrap	2 50 1
93-4677	Hub-Release	1 2 2	95-7004	Asm-Cap, Filler	3 * 1
93-4678	Lever-Release	1 4 2	95-7023	Key-Square	5 33 1
93-4818	Spring-Lever	1 1 2	95-7769	Foam	5 42 2
93-4819	Cover-Latch	1 25 2	95-7771	Chain-Roller	5 6 1
93-5980	Hub	4 16 2	95-7774	Asm-Block, Valve	9 * 1
93-9938	Asm-Wheel, Pneumatic	4 * 2	95-7774	Block-Valve	5 20 1
93-9939	Tire	4 19 2	95-7775	Cylinder-Hydraulic	2 46 1
94-7352	Sprocket-40 Teeth	5 5 1	95-7776	Fitting-Hydraulic	5 31 1
94-7353	Sprocket-16 Teeth	5 7 1	95-7777	Asm-Hose	5 25 1
94-7364	Asm-Axle	3 7 1	95-7777	Asm-Hose	2 42 1
94-7370	Plate-Axle	3 17 1	95-7778	Asm-Hose	5 24 1
94-7372	Element-Brush, Plastic	3 16 32	95-7778	Asm-Hose	2 43 1
94-7374	Motor-Hydraulic	5 14 1	95-7779	Asm-Hose	5 30 1
94-7375	Shaft-Drive	2 33 1	95-7780	Asm-Hose	5 13 1
94-7376	Pump-Hydraulic	1 20 1	95-7787	Strap	3 42 2
94-7377	Spacer-Bushing	1 17 2	95-7788	Deflector	3 43 1
94-7378	Shaft-Slip Yoke	8 6 1	95-7888	Plug-Orifice	9 6 1
94-7379	Tube-Slip Yoke	8 7 1	95-7889	Fitting	2 44 2
94-7383	Asm-Arm, RH	1 30 1	96-1289	Kit-Seal, Relief Valve	10 6 1
94-7390	Asm-Mount	2 41 1	98-7067	Fitting-Hydraulic	5 17 1
94-7394	Spacer-Bushing	1 9 2	98-7067	Fitting-Hydraulic	5 35 1
94-7450	Yoke-End	8 1 1	98-7069	Fork-Castor	4 2 2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
237-21	O-Ring	5 23 4	3296-53	Nut-Lock	4 13 2
237-21	O-Ring	2 55 2	32104-23	Screw-HH	3 39 14
237-30	O-Ring	5 34 3	32118-140	Screw-HH	6 7 4
237-30	O-Ring	3 45 3	32128-16	Nut-HHF	4 21 8
237-65	O-Ring	5 12 3	32136-5	Nut-Hex. Slotted	6 9 1
237-65	O-Ring	2 52 2	32144-39	Screw	3 49 6
237-78	O-Ring	5 21 4	32146-13	Nut-Lock	5 32 2
237-78	O-Ring	2 54 2	32146-20	Nut-Jam	6 20 2
237-79	O-Ring	3 44 3	32146-20	Nut-Jam	2 37 2
237-80	O-Ring	5 11 2	32151-72	Ring-Retaining	5 43 1
237-80	O-Ring	2 53 2	32153-3	Nut-Lock	2 36 2
237-117	O-Ring	3 48 1	33023-00	Nut-Lock	1 29 1
237-146	O-Ring	2 51 1	33024-00	Nut-Lock	3 3 8
2412-3	Clamp-Hose	1 15 1	33024-00	Nut-Lock	5 28 2
2412-3	Clamp-Hose	3 29 1	33025-00	Nut-Lock	3 22 6
283-88	Pin-Clevis	2 32 2	33025-00	Nut-Lock	1 26 4
302-5	Fitting-Grease	7 1 1	33025-00	Nut-Lock	2 39 2
302-5	Fitting-Grease	4 12 2	33026-00	Nut-Lock	5 4 2
302-5	Fitting-Grease	2 56 2	33026-00	Nut-Lock	3 18 2
302-11	Fitting-Grease 45°	1 27 2	33028-00	Nut-Lock	6 19 4
302-40	Fitting-Grease	3 30 2	33094-00	Washer-Flat	3 4 8
302-58	Fitting-Grease	8 4 1	33094-00	Washer-Flat	5 27 2
321-4	Screw-HH	6 11 4	33095-00	Washer-Flat	3 21 6
322-7	Screw-HH	2 34 2	33095-00	Washer-Flat	2 40 2
327-24	Screw-HH	4 1 2	33096-00	Washer-Flat	5 3 2
3213-24	Screw-HH	1 23 2	33096-00	Washer-Flat	3 19 2
3216-14	Screw-HH	1 8 2	33098-00	Washer-Flat	6 18 4
3216-19	Screw-HH	6 1 2	33104-016	Screw-HHF	3 5 8
3219-2	Nut-Hex.	3 32 6	33105-020	Screw-HHF	3 15 6
3219-10	Nut-Hex.	9 1 1	33105-030	Screw-HHF	1 21 2
3242-14	Screw-Set, Square Head	3 31 2	33106-040	Screw-HH	5 40 2
3243-9	Screw-Set, Square Head	5 38 2	33106-040	Screw-HHF	3 24 2
3256-3	Washer-Flat	5 44 1	33113-060	Screw-HH	1 28 1
3256-23	Washer-Flat	3 40 14	33114-045	Screw-HH	5 26 2
3256-26	Washer-Flat	5 8 2	33115-025	Screw-HH	1 7 2
3256-28	Washer-Flat	6 21 2	340-2	Adapter	5 22 2
3256-28	Washer-Flat	2 38 2	340-4	Fitting	3 26 2
3256-62	Washer-Flat	2 47 1	340-17	Fitting-Elbow	5 10 1
3269-11	Rivet	2 49 4	340-105	Fitting-Elbow	5 9 1
3272-20	Pin-Cotter	2 45 1	340-117	Elbow	1 12 1
3272-42	Pin-Cotter	6 8 1	340-147	Fitting-Hydraulic	5 15 1
3274-4	Screw-HSH	5 18 2	353-961	Bayonet Flange	3 51 1
3290-413	Washer-Belleville	1 3 4	353-962	Asm-Cap & Chain	3 2 1
3290-467	Pin-Cotter, Hair	1 24 2	353-963	Gasket	3 53 1
3296-29	Nut-Lock	3 41 14	353-988	Plug-w/O-Ring Seal	5 29 1

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you

are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Rotary Brush has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the Brush cover. In any correspondence concerning the Rotary Brush, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial number of the Rotary Brush.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

Description	Page	Description	Page
Arm & Mount Asm	1-2	Drive Shaft No. 94-7375 Asm	8
Frame & Axle Asm	3	Valve Block Asm	9
Castor Wheel Asm	4	Hydraulic Pump No. 94-7376 Asm	10
Sprocket & Motor Asm	5	Hydraulic Motor No. 94-7374 Asm	11
Pivot Pin & Mount Asm	6	Hydraulic Schemataic	12
Hydraulic Cylinder No. 95-7775 Asm	7	TORO Part Number Index	13-14

MAINTENANCE RECORD

[illegible]

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.

Litho in U.S.A.