

LAWN-BOY®

SILVER SERIES® WALK-BEHIND MOWER

Model No. 10321 – 8900001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Housing Assembly	1	Engine LEV102–361003A	7–9
Rear Axle Assembly	2	Recoil Starter Assembly 590702	10
Engine Assembly	3	Recoil Starter Assembly 590739 (Optional)	11
Handle Assembly	4	Lawn–Boy Part Number Index	12–13
Gear Assembly	5		
Carburetor No. 640119	6	Note:	

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
Side Bagging Kit	Model No. 89814	Leaf Bag Kit w/Chute	Model No. 89811
Leaf Bag	Model No. 89804	Mow & Feed	
Leaf Shredder Kit	Model No. 89860	Fertilizer Spreader	Model No. 59070

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HWHTF	hex washer head thread forming
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	PH	pan head
FH	flat head	PPH	Phillips pan head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HFW	hex flange washer	SFH	slotted fillister head
HH	hex head	SH	square head
HHF	hex head flange	SHWH	slotted hex washer head
HHST	hex head self tapping	SPH	slotted pan head
HJ	hex jam	STD	standard
HOC	height-of-cut	TAP	self tapping
HS	hex socket	TH	truss head
HSBH	hex socket button head	TTH	Torx truss head
HSFH	hex socket flat head	WH	wing head
HSH	hex socket head		
HWH	hex washer head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form $X:Y$. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form $X (Y)$. X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

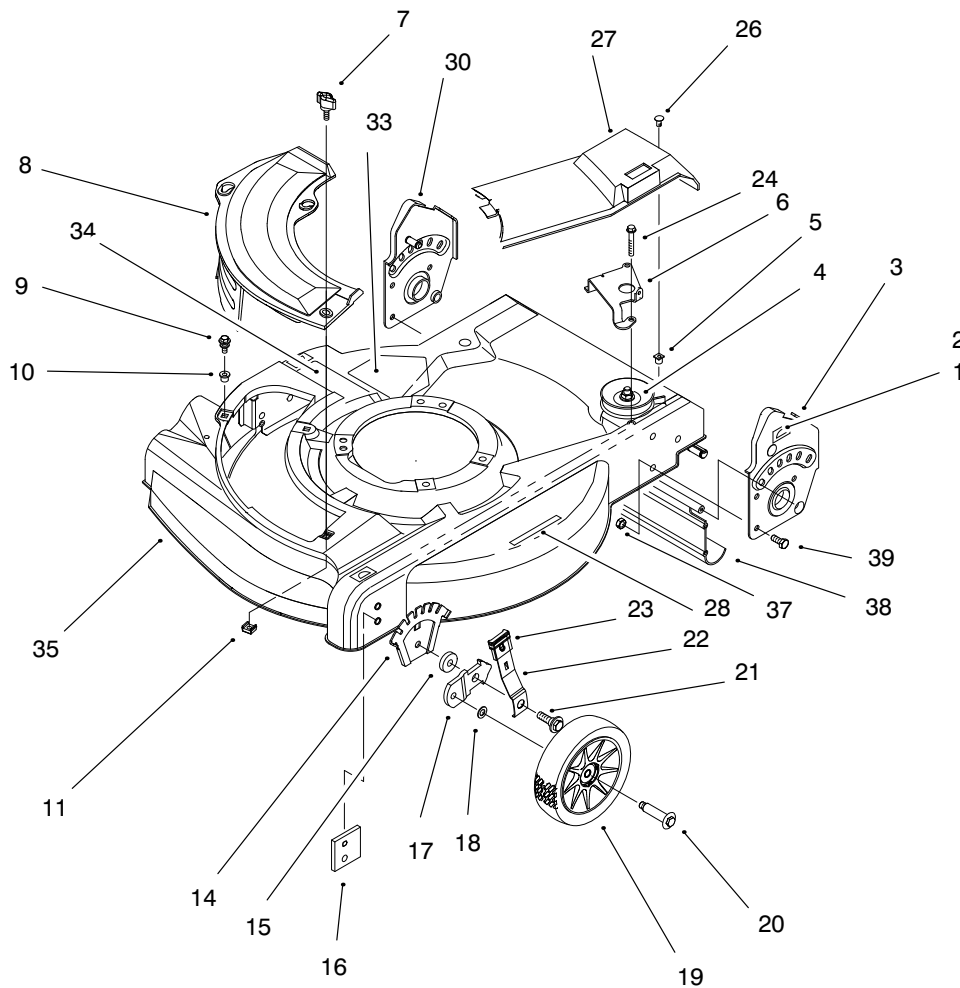


Sheet No.:2

Housing Assembly

Ref. No.	Part No.	Qty.	Description
1	92-2915	1	Decal-HOC
2	92-2914	1	Decal-HOC
3	92-7724	1	ASM-Handle Bracket
4	92-7735	1	ASM-Gear Case
5	605120	1	Grommet
6	92-7728	1	Guide-Transmission
7	98-8332	1	Knob-Cover Plate
8	92-8630	1	Mulch Plate-21"
9	614677	2	Screw-Sems
10	94-1610	2	Grommet-Plastic
11	613765	1	Nut-Cage
14	92-4881	2	Plate-Height Adjust
15	92-4890	2	Washer
16	92-7731	2	Plate-Baffle
17	95-7403	2	Bracket-Wheel Height Adj
18	40-1940	2	Washer
19	684776	2	ASM-Wheel & Tire 6"
20	92-1099	2	Bolt-Shoulder
21	614672	2	Bolt-Shoulder
22	614687	2	Spring Arm-Front
23	92-1008	4	Knob-Height Adjust
24	98-8347	2	Torx Head Cap Screw
26	92-9665	1	Screw-Phil
27	95-7068	1	Cover-Drive
28	93-7250	1	Decal-Warning

Ref. No.	Part No.	Qty.	Description
30	92-7723	1	ASM-Handle Bracket
*32	95-7052	1	Plate-Cover
33	39-5770	1	Decal-Danger
34	92-1097	1	Decal-Discharge
35	98-4477	1	ASM-Housing & Baffle
37	3296-29	6	Nut-Lock
38	92-8647	1	Shield-Trailing
39	322-3	6	Screw-HH


* Not illustrated

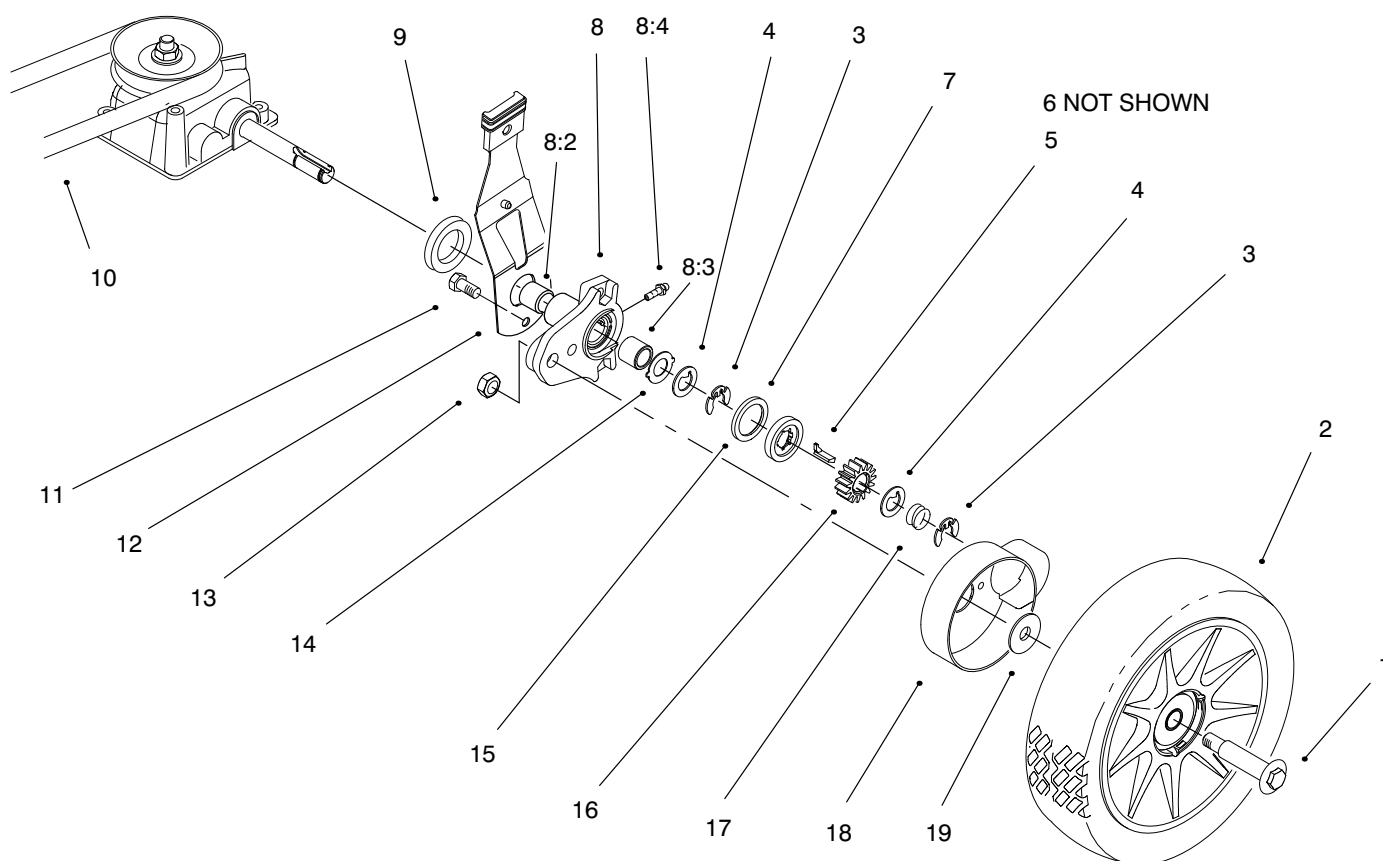

Sheet No.:3

Rear Axle Assembly


Ref. No.	Part No.	Qty.	Description
1	92-1057	2	Bolt-Shoulder
2	92-1042	2	ASM-Whl
3	65-2720	4	Ring-Retaining
4	65-4740	4	Washer-Thrust
5	66-6050	1	Key-Rocking LH
6	66-6040	1	Key-Locking RH
7	65-4710	2	Ring-Friction
8	92-7746	2	ASM-Hgt Adj Arm
8:2	70-9760	2	Bushing
8:3	47-2900	2	Bushing
8:4	302-56	2	Fitting-Grease
9	614447	2	Spacer-Axle Shaft
10	93-7381	1	V-Belt
11	32144-85	2	Screw-HH
12	92-1004	2	ASM-Spring Arm
13	610358	2	Nut-Lock
14	65-4730	2	Washer-Thrust
15	65-4760	2	Washer
16	65-4750	2	Gear-Pinion
17	65-4720	2	Spring-Compression
18	94-1609	2	Cover-Wheel
19	614426	2	Washer-Stepped

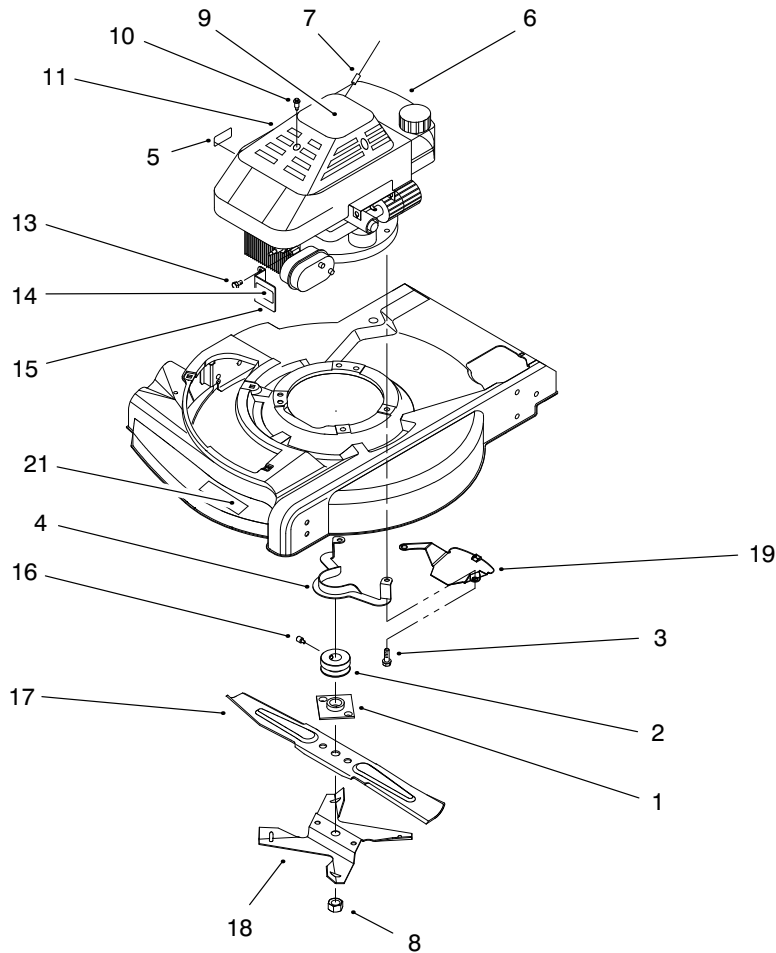

Sheet No.:4

Engine Assembly


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	677525	1	ASM-Plate & Collar				
2	92-9575	1	Pulley-Engine				
3	95-1726	3	Screw-Engine Mount				
4	92-1024	1	Guide-Belt				
5	92-4851	1	Decal-Oil Instruction				
6		1	ASM-Engine				
7	92-1701	1	Rope-Stop				
8	603164	1	Nut-Blade				
9	95-7449	1	Decal-Shroud				
10	92-4852	4	Screw-Recoil Cover				
11	92-4854	1	Cover-Starter				
13	32144-85	1	Screw-HH				
14	65-2690	1	Decal-Hot Surface				
15	94-6066	1	Guard-Muffler				
16	613227	1	Screw-Set				
17	612543	1	Blade-21" Whirl				
18	92-1630	1	Fan-Mulching				
19	93-4196	1	Shield-Grass				
21	98-1567	1	Decal-Deck				

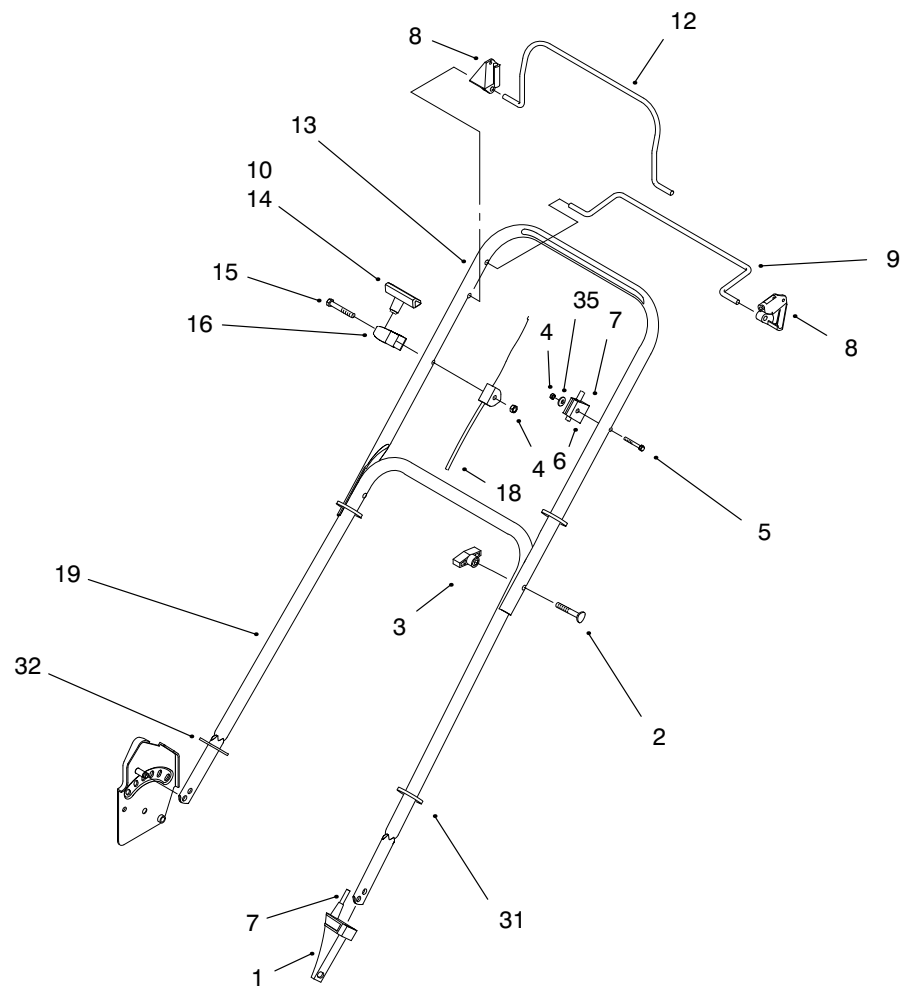

Sheet No.:6

Handle Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	93-7380	1	Anchor-Cable				
2	614697	2	Screw-Handle				
3	98-7134	2	Knob				
4	3296-73	2	Nut-Lock				
5	92-2266	1	Screw-Handle				
6	92-7729	1	Anchor-Cable				
7	92-7726	1	Cable-Traction				
8	92-5412	2	Stop-Pivot				
9	92-1001	1	Bail-Sp Control				
10	92-5424	1	Staple-Handle				
12	93-4184	1	Bail-Flywheel Brake				
13	95-1713	1	Handle Section-Upper				
14	92-4853	1	Handle-Starter				
15	321-50	1	Screw				
16	93-7383	1	Guide-Rope				
18	98-1560	1	ASM-Brake Cable				
19	614643	1	Handle Section-Lower				
31	614249	4	Tie Strap				
32	93-3653	1	Handle-Guard				
35	3256-1	1	Washer-Flat				

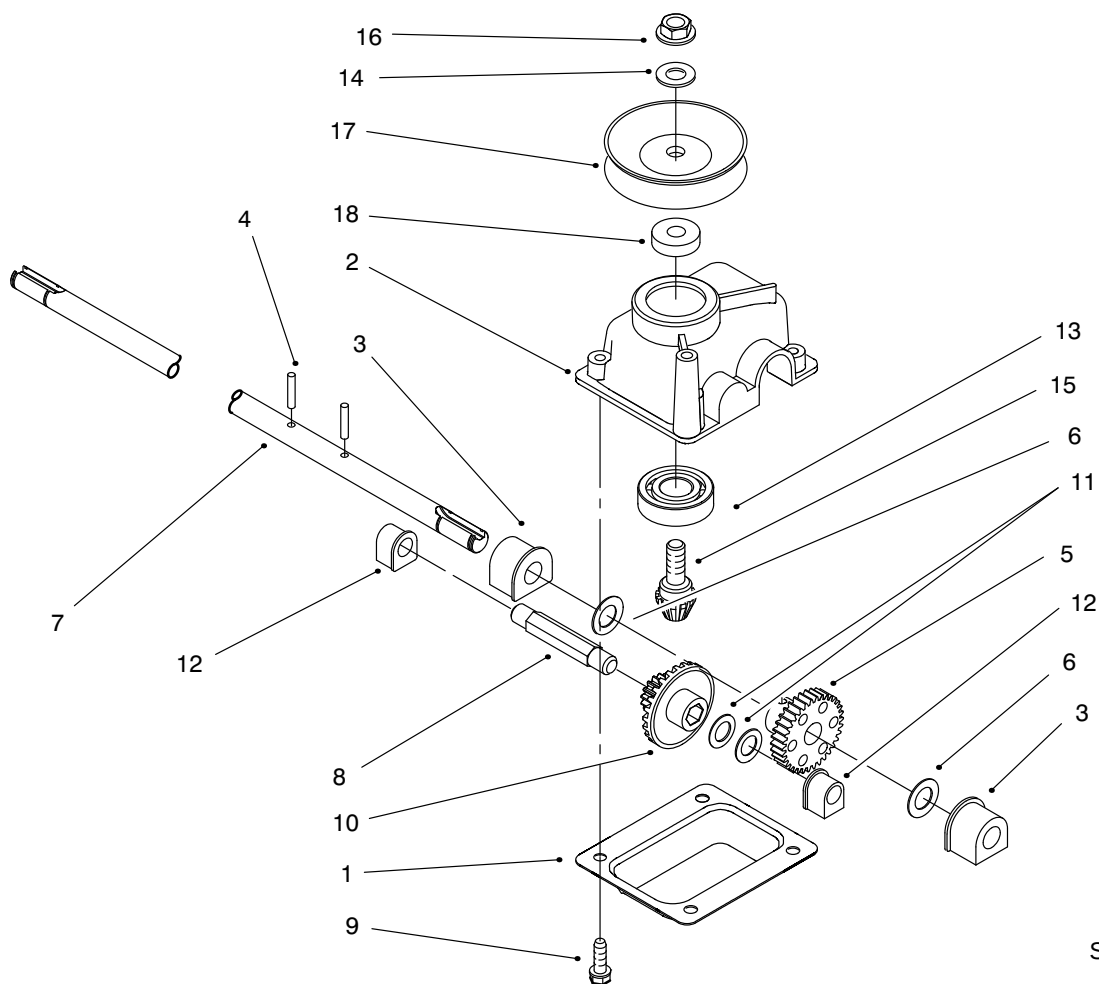


Sheet No.:100

Gear Assembly

Ref. No.	Part No.	Qty.	Description
1	614668	1	Cover—Gear Case
2	92-7727	1	Gearcase—Upper Ss
3	60-8850	2	Bushing—Output
4	3285-19	2	Pin—Spirol
5	614596	1	Gear—34t
6	36-4780	2	Washer—Thrust
7	93-0239	1	Shaft—Output
8	614696	1	Shaft—Intermediate
9	32144-4	4	Screw—TAP
10	55-3760	1	15 T Pinion
11	36-4791	2	Washer—Thrust
12	60-8750	2	Bushing
13	38-7820	1	Bearing—Ball
14	3256-24	1	Washer—Flat
15	92-5790	1	Gear—Pinnion
16	3296-5	1	Nut—Lock
17	614669	2	Pulley—Half
18	92-5791	1	Spacer—Pulley


Ref. No.	Part No.	Qty.	Description

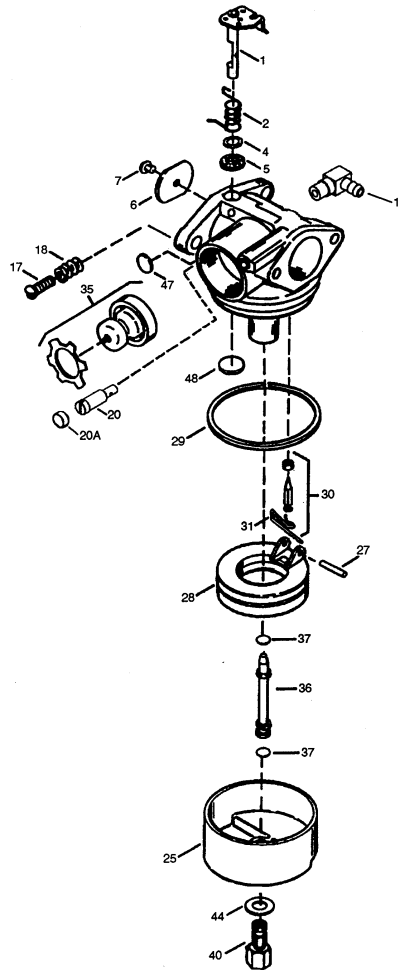

CARBURETOR No. 640119

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
0	640119	Carburetor	1	27	631024	Float Shaft	1
1	631615	Throttle Shaft & Lever Assembly	1	28	632019	Float	1
2	631767	Throttle Return Spring	1	29	631028	Float Bowl "O" Ring	1
4	631184	Dust Seal Washer	1	30	631021	Inlet Needle, Seat, & Clip (Incl. 31)	1
5	631183	Dust Seal (Throttle)	1	31	631022	Spring Clip	1
6	640070	Throttle Shutter	1	35	36045A	Primer Bulb/Retainer Ring	1
7	650506	Shutter Screw	1	36	632735	Main Nozzle Tube	1
16	631807	Fuel Fitting	1	37	632547	O-Ring, Main Nozzle Tube	2
17	651025	Throttle Crack Screw/Idle Speed Screw	1	40	640028	High Speed Bowl Nut	1
18	630766	Tension Spring	1	44	27110	Bowl Nut Washer	1
20	640016	Idle Restrictor Screw	1	47	630748	Welch Plug, Idle Mixture Well	1
20A	640053	Idle Restrictor Screw Cap	1	48	631027	Welch Plug, Atmospheric Vent	1
25	631867	Float Bowl	1				

ENGINE LEV120-361003A

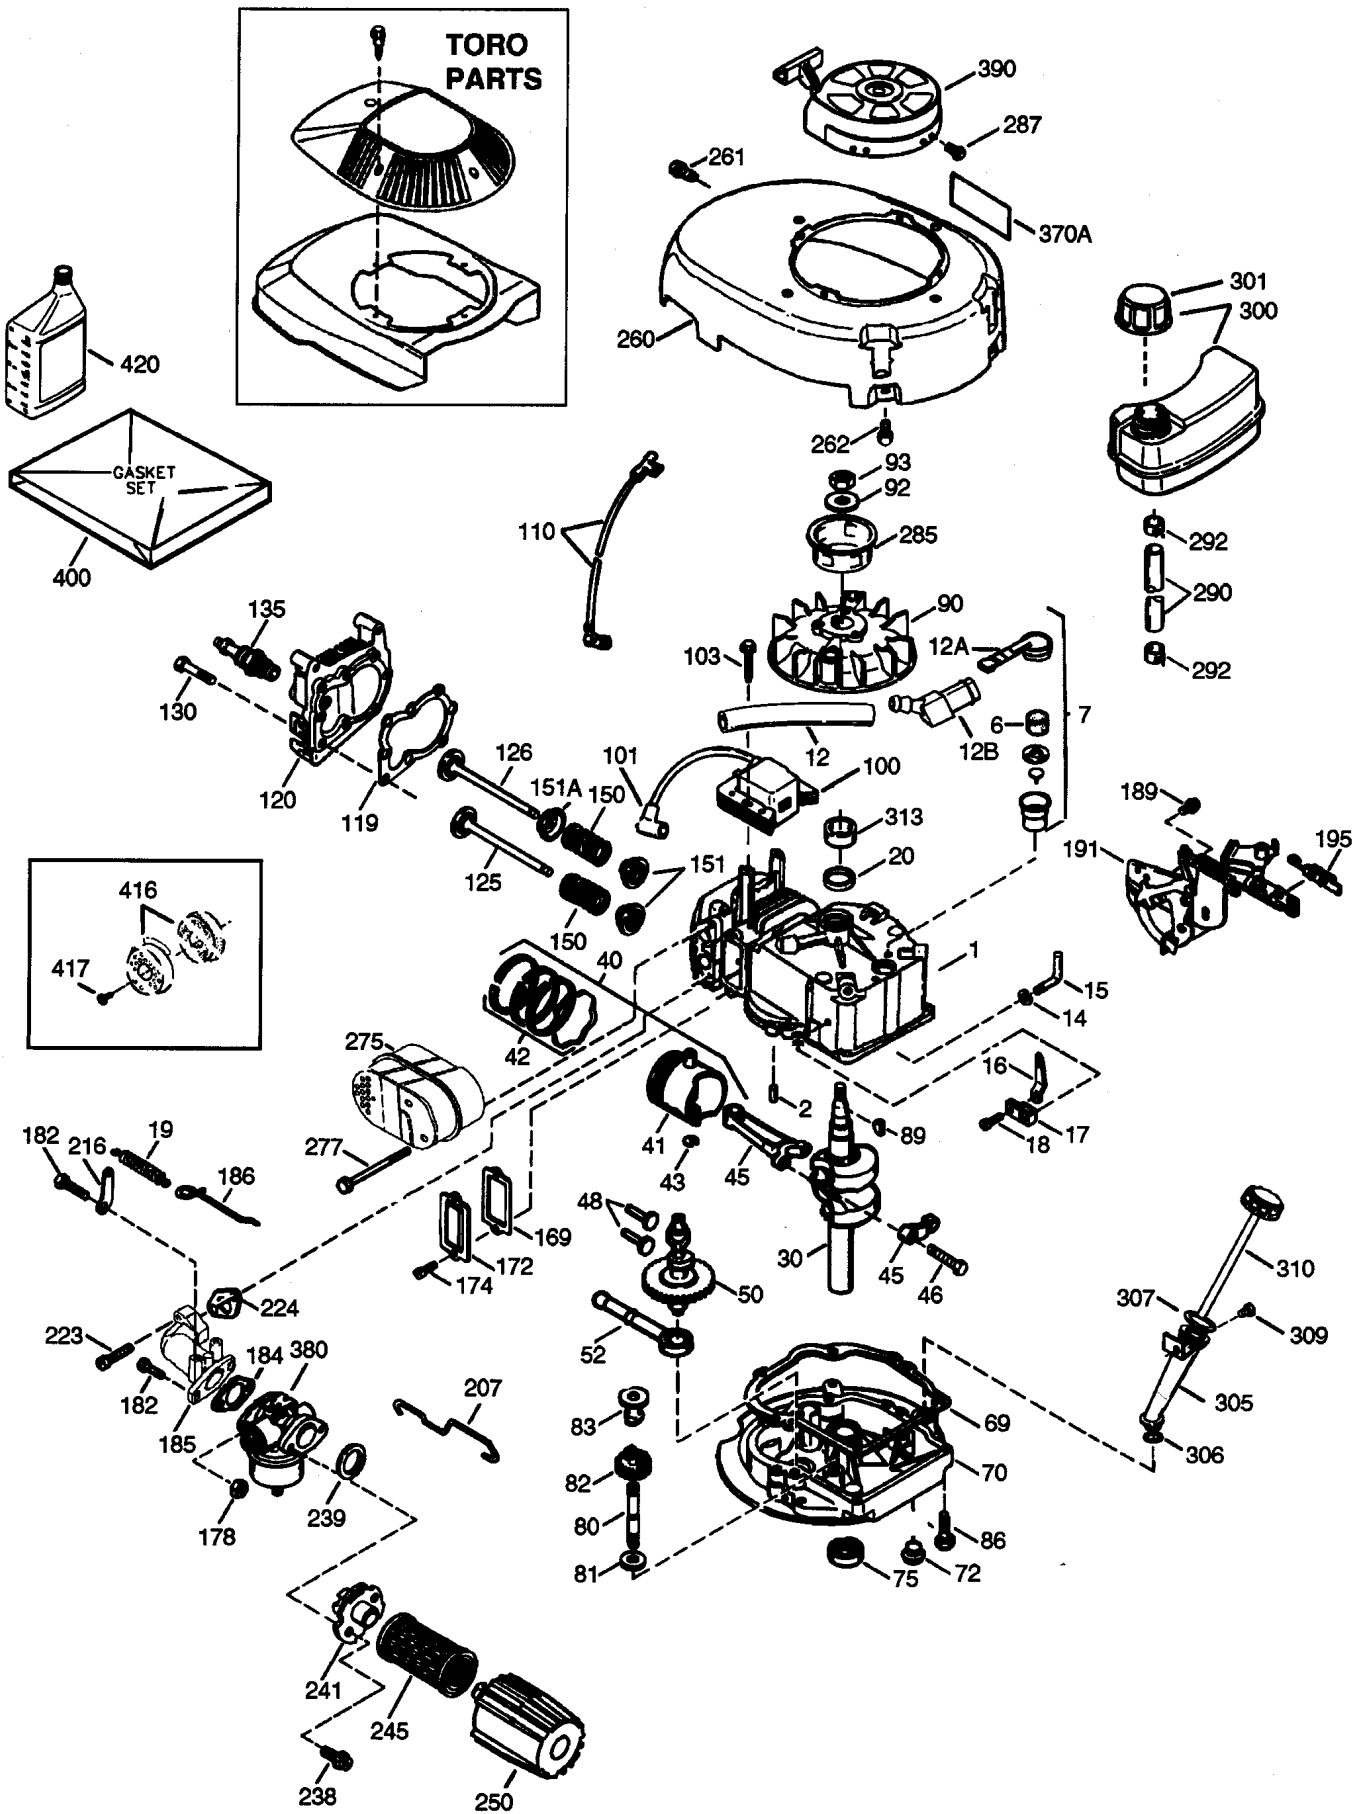

ENGINE LEV120-361003A


Ref. No.	Part No.	Description	No. Used
1	36774	Cylinder (Incl. 2 & 20)	1
2	26727	Dowel Pin	2
6	33734	Breather Element	1
7	36557	Breather Body Ass'y. (Incl. 6 & 12A)	1
12	36775	Breather Tube	1
12A	36558	Breather Cover & Tube (Incl. 12B)	1
12B	36694	Breather Tube Elbow	1
14	28277	Washer	1
15	30589	Governor Rod (Incl. 14)	1
16	34839A	Governor Lever	1
17	31335	Governor Lever Clamp	1
18	651018	Screw	1
19	36281	Extension Spring	1
20	32600	Oil Seal	1
30	36597	Crankshaft	1
40	40027	Piston, Pin & Ring Set (Std.)	1
40	40028	Piston, Pin & Ring Set (.010" OS)	1
41	40025	Piston & Pin Ass'y. (Std.) (Incl. 43)	1
41	40026	Piston & Pin Ass'y. (.010" OS) (Incl. 43)	1
42	40006	Ring Set (Std.)	1
42	40007	Ring Set (.010" OS)	1
43	20381	Piston Pin Retaining Ring	2
45	36777	Connecting Rod Ass'y. (Incl. 46)	1
46	32610A	Connecting Rod Bolt	2
48	27241	Valve Lifter	2
50	36778	Camshaft (MCR)	1
52	29914	Oil Pump Ass'y.	1
69	35261	Mounting Flange Gasket	1
70	36995	Mounting Flange (Incl. 72 thru 83)	1
72	36083	Oil Drain Plug	1
75	27897	Oil Seal	1
80	30574A	Governor Shaft	1
81	30590A	Washer	1
82	30591	Governor Gear Ass'y. (Incl. 81)	1
83	30588A	Governor Spool	1
86	650488	Screw	6
89	611004	Flywheel Key	1
90	611112	Flywheel	1
92	650815	Belleville Washer	1
93	650816	Flywheel Nut	1
100	34443B	Solid State Ignition	1
101	610118	Spark Plug Cover	1
103	651007	Screw, Torx T-15,	2
110	37047	Ground Wire	1
119	36787	Cylinder Head Gasket	1
120	36825	Cylinder Head	1
125	36779	Exhaust Valve (Std.)	

Ref. No.	Part No.	Description	No. Used
125	36780	(Incl. 151) Exhaust Valve (1/32" OS)	1
126	36781	(Incl. 151) Intake Valve (Std.)	1
126	36782	(Incl. 151) Intake Valve (1/32" OS)	1
130	6021A	Screw	6
135	35395	Resistor Spark Plug (RJ19LM)	1
150	35991	Valve Spring	2
151	31673	Valve Spring Cap	2
151A	40017	Intake Valve Seal	1
169	36783	Valve Cover Gasket	1
172	36784	Valve Cover	1
174	30200	Screw	2
178	29752	Nut & Lock Washer	2
182	6201	Screw	2
184	26756	Carburetor To Intake Pipe Gasket	1
185	36785	Intake Pipe	1
186	32653	Governor Link	1
189	650839	Screw	2
191	36559	S.E. Brake Bracket (Incl. 195)	1
195	610973	Terminal	1
207	34336	Throttle Link	1
216	33086	R.P.M. Adjusting Lever	1
223	650451	Screw	2
224	36786	Intake Pipe Gasket	1
238	650932	Screw	2
239	34338	Air Cleaner Gasket	1
241	35797	Air Cleaner Collar	1
245	35066	Air Cleaner Filter	1
250	35986	Air Cleaner Cover	1
260	36999	Blower Housing	1
261	30200	Screw	2
262	650831	Screw	2
275	36790	Muffler	1
277	650988	Screw	2
285	35000A	Starter Cup	1
287	650926	Screw	2
290	34357	Fuel Line	1
292	26460	Fuel Line Clamp	2
300	35586	Fuel Tank (Incl. 292 & 301)	1
301	36246	Fuel Cap	1
305	35819A	Oil Fill Tube	1
306	36996	"O"-Ring	1
307	35499	"O"-Ring	1
309	651014	Screw	1
310	36259	Dipstick	1
313	34080	Spacer	1
370A	36261	Lubrication Decal	1
380	640119	Carburetor (Incl. 184)	1

ENGINE LEV120–361003A


Ref. No.	Part No.	Description	No. Used
390	590702	Rewind Starter (NOTE: This engine could have been built with 590739 starter. Refer to the design of the rope pulley strength ribs for part identification. Individual starter parts do not interchange. Refer to service bulletin 116.)	1
400	36792B	Gasket Set (Incl. Items Marked PK in Notes) Incl. part #'s 26756 (1), 28833 (1) 34338 (1), 36783 (1), 36786 (1) 36787 (1), 36832 (1), 36996 (1), 37130 (1).	1

Ref. No.	Part No.	Description	No. Used
416	36085	Spark Arrestor Kit (Incl. 417) (Optional)	1
417	650760	Screw (Optional)	1
420	730225	SAE 30 4–Cycle Engine Oil (Quart)	1

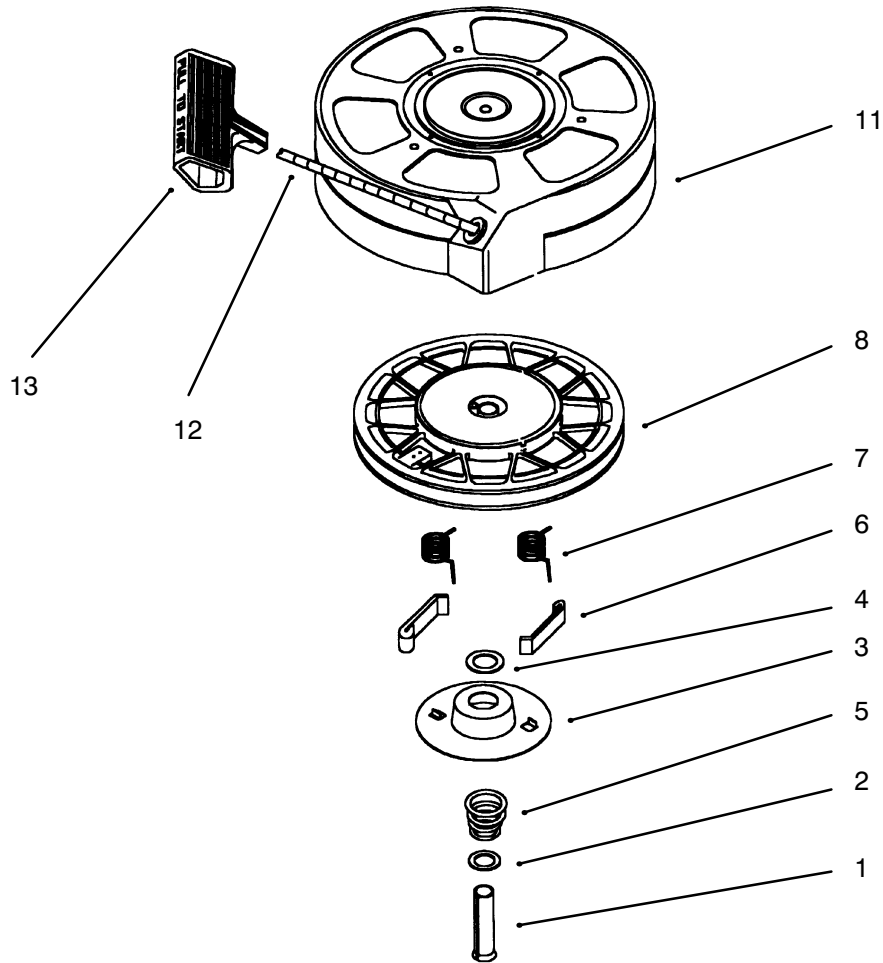

RECOIL STARTER ASSEMBLY 590702

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
0	590702	Recoil Starter	1	8	590700	Pulley & Rewind Spring Ass'y.	1
1	590599A	Spring Pin (Incl. 4)	1	11	590703	Starter Housing Ass'y (40 degree grommet)	1
2	590600	Washer	1	12	590535	Starter Rope (98" X 9/64" dia.)	1
3	590696	Retainer	1	13	590701	Starter Handle	1
4	590601	Washer	2				
5	590697	Brake Spring	1				
6	590698	Starter Dog	2				
7	590699	Dog Spring	2				

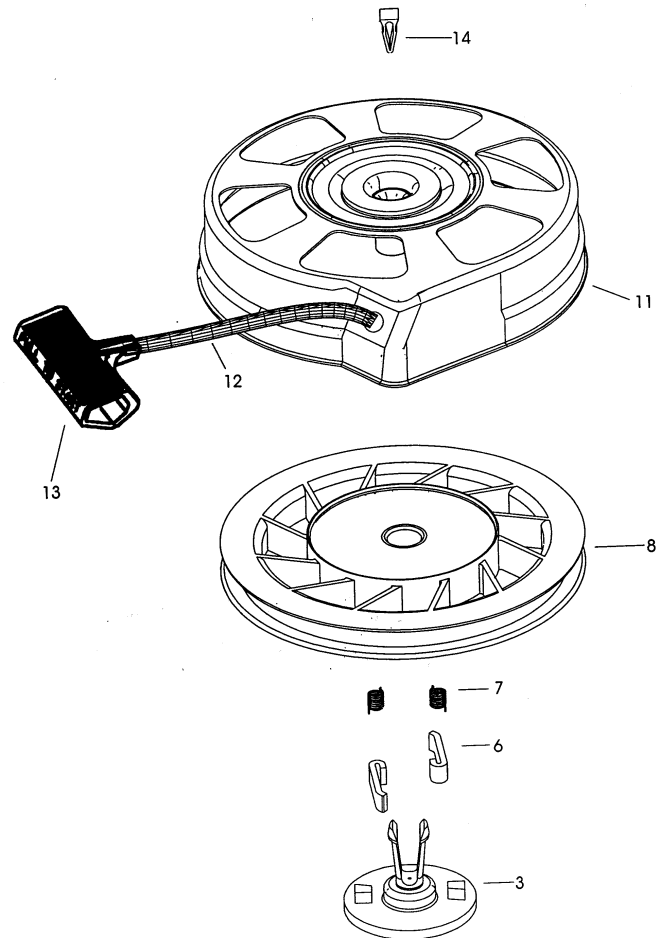

RECOIL STARTER ASSEMBLY 590739 (Optional)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
0	590739	Rewind Starter	1	11	590638	Starter Housing Ass'y (40 degree grommet)	1
3	590740	Retainer	1	12	590535	Starter Rope (Length 98" x 9/64" dia.)	1
6	590616	Starter Dog	2	13	590701	Starter Handle	1
7	590617	Dog Spring	2	14	590741	Locking Tab	1
8	590618A	Pulley & Rewind Spring Ass'y	1				

Lawn-Boy Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
603164	3	8	1	Nut-Blade
605120	1	5	1	Grommet
610358	2	13	2	Nut-Lock
612543	3	17	1	Blade-21" Whirl
613227	3	16	1	Screw-Set
613765	1	11	1	Nut-Cage
614249	4	31	4	Tie Strap
614426	2	19	2	Washer-Stepped
614447	2	9	2	Spacer-Axle Shaft
614596	5	5	1	Gear-34t
614643	4	19	1	Handle Section-Lower
614668	5	1	1	Cover-Gear Case
614669	5	17	2	Pulley-Half
614672	1	21	2	Bolt-Shoulder
614677	1	9	2	Screw-Sems
614687	1	22	2	Spring Arm-Front
614696	5	8	1	Shaft-Intermediate
614697	4	2	2	Screw-Handle
677525	3	1	1	ASM-Plate & Collar
684776	1	19	2	ASM-Wheel & Tire 6"
36-4780	5	6	2	Washer-Thrust
36-4791	5	11	2	Washer-Thrust
38-7820	5	13	1	Bearing-Ball
39-5770	1	33	1	Decal-Danger
40-1940	1	18	2	Washer
47-2900	2	8:3	2	Bushing
55-3760	5	10	1	15 T Pinion
60-8750	5	12	2	Bushing
60-8850	5	3	2	Bushing-Output
65-2690	3	14	1	Decal-Hot Surface
65-2720	2	3	4	Ring-Retaining
65-4710	2	7	2	Ring-Friction
65-4720	2	17	2	Spring-Compression
65-4730	2	14	2	Washer-Thrust
65-4740	2	4	4	Washer-Thrust
65-4750	2	16	2	Gear-Pinion
65-4760	2	15	2	Washer
66-6040	2	6	1	Key-Locking RH
66-6050	2	5	1	Key-Rocking LH
70-9760	2	8:2	2	Bushing
92-1001	4	9	1	Bail-Sp Control
92-1004	2	12	2	ASM-Spring Arm
92-1008	1	23	4	Knob-Height Adjust
92-1024	3	4	1	Guide-Belt
92-1042	2	2	2	ASM-Whl
92-1057	2	1	2	Bolt-Shoulder
92-1097	1	34	1	Decal-Discharge
92-1099	1	20	2	Bolt-Shoulder
92-1630	3	18	1	Fan-Mulching
92-1701	3	7	1	Rope-Stop
92-2266	4	5	1	Screw-Handle
92-2914	1	2	1	Decal-HOC
92-2915	1	1	1	Decal-HOC
92-4851	3	5	1	Decal-Oil Instruction
92-4852	3	10	4	Screw-Recoil Cover
92-4853	4	14	1	Handle-Starter
92-4854	3	11	1	Cover-Starter
92-4881	1	14	2	Plate-Height Adjust
92-4890	1	15	2	Washer
92-5412	4	8	2	Stop-Pivot
92-5424	4	10	1	Staple-Handle
92-5790	5	15	1	Gear-Pinion

*Not Illustrated

Lawn-Boy Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
92-5791	5	18	1	Spacer-Pulley
92-7723	1	30	1	ASM-Handle Bracket
92-7724	1	3	1	ASM-Handle Bracket
92-7726	4	7	1	Cable-Traction
92-7727	5	2	1	Gearcase-Upper Ss
92-7728	1	6	1	Guide-Transmission
92-7729	4	6	1	Anchor-Cable
92-7731	1	16	2	Plate-Baffle
92-7735	1	4	1	ASM-Gear Case
92-7746	2	8	2	ASM-Hgt Adj Arm
92-8630	1	8	1	Mulch Plate-21"
92-8647	1	38	1	Shield-Trailing
92-9575	3	2	1	Pulley-Engine
92-9665	1	26	1	Screw-Phil
93-0239	5	7	1	Shaft-Output
93-3653	4	32	1	Handle-Guard
93-4184	4	12	1	Bail-Flywheel Brake
93-4196	3	19	1	Shield-Grass
93-7250	1	28	1	Decal-Warning
93-7380	4	1	1	Anchor-Cable
93-7381	2	10	1	V-Belt
93-7383	4	16	1	Guide-Rope
94-1609	2	18	2	Cover-Wheel
94-1610	1	10	2	Grommet-Plastic
94-6066	3	15	1	Guard-Muffler
95-1713	4	13	1	Handle Section-Upper
95-1726	3	3	3	Screw-Engine Mount
95-7052	1	32	1	Plate-Cover
95-7068	1	27	1	Cover-Drive
95-7403	1	17	2	Bracket-Wheel Height Adj
95-7449	3	9	1	Decal-Shroud
98-1560	4	18	1	ASM-Brake Cable
98-1567	3	21	1	Decal-Deck
98-4477	1	35	1	ASM-Housing & Baffle
98-7134	4	3	2	Knob
98-8332	1	7	1	Knob-Cover Plate
98-8347	1	24	2	Torx Head Cap Screw
302-56	2	8:4	2	Fitting-Grease
321-50	4	15	1	Screw
322-3	1	39	6	Screw-HH
3256-1	4	35	1	Washer-Flat
3256-24	5	14	1	Washer-Flat
3285-19	5	4	2	Pin-Spirol
3296-5	5	16	1	Nut-Lock
3296-29	1	37	6	Nut-Lock
3296-73	4	4	2	Nut-Lock
32144-4	5	9	4	Screw-TAP
32144-85	2	11	2	Screw-HH
32144-85	3	13	1	Screw-HH