

LAWN-BOY®

Silver Series® Walk-Behind Mower

Model No. 10249 – 8900001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Housing Assembly	1	Recoil Starter Assembly 590702	9
Cover & Decal Assembly	2	Recoil Starter Assembly 590793 (Optional) ...	10
Engine & Blade Assembly	3	Lawn–Boy Part Number Index	11
Handle Assembly	4	Maintenance	12–13
Carburetor No. 640119	5		
Engine LEV120–361003A	6–8		

Note:

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
Side Bagging Kit	Model No. 89814	Leaf Bag Kit w/Chute	Model No. 89811
Rear Bagging Kit	Model No. 89800	Mow & Feed	
Leaf Bag	Model No. 89804	Fertilizer Spreader	Model No. 52070
Leaf Shredder Kit	Model No. 89860		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HWHTF	hex washer head thread forming
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	PH	pan head
FH	flat head	PPH	Phillips pan head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HFV	hex flange washer	SFH	slotted fillister head
HH	hex head	SH	square head
HHF	hex head flange	SHWH	slotted hex washer head
HHST	hex head self tapping	SPH	slotted pan head
HJ	hex jam	STD	standard
HOC	height-of-cut	TAP	self tapping
HS	hex socket	TH	truss head
HSBH	hex socket button head	TTH	Torx truss head
HSFH	hex socket flat head	WH	wing head
HSV	hex socket head		
HWH	hex washer head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form $X:Y$. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form $X (Y)$. X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

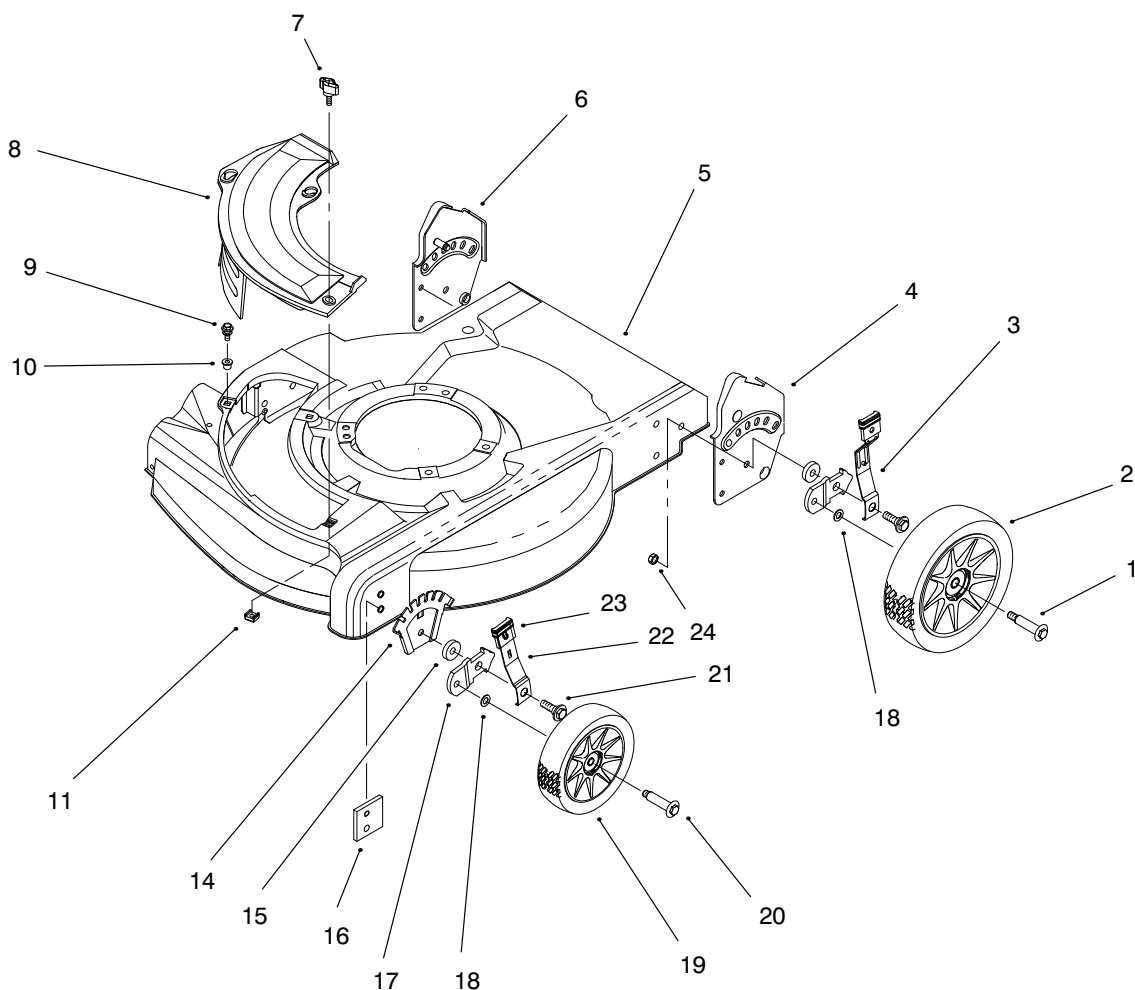


Sheet No.:2

Housing Assembly

Ref. No.	Part No.	Qty.	Description
1	614650	2	Bolt–Shoulder
2	684777	2	ASM–Wheel
3	92–1005	2	ASM–Spring Arm
4	92–7743	1	ASM–Handle Brkt
5	98–4471	1	ASM–Housing & Baffle
6	92–7742	1	RH Handle Bracket ASM
7	98–8332	1	Knob–Cover Plate
8	92–8630	1	Mulch Plate–21”
9	614677	2	Screw–Sems
10	94–1610	2	Grommet–Plastic
11	613765	1	Nut–Cage
14	92–4881	2	Plate–Height Adjust
15	92–4890	4	Washer
16	92–7731	2	Plate–Baffle
17	95–7403	4	Bracket–Wheel Height Adj
18	40–1940	4	Washer
19	684776	2	ASM–Wheel & Tire 6”
20	92–1099	2	Bolt–Shoulder
21	614672	4	Bolt–Shoulder
22	614687	2	Spring Arm–Front
23	92–1008	4	Knob–Height Adjust
24	3296–39	2	Nut–Lock


Ref. No.	Part No.	Qty.	Description

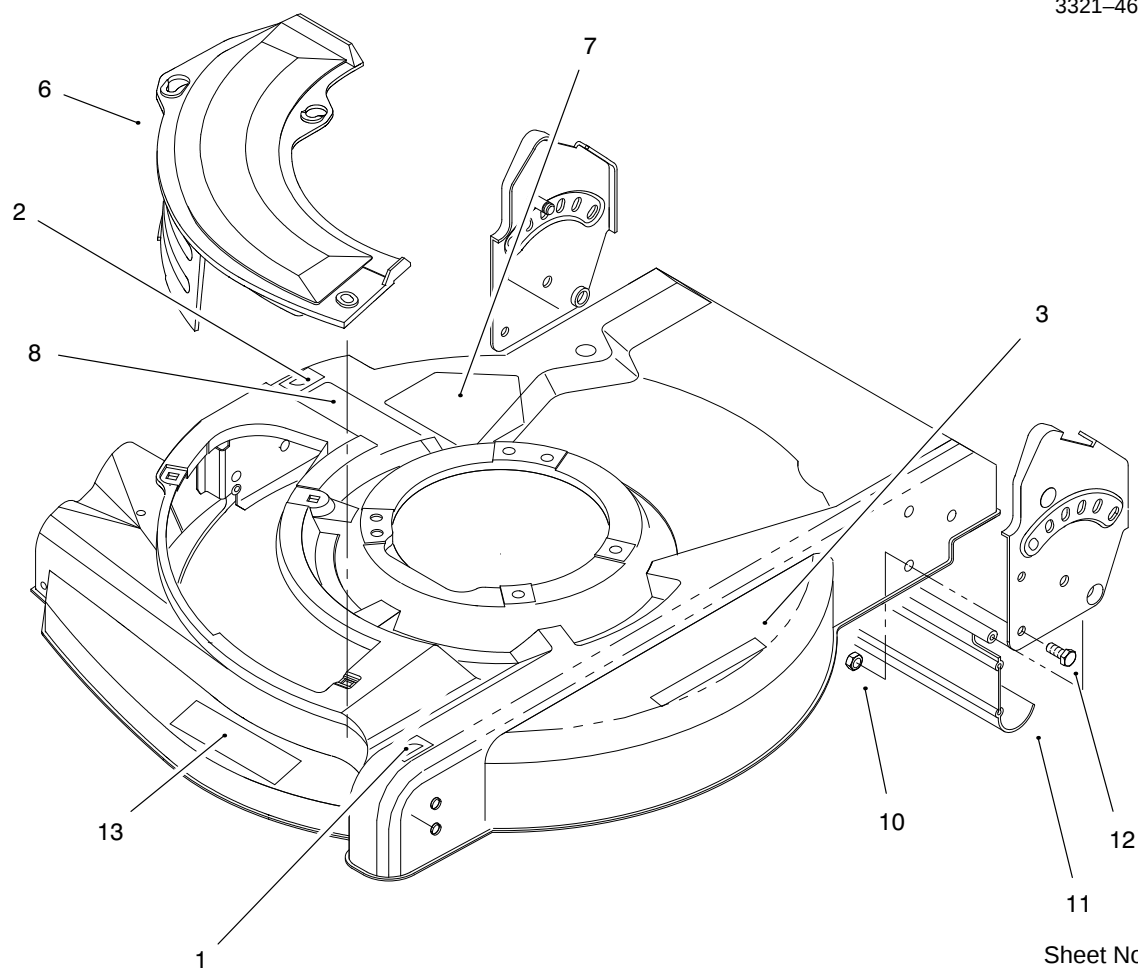

Sheet No.:3

Cover & Decal Assembly

Ref. No.	Part No.	Qty.	Description
1	92-2915	1	Decal-HOC
2	92-2914	1	Decal-HOC
3	93-7250	1	Decal-Warning
6	95-7052	1	Plate-Cover
7	39-5770	1	Decal-Danger
8	92-1097	1	Decal-Discharge
10	3296-29	4	Nut-Lock
11	92-8647	1	Shield-Trailing
12	322-3	4	Screw-HH
13	98-1566	1	Decal-Deck

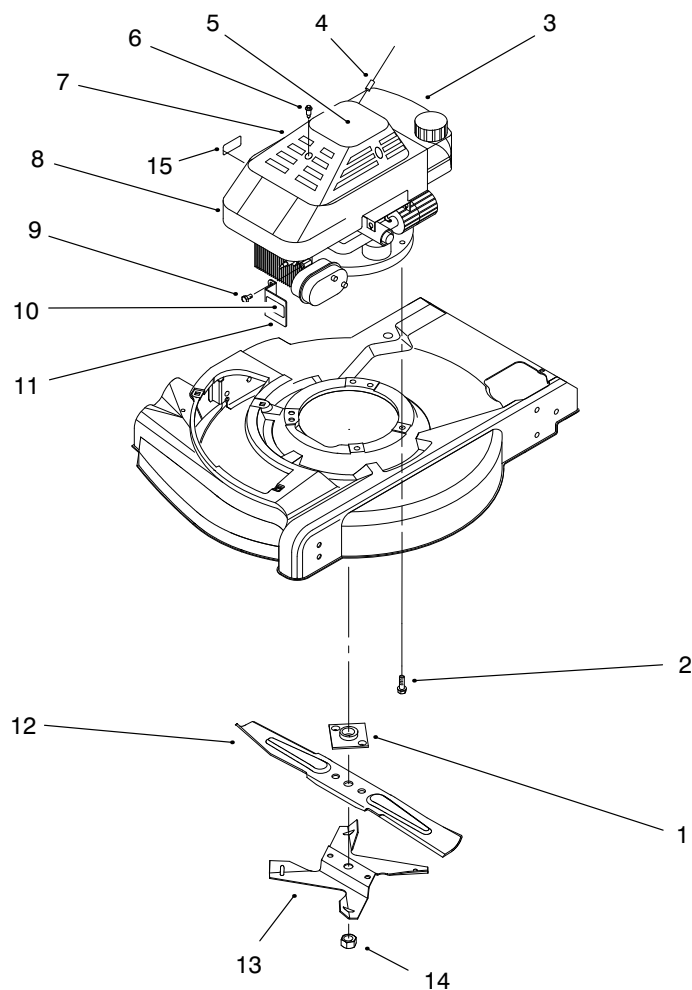


Sheet No.:4

Engine & Blade Assembly

Ref. No.	Part No.	Qty.	Description
1	677525	1	ASM-Plate & Collar
2	95-1726	3	Screw-Engine Mount
3		1	ASM-Engine
4	92-1701	1	Rope-Stop
5	95-7449	1	Decal-Shroud
6	92-4852	4	Screw-Recoil Cover
7	92-4854	1	Cover-Starter
8	94-6088	1	Shroud-Engine
9	32144-85	1	Screw-HH
10	65-2690	1	Decal-Hot Surface
11	94-6066	1	Guard-Muffler
12	612543	1	Blade-21" Whirl
13	92-1630	1	Fan-Mulching
14	603164	1	Nut-Blade
15	92-4851	1	Decal-Oil Instruction


Ref. No.	Part No.	Qty.	Description

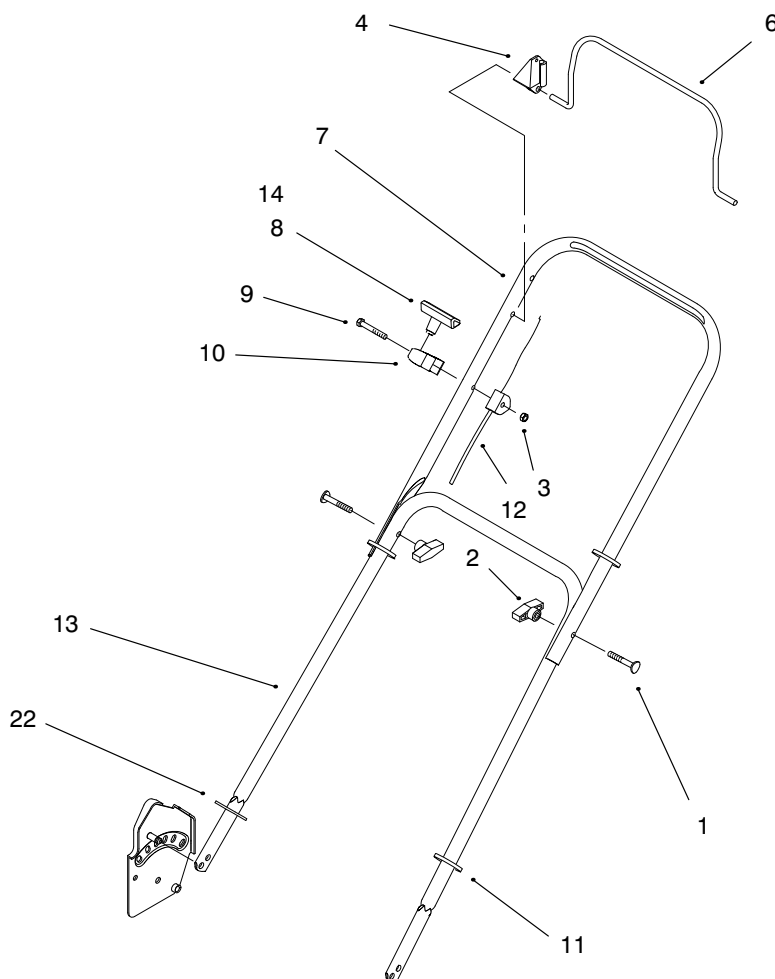

Sheet No.:5

Handle Assembly


Ref. No.	Part No.	Qty.	Description
1	614697	2	Screw—Handle
2	98—7134	2	Knob
3	3296—73	1	Nut—Lock
4	92—5412	1	Stop—Pivot
6	93—4184	1	Bail—Flywheel Brake
7	95—1713	1	Handle Section—Upper
8	92—4853	1	Handle—Starter
9	321—50	1	Screw
10	93—7383	1	Guide—Rope
11	614249	3	Tie Strap
12	98—1560	1	ASM—Brake Cable
13	614643	1	Handle Section—Lower
14	92—5424	1	Staple—Handle
22	93—3653	1	Handle—Guard

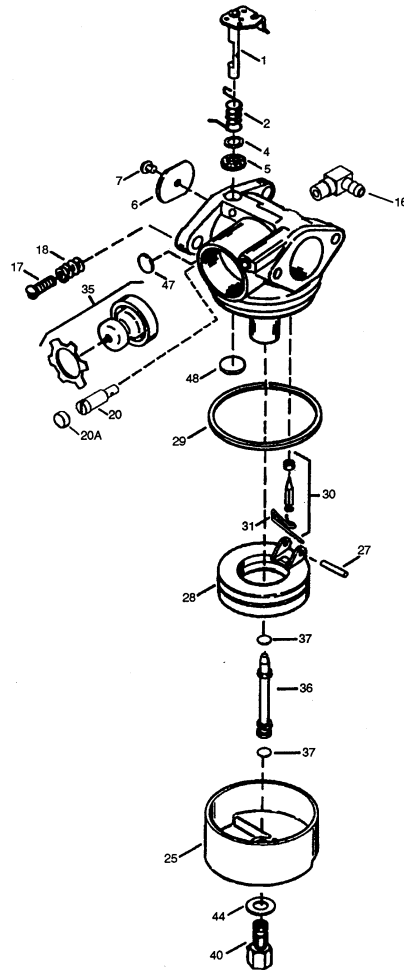

CARBURETOR No. 640119

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
0	640119	Carburetor	1	27	631024	Float Shaft	1
1	631615	Throttle Shaft & Lever Assembly	1	28	632019	Float	1
2	631767	Throttle Return Spring	1	29	631028	Float Bowl "O" Ring	1
4	631184	Dust Seal Washer	1	30	631021	Inlet Needle, Seat, & Clip (Incl. 31)	1
5	631183	Dust Seal (Throttle)	1	31	631022	Spring Clip	1
6	640070	Throttle Shutter	1	35	36045A	Primer Bulb/Retainer Ring	1
7	650506	Shutter Screw	1	36	632735	Main Nozzle Tube	1
16	631807	Fuel Fitting	1	37	632547	O-Ring, Main Nozzle Tube	2
17	651025	Throttle Crack Screw/Idle Speed Screw	1	40	640028	High Speed Bowl Nut	1
18	630766	Tension Spring	1	44	27110	Bowl Nut Washer	1
20	640016	Idle Restrictor Screw	1	47	630748	Welch Plug, Idle Mixture Well	1
20A	640053	Idle Restrictor Screw Cap	1	48	631027	Welch Plug, Atmospheric Vent	1
25	631867	Float Bowl	1				

ENGINE LEV120-361003A

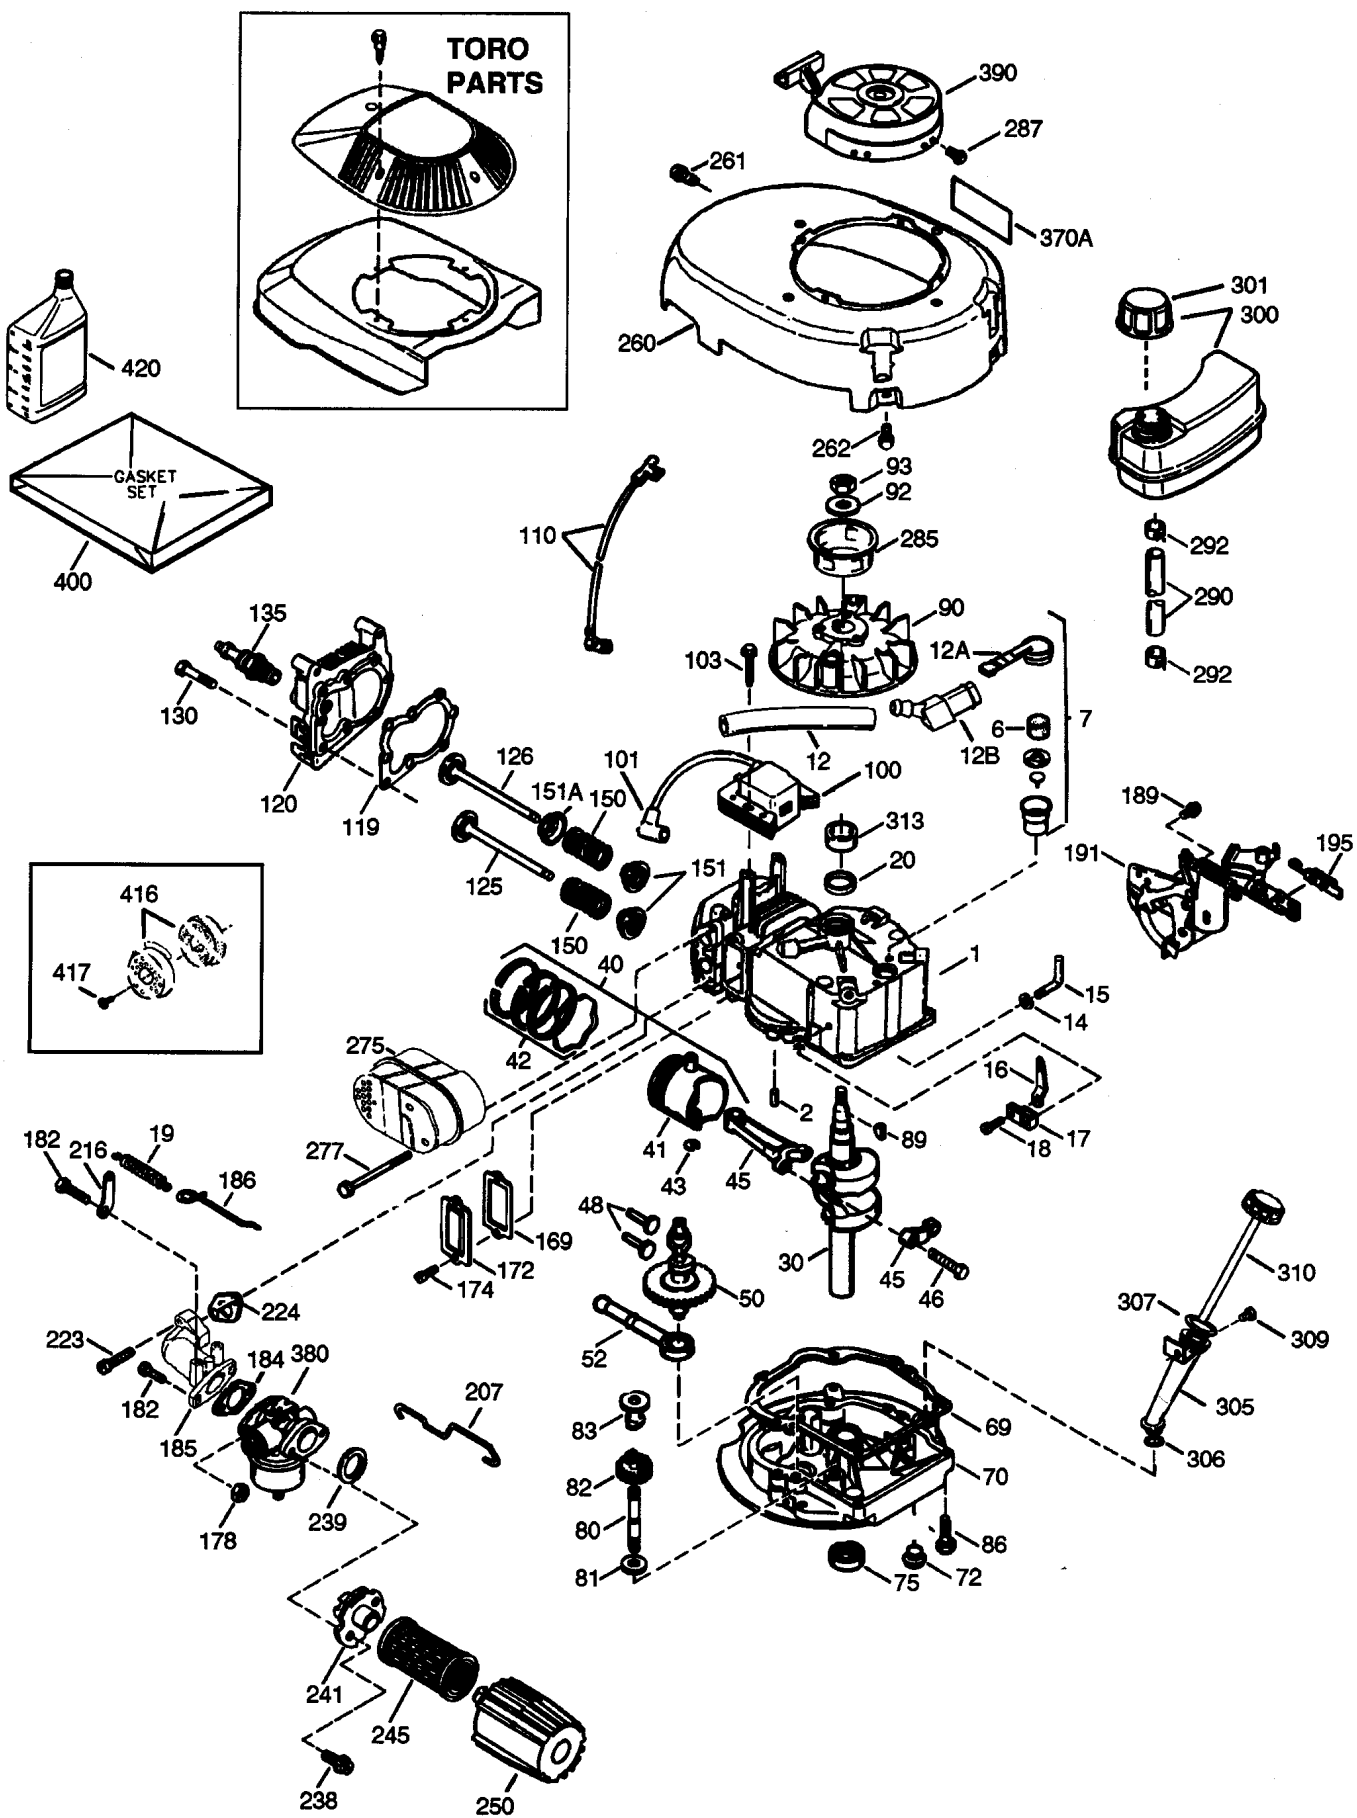


ENGINE LEV120-361003A

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	36774	Cylinder (Incl. 2 & 20)	1	125	36780	(Incl. 151) Exhaust Valve (1/32" OS)	1
2	26727	Dowel Pin	2			(Incl. 151)	1
6	33734	Breather Element	1	126	36781	Intake Valve (Std.) (Incl. 151)	1
7	36557	Breather Body Ass'y. (Incl. 6 & 12A)	1	126	36782	Intake Valve (1/32" OS) (Incl. 151)	1
12	36775	Breather Tube	1	130	6021A	Screw	6
12A	36558	Breather Cover & Tube (Incl. 12B)	1	135	35395	Resistor Spark Plug (RJ19LM)	1
12B	36694	Breather Tube Elbow	1	150	35991	Valve Spring	2
14	28277	Washer	1	151	31673	Valve Spring Cap	2
15	30589	Governor Rod (Incl. 14)	1	151A	40017	Intake Valve Seal	1
16	34839A	Governor Lever	1	169	36783	Valve Cover Gasket	1
17	31335	Governor Lever Clamp	1	172	36784	Valve Cover	1
18	651018	Screw	1	174	30200	Screw	2
19	36281	Extension Spring	1	178	29752	Nut & Lock Washer	2
20	32600	Oil Seal	1	182	6201	Screw	2
30	36597	Crankshaft	1	184	26756	Carburetor To Intake Pipe Gasket	1
40	40027	Piston, Pin & Ring Set (Std.)	1	185	36785	Intake Pipe	1
40	40028	Piston, Pin & Ring Set (.010" OS)	1	186	32653	Governor Link	1
41	40025	Piston & Pin Ass'y. (Std.) (Incl. 43)	1	189	650839	Screw	2
41	40026	Piston & Pin Ass'y. (.010" OS) (Incl. 43)	1	191	36559	S.E. Brake Bracket (Incl. 195)	1
42	40006	Ring Set (Std.)	1	195	610973	Terminal	1
42	40007	Ring Set (.010" OS)	1	207	34336	Throttle Link	1
43	20381	Piston Pin Retaining Ring	2	216	33086	R.P.M. Adjusting Lever	1
45	36777	Connecting Rod Ass'y. (Incl. 46)	1	223	650451	Screw	2
46	32610A	Connecting Rod Bolt	2	224	36786	Intake Pipe Gasket	1
48	27241	Valve Lifter	2	238	650932	Screw	2
50	36778	Camshaft (MCR)	1	239	34338	Air Cleaner Gasket	1
52	29914	Oil Pump Ass'y.	1	241	35797	Air Cleaner Collar	1
69	35261	Mounting Flange Gasket	1	245	35066	Air Cleaner Filter	1
70	36995	Mounting Flange (Incl. 72 thru 83)	1	250	35986	Air Cleaner Cover	1
72	36083	Oil Drain Plug	1	260	36999	Blower Housing	1
75	27897	Oil Seal	1	261	30200	Screw	2
80	30574A	Governor Shaft	1	262	650831	Screw	2
81	30590A	Washer	1	275	36790	Muffler	1
82	30591	Governor Gear Ass'y. (Incl. 81)	1	277	650988	Screw	2
83	30588A	Governor Spool	1	285	35000A	Starter Cup	1
86	650488	Screw	6	287	650926	Screw	2
89	611004	Flywheel Key	1	290	34357	Fuel Line	1
90	611112	Flywheel	1	292	26460	Fuel Line Clamp	2
92	650815	Belleville Washer	1	300	35586	Fuel Tank (Incl. 292 & 301)	1
93	650816	Flywheel Nut	1	301	36246	Fuel Cap	1
100	34443B	Solid State Ignition	1	305	35819A	Oil Fill Tube	1
101	610118	Spark Plug Cover	1	306	36996	"O"-Ring	1
103	651007	Screw, Torx T-15,	2	307	35499	"O"-Ring	1
110	37047	Ground Wire	1	309	651014	Screw	1
119	36787	Cylinder Head Gasket	1	310	36259	Dipstick	1
120	36825	Cylinder Head	1	313	34080	Spacer	1
125	36779	Exhaust Valve (Std.)	1	370A	36261	Lubrication Decal	1
				380	640119	Carburetor (Incl. 184)	1

ENGINE LEV120–361003A

Ref. No.	Part No.	Description	No. Used
390	590702	Rewind Starter (NOTE: This engine could have been built with 590739 starter. Refer to the design of the rope pulley strength ribs for part identification. Individual starter parts do not interchange. Refer to service bulletin 116.)	1
400	36792B	Gasket Set (Incl. Items Marked PK in Notes) Incl. part #'s 26756 (1), 28833 (1) 34338 (1), 36783 (1), 36786 (1) 36787 (1), 36832 (1), 36996 (1), 37130 (1).	1


Ref. No.	Part No.	Description	No. Used
416	36085	Spark Arrestor Kit (Incl. 417) (Optional)	1
417	650760	Screw (Optional)	1
420	730225	SAE 30 4–Cycle Engine Oil (Quart)	1

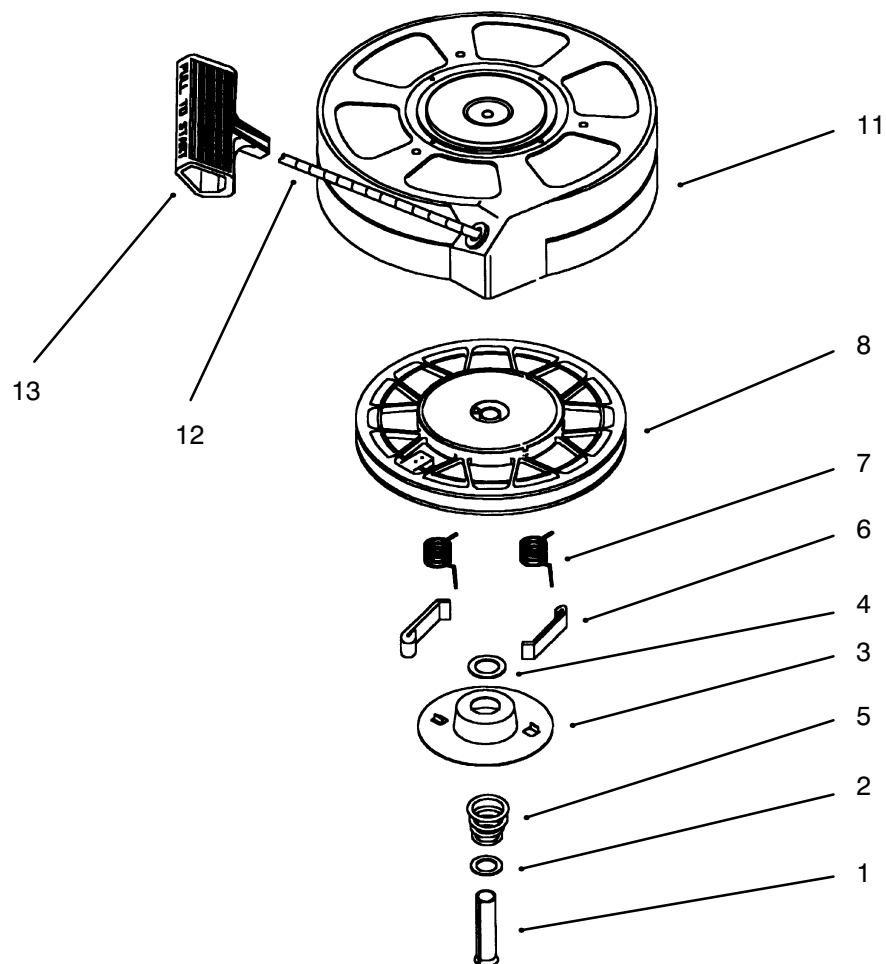

RECOIL STARTER ASSEMBLY 590702

Ref. No.	Part No.	Description	No. Used
0	590702	Recoil Starter	1
1	590599A	Spring Pin (Incl. 4)	1
2	590600	Washer	1
3	590696	Retainer	1
4	590601	Washer	2
5	590697	Brake Spring	1
6	590698	Starter Dog	2
7	590699	Dog Spring	2

Ref. No.	Part No.	Description	No. Used
8	590700	Pulley & Rewind Spring Ass'y.	1
11	590703	Starter Housing Ass'y (40 degree grommet)	1
12	590535	Starter Rope (98" X 9/64" dia.)	1
13	590701	Starter Handle	1

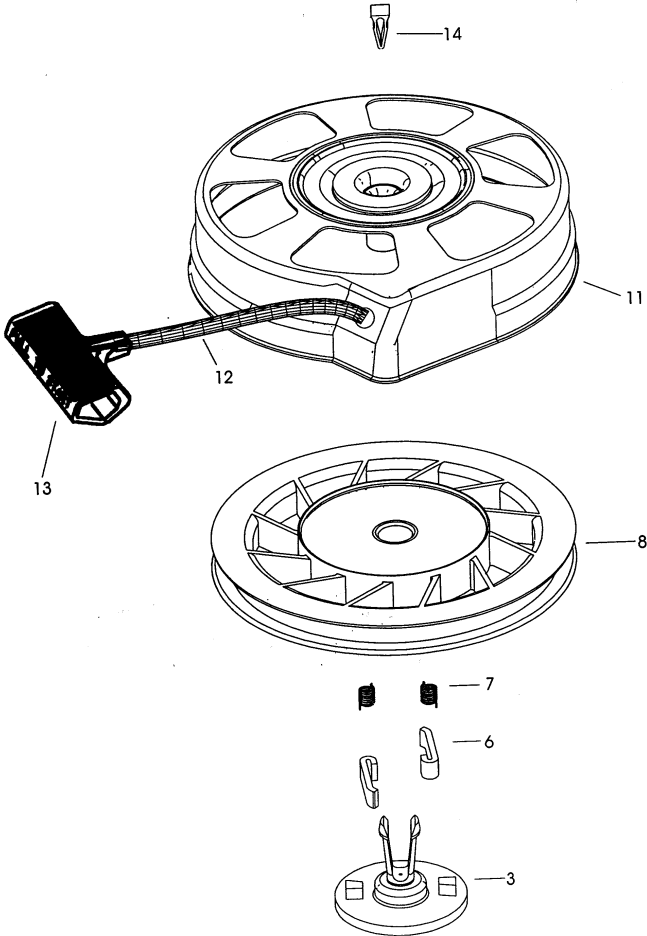

RECOIL STARTER ASSEMBLY 590739 (Optional)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
0	590739	Rewind Starter	1	11	590638	Starter Housing Ass'y (40 degree grommet)	1
3	590740	Retainer	1	12	590535	Starter Rope (Length 98" x 9/64" dia.)	1
6	590616	Starter Dog	2	13	590701	Starter Handle	1
7	590617	Dog Spring	2	14	590741	Locking Tab	1
8	590618A	Pulley & Rewind Spring Ass'y	1				

Lawn—Boy Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
603164	3	14	1	Nut—Blade
612543	3	12	1	Blade—21" Whirl
613765	1	11	1	Nut—Cage
614249	4	11	3	Tie Strap
614643	4	13	1	Handle Section—Lower
614650	1	1	2	Bolt—Shoulder
614672	1	21	4	Bolt—Shoulder
614677	1	9	2	Screw—Sems
614687	1	22	2	Spring Arm—Front
614697	4	1	2	Screw—Handle
677525	3	1	1	ASM—Plate & Collar
684776	1	19	2	ASM—Wheel & Tire 6"
684777	1	2	2	ASM—Wheel
39-5770	2	7	1	Decal—Danger
40-1940	1	18	4	Washer
65-2690	3	10	1	Decal—Hot Surface
92-1005	1	3	2	ASM—Spring Arm
92-1008	1	23	4	Knob—Height Adjust
92-1097	2	8	1	Decal—Discharge
92-1099	1	20	2	Bolt—Shoulder
92-1630	3	13	1	Fan—Mulching
92-1701	3	4	1	Rope—Stop
92-2914	2	2	1	Decal—HOC
92-2915	2	1	1	Decal—HOC
92-4851	3	15	1	Decal—Oil Instruction
92-4852	3	6	4	Screw—Recoil Cover
92-4853	4	8	1	Handle—Starter
92-4854	3	7	1	Cover—Starter
92-4881	1	14	2	Plate—Height Adjust
92-4890	1	15	4	Washer
92-5412	4	4	1	Stop—Pivot
92-5424	4	14	1	Staple—Handle
92-7731	1	16	2	Plate—Baffle
92-7742	1	6	1	RH Handle Bracket ASM
92-7743	1	4	1	ASM—Handle Brkt
92-8630	1	8	1	Mulch Plate—21"
92-8647	2	11	1	Shield—Trailing
93-3653	4	22	1	Handle—Guard
93-4184	4	6	1	Bail—Flywheel Brake
93-7250	2	3	1	Decal—Warning
93-7383	4	10	1	Guide—Rope
94-1610	1	10	2	Grommet—Plastic
94-6066	3	11	1	Guard—Muffler
94-6088	3	8	1	Shroud—Engine
95-1713	4	7	1	Handle Section—Upper
95-1726	3	2	3	Screw—Engine Mount
95-7052	2	6	1	Plate—Cover
95-7403	1	17	4	Bracket—Wheel Height Adj
95-7449	3	5	1	Decal—Shroud
98-1560	4	12	1	ASM—Brake Cable
98-1566	2	13	1	Decal—Deck
98-4471	1	5	1	ASM—Housing & Baffle
98-7134	4	2	2	Knob
98-8332	1	7	1	Knob—Cover Plate
321-50	4	9	1	Screw
322-3	2	12	4	Screw—HH
3296-29	2	10	4	Nut—Lock
3296-39	1	24	2	Nut—Lock
3296-73	4	3	1	Nut—Lock
32144-85	3	9	1	Screw—HH

*Not Illustrated

[illegible]

[illegible]