

LAWN-BOY®

Silver Series® Walk-Behind Mower

Model No. 10318 – 8900001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Housing Assembly	1	Bagging Assembly	6
Rear Axle Assembly	2	Engine Briggs & Stratton	
Engine Assembly	3	Model 12V802–3118–E1	7–15
Handle Assembly	4	Lawn–Boy Part Number Index	16–17
Gear Case Assembly	5	Note:	

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
Side Bagging Kit	Model No. 89814	Leaf Bag Kit w/Chute	Model No. 89811
Leaf Bag	Model No. 89804	Mow & Feed	
Leaf Shredder Kit	Model No. 89860	Fertilizer Spreader	Model No. 52070

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HWHTF	hex washer head thread forming
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	PH	pan head
FH	flat head	PPH	Phillips pan head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HFW	hex flange washer	SFH	slotted fillister head
HH	hex head	SH	square head
HHF	hex head flange	SHWH	slotted hex washer head
HHST	hex head self tapping	SPH	slotted pan head
HJ	hex jam	STD	standard
HOC	height-of-cut	TAP	self tapping
HS	hex socket	TH	truss head
HSBH	hex socket button head	TTH	Torx truss head
HSFH	hex socket flat head	WH	wing head
HSH	hex socket head		
HWH	hex washer head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form $X:Y$. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.

 
For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form $X (Y)$. X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

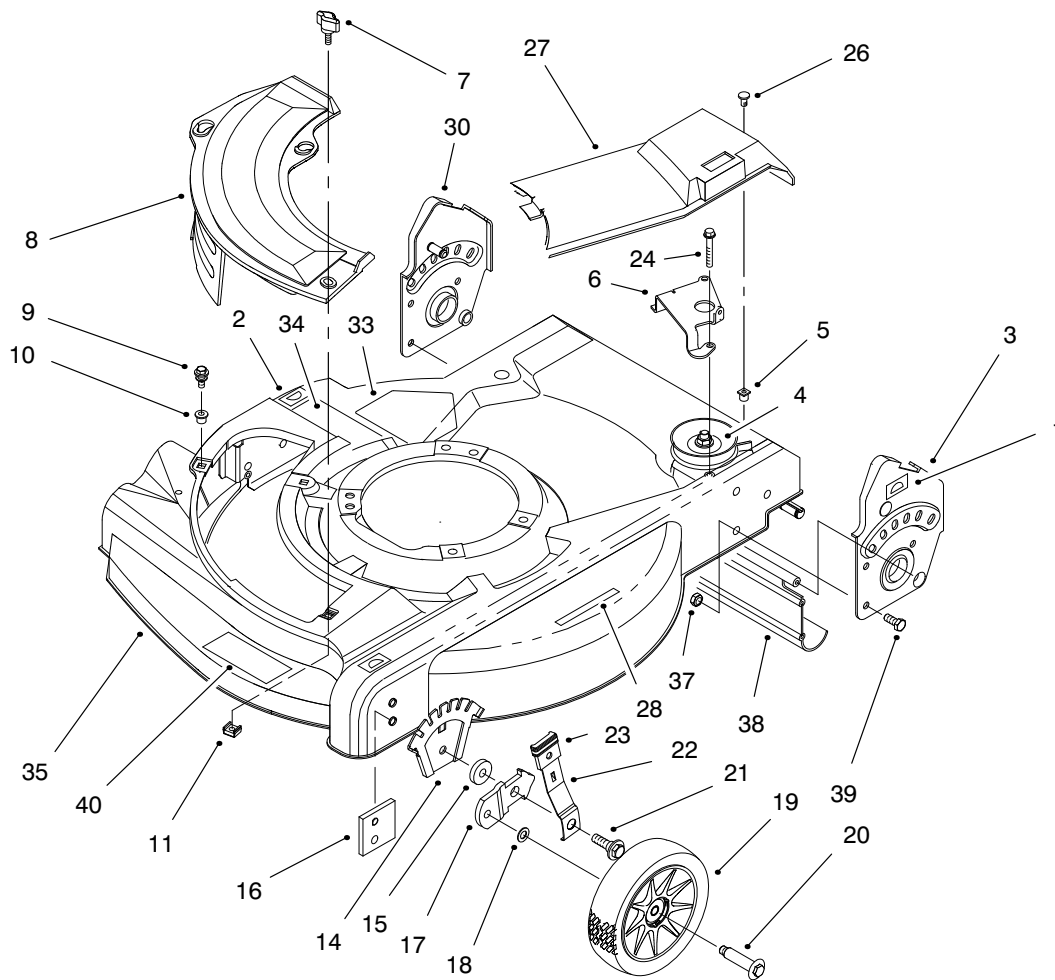


Sheet No.:2

Housing Assembly

Ref. No.	Part No.	Qty.	Description
1	92-2915	1	Decal-HOC
2	92-2914	1	Decal-HOC
3	92-7724	1	ASM-Handle Bracket
4	92-7735	1	ASM-Gear Case
5	605120	1	Grommet
6	92-7728	1	Guide-Transmission
7	98-8332	1	Knob-Cover Plate
8	92-8630	1	Mulch Plate-21"
9	614677	2	Screw-Sems
10	94-1610	2	Grommet-Plastic
11	613765	1	Nut-Cage
14	92-4881	2	Plate-Height Adjust
15	92-4890	2	Washer
16	92-7731	2	Plate-Baffle
17	95-7403	2	Bracket-Wheel Height Adj
18	40-1940	2	Washer
19	684776	2	ASM-Wheel & Tire 6"
20	92-1099	2	Bolt-Shoulder
21	614672	2	Bolt-Shoulder
22	614687	2	Spring Arm-Front
23	92-1008	4	Knob-Height Adjust
24	98-8347	2	Torx Head Cap Screw
26	92-9665	1	Screw-Phil
27	95-7068	1	Cover-Drive
28	93-7250	1	Decal-Warning

Ref. No.	Part No.	Qty.	Description
30	92-7723	1	ASM-Handle Bracket
*32	95-7052	1	Plate-Cover
33	39-5770	1	Decal-Danger
34	92-1097	1	Decal-Discharge
35	98-4477	1	ASM-Housing & Baffle
37	3296-29	6	Nut-Lock
38	92-8647	1	Shield-Trailing
39	322-3	6	Screw-HH

 
* Not illustrated

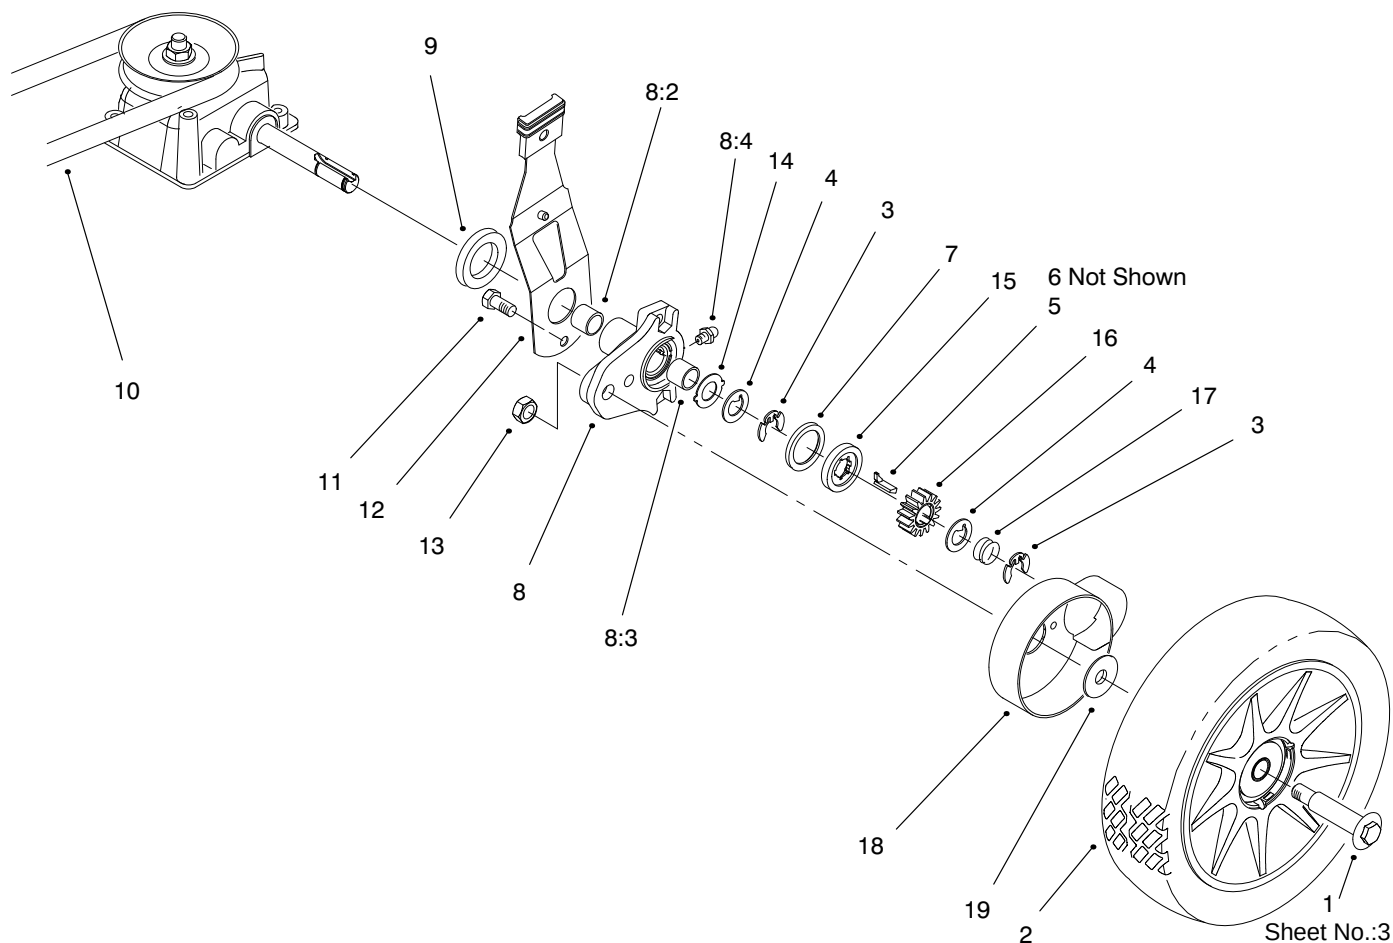

Rear Axle Assembly

Ref. No.	Part No.	Qty.	Description
1	92-1057	2	Bolt-Shoulder
2	92-1042	2	ASM-Whl
3	65-2720	4	Ring-Retaining
4	65-4740	4	Washer-Thrust
5	66-6050	1	Key-Rocking LH
6	66-6040	1	Key-Locking RH
7	65-4710	2	Ring-Friction
8	92-7746	2	ASM-Hgt Adj Arm
8:2	70-9760	2	Bushing
8:3	47-2900	2	Bushing
8:4	302-56	2	Fitting-Grease
9	614447	2	Spacer-Axle Shaft
10	93-7381	1	V-Belt
11	32144-85	2	Screw-HH
12	92-1004	2	ASM-Spring Arm
13	610358	2	Nut-Lock
14	65-4730	2	Washer-Thrust
15	65-4760	2	Washer
16	65-4750	2	Gear-Pinion
17	65-4720	2	Spring-Compression
18	94-1609	2	Cover-Wheel
19	614426	2	Washer-Stepped

Ref. No.	Part No.	Qty.	Description

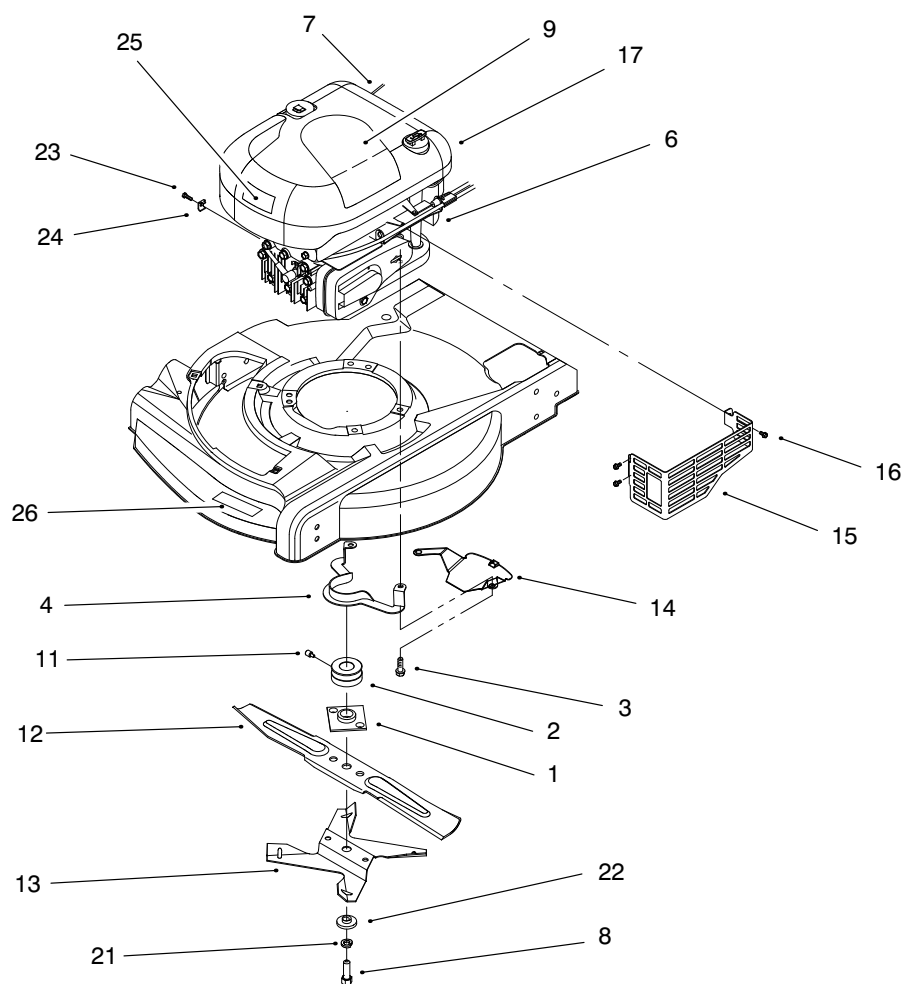 


Sheet No.:4

Engine Assembly

Ref. No.	Part No.	Qty.	Description
1	677525	1	ASM—Plate & Collar
2	92—6542	1	Pulley—Engine
3	95—1726	3	Screw—Engine Mount
4	92—1024	1	Guide—Belt
6		1	ASM—Engine
7	2210—316	1	Rope—Stop
8	95—1748	1	Bolt—Blade
9	98—1568	1	Decal—Recoil
11	613227	1	Screw—Set
12	612543	1	Blade—21" Whirl
13	92—1630	1	Fan—Mulching
14	93—4196	1	Shield—Grass
15	82—8550	1	Shield—Muffler
16	32144—73	3	Screw—HWHTF
17	95—1704	1	Shroud—Engine
21	3253—22	1	Washer—Lock
22	95—1712	1	Spacer—Blade
23	93—8470	1	Screw—Clamp
24	2210—249	1	Clamp—Casing
25	98—1592	1	Applique—Shroud
26	98—1567	1	Decal—Deck


Ref. No.	Part No.	Qty.	Description

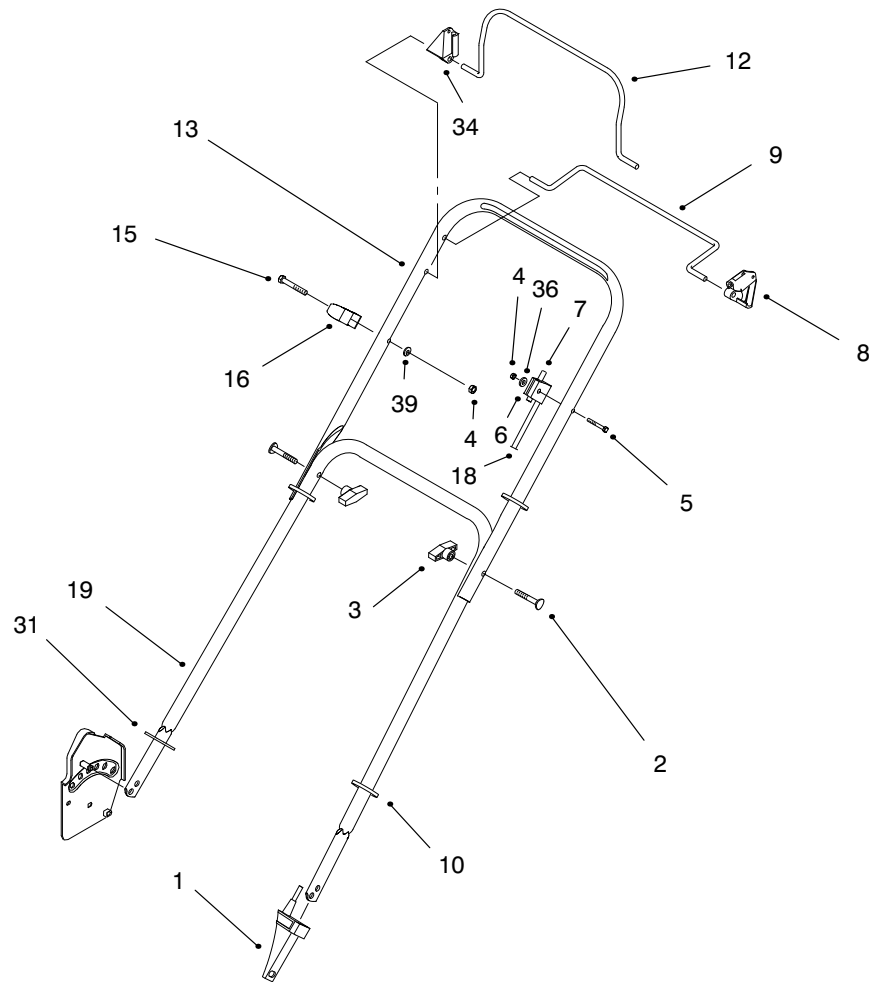 

Sheet No.:5

Handle Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	93-7380	1	Anchor-Cable				
2	614697	2	Screw-Handle				
3	98-7134	2	Knob				
4	3296-73	2	Nut-Lock				
5	92-2269	1	Screw-Handle				
6	94-6096	1	Anchor-Cable				
7	95-5590	1	Cable-Traction				
8	92-5412	1	Stop-Pivot				
9	92-1001	1	Bail-Sp Control				
10	614249	3	Tie Strap				
12	94-6099	1	Bail-Flywheel Brake				
13	95-1713	1	Handle Section-Upper				
15	321-51	1	Bolt-Hex				
16	93-7383	1	Guide-Rope				
18	95-1718	1	ASM-Brake Cable				
19	614643	1	Handle Section-Lower				
31	93-3653	1	Handle-Guard				
34	94-6097	1	Stop-Bail				
36	3256-1	1	Washer-Flat				
39	92-8632	1	Washer				

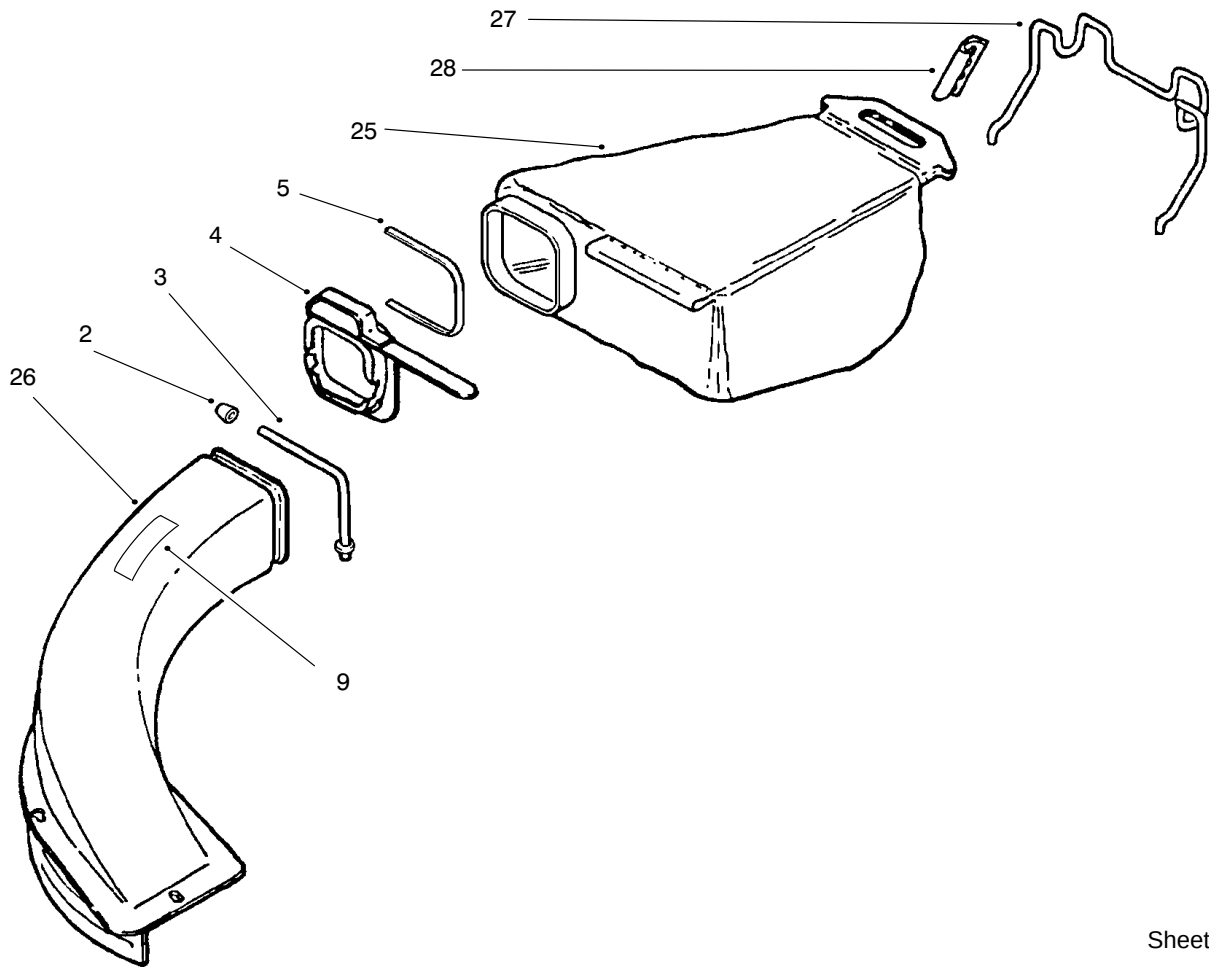 


Sheet No.:200

Bagging Assembly

Ref. No.	Part No.	Qty.	Description
2	614589	1	Nut–Cap
3	614591	1	Support–Chute
4	684727	1	ASM–Adaptor
5	614700	1	Tie Strap
9	92–2919	1	Decal–Danger
25		1	ASM–Bag & Adapter
26	684729	1	ASM–Chute & Support
27	613455	1	Hanger–Wire
28	613462	2	Hanger–Clamp

Ref. No.	Part No.	Qty.	Description

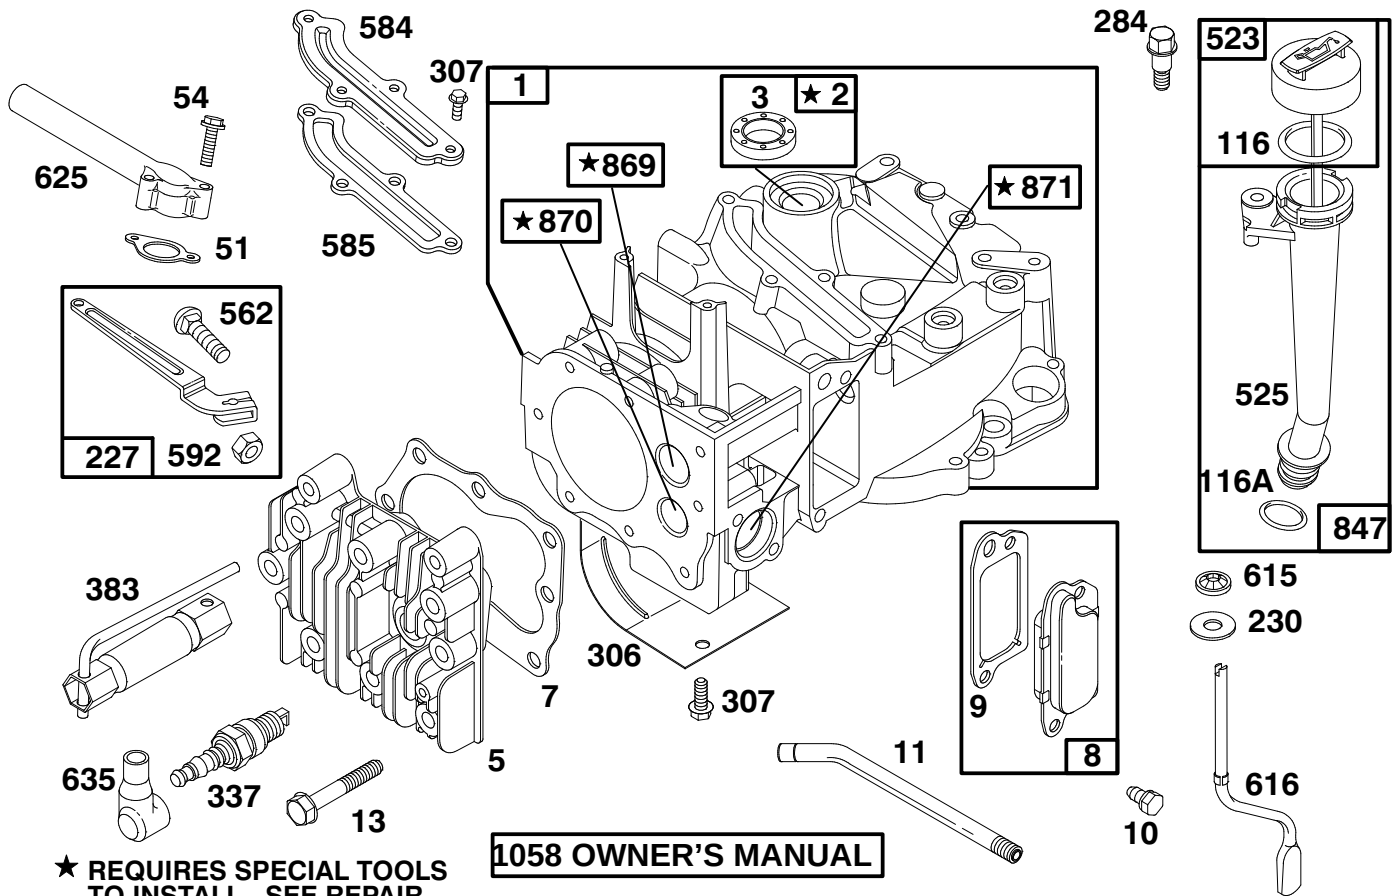 


ENGINE BRIGGS & STRATTON MODEL 12V802-3118-E1

Ref. No.	Part No.	Description	No. Used
1	493260	Cylinder Assembly	1
2	293708	Bushing – Cylinder	1
★3	299819	Seal – Oil	1
5	214368	Head – Cylinder	1
★†7	272916	Gasket – Cylinder Head	1
8	495786	Breather – Valve Chamber	1
★†9	272481	Gasket – Breather	1
10	94955	Screw – Hex.	1
11	231685	Tube – Breather	1
13	94547	Screw – Hex.	1
★51	272199	Gasket – Intake	1
54	94526	Screw – Hex.	1
★116	280393	Seal – O-Ring	1
★116A	280966	Seal – O-Ring	1
227	492349	Lever Assembly – Gov.	1
230	67072	Washer	1
284	94511	Screw – Shoulder	1
306	224324	Shield – Cylinder	1
307	94515	Screw – Hex.	1
337	802592	Plug – Spark	1
383	89838	Wrench – Spark Plug	1

Ref. No.	Part No.	Description	No. Used
523	495264	Dipstick	1
525	495265	Tube – Oil Fill	1
562	94907	Bolt – Carriage	1
584	224328	Cover – Breather Passage	1
★585	272238	Gasket – Breather Passage	1
592	231082	Nut – Hex.	1
615	94474	Retainer	1
616	263175	Crank – Governor	1
625	497465	Manifold – Intake	1
635	66538	Boot – Spark Plug	1
847	495263	Dipstick / Tube Assembly	1
869	213512	Seat – Valve (Intake)	1
870	213513	Seat – Valve (Exhaust)	1
871	262001	Guide – Exhaust Valve	1
1058	273693	Note: 63709 Guide – Intake Valve Owner's Manual	1

★ Included in Gasket Set–Part Number 497316.

 
† Included in Valve Overhaul Gasket Set–Part No. 498528.

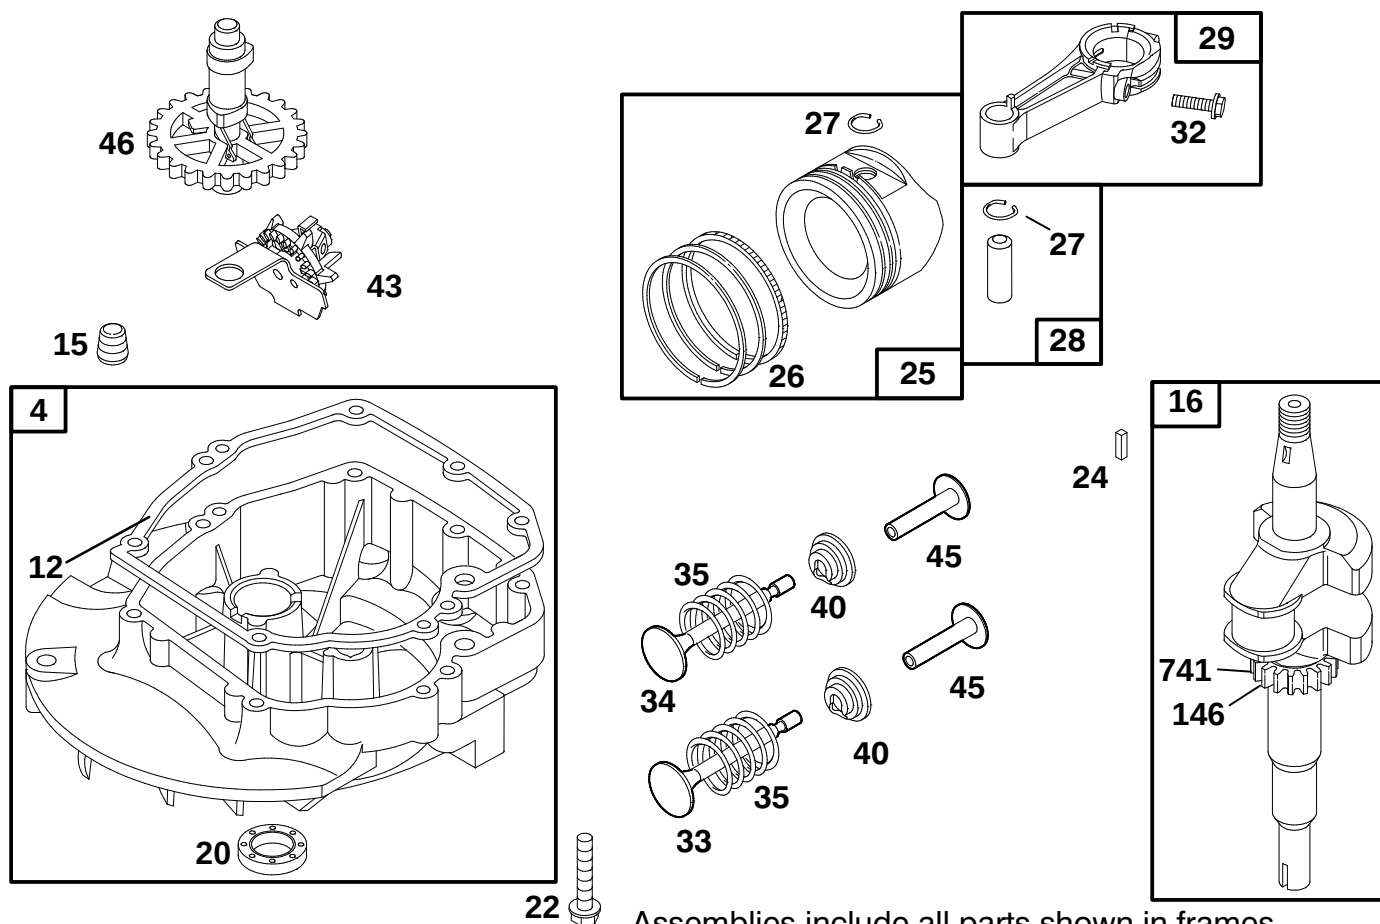

ENGINE BRIGGS & STRATTON MODEL 12V802-3118-E1

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
4	493279	Sump – Engine	1	27	263190	Lock – Piston Pin	1
★12	272198	Gasket – Crankcase	1	28	499423	Pin – Piston (Standard)	1
15	94880	Plug – Oil Drain (1/16 27 NPTF)	1		298908	Pin – Piston (.005" O.S.)	1
16	499147	Crankshaft	1	29	499424	Rod Assembly – Connecting	1
★20	399781	Seal – Oil	1		490743	Rod – Connecting (.020" Undersize)	1
22	94220	Screw – Hex. Head Note: 94612 Screw – Hex. (One Used in Hole Nearest Breather)	1	32	94699	Screw – Hex	1
24	222698	Key – Flywheel	1	33	262651	Valve – Exhaust	1
25	499429	Piston Assy. (Standard)	1	34	262652	Valve – Intake	1
	493385	Piston Assy. (.010" O.S.)	1	35	262224	Spring – Valve	1
	493386	Piston Assy. (.020" O.S.)	1	40	93312	Retainer – Valve	1
	493387	Piston Assy. (.030" O.S.)	1	45	262204	Tappet – Valve	1
26	499425	Ring Set (Standard)	1	43	493737	Governor/Oil Slinger	1
	499426	Ring Set (.010" O.S.)	1	46	498275	Gear – Cam	1
	499427	Ring Set (.020" O.S.)	1	146	94388	Key – Timing	1
	494428	Ring Set (.030" O.S.)	1	741	262598	Gear – Timing	1

 ★ Included in Gasket Set–Part Number 497316.

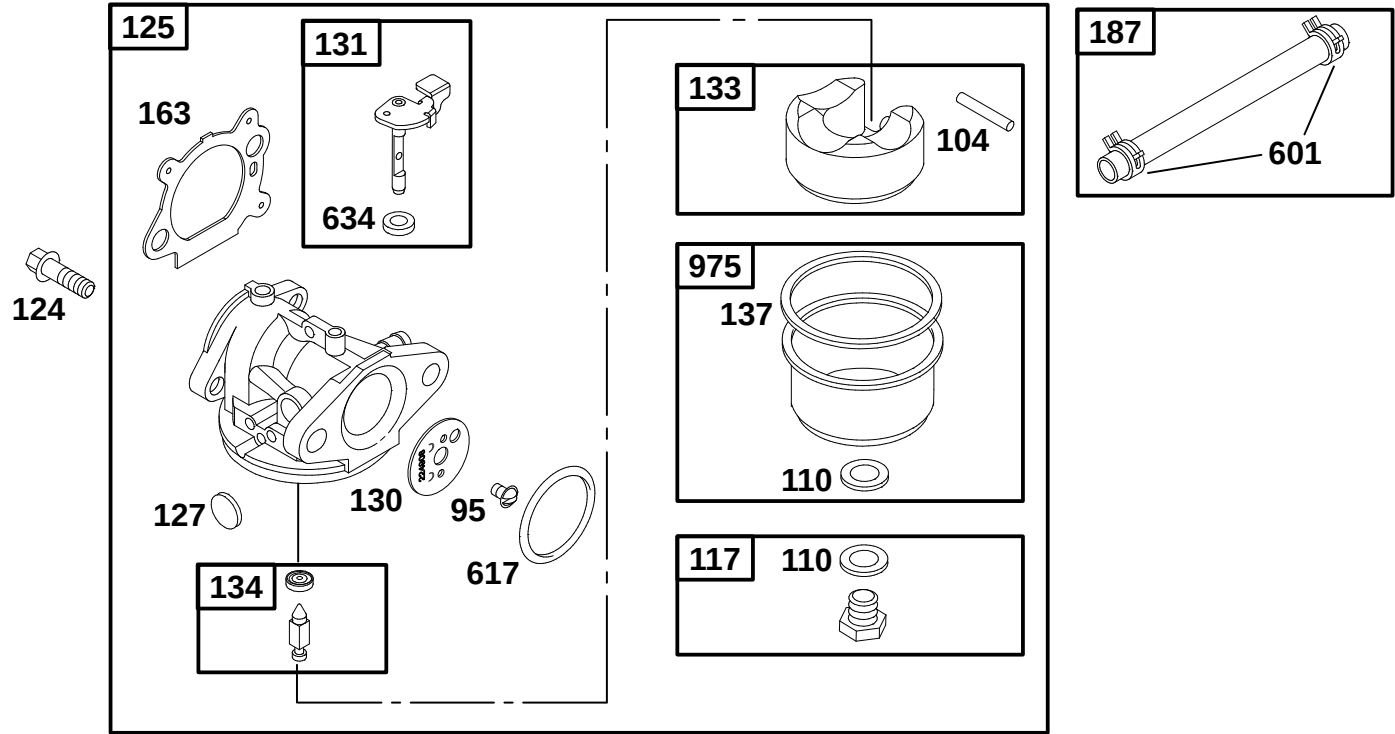


ENGINE BRIGGS & STRATTON MODEL 12V802-3118-E1

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
95	94098	Screw – Choke/Throttle	1	133	398187	Float – Carburetor	1
●104	231371	Pin – Float Hinge	1	●134	398188	Kit – Needle/Seat	1
◆110		Washer – Bowl (Sold in Kit Only)	1	◆137		Gasket – Bowl (Sold in Kit Only)	1
117	498975	Jet – Main (Standard)	1	★◆163	272653	Gasket – Air Cleaner	1
124	94525	Screw – Hex	1	187	492790	Line – Fuel	1
125	498966	Carburetor	1	601	93053	Clamp – Hose (Green)	1
●127		Plug – Welch (Sold in Kit Only)	1	◆617	270344	Seal – Intake Manifold	1
130	224908	Valve – Throttle	1	◆634		Washer – Foam (Sold in Kit Only)	1
131	493267	Shaft Kit Throttle	1	975	493640	Bowl Float	1

★ Included in Gasket Set-Part Number 497316.
● Included in Carburetor Kit-Part Number 498260.

 ◆ Included in Carburetor Gasket Set-Part Number 498261.

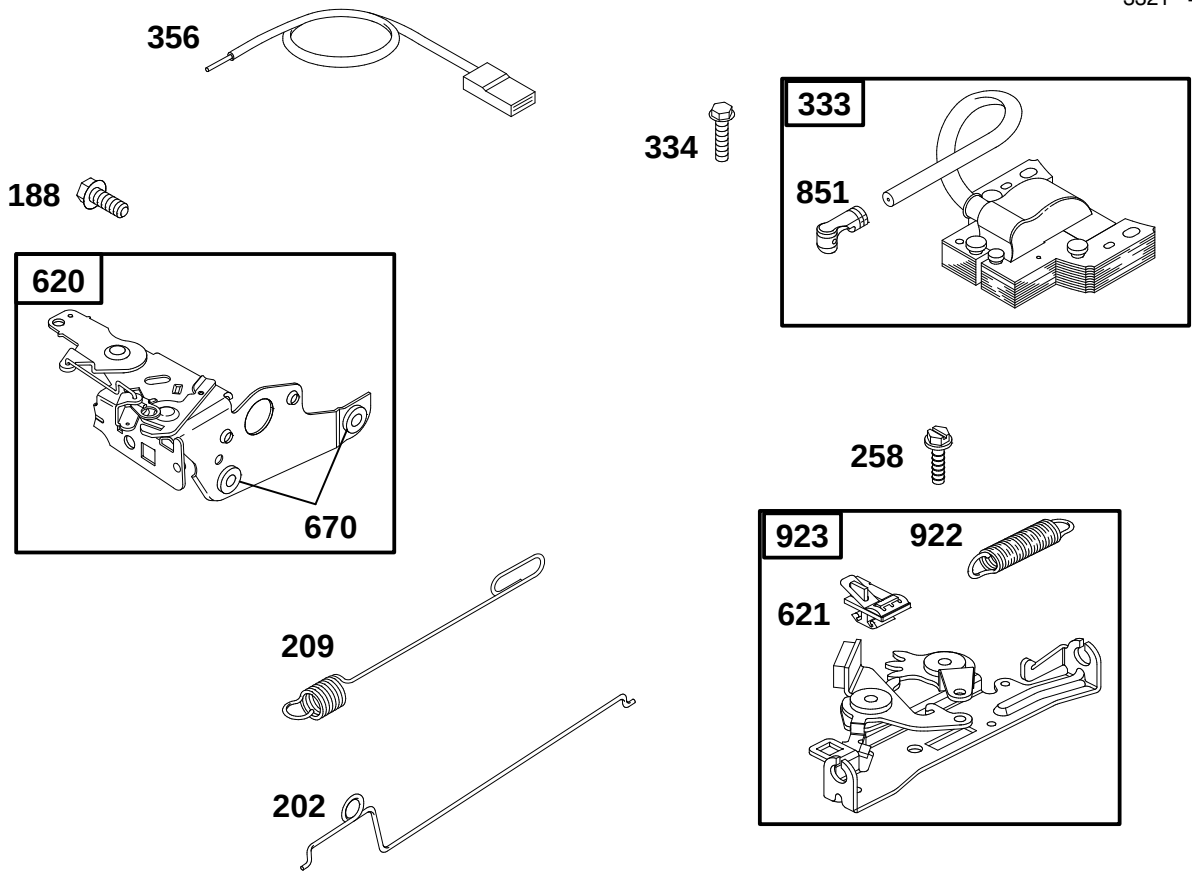


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12V802-3118-E1

Ref. No.	Part No.	Description	No. Used
188	94644	Screw – Hex.	1
202	262579	Link – Mechanical Governor	1
209	263044	Spring – Governor	1
258	94512	Screw – Slotted Hex.	1
333	802574	Armature – Magneto	1
334	94731	Screw – Hex.	1
356	497833	Wire – Stop	1

Ref. No.	Part No.	Description	No. Used
620	497837	Bracket – Control	1
621	396847	Switch – Stop	1
★670	493823	Spacer (Includes 2)	1
851	493880	Terminal – Cable	1
922	262640	Spring – Brake	1
923	493442	Brake	1

 
★ Included in Gasket Set-Part Number 497316.

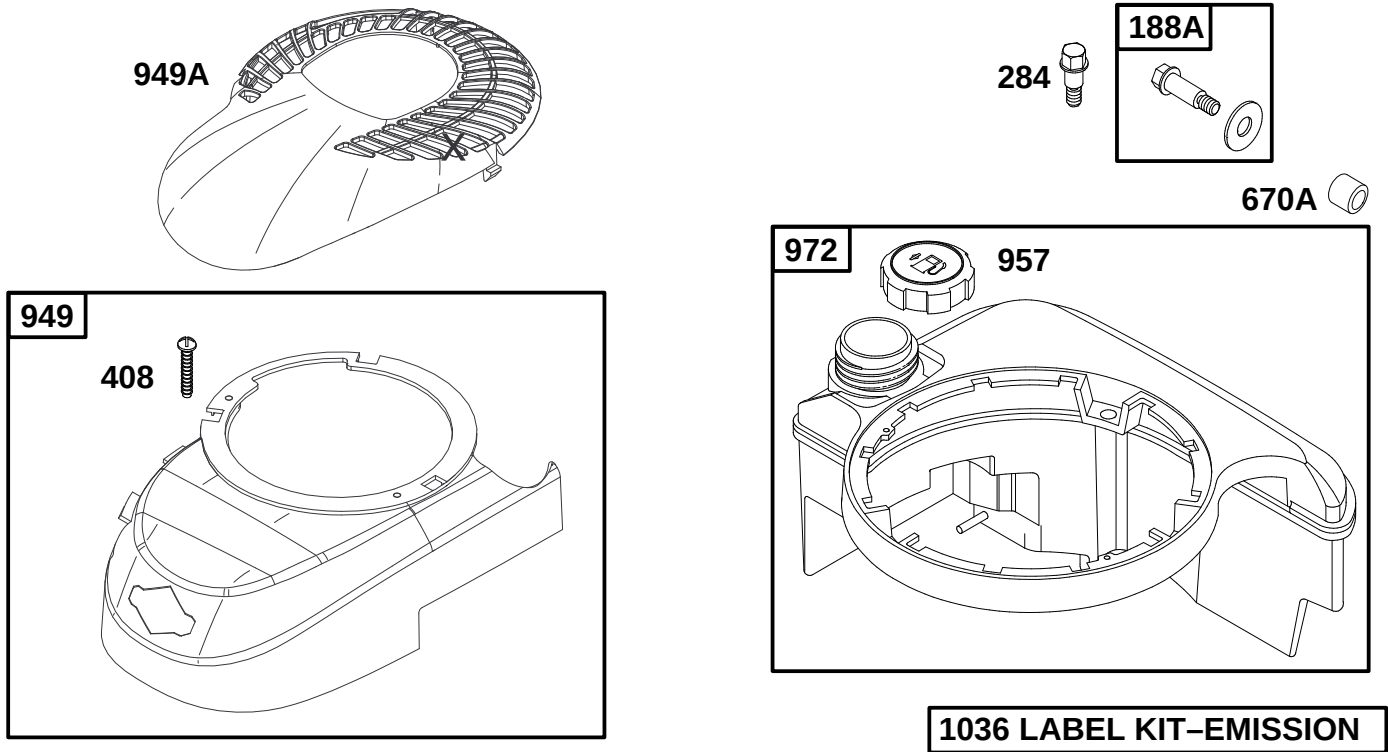

ENGINE BRIGGS & STRATTON MODEL 12V802-3118-E1

Ref. No.	Part No.	Description	No. Used
188A	398540	Screw - Washer Kit	1
284	94511	Screw - Shoulder	1
408	95050	Screw - Phillips	1
670A	280512	Spacer - Fuel Tank	1
949	693199	Guard - Rewind	1

Ref. No.	Part No.	Description	No. Used
949A	281633	Guard - Rewind	1
957	397974	Cap - Fuel Tank	1
972	495224	Tank - Fuel	1
1036	499341	Label Kit - Emission	1

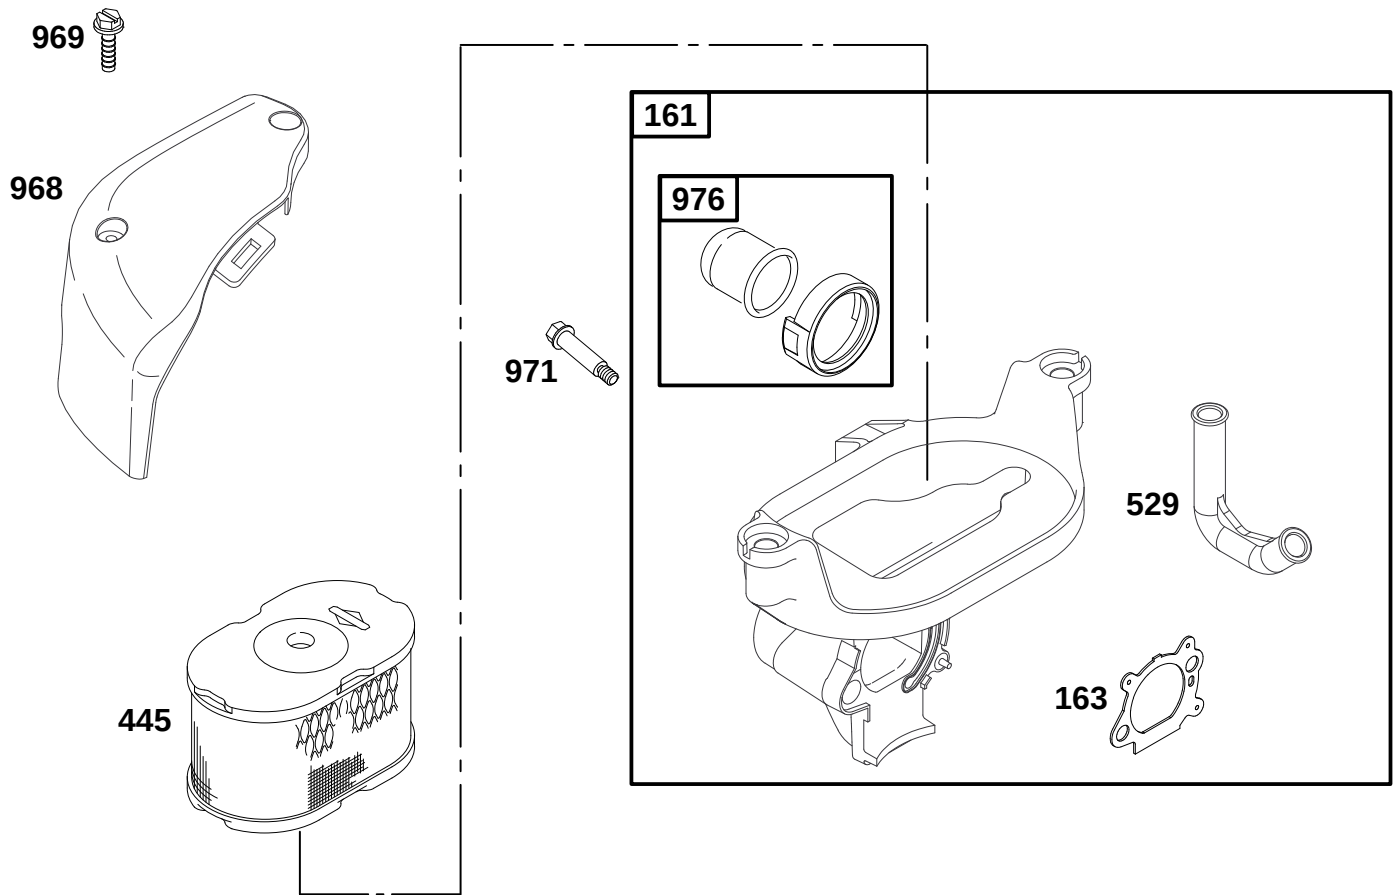 


ENGINE BRIGGS & STRATTON MODEL 12V802-3118-E1

Ref. No.	Part No.	Description	No. Used
161	497915	Base - A/C Primer	1
★◆163	272653	Gasket - Air Cleaner	1
445	497725	Filter - A/C Cartridge	1
529	281556	Tube - Breather	1

Ref. No.	Part No.	Description	No. Used
968	693198	Cover - Air Cleaner	1
969	94777	Screw - Slotted Hex.	1
971	94655	Screw - Shoulder	1
976	496115	Primer - Carburetor	1

★ Included in Gasket Set-Part Number 497316.
● Included in Carburetor Kit-Part Number 498260.

 ◆ Included in Carburetor Gasket Set-Part Number 498261.

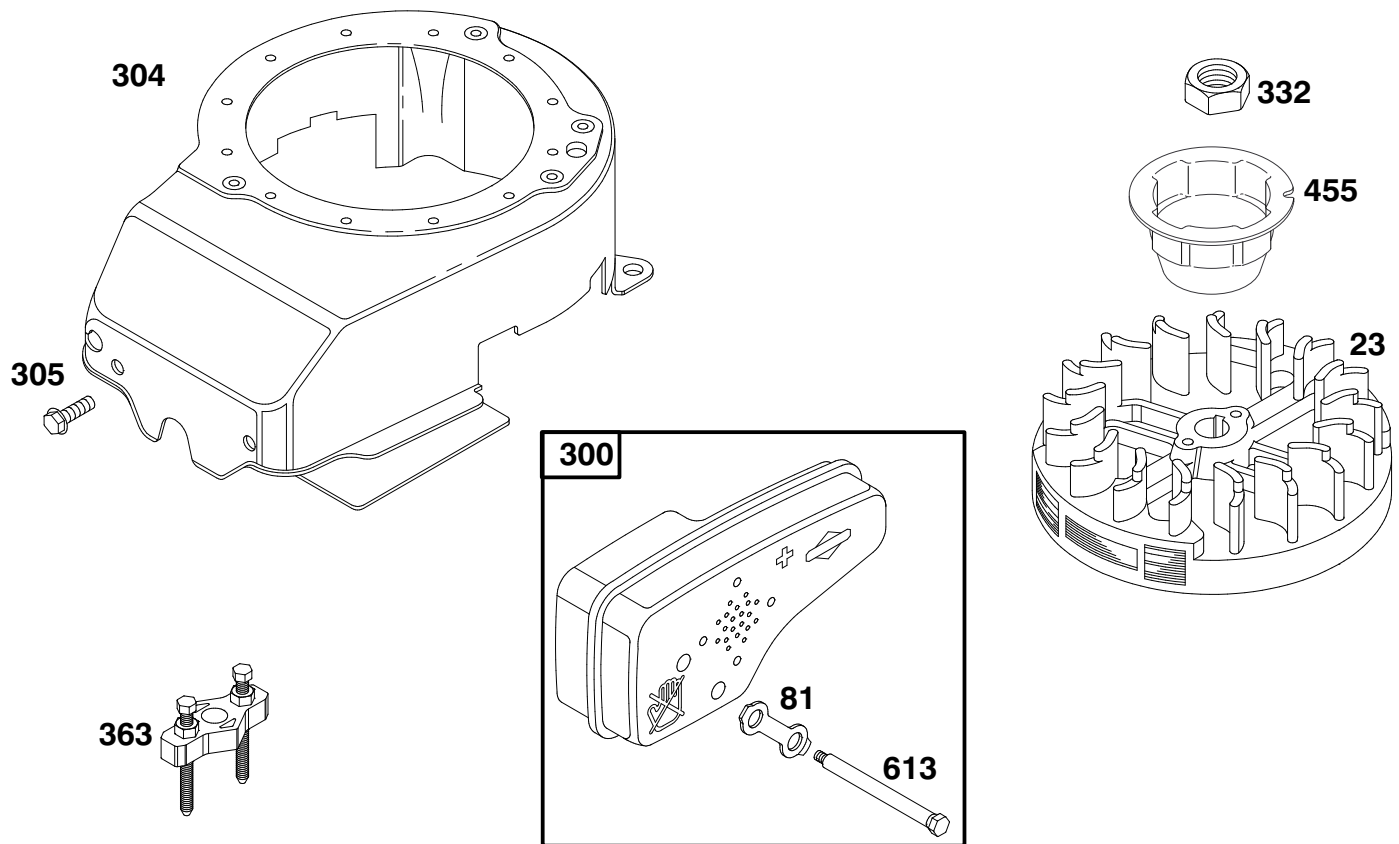


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12V802-3118-E1

Ref. No.	Part No.	Description	No. Used
23	492177	Flywheel	1
81	223664	Lock – Muffler Screw	1
300	497838	Muffler – Exhaust	1
304	493293	Housing – Blower	1
305	94744	Screw – Hex	1





Ref. No.	Part No.	Description	No. Used
332	94877	Nut – Flywheel	1
363	19069	Flywheel Puller	1
455	225121	Cup – Flywheel	1
613	94231	Screw – Shoulder	1

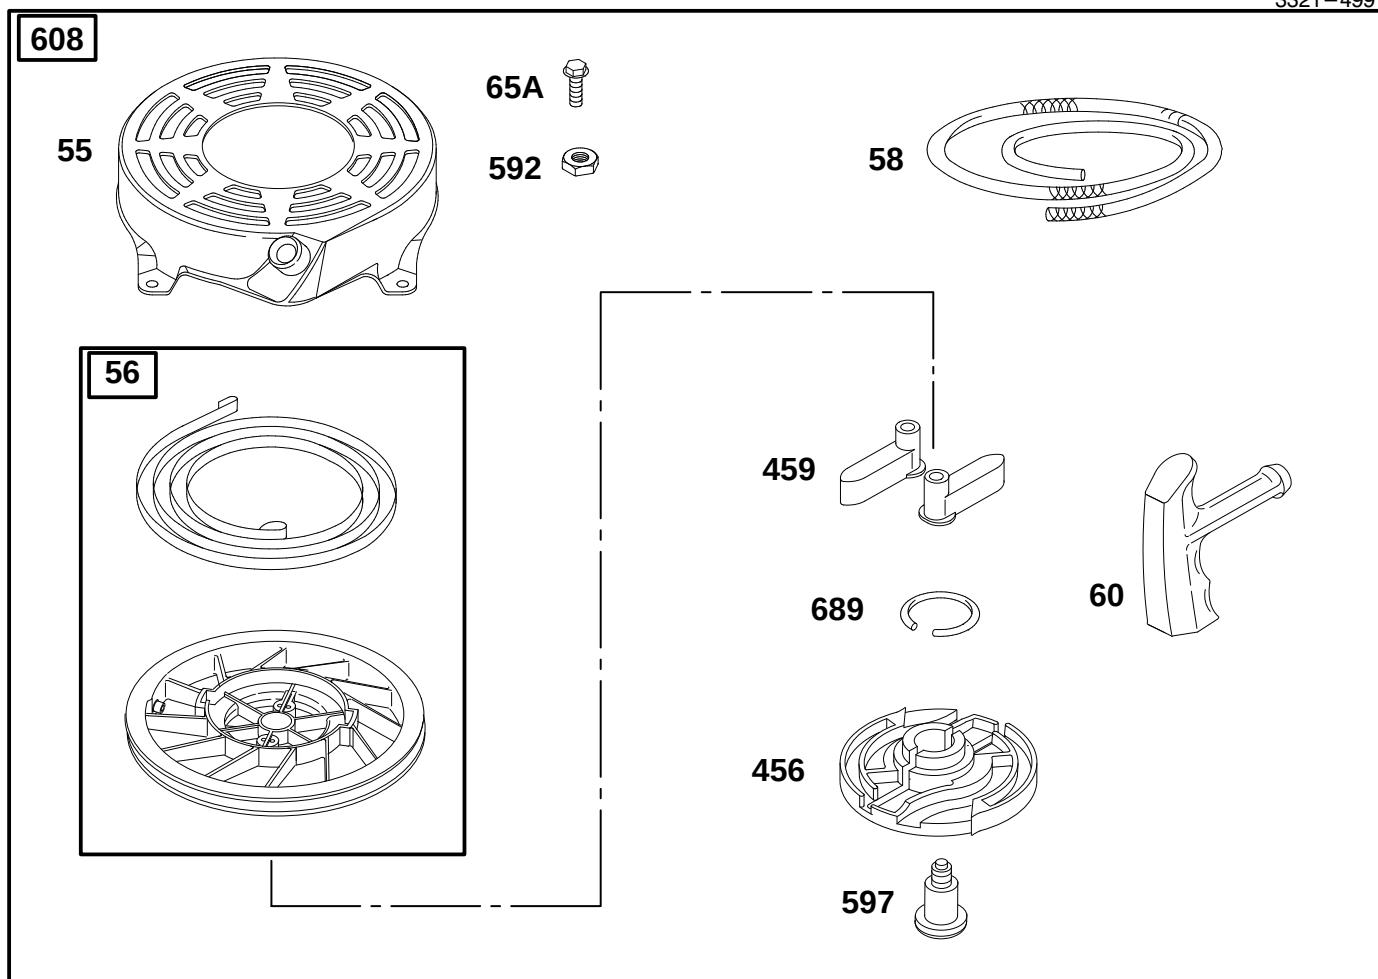 

ENGINE BRIGGS & STRATTON MODEL 12V802-3118-E1

Ref. No.	Part No.	Description	No. Used
55	497440	Housing - Rewind Starter	1
56	498144	Pulley - Starter	1
58	280399	Rope - Starter	1
		(Cut To Required Length)	1
60	281434	Grip - Starter Rope	1
65A	94908	Nut - Hex.	1

Ref. No.	Part No.	Description	No. Used
456	281503	Plate - Pawl Friction	1
459	281505	Pawl - Ratchet	1
592	94904	Screw - Hex	1
597	691696	Screw - Shoulder	1
608	497680	Starter - Rewind	1
689	263073	Spring - Friction	1

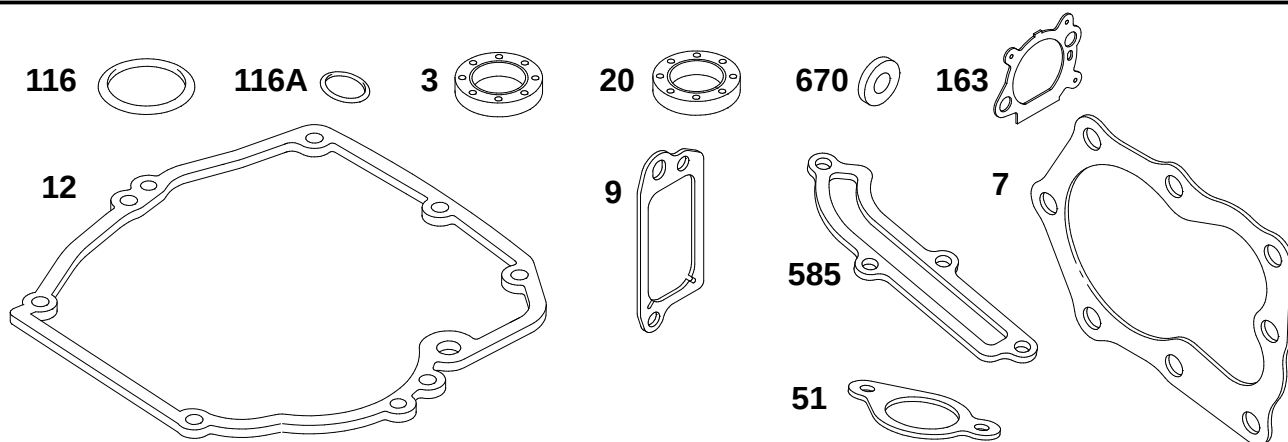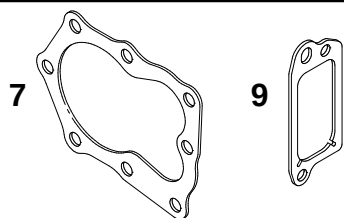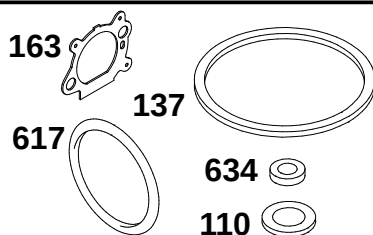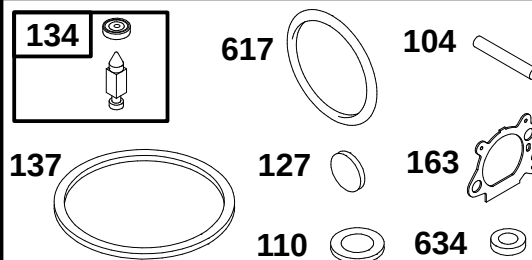    358 GASKET SET**1095 VALVE OVERHAUL GASKET SET****977 CARBURETOR GASKET SET****121 CARBURETOR KIT****ENGINE BRIGGS & STRATTON MODEL 12V802-3118-E1**

Ref. No.	Part No.	Description	No. Used
★3	299819	Seal – Oil	1
★†7	272916	Gasket – Cylinder Head	1
★†9	272481	Gasket – Breather	1
★12	272198	Gasket – Crankcase	1
★20	399781	Seal – Oil	1
★51	272199	Gasket – Intake	1
●104	231371	Pin – Float Hinge	1
●◆110		Washer – Bowl (Sold in Kit Only)	1
★116	280393	Seal – O-Ring	1
★116A	280966	Seal – O-Ring	1
121	498260	Carburetor Kit	1
●127		Plug – Welch (Sold in Kit Only)	1
●134	398188	Valve – Needle	1

Ref. No.	Part No.	Description	No. Used
●◆137		Gasket – Bowl (Sold in Kit Only)	1
★●◆163	272653	Gasket – Air Cleaner	1
358	497316	Gasket Set	1
★585	272238	Gasket – Breather Passage	1
●◆617	270344	Seal – Intake Manifold	1
●◆634		Washer – Foam (Sold in Kit Only)	1
★670	493823	Spacer (Includes 2)	1
★977	498261	Gasket Set – Carburetor	1
1095	498528	Gasket Set – Valve Overhaul	1

★ Included in Gasket Set–Part Number 497316.
● Included in Carburetor Kit–Part Number 498260.

◆ Included in Carburetor Gasket Set–Part Number 498261.
† Included in Valve Overhaul Gasket Set–Part No. 498528.

Lawn—Boy Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
605120	1	5	1	Grommet
610358	2	13	2	Nut—Lock
612543	3	12	1	Blade—21" Whirl
613227	3	11	1	Screw—Set
613455	6	27	1	Hanger—Wire
613462	6	28	2	Hanger—Clamp
613765	1	11	1	Nut—Cage
614249	4	10	3	Tie Strap
614426	2	19	2	Washer—Stepped
614447	2	9	2	Spacer—Axle Shaft
614589	6	2	1	Nut—Cap
614591	6	3	1	Support—Chute
614596	5	5	1	Gear—34t
614643	4	19	1	Handle Section—Lower
614668	5	1	1	Cover—Gear Case
614669	5	17	2	Pulley—Half
614672	1	21	2	Bolt—Shoulder
614677	1	9	2	Screw—Sems
614687	1	22	2	Spring Arm—Front
614696	5	8	1	Shaft—Intermediate
614697	4	2	2	Screw—Handle
614700	6	5	1	Tie Strap
677525	3	1	1	ASM—Plate & Collar
684727	6	4	1	ASM—Adaptor
684729	6	26	1	ASM—Chute & Support
684776	1	19	2	ASM—Wheel & Tire 6"
36-4780	5	6	2	Washer—Thrust
36-4791	5	11	2	Washer—Thrust
38-7820	5	13	1	Bearing—Ball
39-5770	1	33	1	Decal—Danger
40-1940	1	18	2	Washer
47-2900	2	8:3	2	Bushing
55-3760	5	10	1	15 T Pinion
60-8750	5	12	2	Bushing
60-8850	5	3	2	Bushing—Output
60-8890	5	15	1	Gear—Pinnion
62-6660	5	18	1	Spacer—Pulley
65-2720	2	3	4	Ring—Retaining
65-4710	2	7	2	Ring—Friction
65-4720	2	17	2	Spring—Compression
65-4730	2	14	2	Washer—Thrust
65-4740	2	4	4	Washer—Thrust
65-4750	2	16	2	Gear—Pinion
65-4760	2	15	2	Washer
66-6040	2	6	1	Key—Locking RH
66-6050	2	5	1	Key—Rocking LH
70-9760	2	8:2	2	Bushing
82-8550	3	15	1	Shield—Muffler
92-1001	4	9	1	Bail—Sp Control
92-1004	2	12	2	ASM—Spring Arm
92-1008	1	23	4	Knob—Height Adjust
92-1024	3	4	1	Guide—Belt
92-1042	2	2	2	ASM—Whl
92-1057	2	1	2	Bolt—Shoulder
92-1097	1	34	1	Decal—Discharge
92-1099	1	20	2	Bolt—Shoulder
92-1630	3	13	1	Fan—Mulching
92-2269	4	5	1	Screw—Handle
92-2914	1	2	1	Decal—HOC
92-2915	1	1	1	Decal—HOC
92-2919	6	9	1	Decal—Danger
92-4881	1	14	2	Plate—Height Adjust

*Not Illustrated

Lawn–Boy Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
92–4890	1	15	2	Washer
92–5412	4	8	1	Stop–Pivot
92–6542	3	2	1	Pulley–Engine
92–7723	1	30	1	ASM–Handle Bracket
92–7724	1	3	1	ASM–Handle Bracket
92–7727	5	2	1	Gearcase–Upper Ss
92–7728	1	6	1	Guide–Transmission
92–7731	1	16	2	Plate–Baffle
92–7735	1	4	1	ASM–Gear Case
92–7746	2	8	2	ASM–Hgt Adj Arm
92–8630	1	8	1	Mulch Plate–21”
92–8632	4	39	1	Washer
92–8647	1	38	1	Shield–Trailing
92–9665	1	26	1	Screw–Phil
93–0239	5	7	1	Shaft–Output
93–3653	4	31	1	Handle–Guard
93–4196	3	14	1	Shield–Grass
93–7250	1	28	1	Decal–Warning
93–7380	4	1	1	Anchor–Cable
93–7381	2	10	1	V–Belt
93–7383	4	16	1	Guide–Rope
93–8470	3	23	1	Screw–Clamp
94–1609	2	18	2	Cover–Wheel
94–1610	1	10	2	Grommet–Plastic
94–6096	4	6	1	Anchor–Cable
94–6097	4	34	1	Stop–Bail
94–6099	4	12	1	Bail–Flywheel Brake
95–1704	3	17	1	Shroud–Engine
95–1712	3	22	1	Spacer–Blade
95–1713	4	13	1	Handle Section–Upper
95–1718	4	18	1	ASM–Brake Cable
95–1726	3	3	3	Screw–Engine Mount
95–1748	3	8	1	Bolt–Blade
95–5590	4	7	1	Cable–Traction
95–7052	1	32	1	Plate–Cover
95–7068	1	27	1	Cover–Drive
95–7403	1	17	2	Bracket–Wheel Height Adj
98–1567	3	26	1	Decal–Deck
98–1568	3	9	1	Decal–Recoil
98–1592	3	25	1	Applique–Shroud
98–4477	1	35	1	ASM–Housing & Baffle
98–7134	4	3	2	Knob
98–8332	1	7	1	Knob–Cover Plate
98–8347	1	24	2	Torx Head Cap Screw
2210–249	3	24	1	Clamp–Casing
2210–316	3	7	1	Rope–Stop
302–56	2	8:4	2	Fitting–Grease
321–51	4	15	1	Bolt–Hex
322–3	1	39	6	Screw–HH
3253–22	3	21	1	Washer–Lock
3256–1	4	36	1	Washer–Flat
3256–24	5	14	1	Washer–Flat
3285–19	5	4	2	Pin–Spirol
3296–5	5	16	1	Nut–Lock
3296–29	1	37	6	Nut–Lock
3296–73	4	4	2	Nut–Lock
32144–4	5	9	4	Screw–TAP
32144–73	3	16	3	Screw–HWHTF
32144–85	2	11	2	Screw–HH