



**Count on it.**

Form No. 3418-831 Rev A

# Parts Catalog

## Groundsmaster® 7210 Series Traction Unit

Model No. 30695—Serial No. 401390001 and Up



# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

## Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

## Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

## Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# Contents

|                                                                  |    |
|------------------------------------------------------------------|----|
| Transmission Assembly                                            | 6  |
| Charge Pump Housing Assembly Transmission Assembly No. 131-5510  | 8  |
| Center Section Assembly Transmission Assembly No. 131-5510       | 10 |
| Gear Case and Clutch Assembly Transmission Assembly No. 131-5510 | 12 |
| Driveshaft Assembly No. 110-3575                                 | 14 |
| Hydraulic Gear Pump Assembly No. 112-9542                        | 15 |
| Rear Drive Assembly                                              | 16 |
| Hydraulic Motor Assembly No. 108-5155                            | 17 |
| Hydraulic Motor Assembly No. 108-5230                            | 18 |
| LH Brake Caliper Assembly No. 120-0013                           | 19 |
| RH Brake Caliper Assembly No. 120-0014                           | 20 |
| Brake Handle Assembly                                            | 21 |
| Traction Control Assembly                                        | 22 |
| Link Assembly No. 112-5099                                       | 23 |
| RH Lever Assembly No. 125-2687                                   | 24 |
| Control Panel Assembly                                           | 25 |
| Left-Hand and Right-Hand Fuel Tank Assembly                      | 26 |
| LH Fuel Tank Assembly No. 131-5509                               | 27 |
| RH Fuel Tank Assembly No. 132-8116                               | 28 |
| Fuel System Assembly                                             | 29 |
| Seat and Seat Plate Assembly                                     | 30 |
| Seat Assembly No. 125-3107                                       | 31 |
| Floorplate and Carrier Frame Assembly                            | 32 |
| Carrier Frame Assembly No. 136-4466                              | 33 |
| Lift Valve and Cylinder Assembly                                 | 34 |
| Valve Assembly No. 131-1934                                      | 35 |
| Hydraulic Cylinder Assembly No. 110-9834                         | 36 |
| Caster Wheel Assembly                                            | 37 |
| Caster Wheel Assembly No. 133-4723                               | 38 |
| Deck Lift Assembly                                               | 39 |
| Battery and Relay Assembly                                       | 40 |
| Main Wire Harness Assembly                                       | 41 |
| Engine Harness Assembly                                          | 42 |
| Hydraulic Reservoir Assembly                                     | 43 |
| Hydraulic Reservoir Assembly No. 110-8237                        | 44 |
| Hydraulic Hose Routing Assembly                                  | 45 |
| Air Cleaner Assembly                                             | 46 |
| Air Cleaner Assembly No. 136-4481                                | 47 |
| Frame and Upper-ROPS Assembly                                    | 48 |
| Engine Assembly                                                  | 49 |
| Radiator Assembly                                                | 50 |
| Cooling Assembly No. 121-3330                                    | 52 |
| Hood Assembly                                                    | 53 |
| Cylinder Block Assembly                                          | 54 |
| Gear Housing Assembly                                            | 56 |
| Cylinder Head and Cover Assembly                                 | 58 |
| Suction Manifold Assembly                                        | 60 |
| Exhaust Manifold Assembly                                        | 62 |
| Diesel Particulate Filter Assembly                               | 64 |
| Flywheel Housing and Oil Sump Assembly                           | 66 |
| Camshaft and Driving Gear Assembly                               | 67 |
| Crankshaft and Piston Assembly                                   | 68 |
| Cooling Water System Assembly                                    | 70 |
| Starting Motor Assembly                                          | 72 |

Contents (continued)

Generator Assembly ..... 74

Fuel System Assembly ..... 76

Fuel Injection Valve Assembly ..... 77

Fuel Line Assembly ..... 78

Electronic Control Unit Assembly..... 79

Electric Parts Assembly..... 80

 
Lubrication and Oil System Assembly..... 81

Gasket Set..... 82

Attachments and Accessories ..... 83




# Transmission Assembly

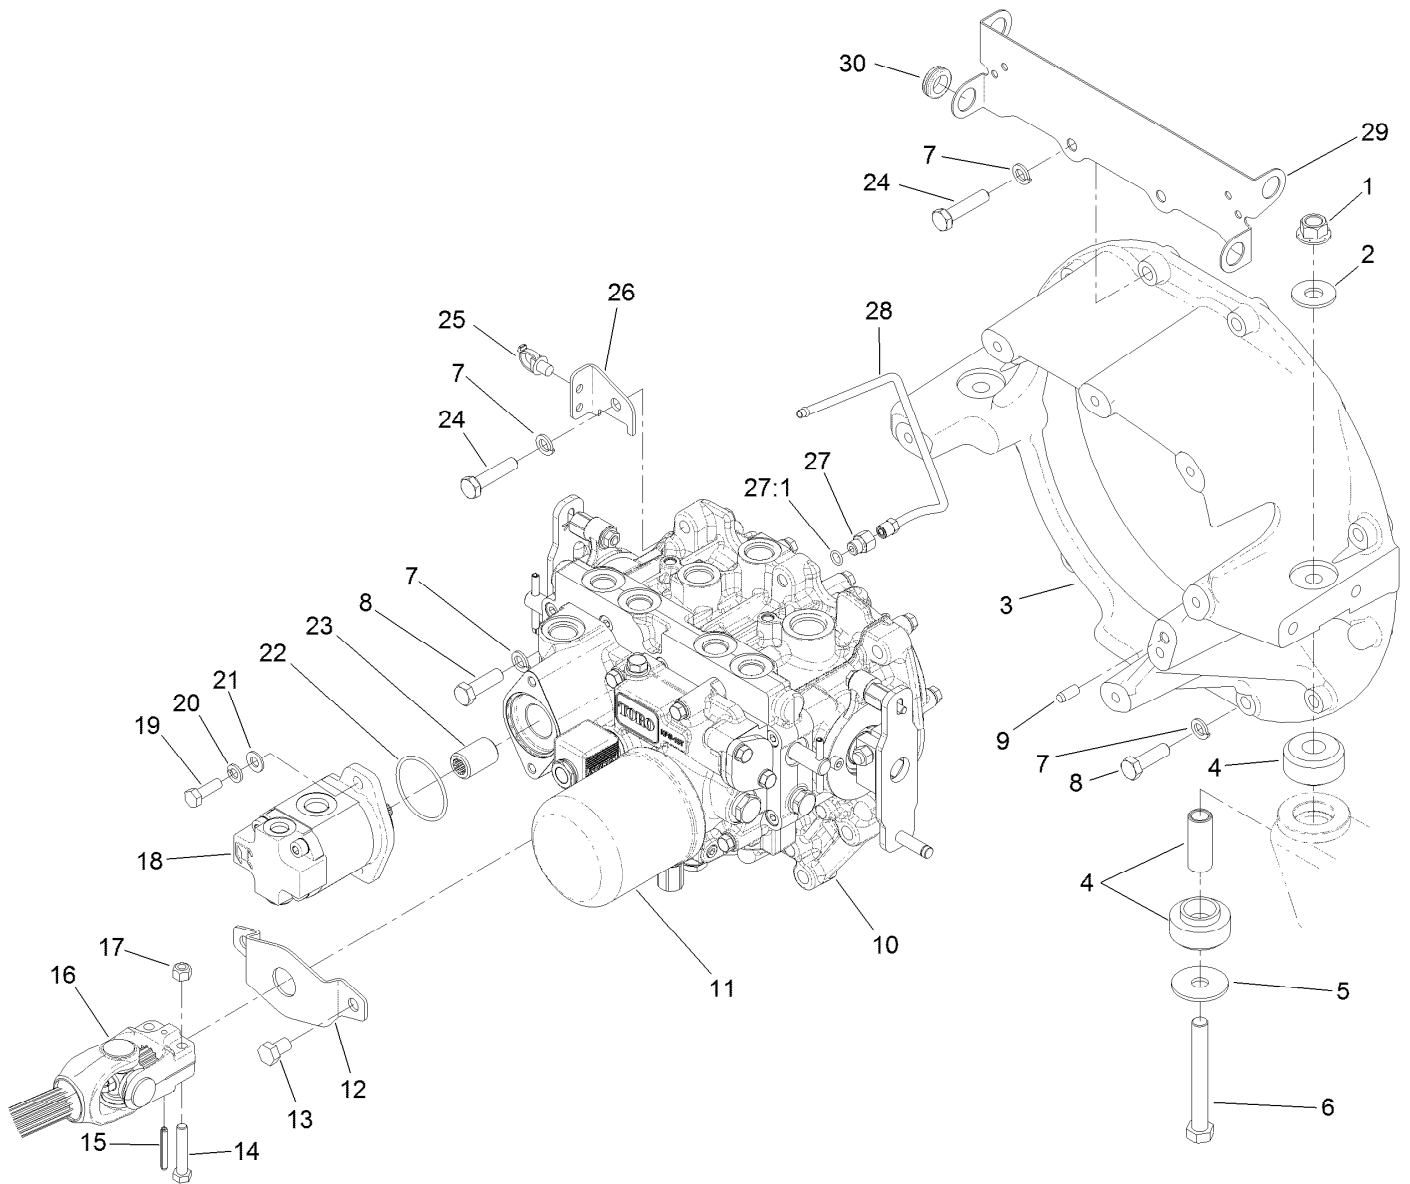

## Transmission Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|----------------------|
| 1           | 99-5107            | 2           | Nut-Lock           | 17          | 3296-29            | 4           | Nut-Lock, NI         |
| 2           | 3256-6             | 2           | Washer-Flat        | 18          | 112-9542           | 1           | HYD Gear Pump ASM    |
| 3           | 125-2836           | 1           | Housing-Flywheel   | 19          | 33114-025          | 2           | Screw-HH             |
| 4           | 120-9168           | 2           | Mount-Rubber       | 20          | 3253-4             | 2           | Washer-Lock          |
| 5           | 86-1990            | 2           | Washer-Thrust      | 21          | 3256-23            | 2           | Washer-Plain         |
| 6           | 325-17             | 2           | Screw-HH           | 22          | 108-9919           | 1           | O-Ring               |
| 7           | 48-9590            | 16          | Washer-Lock        | 23          | 108-9920           | 1           | Coupler-Spline       |
| 8           | 33115-035          | 3           | Screw-HH           | 24          | 33115-045          | 13          | Screw-HH             |
| 9           | 87-1910            | 2           | Pin-Dowel          | 25          | 32180-030          | 1           | Clip-Tie             |
| 10          | 131-5510           | 1           | Transmisson ASM    | 26          | 120-0239           | 1           | Support-Tube         |
| 11          | 108-5194           | 1           | Filter-Oil, HYD    | 27          | 110-5536           | 1           | Fitting-HYD, Adapter |
| 12          | 114-4088           | 1           | Shield-Seal        | 27:1        | 237-78             | 1           | O-Ring               |
| 13          | 33115-016          | 2           | Screw-HH           | 28          | 110-5537           | 1           | Tube                 |
| 14          | 322-9              | 4           | Screw-HH           | 29          | 131-5526-03        | 1           | Bracket-Guide        |
| 15          | 32121-34           | 2           | Pin-Roll           | 30          | 240-3              | 2           | Grommet-Rubber       |
| 16          | 110-3575           | 1           | Driveshaft ASM     |             |                    |             |                      |

 **Charge Pump Housing Assembly  
Transmission Assembly No. 131-5510**

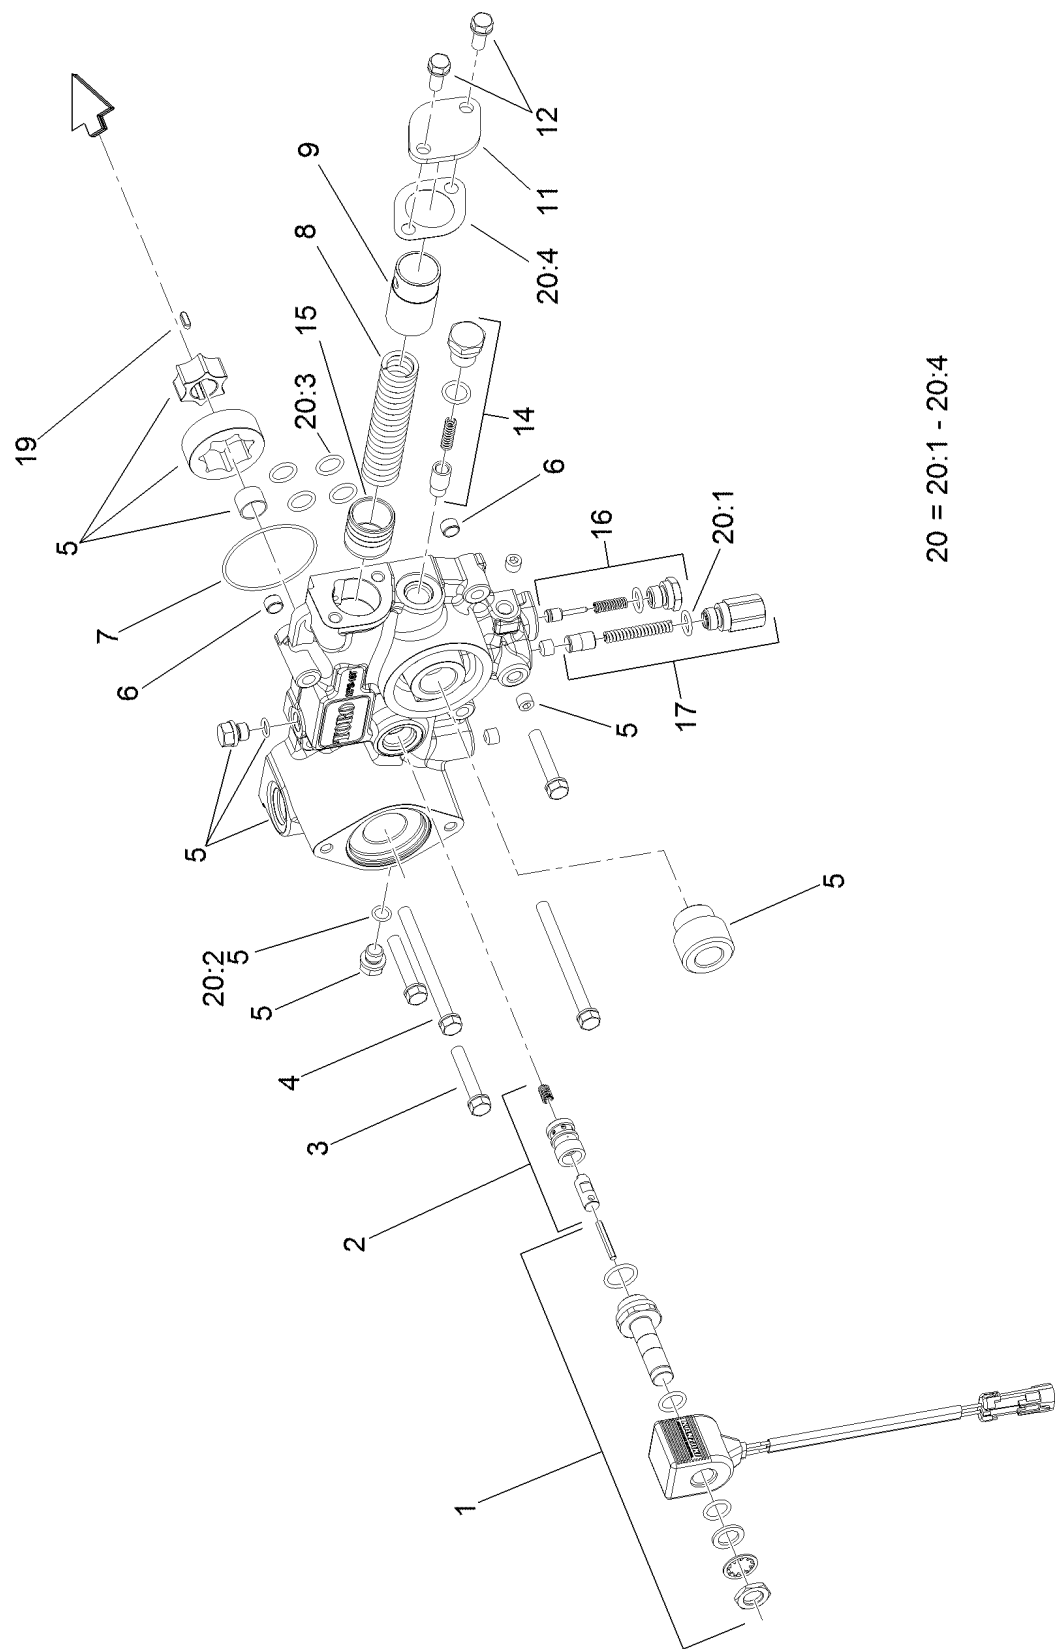


# Charge Pump Housing Assembly

## Transmission Assembly No. 131-5510 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      |
|-------------|--------------------|-------------|---------------------|-------------|--------------------|-------------|-------------------------|
| 1           | 107-0851           | 1           | Solenoid ASM        | 14          | 107-0843           | 1           | Filter Bypass Valve ASM |
| 2           | 107-0850           | 1           | Solenoid Valve ASM  | 15          | 107-0818           | 1           | Piston                  |
| 3           | 107-0863           | 3           | Bolt                | 16          | 107-0842           | 1           | Charge Relief Valve ASM |
| 4           | 107-0864           | 2           | Bolt                | 17          | 107-0841           | 1           | Pressure Valve ASM      |
| 5           | 107-0840           | 1           | Pump Body ASM       | 19          | 107-0865           | 1           | Key                     |
| 6           | 107-0848           | 2           | Pin                 | 20          | 107-0855           | 1           | Charge Pump Seal Kit    |
| 7           | 107-0856           | 1           | O-Ring              | 20:1        | 93-0418            | 2           | O-Ring                  |
| 8           | 107-0845           | 1           | Spring              | 20:2        | 107-0817           | 2           | O Ring-Plug             |
| 9           | 107-0844           | 1           | Collar              | 20:3        | 104-3298           | 6           | Packing                 |
| 11          | 107-0846           | 1           | Cover               | 20:4        | 107-0847           | 1           | Gasket                  |
| 12          | 93-0457            | 2           | Bolt And Washer ASM |             |                    |             |                         |
 
# Center Section Assembly Transmission Assembly No. 131-5510

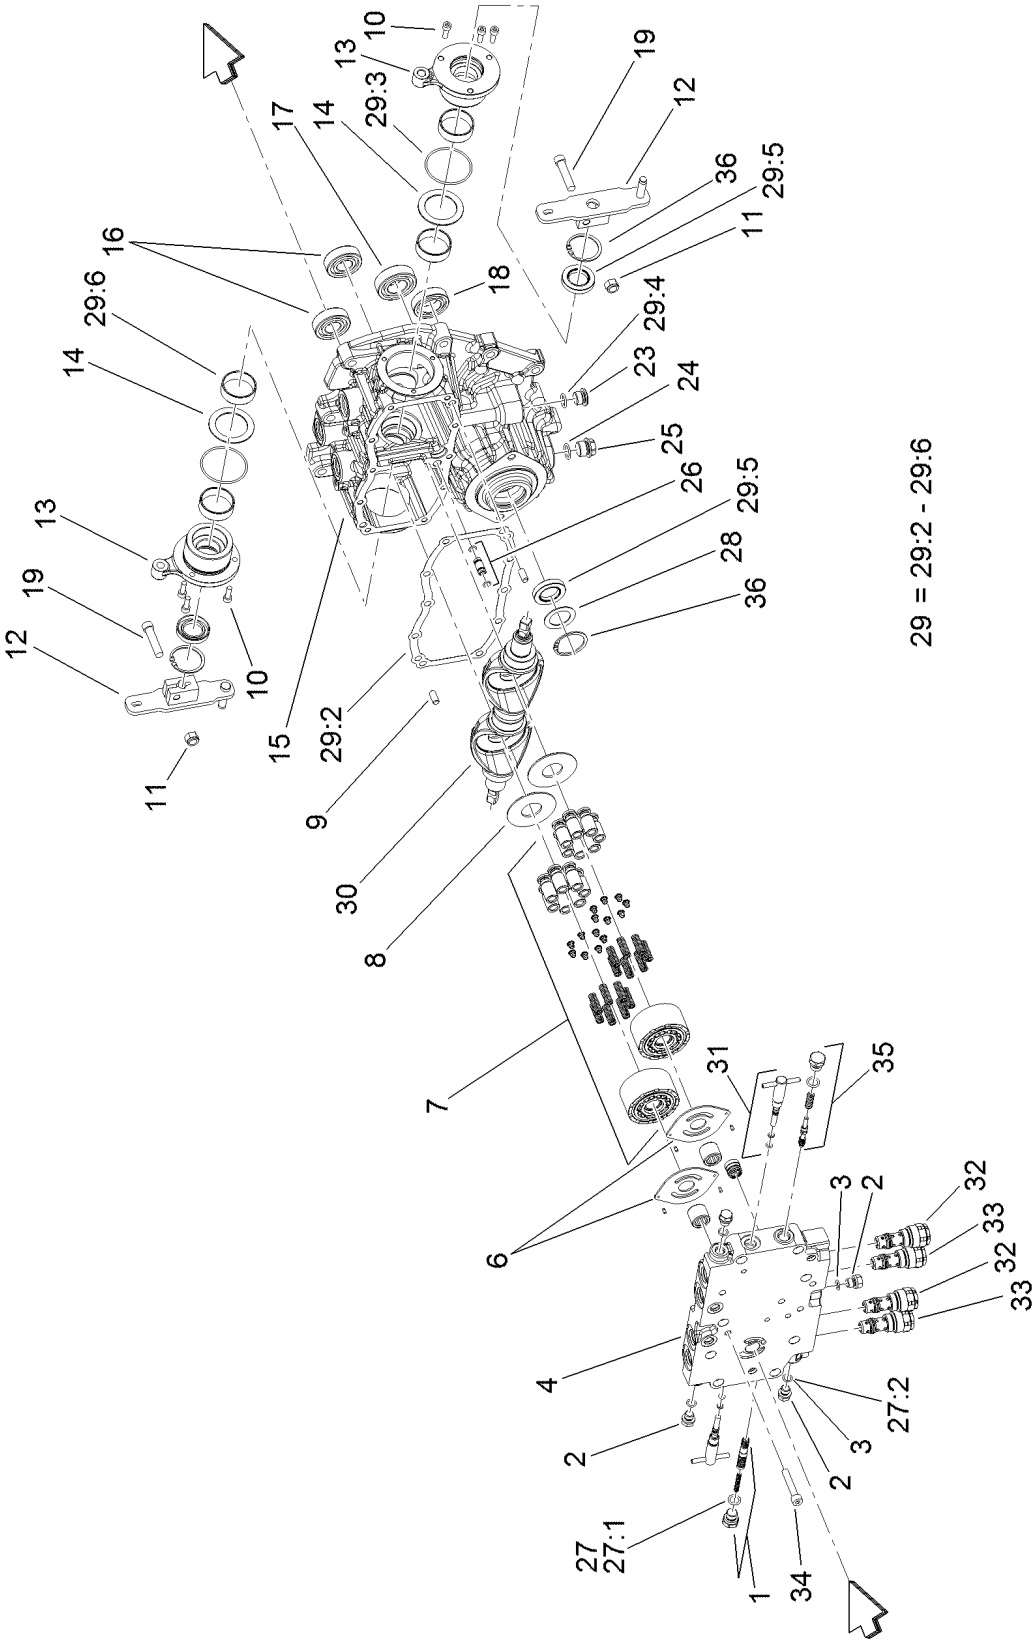


29 = 29:2 - 29:6

# Center Section Assembly
 
## Transmission Assembly No. 131-5510 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    |
|-------------|--------------------|-------------|-----------------------|-------------|--------------------|-------------|-----------------------|
| 1           | 107-0807           | 1           | Valve-Flushing, RH    | 25          | 107-0867           | 1           | Plug                  |
| 2           | 107-0857           | 6           | Plug                  | 26          | 107-0812           | 1           | Pipe                  |
| 3           | 107-0817           | 6           | O Ring-Plug           | 27          | 107-0852           | 1           | Center Case Seal Kit  |
| 4           | 121-3377           | 1           | Center Case, Complete | 27:1        | 93-0418            | 2           | O-Ring                |
| 6           | 107-0805           | 2           | Plate-Valve           | 27:2        | 107-0817           | 6           | O Ring-Plug           |
| 7           | 107-0824           | 2           | Cylinder Block ASM    | 28          | 107-0813           | 1           | Spacer                |
| 8           | 107-0830           | 2           | Plate-Thrust          | 29          | 107-0853           | 1           | Pump Housing Seal Kit |
| 9           | 92-0765            | 4           | Pin-Parallel          | 29:2        | 107-0810           | 1           | Gasket-Case, Center   |
| 10          | 107-0859           | 6           | Bolt                  | 29:3        | 107-0817           | 2           | O Ring-Plug           |
| 11          | 120-6681           | 2           | U-Nut                 | 29:4        | 104-3298           | 1           | Packing               |
| 12          | 120-6680           | 2           | Arm-Control           | 29:5        | 107-0814           | 3           | Seal                  |
| 13          | 107-0832           | 2           | Side Cover ASM        | 29:6        | 107-0825           | 4           | Ring-Seal             |
| 14          | 107-0829           | 2           | Washer                | 30          | 120-6679           | 2           | Plate-Swash           |
| 15          | 120-5151           | 1           | Pump Housing ASM      | 31          | 107-0808           | 2           | Valve-Bypass          |
| 16          | 107-0826           | 2           | Bearing               | 32          | 107-0804           | 2           | Valve-Rear            |
| 17          | 107-0821           | 1           | Bearing               | 33          | 107-0803           | 2           | Valve-Front           |
| 18          | 107-0838           | 1           | Bearing               | 34          | 107-0863           | 8           | Bolt                  |
| 19          | 120-6682           | 2           | Bolt                  | 35          | 107-0806           | 1           | Valve-Flushing, LH    |
| 23          | 107-0861           | 1           | Plug-NPTF             | 36          | 92-0757            | 2           | Ring-Snap             |
| 24          | 237-79             | 1           | O-Ring                |             |                    |             |                       |

# **Gear Case and Clutch Assembly** **Transmission Assembly No. 131-5510**

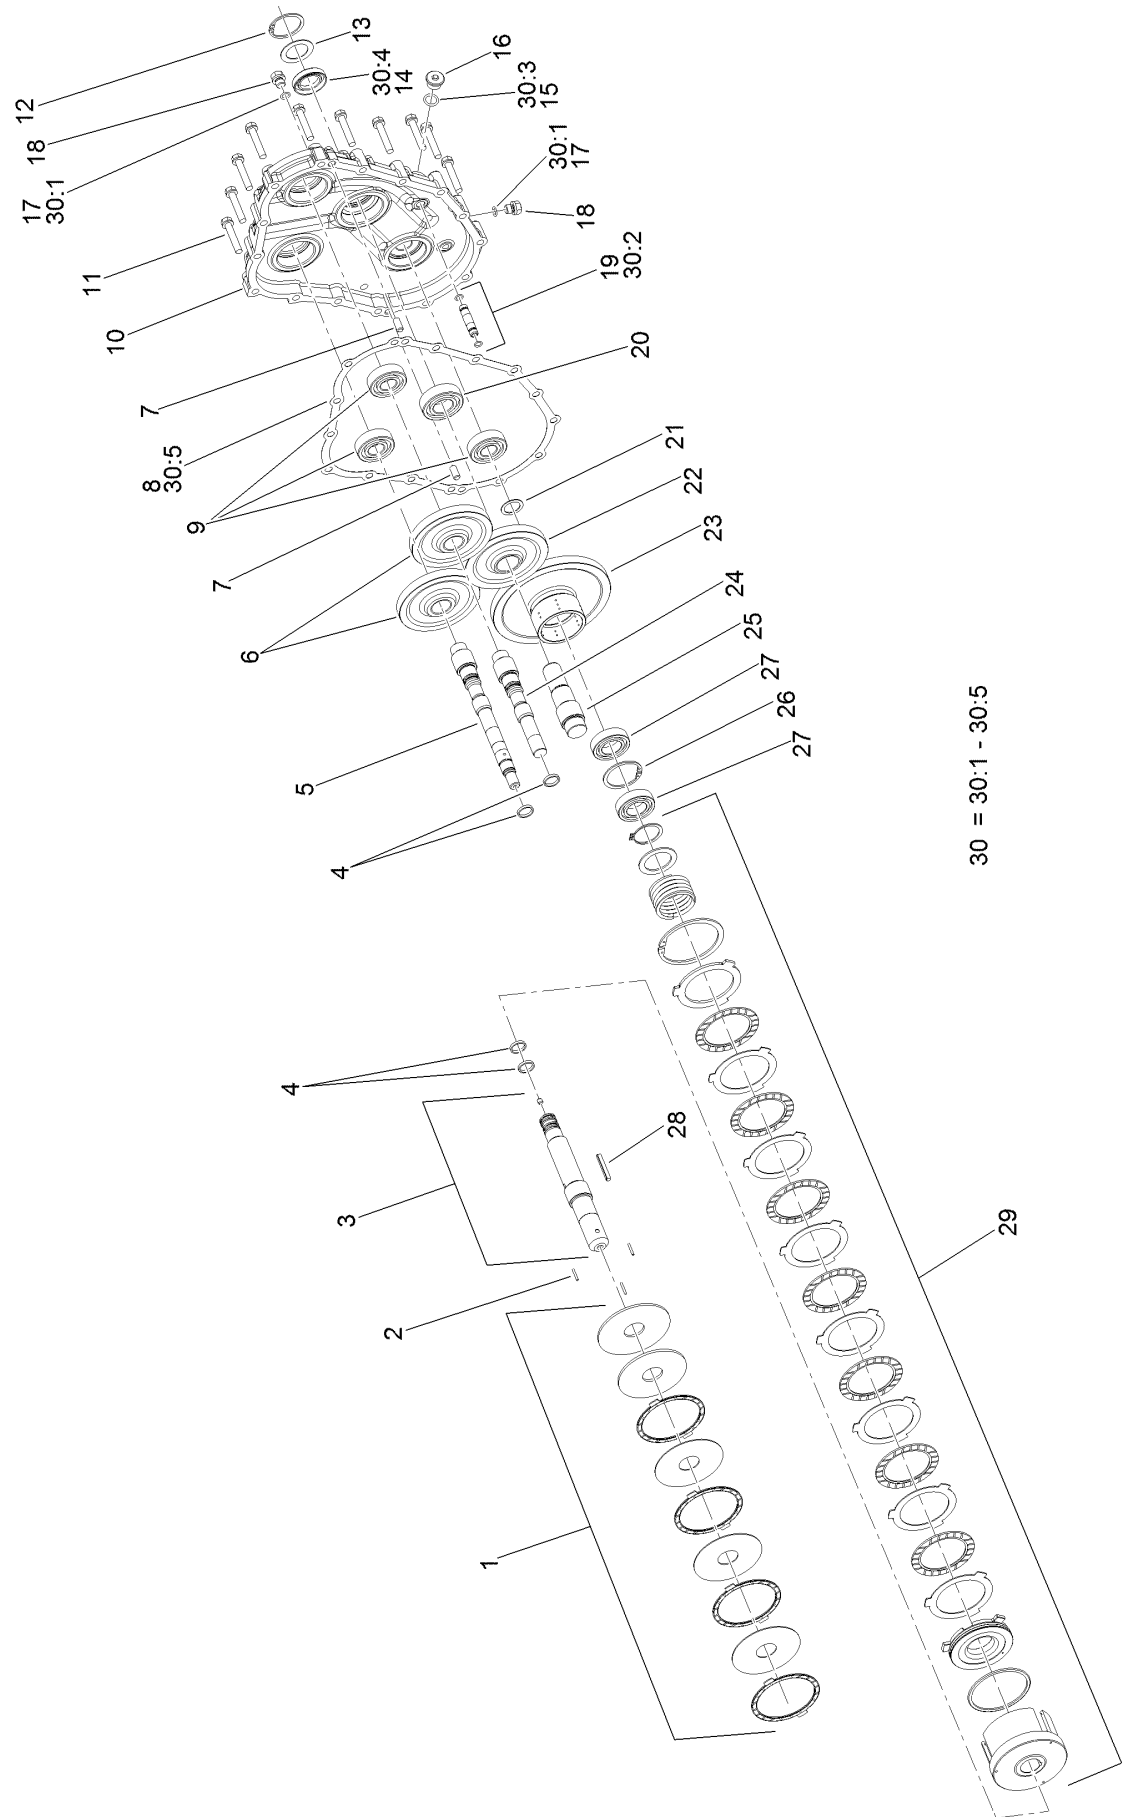

# Gear Case and Clutch Assembly

## Transmission Assembly No. 131-5510 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    |
|-------------|--------------------|-------------|----------------------|-------------|--------------------|-------------|-----------------------|
| 1           | 107-0839           | 1           | PTO Brake ASM        | 19          | 107-0811           | 1           | Pipe                  |
| 2           | 107-0837           | 3           | Rod-Push             | 20          | 107-0821           | 2           | Bearing               |
| 3           | 107-0833           | 1           | PTO Shaft ASM        | 21          | 107-0836           | 1           | Spacer                |
| 4           | 107-0825           | 2           | Ring-Seal            | 22          | 107-0820           | 1           | Gear-Input            |
| 5           | 107-0827           | 1           | Shaft-Pump           | 23          | 107-0834           | 1           | Gear-PTO              |
| 6           | 107-0823           | 2           | Gear-Pump            | 24          | 107-0822           | 1           | Shaft-Pump            |
| 7           | 92-0765            | 4           | Pin-Parallel         | 25          | 107-0819           | 1           | Shaft-Input           |
| 8           | 107-0816           | 1           | Gasket-Housing, Gear | 26          | 92-0758            | 1           | Ring-Snap             |
| 9           | 107-0826           | 4           | Bearing              | 27          | 107-0838           | 3           | Bearing               |
| 10          | 120-5152           | 1           | Housing-Case, Gear   | 28          | 107-0866           | 1           | Key                   |
| 11          | 107-0863           | 13          | Bolt                 | 29          | 107-0835           | 1           | Clutch Cylinder ASM   |
| 12          | 92-0757            | 1           | Ring-Snap            | 30          | 107-0854           | 1           | Gear Housing Seal Kit |
| 13          | 107-0813           | 1           | Spacer               | 30:1        | 107-0817           | 2           | O Ring-Plug           |
| 14          | 107-0814           | 1           | Seal                 | 30:2        |                    | 2           | O-Ring ●              |
| 15          | 104-3298           | 1           | Packing              | 30:3        | 104-3298           | 1           | Packing               |
| 16          | 107-0861           | 1           | Plug-NPTF            | 30:4        | 107-0814           | 1           | Seal                  |
| 17          | 107-0817           | 6           | O Ring-Plug          | 30:5        | 107-0816           | 1           | Gasket-Housing, Gear  |
| 18          | 107-0857           | 6           | Plug                 |             |                    |             |                       |

● Not serviced separately



## Driveshaft Assembly No. 110-3575

 
| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 1    | 112-1687    | 2    | Cross And Bearing Kit |
| 1:1  | 62-3820     | 1    | Fitting-Grease        |
| 3    | 54-9040     | 1    | Yoke-End              |
| 4    | 54-9090     | 1    | Yoke-End              |
| 5    |             | 1    | Tube-Yoke, Slip ●     |
| 5:1  | 302-22      | 1    | Fitting-Grease        |

● Not serviced separately



## Hydraulic Gear Pump Assembly No. 112-9542

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 112-0198           | 1           | Valve              |
| 2           | 112-0199           | 1           | Seal Kit           |

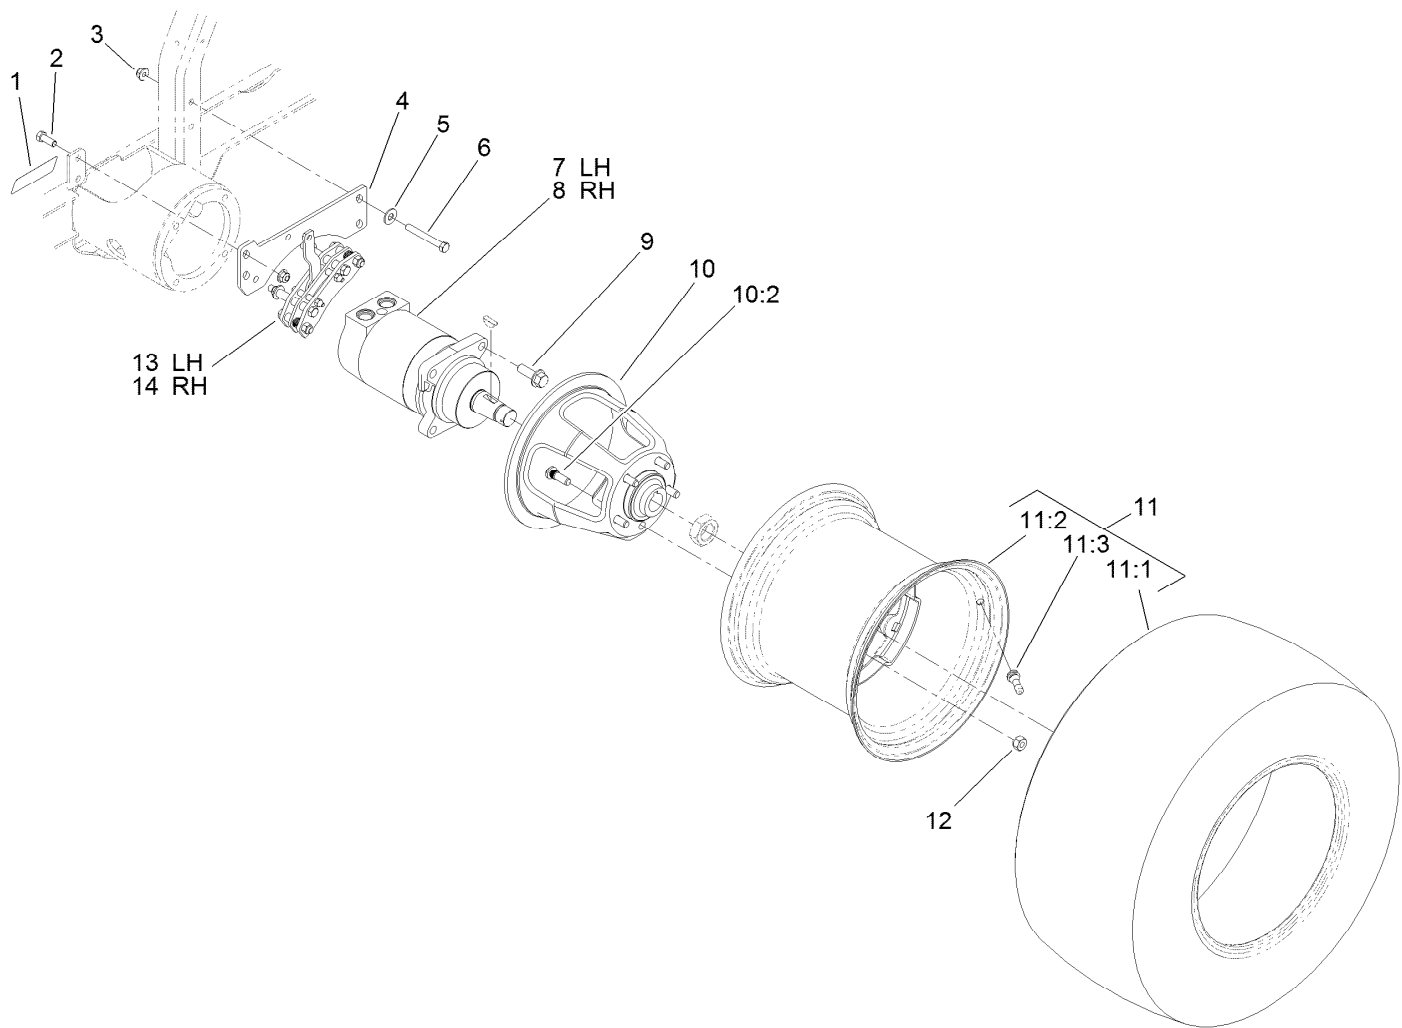

## Rear Drive Assembly

 
| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 1    | 106-9206    | 2    | Decal-Torque, Wheel |
| 2    | 323-6       | 4    | Screw-HH            |
| 3    | 104-8301    | 8    | Nut-HF, NI          |
| 4    | 112-9550-03 | 2    | Bracket-Brake       |
| 5    | 3256-4      | 4    | Washer-Flat         |
| 6    | 323-14      | 4    | Screw-HH            |
| 7    | 108-5155    | 1    | LH HYD Motor ASM    |
| 8    | 108-5230    | 1    | RH HYD Motor ASM    |
| 9    | 100-6116    | 8    | Screw-HHF           |

| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 10   | 110-5535    | 2    | Wheel Hub ASM        |
| 10:2 | 87-8730     | 5    | Stud                 |
| 11   | 106-7864    | 2    | Tire And Wheel ASM   |
| 11:1 | 106-7868    | 1    | Tire                 |
| 11:2 | 87-6750     | 1    | Wheel                |
| 11:3 | 232-27      | 1    | Stem-Valve           |
| 12   | 23-7270     | 10   | Nut-Lug              |
| 13   | 120-0013    | 1    | LH Brake Caliper ASM |
| 14   | 120-0014    | 1    | RH Brake Caliper ASM |



## Hydraulic Motor Assembly No. 108-5155

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 3257-42            | 1           | Key-Woodruff       |
| 2           | 107-9319           | 1           | Nut-Hex            |
| 3           | 112-8405           | 1           | Seal Kit           |

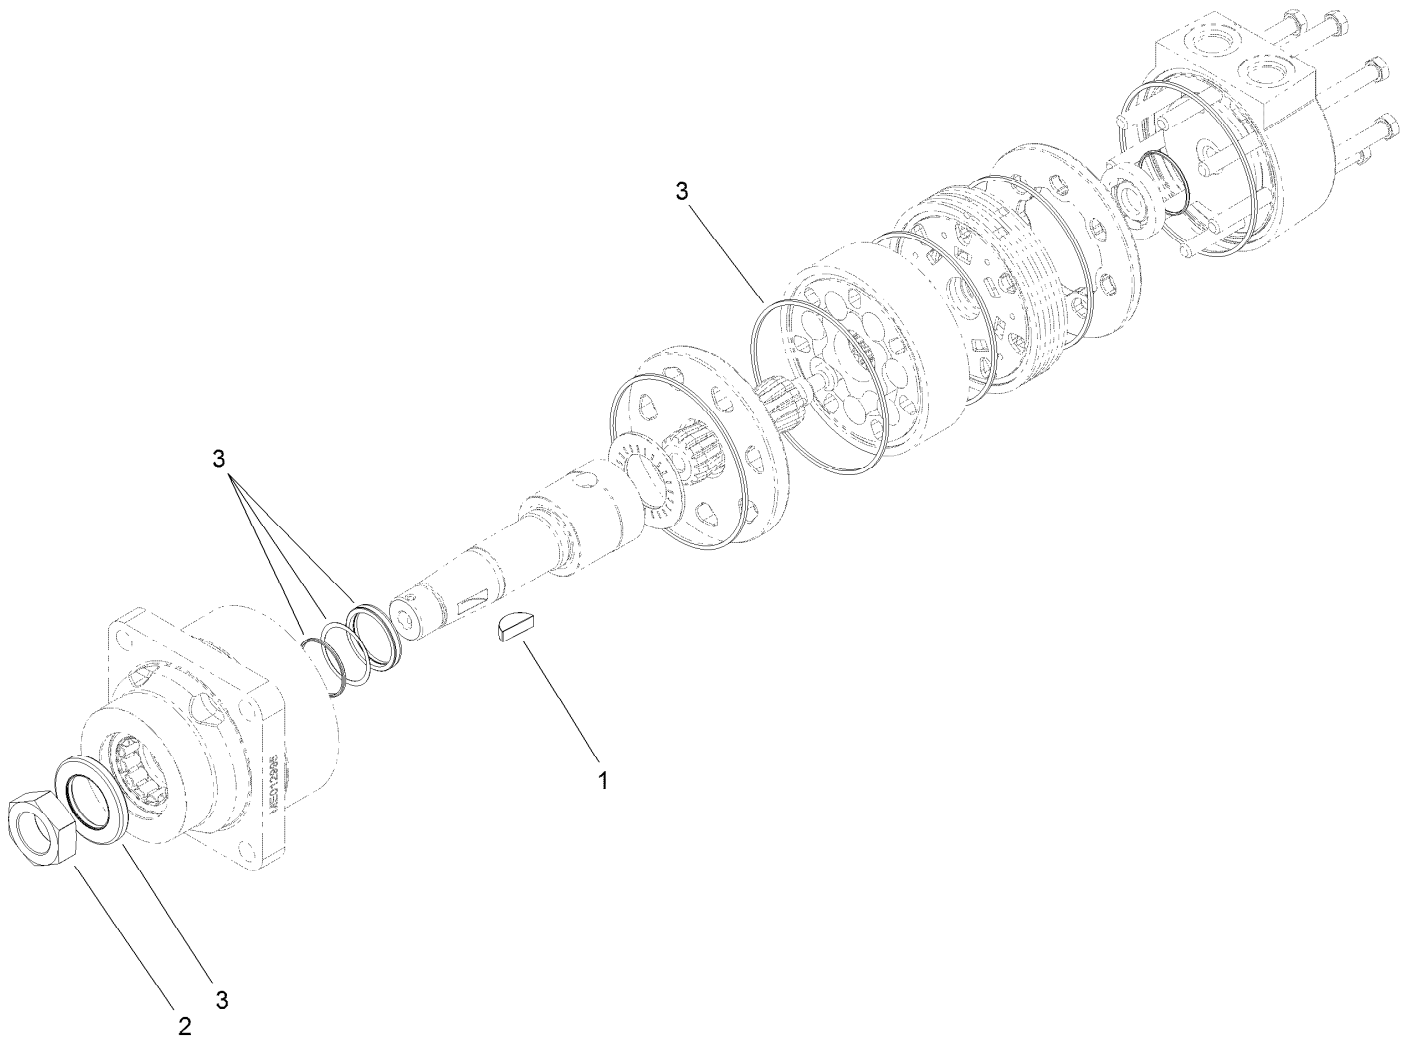


## Hydraulic Motor Assembly No. 108-5230

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 3257-42            | 1           | Key-Woodruff       |
| 2           | 107-9319           | 1           | Nut-Hex            |
| 3           | 112-8405           | 1           | Seal Kit           |



## LH Brake Caliper Assembly No. 120-0013
 
| Ref. | Part Number | Qty. | Description                       |
|------|-------------|------|-----------------------------------|
| 1    | 120-0015    | 1    | Replacement Brake Pad Service Kit |

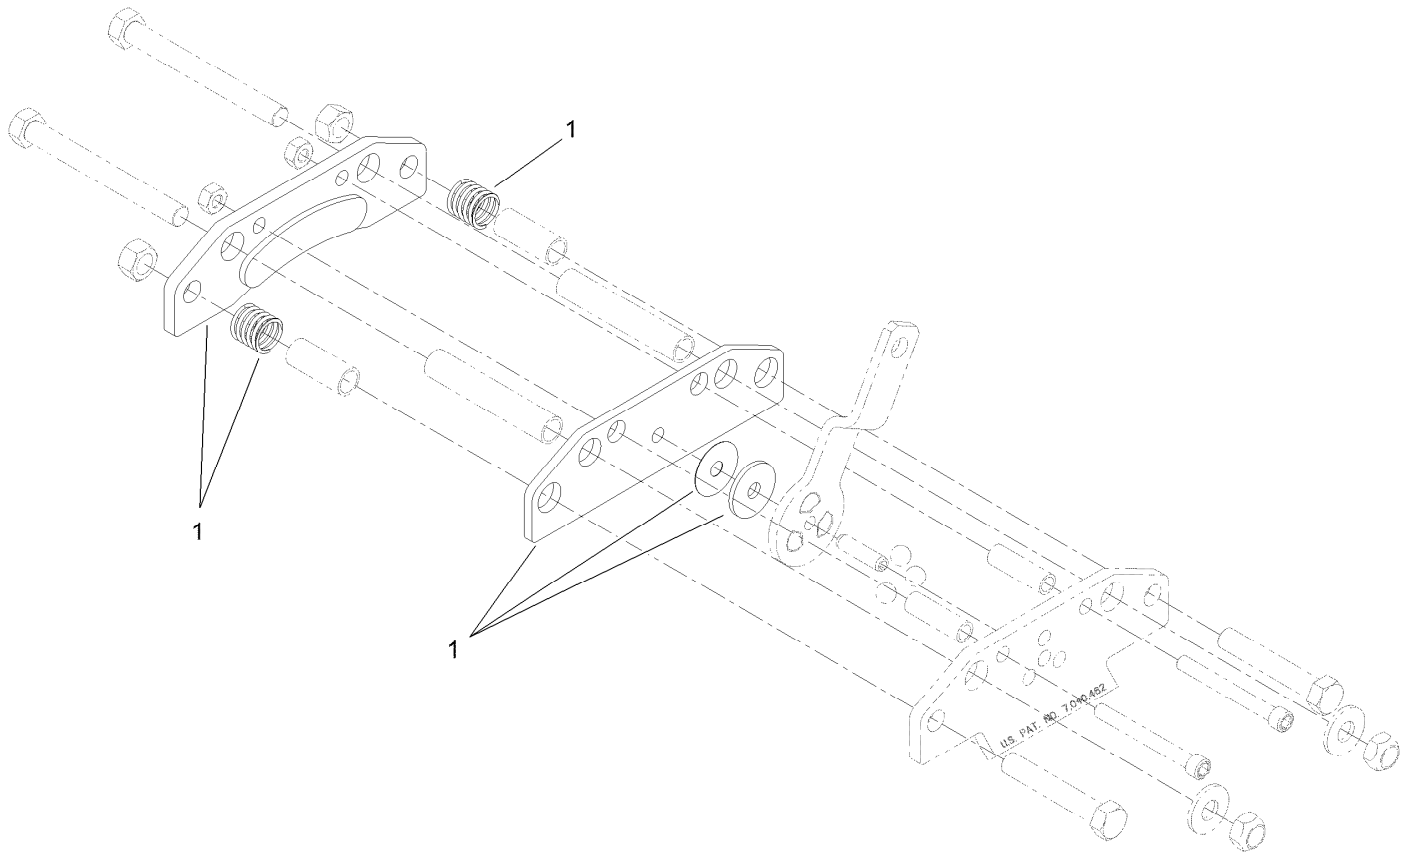

## RH Brake Caliper Assembly No. 120-0014

 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>                |
|-------------|--------------------|-------------|-----------------------------------|
| 1           | 120-0015           | 1           | Replacement Brake Pad Service Kit |



## Brake Handle Assembly

| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 1    | 117-5582-03 | 1    | Handle-Brake         |
| 2    | 3290-357    | 4    | Nut-HHF, Whiz        |
| 3    | 1-633102    | 2    | Bearing-Flange, Side |
| 4    | 120-0009    | 2    | Rod-Brake            |
| 5    | 3219-3      | 10   | Nut-Hex              |
| 6    | 132-8128    | 2    | Swivel ASM           |
| 7    | 3256-4      | 6    | Washer-Flat          |
| 8    | 109-2230    | 2    | Spring-Compression   |
| 9    | 32151-47    | 2    | Ring-Retaining       |
| 10   | 323-6       | 4    | Screw-HH             |
| 11   | 115-5300    | 1    | Proximity Switch ASM |


| Ref. | Part Number | Qty. | Description                 |
|------|-------------|------|-----------------------------|
| 11:1 | 117-3207    | 2    | Nut-Hex                     |
| 11:2 | 117-3208    | 2    | Washer-Lock, Internal Tooth |
| 12   | 117-5572    | 1    | Bracket-Switch              |
| 13   | 120-0022    | 2    | Pivot-Brake                 |
| 14   | 32151-68    | 2    | Ring-Retaining              |
| 15   | 1-513140    | 4    | Bearing-Control             |
| 16   | 3290-307    | 6    | Pin-Cotter                  |
| 17   | 1-633268    | 1    | Grip-Lever                  |
| 18   | 1-808285    | 2    | Pin-Clevis                  |
| 19   | 1-633131    | 2    | Yoke-Linkage, Brake         |
| 20   | 120-0023    | 2    | Rod-Brake                   |

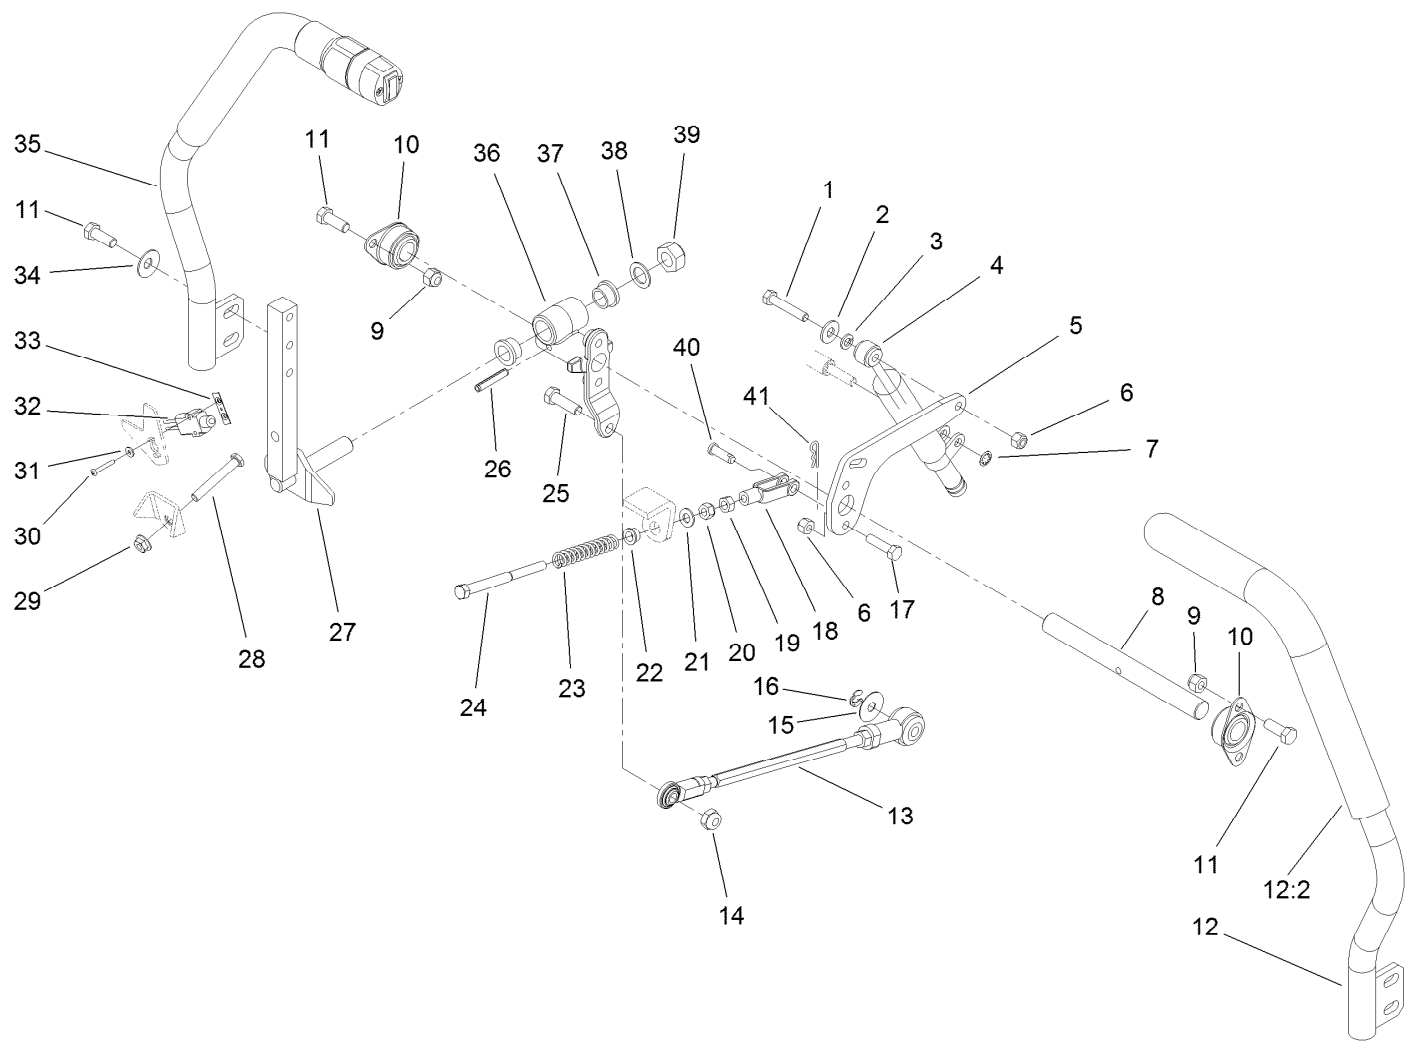

## Traction Control Assembly


| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 1    | 322-9       | 2    | Screw-HH             |
| 2    | 3256-3      | 2    | Washer-Flat          |
| 3    | 3253-4      | 4    | Washer-Lock          |
| 4    | 105-7280    | 2    | Damper               |
| 5    | 108-9829-03 | 2    | Lever-Damper         |
| 6    | 3296-29     | 6    | Nut-Lock, NI         |
| 7    | 32151-72    | 2    | Ring-Retaining       |
| 8    | 108-9830    | 2    | Shaft-Pivot          |
| 9    | 3296-39     | 8    | Nut-Lock, NI         |
| 10   | 1-633102    | 4    | Bearing-Flange, Side |
| 11   | 323-6       | 12   | Screw-HH             |
| 12   | 125-2688    | 1    | LH Lever ASM         |
| 12:2 | 125-2704    | 1    | Grip-Foam            |
| 13   | 112-5099    | 2    | Link ASM             |
| 14   | 3296-44     | 2    | Nut-Lock, NI         |
| 15   | 105-6814    | 2    | Washer-Plain         |
| 16   | 32151-47    | 2    | Ring-Retaining       |
| 17   | 322-6       | 4    | Screw-HH             |
| 18   | 1-303105    | 2    | Yoke-Adjustable      |
| 19   | 3219-2      | 2    | Nut-Hex              |
| 20   | 3296-4      | 2    | Nut-Lock             |
 
| Ref. | Part Number | Qty. | Description            |
|------|-------------|------|------------------------|
| 21   | 3256-23     | 2    | Washer-Plain           |
| 22   | 1-603735    | 2    | Bushing-Flanged        |
| 23   | 1-603807    | 2    | Spring-Return, Neutral |
| 24   | 1-603737    | 2    | Bolt-Return, Neutral   |
| 25   | 323-7       | 2    | Screw-HH               |
| 26   | 32121-15    | 2    | Pin-Roll               |
| 27   | 108-9833-03 | 2    | Lever                  |
| 28   | 9114524     | 2    | Bolt-TAP, HH           |
| 29   | 32128-26    | 2    | Nut-Flange             |
| 30   | 3250-35     | 4    | Screw-PPH              |
| 31   | 3256-53     | 4    | Washer-Flat            |
| 32   | 99-3410     | 2    | Switch                 |
| 33   | 108-9824    | 2    | Nut-Switch             |
| 34   | 3290-461    | 4    | Washer-Spring          |
| 35   | 125-2687    | 1    | RH Lever ASM           |
| 36   | 108-9831    | 2    | Hub-Control            |
| 37   | 105-3455    | 4    | Bushing                |
| 38   | 105-3481    | 4    | Washer-Thrust          |
| 39   | 32152-6     | 2    | Nut-Lock, Cone         |
| 40   | 283-1       | 2    | Pin-Clevis             |
| 41   | 3290-307    | 2    | Pin-Cotter             |

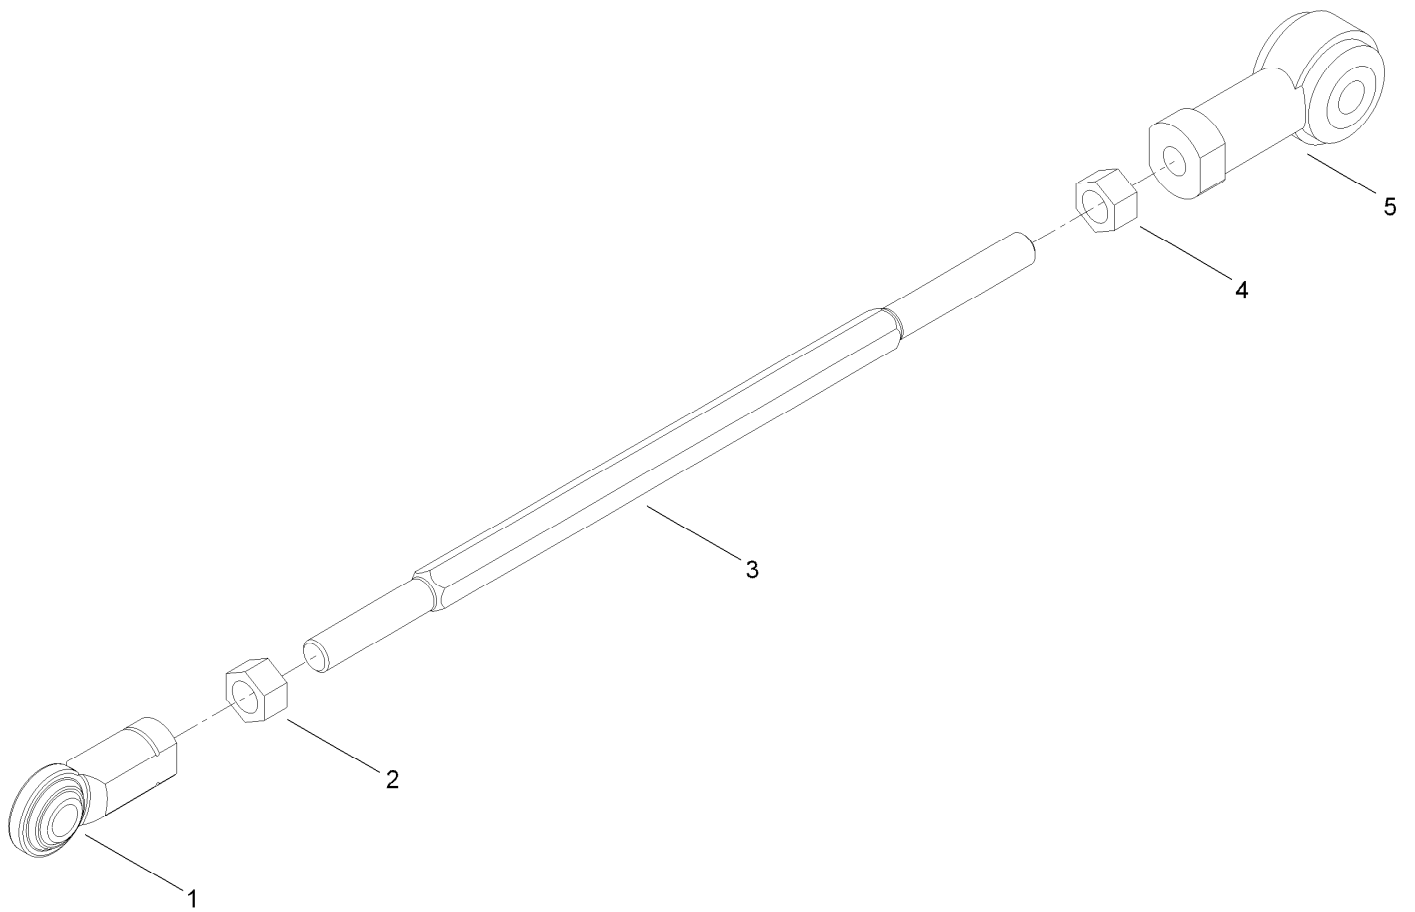


## Link Assembly No. 112-5099
 
| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 1    | 103-1167    | 1    | Joint-Ball End, LH |
| 2    | 3219-20     | 1    | Nut-Hex, LH        |
| 3    | 105-7239    | 1    | Rod-Threaded       |
| 4    | 3219-3      | 1    | Nut-Hex            |
| 5    | 105-7199    | 1    | End-Rod, Isolated  |

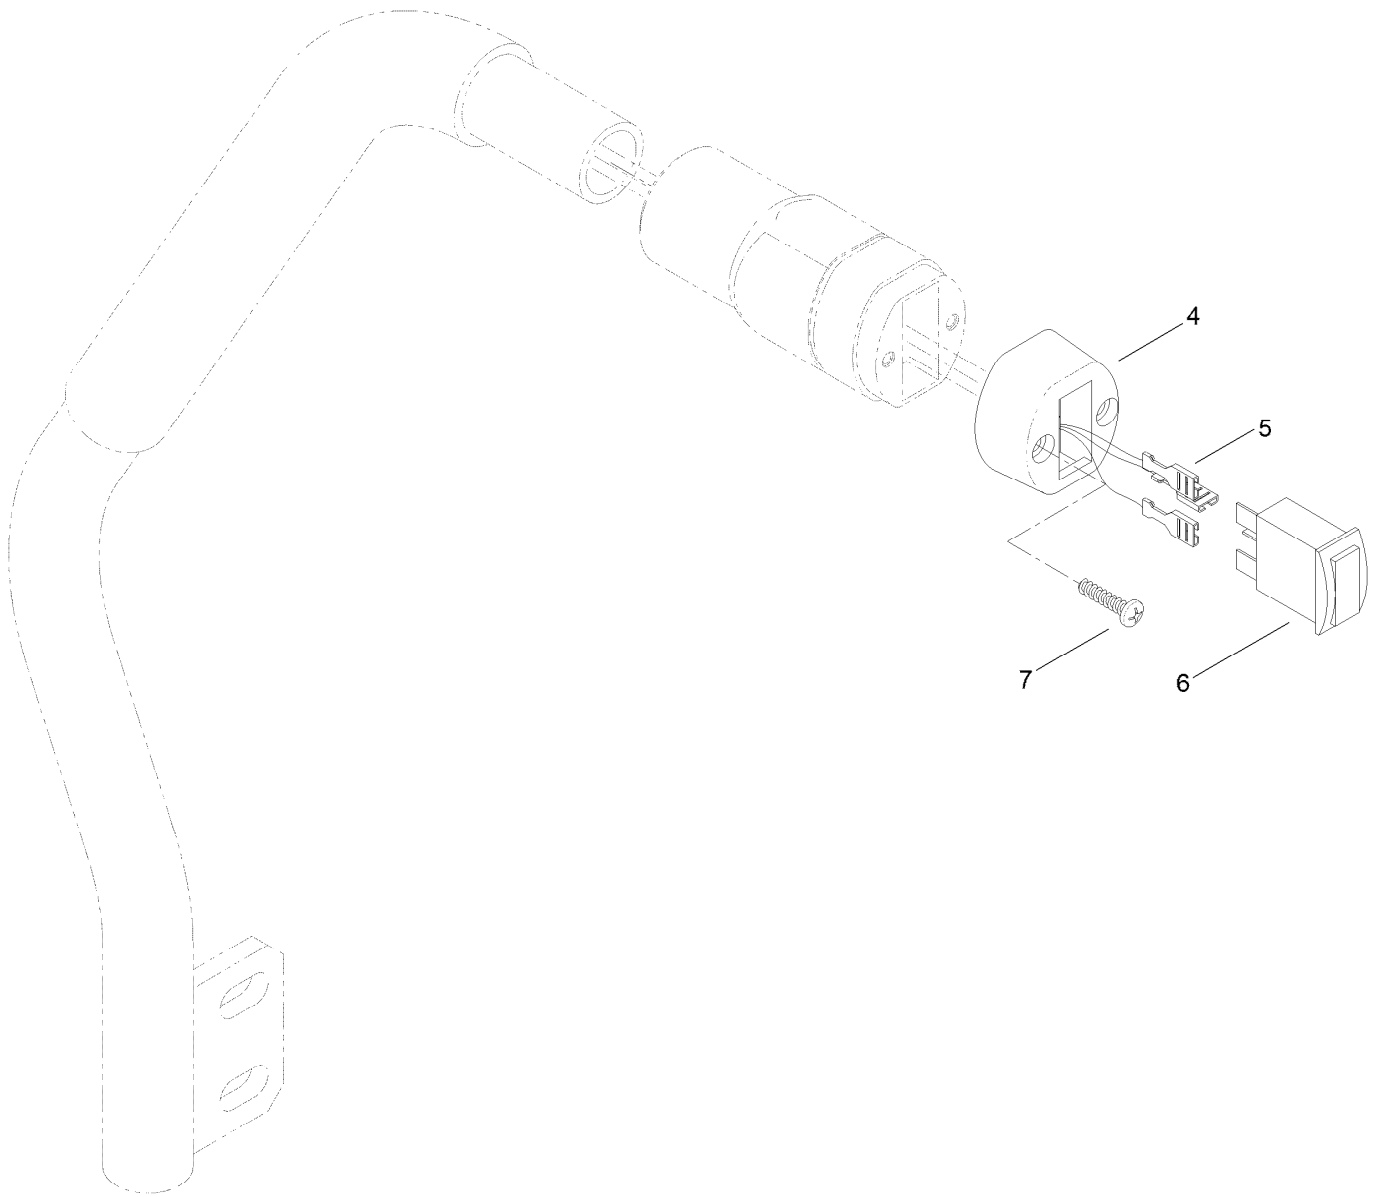

## RH Lever Assembly No. 125-2687

 
| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 4    | 121-3399    | 1    | Cap-Switch               |
| 5    | 119-4382    | 1    | Harness-Control Handle   |
| 6    | 125-2702    | 1    | Switch, Spst (On)-Off-On |
| 7    | 94-4496     | 2    | Screw-PPH                |

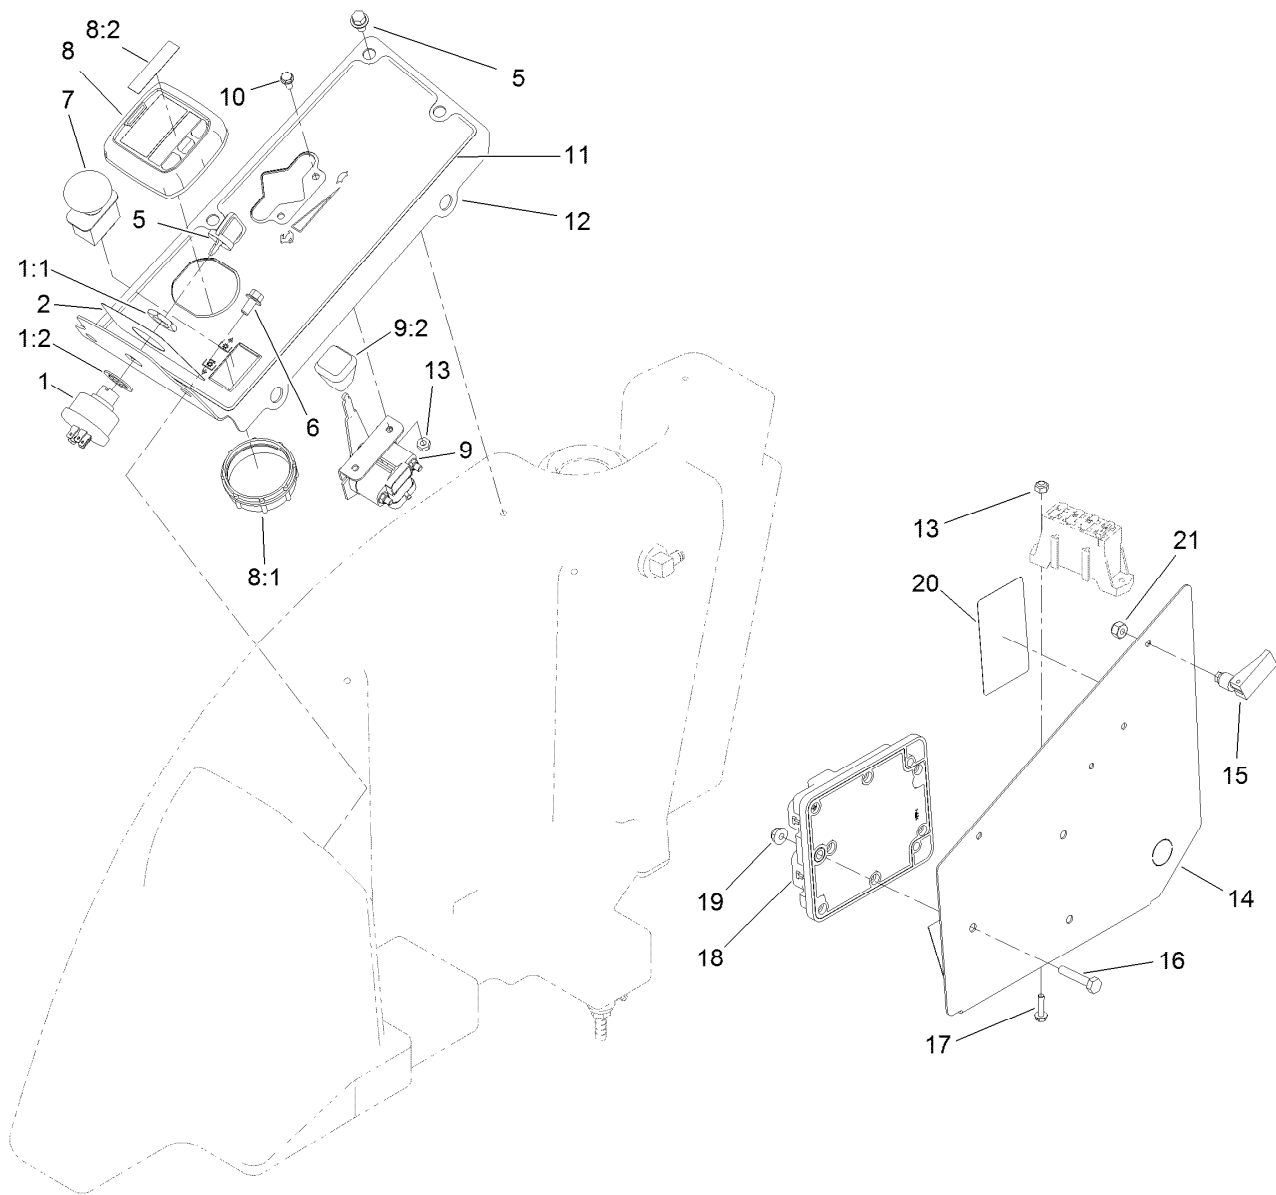

## Control Panel Assembly

| Ref. | Part Number | Qty. | Description                |
|------|-------------|------|----------------------------|
| 1    | 104-2541    | 1    | Switch ASM                 |
| 1:1  | 218-461     | 1    | Nut-HH                     |
| 1:2  | 3254-5      | 1    | Washer-Tooth, Internal     |
| 2    | 110-8254    | 1    | Decal-Start, Control Panel |
| 5    | 63-8360     | 2    | Key-Ignition               |
| 6    | 3234-13     | 5    | Screw-HHF                  |
| 7    | 93-9999     | 1    | Switch-PTO, On-On-None     |
| 8    | 120-6310    | 1    | LCD Display ASM            |
| 8:1  | 120-4630    | 1    | Nut-Display                |
| 8:2  | 120-6311    | 1    | Decal-Display              |
| 9    | 122-0111    | 1    | Throttle-Electronic        |
| 9:2  | 66-0120     | 1    | Knob                       |

 
| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 10   | 3290-321    | 2    | Screw-HWH                |
| 11   | 121-3363    | 1    | Decal-Panel, Control     |
| 12   | 121-3362-03 | 1    | Panel-Control            |
| 13   | 3296-2      | 4    | Nut-Lock, NI             |
| 14   | 110-8257-03 | 1    | Cover-Panel, Control     |
| 15   | 74-5950     | 2    | Latch-Swell              |
| 16   | 321-13      | 3    | Screw-HH                 |
| 17   | 32105-13    | 2    | Screw-HWH                |
| 18   | 106-9277    | 1    | Module-Control, Standard |
| 19   | 104-7201    | 3    | Nut-HF                   |
| 20   | 110-9796    | 1    | Decal-Block, Fuse        |
| 21   | 1-804254    | 2    | Nut-Lock, HH             |

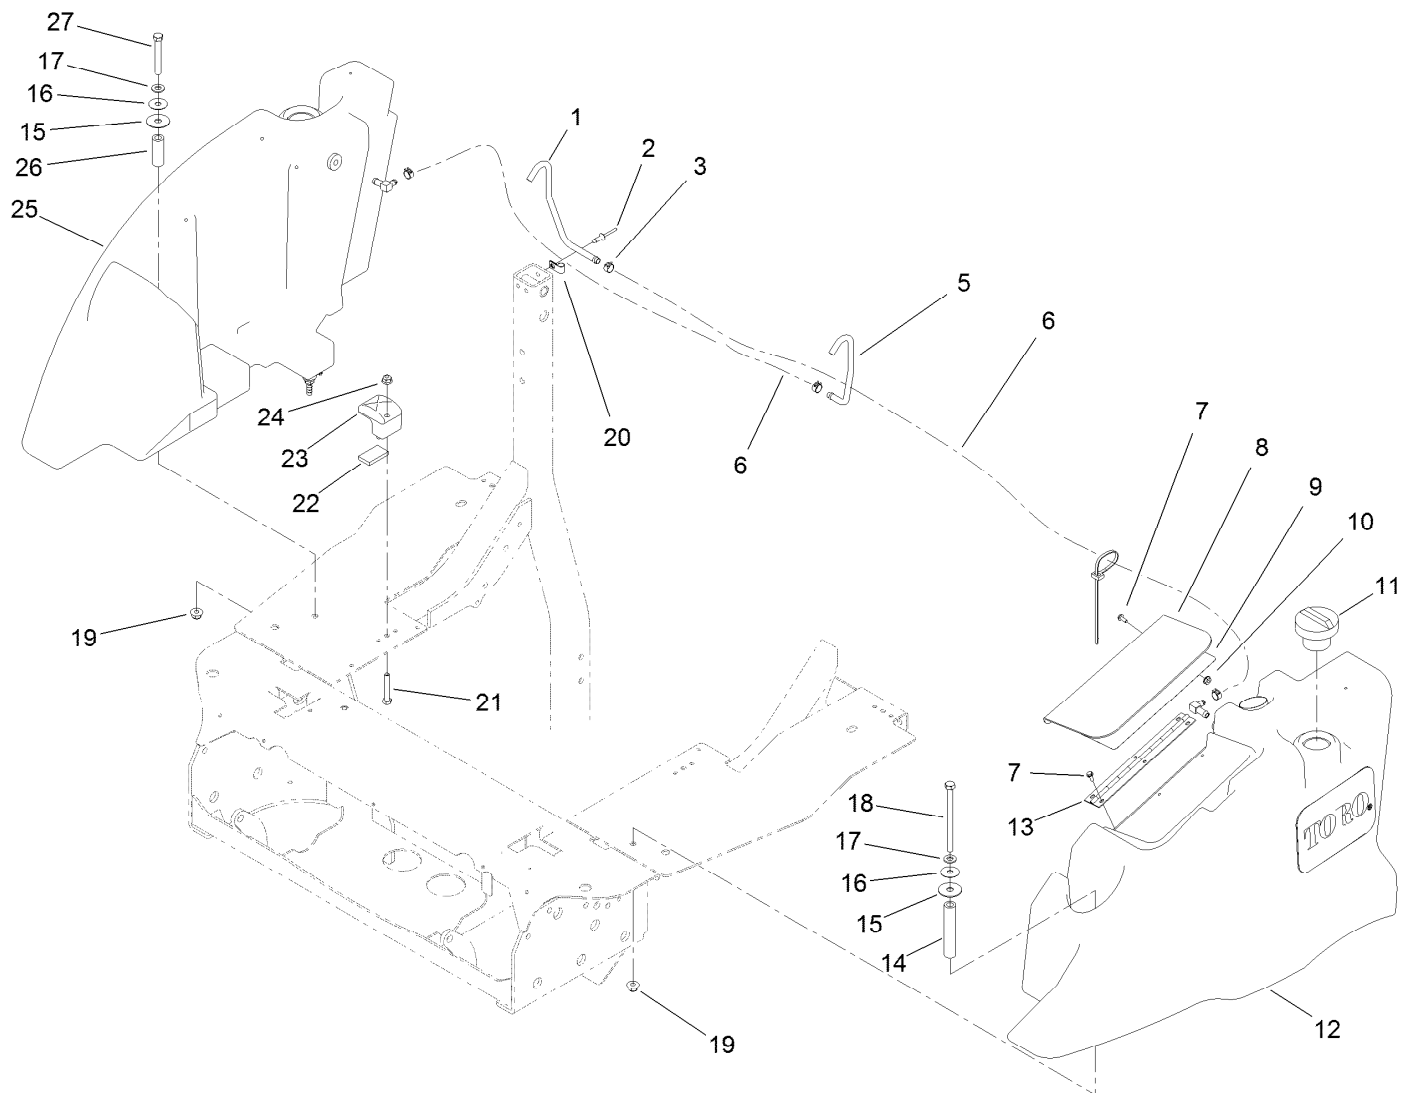

## Left-Hand and Right-Hand Fuel Tank Assembly


| Ref. | Part Number | Qty. | Description                         |
|------|-------------|------|-------------------------------------|
| 1    | 110-8260    | 1    | Tube-Vent, RH                       |
| 2    | 3290-412    | 2    | Rivet-Blind                         |
| 3    | 92-2379     | 4    | Clamp-Hose                          |
| 5    | 110-8261    | 1    | Tube-Vent, LH                       |
| 6    | 110-6186    | 2    | Hose-Fuel                           |
| 7    | 112-6349    | 6    | Screw-HWH                           |
| 8    | 110-5540-03 | 1    | Cover-Toolbox                       |
| 9    | 125-2747    | 1    | Decal-Instruction, Service          |
| 10   | 32149-8     | 3    | Nut-Keps                            |
| 11   | 125-9170    | 2    | Cap-Fuel, Diesel (Ultra Low Sulfur) |
| 12   | 131-5509    | 1    | LH Fuel Tank ASM                    |
| 13   | 108-2024    | 1    | Hinge                               |
| 14   | 110-5539    | 1    | Spacer                              |
 
| Ref. | Part Number | Qty. | Description      |
|------|-------------|------|------------------|
| 15   | 95-1905     | 2    | Washer-Rubber    |
| 16   | 105-6814    | 2    | Washer-Plain     |
| 17   | 3256-24     | 2    | Washer-Flat      |
| 18   | 323-39      | 1    | Screw-HH         |
| 19   | 104-8301    | 2    | Nut-HF, NI       |
| 20   | 2412-89     | 2    | Clamp-R          |
| 21   | 322-10      | 4    | Screw-HH         |
| 22   | 112-9561    | 4    | Pad-Foam         |
| 23   | 107-4543    | 4    | Clamp            |
| 24   | 104-8300    | 4    | Nut-HF, NI       |
| 25   | 132-8116    | 1    | RH Fuel Tank ASM |
| 26   | 92-1239     | 1    | Spacer-Support   |
| 27   | 323-13      | 1    | Screw-HH         |

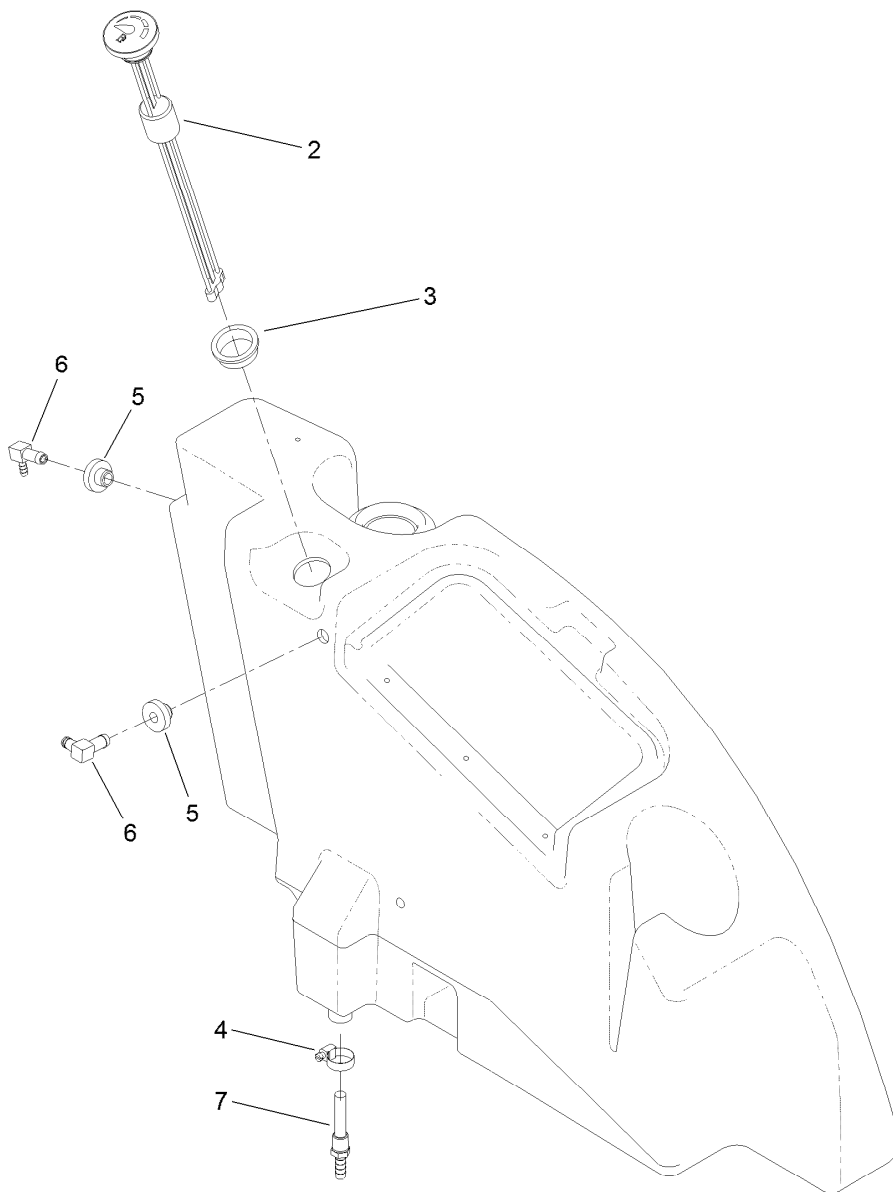


## LH Fuel Tank Assembly No. 131-5509
 
| Ref. | Part Number | Qty. | Description      |
|------|-------------|------|------------------|
| 2    | 110-8262    | 1    | Gauge-Fuel       |
| 3    | 95-8972     | 1    | Grommet          |
| 4    | 2412-36     | 1    | Clamp-Hose       |
| 5    | 46-6560     | 2    | Bushing          |
| 6    | 1-643259    | 2    | Fitting-Elbow    |
| 7    | 112-6374    | 1    | Fitting-Strainer |

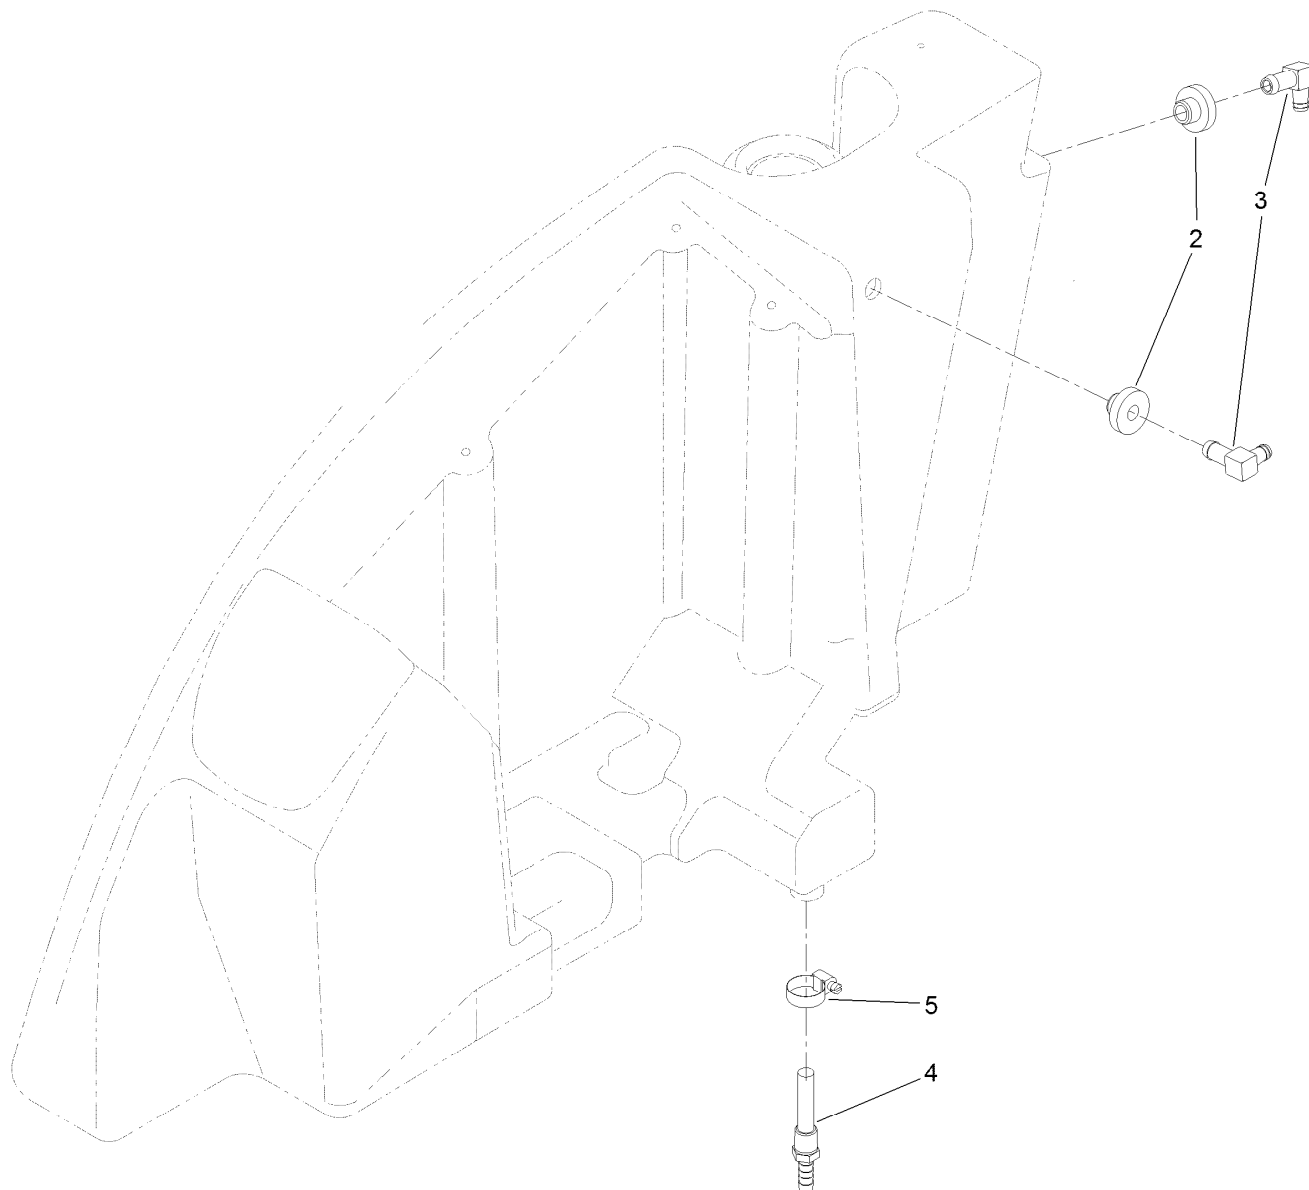

## RH Fuel Tank Assembly No. 132-8116

 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 2           | 46-6560            | 2           | Bushing            |
| 3           | 1-643259           | 2           | Fitting-Elbow      |
| 4           | 112-6374           | 1           | Fitting-Strainer   |
| 5           | 2412-36            | 1           | Clamp-Hose         |

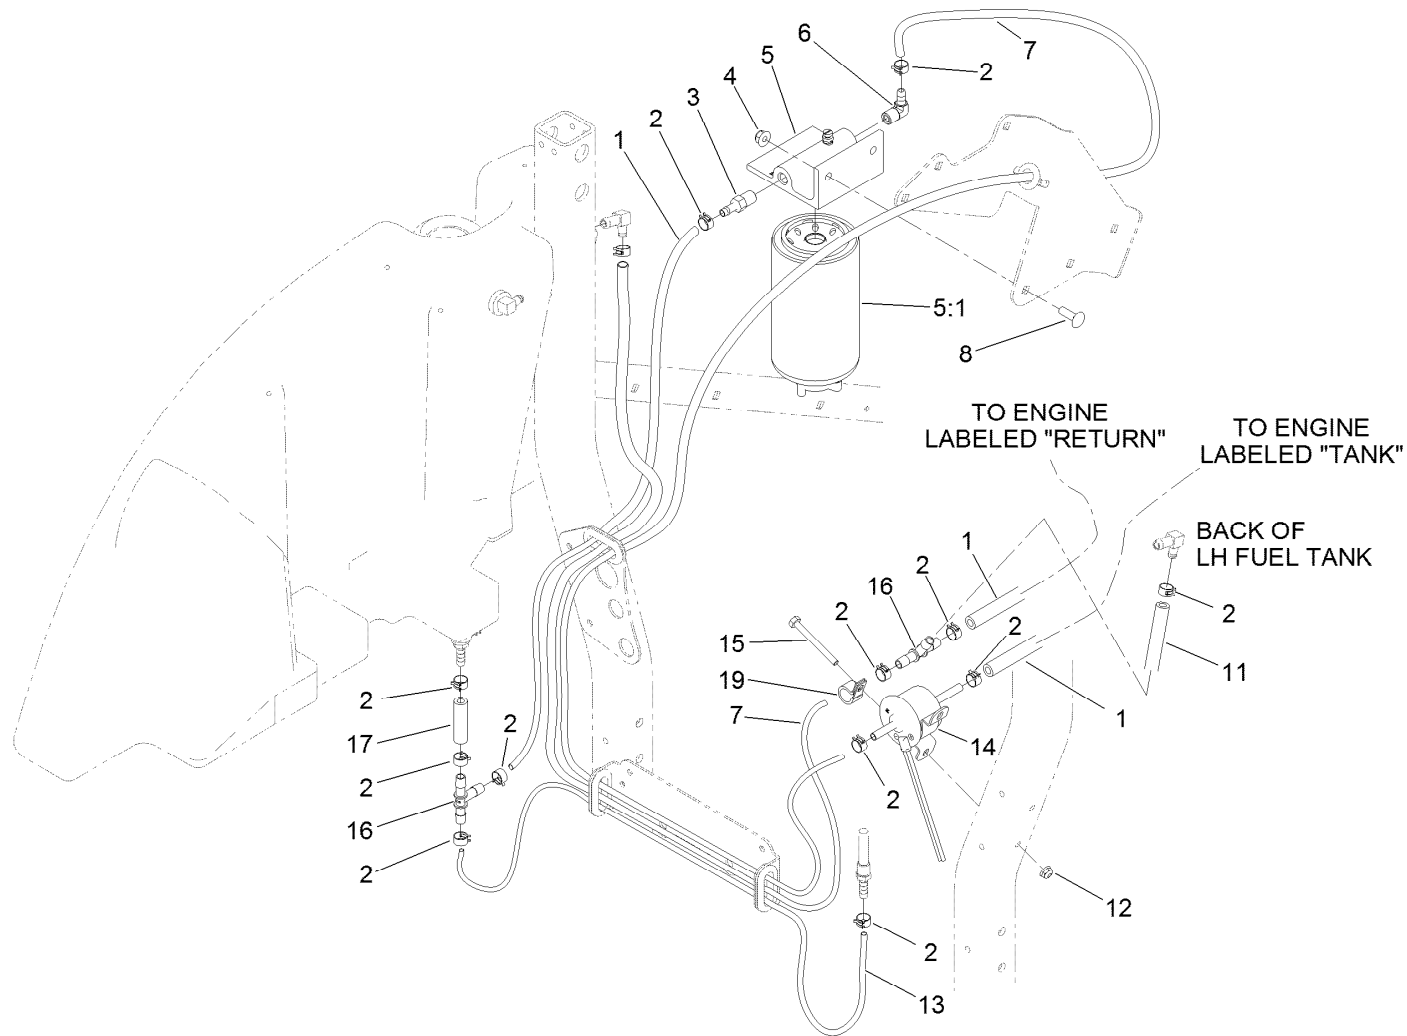

## Fuel System Assembly

| Ref. | Part Number | Qty. | Description                 |
|------|-------------|------|-----------------------------|
| 1    | 110-6187    | 3    | Hose-Fuel                   |
| 2    | 92-2379     | 16   | Clamp-Hose                  |
| 3    | 353-783     | 1    | Fitting-STR                 |
| 4    | 104-8300    | 2    | Nut-HF, NI                  |
| 5    | 125-2914    | 1    | Separator Filter ASM        |
| 5:1  | 125-2915    | 1    | Filter-Fuel/Water Separator |
| 6    | 353-781     | 1    | Fitting-Elb, 90             |
| 7    | 110-4108    | 2    | Hose-Fuel                   |
| 8    | 3230-22     | 2    | Screw-CARR                  |

 
| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 11   | 109-0274    | 1    | Hose-Fuel           |
| 12   | 104-7201    | 2    | Nut-HF              |
| 13   | 110-3258    | 1    | Hose-Fuel           |
| 14   | 121-5613    | 1    | Pump-Fuel, Electric |
| 15   | 321-15      | 2    | Screw-HH            |
| 16   | 354-107     | 2    | Fitting-HYD, Tee    |
| 17   | 127-6453    | 1    | Hose-Fuel           |
| 19   | 2412-87     | 1    | Clamp-Cable         |

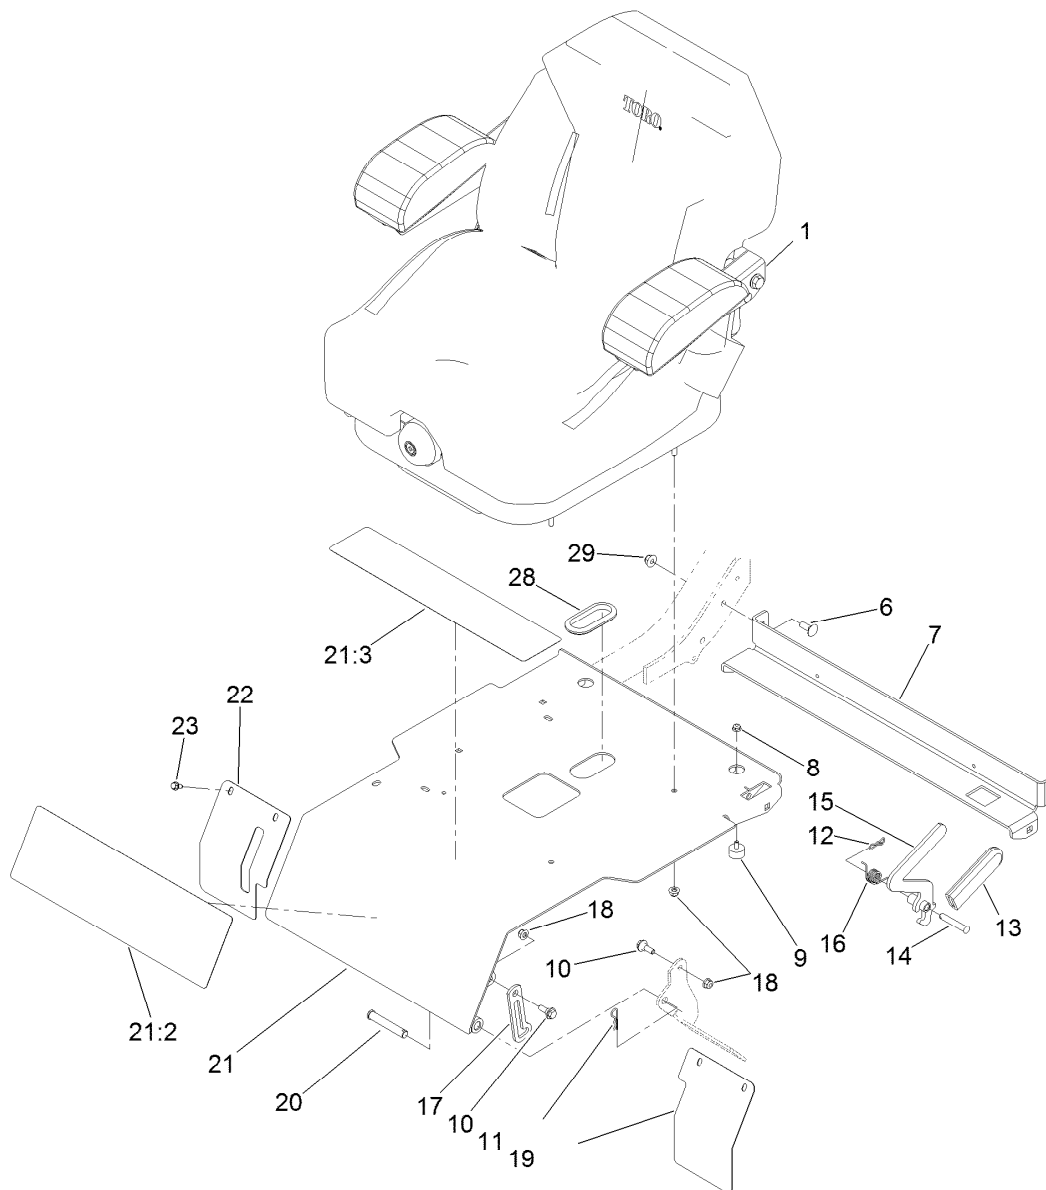

## Seat and Seat Plate Assembly


| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 1    | 125-3107    | 1    | Suspension Seat ASM |
| 6    | 3231-2      | 4    | Bolt-CARR           |
| 7    | 120-0095-03 | 1    | Support-Seat        |
| 8    | 104-7201    | 2    | Nut-HF              |
| 9    | 240-14      | 2    | Bumper-Rubber       |
| 10   | 116-2670    | 2    | Screw-Shoulder      |
| 11   | 3290-467    | 2    | Pin-Hair            |
| 12   | 119-1415    | 1    | Pin-Cotter, Locking |
| 13   | 1-633268    | 1    | Grip-Lever          |
| 14   | 86-2130     | 1    | Pin-Clevis          |
| 15   | 121-3390-03 | 1    | Lever-Seat          |
| 16   | 121-3386    | 1    | Spring-Torsion      |
 
| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 17   | 130-8754    | 1    | Prop-Seat               |
| 18   | 104-8300    | 6    | Nut-HF, NI              |
| 19   | 130-8767-03 | 1    | Cover-LH                |
| 20   | 283-55      | 2    | Pin-Clevis              |
| 21   | 130-8749    | 1    | Seat Plate ASM          |
| 21:2 | 120-9195    | 1    | Decal-Safety            |
| 21:3 | 120-9196    | 1    | Decal-Console, Top (CE) |
| 22   | 130-8768-03 | 1    | Cover-RH                |
| 23   | 32144-10    | 4    | Screw-HWH               |
| 28   | 237-164     | 1    | Grommet                 |
| 29   | 104-8301    | 4    | Nut-HF, NI              |

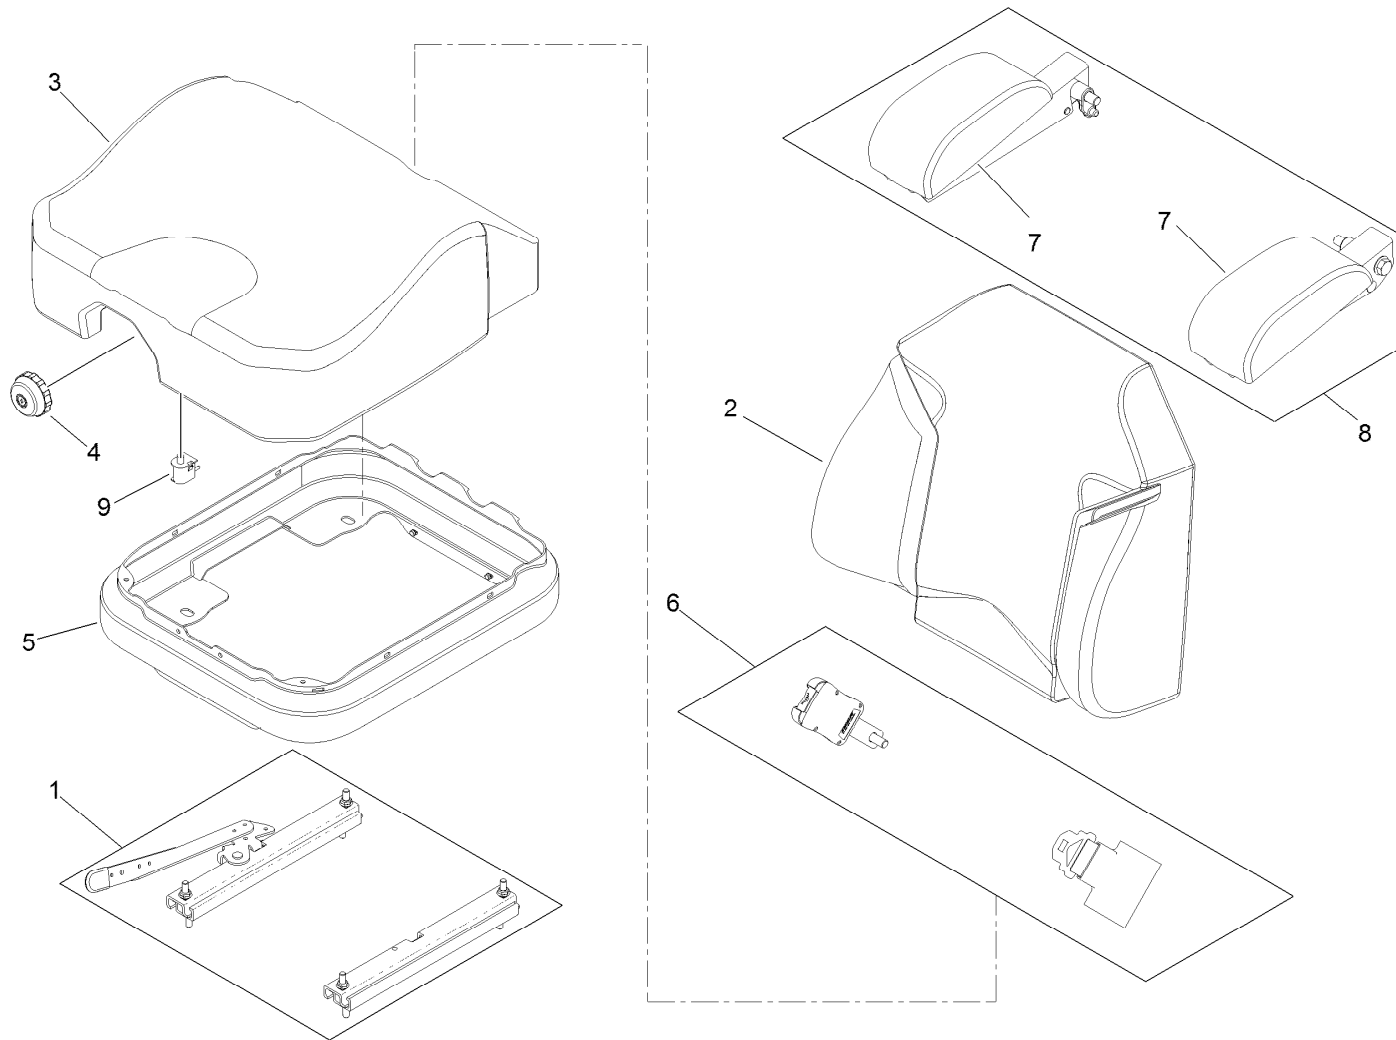

## Seat Assembly No. 125-3107

 
| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 1    | 116-8910    | 1    | Seat Track Set           |
| 2    | 125-3112    | 1    | Cover-Back               |
| 3    | 125-3111    | 1    | Cover-Cushion            |
| 4    | 116-8911    | 1    | Knob-Adjuster            |
| 5    | 116-5659    | 1    | Cover-Suspension Bellows |
| 6    | 126-2061    | 1    | Seat Belt Service Kit    |
| 7    | 109-9802    | 1    | Arm Rest Pad Set         |
| 8    | 109-9803    | 1    | Arm Rest Set             |
| 9    | 82-2190     | 1    | Switch-Bail              |

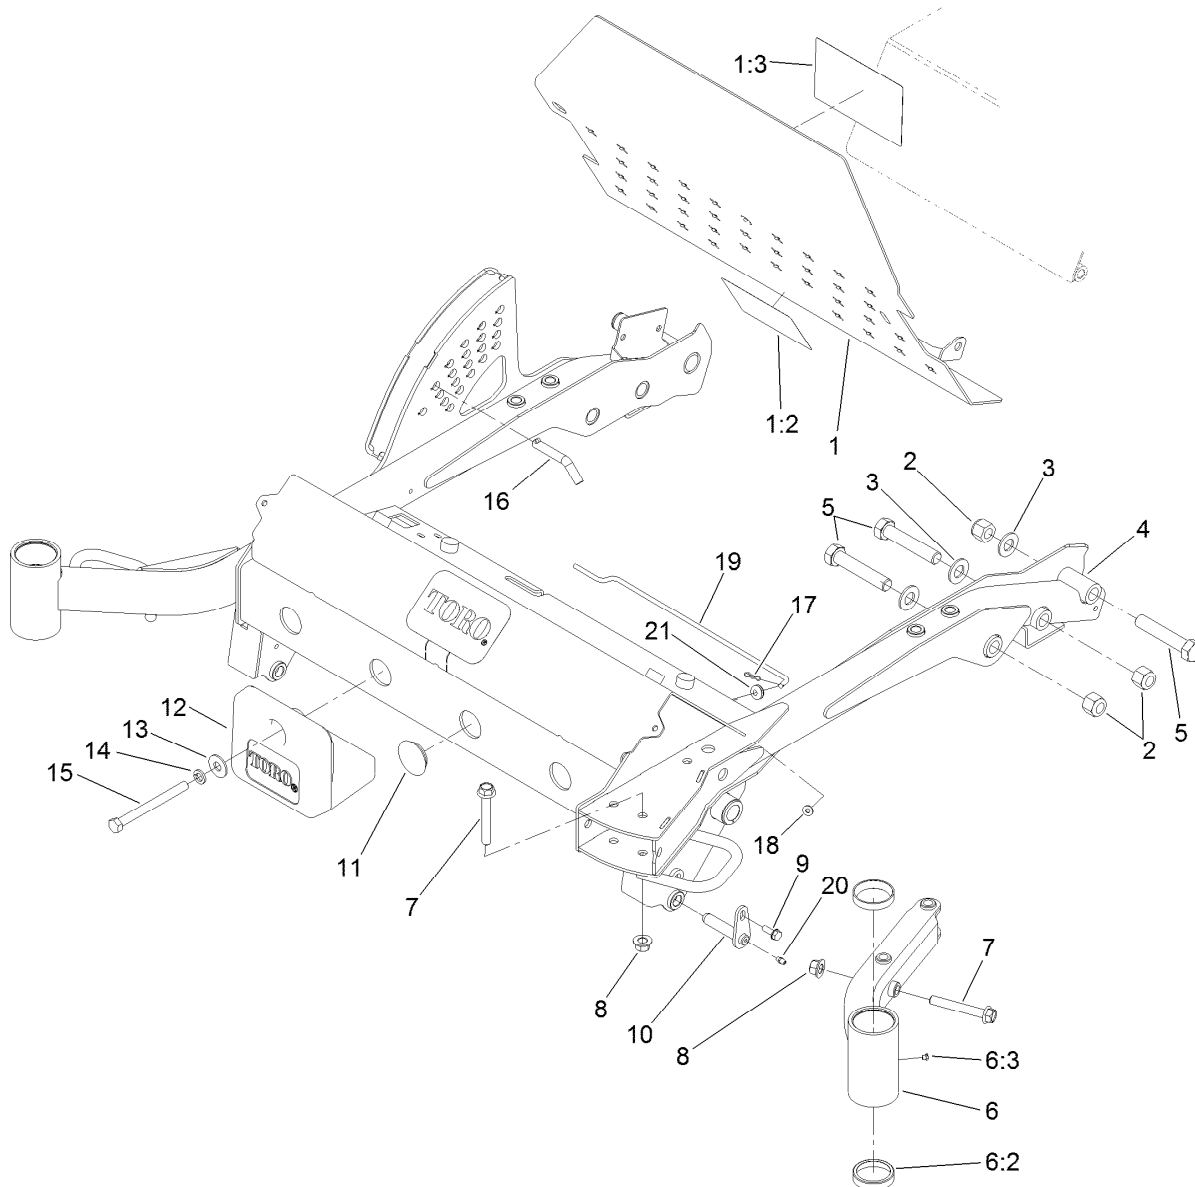

## Floorplate and Carrier Frame Assembly


| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 1    | 120-9165    | 1    | Floorplate ASM       |
| 1:2  | 112-1461    | 1    | Decal-Routing, Belt  |
| 1:3  | 107-1866    | 1    | Decal-Danger, Slope  |
| 2    | 3296-51     | 5    | Nut-Lock, NI         |
| 3    | 92-5836     | 5    | Washer               |
| 4    | 136-4466    | 1    | Carrier Frame ASM    |
| 5    | 328-7       | 5    | Screw-HH             |
| 6    | 121-3340    | 1    | Castor Arm ASM       |
| 6:2  | 254-107     | 2    | Cup-Bearing, Tapered |
| 6:3  | 1-811010    | 1    | Plug                 |
| 7    | 114-8419    | 3    | Screw-HHF            |
| 8    | 99-5107     | 3    | Nut-Lock             |
| 9    | 32144-41    | 2    | Screw-Taptite        |
 
| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 10   | 112-1602    | 2    | Pin-Retainer        |
| 11   | 121-3397    | 2    | Plug-Grommet        |
| 12   | 125-2655-03 | 2    | Weight              |
| 13   | 3256-6      | 2    | Washer-Flat         |
| 14   | 3253-7      | 2    | Washer-Lock         |
| 15   | 325-22      | 2    | Screw-HH            |
| 16   | 112-9544    | 1    | Pin-HOC             |
| 17   | 119-1414    | 1    | Pin-Cotter, Locking |
| 18   | 3256-22     | 1    | Washer-Flat         |
| 19   | 110-9847    | 1    | Rod-Prop            |
| 20   | 302-5       | 2    | Fitting-Grease      |
| 21   | 237-141     | 1    | Grommet-Rubber      |

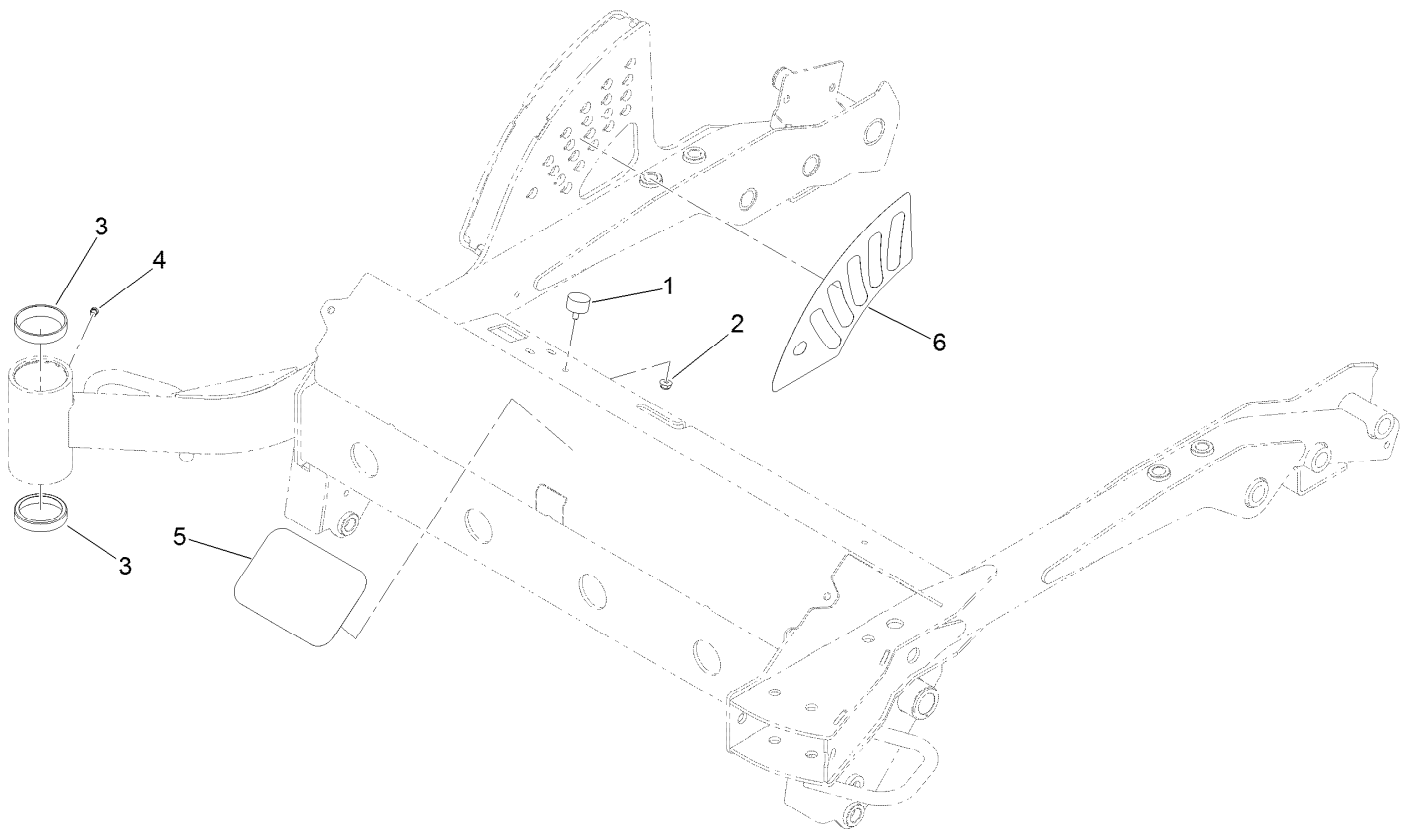

## Carrier Frame Assembly No. 136-4466

 
| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 1    | 240-14      | 4    | Bumper-Rubber        |
| 2    | 104-7201    | 4    | Nut-HF               |
| 3    | 254-107     | 2    | Cup-Bearing, Tapered |
| 4    | 1-811010    | 1    | Plug                 |
| 5    | 99-4693     | 1    | Decal                |
| 6    | 127-6519    | 1    | Decal-HOC            |

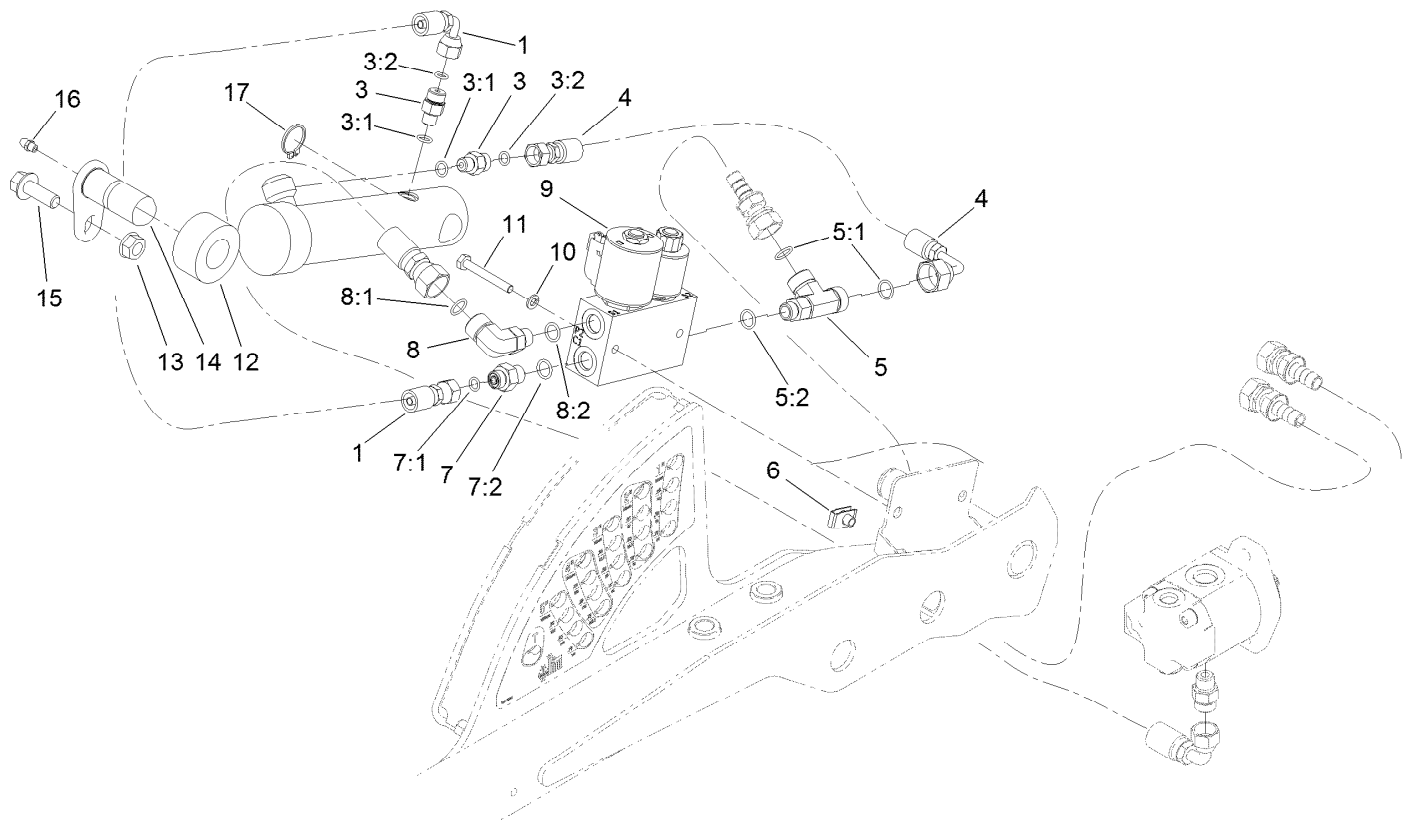

## Lift Valve and Cylinder Assembly


| Ref. | Part Number | Qty. | Description      |
|------|-------------|------|------------------|
| 1    | 127-4908    | 1    | Hose-HYD         |
| 3    | 340-92      | 2    | Fitting-Straight |
| 3:1  | 237-78      | 1    | O-Ring           |
| 3:2  | 237-21      | 1    | O-Ring           |
| 4    | 127-4909    | 1    | Hose-HYD         |
| 5    | 110-0064    | 1    | Fitting-Tee      |
| 5:1  | 237-30      | 2    | O-Ring           |
| 5:2  | 237-42      | 1    | O-Ring           |
| 6    | 107069      | 2    | Clip             |
| 7    | 340-1       | 1    | Fitting-Straight |
| 7:1  | 237-21      | 1    | O-Ring           |
| 7:2  | 237-42      | 1    | O-Ring           |
 
| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 8    | 340-99      | 1    | Fitting-HYD, 90 DEG |
| 8:1  | 237-30      | 1    | O-Ring              |
| 8:2  | 237-42      | 1    | O-Ring              |
| 9    | 131-1934    | 1    | Deck Lift Valve ASM |
| 10   | 3253-3      | 2    | Washer-Lock         |
| 11   | 321-11      | 2    | Screw-HH            |
| 12   | 110-9834    | 1    | HYD Cylinder ASM    |
| 13   | 32128-37    | 1    | Nut-HF              |
| 14   | 125-1910    | 1    | Pin-Pivot           |
| 15   | 3234-15     | 1    | Screw-HHF           |
| 16   | 302-5       | 1    | Fitting-Grease      |
| 17   | 32151-36    | 1    | Ring-Retaining      |

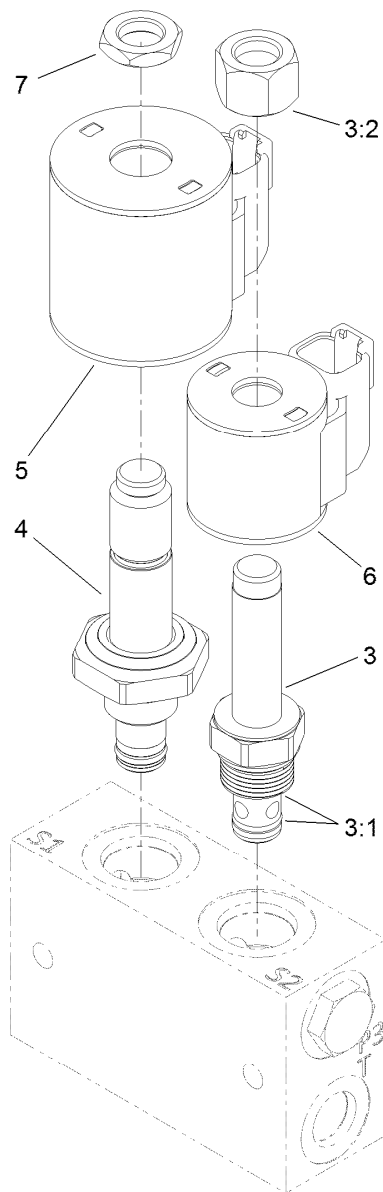

## Valve Assembly No. 131-1934

 
| Ref. | Part Number | Qty. | Description    |
|------|-------------|------|----------------|
| 3    | 107-7517    | 1    | Valve-Solenoid |
| 3:1  | 105-9156    | 1    | Seal Kit       |
| 3:2  | 107-7812    | 1    | Nut-Solenoid   |
| 4    | 131-1935    | 1    | Valve-Solenoid |
| 5    | 115-3021    | 1    | Coil-12V       |
| 6    | 119-8036    | 1    | Coil           |
| 7    | 110-2634    | 1    | Nut-Coil       |

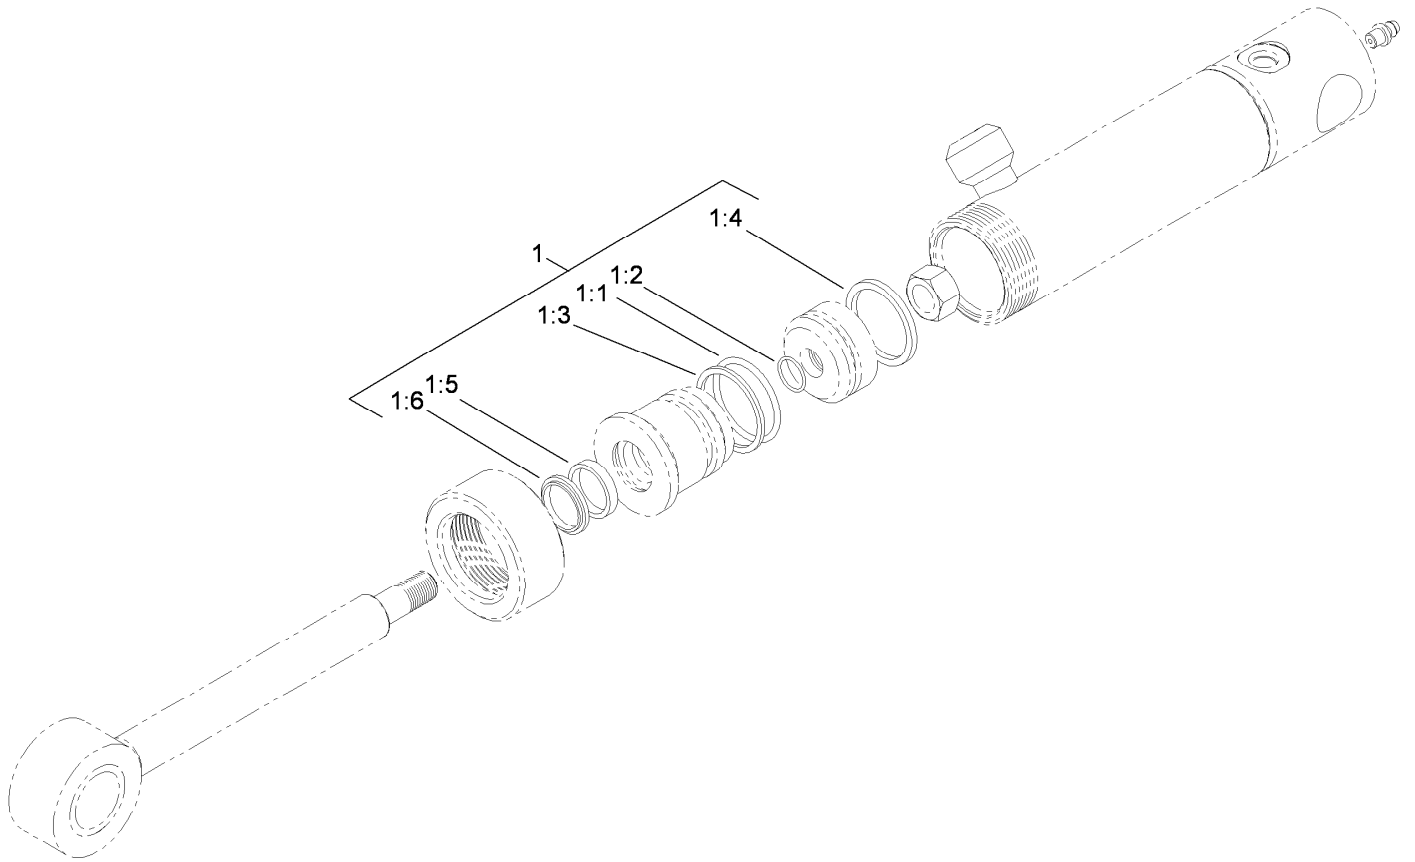

## Hydraulic Cylinder Assembly No. 110-9834


| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 112-6353           | 1           | Seal Kit           |
| 1:1         |                    | 1           | O-Ring ●           |
| 1:2         |                    | 1           | O-Ring ●           |
| 1:3         |                    | 1           | Backup ●           |
| 1:4         |                    | 1           | Seal-Bp ●          |
| 1:5         |                    | 1           | Seal-Rod ●         |
| 1:6         |                    | 1           | Seal-Dust ●        |

 ● Not serviced separately

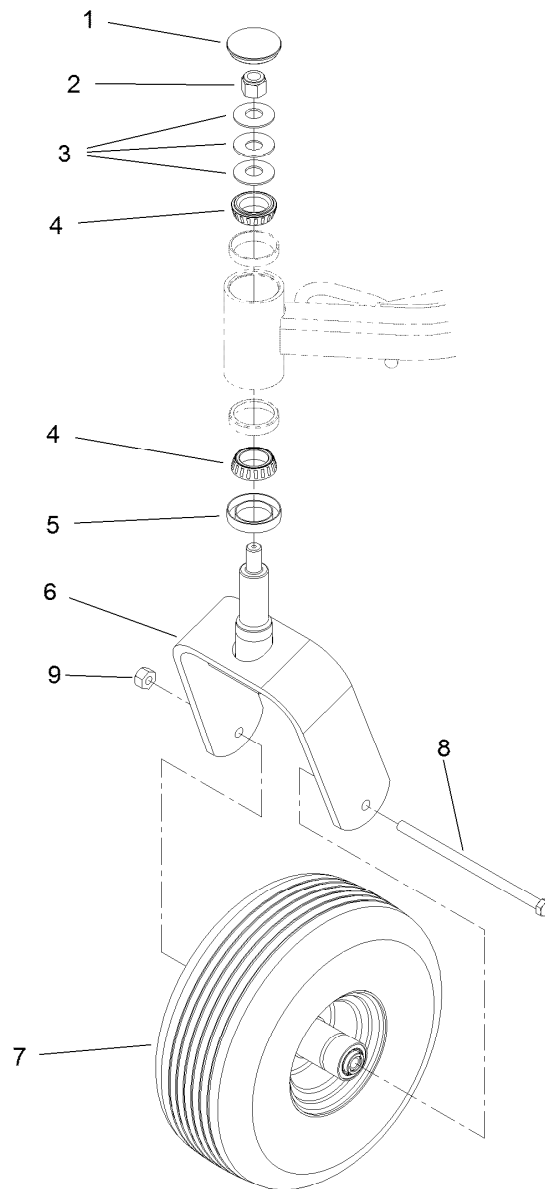


## Caster Wheel Assembly
 
| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 1    | 108-9950    | 2    | Cap-Grease            |
| 2    | 3296-51     | 2    | Nut-Lock, NI          |
| 3    | 108-9957    | 6    | Washer-Belleville     |
| 4    | 254-106     | 4    | Cone-Bearing, Tapered |
| 5    | 69-2980     | 2    | Seal                  |
| 6    | 108-9946-03 | 2    | Fork-Caster           |
| 7    | 133-4723    | 2    | Caster Wheel ASM      |
| 8    | 325-39      | 2    | Screw-HH              |
| 9    | 3296-25     | 2    | Nut-Lock, NI          |

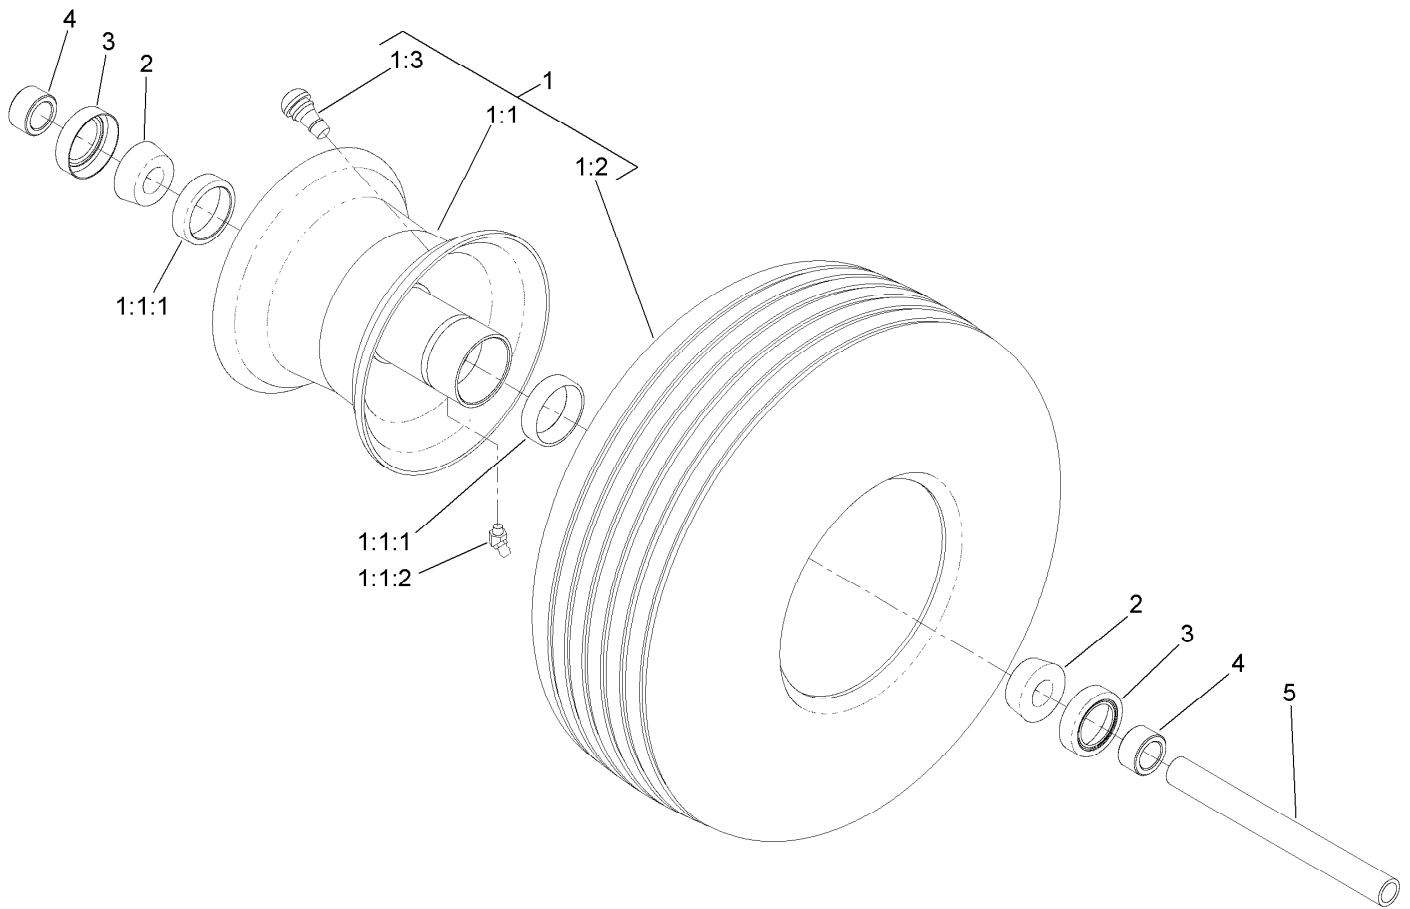

## Caster Wheel Assembly No. 133-4723

 
| Ref.  | Part Number | Qty. | Description          |
|-------|-------------|------|----------------------|
| 1     | 133-4730    | 1    | Tire And Wheel ASM   |
| 1:1   | 133-4725    | 1    | Wheel                |
| 1:1:1 | 1-633584    | 2    | Bearing-Cup          |
| 1:1:2 | 302-11      | 1    | Fitting-Lube, 45 DEG |
| 1:2   | 133-4724    | 1    | Tire                 |
| 1:3   | 5108        | 1    | Valve                |
| 2     | 1-633585    | 2    | Bearing-Cone, Taper  |
| 3     | 1-633580    | 2    | Seal-Bearing         |
| 4     | 1-633581    | 2    | Spacer-Bearing       |
| 5     | 1-633959    | 1    | Spacer-Caster, Front |

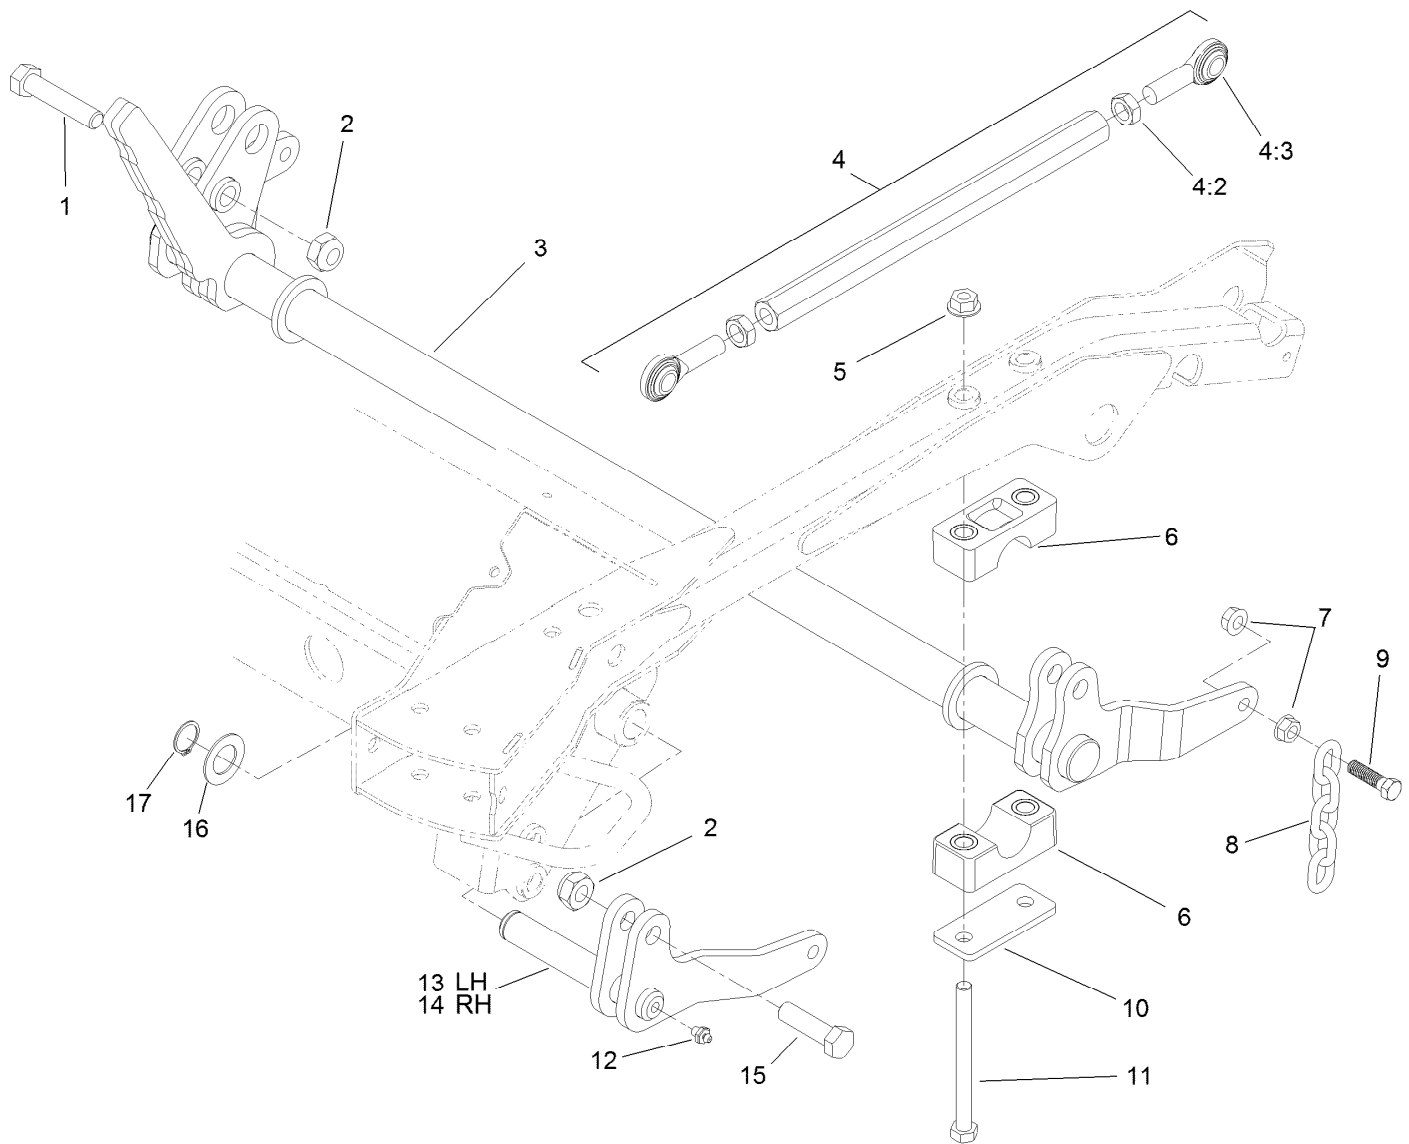

## Deck Lift Assembly

| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 1    | 104-5895    | 1    | Screw-HH            |
| 2    | 3296-61     | 4    | Nut-Lock            |
| 3    | 117-9220-03 | 1    | Shaft-Lift          |
| 4    | 114-4059    | 2    | Link ASM            |
| 4:2  | 3220-6      | 2    | Nut-Jam             |
| 4:3  | 1-633029    | 2    | Balljoint-Spherical |
| 5    | 32128-49    | 4    | Nut-HHF             |
| 6    | 115-0491    | 4    | Cap-Bearing         |
| 7    | 32128-37    | 8    | Nut-HF              |
| 8    | 1-633447    | 4    | Chain-Lift, Deck    |

 
| Ref. | Part Number | Qty. | Description    |
|------|-------------|------|----------------|
| 9    | 103-1898    | 4    | Screw-HH       |
| 10   | 117-2903    | 2    | Plate-Bearing  |
| 11   | 325-22      | 4    | Screw-HH       |
| 12   | 302-2       | 2    | Fitting-Grease |
| 13   | 110-9818-03 | 1    | Lift-LH        |
| 14   | 110-9820-03 | 1    | Lift-RH        |
| 15   | 327-22      | 3    | Screw-HH       |
| 16   | 69-9010     | 2    | Washer         |
| 17   | 32151-29    | 2    | Ring-Retaining |

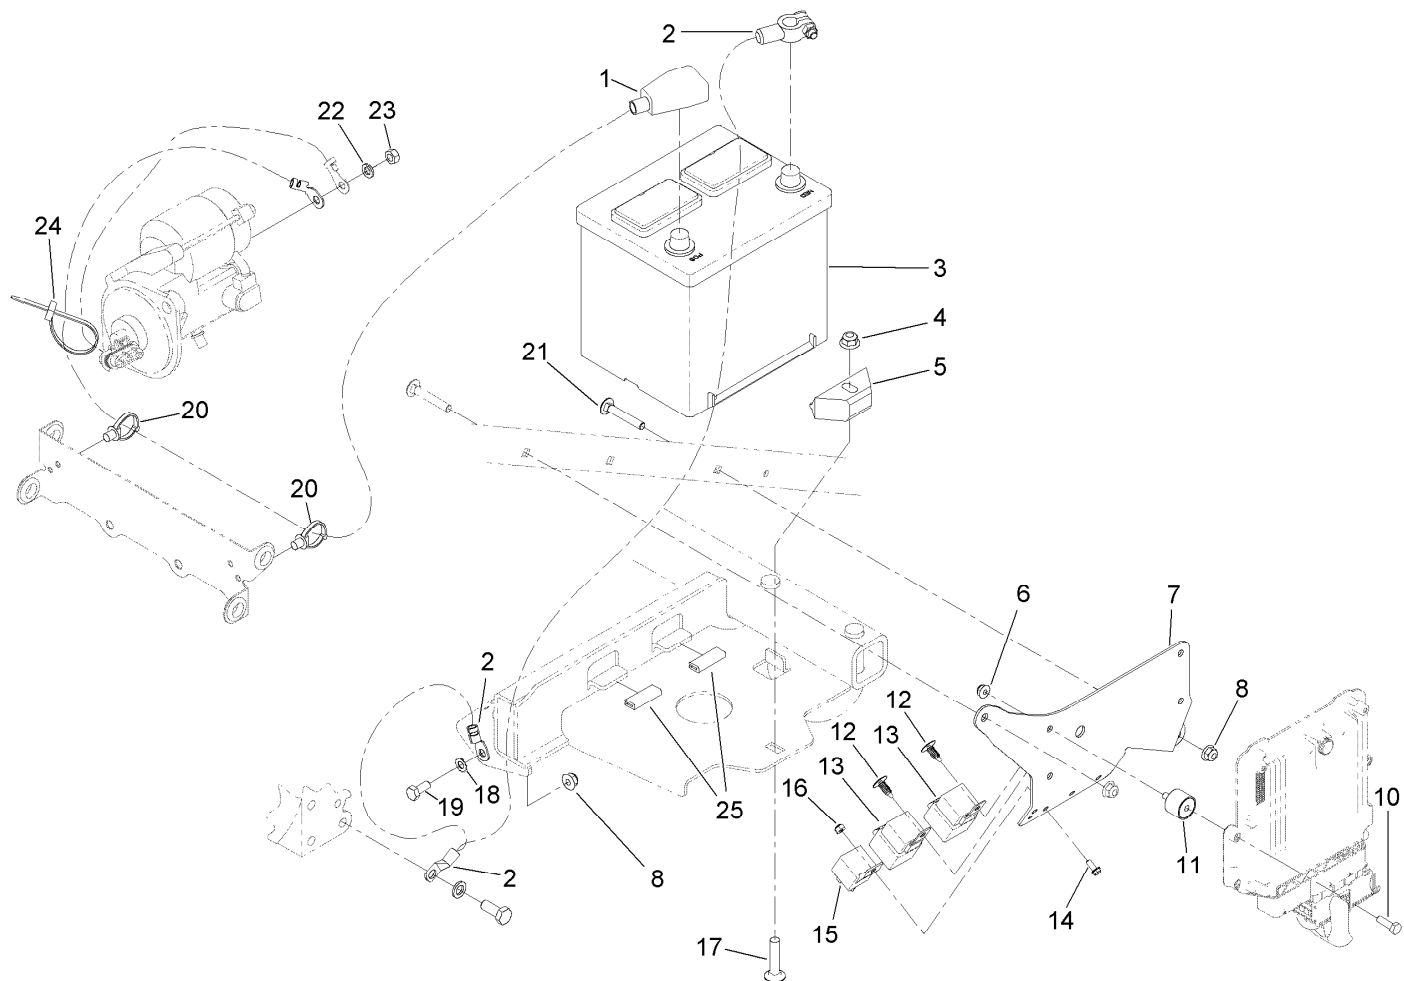

## Battery and Relay Assembly


| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 1    | 108-6327    | 1    | Cable-Battery, Positive |
| 2    | 105-0040    | 1    | Cable-Battery, Negative |
| 3    | 106-5187    | 1    | Battery-Dry             |
| 4    | 104-8301    | 1    | Nut-HF, NI              |
| 5    | 66-2490     | 1    | Retainer-Battery        |
| 6    | 104-7201    | 4    | Nut-HF                  |
| 7    | 120-9148-03 | 1    | Plate-Controller        |
| 8    | 104-8300    | 2    | Nut-HF, NI              |
| 10   | 321-5       | 4    | Screw-HH                |
| 11   | 125-2674    | 4    | Mount-Cylindrical       |
| 12   | 117-2382    | 2    | Plug-Plastic            |
| 13   | 99-7430     | 2    | Relay                   |
 
| Ref. | Part Number | Qty. | Description            |
|------|-------------|------|------------------------|
| 14   | 3290-321    | 1    | Screw-HWH              |
| 15   | 99-7435     | 1    | Relay-Power            |
| 16   | 3296-2      | 1    | Nut-Lock, NI           |
| 17   | 3231-5      | 1    | Screw-CARR             |
| 18   | 3255-8      | 1    | Washer-Lock            |
| 19   | 322-3       | 1    | Screw-HH               |
| 20   | 32180-030   | 2    | Clip-Tie               |
| 21   | 3230-6      | 1    | Screw-CARR             |
| 22   | 3253-4      | 1    | Washer-Lock            |
| 23   | 33014-00    | 1    | Nut-Hex                |
| 24   | 3290-378    | 1    | Tie-Cable              |
| 25   | 131-5508    | 2    | Trim-Battery Hold Down |

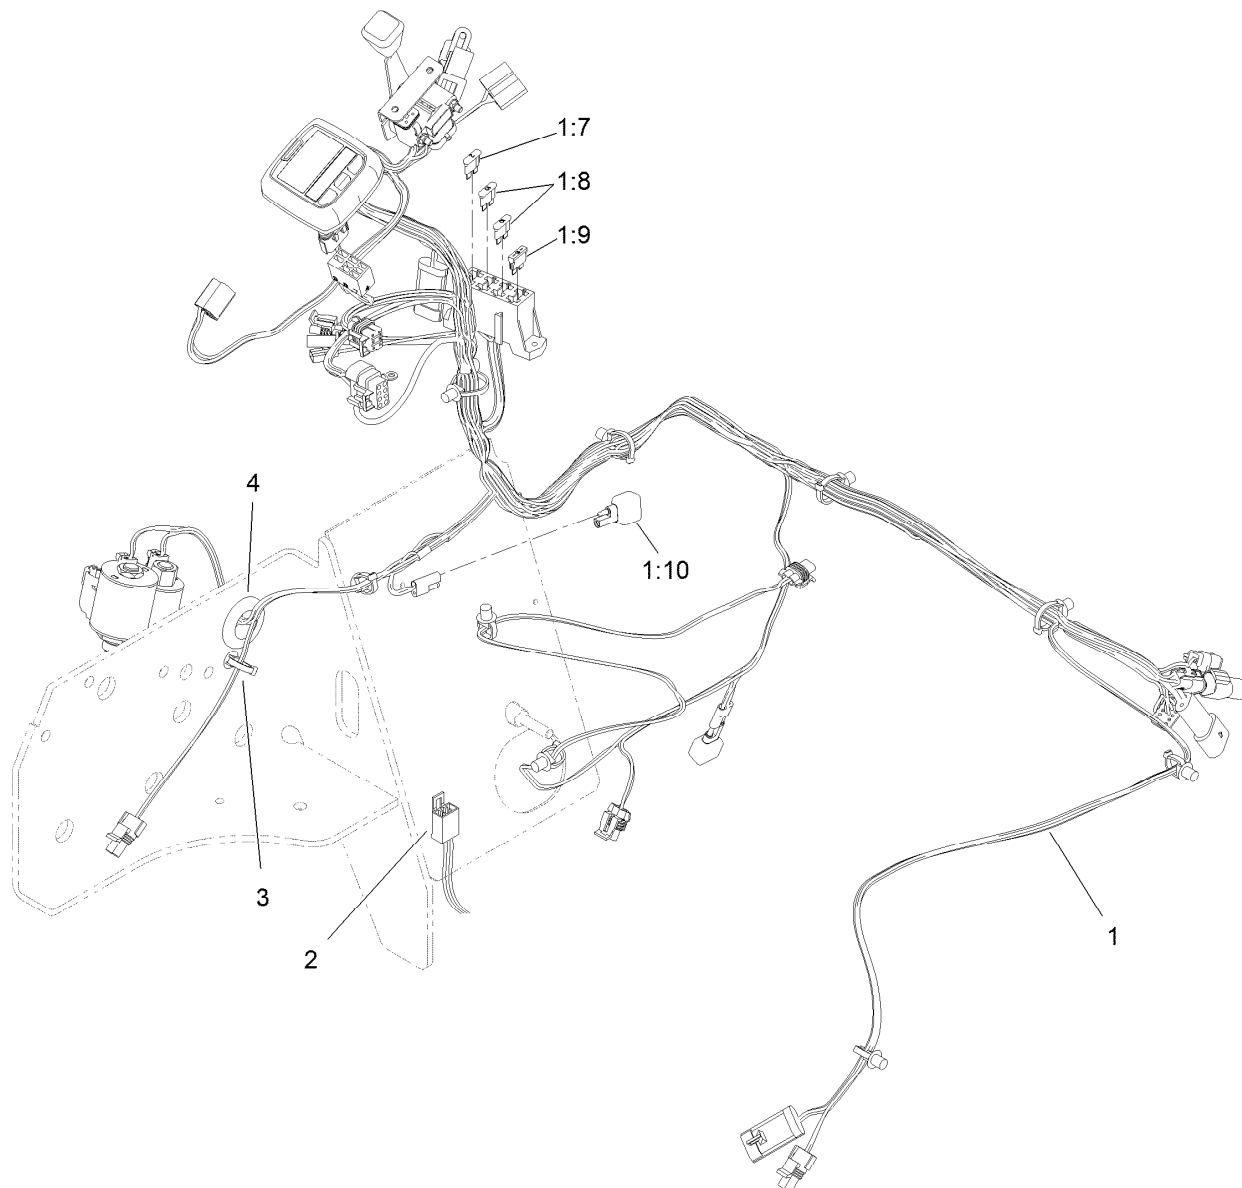


## Main Wire Harness Assembly
 
| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 1    | 119-4370    | 1    | Harness-Wire, Main |
| 1:7  | 94-6710     | 1    | Fuse-2 Amp         |
| 1:8  | 218-578     | 2    | Fuse-Blade, 10 Amp |
| 1:9  | 109355      | 1    | Fuse-Blade, 15 Amp |
| 1:10 | 100-4918    | 2    | Diode              |
| 2    | 108-8657    | 1    | Harness-Wire, Seat |
| 3    | 3290-378    | 3    | Tie-Cable          |
| 4    | 237-165     | 1    | Grommet            |

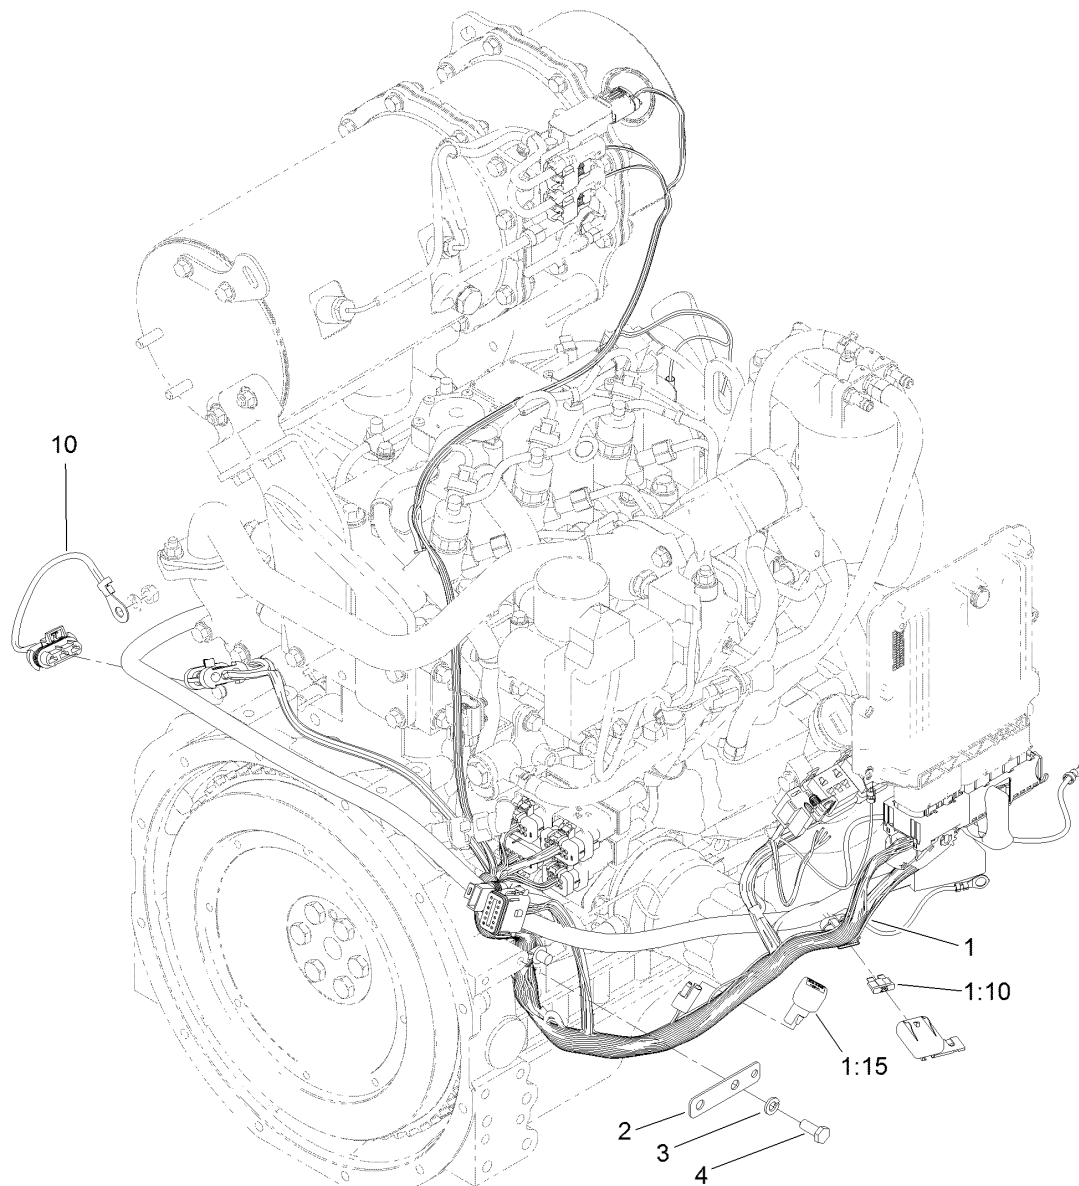

## Engine Harness Assembly

 
| Ref. | Part Number | Qty. | Description                |
|------|-------------|------|----------------------------|
| 1    | 119-4371    | 1    | Harness-Wire, Yanmar       |
| 1:10 | 109102      | 1    | Fuse-Blade, 25 Amp         |
| 1:15 | 100-4918    | 3    | Diode                      |
| 2    | 121-5636    | 1    | Tab-Harness                |
| 3    | 3253-4      | 2    | Washer-Lock                |
| 4    | 33114-020   | 2    | Screw-HH                   |
| 10   | 99-3441     | 1    | Harness-Wire, Fusible Link |

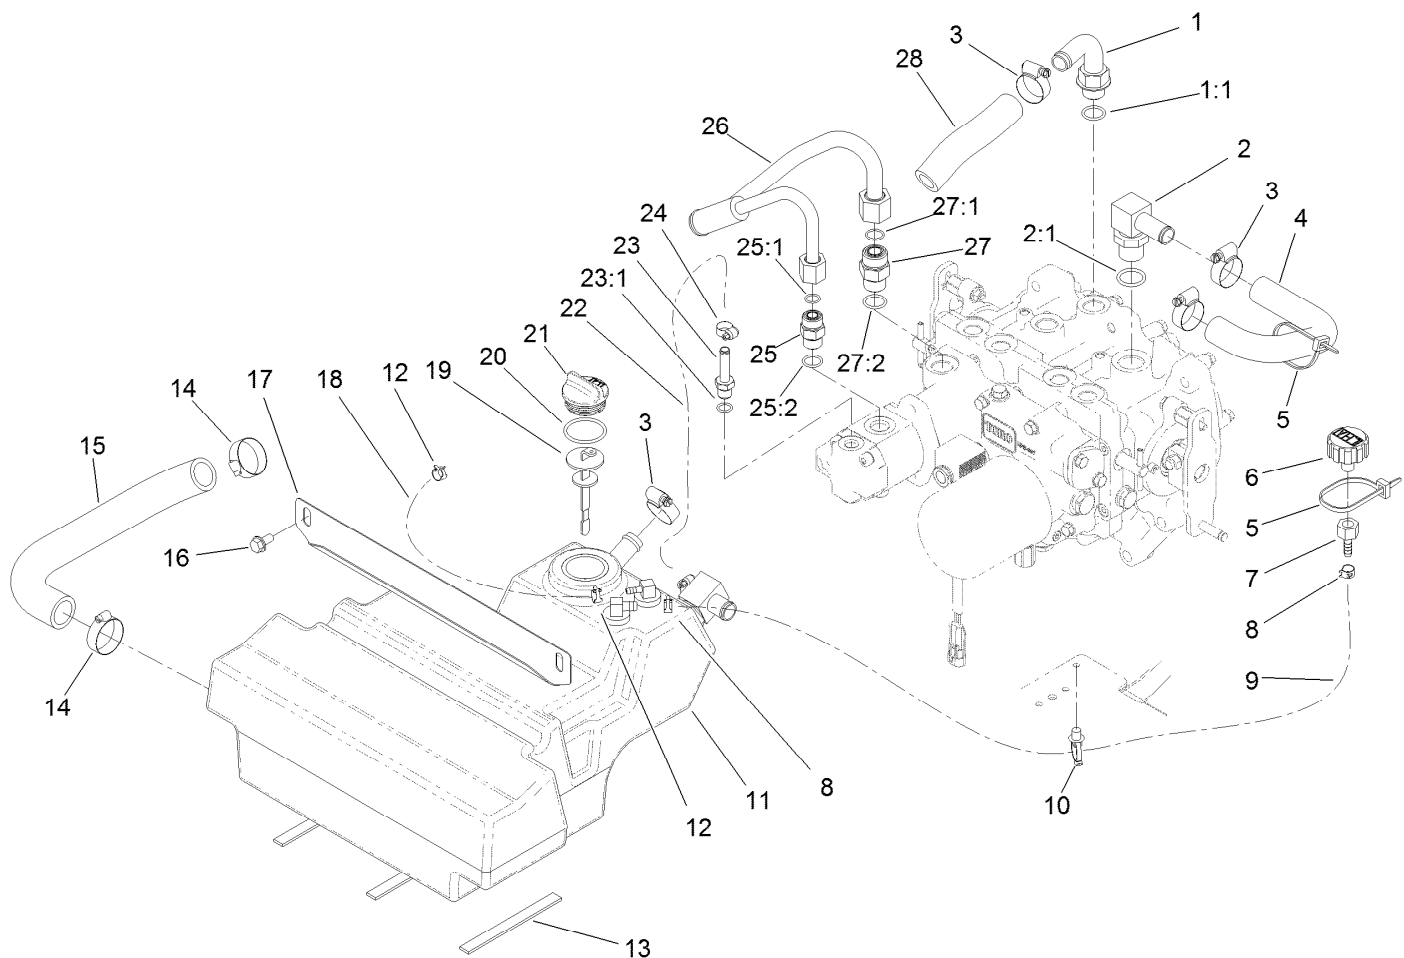

## Hydraulic Reservoir Assembly


| Ref. | Part Number | Qty. | Description       |
|------|-------------|------|-------------------|
| 1    | 110-5522    | 1    | Fitting-Elbow, 90 |
| 1:1  | 237-80      | 1    | O-Ring            |
| 2    | 353-987     | 1    | Fitting-Elbow, 90 |
| 2:1  | 237-81      | 1    | O-Ring            |
| 3    | 2412-129    | 4    | Clamp-Hose        |
| 4    | 110-5524    | 1    | Hose-Return       |
| 5    | 3290-379    | 2    | Tie-Cable         |
| 6    | 68-6150     | 1    | Breather          |
| 7    | 354-95      | 1    | Fitting-Straight  |
| 8    | 92-2379     | 2    | Clamp-Hose        |
| 9    | 110-9662    | 1    | Hose-Fuel         |
| 10   | 32180-030   | 1    | Clip-Tie          |
| 11   | 110-8237    | 1    | HYD Reservoir ASM |
| 12   | 2412-98     | 2    | Clamp-Hose        |
| 13   | 120-0017    | 3    | Strip-Foam        |
| 14   | 2412-34     | 2    | Clamp-Hose        |
| 15   | 110-5526    | 1    | Hose-Suction      |
| 16   | 32144-14    | 2    | Screw-HWHTF       |
 
| Ref. | Part Number | Qty. | Description       |
|------|-------------|------|-------------------|
| 17   | 110-5529-03 | 1    | Support-Reservoir |
| 18   | 109-0299    | 1    | Hose-Fuel         |
| 19   | 112-6365    | 1    | Dipstick          |
| 20   | 94-8166     | 1    | O-Ring            |
| 21   | 93-7498     | 1    | Plug-Plastic      |
| 22   | 94-5625     | 1    | Hose              |
| 23   | 353-979     | 1    | Fitting-STR       |
| 23:1 | 237-42      | 1    | O-Ring            |
| 24   | 2412-108    | 2    | Clamp-Worm        |
| 25   | 340-4       | 1    | Fitting-STR       |
| 25:1 | 237-30      | 1    | O-Ring            |
| 25:2 | 237-79      | 1    | O-Ring            |
| 26   | 110-5532    | 1    | Tube              |
| 27   | 340-7       | 1    | Fitting-Straight  |
| 27:1 | 237-65      | 1    | O-Ring            |
| 27:2 | 237-80      | 1    | O-Ring            |
| 28   | 112-1680    | 1    | Hose-HYD          |

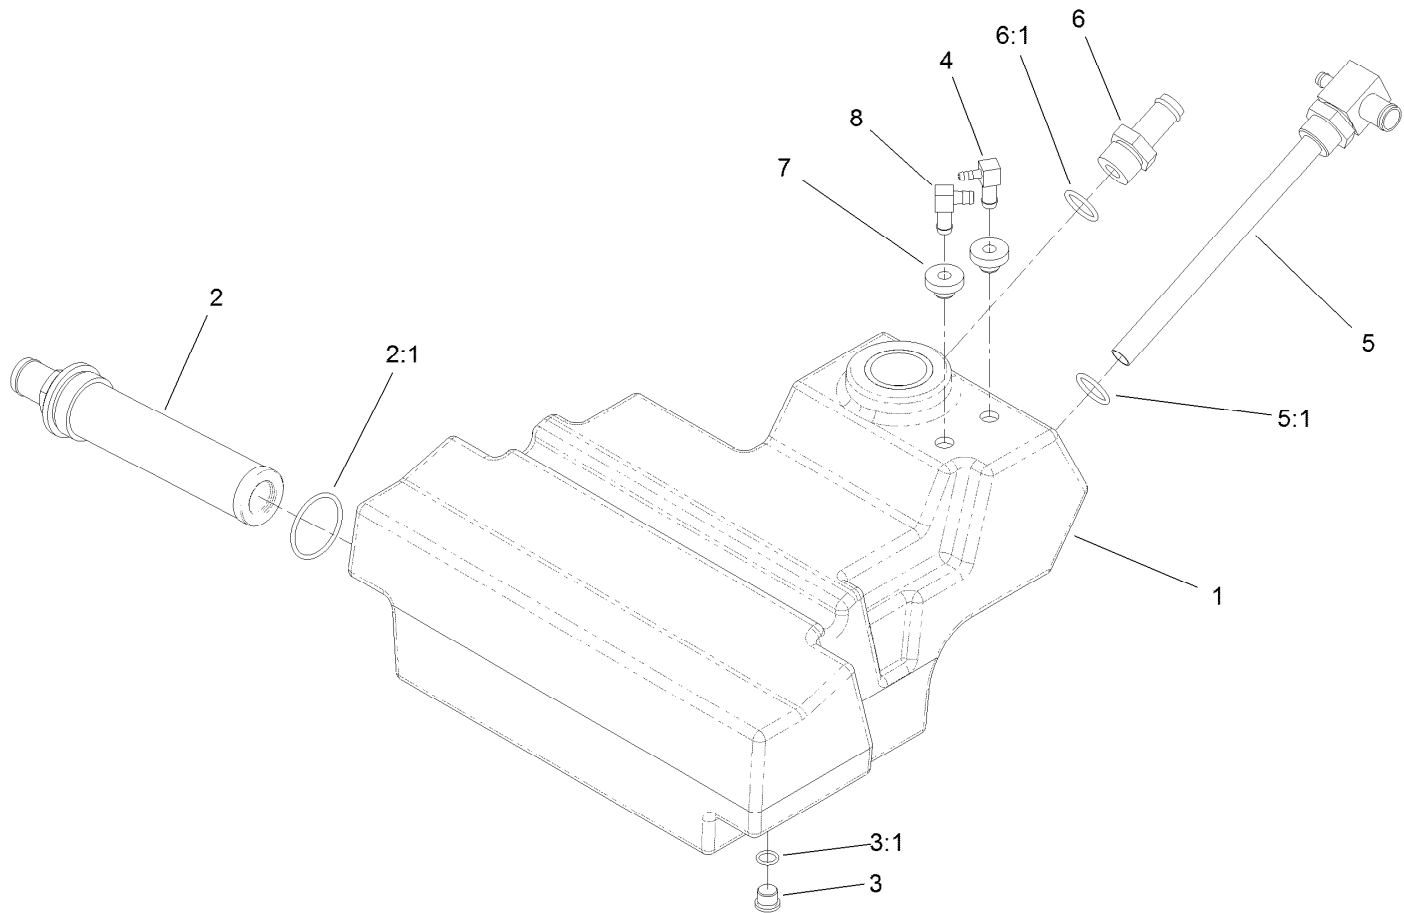

## Hydraulic Reservoir Assembly No. 110-8237

 
| Ref. | Part Number | Qty. | Description            |
|------|-------------|------|------------------------|
| 1    | 108-5200    | 1    | Reservoir-HYD          |
| 2    | 104-7546    | 1    | Tank Strainer ASM      |
| 2:1  | 340-136     | 1    | O-Ring                 |
| 3    | 353-989     | 1    | Plug-Hex, Hollow       |
| 3:1  | 237-42      | 1    | O-Ring                 |
| 4    | 104-5228    | 1    | Fitting-Elbow, 90 DEG  |
| 5    | 108-9894    | 1    | Fitting-Elbow, Special |
| 5:1  | 237-81      | 1    | O-Ring                 |
| 6    | 354-73      | 1    | Fitting                |
| 6:1  | 237-81      | 1    | O-Ring                 |
| 7    | 46-6560     | 2    | Bushing                |
| 8    | 46-6550     | 1    | Fitting-Elbow, 90 DEG  |

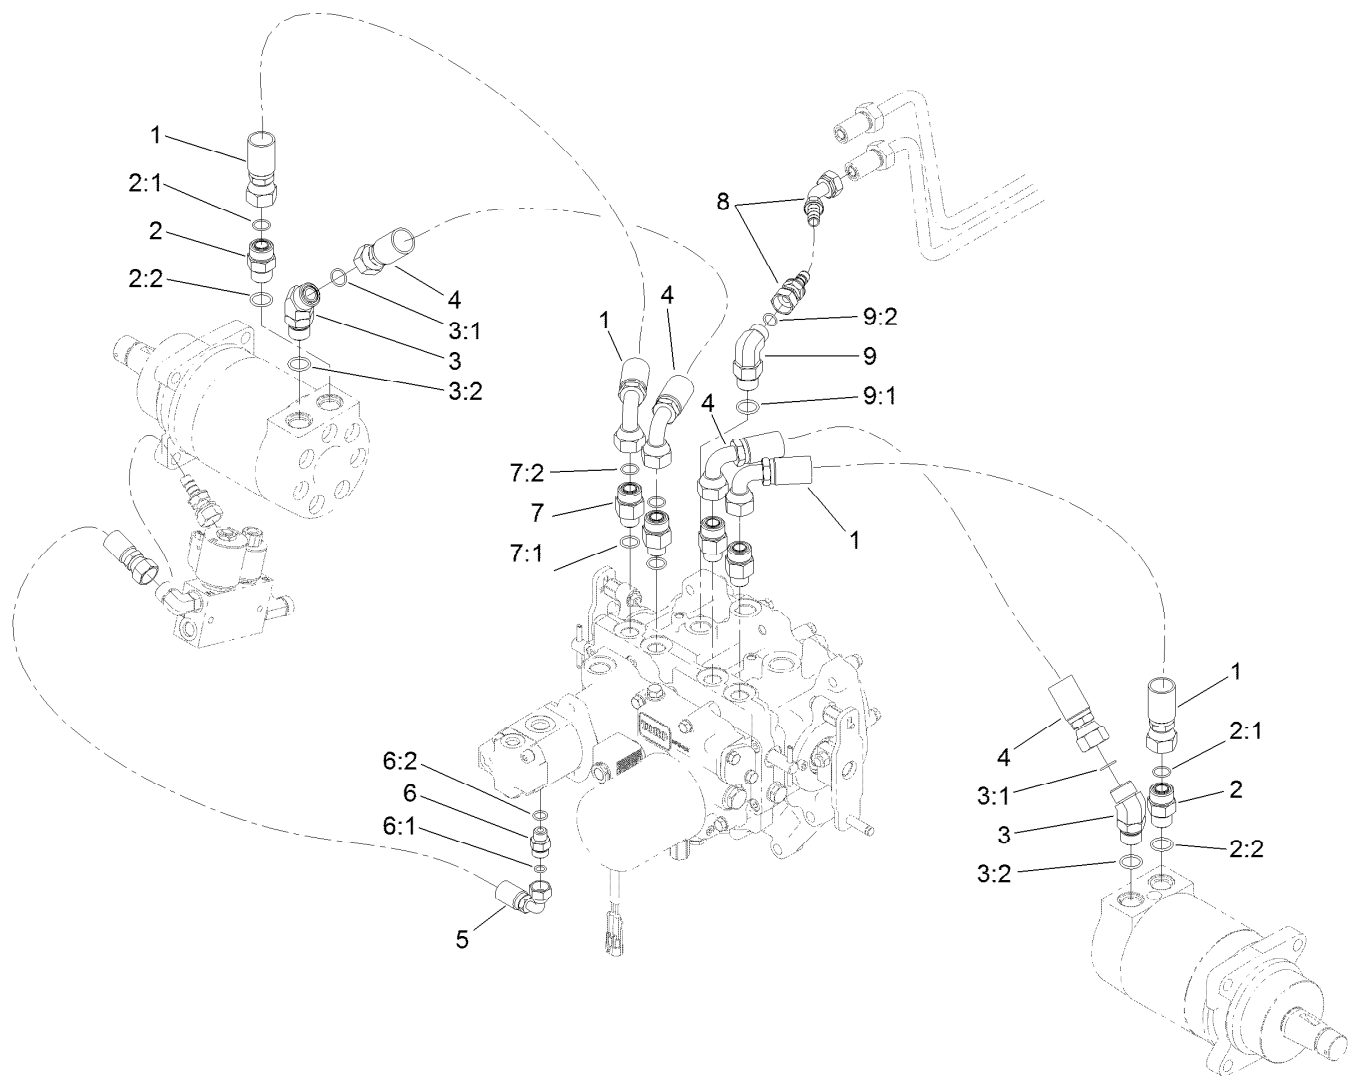

## Hydraulic Hose Routing Assembly


| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 1    | 112-1683    | 2    | Hose                |
| 2    | 340-7       | 2    | Fitting-Straight    |
| 2:1  | 237-65      | 1    | O-Ring              |
| 2:2  | 237-80      | 1    | O-Ring              |
| 3    | 340-14      | 2    | Fitting-HYD, 45 DEG |
| 3:1  | 237-65      | 1    | O-Ring              |
| 3:2  | 237-80      | 1    | O-Ring              |
| 4    | 110-5518    | 2    | Hose                |
| 5    | 127-4910    | 1    | Hose-HYD            |
| 6    | 340-2       | 1    | Fitting-Straight    |
 
| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 6:1  | 237-22      | 1    | O-Ring                |
| 6:2  | 237-42      | 1    | O-Ring                |
| 7    | 340-155     | 4    | Fitting-Straight      |
| 7:1  | 237-79      | 1    | O-Ring                |
| 7:2  | 237-151     | 1    | O-Ring                |
| 8    | 121-3372    | 1    | Hose-HYD              |
| 9    | 340-105     | 1    | Fitting-Elbow, 90 DEG |
| 9:1  | 237-80      | 1    | O-Ring                |
| 9:2  | 237-30      | 1    | O-Ring                |

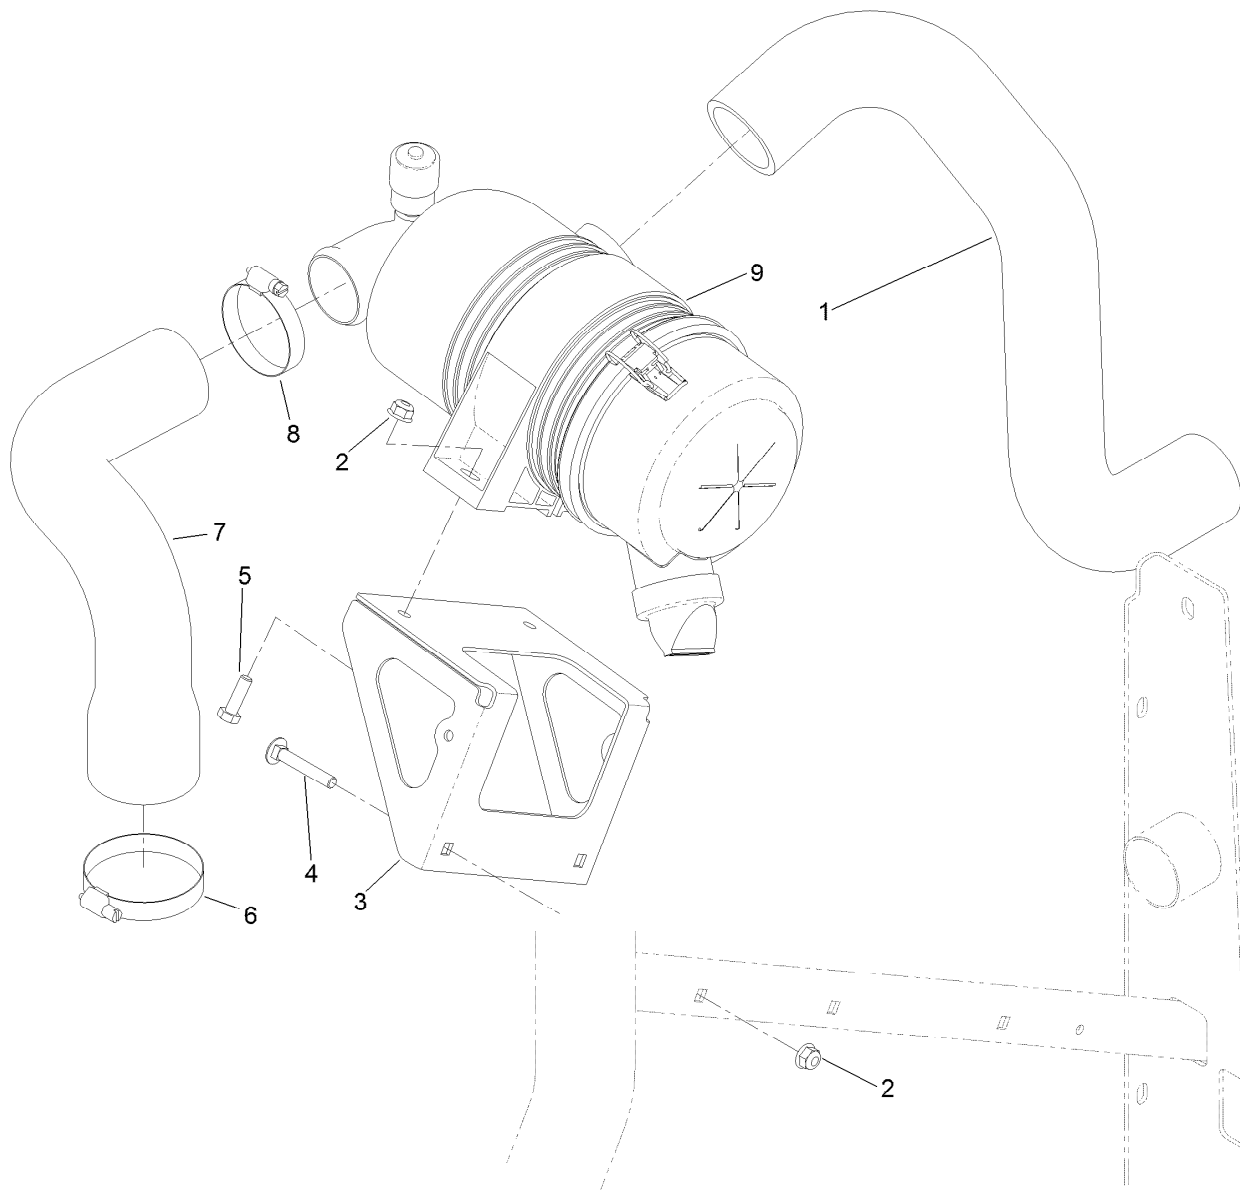


## Air Cleaner Assembly
 
| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 1    | 120-9177    | 1    | Hose-Air            |
| 2    | 104-8300    | 4    | Nut-HF, NI          |
| 3    | 120-9198-03 | 1    | Bracket-Air Cleaner |
| 4    | 3230-6      | 2    | Screw-CARR          |
| 5    | 322-5       | 2    | Screw-HH            |
| 6    | 2412-125    | 1    | Clamp-Hose          |
| 7    | 120-9199    | 1    | Hose-Air            |
| 8    | 2412-130    | 1    | Clamp-Hose          |
| 9    | 136-4481    | 1    | Air Cleaner ASM     |

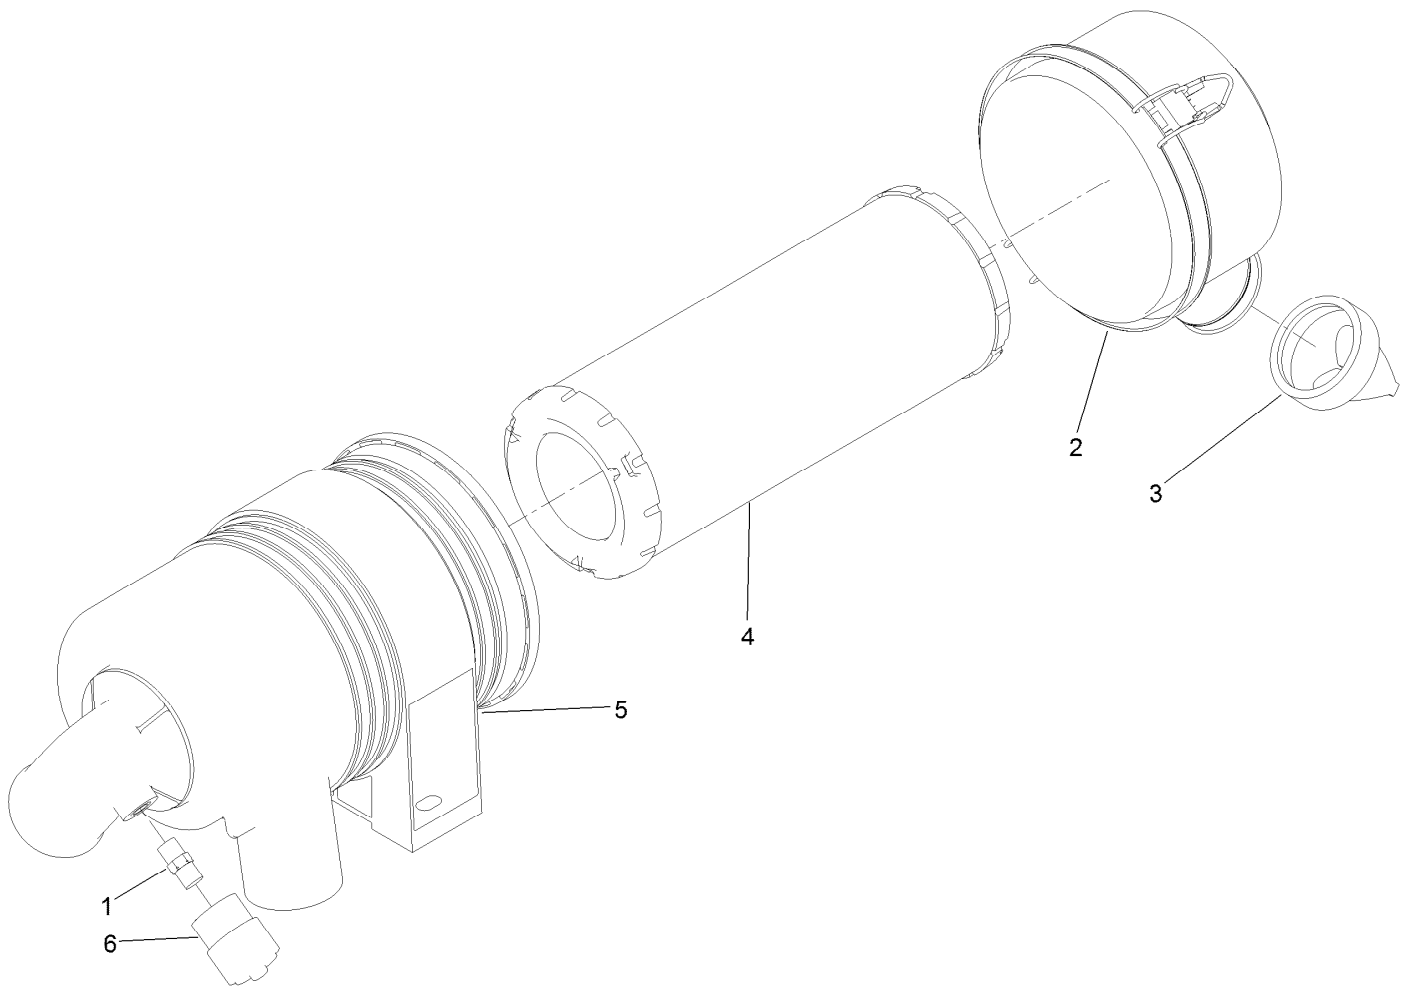

## Air Cleaner Assembly No. 136-4481

 
| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 1    | 94-1416     | 1    | Adapter-Indicator    |
| 2    | 98-9771     | 1    | Cover ASM            |
| 3    | 94-1414     | 1    | Valve-Vacuator       |
| 4    | 108-3810    | 1    | Filter-Air           |
| 5    | 98-4525     | 1    | Bracket-Cleaner, Air |
| 6    | 93-9164     | 1    | Indicator-Mini       |

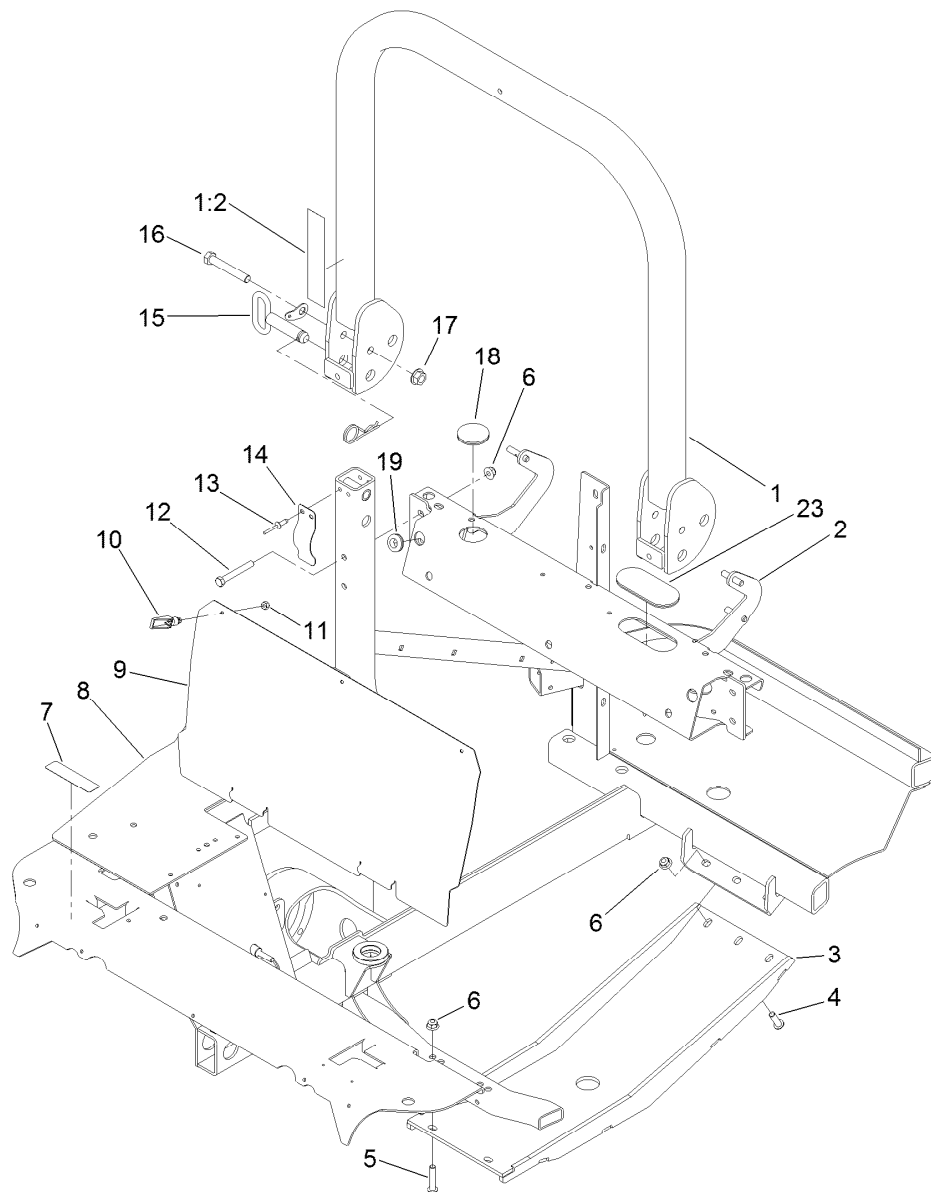

## Frame and Upper-ROPS Assembly

| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 1    | 110-9770    | 1    | Upper ROPS ASM        |
| 1:2  | 107-3069    | 1    | Decal-Warning         |
| 2    | 132-8155-03 | 1    | Crossmember ASM       |
| 3    | 125-2660-03 | 1    | Skid                  |
| 4    | 3274-63     | 3    | Screw-HSBH            |
| 5    | 3274-107    | 2    | Screw-HSBH            |
| 6    | 104-8301    | 9    | Nut-HF, NI            |
| 7    | 133-5618    | 1    | Decal-Arrester, Spark |
| 8    | 120-0060-03 | 1    | Frame-Rear            |
| 9    | 121-3381-03 | 1    | Panel-Rear            |
| 10   | 74-5950     | 3    | Latch-Swell           |

 
| Ref. | Part Number | Qty. | Description    |
|------|-------------|------|----------------|
| 11   | 1-804254    | 3    | Nut-Lock, HH   |
| 12   | 323-13      | 4    | Screw-HH       |
| 13   | 3290-412    | 4    | Rivet-Blind    |
| 14   | 110-5696    | 2    | Spring-Leaf    |
| 15   | 103-4553    | 2    | Pin-Fold, ROPS |
| 16   | 112-7264    | 2    | Screw-HH       |
| 17   | 32128-23    | 2    | Nut-HF         |
| 18   | 105-5761    | 1    | Grommet        |
| 19   | 237-124     | 2    | Grommet        |
| 23   | 130-6086    | 1    | Grommet        |

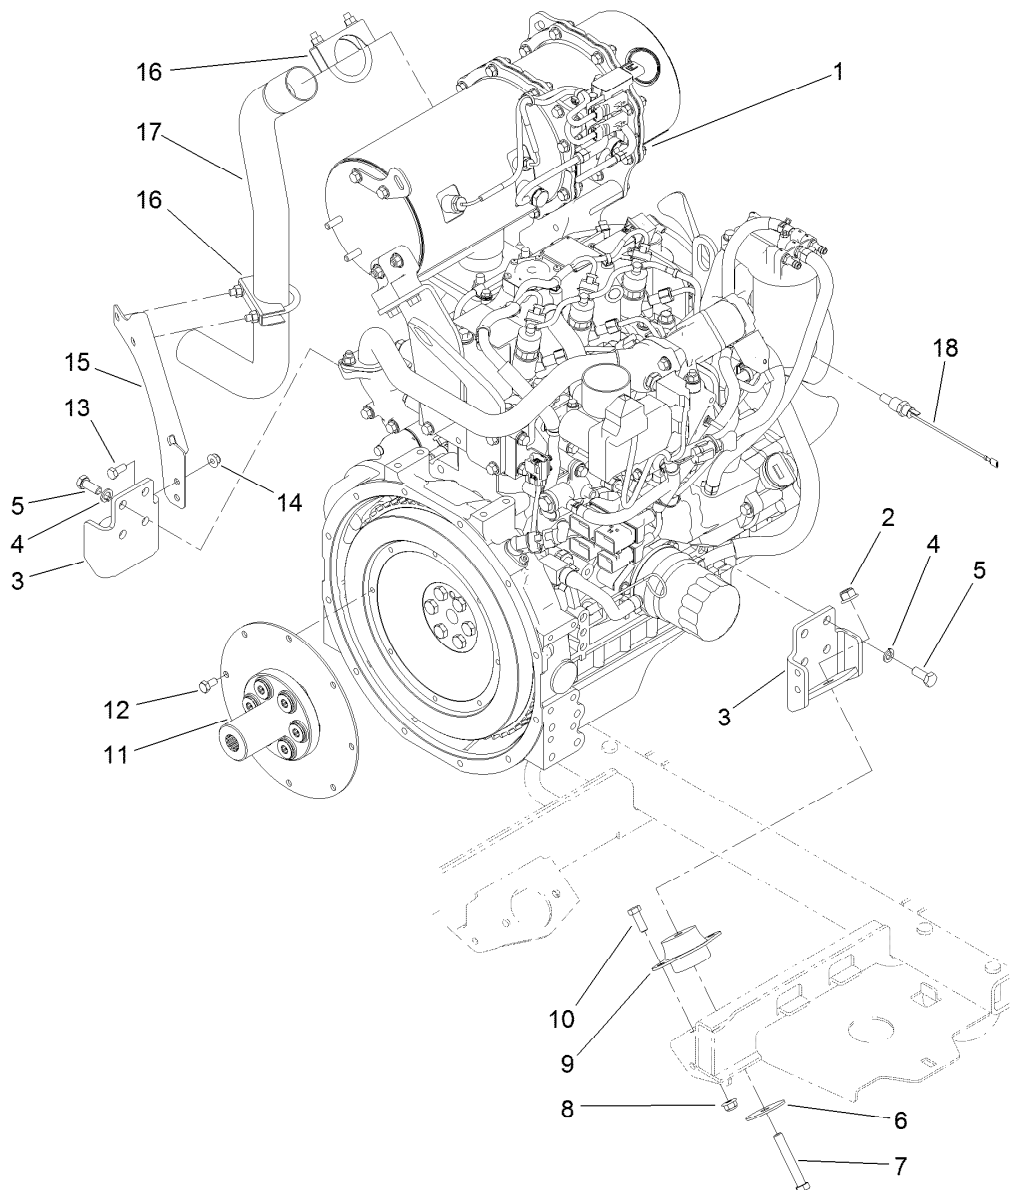

## Engine Assembly

| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 1    | 120-9160    | 1    | Engine-Yanmar, Diesel |
| 2    | 114-8417    | 2    | Nut-HF, NI            |
| 3    | 120-9180-03 | 2    | Mount-Motor, Upper    |
| 4    | 48-9590     | 8    | Washer-Lock           |
| 5    | 33115-025   | 8    | Screw-HH              |
| 6    | 87-5100     | 2    | Washer-Snubbing       |
| 7    | 324-11      | 2    | Screw-HH              |
| 8    | 104-8301    | 4    | Nut-HF, NI            |
| 9    | 130-2486    | 2    | Mount-ISO             |

 
| Ref. | Part Number | Qty. | Description       |
|------|-------------|------|-------------------|
| 10   | 323-6       | 4    | Screw-HH          |
| 11   | 120-9131    | 1    | Coupling-Flywheel |
| 12   | 99-5132     | 8    | Bolt              |
| 13   | 104-8300    | 2    | Nut-HF, NI        |
| 14   | 322-3       | 2    | Screw-HH          |
| 15   | 127-6450-03 | 1    | Support-Exhaust   |
| 16   | 18-2130     | 2    | Clamp             |
| 17   | 120-9137    | 1    | Tube-Exhaust      |
| 18   | 112-6347    | 1    | Switch-Temp, Dual |

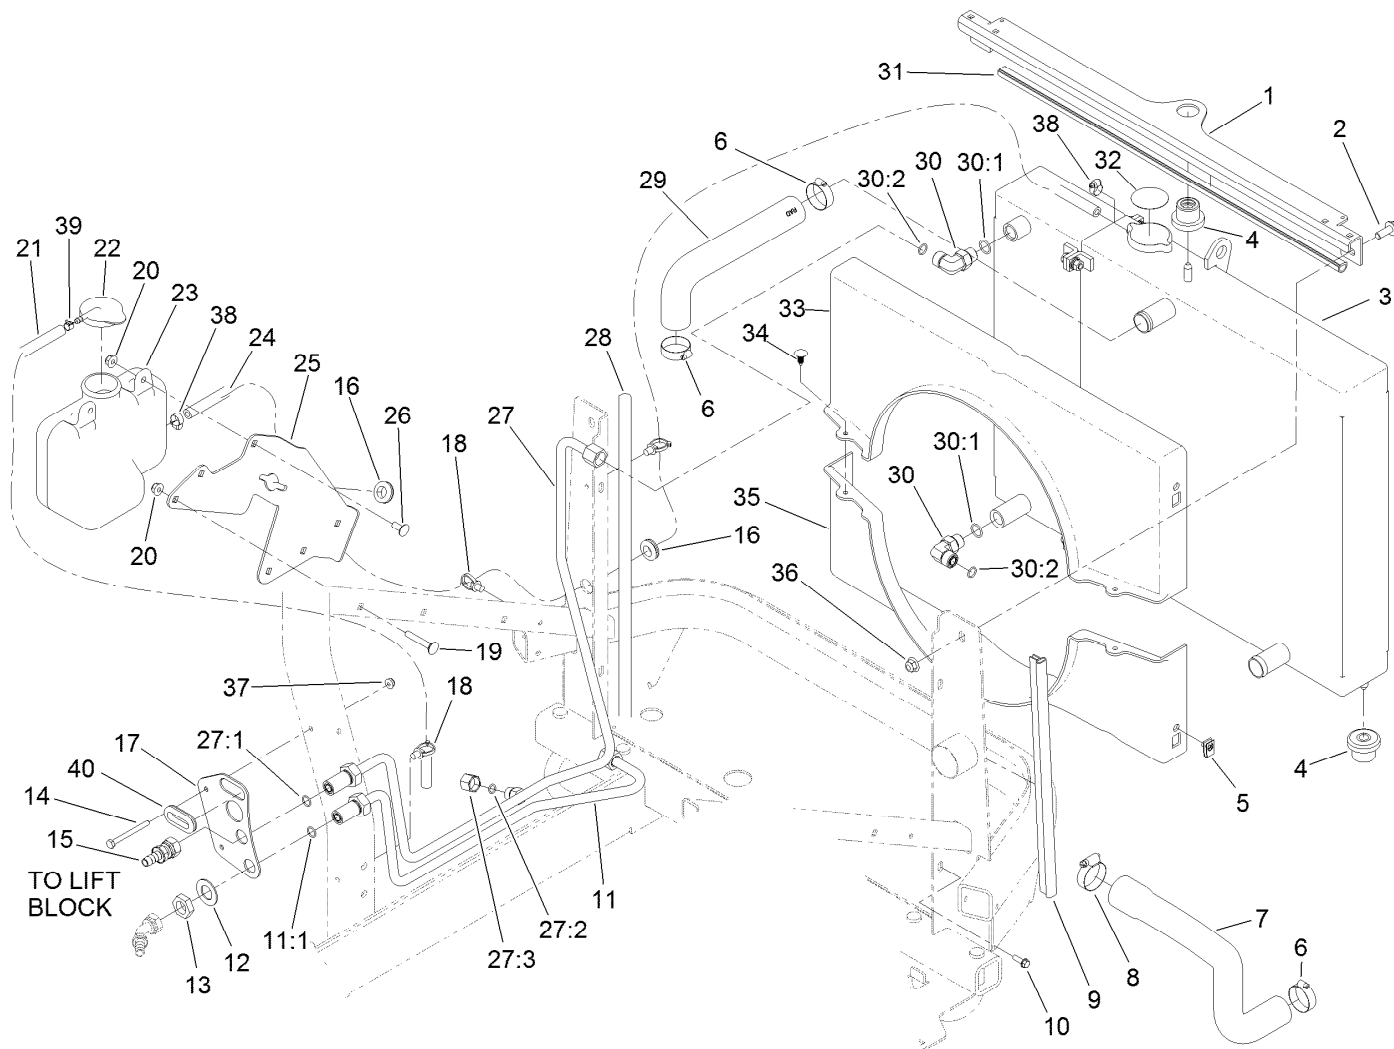

## Radiator Assembly

| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 1    | 120-0068-03 | 1    | Bracket-Cooling, Top |
| 2    | 3234-42     | 2    | Screw-HHF            |
| 3    | 121-3330    | 1    | Cooling ASM          |
| 4    | 119-1422    | 3    | Mount-Isolator       |
| 5    | 107069      | 4    | Clip                 |
| 6    | 2412-34     | 3    | Clamp-Hose           |
| 7    | 121-3322    | 1    | Hose-Radiator, Lower |
| 8    | 2412-3      | 1    | Clamp-Hose           |
| 9    | 120-9146    | 2    | Seal-Bulb            |
| 10   | 32105-15    | 4    | Screw-HWH            |
| 11   | 121-3324    | 1    | HYD Tube ASM         |
| 11:1 | 237-30      | 1    | O-Ring               |
| 12   | 69-8930     | 2    | Washer               |
| 13   | 340-127     | 2    | Nut-Bulkhead         |
| 14   | 321-14      | 2    | Screw-HH             |
| 15   | 121-3373    | 1    | Hose-HYD             |
| 16   | 237-124     | 2    | Grommet              |
| 17   | 131-5527    | 1    | Bracket-Bulkhead     |
| 18   | 32180-030   | 3    | Clip-Tie             |
| 19   | 3230-6      | 2    | Screw-CARR           |
| 20   | 104-8300    | 4    | Nut-HF, NI           |

 
| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 21   | 110-8255    | 1    | Hose-Fuel             |
| 22   | 1-643164    | 1    | Cap-Tank, Overflow    |
| 23   | 125-2651    | 1    | Bottle-Overflow       |
| 24   | 110-3258    | 1    | Hose-Fuel             |
| 25   | 125-2656-03 | 1    | Bracket-Bottle        |
| 26   | 3230-23     | 2    | Screw-CARR            |
| 27   | 121-3323    | 1    | HYD Tube ASM          |
| 27:1 | 237-30      | 1    | O-Ring                |
| 27:2 | 237-22      | 1    | O-Ring                |
| 27:3 | 340-117     | 1    | Cap                   |
| 28   | 119-1426    | 2    | Seal-Bulb             |
| 29   | 121-3321    | 1    | Hose-Radiator, Upper  |
| 30   | 340-98      | 2    | Fitting-Elbow, 90 DEG |
| 30:1 | 237-79      | 1    | O-Ring                |
| 30:2 | 237-30      | 1    | O-Ring                |
| 31   | 119-1427    | 2    | Seal-Bulb             |
| 32   | 117-3276    | 1    | Decal-Danger          |
| 33   | 121-3312    | 1    | Shroud-Top            |
| 34   | 117-2382    | 2    | Plug-Plastic          |
| 35   | 121-3311    | 1    | Shroud-Bottom         |
| 36   | 104-8301    | 2    | Nut-HF, NI            |

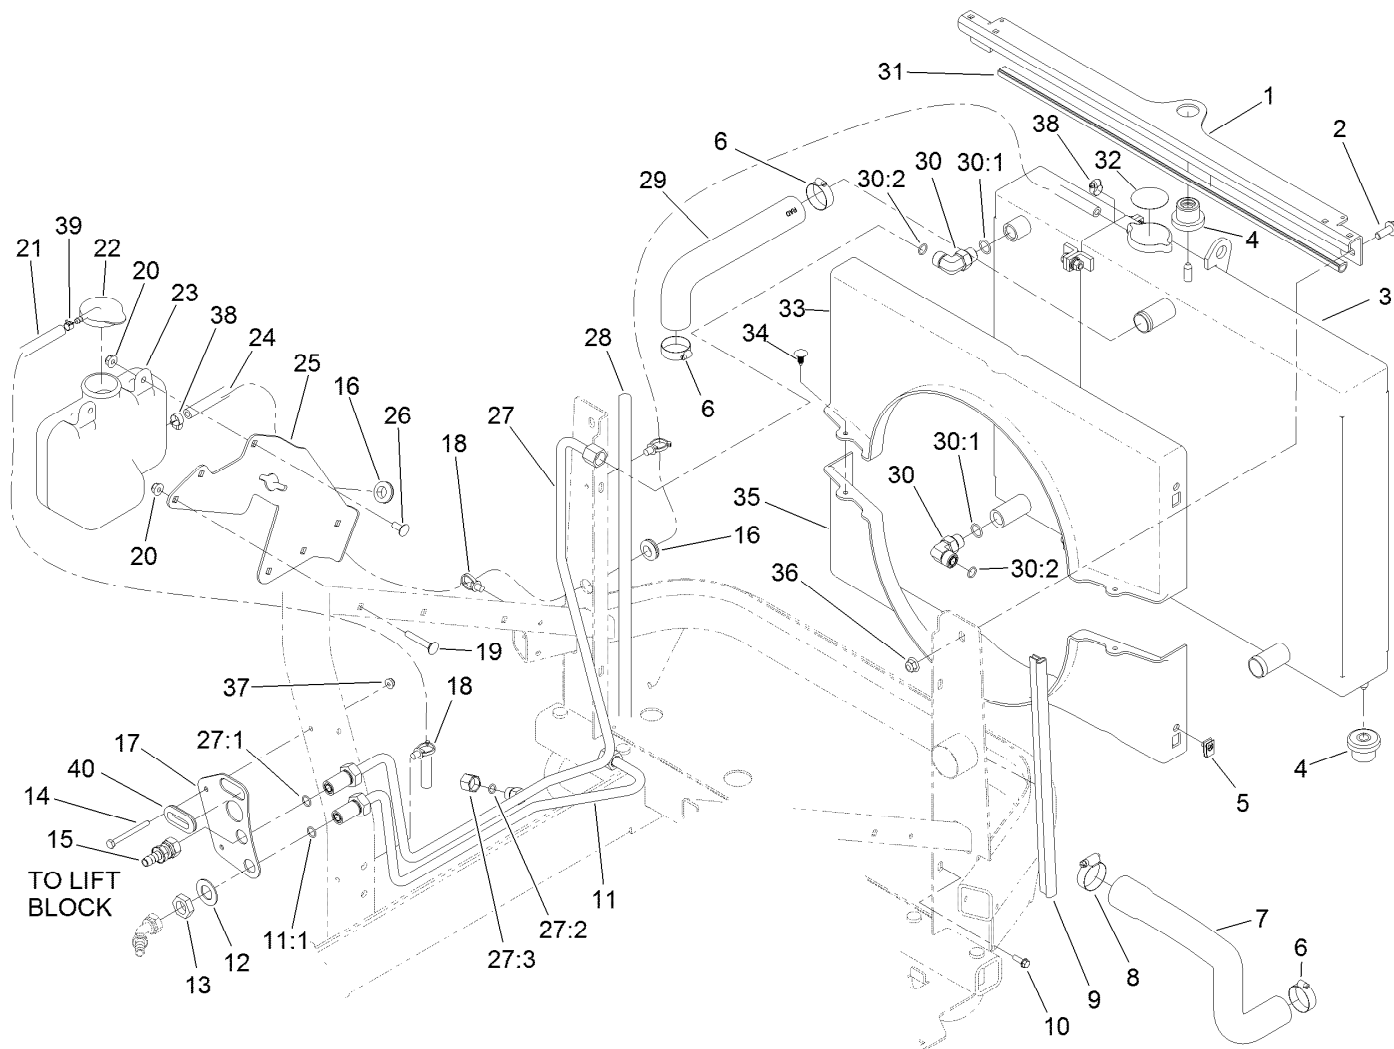

## Radiator Assembly (continued)


| Ref. | Part Number | Qty. | Description |
|------|-------------|------|-------------|
| 37   | 104-7201    | 2    | Nut-HF      |
| 38   | 2412-108    | 1    | Clamp-Worm  |
 
| Ref. | Part Number | Qty. | Description    |
|------|-------------|------|----------------|
| 39   | 2412-80     | 1    | Clamp-Hose     |
| 40   | 240-3       | 1    | Grommet-Rubber |

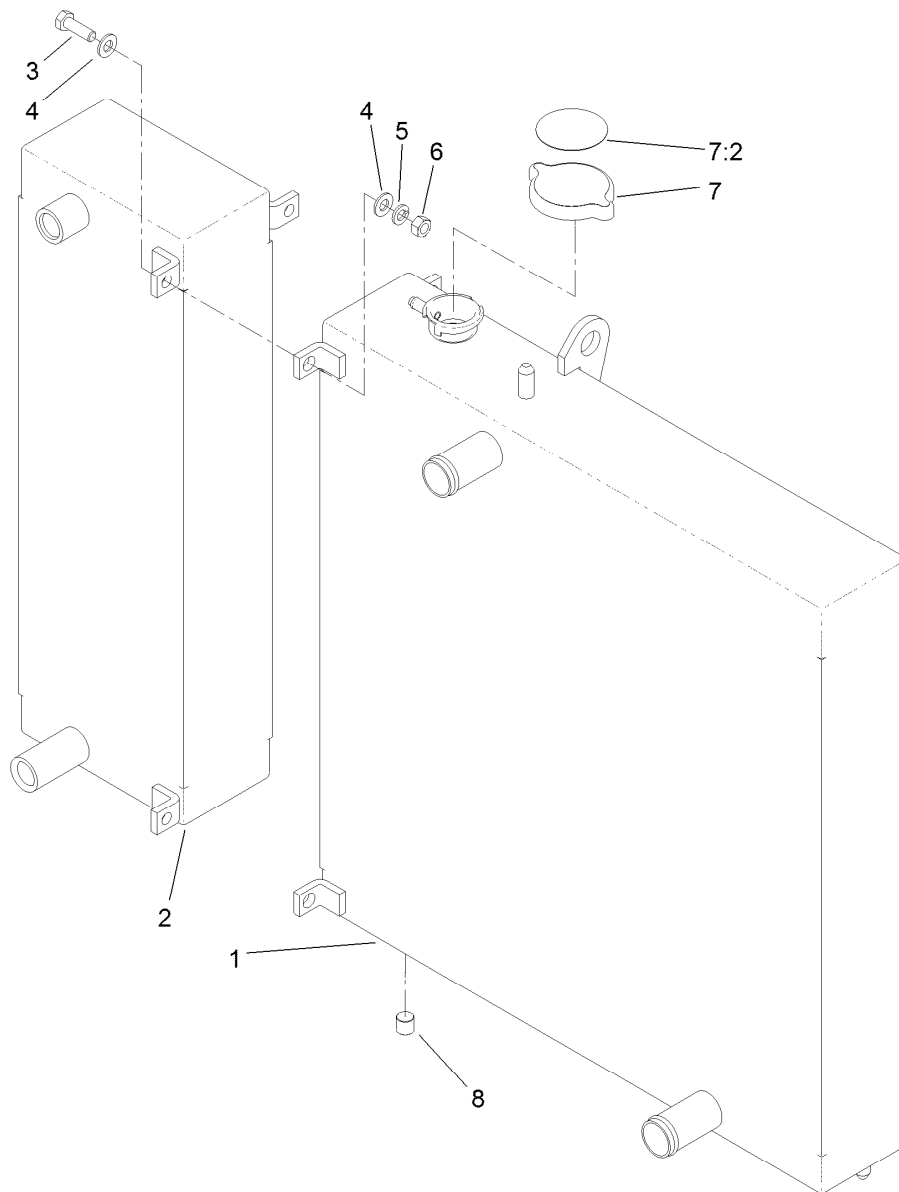

## Cooling Assembly No. 121-3330
 
| Ref. | Part Number | Qty. | Description      |
|------|-------------|------|------------------|
| 1    | 121-3328    | 1    | Radiator         |
| 2    | 121-3329    | 1    | Oil Cooler       |
| 3    | 322-5       | 3    | Screw-HH         |
| 4    | 3256-23     | 6    | Washer-Plain     |
| 5    | 3253-4      | 3    | Washer-Lock      |
| 6    | 3217-6      | 3    | Nut-Hex          |
| 7    | 119-1430    | 1    | Radiator Cap ASM |
| 7:2  | 117-3276    | 1    | Decal-Danger     |
| 8    | 99-8551     | 1    | Plug-Pipe        |

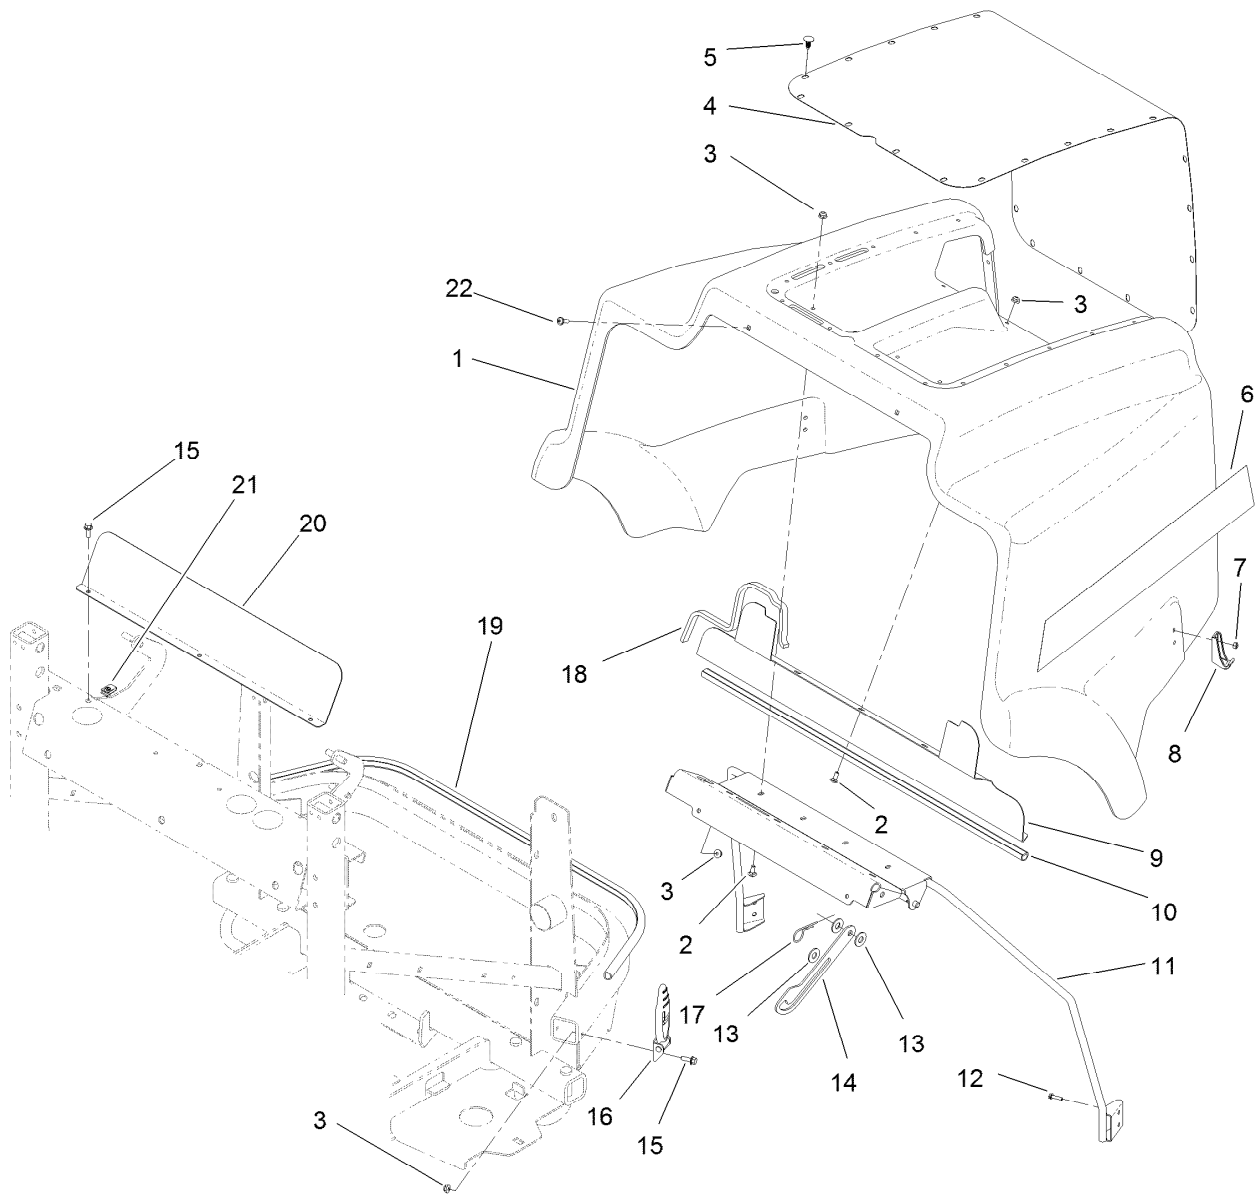


## Hood Assembly

| Ref. | Part Number | Qty. | Description   |
|------|-------------|------|---------------|
| 1    | 125-2709    | 1    | Hood          |
| 2    | 3229-11     | 7    | Screw-CARR    |
| 3    | 104-7201    | 11   | Nut-HF        |
| 4    | 120-9134-03 | 1    | Screen-Intake |
| 5    | 117-2382    | 26   | Plug-Plastic  |
| 6    | 110-5545    | 2    | Decal-Hood    |
| 7    | 3296-2      | 4    | Nut-Lock, NI  |
| 8    | 103-2897    | 2    | Latch-Catch   |
| 9    | 120-9121-03 | 1    | Plate-Seal    |
| 10   | 120-9147    | 1    | Seal-Bulb     |
| 11   | 120-9126-03 | 1    | Support-Hood  |

| Ref. | Part Number | Qty. | Description      |
|------|-------------|------|------------------|
| 12   | 3274-39     | 4    | Screw-HSBH       |
| 13   | 3256-4      | 3    | Washer-Flat      |
| 14   | 120-9129    | 1    | Prop-Hood        |
| 15   | 3234-4      | 5    | Screw-HHF        |
| 16   | 103-2898    | 2    | Latch-Rubber     |
| 17   | 3290-255    | 2    | Pin-Cotter, Hair |
| 18   | 121-3335    | 2    | Seal-Foam        |
| 19   | 120-9161    | 1    | Seal-Bulb        |
| 20   | 120-9139-03 | 1    | Shield-Air       |
| 21   | 107069      | 3    | Clip             |
| 22   | 92-3911     | 2    | Screw-HSBH       |

 
# Cylinder Block Assembly

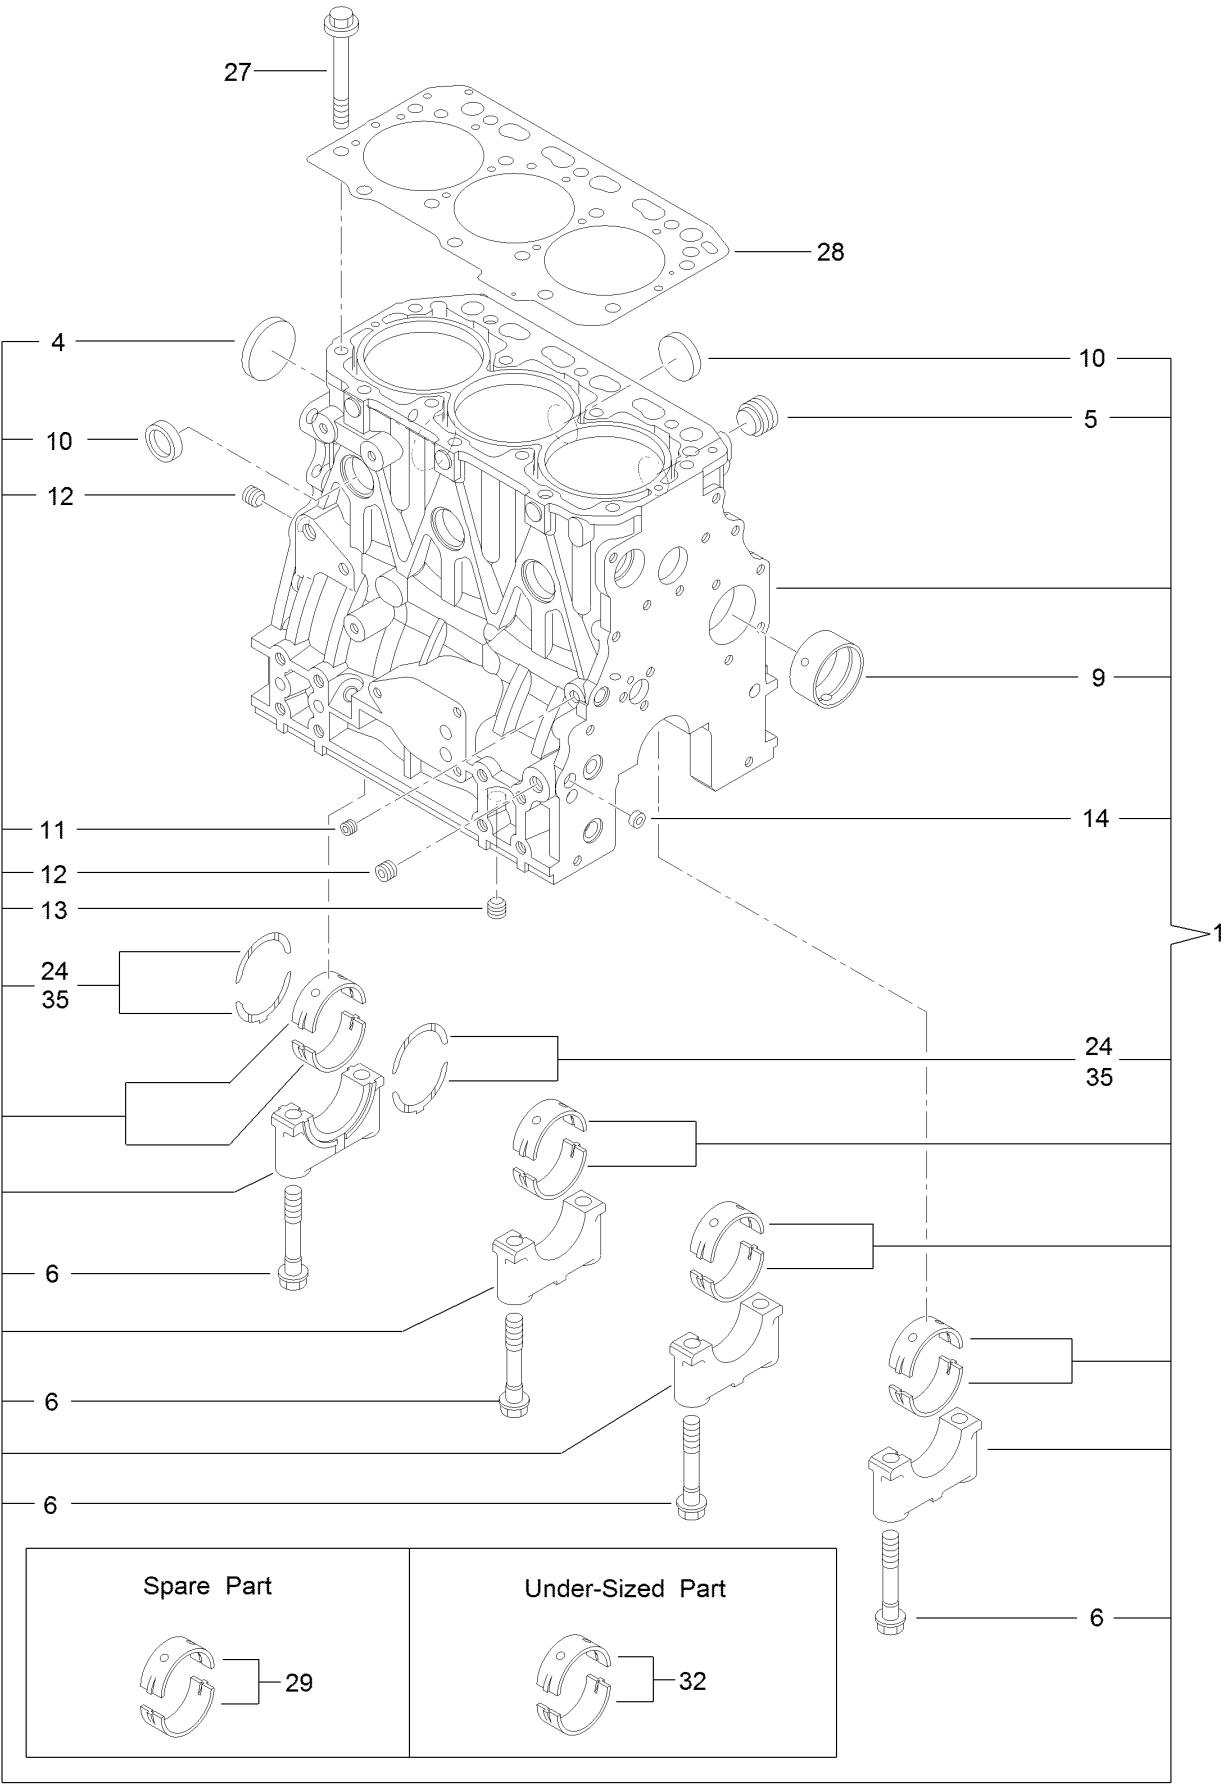

## Cylinder Block Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|---------------------|
| 1           | 127-4717           | 1           | Cylinder Block ASM | 13          | 125-6973           | 1           | Plug                |
| 4           | 125-6980           | 1           | Plug               | 14          | 125-7237           | 1           | Plug                |
| 5           | 125-7170           | 1           | Plug               | 24          | 125-7010           | 2           | Metal-Thrust        |
| 6           | 125-7007           | 8           | Bolt               | 27          | 125-7006           | 14          | Bolt                |
| 9           | 125-7108           | 1           | Bushing            | 28          | 127-4716           | 1           | Head Gasket ASM     |
| 10          | 125-7239           | 6           | Plug               | 29          | 125-6981           | 4           | Metal-Main          |
| 11          | 125-6969           | 1           | Plug               | 32          | 125-7009           | 4           | Metal-Main (0.25)   |
| 12          | 125-6973           | 2           | Plug               | 35          | 125-7011           | 1           | Metal-Thrust (0.25) |

 
# Gear Housing Assembly

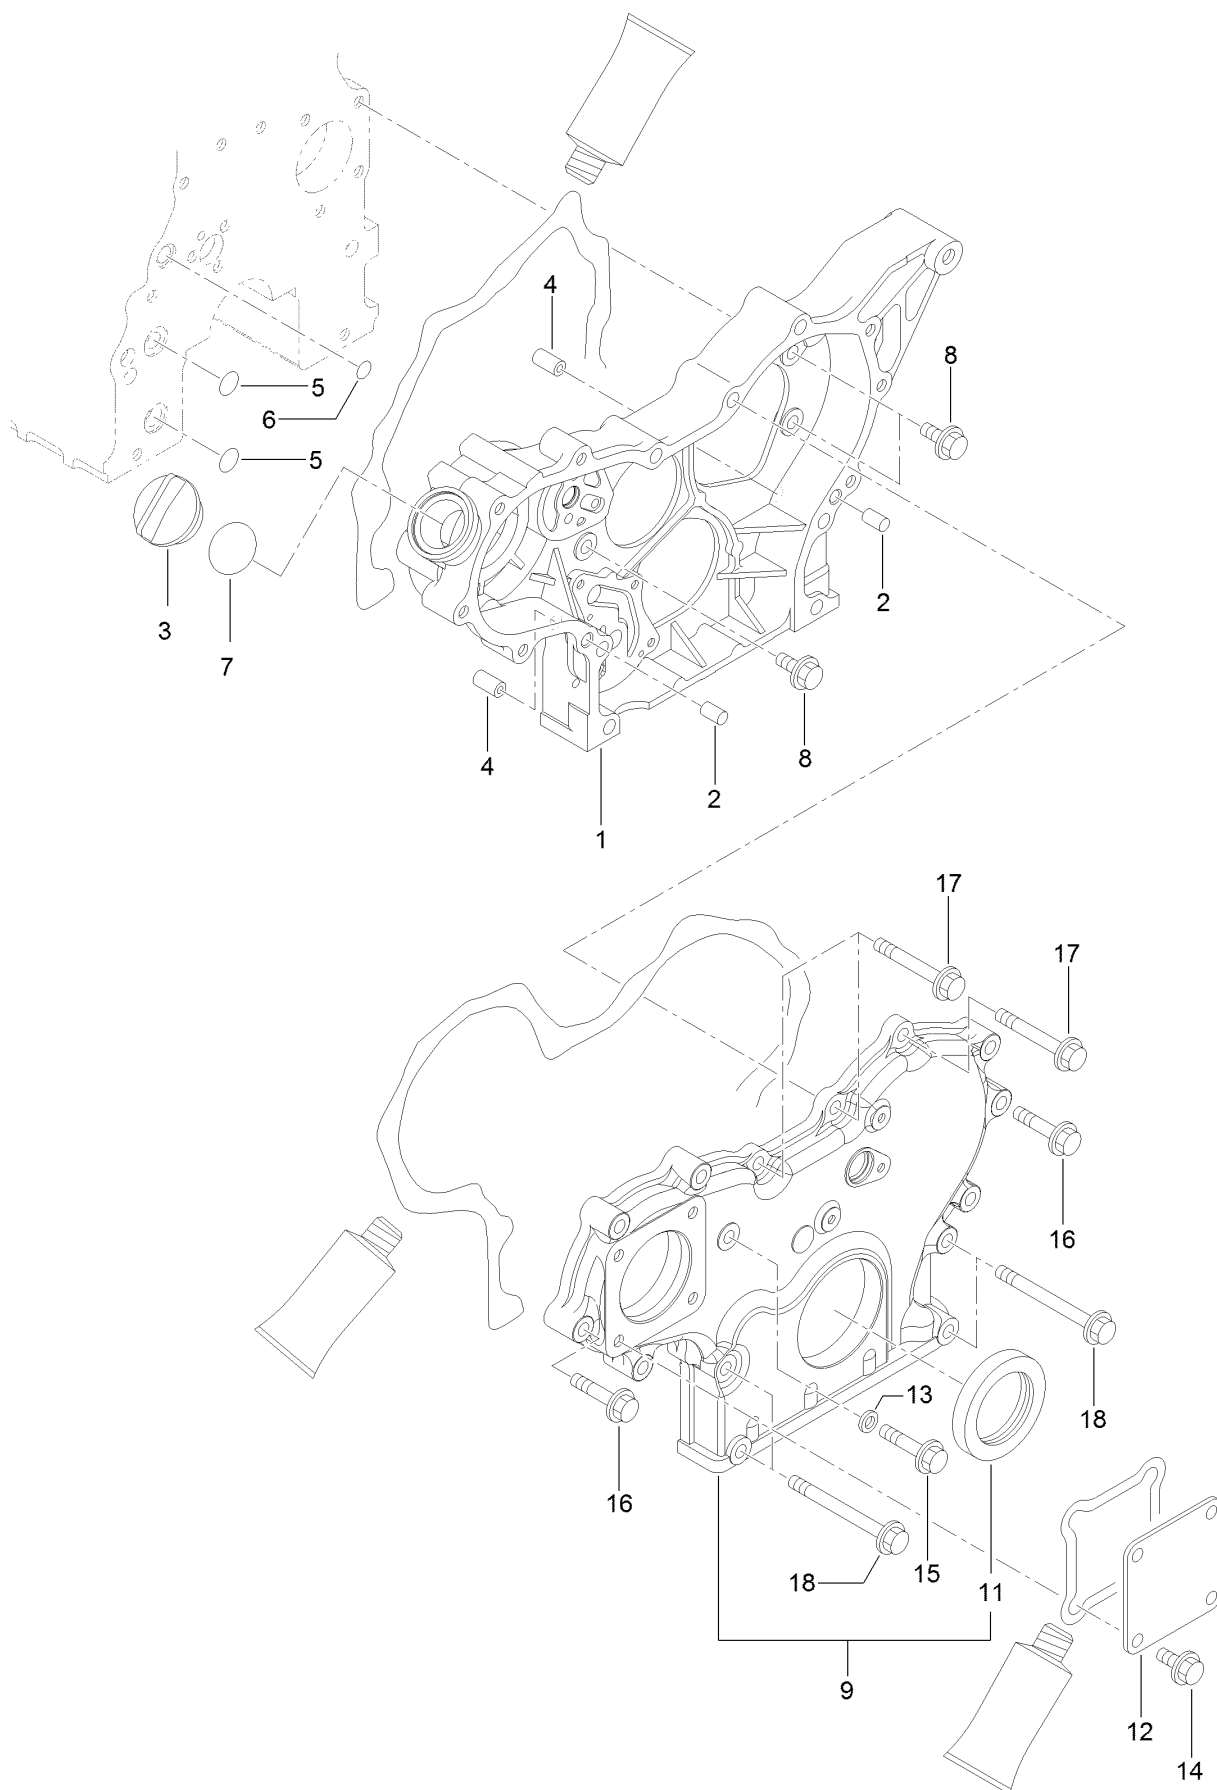

## Gear Housing Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|--------------------|
| 1           | 127-3023           | 1           | Case-Gear          | 11          | 125-6944           | 1           | Seal-Oil           |
| 2           | 125-6995           | 2           | Pin                | 12          | 125-6977           | 1           | Cover              |
| 3           | 125-6972           | 1           | Cover-Filler       | 13          | 125-7174           | 1           | Washer-Seal        |
| 4           | 125-7107           | 2           | Pipe               | 14          | 100-6928           | 4           | Bolt               |
| 5           | 125-6909           | 2           | O-Ring             | 15          | 125-7217           | 1           | Bolt               |
| 6           | 127-2973           | 1           | O-Ring             | 16          | 125-7218           | 7           | Bolt               |
| 7           | 125-7197           | 1           | O-Ring             | 17          | 125-7222           | 3           | Bolt               |
| 8           | 100-6928           | 3           | Bolt               | 18          | 125-7224           | 4           | Bolt               |
| 9           | 127-3024           | 1           | Gearcase Cover ASM |             |                    |             |                    |

 
# Cylinder Head and Cover Assembly

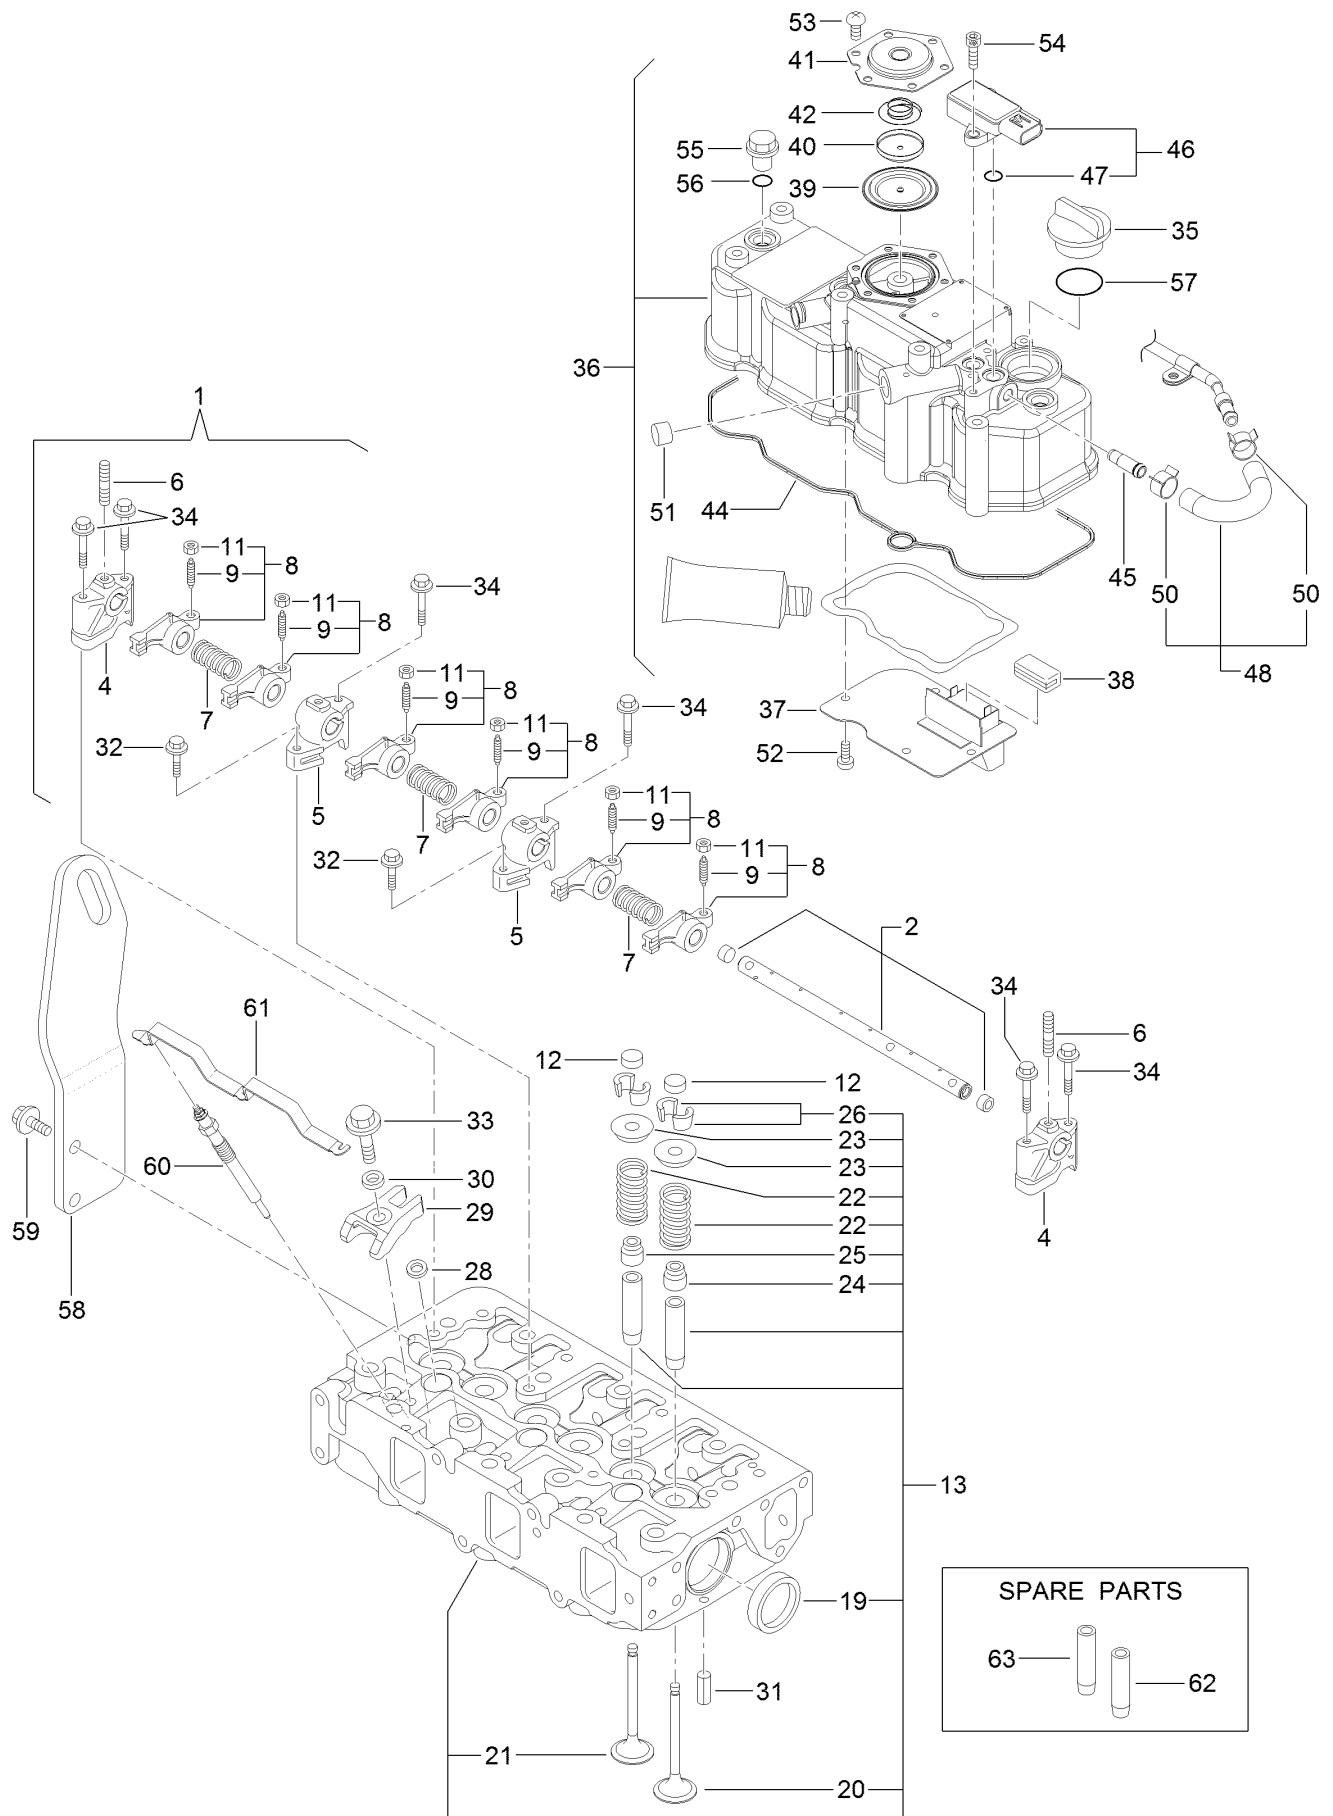

## Cylinder Head and Cover Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      |
|-------------|--------------------|-------------|---------------------|-------------|--------------------|-------------|-------------------------|
| 1           | 127-3757           | 1           | Shaft ASM           | 36          | 127-4719           | 1           | Cylinder Head Cover ASM |
| 2           | 127-3758           | 1           | Shaft               | 37          | 127-2988           | 1           | Plate                   |
| 4           | 127-2974           | 2           | Support             | 38          | 125-7012           | 1           | Baffle                  |
| 5           | 127-2975           | 2           | Support             | 39          | 125-6959           | 1           | Diaphragm               |
| 6           | 127-3759           | 3           | Stud                | 40          | 125-6960           | 1           | Plate                   |
| 7           | 127-2995           | 3           | Spring              | 41          | 125-6961           | 1           | Plate-Breather          |
| 8           | 127-2989           | 6           | Arm-Rocker          | 42          | 125-6962           | 1           | Spring-Diaphragm        |
| 9           | 125-7013           | 6           | Screw-Adjust, Valve | 44          | 127-3856           | 1           | Gasket-Head, Cylinder   |
| 11          | 125-7014           | 6           | Nut                 | 45          | 127-3026           | 1           | Joint                   |
| 12          | 127-2996           | 6           | Cap-Valve           | 46          | 127-3029           | 1           | Sensor-Pressure         |
| 13          | 127-4720           | 1           | Cylinder Head ASM   | 47          | 127-3032           | 2           | O Ring-Sensor, Pressure |
| 19          | 125-7240           | 2           | Plug                | 48          | 127-3040           | 1           | Hose ASM                |
| 20          | 127-2990           | 3           | Valve               | 50          | 127-3041           | 2           | Clip-Hose               |
| 21          | 127-4710           | 3           | Valve               | 51          | 125-6913           | 1           | Plug                    |
| 22          | 127-3012           | 6           | Spring              | 52          | 125-7186           | 4           | Screw                   |
| 23          | 127-3013           | 6           | Retainer-Spring     | 53          | 125-7186           | 6           | Screw                   |
| 24          | 127-2986           | 3           | Seal-Stem, Valve    | 54          | 127-3184           | 2           | Bolt                    |
| 25          | 127-3027           | 3           | Seal-Stem, Valve    | 55          | 125-6974           | 3           | Knob                    |
| 26          | 127-3186           | 6           | Pin-Cotter          | 56          | 93-0418            | 3           | O-Ring                  |
| 28          | 127-3021           | 3           | Gasket-Injector     | 57          | 125-7197           | 1           | O-Ring                  |
| 29          | 127-3028           | 3           | Retainer-Injector   | 58          | 127-4718           | 1           | Lifter-Engine           |
| 30          | 127-2980           | 3           | Washer-Injector     | 59          | 100-6928           | 2           | Bolt                    |
| 31          | 125-7184           | 2           | Pin-Spring          | 60          | 127-2991           | 3           | Plug-Glow               |
| 32          | 125-7215           | 2           | Bolt                | 61          | 127-3768           | 1           | Connector-Plug, Glow    |
| 33          | 125-7217           | 3           | Bolt                | 62          | 127-2979           | 3           | Guide                   |
| 34          | 125-7220           | 6           | Bolt                | 63          | 127-2997           | 3           | Guide-Valve             |
| 35          | 125-6972           | 1           | Cover-Filler        |             |                    |             |                         |

 
# Suction Manifold Assembly

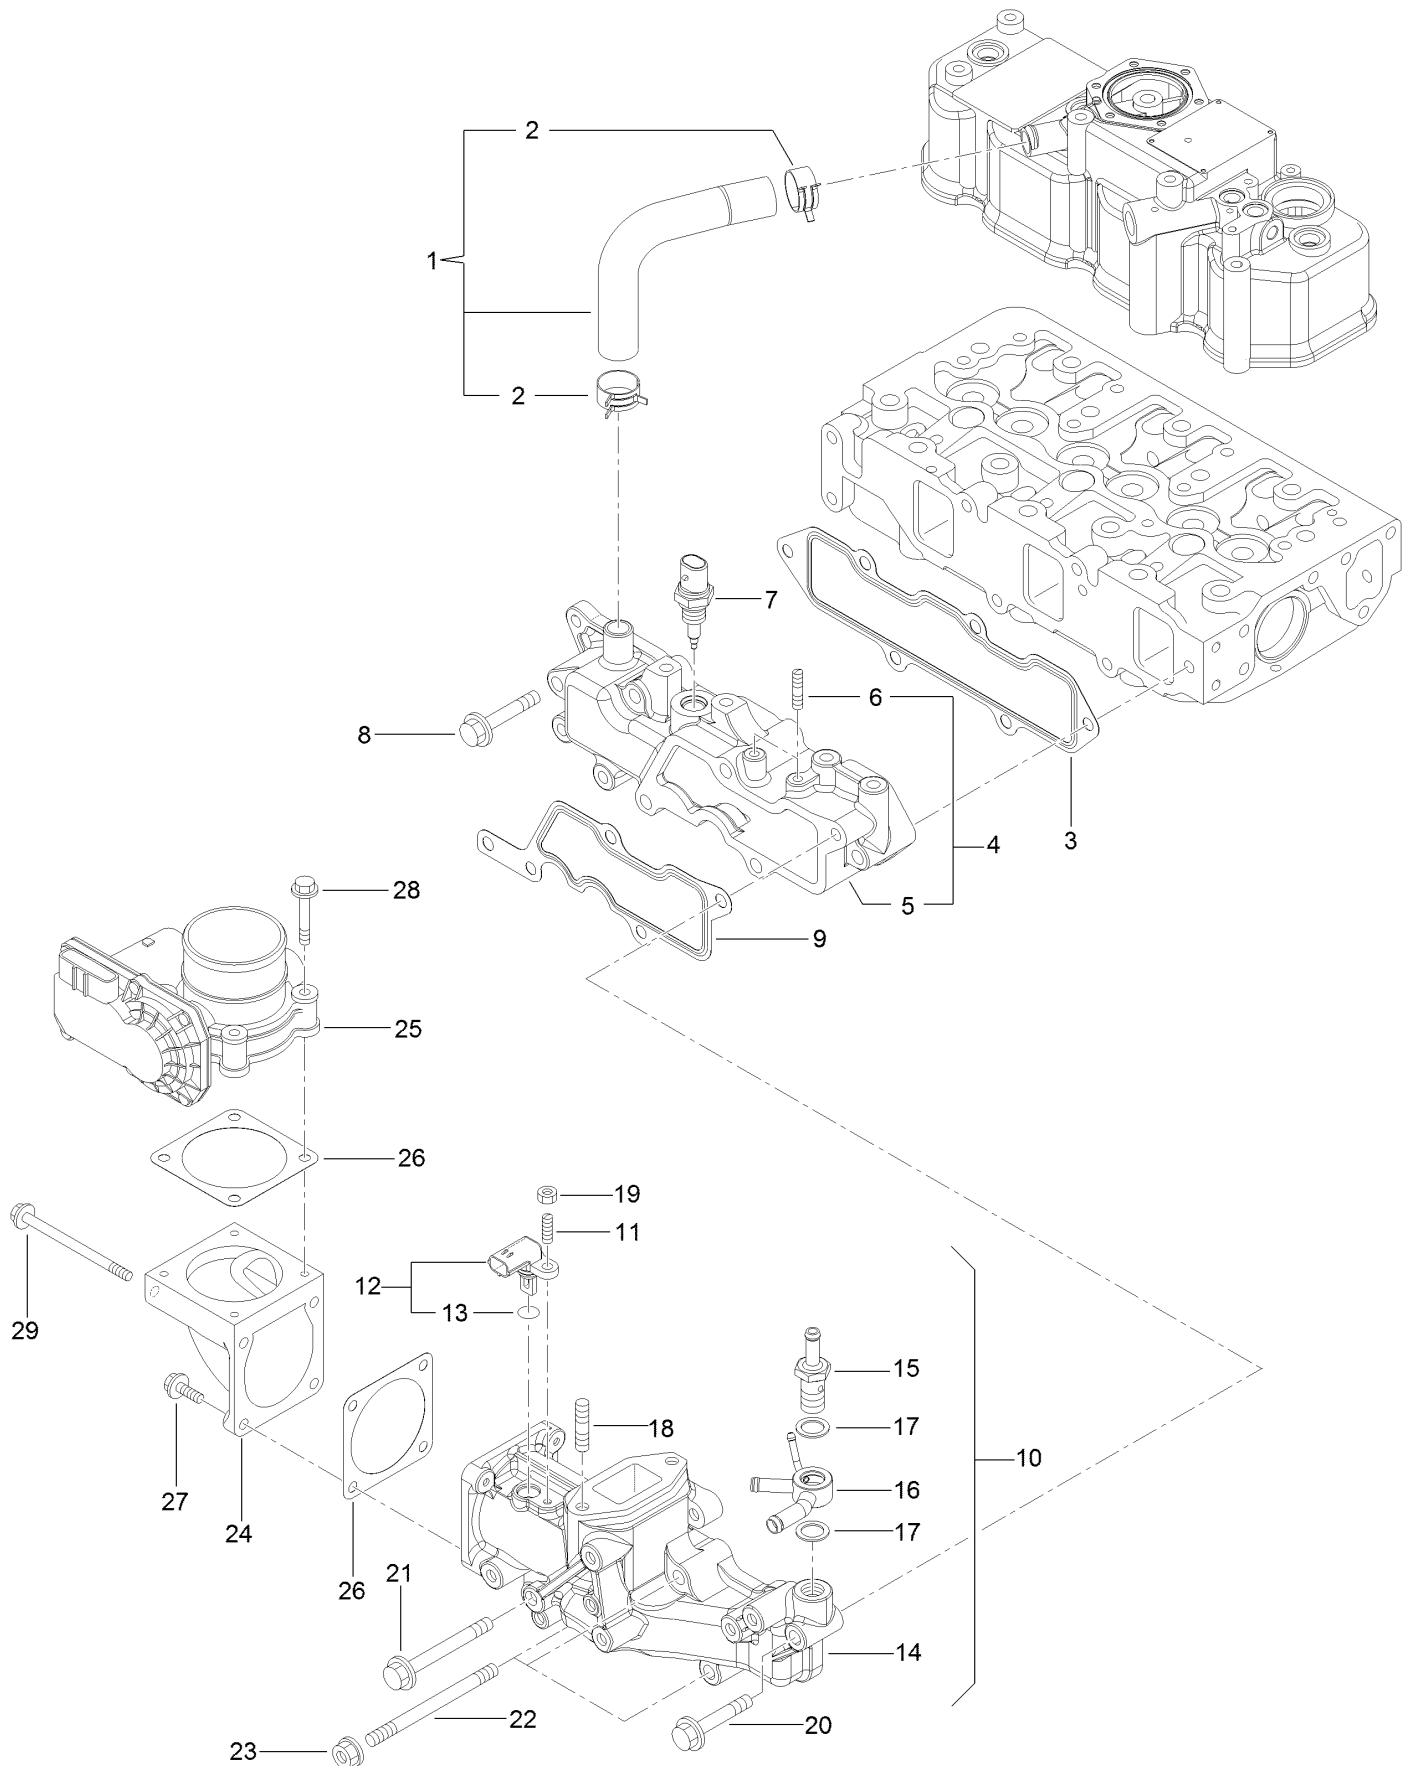

## Suction Manifold Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|-------------------------|-------------|--------------------|-------------|--------------------|
| 1           | 127-4704           | 1           | Pipe                    | 16          | 127-3081           | 1           | Joint-Hose         |
| 2           | 125-7040           | 2           | Clip-Hose               | 17          | 127-3166           | 2           | Washer-Seal        |
| 3           | 127-3857           | 1           | Gasket-Manifold, Intake | 18          | 127-4774           | 2           | Stud               |
| 4           | 127-4722           | 1           | Intake Manifold ASM     | 19          | 127-4775           | 1           | Nut                |
| 5           | 127-4721           | 1           | Manifold-Intake         | 20          | 125-7220           | 1           | Bolt               |
| 6           | 127-3180           | 2           | Stud                    | 21          | 127-3178           | 1           | Bolt               |
| 7           | 127-3031           | 1           | Sensor-Temp, Air        | 22          | 127-3182           | 3           | Stud               |
| 8           | 125-7220           | 3           | Bolt                    | 23          | 125-7229           | 3           | Nut                |
| 9           | 127-3034           | 1           | Gasket-Collector        | 24          | 127-3035           | 1           | Bend-Inlet         |
| 10          | 127-4725           | 1           | Intake Collector ASM    | 25          | 127-3036           | 1           | Body-Throttle      |
| 11          | 127-4701           | 1           | Stud                    | 26          | 127-3037           | 2           | Gasket-Throttle    |
| 12          | 127-3030           | 1           | Sensor-Temp, Air        | 27          | 125-7209           | 2           | Bolt               |
| 13          | 127-3033           | 1           | O Ring-Sensor, Temp     | 28          | 125-7211           | 4           | Bolt               |
| 14          | 127-4724           | 1           | Collector-Intake        | 29          | 127-3177           | 2           | Bolt               |
| 15          | 127-3080           | 1           | Joint-Hose              |             |                    |             |                    |

 
# Exhaust Manifold Assembly

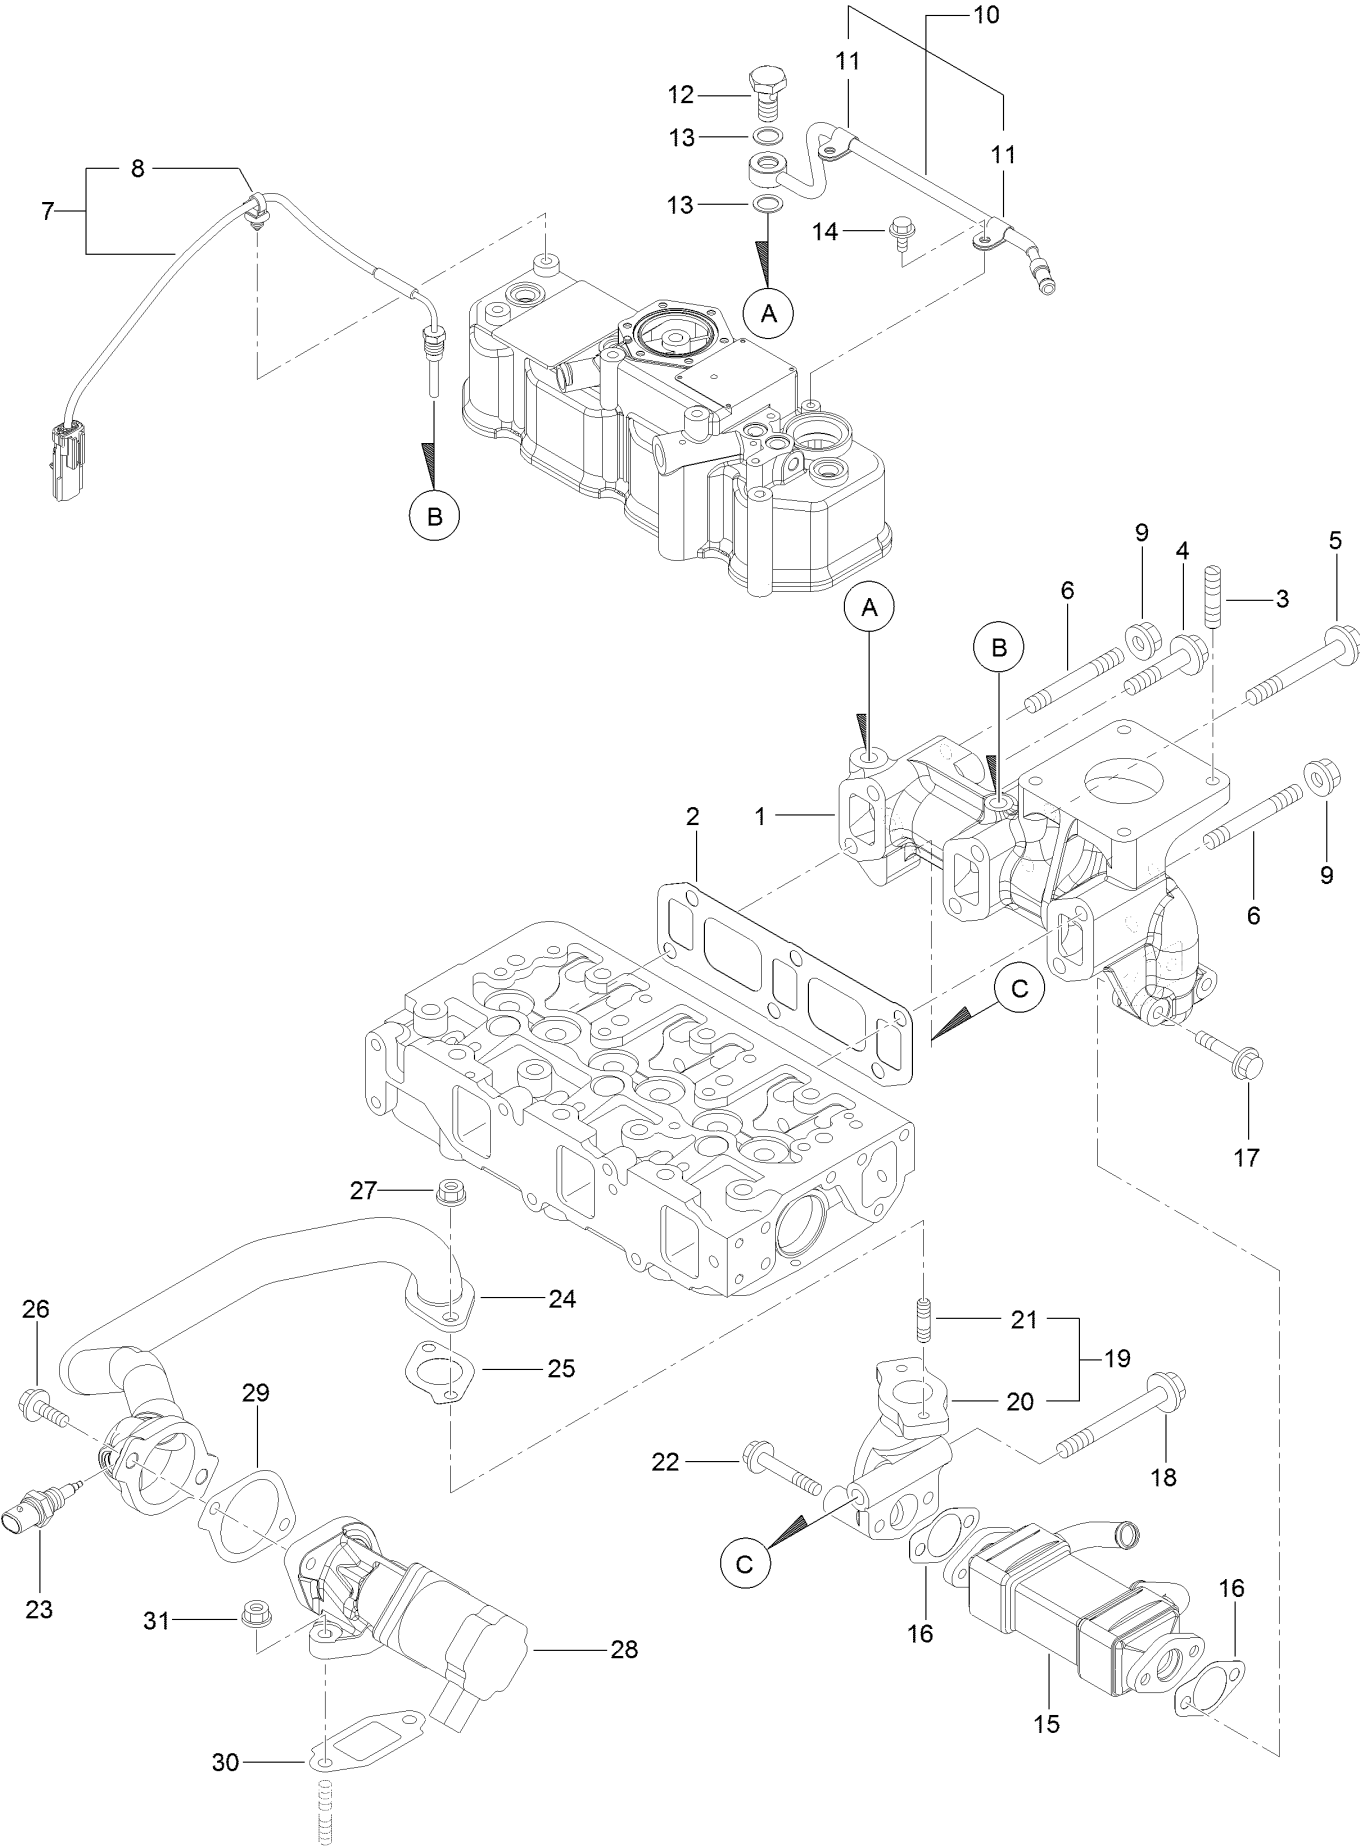

## Exhaust Manifold Assembly (continued)


| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>         |
|-------------|--------------------|-------------|--------------------------|-------------|--------------------|-------------|----------------------------|
| 1           | 127-4726           | 1           | Manifold-Exhaust         | 17          | 127-2976           | 2           | Bolt                       |
| 2           | 127-3775           | 1           | Gasket-Manifold, Exhaust | 18          | 127-3022           | 1           | Bolt-Flange                |
| 3           | 127-2984           | 4           | Stud                     | 19          | 127-3048           | 1           | E G R Pipe ASM             |
| 4           | 127-3094           | 1           | Bolt                     | 20          | 127-3049           | 1           | Pipe-Out, E G R            |
| 5           | 127-3044           | 3           | Bolt-M10                 | 21          | 125-7043           | 2           | Stud                       |
| 6           | 127-4756           | 2           | Stud                     | 22          | 125-7220           | 2           | Bolt                       |
| 7           | 127-4729           | 1           | Sensor-Temp, Exhaust     | 23          | 127-3047           | 1           | Sensor-Gas Temp, E G R     |
| 8           | 127-3087           | 1           | Band-Clip                | 24          | 127-3780           | 1           | E G R Pipe ASM             |
| 9           | 125-7230           | 2           | Nut                      | 25          | 127-3016           | 1           | Gasket                     |
| 10          | 127-3038           | 1           | Exhaust Pipe ASM         | 26          | 125-7215           | 2           | Bolt                       |
| 11          | 127-3173           | 2           | Clamp                    | 27          | 125-7229           | 2           | Nut                        |
| 12          | 127-3039           | 1           | Bolt-Joint, Pipe         | 28          | 127-3781           | 1           | Valve-E G R                |
| 13          | 127-3174           | 2           | Gasket                   | 29          | 127-3050           | 1           | Gasket-Intake Valve, E G R |
| 14          | 125-7206           | 2           | Bolt                     | 30          | 127-3051           | 1           | Gasket-Out Valve, E G R    |
| 15          | 127-3042           | 1           | Cooler-E G R             | 31          | 125-7229           | 2           | Nut                        |
| 16          | 127-3043           | 2           | Gasket-Cooler, E G R     |             |                    |             |                            |
 
# Diesel Particulate Filter Assembly

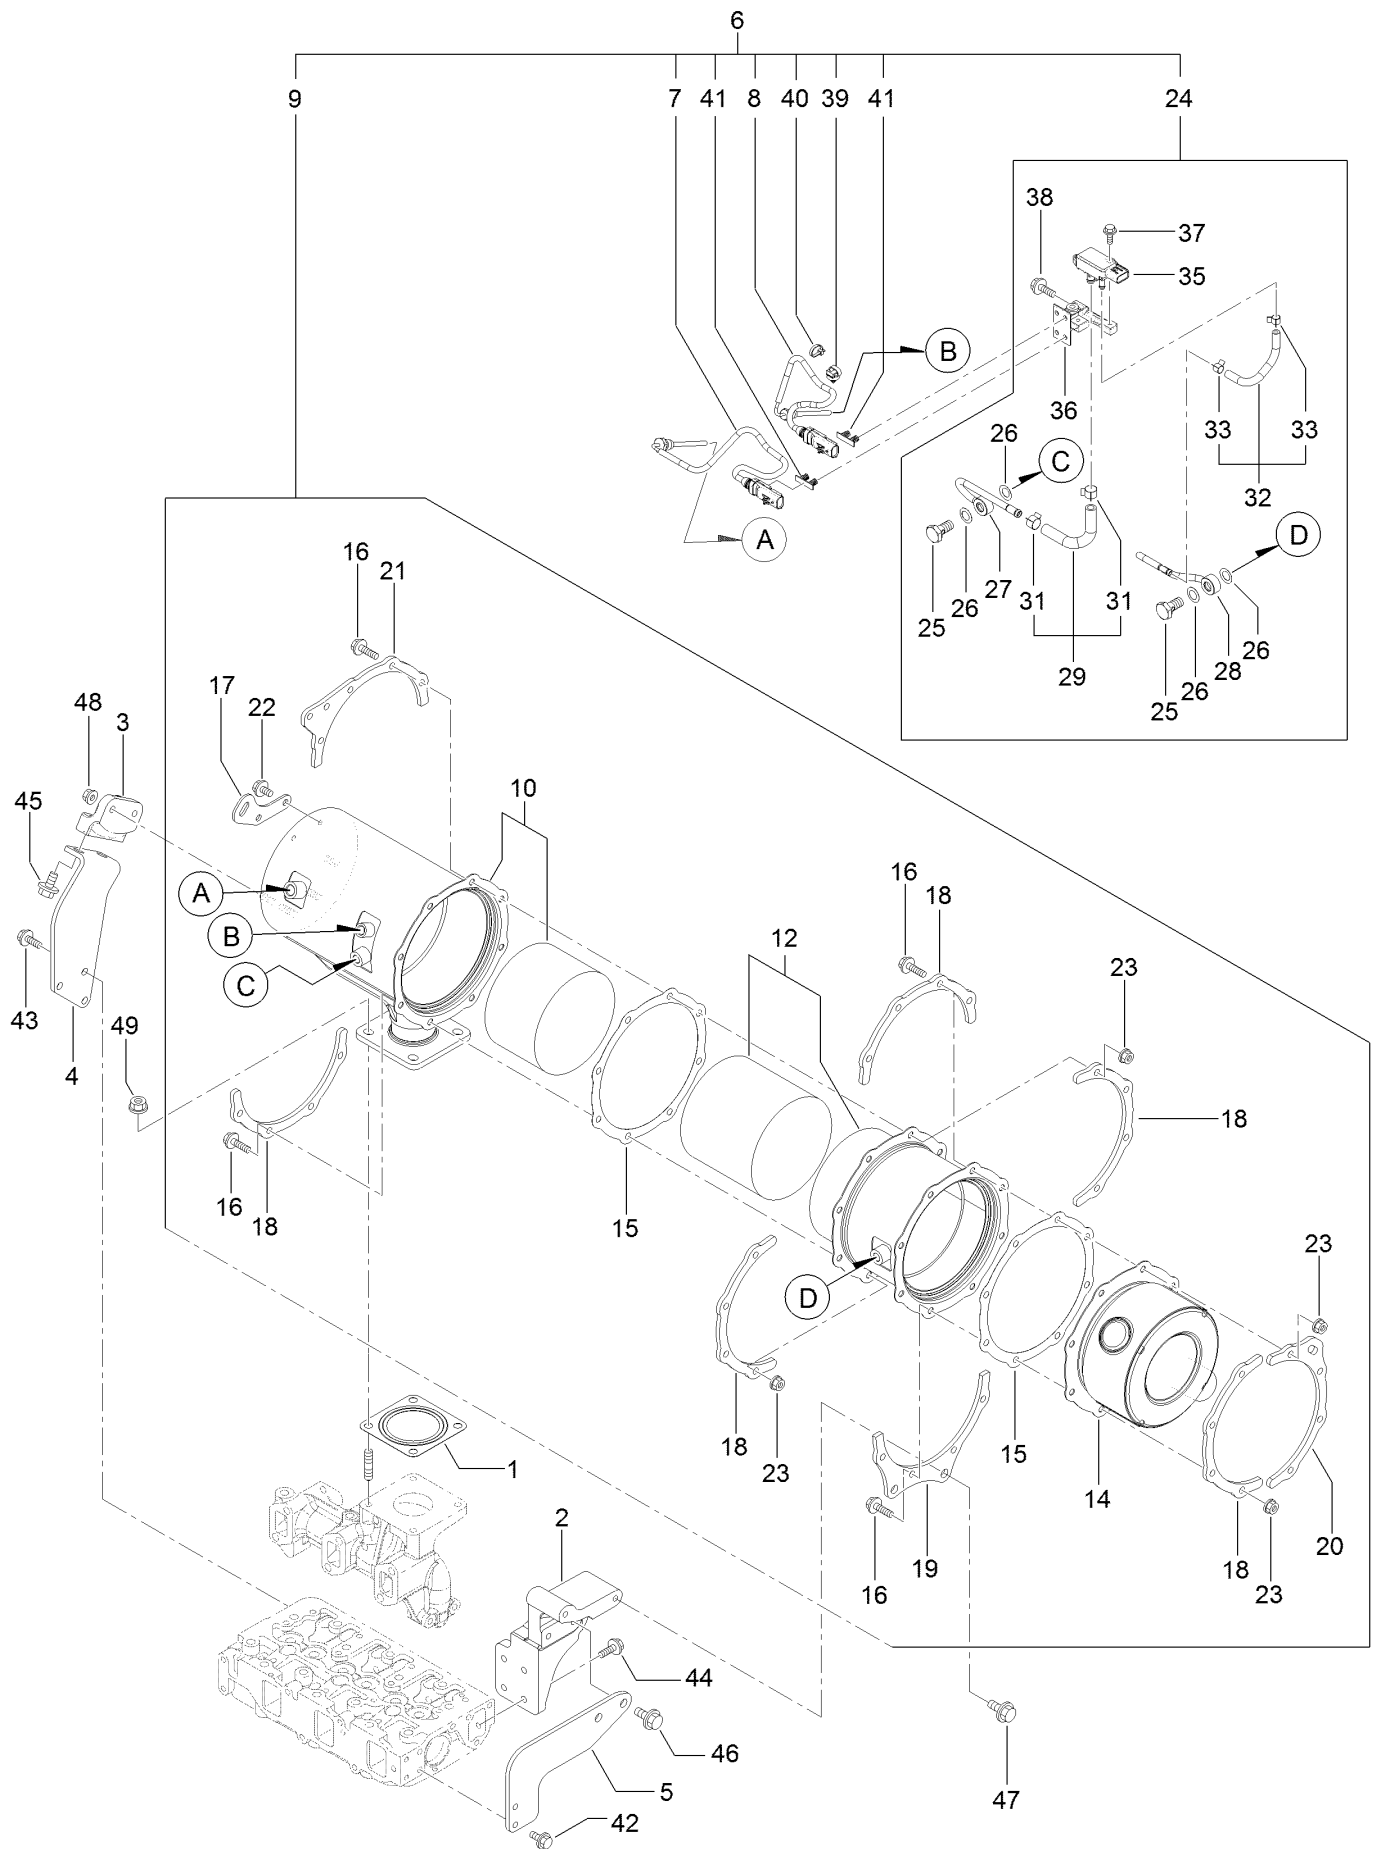

## Diesel Particulate Filter Assembly (continued)

 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|----------------------|-------------|--------------------|-------------|--------------------|
| 1           | 127-2987           | 1           | Gasket-Silencer      | 26          | 127-3056           | 4           | Gasket-Sensor      |
| 2           | 127-4738           | 1           | Stay-D P F           | 27          | 127-4744           | 1           | Sensor Pipe ASM    |
| 3           | 127-4739           | 1           | Stay-D P F           | 28          | 127-4745           | 1           | Sensor Pipe ASM    |
| 4           | 127-4740           | 1           | Stay-D P F           | 29          | 127-4747           | 1           | Exhaust Hose ASM   |
| 5           | 127-4741           | 1           | Stay-D P F           | 31          | 127-3057           | 2           | Clip-Hose          |
| 6           | 127-4760           | 1           | D P F Unit           | 32          | 127-4748           | 1           | Exhaust Hose ASM   |
| 7           | 127-4764           | 1           | Sensor-Temp, Exhaust | 33          | 127-3058           | 2           | Clip-Hose          |
| 8           | 127-4765           | 1           | Sensor-Temp, Exhaust | 35          | 127-3060           | 1           | Sensor-Pressure    |
| 9           | 127-4759           | 1           | D P F ASM            | 36          | 127-4750           | 1           | Bracket-Sensor     |
| 10          | 127-4732           | 1           | Case-D O C           | 37          | 125-7208           | 2           | Bolt               |
| 12          | 127-4734           | 1           | Case-Filter, Soot    | 38          | 125-7595           | 2           | Bolt               |
| 14          | 127-3786           | 1           | Silencer-D P F       | 39          | 127-3087           | 1           | Band-Clip          |
| 15          | 127-3859           | 2           | Gasket-D P F         | 40          | 127-3124           | 1           | Band               |
| 16          | 127-3055           | 16          | Bolt                 | 41          | 127-3088           | 2           | Clip-Connector     |
| 17          | 127-3788           | 1           | Lifter-D P F         | 42          | 100-6928           | 2           | Bolt               |
| 18          | 127-3789           | 5           | Stiffener-D P F, A   | 43          | 100-6928           | 3           | Bolt               |
| 19          | 127-4735           | 1           | Stiffener-D P F, B   | 44          | 125-7594           | 4           | Bolt               |
| 20          | 127-3792           | 1           | Stiffener-D P F, C   | 45          | 127-4773           | 2           | Bolt               |
| 21          | 127-4736           | 1           | Stiffener-D P F, C   | 46          | 127-4773           | 2           | Bolt               |
| 22          | 125-7213           | 2           | Bolt                 | 47          | 127-4773           | 2           | Bolt               |
| 23          | 125-7229           | 16          | Nut                  | 48          | 125-7229           | 2           | Nut                |
| 24          | 127-4743           | 1           | Pressure Sensor Unit | 49          | 125-7230           | 4           | Nut                |
| 25          | 127-3039           | 2           | Bolt-Joint, Pipe     |             |                    |             |                    |

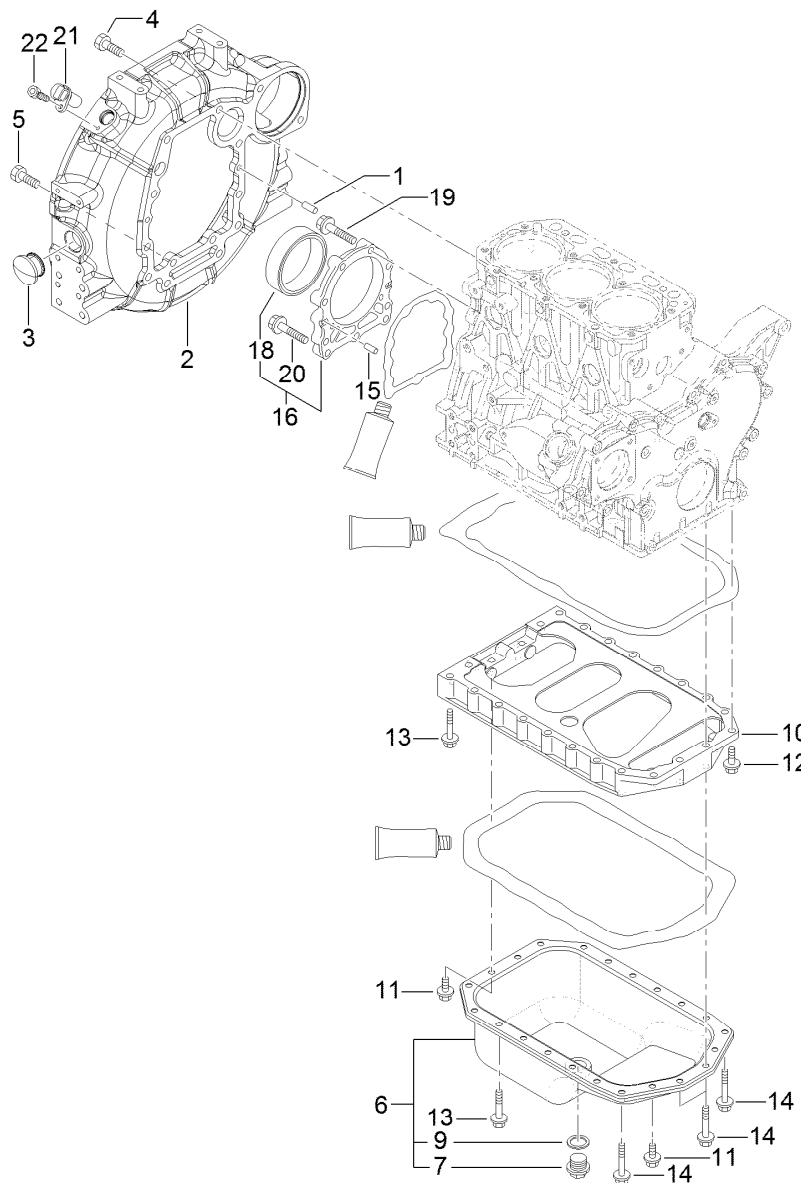

## Flywheel Housing and Oil Sump Assembly

| Ref. | Part Number | Qty. | Description      |
|------|-------------|------|------------------|
| 1    | 125-6995    | 2    | Pin              |
| 2    | 127-4758    | 1    | Housing-Flywheel |
| 3    | 125-6910    | 1    | Cap              |
| 4    | 125-7226    | 6    | Bolt             |
| 5    | 125-7227    | 4    | Bolt             |
| 6    | 127-4711    | 1    | Oil Pan ASM      |
| 7    | 125-6912    | 1    | Plug-Drain       |
| 9    | 125-7177    | 1    | Washer-Seal      |
| 10   | 127-3756    | 1    | Spacer           |
| 11   | 100-6928    | 4    | Bolt             |
 
| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 12   | 125-7215    | 2    | Bolt                 |
| 13   | 125-7219    | 16   | Bolt                 |
| 14   | 125-7220    | 4    | Bolt                 |
| 15   | 125-6995    | 2    | Pin                  |
| 16   | 125-6996    | 1    | Case ASM             |
| 18   | 125-7106    | 1    | Seal-Oil             |
| 19   | 125-7045    | 6    | Bolt                 |
| 20   | 125-7217    | 3    | Bolt                 |
| 21   | 127-3062    | 1    | Sensor-Rev, Flywheel |
| 22   | 127-3184    | 1    | Bolt                 |

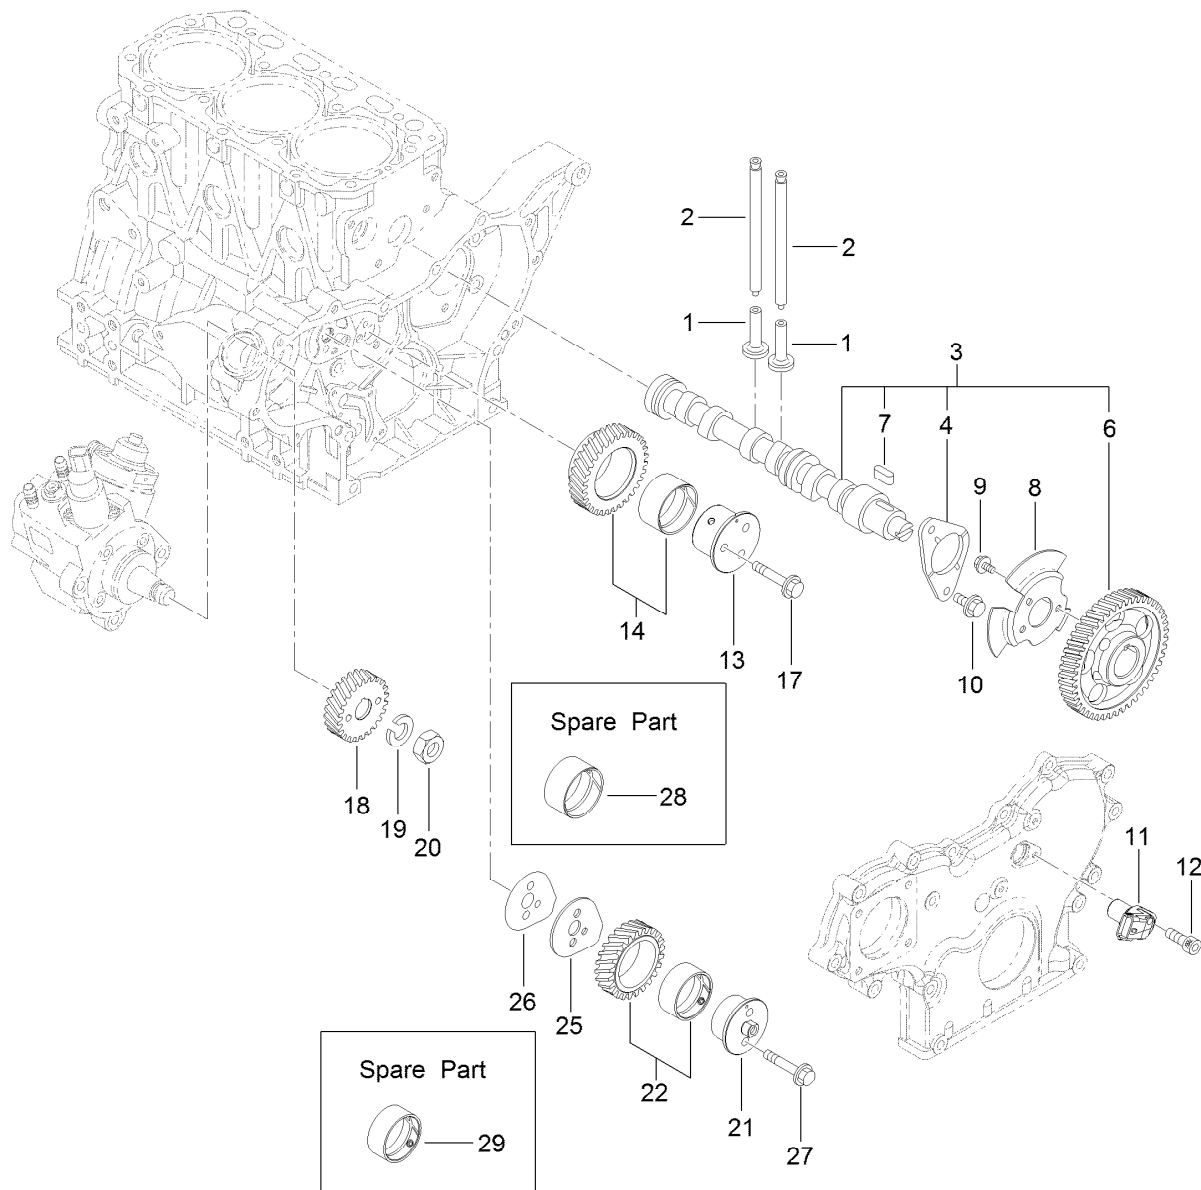


## Camshaft and Driving Gear Assembly

| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 1    | 125-7016    | 6    | Tappet             |
| 2    | 125-7017    | 6    | Rod-Push           |
| 3    | 127-3797    | 1    | Camshaft ASM       |
| 4    | 125-7008    | 1    | Metal-Thrust       |
| 6    | 127-3052    | 1    | Gear-Camshaft      |
| 7    | 125-7185    | 1    | Key                |
| 8    | 127-3053    | 1    | Pulser-Camshaft    |
| 9    | 125-7205    | 3    | Bolt               |
| 10   | 125-7213    | 2    | Bolt               |
| 11   | 127-3054    | 1    | Sensor-Rev, Gear   |
| 12   | 127-3184    | 1    | Bolt               |
| 13   | 127-3063    | 1    | Shaft-Idle, Gear A |

| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 14   | 127-3066    | 1    | Idle Gear A ASM      |
| 17   | 125-7219    | 3    | Bolt                 |
| 18   | 127-3070    | 1    | Gear-Pump, Supply    |
| 19   | 127-3167    | 1    | Washer-Spring        |
| 20   | 127-3185    | 1    | Nut-Lock             |
| 21   | 127-3064    | 1    | Shaft-Idle, Gear B   |
| 22   | 127-3067    | 1    | Idle Gear B ASM      |
| 25   | 127-3068    | 1    | Plate-Idle, Shaft    |
| 26   | 127-3069    | 1    | Gasket-Idle, Shaft B |
| 27   | 125-7218    | 2    | Bolt                 |
| 28   | 125-6927    | 1    | Bushing              |
| 29   | 127-3065    | 1    | Bushing              |
 
# Crankshaft and Piston Assembly

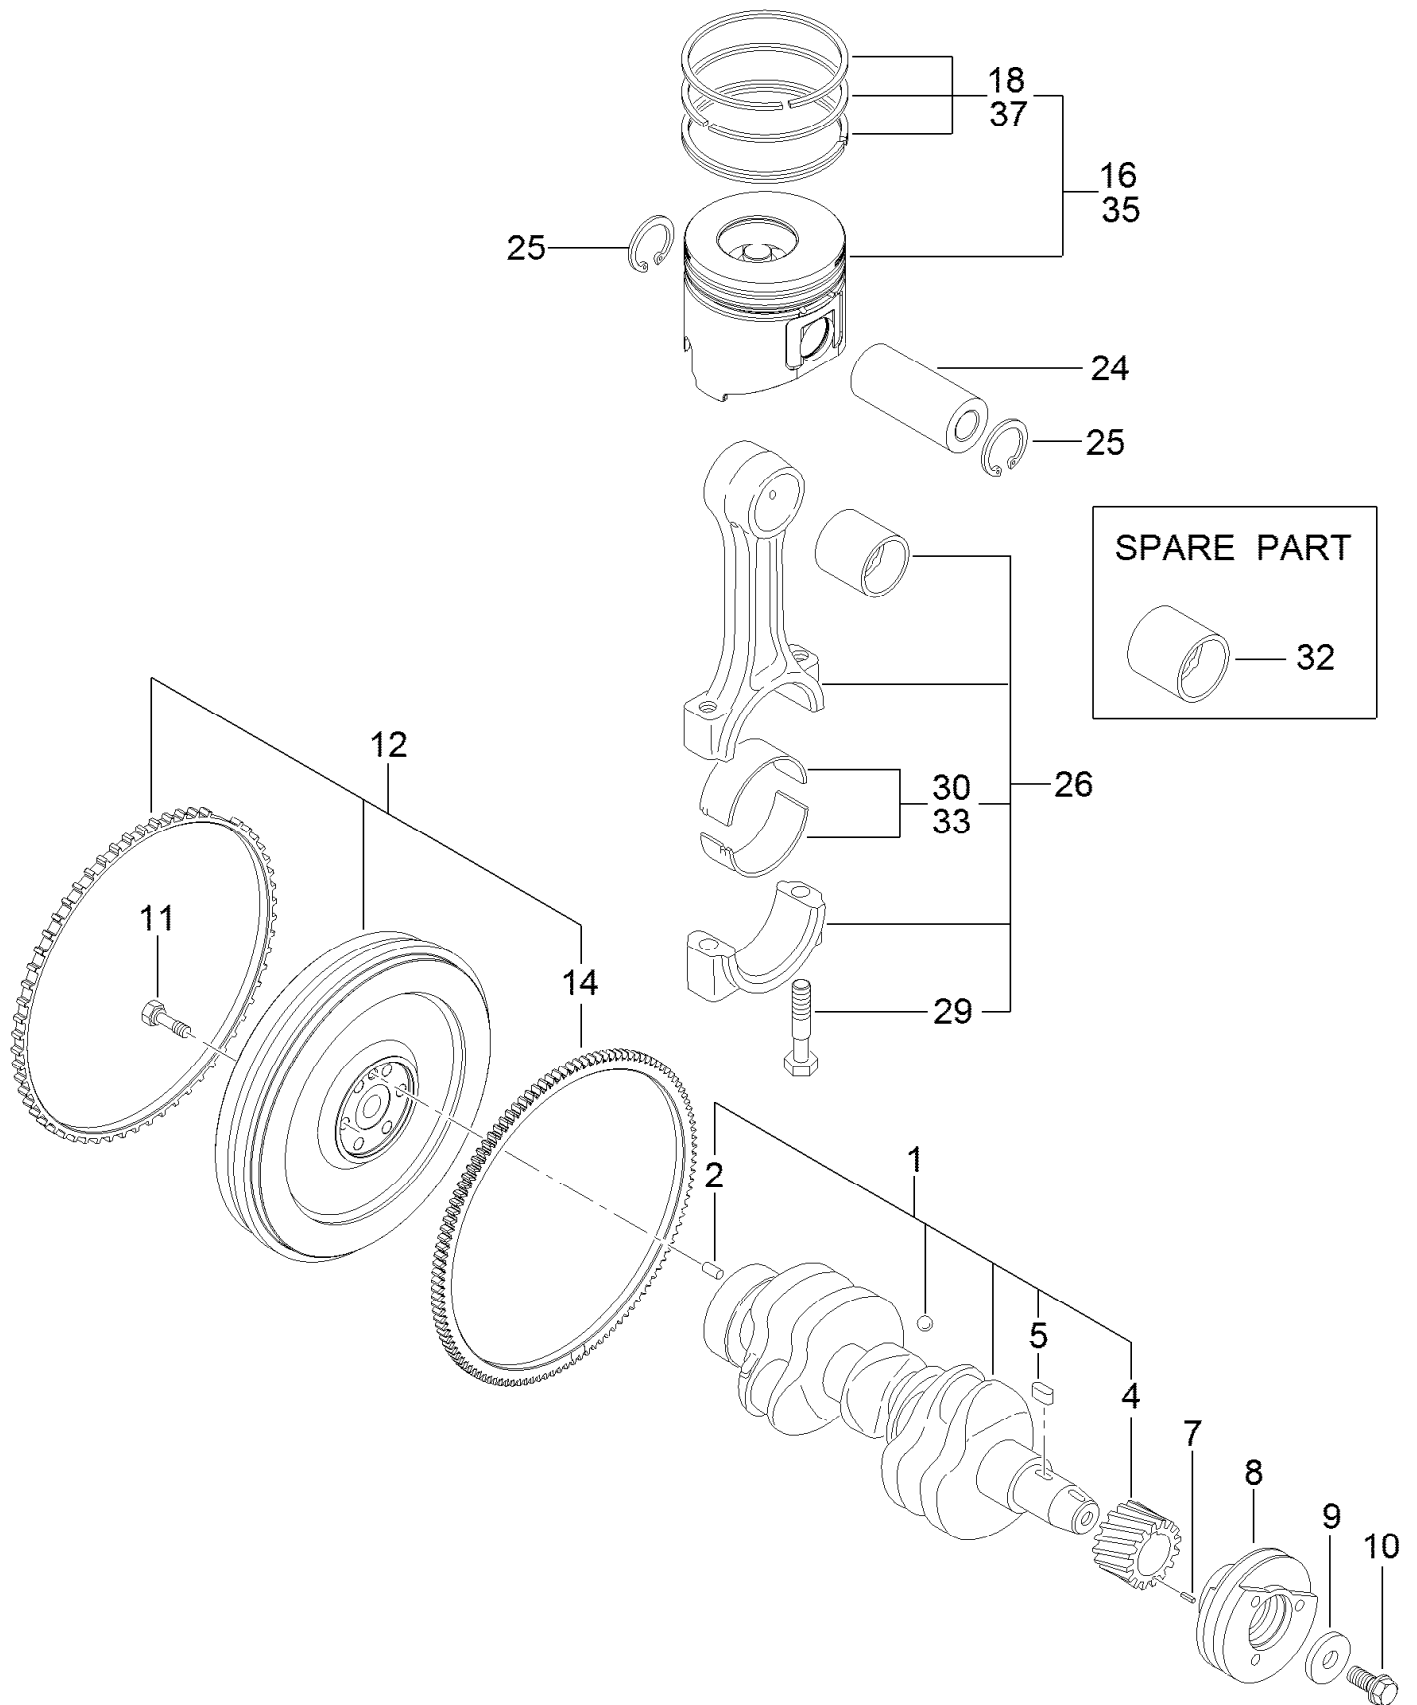


## Crankshaft and Piston Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 127-3800           | 1           | Crankshaft ASM     |
| 2           | 125-6995           | 1           | Pin                |
| 4           | 125-6937           | 1           | Gear               |
| 5           | 125-7185           | 1           | Key                |
| 7           | 125-7182           | 1           | Pin-Spring         |
| 8           | 127-3801           | 1           | Pulley-V           |
| 9           | 125-7109           | 1           | Washer             |
| 10          | 125-6956           | 1           | Bolt               |
| 11          | 125-6951           | 6           | Bolt               |
| 12          | 127-4761           | 1           | Flywheel ASM       |
| 14          | 127-4703           | 1           | Gear               |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    |
|-------------|--------------------|-------------|-----------------------|
| 16          | 127-4766           | 3           | Piston ASM            |
| 18          | 127-4751           | 3           | Piston Ring ASM       |
| 24          | 125-7030           | 3           | Pin                   |
| 25          | 125-7180           | 6           | Ring                  |
| 26          | 125-7242           | 3           | Connecting Rod ASM    |
| 29          | 125-6955           | 6           | Bolt                  |
| 30          | 125-7018           | 3           | Pin-Crank             |
| 32          | 125-6997           | 3           | Pin-Piston            |
| 33          | 125-7019           | 3           | Pin-Crank (.25)       |
| 35          | 127-4767           | 3           | Piston ASM (0.25 O S) |
| 37          | 127-4752           | 3           | Ring Set (0.25 O S)   |

 
# Cooling Water System Assembly

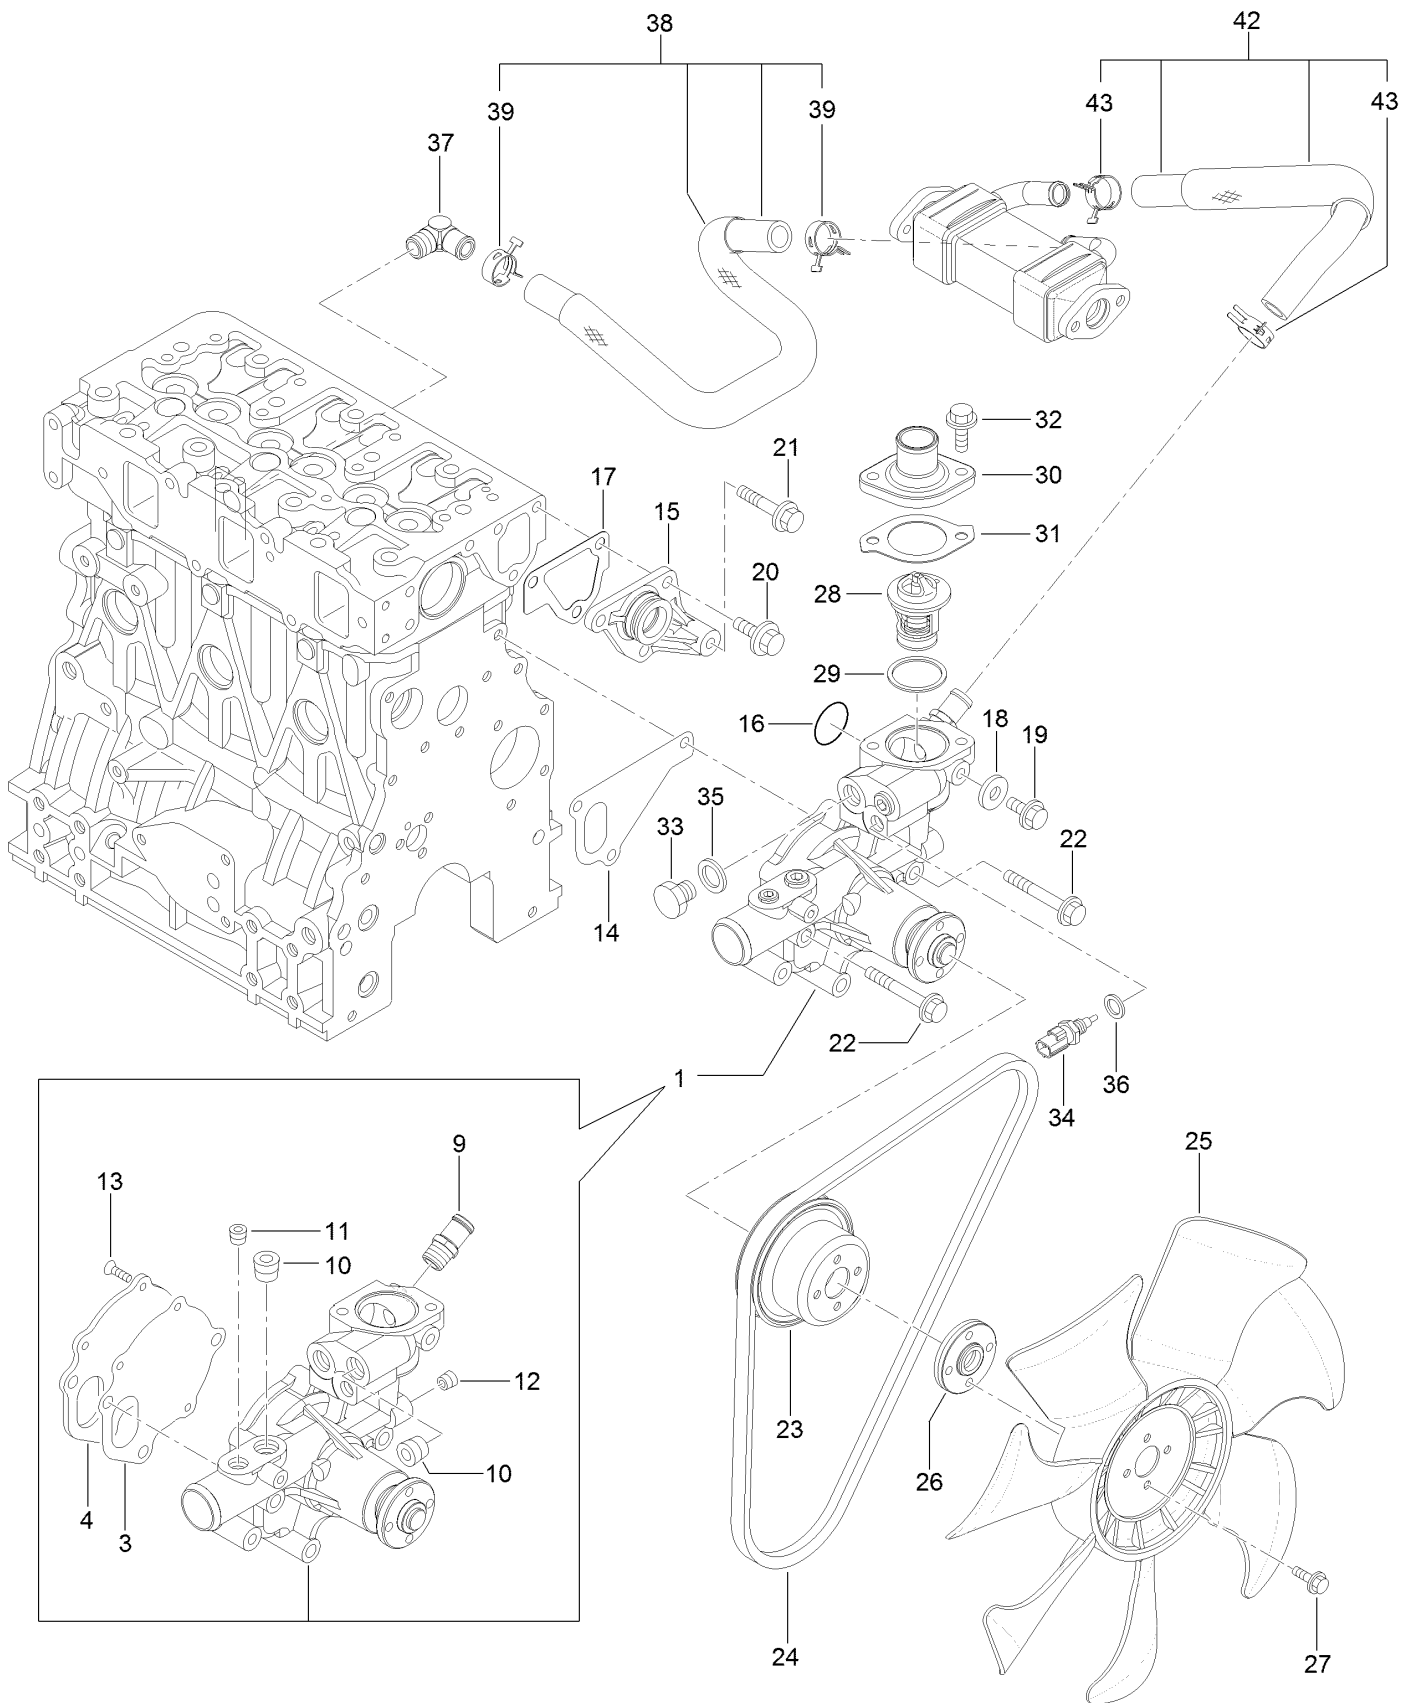

## Cooling Water System Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|-----------------------|
| 1           | 127-3071           | 1           | Water Pump ASM     | 24          | 127-4771           | 1           | V-Belt                |
| 3           | 125-6998           | 1           | Gasket             | 25          | 127-4702           | 1           | Fan                   |
| 4           | 125-6999           | 1           | Plate              | 26          | 127-3810           | 1           | Spacer                |
| 9           | 127-3017           | 1           | Joint              | 27          | 125-7209           | 4           | Bolt                  |
| 10          | 125-7123           | 2           | Plug               | 28          | 125-7029           | 1           | Thermostat            |
| 11          | 127-3175           | 1           | Plug               | 29          | 125-7026           | 1           | Gasket                |
| 12          | 125-7195           | 1           | Plug               | 30          | 125-7034           | 1           | Cover                 |
| 13          | 125-7234           | 3           | Screw              | 31          | 125-7110           | 1           | Gasket                |
| 14          | 125-7047           | 1           | Gasket             | 32          | 125-7594           | 2           | Bolt                  |
| 15          | 125-6986           | 1           | Joint              | 33          | 125-6953           | 1           | Plug                  |
| 16          | 125-7048           | 1           | O-Ring             | 34          | 125-7124           | 1           | Sensor-Thermostat, CW |
| 17          | 125-6978           | 1           | Gasket             | 35          | 125-6979           | 1           | Gasket                |
| 18          | 125-7192           | 1           | Gasket             | 36          | 125-7176           | 1           | Washer-Seal           |
| 19          | 93-0362            | 1           | Bolt               | 37          | 127-4705           | 1           | Elbow                 |
| 20          | 100-6928           | 3           | Bolt               | 38          | 127-4757           | 1           | E G R-C Pipe ASM      |
| 21          | 125-7219           | 1           | Bolt               | 39          | 127-3020           | 2           | Clip-Hose             |
| 22          | 125-7222           | 3           | Bolt               | 42          | 127-3811           | 1           | CW Pipe ASM           |
| 23          | 127-4712           | 1           | V-Pulley           | 43          | 127-3020           | 2           | Clip-Hose             |
 
# Starting Motor Assembly


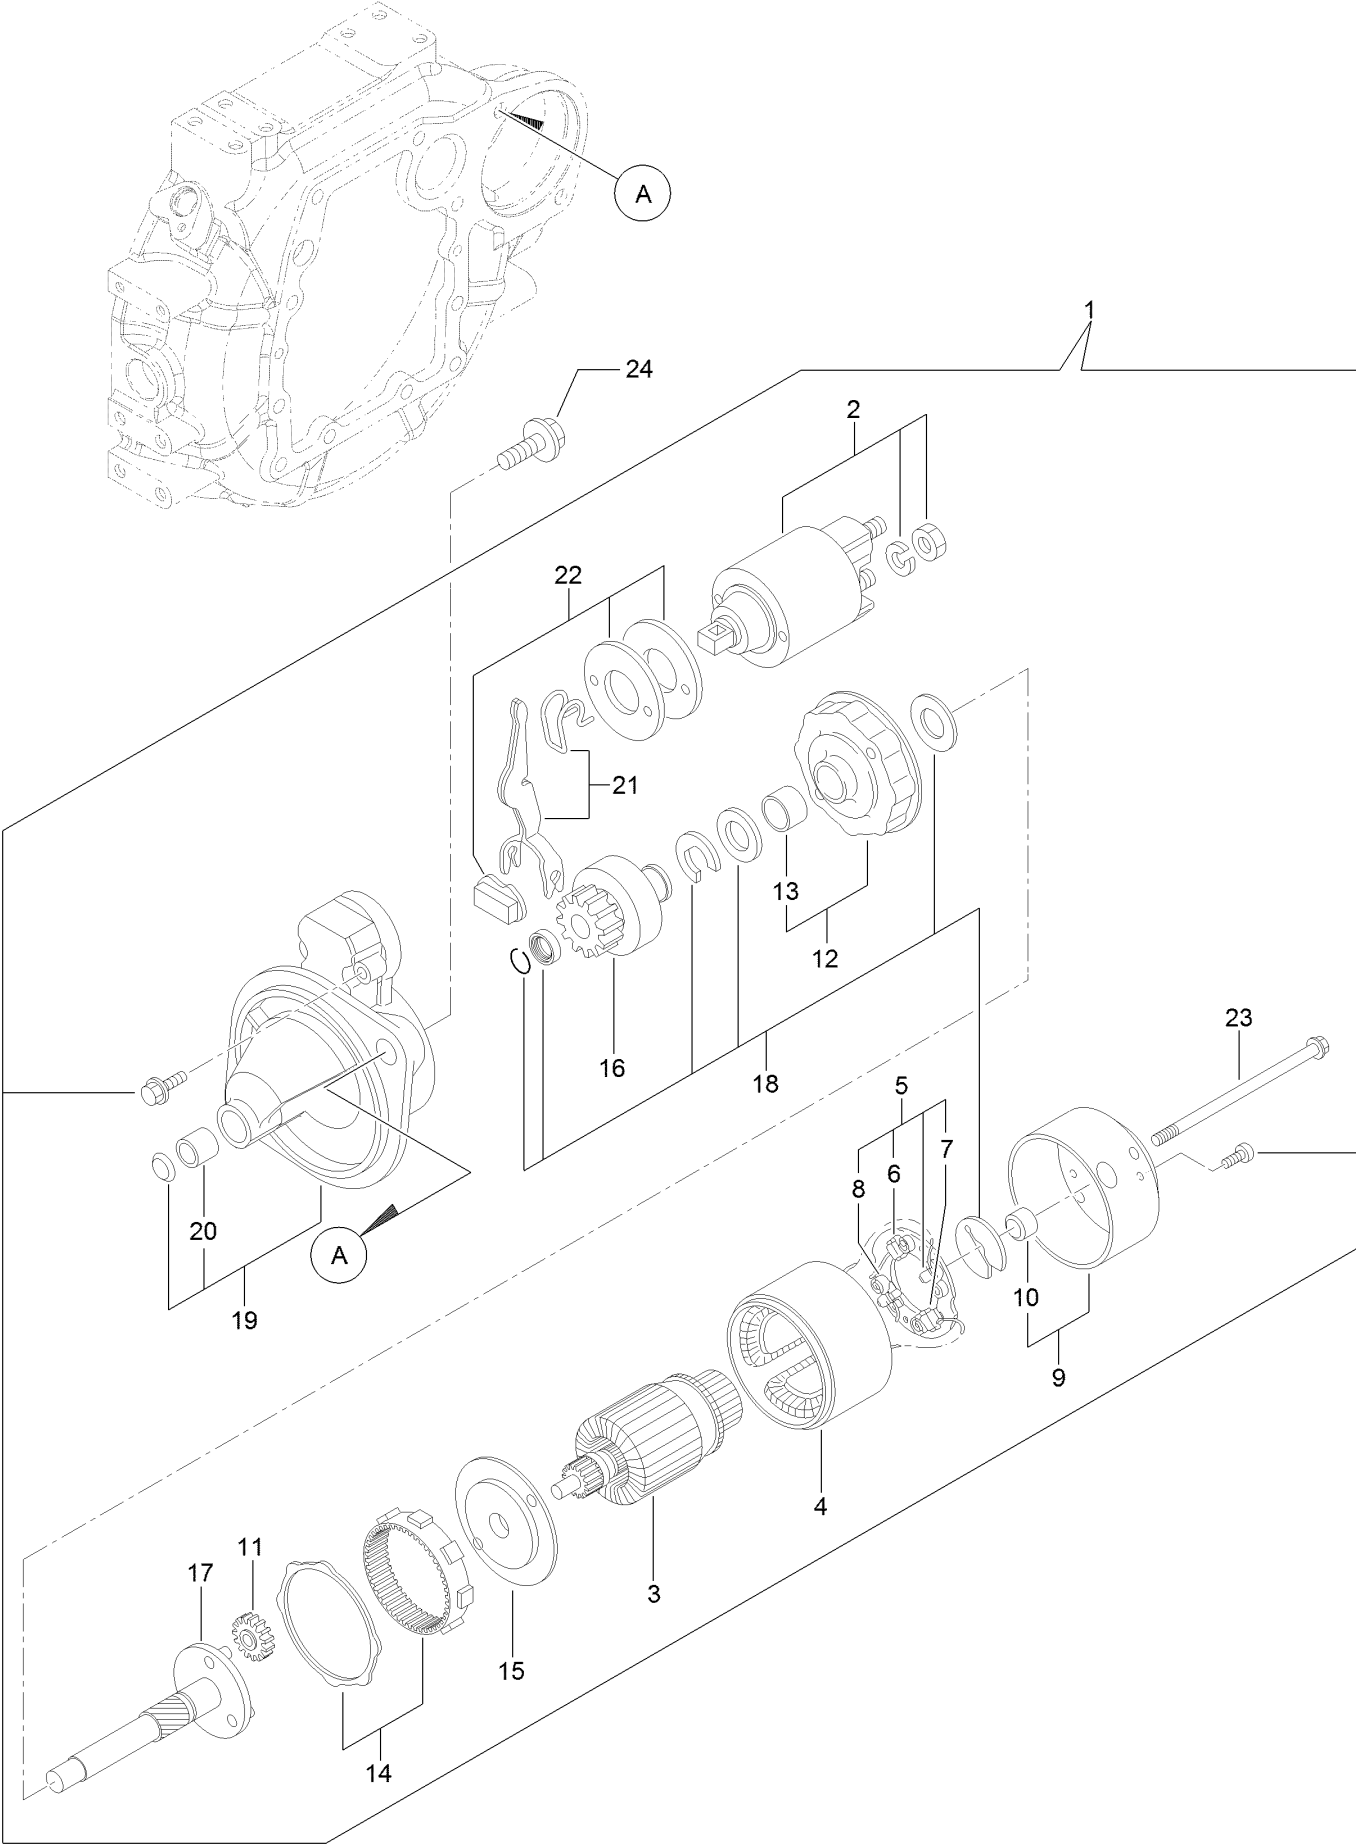


## Starting Motor Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 127-3818           | 1           | Starter ASM        |
| 2           | 127-3819           | 1           | Switch ASM         |
| 3           | 127-3820           | 1           | Armature ASM       |
| 4           | 127-3821           | 1           | Yoke ASM           |
| 5           | 127-3822           | 1           | Brush Holder ASM   |
| 6           | 127-3823           | 2           | Brush              |
| 7           | 127-3824           | 1           | Brush Set          |
| 8           | 127-3825           | 4           | Spring             |
| 9           | 127-3826           | 1           | Cover ASM          |
| 10          | 127-3827           | 1           | Metal              |
| 11          | 127-3828           | 3           | Gear               |
| 12          | 127-3829           | 1           | Bracket            |


| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 13          | 127-3830           | 1           | Bracket            |
| 14          | 127-3831           | 1           | Gear               |
| 15          | 127-3832           | 1           | Bracket            |
| 16          | 127-3833           | 1           | Pinion ASM         |
| 17          | 127-3834           | 1           | Shaft              |
| 18          | 127-3835           | 1           | Washer Set         |
| 19          | 127-3836           | 1           | Case ASM           |
| 20          | 127-3837           | 1           | Metal-Starter      |
| 21          | 127-3838           | 1           | Lever Set          |
| 22          | 127-3839           | 1           | Dust Cover ASM     |
| 23          | 127-3840           | 2           | Bolt-Through       |
| 24          | 125-7225           | 2           | Bolt               |
  
# Generator Assembly

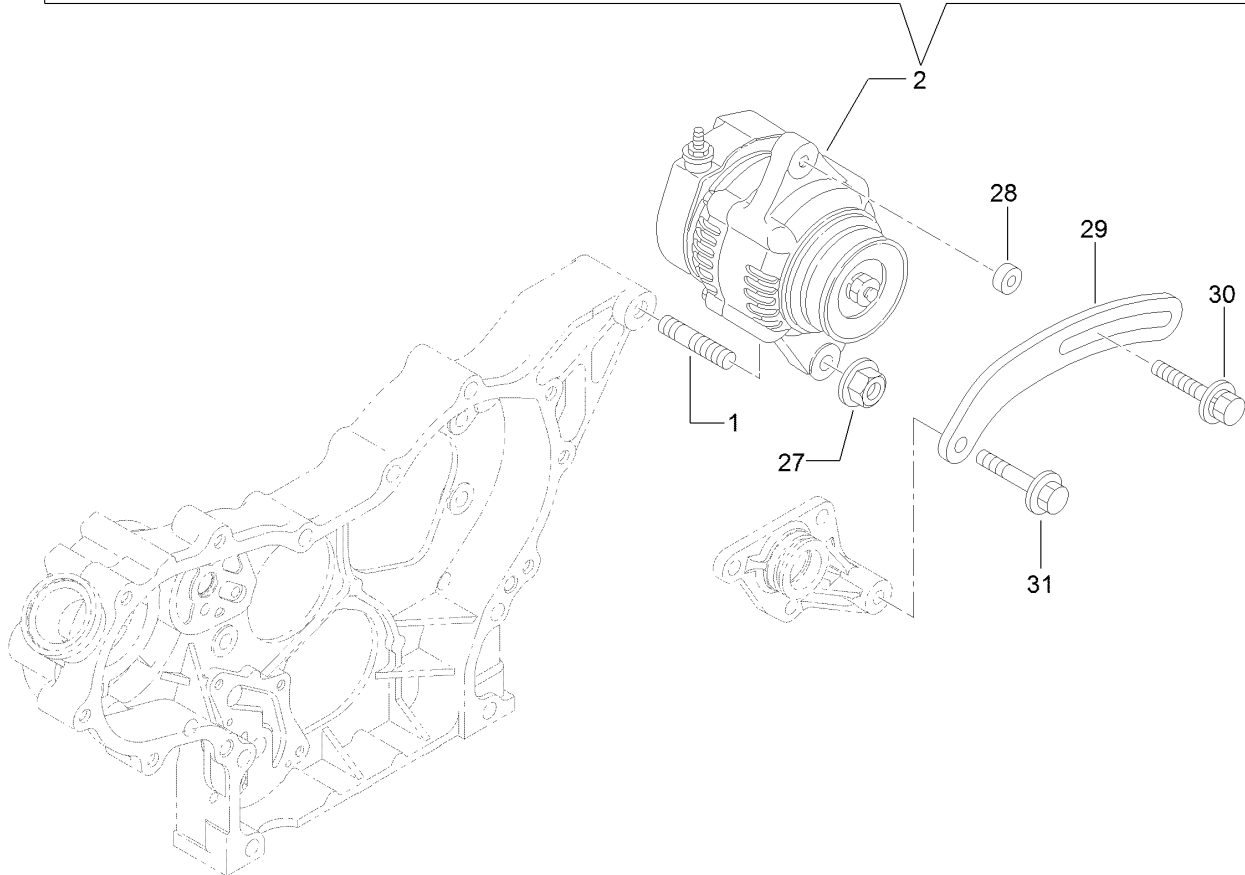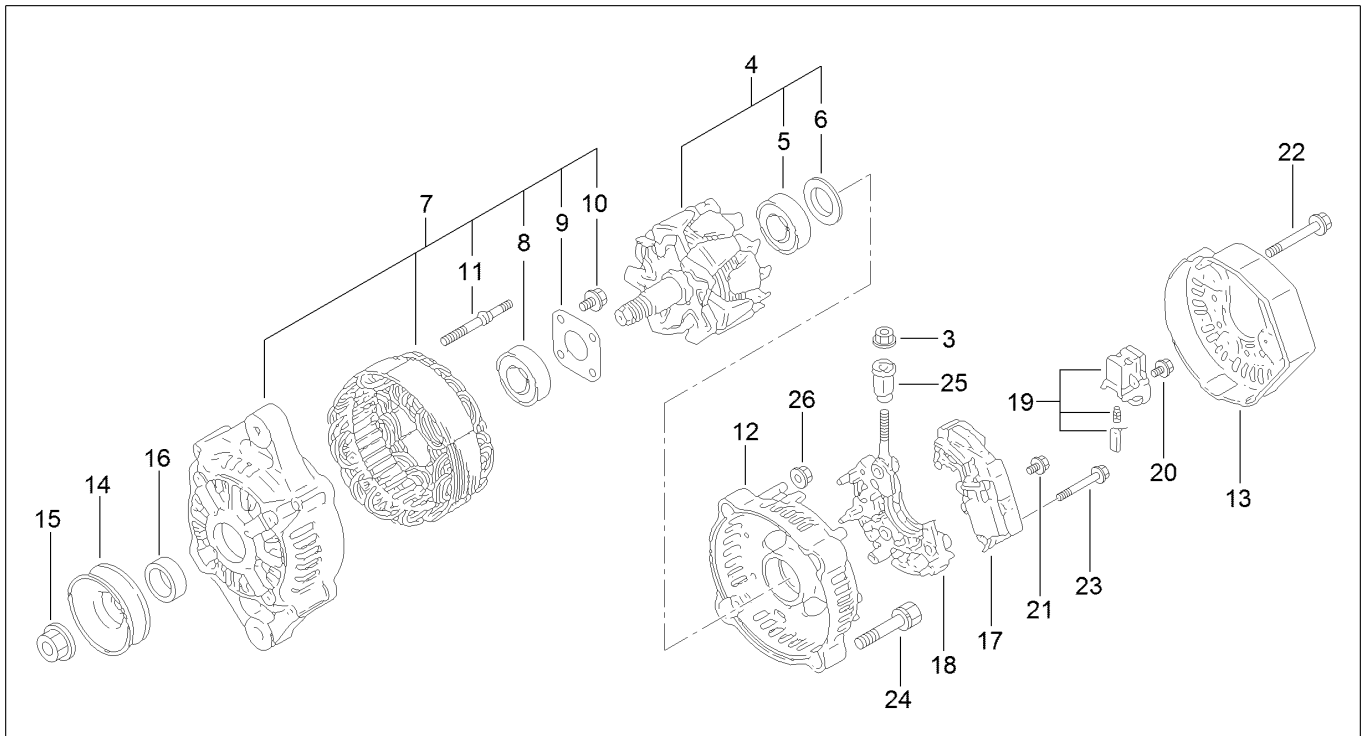


## Generator Assembly (continued)
 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|--------------------|
| 1           | 127-3011           | 1           | Stud               | 17          | 127-3847           | 1           | Regulator ASM      |
| 2           | 127-3841           | 1           | Generator          | 18          | 127-3848           | 1           | Holder             |
| 3           | 127-3190           | 1           | Nut                | 19          | 127-2993           | 1           | Holder             |
| 4           | 127-3843           | 1           | Rotor ASM          | 20          | 127-2965           | 6           | Screw              |
| 5           | 127-2983           | 1           | Bearing-Ball       | 21          | 127-2966           | 1           | Screw              |
| 6           | 127-2962           | 1           | Cover              | 22          | 127-2967           | 3           | Bolt               |
| 7           | 127-3844           | 1           | Frame ASM          | 23          | 127-2968           | 2           | Screw              |
| 8           | 127-2958           | 1           | Bearing-Ball       | 24          | 127-2969           | 2           | Bolt               |
| 9           | 127-2959           | 1           | Plate-Retainer     | 25          | 127-2970           | 1           | Bushing-Insulation |
| 10          | 127-2960           | 4           | Screw              | 26          | 127-2971           | 2           | Nut                |
| 11          | 127-2961           | 2           | Stud               | 27          | 125-7230           | 1           | Nut                |
| 12          | 127-3845           | 1           | Frame              | 28          | 125-6947           | 1           | Spacer             |
| 13          | 127-3846           | 1           | Cover              | 29          | 127-2977           | 1           | Adjuster           |
| 14          | 127-2954           | 1           | Pulley             | 30          | 125-7134           | 1           | Bolt               |
| 15          | 127-2955           | 1           | Nut                | 31          | 125-7219           | 1           | Bolt               |
| 16          | 127-2957           | 1           | Collar             |             |                    |             |                    |

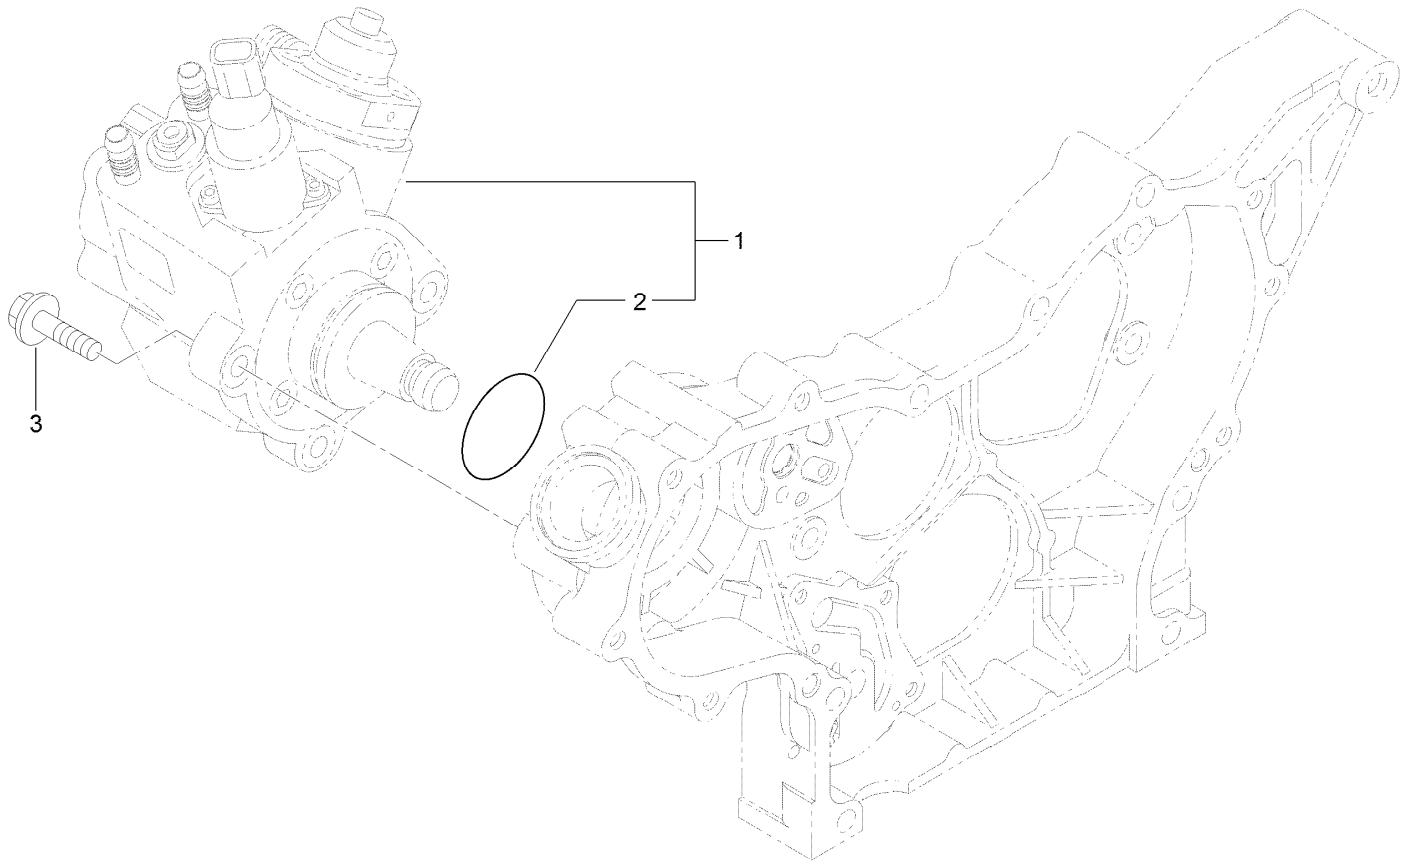


## Fuel System Assembly
 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 127-3073           | 1           | Fuel Pump ASM      |
| 2           | 127-3074           | 1           | O Ring-Pump, Fuel  |
| 3           | 125-7216           | 3           | Bolt               |

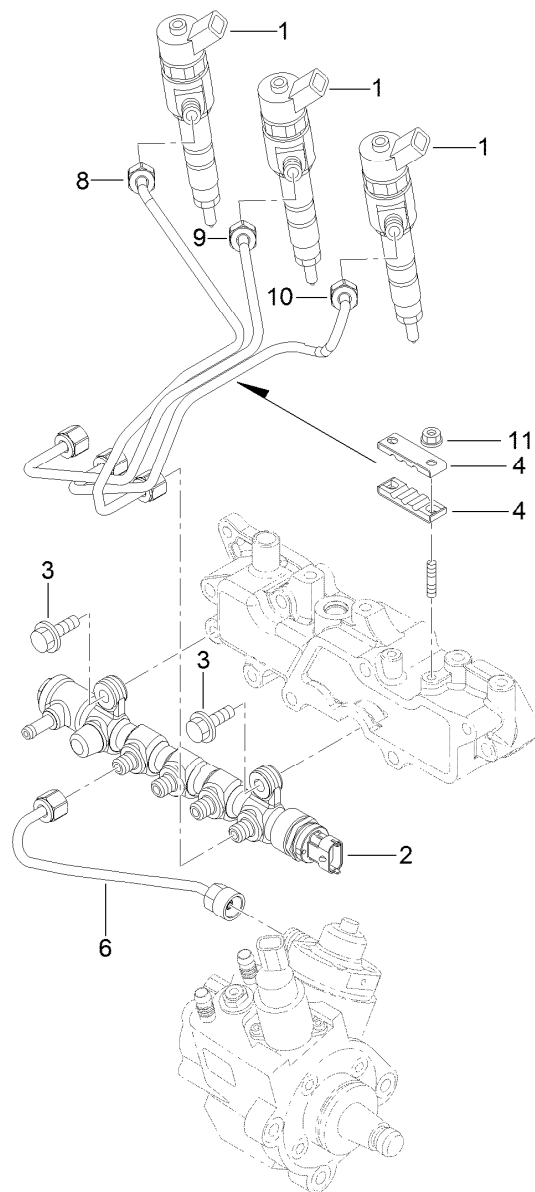

## Fuel Injection Valve Assembly

 
| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 1    | 127-4754    | 3    | Injector ASM       |
| 2    | 127-3812    | 1    | Rail ASM           |
| 3    | 125-7215    | 2    | Bolt               |
| 4    | 127-3813    | 2    | Retainer           |
| 6    | 127-3082    | 1    | Rail In Pipe ASM   |
| 8    | 127-3814    | 1    | Injection Pipe ASM |
| 9    | 127-3083    | 1    | Injection Pipe ASM |
| 10   | 127-3084    | 1    | Injection Pipe ASM |
| 11   | 125-7231    | 2    | Nut                |

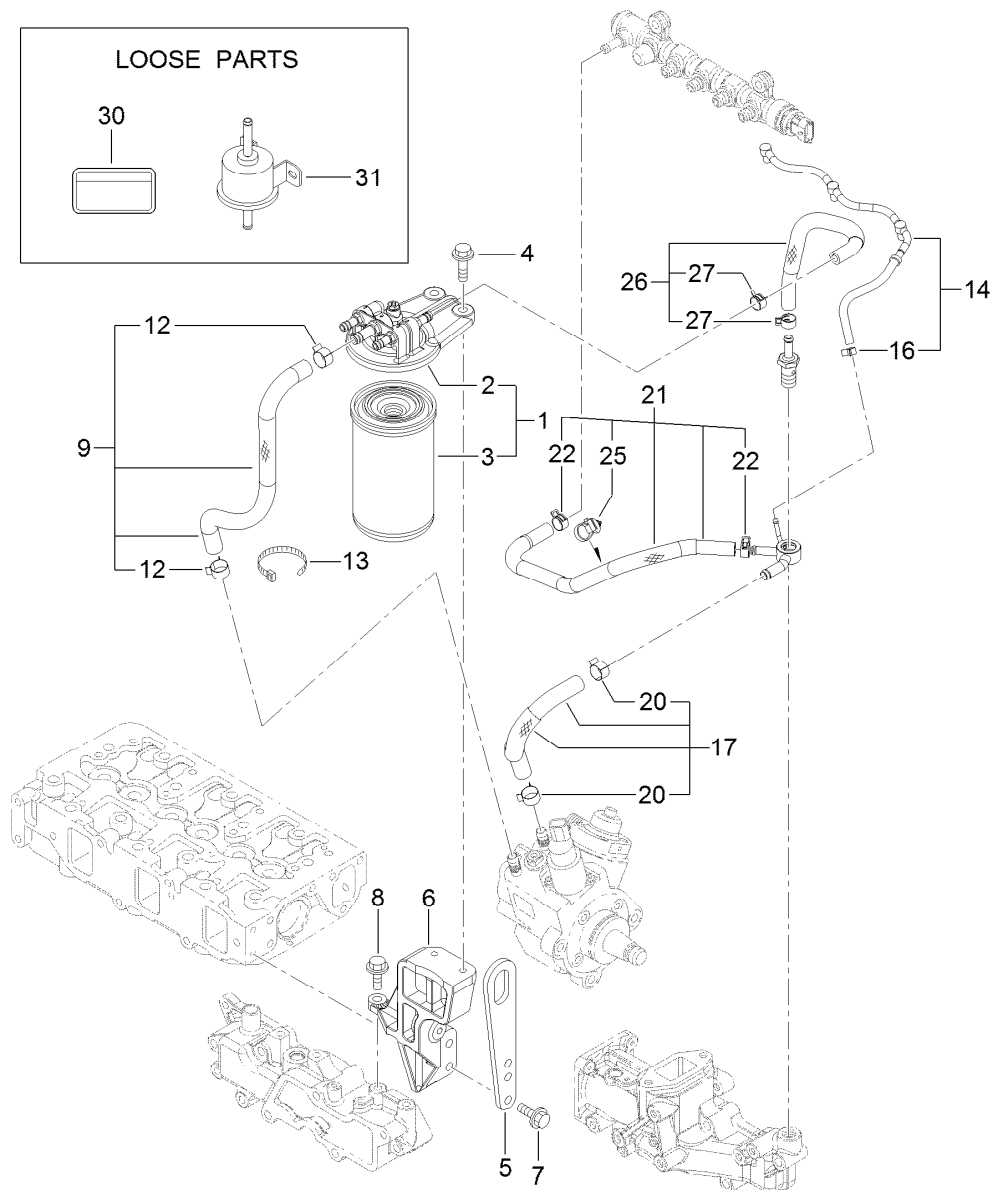

## Fuel Line Assembly


| Ref. | Part Number | Qty. | Description                 |
|------|-------------|------|-----------------------------|
| 1    | 127-3075    | 1    | Fuel/Oil Filter ASM         |
| 2    | 127-3076    | 1    | Fuel/Oil Filter Bracket ASM |
| 3    | 125-8752    | 1    | Filter-Fuel/Oil             |
| 4    | 125-7216    | 2    | Bolt                        |
| 5    | 125-7111    | 1    | Lifter                      |
| 6    | 127-3815    | 1    | Filter Bracket ASM          |
| 7    | 125-7215    | 2    | Bolt                        |
| 8    | 125-7215    | 1    | Bolt                        |
| 9    | 127-3077    | 1    | Fuel Pipe ASM               |
| 12   | 125-7191    | 2    | Clamp-Hose                  |
| 13   | 127-2981    | 1    | Band                        |
 
| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 14   | 127-3816    | 1    | Fuel/Oil Return Pipe ASM |
| 16   | 127-3172    | 1    | Clamp-Hose               |
| 17   | 127-3078    | 1    | Fuel Pipe ASM            |
| 20   | 125-7191    | 2    | Clamp-Hose               |
| 21   | 127-3817    | 1    | Fuel Pipe ASM            |
| 22   | 127-2950    | 2    | Clip-Hose                |
| 25   | 127-3087    | 1    | Band-Clip                |
| 26   | 127-3079    | 1    | Fuel Pipe ASM            |
| 27   | 127-2950    | 2    | Clip-Hose                |
| 30   | 125-6900    | 1    | Label-Caution, Fuel Oil  |
| 31   | 127-3008    | 1    | Fuel Feed Pump ASM       |

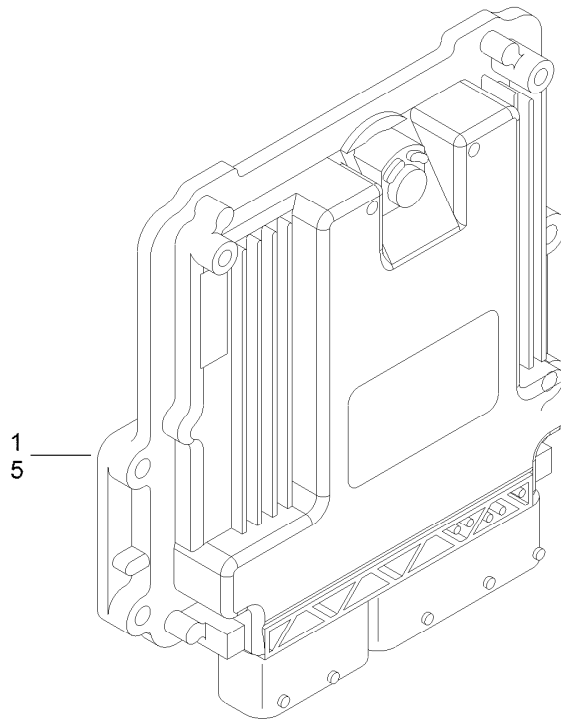


## Electronic Control Unit Assembly
 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 127-4763           | 1           | E C U ASM          |
| 5           | 127-3085           | 1           | E C U ASM          |

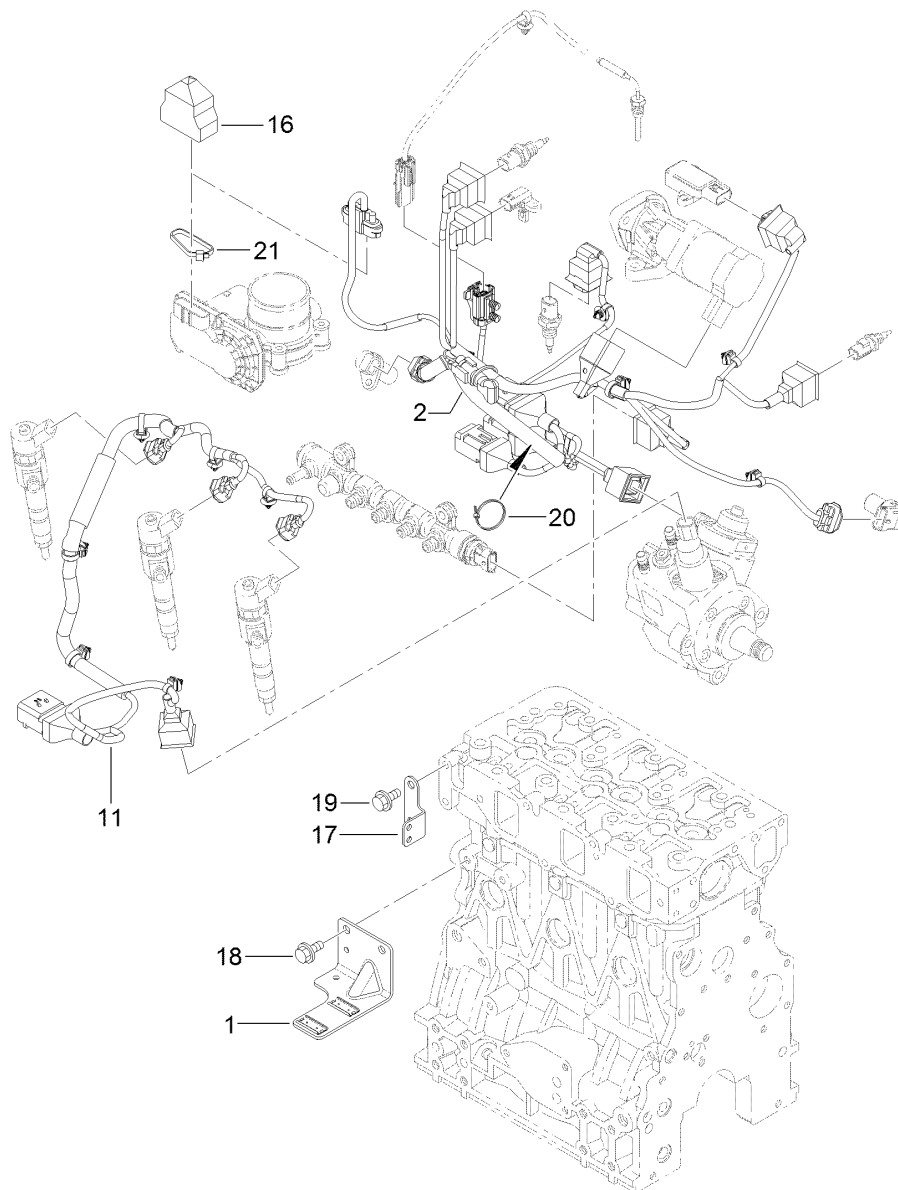

## Electric Parts Assembly


 
| Ref. | Part Number | Qty. | Description       |
|------|-------------|------|-------------------|
| 1    | 127-3086    | 1    | Bracket-Connector |
| 2    | 127-4755    | 1    | Harness           |
| 11   | 127-3851    | 1    | Harness           |
| 16   | 127-3089    | 1    | Boot-Type, Cap    |
| 17   | 127-3090    | 1    | Bracket-Harness   |
| 18   | 93-0362     | 2    | Bolt              |
| 19   | 93-0362     | 2    | Bolt              |
| 20   | 127-3187    | 1    | Band              |
| 21   | 127-3188    | 1    | Band              |

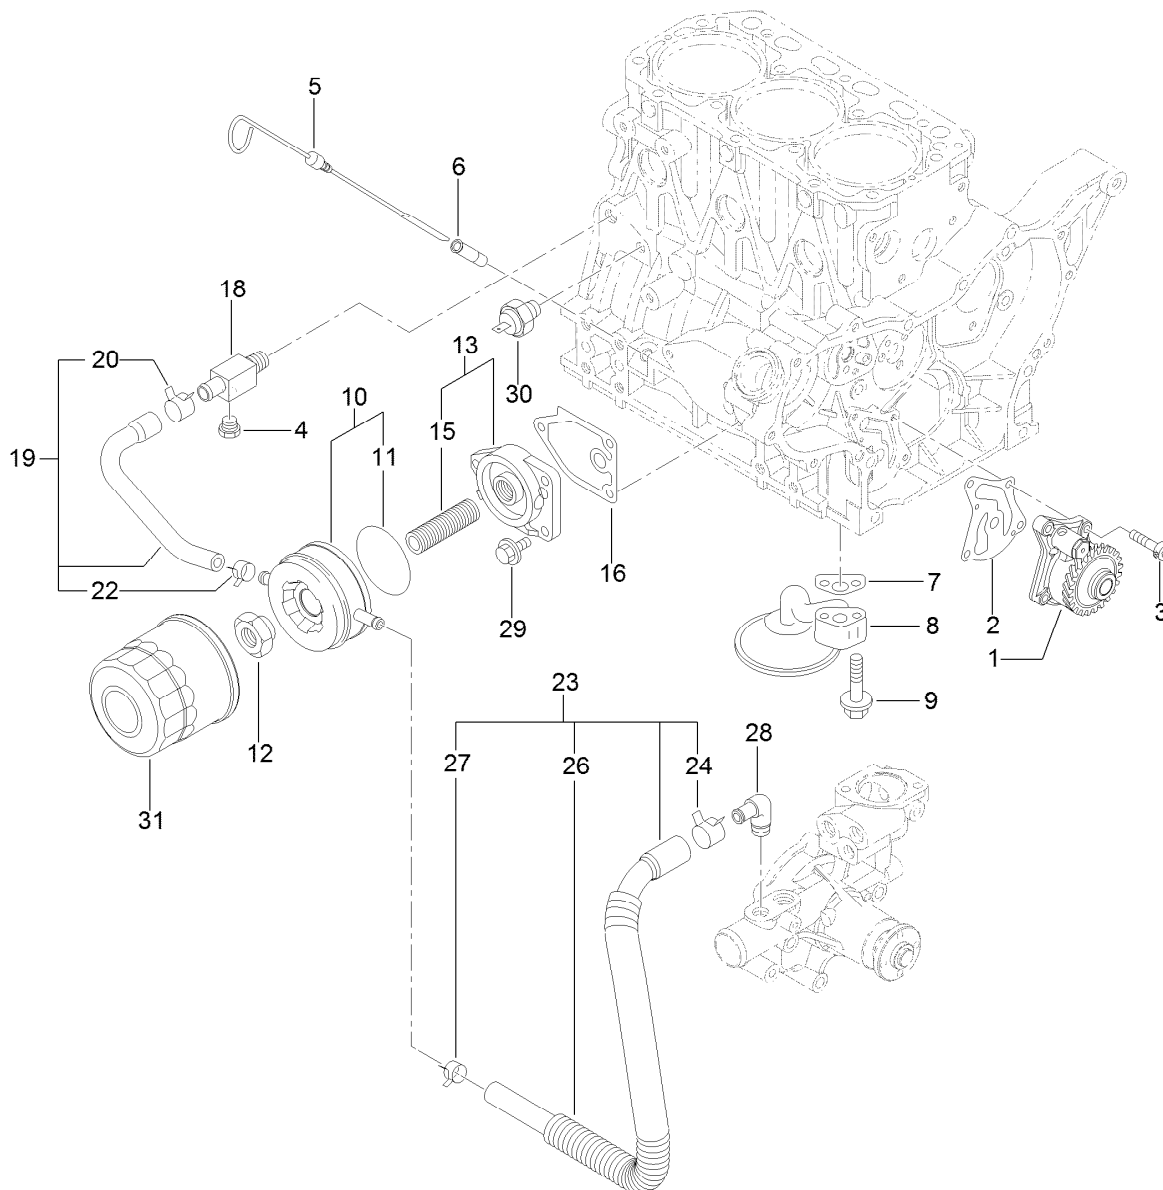

## Lubrication and Oil System Assembly

| Ref. | Part Number | Qty. | Description     |
|------|-------------|------|-----------------|
| 1    | 127-4753    | 1    | Oil Pump ASM    |
| 2    | 127-3004    | 1    | Gasket          |
| 3    | 125-7232    | 4    | Bolt            |
| 4    | 125-7171    | 1    | Plug-Drain      |
| 5    | 125-6987    | 1    | Dipstick        |
| 6    | 125-6954    | 1    | Guide-Dipstick  |
| 7    | 125-7022    | 1    | Gasket          |
| 8    | 127-3803    | 1    | Pipe ASM        |
| 9    | 125-7217    | 2    | Bolt            |
| 10   | 125-7074    | 1    | Cooler ASM      |
| 11   | 125-7075    | 1    | O-Ring          |
| 12   | 125-7041    | 1    | Nut-Cooler, Oil |
| 13   | 125-6989    | 1    | Bracket ASM     |
| 15   | 125-7042    | 1    | Stud            |
  
| Ref. | Part Number | Qty. | Description   |
|------|-------------|------|---------------|
| 16   | 125-7024    | 1    | Gasket        |
| 18   | 125-6990    | 1    | Joint         |
| 19   | 125-7078    | 1    | Pipe ASM      |
| 20   | 125-7162    | 1    | Clip          |
| 22   | 125-7191    | 1    | Clamp-Hose    |
| 23   | 127-3804    | 1    | Pipe ASM      |
| 24   | 125-7162    | 1    | Clip          |
| 26   | 127-3805    | 1    | Tube          |
| 27   | 125-7191    | 1    | Clamp-Hose    |
| 28   | 125-7001    | 1    | Elbow         |
| 29   | 125-7595    | 3    | Bolt          |
| 30   | 125-6918    | 1    | Switch-Oil    |
| 31   | 125-7025    | 1    | Filter-Engine |

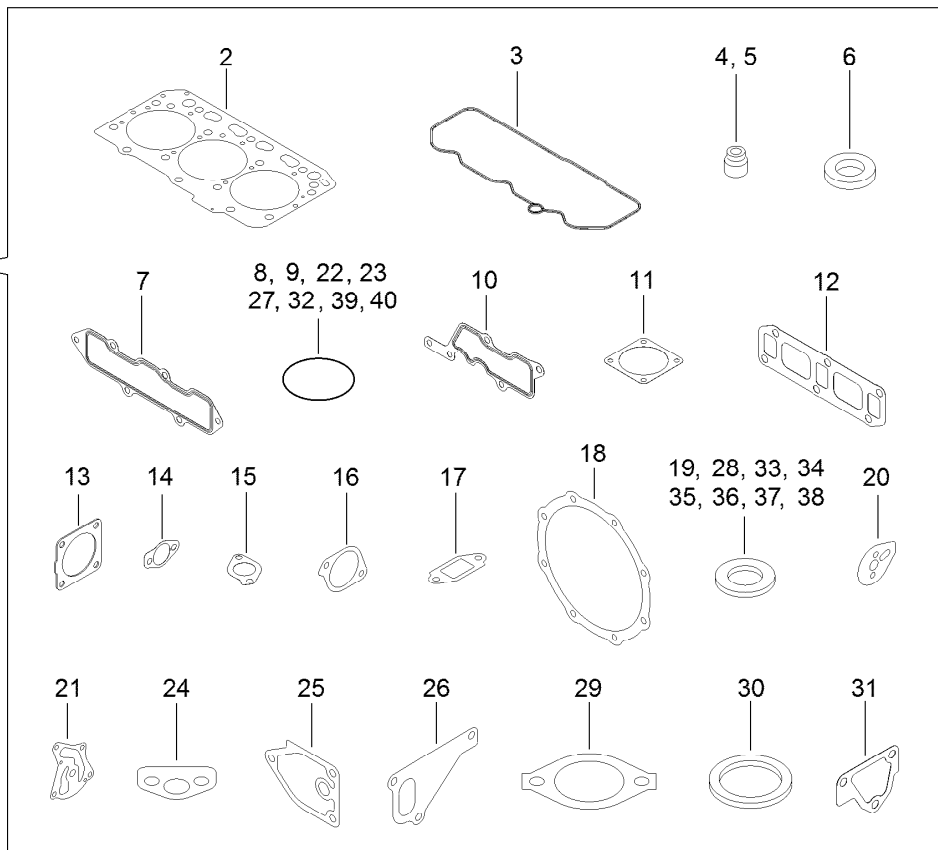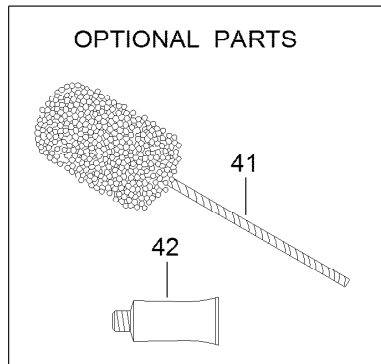

## Gasket Set

| Ref. | Part Number | Qty. | Description                |
|------|-------------|------|----------------------------|
| 1    | 127-4776    | 1    | Gasket Kit                 |
| 2    | 127-4716    | 1    | Head Gasket ASM            |
| 3    | 127-3856    | 1    | Gasket-Head, Cylinder      |
| 4    | 127-2986    | 3    | Seal-Stem, Valve           |
| 5    | 127-3027    | 3    | Seal-Stem, Valve           |
| 6    | 127-3021    | 3    | Gasket-Injector            |
| 7    | 127-3857    | 1    | Gasket-Manifold, Intake    |
| 8    | 127-3032    | 2    | O Ring-Sensor, Pressure    |
| 9    | 127-3033    | 1    | O Ring-Sensor, Temp        |
| 10   | 127-3034    | 1    | Gasket-Collector           |
| 11   | 127-3037    | 2    | Gasket-Throttle            |
| 12   | 127-3775    | 1    | Gasket-Manifold, Exhaust   |
| 13   | 127-2987    | 1    | Gasket-Silencer            |
| 14   | 127-3043    | 2    | Gasket-Cooler, E G R       |
| 15   | 127-3016    | 1    | Gasket                     |
| 16   | 127-3050    | 1    | Gasket-Intake Valve, E G R |
| 17   | 127-3051    | 1    | Gasket-Out Valve, E G R    |
| 18   | 127-3859    | 2    | Gasket-D P F               |
| 19   | 127-3056    | 4    | Gasket-Sensor              |
| 20   | 127-3069    | 1    | Gasket-Idle, Shaft B       |
| 21   | 127-3004    | 1    | Gasket                     |

| Ref. | Part Number | Qty. | Description       |
|------|-------------|------|-------------------|
| 22   | 125-6909    | 2    | O-Ring            |
| 23   | 127-2973    | 1    | O-Ring            |
| 24   | 125-7022    | 1    | Gasket            |
| 25   | 125-7024    | 1    | Gasket            |
| 26   | 125-7047    | 1    | Gasket            |
| 27   | 125-7048    | 1    | O-Ring            |
| 28   | 125-6979    | 1    | Gasket            |
| 29   | 125-7110    | 1    | Gasket            |
| 30   | 125-7026    | 1    | Gasket            |
| 31   | 125-6978    | 1    | Gasket            |
| 32   | 127-3074    | 1    | O Ring-Pump, Fuel |
| 33   | 125-7174    | 1    | Washer-Seal       |
| 34   | 125-7176    | 1    | Washer-Seal       |
| 35   | 127-3166    | 2    | Washer-Seal       |
| 36   | 125-7177    | 1    | Washer-Seal       |
| 37   | 125-7192    | 1    | Gasket            |
| 38   | 127-3174    | 2    | Gasket            |
| 39   | 93-0418     | 3    | O-Ring            |
| 40   | 125-7197    | 2    | O-Ring            |
| 41   | 127-3000    | 1    | Hone              |
| 42   | 125-7248    | 1    | Gasket-Liquid     |

# Attachments and Accessories

## For 30695 Groundsmaster 7210 Series Traction Unit

| Product Name                                                       | Model/Part |
|--------------------------------------------------------------------|------------|
| Auxiliary Hydraulic Power Kit .....                                | 30380      |
| Auxiliary Power Unit.....                                          | 30382      |
| Debris Blower .....                                                | 30393      |
| Tooth Rake .....                                                   | 08751      |
| Finish Grader .....                                                | 08754      |
| Drag Mat Carrier System .....                                      | 08756      |
| Steel Drag Mat.....                                                | 08757      |
| Coco Drag Mat.....                                                 | 08758      |
| 42-pound Weight, For Kit 114-4090 .....                            | 114-4096   |
| MVP Filter Kit.....                                                | 30261      |
| Premium Transmission/Hydraulic Tractor Fluid (55 Gallon Drum)..... | 108-1183   |
| Premium Transmission/Hydraulic Tractor Fluid (5 Gallon Pail) ..... | 108-1184   |
| Premium Engine Oil 15w40 (5 Gallon Pail) .....                     | 121-6395   |
| Premium Engine Oil 15w40 (55 Gallon Drum) .....                    | 121-6394   |
| Green Diesel Cap .....                                             | 107-2172   |
| Yellow Hydraulic Cap .....                                         | 107-1576   |
| 5in Air Cleaner Safety Element.....                                | 114-4057   |
| Overflow Tank Kit.....                                             | 117-5570   |
| Brake Service Kit .....                                            | 120-0015   |
| Jack-Stand Kit .....                                               | 30483      |
| Fender Kit .....                                                   | 117-9170   |
| Polar Trac Cab.....                                                | 30474      |
| V-Plow Mounting Kit.....                                           | 30378      |
| Polar Trac Kit .....                                               | 30675      |
| 48in V-Plow.....                                                   | 30750      |
| Gasket-Cover, Housing .....                                        | 30810      |
| Hitch Kit .....                                                    | 130-8718   |
| Wheel and Tire ASM (Semi Pneumatic).....                           | 110-6406   |
| Weight Mount Bracket Kit .....                                     | 114-4090   |
| Weight Bracket Kit .....                                           | 125-2670   |
| Universal Sunshade .....                                           | 30349      |
| Tire-Lug (24 X 12 - 12).....                                       | 103-6771   |
| Slow Moving Vehicle Kit.....                                       | 114-4050   |
| North American Road Light Kit .....                                | 30374      |
| Recycler Kit, 60in Side Discharge Deck.....                        | 30348      |
| CE Kit, Grass Collection System.....                               | 117-9249   |
| 60in Side Discharge Mower .....                                    | 30456      |
| Baffle, Blower Housing .....                                       | 30658      |
| Blade-Belt Kit.....                                                | 105-7270   |
| 62in Rear Discharge Completion Kit .....                           | 30463      |
| 62in Guardian Recycler Completion Kit .....                        | 30306      |
| 62in Rotary Mower.....                                             | 30457      |
| 62in CE Mower Cover Kit.....                                       | 30683      |
| Blade-Belt Kit, 72in Guardian Only .....                           | 105-7271   |
| 72in Rear Discharge Completion Kit .....                           | 30466      |
| 72in Guardian Recycler Completion Kit .....                        | 30304      |

## Attachments and Accessories (continued)

|                                                           |          |
|-----------------------------------------------------------|----------|
| 72in Guardian Fine Recycler Completion Kit .....          | 30346    |
| 72in Base Deck.....                                       | 30353    |
| 72in Guardian and Rear Discharge CE Mower Cover Kit ..... | 30685    |
| Leaf Mulching Kit .....                                   | 108-5273 |
| Recycler Kit, 72in Side Discharge Deck.....               | 30347    |
| Striping Kit .....                                        | 105-7273 |
| 72in Side Discharge Deck.....                             | 30481    |
| 72in Side Discharge Mower (CE).....                       | 30354    |
| CE Kit, 72in Side Deck With French Guards .....           | 30679    |
| 100in Rear Discharge Deck .....                           | 31101    |
| Adapter Kit for 100in Rear Discharge Deck.....            | 31104    |
| Leaf Mulching Kit for 100in Rear Discharge Deck .....     | 31105    |
| 100in CE Mower Cover Kit.....                             | 30687    |

**Notes:**

**Notes:**

**Notes:**



**Count on it.**