



ProLine

52" Side Discharge Cutting Unit

Model No. 30152 – 890001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Deck and Spindle Asm	1	Decals	4
Cover And Gage Wheels	2	Note:	
Carrier Frame	3		

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
..			

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HWHTF	hex washer head thread forming
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	PH	pan head
FH	flat head	PPH	Phillips pan head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HFV	hex flange washer	SFH	slotted fillister head
HH	hex head	SH	square head
HHF	hex head flange	SHWH	slotted hex washer head
HHST	hex head self tapping	SPH	slotted pan head
HJ	hex jam	STD	standard
HOC	height-of-cut	TAP	self tapping
HS	hex socket	TH	truss head
HSBH	hex socket button head	TTH	Torx truss head
HSFH	hex socket flat head	WH	wing head
HSH	hex socket head		
HWH	hex washer head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form X:Y. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.

 
For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form $X (Y)$. X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.


For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

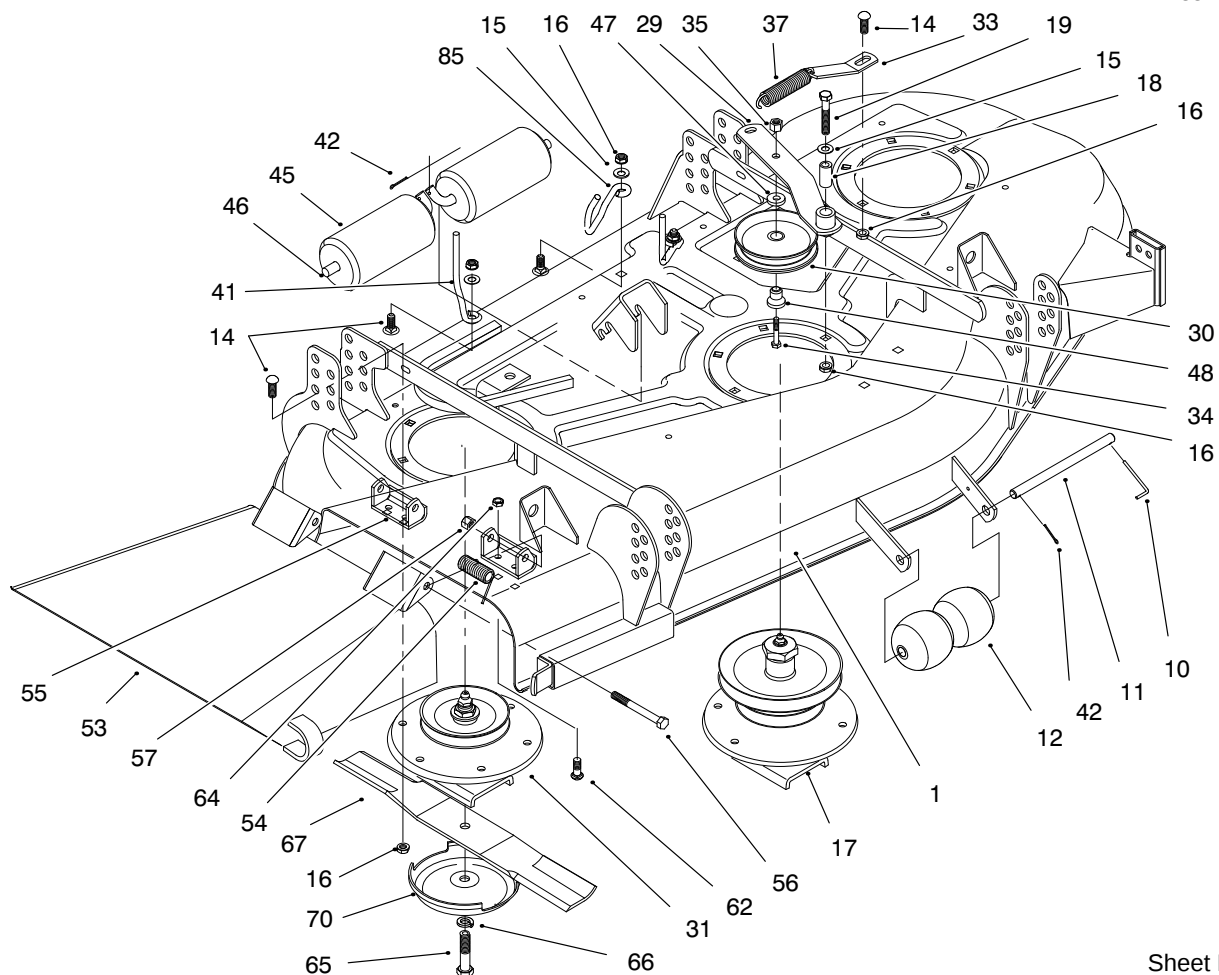

Sheet No.: 2

Deck and Spindle Asm

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	94-6781	1	Deck ASM	56	3211-15	2	Screw-HH
10	57-0690	1	Pin-Cotter	57	3296-5	2	Nut-Lock
11	40-6400	1	Shaft-Roller	62	3230-18	4	Screw-CARR
12	29-4820	2	Roller	64	32152-1	4	Nut-Lock
14	3231-22	20	Bolt-CARR	65	44-2200	3	Bolt-Blade
15	3256-24	4	Washer-Flat	66	3253-27	3	Washer-Lock
16	32128-21	21	Nut-HF	67	27-0990	3	Blade
17	54-7781	1	ASM-Housing	70	72-9361	3	Anti-Scalp Cup
18	51-3640	1	Sleeve-Pivot	85	55-7620	1	Guide-Belt
19	323-11	1	Screw				
29	55-7640-03	1	Idler Arm ASM				
30	65-5940	1	Pulley-Idler				
31	27-0870-03	2	Spindle Hsg ASM				
33	55-7650	1	Plate-Spring				
34	3211-8	1	Screw-HH				
35	3296-5	1	Nut-Lock				
37	51-3650	1	Spring-Extension				
41	52-4780	2	Rod-Belt				
42	3272-11	3	Pin-Cotter				
45	36-1740	2	Roller-Deck				
46	40-0340	2	Shaft-Roller				
47	7-0081	1	Washer-Special				
48	65-5950	1	Bushing-Pulley				
53	40-6200-01	1	Deflector-Grass				
54	40-6230	2	Spring-Torsion				
55	29-5590-03	2	Fincket-Pivot				

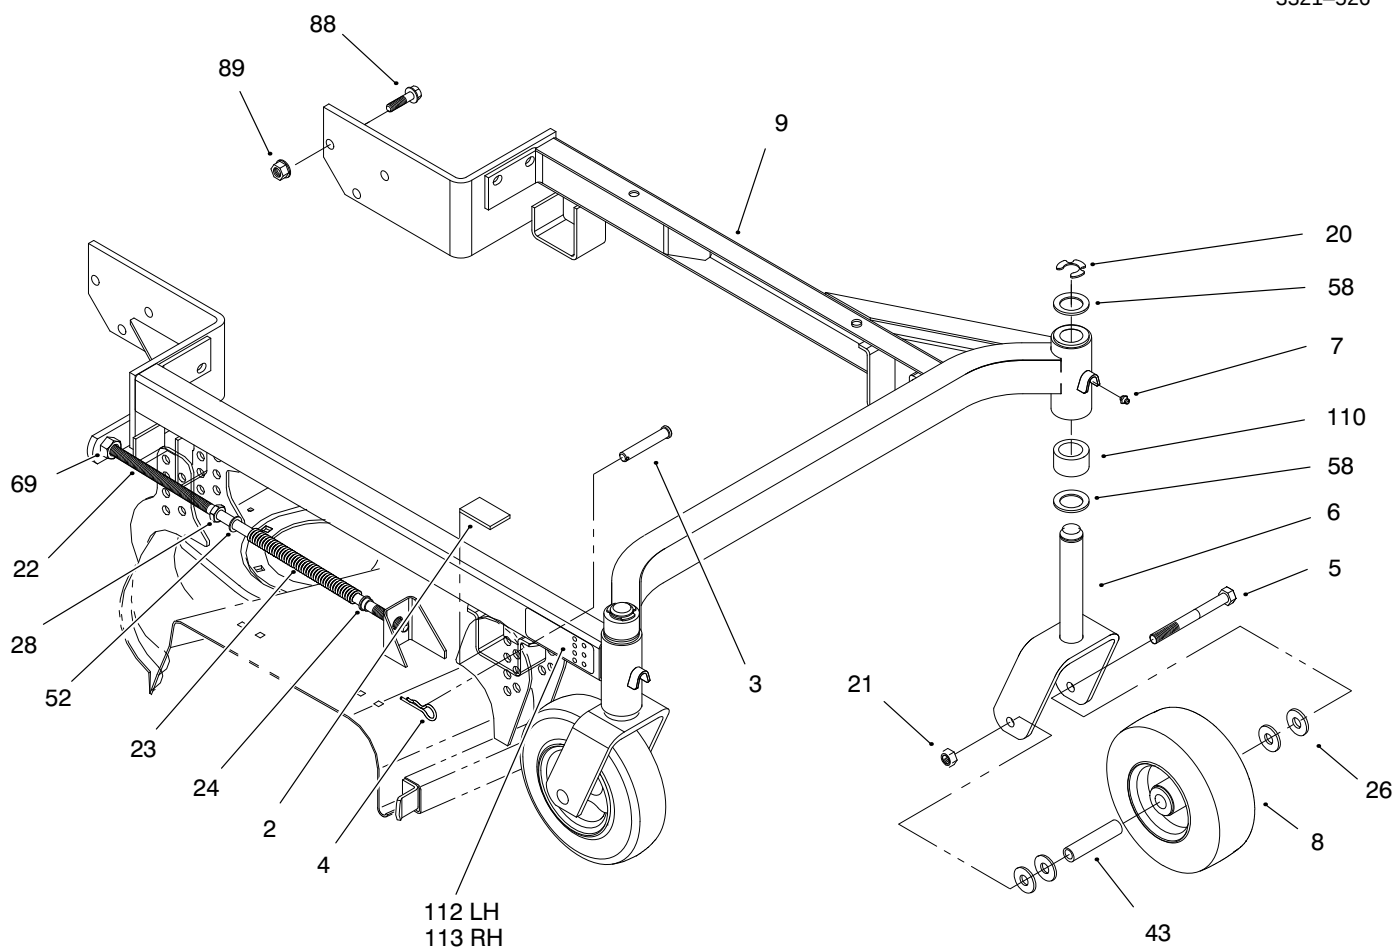 


Sheet No.: 4

Carrier Frame

Ref. No.	Part No.	Qty.	Description
2	74-0350	4	Cushion-Rubber
3	283-55	4	Pin-Clevis
4	3290-355	4	Pin-Hair
5	325-19	2	Screw-HH
6	98-2857	2	Castor Fork ASM
7	302-5	2	Fitting-Grease
8	98-2859	2	Wheel & Tire Asm
8:3	62-5580	4	Bearing-Outside
8:4	62-5570	2	Bearing-Roller
8:6	302-11	2	Fitting-Grease
9	94-4185	1	Frame-Carrier
20	32151-91	2	Ring-Retaining
21	32153-5	2	Nut-Lock
22	74-0310	2	Shaft-Adjusting
23	74-0290	2	Spring-Compression
24	256-156	2	Bushing-Flange
26	3256-6	8	Washer-Flat
28	3218-5	4	Nut-Jam
43	68-8980	2	Bushing-Spanner
52	41-8440	2	Spacer-Hardened
58	3-6781	8	Washer-Thrust
69	3296-45	2	Nut
110	93-1167	2	Spacer-Castor
112	85-7450	1	Decal-HOC
113	85-7460	1	Decal-HOC

Ref. No.	Part No.	Qty.	Description

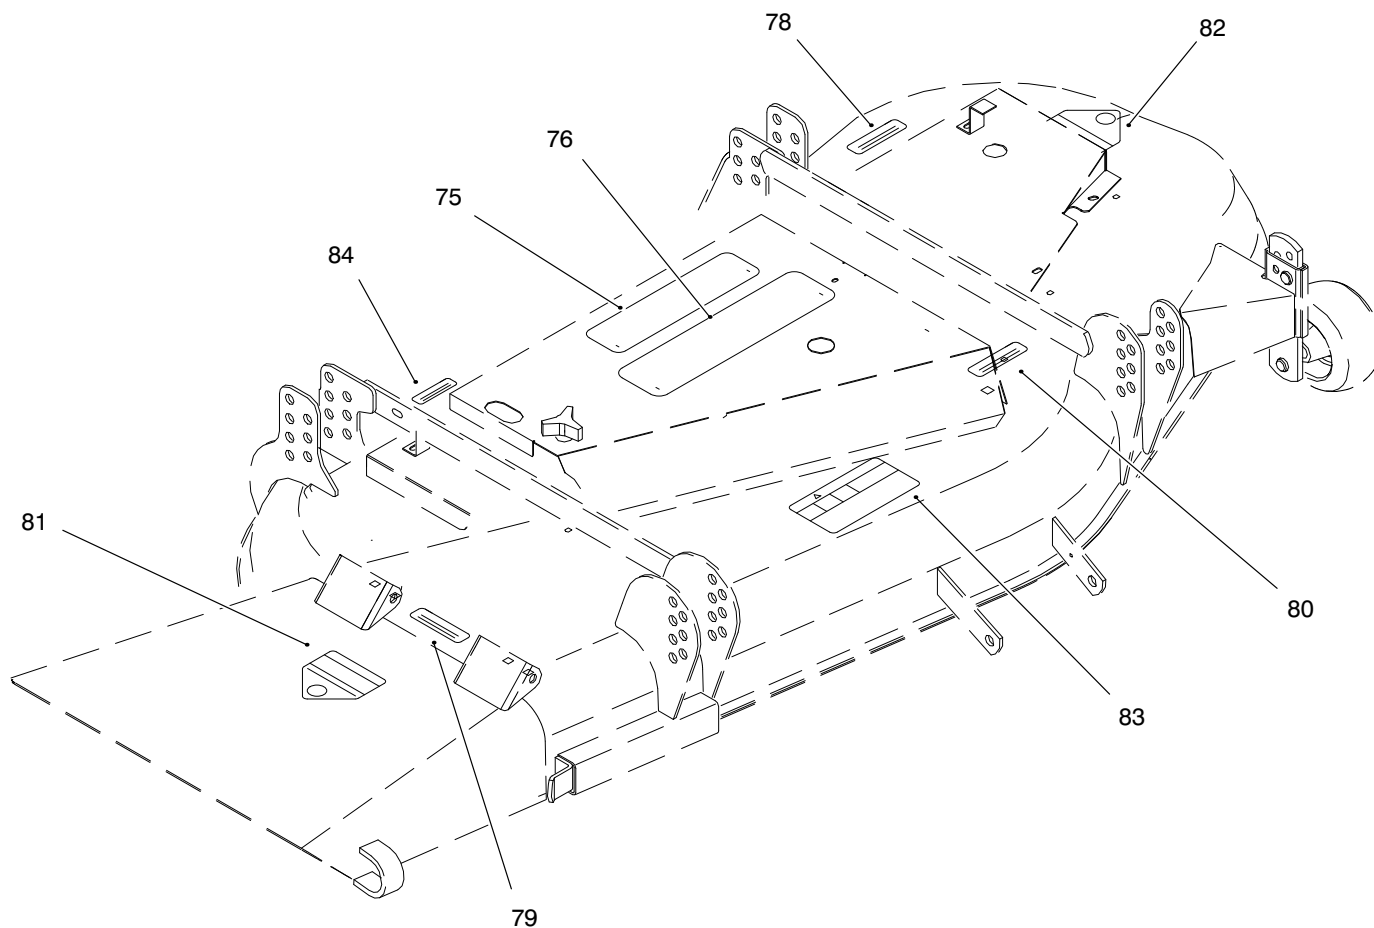 

Sheet No.: 5

Decals

Ref. No.	Part No.	Qty.	Description
75	74-2080	1	Decal-Proline
76	98-5953	1	Decal-52"
78	68-8340	1	Decal-Torque
79	66-6380	1	Decal-Danger
80	67-5360	1	Decal-Danger
81	93-1122	1	Decal-Danger
82	43-8480	1	Decal-Danger
83	66-1340	1	Decal-Discharge
84	88-1270	1	Decal-Safety STD

Ref. No.	Part No.	Qty.	Description

Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
-----	3	8:2	2	Rim Assembly
3-6781	3	58	8	Washer-Thrust
7-0081	1	47	1	Washer-Special
PI30152	5	98	1	Packaging Instructions
27-0870-03	1	31	2	Spindle Hsg ASM
27-0990	1	67	3	Blade
27-1160	2	39	1	Belt-Deck Drive
29-4820	1	12	2	Roller
29-5590-03	1	55	2	Fincket-Pivot
36-1740	1	45	2	Roller-Deck
40-0340	1	46	2	Shaft-Roller
40-6200-01	1	53	1	Deflector-Grass
40-6230	1	54	2	Spring-Torsion
40-6400	1	11	1	Shaft-Roller
41-8440	3	52	2	Spacer-Hardened
43-8480	4	82	1	Decal-Danger
44-2200	1	65	3	Bolt-Blade
46-8560	2	27	7	Screw-HHF
51-3640	1	18	1	Sleeve-Pivot
51-3650	1	37	1	Spring-Extension
51-3890	2	50	1	Wa-Cover
51-3910	2	25	1	Coveer-LH
51-3960	4	76	1	Decal-52"
52-4780	1	41	2	Rod-Belt
54-7781	1	17	1	ASM-Housing
55-7620	1	85	1	Guide-Belt
55-7640-03	1	29	1	Idler Arm ASM
55-7650	1	33	1	Plate-Spring
55-7660	2	38	1	"v" Belt-Drive
57-0690	1	10	1	Pin-Cotter
62-5570	3	8:4	2	Bearing-Roller
62-5580	3	8:3	4	Bearing-Outside
62-6520	2	71	2	Knob
65-5940	1	30	1	Pulley-Idler
65-5950	1	48	1	Bushing-Pulley
66-1340	4	83	1	Decal-Discharge
66-6380	4	79	1	Decal-Danger
67-5360	4	80	1	Decal-Danger
68-2350	2	108	1	Plate-Gage Wheel
68-2730	2	106	1	Wheel-Gage
68-8340	4	78	1	Decal-Torque
68-8360	3	77	1	Decal-HOC LH
68-8980	3	43	2	Bushing-Spanner
72-9361	1	70	3	Anti-Scalp Cup
74-0290	3	23	2	Spring-Compression
74-0310	3	22	2	Shaft-Adjusting
74-0350	3	2	4	Cushion-Rubber
74-0940	3	74	1	Decal-HOC RH
74-2080	4	75	1	Decal-Proline
82-5410	2	13	1	Cover-Center
85-7450	3	112	1	Decal-HOC
85-7460	3	113	1	Decal-HOC
88-1270	4	84	1	Decal-Safety STD
93-1122	4	81	1	Decal-Danger
93-1167	3	110	2	Spacer-Castor
94-4185	3	9	1	Frame-Carrier
94-4186	1	1	1	Deck ASM
98-2857	3	6	2	Castor Fork ASM
98-2877	3	8:1	2	Tire-Tubless
98-2888	5	105	1	Specifications-Engr
232-27	3	8:5	2	Valve Stem
256-156	3	24	2	Bushing-Flange

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
283–2	2	109	1	Pin–Clevis
283–55	3	3	4	Pin–Clevis
302–5	3	7	2	Fitting–Grease
302–11	3	8:6	2	Fitting–Grease
323–11	1	19	1	Screw
325–19	3	5	2	Screw–HH
3211–8	1	34	1	Screw–HH
3211–15	1	56	2	Screw–HH
3218–5	3	28	4	Nut–Jam
3230–18	1	62	4	Screw–CARR
3231–22	1	14	20	Bolt–CARR
3234–6	5	88	6	Screw–HF
3253–27	1	66	3	Washer–Lock
3256–6	3	26	8	Washer–Flat
3256–22	2	36	1	Washer–Flat
3256–24	1	15	4	Washer–Flat
3256–24	2	15	2	Washer–Flat
3256–24	2	32	1	Washer–Flat
3256–24	5	95	A/R	Washer–Flat
3272–11	1	42	3	Pin–Cotter
3290–355	3	4	4	Pin–Hair
3290–467	2	107	1	Pin–Cotter
3296–5	1	35	1	Nut–Lock
3296–5	1	57	2	Nut–Lock
3296–39	2	105	1	Nut–Lock
3296–45	3	69	2	Nut
32128–21	1	16	21	Nut–HF
32128–23	5	89	6	Nut–Lock
32151–72	2	72	2	Ring–Retaining
32151–91	3	20	2	Ring–Retaining
32152–1	1	64	4	Nut–Lock
32153–5	3	21	2	Nut–Lock
3317–808	5	100	1	Catalog–Parts
3318–175	5	99	1	Manual–Operators
3331–615	5	103	1	Bag–Poly

[illegible]

[illegible]