

LAWN-BOY®

Commercial Walk-Behind Mower

Model No. 11003 – 8900001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Housing Assembly	1	Short Block Assembly	7
Rear Axle Assembly	2	Gear Case Assembly	8
Engine & Blade Assembly	3	Carburetor Assembly	9
Handle Assembly	4	Lawn–Boy Part Number Index	10–13
Engine Assembly	5		
Engine Assembly (cont.)	6	Note:	

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
Side Bagging Kit	Model No. 89814	Leaf Bag	Model No. 89804
Rear Bagging Kit	Model No. 89800	Mulch Plate	Model No. 89864

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HWHTF	hex washer head thread forming
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	PH	pan head
FH	flat head	PPH	Phillips pan head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HFW	hex flange washer	SFH	slotted fillister head
HH	hex head	SH	square head
HHF	hex head flange	SHWH	slotted hex washer head
HHST	hex head self tapping	SPH	slotted pan head
HJ	hex jam	STD	standard
HOC	height-of-cut	TAP	self tapping
HS	hex socket	TH	truss head
HSBH	hex socket button head	TTH	Torx truss head
HSFH	hex socket flat head	WH	wing head
HSH	hex socket head		
HWH	hex washer head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form $X:Y$. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form $X (Y)$. X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

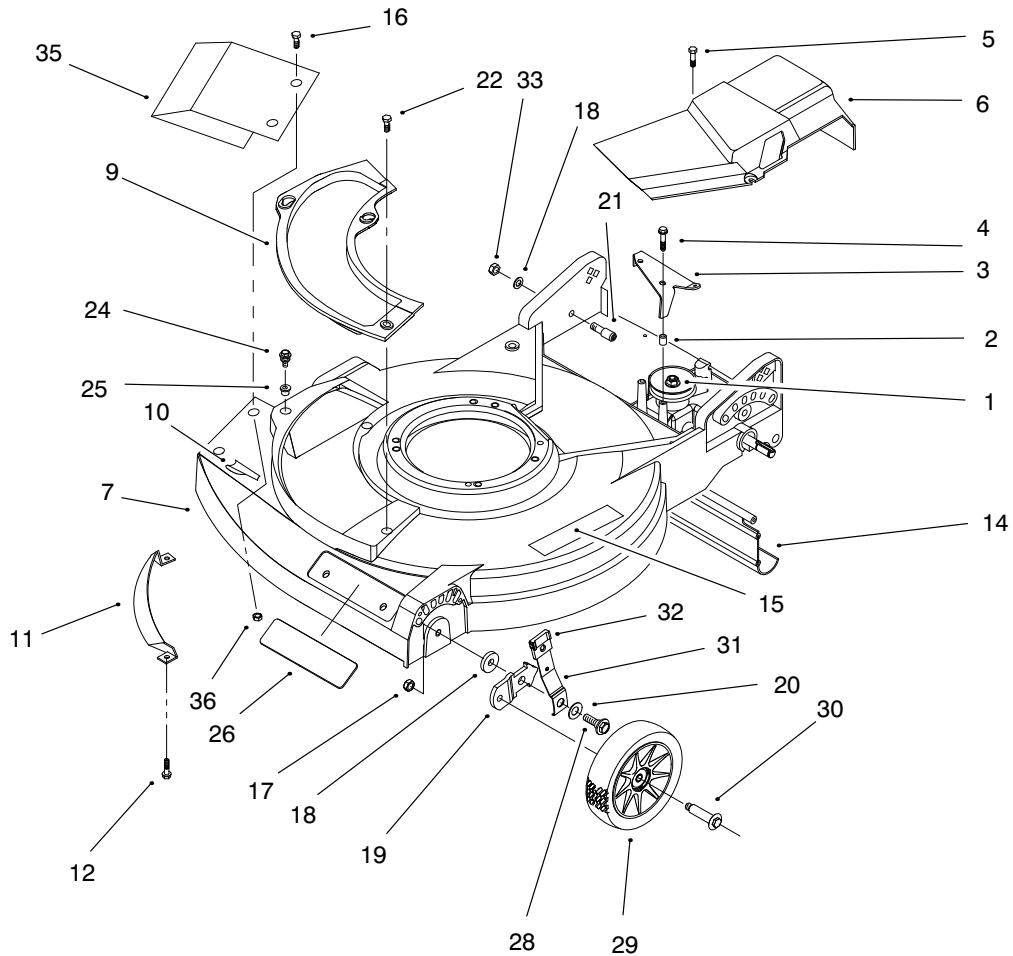


Sheet No.:2

Housing Assembly

Ref. No.	Part No.	Qty.	Description
1	92-7869	1	ASM-Gear Case
2	46-5551	2	Bushing-Spacer
3	92-7699	1	Bracket-Actuator
4	92-7748	2	Screw
5	12-5450	2	Screw-Thread Forming
6	98-4493	1	Cover-Drive
7	99-5204	1	Housing-21" Sp
9	95-7052	1	Plate-Cover
10	93-7009	1	Decal-Deflector Danger
11	608175	1	Toe Bar 21
12	46-6811	2	Screw-HWH
14	92-7736	1	Shield-Trailing
15	93-4105	1	Decal-Danger
16	32105-15	2	Screw-HH
17	3296-39	2	Nut-Lock
18	608834	2	Washer
19	614637	2	Bracket-Wheel Height Adj
20	3290-413	2	Washer-Spring
21	92-9673	2	Bolt-Shoulder
22	49-2040	1	Screw-HH
24	614677	2	Screw-Sems
25	94-1610	3	Grommet-Plastic
26	99-1503	1	Decal-Deck 550cs


Ref. No.	Part No.	Qty.	Description
28	92-4856	2	Bolt-Shoulder
29	684159	2	Wheel & Tire
30	603567	2	Bolt-Wheel
31	92-1006	2	ASM-Spring Arm
32	92-1008	4	Knob-Height Adjust
33	610358	2	Nut-Lock
35	93-7415	1	Guard-Plate
36	3296-42	2	Nut-Lock

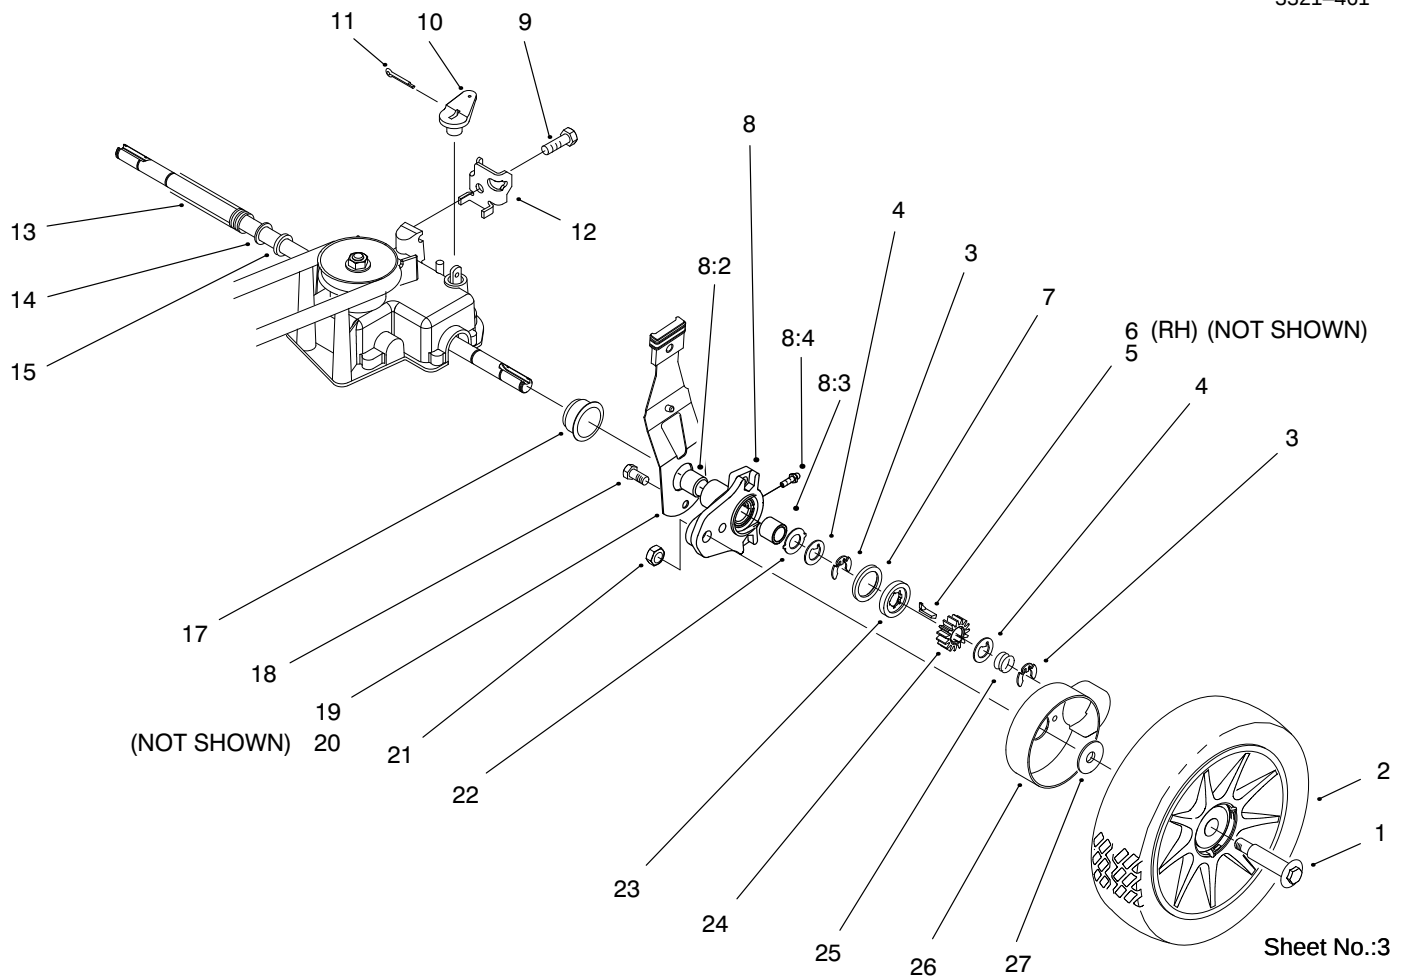

Rear Axle Assembly

Ref. No.	Part No.	Qty.	Description
1	92-1057	2	Bolt-Shoulder
2	95-1714	2	ASM-Whl
3	65-2720	4	Ring-Retaining
4	65-4740	4	Washer-Thrust
5	66-6050	1	Key-Rocking LH
6	66-6040	1	Key-Locking RH
7	65-4710	2	Ring-Friction
8	92-7746	2	ASM-Hgt Adj Arm
8:2	70-9760	2	Bushing
8:3	47-2900	2	Bushing
8:4	302-56	2	Fitting-Grease
9	32144-70	1	Screw-TAP
10	60-8821	1	Lever-Shift
11	3272-10	1	Pin-Cotter
12	82-8780	1	Retainer-Cable
13	24-7920	1	Cover-Drive Shaft
14	303259	1	Washer
15	605255	1	Washer-Flat
17	92-6535	2	Cap-End
18	32144-85	2	Screw-HH
19	92-6540	1	ASM-Spring Arm
20	92-6539	1	ASM-Spring Arm
21	610358	2	Nut-Lock
22	65-4730	2	Washer-Thrust
23	65-4760	2	Washer
24	65-4750	2	Gear-Pinion


Ref. No.	Part No.	Qty.	Description
25	65-4720	2	Spring-Compression
26	94-1609	2	Cover-Wheel
27	614426	2	Washer-Stepped

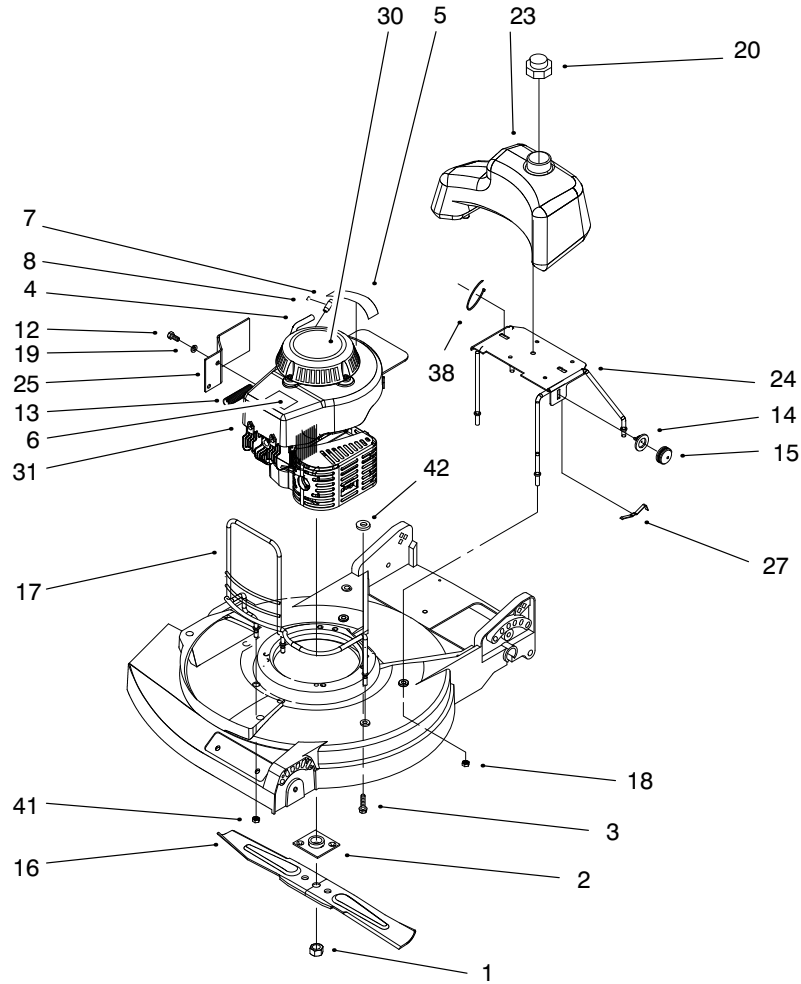

Sheet No.:4

Engine & Blade Assembly


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	603164	1	Nut-Blade	31	99-2910	1	Engine ASM
2	677525	1	ASM-Plate & Collar	38	614249	1	Tie Strap
3	98-4480	3	Screw-Sems	41	3296-39	2	Locknut
4	612782	1	Gas Line	42	68-5920	3	Washer
5	99-1520	1	Decal-Fuel Mix				
6	99-1517	1	Decal-Lawn Boy				
7	47-2480	1	Rope Stop				
8	3290-443	1	Staple				
12	322-3	2	Screw-HH				
13	93-4306	1	Spring-Compression				
14	44-2750	1	Body-Primer				
15	66-7460	1	Bulb-Primer				
16	612543	1	Blade-21" Whirl				
17	98-1598	1	Guard-Engine				
18	608311	4	Locknut				
19	3253-4	2	Washer-Lock				
20	93-3660	1	ASM-Fuel/Oil Cap				
21	306531	1	Nut-Throttle Cable				
22	314576	1	Screw-Throttle Cable				
23	98-4497	1	Tank-Fuel				
24	98-4459	1	Tank Bkt ASM				
25	99-1515	1	Guard-Brake				
27	609830	2	Spring				
28	612428	4	Screw-Sems				
29	32144-53	4	Screw-Tf Acorn Hd				
30	92-9551	1	Decal - Recoil				

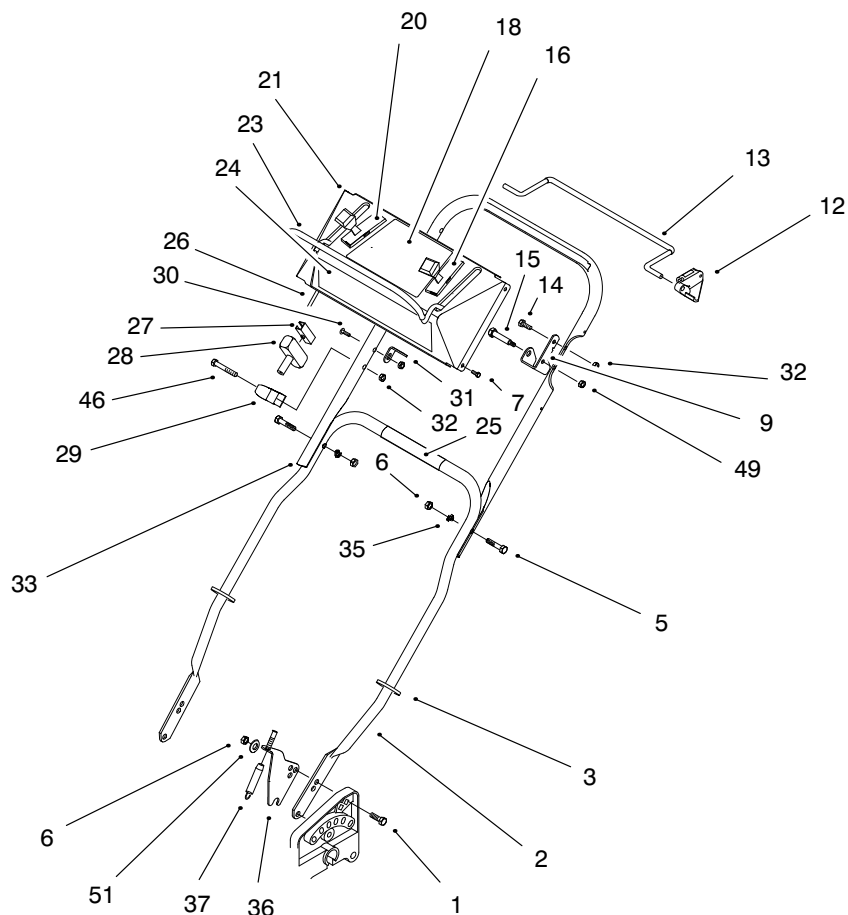

Sheet No.:5

Handle Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	3230-29	2	Bolt-CARR	35	609739	2	Washer
2	92-6537	1	Handle Section-Lower	36	92-7899	1	Bracket-Traction
3	614249	4	Tie Strap				Cable
5	322-9	2	Screw-HH	37	92-6518	1	Cable
6	3296-29	4	Nut-Lock	46	321-51	1	Bolt-Hex
7	92-9665	4	Screw-Phil	49	3296-56	1	Nut-Lock
9	92-1094	1	Bail Stop Bracket	51	3256-23	2	Washer-Flat
12	92-5412	1	Stop-Pivot				
13	92-1001	1	Bail-Sp Control				
14	321-4	1	Screw-HH				
15	613050	1	Bolt				
16	95-7410	1	Throttle Cable				
18	98-8349	1	Decal-Control Panel				
20	92-8926	1	Control-Speed				
21	99-5205	1	Panel-Control				
23	92-1093	1	Engine Control Bail				
24	93-0297	1	Decal-Console				
25	93-7266	1	Decal-Operation				
26	95-7438	1	Cable-Control				
27	612824	1	Clip-Rope				
28	612825	1	Handle-Starter				
29	93-7383	1	Guide-Rope				
30	92-2268	1	Handle Screw				
31	92-2928	1	Bracket-Cable Anchor				
32	3296-73	3	Nut-Lock				
33	92-1092	1	Handle-Upper				

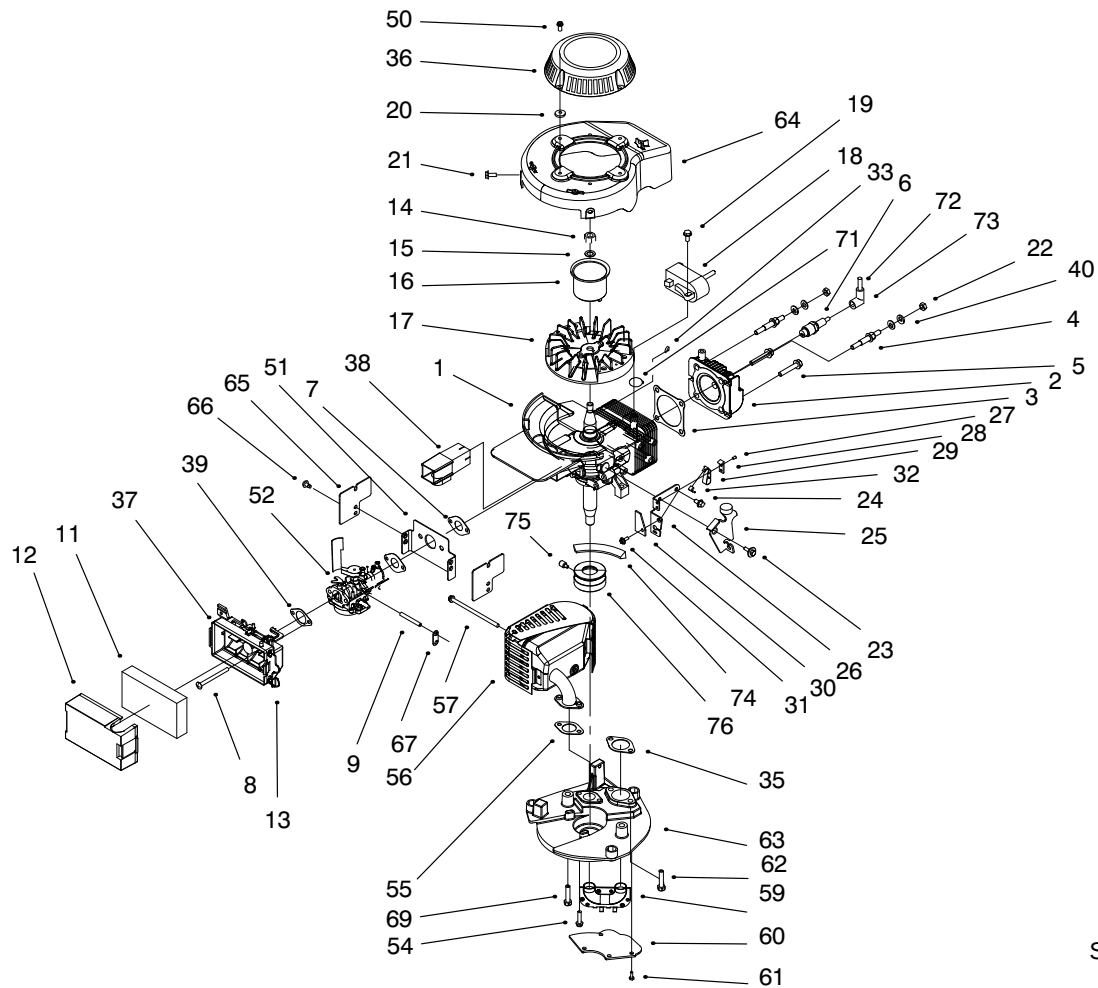


Sheet No.:100

Engine Assembly

Ref. No.	Part No.	Qty.	Description
1	95-7636	1	Short Block ASM
2	94-5776	1	Head
3	94-5778	1	Gasket-Head
4	94-5779	2	Stud
5	94-5780	2	Bolt
6	81-0181	1	Spark Plug
7	94-5795	2	Intake Gasket
8	612507	2	Screw
9	44-3170	1	Primer Hose
11	95-5574	1	Element-Air Filter
12	95-5577	1	Cover-Air Filter
13	610383	1	Retainer-Filter
14	130743	1	Nut
15	316959	1	Washer-Lock
16	612949	1	Hub-Starter
17	95-1866	1	Flywheel Machined
18	92-1152	1	Ignition ASM
19	613208	2	Screw-HWH
20	98-4478	4	Spacer
21	700094	2	Screw
22	146501	2	Nut-Lock
23	95-1870	1	Shoulder Screw Brake
24	95-1871	1	Screw (Brake)
25	93-4312	1	ASM-Brake Plate
26	84-7820	1	Plate-Mount Brake

Ref. No.	Part No.	Qty.	Description
27	3290-459	2	Rivet-Self Expand
28	92-2925	1	Plas
29	60-9010	1	Strap-Insulation
30	53-4690	1	Strap-Ground
31	12-5450	1	Stop-Ground Strap
32	98-7037	1	Forming
33	607199	1	Brake Switch Lead
35	95-1778	1	Wire
36	684566	1	Key
37	95-5588	1	Gasket-Exhaust
38	95-5578	1	ASM-Starter
39	95-7613	1	Air Filter Base ASM
40	3290-456	4	Tunnel
50	98-4484	4	Gasket-Filter Base
51	98-7015	4	Washer-Lock
52	98-7042	4	Screw-Sems
54	613208	1	Heat Shield
55	98-1392	1	Carburetor ASM
56	99-2904	2	Screw-HWH
57	611228	1	Gasket
59	98-1557	1	Muffler & Guard
60	98-1591	1	Bolt
61	700822	1	Transfer Tube
		1	Cover Plate
		4	Screw

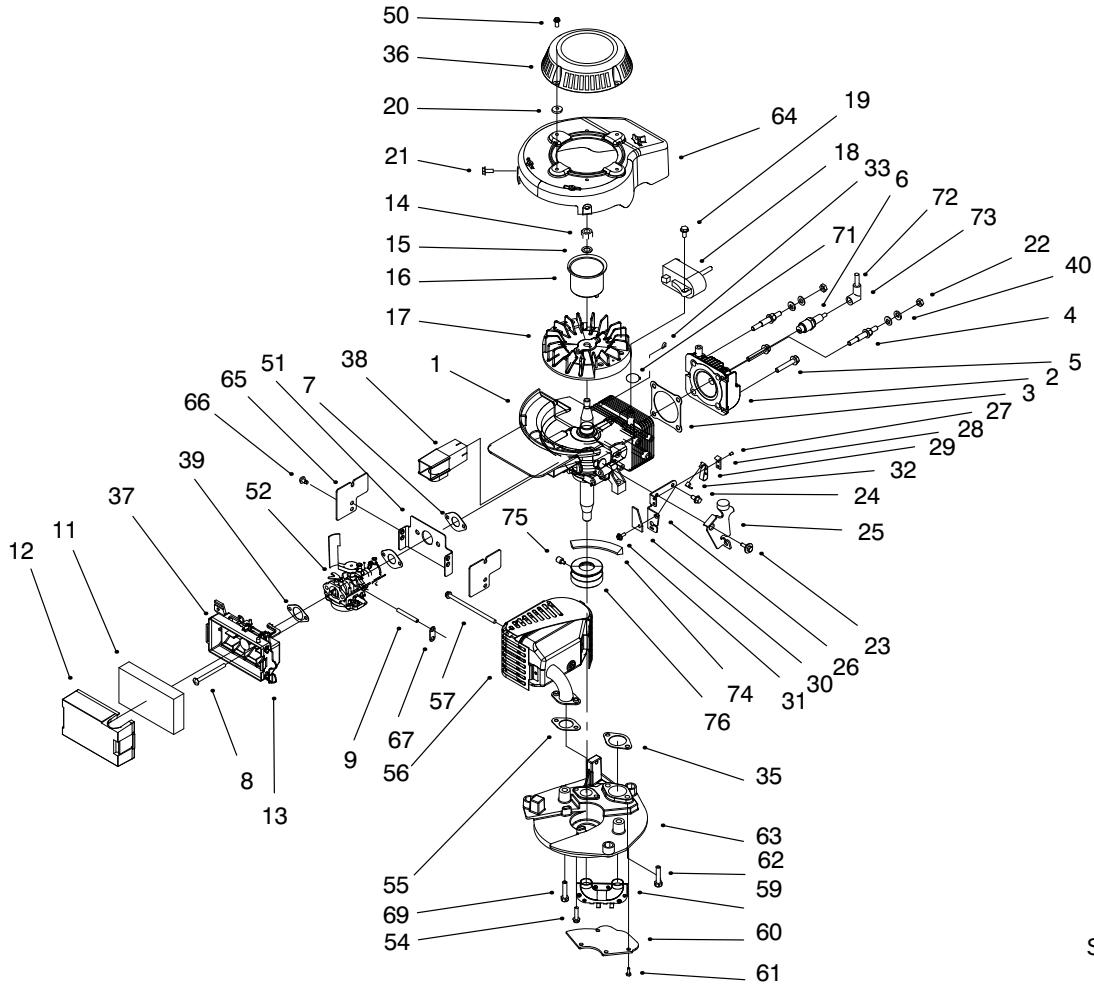

Sheet No.:100


Engine Assembly (cont.)

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
62	322-17	2	Screw-HH				
63	98-1383	1	Muffler Plate Machining				
64	98-4467	1	Shroud ASM				
65	93-4316	2	Shield-Gov Int'l				
66	99-2909	4	Screw				
67	95-7615	1	Retainer Hose				
69	613233	2	Screw-Hhd Washer				
71	317893	1	Tie Strap				
72	681678	1	Lead & Cover ASM				
73	684698	1	Cover & Terminal				
74	92-1043	1	V-Belt				
75	613227	1	Set Screw				
76	95-1878	1	Pulley				

Short Block Assembly

Ref. No.	Part No.	Qty.	Description


7

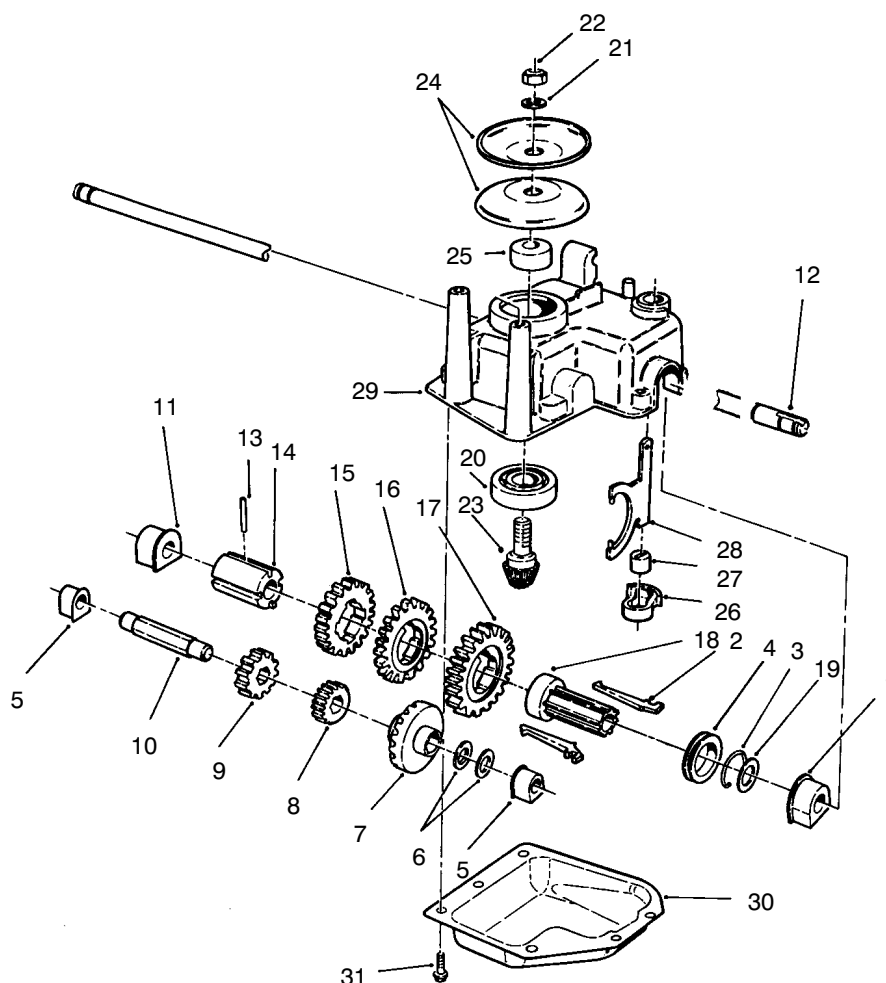

Sheet No.:300

Gear Case Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	60-8770	1	Bushing-Output Shaft	27	29-9570	1	Bushing-Yoke
2	76-0760	2	Key-Shift	28	60-8870	1	Yoke-Shift
3	65-5250	1	Clip-Spring	29	60-8710	1	Gearcase-Upper 3 Sp
4	76-0770	1	Collar-Shift	30	60-8730	1	Cover-Gearcase
5	60-8750	2	Bushing	31	49-2040	6	Screw-HH
6	36-4791	2	Washer-Thrust				
7	55-3760	1	15 T Pinion				
8	55-3780	1	Pinion 20t 2nd Gear				
9	55-3800	1	Pinion 25t 3rd Gear				
10	60-8800	1	Shaft-Intermediate				
11	60-8850	1	Bushing-Output				
12	65-4770	1	Shaft-Output				
13	3285-19	1	Pin-Spirol				
14	60-8790	1	Sleeve-Gear				
15	55-3810	1	Gear 39t 3rd Gear				
16	55-3790	1	Gear 44t 2nd Gear				
17	55-3770	1	Gear 49t 1st Gear				
18	76-0780	1	Sleeve-Shift Key				
19	36-4780	1	Washer-Thrust				
20	38-7820	1	Bearing-Ball				
21	3256-24	1	Washer-Flat				
22	3296-5	1	Nut-Lock				
23	92-5790	1	Pinion-Bevel				
24	60-8840	2	Pulley-Half				
25	92-5791	1	Spacer-Pulley				
26	60-8810	1	Retainer-Shift-Fork				

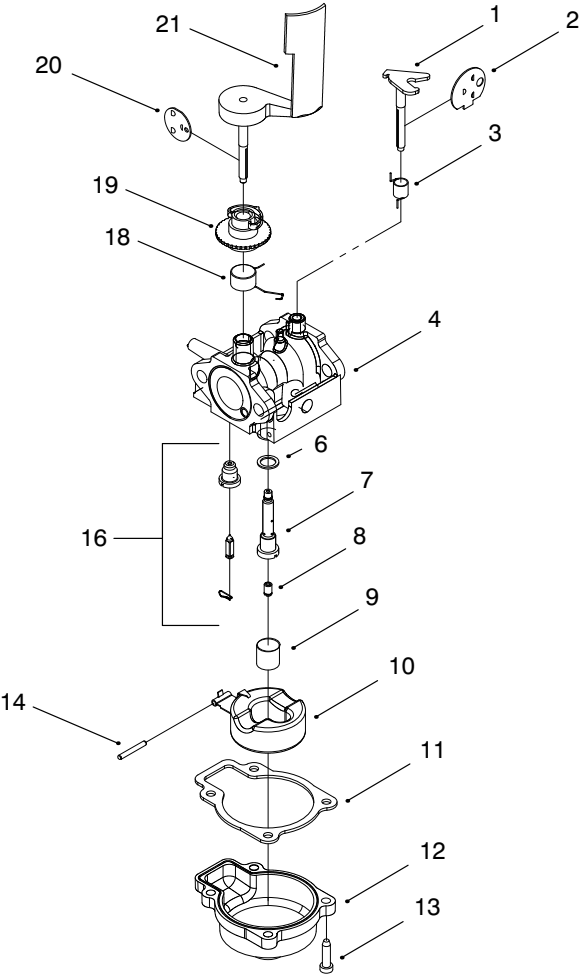

Sheet No.:400

Carburetor Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	95-5581	1	Shaft-Choke				
2	94-5788	1	Disc-Choke				
3	95-5583	1	Spring-Choke Return				
4	98-7042	1	Carb ASM w/Gaskets				
6	612383	1	Washer				
7	98-7001	1	Nozzle				
8	98-1357	1	Mainjet 77.5				
9	94-5787	1	Filter-Fuel				
10	95-1899	1	Float & Arm ASM				
11	98-1362	1	Gasket-Float Chamber				
12	92-9691	1	Float Chamber				
13	608850	4	Screw				
14	92-6389	1	Pin				
16	92-9697	1	Float Valve & Seat				
18	98-7011	1	Spring-Throttle				
19	610834	1	Collar Adjustment				
20	98-7047	1	Disc-Throttle				
21	92-6376	1	Air Vane & Shaft				

Lawn-Boy Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
130743	5	14	1	Nut
146501	5	22	2	Nut-Lock
303259	2	14	1	Washer
303712	7	16	2	Retaining Ring
306531	3	21	1	Nut-Throttle Cable
314576	3	22	1	Screw-Throttle Cable
316959	5	15	1	Washer-Lock
317893	6	71	1	Tie Strap
603164	3	1	1	Nut-Blade
603567	1	30	2	Bolt-Wheel
605255	2	15	1	Washer-Flat
607199	5	33	1	Key
608175	1	11	1	Toe Bar 21
608311	3	18	4	Locknut
608834	1	18	2	Washer
608850	9	13	4	Screw
609739	4	35	2	Washer
609790	7		A/R	Sealant
609830	3	27	2	Spring
610358	1	33	2	Nut-Lock
610358	2	21	2	Nut-Lock
610372	7		A/R	Sealant
610383	5	13	1	Retainer-Filter
610834	9	19	1	Collar Adjustment
611228	5	57	1	Bolt
611393	7	3	2	Screw
611396	7	4	1	Oil Seal
612383	9	6	1	Washer
612428	3	28	4	Screw-Sems
612507	5	8	2	Screw
612543	3	16	1	Blade-21" Whirl
612782	3	4	1	Gas Line
612824	4	27	1	Clip-Rope
612825	4	28	1	Handle-Starter
612949	5	16	1	Hub-Starter
613050	4	15	1	Bolt
613208	5	19	2	Screw-HWH
613208	5	54	2	Screw-HWH
613227	6	75	1	Set Screw
613233	6	69	2	Screw-Hhd Washer
614249	3	38	1	Tie Strap
614249	4	3	4	Tie Strap
614426	2	27	2	Washer-Stepped
614637	1	19	2	Bracket-Wheel Height Adj
614677	1	24	2	Screw-Sems
677525	3	2	1	ASM-Plate & Collar
677982	7	1	2	Liner ASM
681678	6	72	1	Lead & Cover ASM
683911	7	5	1	Needle Bearing
684159	1	29	2	Wheel & Tire
684566	5	36	1	ASM-Starter
684698	6	73	1	Cover & Terminal
700094	5	21	2	Screw
700822	5	61	4	Screw
12-5450	1	5	2	Screw-Thread Forming
12-5450	5	31	1	Screw-Thread Forming
24-7920	2	13	1	Cover-Drive Shaft
29-9570	8	27	1	Bushing-Yoke
36-4780	8	19	1	Washer-Thrust
36-4791	8	6	2	Washer-Thrust
38-7820	8	20	1	Bearing-Ball
44-2750	3	14	1	Body-Primer
44-3170	5	9	1	Primer Hose

*Not Illustrated

Lawn–Boy Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
46–5551	1	2	2	Bushing–Spacer
46–6811	1	12	2	Screw–HWH
47–2480	3	7	1	Rope Stop
47–2900	2	8:3	2	Bushing
49–2040	1	22	1	Screw–HH
49–2040	8	31	6	Screw–HH
53–4690	5	30	1	Stop–Ground Strap
55–3760	8	7	1	15 T Pinion
55–3770	8	17	1	Gear 49t 1st Gear
55–3780	8	8	1	Pinion 20t 2nd Gear
55–3790	8	16	1	Gear 44t 2nd Gear
55–3800	8	9	1	Pinion 25t 3rd Gear
55–3810	8	15	1	Gear 39t 3rd Gear
60–8710	8	29	1	Gearcase–Upper 3 Sp
60–8730	8	30	1	Cover–Gearcase
60–8750	8	5	2	Bushing
60–8770	8	1	1	Bushing–Output Shaft
60–8790	8	14	1	Sleeve–Gear
60–8800	8	10	1	Shaft–Intermediate
60–8810	8	26	1	Retainer–Shift–Fork
60–8821	2	10	1	Lever–Shift
60–8840	8	24	2	Pulley–Half
60–8850	8	11	1	Bushing–Output
60–8870	8	28	1	Yoke–Shift
60–9010	5	29	1	Strap–Ground
65–2720	2	3	4	Ring–Retaining
65–4710	2	7	2	Ring–Friction
65–4720	2	25	2	Spring–Compression
65–4730	2	22	2	Washer–Thrust
65–4740	2	4	4	Washer–Thrust
65–4750	2	24	2	Gear–Pinion
65–4760	2	23	2	Washer
65–4770	8	12	1	Shaft–Output
65–5250	8	3	1	Clip–Spring
66–6040	2	6	1	Key–Locking RH
66–6050	2	5	1	Key–Rocking LH
66–7460	3	15	1	Bulb–Primer
68–5920	3	42	3	Washer
70–9760	2	8:2	2	Bushing
76–0760	8	2	2	Key–Shift
76–0770	8	4	1	Collar–Shift
76–0780	8	18	1	Sleeve–Shift Key
81–0181	5	6	1	Spark Plug
82–8780	2	12	1	Retainer–Cable
84–7820	5	26	1	Plate–Mount Brake
92–1001	4	13	1	Bail–Sp Control
92–1006	1	31	2	ASM–Spring Arm
92–1008	1	32	4	Knob–Height Adjust
92–1043	6	74	1	V–Belt
92–1057	2	1	2	Bolt–Shoulder
92–1092	4	33	1	Handle–Upper
92–1093	4	23	1	Engine Control Bail
92–1094	4	9	1	Bail Stop Bracket
92–1152	5	18	1	Ignition ASM
92–2268	4	30	1	Handle Screw
92–2925	5	28	1	Strap–Insulation
92–2928	4	31	1	Bracket–Cable Anchor
92–4856	1	28	2	Bolt–Shoulder
92–5412	4	12	1	Stop–Pivot
92–5790	8	23	1	Pinion–Bevel
92–5791	8	25	1	Spacer–Pulley
92–6376	9	21	1	Air Vane & Shaft
92–6389	9	14	1	Pin

*Not Illustrated

Lawn-Boy Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
92-6518	4	37	1	Cable
92-6535	2	17	2	Cap-End
92-6537	4	2	1	Handle Section-Lower
92-6539	2	20	1	ASM-Spring Arm
92-6540	2	19	1	ASM-Spring Arm
92-7699	1	3	1	Bracket-Actuator
92-7736	1	14	1	Shield-Trailing
92-7746	2	8	2	ASM-Hgt Adj Arm
92-7748	1	4	2	Screw
92-7869	1	1	1	ASM-Gear Case
92-7899	4	36	1	Bracket-Traction Cable
92-8926	4	20	1	Control-Speed
92-9551	3	30	1	Decal - Recoil
92-9665	4	7	4	Screw-Phil
92-9673	1	21	2	Bolt-Shoulder
92-9691	9	12	1	Float Chamber
92-9697	9	16	1	Float Valve & Seat
93-0297	4	24	1	Decal-Console
93-3660	3	20	1	ASM-Fuel/Oil Cap
93-4105	1	15	1	Decal-Danger
93-4306	3	13	1	Spring-Compression
93-4312	5	25	1	ASM-Brake Plate
93-4316	6	65	2	Shield-Gov Int'l
93-7009	1	10	1	Decal-Deflector Danger
93-7266	4	25	1	Decal-Operation
93-7383	4	29	1	Guide-Rope
93-7415	1	35	1	Guard-Plate
94-1609	2	26	2	Cover-Wheel
94-1610	1	25	3	Grommet-Plastic
94-5764	7	9	1	Oil Seal
94-5765	7	10	1	Ring Retaining
94-5776	5	2	1	Head
94-5778	5	3	1	Gasket-Head
94-5779	5	4	2	Stud
94-5780	5	5	2	Bolt
94-5781	7	14	6	Screw-HWH
94-5787	9	9	1	Filter-Fuel
94-5788	9	2	1	Disc-Choke
94-5795	5	7	2	Intake Gasket
95-1714	2	2	2	ASM-Whl
95-1778	5	35	1	Gasket-Exhaust
95-1866	5	17	1	Flywheel Machined Recoil
95-1870	5	23	1	Shoulder Screw Brake
95-1871	5	24	1	Screw (Brake)
95-1878	6	76	1	Pulley
95-1899	9	10	1	Float & Arm ASM
95-5574	5	11	1	Element-Air Filter
95-5577	5	12	1	Cover-Air Filter
95-5578	5	38	1	Tunnel
95-5581	9	1	1	Shaft-Choke
95-5583	9	3	1	Spring-Choke Return
95-5588	5	37	1	Air Filter Base ASM
95-7052	1	9	1	Plate-Cover
95-7410	4	16	1	Throttle Cable
95-7438	4	26	1	Cable-Control
95-7613	5	39	1	Gasket-Filter Base
95-7615	6	67	1	Retainer Hose
95-7626	7	12	1	Ring Set
95-7628	7	11	1	Piston & Conn Rod ASM
95-7629	7	17	1	Connecting Rod
95-7631	7	18	1	Cylinder & Ccase ASM
95-7636	5	1	1	Short Block ASM
98-1357	9	8	1	Mainjet 77.5

*Not Illustrated

Lawn–Boy Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
98–1362	9	11	1	Gasket–Float Chamber
98–1383	6	63	1	Muffler Plate Machining
98–1392	5	55	1	Gasket
98–1557	5	59	1	Transfer Tube
98–1591	5	60	1	Cover Plate
98–1598	3	17	1	Guard–Engine
98–4459	3	24	1	Tank Bkt ASM
98–4467	6	64	1	Shroud ASM
98–4478	5	20	4	Spacer
98–4480	3	3	3	Screw–Sems
98–4484	5	50	4	Screw–Sems
98–4493	1	6	1	Cover–Drive
98–4497	3	23	1	Tank–Fuel
98–7001	9	7	1	Nozzle
98–7011	9	18	1	Spring–Throttle
98–7015	5	51	1	Heat Shield
98–7037	5	32	1	Brake Switch Lead Wire
98–7042	9	4	1	Carb ASM w/Gaskets
98–7042	5	52	1	Carburetor ASM
98–7046	7	15	1	Ring–Retaining
98–7047	9	20	1	Disc–Throttle
98–8349	4	18	1	Decal–Control Panel
99–1503	1	26	1	Decal–Deck 550cs
99–1515	3	25	1	Guard–Brake
99–1517	3	6	1	Decal–Lawn Boy
99–1520	3	5	1	Decal–Fuel Mix
99–2901	7	7	1	Crankshaft & Bearing ASM
99–2904	5	56	1	Muffler & Guard
99–2909	6	66	4	Screw
99–2910	3	31	1	Engine ASM
99–5204	1	7	1	H0using–21” Sp
99–5205	4	21	1	Panel–Control
302–56	2	8:4	2	Fitting–Grease
321–4	4	14	1	Screw–HH
321–51	4	46	1	Bolt–Hex
322–3	3	12	2	Screw–HH
322–9	4	5	2	Screw–HH
322–17	6	62	2	Screw–HH
3230–29	4	1	2	Bolt–CARR
3253–4	3	19	2	Washer–Lock
3256–23	4	51	2	Washer–Flat
3256–24	8	21	1	Washer–Flat
3272–10	2	11	1	Pin–Cotter
3285–19	8	13	1	Pin–Spirol
3290–413	1	20	2	Washer–Spring
3290–443	3	8	1	Staple
3290–456	5	40	4	Washer–Lock
3290–459	5	27	2	Rivet–Self Expand Plas
3296–5	8	22	1	Nut–Lock
3296–29	4	6	4	Nut–Lock
3296–39	3	41	2	Locknut
3296–39	1	17	2	Nut–Lock
3296–42	1	36	2	Nut–Lock
3296–56	4	49	1	Nut–Lock
3296–73	4	32	3	Nut–Lock
32105–15	1	16	2	Screw–HH
32144–53	3	29	4	Screw–Tf Acorn Hd
32144–70	2	9	1	Screw–TAP
32144–85	2	18	2	Screw–HH

*Not Illustrated