

LAWN-BOY®

Commercial Walk-Behind Mower

Model No. 22261 – 8900001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Housing Assembly	1	Short Block Assembly	7
Rear Axle Assembly	2	Gear Case Assembly	8
Engine & Blade Assembly	3	Carburetor Assembly	9
Handle Assembly	4	Lawn–Boy Part Number Index	10–13
Engine Assembly	5		
Engine Assembly (cont.)	6	Note:	

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
Side Bagging Kit	Model No. 89814	Rear Bagging Kit	Model No. 89800
Leaf Bag	Model No. 89804	Mulching Plate	Model No. 89864
Leaf Shredder Kit	Model No. 89860	Leaf Bag w/Chute	Model No. 89811

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HWHTF	hex washer head thread forming
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	PH	pan head
FH	flat head	PPH	Phillips pan head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HFW	hex flange washer	SFH	slotted fillister head
HH	hex head	SH	square head
HHF	hex head flange	SHWH	slotted hex washer head
HHST	hex head self tapping	SPH	slotted pan head
HJ	hex jam	STD	standard
HOC	height-of-cut	TAP	self tapping
HS	hex socket	TH	truss head
HSBH	hex socket button head	TTH	Torx truss head
HSFH	hex socket flat head	WH	wing head
HSR	hex socket head		
HWH	hex washer head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form $X:Y$. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form $X (Y)$. X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

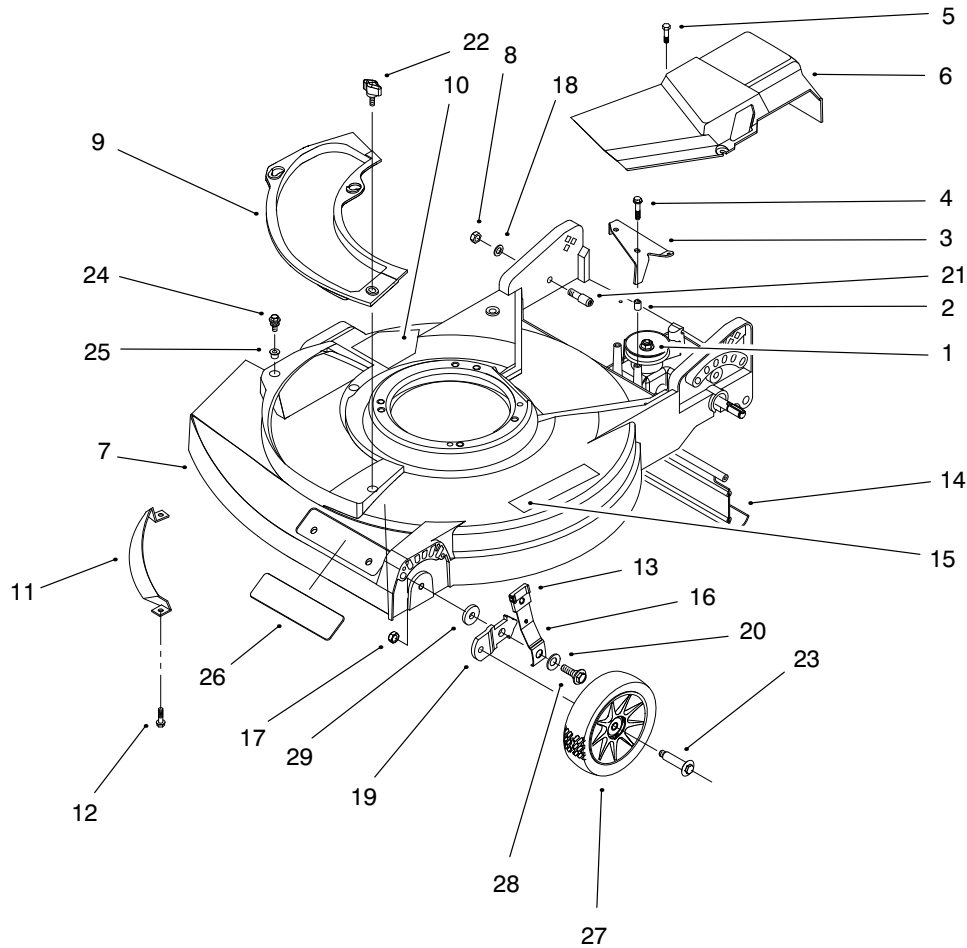


Sheet No.:2

Housing Assembly

Ref. No.	Part No.	Qty.	Description
1	92-7869	1	ASM-Gear Case
2	46-5551	2	Bushing-Spacer
3	92-7699	1	Bracket-Actuator
4	92-7748	2	Screw
5	12-5450	2	Screw-Thread Forming
6	98-4493	1	Cover-Drive
7	99-5202	1	Housing-21" Sp
8	610358	2	Nut-Lock
9	95-7052	1	Plate-Cover
10	39-5770	1	Decal-Danger
11	608175	1	Toe Bar 21
12	46-6811	2	Screw-HWH
13	92-1008	4	Knob-Height Adjust
14	92-7736	1	Shield-Trailing
15	93-7250	1	Decal-Warning
16	92-1006	2	ASM-Spring Arm
17	3296-39	2	Nut-Lock
18	40-1940	2	Washer
19	614637	2	Bracket-Wheel Height Adj
20	3290-413	2	Washer-Spring
21	92-9673	2	Bolt-Shoulder
22	98-8332	1	Knob-Cover Plate
23	603567	2	Bolt-Wheel
24	614677	2	Screw-Sems


Ref. No.	Part No.	Qty.	Description
25	94-1610	3	Grommet-Plastic
26	94-6303	1	Decal-Deck
27	684159	2	Wheel & Tire
28	92-4856	2	Bolt-Shoulder
29	608834	2	Washer

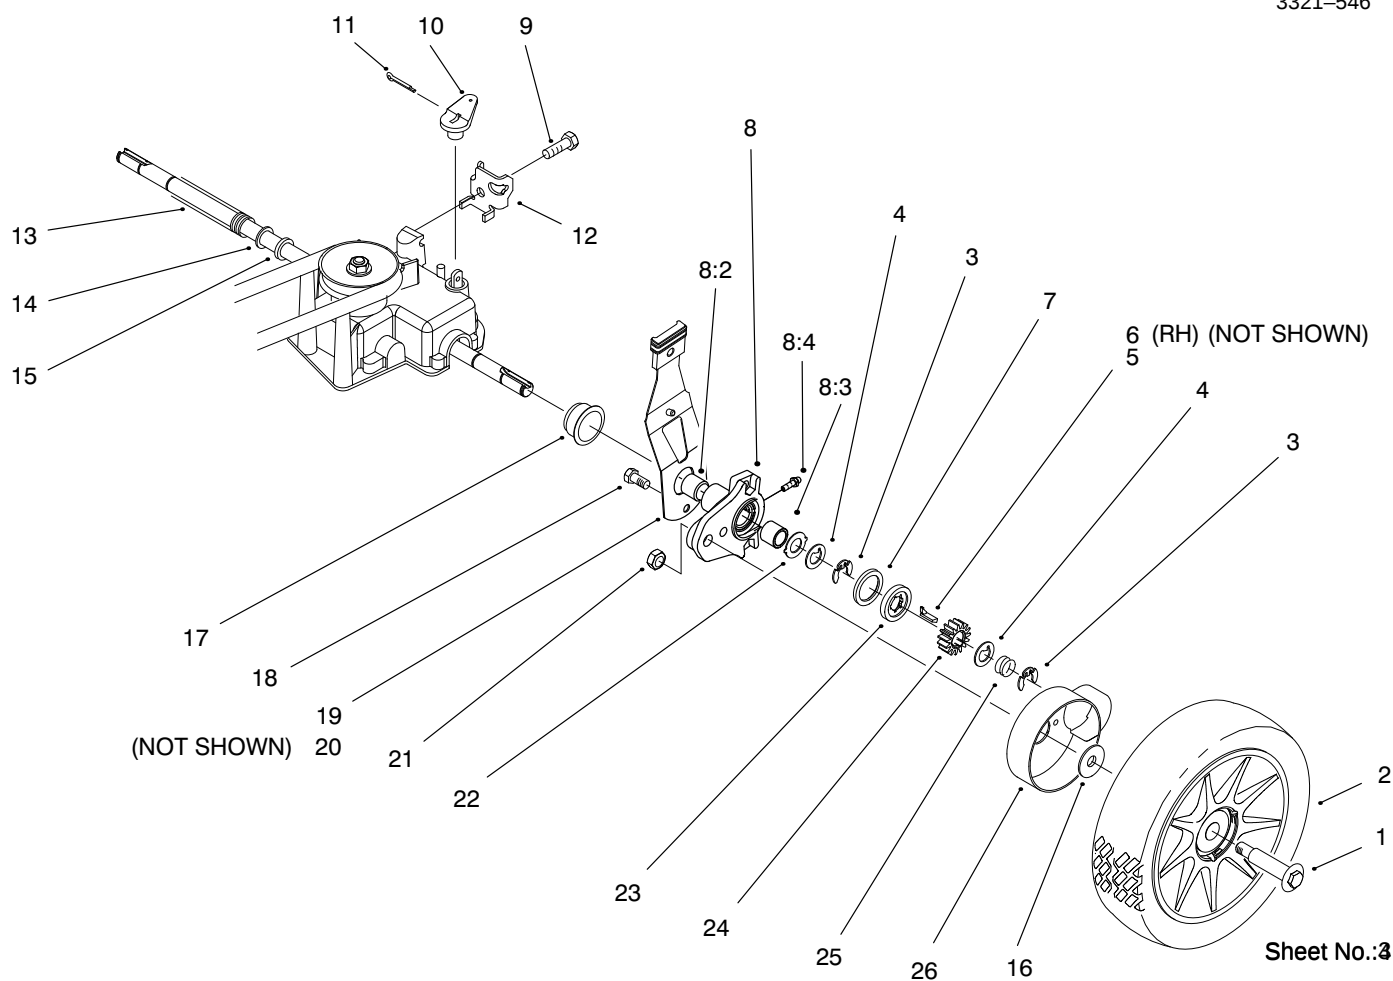

Rear Axle Assembly

Ref. No.	Part No.	Qty.	Description
1	92-1057	2	Bolt-Shoulder
2	95-1714	2	ASM-Whl
3	65-2720	4	Ring-Retaining
4	65-4740	4	Washer-Thrust
5	66-6050	1	Key-Rocking LH
6	66-6040	1	Key-Locking RH
7	65-4710	2	Ring-Friction
8	92-7746	2	ASM-Hgt Adj Arm
9	32144-70	1	Screw-TAP
10	60-8821	1	Lever-Shift
11	3272-10	1	Pin-Cotter
12	82-8780	1	Retainer-Cable
13	24-7920	1	Cover-Drive Shaft
14	303259	1	Washer
15	605255	1	Washer-Flat
16	614426	2	Washer-Stepped
17	92-6535	2	Cap-End
18	32144-85	2	Screw-HH
19	92-6540	1	ASM-Spring Arm
20	92-6539	1	ASM-Spring Arm
21	610358	2	Nut-Lock
22	65-4730	2	Washer-Thrust
23	65-4760	2	Washer
24	65-4750	2	Gear-Pinion
25	65-4720	2	Spring-Compression
26	94-1609	2	Cover-Wheel

Ref. No.	Part No.	Qty.	Description

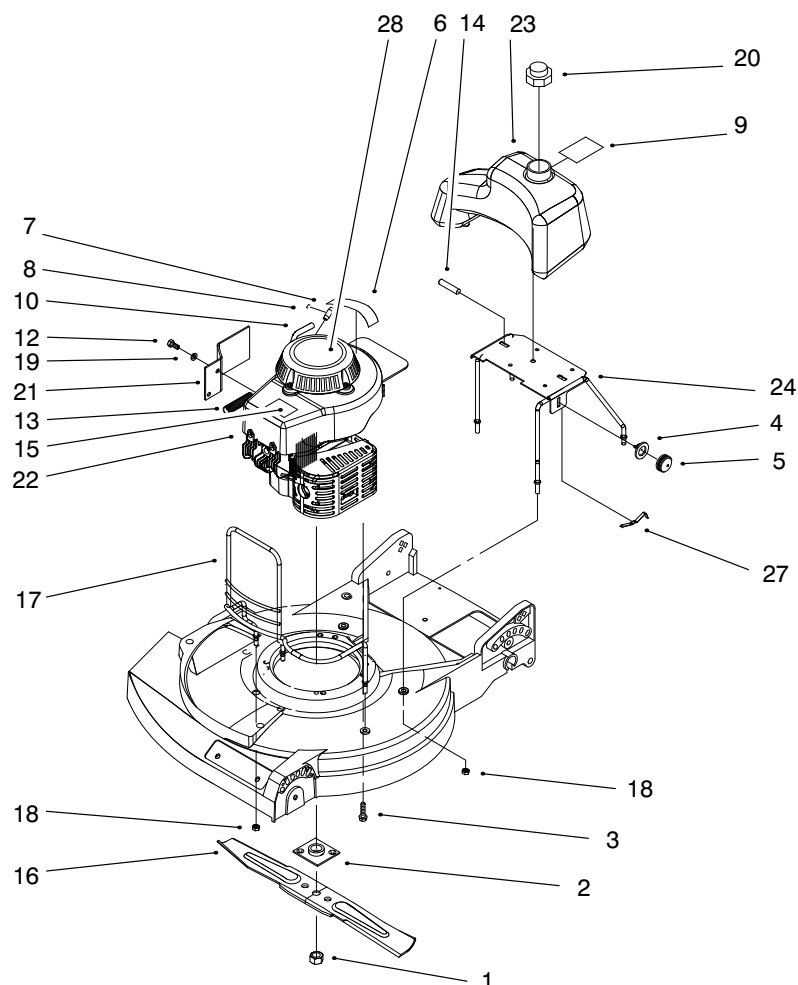


Sheet No.:4

Engine & Blade Assembly

Ref. No.	Part No.	Qty.	Description
1	603164	1	Nut-Blade
2	677525	1	ASM-Plate & Collar
3	98-4480	3	Screw-Sems
4	44-2750	1	Body-Primer
5	66-7460	1	Bulb-Primer
6	99-1518	1	Decal-Fuel Mix
7	47-2480	1	Rope Stop
8	3290-443	1	Staple
10	612782	1	Gas Line
12	322-3	2	Screw-HH
13	93-4306	1	Spring-Compression
14	2410-76	1	Plug-Fuel Line
15	99-1517	1	Decal-Lawn Boy
16	612543	1	Blade-21" Whirl
17	98-1598	1	Guard-Engine
18	608311	6	Locknut
19	3253-4	2	Washer-Lock
20	98-8344	1	ASM-Fuel/Oil Cap
21	99-1515	1	Guard-Brake
22	99-2910	1	Engine Assembly
23	98-4497	1	Tank-Fuel
24	98-4459	1	Tank Bkt ASM
25	306531	1	Nut-Throttle Cable
26	314576	1	Screw-Throttle Cable
27	609830	2	Spring
28	98-8343	1	Decal-Recoil


Ref. No.	Part No.	Qty.	Description

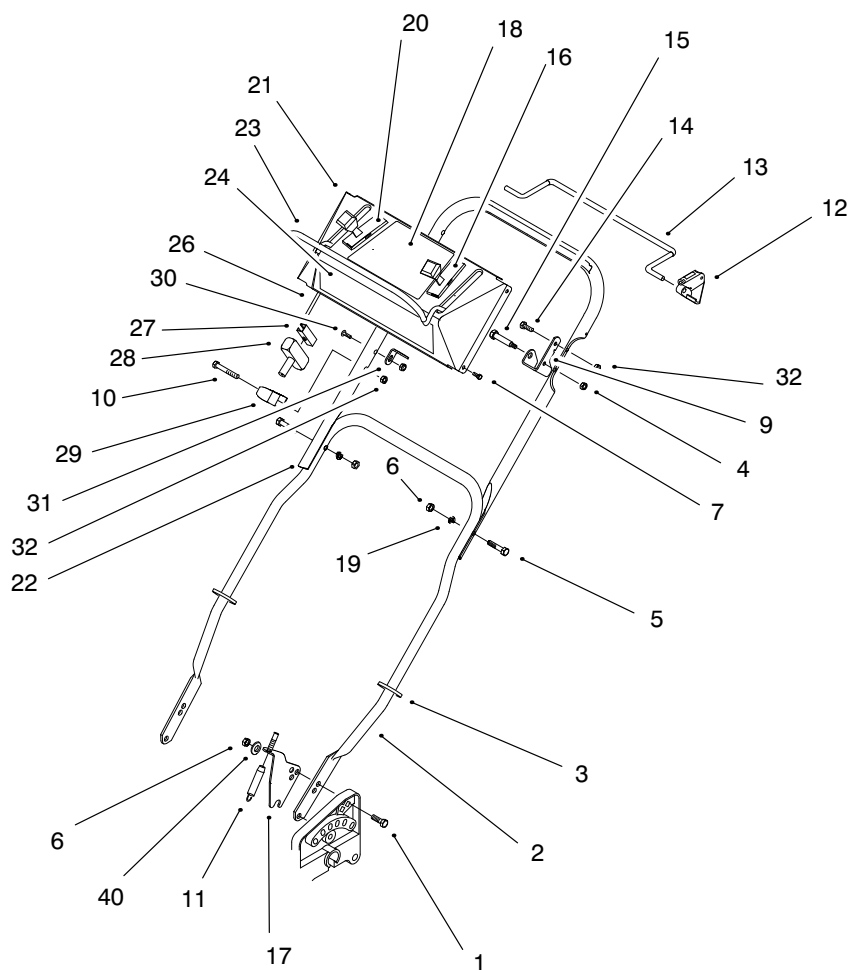

Sheet No.:5

Handle Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	3230-29	2	Bolt-CARR	28	612825	1	Handle-Starter
2	92-6537	1	Handle Section-Lower	29	93-7383	1	Guide-Rope
3	614249	3	Tie Strap	30	92-2268	1	Handle Screw
4	3296-56	1	Nut-Lock	31	92-2928	1	Bracket-Cable Anchor
5	322-9	2	Screw-HH	32	3296-73	3	Nut-Lock
6	3296-29	4	Nut-Lock	39	3296-56	1	Nut-Lock
7	92-9665	4	Screw-Phil	40	3256-23	2	Washer-Flat
9	92-1094	1	Bail Stop Bracket				
10	321-51	1	Bolt-Hex				
11	92-6518	1	Cable				
12	92-5412	1	Stop-Pivot				
13	92-1001	1	Bail-Sp Control				
14	321-4	1	Screw-HH				
15	613050	1	Bolt				
16	95-7410	1	Throttle Cable				
17	92-7899	1	Bracket-Traction Cable				
18	98-4469	1	Decal-Control Panel				
19	609739	2	Washer				
20	92-8926	1	Control-Speed				
21	99-1563	1	Panel-Control				
22	92-1092	1	Handle-Upper				
23	92-1093	1	Engine Control Bail				
24	93-0297	1	Decal-Console				
26	95-7411	1	Cable-Control				
27	612824	1	Clip-Rope				

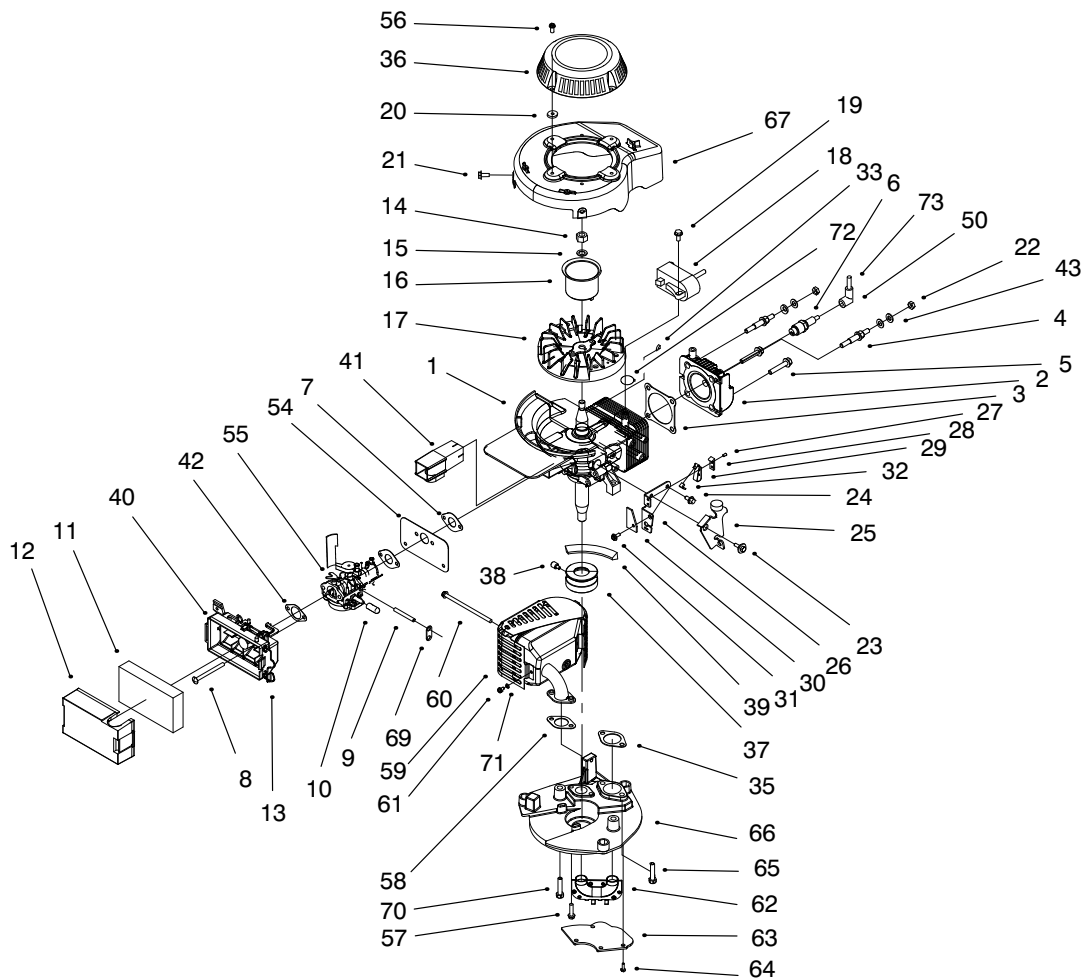


Sheet No.:100

Engine Assembly

Ref. No.	Part No.	Qty.	Description
1	95-7636	1	Short Block ASM Service
2	94-5776	1	Head
3	94-5778	1	Gasket-Head
4	94-5779	2	Stud
5	94-5780	2	Bolt
6	81-0181	1	Spark Plug
7	94-5795	2	Intake Gasket
8	612507	2	Screw
9	44-3170	1	Primer Hose
11	95-5574	1	Element-Air Filter
12	95-5577	1	Cover-Air Filter
13	610383	1	Retainer-Filter
14	130743	1	Nut
15	316959	1	Washer-Lock
16	612949	1	Hub-Starter
17	95-1866	1	Flywheel Machined Recoil
18	92-1152	1	Ignition ASM
19	613208	2	Screw-HWH
20	98-4478	4	Spacer
21	700094	2	Screw
22	146501	2	Nut-Lock
23	95-1870	1	Shoulder Screw Brake
24	95-1871	1	Screw (Brake)
25	93-4312	1	ASM-Brake Plate


Ref. No.	Part No.	Qty.	Description
26	84-7820	1	Plate-Mount Brake
27	3290-459	2	Rivet-Self Expand Plas
28	92-2925	1	Strap-Insulation
29	60-9010	1	Strap-Ground
30	53-4690	1	Stop-Ground Strap
31	12-5450	1	Screw-Thread Forming
32	98-7037	1	Brake Switch Lead Wire
33	607199	1	Key
35	95-1778	1	Gasket-Exhaust
36	684566	1	ASM-Starter
37	95-1878	1	Pulley Engine
38	613227	1	Screw-Set
39	92-1043	1	V-Belt
40	95-5588	1	Air Filter Base ASM
41	95-5578	1	Tunnel
42	95-7613	1	Gasket-Filter Base
43	3290-456	4	Washer-Lock
50	684698	1	Cover & Terminal
54	98-1388	1	Heat Shield
55	98-7042	1	Carburetor ASM w/Gasket
56	98-4484	4	Screw-Sems
57	613208	2	Screw-HWH

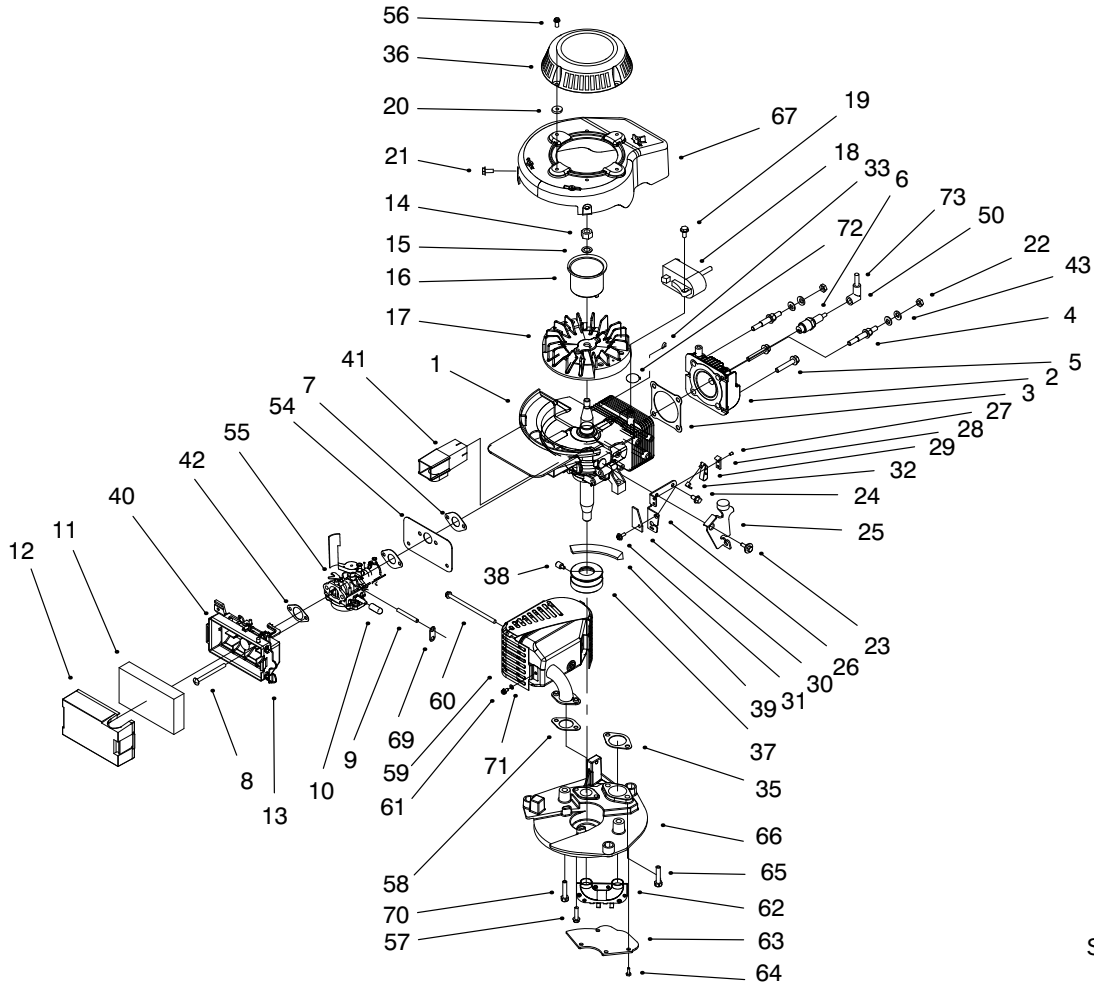

Sheet No.:100

Engine Assembly (cont.)

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
58	98-1392	1	Gasket				
59	99-2904	1	Muffler & Guard				
60	611228	1	Bolt				
61	98-1394	2	Screw				
62	98-1557	1	Transfer Tube				
63	98-1591	1	Cover Plate				
64	700822	4	Screw				
65	322-17	2	Screw-HH				
66	98-1383	1	Muffler Plate Machining				
67	98-4467	1	Shroud ASM				
69	95-7615	1	Retainer Hose				
70	613233	2	Screw-Hhd Washer				
71	3254-1	2	Washer-Lock				
72	317893	1	Tie Strap				
73	681678	1	High Tension Lead				

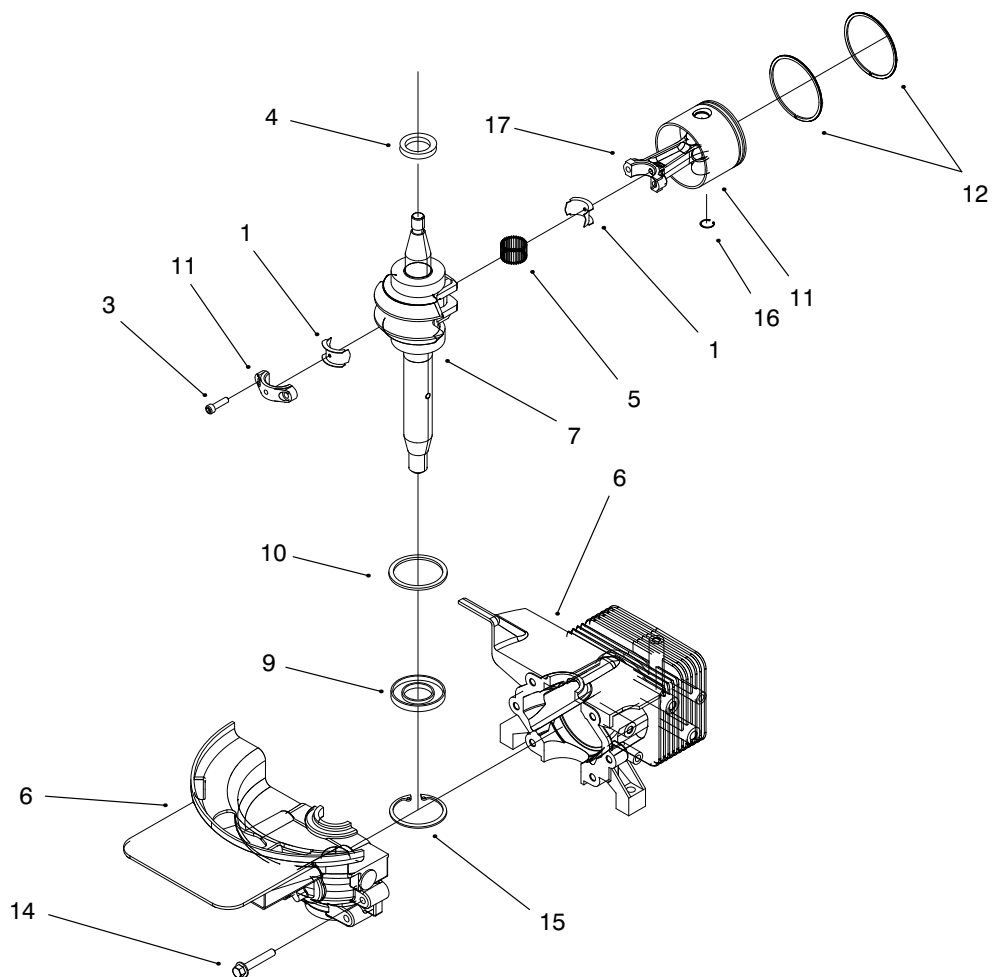


Sheet No.:101

Short Block Assembly

Ref. No.	Part No.	Qty.	Description
1	677982	2	Liner ASM
3	611393	2	Screw
4	611396	1	Oil Seal
5	683911	1	Needle Bearing
6	95-7631	1	Cylinder & Crankcase ASM
7	99-2901	1	Crankshaft & Bearing ASM
9	94-5764	1	Oil Seal
10	94-5765	1	Ring Retaining
11	95-7628	1	Piston & Conn Rod ASM
12	95-7626	1	Ring Set
14	94-5781	6	Screw-HWH
15	98-7046	1	Ring-Retaining
16	303712	2	Retaining Ring
17	95-7629	1	Connecting Rod ASM
*	609790	A/R	Sealant
*	610372	A/R	Sealant

Ref. No.	Part No.	Qty.	Description


* Not Illustrated

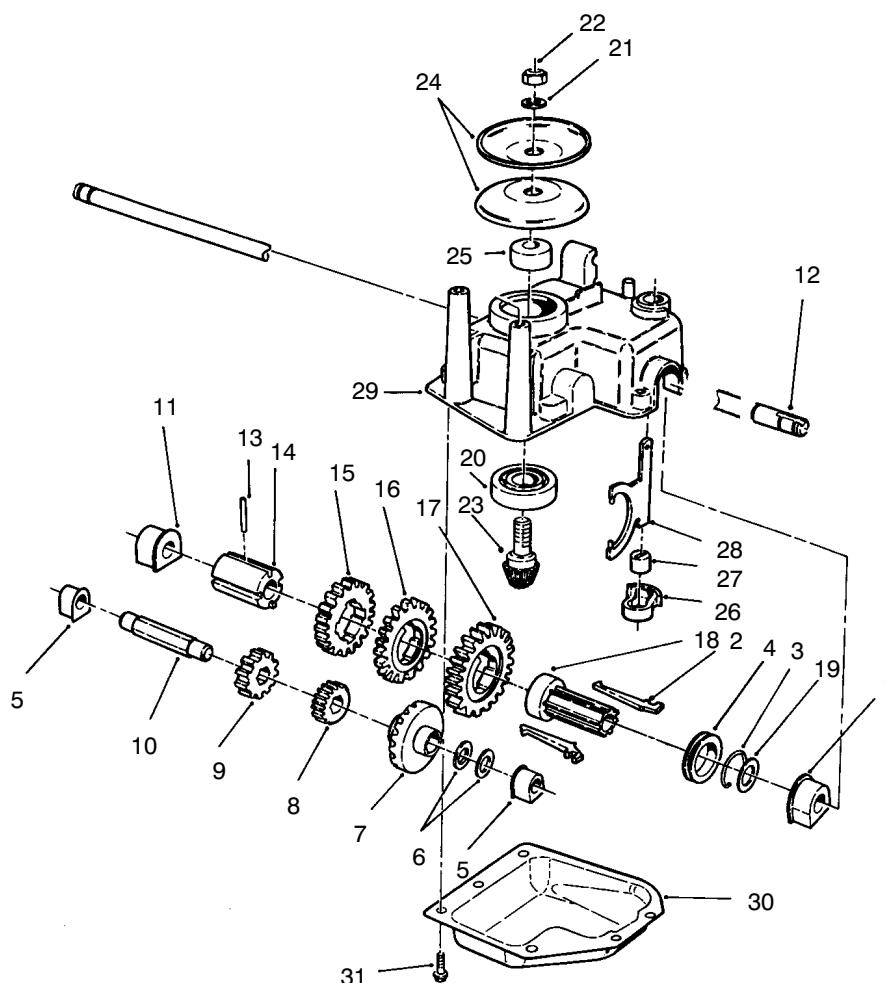

Sheet No.:300

Gear Case Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	60-8770	1	Bushing-Output Shaft	27	29-9570	1	Bushing-Yoke
2	76-0760	2	Key-Shift	28	60-8870	1	Yoke-Shift
3	65-5250	1	Clip-Spring	29	60-8710	1	Gearcase-Upper 3 Sp
4	76-0770	1	Collar-Shift	30	60-8730	1	Cover-Gearcase
5	60-8750	2	Bushing	31	49-2040	6	Screw-HH
6	36-4791	2	Washer-Thrust				
7	55-3760	1	15 T Pinion				
8	55-3780	1	Pinion 20t 2nd Gear				
9	55-3800	1	Pinion 25t 3rd Gear				
10	60-8800	1	Shaft-Intermediate				
11	60-8850	1	Bushing-Output				
12	65-4770	1	Shaft-Output				
13	3285-19	1	Pin-Spirol				
14	60-8790	1	Sleeve-Gear				
15	55-3810	1	Gear 39t 3rd Gear				
16	55-3790	1	Gear 44t 2nd Gear				
17	55-3770	1	Gear 49t 1st Gear				
18	76-0780	1	Sleeve-Shift Key				
19	36-4780	1	Washer-Thrust				
20	38-7820	1	Bearing-Ball				
21	3256-24	1	Washer-Flat				
22	3296-5	1	Nut-Lock				
23	92-5790	1	Pinion-Bevel				
24	60-8840	2	Pulley-Half				
25	92-5791	1	Spacer-Pulley				
26	60-8810	1	Retainer-Shift-Fork				

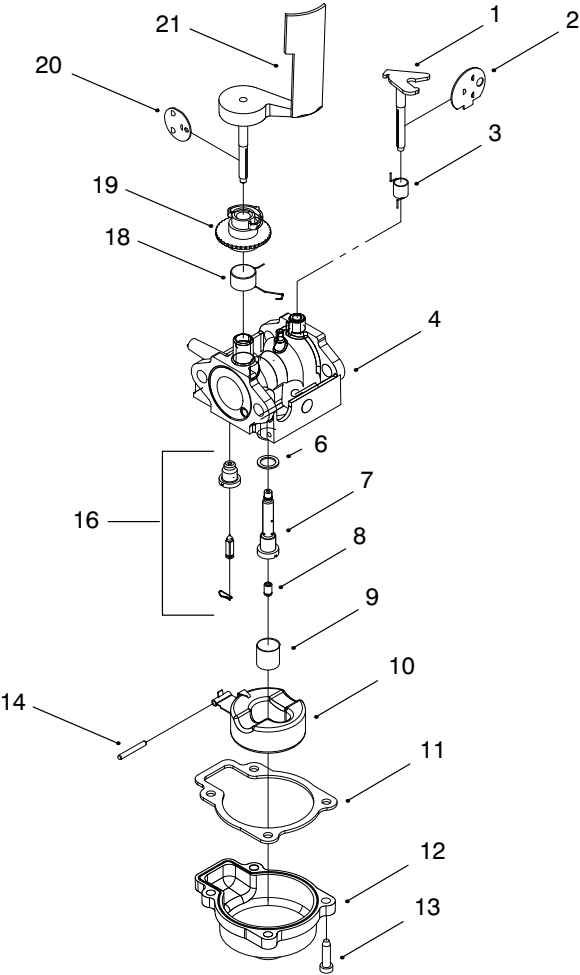

Sheet No.:400

Carburetor Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	95-5581	1	Shaft-Choke				
2	94-5788	1	Disc-Choke				
3	95-5583	1	Spring-Choke Return				
4	98-7042	1	Carb ASM w/Gasket				
6	612383	1	Washer				
7	98-7001	1	Nozzle				
8	98-1357	1	Mainjet 77.5				
9	94-5787	1	Filter-Fuel				
10	95-1899	1	Float & Arm ASM				
11	98-1362	1	Gasket-Float Chamber				
12	92-9691	1	Float Chamber				
13	608850	4	Screw				
14	92-6389	1	Pin				
16	92-9697	1	ASM-Float Valve & Seat				
18	98-7011	1	Spring-Throttle				
19	610834	1	Collar Adjustment				
20	98-7047	1	Disc-Throttle				
21	92-6376	1	Air Vane & Shaft				

Lawn-Boy Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
130743	5	14	1	Nut
146501	5	22	2	Nut-Lock
303259	2	14	1	Washer
303712	7	16	2	Retaining Ring
306531	3	25	1	Nut-Throttle Cable
314576	3	26	1	Screw-Throttle Cable
316959	5	15	1	Washer-Lock
317893	6	72	1	Tie Strap
603164	3	1	1	Nut-Blade
603567	1	23	2	Bolt-Wheel
605255	2	15	1	Washer-Flat
607199	5	33	1	Key
608175	1	11	1	Toe Bar 21
608311	3	18	6	Locknut
608834	1	29	2	Washer
608850	9	13	4	Screw
609739	4	19	2	Washer
609790	7	*	A/R	Sealant
609830	3	27	2	Spring
610358	1	8	2	Nut-Lock
610358	2	21	2	Nut-Lock
610372	7	*	A/R	Sealant
610383	5	13	1	Retainer-Filter
610834	9	19	1	Collar Adjustment
611228	6	60	1	Bolt
611393	7	3	2	Screw
611396	7	4	1	Oil Seal
612383	9	6	1	Washer
612507	5	8	2	Screw
612543	3	16	1	Blade-21" Whirl
612782	3	10	1	Gas Line
612824	4	27	1	Clip-Rope
612825	4	28	1	Handle-Starter
612949	5	16	1	Hub-Starter
613050	4	15	1	Bolt
613208	5	19	2	Screw-HWH
613208	5	57	2	Screw-HWH
613227	5	38	1	Screw-Set
613233	6	70	2	Screw-Hhd Washer
614249	4	3	3	Tie Strap
614426	2	16	2	Washer-Stepped
614637	1	19	2	Bracket-Wheel Height Adj
614677	1	24	2	Screw-Sems
677525	3	2	1	ASM-Plate & Collar
677982	7	1	2	Liner ASM
681678	6	73	1	High Tension Lead
683911	7	5	1	Needle Bearing
684159	1	27	2	Wheel & Tire
684566	5	36	1	ASM-Starter
684698	5	50	1	Cover & Terminal
700094	5	21	2	Screw
700822	6	64	4	Screw
12-5450	1	5	2	Screw-Thread Forming
12-5450	5	31	1	Screw-Thread Forming
24-7920	2	13	1	Cover-Drive Shaft
29-9570	8	27	1	Bushing-Yoke
36-4780	8	19	1	Washer-Thrust
36-4791	8	6	2	Washer-Thrust
38-7820	8	20	1	Bearing-Ball
39-5770	1	10	1	Decal-Danger
40-1940	1	18	2	Washer
44-2750	3	4	1	Body-Primer

*Not Illustrated

Lawn–Boy Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
44–3170	5	9	1	Primer Hose
46–5551	1	2	2	Bushing–Spacer
46–6811	1	12	2	Screw–HWH
47–2480	3	7	1	Rope Stop
49–2040	8	31	6	Screw–HH
53–4690	5	30	1	Stop–Ground Strap
55–3760	8	7	1	15 T Pinion
55–3770	8	17	1	Gear 49t 1st Gear
55–3780	8	8	1	Pinion 20t 2nd Gear
55–3790	8	16	1	Gear 44t 2nd Gear
55–3800	8	9	1	Pinion 25t 3rd Gear
55–3810	8	15	1	Gear 39t 3rd Gear
60–8710	8	29	1	Gearcase–Upper 3 Sp
60–8730	8	30	1	Cover–Gearcase
60–8750	8	5	2	Bushing
60–8770	8	1	1	Bushing–Output Shaft
60–8790	8	14	1	Sleeve–Gear
60–8800	8	10	1	Shaft–Intermediate
60–8810	8	26	1	Retainer–Shift–Fork
60–8821	2	10	1	Lever–Shift
60–8840	8	24	2	Pulley–Half
60–8850	8	11	1	Bushing–Output
60–8870	8	28	1	Yoke–Shift
60–9010	5	29	1	Strap–Ground
65–2720	2	3	4	Ring–Retaining
65–4710	2	7	2	Ring–Friction
65–4720	2	25	2	Spring–Compression
65–4730	2	22	2	Washer–Thrust
65–4740	2	4	4	Washer–Thrust
65–4750	2	24	2	Gear–Pinion
65–4760	2	23	2	Washer
65–4770	8	12	1	Shaft–Output
65–5250	8	3	1	Clip–Spring
66–6040	2	6	1	Key–Locking RH
66–6050	2	5	1	Key–Rocking LH
66–7460	3	5	1	Bulb–Primer
76–0760	8	2	2	Key–Shift
76–0770	8	4	1	Collar–Shift
76–0780	8	18	1	Sleeve–Shift Key
81–0181	5	6	1	Spark Plug
82–8780	2	12	1	Retainer–Cable
84–7820	5	26	1	Plate–Mount Brake
92–1001	4	13	1	Bail–Sp Control
92–1006	1	16	2	ASM–Spring Arm
92–1008	1	13	4	Knob–Height Adjust
92–1043	5	39	1	V–Belt
92–1057	2	1	2	Bolt–Shoulder
92–1092	4	22	1	Handle–Upper
92–1093	4	23	1	Engine Control Bail
92–1094	4	9	1	Bail Stop Bracket
92–1152	5	18	1	Ignition ASM
92–2268	4	30	1	Handle Screw
92–2925	5	28	1	Strap–Insulation
92–2928	4	31	1	Bracket–Cable Anchor
92–4856	1	28	2	Bolt–Shoulder
92–5412	4	12	1	Stop–Pivot
92–5790	8	23	1	Pinion–Bevel
92–5791	8	25	1	Spacer–Pulley
92–6376	9	21	1	Air Vane & Shaft
92–6389	9	14	1	Pin
92–6518	4	11	1	Cable
92–6535	2	17	2	Cap–End

*Not Illustrated

Lawn—Boy Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
92-6537	4	2	1	Handle Section—Lower
92-6539	2	20	1	ASM—Spring Arm
92-6540	2	19	1	ASM—Spring Arm
92-7699	1	3	1	Bracket—Actuator
92-7736	1	14	1	Shield—Trailing
92-7746	2	8	2	ASM—Hgt Adj Arm
92-7748	1	4	2	Screw
92-7869	1	1	1	ASM—Gear Case
92-7899	4	17	1	Bracket—Traction Cable
92-8926	4	20	1	Control—Speed
92-9665	4	7	4	Screw—Phil
92-9673	1	21	2	Bolt—Shoulder
92-9691	9	12	1	Float Chamber
92-9697	9	16	1	ASM—Float Valve & Seat
93-0297	4	24	1	Decal—Console
93-4306	3	13	1	Spring—Compression
93-4312	5	25	1	ASM—Brake Plate
93-7250	1	15	1	Decal—Warning
93-7383	4	29	1	Guide—Rope
94-1609	2	26	2	Cover—Wheel
94-1610	1	25	3	Grommet—Plastic
94-5764	7	9	1	Oil Seal
94-5765	7	10	1	Ring Retaining
94-5776	5	2	1	Head
94-5778	5	3	1	Gasket—Head
94-5779	5	4	2	Stud
94-5780	5	5	2	Bolt
94-5781	7	14	6	Screw—HWH
94-5787	9	9	1	Filter—Fuel
94-5788	9	2	1	Disc—Choke
94-5795	5	7	2	Intake Gasket
94-6303	1	26	1	Decal—Deck
95-1714	2	2	2	ASM—Whl
95-1778	5	35	1	Gasket—Exhaust
95-1866	5	17	1	Flywheel Machined Recoil
95-1870	5	23	1	Shoulder Screw Brake
95-1871	5	24	1	Screw (Brake)
95-1878	5	37	1	Pulley Engine
95-1899	9	10	1	Float & Arm ASM
95-5574	5	11	1	Element—Air Filter
95-5577	5	12	1	Cover—Air Filter
95-5578	5	41	1	Tunnel
95-5581	9	1	1	Shaft—Choke
95-5583	9	3	1	Spring—Choke Return
95-5588	5	40	1	Air Filter Base ASM
95-7052	1	9	1	Plate—Cover
95-7410	4	16	1	Throttle Cable
95-7411	4	26	1	Cable—Control
95-7613	5	42	1	Gasket—Filter Base
95-7615	6	69	1	Retainer Hose
95-7626	7	12	1	Ring Set
95-7628	7	11	1	Piston & Conn Rod ASM
95-7629	7	17	1	Connecting Rod ASM
95-7631	7	6	1	Cylinder & Crankcase ASM
95-7636	5	1	1	Short Block ASM Service
98-1357	9	8	1	Mainjet 77.5
98-1362	9	11	1	Gasket—Float Chamber
98-1383	6	66	1	Muffler Plate Machining
98-1388	5	54	1	Heat Shield
98-1392	6	58	1	Gasket
98-1394	6	61	2	Screw
98-1557	6	62	1	Transfer Tube

*Not Illustrated

Lawn–Boy Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
98–1591	6	63	1	Cover Plate
98–1598	3	17	1	Guard–Engine
98–4459	3	24	1	Tank Bkt ASM
98–4467	6	67	1	Shroud ASM
98–4469	4	18	1	Decal–Control Panel
98–4478	5	20	4	Spacer
98–4480	3	3	3	Screw–Sems
98–4484	5	56	4	Screw–Sems
98–4493	1	6	1	Cover–Drive
98–4497	3	23	1	Tank–Fuel
98–7001	9	7	1	Nozzle
98–7011	9	18	1	Spring–Throttle
98–7037	5	32	1	Brake Switch Lead Wire
98–7042	9	4	1	Carb ASM w/Gasket
98–7042	5	55	1	Carburetor ASM w/Gasket
98–7046	7	15	1	Ring–Retaining
98–7047	9	20	1	Disc–Throttle
98–8332	1	22	1	Knob–Cover Plate
98–8343	3	28	1	Decal–Recoil
98–8344	3	20	1	ASM–Fuel/Oil Cap
99–1515	3	21	1	Guard–Brake
99–1517	3	15	1	Decal–Lawn Boy
99–1518	3	6	1	Decal–Fuel Mix
99–1563	4	21	1	Panel–Control
99–2901	7	7	1	Crankshaft & Bearing ASM
99–2904	6	59	1	Muffler & Guard
99–2910	3	22	1	Engine Assembly
99–5202	1	7	1	Housing–21” Sp
2410–76	3	14	1	Plug–Fuel Line
321–4	4	14	1	Screw–HH
321–51	4	10	1	Bolt–Hex
322–3	3	12	2	Screw–HH
322–9	4	5	2	Screw–HH
322–17	6	65	2	Screw–HH
3230–29	4	1	2	Bolt–CARR
3253–4	3	19	2	Washer–Lock
3254–1	6	71	2	Washer–Lock
3256–23	4	40	2	Washer–Flat
3256–24	8	21	1	Washer–Flat
3272–10	2	11	1	Pin–Cotter
3285–19	8	13	1	Pin–Spirol
3290–413	1	20	2	Washer–Spring
3290–443	3	8	1	Staple
3290–456	5	43	4	Washer–Lock
3290–459	5	27	2	Rivet–Self Expand Plas
3296–5	8	22	1	Nut–Lock
3296–29	4	6	4	Nut–Lock
3296–39	1	17	2	Nut–Lock
3296–56	4	4	1	Nut–Lock
3296–56	4	39	1	Nut–Lock
3296–73	4	32	3	Nut–Lock
32144–70	2	9	1	Screw–TAP
32144–85	2	18	2	Screw–HH